

SECTION BRM

BODY REPAIR

VEHICLE INFORMATION	2	REPLACEMENT OPERATIONS	23
BODY EXTERIOR PAINT COLOR	2	Description	23
Body Exterior Paint Color	2	Radiator Core Support	25
PRECAUTION	3	Hoodlodge	25
REPAIRING HIGH STRENGTH STEEL	3	Front Side Member	28
High Strength Steel (HSS)	3	Front Side Member (Partial Replacement)	31
Handling of Ultra High Strength Steel Plate Parts.....	5	Front Pillar	32
PAINTING BOOTH	6	Side Body	34
Temperature Control	6	Center Pillar	38
PROTECTION OF VEHICLE	7	Outer Sill (Partial Replacement)	42
Protection of Vehicle	7	Outer Sill	43
PREPARATION	8	Rear Fender	48
REPAIRING MATERIAL	8	Rear Fender Extension	51
Foam Repair	8	Outer Rear Wheelhouse	51
BODY COMPONENT PARTS	10	Rear Panel	57
Underbody Component Parts	10	Rear Floor Rear	57
Body Component Parts	12	Rear Side Member Extension	58
REMOVAL AND INSTALLATION	15	SERVICE DATA AND SPECIFICATIONS (SDS)	60
CORROSION PROTECTION	15	BODY ALIGNMENT	60
Description	15	Body Center Marks	60
Undercoating	15	Description	61
Body Sealing	16	Engine Compartment	61
BODY CONSTRUCTION	20	Underbody	63
Body Construction	20	Passenger Compartment	66
Rear Fender Hemming Process	21	Rear Body	69
		LOCATION OF PLASTIC PARTS	71
		Precautions for Plastics	71
		Location of Plastic Parts	72

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

BRM

BODY EXTERIOR PAINT COLOR


< VEHICLE INFORMATION >

VEHICLE INFORMATION

BODY EXTERIOR PAINT COLOR

Body Exterior Paint Color

INFOID:0000000008144785

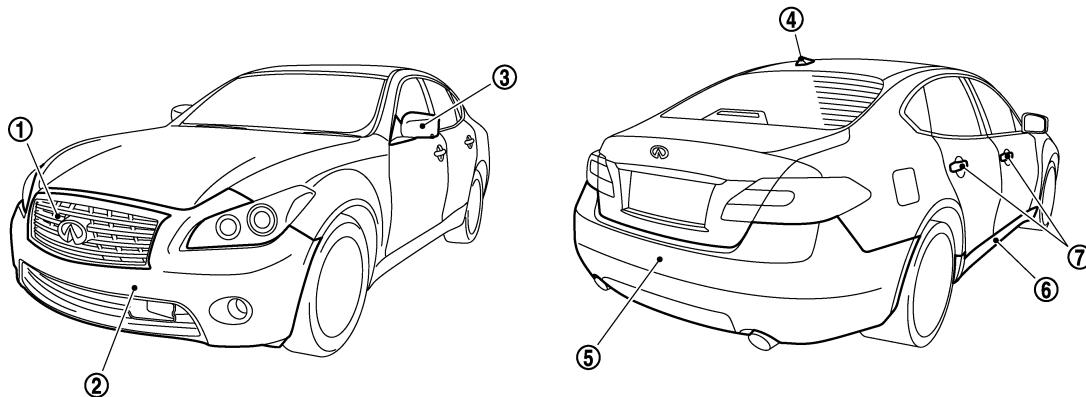

JSKIA1870ZZ

Component		Color code	BQAA	BK23	BKH3	BK51	BGAC	BKAT
		Description	White	Silver	Black	Gray	Black	Gray
		Paint type ^{note}	3P	M	2S	M	P	TPM
		Hard clear coat	–	–	×	–	×	×
1	Front grille	Chromium plate	Cr	Cr	Cr	Cr	Cr	Cr
2	Front bumper fascia	Body color	BQAA	BK23	BKH3	BK51	BGAC	BKAT
3	Door outside mirror cover	Body color	BQAA	BK23	BKH3	BK51	BGAC	BKAT
4	Antenna base cover	Body color	BQAA	BK23	BKH3	BK51	BGAC	BKAT
5	Rear bumper fascia	Body color	BQAA	BK23	BKH3	BK51	BGAC	BKAT
6	Sill cover	Body color	BQAA	BK23	BKH3	BK51	BGAC	BKAT
7	Door outside handle	Chromium plate	Cr	Cr	Cr	Cr	Cr	Cr

NOTE:

- S: Solid
- 2S: Solid + Clear
- CS: Color clear solid
- M: Metallic
- P: 2-Coat pearl
- 3P: 3-Coat pearl
- FPM: Iron oxide pearl
- RM, RPM: Multi flex color
- TPM: Titanium pearl metallic
- TM: Micro titanium metallic
- PM: Pearl metallic

< PRECAUTION >

PRECAUTION**REPAIRING HIGH STRENGTH STEEL****High Strength Steel (HSS)**

INFOID:0000000008144786

High strength steel is used for body panels in order to reduce vehicle weight.

Accordingly, precautions in repairing automotive bodies made of high strength steel are described below:

Tensile strength	Major applicable parts
440 - 780 MPa	<ul style="list-style-type: none"> • Hoodledge reinforcement • Upper front hoodledge • Front strut housing • Rear floor seat belt anchor reinforcement • Rear seat crossmember reinforcement assembly • 2nd and 3rd crossmember (Front floor component part) • Inner sill • Center front floor • Lower dash • Lower dash crossmember assembly • Front side member assembly • Front side member closing plate assembly • Front side member outrigger assembly • Rear seat crossmember • Rear tie down hook • Rear side member assembly • Rear side member extension • Inner front roof side rail (Side body assembly component part) • Outer front pillar reinforcement (Lower) (Side body assembly component part) • Outer sill reinforcement • Center pillar reinforcement • Outer rear wheelhouse extension (Upper) • Outer rear wheelhouse extension (Lower rear) • Front roof rail • Rear roof rail • Other reinforcements
980 - 1350 MPa	<ul style="list-style-type: none"> • Front side member stiffener (Front floor component part) • Front side member rear extension • Inner roof side rail (Front) (Side body assembly component part) • Outer roof side rail (Side body assembly component part) • Inner center pillar (Side body assembly component part) • Outer front pillar reinforcement (Upper) (Side body assembly component part) • Outer sill extension (Outer sill reinforcement component part) • Center pillar reinforcement (Upper) • Center pillar seat belt reinforcement (Center pillar reinforcement component part) • Outer rear wheelhouse extension (Lower front)


Read the following precautions when repairing HSS:

1. Additional points to consider


REPAIRING HIGH STRENGTH STEEL

< PRECAUTION >


- The repair of reinforcements (such as side members) by heating is not recommended, because it may weaken the component. When heating is unavoidable, never heat HSS parts above 550°C (1,022°F). Verify heating temperature with a thermometer. (Crayon-type and other similar type thermometer are appropriate.)

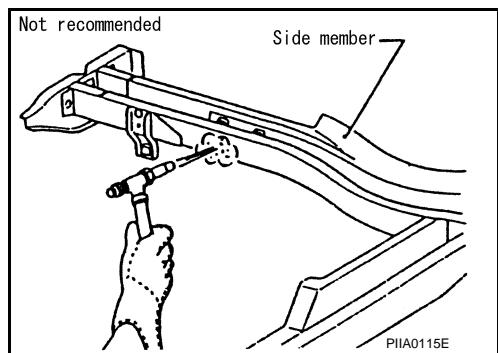


- When straightening body panels, use caution in pulling any HSS panel. Because HSS is very strong, pulling may cause deformation in adjacent sections of the body. In this case, increase the number of measuring points, and carefully pull the HSS panel.
- When cutting HSS panels, avoid gas (torch) cutting if possible. Instead, use a saw to avoid weakening surrounding areas due to heat. If gas (torch) cutting is unavoidable, allow a minimum margin of 50 mm (1.97 in).

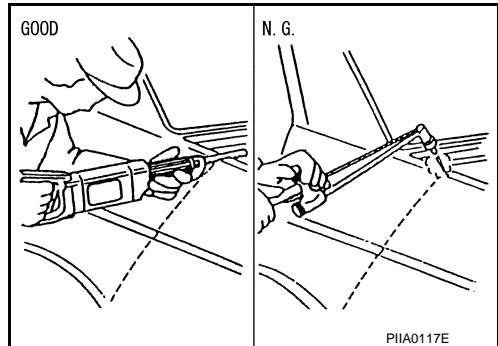

- When welding HSS panels, use spot welding whenever possible in order to minimize weakening surrounding areas due to heat. If spot welding is impossible, use MIG welding. Do not use gas (torch) for welding because it is inferior in welding strength.

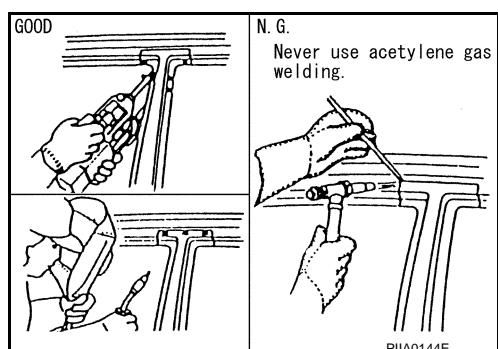

- Spot welding on HSS panels is harder than that of an ordinary steel panel. Therefore, when cutting spot welds on a HSS panel, use a low speed high torque drill (1,000 to 1,200 rpm) to increase drill bit durability and facilitate the operation.

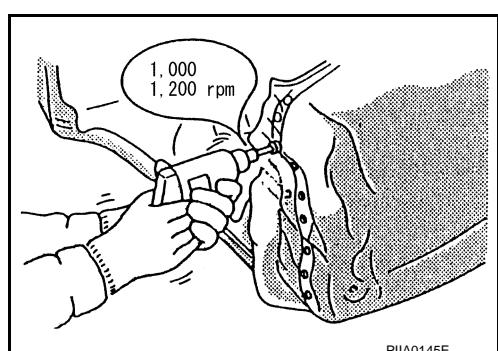


REPAIRING HIGH STRENGTH STEEL

< PRECAUTION >


2. Precautions in spot welding HSS

This work should be performed under standard working conditions. Always note the following when spot welding HSS:

- The electrode tip diameter must be sized properly according to the metal thickness.

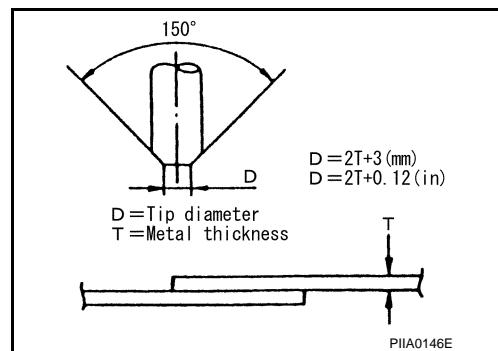


- The panel surfaces must fit flush to each other, leaving no gaps.

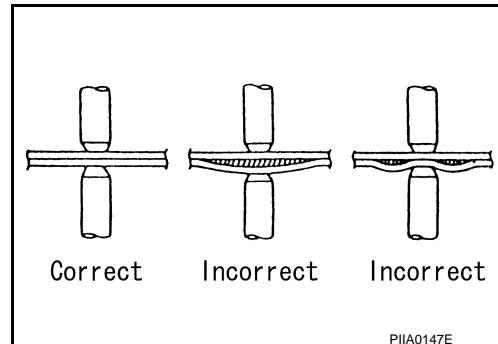

- Follow the specifications for the proper welding pitch.

Thickness (T)	Minimum pitch (L) Unit: mm (in)
0.6 (0.024)	10 (0.39) or more
0.8 (0.031)	12 (0.47) or more
1.0 (0.039)	18 (0.71) or more
1.2 (0.047)	20 (0.79) or more
1.6 (0.063)	27 (1.06) or more
1.8 (0.071)	31 (1.22) or more

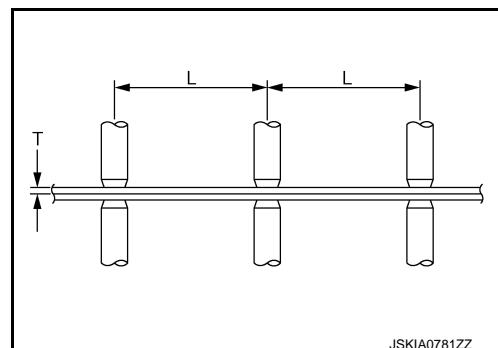

Handling of Ultra High Strength Steel Plate Parts

INFOID:000000008144787

PROHIBITION OF CUT AND CONNECTION

Never cut and joint the lower lock pillar reinforcement (center pillar reinforcement inside frame parts) because its material is high strength steel plate (ultra high strength steel plate). The center pillar reinforcement must be replaced if this part is damaged.

PAINTING BOOTH

< PRECAUTION >

PAINTING BOOTH

Temperature Control

INFOID:0000000008144788

While using painting booth, trunk room temperature must not exceed 60°C (140°F) to prevent deterioration of li-ion battery.

NOTE:

If trunk room temperature becomes more than 60°C (140°F), paint booth must be shut off immediately.

PROTECTION OF VEHICLE

< PRECAUTION >

PROTECTION OF VEHICLE

Protection of Vehicle

INFOID:0000000008144789

The seats, glass, and carpet must be removed or covered with appropriate material (spatter cover), according to the type of work to be done, to prevent contamination and welding spatter.

In addition, when cutting the vehicle in an area close to high voltage parts or performing a welding operation, the high voltage parts must be covered with a heat-resistant insulating cover (spatter cover).

A

B

C

D

E

F

G

H

I

J

BRM

L

M

N

O

P

<PREPARATION>

PREPARATION REPAIRING MATERIAL

Foam Repair

INFOID:0000000008144790

During factory body assembly, foam insulators are installed in certain body panels and locations around the vehicle. Use the following procedure(s) to replace any factory-installed foam insulators.

URETHANE FOAM APPLICATIONS

Use commercially available Urethane foam for sealant (foam material) repair of material used on vehicle.


<Urethane foam for foaming agent>

3M™ Automix™ Flexible Foam 08463 or equivalent

Read instructions on product for fill procedures.

Example of foaming agent filling operation procedure

1. Fill procedures after installation of service part.
 - a. Eliminate foam material remaining on vehicle side.
 - b. Clean area after eliminating form insulator and foam material.
 - c. Install service part.
 - d. Insert nozzle into hole near fill area and fill foam material or fill enough to close gap with the service part.

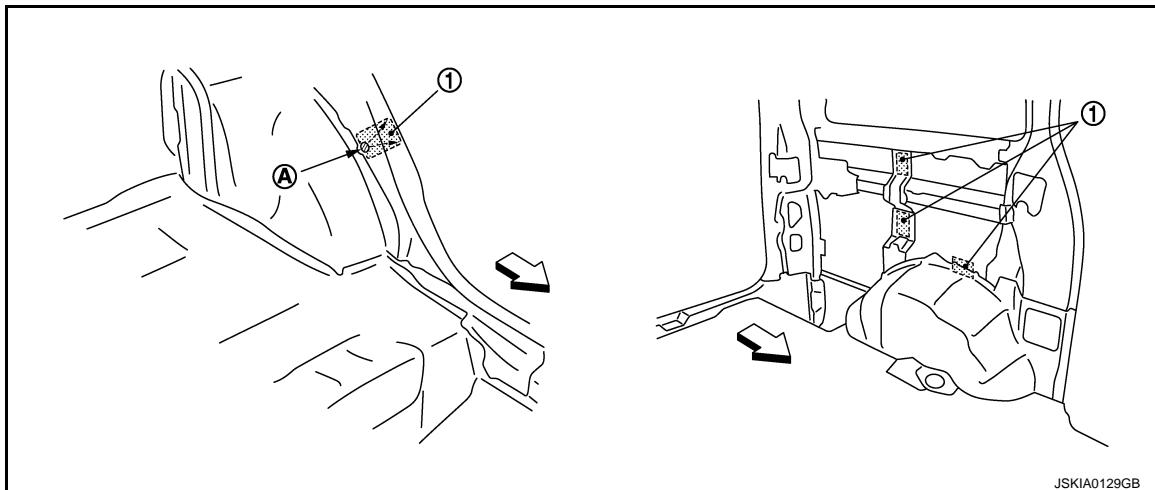

1. Urethane foam
- A. Nozzle insert hole
- ⇨ Vehicle front
2. Fill procedures before installation of service part.
 - a. Eliminate foam material remaining on vehicle side.
 - b. Clean area after eliminating foam insulator and foam material.
 - c. Fill foam material on wheelhouse outer side.

REPAIRING MATERIAL

< PREPARATION >

1. Urethane foam
 - A. Fill while avoiding flange area

◀: Vehicle front


NOTE:

Fill enough to close gap with service part while avoiding flange area.

- d. Install service part.

NOTE:

Refer to label for information on working times.

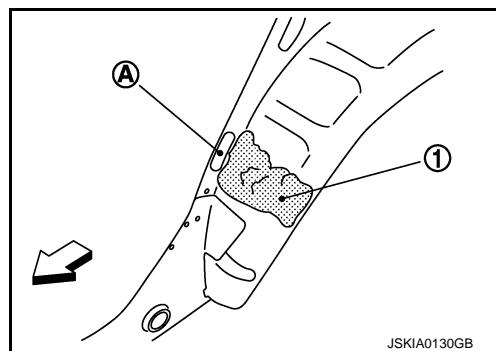

A
B
C
D
E
F
G
H
I
J

BRM

L
M
N
O
P


BODY COMPONENT PARTS

< PREPARATION >

BODY COMPONENT PARTS

Underbody Component Parts

INFOID:0000000008144791

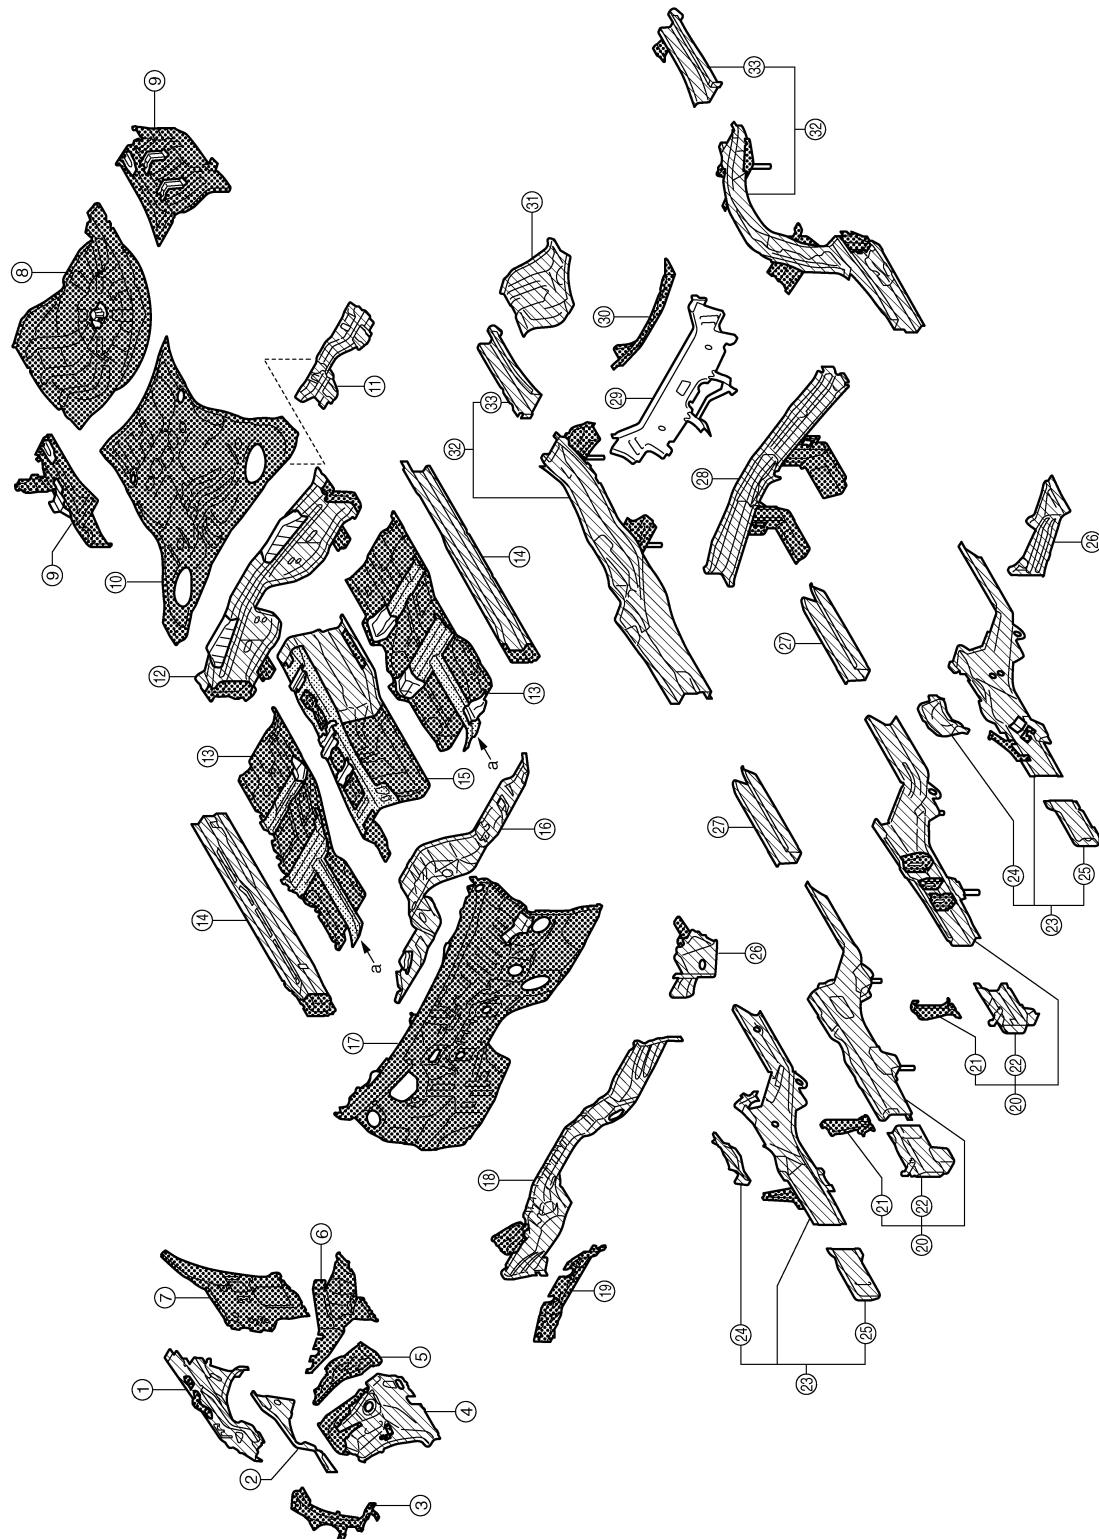

JSKIA1871ZZ

- Both sided anti-corrosive precoated steel sections
- High strength steel (HSS) sections
- Both sided anti-corrosive steel and HSS sections

BODY COMPONENT PARTS

< PREPARATION >

No.	Parts name	Tensile strength (MPa)	Both sided anti-corrosive precoated steel sections
1.	Hoodledge reinforcement (RH & LH)	440	×
2.	Upper front hoodledge (RH & LH)	440	×
3.	Side radiator core support (RH & LH)	Under 440	×
4.	Front strut housing (RH & LH)	440	×
5.	Lower rear hoodledge (RH & LH)	Under 440	×
6.	Upper side cowl top (RH & LH)	Under 440	×
7.	Upper rear hoodledge (RH & LH)	Under 440	×
8.	Rear floor rear	440	×
9.	Rear floor side (RH & LH)	Under 440	×
10.	Rear floor front	Under 440	×
11.	Rear floor seat belt anchor reinforcement (RH & LH)	590	×
12.	Rear seat crossmember reinforcement assembly	590	×
13.	Front floor (RH & LH)	a. T=1.6 mm (0.063 in)	1350 ^{caution}
14.	Inner sill (RH & LH)	590	×
15.	Center front floor	440	×
16.	Lower dash	440	×
17.	Upper dash	Under 440	×
18.	Lower dash crossmember assembly	590	×
19.	Front cowl top	Under 440	×
20.	Front side member assembly (RH & LH)	590	×
21.	Front side member connector assembly (RH & LH)	Under 440	×
22.	Front side member front extension (RH & LH)	440	×
23.	Front side member closing plate assembly (RH & LH)	590	×
24.	Front side member center closing plate (RH & LH)	440	×
25.	Front side member front closing plate (RH & LH)	590	×
26.	Front side member outrigger assembly (RH & LH)	590	×
27.	Front side member rear extension (RH & LH)	T=1.2 mm (0.047 in)	980 ^{caution}
28.	Rear seat crossmember	590	×
29.	2nd rear crossmember	590	—
30.	Rear crossmember	Under 440	×
31.	Rear tie down hook	440	×
32.	Rear side member assembly (RH & LH)	780	×
33.	Rear side member extension (RH & LH)	780	×

NOTE:

- For the parts without a number described in the figure, it is supplied only with the assembly part that the part is included with.
- Tensile strength column shows the largest strength value of a part in the component part.

CAUTION:

If the high strength steel (ultra high strength steel) of this is broken, replace by assembly for the supply part.


A
B
C
D
E
F
G
H
I
J
BRM
L
M
N
O
P

BODY COMPONENT PARTS

< PREPARATION >

Body Component Parts

INFOID:0000000008144792

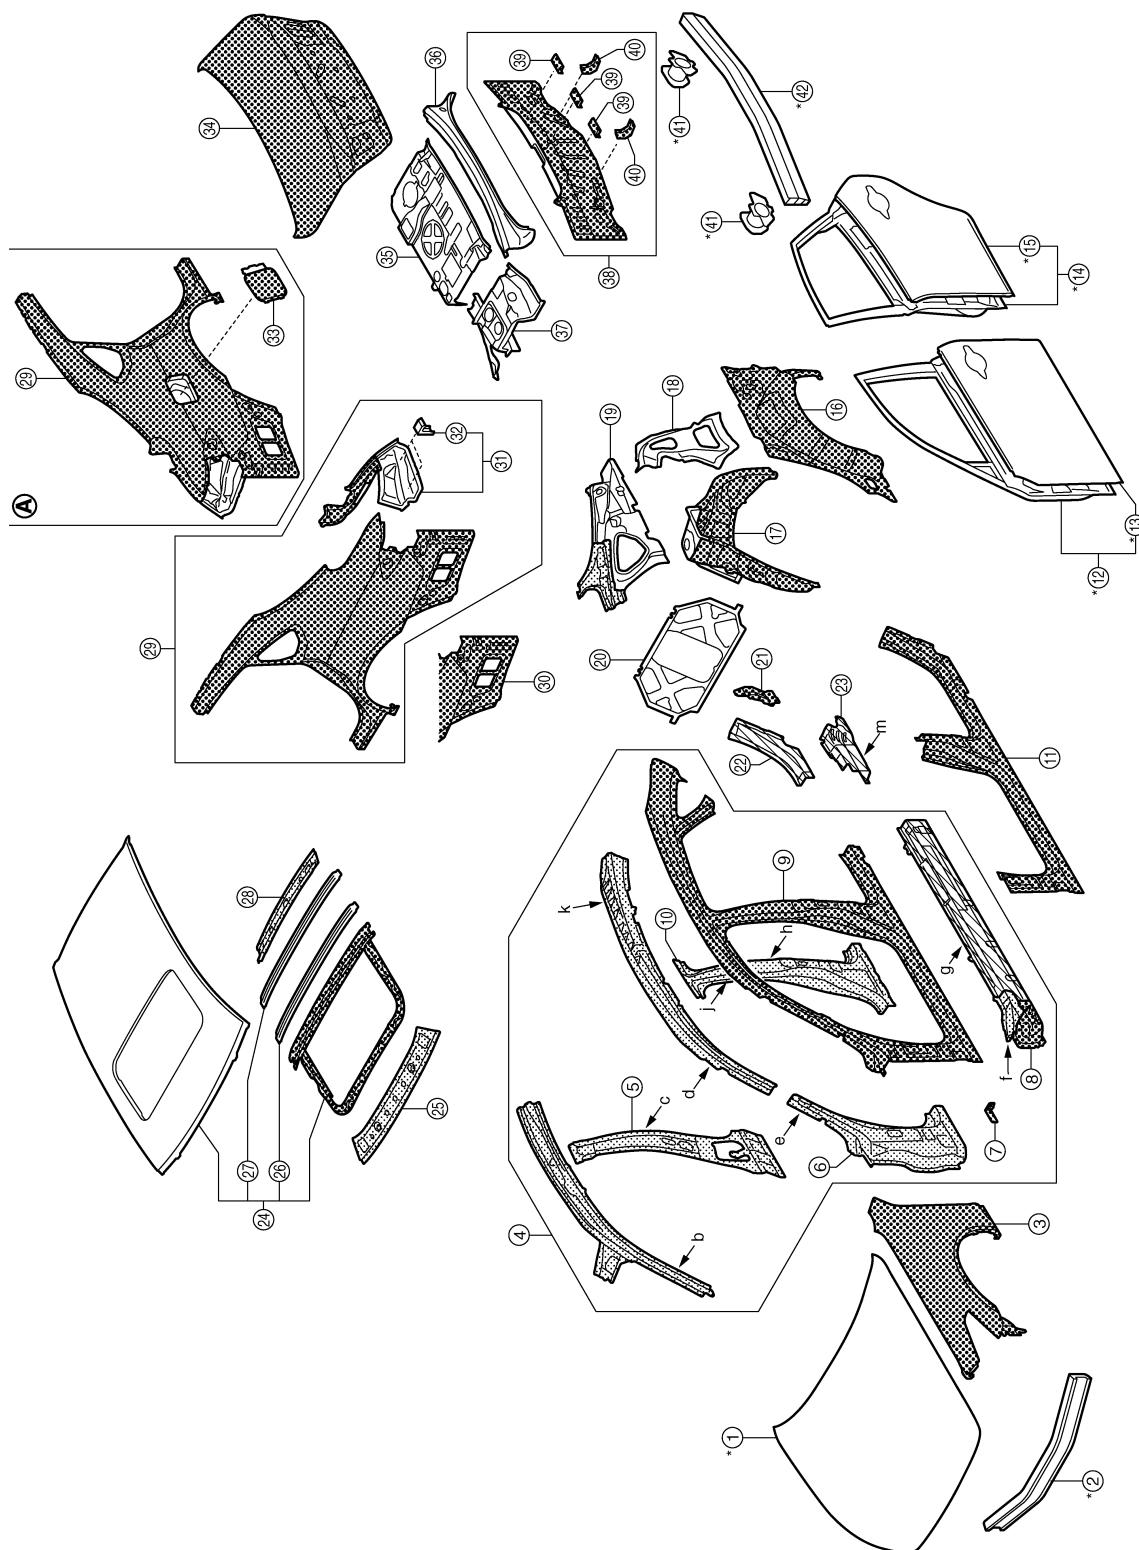

BODY COMPONENT PARTS

< PREPARATION >

No.	Parts name	Tensile strength (MPa)	Both sided anti-corrosive precoated steel sections	Aluminum portion
1.	Hood	—	—	×
2.	Front bumper armature assembly	—	—	×
3.	Front fender (RH & LH)	Under 440	×	—
				Refer to No.5-10
4.	Side body assembly (RH & LH)	b. T=1.2 mm (0.047 in)	980 ^{caution}	—
		d. T=1.6 mm (0.063 in)	1350 ^{caution}	
		k. T=1.2 mm (0.047 in)	980 ^{caution}	
5.	Inner center pillar (RH & LH)	c. T=1.0 mm (0.039 in)	1350 ^{caution}	—
6.	Outer front pillar reinforcement (RH & LH)	e. T=1.2 mm (0.047 in)	980 ^{caution}	—
7.	Front fender bracket (RH & LH)			Under 440
8.	Outer sill reinforcement (RH & LH)	f. T=1.2 mm (0.047 in)	980 ^{caution}	×
		g. T=1.2 mm (0.047 in)	980 ^{caution}	
9.	Outer front side body (RH & LH)			Under 440
10.	Center pillar reinforcement (RH & LH)	h. T=1.2 mm (0.047 in)	980 ^{caution}	—
		j. T=1.6 mm (0.063 in)	1350 ^{caution}	
11.	Outer sill (RH & LH)			Under 440
12.	Front door assembly (RH & LH)			—
13.	Outer front door panel (RH & LH)			—
14.	Rear door assembly (RH & LH)			—
15.	Outer rear door panel (RH & LH)			—
16.	Outer rear wheelhouse (RH & LH)			Under 440
17.	Inner rear wheelhouse (RH & LH)			Under 440
18.	Inner rear pillar reinforcement (RH & LH)			Under 440
19.	Inner rear pillar (RH & LH)			590
20.	Seat back support			Under 440
21.	Inner rear wheelhouse front extension (RH & LH)			Under 440
22.	Outer rear wheelhouse extension (RH & LH Upper)			590
23.	Outer rear wheelhouse extension (RH & LH Lower)	m. T=1.2 mm (0.047 in)	980 ^{caution}	×
24.	Roof			Under 440
25.	Front roof rail			Under 440
26.	Roof bow No. 3			Under 440
27.	Roof bow No. 4			Under 440
28.	Rear roof rail			Under 440
29.	Rear fender assembly (RH & LH)			Under 440
30.	Rear fender extension (RH & LH)			Under 440

A

B

C

D

E

F

G

H

I

J

BRM

L

M

N

O

P

BODY COMPONENT PARTS

< PREPARATION >

No.	Parts name	Tensile strength (MPa)	Both sided anti-corrosive precoated steel sections	Aluminum portion
31.	Rear fender extension assembly (RH & LH)	Under 440	—	—
32.	Rear bumper side bracket (RH & LH)	Under 440	—	—
33.	Fuel filler lid	Under 440	×	—
34.	Trunk lid	Under 440	×	—
35.	Parcel shelf with rear waist	Under 440	—	—
36.	Rear waist	Under 440	—	—
37.	Parcel shelf side (RH & LH)	Under 440	—	—
38.	Rear panel assembly	Under 440	×	—
39.	Rear bumper bracket	Under 440	×	—
40.	Rear side bumper bracket	Under 440	×	—
41.	Rear bumper stay (RH & LH)	Under 440	—	×
42.	Inner center rear bumper reinforcement assembly	Under 440	—	×

NOTE:

- For the parts without a number described in the figure, it is supplied only with the assembly part that the part is included with.
- Tensile strength column shows the largest strength value of a part in the component part.

CAUTION:

If the high strength steel (ultra high strength steel) of this is broken, replace by assembly for the supply part.

CORROSION PROTECTION

< REMOVAL AND INSTALLATION >

REMOVAL AND INSTALLATION

CORROSION PROTECTION

Description


INFOID:000000008144793

To provide improved corrosion prevention, the following anti-corrosive measures have been implemented in NISSAN production plants. When repairing or replacing body panels, it is necessary to use the same anti-corrosive measures.

Anti-Corrosive Precoated Steel (Galvannealed Steel)

To improve repairability and corrosion resistance, a new type of anti-corrosive precoated steel sheet is adopted replacing conventional zinc-coated steel sheet.

Galvannealed steel is electroplated and heated to form Zinc-iron alloy, which provides excellent and long term corrosion resistance with cationic electrodeposition primer.

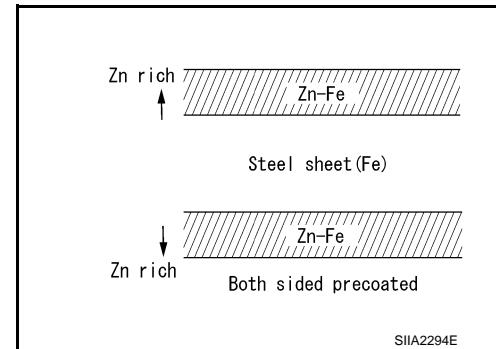


NISSAN genuine parts are fabricated from galvannealed steel. Therefore, it is recommended that NISSAN genuine parts or an equivalent be used for panel replacement to maintain the anti-corrosive performance built into the vehicle at the factory.

Phosphate Coating Treatment and Cationic Electrodeposition Primer

A phosphate coating treatment and a cationic electrodeposition primer, which provide excellent corrosion protection, are applied to all body components.

CAUTION:

Confine paint removal during welding operation to an absolute minimum.

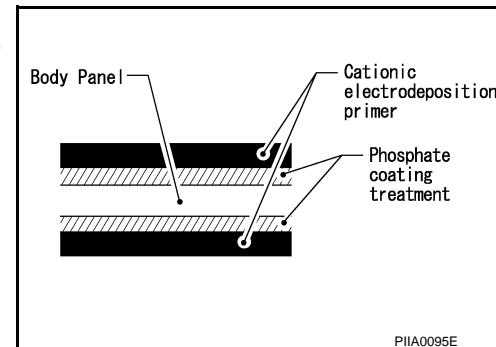

NISSAN genuine parts are also treated in the same manner. Therefore, it is recommended that NISSAN genuine parts or an equivalent be used for panel replacement to maintain anti-corrosive performance built into the vehicle at the factory.

Undercoating

INFOID:000000008144794

The underside of the floor and wheelhouse are undercoated to prevent rust, vibration, noise and stone chipping. Therefore, when such a panel is replaced or repaired, apply undercoating to that part. Use an undercoating which is rust resistant, soundproof, vibration-proof, shock-resistant, adhesive, and durable.


PRECAUTIONS IN UNDERCOATING

1. Never apply undercoating to any place unless specified (such as the areas above the muffler and three way catalyst that are subjected to heat).
2. Never undercoat the exhaust pipe or other parts that become hot.
3. Never undercoat rotating parts.
4. Apply bitumen wax after applying undercoating.
5. After putting seal on the vehicle, put undercoating on it.

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

CORROSION PROTECTION

< REMOVAL AND INSTALLATION >

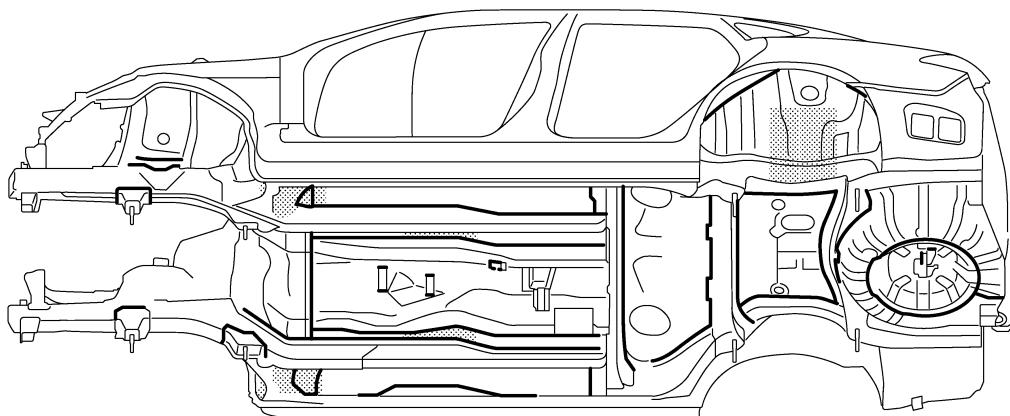

JSKIA2300ZZ

■: Undercoated areas

—: Sealed portions



Body Sealing

INFOID:000000008144795

The following figure shows the areas that are sealed at the factory. Sealant that is applied to these areas should be smooth and free from cuts or gaps. Care should be taken not to apply an excess amount of sealant and not to allow other unaffected parts to come into contact with the sealant.

CORROSION PROTECTION

< REMOVAL AND INSTALLATION >

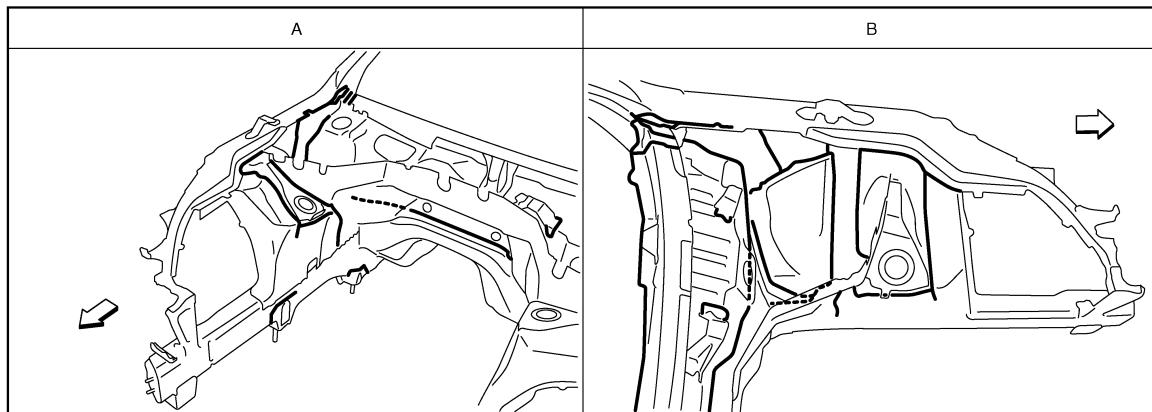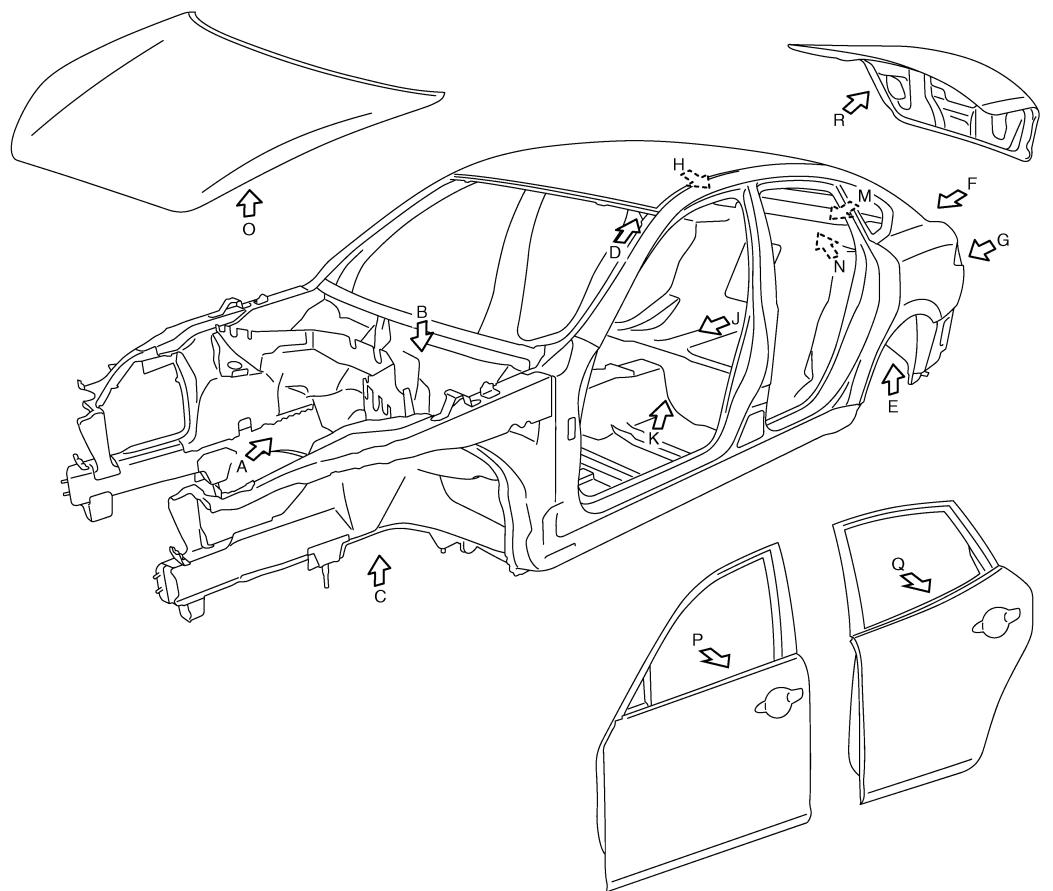

JSKIA2447ZZ

←: Vehicle front

—: Sealed portions

A
B
C
D
E
F
G
H
I
J


BRM

L
M
N

O
P

CORROSION PROTECTION

< REMOVAL AND INSTALLATION >

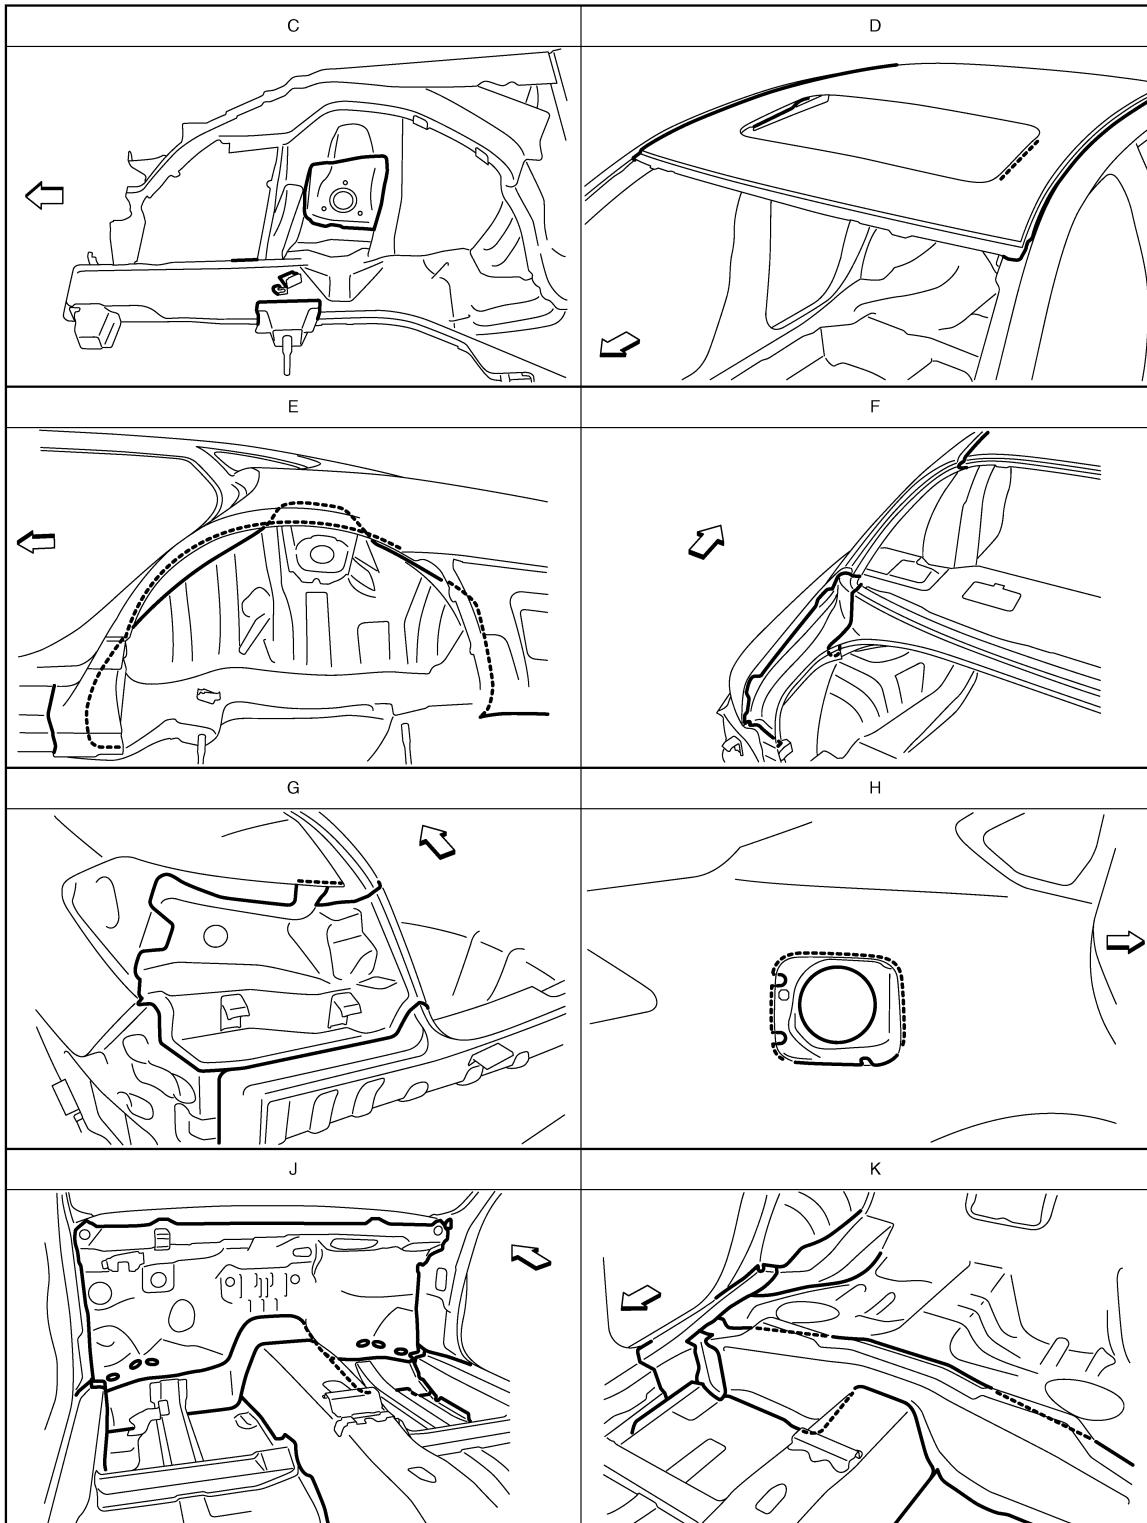


JSKIA2448ZZ

↖: Vehicle front

—: Sealed portions

CORROSION PROTECTION

< REMOVAL AND INSTALLATION >

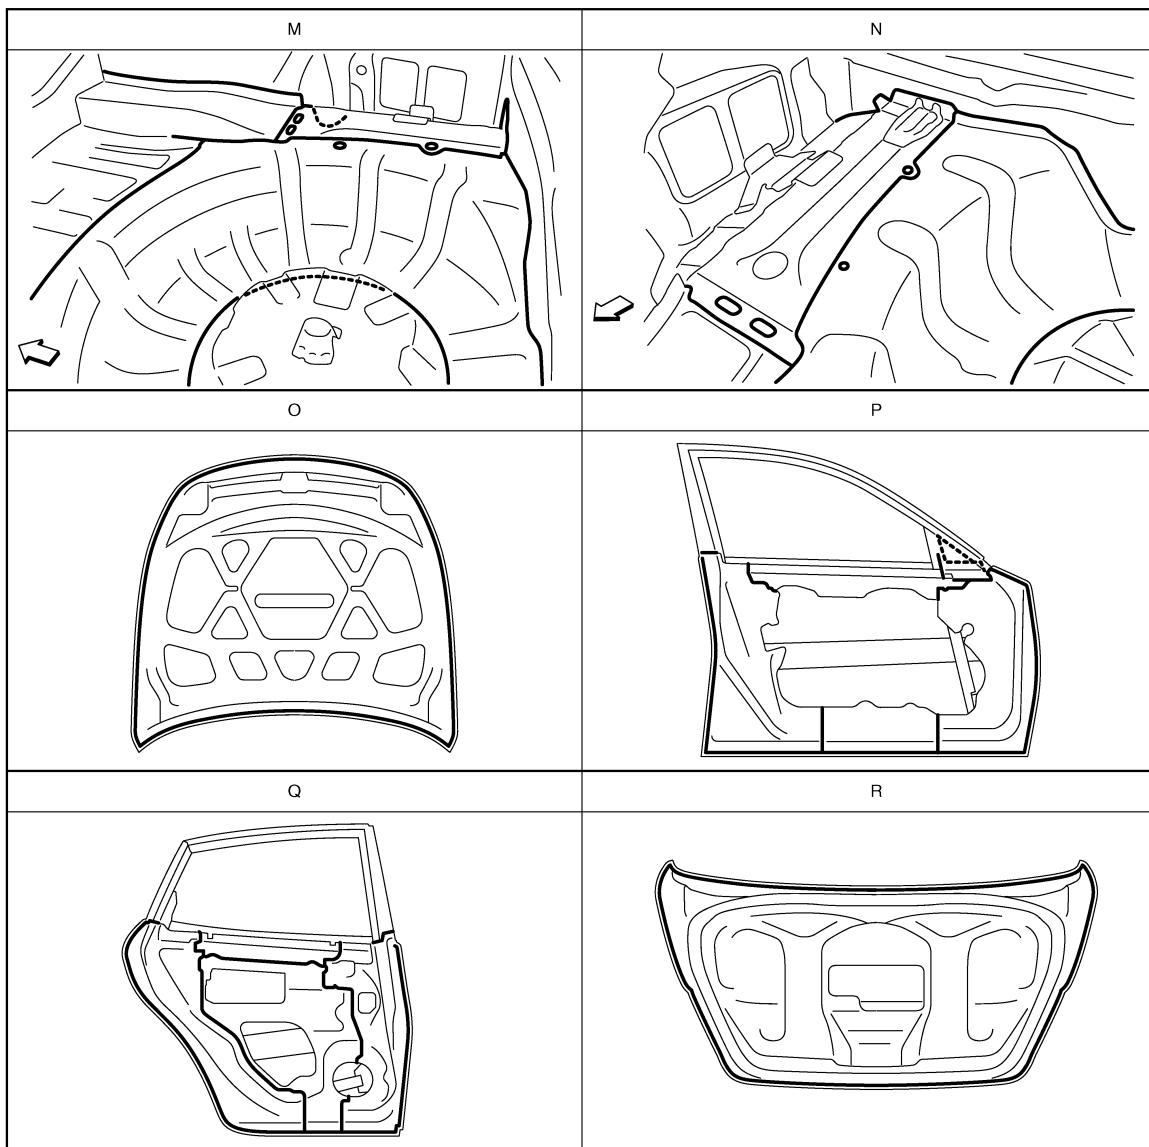

A
B
C
D
E
F
G
H
I
J

BRM

L
M
N
O
P

JSKIA2299ZZ

←: Vehicle front

—: Sealed portions



BODY CONSTRUCTION

< REMOVAL AND INSTALLATION >

BODY CONSTRUCTION

Body Construction

INFOID:0000000008144796

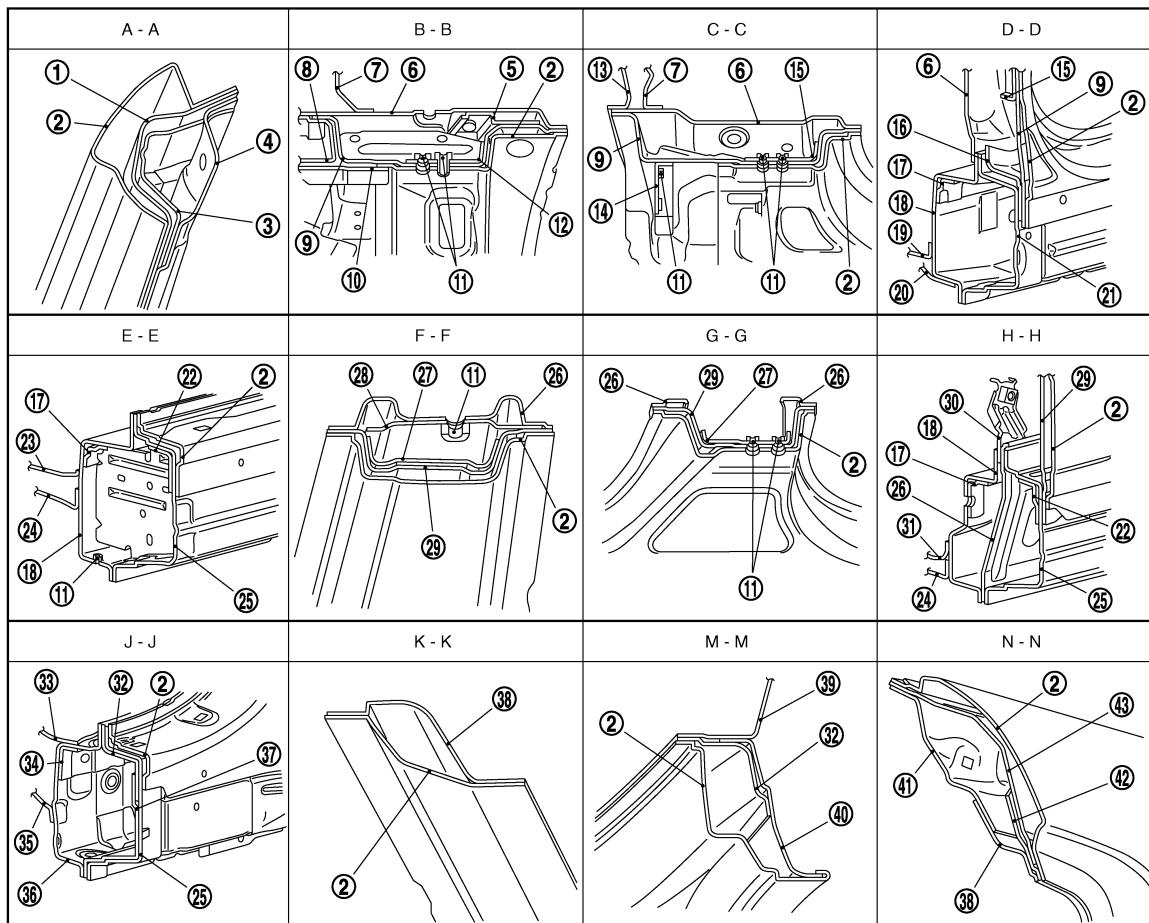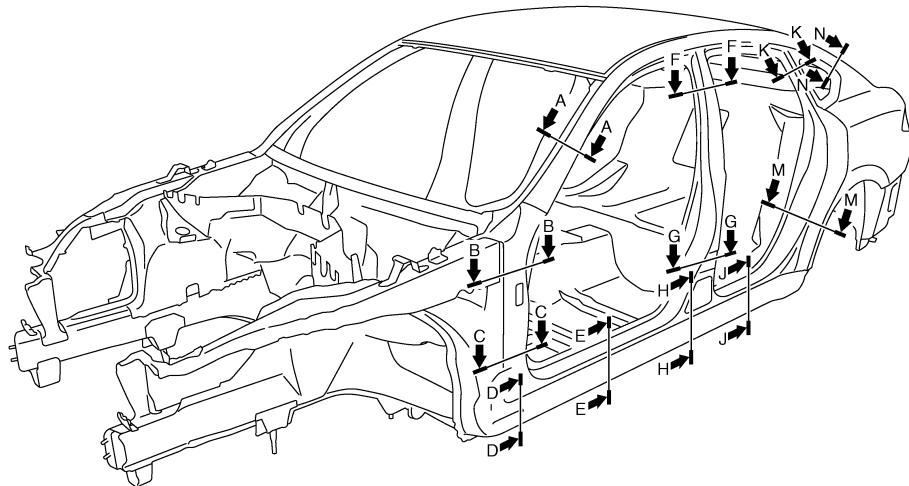

JSKIA1626ZZ

- 1. Outer roof side rail
- 2. Outer side body
- 3. Outer front pillar reinforcement
- 4. Inner roof side rail
- 5. Outer front pillar bracket
- 6. Upper rear hoodlodge
- 7. Upper dash
- 8. Hoodlodge reinforcement gusset
- 9. Front pillar hinge brace

BODY CONSTRUCTION

< REMOVAL AND INSTALLATION >

- | | | |
|--|-------------------------------------|---|
| 10. Hoodledge reinforcement | 11. Weld nut | 12. Upper hinge plate |
| 13. Lower dash crossmember | 14. Front pillar bracket | 15. Lower hinge plate |
| 16. Lower front pillar gusset | 17. Center sill reinforcement | 18. Inner sill |
| 19. Lower dash | 20. Front side member outrigger | 21. Outer front sill brace |
| 22. Outer sill extension | 23. 2nd crossmember | 24. Front floor |
| 25. Outer sill reinforcement | 26. Inner center pillar | 27. Center pillar seat belt reinforcement |
| 28. Inner center pillar reinforcement | 29. Center pillar reinforcement | 30. Seat belt anchor |
| 31. 3rd crossmember | 32. Outer rear wheelhouse extension | 33. Rear seat crossmember reinforcement |
| 34. Rear side member front reinforcement | 35. Rear seat crossmember | 36. Rear side member front |
| 37. Outer sill rear reinforcement | 38. Inner rear pillar | 39. Inner rear wheelhouse |
| 40. Outer rear wheelhouse | 41. Rear roof rail brace | 42. Inner rear pillar reinforcement |
| 43. Outer roof side rail reinforcement | | |

A
B
C
D
E

Rear Fender Hemming Process

INFOID:0000000008144797

1. A wheel arch is to be installed and hemmed over the left and right outer wheel houses.
2. In order to hem the wheel arch, it is necessary to repair any damaged or defaced parts around outer wheel house.

CAUTION:


Ensure that the area that is to be glued around the outer wheelhouse is undamaged or defaced.

PROCEDURE OF THE HEMMING PROCESS

- Peel off old bonding material on the surface of the outer wheelhouse and clean thoroughly.
- Peel off a primer coat in the specified area where new adhesive is to be applied on rear fender (the replacing part).
- Apply new adhesive to both specified areas of the outer wheelhouse and rear fender.


<Adhesive> 3M™ Automix™ Panel Bonding Adhesive 08115 or equivalent

- Attach rear fender to the body of the car, and weld the required part except the hemming part.

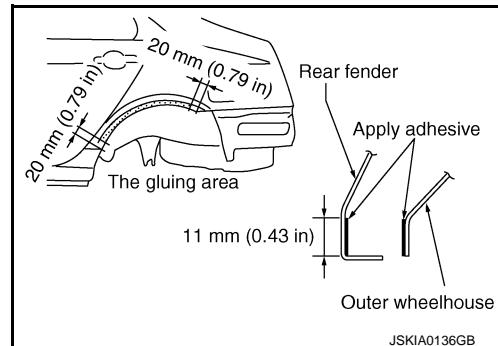

F
G
H
I
J
L
M
N
O
P

- Bend the welded part starting from the center of the wheel arch gradually with a hammer and a dolly. (Also hem the end of the flange.)
- Hemming with a hammer is conducted to an approximate angle of 80 degrees.

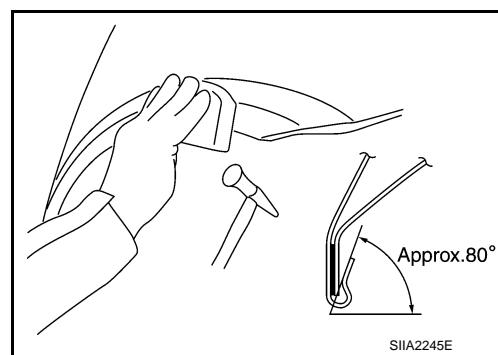


BRM
L
M
N
O
P

BODY CONSTRUCTION


< REMOVAL AND INSTALLATION >

- Starting from the center, hem the wheel arch gradually, using slight back and forth motion with a hemming tool.

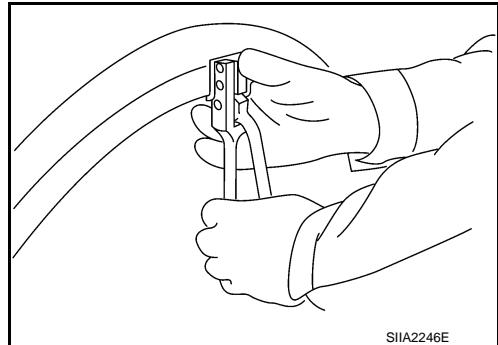

SIIA2246E

- Seal up the area around the hemmed end of the flange.

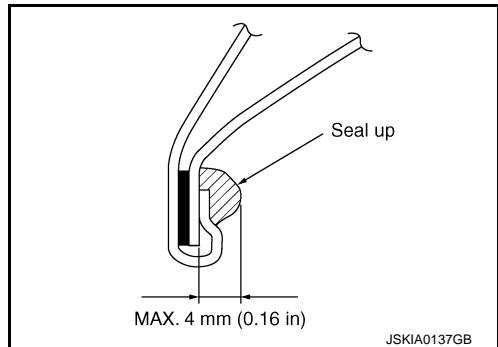

JSKIA0137GB

REPLACEMENT OPERATIONS

< REMOVAL AND INSTALLATION >

 

 

 
 
 

REPLACEMENT OPERATIONS

Description

INFOID:0000000008144798

- This section is prepared for technicians who have attained a high level of skill and experience in repairing collision-damaged vehicles and also use modern service tools and equipment. Persons unfamiliar with body repair techniques should not attempt to repair collision-damaged vehicles by using this section.
- Technicians are also encouraged to read the Body Repair Manual (Fundamentals) in order to ensure that the original functions and quality of the vehicle are maintained. The Body Repair Manual (Fundamentals) contains additional information, including cautions and warnings, that are not included in this manual. Technicians should refer to both manuals to ensure proper repair.
- Please note that this information is prepared for worldwide usage, and as such, certain procedures might not apply in some regions or countries.

The symbols used in this section for welding operations are shown below.

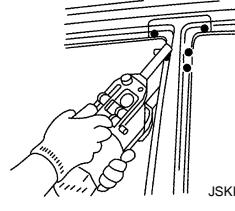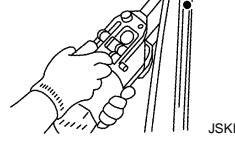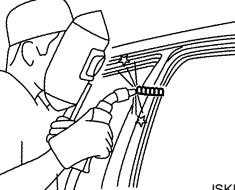Symbol marks	Description	
 JSKIA0049ZZ	2-spot welds	
 JSKIA0050ZZ	3-spot welds	
 JSKIA0051ZZ	MIG plug weld	 For 3 panels plug weld method ■ A  ■ B  JSKIA0055ZZ
 JSKIA0052ZZ	MIG seam weld / Point weld	

A

B

C

D

E

F

G

H

I

J

BRM

L

M

N


O

P


REPLACEMENT OPERATIONS

< REMOVAL AND INSTALLATION >


- Front pillar butt joint can be determined anywhere within shaded area as shown in the figure. The best location for the butt joint is at position A due to the construction of the vehicle.

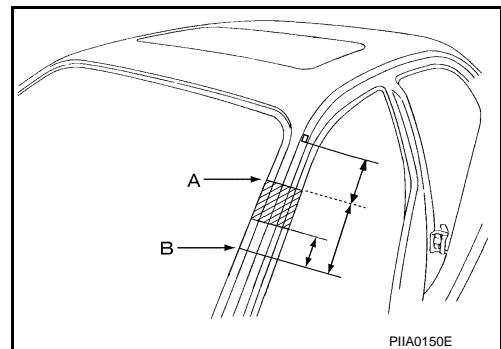

- Determine cutting position and record distance from the locating indent. Use this distance when cutting the service part. Cut outer front pillar over 60 mm (2.36 in) above the inner front pillar cut position.

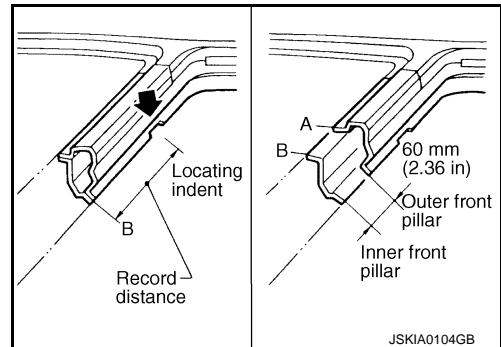


- Prepare a cutting jig to make outer pillar easier to cut. Also, this will permit the service part to be accurately cut at the joint position.

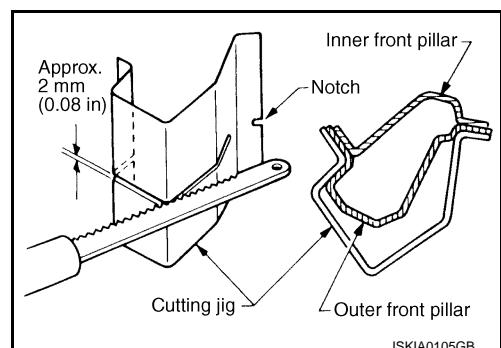

- An example of cutting operation using a cutting jig is as per the following.

- Mark cutting lines.
A: Cut position of outer pillar
B: Cut position of inner pillar
- Align cutting line with notch on jig. Clamp jig to pillar.
- Cut outer pillar along groove of jig (at position A).
- Remove jig and cut remaining portions.
- Cut inner pillar at position B in same manner.

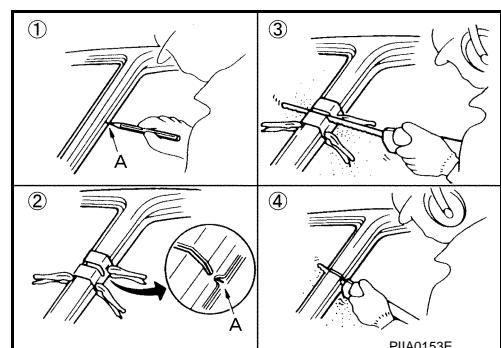


REPLACEMENT OPERATIONS

< REMOVAL AND INSTALLATION >

Radiator Core Support

INFOID:000000008144799

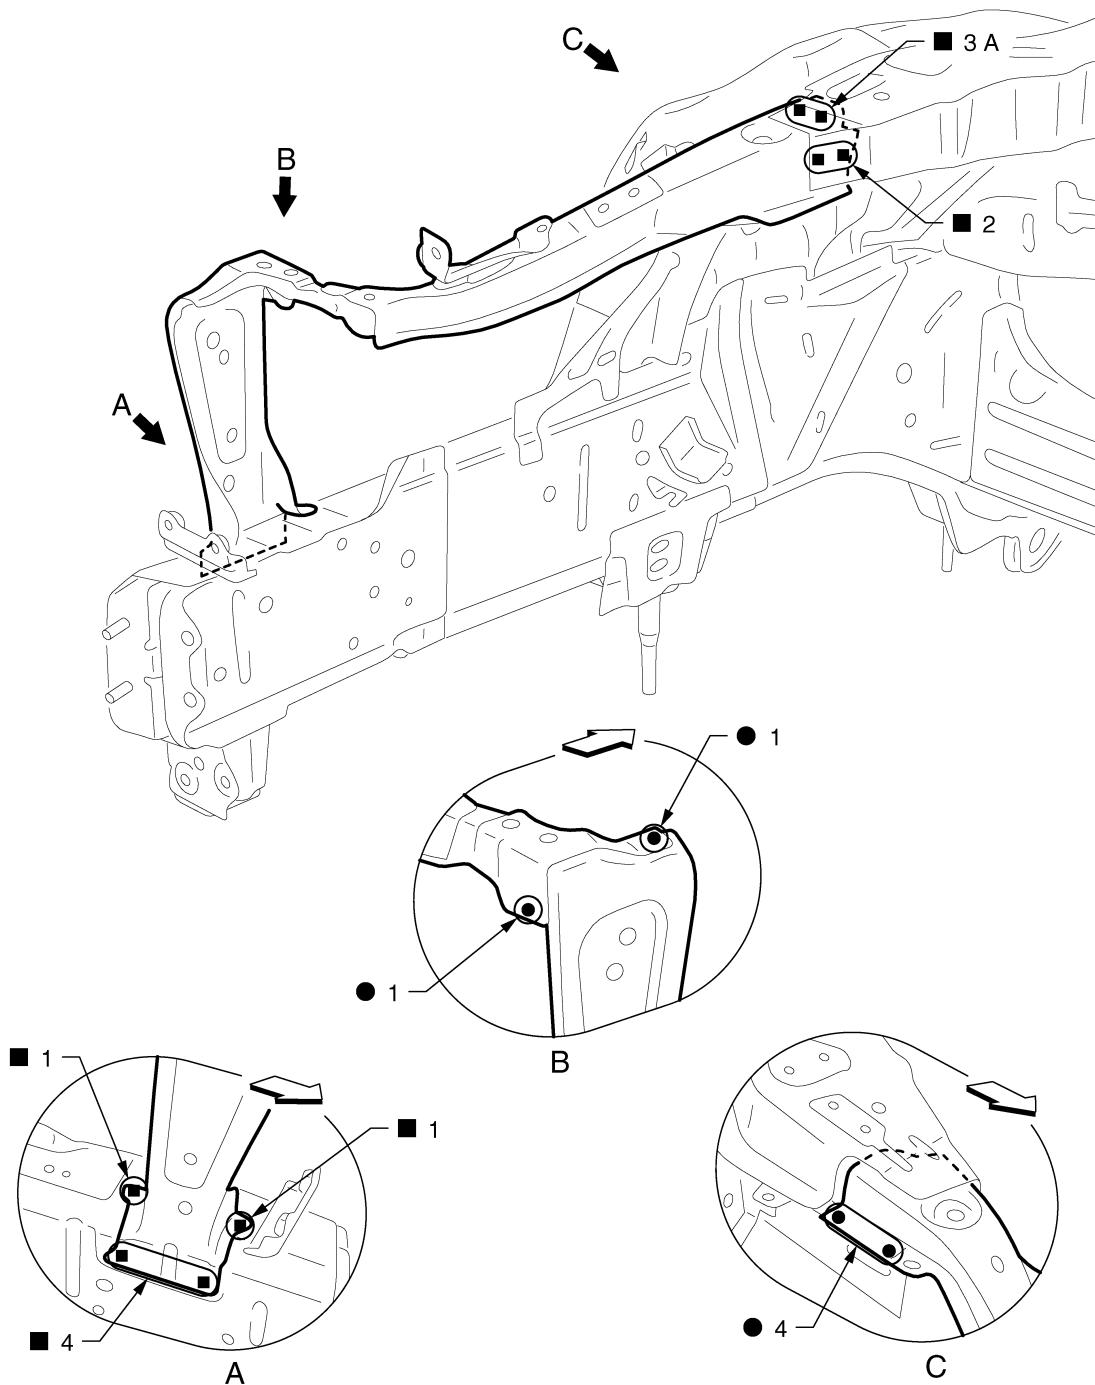

A
B
C
D
E
F
G
H
I
J

BRM

L
M
N
O
P

JSKIA1628ZZ

←: Vehicle front

Replacement parts

- Radiator core support assembly (LH)
- Front side member connector assembly (LH)

Hoodledge




INFOID:000000008144800

Work after radiator core support is removed.

REPLACEMENT OPERATIONS

< REMOVAL AND INSTALLATION >

Remove the front side member extension front reinforcement (reusable) and front side member center closing plate (reusable).

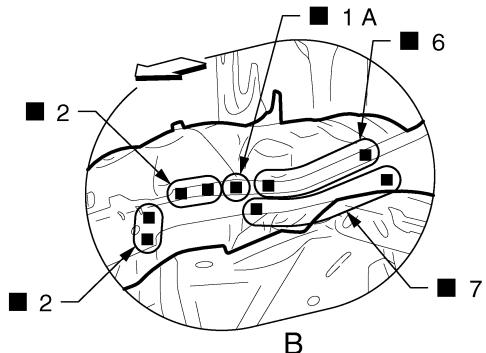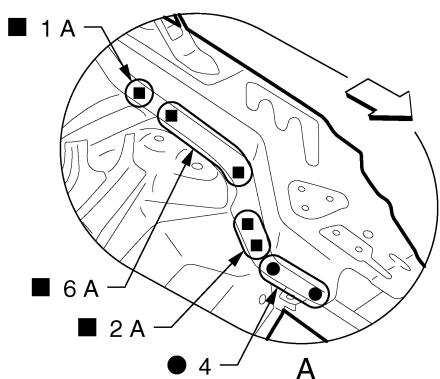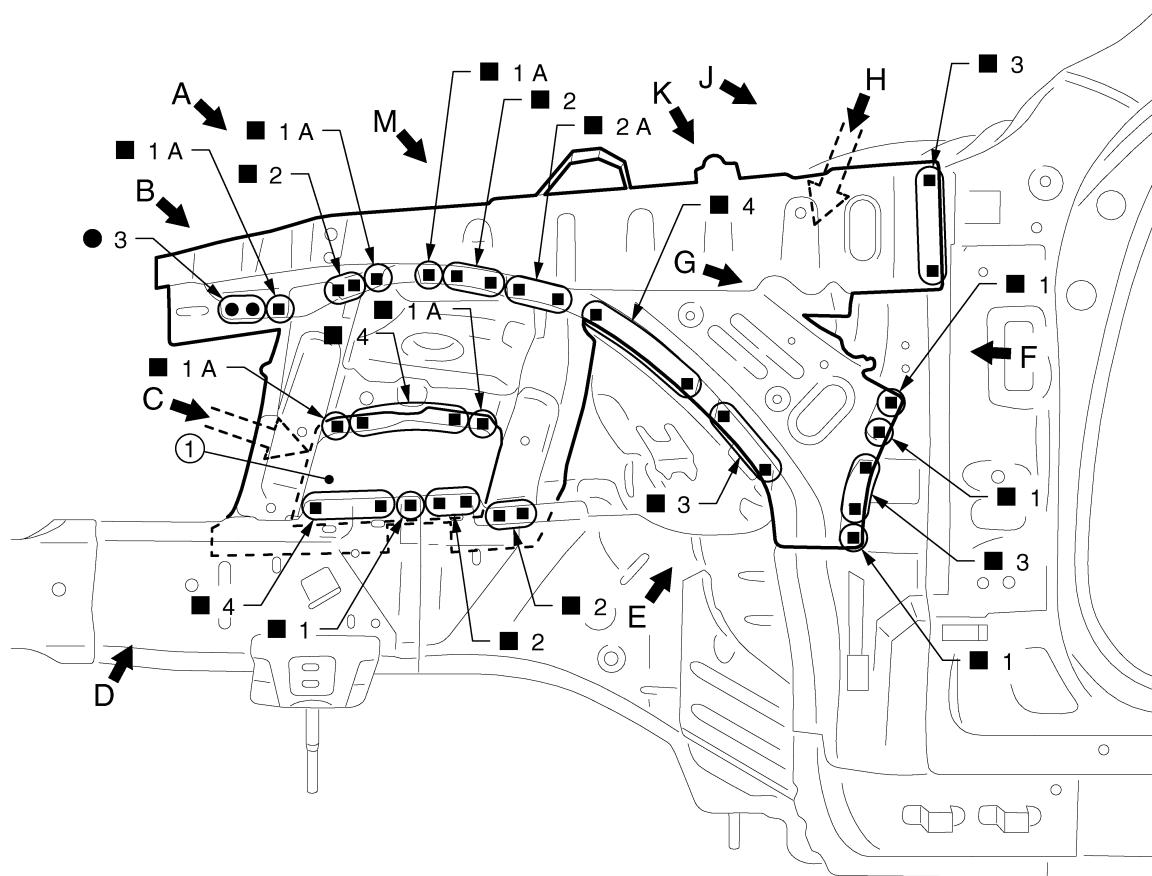

JSKIA2291ZZ

- Front side member extension front reinforcement

↖: Vehicle front

Replacement parts

- Upper front hoodledge (LH)


- Hoodledge reinforcement (LH)

- Front strut housing (LH)

View B: Before installing hoodledge reinforcement

REPLACEMENT OPERATIONS

< REMOVAL AND INSTALLATION >

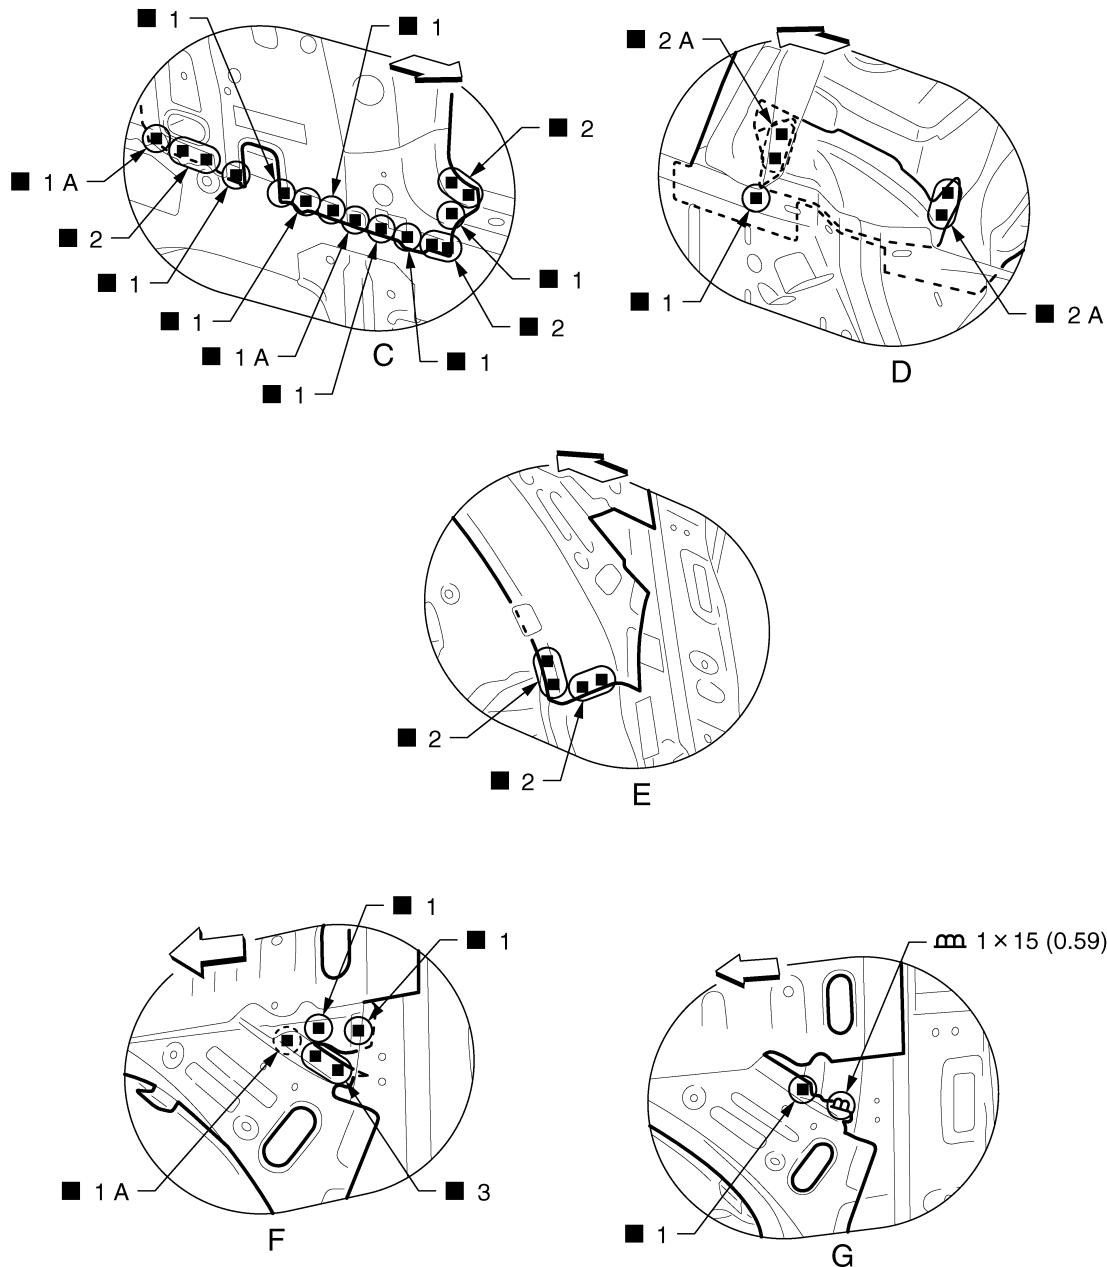

JSKIA2292GB





Unit: mm (in)

◀: Vehicle front

○: Weld the parts onto the back of the component part.

REPLACEMENT OPERATIONS

< REMOVAL AND INSTALLATION >

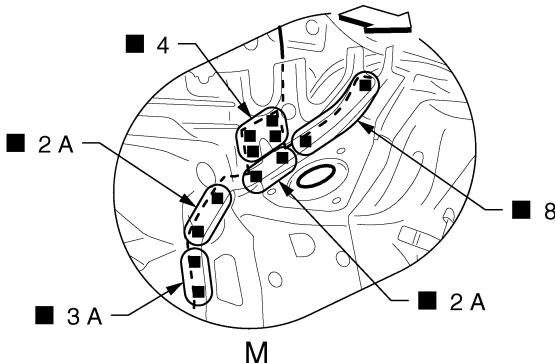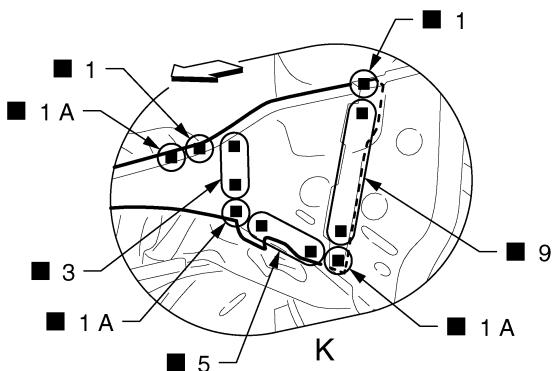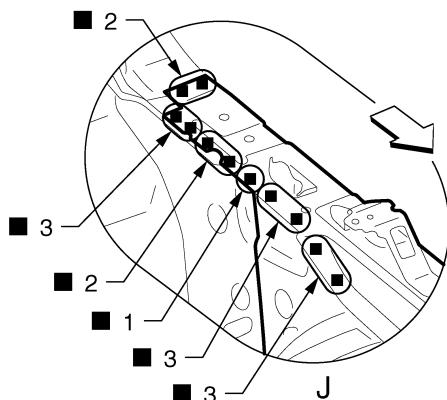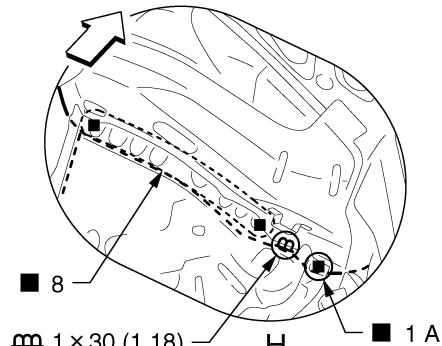

JSKIA1631GB

Unit: mm (in)

←: Vehicle front

(): Weld the parts onto the back of the component part.

View K: Before installing hoodledge reinforcement

Front Side Member


INFOID:0000000008144801

Work after radiator core support and hoodledge are removed.

Remove the front side member extension front reinforcement (reusable) and front side member center closing plate (reusable) from the service part "front side member closing plate assembly" for easier installation of hoodledge.

REPLACEMENT OPERATIONS

< REMOVAL AND INSTALLATION >

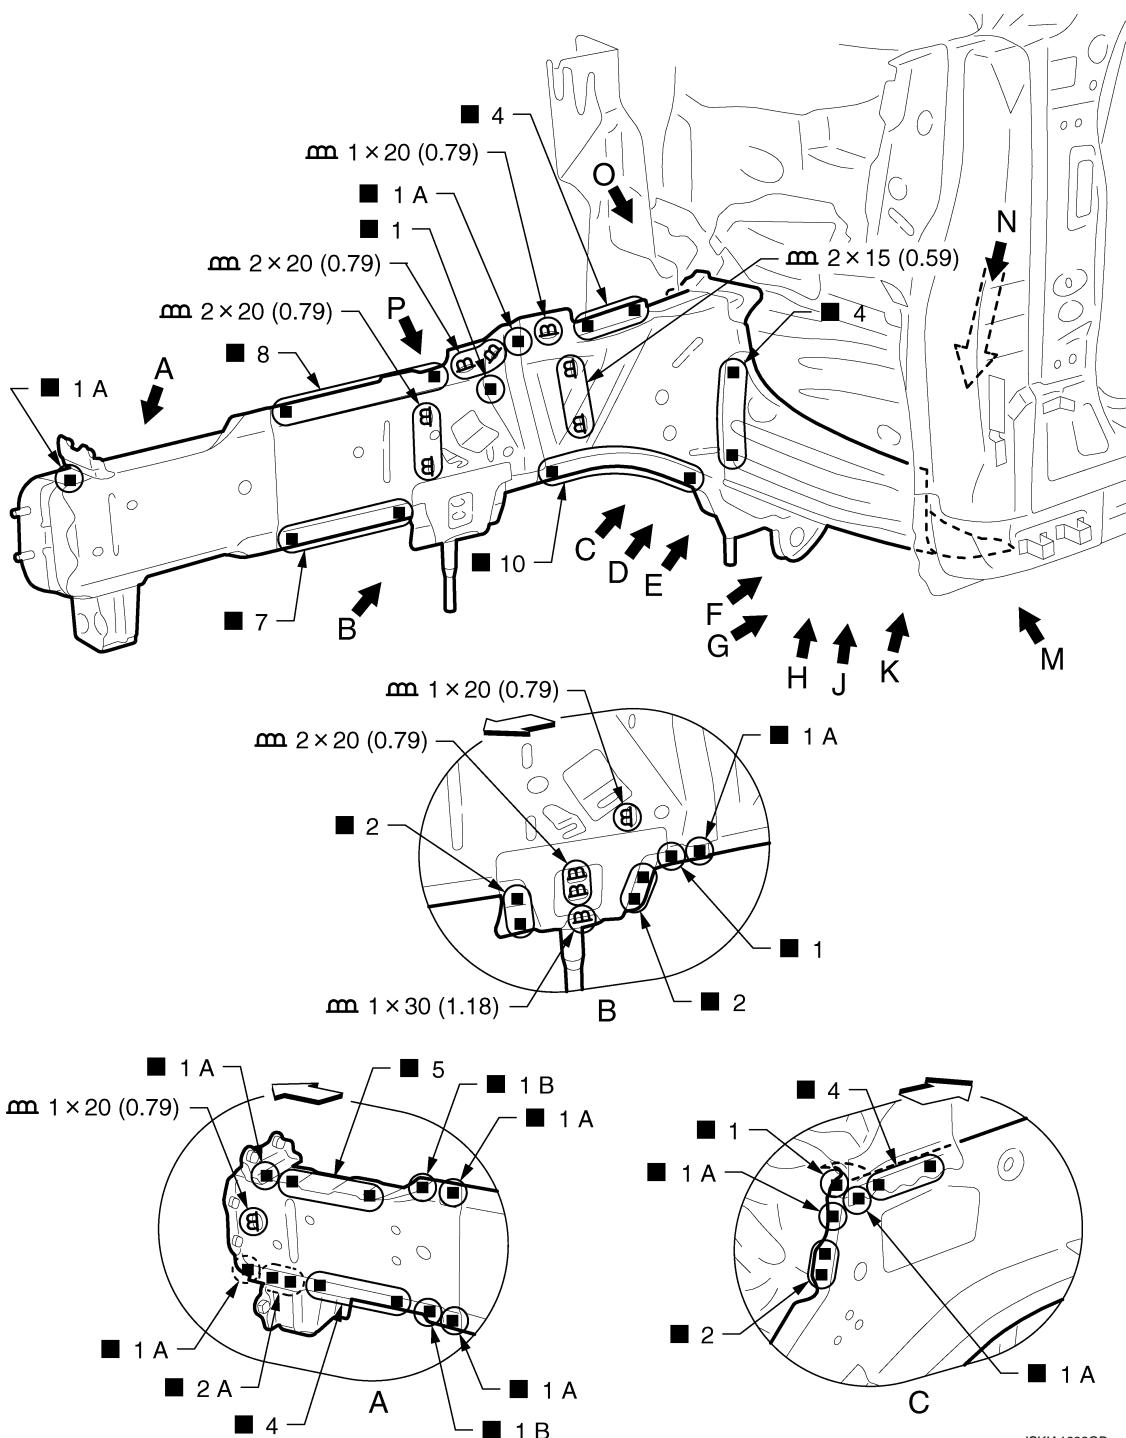

A
B
C
D
E
F
G
H
I
J

BRM

L
M
N

O
P

Unit: mm (in)

◀: Vehicle front

(○): Weld the parts onto the back of the component part.


Replacement parts

- Front side member assembly (LH)
- Front side member closing plate assembly (LH)
- Front side member outrigger assembly (LH)

JSKIA1632GB

REPLACEMENT OPERATIONS

< REMOVAL AND INSTALLATION >

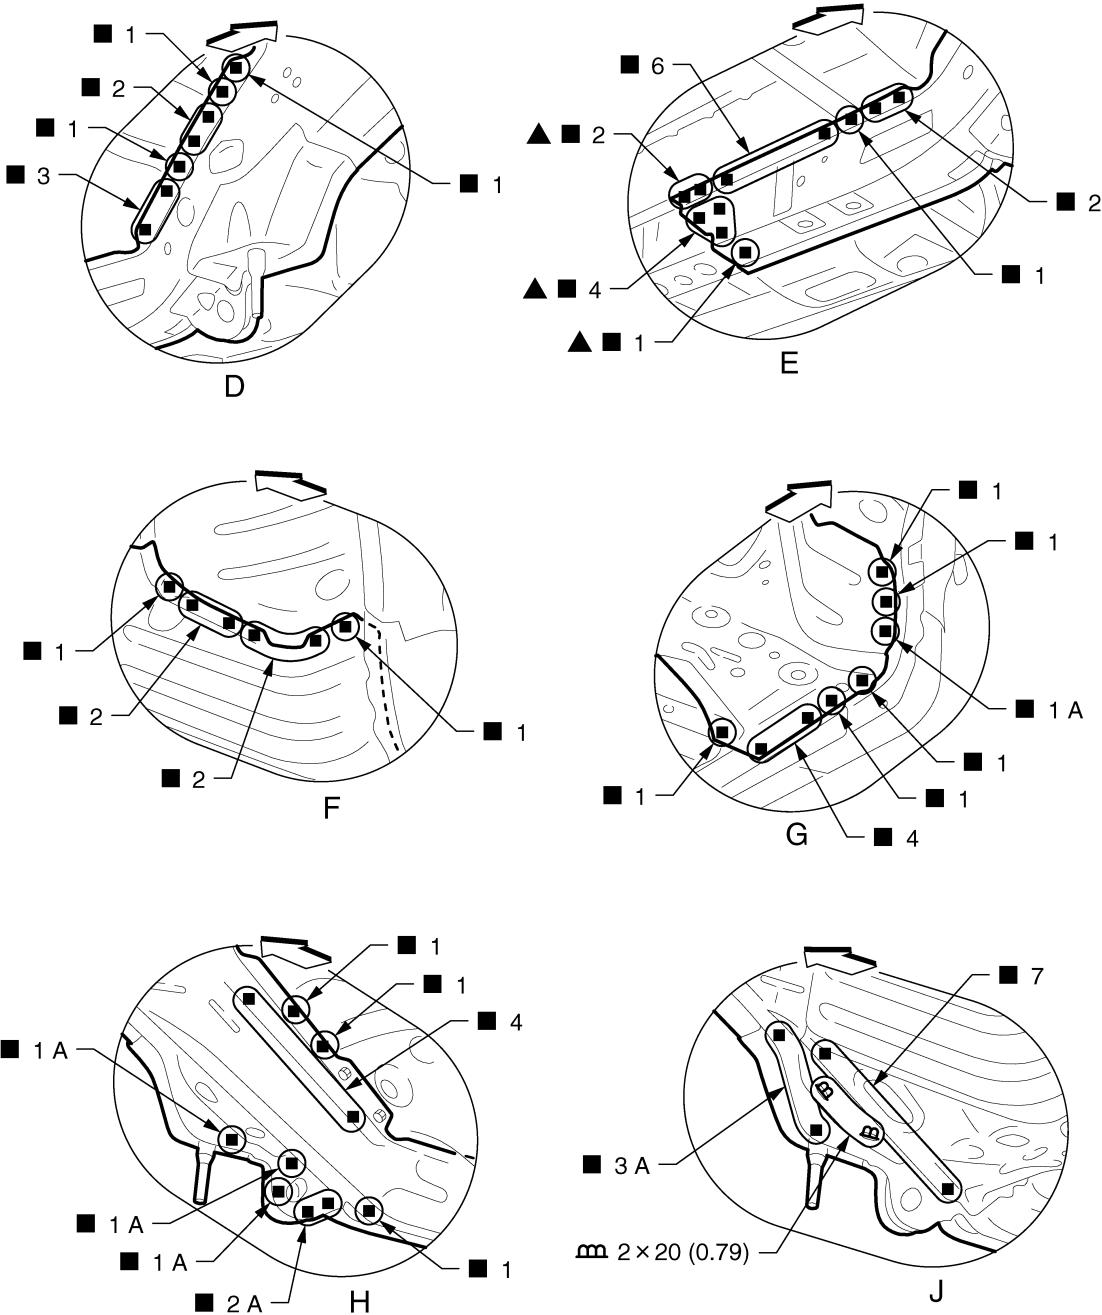

JSKIA1633GB

Unit: mm (in)


◀: Vehicle front

▲: Drill φ8 mm (0.31 in) hole for the plug welding hole (ultra high strength steel plate).

View H: Before installing front side member outrigger assembly

REPLACEMENT OPERATIONS

< REMOVAL AND INSTALLATION >

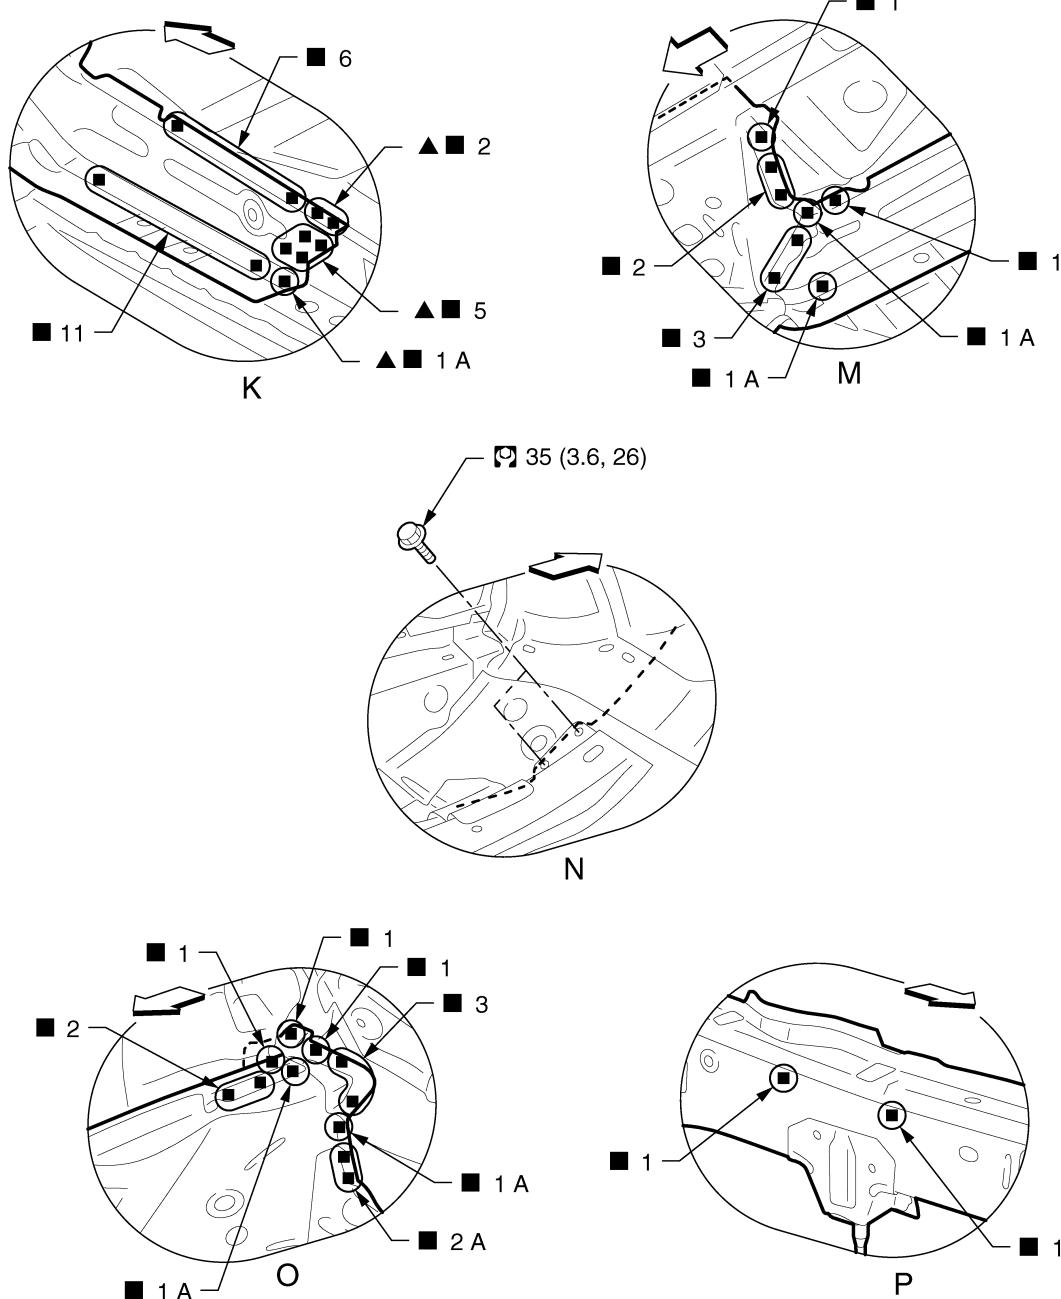

JSKIA1634GB

◀: Vehicle front

▲: Drill $\phi 8$ mm (0.31 in) hole for the plug welding hole (ultra high strength steel plate).
Refer to [GI-5, "Components"](#) for symbols in the figure.

View K: Before installing front side member outrigger assembly


Front Side Member (Partial Replacement)

INFOID:0000000008144802

Work after radiator core support is removed.

REPLACEMENT OPERATIONS

< REMOVAL AND INSTALLATION >

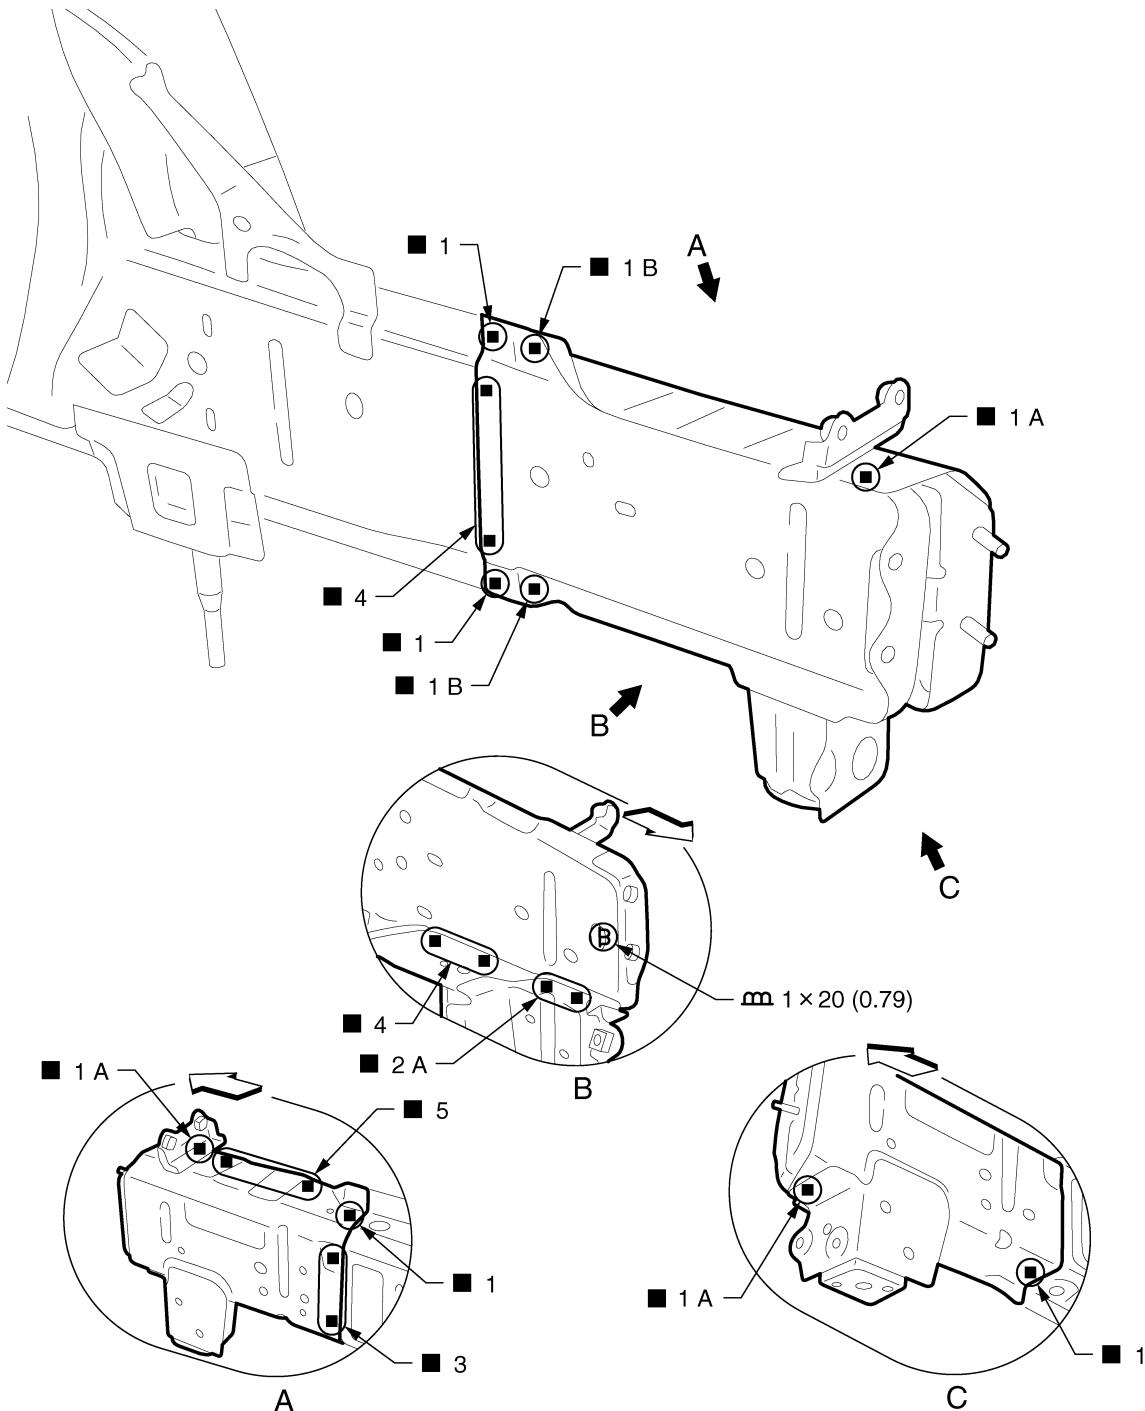

JSKIA1638GB

Unit: mm (in)

⇨: Vehicle front

Replacement parts

- Front side member front extension (LH)

- Front side member front closing plate (LH)


Front Pillar

INFOID:0000000008144803

Work after hoodledge reinforcement and roof are removed.

REPLACEMENT OPERATIONS

< REMOVAL AND INSTALLATION >

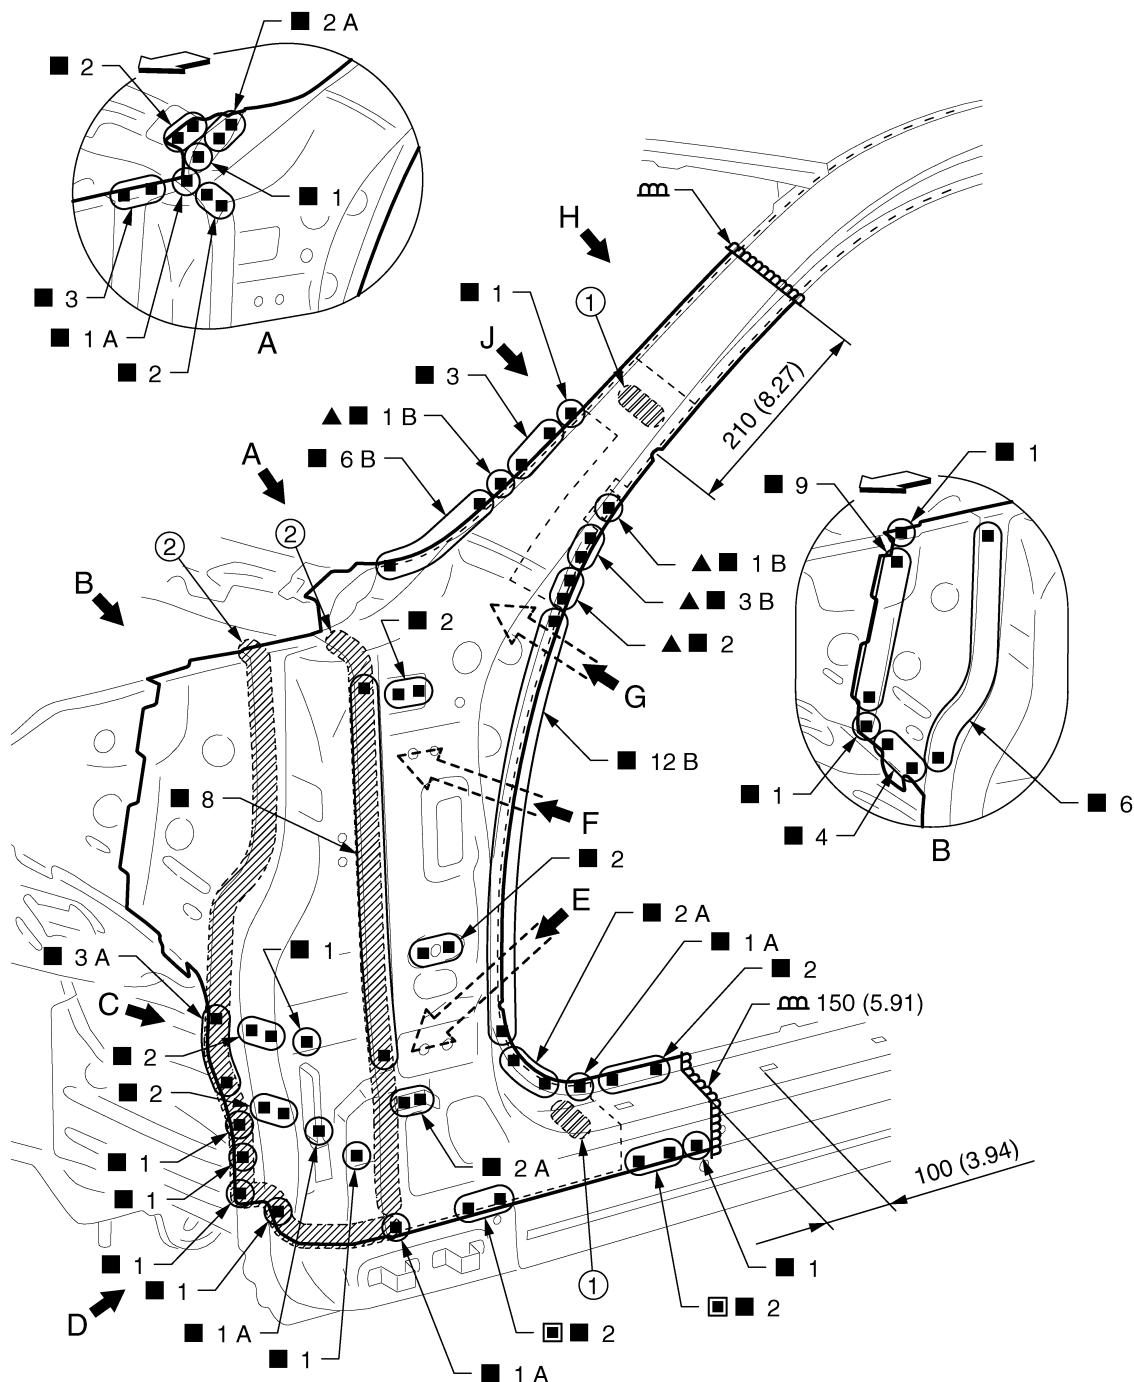

JSKIA1639GB

1. Urethane foam

2. Body sealing

Unit: mm (in)

←: Vehicle front

■: Perform the plug welding instead of the laser welding.


▲: Drill $\phi 8$ mm (0.31 in) hole for the plug welding hole (ultra high strength steel plate).

Replacement parts

- Outer front side body (LH)
- Front fender bracket
- Outer front pillar reinforcement (LH)
- Upper rear hoodledge (LH)

REPLACEMENT OPERATIONS

< REMOVAL AND INSTALLATION >

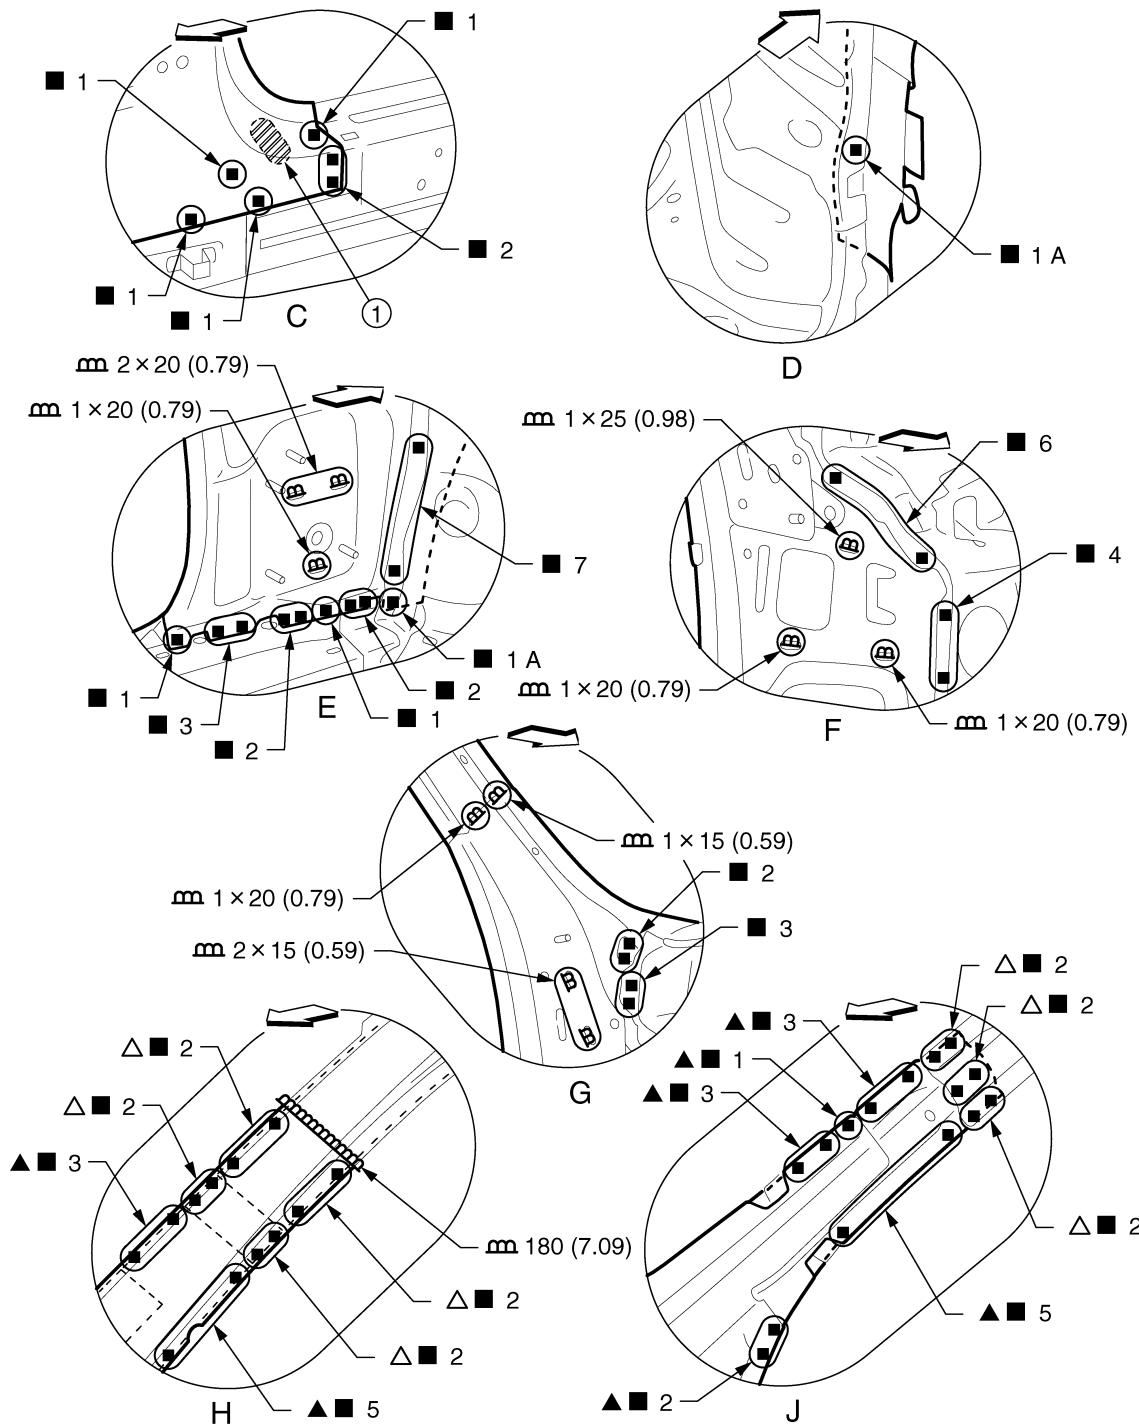

JSKIA1868GB

1. Urethane foam
Unit: mm (in)
⇨: Vehicle front
▲: Drill φ8 mm (0.31 in) hole for the plug welding hole (ultra high strength steel plate).
△: Drill φ10 mm (0.39 in) hole for the plug welding hole (ultra high strength steel plate).

View C and J: Before installing outer front side body


Side Body

INFOID:0000000008144804

Work after hoodledge reinforcement and roof are removed.

REPLACEMENT OPERATIONS

< REMOVAL AND INSTALLATION >

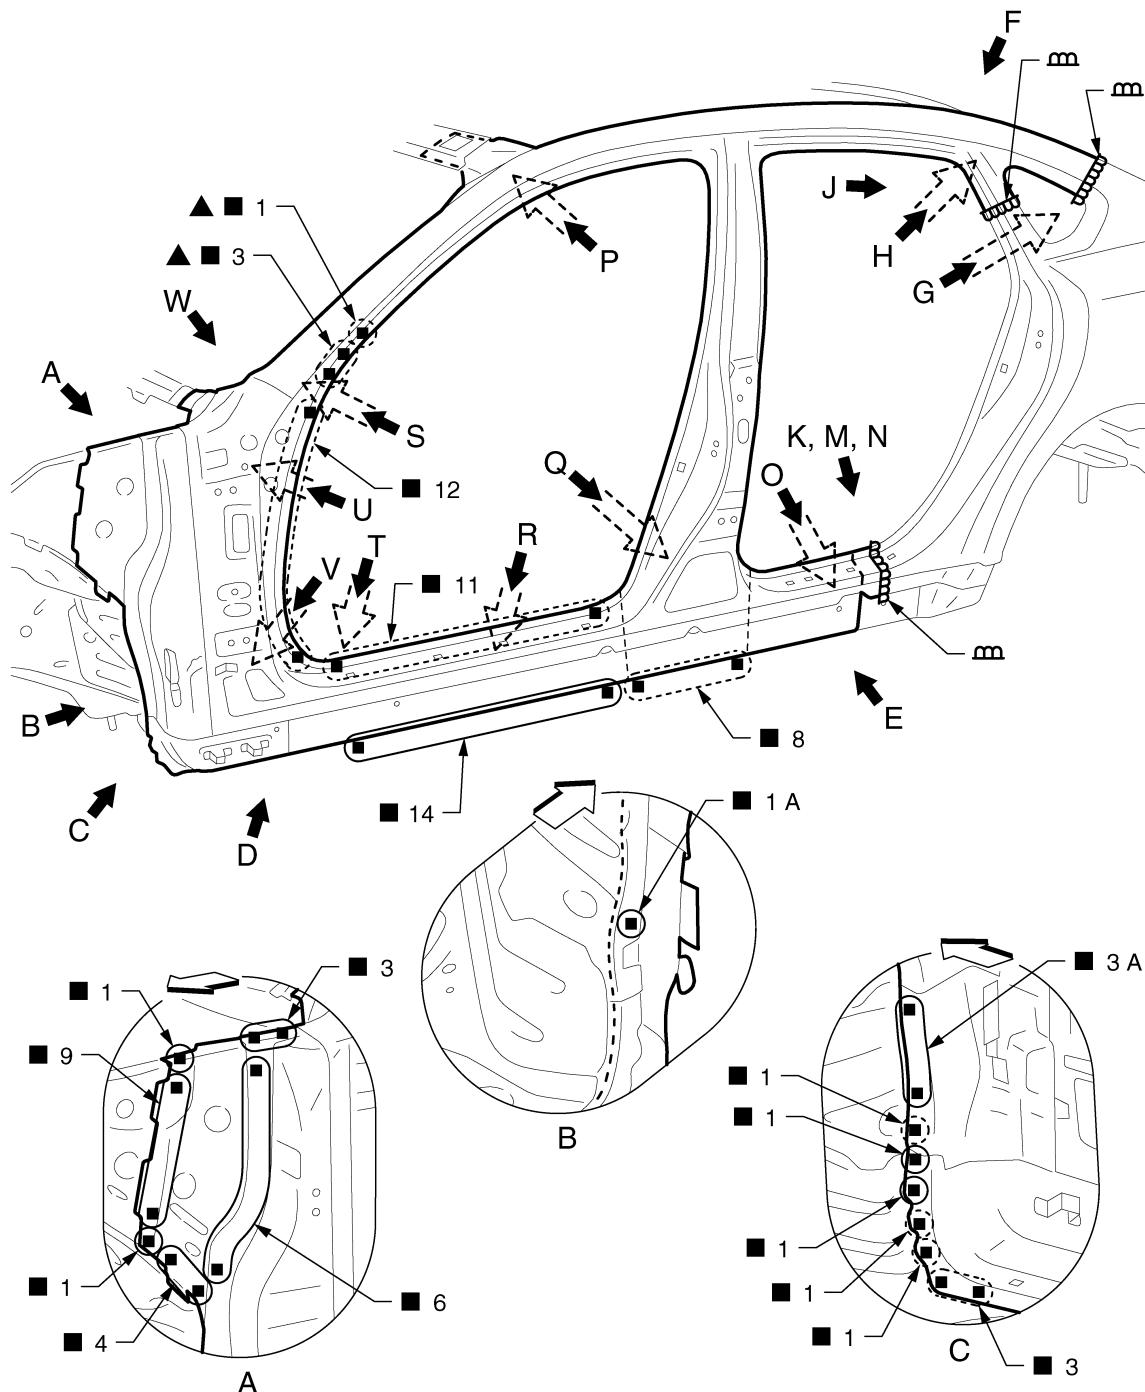

JSKIA1641ZZ

◀: Vehicle front

▲: Drill $\phi 8$ mm (0.31 in) hole for the plug welding hole (ultra high strength steel plate).

○: Weld the parts onto the back of the component part.

Replacement parts


- Side body assembly (LH)
- Upper rear hoodledge (LH)

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

BRM

REPLACEMENT OPERATIONS

< REMOVAL AND INSTALLATION >

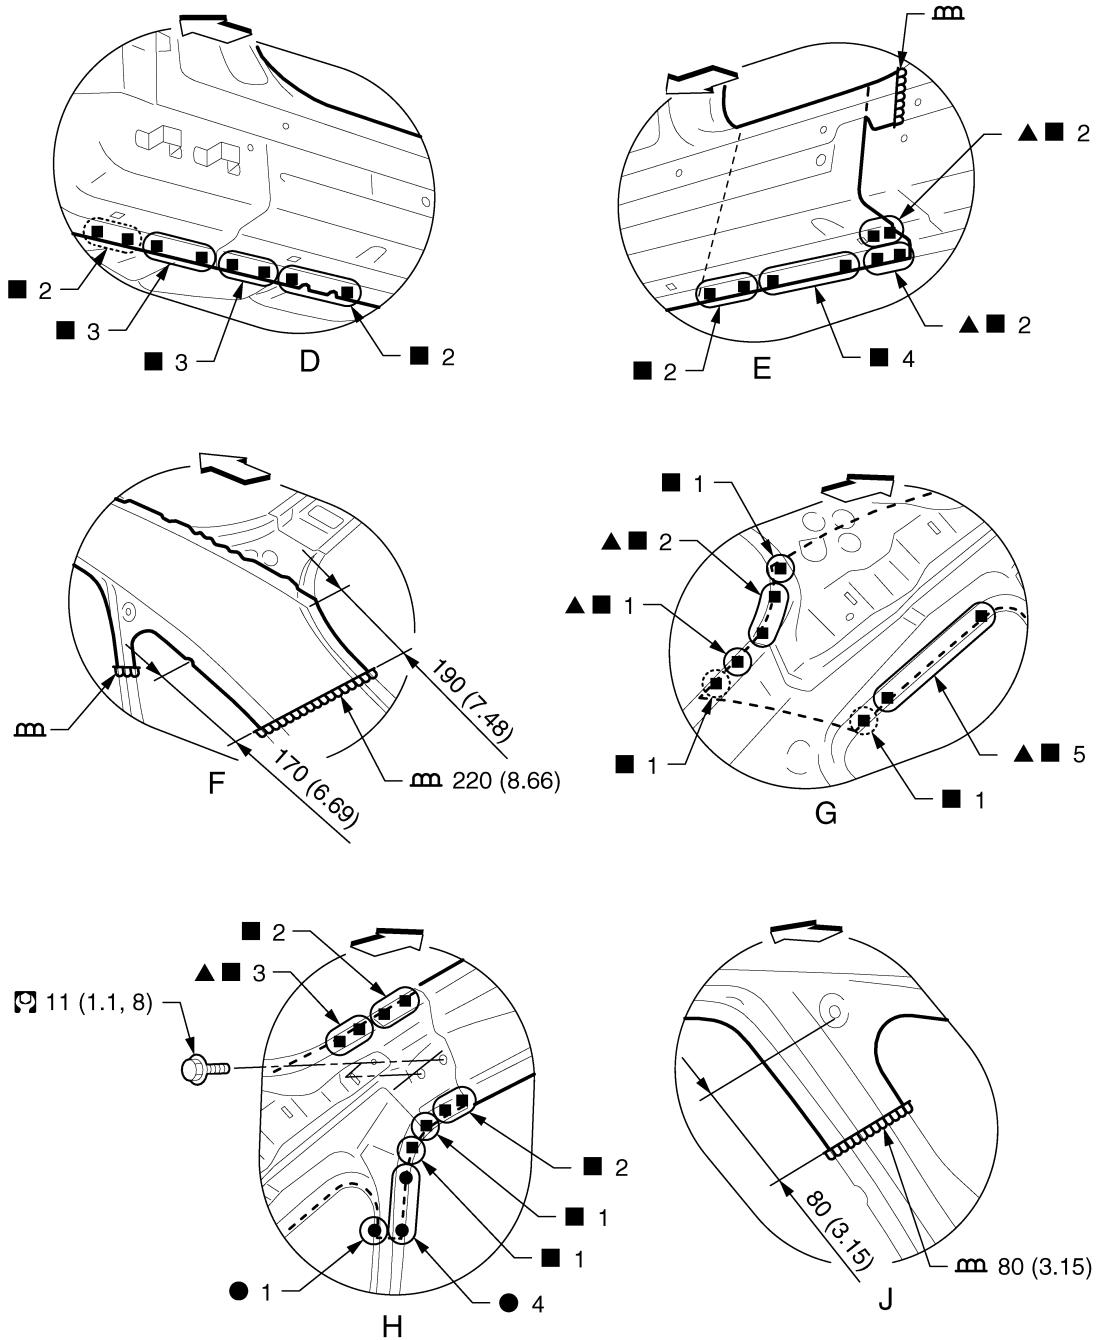

JSKIA1642GB

Unit: mm (in)

◀: Vehicle front


▲: Drill $\phi 8$ mm (0.31 in) hole for the plug welding hole (ultra high strength steel plate).

(○): Weld the parts onto the back of the component part.

Refer to [GI-5, "Components"](#) for symbols in the figure.

REPLACEMENT OPERATIONS

< REMOVAL AND INSTALLATION >

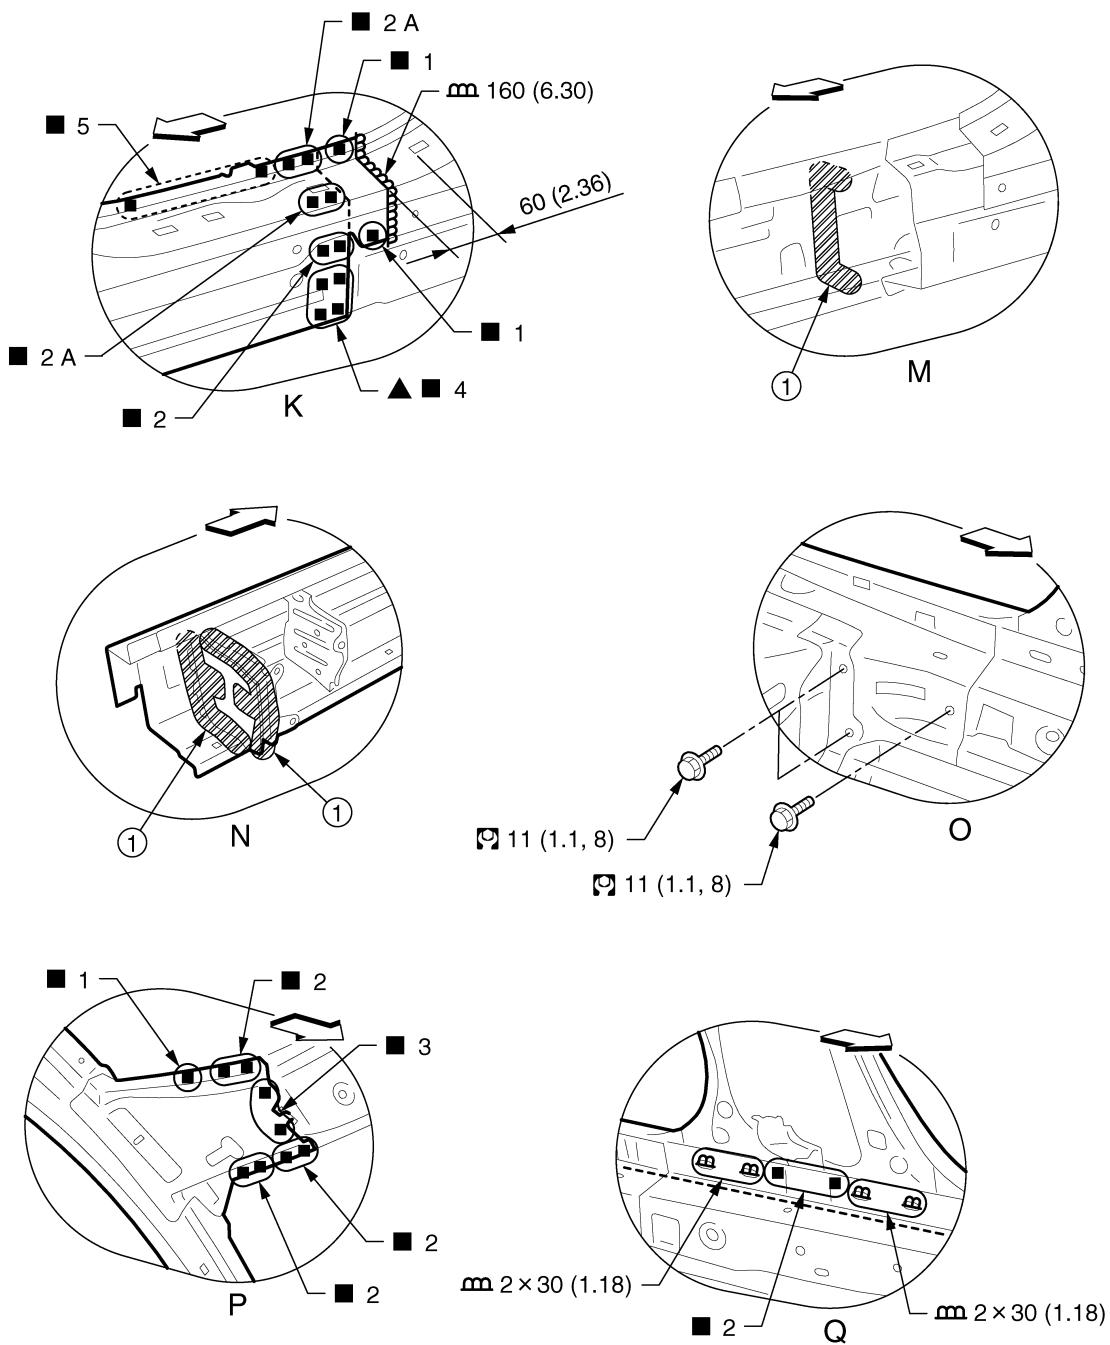

A
B
C
D
E
F
G
H
I
J

BRM

L
M
N

O
P

JSKIA1643GB

1. Urethane foam

Unit: mm (in)

←: Vehicle front

▲: Drill $\phi 8$ mm (0.31 in) hole for the plug welding hole (ultra high strength steel plate).

○: Weld the parts onto the back of the component part.


Refer to [GI-5, "Components"](#) for symbols in the figure.

View M: Before installing side body assembly

View N: Side body assembly (replacement parts)

REPLACEMENT OPERATIONS

< REMOVAL AND INSTALLATION >

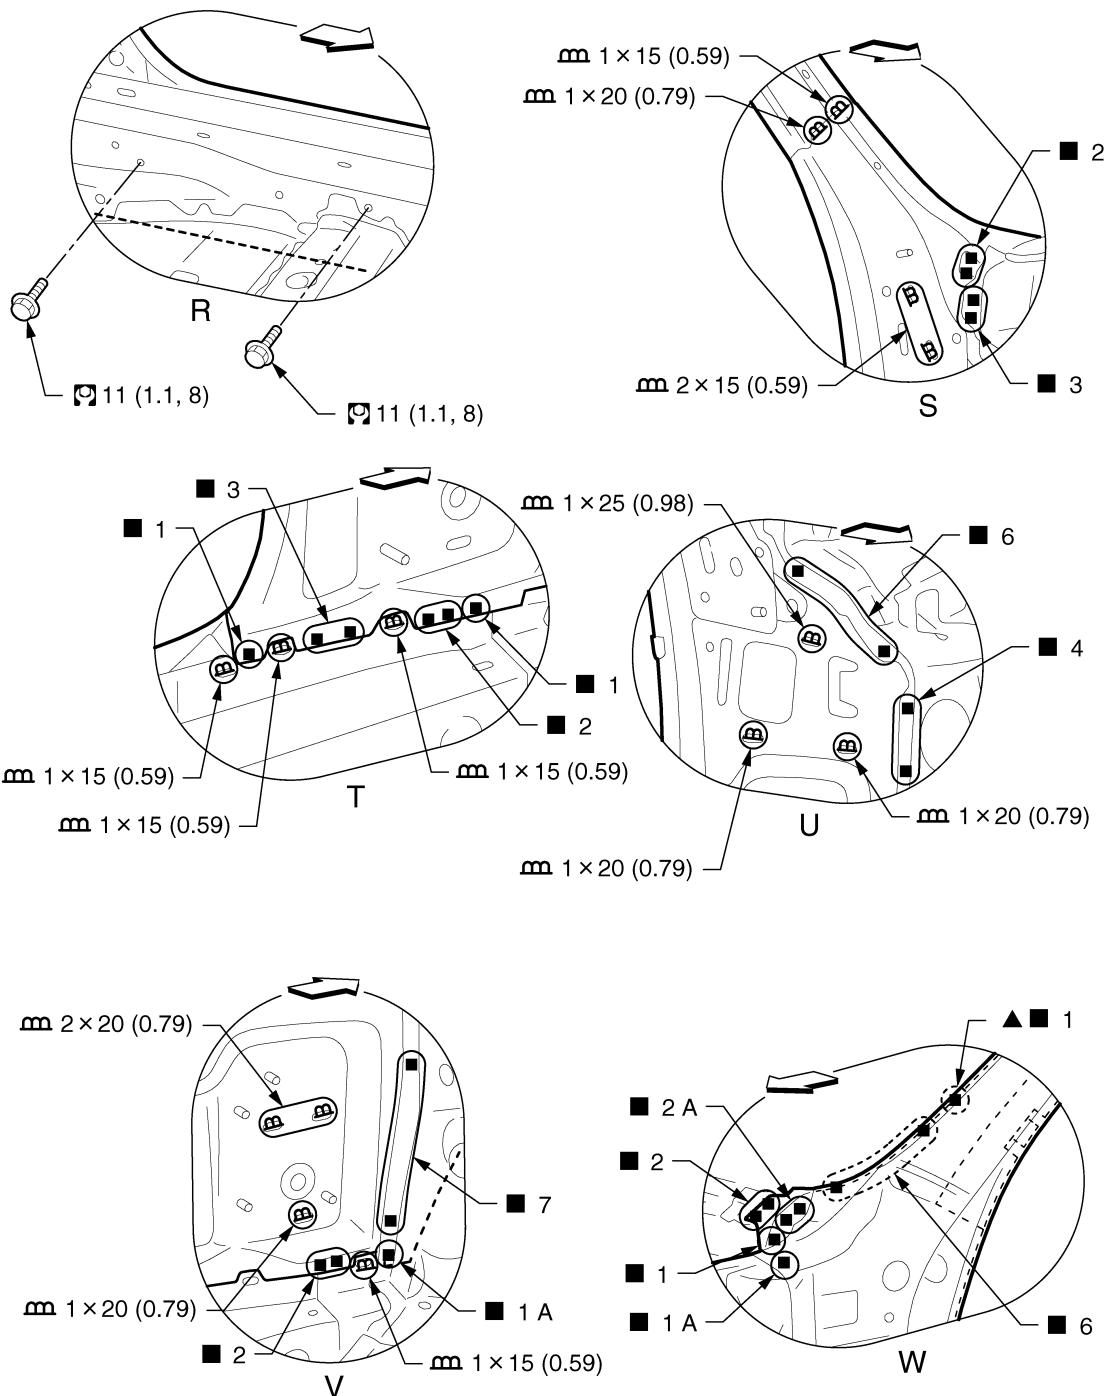

JSKIA1869GB

Unit: mm (in)

◀: Vehicle front

▲: Drill $\phi 8$ mm (0.31 in) hole for the plug welding hole (ultra high strength steel plate).

(○): Weld the parts onto the back of the component part.

Refer to [GI-5, "Components"](#) for symbols in the figure.


Center Pillar

INFOID:0000000008144805

Work after roof is removed.

REPLACEMENT OPERATIONS

< REMOVAL AND INSTALLATION >

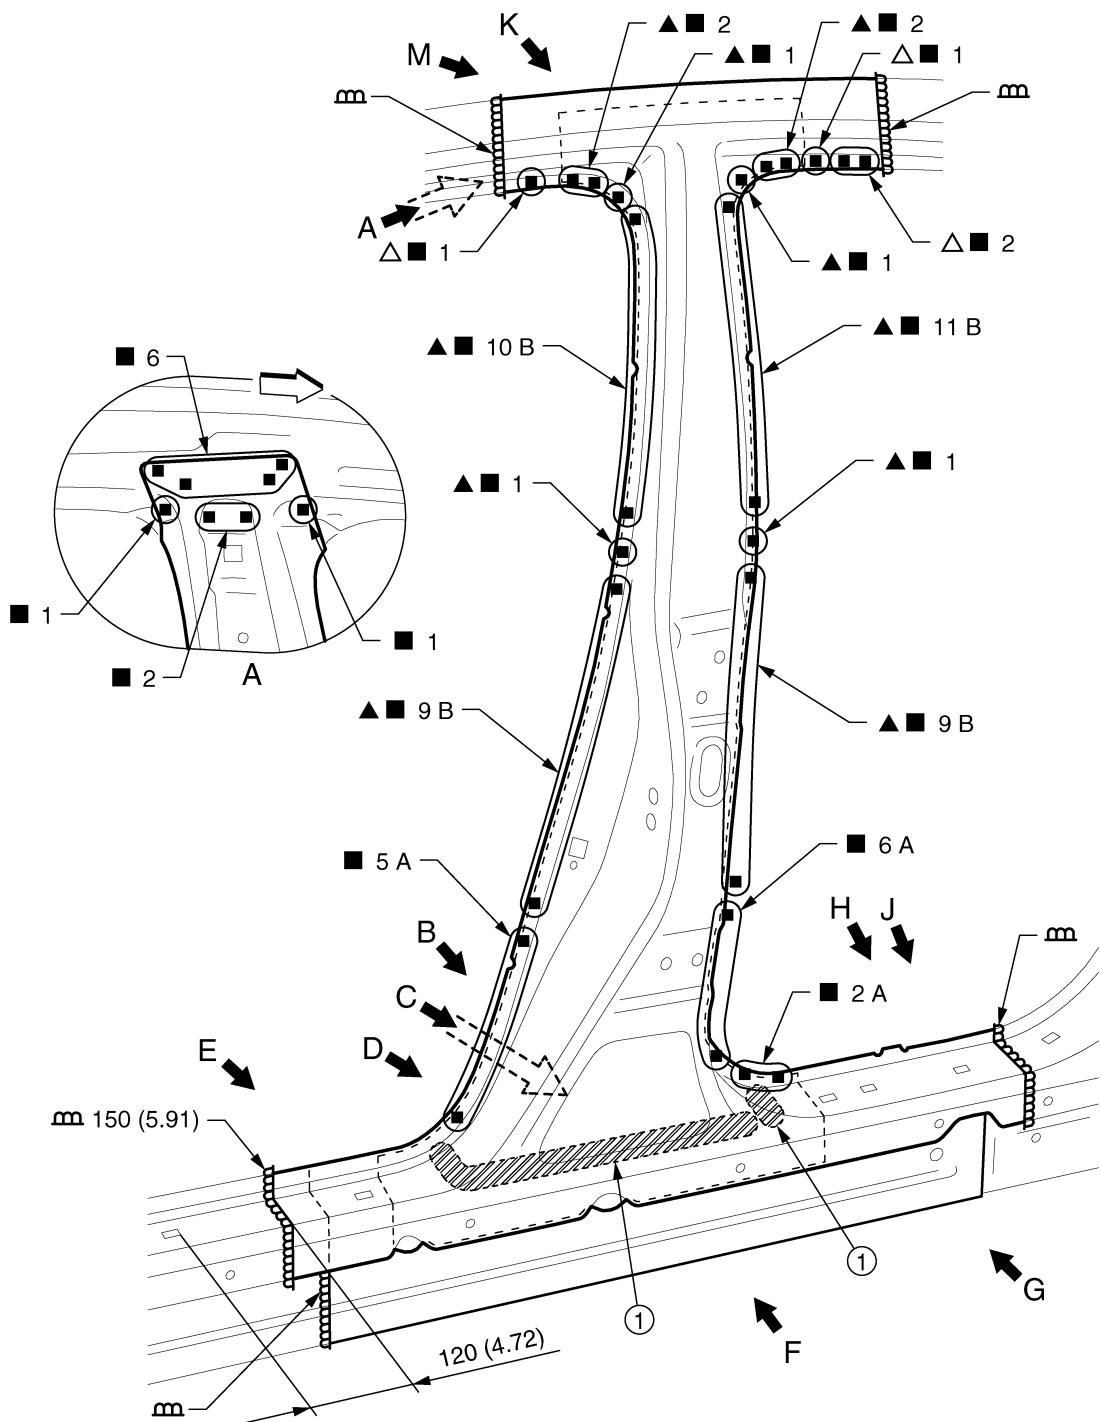

1. Urethane foam

Unit: mm (in)

←: Vehicle front

▲: Drill $\phi 8$ mm (0.31 in) hole for the plug welding hole (ultra high strength steel plate).

△: Drill $\phi 10$ mm (0.39 in) hole for the plug welding hole (ultra high strength steel plate).

Replacement parts


- Outer front side body (LH)

- Center pillar reinforcement (LH)

- Inner center pillar (LH)

REPLACEMENT OPERATIONS

< REMOVAL AND INSTALLATION >

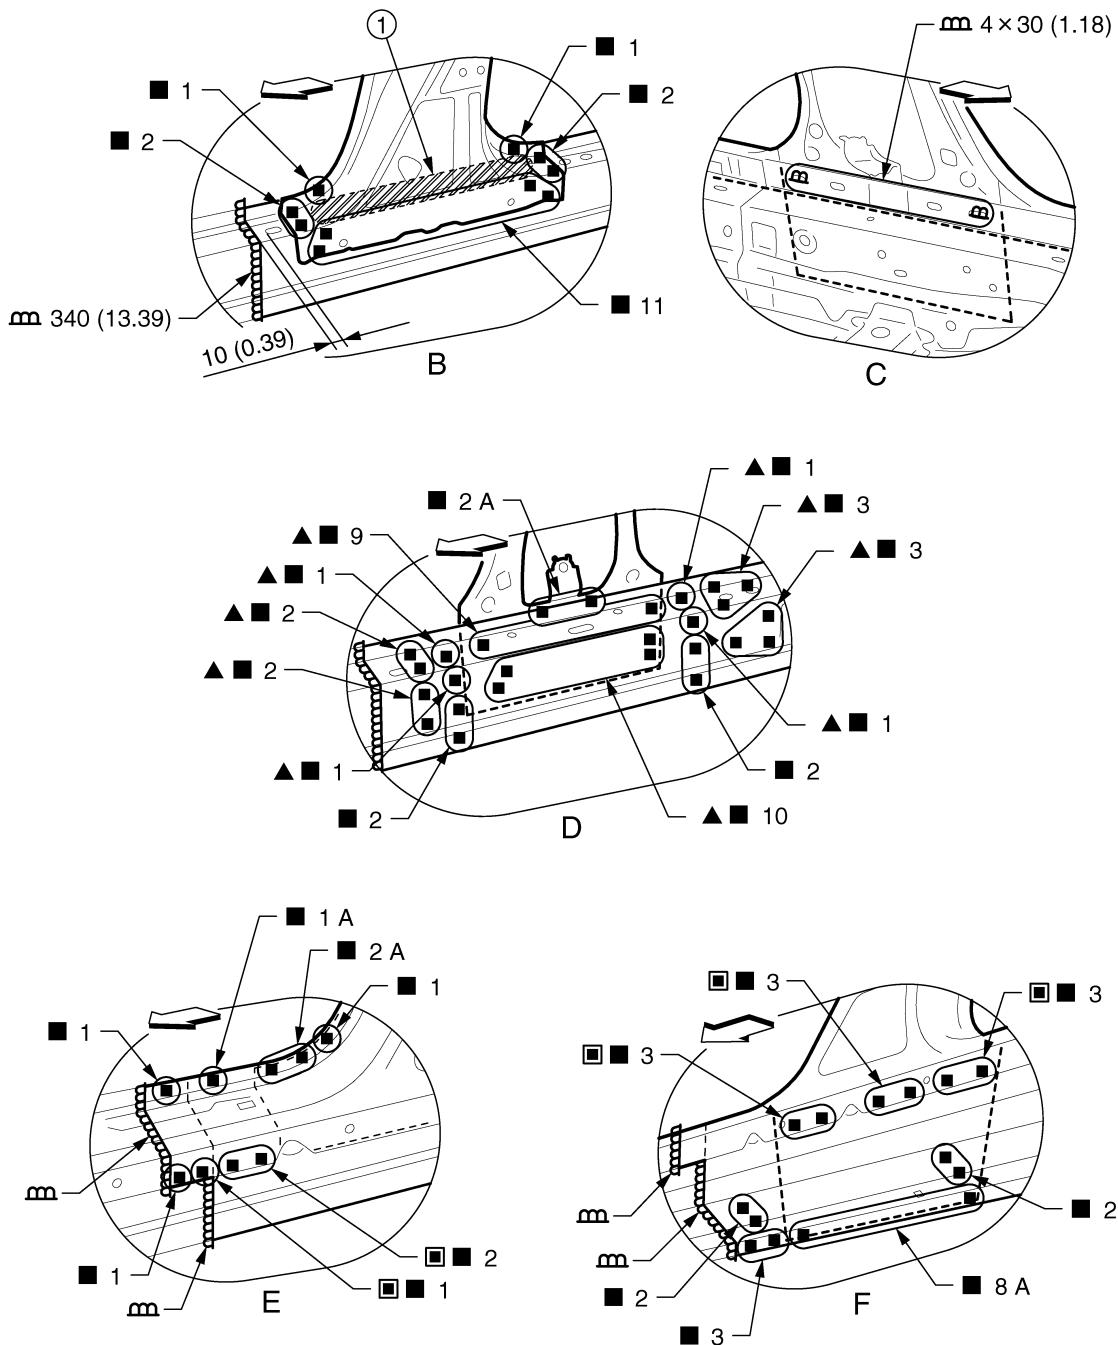

JSKIA1646GB

1. Urethane foam

Unit: mm (in)

⇨: Vehicle front

■: Perform the plug welding instead of the laser welding.


▲: Drill φ8 mm (0.31 in) hole for the plug welding hole (ultra high strength steel plate).

View B: Before installing outer front side body

View D: Before installing outer front side body and center pillar reinforcement

REPLACEMENT OPERATIONS

< REMOVAL AND INSTALLATION >

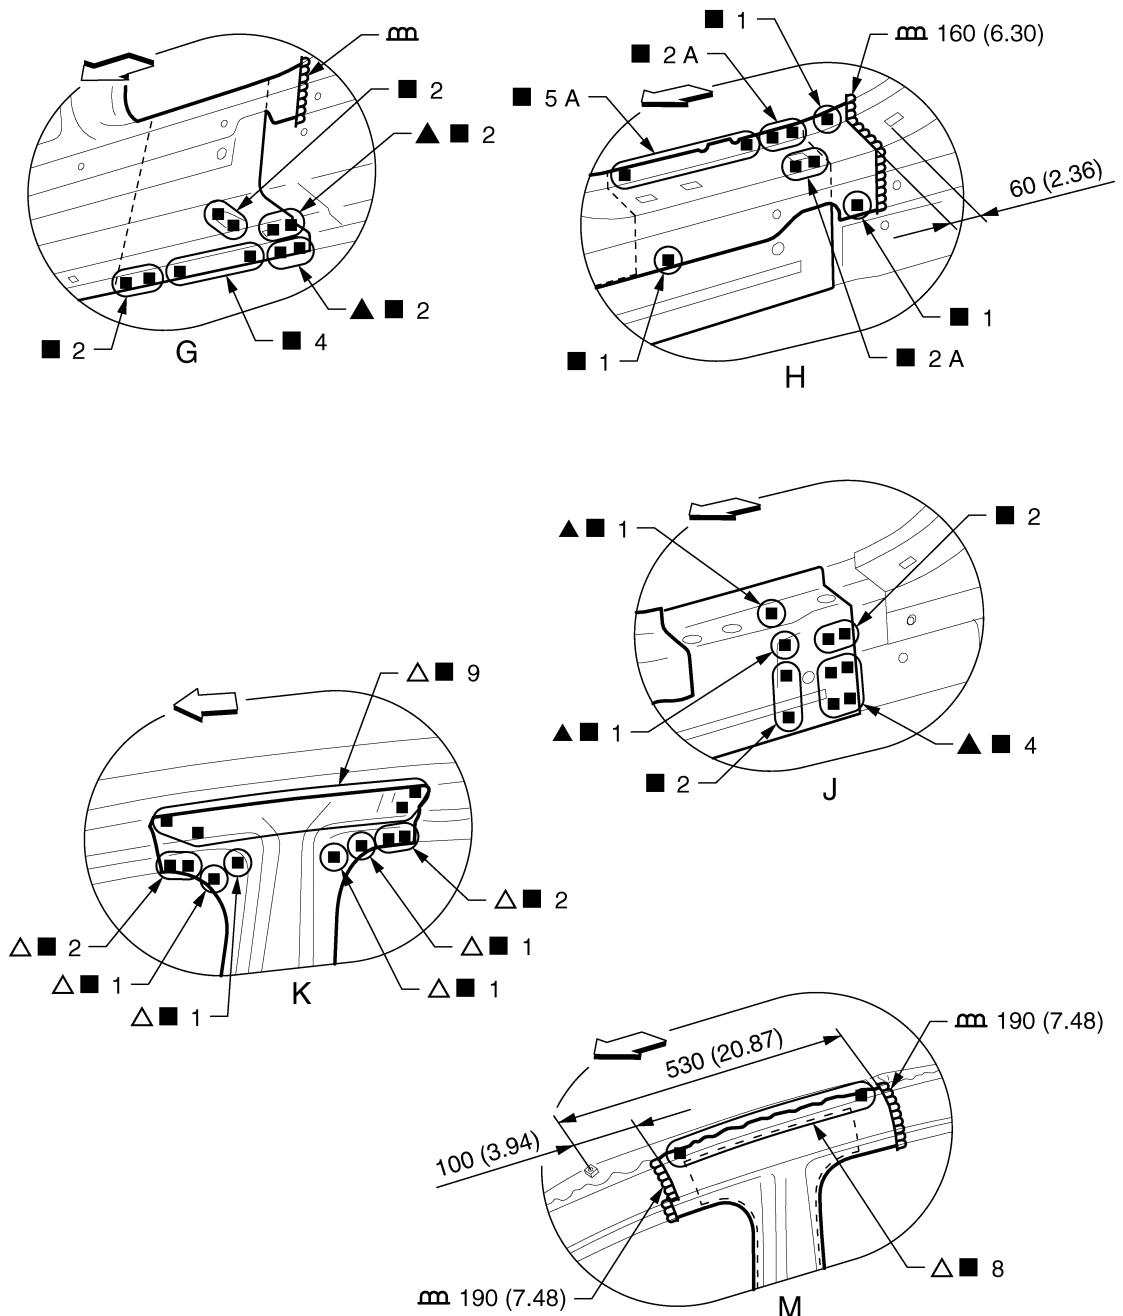

JSKIA1647GB

Unit: mm (in)

←: Vehicle front

▲: Drill $\phi 8$ mm (0.31 in) hole for the plug welding hole (ultra high strength steel plate).

△: Drill $\phi 10$ mm (0.39 in) hole for the plug welding hole (ultra high strength steel plate).


View J and K: Before installing outer front side body

REPLACEMENT OPERATIONS

< REMOVAL AND INSTALLATION >

Outer Sill (Partial Replacement)

INFOID:0000000008144806

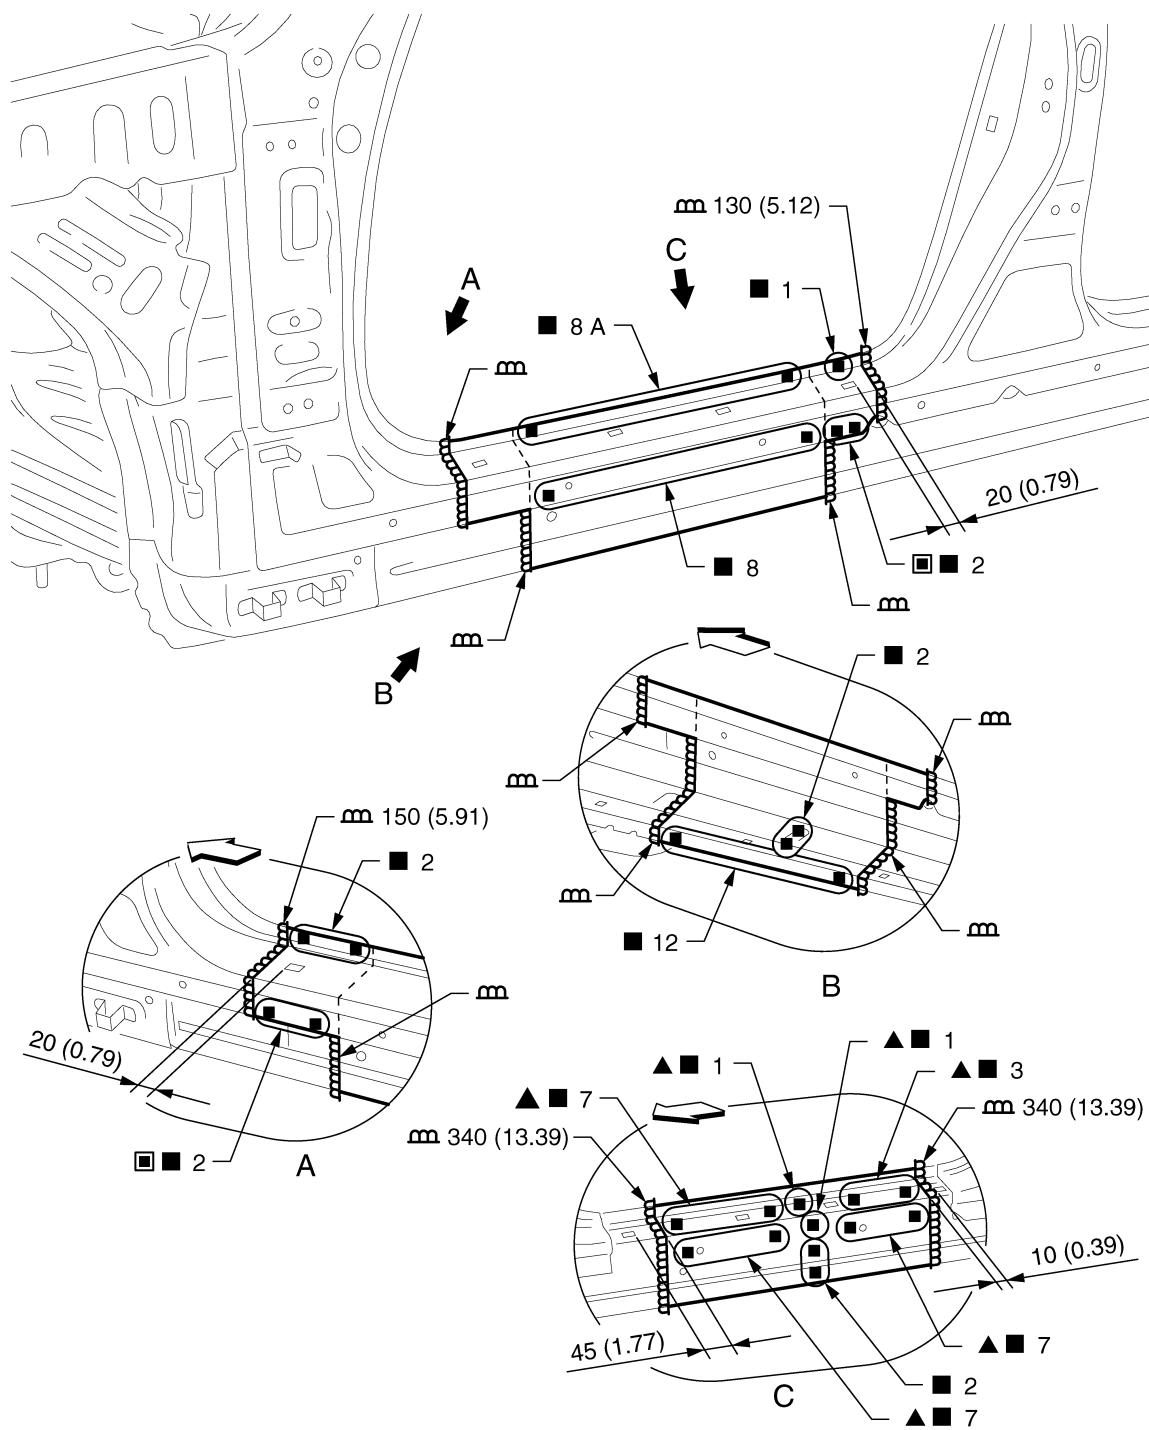

JSKIA1648GB

Unit: mm (in)

⇨: Vehicle front

■: Perform the plug welding instead of the laser welding.

▲: Drill $\phi 8$ mm (0.31 in) hole for the plug welding hole (ultra high strength steel plate).

Replacement parts

- Outer sill (LH)
- Outer sill reinforcement (LH)

View C: Before installing outer sill

REPLACEMENT OPERATIONS


< REMOVAL AND INSTALLATION >

Outer Sill

INFOID:000000008144807

Work after hoodledge reinforcement is removed.

Remove the outer front pillar reinforcement (reusable) and center pillar reinforcement (reusable) for easier installation.

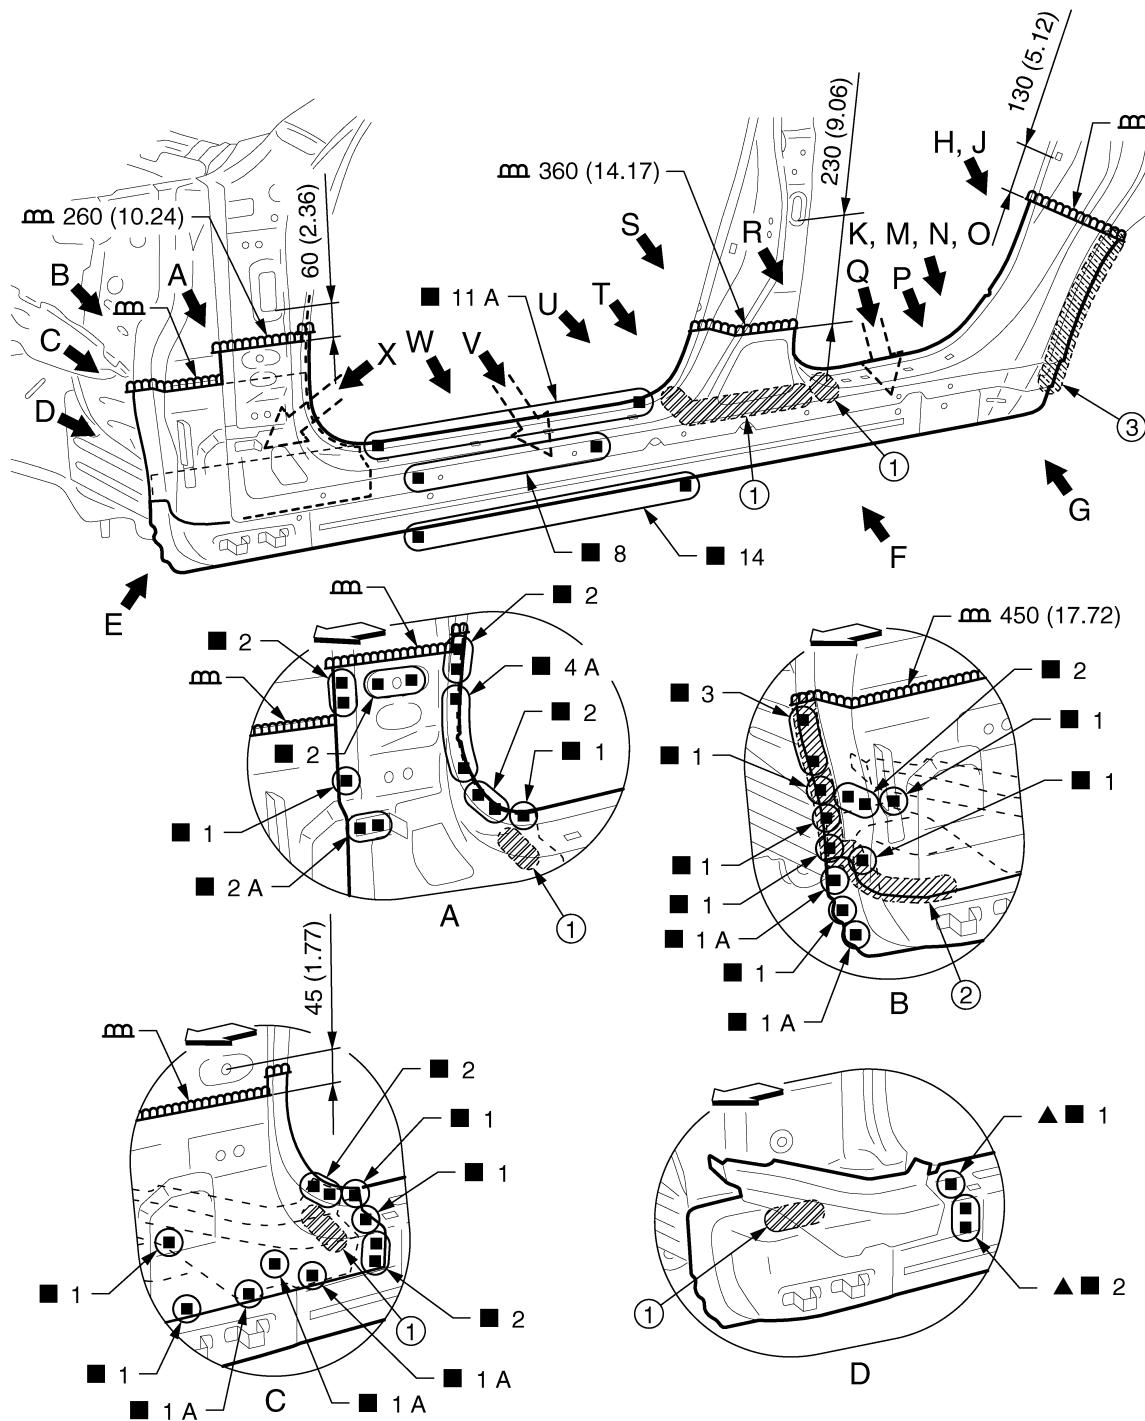

1. Urethane foam

Unit: mm (in)

⇨: Vehicle front

2. Body sealing

3. Adhesive

Replacement parts

JSKIA1649GB

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P
BRM


REPLACEMENT OPERATIONS

< REMOVAL AND INSTALLATION >

- Outer sill (LH)
- Outer sill reinforcement (LH)
- Outer rear wheelhouse extension (LH, Upper)
- Outer rear wheelhouse extension (LH, Lower)
- Front fender bracket

View B and C: Before installing outer sill

View D: Before installing outer sill and outer front pillar reinforcement

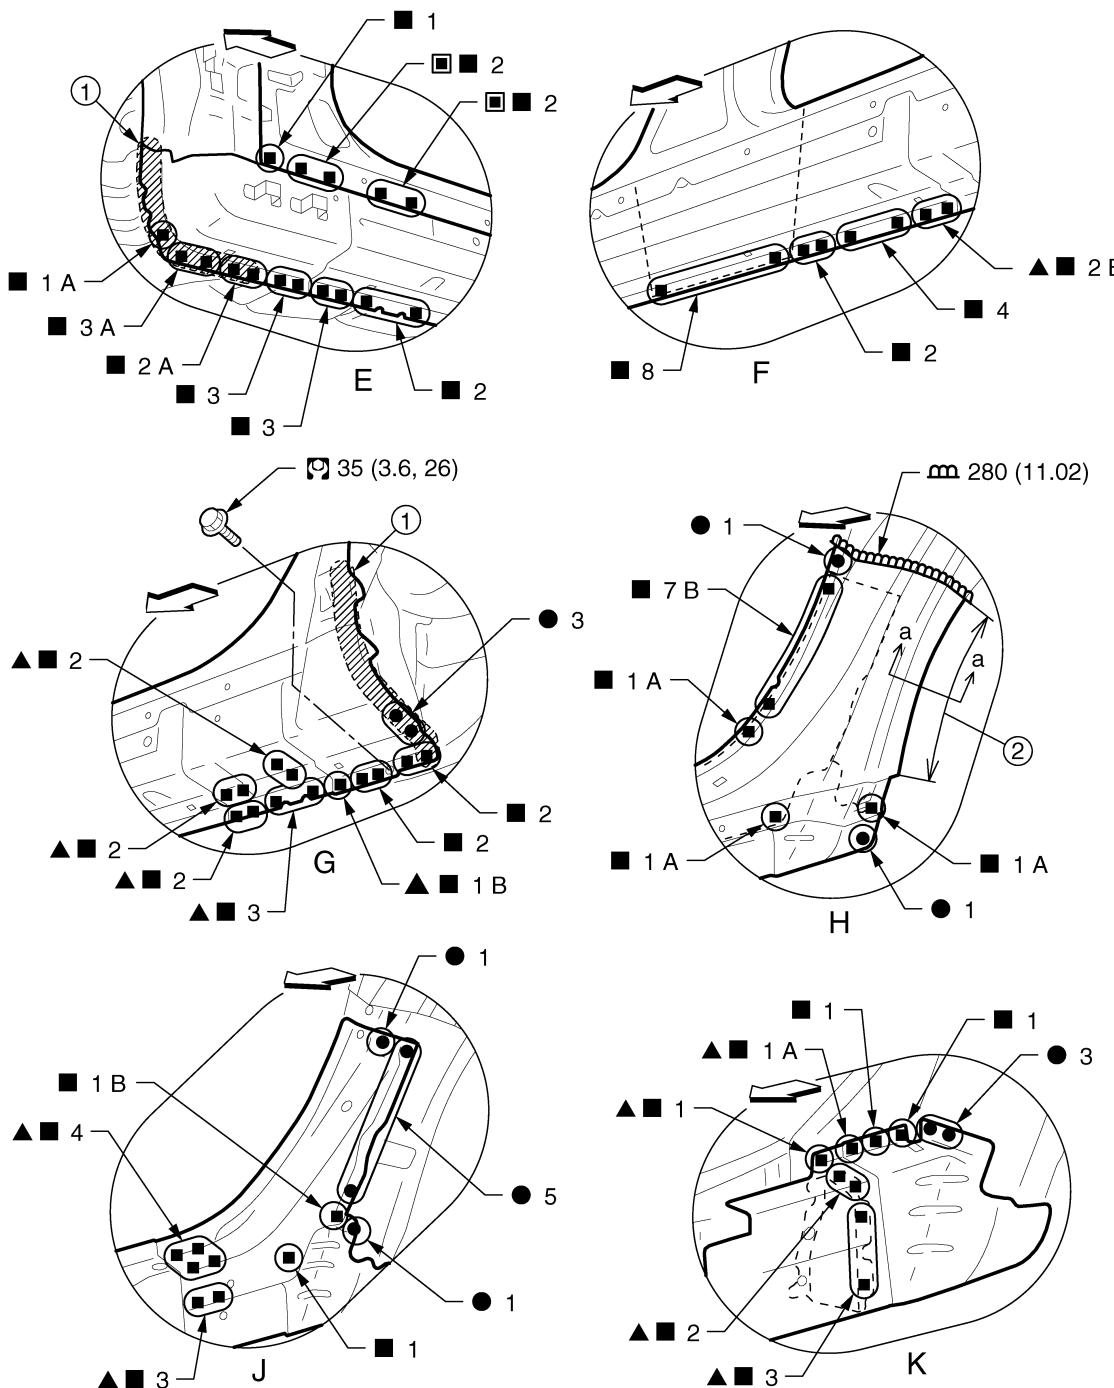

1. Body sealing

2. Hemming portion

JSKIA1650ZZ

REPLACEMENT OPERATIONS

< REMOVAL AND INSTALLATION >

Unit: mm (in)

◀: Vehicle front







■: Perform the plug welding instead of the laser welding.

▲: Drill $\phi 8$ mm (0.31 in) hole for the plug welding hole (ultra high strength steel plate).

Refer to [GI-5, "Components"](#) for symbols in the figure.

View J: Before installing outer sill

View K: Before installing outer sill, outer sill reinforcement, and outer rear wheelhouse extension (upper)

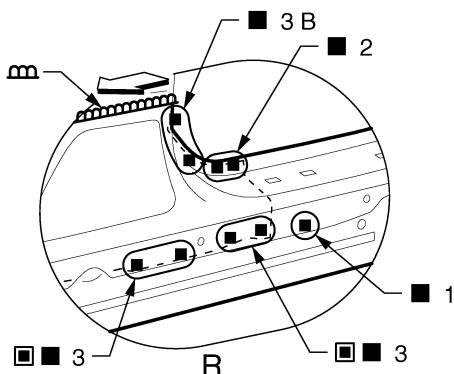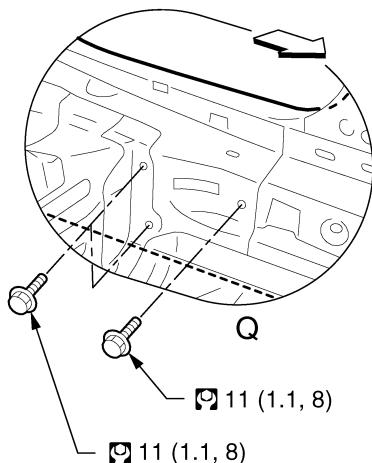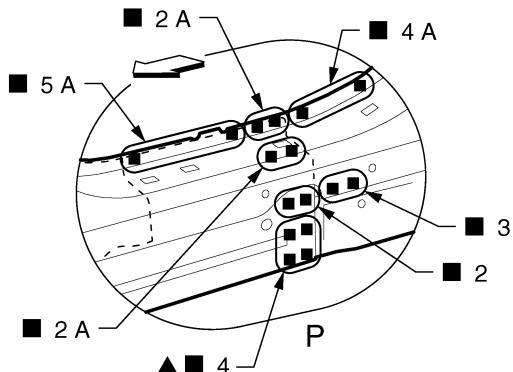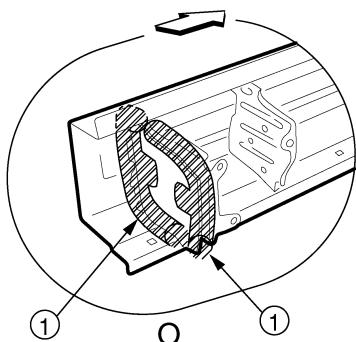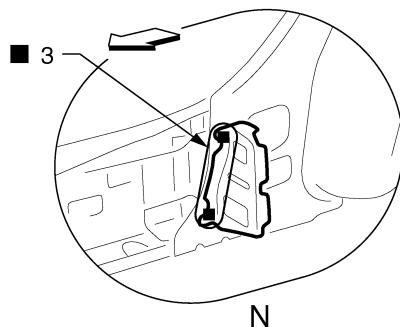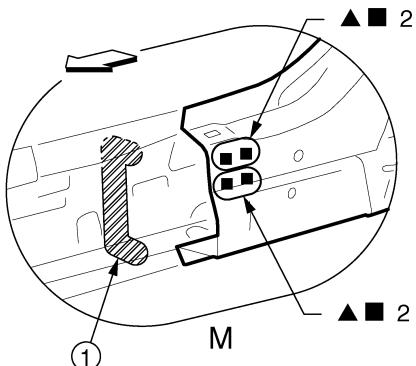

JSKIA1651GB

REPLACEMENT OPERATIONS

< REMOVAL AND INSTALLATION >

1. Urethane foam

↖: Vehicle front

█: Perform the plug welding instead of the laser welding.


▲: Drill φ8 mm (0.31 in) hole for the plug welding hole (ultra high strength steel plate).

Refer to [GI-5, "Components"](#) for symbols in the figure.

View M: Before installing outer sill and outer sill reinforcement

View N: Before installing outer sill, outer sill reinforcement, outer rear wheelhouse extension (upper), and outer rear wheelhouse extension (lower)

View O: Outer sill reinforcement (replacement parts)

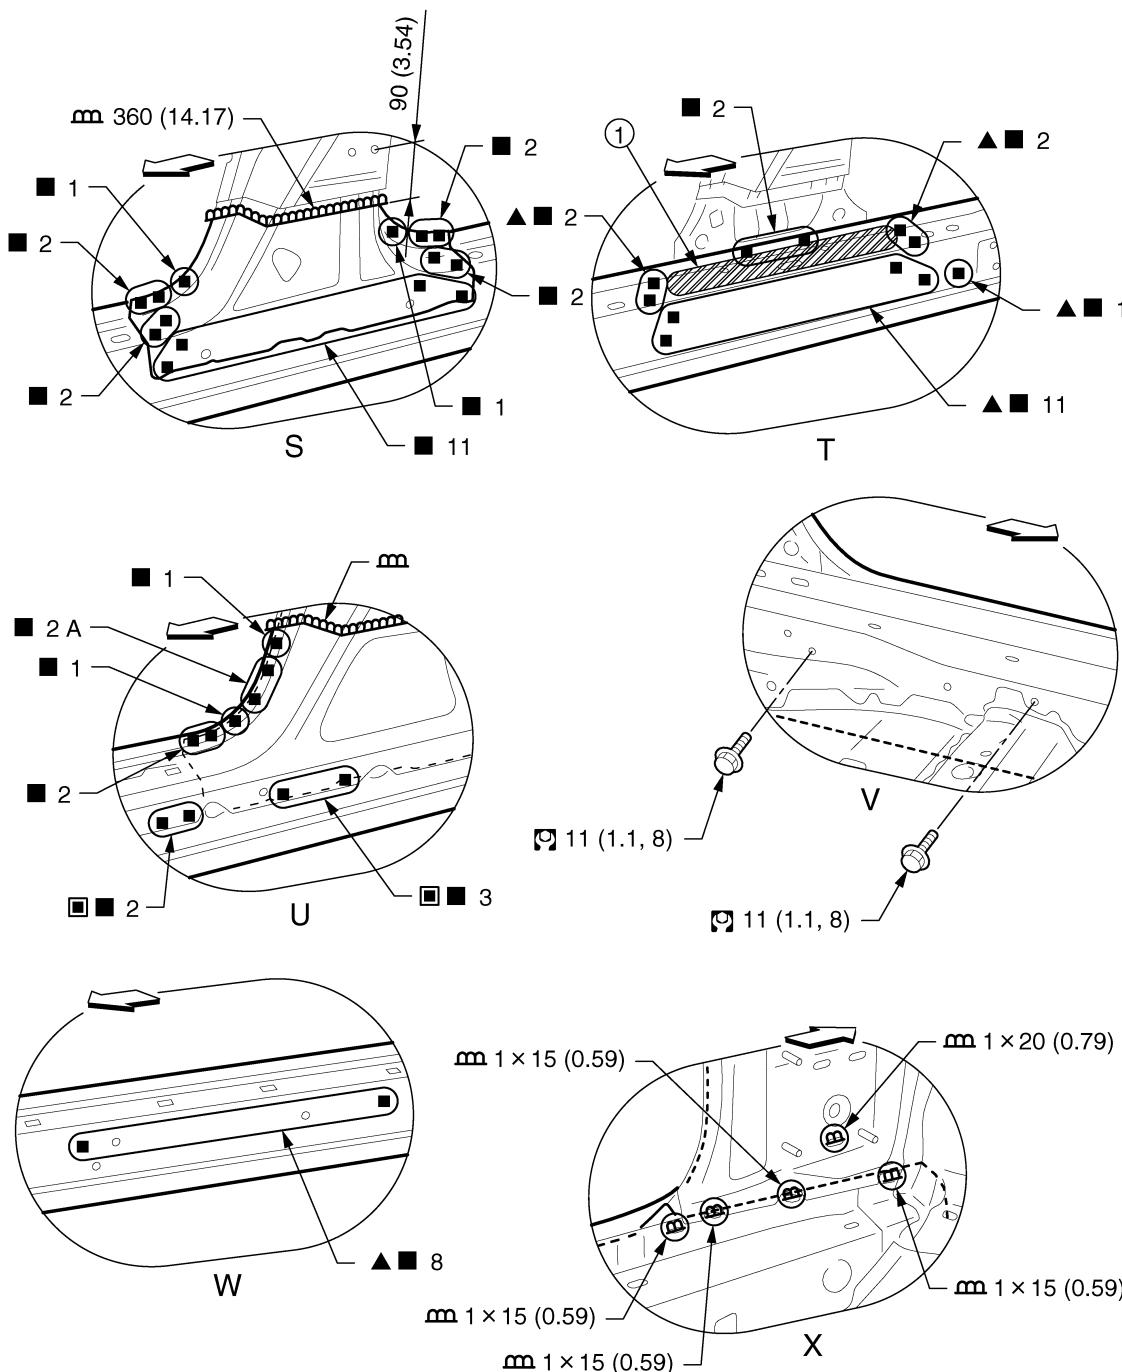

JSKIA1652GB

REPLACEMENT OPERATIONS

< REMOVAL AND INSTALLATION >

1. Urethane foam

Unit: mm (in)

◀: Vehicle front

█: Perform the plug welding instead of the laser welding.

▲: Drill $\phi 8$ mm (0.31 in) hole for the plug welding hole (ultra high strength steel plate).

Refer to [GI-5, "Components"](#) for symbols in the figure.


View S and W: Before installing outer sill

View T: Before installing outer sill and center pillar reinforcement

POINT

- Perform the hemming to the flange of wheelarch after applying the adhesive.
- Apply the sealing to the flange end.
- Refer to [BRM-21, "Rear Fender Hemming Process"](#).

1. Outer rear wheelhouse
2. Rear fender
3. Adhesive
4. Sealant

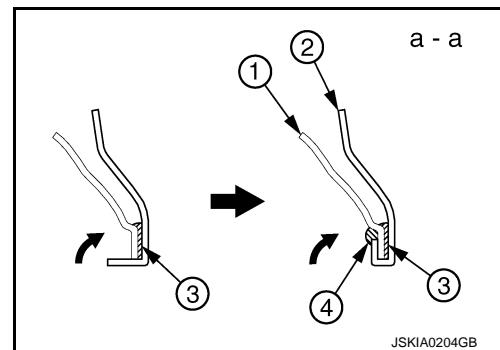

A

B

C

D

E

F

G

H

I

J

BRM

L

M

N

O


P

REPLACEMENT OPERATIONS

< REMOVAL AND INSTALLATION >

Rear Fender

INFOID:0000000008144808

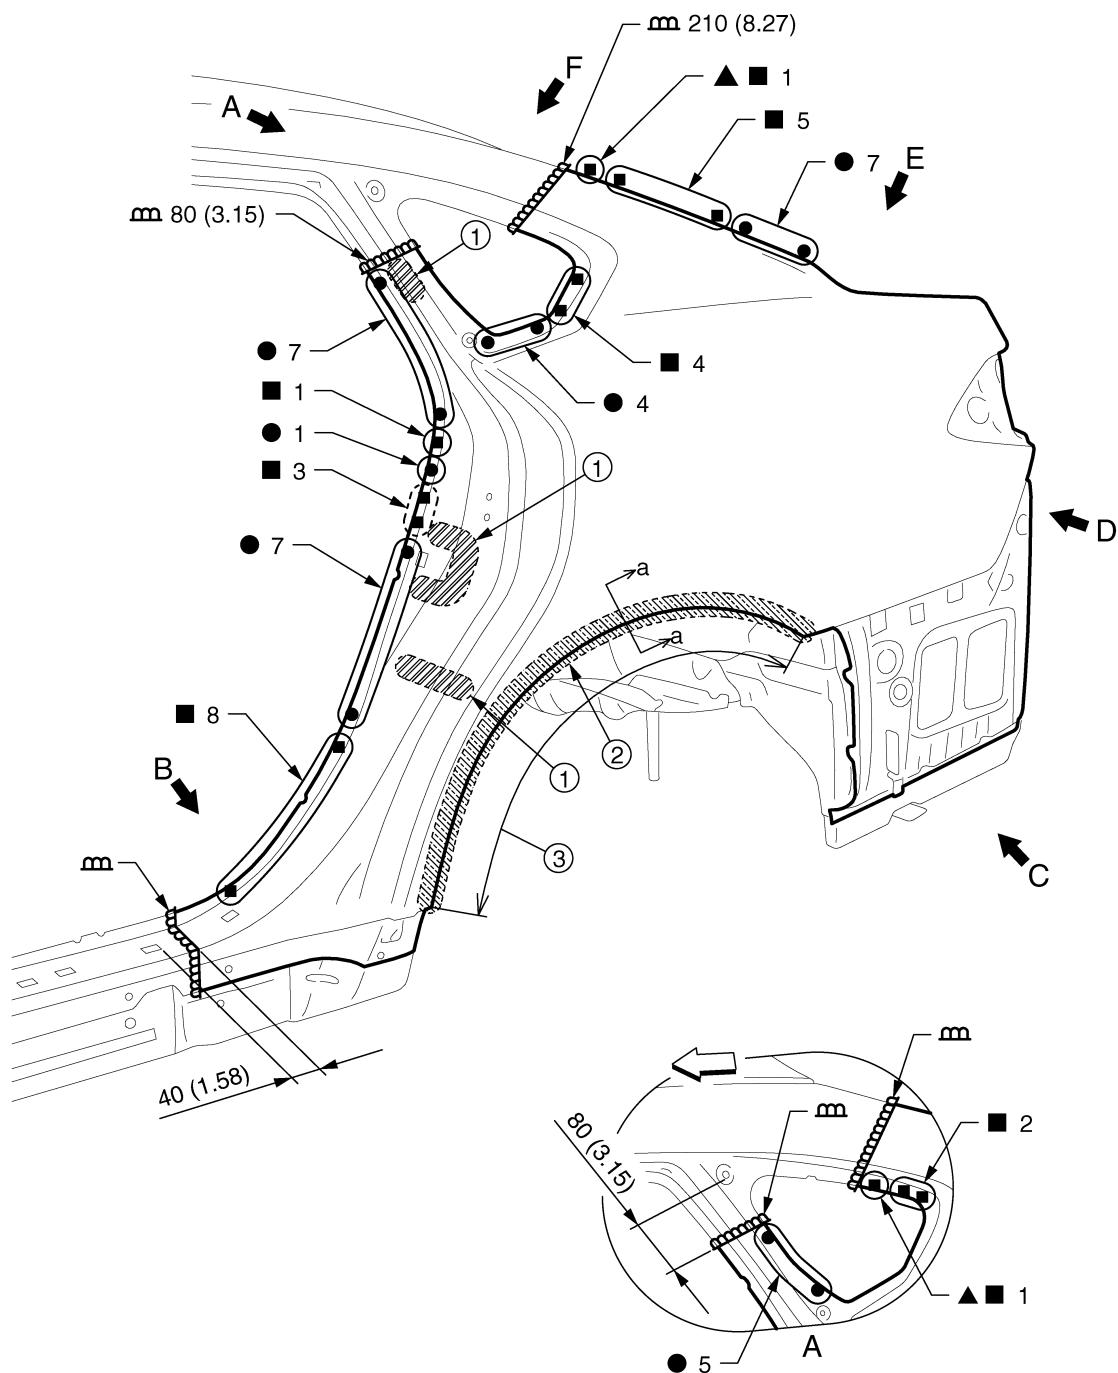

JSKIA1653GB

1. Urethane foam

Unit: mm (in)

◀: Vehicle front

2. Adhesive

3. Hemming portion

▲: Drill φ8 mm (0.31 in) hole for the plug welding hole (ultra high strength steel plate).


(○): Weld the parts onto the back of the component part.

Replacement parts

- Rear fender assembly (LH)

REPLACEMENT OPERATIONS

< REMOVAL AND INSTALLATION >

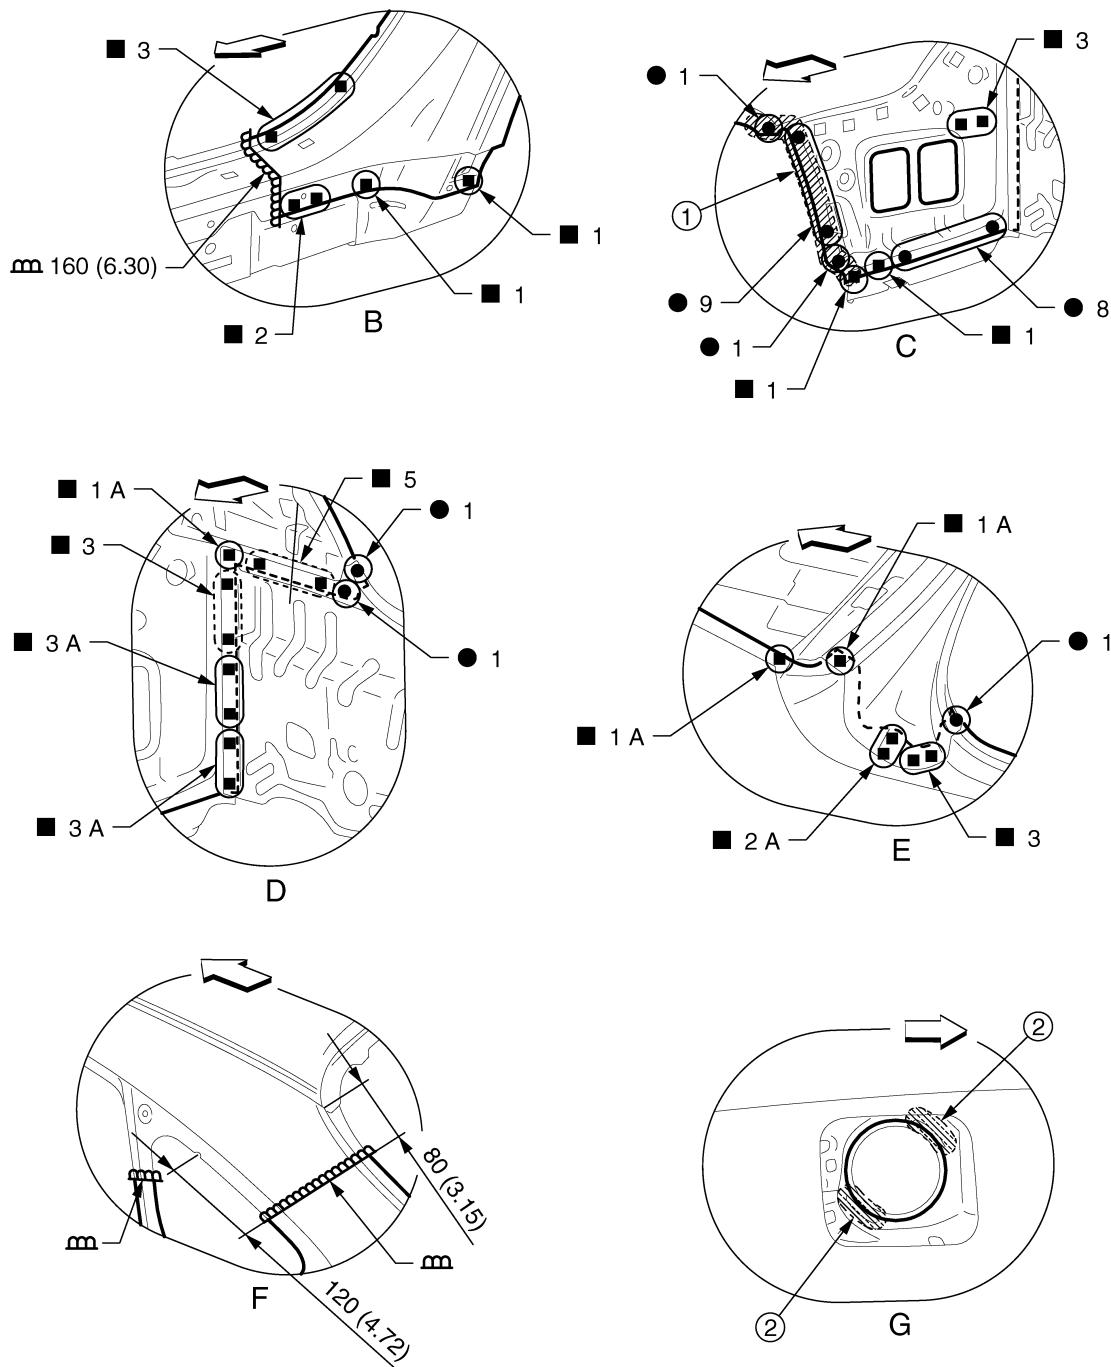

JSKIA1654GB

1. Body sealing
2. Adhesive

Unit: mm (in)

↖: Vehicle front

〔〕: Weld the parts onto the back of the component part.

View G: Right side rear fender

POINT

A
B
C
D
E
F
G
H
I
J

BRM

L
M
N


O
P

REPLACEMENT OPERATIONS

< REMOVAL AND INSTALLATION >

- Perform the hemming to the flange of wheelarch after applying the adhesive.
- Apply the sealing to the flange end.
- Refer to [BRM-21, "Rear Fender Hemming Process"](#).

1. Outer rear wheelhouse
2. Rear fender
3. Adhesive
4. Sealant

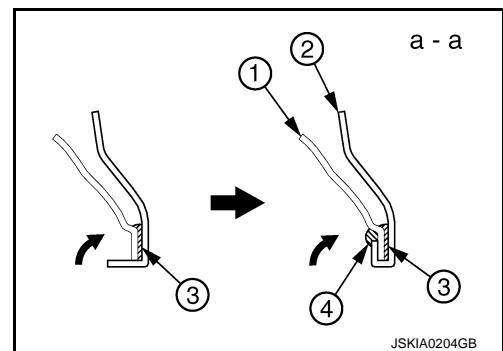


REPLACEMENT OPERATIONS

< REMOVAL AND INSTALLATION >

Rear Fender Extension

INFOID:0000000008144809

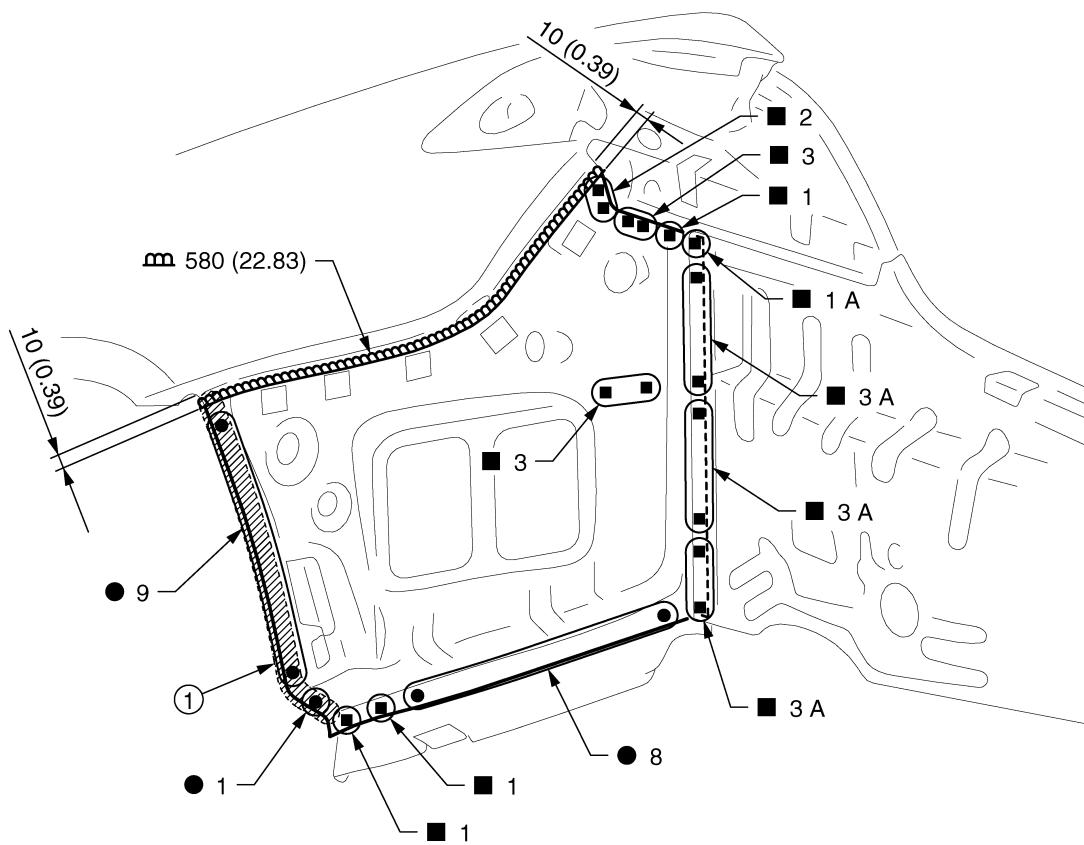

A
B
C
D
E
F
G
H
I
J

BRM

L
M
N

JSKIA1655GB

O
P

1. Body sealing

Unit: mm (in)

Replacement parts

● Rear fender extension (LH)

Outer Rear Wheelhouse

INFOID:0000000008144810


Work after rear fender is removed.

CAUTION:

REPLACEMENT OPERATIONS

< REMOVAL AND INSTALLATION >

Refer to SUPPLEMENTARY WORK to replace or reuse outer rear wheelhouse.

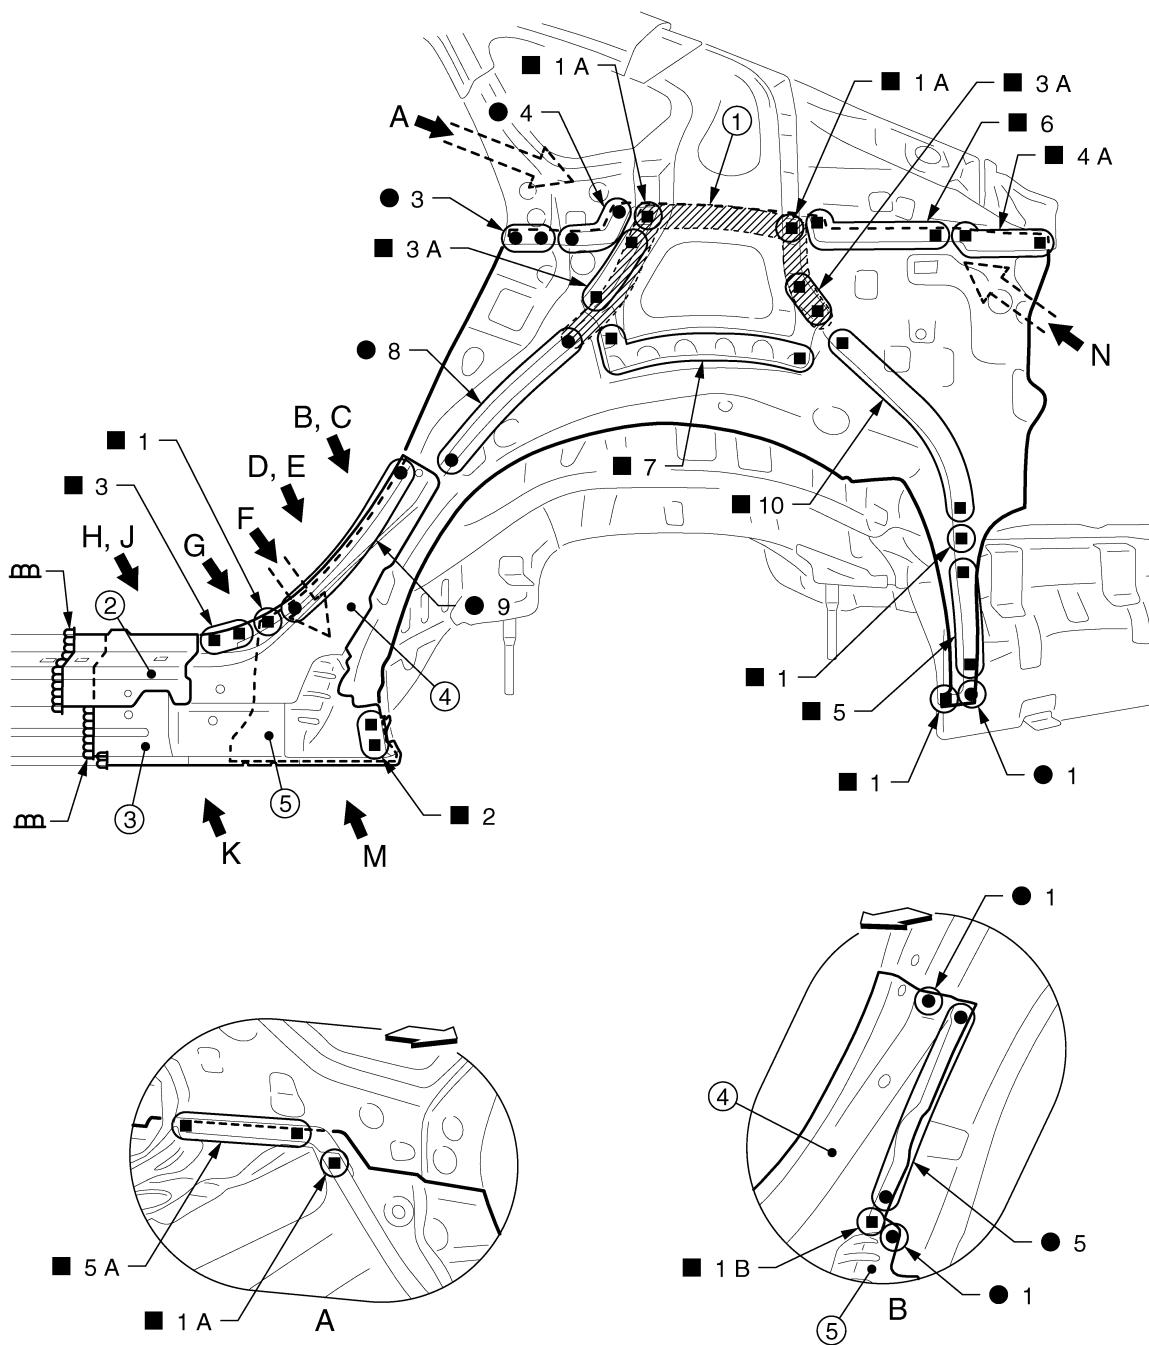

JSKIA1656ZZ

- | | | |
|---|---|-----------------------------|
| 1. Body sealing | 2. Outer front side body | 3. Outer sill reinforcement |
| 4. Outer rear wheelhouse extension
(Upper) | 5. Outer rear wheelhouse extension
(Lower) | |


⇨: Vehicle front

Replacement parts

● Outer rear wheelhouse (LH)

REPLACEMENT OPERATIONS

< REMOVAL AND INSTALLATION >

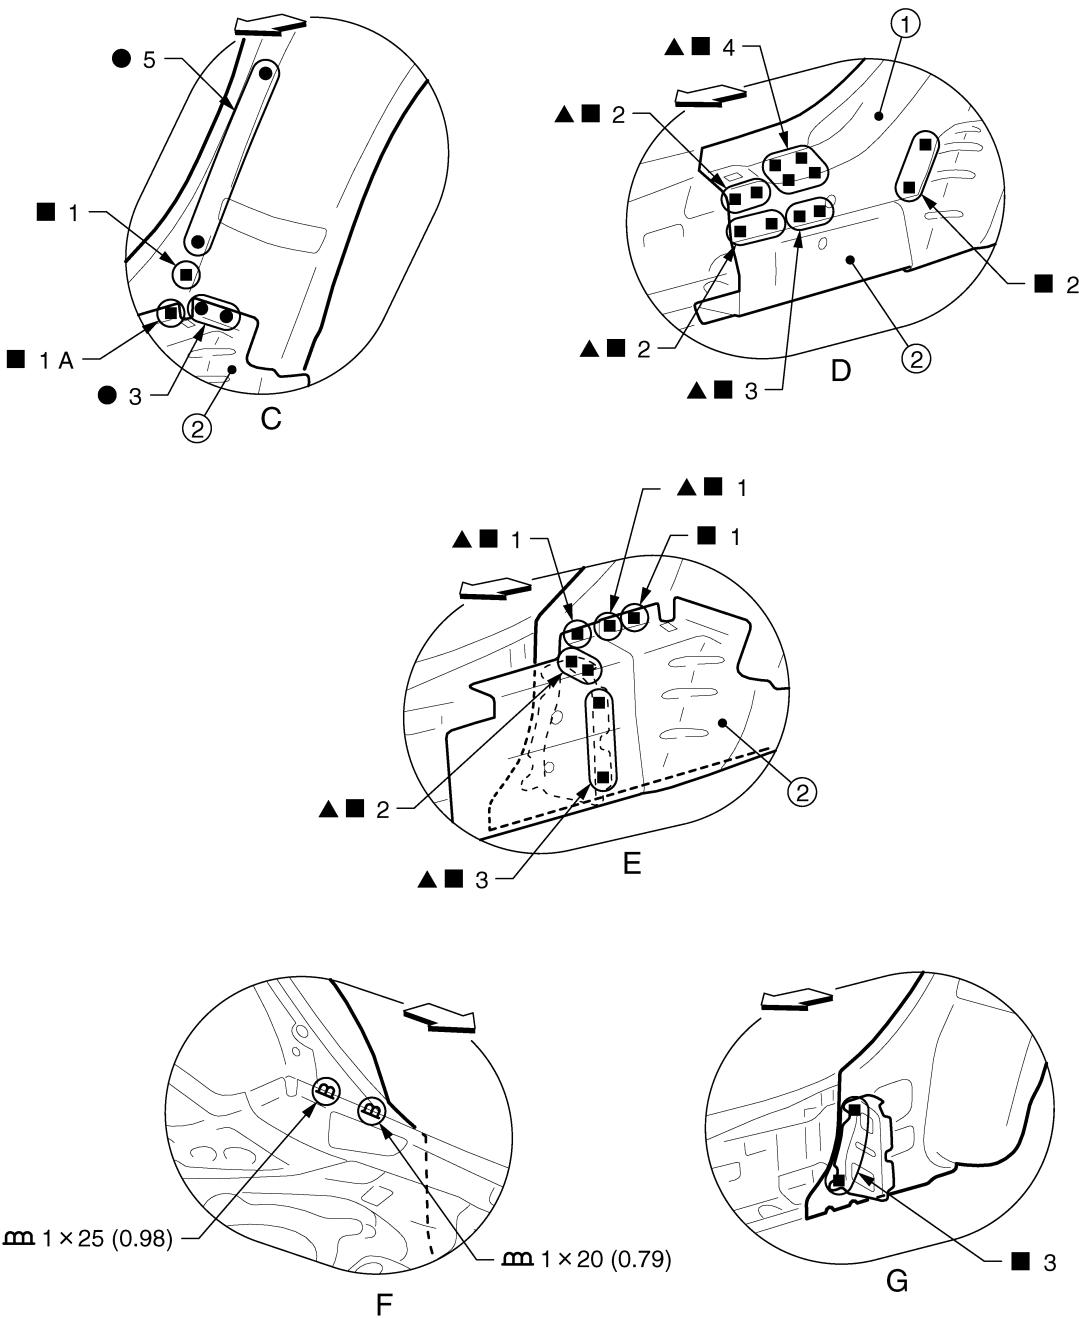

JSKIA1657GB

1. Outer rear wheelhouse extension (Upper)
2. Outer rear wheelhouse extension (Lower)

Unit: mm (in)

◀: Vehicle front

▲: Drill $\phi 8$ mm (0.31 in) hole for the plug welding hole (ultra high strength steel plate).


View C and E: Before installing outer front side body, outer sill reinforcement, and outer rear wheelhouse extension (Upper)

View D: Before installing outer front side body and outer sill reinforcement

View G: Before installing outer front side body, outer sill reinforcement, outer rear wheelhouse extension (upper), and outer rear wheelhouse extension (Lower)

REPLACEMENT OPERATIONS

< REMOVAL AND INSTALLATION >

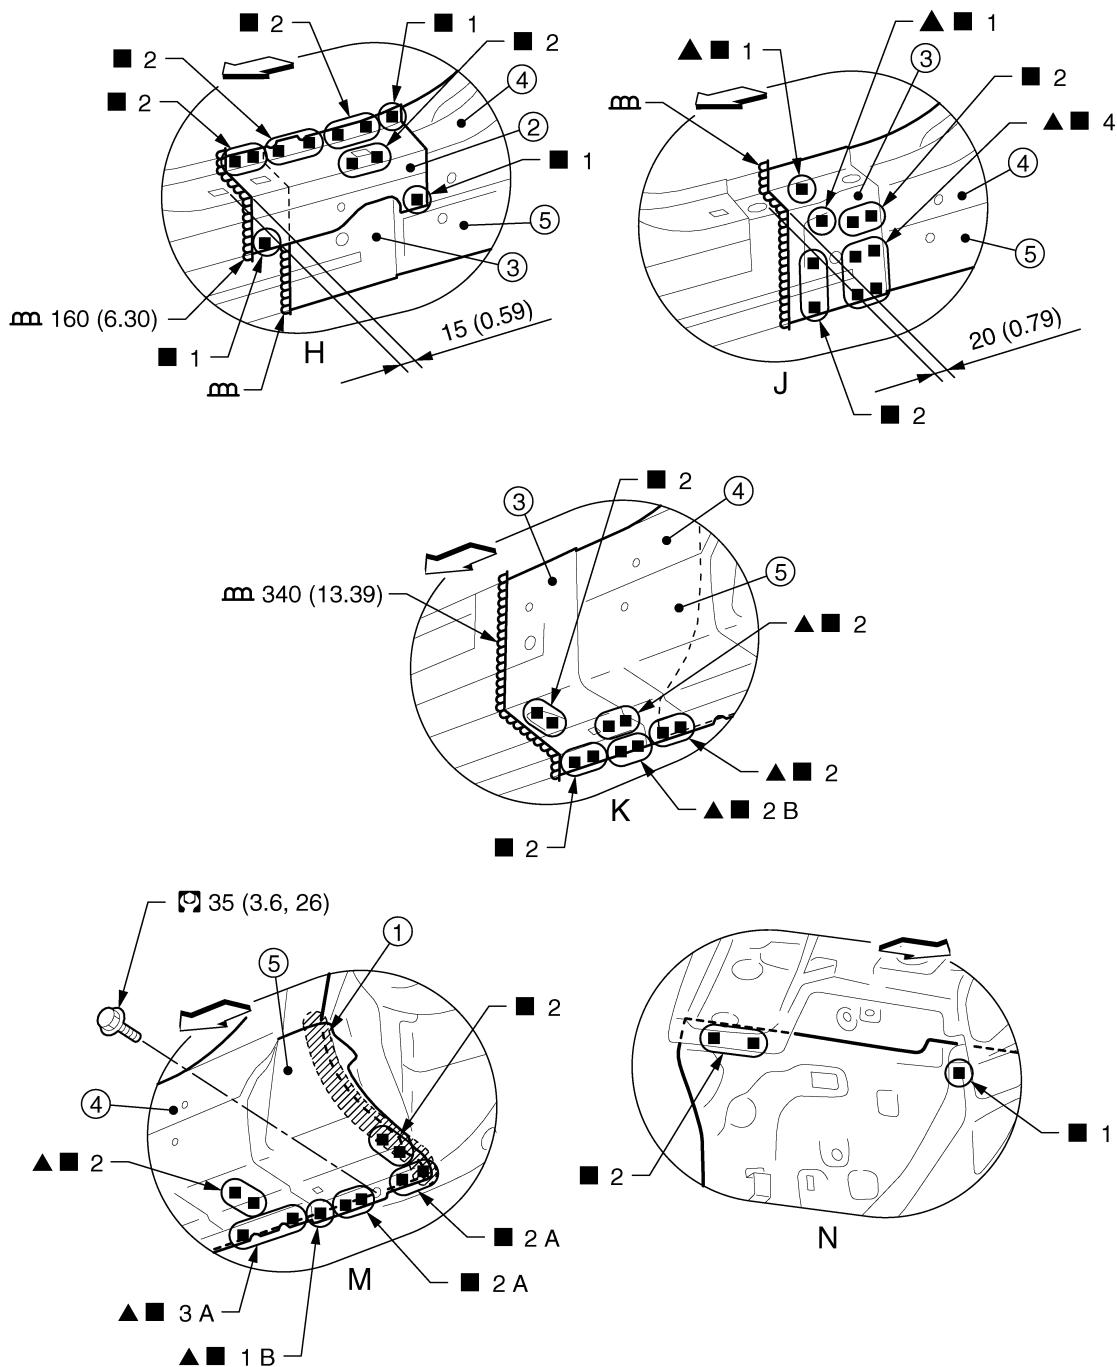

JSKIA1658GB

- | | | |
|---|---|-----------------------------|
| 1. Body sealing | 2. Outer front side body | 3. Outer sill reinforcement |
| 4. Outer rear wheelhouse extension
(Upper) | 5. Outer rear wheelhouse extension
(Lower) | |

Unit: mm (in)

⇨: Vehicle front

▲: Drill φ8 mm (0.31 in) hole for the plug welding hole (ultra high strength steel plate).
Refer to [GI-5, "Components"](#) for symbols in the figure.

View J and K: Before installing outer front side body

SUPPLEMENTARY WORK

REPLACEMENT OPERATIONS

< REMOVAL AND INSTALLATION >


Remove the following parts first according to the instruction because the outer rear wheelhouse cannot be removed due to the existence of hidden welding points.

1. Cut the outer front side body as shown in the figure.

1. Cut position

Unit: mm (in)

⇨: Vehicle front

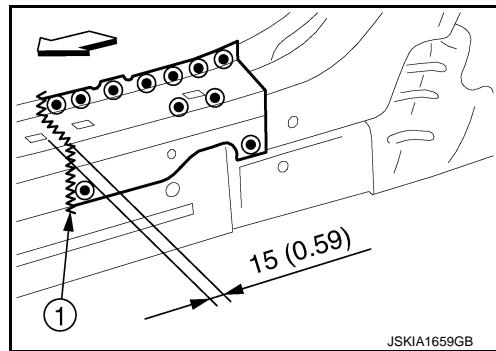


2. Cut the outer sill reinforcement as shown in the figure.

1. Cut position


Unit: mm (in)

⇨: Vehicle front

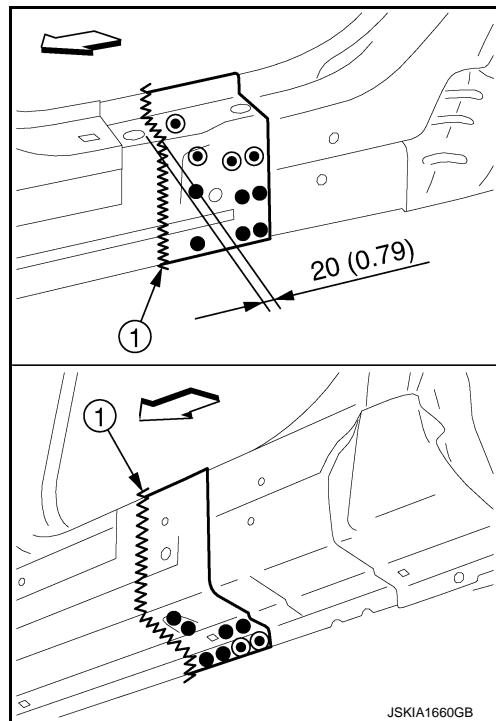

3. Remove the outer rear wheelhouse extension (Upper).

⇨: Vehicle front

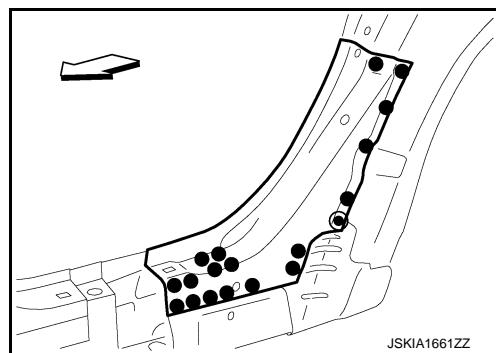

A
B
C
D
E
F
G
H
I
J

BRM


L
M
N
O
P

REPLACEMENT OPERATIONS

< REMOVAL AND INSTALLATION >


4. Remove the outer rear wheelhouse extension (Lower).

⬅: Vehicle front

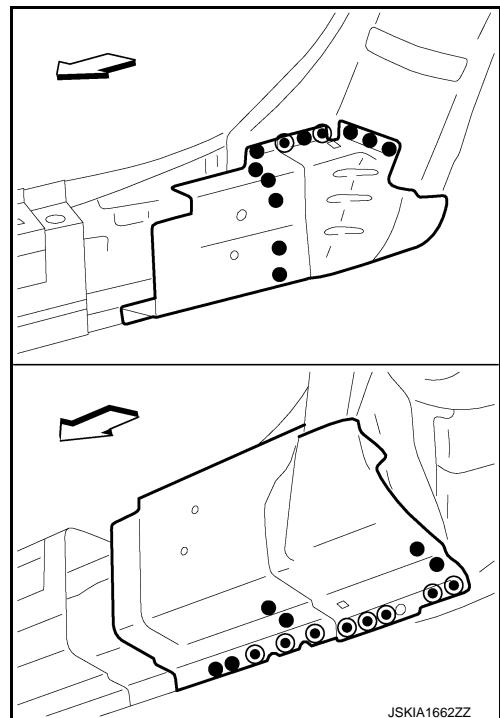

5. Remove the outer rear wheelhouse brace.

⬅: Vehicle front

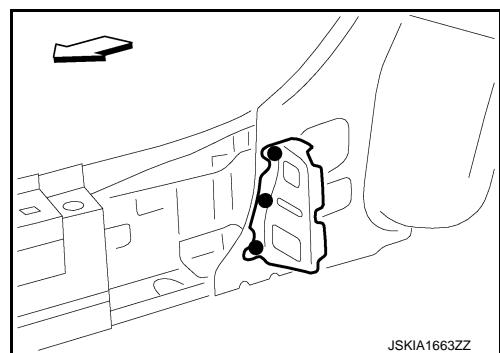


REPLACEMENT OPERATIONS

< REMOVAL AND INSTALLATION >

Rear Panel

INFOID:000000008144811

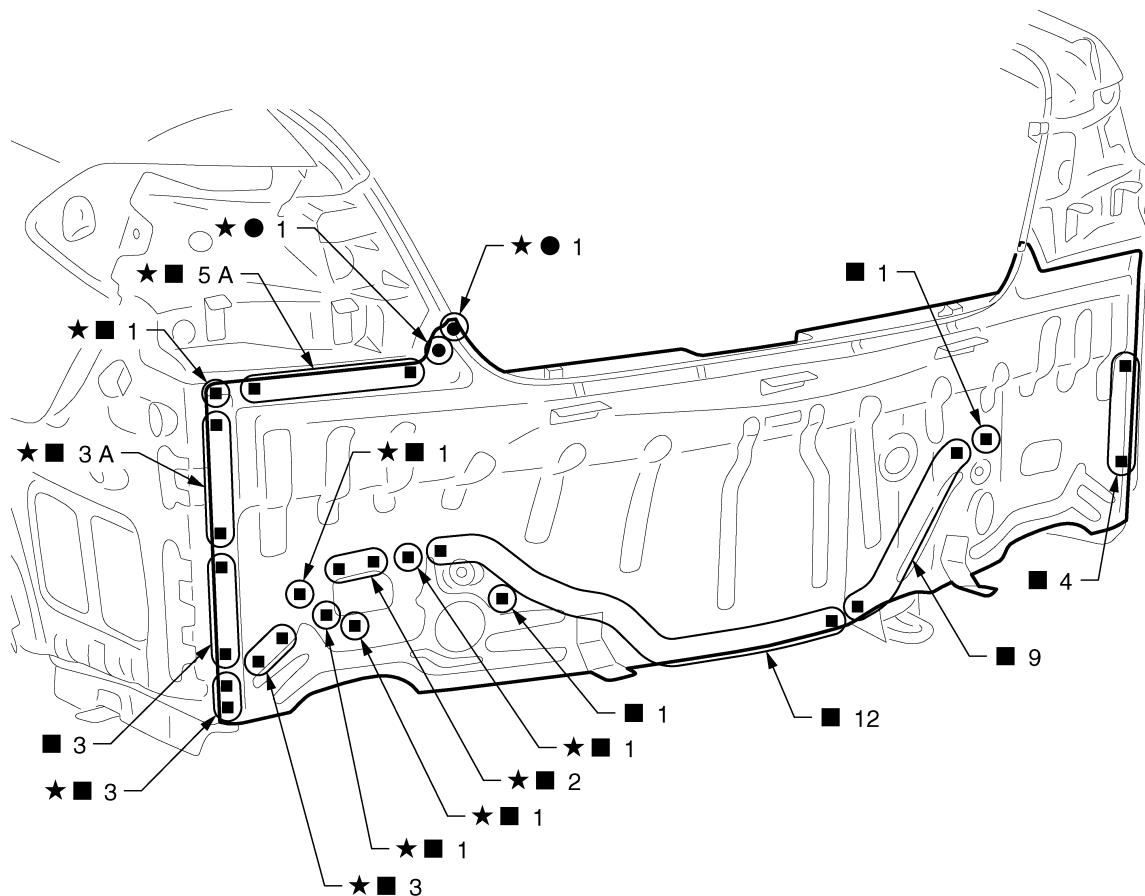

A
B
C
D
E
F
G
H
I
J

BRM

L
M
N

O
P

JSKIA1664ZZ

★: Welding method and the number of welding points apply to both side of the vehicle.

Replacement parts

- Rear panel assembly



Rear Floor Rear

INFOID:000000008144812

Work after rear panel is removed.

REPLACEMENT OPERATIONS

< REMOVAL AND INSTALLATION >

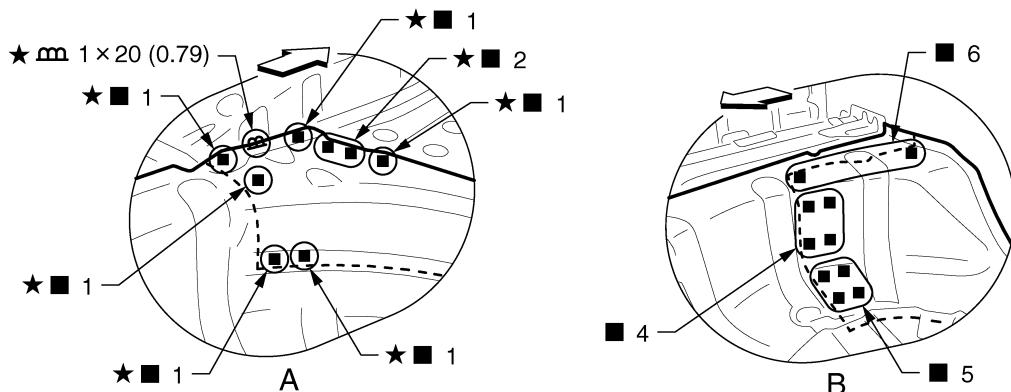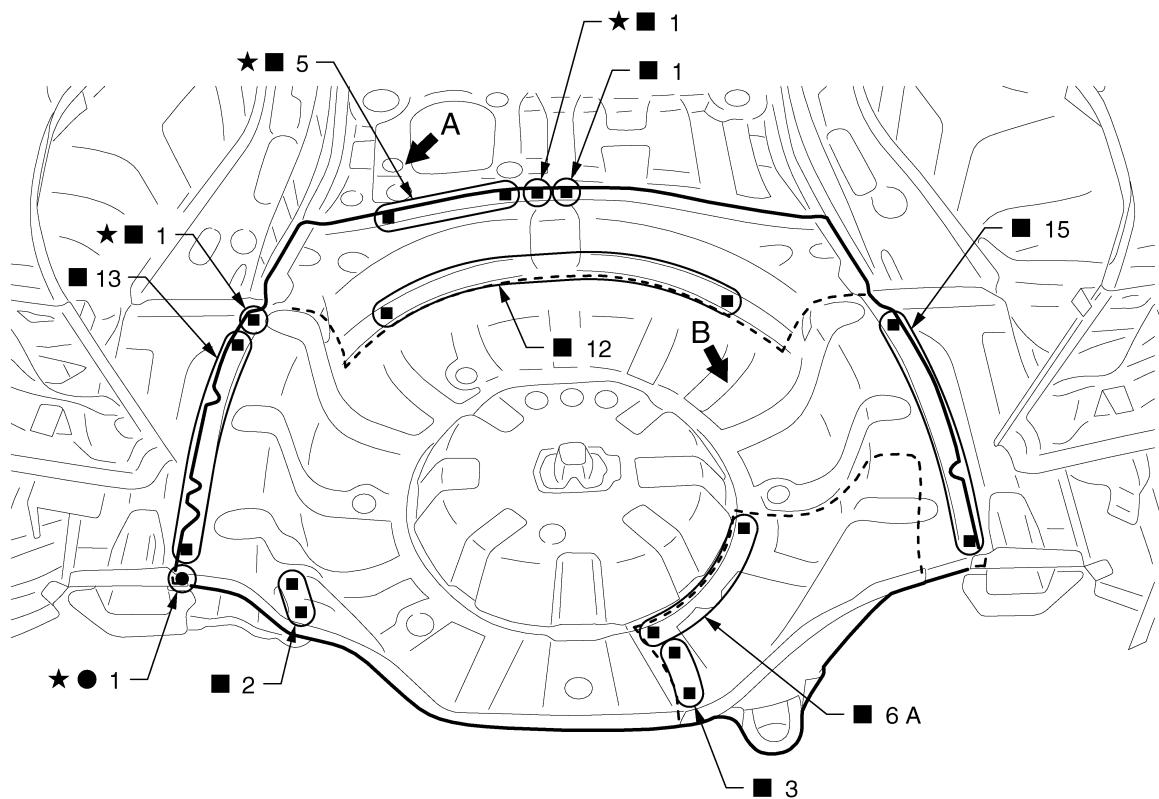

JSKIA1665GB

Unit: mm (in)

⇨: Vehicle front

★: Welding method and the number of welding points apply to both sides of the vehicle.

Replacement parts

- Rear floor rear
- Rear tie down hook


Rear Side Member Extension

INFOID:0000000008144813



Work after rear panel is removed.

REPLACEMENT OPERATIONS

< REMOVAL AND INSTALLATION >

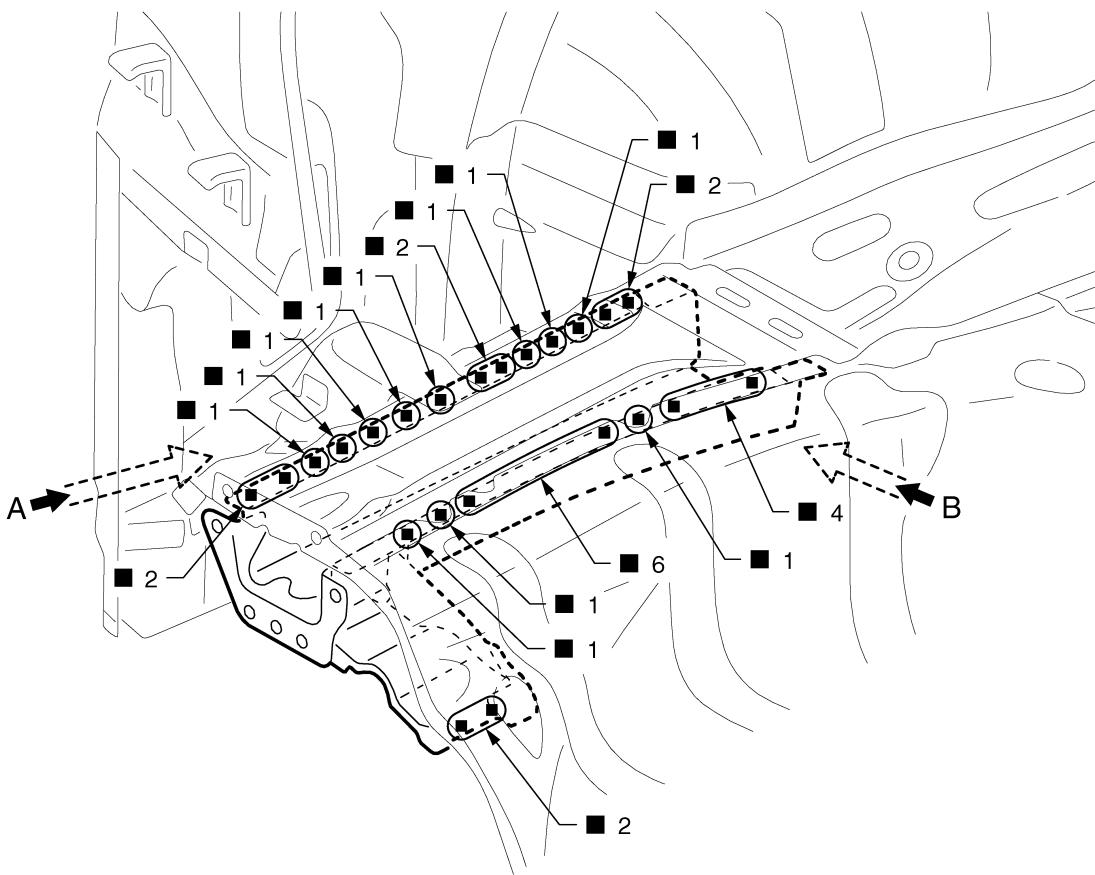

A
B
C
D
E
F
G
H
I
J

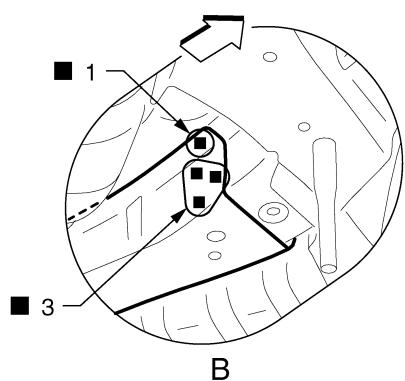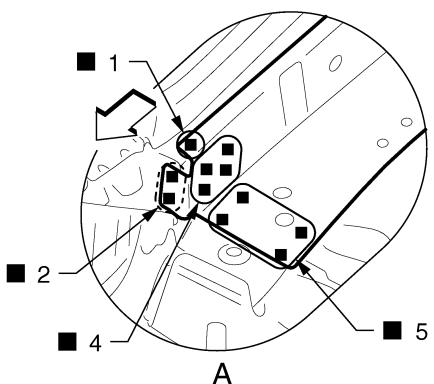

BRM
L
M
N

JSKIA2067ZZ

◀: Vehicle front

○: Weld the parts onto the back of the component part.

Replacement parts

- Rear side member extension assembly (LH)

O
P

BODY ALIGNMENT

< SERVICE DATA AND SPECIFICATIONS (SDS)



SERVICE DATA AND SPECIFICATIONS (SDS)

BODY ALIGNMENT

Body Center Marks

INFOID:000000008144814

A mark is placed on each part of the body to indicate the vehicle center. When repairing the vehicle frame (members, pillars, etc.) damaged by an accident which it enables more accurate and effective repair by using these marks together with body alignment specifications.

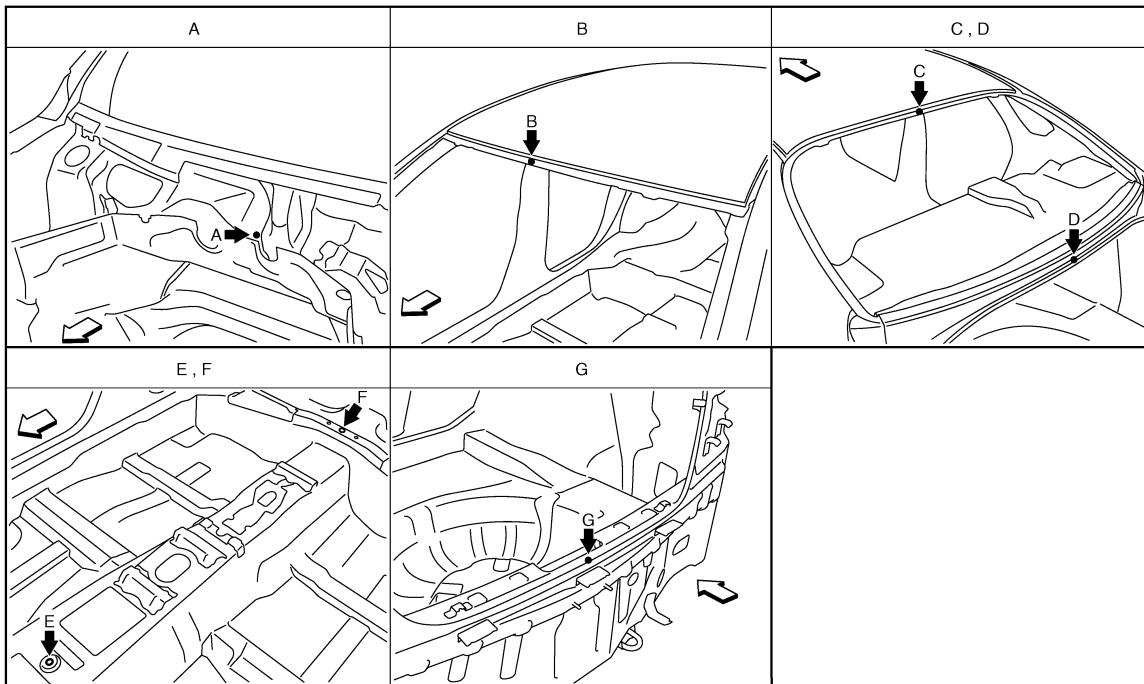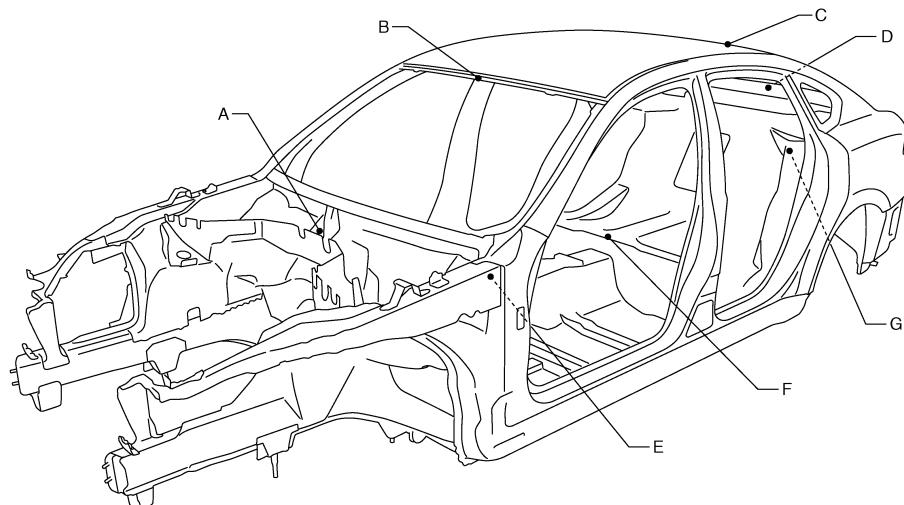

JSKIA1876ZZ

←: Vehicle front

Unit: mm (in)

Points	Portion	Marks
A	Upper dash	Embossment
B	Front roof	Embossment
C	Rear roof	Embossment
D	Rear waist	Bead

BODY ALIGNMENT


< SERVICE DATA AND SPECIFICATIONS (SDS)

Points	Portion	Marks
E	Trans control reinforcement	Hole 14×12 (0.55×0.47)
F	Rear seat crossmember reinforcement	Hole φ5 (0.20)
G	Rear panel	Indent

Description

INFOID:000000008144815

- All dimensions indicated in the figures are actual.
- When using a tracking gauge, adjust both pointers to equal length. Then check the pointers and gauge itself to make sure there is no free play.
- When a measuring tape is used, check to be sure there is no elongation, twisting or bending.
- Measurements should be taken at the center of the mounting holes.
- An asterisk (*) following the value at the measuring point indicates that the measuring point on the other side is symmetrically the same value.
- The coordinates of the measurement points are the distances measured from the standard line of "X", "Y" and "Z".
- "Z": Imaginary base line [200 mm (7.87 in) below datum line ("0Z" at design plan)]

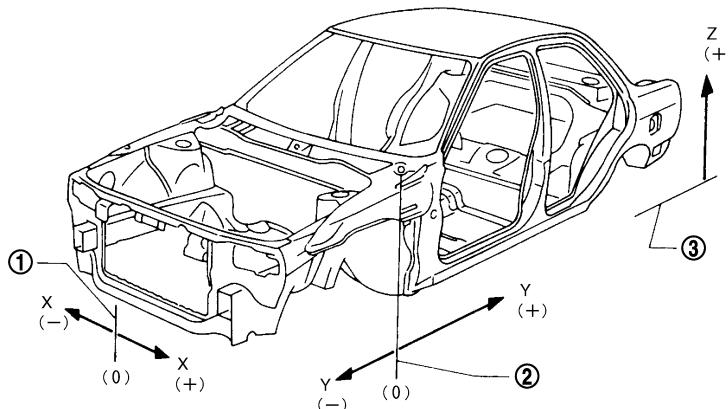

JSKIA0073GB

1. Vehicle center

2. Front axle center

3. Imaginary base line

Engine Compartment


INFOID:000000008180434

MEASUREMENT

Dimensions marked with "*" indicate symmetrically identical dimensions on both the right and left hand of the vehicle.

BODY ALIGNMENT

< SERVICE DATA AND SPECIFICATIONS (SDS)

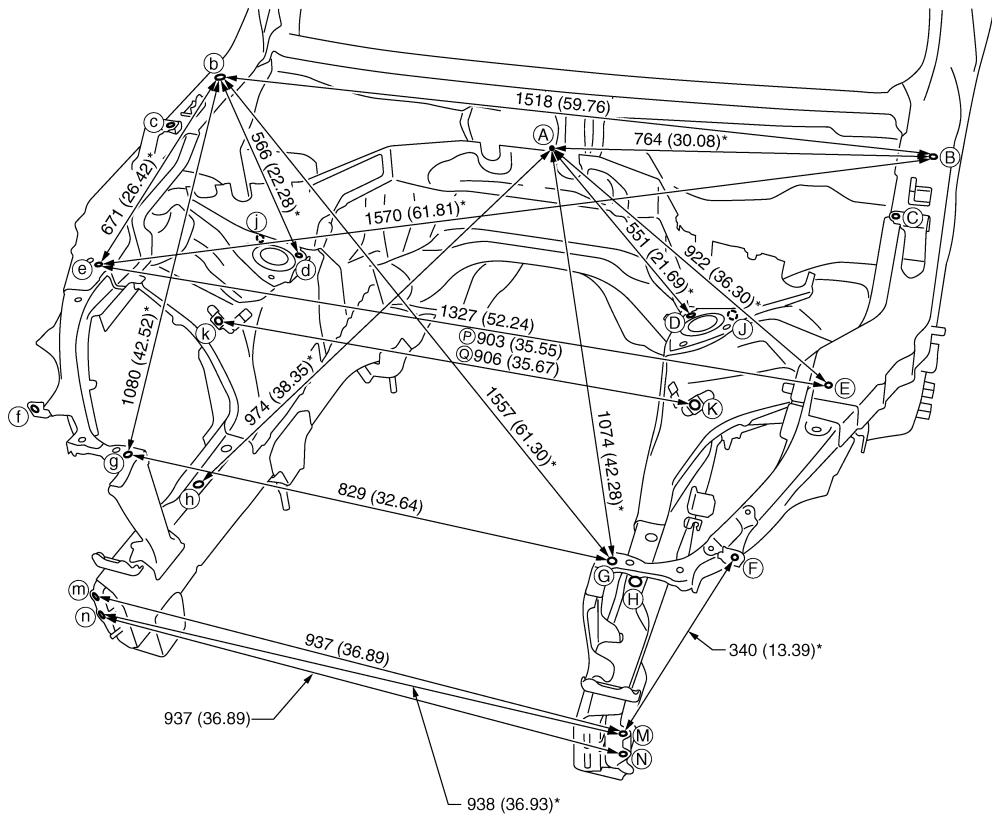

JSKIA1877GB

Unit: mm (in)

«The others»


Unit: mm (in)

Point	Dimension	Memo	Point	Dimension	Memo	Point	Dimension	Memo	Point	Dimension	Memo
A - C	767 (30.20)*		D - d	787 (30.98)		E - g	1138 (44.80)*		J - j	903 (35.55)	
B - d	1231 (48.46)*		D - k	875 (34.45)*		F - f	1178 (46.38)				
C - c	1431 (56.34)		E - G	442 (17.40)*		H - h	826 (32.52)				

MEASUREMENT POINTS

BODY ALIGNMENT

< SERVICE DATA AND SPECIFICATIONS (SDS)

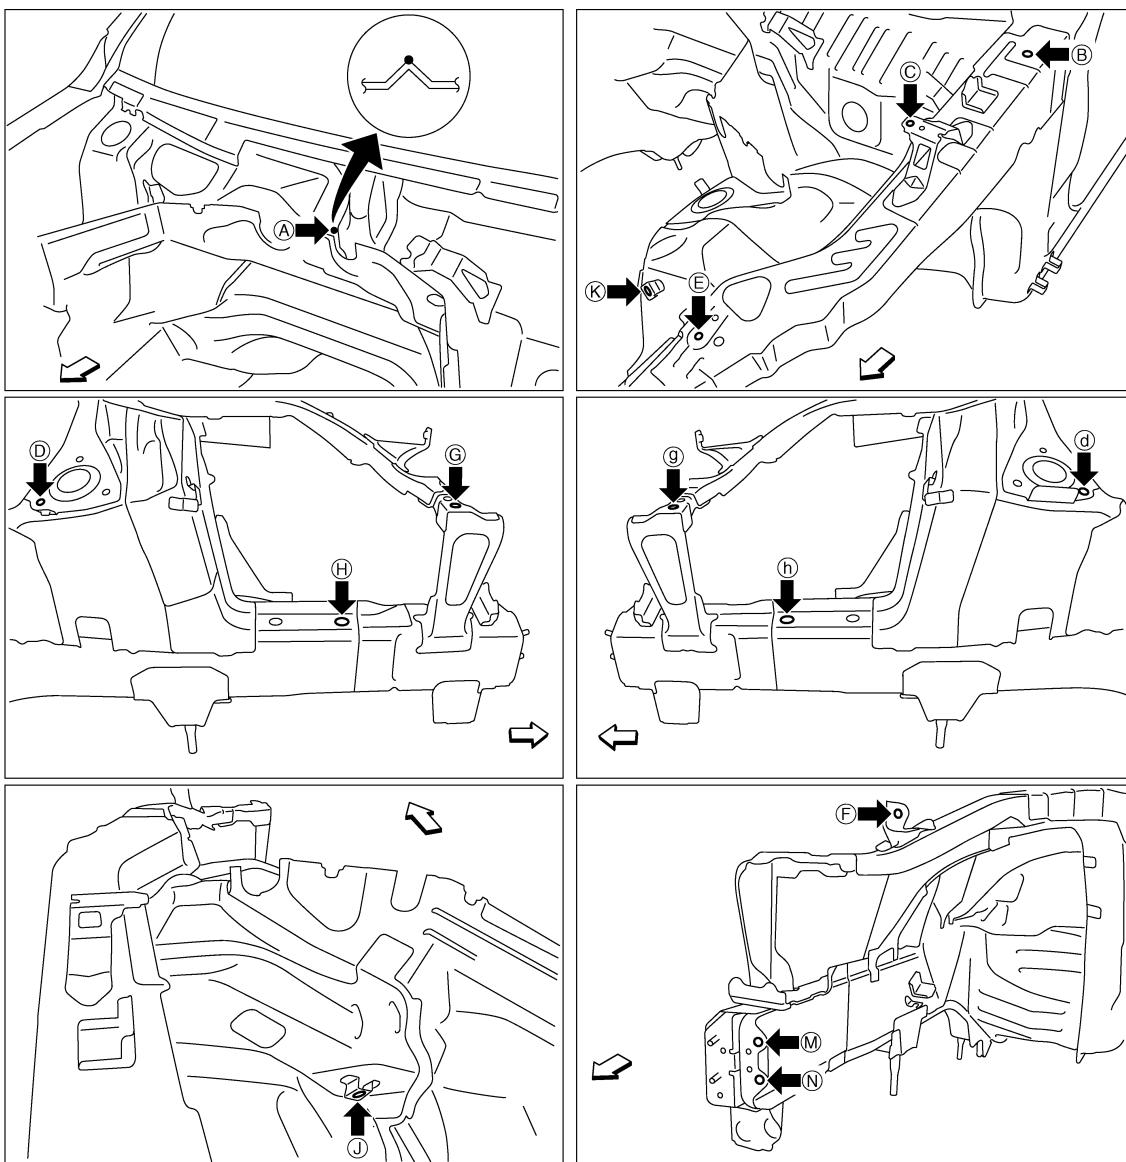

JSKIA1878ZZ

◀: Vehicle front

Unit: mm (in)

Point	Material	Point	Material
A	Upper dash positioning mark of center positioning mark	G, g	Side radiator core stay hole center $\phi 12$ (0.47)
B, b	Hood hinge installing hole center $\phi 12$ (0.47)	H, h	Front side member hole center $\phi 20$ (0.79)
C, c, F, f	Front fender installing hole center $\phi 7$ (0.28)	J, j, K, k	Nut holder hole center $\phi 16$ (0.63)
D, d	Front strut installing hole center $\phi 11$ (0.43)	M, m, N, n	Front bumper reinforcement installing hole center $\phi 11$ (0.43)
E, e	Hoodledge reinforcement hole center $\phi 7$ (0.28)		

Underbody

INFOID:0000000008144817

MEASUREMENT


Dimensions marked with "*" indicate symmetrically identical dimensions on both the right and left hand of the vehicle.

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

BRM

BODY ALIGNMENT

< SERVICE DATA AND SPECIFICATIONS (SDS)

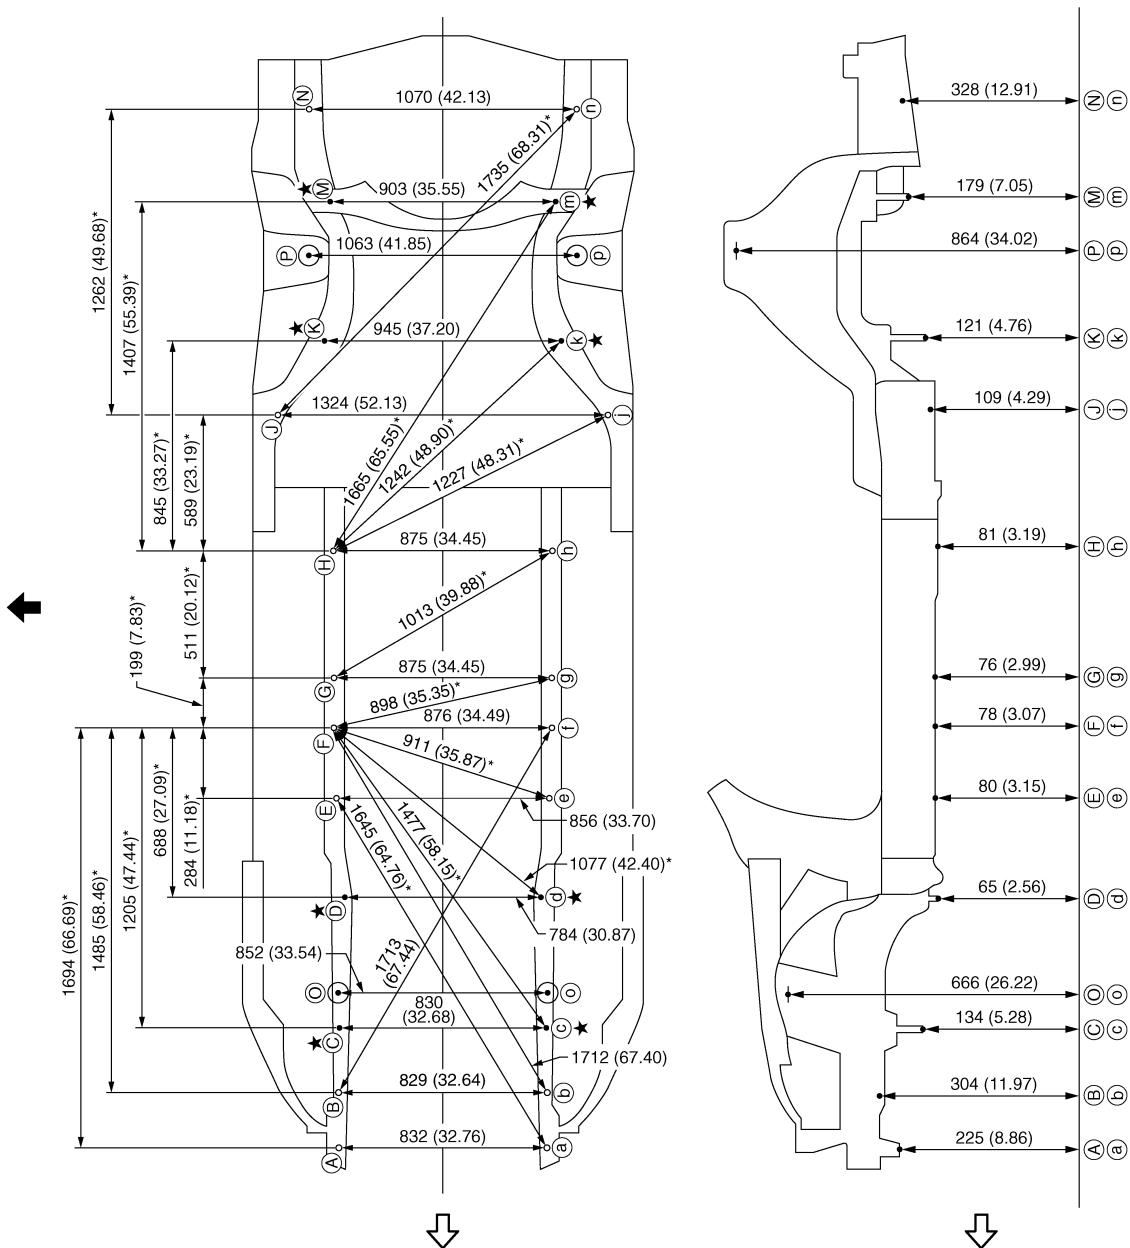

JSKIA1616GB

Unit: mm (in)

↖: Vehicle front



←: Vehicle left side

★: Bolt head

MEASUREMENT POINTS

BODY ALIGNMENT

< SERVICE DATA AND SPECIFICATIONS (SDS)

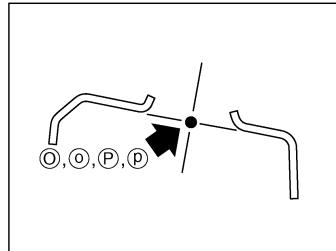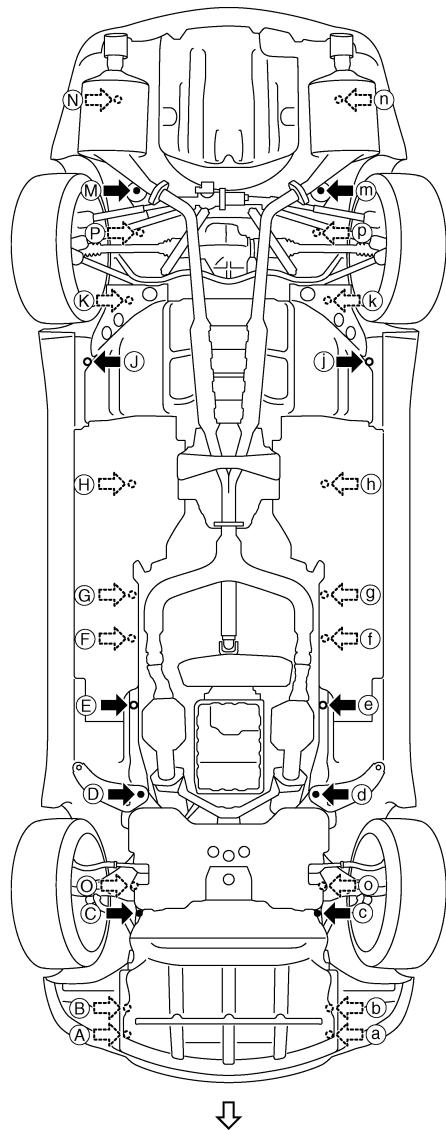

BRM

L

JSKIA1879ZZ

◀: Vehicle front

M

N

O

P

BODY ALIGNMENT

< SERVICE DATA AND SPECIFICATIONS (SDS)

Unit: mm (in)


Points	Coordinates			Remarks	Points	Coordinates			Remarks
	X	Y	Z			X	Y	Z	
A, a	±415.8 (±16.370)	-588.0 (-23.150)	224.6 (8.843)	Hole φ13 (0.51)	H, h	±437.5 (±17.224)	1810.0 (71.260)	81.2 (3.197)	Hole φ16 (0.63)
B	416.2 (16.386)	-368.0 (-14.488)	303.5 (11.949)	Hole φ16 (0.63)	J, j	±662.0 (±26.063)	2354.0 (92.677)	108.5 (4.272)	Hole φ8 (0.31)
b	-413.0 (-16.260)	-368.0 (-14.488)	303.5 (11.949)	Hole φ16 (0.63)	K, k	±472.6 (±18.606)	2653.8 (104.480)	120.8 (4.756)	Bolt head
C, c	±415.0 (±16.339)	-104.0 (-4.094)	133.5 (5.256)	Bolt head	M, m	±451.5 (±17.776)	3213.9 (126.531)	179.0 (7.047)	Bolt head
D, d	±392.0 (±15.433)	414.0 (16.299)	64.5 (2.539)	Bolt head	N, n	±535.0 (±21.063)	3590.0 (141.338)	328.3 (12.925)	Hole 18×16 (0.71×0.63)
E, e	±428.0 (±16.850)	816.6 (32.150)	80.0 (3.150)	Hole 18×16 (0.71×0.63)	O, o	±426.1 (±16.776)	37.1 (1.461)	665.8 (26.213)	Hole φ50.1 (1.972)
F, f	±438.0 (±17.244)	1100.0 (43.307)	78.0 (3.071)	Hole φ16 (0.63)	P, p	±531.3 (±20.917)	2995.8 (117.945)	864.1 (34.020)	Hole φ68 (2.677)
G, g	±437.5 (±17.224)	1299.0 (51.142)	76.0 (2.992)	Hole φ16 (0.63)					

Passenger Compartment

INFOID:0000000008144818

MEASUREMENT

Dimensions marked with "*" indicate symmetrically identical dimensions on both the right and left hand of the vehicle.

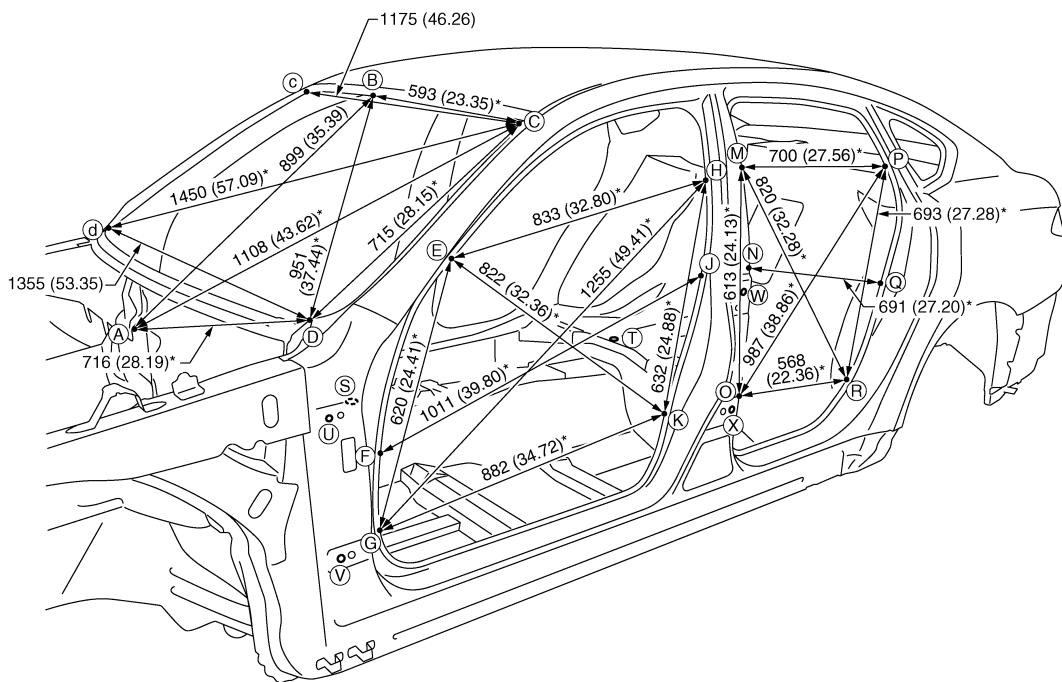

JSKIA1622GB

Unit: mm (in)

BODY ALIGNMENT

< SERVICE DATA AND SPECIFICATIONS (SDS)

«The others»

Unit: mm (in)

Point	Dimension	Memo									
E - e	1431 (56.34)		K - k	1501 (59.09)		Q - q	1468 (57.80)		T - Q	923 (36.34)*	
E - g	1597 (62.87)*		M - m	1361 (53.58)		R - r	1522 (59.92)		T - R	821 (32.32)*	
E - h	1627 (64.05)*		M - o	1555 (61.22)*		S - E	930 (36.61)*		U - u	1609 (63.35)	
E - k	1681 (66.18)*		M - p	1521 (59.88)*		S - F	766 (30.16)*		U - W	1220 (48.03)*	
F - f	1494 (58.82)		M - r	1657 (65.24)*		S - G	758 (29.84)*		U - X	1206 (47.48)*	
F - j	1800 (70.87)*		N - n	1485 (58.46)		S - H	1390 (54.72)*		V - v	1631 (64.21)	
G - g	1513 (59.57)		N - q	1630 (64.17)*		S - J	1279 (50.35)*		V - W	1278 (50.31)*	
G - h	1908 (75.12)*		O - o	1501 (59.09)		S - K	1125 (44.29)*		V - X	1183 (46.57)*	
G - k	1746 (68.74)*		O - p	1727 (67.99)*		T - M	968 (38.11)*		W - w	1614 (63.54)	
H - h	1365 (53.74)		O - r	1614 (63.54)*		T - N	871 (34.29)*		X - x	1654 (65.12)	
H - k	1565 (61.61)*		P - p	1338 (52.68)		T - O	796 (31.34)*				
J - j	1485 (58.46)		P - r	1586 (62.44)*		T - P	1076 (42.36)*				

MEASUREMENT POINTS

A

B

C

D

E

F

G

H

I

J

BRM

L

M


N

O

P

BODY ALIGNMENT

< SERVICE DATA AND SPECIFICATIONS (SDS)

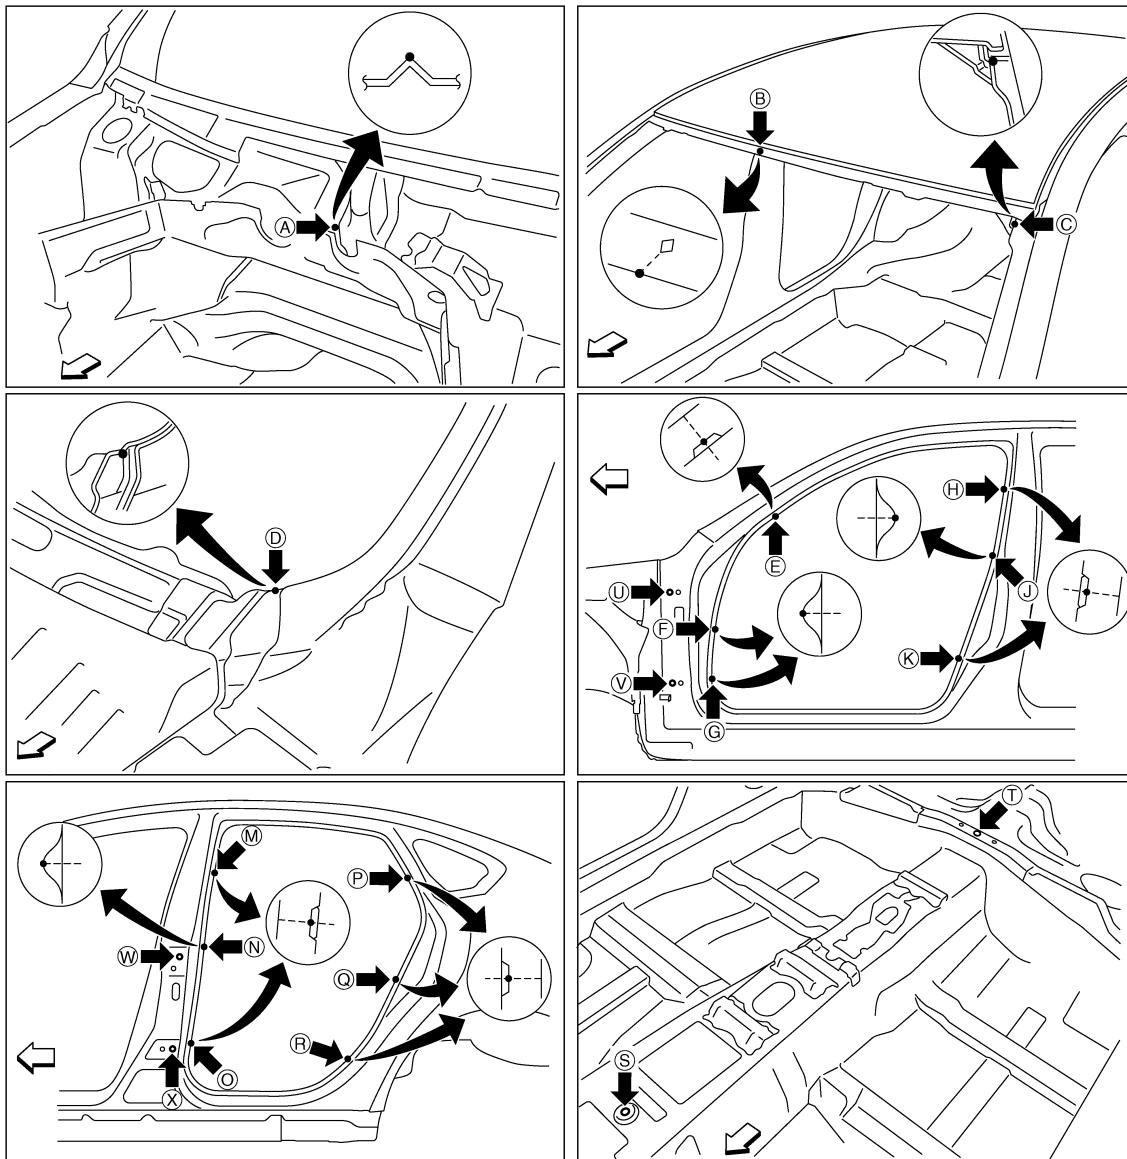

JSKIA1881ZZ

←: Vehicle front

Unit: mm (in)

Point	Material	Point	Material
A	Upper dash positioning mark of center positioning mark	H, h, J, j, K, k, M, m, N, n, O, o	Center pillar indent
B	Roof flange end of center positioning mark	P, p, Q, q, R, r	Rear fender indent
C, c	Front pillar joggle	S	Trans control reinforcement hole center of center positioning mark 14×12 (0.55×0.47)
D, d	Front pillar hinge brace joggle	T	Rear seat crossmember reinforcement hole center of center positioning mark φ5 (0.20)
E, e, F, f, G, g	Front pillar indent	U, u, V, v, W, w, X, x	Door hinge installing hole center U, u, V, v, X, x: φ12 (0.47) W, w: 11×9 (0.43×0.35)

BODY ALIGNMENT


< SERVICE DATA AND SPECIFICATIONS (SDS)

Rear Body

INFOID:0000000008144819

MEASUREMENT

Dimensions marked with "*" indicate symmetrically identical dimensions on both the right and left hand of the vehicle.

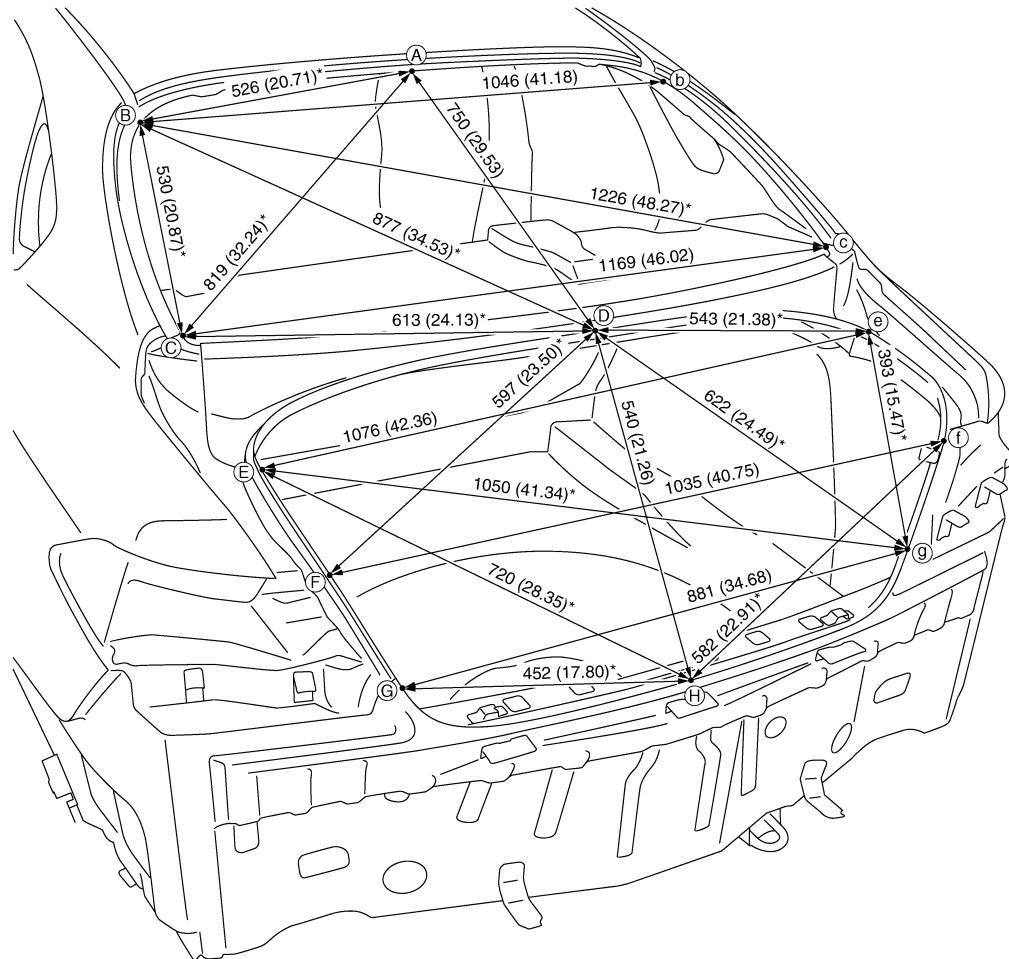

BRM

L

M

N

O

P


JSKIA1624GB

Unit: mm (in)

MEASUREMENT POINTS

BODY ALIGNMENT

< SERVICE DATA AND SPECIFICATIONS (SDS)

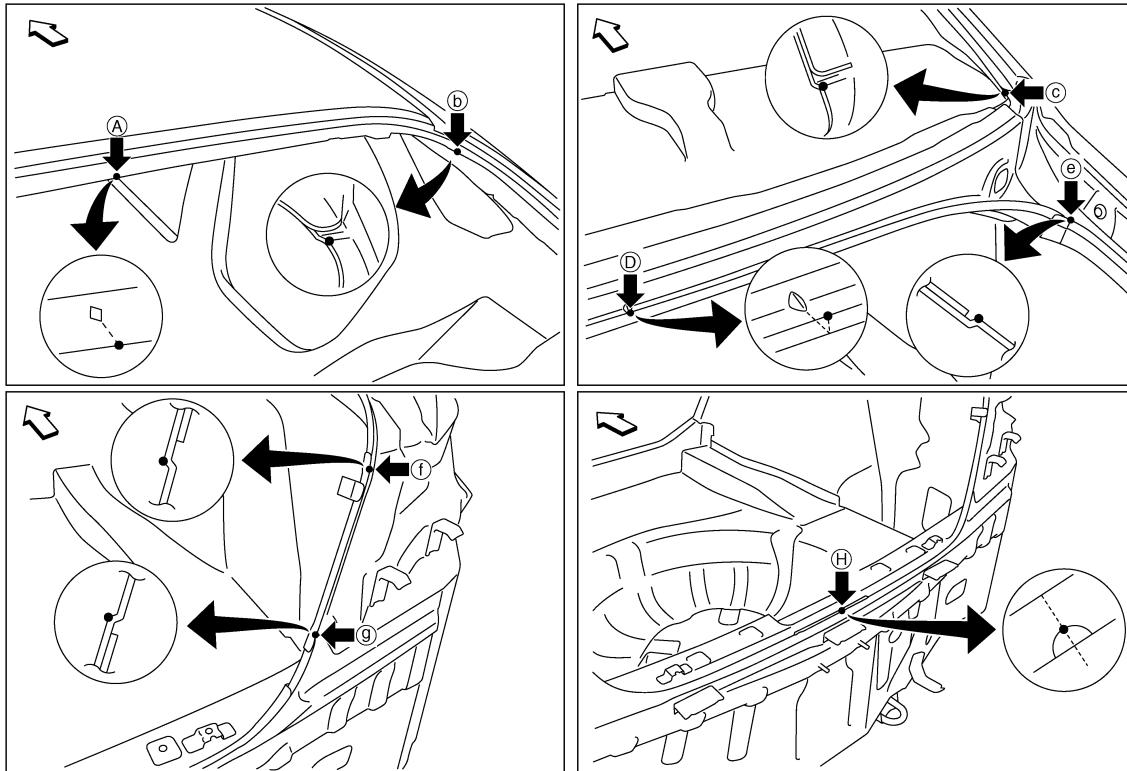

JSKIA1625ZZ

↖: Vehicle front

Point	Material	Point	Material
A	Roof flange end of center positioning mark	D	Rear waist flange end of center positioning mark
B, b	Outer side body joggle	F, f, G, g	Rear combination lamp base joggle
C, c, E, e	Rear fender corner joggle	H	Upper rear panel indent of center positioning mark

LOCATION OF PLASTIC PARTS

< SERVICE DATA AND SPECIFICATIONS (SDS)

LOCATION OF PLASTIC PARTS

Precautions for Plastics

INFOID:0000000008144820

Abbre- viation	Material name	Heat resisting temperature °C (°F)	Resistance to gasoline and solvents	Other cautions
PE	Polyethylene	60 (140)	Gasoline and most solvents are harmless if applied for a very short time (wipe out quickly).	Flammable
ABS	Acrylonitrile Butadiene Styrene	80 (176)	Avoid gasoline and solvents.	—
EPM/ EPDM	Ethylene Propylene (Diene) co- polymer	80 (176)	Gasoline and most solvents are harmless if applied for a very short time (wipe out quickly).	Flammable
PS	Polystyrene	80 (176)	Avoid solvents.	Flammable
PVC	Poly Vinyl Chloride	80 (176)	Gasoline and most solvents are harmless if applied for a very short time (wipe out quickly).	Poisonous gas is emitted when burned.
TPO	Thermoplastic Olefine	80 (176)	↑	Flammable
AAS	Acrylonitrile Acrylic Styrene	85 (185)	Avoid gasoline and solvents.	—
PMMA	Poly Methyl Methacrylate	85 (185)	↑	—
EVAC	Ethylene Vinyl Acetate	90 (194)	↑	—
PP	Polypropylene	90 (194)	Gasoline and most solvents are harmless if applied for a very short time (wipe out quickly).	Flammable, avoid bat- tery acid.
PUR	Polyurethane	90 (194)	Avoid gasoline and solvents.	—
UP	Unsaturated Polyester	90 (194)	↑	Flammable
ASA	Acrylonitrile Styrene Acrylate	100 (212)	↑	Flammable
PPE	Poly Phenylene Ether	110 (230)	↑	—
TPU	Thermoplastic Urethane	110 (230)	↑	—
PBT+ PC	Poly Butylene Terephthalate + Polycarbonate	120 (248)	↑	Flammable
PC	Polycarbonate	120 (248)	↑	—
POM	Poly Oxymethylene	120 (248)	↑	Avoid battery acid.
PA	Polyamide	140 (284)	↑	Avoid immersing in wa- ter.
PBT	Poly Butylene Terephthalate	140 (284)	↑	—
PAR	Polyarylate	180 (356)	↑	—
PET	Polyethylene terephthalate	180 (356)	↑	—
PEI	Polyetherimide	200 (392)	↑	—

CAUTION:

- When repairing and painting a portion of the body adjacent to plastic parts, consider their characteristics (influence of heat and solvent) and remove them if necessary or take suitable measures to protect them.
- Plastic parts should be repaired and painted using methods suiting the materials' characteristics.

A

B

C

D

E

F

G

H

I

J

BRM

L

M

N

O


P

LOCATION OF PLASTIC PARTS

< SERVICE DATA AND SPECIFICATIONS (SDS)

Location of Plastic Parts

INFOID:0000000008144821

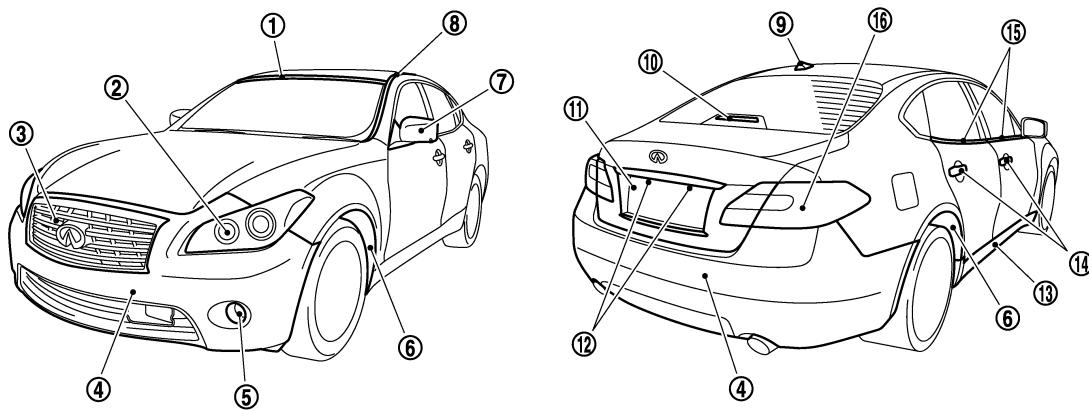


JSKIA1882ZZ

Component			Material	Component		Material	
1	Upper windshield molding		TPO	11	Trunk lid finisher	Base	
2	Front combination lamp	Lens	PC			ABS	
		Housing	PP			Lower finisher molding	
3	Front grille		ABS	12	License plate lamp	Lens	
4	Bumper fascia		PP + EPM			Housing	
5	Front fog lamp	Lens	Glass	13	Sill cover		PP + EPDM
		Housing	PBT + ASA + Glass fiber	14	Door outside handle		PC + ABS
6	Fender protector	Front	PP	15	Door outside molding		PVC + Stainless
		Rear	PUR	16	Rear combination lamp (Rear fender)	Lens	PMMA
7	Door outside mirror	Housing	ABS			Housing	ASA
		Base	PA		Rear combination lamp (Trunk lid)	Lens	PMMA
8	Roof side molding		PVC + Stainless			Housing	ASA
9	Antenna base cover		ASA + PC				
10	High mount stop lamp	Lens	PC				
		Housing	PA				

LOCATION OF PLASTIC PARTS

< SERVICE DATA AND SPECIFICATIONS (SDS)

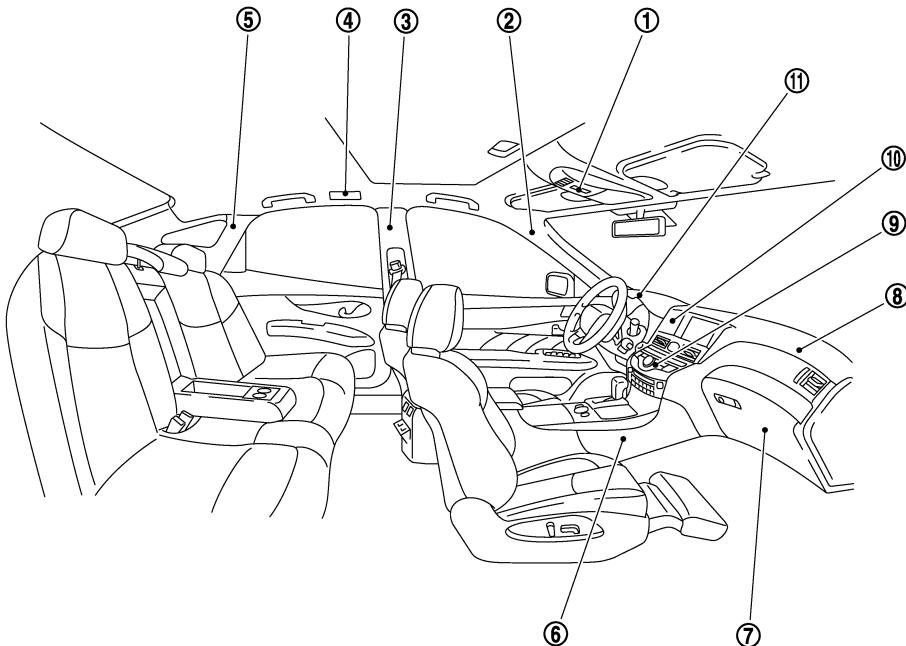

JSKIA1883ZZ

Component		Material	Component		Material
1	Map lamp	Lens	PC	7	Glove box
		Housing	PP		Core
2	Front pillar garnish	PP			Pad
3	Center pillar garnish	PP	8	Instrument panel	
4	Personal lamp	Lens	PC	9	Cluster lid D
		Housing	PP	10	Center ventilator ASSY
5	Rear pillar garnish	PP	11	Cluster lid A	
6	Center console	ABS			ABS

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

BRM