

ALPHABETICAL INDEX

SECTION **IDX**

GI

WA

EM

LC

EF &
EC

FE

CL

MT

AT

FA

RA

BR

ST

BF

HA

EL

IDX

ALPHABETICAL INDEX

A

<p>ABS (anti-lock brake system)BR-29</p> <p>ABS component parts and connector locationsBR-40</p> <p>ABS hydraulic circuitBR-29</p> <p>ABS self-diagnosisBR-39</p> <p>ABS symptom chartBR-35</p> <p>ABS system componentsBR-29</p> <p>ABS trouble diagnosesBR-32</p> <p>ABS wheel sensorsBR-31</p> <p>ABS wiring diagramBR-30</p> <p>A/C air flowHA-11</p> <p>A/C circuit diagram (auto A/C)HA-93</p> <p>A/C circuit diagram (manual A/C)HA-49</p> <p>A/C component layoutHA-10</p> <p>A/C compressor clutch removal and installationHA-26</p> <p>A/C compressor mountingHA-23</p> <p>A/C compressor precautionHA-6</p> <p>A/C compressor special service toolHA-15</p> <p>A/C control linkage adjustment (auto A/C)HA-116</p> <p>A/C control linkage adjustment (manual A/C)HA-69</p> <p>A/C control operation (auto A/C)HA-9</p> <p>A/C control operation (manual A/C)HA-7</p> <p>A/C diagnostic work flow (auto A/C)HA-29</p> <p>A/C diagnostic work flow (manual A/C)HA-28</p> <p>A/C harness layout (auto A/C)HA-91</p> <p>A/C harness layout (manual A/C)HA-47</p> <p>A/C HFC134a (R134a) system identificationHA-3</p> <p>A/C HFC134a (R134a) system introductionHA-3</p> <p>A/C HFC134a (R134a) system precautionHA-4</p> <p>A/C HFC134a (R134a) system service procedureHA-20</p> <p>A/C HFC134a (R134a) system service toolsHA-16</p> <p>A/C HFC134a system service equipment precautionHA-18</p> <p>A/C lubrication oilHA-24</p> <p>A/C operational checkHA-30</p> <p>A/C performance chartHA-33</p> <p>A/C performance test diagnosesHA-34</p> <p>A/C push controlHA-117</p> <p>A/C relayHA-68</p> <p>A/C self-dfiagnoses (auto A/C)HA-74</p> <p>A/C service data specificationHA-136</p> <p>A/C switchHA-68</p> <p>A/C symptom chart (auto A/C)HA-82</p> <p>A/C symptom chart (manual A/C)HA-40</p> <p>A/C system description (auto A/C)HA-121</p> <p>A/C trouble diagnoses (auto A/C)HA-72</p> <p>A/C trouble diagnoses (manual A/C)HA-39</p> <p>A/C wiring diagram (auto A/C)HA-94</p> <p>A/C wiring diagram (manual A/C)HA-50</p>	<p>Acceleration cut control (VE30DE)EF&EC-174</p> <p>Acceleration cut control (VG30E)EF&EC-25</p> <p>Accelerator control systemFE-2</p> <p>Accelerator wire adjustmentFE-2</p> <p>Activated carbon canister inspection (VE30DE)EF&EC-335</p> <p>Activated carbon canister inspection (VG30E)EF&EC-152</p> <p>Activated carbon canister (VE30DE) ..EF&EC-167</p> <p>Air bagBF-80</p> <p>Air bag caution labelsBF-82</p> <p>Air bag precautionsGI-2</p> <p>Air bag removal and installationBF-86</p> <p>Air bag scrappingBF-89</p> <p>Air bag system trouble diagnosesBF-91</p> <p>Air bleeding for brake systemBR-5</p> <p>Air cleaner filter replacement (VE30DE)MA-16</p> <p>Air cleaner filter replacement (VG30E)MA-10</p> <p>Air cut valve (VG30E)EF&EC-14</p> <p>Air mix door control linkage adjustment ..HA-116</p> <p>Air mix. door motorHA-127</p> <p>Air Spoiler (Rear)BF-75</p> <p>AlternatorEL-23</p> <p>Ambient sensorHA-123</p> <p>Angular tightening applicationEM-2</p> <p>Anti-freeze coolantMA-7</p> <p>ASCD (automatic speed control device)EL-113</p> <p>AT control unit (RE4F02A)AT-76</p> <p>AT control unit (RE4F04V)AT-150</p> <p>AT fluid temperature sensor (RE4F02A)AT-81</p> <p>AT fluid temperature sensor (RE4F04V)AT-156</p> <p>AT mode switch (RE4F04V)AT-154</p> <p>AT removal and installationAT-184</p> <p>AT self-diagnoses (RE4F02A)AT-44</p> <p>AT self-diagnoses (RE4F04V)AT-116</p> <p>AT trouble diagnoses (RE4F02A)AT-19</p> <p>AT trouble diagnoses (RE4F04V)AT-90</p> <p>AudioEL-107</p> <p>Automatic amplifierHA-125</p> <p>Automatic transaxle numberGI-18</p> <p>Automatic transmission fluidMA-7</p> <p>Automatic transmission fluid replacementMA-19</p> <p>Auxiliary air control (AAC) (VE30DE) ..EF&EC-164</p> <p>Auxiliary air control (AAC) (VG30E)EF&EC-14</p>
--	---

B

<p>Back-up lampEL-35</p> <p>Back up lamp switch (MT)MT-6</p> <p>Ball joint front axleFA-23</p> <p>BatteryEL-13</p> <p>Baulk ring (MT)MT-10</p> <p>Belt inspection (drive belt) (VG30E)MA-8</p> <p>Blower motorHA-67</p> <p>Blower relayHA-68</p> <p>Blower resistorHA-67</p>	
--	--

ALPHABETICAL INDEX

Body alignment.....	BF-76
Brake booster.....	BR-12
Brake fluid.....	MA-7
Brake fluid change.....	BR-3
Brake fluid level.....	MA-20
Brake fluid level and line check.....	BR-3
Brake hydraulic line.....	BR-4
Brake inspection.....	MA-20
Brake lines and cables inspection.....	MA-20
Brake lining temporary checking.....	MA-21
Brake master cylinder.....	BR-9
Brake pedal.....	BR-7

C

Camshaft inspection (VE engine).....	EM-71
Camshaft inspection (VG engine).....	EM-24
Camshaft position sensor (CMPS) (VE30DE).....	EF&EC-161
Camshaft position sensor (CMPS) (VG30E).....	EF&EC-11
Camshaft position sensor inspection (VE30DE).....	EF&EC-324
Camshaft position sensor inspection (VG30E).....	EF&EC-143
Charging system.....	EL-21
Check connector for ECCS checker box (VG30E).....	EF&EC-17
Cigarette lighter.....	EL-103
Clearance lamp.....	EL-34
Clock.....	EL-103
Clutch cover.....	CL-9
Clutch disc.....	CL-8
Clutch fluid.....	MA-7
Clutch fluid level.....	MA-18
Clutch master cylinder.....	CL-5
Clutch operating cylinder.....	CL-6
Clutch pedal.....	CL-4
Clutch pedal free play.....	CL-4
Clutch pedal height.....	CL-4
Clutch release bearing.....	CL-7
Clutch withdrawal lever.....	CL-7
Coil spring (front).....	FA-20
Coil spring (rear).....	RA-8
Combination lamp (rear) removal and installation.....	BF-75
Combination meter (digital type).....	EL-49
Combination meter (needle type).....	EL-44
Combination switch.....	EL-25
Compression pressure (VE engine).....	EM-49
Compression pressure (VG engine).....	EM-8
Compressor clutch removal and installation.....	HA-26
Compressor mounting.....	HA-23
Compressor precaution.....	HA-6
Compressor special service tool.....	HA-15

Connecting rod bearing clearance (VE engine).....	EM-86	
Connecting rod bearing clearance (VG engine).....	EM-41	
Connecting rod bushing clearance (VE engine).....	EM-87	GI
Connecting rod bushing clearance (VG engine).....	EM-42	MA
Connecting rod (VE engine).....	EM-82	
Connecting rod (VG engine).....	EM-37	
Consult for ECCS (VE30DE).....	EF&EC-201	EM
CONSULT general information.....	GI-14	
Control lever (MT).....	MT-8	
Control valve (AT) (RE4F02A).....	AT-200	LC
Control valve (AT) (RE4F04V).....	AT-263	
Converter housing installation.....	AT-184	EF & EC
Coolant.....	MA-7	
Coolant replacement (VE30DE).....	MA-13	
Coolant replacement (VG30E).....	MA-8	FE
Cooling circuit (VE engine).....	LC-14	
Cooling circuit (VG engine).....	LC-6	
Cooling fan control system (VE engine).....	LC-18	CL
Cooling fan control system (VG engine).....	LC-9	
Cooling fan control (VE30DE).....	EF&EC-177	
Cooling fan control (VG30E).....	EF&EC-25	MT
Cooling fan motor inspection (VE30DE).....	EF&EC-332	
Cooling fan relay inspection (VE30DE).....	EF&EC-331	AT
Cooling fan relay inspection (VG30E).....	EF&EC-148	FA
Cornering lamp.....	EL-38	
Counter gear (MT).....	MT-10	RA
Coupling sleeve (MT).....	MT-10	
Crankcase emission control system (VE30DE).....	EF&EC-337	BR
Crankcase emission control system (VG30E).....	EF&EC-154	
Crankshaft assembly (VE engine).....	EM-89	ST
Crankshaft assembly (VG engine).....	EM-43	
Crankshaft bearing clearance (VE engine).....	EM-85	BF
Crankshaft bearing clearance (VG engine).....	EM-40	HA
Crankshaft inspection (VE engine).....	EM-84	
Crankshaft inspection (VG engine).....	EM-39	
Cylinder block (VE engine).....	EM-80	
Cylinder block (VG engine).....	EM-35	EL
Cylinder block boring (VE engine).....	EM-84	
Cylinder block boring (VG engine).....	EM-39	
Cylinder head (VE engine).....	EM-69	
Cylinder head (VG engine).....	EM-19	
Cylinder head bolt tightening (VE engine).....	EM-62	
Cylinder head bolt tightening (VG engine).....	EM-31	

IDX

ALPHABETICAL INDEX

D

Data link connector for Consult (VE30DE)	EF&EC-167
Daytime light system	EL-30
Differential gear (FF AT) (RE4F02A)	AT-219
Differential gear (FF AT) (RE4F04V)	AT-306
Differential gear (FF MT)	MT-24
Digital touch entry system	EL-145
Dimensions	GI-18
Direct ignition system (VE30DE)	EF&EC-179
Door adjustment (front)	BF-10
Door adjustment (rear)	BF-11
Door mirror	BF-74
Door weatherstrip	BF-36
Drive plate runout (VE engine)	EM-88
Drive plate runout (VG engine)	EM-42
Drive shaft (front)	FA-12
Dropping resistor (AT) (RE4F02A)	AT-82
Dropping resistor (AT) (RE4F04V)	AT-156
Dual pressure switch	HA-68

E

ECCS basic inspection (VE30DE)	EF&EC-215
ECCS basic inspection (VG30E)	EF&EC-55
ECCS circuit diagram (VE30DE)	EF&EC-160
ECCS circuit diagram (VG30E)	EF&EC-10
ECCS component parts location (VE30DE)	EF&EC-155
ECCS component parts location (VG30E)	EF&EC-5
ECCS fail-safe system (VE30DE)	EF&EC-177
ECCS fail-safe system (VG30E)	EF&EC-26
ECCS on-board diagnostic system (VE30DE)	EF&EC-195
ECCS on-board diagnostic system (VG30E)	EF&EC-39
ECCS relay inspection (VE30DE)	EF&EC-331
ECCS relay inspection (VG30E)	EF&EC-148
ECCS system diagram and chart (VE30DE)	EF&EC-157
ECCS system diagram and chart (VG30E)	EF&EC-7
ECCS trouble diagnoses (VE30DE)	EF&EC-190
ECCS trouble diagnoses (VG30E)	EF&EC-34
ECCS wiring diagram	Foldout page
ECM input/output signal inspection (VE30DE)	EF&EC-319
ECM input/output signal inspection (VG30E)	EF&EC-138
EGR canister control solenoid valve inspection (VG30E)	EF&EC-145
EGR control (EGRC) - BPT valve (VE30DE)	EF&EC-166

EGR control (EGRC) - BPT valve (VG30E)	EF&EC-16
EGR control (EGRC) - solenoid valve (VE30DE)	EF&EC-166
EGR control (EGRC) - solenoid valve (VG30E)	EF&EC-16
EGR temperature sensor inspection (VE30DE)	EF&EC-327
EGR temperature sensor inspection (VG30E)	EF&EC-145
EGR temperature sensor (VE30DE)	EF&EC-166
EGR temperature sensor (VG30E)	EF&EC-17
EGR valve inspection (VE30DE)	EF&EC-326
EGR valve inspection (VG30E)	EF&EC-145
EGRC - BPT valve inspection (VE30DE)	EF&EC-326
EGRC - BPT valve inspection (VG30E)	EF&EC-145
Electrical units location	EL-166
Electronic ignition (EI) system (VE30DE)	EF&EC-170
Electronic ignition (EI) system (VG30E)	EF&EC-20
Engine control module (ECM) (VE30DE)	EF&EC-161
Engine control module (ECM) (VG30E)	EF&EC-11
Engine coolant temperature sensor (ECTS) (VE30DE)	EF&EC-161
Engine coolant temperature sensor (ECTS) (VG30E)	EF&EC-12
Engine coolant temperature sensor inspection (VE30DE)	EF&EC-325
Engine coolant temperature sensor inspection (VG30E)	EF&EC-28
Engine coolant temperature sensor inspection (VG30E)	EF&EC-143
Engine oil	MA-7
Engine oil filter replacement (VE30DE)	MA-16
Engine oil filter replacement (VG30E)	MA-11
Engine oil precautions	GI-4
Engine oil replacement (VE30DE)	MA-16
Engine oil replacement (VG30E)	MA-10
Engine outer component parts (VE engine)	EM-45
Engine outer component parts (VG engine)	EM-6
Engine removal (VE engine)	EM-77
Engine removal (VG engine)	EM-33
Engine serial number	GI-17
Evaporative emission system (VE30DE)	EF&EC-335
Evaporative emission system (VG30E)	EF&EC-152
Exhaust gas recirculation (EGR) system (VE30DE)	EF&EC-172
Exhaust gas recirculation (EGR) system (VG30E)	EF&EC-23

ALPHABETICAL INDEX

Exhaust gas recirculation (EGR) valve (VE30DE)	EF&EC-165
Exhaust gas recirculation (EGR) valve (VG30E)	EF&EC-16
Exhaust system	FE-4
Exhaust system inspection	MA-18
Exterior	BF-35
Exterior lamp	EL-34

F

Fan control amp.	HA-134
Fan switch	HA-67
Final drive (FF AT) (RE4F02A)	AT-219
Final drive (FF AT) (RE4F04V)	AT-306
Final drive (FF MT)	MT-24
Fluid temperature sensor (AT) (RE4F02A) ..	AT-81
Fluid temperature sensor (AT) (RE4F04V)	AT-156
Fluids	MA-7
Flywheel runout (VE engine)	EM-88
Fog lamp, front	EL-36
Fork rod (MT)	MT-11
Forward clutch (RE4F04V)	AT-284
Fresh vent door control linkage adjustment	HA-70
Front axle	FA-8
Front bumper	BF-5
Front disc brake	BR-17
Front suspension	FA-19
Fuel check valve inspection (VG30E) ..	EF&EC-153
Fuel filler lid	BF-7
Fuel filter (VE30DE)	EF&EC-167
Fuel filter (VG30E)	EF&EC-17
Fuel filter replacement (VE30DE)	MA-15
Fuel filter replacement (VG30E)	MA-10
Fuel gauge	EL-45
Fuel injector (VE30DE)	EF&EC-162
Fuel injector (VG30E)	EF&EC-13
Fuel line inspection (VE30DE)	MA-15
Fuel line inspection (VG30E)	MA-9
Fuel precautions	GI-5
Fuel pressure check (VE30DE)	EF&EC-333
Fuel pressure check (VG30E)	EF&EC-150
Fuel pressure regulator (VE30DE)	EF&EC-163
Fuel pressure regulator (VG30E)	EF&EC-13
Fuel pressure release (VE30DE)	EF&EC-333
Fuel pressure release (VG30E)	EF&EC-150
Fuel pump (VE30DE)	EF&EC-163
Fuel pump (VG30E)	EF&EC-13
Fuel pump control (VE30DE)	EF&EC-172
Fuel pump control (VG30E)	EF&EC-22
Fuel pump inspection (VE30DE)	EF&EC-325
Fuel pump inspection (VG30E)	EF&EC-144
Fuel pump relay inspection (VE30DE)	EF&EC-331

Fuel pump relay inspection (VG30E) ..	EF&EC-148
Fuel system	FE-3
Fuel tank vacuum relief valve inspection (VE30DE)	EF&EC-336
Fuel tank vacuum relief valve inspection (VG30E)	EF&EC-153
Full cold switch	HA-69
Fuse	EL-12
Fusible link	EL-12

G

Gear oil	MA-7
Gears (MT)	MT-10
Grease	MA-7

H

Harness connector	EL-4
Harness layout	EL-169
Hazard warning lamp	EL-37
Headlamp (For Canada)	EL-30
Headlamp (For U.S.A.)	EL-29
Heated oxygen sensor (H02S) (VE30DE)	EF&EC-163
Heated oxygen sensor (H02S) (VG30E)	EF&EC-13
Heated oxygen sensor heater inspection (VE30DE)	EF&EC-327
Heated oxygen sensor monitor (VE30DE)	EF&EC-201
Heated oxygen sensor monitor (VG30E)	EF&EC-41
Height (Dimensions)	GI-18
HFC134a (R134a) system identification	HA-3
HFC134a (R134a) system introduction	HA-3
HFC134a (R134a) system precaution	HA-4
HFC134a (R134a) system service procedure	HA-20
HFC134a (R134a) system service tools	HA-16
HFC134a system service equipment precaution	HA-18
High clutch (RE4F02A)	AT-210
High clutch (RE4F04V)	AT-280
Hood adjustment	BF-5
Horn	EL-103
How to follow flow chart in trouble diagnoses	GI-11
How to read wiring diagrams	GI-8
How to use this manual	GI-6
Hydraulic lash adjuster inspection (VE engine)	EM-74

ALPHABETICAL INDEX

I

IACV - air regulator inspection (VE30DE)	EF&EC-329
IACV - FICD solenoid valve inspection (VE30DE)	EF&EC-328
IACV-AAC valve inspection (VE30DE)	EF&EC-328
IACV-AAC valve inspection (VG30E)	EF&EC-146
Identification plate	GI-17
Idle air control (IAC) system (VE30DE)	EF&EC-171
Idle air control (IAC) system (VG30E)	EF&EC-21
Idle air control valve (IACV) (VE30DE)	EF&EC-164
Idle air control valve (IACV) (VG30E)	EF&EC-14
Idle mixture ratio inspection (VE30DE)	EF&EC-182
Idle mixture ratio inspection (VG30E)	EF&EC-29
Idle speed inspection (VE30DE)	EF&EC-182
Idle speed inspection (VG30E)	EF&EC-29
Ignition coil inspection (VE30DE)	EF&EC-325
Ignition coil inspection (VG30E)	EF&EC-144
Ignition coil relay inspection (VE30DE)	EF&EC-331
Ignition timing inspection (VE30DE)	EF&EC-182
Ignition timing inspection (VG30E)	EF&EC-29
Illuminated entry system	EL-43
Illumination (Analog meter)	EL-41
Illumination (Digital meter)	EL-40
In vehicle sensor	HA-121
Inhibitor switch inspection (VE30DE)	EF&EC-330
Inhibitor switch inspection (VG30E)	EF&EC-148
Inhibitor switch (RE4F02A)	AT-81
Inhibitor switch (RE4F04V)	AT-154
Injection removal and installation (VE30DE)	EF&EC-334
Injection removal and installation (VG30E)	EF&EC-151
Injector inspection (VE30DE)	EF&EC-329
Injector inspection (VG30E)	EF&EC-148
Instrument panel	BF-29
Intake door control linkage adjustment (manual A/C)	HA-70
Intake door control linkage adjustment (auto A/C)	HA-116
Intake sensor	HA-124
Interior	BF-31
Interior lamp	EL-40

J

Jacking points	GI-19
Joint connector (J/C)	Foldout page

K

Key illumination	EL-43
Knock sensor (KS) (VE30DE)	EF&EC-165
Knock sensor (KS) (VG30E)	EF&EC-15
Knock sensor inspection (VE30DE)	EF&EC-330
Knock sensor inspection (VG30E)	EF&EC-147

L

Length (Dimensions)	GI-18
Lifting points	GI-19
Line pressure solenoid valve (RE4F02A)	AT-82
Line pressure solenoid valve (RE4F04V)	AT-155
Line pressure test (AT) (RE4F02A)	AT-85
Line pressure test (AT) (RE4F04V)	AT-159
Liquid gasket application	EM-2
Low and reverse brake (RE4F02A)	AT-215
Low and reverse brake (RE4F04V)	AT-290
LSV (load sensing valve)	BR-15
Lubricants	MA-7
Lubrication circuit (VE engine)	LC-10
Lubrication circuit (VG engine)	LC-4
Lubrication oil A/C	HA-24
Lubrication-locks, hinges and hood latches	MA-23

M

Magnet clutch	HA-26
Main drive gear (MT)	MT-10
Mainshaft (MT)	MT-10
Maintenance	MA-1
Maintenance (engine) (VE30DE)	MA-13
Maintenance (engine) (VG30E)	MA-8
Maintenance general	MA-2
Maintenance periodic	MA-4
Maintenance schedule (1)	MA-5
Maintenance schedule (2)	MA-6
Manual transaxle number	GI-17
Manual transmission oil	MA-7
Manual transmission oil replacement	MA-18
Mass air flow sensor inspection (VE30DE)	EF&EC-324
Mass air flow sensor inspection (VG30E)	EF&EC-28
Mass air flow sensor inspection (VG30E)	EF&EC-143
Mass air flow sensor (MAFS) (VE30DE)	EF&EC-161
Mass air flow sensor (MAFS) (VG30E)	EF&EC-11
Master cylinder (brake)	BR-9
Master cylinder (clutch)	CL-5

ALPHABETICAL INDEX

Max cold door motorHA-71
 Max cold door control linkage
 adjustment.....HA-116
 Meter and gauges (Digital type)EL-49
 Meter and gauges (Needle type)EL-44
 Mode door control linkage adjustment
 (manual A/C).....HA-69
 Mode door control linkage adjustment
 (auto A/C).....HA-116
 Model variation.....GI-15
 Molding (window)BF-36
 MT overhaulMT-9
 MT removal and installationMT-6
 Multi purpose grease.....MA-7
 Multiport fuel injection (MFI) system
 (VE30DE)EF&EC-168
 Multiport fuel injection (MFI) system
 (VG30E)EF&EC-18
 Multiport fuel injection precautions.....GI-4

N

Neutral position switch inspection
 (VE30DE)EF&EC-330
 Neutral position switch (MT)MT-6

O

Oil change (capacity)MA-7
 Oil pan (VE engine)EM-50
 Oil pan (VG engine)EM-9
 Oil pressure relief valve (VG engine)LC-5
 Oil pressure (VE engine).....LC-11
 Oil pressure (VG engine)LC-4
 Oil pump (AT) (RE4F02A)AT-196
 Oil pump (AT) (RE4F04V).....AT-259
 Oil pump regulator valve (VE engine)LC-13
 Oil pump regulator valve (VG engine)LC-5
 Oil pump (VE engine)LC-11
 Oil pump (VG engine).....LC-4
 Oil seal replacement (VE engine)EM-67
 Oil seal replacement (VG engine)EM-17
 Operating cylinder (clutch).....CL-6
 Overdrive switch (RE4F02A)AT-83
 Overdrive switch (RE4F04V).....AT-154
 Overrun clutch (RE4F04V)AT-284
 Overrun clutch solenoid valve
 (RE4F04V)AT-155
 Oversize piston (VE engine).....EM-84
 Oversize piston (VG engine)EM-39

P

Parking brake control.....BR-27

PCV (positive crankcase ventilation)
 inspection (VE30DE)EF&EC-337
 PCV (positive crankcase ventilation)
 inspection (VG30E)EF&EC-154
 Piston assembly (VE engine)EM-88
 Piston assembly (VG engine)EM-42
 Piston pin inspection (VE engine)EM-81
 Piston pin inspection (VG engine)EM-36
 Piston ring inspection (VE engine)EM-82
 Piston ring inspection (VG engine)EM-37
 Piston to bore clearance (VE engine).....EM-83
 Piston to bore clearance (VG engine)EM-38
 Power antennaEL-107
 Power door lock.....BF-12
 Power seatBF-40
 Power steering fluid level.....MA-21, ST-5
 Power steering fluidMA-7
 Power steering gearST-12
 Power steering hydraulic pressureST-7
 Power steering oil pressure switch
 (VE30DE)EF&EC-165
 Power steering oil pressure switch
 (VG30E)EF&EC-15
 Power steering oil pressure switch
 inspectionEF&EC-331
 Power steering oil pumpST-23
 Power steering system bleedingST-5
 Power supply routing (VE Engine)EL-10
 Power supply routing (VG ENGINE).....EL-8
 Power transistor Ignition coil
 (VE30DE)EF&EC-163
 Power transistor Ignition coil
 (VG30E)EF&EC-14
 Power transistor inspection
 (VE30DE)EF&EC-326
 Power transistor inspection
 (VE30DE)EF&EC-326
 Power transistor inspection
 (VG30E)EF&EC-144
 Power valve (VE30DE)EF&EC-166
 Power valve (VG30E)EF&EC-16
 Power valve actuator inspection
 (VE30DE)EF&EC-329
 Power valve control (VE30DE)EF&EC-173
 Power valve control (VG30E)EF&EC-24
 Power valve control solenoid valve
 inspection (VE30DE)EF&EC-329
 Power valve control solenoid valve
 inspection (VG30E)EF&EC-147
 Power valve control solenoid valve
 (VE30DE)EF&EC-166
 Power valve control solenoid valve
 (VG30E)EF&EC-16
 Power window.....BF-18
 Power window/Power door lock trouble
 diagnosesBF-20
 Precautions (General)GI-2
 Pressure test (AT) (RE4F02A)AT-85

GI

MA

EM

LC

EF & EC

FE

CL

MT

AT

FA

RA

BR

ST

BF

HA

EL

IDX

ALPHABETICAL INDEX

Pressure test (AT) (RE4F04V).....AT-159

R

Radiator (VE engine)LC-18
 Radiator (VG engine).....LC-9
 Rear axleRA-6
 Rear bumper.....BF-7
 Rear disc brake.....BR-22
 Rear drum brake.....BR-20
 Rear suspensionRA-7
 Rear window defogger.....EL-104
 Refrigerant connection precaution.....HA-5
 Refrigerant general precautionHA-5
 Refrigerant lines.....HA-22
 Refrigeration cycle.....HA-13
 Release bearing (clutch).....CL-7
 Resistor inspection (VG30E).....EF&EC-149
 Reverse clutch (RE4F02A)AT-214
 Reverse clutch (RE4F04V)AT-277
 Reverse gear (MT).....MT-10
 Reverse idler shaft (MT).....MT-10
 Revolution sensor (AT) (RE4F02A)AT-82
 Revolution sensor (AT) (RE4F04V).....AT-155
 Road wheel size.....GI-18

S

Safety relay (VG30E).....EF&EC-15
 SEA J1930 terminology listGI-22
 Seat (front)BF-39
 Seat (rear).....BF-41
 Seat belt inspection.....MA-23
 Seat belt systemBF-42
 Seat belt system trouble diagnosesBF-48
 Self-diagnostic results (VE30DE).....EF&EC-199
 Self-diagnostic results (VG30E)EF&EC-42
 Shift control (MT)MT-11
 Shift fork (MT).....MT-11
 Shift lock system.....AT-164
 Shift schedule (RE4F02A)AT-39
 Shift schedule (RE4F04V)AT-110
 Shift solenoid valve (AT) (RE4F02A).....AT-82
 Shift solenoid valve (AT) (RE4F04V)AT-155
 Side guard moldingBF-38
 SMJ (super multiple junction)Foldout page
 Soft/Hard closed throttle position
 (CTP)switch (VE30DE).....EF&EC-162
 Soft/Hard closed throttle position
 (CTP)switch (VG30E).....EF&EC-12
 Spark plug replacement (VE30DE)MA-17
 Spark plug replacement (VG30E)MA-11
 SpeedometerEL-45
 Spot lampEL-42
 Spring (Wheelarch) heightFA-5
 Stabilizer bar (front)FA-21

Stabilizer bar (rear)RA-12
 Stall test (AT) (RE4F02A).....AT-83
 Stall test (AT) (RE4F04V)AT-156
 Standardized relay.....EL-5
 Starter.....EL-19
 Starting systemEL-17
 Steering gear and linkage inspectionMA-21
 Steering linkage.....ST-12
 Steering switch (With air bag).....EL-28
 Steering switch (Without air bag)EL-27
 Steering wheel and columnST-8
 Steering wheel play.....ST-4
 Steering wheel turning forceST-6
 Step lampEL-42
 Stop lampEL-34
 Striking rod (MT)MT-11
 Strut (front).....FA-20
 Strut (rear).....RA-8
 Sun roof.....BF-69
 Sunload sensor.....HA-123
 Supplemental restraint systemBF-80
 Synchronizer (MT).....MT-10

T

TachometerEL-45
 Tail lamp.....EL-34
 Temperature control cable and linkage
 adjustment.....HA-69
 Theft warning system.....EL-125
 Thermo control amp.....HA-67
 Thermostat (VE engine).....LC-17
 Thermostat (VG engine)LC-8
 Three way catalyst precautions.....GI-4
 Throttle position sensor inspection and
 adjustment (VE30DE).....EF&EC-327
 Throttle position sensor inspection and
 adjustment (VG30E).....EF&EC-145
 Throttle position sensor (TPS)
 (VE30DE).....EF&EC-162
 Throttle position sensor (TPS)
 (VG30E).....EF&EC-12
 Throttle position switch inspection
 (VE30DE).....EF&EC-327
 Tie-rodST-16
 Tie-rod ball joints.....ST-16
 Tightening torque of standard boltsGI-21
 Time control systemEL-85
 Timing belt (VG engine)EM-11
 Timing chain (VE engine).....EM-52
 Timing solenoid valve (RE4F02A).....AT-82
 Tire rotationMA-19
 Tire sizeGI-18
 Torque converter clutch solenoid valve
 (RE4F02A).....AT-82
 Torque converter clutch solenoid valve
 (RE4F04V)AT-155

ALPHABETICAL INDEX

Torque converter installation	AT-184
Tow truck towing	GI-20
Towing points	GI-20
Transmission case (MT)	MT-9
Transverse link (front)	FA-22
Tread-FR&RR (Dimensions)	GI-18
Trim - door	BF-31
Trim - luggage compartment	BF-33
Trim - roof	BF-34
Trim - side and floor	BF-31
Trunk lid	BF-7
Trunk room lamp	EL-42
Turn signal lamp	EL-37

V

Vacuum hose (brake system)	BR-14
Vacuum hose drawing (ECCS) (VE30DE)	EF&EC-159
Vacuum hose drawing (ECCS) (VG30E)	EF&EC-9
Valve guide inspection (VE engine)	EM-72
Valve guide inspection (VG engine)	EM-26
Valve seat inspection (VE engine)	EM-73
Valve seat inspection (VG engine)	EM-27
Valve spring inspection (VE engine)	EM-74
Valve spring inspection (VG engine)	EM-28
Valve timing control solenoid valve (VE30DE)	EF&EC-165
Valve timing control (VTC) (VE30DE) ..	EF&EC-174
Vapor lines inspection (VE30DE)	MA-17
Vapor lines inspection (VG30E)	MA-12
Vehicle identification number	GI-16

Vehicle speed sensor (VSS) (VE30DE)	EF&EC-165
Vehicle speed sensor (VSS) (VG30E) ..	EF&EC-15
Vehicle speed sensor inspection	EF&EC-144
Vent mode switch	HA-69
Viscosity number (SAE)	MA-7
Viscous coupling (FF AT) (RE4F04V)	AT-306
Viscous coupling (FF MT)	MT-24
VTC solenoid valve inspection (VE30DE)	EF&EC-330

W

Warning chime	EL-83
Warning lamps	EL-80
Washer, front	EL-100
Water cock solenoid valve	HA-68
Water pump (VE engine)	LC-15
Water pump (VG engine)	LC-7
Water temperature gauge	EL-45
Wheel alignment (front)	FA-6
Wheel alignment (rear)	RA-4
Wheel bearing (front axle)	FA-5
Wheel bearing (rear)	RA-4
Wheel hub and knuckle	FA-8
Wheel sensors (ABS)	BR-31
Wheelbase (Dimensions)	GI-18
Width (Dimensions)	GI-18
Windshield and windows	BF-72
Wiper and washer	EL-100
Wiper, front	EL-100
Withdrawal lever (clutch)	CL-7

GI

MA

EM

LC

EF &
EC

FE

CL

MT

AT

FA

RA

BR

ST

BF

HA

EL

IDX