

SECTION **CL**

GI

MA

EM

LC

EC

FE

CL

MT

AT

FA

RA

BR

ST

RS

BT

HA


EL

IDX

CONTENTS

PRECAUTIONS AND PREPARATION2	Operating Cylinder.....7
Precautions.....2	CLUTCH RELEASE MECHANISM8
Special Service Tools2	CLUTCH DISC AND CLUTCH COVER9
CLUTCH SYSTEM — Hydraulic Type3	Clutch Disc.....9
INSPECTION AND ADJUSTMENT4	Clutch Cover and Flywheel10
Adjusting Clutch Pedal4	SERVICE DATA AND SPECIFICATIONS (SDS)11
Bleeding Procedure4	General Specifications.....11
HYDRAULIC CLUTCH CONTROL6	Inspection and Adjustment11
Clutch Master Cylinder6	

PRECAUTIONS AND PREPARATION

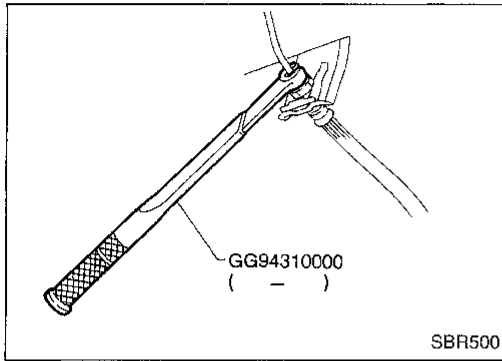

Precautions

- Recommended fluid is brake fluid "DOT 3".
- Never reuse drained brake fluid.
- Be careful not to splash brake fluid on painted areas.
- When removing and installing clutch piping, use Tool.
- Use new brake fluid to clean or wash all parts of master cylinder, operating cylinder and clutch damper.
- Never use mineral oils such as gasoline or kerosene. It will ruin the rubber parts of the hydraulic system.

WARNING:

After cleaning clutch disc, wipe it with a dust collector. Do not use compressed air.


Special Service Tools

The actual shapes of Kent-Moore tools may differ from those of special service tools illustrated here.

Tool number (Kent-Moore No.) Tool name	Description
GG94310000 (-) Flare nut torque wrench	<p>NT406</p> <p>a: 10 mm (0.39 in)</p>
ST20630000 (J26366) Clutch aligning bar	<p>NT405</p> <p>a: 15.9 mm (0.626 in) dia. b: 22.9 mm (0.902 in) dia. c: 45.0 mm (1.772 in)</p>
ST20050240 (-) Diaphragm spring adjusting wrench	<p>NT404</p> <p>a: 150 mm (5.91 in) b: 25 mm (0.98 in)</p>

CLUTCH SYSTEM — Hydraulic Type

SEC. 300-305-306-465

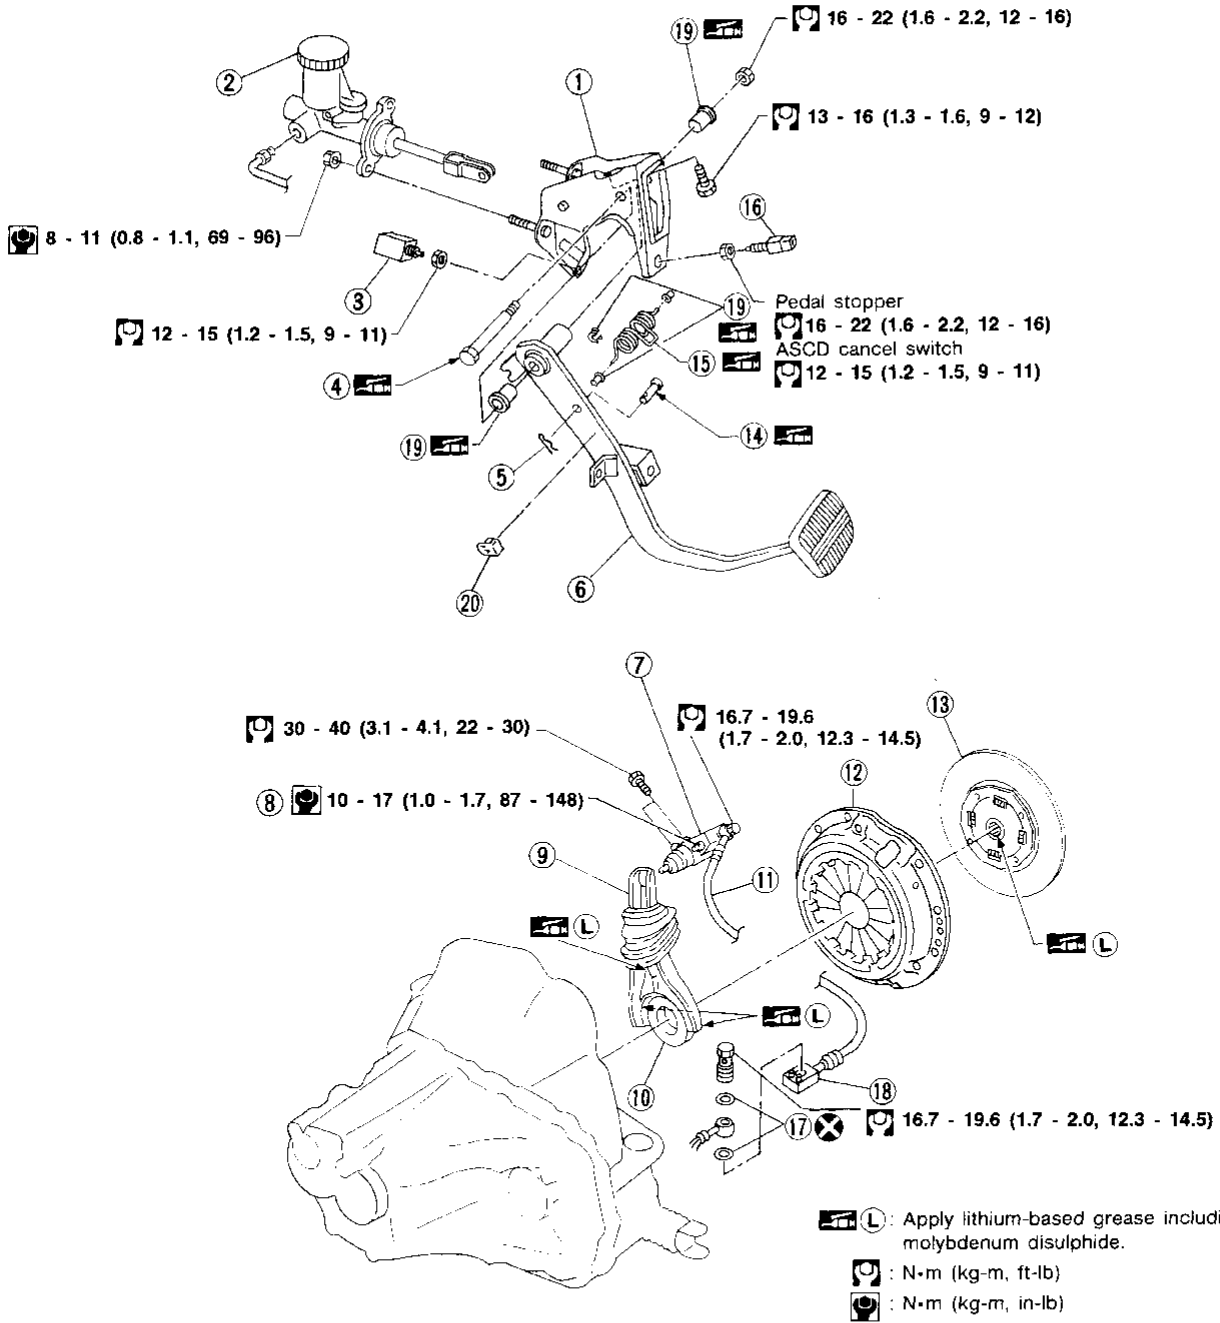


- ① Pedal bracket
- ② Clutch master cylinder
- ③ Clutch interlock switch
- ④ Fulcrum pin
- ⑤ Pin
- ⑥ Clutch pedal
- ⑦ Operating cylinder

- ⑧ Air bleeder screw
- ⑨ Withdrawal lever
- ⑩ Release bearing
- ⑪ Clutch hose
- ⑫ Clutch cover
- ⑬ Clutch disc
- ⑭ Clevis pin

- ⑮ Assist spring
- ⑯ ASCD cancel switch
- ⑰ Washer
- ⑱ Clutch hose connector
- ⑲ Bushing rubber
- ⑳ Stopper rubber


SCL661

GI
MA
EM
LC
EC
FE
CL
MT
AT
FA
RA
BR
ST
RS
BT
HA
EL
IDX

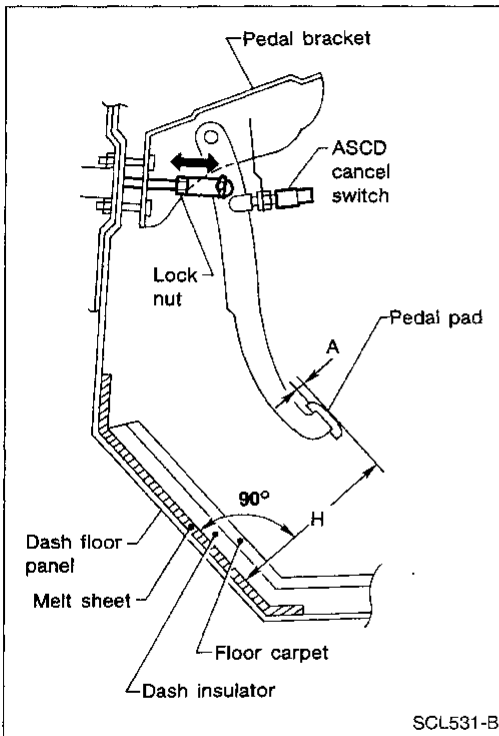


Adjusting Clutch Pedal

1. Adjust pedal height with ASCD cancel switch.
Pedal height "H":
 168 - 175 mm (6.61 - 6.89 in)
 2. Adjust pedal free play with master cylinder push rod. Then tighten lock nut.
Pedal free play "A":
 1.0 - 3.0 mm (0.039 - 0.118 in)
- Pedal free play means the following total, measured at position of pedal pad:**
- Play due to clevis pin and clevis pin hole in clutch pedal.

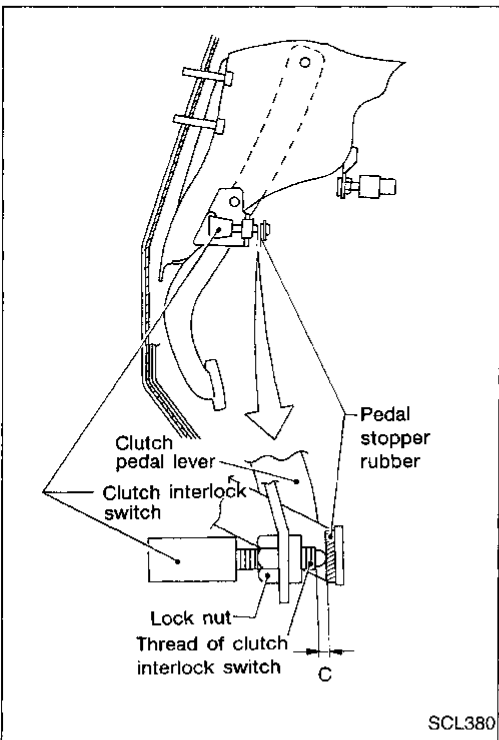

MODELS WITH CLUTCH INTERLOCK SYSTEM

3. Adjust clearance "C" shown in the figure while fully depressing clutch pedal.
Clearance C:
 0.3 - 1.0 mm (0.012 - 0.039 in)

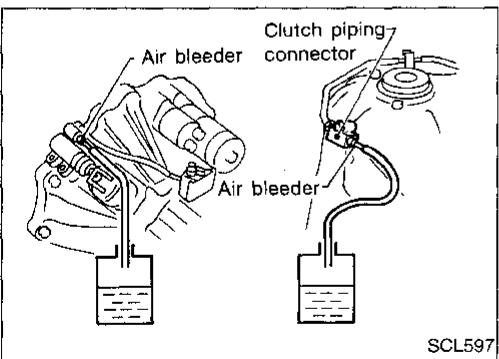

Bleeding Procedure

1. Bleed air from clutch operating cylinder according to the following procedure.
- Carefully monitor fluid level at master cylinder during bleeding operation.**
- a. Top up reservoir with recommended brake fluid.
 - b. Connect a transparent vinyl tube to air bleeder valve.
 - c. Slowly depress clutch pedal all the way several times.
 - d. With clutch pedal depressed, open bleeder valve to release air. Then close bleeder valve.

INSPECTION AND ADJUSTMENT

Bleeding Procedure (Cont'd)

- e. Release clutch pedal and wait for a few seconds.
- f. Repeat steps c through e above until brake fluid flows from air bleeder valve without air bubbles.
2. Bleed air from clutch piping connector according to the above same procedure.
3. Repeat the above bleeding procedures 1 and 2 several times.

GI

MA

EM

LC

EC

FE

CL

MT

AT

FA

RA

BR

ST

RS

BT


HA

EL

IDX

Clutch Master Cylinder

SEC. 305

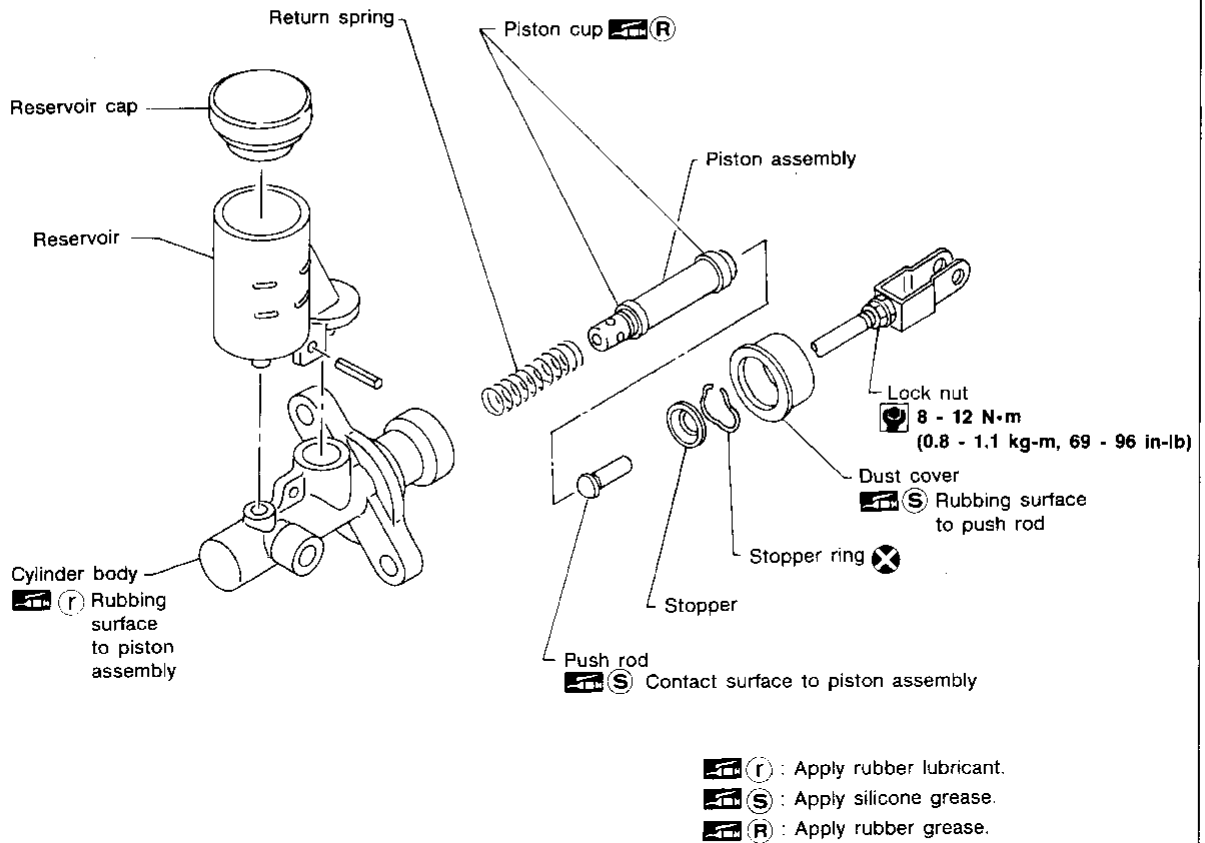

SCL584-B

DISASSEMBLY AND ASSEMBLY

- Push piston into cylinder body with screwdriver when removing and installing valve stopper.

INSPECTION


Check the following items, and replace if necessary.


- Rubbing surface of cylinder and piston, for uneven wear, rust or damage
- Piston with piston cup, for wear or damage
- Return spring, for wear or damage
- Dust cover, for cracks, deformation or damage
- Reservoir, for deformation or damage


Operating Cylinder

SEC. 306

Bleeder screw

 10 - 17 N·m (1.0 - 1.7 kg-m, 87 - 148 in-lb)

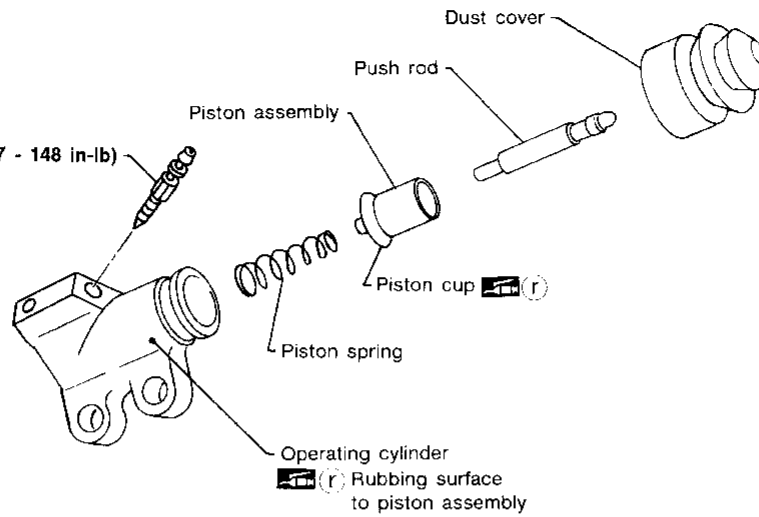

 : Apply rubber lubricant.

SCL366-B

INSPECTION

Check the following items, and replace if necessary.

- Rubbing surface of cylinder and piston, for uneven wear, rust or damage
- Piston with piston cup, for wear or damage
- Piston spring, for wear or damage
- Dust cover, for cracks, deformation or damage

GI

MA

EM

LC

EC

FE

CL

MT

AT

FA

RA

BR

ST

RS

BT


HA

EL

IDX

CLUTCH RELEASE MECHANISM


SEC. 321

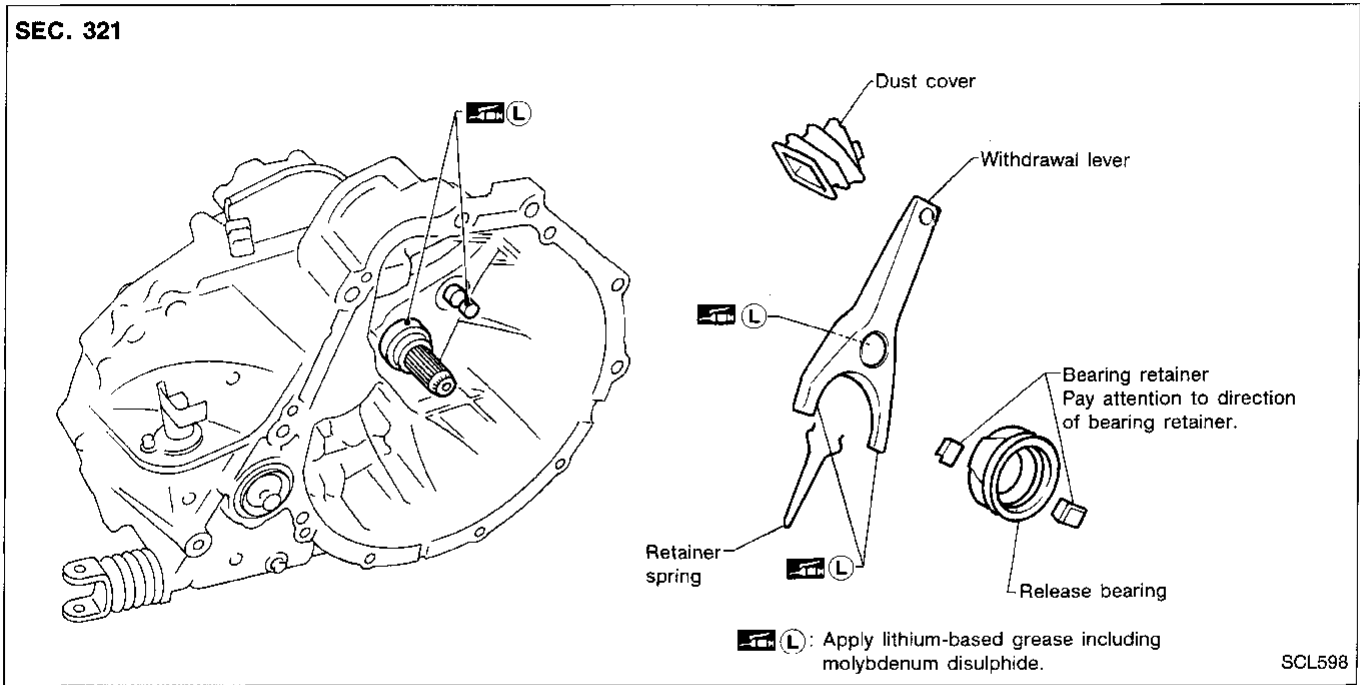

INSPECTION

Check the following items, and replace if necessary.




- Release bearing, to see that it rolls freely and is free from noise, cracks, pitting or wear
- Release sleeve and withdrawal lever rubbing surface, for wear, rust or damage

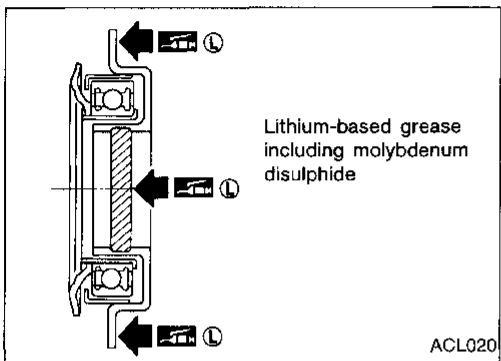

LUBRICATION

- Apply recommended grease to contact surface and rubbing surface.
- **Too much lubricant might damage clutch disc facing.**

CLUTCH DISC AND CLUTCH COVER

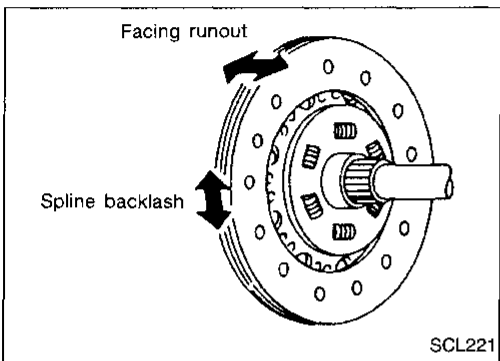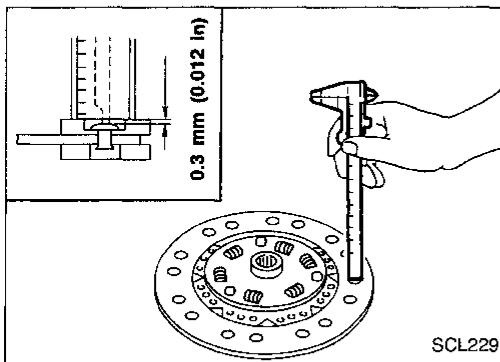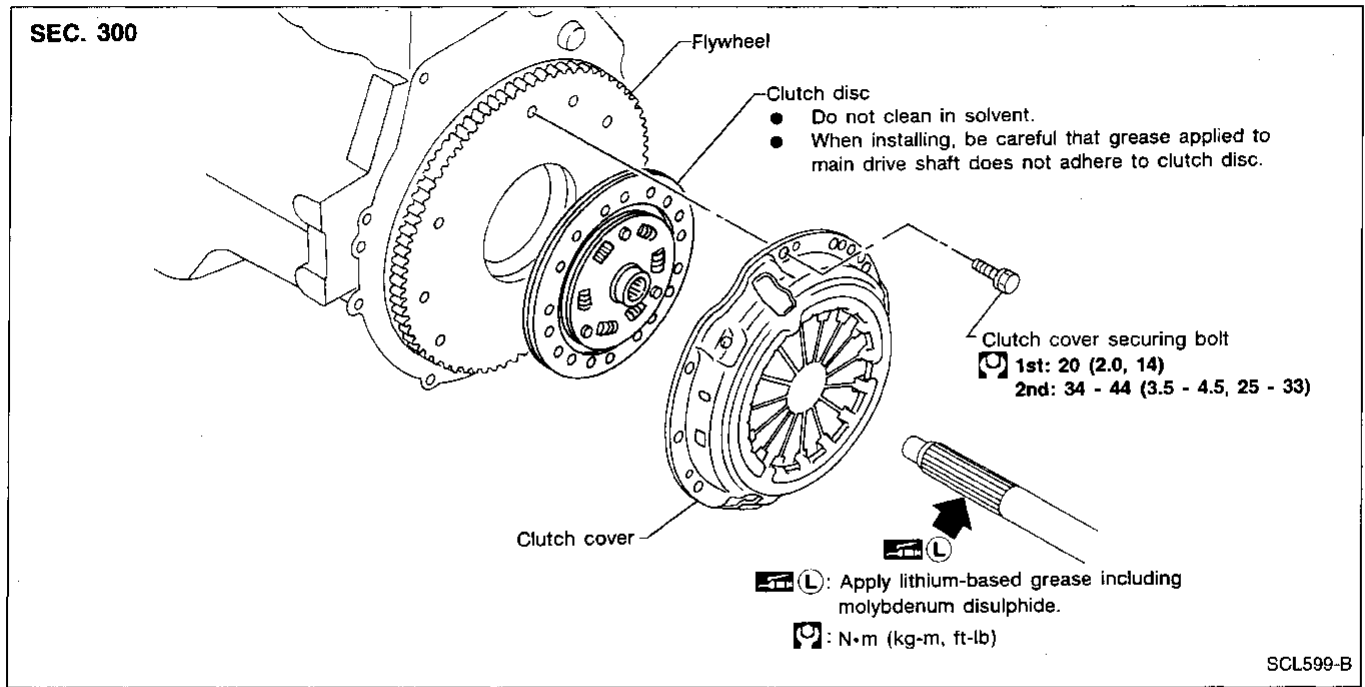

Clutch Disc

INSPECTION

Check the following items, and replace if necessary.

- Clutch disc, for burns, discoloration, oil or grease leakage
- Clutch disc, for wear of facing

**Wear limit of facing surface to rivet head:
0.3 mm (0.012 in)**

- Clutch disc, for backlash of spline and runout of facing
 - Maximum spline backlash (at outer edge of disc):
1.0 mm (0.039 in)**
 - Runout limit:
1.0 mm (0.039 in)**
 - Distance of runout check point (from hub center)
115 mm (4.53 in)**

INSTALLATION

- Apply recommended grease to contact surface of spline portion.
- Too much lubricant might damage clutch facing.**

GI

MA

EM

LC

EC

FE

CL

MT

AT

FA

RA

BR

ST

RS


BT

HA

EL

IDX


CLUTCH DISC AND CLUTCH COVER

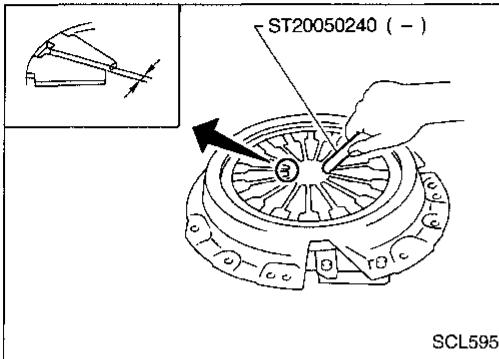

Clutch Cover and Flywheel

INSPECTION AND ADJUSTMENT

- Check clutch cover installed on vehicle for unevenness of diaphragm spring toe height.
Uneven limit:
0.5 mm (0.020 in)
- If out of limit, adjust the height with Tool.

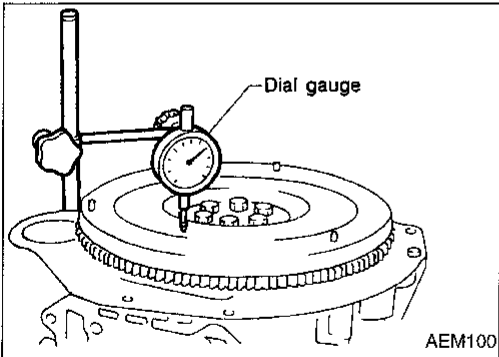

FLYWHEEL INSPECTION


CAUTION:

Do not allow any magnetic materials to contact the ring gear teeth.

- Check contact surface of flywheel for slight burns or discoloration. Repair flywheel with emery paper.
- Check flywheel runout.

Maximum allowable runout:

Refer to EM section ("Inspection", "CYLINDER BLOCK").

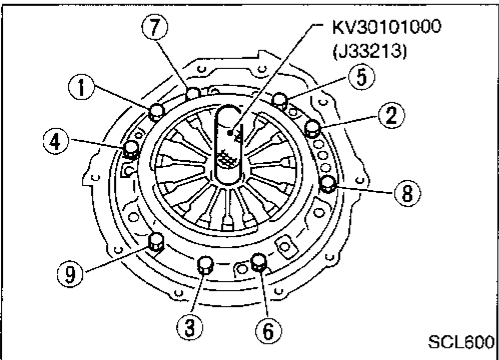

INSTALLATION

- Insert Tool into clutch disc hub when installing clutch cover and disc.
- Be careful not to allow grease to contaminate clutch facing.
- Tighten bolts in numerical order, in two steps.

First step:

: 20 N·m (2.0 kg-m, 14 ft-lb)

Final step:

: 34 - 44 N·m (3.5 - 4.5 kg-m, 25 - 33 ft-lb)

SERVICE DATA AND SPECIFICATIONS (SDS)

General Specifications

CLUTCH CONTROL SYSTEM

Type of clutch control	Hydraulic
------------------------	-----------

CLUTCH MASTER CYLINDER

Inner diameter	mm (in)	15.87 (5/8)
----------------	---------	-------------

CLUTCH OPERATING CYLINDER

Inner diameter	mm (in)	19.05 (3/4)
----------------	---------	-------------

CLUTCH DISC

		Unit: mm (in)
Model	240	
Facing size (Outer dia. x inner dia. x thickness)	240 x 160 x 3.5 (9.45 x 6.30 x 0.138)	
Thickness of disc assembly		
With load	7.6 - 8.0 (0.299 - 0.315) with 5,688 N (580 kg, 1,279 lb)	

CLUTCH COVER

Model	240	
Full-load	N (kg, lb)	5,688 (580, 1,279)

Inspection and Adjustment

CLUTCH PEDAL

		Unit: mm (in)
Pedal height "H" ¹	168 - 175 (6.61 - 6.89)	
Pedal free play "A" (at pedal pad)	1.0 - 3.0 (0.039 - 0.118)	
Clearance "C" (between pedal stopper rubber and clutch interlock switch) ²	0.3 - 1.0 (0.012 - 0.039)	

¹: Measured from surface of melt sheet to surface of pedal pad.

²: Clutch pedal fully depressed.

CLUTCH DISC

		Unit: mm (in)
Model	240	
Wear limit of facing surface to rivet head	0.3 (0.012)	
Facing runout limit	1.0 (0.039)	
Distance of runout check point (from the hub center)	115 (4.53)	
Maximum spline backlash (at outer edge of disc)	1.0 (0.039)	

CLUTCH COVER

		Unit: mm (in)
Model	240	
Uneven limit of diaphragm spring toe height	0.5 (0.020)	