

ALPHABETICAL INDEX

SECTION **IDX**

GI

MA

EM

LC

EC

FE

CL

MT

AT

FA

RA

BR

ST

RS

BT

HA

EL

IDX

ALPHABETICAL INDEX

A

<p>ABS (anti-lock brake system) BR-23</p> <p>ABS actuator BR-26</p> <p>ABS circuit diagram BR-44</p> <p>ABS component parts and connector locations..... BR-41</p> <p>ABS control unit BR-24</p> <p>ABS hydraulic circuit BR-23</p> <p>ABS self-diagnosis BR-32</p> <p>ABS symptom chart BR-34</p> <p>ABS system components BR-24</p> <p>ABS trouble diagnoses BR-31</p> <p>ABS wheel sensors BR-25</p> <p>ABS wiring diagram BR-27</p> <p>A/C air flow..... HA-16</p> <p>A/C circuit diagram (auto A/C) HA-90</p> <p>A/C circuit diagram (manual A/C) HA-38</p> <p>A/C component layout..... HA-15</p> <p>A/C compressor clutch removal and installation..... HA-135</p> <p>A/C compressor description HA-11</p> <p>A/C compressor mounting HA-134</p> <p>A/C compressor precaution HA-5</p> <p>A/C compressor special service tool HA-5</p> <p>A/C control linkage adjustment (auto A/C)..... HA-115</p> <p>A/C control operation (auto A/C)..... HA-60</p> <p>A/C control operation (manual A/C)..... HA-17</p> <p>A/C diagnostic work flow (auto A/C) HA-64</p> <p>A/C diagnostic work flow (manual A/C) HA-19</p> <p>A/C harness layout (auto A/C) HA-88</p> <p>A/C harness layout (manual A/C) HA-36</p> <p>A/C HFC134a (R134a) system precaution HA-3</p> <p>A/C HFC134a (R134a) system service procedure..... HA-129</p> <p>A/C HFC134a (R134a) system service tools HA-6</p> <p>A/C HFC134a system service equipment precaution..... HA-8</p> <p>A/C lubricant (R134a) HA-131</p> <p>A/C operational check (auto A/C) HA-65</p> <p>A/C operational check (manual A/C) HA-20</p> <p>A/C performance chart..... HA-31</p> <p>A/C performance test diagnoses HA-29</p> <p>A/C relay (auto A/C) HA-114</p> <p>A/C relay (manual A/C) HA-57</p> <p>A/C self-dfianoses (auto A/C) HA-70</p> <p>A/C service data specification..... HA-139</p> <p>A/C switch HA-56</p> <p>A/C symptom chart (auto A/C)..... HA-68</p> <p>A/C symptom chart (manual A/C) HA-22</p> <p>A/C system description (auto A/C)..... HA-117</p> <p>A/C trouble diagnoses (auto A/C) HA-62</p> <p>A/C trouble diagnoses (manual A/C) HA-18</p> <p>A/C wiring diagram (auto A/C) HA-91</p> <p>A/C wiring diagram (manual A/C) HA-39</p> <p>A/T control DTC:P0600 EC-256</p>	<p>Absolute pressure sensor..... EC-113</p> <p>Accelerator control system FE-2</p> <p>Accelerator wire adjustment FE-2</p> <p>Air bag RS-5</p> <p>Air bag disposal RS-13</p> <p>Air bag module RS-8</p> <p>Air bag precautions GI-2</p> <p>Air bag removal and installation RS-8</p> <p>Air bleeding for brake system BR-5</p> <p>Air cleaner filter replacement..... MA-13</p> <p>Air conditioner cut control EC-19</p> <p>Air flow meter - See Mass air flow sensor..... EC-108</p> <p>Air mix door control linkage adjustment (auto A/C)..... HA-115</p> <p>Air mix door control linkage adjustment (manual A/C)..... HA-58</p> <p>Air mix. door motor HA-122</p> <p>Air spoiler, rear - See Rear air spoiler..... BT-19</p> <p>Alternator EL-36</p> <p>Ambient sensor..... HA-119</p> <p>Angular tightening application EM-2</p> <p>Anti-freeze coolant mixture ratio.....MA-9</p> <p>ASCD (automatic speed control device) EL-128</p> <p>AT control unit AT-102</p> <p>AT diagnosis communication line..... EC-318</p> <p>AT fluid temperature sensor..... AT-106</p> <p>AT removal and installation..... AT-127</p> <p>AT self-diagnoses..... AT-46</p> <p>AT shift lock system..... AT-117</p> <p>AT trouble diagnoses AT-15</p> <p>Audio..... EL-104</p> <p>Audio and A/C control removal and installation - See Instrument panel BT-12</p> <p>Automatic transaxle number GI-35</p> <p>Automatic transmission fluid replacement..... MA-18</p> <p>Auxiliary air control (AAC)..... EC-246</p>
--	--

B

<p>Back-up lamp switch (MT) -See reverse lamp switch..... MT-6</p> <p>Basic inspection EC-70</p> <p>Battery..... EL-21</p> <p>Baulk ring (MT) MT-10</p> <p>Belt inspection (drive belt) MA-10</p> <p>Bi-level door control linkage adjustment (auto A/C)..... HA-116</p> <p>Bi-level door control linkage adjustment (manual A/C)..... HA-58</p> <p>Blower motor (auto A/C)..... HA-114</p> <p>Blower motor (manual A/C)..... HA-56</p> <p>Blower resistor HA-56</p> <p>Board-on lift GI-37</p> <p>Body alignment BT-33</p> <p>Brake booster..... BR-9</p> <p>Brake control valve (Proportioning valve) BR-4</p> <p>Brake fluid change BR-5</p>

ALPHABETICAL INDEX

Brake fluid level	MA-19
Brake fluid level and line check	BR-5
Brake hydraulic line	BR-3
Brake inspection	MA-19
Brake lines and cables inspection	MA-19
Brake master cylinder	BR-7
Brake pedal	BR-6
Bumper, front - See Front bumper	BT-6
Bumper, rear - See Rear bumper	BT-8

C

Camshaft inspection	EM-37
Camshaft position sensor (PHASE)	EC-197
Camshaft position sensor inspection	EC-200
Charging system	EL-32
Cigarette lighter	EL-98
Clearance lamp	EL-53
Clock	EL-98
Closed loop control	EC-144
Closed throttle position switch	EC-252
Clutch cover	CL-9
Clutch disc	CL-9
Clutch fluid level	MA-17
Clutch master cylinder	CL-6
Clutch operating cylinder	CL-7
Clutch pedal	CL-4
Clutch pedal free play	CL-4
Clutch pedal height	CL-4
Clutch release bearing	CL-8
Clutch withdrawal lever	CL-8
Coil spring (front)	FA-21
Coil spring (rear)	RA-10
Combination lamp, rear, removal and installation	BT-19
Combination meter	EL-79
Combination meter removal and instal- lation - See Instrument panel	BT-12
Combination switch	EL-37
Compression pressure	EM-10
Compressor clutch removal and installation	HA-135
Compressor description	HA-11
Compressor mounting	HA-134
Compressor precaution	HA-5
Compressor special service tool	HA-5
Connecting rod	EM-56
Connecting rod bearing clearance	EM-60
Connecting rod bushing clearance	EM-61
Console box - See Instrument panel	BT-12
CONSULT for ABS	BR-35
Consult for ECCS	EC-51
CONSULT general information	GI-32
Control lever (MT)	MT-8
Control valve (AT)	AT-153
Converter housing installation	AT-128
Coolant replacement	MA-11
Cooling circuit (engine)	LC-7
Cooling fan control	EC-321
Cooling fan control system	LC-14

Cooling fan motor inspection	EC-332
Cooling fan relay inspection	EC-332
Cornering lamp	EL-66
Coupling sleeve (MT)	MT-10
Crankshaft assembly	EM-62
Crankshaft bearing clearance	EM-59
Crankshaft inspection	EM-58
Crankshaft position sensor (POS)	EC-192
Crankshaft position sensor (POS) chipping	EC-287
Crankshaft position sensor (REF)	EC-283
Cylinder block	EM-54
Cylinder head	EM-34
Cylinder head bolt tightening	EM-43

D

Detonation sensor - See Knock sensor	EC-189
Device (FICD) solenoid valve	EC-350
Diagnostic trouble code (DTC) for ECCS OBD system	EC-39
Differential gear (FF AT) (RE4F04A)	AT-196
Differential gear (FF AT) (RE4F04V)	AT-200
Differential gear (FF MT) (RS5F50A and RS5F50V)	MT-24
Differential gear (FF MT)	MT-10
Dimensions	GI-36
Direct ignition system	EC-30
Door lock	BT-10
Door mirror	BT-32
Door trim	BT-16
Door, front - See Front door	BT-10
Door, rear - See Rear door	BT-11
Drive plate runout	EM-61
Drive shaft (front)	FA-12
Dropping resistor (AT)	AT-108

E

ECCS circuit diagram	EC-8
ECCS component parts location	EC-10
ECCS on-board diagnostic system	EC-39
ECCS system diagram and chart	EC-9
ECCS trouble diagnoses	EC-66
ECM input/output signal inspection	EC-96
EGR control (EGRC) - BPT valve	EC-210
EGR control (EGRC) - solenoid valve	EC-292
EGR temperature sensor	EC-295
EGR temperature sensor inspection	EC-299
EGR valve inspection	EC-209
EGRC - BPT valve inspection	EC-211
Electrical load signal circuit	EC-354
Electronic ignition (EI) system	EC-18
Engine compartment	BT-33
Engine control module (ECM)	EC-259
Engine coolant temperature sensor (ECTS)	EC-125
Engine coolant temperature sensor	

ALPHABETICAL INDEX

(ECTS) P0115, DTC0103.....	EC-125
Engine coolant temperature sensor (ECTS) P0115, DTC0103 inspection	EC-128
Engine coolant temperature sensor (ECTS) P0125, DTC0908.....	EC-134
Engine coolant temperature sensor (ECTS) P0125, DTC0908 inspection	EC-138
Engine mounting control (Front)	EC-343
Engine oil filter replacement.....	MA-14
Engine oil precautions.....	GI-4
Engine oil replacement.....	MA-14
Engine outer component parts	EM-6
Engine removal.....	EM-51
Engine room - See Engine compartment	BT-33
Engine serial number	GI-35
EVAP canister	EC-22
EVAP canister control	EC-22
EVAP canister inspection.....	EC-22
EVAP canister purge control solenoid valve	EC-225
EVAP canister purge control valve	EC-225
EVAP canister purge control valve inspection.....	EC-305
EVAP canister vent control valve.....	EC-233
EVAP control system (small leak) diagnosis.....	EC-215
EVAP control system purge flow moni- toring diagnosis.....	EC-311
EVAP vapor purge lines inspection	MA-16
Evaporative emission (EVAP) system.....	EC-22
Exhaust gas recirculation (EGR) system	EC-201
Exhaust system	FE-4
Exhaust system inspection	MA-17
Exterior.....	BT-19
Exterior lamp.....	EL-52

F

Fan control amp.....	HA-128
Fan switch.....	HA-56
Fast idle cam (FIC) inspection and adjustment	EC-29
Final drive (FF AT) (RE4F04A)	AT-196
Final drive (FF AT) (RE4F04V)	AT-200
Final drive (FF MT) (RS5F50A and RS5F50V).....	MT-24
Final drive (FF MT)	MT-10
Finisher, interior - See Trim	BT-15
Floor trim.....	BT-15
Fluid temperature sensor (AT)	AT-106
Flywheel runout	EM-61
Fork rod (MT)	MT-11
Forward clutch.....	AT-174
Freeze frame data.....	EC-41
Front axle.....	FA-8
Front bumper	BT-6
Front disc brake.....	BR-11
Front door	BT-10

Front engine mounting control.....	EC-343
Front fog lamp	EL-55
Front fog lamp removal and installation	BT-6
Front heated oxygen sensor (HO2S) (Left bank)	EC-154
Front heated oxygen sensor (HO2S) (Right bank).....	EC-139
Front heated oxygen sensor (HO2S).....	EC-139
Front heated oxygen sensor (HO2S) monitor.....	EC-42, 45
Front heated oxygen sensor heater (Left bank)	EC-159
Front heated oxygen sensor heater (Right bank).....	EC-146
Front seat.....	BT-24
Front seat belt	RS-3
Front suspension	FA-20
Fuel cut control (at no load & high engine speed).....	EC-20
Fuel filler lid	BT-8
Fuel filter replacement.....	MA-12
Fuel gauge.....	EL-80
Fuel injection system (Left bank).....	EC-172, 177
Fuel injection system (Right bank)	EC-162, 167
Fuel line inspection.....	MA-12
Fuel precautions.....	GI-5
Fuel pressure check.....	EC-27
Fuel pressure release	EC-27
Fuel pump control	EC-339
Fuel pump control module	EC-271
Fuel pump inspection.....	EC-342
Fuel pump relay inspection.....	EC-342
Fuel system	FE-3
Fuel tank vacuum relief valve inspection.....	EC-23
Fuse	EL-20
Fusible link.....	EL-20

G

Gauges	EL-78
Gears (MT).....	MT-10
Generic scan tool (GST)	EC-64

H

Harness connector.....	EL-5
Harness layout.....	EL-284
Hazard warning lamp.....	EL-58
Headlamp.....	EL-40
Headlamp removal and installation	BT-6
Headlining - See Roof trim	BT-17
Heated oxygen sensor (HO2S) (Front) (Left bank)	EC-154
Heated oxygen sensor (HO2S) (Front) (Right bank).....	EC-139
Heated oxygen sensor (HO2S) (front).....	EC-139
Heated oxygen sensor (HO2S) heater	

ALPHABETICAL INDEX

(rear).....	EC-153
Heated oxygen sensor (rear).....	EC-149
Heated oxygen sensor heater (Front)(Left bank).....	EC-159
Heated oxygen sensor heater (Front)(Right bank).....	EC-146
Heated seat.....	BT-25
Height (Dimensions).....	GI-36
HFC134a (R134a) system precaution.....	HA-3
HFC134a (R134a) system service procedure.....	HA-129
HFC134a (R134a) system service tools.....	HA-6
HFC134a system service equipment precaution.....	HA-8
High clutch.....	AT-170
Hood.....	BT-6
Horn.....	EL-98
How to erase DTC for ECCS OBD system.....	EC-39
How to follow flow chart in trouble diagnoses.....	GI-29
How to perform efficient diagnosis for an electrical incident.....	GI-18
How to read wiring diagrams.....	GI-8
How to use this manual.....	GI-6

I

IACV - FICD solenoid valve inspection.....	EC-353
IACV-AAC valve inspection.....	EC-251
Identification plate.....	GI-35
Idle air control valve (IACV).....	EC-246
Idle mixture ratio inspection.....	EC-32
Idle speed inspection.....	EC-32
Ignition coil inspection.....	EC-282
Ignition timing inspection.....	EC-32
Illumination.....	EL-71
Illumination-IVMS.....	EL-268
In vehicle sensor.....	HA-118
Inhibitor switch.....	AT-107
Injector inspection.....	EC-336
Injector removal and installation.....	EC-28
Input shaft.....	MT-10, 15
Instrument panel.....	BT-12
Intake air temperature sensor.....	EC-120
Intake air temperature sensor inspection.....	EC-124
Intake door control linkage adjustment (auto A/C).....	HA-116
Intake door control linkage adjustment (manual A/C).....	HA-58
Intake door motor.....	HA-126
Intake sensor.....	HA-120
Interior.....	BT-15
Interior lamp.....	EL-70
Interior lamp on-off control-IVMS.....	EL-271
IVMS (In-Vehicle Multiplexing System).....	EL-153

J

Jacking points.....	GI-38
---------------------	-------

K

Knock sensor (KS).....	EC-189
Knock sensor (KS) inspection.....	EC-191

L

Length (Dimensions).....	GI-36
License lamp.....	EL-53
Lifting points.....	GI-39
Line pressure solenoid valve.....	AT-106
Line pressure test (AT).....	AT-112
Liquid gasket application.....	EM-2
Location of electrical units.....	EL-281
Lock, door - See Door lock.....	BT-10
Low and reverse brake.....	AT-180
Lubricant (R134a) A/C.....	HA-131
Lubrication circuit (engine).....	LC-3
Lubrication-locks, hinges and hood latches.....	MA-21

M

Magnet clutch.....	HA-135
Main drive gear (MT).....	MT-10
Mainshaft (MT).....	MT-10, 20
Maintenance (engine).....	MA-10
Maintenance.....	MA-1
Maintenance general.....	MA-3
Maintenance periodic.....	MA-5
Maintenance schedule (1).....	MA-6
Maintenance schedule (2).....	MA-7
Malfunction indicator lamp (MIL).....	EC-41
Manual transaxle number.....	GI-35
Manual transmission oil replacement.....	MA-17
MAP/BARO switch solenoid valve.....	EC-265
Mass air flow sensor (MAFS).....	EC-108
Mass air flow sensor inspection.....	EC-112
Master cylinder (brake).....	BR-7
Master cylinder (clutch).....	CL-6
Meter and gauges.....	EL-78
MIL & Data link connectors circuit.....	EC-357
Mirror, door - See Door mirror.....	BT-32
Misfire.....	EC-185
Mode door control linkage adjustment (auto A/C).....	HA-115
Mode door control linkage adjustment (manual A/C).....	HA-58
Mode door motor.....	HA-124
Model variation.....	GI-33
Molding - See Exterior.....	BT-19

ALPHABETICAL INDEX

MT removal and installation.....	MT-6
Mud guard - See Exterior.....	BT-19
Multi-remote control system-IVMS.....	EL-215
Multipoint fuel injection (MFI) system.....	EC-15
Multipoint fuel injection precautions.....	GI-4

N

Neutral position switch (MT).....	MT-6
-----------------------------------	------

O

Oil pan (engine).....	EM-11
Oil pressure (engine).....	LC-4
Oil pump (AT).....	AT-149
Oil pump (engine).....	LC-4
Oil pump regulator valve (engine).....	LC-6
Oil seal replacement (engine).....	EM-31
Operating cylinder (clutch).....	CL-7
Overdrive control switch.....	AT-107
Overrun clutch.....	AT-174
Overrun clutch solenoid valve.....	AT-106

P

Park/Neutral position switch.....	EC-261
Parking brake control.....	BR-21
PCV (positive crankcase ventilation) inspection.....	EC-26
Piston assembly.....	EM-62
Piston pin inspection.....	EM-55
Piston ring inspection.....	EM-56
Piston to bore clearance.....	EM-57
Power door lock-IVMS.....	EL-197
Power steering fluid level.....	MA-20, ST-5
Power steering gear.....	ST-12
Power steering hydraulic pressure.....	ST-7
Power steering oil pressure switch.....	EC-346
Power steering oil pressure switch inspection.....	EC-349
Power steering oil pump.....	ST-22
Power steering system bleeding.....	ST-5
Power supply routing.....	EL-7
Power transistor & ignition coil.....	EC-277
Power transistor inspection.....	EC-282
Power window-IVMS.....	EL-185
Precautions (General).....	GI-2
Pressure plate - See Clutch cover.....	CL-9
Pressure test (AT).....	AT-112

R

Radiator.....	LC-14
Rear air spoiler.....	BT-19
Rear axle.....	RA-6

Rear bumper.....	BT-8
Rear disc brake.....	BR-15
Rear door.....	BT-11
Rear heated oxygen sensor (HO2S).....	EC-149
Rear heated oxygen sensor (HO2S) heater.....	EC-153
Rear seat.....	BT-26
Rear seat belt.....	RS-4
Rear suspension.....	RA-9
Rear window.....	BT-31
Refrigerant connection precaution.....	HA-4
Refrigerant general precaution.....	HA-3
Refrigerant lines.....	HA-133
Release bearing (clutch).....	CL-8
Reverse clutch.....	AT-167
Reverse gear (MT).....	MT-10
Reverse idler shaft (MT).....	MT-10
Reverse lamp switch.....	MT-6
Revolution sensor (AT).....	AT-108
Road wheel size.....	GI-36
Roof trim.....	BT-17

S

SAE J1930 terminology list.....	GI-42
Seal - See Exterior.....	BT-19
Seat belt inspection.....	MA-21
Seat belt, front - See Front seat belt.....	RS-3
Seat belt, rear - See Rear seat belt.....	RS-4
Seat, front - See Front seat.....	BT-24
Seat, rear - See Rear seat.....	BT-26
Self-diagnostic results.....	EC-42
Shift control (MT).....	MT-11
Shift fork (MT).....	MT-11
Shift lock system.....	AT-117
Shift schedule.....	AT-36
Shift solenoid valve (AT).....	AT-106
Shock absorber (rear).....	RA-10
Side trim.....	BT-15
Spark plug replacement.....	MA-15
Speedometer.....	EL-80
Spiral cable.....	RS-8
Spot lamp.....	EL-70
Spring (Wheelarch) height.....	FA-5
SRS - See Supplemental Restraint System.....	RS-5
SRS Trouble diagnoses.....	RS-17
SRS Wiring diagram.....	RS-20
Stabilizer bar (front).....	FA-22
Stall test (AT).....	AT-109
Standardized relay.....	EL-6
Starter.....	EL-31
Starting system.....	EL-25
Steering gear and linkage inspection.....	MA-20
Steering linkage.....	ST-12
Steering switch.....	EL-39
Steering wheel and column.....	ST-8
Steering wheel play.....	ST-4
Steering wheel turning force.....	ST-6
Step lamp-IVMS.....	EL-277

ALPHABETICAL INDEX

Stop lamp.....	EL-64
Striking rod (MT).....	MT-11
Strut (front).....	FA-21
Sun roof.....	BT-27
Sunload sensor.....	HA-119
Supplemental Restraint System.....	RS-5
Symbols and abbreviations.....	GI-7
Synchronizer (MT).....	MT-10

T

Tachometer.....	EL-80
Tail lamp.....	EL-53
Tank fuel temperature sensor.....	EC-182
Telephone.....	EL-121
Theft warning system-IVMS.....	EL-245
Thermo control amp.....	HA-57
Thermostat.....	LC-13
Three way catalyst.....	EC-212
Three way catalyst function (Left bank).....	EC-212
Three way catalyst function (Right bank).....	EC-212
Three way catalyst precautions.....	GI-4
Throttle position sensor (TPS).....	EC-129
Throttle position sensor adjustment.....	EC-70
Throttle position sensor inspection.....	EC-70, 133
Throttle position switch.....	AT-108
Throwout bearing - See Clutch release bearing.....	CL-8
Tie-rod.....	ST-16
Tie-rod ball joints.....	ST-16
Tightening torque of standard bolts.....	GI-41
Time control system-IVMS.....	EL-231
Timing chain.....	EM-17
Tire rotation.....	MA-19
Tire size.....	GI-36
Torque converter clutch solenoid valve.....	AT-106
Torque converter installation.....	AT-127
Tow truck towing.....	GI-40
Transmission case (MT).....	MT-9
Transverse link (front).....	FA-23
Tread-FR&RR (Dimensions).....	GI-36
Trim.....	BT-15
Triple pressure switch (auto A/C).....	HA-114
Triple pressure switch (manual A/C).....	HA-57
Triple pressure switch.....	HA-10
Trunk lid.....	BT-8
Trunk lid opener - See Trunk lid.....	BT-8
Trunk room lamp.....	EL-70
Trunk room trim.....	BT-18
Turn signal lamp.....	EL-58

Two trip detection logic.....	EC-39
-------------------------------	-------

U

Under body.....	BT-35
-----------------	-------

V

Vacuum cut valve.....	EC-304
Vacuum cut valve bypass valve.....	EC-300
Vacuum hose (brake system).....	BR-10
Vacuum hose drawing (ECCS).....	EC-13
Valve clearance.....	EM-47
Valve guide inspection.....	EM-38
Valve seat inspection.....	EM-39
Valve spring inspection.....	EM-40
Vehicle identification number.....	GI-34
Vehicle Recovery. (Freeing a stuck vehicle).....	GI-40
Vehicle speed sensor (VSS).....	EC-242
Viscous coupling (FF AT) (RE4F04V).....	AT-200
Viscous coupling (FF MT) (RS5F50V).....	MT-6
Viscous coupling (FF MT).....	MT-10

W

Warning lamps.....	EL-84
Water pump.....	LC-8
Water temperature gauge.....	EL-80
Weatherstrip - See Exterior.....	BT-19
Wheel alignment (front).....	FA-6
Wheel alignment (rear).....	RA-5
Wheel balance.....	MA-18
Wheel bearing (front axle).....	FA-6
Wheel bearing (rear).....	RA-4
Wheel hub (rear).....	RA-6
Wheel hub and steering knuckle.....	FA-8
Wheel sensors (ABS).....	BR-25
Wheelarch height.....	FA-5
Wheelbase (Dimensions).....	GI-36
Wide open & closed throttle position (CTP) switch.....	EC-129
Width (Dimensions).....	GI-36
Windshield.....	BT-31
Wiper and washer.....	EL-91
Withdrawal lever (clutch).....	CL-8
Wrist pin - See Piston pin inspection.....	EM-55

GI

MA

EM

LC

EC

FE

CL

MT

AT

FA

RA

BR

ST

RS

BT

HA

EL

IDX