
ALPHABETICAL INDEX

A

A-BAG BRANCH LINE CIRCUIT LAN-73, LAN-104,
LAN-122, LAN-141, LAN-165, LAN-198,
LAN-233

A/B WARNING LAMP IS OFF, PASS A/B INDCTR
LAMP TURNS ON INTERMIT SRC-145

A/C AUTO AMP. HAC-30, HAC-102, ST-9

A/C SWITCH ASSEMBLY HAC-100

A/C SWITCH ASSEMBLY SIGNAL CIRCUIT
HAC-86

ABBREVIATIONS GI-14

ABS ACTUATOR AND ELECTRIC UNIT
(CONTROL UNIT) BRC-46, BRC-168, BRC-221,
BRC-366

ABS BRANCH LINE CIRCUIT LAN-66, LAN-97,
LAN-115, LAN-134, LAN-158, LAN-191,
LAN-226

ABS WARNING LAMP BRC-151, BRC-344

ACCELERATOR CONTROL SYSTEM ACC-3

ACCELERATOR PEDAL RELEASED POSITION
LEARNING EC-158

ACTION TEST BRC-263, CCS-66, DAS-143

ACTIVE NOISE CONTROL MICROPHONE AV-200

ADAS CONTROL UNIT BRC-229, CCS-35, DAS-20,
DAS-80, DAS-112

ADDITIONAL SERVICE WHEN REMOVING
BATTERY NEGATIVE TERMINAL PWC-28

ADDITIONAL SERVICE WHEN REPLACING ABS
ACTUATOR AND ELECTRIC UNIT (CONTROL
UNIT) BRC-63, BRC-246

ADDITIONAL SERVICE WHEN REPLACING ADAS
CONTROL UNIT DAS-36

ADDITIONAL SERVICE WHEN REPLACING
AROUND VIEW MONITOR CONTROL UNIT ..
AV-238

ADDITIONAL SERVICE WHEN REPLACING AV
CONTROL UNIT AV-89

ADDITIONAL SERVICE WHEN REPLACING BCM
DLK-71

ADDITIONAL SERVICE WHEN REPLACING
CHASSIS CONTROL MODULE DAS-217

ADDITIONAL SERVICE WHEN REPLACING
CONTROL UNIT PWC-29, SEC-54

ADDITIONAL SERVICE WHEN REPLACING
CONTROL UNIT (A/C AUTO AMP.) HAC-48

ADDITIONAL SERVICE WHEN REPLACING ECM
EC-156

ADDITIONAL SERVICE WHEN REPLACING ICC
SENSOR BRC-247, CCS-56, DAS-142

ADDITIONAL SERVICE WHEN REPLACING TCM
TM-76

ADDITIONAL SERVICE WHEN REPLACING TCM
AND TRANSAXLE ASSEMBLY TM-79

ADDITIONAL SERVICE WHEN REPLACING TCU
AV-91

ADDITIONAL SERVICE WHEN REPLACING
TRANSAXLE ASSEMBLY TM-77

ADJUSTMENT OF STEERING ANGLE SENSOR
NEUTRAL POSITION BRC-64, BRC-248

ADP BRANCH LINE CIRCUIT ... LAN-79, LAN-203,
LAN-239

ADP STEERING SWITCH ADP-134

ADP SYSTEM SYMPTOMS ADP-128

AIR BREATHER HOSE TM-193

AIR CLEANER AND AIR DUCT EM-26

AIR CLEANER FILTER EM-19

AMBIENT SENSOR HAC-103

ANTENNA AMP. AV-197

ANTI-PINCH FUNCTION DOES NOT OPERATE ..
PWC-60, RF-41

AROUND VIEW MONITOR CONTROL UNIT
AV-225, AV-273

AROUND VIEW MONITOR SYSTEM AV-211,
AV-231, AV-271

ASCD INDICATOR EC-534

AUDIO SYSTEM AV-22

AUTO LIGHT SYSTEM EXL-38, EXL-158

AUTO OPERATION DOES NOT OPERATE . RF-40

AUTO OPERATION DOES NOT OPERATE BUT
MANUAL OPERATE NORMALLY PWC-59

AUTOMATIC AIR CONDITIONING SYSTEM
HAC-36

AUTOMATIC DRIVE POSITIONER CONTROL UNIT
ADP-34, ADP-131

AUTOMATIC DRIVE POSITIONER SYSTEM
ADP-38

AUTOMATIC SPEED CONTROL DEVICE (ASCD)
CCS-141

AUXILIARY INPUT JACK AV-173

AV BRANCH LINE CIRCUIT LAN-74, LAN-105,
LAN-123, LAN-142, LAN-166, LAN-199,
LAN-234

AV CONTROL UNIT AV-44, AV-183, AV-293, AV-306

AVM BRANCH LINE CIRCUIT ... LAN-83, LAN-207,
LAN-243

B

B TERMINAL CIRCUIT CHG-22, STR-16

B0001 DRIVER AIRBAG MODULE SRC-44

B0010, B0011 PASSENGER AIRBAG MODULE
SRC-48

B0020 SIDE AIRBAG MODULE LH SRC-51

B0021 SIDE CURTAIN AIR BAG MODULE LH
SRC-57

B0028 SIDE AIRBAG MODULE RH SRC-54

B0029 SIDE CURTAIN AIR BAG MODULE RH
SRC-60

B0091 FRONT SIDE AIR BAG SATELLITE SENSOR LH.....	SRC-67	B2128 UART COMMUNICATION LINE.....	ADP-66
B0092 REAR SIDE AIR BAG SATELLITE SENSOR LH.....	SRC-77	B2130 EEPROM.....	ADP-68
B0093 FRONT DOOR SATELLITE SENSOR LH....	SRC-86	B2192 ID DISCORD, IMMU-ECM	SEC-65
B0094 CRASH ZONE SENSOR	SRC-63	B2193 CHAIN OF ECM-IMMU	SEC-67
B0096 FRONT SIDE AIR BAG SATELLITE SENSOR RH	SRC-72	B2195 ANTI-SCANNING	SEC-69
B0097 REAR SIDE AIR BAG SATELLITE SENSOR RH	SRC-81	B2196 DONGLE UNIT	SEC-71
B0098 FRONT DOOR SATELLITE SENSOR RH...	SRC-90	B2198 NATS ANTENNA AMP.....	SEC-73
B00A0 OCCUPANT CLASSIFICATION SYSTEM CONTROL UNIT	SRC-95	B219B SVT ID ERROR	BCS-70
B00D5 PASSENGER AIR BAG OFF INDICATOR ..	SRC-102	B2205 VEHICLE SPEED.....	MWI-47
B1400, B1401, B1402, B1403, B1404, B1405 AIR BAG DIAGNOSIS SENSOR UNIT	SRC-130	B2267 ENGINE SPEED	MWI-48
B1406, B1407, B1408, B1409, B1410 AIR BAG DIAGNOSIS SENSOR UNIT	SRC-132	B2268 WATER TEMP	MWI-49
B1411, B1412, B1413, B1414, B1415 AIR BAG DIAGNOSIS SENSOR UNIT	SRC-134	B2555 STOP LAMP	SEC-75
B1416, B1417, B1418, B1419, B1420 AIR BAG DIAGNOSIS SENSOR UNIT	SRC-136	B2556 PUSH-BUTTON IGNITION SWITCH.....	SEC-79
B1427 CONFIG SETTING.....	SRC-129	B2557 VEHICLE SPEED.....	SEC-82
B1428 SEAT BELT BUCKLE SWITCH LH.....	SRC-105	B2560 STARTER CONTROL RELAY	SEC-84
B1429 SEAT BELT BUCKLE SWITCH RH.....	SRC-108	B2562 LOW VOLTAGE.....	BCS-72
B142A IGNITION VOLTAGE	SRC-126	B2578, B2579 IN-VEHICLE SENSOR.....	HAC-56
B142X COLLISION DETECTION.....	SRC-138	B257B, B257C AMBIENT SENSOR.....	HAC-59
B1430 SEAT BELT PRE-TENSIONER.....	SRC-111	B2581, B2582 INTAKE SENSOR	HAC-62
B1431 SEAT BELT PRE-TENSIONER.....	SRC-114	B259A ROOM LAMP FUSE	BCS-73
B1432 LAP PRE-TENSIONER.....	SRC-117	B2601 SHIFT POSITION	SEC-86
B1433 LAP PRE-TENSIONER.....	SRC-120	B2602 SHIFT POSITION.....	SEC-89
B1436 ACTIVE VENT.....	SRC-123	B2603 SHIFT POSITION.....	SEC-92
B14XX AIR BAG DIAGNOSIS SENSOR UNIT	SRC-140	B2604 SHIFT POSITION.....	SEC-96
B1F01 ENGINE SPEED SIGNAL.....	AV-96	B2605 SHIFT POSITION.....	SEC-99
B1F02 DOOR STATUS SIGNAL	AV-98	B2608 STARTER RELAY	SEC-102
B1F0B, B1F0C, B1F0D, B1F0E ANC MIC1 CIRCUIT	AV-100	B260A IGNITION RELAY	PCS-62
B1F10, B1F11, B1F12, B1F13 ANC MIC2 CIRCUIT	AV-103	B260F ENGINE STATUS.....	SEC-110
B1F15, B1F16, B1F17, B1F18 ANC MIC3 CIRCUIT	AV-106	B2614 ACC RELAY CIRCUIT.....	PCS-64
B2098 IGNITION RELAY ON STUCK	PCS-31	B2615 FRONT BLOWER MOTOR RELAY CIRCUIT	PCS-67
B2099 IGNITION RELAY OFF STUCK	PCS-33	B2616 IGNITION RELAY CIRCUIT	PCS-70
B210B STARTER CONTROL RELAY	SEC-112	B2618 BCM	PCS-73
B210C STARTER CONTROL RELAY	SEC-113	B261A PUSH-BUTTON IGNITION SWITCH.....	PCS-74
B210D STARTER RELAY.....	SEC-114	B261B REMOTE ENGINE START	DLK-74
B210E STARTER RELAY	SEC-116	B261E VEHICLE TYPE	SEC-104
B210F TRANSMISSION RANGE SWITCH.....	SEC-118	B2622 INSIDE ANTENNA	DLK-75
B2110 TRANSMISSION RANGE SWITCH.....	SEC-121	B2623 INSIDE ANTENNA	DLK-78
B2112 SLIDING MOTOR.....	ADP-60	B2626 OUTSIDE ANTENNA	DLK-89
B2113 RECLINING MOTOR.....	ADP-62	B2627 OUTSIDE ANTENNA	DLK-92
B2116 TILT MOTOR	ADP-64	B2628 OUTSIDE ANTENNA	DLK-95
		B2630, B2631 SUNLOAD SENSOR	HAC-65
		B2632, B2633 AIR MIX DOOR MOTOR (DRIVER SIDE).....	HAC-68
		B2634, B2635 AIR MIX DOOR MOTOR (PASSENGER SIDE).....	HAC-70
		B2636, B2637, B2638, B2639, B2654, B2655 MODE DOOR MOTOR.....	HAC-72
		B263D, B263E, B263F INTAKE DOOR MOTOR.....	HAC-74
		B26F1 IGNITION RELAY.....	PCS-77
		B26F2 IGNITION RELAY.....	PCS-79
		B26F3 STARTER CONTROL RELAY.....	SEC-106
		B26F4 STARTER CONTROL RELAY.....	SEC-107
		B26F6 BCM	PCS-81
		B26F7 BCM	SEC-109

B26FC KEY REGISTRATIONSEC-108
 B26FD SHIFT LOCK SOLENOID DLK-81
 B26FE HOOD SWITCH DLK-83
 B26FF REMOTE KEYLESS ENTRY RECEIVER ...
 DLK-85
 B2720 CORNER SENSOR [RL] SN-29
 B2723 CORNER SENSOR [RR]..... SN-31
 B2724 SONAR CONTROL UNIT SN-33
 B2729 CORNER SENSOR [FL]..... SN-34
 B272C CORNER SENSOR [FR]..... SN-36
 B27B0 A/C AUTO AMP. HAC-76
 BACK-UP LAMP EXL-61, EXL-127, EXL-181,
 EXL-245
 BACK-UP LAMP ASSEMBLY ... EXL-122, EXL-240
 BASIC INSPECTION EC-164
 BATTERY PG-92, PG-101, PG-107
 BATTERY CURRENT SENSOR ...EC-535, PG-106
 BATTERY TERMINAL WITH FUSIBLE LINKPG-105
 BATTERY TRAY PG-103
 BCM DEF-10, DLK-41, INL-13, WT-17
 BCM (BODY CONTROL MODULE).....ADP-37,
 BCS-31, BCS-56, BCS-82, MWI-30, PCS-90,
 PWC-14, RF-17
 BCM BRANCH LINE CIRCUIT ..LAN-82, LAN-107,
 LAN-125, LAN-145, LAN-172, LAN-206,
 LAN-242
 BCM, COMBINATION METERWCS-17
 BCM, IPDM E/REXL-29, EXL-149, PCS-48, WW-22
 BLIND SPOT WARNING INDICATORDAS-178
 BLOWER MOTOR HAC-87, HAC-111
 BLOWER UNIT VTL-15
 BODY ALIGNMENTBRM-53
 BODY COMPONENT PARTSBRM-12
 BODY CONSTRUCTIONBRM-24
 BODY EXTERIOR PAINT COLORBRM-2
 BODY SEALINGBRM-20
 BODY SIDE TRIM..... INT-32
 BOSE AMP..... AV-48
 BOSE SPEAKER AMP AV-194
 BOTH DOORS MIRROR DEFOGGER DON'T
 OPERATE BUT REAR WINDOW DEFOGGER
 OPERATES.....DEF-38
 BOTH SIDE FRONT FOG LAMPS ARE NOT
 TURNED ON..... EXL-102, EXL-220
 BOTH SIDE HEADLAMPS (HI) ARE NOT TURNED
 ON..... EXL-99, EXL-217
 BOTH SIDE HEADLAMPS (LO) ARE NOT TURNED
 ON..... EXL-100, EXL-218
 BRAKE BOOSTERBR-8, BR-32
 BRAKE CONTROL SYSTEM.....BRC-54, BRC-236
 BRAKE FLUID..... BR-14
 BRAKE MASTER CYLINDER.....BR-7, BR-30
 BRAKE PEDALBR-12, BR-20
 BRAKE PEDAL POSITION SWITCH..... EC-537
 BRAKE PEDAL VIBRATION OR OPERATION
 SOUND OCCURSBRC-161, BRC-359

BRAKE PIPINGBR-22
 BRAKE WARNING LAMP BRC-152, BRC-345
 BUZZER SN-42

C

C10B7 YAW RATE SENSOR CCS-103
 C1101, C1102, C1103, C1104 WHEEL SENSOR ...
 BRC-70, BRC-264
 C1105, C1106, C1107, C1108 WHEEL SENSOR ...
 BRC-75, BRC-269
 C1109 POWER AND GROUND SYSTEM BRC-82,
 BRC-276
 C1110, C1153 ABS ACTUATOR AND ELECTRIC
 UNIT (CONTROL UNIT) BRC-84, BRC-278
 C1111 ABS MOTOR, MOTOR RELAY SYSTEM
 BRC-86, BRC-280
 C1113, C1145, C1146 YAW RATE/SIDE/DECEL G
 SENSOR BRC-89, BRC-283
 C1115 WHEEL SENSOR BRC-91, BRC-285
 C1116 STOP LAMP SWITCH.... BRC-98, BRC-292
 C1120, C1122, C1124, C1126 ABS IN VALVE
 SYSTEM BRC-102, BRC-296
 C1121, C1123, C1125, C1127 ABS OUT VALVE
 SYSTEM BRC-104, BRC-298
 C1130 ENGINE SIGNAL BRC-106, BRC-300
 C1140 ACTUATOR RELAY SYSTEM BRC-108,
 BRC-302
 C1142 PRESS SENSOR.....BRC-110, BRC-304
 C1143 STEERING ANGLE SENSORBRC-113,
 BRC-307, STC-20
 C1144 INCOMPLETE STEERING ANGLE SENSOR
 ADJUSTMENT BRC-117, BRC-311
 C1154 TRANSMISSION RANGE SWITCHBRC-119,
 BRC-313
 C1155 BRAKE FLUID LEVEL SWITCH.. BRC-121,
 BRC-315
 C1160 INCOMPLETE DECEL G SENSOR
 CALIBRATION BRC-125, BRC-319
 C1164, C1165 CV SYSTEM.... BRC-127, BRC-321
 C1166, C1167 SV SYSTEM BRC-129, BRC-323
 C1170 VARIANT CODING BRC-131, BRC-325
 C1197 VACUUM SENSOR..... BRC-133, BRC-327
 C1198 VACUUM SENSOR..... BRC-136, BRC-330
 C1199 BRAKE BOOSTER BRC-138, BRC-332
 C119A VACUUM SENSOR BRC-141, BRC-335
 C1601 BATTERY POWER SUPPLYSTC-21
 C1602 NO TUNING SET.....STC-24
 C1606 EPS MOTORSTC-25
 C1607, C1608 POWER STEERING CONTROL
 MODULESTC-26
 C1609 VEHICLE SPEED SIGNALSTC-27
 C160A HEAT PROTECTIONSTC-29
 C1704, C1705, C1706, C1707 LOW TIRE
 PRESSURE WT-29
 C1708, C1709, C1710, C1711 TIRE PRESSURE
 SENSOR WT-31

C1716, C1717, C1718, C1719 TIRE PRESSURE SENSOR	WT-35	C1BAB-00 STOP LAMP SWITCH	DAS-234
C1729 VEHICLE SPEED SIGNAL	WT-37	C1BB2-00 CONTROL MODULE	DAS-236
C1730, C1731, C1732, C1733 FLAT TIRE... WT-39		C1BB3-00 CONTROL MODULE	DAS-237
C1734 CONTROL UNIT	WT-41	C1BB4-00 CONTROL MODULE	DAS-238
C1735 IGNITION SIGNAL	WT-43	C1BB5-00 IGNITION POWER SUPPLY... DAS-239	
C1761, C1762, C1763, C1764 TIRE PRESSURE SENSOR	WT-45	C1BB6-00 IGNITION POWER SUPPLY... DAS-241	
C1769 CONFIGURATION SETTING	WT-47	C1BB7-00 CONTROL MODULE	DAS-243
C1770, C1771, C1772, C1773 G SENSOR . WT-49		C1BB8-00 CONTROL MODULE	DAS-244
C1A00 CONTROL UNIT	CCS-70, DAS-39	C1BB9-00 CONTROL MODULE	DAS-245
C1A01 POWER SUPPLY CIRCUIT 1, C1A02 POWER SUPPLY CIRCUIT 2 CCS-71, DAS-40		C1BBA-00 CONTROL MODULE	DAS-246
C1A03 VEHICLE SPEED SENSOR	CCS-72, DAS-41	C1BBB-00 CONTROL MODULE	DAS-247
C1A04 ABS/TCS/VDC SYSTEM	CCS-74	C1BBC-00 CONTROL MODULE	DAS-248
C1A05 BRAKE SW/STOP LAMP SW	CCS-75	C1BBD-00 VARIANT CODING	DAS-249
C1A06 OPERATION SW	CCS-79	C1BC0-00 FRONT RIGHT WHEEL SENSOR	DAS-250
C1A07 CVT	CCS-114	C1BC1-00 FRONT LEFT WHEEL SENSOR	DAS-252
C1A0C ADAS MESSAGE COUNTER FAILURE	CCS-117	C1BC2-00 REAR RIGHT WHEEL SENSOR	DAS-254
C1A0D MRR CAN FAILURE	CCS-118	C1BC3-00 REAR LEFT WHEEL SENSOR	DAS-256
C1A12 LASER BEAM OFF CENTER	CCS-82	C1BC4-00 DECEL G SENSOR	DAS-258
C1A13 STOP LAMP RELAY	CCS-83, DAS-43	C1BC5-00 SIDE G SENSOR	DAS-260
C1A14 ECM	CCS-85, DAS-49	C1BC6-00 PRESSURE SENSOR	DAS-262
C1A15 GEAR POSITION	CCS-87	CALIBRATION OF DECEL G SENSOR ... BRC-66, BRC-250	
C1A16 RADAR BLOCKED OR STAINED .. CCS-89		CAMERA IMAGE SIGNAL CIRCUIT (WITH REAR VIEW MONITOR)	AV-302
C1A17 ICC SENSOR	CCS-91, DAS-51	CAMSHAFT	EM-79
C1A18 RADAR AIMING INCOMP	CCS-92	CAMSHAFT VALVE CLEARANCE	EM-20
C1A21 UNIT HIGH TEMP	CCS-93	CAN COMMUNICATION CIRCUIT	LAN-88, LAN-108, LAN-127, LAN-147, LAN-177, LAN-212, LAN-248
C1A24 NP RANGE	CCS-94	CAN COMMUNICATION SYSTEM	LAN-8
C1A26 ECD MODE MALFUNCTION	CCS-96	CAN SYSTEM (WITH DRIVER ASSISTANCE SYSTEM)	LAN-42
C1A27 ECD POWER SUPPLY CIRCUIT ... CCS-98		CAN SYSTEM (WITHOUT DRIVER ASSISTANCE SYSTEM)	LAN-36
C1A34 COMMAND ERROR	DAS-52	CCM BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT)	LAN-75, LAN-143, LAN-167, LAN-200, LAN-235
C1A39 STEERING ANGLE SENSOR	CCS-100	CCM BRANCH LINE CIRCUIT (ITS COMMUNICATION CIRCUIT)	LAN-76, LAN-168, LAN-201, LAN-236
C1A50 ADAS CONTROL UNIT	CCS-102	CENTER CONSOLE ASSEMBLY	IP-20
C1B50 SIDE RADAR MALFUNCTION	DAS-145	CENTER SPEAKER	AV-188
C1B51 BLIND SPOT WARNING INDICATOR SHORT CIRCUIT	DAS-146	CHARGING SYSTEM	CHG-9, CHG-27
C1B52 BLIND SPOT WARNING INDICATOR OPEN CIRCUIT	DAS-148	CHARGING SYSTEM PRELIMINARY INSPECTION	CHG-19
C1B53 SIDE RADAR RIGHT MALFUNCTION	DAS-53	CHASSIS AND BODY MAINTENANCE	MA-33
C1B54 SIDE RADAR LEFT MALFUNCTION	DAS-54	CHASSIS CONTROL	DAS-212, DAS-286
C1B55 RADAR BLOCKAGE	DAS-150	CHASSIS CONTROL MODULE	DAS-205, DAS-290
C1B5D FEB OPE COUNT LIMIT	CCS-101	CHECK ANTI-PINCH FUNCTION	PWC-31
C1B92-00 BRAKE CONTROL SYSTEM	DAS-220	CHIME DOES NOT SOUND ... CCS-126, DAS-166	
C1B93-00 ENGINE SYSTEM	DAS-222	CLIMATE CONTROLLED SEAT	SE-36
C1B94-00 TRANSMISSION SYSTEM	DAS-224	CLIMATE CONTROLLED SEAT BLOWER FILTER	SE-63
C1B95-00 CONTROL MODULE	DAS-226		
C1B99-00 CONTROL MODULE	DAS-227		
C1BA0-00 ADAS/CHASSIS CONTROL BRAKE SYSTEM	DAS-228		
C1BA2-00 STEERING ANGLE SENSOR	DAS-230		
C1BA5-00 ADAS/CHASSIS CONTROL ENGINE SYSTEM	DAS-232		

CLIMATE CONTROLLED SEAT BLOWER MOTOR
SE-58

CLIMATE CONTROLLED SEAT CONTROL UNIT .
SE-19

CLIMATE CONTROLLED SEAT SWITCH
INDICATOR..... SE-61

CLIMATE CONTROLLED SEAT SYSTEM ... SE-64

CLUSTER LID AIP-22

COLLISION DIAGNOSIS SR-5

COMBINATION METER MWI-23, MWI-68, MWI-70

COMBINATION SWITCH.....BCS-83

COMBINATION SWITCH INPUT CIRCUIT.BCS-76

COMBINATION SWITCH OUTPUT CIRCUIT.....
BCS-78

COMBINATION SWITCH SYSTEM SYMPTOMS...
BCS-80

COMPRESSION PRESSUREEM-24

COMPRESSOR HA-34, HAC-112

COMPRESSOR DOES NOT OPERATE ... HAC-98

CONDENSERDEF-45, HA-41

CONFIGURATION (ADAS CONTROL UNIT)DAS-37

CONFIGURATION (AROUND VIEW MONITOR
CONTROL UNIT)..... AV-239

CONFIGURATION (AV CONTROL UNIT) AV-94

CONFIGURATION (CHASSIS CONTROL
MODULE)DAS-218

CONFIGURATION (HVAC) HAC-49

CONFIGURATION (TIRE PRESSURE
MONITORING SYSTEM)..... WT-28

CONFIGURATION [ABS ACTUATOR AND
ELECTRIC UNIT (CONTROL UNIT)] . BRC-68,
BRC-252

CONTROL CABLE TM-187

CONTROL VALVE..... TM-195

COOLER PIPE AND HOSE HA-36

COOLING FAN..... CO-16, CO-27, EC-541

COOLING SYSTEM.....CO-8

CORROSION PROTECTION BRM-17

COWL TOPEXT-24

CRASH ZONE SENSOR SR-25

CVT CONTROL SYSTEM..... TM-60, TM-180

CVT FLUID..... TM-81, TM-184

CVT OIL WARMER SYSTEM TM-206

CVT POSITION..... TM-85

CVT SHIFT LOCK SYSTEM TM-70

CVT SHIFT SELECTOR TM-185

CYLINDER BLOCK.....EM-115

CYLINDER HEADEM-91

D

DAYTIME RUNNING LIGHT RELAY CIRCUIT
EXL-74, EXL-193

DAYTIME RUNNING LIGHT SYSTEM EXL-34,
EXL-154

DEFOGGER SYSTEM SYMPTOMSDEF-35

DIAG ON CAN LAN-10

DIAGNOSIS AND REPAIR WORK FLOW ADP-50,
BRC-60, BRC-243, CCS-54, DAS-139,
DAS-214, DEF-16, DLK-68, DMS-15, EXL-66,
EXL-186, HA-16, INL-36, INT-14, MIR-11,
MWI-42, PCS-55, SE-44, SEC-51, SRC-35,
ST-12, STC-17, TM-73, WT-23, WW-27

DIAGNOSIS SENSOR UNIT SR-30, SRC-18

DIAGNOSIS SYSTEM (A/C AUTO AMP.).. HAC-26

DIAGNOSIS SYSTEM (ADAS CONTROL UNIT) ...
CCS-25, DAS-14, DAS-98

DIAGNOSIS SYSTEM (AIR BAG)..... SRC-15

DIAGNOSIS SYSTEM (AROUND VIEW MONITOR
CONTROL UNIT) AV-222

DIAGNOSIS SYSTEM (AV CONTROL UNIT)AV-34,
AV-285

DIAGNOSIS SYSTEM (BCM) BCS-16, DEF-7,
DLK-35, EXL-19, EXL-141, INL-9, PCS-43,
PWC-11, RF-14, SEC-18, WCS-14, WT-12,
WW-15

DIAGNOSIS SYSTEM (CHASSIS CONTROL
MODULE)..... DAS-201

DIAGNOSIS SYSTEM (COMBINATION METER) ..
MWI-18, WCS-9

DIAGNOSIS SYSTEM (DRIVER SEAT CONTROL
UNIT)..... ADP-24

DIAGNOSIS SYSTEM (ECM) EC-63

DIAGNOSIS SYSTEM (ICC SENSOR)... BRC-217,
CCS-31, DAS-104

DIAGNOSIS SYSTEM (IPDM E/R) EXL-25,
EXL-145, PCS-9, SEC-25, WW-18

DIAGNOSIS SYSTEM (POWER STEERING
CONTROL MODULE)STC-10

DIAGNOSIS SYSTEM (SIDE RADAR LH)DAS-108

DIAGNOSIS SYSTEM (SIDE RADAR RH)DAS-110

DIAGNOSIS SYSTEM (SONAR CONTROL UNIT)
SN-10

DIAGNOSIS SYSTEM (TCM) TM-40

DIAGNOSIS SYSTEM (TCU)..... AV-42

DIAGNOSIS SYSTEM (TIRE PRESSURE
MONITORING SYSTEM)..... WT-15

DIAGNOSIS SYSTEM [ABS ACTUATOR AND
ELECTRIC UNIT (CONTROL UNIT)].. BRC-41,
BRC-212

DIFFERENTIAL SIDE OIL SEALTM-204

DLC BRANCH LINE CIRCUIT ...LAN-70, LAN-101,
LAN-119, LAN-138, LAN-162, LAN-195,
LAN-230

DOES NOT OPERATE..... BRC-160, BRC-358

DOOR DOES NOT LOCK/UNLOCK WITH DOOR
KEY CYLINDER OPERATION DLK-140

DOOR DOES NOT LOCK/UNLOCK WITH DOOR
LOCK AND UNLOCK SWITCH..... DLK-137

DOOR DOES NOT LOCK/UNLOCK WITH DOOR
REQUEST SWITCH..... DLK-141

DOOR DOES NOT LOCK/UNLOCK WITH
INTELLIGENT KEYDLK-143

DOOR KEY CYLINDER SWITCH [DLK-109](#), [PWC-48](#)
DOOR KEY CYLINDER SWITCH DOES NOT OPERATE POWER WINDOWS [PWC-62](#)
DOOR LOCK ACTUATOR.....[DLK-102](#)
DOOR LOCK AND UNLOCK SWITCH[DLK-100](#)
DOOR LOCK OPERATION WARNING DOES NOT OPERATE.....[DLK-150](#)
DOOR MIRROR [MIR-5](#), [MIR-21](#)
DOOR MIRROR ACTUATOR.....[MIR-25](#)
DOOR MIRROR DEFOGGER LH (WITH AUTOMATIC DRIVE POSITIONER) [DEF-29](#)
DOOR MIRROR DEFOGGER LH (WITHOUT AUTOMATIC DRIVE POSITIONER) [DEF-27](#)
DOOR MIRROR DEFOGGER RH (WITH AUTOMATIC DRIVE POSITIONER) [DEF-33](#)
DOOR MIRROR DEFOGGER RH (WITHOUT AUTOMATIC DRIVE POSITIONER) [DEF-31](#)
DOOR MIRROR GLASS [MIR-23](#)
DOOR MIRROR MOTOR [ADP-123](#)
DOOR MIRROR REAR FINISHER [MIR-24](#)
DOOR MIRROR REMOTE CONTROL SWITCH [ADP-87](#), [MIR-13](#), [MIR-26](#)
DOOR MIRROR TURN SIGNAL LAMP ... [EXL-112](#), [EXL-230](#)
DOOR MOTOR..... [HAC-83](#), [HAC-108](#)
DOOR MOTOR COMMUNICATION CIRCUIT [HAC-85](#)
DOOR OUTSIDE MOLDING[EXT-32](#)
DOOR REQUEST SWITCH[DLK-113](#), [DLK-200](#)
DOOR SWITCH [DLK-98](#), [DLK-197](#), [PWC-46](#), [RF-36](#)
DRIVE BELTS..... [EM-16](#)
DRIVE MODE INDICATOR DOES NOT TURN ON [DMS-19](#)
DRIVE MODE SELECTOR [DMS-8](#), [DMS-9](#), [DMS-20](#)
DRIVE MODE SELECTOR CIRCUIT[DMS-16](#)
DRIVER AIR BAG MODULE[SR-12](#)
DRIVER ASSISTANCE SYSTEM SYMPTOMS [BRC-350](#), [DAS-164](#)
DRIVER ASSISTANCE SYSTEMS [DAS-27](#), [DAS-130](#)
DRIVER SEAT CONTROL UNIT [ADP-27](#), [ADP-130](#)
DRIVER SIDE DOOR MIRROR DEFOGGER DOES NOT OPERATE. [DEF-40](#)
DRIVER SIDE POWER WINDOW ALONE DOES NOT OPERATE [PWC-55](#)
DRIVING FORCE IS HUNTING [CCS-128](#)
DUCTS AND GRILLES [VTL-8](#)

E

EASY FILL TIRE ALERT DOES NOT ACTIVATE ... [WT-59](#)
ECM BRANCH LINE CIRCUIT [LAN-65](#), [LAN-96](#), [LAN-114](#), [LAN-133](#), [LAN-157](#), [LAN-190](#), [LAN-225](#)
ECM, IPDM E/R, BCM..... [HAC-35](#), [SEC-27](#)
ECV (ELECTRICAL CONTROL VALVE) [HAC-91](#)

ELECTRICAL LOAD SIGNAL..... [EC-545](#)
ELECTRICAL UNITS LOCATION..... [PG-5](#)
ELECTRONIC CONTROLLED ENGINE MOUNT ... [EC-547](#)
ENCODER..... [PWC-41](#)
ENGINE ASSEMBLY [EM-107](#)
ENGINE CONTROL SYSTEM..... [EC-124](#)
ENGINE CONTROL SYSTEM SYMPTOM [SEC-575](#)
ENGINE COOLANT..... [CO-10](#)
ENGINE DOES NOT START WHEN INTELLIGENT KEY IS INSIDE OF VEHICLE..... [SEC-129](#)
ENGINE MAINTENANCE (VQ35DE) [MA-20](#)
ENGINE MOUNT [EM-101](#)
ENGINE OIL [LU-8](#)
ENGINE ROOM COVER..... [EM-25](#)
EPS/DAST 3 BRANCH LINE CIRCUIT [LAN-67](#), [LAN-98](#), [LAN-116](#), [LAN-135](#), [LAN-159](#), [LAN-192](#), [LAN-227](#)
EVAP CANISTER [FL-15](#)
EVAP CANISTER FILTER [FL-17](#)
EVAP CANISTER VENT CONTROL VALVE . [FL-18](#)
EVAP CONTROL SYSTEM PRESSURE SENSOR [FL-19](#)
EVAP LEAK CHECK..... [EC-583](#)
EXCESSIVE OPERATION FREQUENCY [BRC-156](#), [BRC-354](#)
EXHAUST MANIFOLD AND THREE WAY CATALYST [EM-32](#)
EXHAUST SYSTEM [EX-4](#), [EX-5](#)
EXTERIOR LIGHTING SYSTEM SYMPTOMS [EXL-95](#), [EXL-213](#)

F

FENDER PROTECTOR [EXT-28](#)
FILAMENT [DEF-43](#)
FLOOR TRIM.....[INT-44](#)
FOOT LAMP [INL-59](#)
FORWARD EMERGENCY BRAKING [BRC-349](#)
FREQUENTLY CANNOT DETECT THE VEHICLE AHEAD / DETECTION ZONE IS SHORT..... [CCS-129](#), [DAS-167](#)
FRONT BUMPER [EXT-16](#)
FRONT CAMERA [AV-274](#)
FRONT COIL SPRING AND STRUT..... [FSU-10](#), [FSU-19](#)
FRONT COMBINATION LAMP [EXL-108](#), [EXL-124](#), [EXL-226](#), [EXL-242](#)
FRONT DISC BRAKE [BR-10](#), [BR-16](#), [BR-37](#), [BR-47](#)
FRONT DOOR..... [DLK-166](#)
FRONT DOOR FINISHER.....[INT-26](#)
FRONT DOOR GLASS..... [GW-14](#)
FRONT DOOR LOCK..... [DLK-179](#)
FRONT DOOR SPEAKER..... [AV-162](#), [AV-190](#)
FRONT DRIVE SHAFT [FAX-7](#), [FAX-18](#), [FAX-24](#)
FRONT DRIVE SHAFT BOOT [FAX-11](#)
FRONT FENDER..... [DLK-164](#)

FRONT FOG LAMP	EXL-110, EXL-228
FRONT FOG LAMP AIMING ADJUSTMENT	EXL-106, EXL-224
FRONT FOG LAMP CIRCUIT.....	EXL-85, EXL-203
FRONT FOG LAMP SYSTEM	EXL-43, EXL-163
FRONT GRILLE	EXT-22
FRONT LOWER LINK.....	RSU-13
FRONT PASSENGER AIR BAG MODULE...	SR-19
FRONT PASSENGER AIR BAG OFF INDICATOR	SR-45
FRONT PASSENGER SIDE POWER WINDOW	
DOES NOT OPERATE	PWC-56
FRONT PILLAR MOLDING.....	EXT-34
FRONT POWER WINDOW MOTOR	GW-19
FRONT REGULATOR.....	GW-16
FRONT ROOM/MAP LAMP ASSEMBLY	INL-50
FRONT SEAT	SE-71, SE-94
FRONT SEAT BELT	SB-8
FRONT SEAT BELT BUCKLE SWITCH	SR-33
FRONT SIDE MARKER LAMP CIRCUIT... EXL-79,	EXL-197
FRONT STABILIZER	FSU-15
FRONT STEP LAMP.....	INL-54
FRONT SUNROOF GLASS.....	RF-64
FRONT SUSPENSION ASSEMBLY	FSU-6
FRONT SUSPENSION MEMBER	FSU-18
FRONT TIMING CHAIN CASE	EM-58
FRONT TWEETER	AV-189
FRONT UNDER COVER	EXT-26
FRONT WASHER MOTOR.....	WW-52
FRONT WHEEL HUB	FAX-6, FAX-8
FRONT WIPER.....	WW-45
FRONT WIPER DOES NOT OPERATE	WW-43
FRONT WIPER MOTOR GROUND CIRCUIT	WW-35
FRONT WIPER MOTOR HI CIRCUIT.....	WW-32
FRONT WIPER MOTOR LO CIRCUIT	WW-30
FRONT WIPER STOP POSITION SIGNAL CIRCUIT	WW-34
FUEL FILLER LID OPENER.....	DLK-192
FUEL INJECTOR	EC-550
FUEL INJECTOR AND FUEL TUBE.....	EM-46
FUEL LEVEL SENSOR SIGNAL CIRCUIT.....	MWI-54
FUEL LEVEL SENSOR UNIT	FL-20
FUEL LEVEL SENSOR UNIT, FUEL FILTER AND	
FUEL PUMP ASSEMBLY	FL-5
FUEL PRESSURE	EC-168
FUEL PUMP.....	EC-553
FUEL SYSTEM	FL-4
FUEL TANK.....	FL-10
FUSE BLOCK - JUNCTION BOX (J/B).....	PG-89
FUSE INSPECTION.....	PG-96
FUSE, FUSIBLE LINK AND RELAY BOX.....	PG-90
FUSIBLE LINK INSPECTION	PG-100

G

GENERAL MAINTENANCE	MA-6
GENERATOR.....	CHG-28
GLASS LID.....	RF-49
GLOVE BOX ASSEMBLY	IP-24
GLOVE BOX LAMP.....	INL-53
GPS ANTENNA.....	AV-198
GROUND	PG-58

H

HANDLING PRECAUTION	AV-221, BRC-211, CCS-22, DAS-96, DAS-200
HANDLING PRECAUTIONS FOR PLASTICS.....	BRM-4
HANDS-FREE PHONE SYSTEM	AV-26
HARNESS	PG-70
HAZARD FUNCTION	DLK-119
HAZARD SWITCH	EXL-93, EXL-116, EXL-211, EXL-234
HEADLAMP.....	EXL-30, EXL-150
HEADLAMP (HI) CIRCUIT	EXL-70, EXL-189
HEADLAMP (LO) CIRCUIT	EXL-72, EXL-191
HEADLAMP AIMING ADJUSTMENT.....	EXL-103, EXL-221
HEADLINING	INT-47
HEATED SEAT	SE-29
HEATED STEERING WHEEL.....	ST-10
HEATED STEERING WHEEL SWITCH.....	ST-46
HEATED STEERING WHEEL SWITCH INDICATOR	
LAMP	ST-25
HEATED STEERING WHEEL SYSTEM	ST-21
HEATER & COOLING UNIT ASSEMBLY.....	HA-44
HEATER AND AIR CONDITIONING SYSTEM	
CONTROL SYMPTOMS	HAC-93
HIGH-MOUNTED STOP LAMP	EXL-119, EXL-237
HOLE COVER.....	ST-37
HOMELINK UNIVERSAL TRANSCEIVER.....	DLK-66
HOOD.....	DLK-158
HOOD LOCK.....	DLK-176
HOOD SWITCH	DLK-120, SEC-139
HORN.....	HRN-4, HRN-7
HORN FUNCTION	SEC-128
HOW TO ERASE PERMANENT DTC	EC-176, TM-86
HOW TO FOLLOW TROUBLE DIAGNOSES ..	GI-6
HOW TO READ WIRING DIAGRAMS	GI-9
HOW TO SET SRT CODE	EC-170
HOW TO USE THIS MANUAL	GI-3
HOW TO USE THIS SECTION	LAN-22
HVAC BRANCH LINE CIRCUIT	LAN-77, LAN-106, LAN-124, LAN-144, LAN-169, LAN-202, LAN-237
HYDRAULIC LINE.....	ST-44
HYDRAULIC PUMP ELECTRIC POWER	
STEERING SYSTEM	STC-14

HYDRAULIC PUMP ELECTRIC POWER
STEERING WARNING LAMP [STC-31](#)
HYDRAULIC PUMP ELECTRIC POWER
STEERING WARNING LAMP DOES NOT
TURN OFF [STC-33](#)
HYDRAULIC PUMP ELECTRIC POWER
STEERING WARNING LAMP DOES NOT
TURN ON [STC-32](#)

I

ICC BRAKE SWITCH [EC-539](#)
ICC BRANCH LINE CIRCUIT (CAN
COMMUNICATION CIRCUIT) [LAN-80](#), [LAN-170](#),
[LAN-204](#), [LAN-240](#)
ICC BRANCH LINE CIRCUIT (ITS
COMMUNICATION CIRCUIT) [LAN-81](#), [LAN-171](#),
[LAN-205](#), [LAN-241](#)
ICC SENSOR [CCS-42](#), [CCS-136](#), [DAS-119](#),
[DAS-172](#)
ICC SENSOR ALIGNMENT [BRC-256](#), [CCS-59](#)
ICC SENSOR INITIAL VERTICAL ALIGNMENT
[BRC-254](#), [CCS-57](#)
ICC STEERING SWITCH [CCS-138](#), [DAS-174](#)
ICC STEERING SWITCH (OTHER THAN MAIN
SWITCH) DOES NOT FUNCTION [CCS-124](#)
ICC SYSTEM CANNOT BE SET (MAIN SWITCH
TURNS ON/OFF) [CCS-122](#)
ICC SYSTEM DOES NOT CANCEL WHEN CVT
SELECTOR LEVER SETS ON
ID REGISTRATION CANNOT BE COMPLETED
[WT-61](#)
ID REGISTRATION PROCEDURE [WT-25](#)
IDENTIFICATION INFORMATION [GI-32](#)
IDLE AIR VOLUME LEARNING [EC-160](#)
IDLE SPEED [EC-581](#)
IGNITION COIL [EM-45](#)
IGNITION POSITION WARNING FUNCTION DOES
NOT OPERATE [DLK-144](#)
IGNITION SIGNAL [EC-555](#)
IGNITION TIMING [EC-582](#)
ILLUMINATION [INL-23](#)
IMMOBILIZER CONTROL MODULE [SEC-138](#)
IN-CABIN MICROFILTER [VTL-7](#)
IN-VEHICLE SENSOR [HAC-104](#)
INFORMATION DISPLAY (ASCD) [EC-560](#)
INPUT SPEED SENSOR [TM-201](#)
INSIDE KEY ANTENNA [DLK-198](#)
INSIDE MIRROR [MIR-8](#), [MIR-20](#)
INSTRUMENT LOWER PANEL LH [IP-23](#)
INSTRUMENT PANEL ASSEMBLY [IP-14](#)
INSTRUMENT PANEL TWEETER [AV-187](#)
INSUFFICIENT COOLING [HAC-95](#)
INSUFFICIENT HEATING [HAC-97](#)
INTAKE MANIFOLD [EM-30](#)
INTAKE MANIFOLD COLLECTOR [EM-27](#)
INTAKE SENSOR [HAC-106](#)

INTEGRATED HOMELINK TRANSMITTER [DLK-122](#)
INTEGRATED HOMELINK TRANSMITTER DOES
NOT OPERATE [DLK-151](#)
INTELLIGENT CRUISE CONTROL [CCS-49](#)
INTELLIGENT CRUISE CONTROL SYSTEM
SYMPTOMS [CCS-119](#)
INTELLIGENT KEY [DLK-117](#)
INTELLIGENT KEY BATTERY [DLK-203](#)
INTELLIGENT KEY LOW BATTERY WARNING
DOES NOT OPERATE [DLK-149](#)
INTELLIGENT KEY SYSTEM [DLK-51](#)
INTELLIGENT KEY SYSTEM SYMPTOMS [DLK-136](#)
INTELLIGENT KEY SYSTEM/ENGINE START
FUNCTION [SEC-28](#)
INTELLIGENT KEY WARNING BUZZER. [DLK-115](#),
[DLK-201](#)
INTERIOR LIGHTING SYSTEM SYMPTOMS [INL-49](#)
INTERIOR ROOM LAMP [INL-14](#)
INTERIOR ROOM LAMP CONTROL CIRCUIT
[INL-41](#)
INTERIOR ROOM LAMP POWER SUPPLY
CIRCUIT [INL-39](#)
INTERMITTENT INCIDENT [SRC-41](#)
IPDM E/R (INTELLIGENT POWER DISTRIBUTION
MODULE ENGINE ROOM) .. [PCS-13](#), [PCS-23](#),
[PCS-36](#), [PG-91](#)
IPDM-E BRANCH LINE CIRCUIT [LAN-68](#), [LAN-99](#),
[LAN-117](#), [LAN-136](#), [LAN-160](#), [LAN-193](#),
[LAN-228](#)
ITS COMMUNICATION CIRCUIT [LAN-90](#), [LAN-179](#),
[LAN-214](#), [LAN-250](#)

K

KEY CYLINDER [DLK-195](#)
KEY ID WARNING DOES NOT OPERATED [DLK-148](#)
KEY WARNING LAMP [DLK-118](#)
KEYLESS POWER WINDOW DOWN DOES NOT
OPERATE [PWC-63](#)

L

L TERMINAL CIRCUIT (OPEN) [CHG-23](#)
L TERMINAL CIRCUIT (SHORT) [CHG-25](#)
LASER BRANCH LINE CIRCUIT [LAN-85](#), [LAN-174](#),
[LAN-209](#), [LAN-245](#)
LATCH SYSTEM FOR CHILDREN [SB-14](#)
LED HEADLAMP [EXL-76](#)
LED HEADLAMP OPERATION INSPECTION
[EXL-69](#)
LICENSE LAMP FINISHER [EXT-40](#)
LICENSE PLATE LAMP [EXL-121](#), [EXL-239](#)
LICENSE PLATE LAMP CIRCUIT [EXL-83](#), [EXL-201](#)
LIFTING MOTOR (FRONT) [ADP-115](#)
LIFTING MOTOR (REAR) [ADP-117](#)
LIFTING POINT [GI-28](#)
LIFTING SENSOR (FRONT) [ADP-98](#)

LIFTING SENSOR (REAR).....ADP-101
 LIFTING SWITCH (FRONT)ADP-76
 LIFTING SWITCH (REAR).....ADP-78
 LIGHTING & TURN SIGNAL SWITCH EXL-115,
 EXL-233
 LOW TIRE PRESSURE WARNING LAMP .. WT-53
 LOW TIRE PRESSURE WARNING LAMP BLINKS
 WT-58
 LOW TIRE PRESSURE WARNING LAMP DOES
 NOT TURN ON WT-56
 LOW TIRE PRESSURE WARNING LAMP STAYS
 ON..... WT-57
 LOWER JOINT..... ST-35
 LUBRICATION SYSTEM LU-6
 LUMBAR SUPPORT SYSTEM SE-33

M

M&A BRANCH LINE CIRCUIT...LAN-71, LAN-102,
 LAN-120, LAN-139, LAN-163, LAN-196,
 LAN-231
 MAGNET CLUTCH HAC-90
 MAIN LINE BETWEEN ADP AND ICC CIRCUIT....
 LAN-61, LAN-186, LAN-221
 MAIN LINE BETWEEN AV AND HVAC CIRCUIT ...
 LAN-58, LAN-95, LAN-113, LAN-132, LAN-152,
 LAN-184, LAN-219
 MAIN LINE BETWEEN DLC AND M&A CIRCUIT ..
 LAN-56, LAN-93, LAN-111, LAN-130, LAN-150,
 LAN-182, LAN-217
 MAIN LINE BETWEEN HVAC AND ADP CIRCUIT
 LAN-60, LAN-185, LAN-220
 MAIN LINE BETWEEN HVAC AND ICC CIRCUIT .
 LAN-59, LAN-153
 MAIN LINE BETWEEN IPDM-E AND DLC CIRCUIT
 LAN-55, LAN-92, LAN-110, LAN-129, LAN-149,
 LAN-181, LAN-216
 MAIN LINE BETWEEN LASER AND RDR-L
 CIRCUITLAN-63, LAN-155, LAN-188, LAN-223
 MAIN LINE BETWEEN M&A AND AV CIRCUIT.....
 LAN-57, LAN-94, LAN-112, LAN-131, LAN-151,
 LAN-183, LAN-218
 MAIN LINE BETWEEN SONAR AND LASER
 CIRCUITLAN-62, LAN-154, LAN-187, LAN-222
 MAIN POWER SUPPLY AND GROUND CIRCUIT.
 TM-174
 MAIN POWER WINDOW AND DOOR LOCK/
 UNLOCK SWITCH..... PWC-15, PWC-67
 MAIN SWITCH DOES NOT TURN ON, MAIN
 SWITCH DOES NOT TURN OFF CCS-120
 MALFUNCTION AREA CHART LAN-53
 MALFUNCTION INDICATOR LAMP EC-561
 METER BUZZER CIRCUIT..... WCS-27
 METER CONTROL SWITCH..... INL-58, MWI-69
 METER CONTROL SWITCH SIGNAL CIRCUIT
 MWI-52
 METER SYSTEM.....MWI-31

MICROPHONE..... AV-199
 MICROPHONE SIGNAL CIRCUIT AV-160
 MIRROR SENSOR..... ADP-107
 MIXTURE RATIO SELF-LEARNING VALUE CLEAR
 EC-162
 MOOD LAMP INL-57
 MOONROOF DOES NOT OPERATE PROPERLY .
 RF-38
 MOONROOF MOTOR ASSEMBLY .. RF-18, RF-52
 MOONROOF SWITCH..... RF-33, RF-74
 MOONROOF SYSTEM RF-20
 MOONROOF UNIT ASSEMBLY RF-57
 MUDGUARD EXT-30
 MULTI AV (WITH BOSE AUDIO SYSTEM)... AV-69
 MULTI AV (WITHOUT BOSE AUDIO SYSTEM).....
 AV-57
 MULTI AV SYSTEM SYMPTOMS AV-174
 MULTIFUNCTION SWITCH AV-204

N

NATS ANTENNA AMP..... SEC-135
 NAVIGATION SYSTEM AV-29
 NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS
 SEC-36
 NOISE HA-22
 NOISE, VIBRATION AND HARSHNESS (NVH)
 TROUBLESHOOTINGBR-6, FSU-5, RSU-4,
 ST-28, WT-62
 NOISE, VIBRATION, AND HARSHNESS(NVH)
 TROUBLESHOOTING RAX-4
 NORMAL OPERATING CONDITION..... ADP-129,
 AV-177, AV-272, AV-305, BCS-81, BRC-163,
 BRC-361, CCS-133, DAS-170, DAS-289,
 EC-580, EXL-98, EXL-216, WW-42

O

OCCUPANT CLASSIFICATION SYSTEM SR-34
 OFF POSITION WARNING DOES NOT OPERATE
 DLK-145
 OIL..... HA-27
 OIL COOLER LU-15
 OIL FILTER LU-10
 OIL PAN AND OIL STRAINER..... EM-39
 OIL PUMP LU-12
 OIL SEAL EM-87
 ON BOARD DIAGNOSTIC (OBD) SYSTEM EC-62,
 TM-39
 ON BOARD REFUELING VAPOR RECOVERY
 (ORVR) EC-562
 OPERATION ..BRC-209, CCS-18, DAS-95, EC-60,
 HAC-23, MWI-17
 OPERATION INSPECTION HAC-46
 OPTICAL SENSOR.... EXL-90, EXL-114, EXL-208,
 EXL-232
 OUTPUT SPEED SENSOR TM-203

OUTSIDE KEY ANTENNADLK-199
OVERHEATING CAUSE ANALYSIS CO-6

P

P0011, P0021 IVT CONTROLEC-197
P0014, P0024 EVT CONTROLEC-201
P0030, P0031, P0032, P0036, P0051, P0052 A/F
SENSOR 1 HEATEREC-207
P0037, P0038, P0057, P0058 HO2S2 HEATER.....
EC-210
P0075, P0081 IVT CONTROL SOLENOID VALVE .
EC-213
P0078, P0084 EVT CONTROL SOLENOID VALVE
EC-218
P0101 MAF SENSOREC-221
P0102, P0103 MAF SENSOREC-226
P0111 IAT SENSOREC-232
P0112, P0113 IAT SENSOREC-234
P0116 ECT SENSOREC-236
P0117, P0118 ECT SENSOREC-238
P0122, P0123 TP SENSOREC-241
P0125 ECT SENSOREC-244
P0127 IAT SENSOREC-247
P0128 THERMOSTAT FUNCTIONEC-249
P0130, P0150 A/F SENSOR 1EC-252
P0131, P0151 A/F SENSOR 1EC-256
P0132, P0152 A/F SENSOR 1EC-259
P0137, P0157 HO2S2EC-262
P0138, P0158 HO2S2EC-268
P0139, P0159 HO2S2EC-276
P014C, P014D, P014E, P014F, P015A, P015B,
P015C, P015D A/F SENSOR 1EC-282
P0171, P0174 FUEL INJECTION SYSTEM
FUNCTIONEC-289
P0172, P0175 FUEL INJECTION SYSTEM
FUNCTIONEC-294
P0181 FTT SENSOREC-299
P0182, P0183 FTT SENSOREC-303
P0196 EOT SENSOREC-306
P0197, P0198 EOT SENSOREC-310
P0222, P0223 TP SENSOREC-312
P0300, P0301, P0302, P0303, P0304, P0305,
P0306 MISFIREEC-315
P0327, P0328, P0332, P0333 KSEC-323
P0335 CKP SENSOR (POS)EC-326
P0340, P0345 CMP SENSOR (PHASE)EC-330
P0420, P0430 THREE WAY CATALYST FUNCTION
EC-335
P0441 EVAP CONTROL SYSTEMEC-341
P0443 EVAP CANISTER PURGE VOLUME
CONTROL SOLENOID VALVEEC-347
P0444, P0445 EVAP CANISTER PURGE VOLUME
CONTROL SOLENOID VALVEEC-352
P0447 EVAP CANISTER VENT CONTROL VALVE
EC-355

P0448 EVAP CANISTER VENT CONTROL VALVE
EC-359
P0451 EVAP CONTROL SYSTEM PRESSURE
SENSOREC-363
P0452 EVAP CONTROL SYSTEM PRESSURE
SENSOREC-367
P0453 EVAP CONTROL SYSTEM PRESSURE
SENSOREC-370
P0456 EVAP CONTROL SYSTEMEC-374
P0460 FUEL LEVEL SENSOREC-380
P0461 FUEL LEVEL SENSOREC-382
P0462, P0463 FUEL LEVEL SENSOREC-384
P0500 VSSEC-386
P0506 ISC SYSTEMEC-389
P0507 ISC SYSTEMEC-391
P050A, P050E COLD START CONTROL .. EC-393
P0520 EOP SENSOREC-396
P0524 ENGINE OIL PRESSUREEC-400
P052A, P052B, P052C, P052D INTAKE VALVE
TIMING CONTROLEC-404
P0603, P062F ECMEC-411
P0604 ECMEC-413
P0605 ECMEC-415
P0606 ECMEC-417
P0607 ECMEC-419
P060A ECMEC-420
P060B ECMEC-422
P062F EEPROMTM-96
P0643 SENSOR POWER SUPPLYEC-424
P0705 TRANSMISSION RANGE SENSOR ATM-98
P0706 TRANSMISSION RANGE SENSOR A
TM-103
P0711 TRANSMISSION FLUID TEMPERATURE
SENSOR ATM-106
P0712 TRANSMISSION FLUID TEMPERATURE
SENSOR ATM-111
P0713 TRANSMISSION FLUID TEMPERATURE
SENSOR ATM-113
P0715 INPUT SPEED SENSOR ATM-115
P0717 INPUT SPEED SENSOR ATM-118
P0740 TORQUE CONVERTERTM-121
P0743 TORQUE CONVERTERTM-123
P0744 TORQUE CONVERTERTM-125
P0746 PRESSURE CONTROL SOLENOID A
TM-127
P0776 PRESSURE CONTROL SOLENOID B
TM-129
P0778 PRESSURE CONTROL SOLENOID B
TM-131
P0779 PRESSURE CONTROL SOLENOID B
TM-133
P0826 UP AND DOWN SHIFT SWTM-135
P0841 TRANSMISSION FLUID PRESSURE SEN/
SW ATM-141
P0847 TRANSMISSION FLUID PRESSURE SEN/
SW BTM-143

P0848 TRANSMISSION FLUID PRESSURE SEN/ SW B.....	TM-145	P2118 THROTTLE CONTROL MOTOR	EC-507
P084C TRANSMISSION FLUID PRESSURE SEN/ SW H.....	TM-147	P2119 ELECTRIC THROTTLE CONTROL ACTUATOR.....	EC-509
P084D TRANSMISSION FLUID PRESSURE SEN/ SW H.....	TM-149	P2122, P2123 APP SENSOR	EC-511
P0850 PNP SWITCH	EC-427	P2127, P2128 APP SENSOR	EC-514
P0863 TCM COMMUNICATION	TM-151	P2135 TP SENSOR	EC-518
P0890 TCM	TM-152	P2138 APP SENSOR.....	EC-521
P0962 PRESSURE CONTROL SOLENOID A	TM-154	P219A, P219B AIR FUEL RATIO	EC-525
P0963 PRESSURE CONTROL SOLENOID A	TM-156	P2610 ECM INTERNAL TIMER.....	EC-531
P0965 PRESSURE CONTROL SOLENOID B	TM-158	P2765 INPUT SPEED SENSOR B	TM-164
P0966 PRESSURE CONTROL SOLENOID B	TM-160	P2813 SELECT SOLENOID	TM-168
P0967 PRESSURE CONTROL SOLENOID B	TM-162	P2814 SELECT SOLENOID	TM-170
P1078, P1084 EVT CONTROL POSITION SENSOR	EC-430	P2815 SELECT SOLENOID	TM-172
P1148, P1168 CLOSED LOOP CONTROL.	EC-434	PADDLE SHIFTER.....	TM-189
P1212 TCS COMMUNICATION LINE.....	EC-435	PANIC ALARM FUNCTION DOES NOT OPERATE	SEC-134
P1217 ENGINE OVER TEMPERATURE....	EC-437	PARKING BRAKE CONTROL.....	PB-7
P1225 TP SENSOR	EC-440	PARKING BRAKE FRONT CABLE	PB-9
P1226 TP SENSOR	EC-442	PARKING BRAKE REAR CABLE	PB-10
P1550 BATTERY CURRENT SENSOR.....	EC-444	PARKING BRAKE SHOE	PB-4, PB-12
P1551, P1552 BATTERY CURRENT SENSOR	EC-447	PARKING BRAKE SWITCH ...	BRC-147, BRC-340, PB-11
P1553 BATTERY CURRENT SENSOR.....	EC-450	PARKING BRAKE SWITCH SIGNAL CIRCUIT	WCS-30
P1554 BATTERY CURRENT SENSOR.....	EC-453	PARKING BRAKE SYSTEM	PB-5
P1556, P1557 BATTERY TEMPERATURE SENSOR.....	EC-456	PARKING LAMP CIRCUIT	EXL-77, EXL-195
P1564 ASCD STEERING SWITCH	EC-459	PARKING, LICENSE PLATE AND TAIL LAMPS SYSTEM	EXL-53, EXL-173
P1564 ICC STEERING SWITCH	EC-462	PARKING, LICENSE PLATE, SIDE MARKER AND TAIL LAMPS ARE NOT TURNED ON	EXL-101, EXL-219
P1568 ICC FUNCTION	EC-465	PASSENGER SIDE DOOR MIRROR DEFOGGER DOES NOT OPERATE.	DEF-41
P1572 ASCD BRAKE SWITCH	EC-467	PERFORMANCE TEST	HA-32
P1572 ICC BRAKE SWITCH	EC-475	PERIODIC MAINTENANCE.....	MA-10
P1574 ASCD VEHICLE SPEED SENSOR.	EC-482	PERSONAL LAMP	INL-55
P1574 ICC VEHICLE SPEED SENSOR.....	EC-484	PLUG.....	TM-211
P1610 LOCK MODE	SEC-58	POSITIVE CRANKCASE VENTILATION	EC-585
P1611 ID DISCORD, IMMU-ECM	SEC-60	POWER DISTRIBUTION SYSTEM.....	PCS-49
P1612 CHAIN OF ECM-IMMU.....	SEC-62	POWER DOOR LOCK SYSTEM	DLK-42
P1615 DIFFERENCE OF KEY	SEC-64	POWER GENERATION VOLTAGE VARIABLE CONTROL SYSTEM OPERATION	CHG-20
P1700 CVT CONTROL SYSTEM	EC-486	INSPECTION	CHG-20
P1800 VIAS CONTROL SOLENOID VALVE 1	EC-487	POWER SEAT FOR DRIVER SIDE	SE-22
P1801 VIAS CONTROL SOLENOID VALVE 2	EC-490	POWER SEAT FOR PASSENGER SIDE.....	SE-26
P1805 BRAKE SWITCH	EC-493	POWER SEAT SWITCH	ADP-133
P2096, P2097, P2098, P2099 A/F SENSOR 1.....	EC-497	POWER SEAT SWITCH GROUND CIRCUIT	ADP-92
P2100, P2103 THROTTLE CONTROL MOTOR RELAY	EC-502	POWER SOCKET	PWO-5, PWO-8
P2101 ELECTRIC THROTTLE CONTROL FUNCTION	EC-504	POWER STEERING CONTROL MODULE	STC-11, STC-39
		POWER STEERING FLUID	ST-14, ST-29
		POWER STEERING OIL PUMP	ST-18, ST-43, ST-54
		POWER SUPPLY ROUTING CIRCUIT	PG-15

POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH RHPWC-17, PWC-68
POWER WINDOW LOCK SWITCH DOES NOT FUNCTION PWC-64
POWER WINDOW MOTOR PWC-36
POWER WINDOW RETAINED POWER FUNCTION DOES NOT OPERATE NORMALLY ... PWC-61
POWER WINDOW SERIAL LINK PWC-50
POWER WINDOW SWITCH DOES NOT ILLUMINATE PWC-65
POWER WINDOW SYSTEM PWC-19
POWER WINDOWS DO NOT OPERATE WITH POWER WINDOW MAIN SWITCH PWC-54
PRE-INSPECTION FOR DIAGNOSTIC PWC-66
PRECAUTIONSN-3
PRECAUTIONS..... ACC-2, ADP-4, AV-7, AV-205, AV-277, BCS-3, BR-3, BRC-7, BRC-173, BRM-3, CCS-4, CCS-140, CHG-3, CO-2, DAS-7, DAS-81, DAS-179, DEF-3, DLK-6, DMS-2, EC-9, EM-3, EX-2, EXL-6, EXL-130, EXT-3, FAX-2, FL-2, FSU-2, GI-23, GW-2, HA-3, HAC-4, HRN-2, INL-3, INT-3, IP-2, LAN-7, LAN-23, LU-2, MA-3, MIR-2, MWI-3, PB-2, PCS-4, PCS-37, PG-3, PWC-4, PWO-2, RAX-2, RF-3, RSU-2, SB-2, SE-3, SEC-4, SR-2, SRC-4, ST-3, STC-3, STR-2, TM-6, VTL-3, WCS-3, WT-3, WW-3
PRIMARY SPEED SENSOR TM-202
PROCEDURE FOR TEMPORARILY DISABLING THE IGNITION BATTERY SAVER SYSTEM PCS-58
PUSH BUTTON IGNITION SWITCH..... PCS-91, SEC-137
PUSH-BUTTON IGNITION SWITCH..... PCS-83
PUSH-BUTTON IGNITION SWITCH DOES NOT OPERATE PCS-88
PUSH-BUTTON IGNITION SWITCH ILLUMINATION CIRCUIT INL-47
PUSH-BUTTON IGNITION SWITCH POSITION INDICATOR DOES NOT ILLUMINATE PCS-89

R

RADIATOR CO-14
RADIATOR CORE SUPPORTDLK-163
RAIN SENSOR WW-37, WW-57
RDR-L BRANCH LINE CIRCUIT LAN-86, LAN-175, LAN-210, LAN-246
RDR-R BRANCH LINE CIRCUIT LAN-87, LAN-176, LAN-211, LAN-247
REAR BUMPEREXT-20
REAR CAMERA AV-276
REAR COMBINATION LAMP ... EXL-117, EXL-126, EXL-235, EXL-244
REAR DISC BRAKE . BR-11, BR-18, BR-42, BR-50
REAR DOORDLK-171
REAR DOOR FINISHER INT-29

REAR DOOR GLASS GW-20
REAR DOOR LOCK DLK-183
REAR DOOR SPEAKER AV-164, AV-191
REAR LH SIDE POWER WINDOW ALONE DOES NOT OPERATE PWC-57
REAR LOWER LINK & COIL SPRING RSU-9
REAR PARCEL SHELF FINISHERINT-39
REAR PILLAR MOLDING EXT-35
REAR POWER WINDOW MOTOR GW-25
REAR POWER WINDOW SWITCH PWC-69
REAR REGULATOR GW-22
REAR RH SIDE POWER WINDOW ALONE DOES NOT OPERATE PWC-58
REAR SEAT SE-88, SE-112
REAR SEAT BELT SB-12
REAR SHOCK ABSORBER RSU-11, RSU-19
REAR SPEAKER AV-166, AV-192
REAR SPOILER EXT-42
REAR STABILIZER RSU-14
REAR SUNROOF GLASSRF-67
REAR SUNSHADEINT-12, INT-41
REAR SUNSHADE DOES NOT OPERATE .INT-19
REAR SUNSHADE SWITCHINT-17, INT-42
REAR SUSPENSION ARM RSU-15
REAR SUSPENSION ASSEMBLY RSU-5
REAR SUSPENSION MEMBER RSU-16
REAR TIMING CHAIN CASE EM-74
REAR UNDER COVER EXT-27
REAR VIEW CAMERA AV-307
REAR VIEW MONITOR SYSTEM AV-282, AV-296, AV-304
REAR WHEEL ALIGNMENT INSPECTION .RSU-6
REAR WINDOW DEFOGGER AND DOOR MIRROR DEFOGGERS DO NOT OPERATE ... DEF-36
REAR WINDOW DEFOGGER DOES NOT OPERATE BUT BOTH DOOR MIRROR DEFOGGERS OPERATE DEF-37
REAR WINDOW DEFOGGER POWER SUPPLY AND GROUND CIRCUIT DEF-25
REAR WINDOW DEFOGGER RELAY DEF-23
REAR WINDOW DEFOGGER SWITCH ... DEF-19
REAR WINDOW DEFOGGER SWITCH DOES NOT LIGHT, BUT REAR WINDOW DEFOGGER OPERATES DEF-42
REAR WINDOW DEFOGGER SYSTEM.... DEF-11
REAR WINDOW GLASS GW-26
RECLINING MOTOR ADP-113
RECLINING SENSOR ADP-96
RECLINING SWITCH ADP-74
RECOMMENDED CHEMICAL PRODUCTS AND SEALANTS GI-22
RECOMMENDED FLUIDS AND LUBRICANTS..... MA-16
REFRIGERANT HA-23

REFRIGERANT PRESSURE SENSOR [EC-567](#),
[HAC-107](#)
 REFRIGERATION SYSTEM [HA-13](#), [HA-30](#)
 REFRIGERATION SYSTEM SYMPTOMS.... [HA-18](#)
 REMOTE KEYLESS ENTRY RECEIVER .[DLK-111](#),
[DLK-202](#)
 REPAIRING HIGH STRENGTH STEEL..... [BRM-7](#)
 REPAIRING MATERIAL [BRM-11](#)
 REPLACEMENT OPERATIONS..... [BRM-26](#)
 RETAINED POWER OPERATION DOES NOT
 OPERATE PROPERLY..... [RF-42](#)
 RIGHT/LEFT SWITCHING SIGNAL CIRCUIT
[DAS-163](#)
 ROAD WHEEL TIRE ASSEMBLY..... [WT-64](#)
 ROCKER COVER[EM-51](#)
 ROOF FINISHER..... [EXT-38](#), [RF-63](#)
 ROOF LINK ASSEMBLY..... [RF-56](#)
 ROOF SIDE MOLDING..... [EXT-36](#)

S

S CONNECTOR CIRCUIT [STR-17](#)
 S TERMINAL CIRCUIT [CHG-26](#)
 SATELLITE RADIO ANTENNA..... [AV-196](#)
 SEAT BELT BUCKLE SWITCH SIGNAL CIRCUIT .
[WCS-28](#)
 SEAT BELT INDCTR LAMP IS ON, PASS AIR BAG
 INDCTR IS ON OR OFF [SRC-146](#)
 SEAT BELT PRE-TENSIONER..... [SR-32](#)
 SEAT BELT WARNING SYSTEM [SRC-144](#)
 SEAT CUSHION THERMAL ELECTRIC DEVICE ..
[SE-54](#)
 SEAT CUSHION THERMAL ELECTRIC DEVICE
 SENSOR..... [SE-56](#)
 SEAT MEMORY INDICATOR [ADP-126](#)
 SEAT MEMORY SWITCH..... [ADP-84](#), [ADP-132](#)
 SEATBACK THERMAL ELECTRIC DEVICE [SE-50](#)
 SEATBACK THERMAL ELECTRIC DEVICE
 SENSOR..... [SE-52](#)
 SECURITY INDICATOR LAMP [SEC-126](#)
 SECURITY INDICATOR LAMP DOES NOT TURN
 ON OR BLINK..... [SEC-130](#)
 SENSOR POWER SUPPLY2 CIRCUIT [EC-569](#)
 SENSOR ROTOR [BRC-167](#), [BRC-365](#)
 SERVICE AFTER REPLACING OR REMOVING
 ENGINE PARTS..... [EC-155](#)
 SERVICE DATA AND SPECIFICATIONS (SDS)
[ACC-5](#), [BR-53](#), [CHG-30](#), [CO-28](#), [EC-587](#),
[EM-139](#), [EXL-129](#), [EXL-247](#), [FAX-37](#), [FL-22](#),
[FSU-23](#), [HA-47](#), [INL-60](#), [LU-17](#), [PB-14](#), [RAX-8](#),
[RSU-20](#), [ST-55](#), [TM-218](#), [VTL-17](#), [WT-73](#),
[WW-60](#)
 SERVICE INFORMATION FOR ELECTRICAL
 INCIDENT [GI-37](#)
 SHIFT LOCK SYSTEM [TM-177](#)
 SHIFT POSITION INDICATOR CIRCUIT.... [TM-176](#)
 SHIPPING MODE CANCEL OPERATION.. [BCS-66](#)

SIDE AIR BAG (SATELLITE) SENSOR..... [SR-27](#)
 SIDE AIR BAG MODULE [SR-24](#)
 SIDE CAMERA..... [AV-275](#)
 SIDE CURTAIN AIR BAG MODULE [SR-22](#)
 SIDE RADAR [DAS-177](#)
 SIDE RADAR LH..... [DAS-126](#)
 SIDE RADAR RH [DAS-128](#)
 SLIDING MOTOR..... [ADP-111](#)
 SLIDING SENSOR..... [ADP-94](#)
 SLIDING SWITCH..... [ADP-72](#)
 SONAR BRANCH LINE CIRCUIT [LAN-84](#), [LAN-126](#),
[LAN-146](#), [LAN-173](#), [LAN-208](#), [LAN-244](#)
 SONAR CONTROL UNIT [SN-13](#), [SN-41](#)
 SONAR SENSOR [SN-40](#)
 SONAR SYSTEM..... [SN-17](#), [SN-39](#)
 SPARK PLUG..... [EM-14](#)
 SPIRAL CABLE..... [SR-16](#)
 SQUEAK AND RATTLE TROUBLE DIAGNOSES..
[DLK-152](#), [EXT-10](#), [GW-5](#), [INT-20](#), [IP-8](#), [MIR-14](#),
[RF-43](#), [SE-65](#)
 SRS AIR BAG SYSTEM..... [SRC-23](#)
 SRS AIR BAG WARNING LAMP DOES NOT TURN
 OFF [SRC-143](#)
 SRS AIR BAG WARNING LAMP DOES NOT TURN
 ON [SRC-142](#)
 STALL TEST [TM-84](#)
 STARTER MOTOR..... [STR-19](#), [STR-20](#)
 STARTING SYSTEM..... [STR-5](#), [STR-6](#), [STR-18](#)
 STEERING ANGLE SENSOR. [BRC-172](#), [BRC-370](#)
 STEERING COLUMN [ST-17](#), [ST-27](#), [ST-32](#)
 STEERING COLUMN COVERS [IP-18](#)
 STEERING GEAR AND LINKAGE... [ST-19](#), [ST-39](#),
[ST-48](#), [ST-51](#)
 STEERING KNUCKLE [FSU-17](#)
 STEERING SWITCH..... [AV-170](#), [MWI-57](#)
 STEERING SWITCHES [AV-184](#)
 STEERING WHEEL [ST-15](#), [ST-30](#)
 STEERING WHEEL TURNING FORCE IS HEAVY
 OR LIGHT [STC-34](#)
 STEP LAMP CIRCUIT..... [INL-45](#)
 STOP LAMP [EXL-58](#), [EXL-178](#)
 STRG BRANCH LINE CIRCUIT. [LAN-72](#), [LAN-103](#),
[LAN-121](#), [LAN-140](#), [LAN-164](#), [LAN-197](#),
[LAN-232](#)
 STRUCTURE AND OPERATION..... [EC-31](#), [TM-20](#)
 SUBWOOFER..... [AV-193](#)
 SUNLOAD SENSOR..... [HAC-105](#)
 SUNSHADE [RF-72](#)
 SUNSHADE MOTOR ASSEMBLY [RF-19](#), [RF-54](#)
 SUNSHADE SYSTEM DOES NOT OPERATE
 PROPERLY [RF-39](#)
 SYSTEM (INTEGRATED HOMELINK
 TRANSMITTER) [DLK-33](#)
 SYSTEM (INTELLIGENT KEY SYSTEM)... [DLK-21](#)
 SYSTEM INITIALIZATION [PWC-30](#)
 SYSTEM SETTING [HAC-51](#)

SYSTEM SETTINGS CANNOT BE TURNED ON/
OFF ON THE INTEGRAL SWITCH... [BRC-351](#),
[DAS-165](#)

T

TAIL LAMP CIRCUIT [EXL-81](#), [EXL-199](#)
TAKE AWAY WARNING DOES NOT OPERATE
[DLK-146](#)
TCM [TM-47](#), [TM-191](#)
TCM BRANCH LINE CIRCUIT .. [LAN-69](#), [LAN-100](#),
[LAN-118](#), [LAN-137](#), [LAN-161](#), [LAN-194](#),
[LAN-229](#)
TCU [AV-53](#), [AV-201](#)
TCU BRANCH LINE CIRCUIT ... [LAN-78](#), [LAN-238](#)
TEL ANTENNA [AV-202](#)
TELEMATICS SWITCH [AV-203](#)
TELEMATICS SYSTEM [AV-32](#)
TELESCOPIC MOTOR [ADP-121](#)
TELESCOPIC SENSOR [ADP-105](#)
TELESCOPIC SWITCH [ADP-82](#)
THE AMBIENT TEMPERATURE DISPLAY IS
INCORRECT [MWI-67](#)
THE BRAKING DISTANCE IS LONG [BRC-159](#),
[BRC-357](#)
THE DOOR OPEN WARNING CONTINUES
DISPLAYING, OR DOES NOT DISPLAY [MWI-64](#)
THE FUEL GAUGE INDICATOR DOES NOT
OPERATE [MWI-59](#)
THE LIGHT REMINDER WARNING DOES NOT
SOUND [WCS-32](#)
THE LOW WASHER FLUID WARNING
CONTINUES DISPLAYING, or DOES NOT
DISPLAY [MWI-63](#)
THE METER CONTROL SWITCH IS INOPERATIVE
[MWI-60](#)
THE OIL PRESSURE WARNING CONTINUES
DISPLAYING, OR DOES NOT DISPLAY [MWI-61](#)
THE PARKING BRAKE RELEASE WARNING
CONTINUES DISPLAYING, OR DOES NOT
DISPLAY [MWI-62](#)
THE PARKING BRAKE RELEASE WARNING
CONTINUES SOUNDING, OR DOES NOT
SOUND [WCS-34](#)
THE SEAT BELT WARNING CONTINUES
SOUNDING, OR DOES NOT SOUND [WCS-33](#)
THE STEERING SWITCHES ARE INOPERATIVE.
[MWI-66](#)
THE SYSTEM DOES NOT DETECT THE VEHICLE
AHEAD AT ALL [CCS-131](#), [DAS-169](#)
THE TRUNK OPEN WARNING CONTINUES
DISPLAYING, OR DOES NOT DISPLAY [MWI-65](#)
THERMOSTAT AND THERMOSTAT HOUSING
[CO-23](#)
THREE WAY CATALYST [EM-36](#)
THROTTLE VALVE CLOSED POSITION
LEARNING [EC-159](#)

TIGHTENING TORQUE OF STANDARD BOLTS ...
[GI-19](#)
TILT & TELESCOPIC SWITCH GROUND CIRCUIT
[ADP-93](#)
TILT MOTOR [ADP-119](#)
TILT SENSOR [ADP-103](#)
TILT SWITCH [ADP-80](#)
TIMING CHAIN [EM-66](#)
TIRE PRESSURE MONITORING SYSTEM. [WT-18](#)
TIRE PRESSURE RECEIVER [WT-72](#)
TIRE PRESSURE SENSOR [WT-68](#)
TOP TETHER STRAP CHILD RESTRAINT .. [SB-15](#)
TORQUE CONVERTER AND CONVERTER
HOUSING OIL SEAL [TM-215](#)
TOW TRUCK TOWING [GI-30](#)
TPMS [WT-54](#)
TRANSAXLE ASSEMBLY [TM-212](#)
TRANSVERSE LINK [FSU-13](#)
TROUBLE DIAGNOSIS [LAN-11](#)
TROUBLE DIAGNOSIS - SPECIFICATION VALUE
[EC-182](#)
TRUNK LAMP SWITCH [DLK-133](#)
TRUNK LID [DLK-186](#)
TRUNK LID OPENER ACTUATOR [DLK-131](#)
TRUNK LID OPENER CANCEL SWITCH [DLK-126](#),
[DLK-204](#)
TRUNK LID OPENER SWITCH [DLK-124](#), [DLK-205](#)
TRUNK LID OPENER SYSTEM [DLK-62](#)
TRUNK OPENER REQUEST SWITCH... [DLK-128](#),
[DLK-207](#)
TRUNK ROOM LAMP [INL-43](#), [INL-56](#)
TRUNK ROOM TRIM & TRUNK LID FINISHER
[INT-51](#)
TURN SIGNAL AND HAZARD WARNING LAMP
SYSTEM [EXL-47](#), [EXL-167](#)
TURN SIGNAL LAMP CIRCUIT .. [EXL-87](#), [EXL-205](#)
TWEETER [AV-168](#)

U

U0073 COMMUNICATION BUS A OFF [TM-87](#)
U0100 LOST COMMUNICATION (ECM A) .. [TM-88](#)
U0101 CAN COMM CIRCUIT [EC-194](#)
U0104 ADAS CAN 1 [DAS-152](#)
U0121 VDC CAN 2 [CCS-104](#), [DAS-55](#)
U0126 STRG SEN CAN 1 [CCS-106](#)
U0140 LOST COMMUNICATION (BCM) [TM-89](#)
U0141 LOST COMMUNICATION (BCM A) .. [TM-90](#)
U0155 LOST COMMUNICATION (IPC) [TM-91](#)
U0235 ICC SENSOR CAN 1 [DAS-57](#)
U0300 CAN COMMUNICATION DATA [TM-92](#)
U0401 ECM CAN 1 [CCS-107](#), [DAS-58](#)
U0402 TCM CAN 1 [DAS-60](#)
U0405 ADAS CAN 2 [DAS-154](#)
U0415 VDC CAN 1 [CCS-108](#), [DAS-62](#)
U0415 VEHICLE SPEED SIG [BCS-69](#)
U0428 STEERING ANGLE SENSOR [AV-246](#)

U0428 STRG SEN CAN 2.....CCS-110
 U0433 DIST SEN CAN CIRC 2.....DAS-64
 U1000 CAN COMM CIRCUITADP-58, AV-109,
 AV-248, BCS-67, BRC-144, BRC-338, CCS-111,
 DAS-65, DAS-156, DLK-72, EC-195, HAC-54,
 MWI-45, PCS-28, PCS-59, SEC-56, SN-27,
 SRC-42, STC-30, TM-94, WT-51
 U1000-00 CAN COMM CIRCUITDAS-264
 U1001 CAN COMM CIRCUITEC-196
 U1010 CONTROL UNIT (CAN)....ADP-59, AV-111,
 AV-250, BCS-68, CCS-112, DAS-159, DLK-73,
 HAC-55, MWI-46, PCS-30, PCS-61, SEC-57,
 SN-28, SRC-43, WT-52
 U1117 LOST COMMUNICATION (ABS)TM-95
 U111A REAR CAMERA IMAGE SIGNAL CIRCUIT
 AV-251
 U111B SIDE CAMERA RH IMAGE SIGNAL
 CIRCUITAV-254
 U111C FRONT CAMERA IMAGE SIGNAL CIRCUIT
 AV-257
 U111D SIDE CAMERA LH IMAGE SIGNAL
 CIRCUITAV-260
 U1223 CONFIG UNFINISH.....AV-112
 U1231 BOSE AMP.AV-113
 U1232 STEERING ANGLE SENSOR.....AV-114,
 AV-263
 U1234 AV CONTROL UNITAV-115
 U1244 GPS ANTENNA CONNAV-116
 U1258 SATELLITE RADIO ANTENNAAV-117
 U1267 METER CONNAV-119
 U12B7 USB CONNAV-121
 U12BE RADIO ANTENNA CONN.....AV-122
 U1302 CAMERA POWER VOLTAV-264
 U1304 CAMERA IMAGE CALIBRATION....AV-268
 U1305 CONFIG UNFINISH.....AV-269
 U1321 CONFIGURATION.....DAS-67
 U1503 SIDE RDR L CAN 2.....DAS-68
 U1504 SIDE RDR L CAN 1.....DAS-70
 U1505 SIDE RDR R CAN 2DAS-72
 U1506 SIDE RDR R CAN 1DAS-74
 U1507 LOST COMM(SIDE RDR R).....DAS-76
 U1508 LOST COMM(SIDE RDR L)DAS-77
 U153A CVT MESSAGE COUNTER FAILURE
 CCS-115
 U153B CVT CHECK SUM FAILURECCS-116
 U1601, U1609 FRONT DOOR SPEAKER..AV-139
 U1603, U160B FRONT DOOR TWEETER. AV-142
 U1626, U162E TWEETERAV-145
 U162A CENTER SPEAKERAV-148
 U170A, U170E REAR DOOR SPEAKER ...AV-150
 U1721, U1729 REAR SUBWOOFERAV-153
 U1A01 TCUAV-124
 U1A02 TCUAV-125
 U1A05 TCUAV-126
 U1A07 TEL ANTENNAAV-128
 U1A08 TEL ANTENNAAV-129

U1A0B MICROPHONEAV-131
 U1A0C MICROPHONEAV-133
 U1A0E TELEMATICS SWITCHAV-135
 U1A0F TELEMATICS SWITCH.....AV-137
 U1A34-00 BRAKE CONTROL COMMUNICATION
 DAS-265
 U1A35-00 BRAKE CONTROL COMMUNICATION
 DAS-267
 U1A36-00 BCM/IPDM COMMUNICATIONDAS-269
 U1A39-00 COMBINATION METER
 COMMUNICATIONDAS-271
 U1A3B-00 TCM COMMUNICATIONDAS-273
 U1A42-00 STEERING ANGLE SENSOR
 COMMUNICATIONDAS-275
 U1A43-00 STEERING ANGLE SENSOR
 COMMUNICATIONDAS-277
 U1A48-00 ECM COMMUNICATIONDAS-279
 U1A4A-00 CONTROL MODULE (CAN)...DAS-281
 U1A4B-00 CONTROL MODULE (CAN)...DAS-282
 U1A4E-00 ECM COMMUNICATIONDAS-283
 UNBALANCE STEERING WHEEL TURNING
 FORCE (TORQUE VARIATION).....STC-37
 UNBALANCE STEERING WHEEL TURNING
 FORCE AND RETURN BETWEEN RIGHT AND
 LEFTSTC-36
 UNEXPECTED BRAKE PEDAL REACTION
 BRC-158, BRC-356
 UNLOCK SENSORDLK-107
 USB CONNECTOR.....AV-172
 USB INTERFACE AND AUX IN JACK.....AV-186

V

VACUUM LINES.....BR-9, BR-34
 VALVE TIMING CONTROLEM-55
 VANITY MIRROR LAMPINL-52
 VARIABLE INDUCTION AIR SYSTEMEC-571
 VDC OFF INDICATOR LAMP . BRC-155, BRC-348
 VDC OFF SWITCH BRC-149, BRC-170, BRC-342,
 BRC-368
 VDC WARNING LAMPBRC-154, BRC-347
 VEHICLE JERKS DURINGBRC-162, BRC-360
 VEHICLE SECURITY ALARM DOES NOT
 ACTIVATESEC-133
 VEHICLE SECURITY SYSTEMSEC-42
 VEHICLE SECURITY SYSTEM CANNOT BE SET
 SEC-131
 VENTILATION SYSTEMVTL-6
 VIN REGISTRATION.....EC-163

W

WARNING BUZZER.....DAS-176
 WARNING CHIME SYSTEM.....WCS-18
 WARNING CHIME SYSTEM SYMPTOMS WCS-31
 WASHER FLUID LEVEL SWITCHWW-53
 WASHER FLUID LEVEL SWITCH CIRCUITMWI-56

WASHER MOTOR CIRCUIT	WW-36
WASHER NOZZLE AND TUBE.....	WW-54
WASHER SWITCH.....	WW-39
WASHER TANK.....	WW-50
WATER OUTLET AND WATER PIPING	CO-25
WATER PUMP.....	CO-18
WHEEL.....	WT-63
WHEEL ALIGNMENT.....	FSU-7
WHEEL AND TIRE.....	WT-67
WHEEL HUB.....	RAX-5, RAX-6
WHEEL SENSOR.....	BRC-164, BRC-362
WIND DEFLECTOR.....	RF-70
WINDSHIELD GLASS.....	GW-11
WIPER AND WASHER FUSE.....	WW-29
WIPER AND WASHER SWITCH.....	WW-59
WIPER AND WASHER SYSTEM.....	WW-23
WIPER AND WASHER SYSTEM SYMPTOMS	WW-40