

SECTION BCS

BODY CONTROL SYSTEM

CONTENTS

BASIC INSPECTION	3	COMMON ITEM : CONSULT-III Function (BCM - COMMON ITEM)	17
INSPECTION AND ADJUSTMENT	3	DOOR LOCK	18
ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT (BCM)	3	DOOR LOCK : CONSULT-III Function (BCM - DOOR LOCK)	18
ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT (BCM) : Description	3	REAR WINDOW DEFOGGER	19
ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT (BCM) : Special Repair Requirement	3	REAR WINDOW DEFOGGER : CONSULT-III Function (BCM - REAR DEFOGGER)	20
CONFIGURATION (BCM)	3	BUZZER	20
CONFIGURATION (BCM) : Description	3	BUZZER : CONSULT-III Function (BCM - BUZZER)	20
CONFIGURATION (BCM) : Special Repair Requirement	4	INT LAMP	20
CONFIGURATION (BCM) : Configuration list	5	INT LAMP : CONSULT-III Function (BCM - INT LAMP)	21
SYSTEM DESCRIPTION	7	HEADLAMP	22
BODY CONTROL SYSTEM	7	HEADLAMP : CONSULT-III Function (BCM - HEAD LAMP)	22
System Description	7	WIPER	24
Component Parts Location	8	WIPER : CONSULT-III Function (BCM - WIPER)	24
COMBINATION SWITCH READING SYSTEM	9	FLASHER	25
System Diagram	9	FLASHER : CONSULT-III Function (BCM - FLASHER)	25
System Description	9	INTELLIGENT KEY	26
SIGNAL BUFFER SYSTEM	13	INTELLIGENT KEY : CONSULT-III Function (BCM - INTELLIGENT KEY)	26
System Diagram	13	COMB SW	30
System Description	13	COMB SW : CONSULT-III Function (BCM - COMB SW)	30
POWER CONSUMPTION CONTROL SYSTEM	14	BCM	31
System Diagram	14	BCM : CONSULT-III Function (BCM - BCM)	31
System Description	14	IMMU	31
Component Parts Location	16	IMMU : CONSULT-III Function (BCM - IMMU)	31
DIAGNOSIS SYSTEM (BCM)	17		
COMMON ITEM	17		

A
B
C
D
E

F
G
H
I
J
K
L
M
N
O

BCS

P

BATTERY SAVER	31	Diagnosis Procedure	42
BATTERY SAVER : CONSULT-III Function (BCM - BATTERY SAVER)	31		
TRUNK	33	COMBINATION SWITCH INPUT CIRCUIT	43
TRUNK : CONSULT-III Function (BCM - TRUNK)	33	Diagnosis Procedure	43
THEFT ALM	33	COMBINATION SWITCH OUTPUT CIRCUIT	45
THEFT ALM : CONSULT-III Function (BCM - THEFT)	33	Diagnosis Procedure	45
RETAINED PWR	34	ECU DIAGNOSIS INFORMATION	47
RETAINED PWR : CONSULT-III Function (BCM - RETAINED PWR)	35	BCM (BODY CONTROL MODULE)	47
SIGNAL BUFFER	35	Reference Value	47
SIGNAL BUFFER : CONSULT-III Function (BCM - SIGNAL BUFFER)	35	Wiring Diagram - BCM -	71
AIR PRESSURE MONITOR	35	Fail-safe	86
AIR PRESSURE MONITOR : Diagnosis Description	35	DTC Inspection Priority Chart	89
AIR PRESSURE MONITOR : CONSULT-III Function (BCM - AIR PRESSURE MONITOR)	36	DTC Index	90
DTC/CIRCUIT DIAGNOSIS	38	SYMPTOM DIAGNOSIS	92
U1000 CAN COMM	38	COMBINATION SWITCH SYSTEM SYMPTOMS	92
Description	38	Symptom Table	92
DTC Logic	38	PRECAUTION	93
Diagnosis Procedure	38	PRECAUTIONS	93
U1010 CONTROL UNIT (CAN)	39	FOR USA AND CANADA	93
DTC Logic	39	FOR USA AND CANADA : Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	93
Diagnosis Procedure	39	FOR MEXICO	93
U0415 VEHICLE SPEED SIG	40	FOR MEXICO : Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	93
Description	40	REMOVAL AND INSTALLATION	95
DTC Logic	40	BCM (BODY CONTROL MODULE)	95
Diagnosis Procedure	40	Exploded View	95
B2562 LOW VOLTAGE	41	Removal and Installation	95
DTC Logic	41	COMBINATION SWITCH	96
Diagnosis Procedure	41	Exploded View	96
POWER SUPPLY AND GROUND CIRCUIT	42	Removal and Installation	96

INSPECTION AND ADJUSTMENT

< BASIC INSPECTION >

BASIC INSPECTION

INSPECTION AND ADJUSTMENT

ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT (BCM)

ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT (BCM) : Description

INFOID:0000000005518260

BEFORE REPLACEMENT

When replacing BCM, save or print current vehicle specification with CONSULT-III configuration before replacement.

NOTE:

If "READ CONFIGURATION" can not be used, use the "WRITE CONFIGURATION - Manual selection" after replacing BCM.

AFTER REPLACEMENT

CAUTION:

- When replacing BCM, you must perform "WRITE CONFIGURATION" with CONSULT-III.
- Complete the procedure of "WRITE CONFIGURATION" in order.
- If you set incorrect "WRITE CONFIGURATION", incidents might occur.
- Configuration is different for each vehicle model. Confirm configuration of each vehicle model.
- When replacing BCM, perform the system initialization (NATS).

ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT (BCM) : Special Repair Requirement

INFOID:0000000005518261

1. SAVING VEHICLE SPECIFICATION

CONSULT-III Configuration

Perform "READ CONFIGURATION" to save or print current vehicle specification. Refer to [BCS-3, "CONFIGURATION \(BCM\) : Description"](#).

NOTE:

If "READ CONFIGURATION" can not be used, use the "WRITE CONFIGURATION - Manual selection" after replacing BCM.

>> GO TO 2.

2. REPLACE BCM

Replace BCM. Refer to [BCS-95, "Exploded View"](#).

>> GO TO 3.

3. WRITING VEHICLE SPECIFICATION

CONSULT-III Configuration

Perform "WRITE CONFIGURATION - Config file" or "WRITE CONFIGURATION - Manual selection" to write vehicle specification. Refer to [BCS-4, "CONFIGURATION \(BCM\) : Special Repair Requirement"](#).

BCS

>> GO TO 4.

4. INITIALIZE BCM (NATS)

Perform BCM initialization. (NATS)

N

>> WORK END CONFIGURATION (BCM)

CONFIGURATION (BCM) : Description

INFOID:0000000005518262

Vehicle specification needs to be written with CONSULT-III because it is not written after replacing BCM.

INSPECTION AND ADJUSTMENT

< BASIC INSPECTION >

Configuration has three functions as follows

Function	Description
READ CONFIGURATION	<ul style="list-style-type: none">• Reads the vehicle configuration of current BCM.• Saves the read vehicle configuration.
WRITE CONFIGURATION - Manual selection	Writes the vehicle configuration with manual selection.
WRITE CONFIGURATION - Config file	Writes the vehicle configuration with saved data.

NOTE:

Manual setting item: Items which need selection by vehicle specifications

Automatic setting item: Items which are written automatically (Setting can not be changed)

CAUTION:

- When replacing BCM, you must perform “WRITE CONFIGURATION” with CONSULT-III.
- Complete the procedure of “WRITE CONFIGURATION” in order.
- If you set incorrect “WRITE CONFIGURATION”, incidents might occur.
- Configuration is different for each vehicle model. Confirm configuration of each vehicle model.
- Never perform “WRITE CONFIGURATION” except for new BCM.

CONFIGURATION (BCM) : Special Repair Requirement

INFOID:000000005518263

1. WRITING MODE SELECTION

(E)CONSULT-III Configuration

Select “CONFIGURATION” of BCM.

When writing saved data>>GO TO 2.

When writing manually>>GO TO 3.

2. PERFORM “WRITE CONFIGURATION - CONFIG FILE”

(E)CONSULT-III Configuration

Perform “WRITE CONFIGURATION - Config file”.

>> WORK END

3. PERFORM “WRITE CONFIGURATION - MANUAL SELECTION”

(E)CONSULT-III Configuration

1. Select “WRITE CONFIGURATION - Manual selection”.
2. Identify the correct model and configuration list. Refer to [BCS-5. "CONFIGURATION \(BCM\) : Configuration list"](#).
3. Confirm and/or change setting value for each item.

CAUTION:

Thoroughly read and understand the vehicle specification. Incorrect settings may result in abnormal control of ECU.

4. Select “SETTING”.

CAUTION:

Make sure to select “SETTING” even if the indicated configuration of brand new BCM is same as the desirable configuration. If not, configuration which is set automatically by selecting vehicle model can not be memorized.

5. When “COMMAND FINISHED”, select “END”.

>> GO TO 4.

4. OPERATION CHECK

Confirm that each function controlled by BCM operates normally.

>> WORK END

INSPECTION AND ADJUSTMENT

< BASIC INSPECTION >

CONFIGURATION (BCM) : Configuration list

INFOID:000000005518264

CAUTION:

Thoroughly read and understand the vehicle specification. Incorrect settings may result in abnormal control of ECU.

EXCEPT FOR MEXICO

MANUAL SETTING ITEM		NOTE
Items	Setting value	
AUTO LIGHT	WITH ⇔ WITHOUT	—
DTRL	WITH ⇔ WITHOUT	<ul style="list-style-type: none"> • WITH: With daytime running light system • WITHOUT: Without daytime running light system
AV C/U	WITH ⇔ WITHOUT	—
AUTO BACK DOOR	WITH ⇔ WITHOUT	—
THEFT ALM AREA	WITHOUT ⇔ MODE2	<ul style="list-style-type: none"> • WITHOUT: Without vehicle security system • MODE2: With vehicle security system
I-KEY	WITH	—
RAIN SENSOR	WITH ⇔ WITHOUT	—
Key Fob Type	MODE7 ⇔ MODE9	<ul style="list-style-type: none"> • MODE7: With automatic back door system • MODE9: Without automatic back door system

⇒: Items which confirm vehicle specifications

AUTO SETTING ITEM		NOTE
Items	Setting value	
H/L BULB	DEFAULT	—
FR FOG LAMP	WITH	—
RR FOG LAMP	WITH	Even on a vehicle without rear fog lamp. It displays "WITH".
TRANSMISSION	AT with ABS	—
TPMS	WITH	—
TIRE PRESSURE	230kPa	—
TR OPEN SW (INT)	MODE1	—
FOG LAMP BULB	SINGLE BULB	—
DI LMP VARIAT	MODE2	—
LIGHT RECOG	MODE4	—
RR WIPER GND	MODE1	—
HAZARD SW TYPE	MODE1	—
BCM AC CONTROL	MODE1	—
Trunk/Glass Hatch select	Glass Hatch	Even on a vehicle without glass hatch. It displays "Glass Hatch".
WELCOME LIGHT SELECT	WITHOUT	—
WELCOME LIGHT TIMER	MODE1	—
REAR WIPER	WITH	—
TRUNK ACT OUTPUT	MODE2	—
RAIN SEN TYPE	MODE2	—
DROP WIP FUNCTION	WITHOUT	—
WELCOME LIGHT TIMER2	MODE1	—

FOR MEXICO

A

B

C

D

E

F

G

H

I

J

K

L

BCS

N

O

P

INSPECTION AND ADJUSTMENT

< BASIC INSPECTION >

MANUAL SETTING ITEM		NOTE
Items	Setting value	
AUTO LIGHT	WITH ⇔ WITHOUT	—
DTRL	WITHOUT	—
AV C/U	WITH ⇔ WITHOUT	—
AUTO BACK DOOR	WITHOUT	—
THEFT ALM AREA	MODE2	—
HAZARD SW TYPE	MODE1	—
I-KEY	WITH	—
RAIN SENSOR	WITH ⇔ WITHOUT	—
Key Fob Type	MODE9	—

⇒: Items which confirm vehicle specifications

AUTO SETTING ITEM		NOTE
Items	Setting value	
H/L BULB	DEFAULT	—
FR FOG LAMP	WITH	—
RR FOG LAMP	WITH	Even on a vehicle without rear fog lamp. It displays "WITH".
TRANSMISSION	AT with ABS	—
TPMS	WITHOUT	—
TR OPEN SW (INT)	MODE1	—
FOG LAMP BULB	SINGLE BULB	—
DI LMP VARIAT	MODE2	—
LIGHT RECOG	MODE4	—
RR WIPER GND	MODE1	—
BCM AC CONTROL	MODE1	—
Trunk/Glass Hatch select	Glass Hatch	Even on a vehicle without glass hatch. It displays "Glass Hatch".
WELCOME LIGHT SELECT	WITHOUT	—
WELCOME LIGHT TIMER	MODE1	—
REAR WIPER	WITH	—
TRUNK ACT OUTPUT	MODE2	—
RAIN SEN TYPE	MODE2	—
DROP WIP FUNCTION	WITHOUT	—
WELCOME LIGHT TIMER2	MODE1	—

< SYSTEM DESCRIPTION >

SYSTEM DESCRIPTION

BODY CONTROL SYSTEM

System Description

INFOID:000000005518265

OUTLINE

- BCM (Body Control Module) controls the various electrical components. It inputs the information required to the control from CAN communication and the signal received from each switch and sensor.
- BCM has combination switch reading function for reading the operation status of combination switches (light, turn signal, wiper and washer) in addition to a function for controlling the operation of various electrical components. It also has the signal transmission function as the passed point of signal and the power saving control function that reduces the power consumption with the ignition switch OFF.
- BCM is equipped with the diagnosis function that performs the diagnosis with CONSULT-III and various settings.

BCM CONTROL FUNCTION LIST

System	Reference
Combination switch reading system	BCS-9, "System Diagram"
Signal buffer system	BCS-13, "System Diagram"
Power consumption control system	BCS-14, "System Diagram"
Auto light system	EXL-13, "System Diagram"
Turn signal and hazard warning lamp system	<ul style="list-style-type: none"> EXL-17, "System Diagram" (Xenon type headlamp) EXL-205, "System Diagram" (Halogen type headlamp)
Headlamp system	<ul style="list-style-type: none"> EXL-8, "System Diagram" (Xenon type headlamp) EXL-197, "System Diagram" (Halogen type headlamp)
Parking, license plate and tail lamps system	<ul style="list-style-type: none"> EXL-19, "System Diagram" (Xenon type headlamp) EXL-207, "System Diagram" (Halogen type headlamp)
Front fog lamp system	<ul style="list-style-type: none"> EXL-15, "System Diagram" (Xenon type headlamp) EXL-203, "System Diagram" (Halogen type headlamp)
Exterior lamp battery saver system	<ul style="list-style-type: none"> EXL-21, "System Diagram" (Xenon type headlamp) EXL-209, "System Diagram" (Halogen type headlamp)
Daytime running light system	<ul style="list-style-type: none"> EXL-11, "System Diagram" (Xenon type headlamp) EXL-199, "System Diagram" (Halogen type headlamp)
Interior room lamp control system	INL-5, "System Diagram"
Step lamp system	INL-5, "System Diagram"
Interior room lamp battery saver system	INL-8, "System Diagram"
Front wiper and washer system	<ul style="list-style-type: none"> WW-5, "WITH RAIN SENSOR : System Diagram" (With rain sensor) WW-9, "WITHOUT RAIN SENSOR : System Diagram" (Without rain sensor)
Rear wiper and washer system	WW-14, "System Diagram"
Warning chime system	WCS-5, "WARNING CHIME SYSTEM : System Diagram"
Door lock system	DLK-14, "System Diagram"
Automatic back door system	DLK-44, "System Diagram"
Automatic drive positioner system	ADP-13, "AUTOMATIC DRIVE POSITIONER SYSTEM : System Diagram"
Nissan Vehicle Immobilizer System (NVIS) - NATS	SEC-15, "System Diagram"
Vehicle security system	SEC-20, "System Diagram"
Panic alarm	

A

B

C

D

E

F

G

H

I

J

K

L

BCS

N

O

P

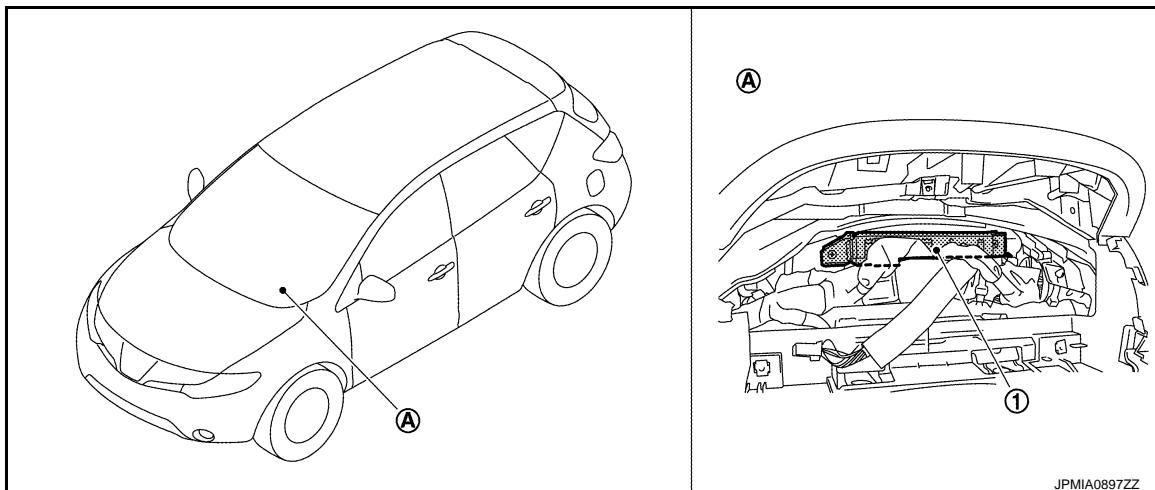
BODY CONTROL SYSTEM

< SYSTEM DESCRIPTION >

System	Reference
Rear window defogger system	<ul style="list-style-type: none">• DEF-4, "WITH BOSE SYSTEM : System Diagram" (With BOSE system)• DEF-6, "WITHOUT BOSE SYSTEM : System Diagram" (Without BOSE system)
Intelligent Key system/engine start system	DLK-18, "INTELLIGENT KEY SYSTEM : System Diagram"
Power window system	PWC-7, "System Diagram"
Retained accessory power (RAP) system	PWC-7, "System Description"
Tire pressure monitor system (TPMS) - AIR PRESSURE MONITOR	WT-8, "TIRE PRESSURE MONITORING SYSTEM : System Diagram"

Component Parts Location

INFOID:000000005518266



1. BCM
- A. Behind of combination meter

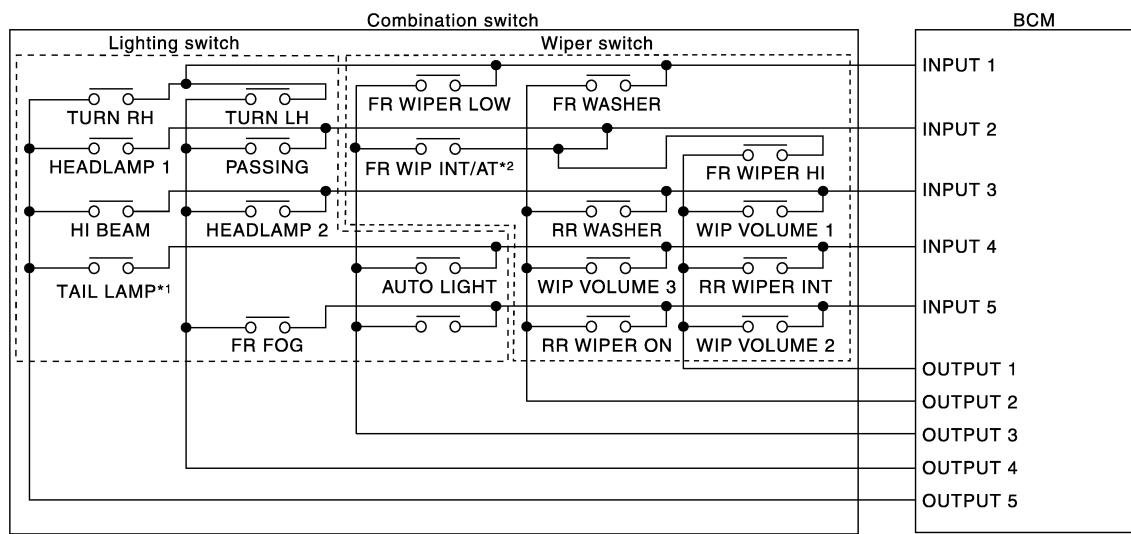
COMBINATION SWITCH READING SYSTEM

< SYSTEM DESCRIPTION >

COMBINATION SWITCH READING SYSTEM

System Diagram

INFOID:0000000005681334



JMMIA0292GB

NOTE:

- *1: TAIL LAMP switch links lighting switch 1ST position.
- *2: "FR WIP INT/AT" is FR WIPER INT/AUTO.

System Description

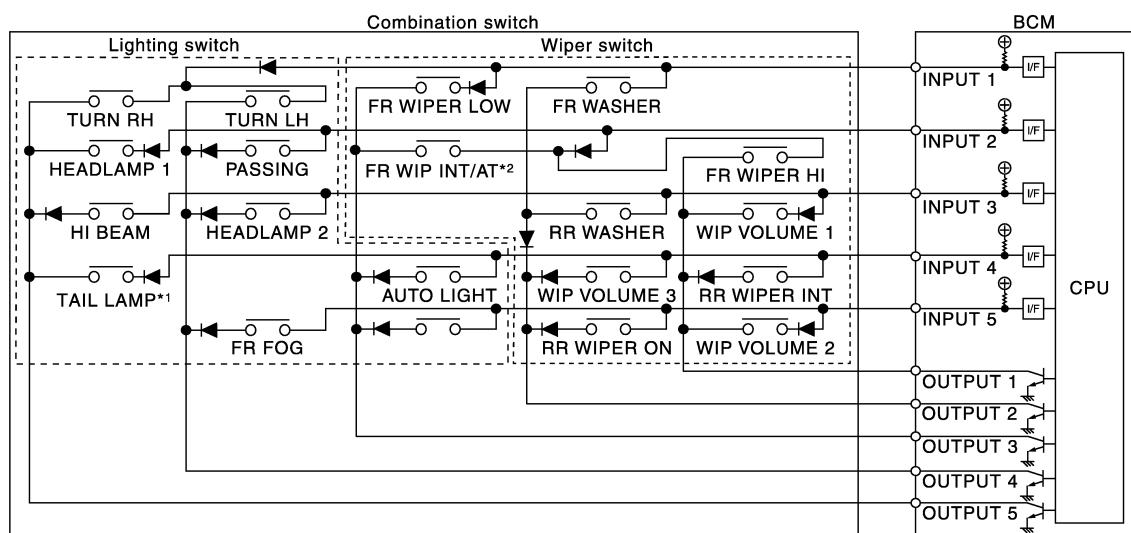
INFOID:0000000005681335

OUTLINE

- BCM reads the status of the combination switch (light, turn signal, wiper and washer) and recognizes the status of each switch.
- BCM is a combination of 5 output terminals (OUTPUT 1 - 5) and 5 input terminals (INPUT 1 - 5). It reads a maximum of 20 switch status.

COMBINATION SWITCH MATRIX

Combination switch circuit



JMMIA0293GB

NOTE:

- *1: TAIL LAMP switch links lighting switch 1ST position.
- *2: "FR WIP INT/AT" is FR WIPER INT/AUTO.

COMBINATION SWITCH READING SYSTEM

< SYSTEM DESCRIPTION >

Combination switch INPUT-OUTPUT system list

System	OUTPUT 1	OUTPUT 2	OUTPUT 3	OUTPUT 4	OUTPUT 5
INPUT 1	—	FR WASHER	FR WIPER LOW	TURN LH	TURN RH
INPUT 2	FR WIPER HI	—	FR WIPER INT/AUTO	PASSING	HEADLAMP 1
INPUT 3	WIP VOLUME 1	—	—	HEADLAMP 2	HI BEAM
INPUT 4	—	WIP VOLUME 3	AUTO LIGHT	—	TAIL LAMP
INPUT 5	WIP VOLUME 2	—	—	FR FOG	—

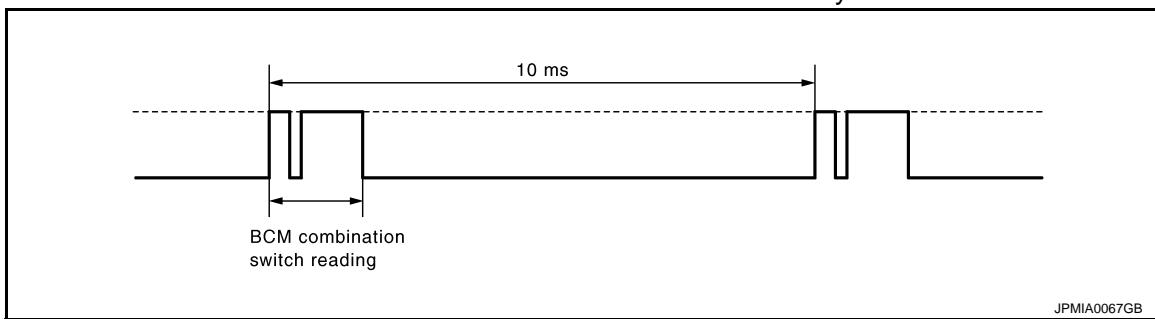
NOTE:

Headlamp has a dual system switch.

COMBINATION SWITCH READING FUNCTION

Description


- BCM reads the status of the combination switch at 10 ms interval normally.



NOTE:

BCM reads the status of the combination switch at 60 ms interval when BCM is controlled at low power consumption mode.

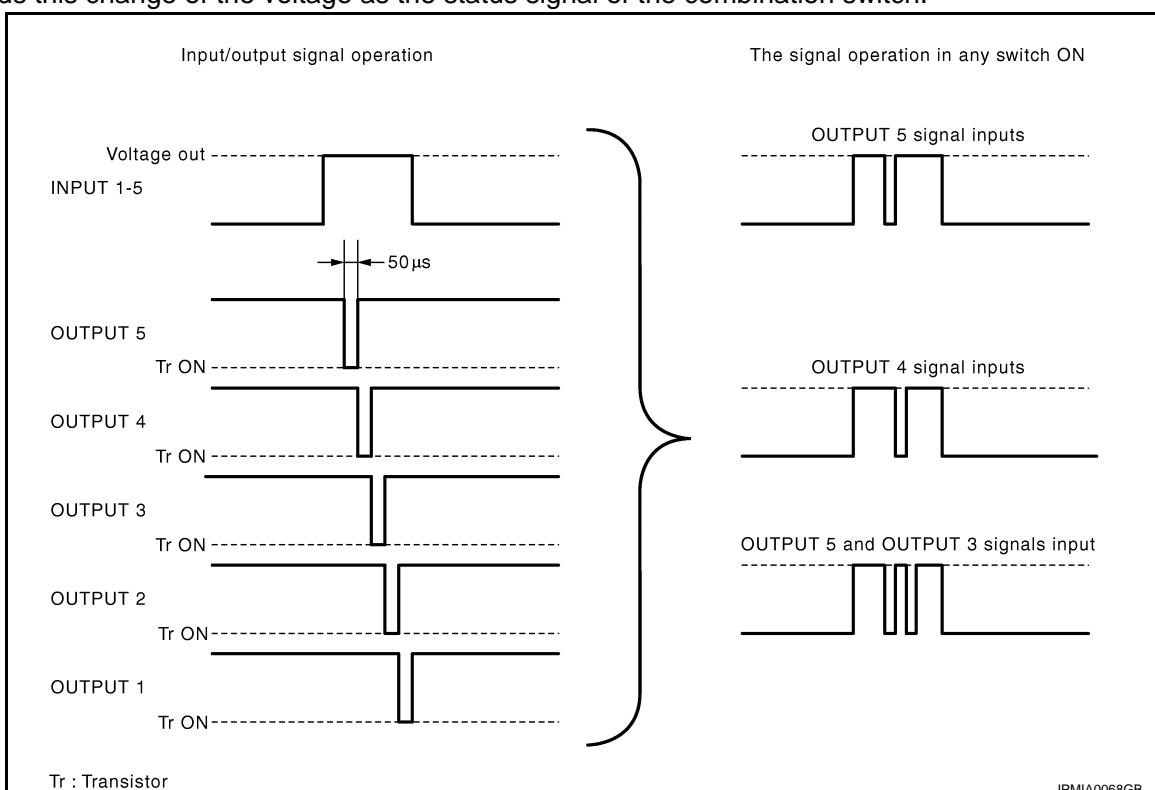- BCM operates as follows and judges the status of the combination switch.
- INPUT 1 - 5 outputs the voltage waveforms of 5 systems simultaneously.
- It operates the transistor on OUTPUT side in the following order: OUTPUT 5 → 4 → 3 → 2 → 1.
- The voltage waveform of INPUT corresponding to the formed circuit changes according to the operation of the transistor on OUTPUT side if any (1 or more) switches are ON.
- It reads this change of the voltage as the status signal of the combination switch.



COMBINATION SWITCH READING SYSTEM


< SYSTEM DESCRIPTION >

Operation Example

In the following operation example, the combination of the status signals of the combination switch is replaced as follows: INPUT 1 - 5 to "1 - 5" and OUTPUT 1 - 5 to "A - E".

Example 1: When a switch (TURN RH switch) is turned ON

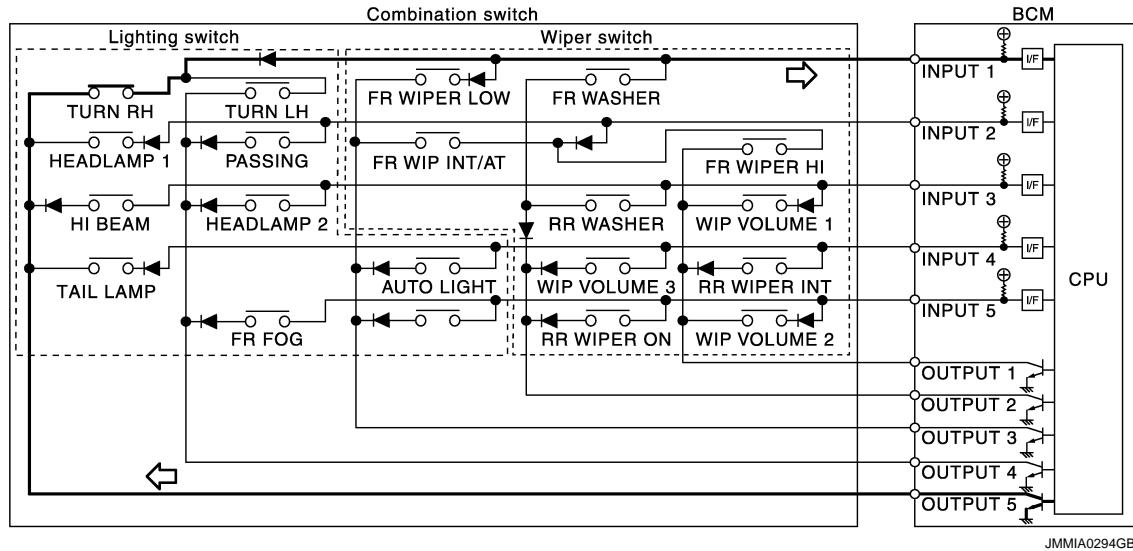
- The circuit between INPUT 1 and OUTPUT 5 is formed when the TURN RH switch is turned ON.



- BCM detects the combination switch status signal "1E" when the signal of OUTPUT 5 is input to INPUT 1.
- BCM judges that the TURN RH switch is ON when the signal "1E" is detected.

Example 2: When some switches (turn RH switch, front wiper LO switch) are turned ON

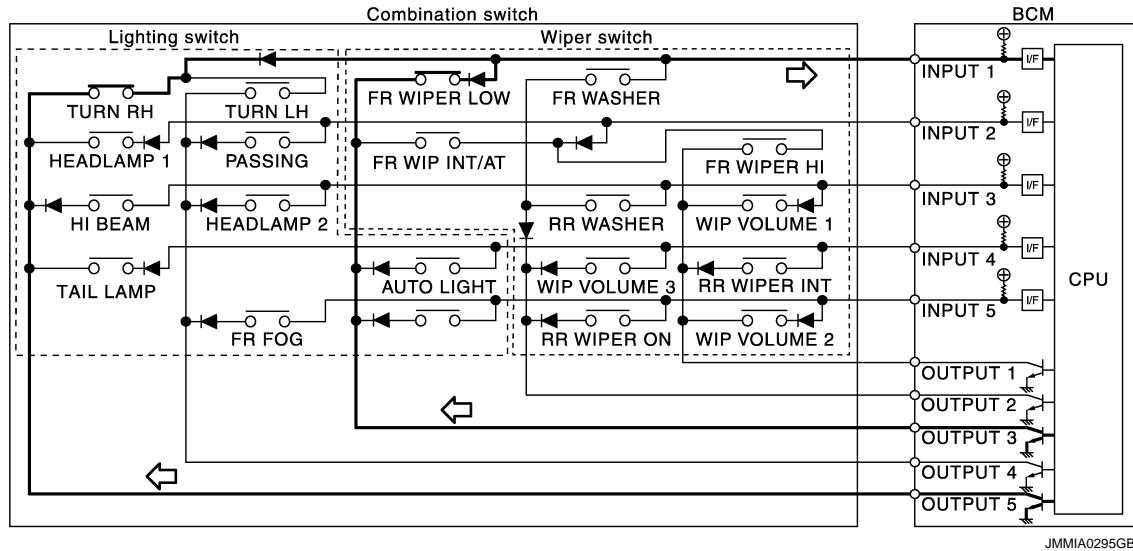- The circuits between INPUT 1 and OUTPUT 5 and between INPUT 1 and OUTPUT 3 are formed when the TURN RH switch and FR WIPER LOW switch are turned ON.



- BCM detects the combination switch status signal "1CE" when the signals of OUTPUT 3 and OUTPUT 5 are input to INPUT 1.
- BCM judges that the TURN RH switch and FR WIPER LOW switch are ON when the signal "1CE" is detected.

WIPER VOLUME DIAL POSITION

BCM judges the wiper volume dial 1 - 7 by the status of WIP VOLUME 1, 2 and 3 switches.

Wiper volume dial position	Switch status		
	WIP VOLUME 1	WIP VOLUME 2	WIP VOLUME 3
1	ON	ON	ON
2	ON	ON	OFF

COMBINATION SWITCH READING SYSTEM

< SYSTEM DESCRIPTION >

Wiper volume dial position	Switch status		
	WIP VOLUME 1	WIP VOLUME 2	WIP VOLUME 3
3	ON	OFF	OFF
4	OFF	OFF	OFF
5	OFF	OFF	ON
6	OFF	ON	ON
7	OFF	ON	OFF

NOTE:

For details of wiper volume dial position, refer to [WW-5, "WITH RAIN SENSOR : System Description"](#) (with rain sensor), [WW-9, "WITHOUT RAIN SENSOR : System Description"](#) (without rain sensor).

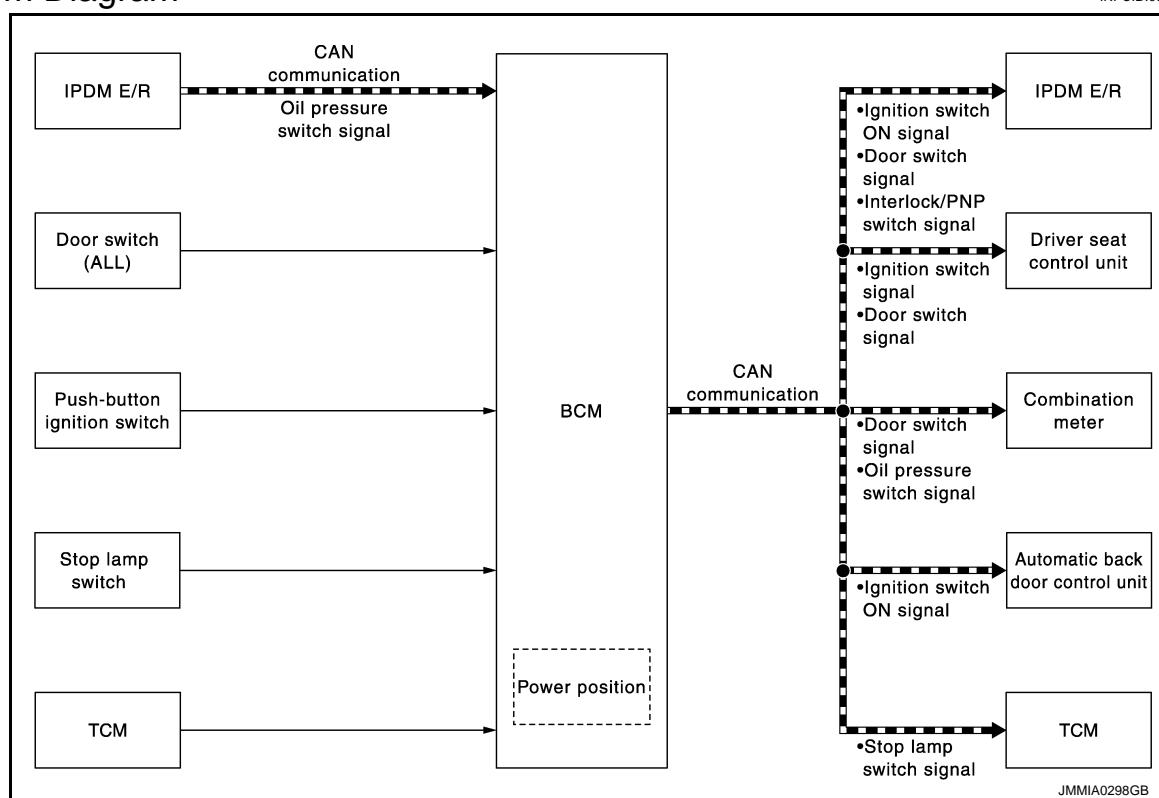
SIGNAL BUFFER SYSTEM

< SYSTEM DESCRIPTION >

SIGNAL BUFFER SYSTEM

System Diagram

INFOID:0000000005681336



System Description

INFOID:0000000005681337

OUTLINE

BCM has the signal transmission function that outputs/transmits each input/received signal to each unit.

Signal transmission function list

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

BCS

Signal name	Input	Output	Description
<ul style="list-style-type: none"> Ignition switch ON signal Ignition switch signal 	Push-button ignition switch (Push switch)	<ul style="list-style-type: none"> IPDM E/R (CAN) Driver seat control unit (CAN) Automatic back door control unit (CAN) 	Inputs the push-button ignition switch (push switch) signal and transmits the ignition switch status judged with BCM via CAN communication.
Door switch signal	Any door switch	<ul style="list-style-type: none"> Combination meter (CAN) IPDM E/R (CAN) Driver seat control unit (CAN) 	Inputs the door switch signal and transmits it via CAN communication.
Oil pressure switch signal	IPDM E/R (CAN)	Combination meter (CAN)	Transmits the received oil pressure switch signal via CAN communication.
Stop lamp switch signal	<ul style="list-style-type: none"> Stop lamp switch ICC brake hold relay (With ICC) 	TCM (CAN)	Inputs the stop lamp switch 1 signal, and stop lamp switch 2 signal or ICC brake hold relay (with ICC) signal, and transmits it via CAN communication.
Interlock/PNP switch signal	TCM	IPDM E/R (CAN)	Inputs the selector lever P/N position signal, and transmits the interlock/PNP switch signal via CAN communication.

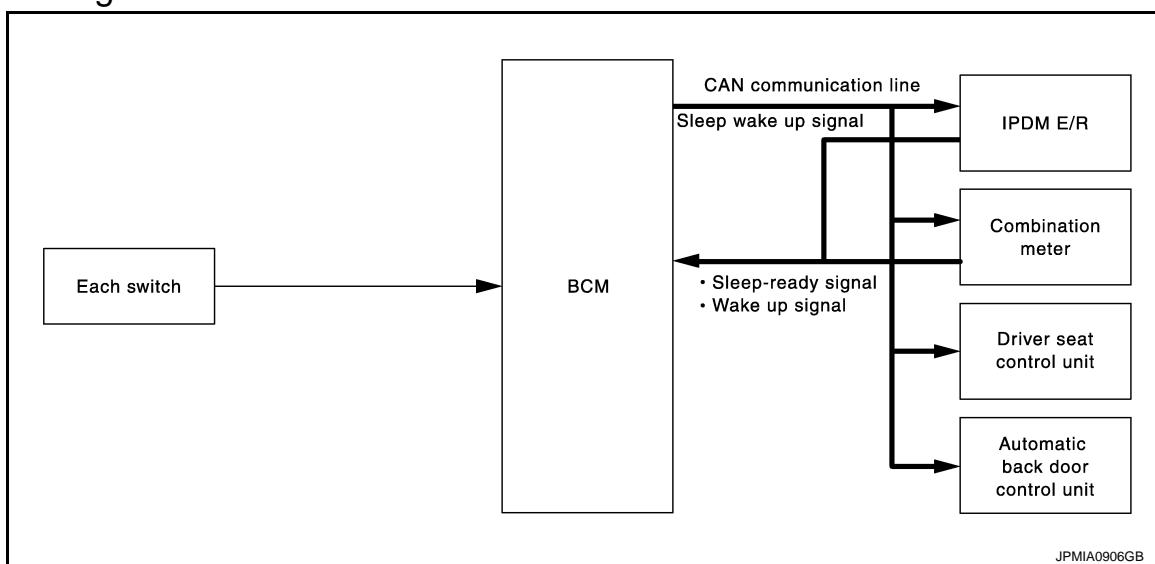
POWER CONSUMPTION CONTROL SYSTEM

< SYSTEM DESCRIPTION >

POWER CONSUMPTION CONTROL SYSTEM

System Diagram

INFOID:000000005518272



System Description

INFOID:000000005518273

OUTLINE

- BCM incorporates a power saving control function that reduces the power consumption according to the vehicle status.
- BCM switches the status (control mode) by itself with the power saving control function. It performs the sleep request to each unit (IPDM E/R, combination meter, driver seat control unit and automatic back door control unit) that operates with the ignition switch OFF.

Normal mode (wake-up)

- CAN communication is normally performed with other units
- Each control with BCM is operating properly

CAN communication sleep mode (CAN sleep)

- CAN transmission is stopped
- Control with BCM only is operating

Low power consumption mode (BCM sleep)

- Low power consumption control is active
- CAN transmission is stopped

LOW POWER CONSUMPTION CONTROL WITH BCM

BCM reduces the power consumption with the following operation in the low power consumption mode.

- The reading interval of the each switches changes from 10 ms interval to 60 ms interval.

Sleep mode activation

- BCM receives the sleep-ready signal (ready) from IPDM E/R and combination meter via CAN communication.
- BCM transmits the sleep wake up signal (sleep) to each unit when all of the CAN sleep conditions are fulfilled.
- Each unit stops the transmission of CAN communication with the sleep wake up signal. BCM is in CAN communication sleep mode.
- BCM is in the low power consumption mode and perform the low power consumption control when all of the BCM sleep conditions are fulfilled with CAN sleep condition.

POWER CONSUMPTION CONTROL SYSTEM

< SYSTEM DESCRIPTION >

Sleep condition

CAN sleep condition	BCM sleep condition
<ul style="list-style-type: none"> Receiving the sleep-ready signal (ready) from all units Ignition switch: OFF Vehicle security system and panic alarm: Not operation Warning chime: Not operation Intelligent Key system buzzer: Not operation Stop lamp switch: OFF Key slot (card switch) status: No change Turn signal indicator lamp: Not operation Exterior lamp: OFF Door lock status: No change CONSULT-III communication status: Not communication Meter display signal: Non-transmission Door switch status: No change Rear window defogger: OFF Auto back door: Not operation 	<ul style="list-style-type: none"> Interior room lamp battery saver: Time out RAP system: OFF Power window switch communication: No transmission Push-button ignition switch illumination: OFF Nissan Vehicle Immobilizer System (NVIS) - NATS: Not operation Remote keyless entry receiver communication status: No communication Tire pressure monitor system (TPMS) - AIR PRESSURE MONITOR: Stop LOCK indicator lamp: Not operation ACC indicator lamp: Not operation ON indicator lamp: Not operation

A

B

C

D

E

F

G

H

I

J

K

L

BCS

N

O

P

Wake-up operation

- BCM changes from the low power consumption mode to the CAN communication sleep mode when any of the BCM wake-up conditions is fulfilled. Only the control with BCM is activated.
- BCM transmits the sleep wake up signal (wake up) to each unit when any of the CAN wake-up conditions is fulfilled. It changes from the low power consumption mode or the CAN communication sleep mode to the normal mode.
- Each unit starts the transmission of CAN communication with the sleep wake up signal. In addition, the combination meter transmits the wake up signal to BCM via CAN communication to report the CAN communication start.

Wake-up condition

BCM wake-up condition	CAN wake-up condition
<ul style="list-style-type: none"> Power window switch communication: Receiving Remote keyless entry receiver communication: Receiving 	<ul style="list-style-type: none"> Receiving the sleep-ready signal (Not-ready) from any units Key slot (key switch): OFF → ON, ON → OFF Push-button ignition switch (push switch): OFF → ON Hazard switch: OFF → ON PASSING switch: OFF → ON, ON → OFF TAIL LAMP switch: OFF → ON Driver door switch: OFF → ON, ON → OFF Passenger door switch: OFF → ON, ON → OFF Rear RH door switch: OFF → ON, ON → OFF Rear LH door switch: OFF → ON, ON → OFF Back door switch: OFF → ON, ON → OFF Driver door request switch: OFF → ON Passenger door request switch: OFF → ON Back door request switch: OFF → ON Stop lamp switch: ON

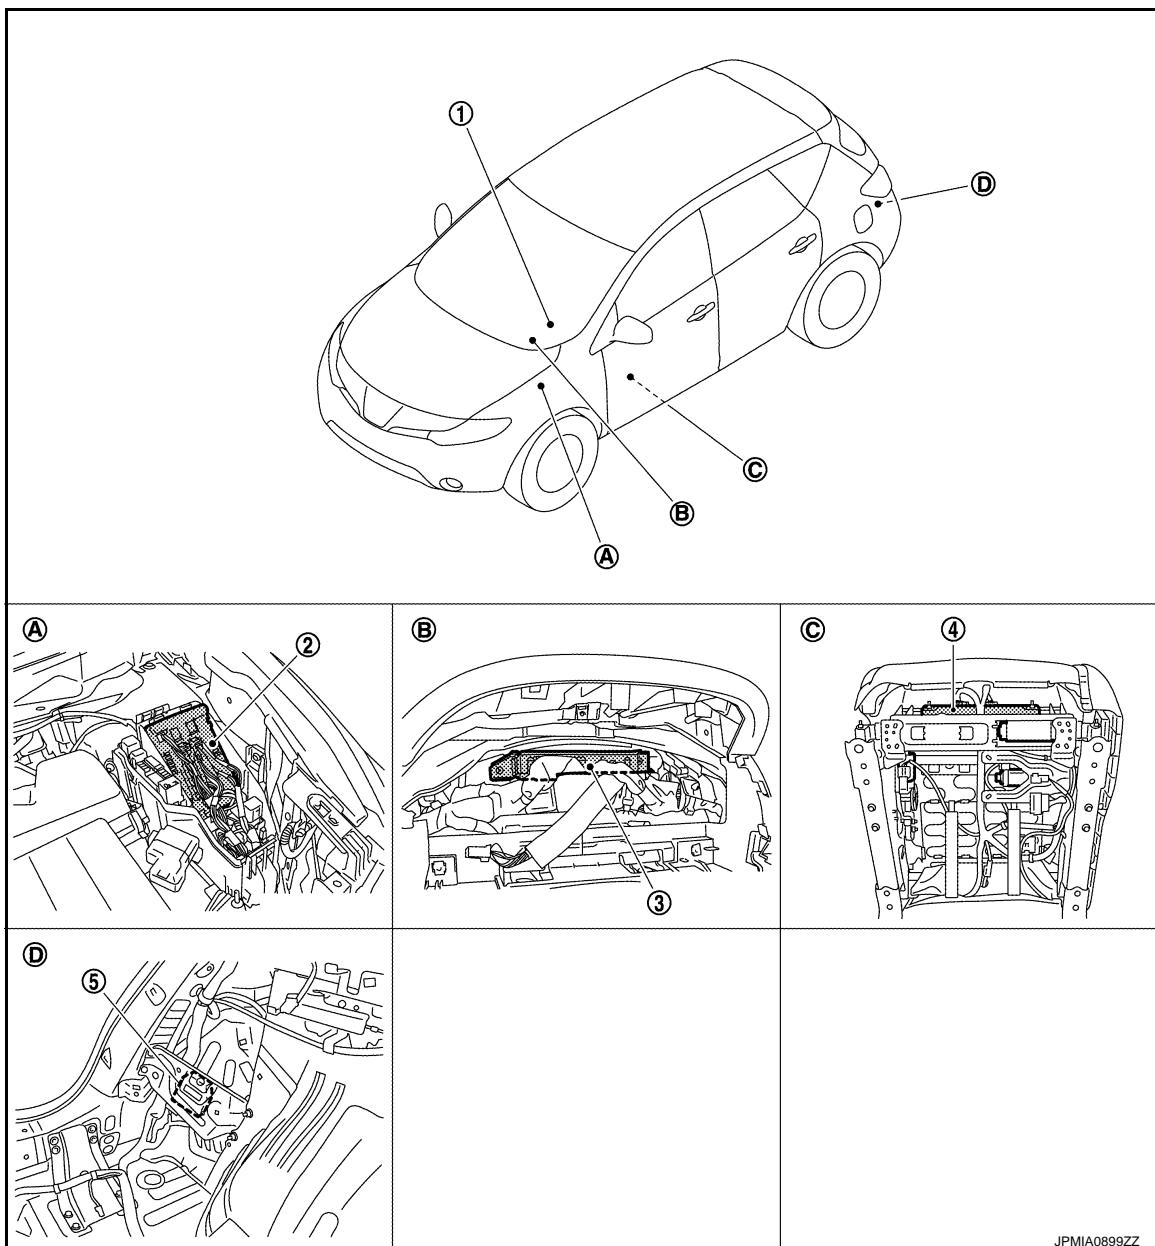
BCS

POWER CONSUMPTION CONTROL SYSTEM

< SYSTEM DESCRIPTION >

Component Parts Location

INFOID:000000005518274



- | | | |
|-------------------------------------|-------------------------------------|---|
| 1. Combination meter | 2. IPDM E/R | 3. BCM |
| 4. Driver seat control unit | 5. Automatic back door control unit | |
| A. Engine room (LH) | B. Behind of combination meter | C. Backside of the seat cushion (driver seat) |
| D. Dash side lower (Passenger side) | | |

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

DIAGNOSIS SYSTEM (BCM)

COMMON ITEM

COMMON ITEM : CONSULT-III Function (BCM - COMMON ITEM)

INFOID:000000005518275

APPLICATION ITEM

CONSULT-III performs the following functions via CAN communication with BCM.

Diagnosis mode	Function Description
Work Support	Changes the setting for each system function.
Self Diagnostic Result	Displays the diagnosis results judged by BCM.
CAN Diag Support Monitor	Monitors the reception status of CAN communication viewed from BCM. Refer to CONSULT-III operation manual.
Data Monitor	The BCM input/output signals are displayed.
Active Test	The signals used to activate each device are forcibly supplied from BCM.
Ecu Identification	The BCM part number is displayed.
Configuration	<ul style="list-style-type: none">• Read and save the vehicle specification.• Write the vehicle specification when replacing BCM.

SYSTEM APPLICATION

BCM can perform the following functions for each system.

NOTE:

It can perform the diagnosis modes except the following for all sub system selection items.

x: Applicable item

System	Sub system selection item	Diagnosis mode		
		Work Support	Data Monitor	Active Test
Door lock	DOOR LOCK	x	x	x
Rear window defogger	REAR DEFOGGER		x	x
Warning chime	BUZZER		x	x
Interior room lamp timer	INT LAMP	x	x	x
Exterior lamp	HEAD LAMP	x	x	x
Wiper and washer	WIPER	x ^{*1}	x	x
Turn signal and hazard warning lamps	FLASHER	x	x	x
—	AIR CONDITIONER ^{*2}			
• Intelligent Key system • Engine start system	INTELLIGENT KEY	x	x	x
Combination switch	COMB SW		x	
Body control system	BCM	x		
NVIS - NATS	IMMU		x	x
Interior room lamp battery saver	BATTERY SAVER	x	x	x
Back door opener system	TRUNK		x	x
Vehicle security system	THEFT ALM	x	x	x
RAP system	RETAINED PWR		x	
Signal buffer system	SIGNAL BUFFER		x	x
TPMS	TPMS (AIR PRESSURE MONITOR)	x	x	x

NOTE:

- *1: For models with rain sensor this mode is displayed, but is not used.
- *2: This item is displayed, but is not used.

FREEZE FRAME DATA (FFD)

A

B

C

D

E

F

G

H

I

J

K

L

BCS

N

O

P

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

The BCM records the following vehicle condition at the time a particular DTC is detected, and displays on CONSULT-III.

CONSULT screen item	Indication/Unit	Description
Vehicle Speed	km/h	Vehicle speed of the moment a particular DTC is detected
Odo/Trip Meter	km	Total mileage (Odometer value) of the moment a particular DTC is detected
Vehicle Condition	SLEEP>LOCK SLEEP>OFF LOCK>ACC ACC>ON RUN>ACC CRANK>RUN RUN>URGENT ACC>OFF OFF>LOCK OFF>ACC ON>CRANK OFF>SLEEP LOCK>SLEEP LOCK OFF ACC ON ENGINE RUN CRANKING	Power position status of the moment a particular DTC is detected While turning BCM status from low power consumption mode to normal mode (Power supply position is "LOCK") While turning BCM status from low power consumption mode to normal mode (Power supply position is "OFF".) While turning power supply position from "LOCK" to "ACC" While turning power supply position from "ACC" to "IGN" While turning power supply position from "RUN" to "ACC" (Vehicle is stopping and selector lever is except P position.) While turning power supply position from "CRANKING" to "RUN" (From cranking up the engine to run it) While turning power supply position from "RUN" to "ACC" (Emergency stop operation) While turning power supply position from "ACC" to "OFF" While turning power supply position from "OFF" to "LOCK" While turning power supply position from "OFF" to "ACC" While turning power supply position from "IGN" to "CRANKING" While turning BCM status from normal mode (Power supply position is "OFF".) to low power consumption mode While turning BCM status from normal mode (Power supply position is "LOCK".) to low power consumption mode Power supply position is "LOCK" (Ignition switch OFF with steering is locked.) Power supply position is "OFF" (Ignition switch OFF with steering is unlocked.) Power supply position is "ACC" (Ignition switch ACC) Power supply position is "IGN" (Ignition switch ON with engine stopped) Power supply position is "RUN" (Ignition switch ON with engine running) Power supply position is "CRANKING" (At engine cranking)
IGN Counter	0 - 39	The number of times that ignition switch is turned ON after DTC is detected <ul style="list-style-type: none"> • The number is 0 when a malfunction is detected now. • The number increases like 1 → 2 → 3...38 → 39 after returning to the normal condition whenever ignition switch OFF → ON. • The number is fixed to 39 until the self-diagnosis results are erased if it is over 39.

DOOR LOCK

DOOR LOCK : CONSULT-III Function (BCM - DOOR LOCK)

INFOID:0000000005683251

BCM CONSULT-III FUNCTION

CONSULT-III performs the following functions via CAN communication with BCM.

Diagnosis mode	Function Description
WORK SUPPORT	Changes the setting for each system function.
DATA MONITOR	The BCM input/output signals are displayed.
ACTIVE TEST	The signals used to activate each device are forcibly supplied from BCM.

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

WORK SUPPORT

Monitor item	Description
DOOR LOCK-UNLOCK SET	Selective unlock function mode can be changed to operate (WITH) or not operate (WITHOUT) with this mode.
AUTOMATIC DOOR LOCK SELECT	Automatic door lock function mode can be selected from the following in this mode. <ul style="list-style-type: none"> • VH SPD: All doors are locked when vehicle speed more than 24km/h (15MPH) • P RANGE: All doors are locked when shifting the selector lever from P position to other than the P position
AUTOMATIC DOOR UNLOCK SELECT	Automatic door unlock function mode can be selected from the following in the mode. <ul style="list-style-type: none"> • MODE 1: All doors are unlocked when the power supply position is changed from ON to OFF • MODE 2: All doors are unlocked when shifting the selector lever from any position other than the P to P position • MODE 3: Driver side door is unlocked when the power supply position is changed from ON to OFF • MODE 4: Driver side door is unlocked when shifting the selector lever from any position other than the P to P position
AUTOMATIC LOCK/UNLOCK SET	Automatic door lock/unlock function mode can be selected from the following in this mode. <ul style="list-style-type: none"> • Off: non-operational • Unlock Only: door unlock operation only • Lock Only: door lock operation only • Lock/Unlock: lock/unlock operation

DATA MONITOR

Monitor Item	Contents
REQ SW-DR	Indicated [ON/OFF] condition of door request switch (driver side).
REQ SW-AS	Indicated [ON/OFF] condition of door request switch (passenger side).
REQ SW-BD/TR	Indicated [ON/OFF] condition of back door request switch.
DOOR SW-DR	Indicated [ON/OFF] condition of front door switch (driver side).
DOOR SW-AS	Indicated [ON/OFF] condition of front door switch (passenger side).
DOOR SW-RR	Indicated [ON/OFF] condition of rear door switch RH.
DOOR SW-RL	Indicated [ON/OFF] condition of rear door switch LH.
DOOR SW-BK	Indicated [ON/OFF] condition of back door switch.
CDL LOCK SW	Indicated [ON/OFF] condition of lock signal from door lock unlock switch.
CDL UNLOCK SW	Indicated [ON/OFF] condition of unlock signal from door lock unlock switch.
KEY CYL LK-SW	Indicated [ON/OFF] condition of lock signal from door key cylinder.
KEY CYL UN-SW	Indicated [ON/OFF] condition of unlock signal from door key cylinder.

ACTIVE TEST

Test item	Description
DOOR LOCK	This test is able to check door lock/unlock operation. <ul style="list-style-type: none"> • The all door lock actuators are locked when "ALL LCK" on CONSULT-III screen is touched. • The all door lock actuators are unlocked when "ALL UNLK" on CONSULT-III screen is touched. • The door lock actuator (driver side) is unlocked when "DR UNLK" on CONSULT- III screen is touched. • The door lock actuator (passenger side) is unlocked when "AS UNLK" on CONSULT- III screen is touched. • The door lock actuator (rear LH and RH) is unlocked when "OTR ULK" on CONSULT-III screen is touched.

REAR WINDOW DEFOGGER

A

B

C

D

E

F

G

H

I

J

K

L

BCS

N

O

P

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

REAR WINDOW DEFOGGER : CONSULT-III Function (BCM - REAR DEFOGGER)

INFOID:000000005683262

Data monitor

Monitor Item	Description
REAR DEF SW	This is displayed even when it is not equipped.
PUSH SW	Indicates [ON/OFF] condition of push switch.

ACTIVE TEST

Test Item	Description
REAR DEFOGGER	This test is able to check rear window defogger operation. Rear window defogger operates when "ON" on CONSULT-III screen is touched.

BUZZER

BUZZER : CONSULT-III Function (BCM - BUZZER)

INFOID:000000005683265

CONSULT-III APPLICATION ITEMS

Test item	Diagnosis mode	Description
BUZZER	Data Monitor	Displays BCM input data in real time.
	Active Test	Operation of electrical loads can be checked by sending driving signal to them.

DATA MONITOR

Display item [Unit]	Description
PUSH SW [On/Off]	Status of push button ignition switch judged by BCM.
UNLK SEN-DR [On/Off]	Status of unlock sensor judged by BCM.
VEH SPEED 1 [Km/h]	Value of vehicle speed signal received from ABS actuator and electric unit (control unit) with CAN communication line.
KEY SW-SLOT [On/Off]	Status of key slot judged by BCM.
TAIL LAMP SW [On/Off]	Status of each switch judged by BCM using the combination switch readout function.
FR FOG SW [On/Off]	Status of front fog lamp switch judged by BCM.
DOOR SW-DR [On/Off]	Status of driver side door switch judged by BCM.

ACTIVE TEST

Display item [Unit]	Description
IGN KEY WARN ALM	The key warning chime operation can be checked by operating the relevant function (On/Off).
SEAT BELT WARN TEST	The seat belt warning chime operation can be checked by operating the relevant function (On/Off).
ID REGIST WARNING	The ID regist warning chime operation can be checked by operating the relevant function (On/Off).
LIGHT WARN ALM	The light warning chime operation can be checked by operating the relevant function (On/Off).

INT LAMP

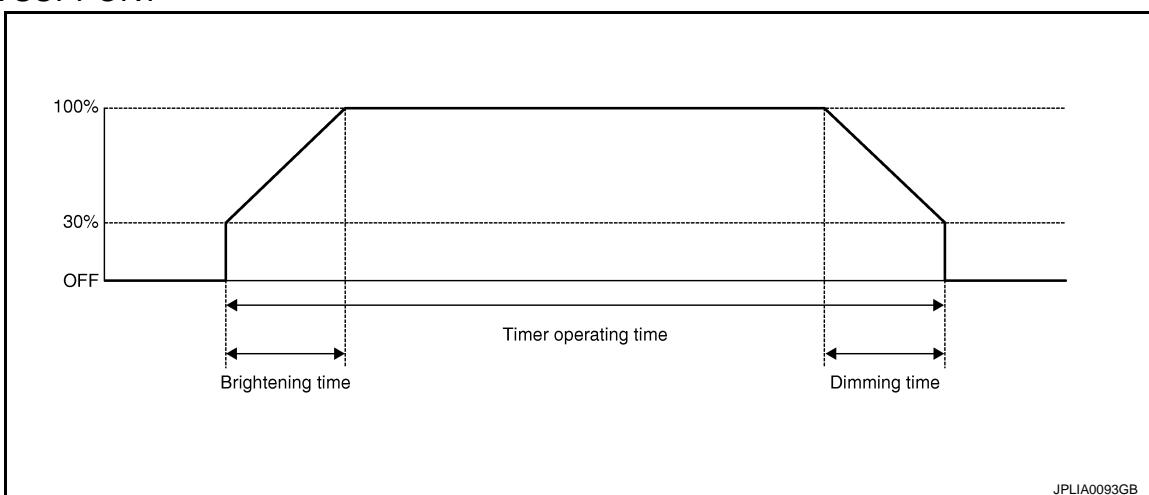
DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

INT LAMP : CONSULT-III Function (BCM - INT LAMP)

INFOID:000000005683259

WORK SUPPORT



Service item	Setting item	Setting	
SET I/L D-UNLCK INTCON	ON*	With the interior room lamp timer function	
	OFF	Without the interior room lamp timer function	
ROOM LAMP TIMER SET	MODE 2	7.5 sec.	Sets the interior room lamp ON time. (Timer operating time)
	MODE 3*	15 sec.	
	MODE 4	30 sec.	
ROOM LAMP ON TIME SET	MODE 1	0.5 sec.	Sets the interior room lamp gradual brightening time.
	MODE 2*	1 sec.	
	MODE 3	2 sec.	
	MODE 4	3 sec.	
	MODE 5	0 sec.	
ROOM LAMP OFF TIME SET	MODE 1	0.5 sec.	Sets the interior room lamp gradual dimming time.
	MODE 2	1 sec.	
	MODE 3	2 sec.	
	MODE 4*	3 sec.	
	MODE 5	0 sec.	
R LAMP TIMER LOGIC SET	MODE 1*	Interior room lamp timer activates with synchronizing all doors.	
	MODE 2	Interior room lamp timer activates with synchronizing the driver door only.	

*: Factory setting

DATA MONITOR

Monitor item [Unit]	Description
REQ SW-DR [On/Off]	The switch status input from request switch (driver side)
REQ SW-AS [On/Off]	The switch status input from front request switch (passenger side)
PUSH SW [On/Off]	The switch status input from push-button ignition switch
KEY SW-SLOT [On/Off]	Key switch status input from key slot

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

Monitor item [Unit]	Description
DOOR SW-DR [On/Off]	The switch status input from front door switch (driver side)
DOOR SW-AS [On/Off]	The switch status input from front door switch (passenger side)
DOOR SW-RR [On/Off]	The switch status input from rear door switch RH
DOOR SW-RL [On/Off]	The switch status input from rear door switch LH
DOOR SW-BK [On/Off]	NOTE: The item is indicated, but not monitored.
CDL LOCK SW [On/Off]	Lock switch status received from door lock/unlock switch by power window switch serial link
CDL UNLOCK SW [On/Off]	Unlock switch status received from door lock/unlock switch by power window switch serial link
KEY CYL LK-SW [On/Off]	Lock switch status received from key cylinder lock/unlock switch by power window switch serial link
KEY CYL UN-SW [On/Off]	Unlock switch status received from key cylinder lock/unlock switch by power window switch serial link
BACK DOOR SW [On/Off]	The switch status input from back door switch
RKE-LOCK [On/Off]	Lock signal status received from remote keyless entry receiver
RKE-UNLOCK [On/Off]	Unlock signal status received from remote keyless entry receiver

ACTIVE TEST

Test item	Operation	Description
INT LAMP	On	Outputs the interior room lamp control signal to turn map lamp and personal lamp ON (Map lamp switch is in DOOR position).
	Off	Stops the interior room lamp control signal to turn map lamp and personal lamp OFF.
STEP LAMP TEST	On	Outputs the step lamp control signal to turn step lamp ON.
	Off	Stops the step lamp control signal to turn step lamp OFF.
LUGGAGE LAMP TEST	On	NOTE: The item is displayed, but cannot be tested.
	Off	

HEADLAMP

HEADLAMP : CONSULT-III Function (BCM - HEAD LAMP)

INFOID:0000000005683257

WORK SUPPORT

Service item	Setting item	Setting
BATTERY SAVER SET	On*	With the exterior lamp battery saver function
	Off	Without the exterior lamp battery saver function

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

Service item	Setting item	Setting
ILL DELAY SET	MODE 1*	45 sec.
	MODE 2	Without the function
	MODE 3	30 sec.
	MODE 4	60 sec.
	MODE 5	90 sec.
	MODE 6	120 sec.
	MODE 7	150 sec.
	MODE 8	180 sec.
CUSTOM A/LIGHT SETTING	MODE 1*	Normal
	MODE 2	More sensitive setting than normal setting (Turns ON earlier than normal operation.)
	MODE 3	More sensitive setting than MODE 2 (Turns ON earlier than MODE 2.)
	MODE 4	Less sensitive setting than normal setting (Turns ON later than normal operation.)

*: Factory setting

DATA MONITOR

Monitor item [Unit]	Description
PUSH SW [On/Off]	The switch status input from push-button ignition switch
ENGINE STATE [Stop/Stall/Crank/Run]	The engine status received from ECM with CAN communication
VEH SPEED 1 [km/h]	The value of the vehicle speed received from combination meter with CAN communication
KEY SW-SLOT [On/Off]	Key switch status input from key slot
TURN SIGNAL R [On/Off]	Each switch status that BCM detects from the combination switch reading function
TURN SIGNAL L [On/Off]	
TAIL LAMP SW [On/Off]	
HI BEAM SW [On/Off]	
HEAD LAMP SW1 [On/Off]	
HEAD LAMP SW2 [On/Off]	
PASSING SW [On/Off]	
AUTO LIGHT SW [On/Off]	
FR FOG SW [On/Off]	NOTE: The item is indicated, but not monitored.
RR FOG SW [On/Off]	
DOOR SW-DR [On/Off]	The switch status input from front door switch (driver side)
DOOR SW-AS [On/Off]	The switch status input from front door switch (passenger side)

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

Monitor item [Unit]	Description
DOOR SW-RR [On/Off]	The switch status input from rear door switch RH
DOOR SW-RL [On/Off]	The switch status input from rear door switch LH
DOOR SW-BK [On/Off]	NOTE: The item is indicated, but not monitored.
OPTICAL SENSOR [V]	The value of exterior brightness voltage input from the optical sensor

ACTIVE TEST

Test item	Operation	Description
TAIL LAMP	On	Transmits the position light request signal to IPDM E/R with CAN communication to turn the tail lamp ON.
	Off	Stops the position light request signal transmission.
HEAD LAMP	Hi	Transmits the high beam request signal with CAN communication to turn the headlamp (HI).
	Low	Transmits the low beam request signal with CAN communication to turn the headlamp (LO).
	Off	Stops the high & low beam request signal transmission.
FR FOG LAMP	On	Transmits the front fog light request signal to IPDM E/R with CAN communication to turn the front fog lamp ON.
	Off	Stops the front fog light request signal transmission.
RR FOG LAMP	On	NOTE: The item is indicated, but cannot be tested.
	Off	
DAYTIME RUNNING LIGHT	On	NOTE: The item is indicated, but cannot be tested.
	Off	
CORNERRING LAMP	RH	
	LH	NOTE: The item is indicated, but cannot be tested.
	Off	
ILL DIM SIGNAL	On	NOTE: The item is indicated, but cannot be tested.
	Off	

WIPER

WIPER : CONSULT-III Function (BCM - WIPER)

INFOID:0000000005683261

WORK SUPPORT

Service item	Setting item	Description
WIPER SPEED SETTING	On	With vehicle speed (Front wiper intermittent time linked with the vehicle speed and wiper intermittent dial position)
	Off*	Without vehicle speed (Front wiper intermittent time linked with the wiper intermittent dial position)

*:Factory setting

NOTE:

Work support item is not indicated when the vehicle with rain sensor.

DATA MONITOR

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

Monitor Item [Unit]	Description	
PUSH SW [Off/On]	The switch status input from push-button ignition switch.	A
VEHICLE SPEED 1 [km/h]	The value of the vehicle speed signal received from combination meter with CAN communication.	B
FR WIPER HI [Off/On]		C
FR WIPER LOW [Off/On]	Each switch status that BCM judges from the combination switch reading function.	D
FR WASHER SW [Off/On]		E
FR WIPER INT [Off/On]		F
FR WIPER STOP [Off/On]	Front wiper motor (stop position) status received from IPDM E/R with CAN communication.	G
INT VOLUME [1 - 7]	Each switch status that BCM judges from the combination switch reading function.	H
RR WIPER ON [Off/On]		I
RR WIPER INT [Off/On]	Each switch status that BCM judges from the combination switch reading function.	J
RR WASHER SW [Off/On]		K
RR WIPER STOP [Off/On]	Rear wiper motor (stop position) status input from the rear wiper motor.	L

ACTIVE TEST

Test item	Operation	Description	
FR WIPER	Hi	Transmits the front wiper request signal (HI) to IPDM E/R with CAN communication to operate the front wiper HI operation.	M
	Lo	Transmits the front wiper request signal (LO) to IPDM E/R with CAN communication to operate the front wiper LO operation.	N
	INT	Transmits the front wiper request signal (INT) to IPDM E/R with CAN communication to operate the front wiper INT operation.	O
	Off	Stops transmitting the front wiper request signal to stop the front wiper operation.	P
RR WIPER	On	Outputs the voltage to operate the rear wiper motor.	BCS
	Off	Stops the voltage to stop.	

FLASHER

FLASHER : CONSULT-III Function (BCM - FLASHER)

INFOID:000000005683258

WORK SUPPORT

Service item	Setting item	Setting	
HAZARD ANSWER BACK	Lock Only*	With locking only	Sets the hazard warning lamp answer back function when the door is lock/unlock with the request switch or the key fob.
	Unlk Only	With unlocking only	
	Lock/Unlk	With locking/unlocking	
	Off	Without the function	

*: Factory setting

DATA MONITOR

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

Monitor item [Unit]	Description
REQ SW-DR [On/Off]	The switch status input from the request switch (driver side)
REQ SW-AS [On/Off]	The switch status input from the request switch (passenger side)
PUSH SW [On/Off]	The switch status input from the push-button ignition switch
TURN SIGNAL R [On/Off]	Each switch status that BCM detects from the combination switch reading function
TURN SIGNAL L [On/Off]	
HAZARD SW [On/Off]	The switch status input from the hazard switch
RKE-LOCK [On/Off]	Lock signal status received from the remote keyless entry receiver
RKE-UNLOCK [On/Off]	Unlock signal status received from the remote keyless entry receiver
RKE-PANIC [On/Off]	Panic alarm signal status received from the remote keyless entry receiver

ACTIVE TEST

Test item	Operation	Description
FLASHER	RH	Outputs the voltage to blink the right side turn signal lamps.
	LH	Outputs the voltage to blink the left side turn signal lamps.
	Off	Stops the voltage to turn the turn signal lamps OFF.

INTELLIGENT KEY

INTELLIGENT KEY : CONSULT-III Function (BCM - INTELLIGENT KEY)

INFOID:0000000005683252

BCM CONSULT-III FUNCTION

CONSULT-III performs the following functions via CAN communication with BCM.

Diagnosis mode	Function Description
WORK SUPPORT	Changes the setting for each system function.
SELF-DIAG RESULTS	Displays the diagnosis results judged by BCM.
DATA MONITOR	The BCM input/output signals are displayed.
ACTIVE TEST	The signals used to activate each device are forcibly supplied from BCM.

WORK SUPPORT

Monitor item	Description
REMO CONT ID CONFIR	It can be checked whether Intelligent Key ID code is registered or not in this mode.
AUTO LOCK SET	Auto door lock time can be changed in this mode. <ul style="list-style-type: none"> • MODE 1: 1 minute • MODE 2: 5 minutes • MODE 3: 30 seconds • MODE 4: 2 minutes
LOCK/UNLOCK BY I-KEY	Door lock/unlock function by door request switch (driver side, passenger side and back door) mode can be changed to operate (ON) or not operate (OFF) in this mode.
ENGINE START BY I-KEY	Engine start function mode can be changed to operate (ON) or not operate (OFF) with this mode.

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

Monitor item	Description
TRUNK/GLASS HATCH OPEN	Buzzer reminder function mode by back door request switch can be changed to operate (ON) or not operate (OFF) with this mode.
PANIC ALARM SET	Panic alarm button pressing time on Intelligent Key remote control button can be selected from the following with this mode. <ul style="list-style-type: none"> • MODE 1: 0.5 sec. • MODE 2: Non-operation • MODE 3: 1.5 sec.
PW DOWN SET	Unlock button pressing time on Intelligent Key button can be selected from the following with this mode. <ul style="list-style-type: none"> • MODE 1: 3 sec. • MODE 2: Non-operation • MODE 3: 5 sec.
TRUNK OPEN DELAY	NOTE: This item is displayed, but cannot be supported.
LO-BATT OF KEY FOB WARN	Intelligent Key low battery warning mode can be changed to operate (ON) or not operate (OFF) with this mode.
ANTI KEY LOCK IN FUNCTI	Key reminder function mode can be changed to operate (ON) or not operate (OFF) with this mode.
HAZARD ANSWER BACK	Hazard reminder function mode can be selected from the following with this mode. <ul style="list-style-type: none"> • LOCK ONLY: Door lock operation only • UNLOCK ONLY: Door unlock operation only • LOCK/UNLOCK: Lock/unlock operation • OFF: Non-operation
ANS BACK I-KEY LOCK	Buzzer reminder function (lock operation) mode by door request switch (driver side and passenger side) can be selected from the following with this mode. <ul style="list-style-type: none"> • Horn chirp: Sound horn • Buzzer: Sound Intelligent Key warning buzzer • OFF: Non-operation
ANS BACK I-KEY UNLOCK	Buzzer reminder function (unlock operation) mode by door request switch can be changed to operate (ON) or not operate (OFF) with this mode.
SHORT CRANKING OUTPUT	Starter motor can operate during the times below. <ul style="list-style-type: none"> • 70 msec • 100 msec • 200 msec
INSIDE ANT DIAGNOSIS	This function allows inside key antenna self-diagnosis.
HORN WITH KEYLESS LOCK	Horn reminder function mode by Intelligent Key button can be changed to operate (ON) or not operate (OFF) with this mode.

SELF-DIAG RESULT

Refer to [BCS-90, "DTC Index"](#).

DATA MONITOR

BCS

Monitor Item	Condition
REQ SW -DR	Indicates [ON/OFF] condition of door request switch (driver side).
REQ SW -AS	Indicates [ON/OFF] condition of door request switch (passenger side).
REQ SW -RR	NOTE: This item is displayed, but cannot be monitored.
REQ SW -RL	NOTE: This item is displayed, but cannot be monitored.
REQ SW -BD/TR	Indicates [ON/OFF] condition of back door request switch.
PUSH SW	Indicates [ON/OFF] condition of push-button ignition switch.
IGN RLY2 -F/B	Indicates [ON/OFF] condition of ignition relay 2.
ACC RLY-FB	NOTE: This item is displayed, but cannot be monitored.

N

O

P

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

Monitor Item	Condition
CLUCH SW	NOTE: This item is displayed, but cannot be monitored.
BRAKE SW 1	Indicates [ON/OFF]* condition of brake switch power supply.
BRAKE SW 2	Indicates [ON/OFF] condition of brake switch.
DETE/CANCL SW	Indicates [ON/OFF] condition of P position.
SFT PN/N SW	Indicates [ON/OFF] condition of P or N position.
S/L -LOCK	Indicates [ON/OFF] condition of steering lock unit (LOCK). NOTE: For models without steering lock unit this item is not displayed.
S/L -UNLOCK	Indicates [ON/OFF] condition of steering lock unit (UNLOCK). NOTE: For models without steering lock unit this item is not displayed.
S/L RELAY -F/B	Indicates [ON/OFF] condition of ignition switch. NOTE: For models without steering lock unit this item is not displayed.
UNLK SEN -DR	Indicates [ON/OFF] condition of driver door UNLOCK status.
PUSH SW -IPDM	Indicates [ON/OFF] condition of push-button ignition switch.
IGN RLY1 -F/B	Indicates [ON/OFF] condition of ignition relay 1.
DETE SW -IPDM	Indicates [ON/OFF] condition of P position.
SFT PN -IPDM	Indicates [ON/OFF] condition of P or N position.
SFT P -MET	Indicates [ON/OFF] condition of P position.
SFT N -MET	Indicates [ON/OFF] condition of N position.
ENGINE STATE	Indicates [STOP/START/CRANK/RUN] condition of engine states.
S/L LOCK-IPDM	Indicates [ON/OFF] condition of steering lock unit (LOCK). NOTE: For models without steering lock unit this item is not displayed.
S/L UNLK-IPDM	Indicates [ON/OFF] condition of steering lock unit (UNLOCK). NOTE: For models without steering lock unit this item is not displayed.
S/L RELAY-REQ	Indicates [ON/OFF] condition of steering lock relay. NOTE: For models without steering lock unit this item is not displayed.
VEH SPEED 1	Display the vehicle speed signal received from combination meter by numerical value [Km/h].
VEH SPEED 2	Display the vehicle speed signal received from ABS or VDC or CVT by numerical value [Km/h].
DOOR STAT-DR	Indicates [LOCK/READY/UNLOCK] condition of driver side door status.
DOOR STAT-AS	Indicates [LOCK/READY/UNLOCK] condition of passenger side door status.
ID OK FLAG	Indicates [SET/RESET] condition of key ID.
PRMT ENG STRT	Indicates [SET/RESET] condition of engine start possibility.
PRMT RKE STRT	NOTE: This item is displayed, but cannot be monitored.
KEY SW -SLOT	Indicates [ON/OFF] condition of key slot.
TRNK/HAT MNTR	NOTE: This item is displayed, but cannot be monitored.
RKE-LOCK	Indicates [ON/OFF] condition of LOCK signal from Intelligent Key.
RKE-UNLOCK	Indicates [ON/OFF] condition of UNLOCK signal from Intelligent Key.
RKE-TR/BD	NOTE: This item is displayed, but cannot be monitored.
RKE-PANIC	Indicates [ON/OFF] condition of PANIC button of Intelligent Key.
RKE-P/W OPEN	Indicates [ON/OFF] condition of P/W DOWN signal from Intelligent Key.

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

Monitor Item	Condition
RKE-MODE CHG	Indicates [ON/OFF] condition of MODE CHANGE signal from Intelligent Key.
RKE OPE COUN1	When remote keyless entry receiver receives the signal transmitted while operating on Intelligent Key, the numerical value start changing.
RKE OPE COUN2	NOTE: This item is displayed, but cannot be monitored.

*: OFF is displayed when brake pedal is depressed while brake switch power supply is OFF.

ACTIVE TEST

Test item	Description
BATTERY SAVER	This test is able to check interior room lamp operation. The interior room lamp will be activated after "ON" on CONSULT-III screen is touched.
PW REMOTO DOWN SET	This test is able to check power window down operation. The power window down will be activated after "ON" on CONSULT-III screen is touched.
INSIDE BUZZER	This test is able to check warning chime in combination meter operation. <ul style="list-style-type: none"> • Take away warning chime sounds when "TAKE OUT" on CONSULT-III screen is touched. • Key warning chime sounds when "KEY WARN" on CONSULT-III screen is touched. • P position warning chime sounds when "P RNG WARN" on CONSULT-III screen is touched. • ACC warning chime sounds when "ACC WARN" on CONSULT-III screen is touched.
OUTSIDE BUZZER	This test is able to check Intelligent Key warning buzzer operation. The Intelligent Key warning buzzer will be activated after "ON" on CONSULT-III screen is touched.
INDICATOR	This test is able to check warning lamp operation. <ul style="list-style-type: none"> • "KEY" Warning lamp illuminates when "KEY ON" on CONSULT-III screen is touched. • "KEY" Warning lamp flashes when "KEY IND" on CONSULT-III screen is touched.
INT LAMP	This test is able to check interior room lamp operation. The interior room lamp will be activated after "ON" on CONSULT-III screen is touched.
LCD	This test is able to check meter display information <ul style="list-style-type: none"> • Engine start information displays when "BP N" on CONSULT-III screen is touched. • Engine start information displays when "BP I" on CONSULT-III screen is touched. • Key ID warning displays when "ID NG" on CONSULT-III screen is touched. • Steering lock information displays when "ROTAT" on CONSULT-III screen is touched. NOTE: For models without steering lock unit, "ROTAT" is displayed, but cannot be tested. <ul style="list-style-type: none"> • P position warning displays when "SFT P" on CONSULT-III screen is touched. • Intelligent Key insert information displays when "INSRT" on CONSULT-III screen is touched. • Intelligent Key low battery warning displays when "BATT" on CONSULT-III screen is touched. • Take away through window warning displays when "NO KY" on CONSULT-III screen is touched. • Take away warning display when "OUTKEY" on CONSULT-III screen is touched. • OFF position warning display when "LK WN" on CONSULT-III screen is touched.
TRUNK/GLASS HATCH	This test is able to check back door opener actuator open operation. This actuator opens when "ON" on CONSULT-III screen is touched.
FLASHER	This test is able to check hazard warning lamp operation. The hazard warning lamps will be activated after "ON" on CONSULT-III screen is touched.
HORN	This test is able to check horn operation. The horn will be activated after "ON" on CONSULT-III screen is touched.
IGN CONT2	This test is able to check ignition relay operation. The ignition relay will be activated after "ON" on CONSULT-III screen is touched.
P RANGE	This test is able to check CVT shift selector power supply CVT shift selector power is supplied when "ON" on CONSULT-III screen is touched.
ENGINE SW ILLUMI	This test is able to check push-ignition switch illumination operation. Push-ignition switch illumination illuminates when "ON" on CONSULT-III screen is touched.
LOCK INDICATOR	NOTE: This item is displayed, but cannot be tested.
ACC INDICATOR	This test is able to check indicator in push-ignition switch operation. Indicator in push-button ignition switch illuminates when "ON" on CONSULT-III screen is touched.

A
B
C

D

E
F

G
H

I
J

K
L

BCS

N

O
P

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

Test item	Description
IGNITION ON IND	This test is able to check indicator in push-ignition switch operation. Indicator in push-button ignition switch illuminates when "ON" on CONSULT-III screen is touched.
KEY SLOT ILLUMI	This test is able to check key slot illumination operation. Key slot illumination flash when "ON" on CONSULT-III screen is touched.
AUTOMATIC BACK DOOR	NOTE: This item is displayed, but cannot be tested.
AUTOMATIC SLIDING DOOR	NOTE: This item is displayed, but cannot be tested.

COMB SW

COMB SW : CONSULT-III Function (BCM - COMB SW)

INFOID:0000000005518285

DATA MONITOR

Monitor item [UNIT]	Description
FR WIPER HI [Off/On]	Displays the status of the FR WIPER HI switch in combination switch judged by BCM with the combination switch reading function.
FR WIPER LOW [Off/On]	Displays the status of the FR WIPER LOW switch in combination switch judged by BCM with the combination switch reading function.
FR WASHER SW [Off/On]	Displays the status of the FR WASHER switch in combination switch judged by BCM with the combination switch reading function.
FR WIPER INT [Off/On]	Displays the status of the FR WIPER INT switch in combination switch judged by BCM with the combination switch reading function.
FR WIPER STOP [Off/On]	Displays the status of the front wiper stop position signal received from IPDM E/R via CAN communication.
INT VOLUME [1 - 7]	Displays the status of wiper intermittent dial position judged by BCM with the combination switch reading function.
RR WIPER ON [Off/On]	Displays the status of the RR WIPER ON switch in combination switch judged by BCM with the combination switch reading function.
RR WIPER INT [Off/On]	Displays the status of the RR WIPER INT switch in combination switch judged by BCM with the combination switch reading function.
RR WASHER SW [Off/On]	Displays the status of the RR WASHER switch in combination switch judged by BCM with the combination switch reading function.
RR WIPER STOP [Off/On]	Displays the status of the rear wiper stop position signal received from rear wiper motor.
TURN SIGNAL R [Off/On]	Displays the status of the TURN RH switch in combination switch judged by BCM with the combination switch reading function.
TURN SIGNAL L [Off/On]	Displays the status of the TURN LH switch in combination switch judged by BCM with the combination switch reading function.
TAIL LAMP SW [Off/On]	Displays the status of the TAIL LAMP switch in combination switch judged by BCM with the combination switch reading function.
HI BEAM SW [Off/On]	Displays the status of the HI BEAM switch in combination switch judged by BCM with the combination switch reading function.
HEAD LAMP SW 1 [Off/On]	Displays the status of the HEADLAMP 1 switch in combination switch judged by BCM with the combination switch reading function.
HEAD LAMP SW 2 [Off/On]	Displays the status of the HEADLAMP 2 switch in combination switch judged by BCM with the combination switch reading function.
PASSING SW [Off/On]	Displays the status of the PASSING switch in combination switch judged by BCM with the combination switch reading function.
AUTO LIGHT SW [Off/On]	Displays the status of the AUTO LIGHT switch in combination switch judged by BCM with the combination switch reading function.

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

Monitor item [UNIT]	Description
FR FOG SW [Off/On]	Displays the status of the FR FOG switch in combination switch judged by BCM with the combination switch reading function.
RR FOG SW [Off/On]	NOTE: The item is indicated, but not monitored.

BCM

BCM : CONSULT-III Function (BCM - BCM)

INFOID:0000000005518286

WORK SUPPORT

Item	Description
RESET SETTING VALUE	Return a value set with Work Support of each system to a default value in factory shipment.

IMMU

IMMU : CONSULT-III Function (BCM - IMMU)

INFOID:0000000005683255

APPLICATION ITEM

CONSULT-III performs the following functions via CAN communication with BCM.

Diagnosis mode	Function Description
DATA MONITOR	The BCM input/output signals are displayed.
ACTIVE TEST	The signals used to activate each device are forcibly supplied from BCM.

DATA MONITOR

Monitor item	Content
CONFIRM ID ALL	
CONFIRM ID4	
CONFIRM ID3	Indicates [YET] at all time. Switch to [DONE] when a registered Intelligent Key is inserted into the key slot.
CONFIRM ID2	
CONFIRM ID1	
TP 4	
TP 3	Indicates the number of ID which has been registered.
TP 2	
TP 1	
PUSH SW	Indicates [ON/OFF] condition of push-button ignition switch.
KEY SW -SLOT	Indicates [ON/OFF] condition of key slot.

ACTIVE TEST

Test item	Description
THEFT IND	This test is able to check security indicator lamp operation. The lamp will be turned on when "ON" on CONSULT-III screen touched.

BATTERY SAVER

BATTERY SAVER : CONSULT-III Function (BCM - BATTERY SAVER)

INFOID:0000000005683260

WORK SUPPORT

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

Service item	Setting item	Setting	
BATTERY SAVER SET	On*	With the exterior lamp battery saver function	
	Off	Without the exterior lamp battery saver function	
ROOM LAMP BAT SAV SET	On*	With the interior room lamp battery saver function	
	Off	Without the interior room lamp battery saver function	
ROOM LAMP TIMER SET	MODE 1*	30 min.	Sets the interior room lamp battery saver timer operating time.
	MODE 2	60 min.	

*: Factory setting

DATA MONITOR

Monitor item [Unit]	Description
REQ SW-DR [On/Off]	The switch status input from request switch (driver side)
REQ SW-AS [On/Off]	The switch status input from front request switch (passenger side)
REQ SW-RR [On/Off]	NOTE: The item is indicated, but not monitored.
REQ SW-RLL [On/Off]	
PUSH SW [On/Off]	The switch status input from push-button ignition switch
KEY SW-SLOT [On/Off]	Key switch status input from key slot
UNLK SEN-DR [On/Off]	Driver door unlock status input from unlock sensor
DOOR SW-DR [On/Off]	The switch status input from front door switch (driver side)
DOOR SW-AS [On/Off]	The switch status input from front door switch (passenger side)
DOOR SW-RR [On/Off]	The switch status input from rear door switch RH
DOOR SW-RL [On/Off]	The switch status input from rear door switch LH
DOOR SW-BK [On/Off]	NOTE: The item is indicated, but not monitored.
CDL LOCK SW [On/Off]	Lock switch status received from door lock/unlock switch by power window switch serial link
CDL UNLOCK SW [On/Off]	Unlock switch status received from door lock/unlock switch by power window switch serial link
KEY CYL LK-SW [On/Off]	Lock switch status received from key cylinder lock/unlock switch by power window switch serial link
KEY CYL UN-SW [On/Off]	Unlock switch status received from key cylinder lock/unlock switch by power window switch serial link
BACK DOOR SW [On/Off]	The switch status input from back door switch
RKE-LOCK [On/Off]	Lock signal status received from remote keyless entry receiver
RKE-UNLOCK [On/Off]	Unlock signal status received from remote keyless entry receiver

ACTIVE TEST

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

Test item	Operation	Description
BATTERY SAVER	Off	Cuts the interior room lamp power supply to turn interior room lamp OFF.
	On	Outputs the interior room lamp power supply to turn interior room lamp ON.*

*: Each lamp switch is in ON position.

TRUNK

TRUNK : CONSULT-III Function (BCM - TRUNK)

INFOID:000000005683253

BCM CONSULT-III FUNCTION

CONSULT-III performs the following functions via CAN communication with BCM.

Diagnosis mode	Function Description
DATA MONITOR	The BCM input/output signals are displayed.
ACTIVE TEST	The signals used to activate each device are forcibly supplied from BCM.

DATA MONITOR

Monitor Item	Contents
PUSH SW	Indicates [ON/OFF] condition of push-button ignition switch.
UNLK SEN -DR	NOTE: This item is displayed, but cannot be monitored.
VEH SPEED 1	Indicates [Km/h] condition of vehicle speed signal from combination meter.
KEY CYL SW-TR	NOTE: This item is displayed, but cannot be monitored.
TR CANCEL SW	NOTE: This item is displayed, but cannot be monitored.
TR/BD OPEN SW	Indicates [ON/OFF] condition of back door opener switch.
TRNK/HAT MNTR	NOTE: This item is displayed, but cannot be monitored.
RKE-TR/BD*	NOTE: This item is displayed, but cannot be monitored.

*: With back door opener system

ACTIVE TEST

Test item	Description
TRUNK/GLASS HATCH	This test is able to check back door opener actuator open operation. This actuator opens when “”

THEFT ALM

THEFT ALM : CONSULT-III Function (BCM - THEFT)

INFOID:000000005683254

APPLICATION ITEM

CONSULT-III performs the following functions via CAN communication with BCM.

Diagnosis mode	Function Description
WORK SUPPORT	Changes the setting for each system function.
DATA MONITOR	The BCM input/output signals are displayed.
ACTIVE TEST	The signals used to activate each device are forcibly supplied from BCM.

DATA MONITOR

A

B

C

D

E

F

G

H

I

J

K

L

BCS

N

O

P

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

Monitored Item	Description
REQ SW -DR	Indicates [ON/OFF] condition of door request switch (driver side).
REQ SW -AS	Indicates [ON/OFF] condition of door request switch (passenger side).
REQ SW -RR	NOTE: This is displayed even when it is not equipped.
REQ SW -RL	NOTE: This is displayed even when it is not equipped.
REQ SW -BD/TR	Indicates [ON/OFF] condition of back door request switch.
PUSH SW	Indicates [ON/OFF] condition of push-button ignition switch
UNLK SEN -DR	Indicates [ON/OFF] condition of driver door UNLOCK status.
KEY SW -SLOT	Indicates [ON/OFF] condition of key slot.
DOOR SW-DR	Indicates [ON/OFF] condition of front door switch LH.
DOOR SW-AS	Indicates [ON/OFF] condition of front door switch RH.
DOOR SW-RR	Indicates [ON/OFF] condition of rear door switch RH.
DOOR SW-RL	Indicates [ON/OFF] condition of rear door switch LH.
DOOR SW-BK	Indicates [ON/OFF] condition of back door switch.
CDL LOCK SW	Indicates [ON/OFF] condition of lock signal from door lock/unlock switch LH and RH.
CDL UNLOCK SW	Indicates [ON/OFF] condition of unlock signal from door lock/unlock switch LH and RH.
KEY CYL LK-SW	Indicates [ON/OFF] condition of lock signal from front door key cylinder switch.
KEY CYL UN-SW	Indicates [ON/OFF] condition of unlock signal from front door key cylinder switch.
KEY CYL SW-TR	NOTE: This is displayed even when it is not equipped.
TR/BD OPEN SW	Indicates [ON/OFF] condition of back door opener switch.
TRNK/HAT MNTR	NOTE: This is displayed even when it is not equipped.
RKE-LOCK	Indicates [ON/OFF] condition of LOCK signal from Intelligent Key.
RKE-UNLOCK	Indicates [ON/OFF] condition of UNLOCK signal from Intelligent Key.
RKE-TR/BD	NOTE: This is displayed even when it is not equipped.

WORK SUPPORT

Test Item	Description
SECURITY ALARM SET	This mode is able to confirm and change security alarm ON-OFF setting.
THEFT ALM TRG	The switch which triggered vehicle security alarm is recorded. This mode is able to confirm and erase the record of vehicle security alarm. The trigger data can be erased by touching "CLEAR" on CONSULT-III screen.

ACTIVE TEST

Test Item	Description
THEFT IND	This test is able to check security indicator lamp operation. The lamp will be turned on when "ON" on CONSULT-III screen is touched.
VEHICLE SECURITY HORN	This test is able to check vehicle security horn operation. The horns will be activated for 0.5 seconds after "ON" on CONSULT-III screen is touched.
HEADLAMP(HI)	This test is able to check vehicle security lamp operation. The headlamps will be activated for 0.5 seconds after "ON" on CONSULT-III screen is touched.
FLASHER	This test is able to check vehicle security hazard lamp operation. The hazard lamps will be activated after "ON" on CONSULT-III screen is touched.

RETAINED PWR

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

RETAINED PWR : CONSULT-III Function (BCM - RETAINED PWR)

INFOID:0000000005683256

Data monitor

Monitor Item	Description
DOOR SW-DR	Indicates [ON/OFF] condition of driver side door switch.
DOOR SW-AS	Indicates [ON/OFF] condition of passenger side door switch.

SIGNAL BUFFER

SIGNAL BUFFER : CONSULT-III Function (BCM - SIGNAL BUFFER)

INFOID:0000000005518292

DATA MONITOR

Monitor item [UNIT]	Description
PUSH SW [Off/On]	Displays the status of the push-button ignition switch (push switch) judged by BCM.

ACTIVE TEST

Test item	Operation	Description
OIL PRESSURE SW	Off	OFF
	On	BCM transmits the oil pressure switch signal to the combination meter via CAN communication, which illuminates the oil pressure warning lamp in the combination meter.

AIR PRESSURE MONITOR

AIR PRESSURE MONITOR : Diagnosis Description

INFOID:0000000005683263

DESCRIPTION

During driving, the TPMS receives the signal transmitted from the transmitter installed in each wheel, when the tire pressure becomes low. The control unit (BCM) of this system has pressure judgment and trouble diagnosis functions.

When the TPMS detects low inflation pressure or another unusual symptom, the low tire pressure warning lamps in the combination meter comes on.

SELF DIAGNOSTIC PROCEDURE (WITH CONSULT-III)

With CONSULT-III

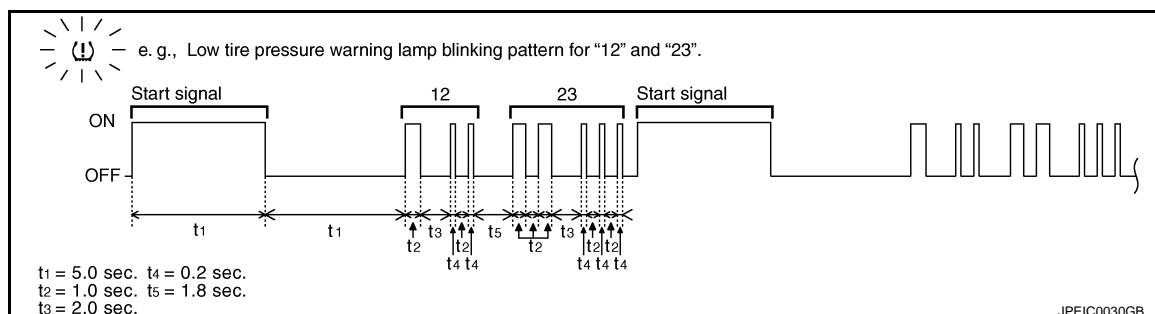
Touch "SELF-DIAG RESULT" display shows malfunction experienced since the last erasing operation. Refer to [BCS-90, "DTC Index"](#).

BCS

SELF DIAGNOSTIC PROCEDURE (WITHOUT CONSULT-III)

Without CONSULT-III

To start the self-diagnostic results mode, ground terminal of the tire pressure warning check connector. The malfunction location is indicated by the low tire pressure warning lamp blinking.



NOTE:

When the low tire pressure warning lamp blinks 5 Hz and continues repeating it, the system is normal.

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

Blinking pattern	Items	Diagnostic items detected when...	Check item
15	Tire pressure value (Front LH)	Front LH tire pressure drops to * kPa (* kg/cm ² , * psi) or less. [NOTE]	WT-25
16	Tire pressure value (Front RH)	Front RH tire pressure drops to * kPa (* kg/cm ² , * psi) or less. [NOTE]	
17	Tire pressure value (Rear RH)	Rear RH tire pressure drops to * kPa (* kg/cm ² , * psi) or less. [NOTE]	
18	Tire pressure value (Rear LH)	Rear LH tire pressure drops to * kPa (* kg/cm ² , * psi) or less. [NOTE]	
21	Transmitter no data (Front LH)	Data from front LH transmitter can not be receive.	WT-27
22	Transmitter no data (Front RH)	Data from front RH transmitter can not be receive.	
23	Transmitter no data (Rear RH)	Data from rear RH transmitter can not be receive.	
24	Transmitter no data (Rear LH)	Data from rear LH transmitter can not be receive.	
35	Transmitter pressure data error (Front LH)	Air pressure data from front LH transmitter is malfunction.	WT-30
36	Transmitter pressure data error (Front RH)	Air pressure data from front RH transmitter is malfunction.	
37	Transmitter pressure data error (Rear RH)	Air pressure data from rear RH transmitter is malfunction.	
38	Transmitter pressure data error (Rear LH)	Air pressure data from rear LH transmitter is malfunction.	
52	Vehicle speed signal error	Vehicle speed signal error.	WT-32
53	Control unit	Tire pressure monitoring system malfunction in BCM.	WT-34
No blinking	Tire pressure warning check switch	Tire pressure warning switch circuit is open.	—

NOTE:

182.7 kPa (1.9 kg/cm², 26 psi): Standard air pressure is for 230 kPa (2.3 kg/cm², 33 psi) vehicles.

ERASE SELF-DIAGNOSIS

With CONSULT-III

1. Perform applicable inspection of malfunctioning item and then repair or replace.
2. Turn ignition switch ON and select "SELF-DIAG RESULTS" mode for "AIR PRESSURE MONITOR" with CONSULT-III.
3. Touch "ERASE" on CONSULT-III screen to erase memory.

Without CONSULT-III

- In order to make it easier to find the cause of hard-to-duplicate malfunctions, malfunction information is stored into the control unit as necessary during use by the user. This memory is not erased no matter how many times the ignition switch is turned ON and OFF.
- However, this information is erased by turning ignition switch OFF after performing self-diagnostic or by erasing the memory using the CONSULT-III.

AIR PRESSURE MONITOR : CONSULT-III Function (BCM - AIR PRESSURE MONITOR)

INFOID:000000005683264

WORK SUPPORT MODE

ID Read

The registered ID number is displayed.

ID Regist

Refer to [WT-22, "ID REGISTRATION PROCEDURE : Special Repair Requirement"](#).

SELF-DIAG RESULTS MODE

Operation Procedure

Refer to [BCS-90, "DTC Index"](#).

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

DATA MONITOR MODE

Screen of data monitor mode is displayed.

NOTE:

When malfunction is detected, CONSULT-III perform REAL-TIME DIAGNOSIS.

Also, any malfunction detected while in this mode will be displayed at real time.

Display item list

Monitor	Condition	Specification
AIR PRESS FL AIR PRESS FR AIR PRESS RR AIR PRESS RL	<ul style="list-style-type: none">Drive vehicle for a few minutes. orIgnition switch ON and activation tool is transmitting activation signals.	Tire pressure (kPa, kg/cm ² or Psi)
ID REGST FL ID REGST FR ID REGST RR ID REGST RL		Registration ID: Green No registration: Red
WARNING LAMP	Ignition switch ON	Low tire pressure warning lamp on: ON Low tire pressure warning lamp off: OFF
BUZZER		Buzzer in combination meter on: ON Buzzer in combination meter off: OFF

NOTE:

Before performing the self-diagnosis, be sure to register the ID, or erase the actual malfunction location may be different from that displayed on CONSULT-III.

ACTIVE TEST MODE

NOTE:

Before performing the self-diagnosis, be sure to register the ID, or erase the actual malfunction may be different from that displayed on CONSULT-III.

TEST ITEM LIST

Test item	Content
WARNING LAMP	This test is able to check to check that the low tire pressure warning lamp turns on.
ID REGIST WARNING	This test is able to check to check that the buzzer sounds or the low tire pressure warning lamp turns on.
FLASHER	This test is able to check to check that each turn signal lamp turns on.
HORN	This test is able to check to check that the horn sounds.

A

B

C

D

E

F

G

H

I

J

K

L

BCS

N

O

P

< DTC/CIRCUIT DIAGNOSIS >

DTC/CIRCUIT DIAGNOSIS

U1000 CAN COMM

Description

INFOID:000000005518295

CAN (Controller Area Network) is a serial communication line for real time applications. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Modern vehicle is equipped with many electronic control unit, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN H-line, CAN L-line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

CAN Communication Signal Chart. Refer to [LAN-27, "CAN Communication Signal Chart"](#).

DTC Logic

INFOID:000000005518296

DTCT DETECTION LOGIC

DTC	CONSULT-III display description	DTC Detection Condition	Possible cause
U1000	CAN COMM	When BCM cannot communicate CAN communication signal continuously for 2 seconds or more.	CAN communication system

Diagnosis Procedure

INFOID:000000005518297

1. PERFORM SELF DIAGNOSTIC

1. Turn ignition switch ON and wait for 2 seconds or more.
2. Check "Self Diagnostic Result".

Is DTC "U1000" displayed?

- YES >> Refer to [LAN-17, "Trouble Diagnosis Flow Chart"](#).
NO >> Refer to [GI-39, "Intermittent Incident"](#).

U1010 CONTROL UNIT (CAN)

< DTC/CIRCUIT DIAGNOSIS >

U1010 CONTROL UNIT (CAN)

DTC Logic

INFOID:0000000005518298

DTC DETECTION LOGIC

DTC	CONSULT-III display de-scription	DTC Detection Condition	Possible cause
U1010	CONTROL UNIT(CAN)	BCM detected internal CAN communication circuit malfunction.	BCM

Diagnosis Procedure

INFOID:0000000005518299

1 .REPLACE BCM

When DTC "U1010" is detected, replace BCM.

>> Replace BCM. Refer to [BCS-95, "Exploded View"](#).

A

B

C

D

E

F

G

H

I

J

K

L

BCS

N

O

P

U0415 VEHICLE SPEED SIG

< DTC/CIRCUIT DIAGNOSIS >

U0415 VEHICLE SPEED SIG

Description

INFOID:0000000005518300

U0415 is displayed if any unusual condition is present in the reception status of the vehicle speed signal from the ABS actuator and electric unit (control unit).

DTC Logic

INFOID:0000000005518301

DTC DETECTION LOGIC

DTC	CONSULT-III display description	DTC Detection Condition	Probable cause
U0415	VEHICLE SPEED	When the vehicle speed signal received from the ABS actuator and electric unit (control unit) remains abnormal for 2 seconds or more.	<ul style="list-style-type: none">• ABS actuator and electric unit (control unit)• BCM

DTC CONFIRMATION PROCEDURE

1.DTC CONFIRMATION

1. Erase the DTC.
2. Turn ignition switch OFF.
3. Perform the "Self Diagnostic Result" of CONSULT-III, when passed 2 seconds or more after the ignition switch is turned ON.

Is any DTC detected?

YES >> Refer to [BCS-40, "Diagnosis Procedure"](#).

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000005518302

1.ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) SELF-DIAG RESULTS

Perform "Self-Diagnostic Result" of ABS actuator and electric unit (control unit) with CONSULT-III. Refer to [BCR-28, "CONSULT-III Function"](#).

Is any DTC detected?

YES >> Repair or replace the malfunctioning part.

NO >> Replace BCM. Refer to [BCS-95, "Exploded View"](#).

B2562 LOW VOLTAGE

< DTC/CIRCUIT DIAGNOSIS >

B2562 LOW VOLTAGE

DTC Logic

INFOID:000000005518303

DTC DETECTION LOGIC

DTC	CONSULT-III display description	DTC Detection Condition	Possible cause
B2562	LOW VOLTAGE	When the power supply voltage to BCM remains less than 8.8 V for 120 seconds or more	Harness or connector (power supply circuit)

DTC CONFIRMATION PROCEDURE

1.DTC CONFIRMATION

1. Erase DTC.
2. Turn ignition switch OFF.
3. Perform the "Self Diagnostic Result" of CONSULT-III, when passed 120 seconds or more after the ignition switch is turned ON.

Is any DTC detected?

YES >> Refer to [BCS-41, "Diagnosis Procedure"](#).

NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000005518304

1.CHECK POWER SUPPLY CIRCUIT

Check BCM power supply circuit. Refer to [BCS-42, "Diagnosis Procedure"](#).

Is the circuit normal?

YES >> Replace BCM. Refer to [BCS-95, "Exploded View"](#).

NO >> Repair the malfunctioning part.

A

B

C

D

E

F

G

H

I

J

K

L

BCS

N

O

P

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

POWER SUPPLY AND GROUND CIRCUIT

Diagnosis Procedure

INFOID:0000000005518305

1.CHECK FUSE AND FUSIBLE LINK

Check that the following fuse and fusible link are not blown.

Signal name	Fuse and fusible link No.
Battery power supply	L
	10

Is the fuse fusing?

- YES >> Replace the blown fuse or fusible link after repairing the affected circuit if a fuse or fusible link is blown.
NO >> GO TO 2.

2.CHECK POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connectors.
3. Check voltage between BCM harness connector and ground.

Terminals		Voltage (Approx.)
(+)	(-)	
BCM		Ground
Connector	Terminal	
M118	1	
M119	11	Battery voltage

Is the measurement value normal?

- YES >> GO TO 3.
NO >> Repair harness or connector.

3.CHECK GROUND CIRCUIT

Check continuity between BCM harness connector and ground.

BCM		Continuity
Connector	Terminal	
M119	13	Existed

Does continuity exist?

- YES >> INSPECTION END
NO >> Repair harness or connector.

COMBINATION SWITCH INPUT CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

COMBINATION SWITCH INPUT CIRCUIT

Diagnosis Procedure

INFOID:0000000005518306

1. CHECK INPUT 1 - 5 SYSTEM CIRCUIT FOR OPEN

1. Turn the ignition switch OFF.
2. Disconnect the BCM and combination switch connectors.
3. Check continuity between BCM harness connector and combination switch harness connector.

System	BCM		Combination switch		Continuity
	Connector	Terminal	Connector	Terminal	
INPUT 1	M122	107	M103	11	Existed
INPUT 2		109		9	
INPUT 3		88		7	
INPUT 4		108		10	
INPUT 5		87		13	

Does continuity exist?

YES >> GO TO 2.

NO >> Repair the harnesses or connectors.

2. CHECK INPUT 1 - 5 SYSTEM CIRCUIT FOR SHORT

Check for continuity between BCM harness connector and ground.

System	BCM		Ground	Continuity
	Connector	Terminal		
INPUT 1	M122	107		Not existed
INPUT 2		109		
INPUT 3		88		
INPUT 4		108		
INPUT 5		87		

Does continuity exist?

YES >> Repair the harnesses or connectors.

NO >> GO TO 3.

3. CHECK BCM OUTPUT VOLTAGE

1. Connect the BCM connector.
2. Check voltage between BCM harness connector and ground.

System	Terminals		Ground	Voltage (Approx.)		
	(+) (-)					
	BCM					
	Connector	Terminal				
INPUT 1	M122	107		Refer to BCS-47, "Reference Value".		
INPUT 2		109				
INPUT 3		88				
INPUT 4		108				
INPUT 5		87				

Is the measurement value normal?

YES >> GO TO 4.

NO >> Replace BCM. Refer to [BCS-95, "Exploded View".](#)

COMBINATION SWITCH INPUT CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

4. CHECK BCM INPUT SIGNAL

1. Connect the combination switch connector.
2. Turn ON any switch in the system that is malfunctioning.
3. Check voltage between BCM harness connector and ground.

System	Terminals		Voltage (Approx.)	
	(+) (-)			
	BCM			
	Connector	Terminal		
INPUT 1	M122	107	Refer to BCS-47, "Reference Value".	
INPUT 2		109		
INPUT 3		88		
INPUT 4		108		
INPUT 5		87		

Is the measurement value normal when any of the switches is turned ON?

YES >> Replace BCM. Refer to [BCS-95, "Exploded View"](#).

NO >> Replace the combination switch.

COMBINATION SWITCH OUTPUT CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

COMBINATION SWITCH OUTPUT CIRCUIT

Diagnosis Procedure

INFOID:0000000005518307

1.CHECK OUTPUT 1 - 5 SYSTEM CIRCUIT FOR OPEN

1. Turn the ignition switch OFF.
2. Disconnect the BCM and combination switch connectors.

NOTE:

BCM connector disconnects M123 only.

3. Check continuity between BCM harness connector and combination switch harness connector.

System	BCM		Combination switch		Continuity
	Connector	Terminal	Connector	Terminal	
OUTPUT 1	M123	143	M103	12	Existed
OUTPUT 2		144		14	
OUTPUT 3		145		5	
OUTPUT 4		146		2	
OUTPUT 5		142		8	

Does continuity exist?

YES >> GO TO 2.

NO >> Repair the harnesses or connectors.

2.CHECK OUTPUT 1 - 5 SYSTEM CIRCUIT FOR SHORT

Check for continuity between BCM harness connector and ground.

System	BCM		Ground	Continuity
	Connector	Terminal		
OUTPUT 1	M123	143		Not existed
OUTPUT 2		144		
OUTPUT 3		145		
OUTPUT 4		146		
OUTPUT 5		142		

Does continuity exist?

YES >> Repair the harnesses or connectors.

NO >> GO TO 3.

3.CHECK COMBINATION SWITCH INTERNAL CIRCUIT

1. Connect the combination switch connector.
2. Turn ON any switch in the system that is malfunctioning.
3. Check voltage between combination switch harness connector and ground.

NOTE:


Check that the combination switch outputs a signal from combination switch input system.

BCS

COMBINATION SWITCH OUTPUT CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

System	Terminals		Value (Approx.)
	(+)	(-)	
	Combination switch	Connector	
OUTPUT 1	M103	12	Ground
OUTPUT 2		14	
OUTPUT 3		5	
OUTPUT 4		2	
OUTPUT 5		8	

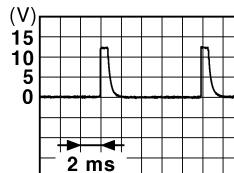

JPMIA0041GB

1.4 V

Is the measurement value normal when any of the switches is turned ON?

- YES >> Replace BCM. Refer to [BCS-95, "Exploded View"](#).
NO >> Replace the combination switch.

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

ECU DIAGNOSIS INFORMATION

BCM (BODY CONTROL MODULE)

Reference Value

INFOID:000000005518308

VALUES ON THE DIAGNOSIS TOOL

CONSULT-III MONITOR ITEM

Monitor Item	Condition	Value/Status
FR WIPER HI	Other than front wiper switch HI	Off
	Front wiper switch HI	On
FR WIPER LOW	Other than front wiper switch LO	Off
	Front wiper switch LO	On
FR WASHER SW	Front washer switch OFF	Off
	Front washer switch ON	On
FR WIPER INT	Other than front wiper switch INT/AUTO	Off
	Front wiper switch INT/AUTO	On
FR WIPER STOP	Front wiper is not in STOP position	Off
	Front wiper is in STOP position	On
INT VOLUME	Wiper intermittent dial is in a dial position 1 - 7	Wiper intermittent dial position
RR WIPER ON	Other than rear wiper switch ON	Off
	Rear wiper switch ON	On
RR WIPER INT	Other than rear wiper switch INT	Off
	Rear wiper switch INT	On
RR WASHER SW	Rear washer switch OFF	Off
	Rear washer switch ON	On
RR WIPER STOP	Rear wiper is in STOP position	Off
	Rear wiper is not in STOP position	On
TURN SIGNAL R	Other than turn signal switch RH	Off
	Turn signal switch RH	On
TURN SIGNAL L	Other than turn signal switch LH	Off
	Turn signal switch LH	On
TAIL LAMP SW	Other than lighting switch 1ST and 2ND	Off
	Lighting switch 1ST or 2ND	On
HI BEAM SW	Other than lighting switch HI	Off
	Lighting switch HI	On
HEAD LAMP SW 1	Other than lighting switch 2ND	Off
	Lighting switch 2ND	On
HEAD LAMP SW 2	Other than lighting switch 2ND	Off
	Lighting switch 2ND	On
PASSING SW	Other than lighting switch PASS	Off
	Lighting switch PASS	On
AUTO LIGHT SW	Other than lighting switch AUTO	Off
	Lighting switch AUTO	On
FR FOG SW	Front fog lamp switch OFF	Off
	Front fog lamp switch ON	On

A

B

C

D

E

F

G

H

I

J

K

L

BCS

N

O

P

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

Monitor Item	Condition	Value/Status
RR FOG SW	NOTE: The item is indicated, but not monitored.	Off
DOOR SW-DR	Driver door closed	Off
	Driver door opened	On
DOOR SW-AS	Passenger door closed	Off
	Passenger door opened	On
DOOR SW-RR	Rear RH door closed	Off
	Rear RH door opened	On
DOOR SW-RL	Rear LH door closed	Off
	Rear LH door opened	On
DOOR SW-BK	Back door closed	Off
	Back door opened	On
CDL LOCK SW	Other than power door lock switch LOCK	Off
	Power door lock switch LOCK	On
CDL UNLOCK SW	Other than power door lock switch UNLOCK	Off
	Power door lock switch UNLOCK	On
KEY CYL LK-SW	Other than driver door key cylinder LOCK position	Off
	Driver door key cylinder LOCK position	On
KEY CYL UN-SW	Other than driver door key cylinder UNLOCK position	Off
	Driver door key cylinder UNLOCK position	On
KEY CYL SW-TR	NOTE: The item is indicated, but not monitored.	Off
HAZARD SW	Hazard switch is OFF	Off
	Hazard switch is ON	On
REAR DEF SW NOTE: For models with BOSE audio system this item is not monitored.	Rear window defogger switch OFF	Off
	Rear window defogger switch ON	On
TR CANCEL SW	NOTE: The item is indicated, but not monitored.	Off
TR/BD OPEN SW	Back door opener switch OFF	Off
	While the back door opener switch is turned ON	On
TRNK/HAT MNTR	NOTE: The item is indicated, but not monitored.	Off
RKE-LOCK	LOCK button of Intelligent Key is not pressed	Off
	LOCK button of Intelligent Key is pressed	On
RKE-UNLOCK	UNLOCK button of Intelligent Key is not pressed	Off
	UNLOCK button of Intelligent Key is pressed	On
RKE-TR/BD	BACK DOOR OPEN button of Intelligent Key is not pressed	Off
	BACK DOOR OPEN button of Intelligent Key is pressed	On
RKE-PANIC	PANIC button of Intelligent Key is not pressed	Off
	PANIC button of Intelligent Key is pressed	On
RKE-P/W OPEN	UNLOCK button of Intelligent Key is not pressed	Off
	UNLOCK button of Intelligent Key is pressed and held	On

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

Monitor Item	Condition	Value/Status
RKE-MODE CHG	LOCK/UNLOCK button of Intelligent Key is not pressed and held simultaneously	Off
	LOCK/UNLOCK button of Intelligent Key is pressed and held simultaneously	On
OPTICAL SENSOR	Bright outside of the vehicle	Close to 5 V
	Dark outside of the vehicle	Close to 0 V
REQ SW -DR	Driver door request switch is not pressed	Off
	Driver door request switch is pressed	On
REQ SW -AS	Passenger door request switch is not pressed	Off
	Passenger door request switch is pressed	On
REQ SW -RR	NOTE: The item is indicated, but not monitored.	Off
REQ SW -RR	NOTE: The item is indicated, but not monitored.	Off
REQ SW -BD/TR	Back door request switch is not pressed	Off
	Back door request switch is pressed	On
PUSH SW	Push-button ignition switch (push switch) is not pressed	Off
	Push-button ignition switch (push switch) is pressed	On
IGN RLY2 -F/B	Ignition switch in OFF or ACC position	Off
	Ignition switch in ON position	On
ACC RLY -F/B	NOTE: The item is indicated, but not monitored.	Off
CLUCH SW	NOTE: The item is indicated, but not monitored.	Off
BRAKE SW 1	The brake pedal is depressed when No. 7 fuse is blown	Off
	The brake pedal is not depressed when No. 7 fuse is blown, or No. 7 fuse is normal	On
BRAKE SW 2	The brake pedal is not depressed	Off
	Stop lamp switch 1 signal circuit is normal	On
DETE/CANCL SW	Selector lever in P position	Off
	Selector lever in any position other than P	On
SFT PN/N SW	Selector lever in any position other than P and N	Off
	Selector lever in P or N position	On
S/L -LOCK NOTE: For models without steering lock unit this item is not displayed.	Steering is unlocked	Off
Steering is locked	On	
S/L -UNLOCK NOTE: For models without steering lock unit this item is not displayed.	Steering is locked	Off
	Steering is unlocked	On
S/L RELAY-F/B NOTE: For models without steering lock unit this item is not displayed.	Ignition switch in OFF or ACC position	Off
	Ignition switch in ON position	On
UNLK SEN -DR	Driver door is unlocked	Off
	Driver door is locked	On
PUSH SW -IPDM	Push-button ignition switch (push-switch) is not pressed	Off
	Push-button ignition switch (push-switch) is pressed	On

A

B

C

D

E

F

G

H

I

J

K

L

BCS

N

O

P

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

Monitor Item	Condition	Value/Status
IGN RLY1 -F/B	Ignition switch in OFF or ACC position	Off
	Ignition switch in ON position	On
DETE SW -IPDM	Selector lever in any position other than P	Off
	Selector lever in P position	On
SFT PN -IPDM	Selector lever in any position other than P and N	Off
	Selector lever in P or N position	On
SFT P -MET	Selector lever in any position other than P	Off
	Selector lever in P position	On
SFT N -MET	Selector lever in any position other than N	Off
	Selector lever in N position	On
ENGINE STATE	Engine stopped	Stop
	While the engine stalls	Stall
	At engine cranking	Crank
	Engine running	Run
S/L LOCK-IPDM NOTE: For models without steering lock unit this item is not displayed.	Steering is unlocked	Off
Steering is locked	On	
S/L UNLK-IPDM NOTE: For models without steering lock unit this item is not displayed.	Steering is locked	Off
	Steering is unlocked	On
S/L RELAY-REQ NOTE: For models without steering lock unit this item is not displayed.	Steering lock system is not the LOCK condition and the changing condition from LOCK to UNLOCK.	Off
	Steering lock system is the LOCK condition or the changing condition from LOCK to UNLOCK.	On
VEH SPEED 1	While driving	Equivalent to speedometer reading
VEH SPEED 2	While driving	Equivalent to speedometer reading
DOOR STAT-DR	Driver door is locked	LOCK
	Wait with selective UNLOCK operation (5 seconds)	READY
	Driver door is unlocked	UNLOCK
DOOR STAT-AS	Passenger door is locked	LOCK
	Wait with selective UNLOCK operation (5 seconds)	READY
	Passenger door is unlocked	UNLOCK
ID OK FLAG	Power supply position in LOCK position	Reset
	Power supply position in any position other than LOCK	Set
PRMT ENG STRT	The engine start is prohibited	Reset
	The engine start is permitted	Set
PRMT RKE STRT	NOTE: The item is indicated, but not monitored.	Reset
KEY SW -SLOT	Intelligent Key is not inserted into key slot	Off
	Intelligent Key is inserted into key slot	On
RKE OPE COUN1	During the operation of Intelligent Key	Operation frequency of Intelligent Key
RKE OPE COUN2	NOTE: The item is indicated, but not monitored.	—

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

Monitor Item	Condition	Value/Status
CONFIRM ID ALL	The Intelligent Key ID that the key slot receives is not recognized by any Intelligent Key ID registered to BCM.	Yet
	The Intelligent Key ID that the key slot receives is recognized by any Intelligent Key ID registered to BCM.	Done
CONFIRM ID4	The Intelligent Key ID that the key slot receives is not recognized by the fourth Intelligent Key ID registered to BCM.	Yet
	The Intelligent Key ID that the key slot receives is recognized by the fourth Intelligent Key ID registered to BCM.	Done
CONFIRM ID3	The Intelligent Key ID that the key slot receives is not recognized by the third Intelligent Key ID registered to BCM.	Yet
	The Intelligent Key ID that the key slot receives is recognized by the third Intelligent Key ID registered to BCM.	Done
CONFIRM ID2	The Intelligent Key ID that the key slot receives is not recognized by the second Intelligent Key ID registered to BCM.	Yet
	The Intelligent Key ID that the key slot receives is recognized by the second Intelligent Key ID registered to BCM.	Done
CONFIRM ID1	The Intelligent Key ID that the key slot receives is not recognized by the first Intelligent Key ID registered to BCM.	Yet
	The Intelligent Key ID that the key slot receives is recognized by the first Intelligent Key ID registered to BCM.	Done
TP 4	The ID of fourth Intelligent Key is not registered to BCM	Yet
	The ID of fourth Intelligent Key is registered to BCM	Done
TP 3	The ID of third Intelligent Key is not registered to BCM	Yet
	The ID of third Intelligent Key is registered to BCM	Done
TP 2	The ID of second Intelligent Key is not registered to BCM	Yet
	The ID of second Intelligent Key is registered to BCM	Done
TP 1	The ID of first Intelligent Key is not registered to BCM	Yet
	The ID of first Intelligent Key is registered to BCM	Done
AIR PRESS FL	Ignition switch ON (Only when the signal from the transmitter is received)	Air pressure of front LH tire
AIR PRESS FR	Ignition switch ON (Only when the signal from the transmitter is received)	Air pressure of front RH tire
AIR PRESS RR	Ignition switch ON (Only when the signal from the transmitter is received)	Air pressure of rear RH tire
AIR PRESS RL	Ignition switch ON (Only when the signal from the transmitter is received)	Air pressure of rear LH tire
ID REGST FL1	ID of front LH tire transmitter is registered	Done
	ID of front LH tire transmitter is not registered	Yet
ID REGST FR1	ID of front RH tire transmitter is registered	Done
	ID of front RH tire transmitter is not registered	Yet
ID REGST RR1	ID of rear RH tire transmitter is registered	Done
	ID of rear RH tire transmitter is not registered	Yet
ID REGST RL1	ID of rear LH tire transmitter is registered	Done
	ID of rear LH tire transmitter is not registered	Yet
WARNING LAMP	Tire pressure indicator OFF	Off
	Tire pressure indicator ON	On
BUZZER	Tire pressure warning alarm is not sounding	Off
	Tire pressure warning alarm is sounding	On

A

B

C

D

E

F

G

H

I

J

K

L

BCS

N

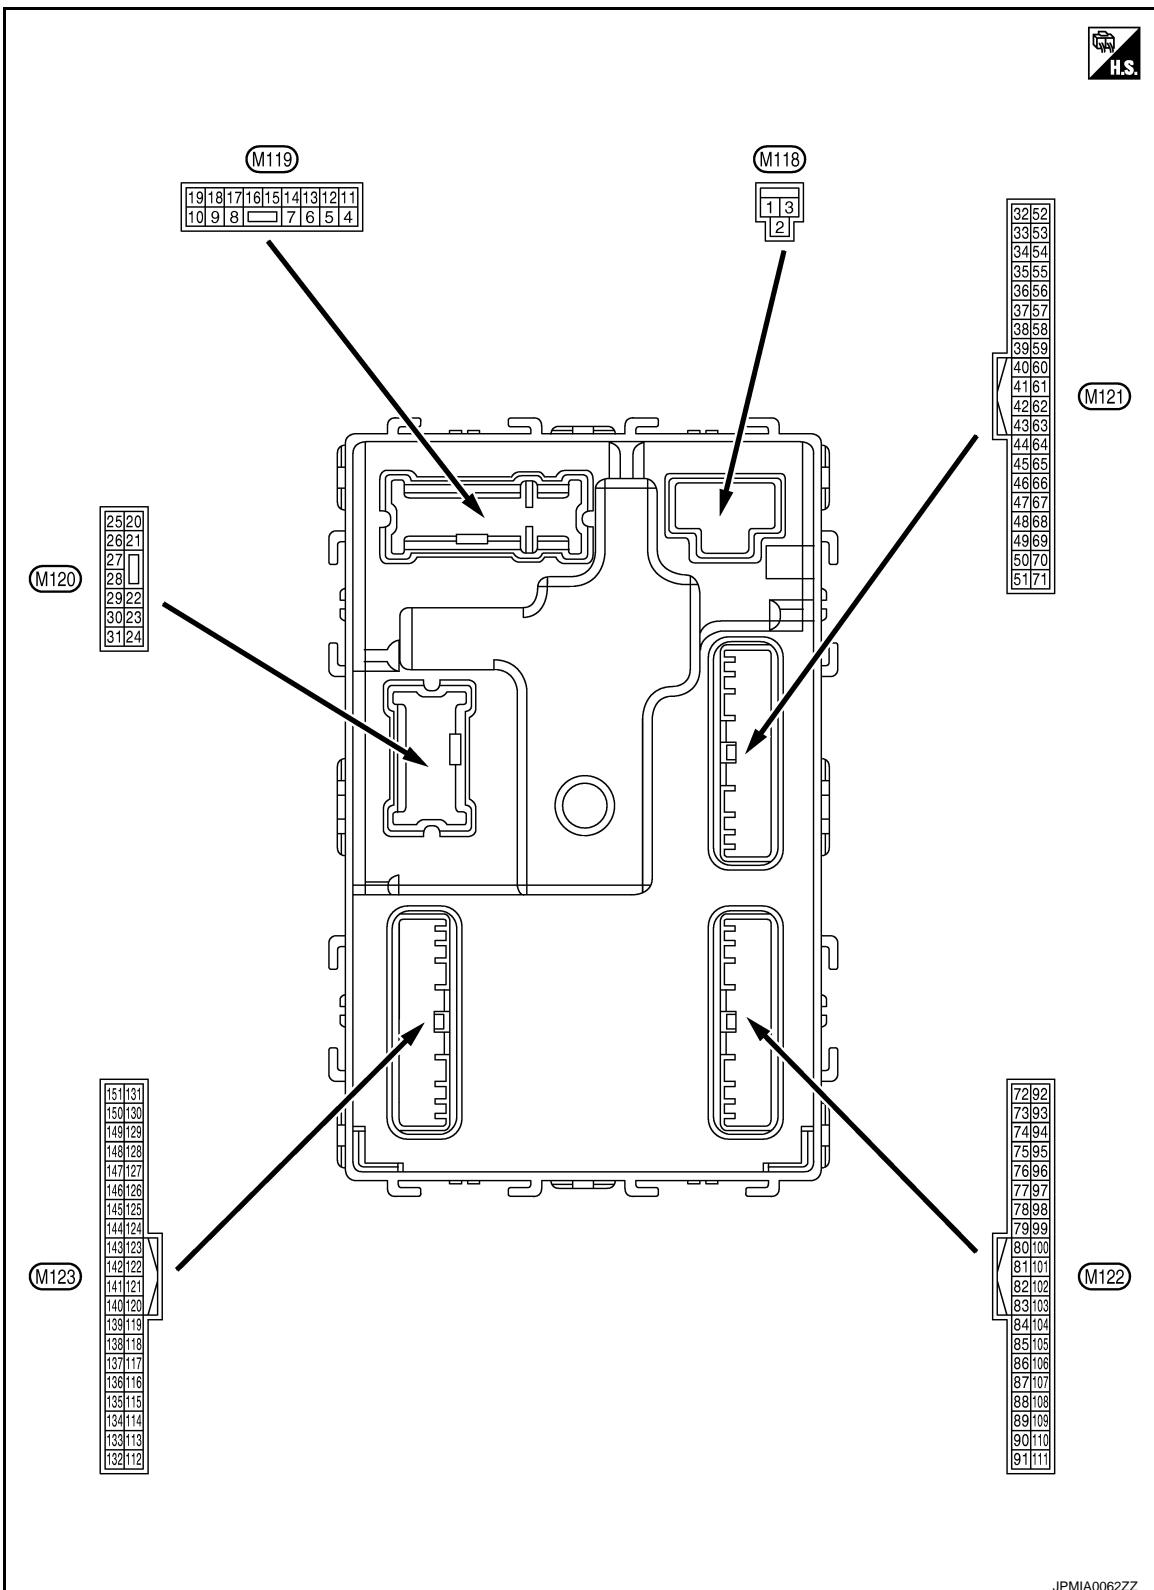
O

P

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

TERMINAL LAYOUT



PHYSICAL VALUES

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color)		Description		Condition	Value (Approx.)
+	-	Signal name	Input/ Output		
1 (W)	Ground	Battery power supply	Input	Ignition switch OFF	Battery voltage
2 (GR)	Ground	P/W power supply (BAT)	Output	Ignition switch OFF	Battery voltage
3 (L)	Ground	P/W power supply (RAP)	Output	Ignition switch ON	Battery voltage
4 (P)	Ground	Interior room lamp power supply	Output	Interior room lamp battery saver is activated. (Cuts the interior room lamp power supply)	0 V
				Interior room lamp battery saver is not activated. (Outputs the interior room lamp power supply)	Battery voltage
5 (G)	Ground	Passenger door UN- LOCK	Output	Passenger door	UNLOCK (Actuator is activated)
					Other than UNLOCK (Actuator is not activated)
7 (W)	Ground	Step lamp	Output	Step lamp	ON
					OFF
8 (V)	Ground	All doors LOCK	Output	All doors	LOCK (Actuator is activated)
					Other than LOCK (Actuator is not activated)
9 (G)	Ground	Driver door UNLOCK	Output	Driver door	UNLOCK (Actuator is activated)
					Other than UNLOCK (Actuator is not activated)
10 (P)	Ground	Rear RH door and rear LH door UN- LOCK	Output	Rear RH door and rear LH door	UNLOCK (Actuator is activated)
					Other than UNLOCK (Actuator is not activated)
11 (LG)	Ground	Battery power supply	Input	Ignition switch OFF	Battery voltage
13 (B)	Ground	Ground	—	Ignition switch ON	0 V
14 (O)	Ground	Push-button ignition switch illumination ground	Output	Tail lamp	OFF
					ON
15 (L)	Ground	ACC indicator lamp	Output	Ignition switch	OFF (LOCK and ON indicator lamps are not illuminated.)
					ACC

A

B

C

D

E

F

G

H

I

J

K

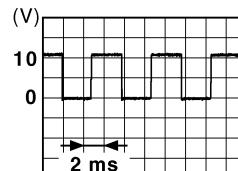
L

BCS

N

O

P









BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color)	Description		Condition	Value (Approx.)
	Signal name	Input/ Output		
+	-			
17 (G)	Ground	Turn signal RH	Output	Ignition switch ON
18 (BR)	Ground	Turn signal LH	Output	Ignition switch ON
19 (Y)	Ground	Room lamp timer control	Output	Interior room lamp
23 (BR)	Ground	Back door open	Output	Back door
26 (G)	Ground	Rear wiper	Output	Rear wiper
34 (B)	Ground	Luggage room antenna (-)	Output	Ignition switch OFF

BCM (BODY CONTROL MODULE)

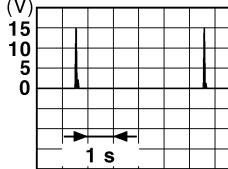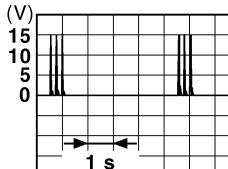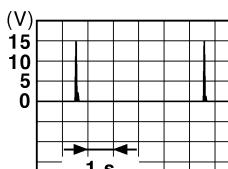
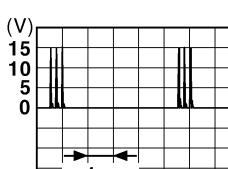
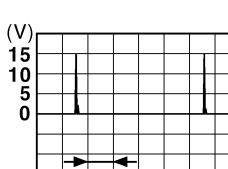
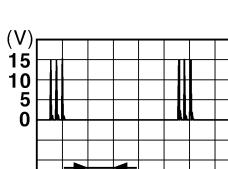
< ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color)	Description		Condition	Value (Approx.)		
	+	-	Signal name	Input/ Output		
35 (W)	Ground	Luggage room antenna (+)	Output	Ignition switch OFF	When Intelligent Key is in the passenger compartment	 (V) 15 10 5 0 1 s <small>JMKIA0062GB</small>
					When Intelligent Key is not in the passenger compartment	 (V) 15 10 5 0 1 s <small>JMKIA0063GB</small>
38 (L)	Ground	Rear bumper antenna (-)	Output	When the back door request switch is operated with ignition switch OFF	When Intelligent Key is in the antenna detection area	 (V) 15 10 5 0 1 s <small>JMKIA0062GB</small>
					When Intelligent Key is not in the antenna detection area	 (V) 15 10 5 0 1 s <small>JMKIA0063GB</small>
39 (BR)	Ground	Rear bumper antenna (+)	Output	When the back door request switch is operated with ignition switch OFF	When Intelligent Key is in the antenna detection area	 (V) 15 10 5 0 1 s <small>JMKIA0062GB</small>
					When Intelligent Key is not in the antenna detection area	 (V) 15 10 5 0 1 s <small>JMKIA0063GB</small>
47 (L)	Ground	Ignition relay (IPDM E/R) control	Output	Ignition switch	OFF or ACC	Battery voltage
					ON	0 V

A
 B
 C
 D
 E
 F
 G
 H
 I
 J
 K
 L
 BCS
 N
 O
 P





BCM (BODY CONTROL MODULE)
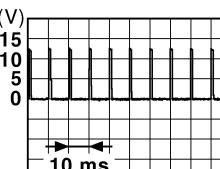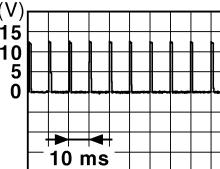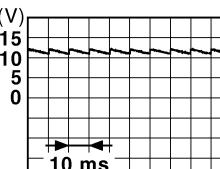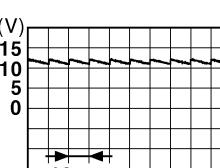
< ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color)	Description		Condition	Value (Approx.)
	Signal name	Input/ Output		
+	-			
52 (R)	Ground	Starter relay control	Output	When selector lever is in P or N position
				Ignition switch ON When selector lever is not in P or N position
				Ignition switch OFF
61 (R)	Ground	Back door request switch	Input	ON (Pressed)
				OFF (Not pressed)
				 <small>JPMIA0016GB</small>
64 (GR)	Ground	Warning buzzer	Output	Sounding
				Not sounding
65 (O)	Ground	Rear wiper stop position	Input	In stop position
				 <small>JPMIA0016GB</small>
				Not in stop position
66 (Y)	Ground	Back door switch	Input	OFF (When back door closes)
				 <small>JPMIA0011GB</small>
				ON (When back door opens)
67 (LG)	Ground	Back door opener switch	Input	Pressed
				 <small>JPMIA0011GB</small>
				Not pressed





BCM (BODY CONTROL MODULE)
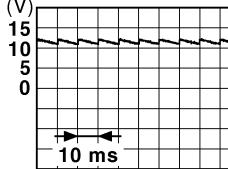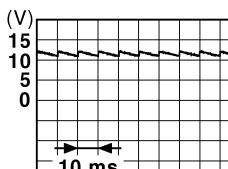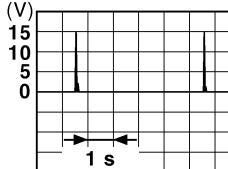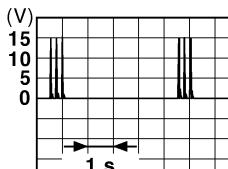
< ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color)	Description		Condition	Value (Approx.)	A B C D E F G H I J K L BCS N O P	
	Signal name	Input/ Output				
+	-					
68 (W)	Ground	Rear RH door switch	Input	Rear RH door switch	OFF (When rear RH door closes)	 JPMIA0011GB 11.8 V
					ON (When rear RH door opens)	0 V
69 (R)	Ground	Rear LH door switch	Input	Rear LH door switch	OFF (When rear LH door closes)	 JPMIA0011GB 11.8 V
					ON (When rear LH door opens)	0 V
72 (B)	Ground	Room antenna (-) (Center console)	Output	Ignition switch OFF	When Intelligent Key is in the passenger compartment	 JMKIA0062GB 1 s
					When Intelligent Key is not in the passenger compartment	 JMKIA0063GB 1 s

BCM (BODY CONTROL MODULE)
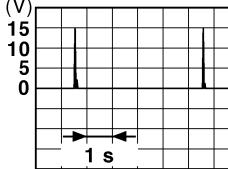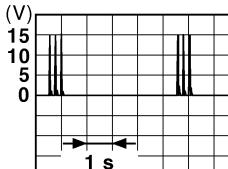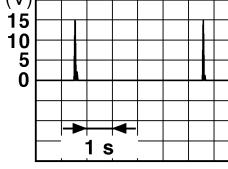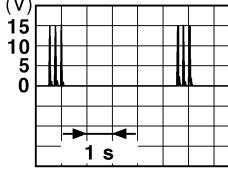
< ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color)	Description		Condition	Value (Approx.)
	Signal name	Input/ Output		
+	-			
73 (W)	Ground	Room antenna (+) (Center console)	Output Ignition switch OFF	When Intelligent Key is in the passenger compart- ment
				 JMKA0062GB
74 (Y)	Ground	Passenger door anten- na (-)	Output When the pas- senger door re- quest switch is operated with ig- nition switch OFF	When Intelligent Key is not in the passenger compart- ment
				 JMKA0063GB
75 (LG)	Ground	Passenger door anten- na (+)	Output When the pas- senger door re- quest switch is operated with ig- nition switch OFF	When Intelligent Key is in the antenna detection area
				 JMKA0062GB
				When Intelligent Key is not in the antenna detection area
				 JMKA0063GB

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color)	Description		Condition	Value (Approx.)		
	+	-				
76 (V)	Ground	Driver door antenna (-)	Output	When Intelligent Key is in the antenna detection area		
				When the driver door request switch is oper- ated with ignition switch OFF		
77 (P)	Ground	Driver door antenna (+)	Output	When Intelligent Key is not in the antenna detection area		
				When the driver door request switch is oper- ated with ignition switch OFF		
80 (SB)	Ground	NATS antenna amp.	Input/ Output	During waiting	Ignition switch is pressed while inserting Intelligent Key into the key slot.	Just after pressing ignition switch. Pointer of tester should move.
81 (O)	Ground	NATS antenna amp.	Input/ Output	During waiting	Ignition switch is pressed while inserting Intelligent Key into the key slot.	Just after pressing ignition switch. Pointer of tester should move.
82 (BR)	Ground	Ignition relay [fuse block (J/B)] control	Output	Ignition switch	OFF or ACC	0 V
					ON	Battery voltage

A

B

C

D

E

F

G

H

I

J

K

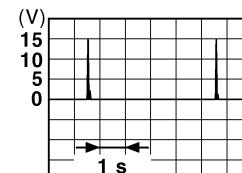
L

BCS


N

O


P




JMKIA0062GB

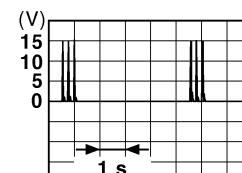

JMKIA0063GB

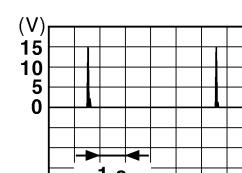







JMKIA0062GB

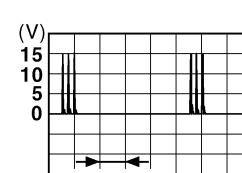

JMKIA0063GB






BCM (BODY CONTROL MODULE)
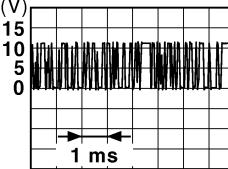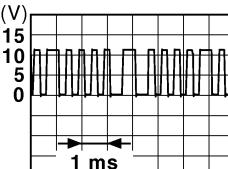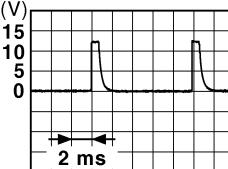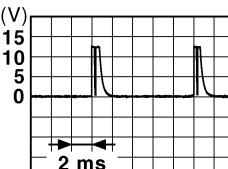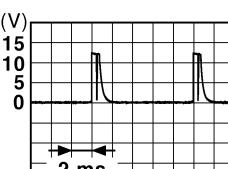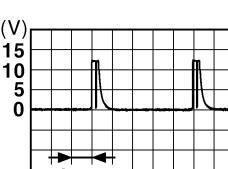
< ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color)	Description		Condition	Value (Approx.)
	Signal name	Input/ Output		
+	-			
83 (P)	Ground	Remote keyless entry receiver communication	Input/ Output	<p>During waiting</p>  <p>JMKIA0064GB</p>
				<p>When operating either button on Intelligent Key</p>  <p>JMKIA0065GB</p>
87 (R)	Ground	Combination switch INPUT 5	Input	<p>All switches OFF (Wiper intermittent dial 4)</p>  <p>JPMIA0041GB</p> <p>1.4 V</p>
				<p>Front fog lamp switch ON (Wiper intermittent dial 4)</p>  <p>JPMIA0037GB</p> <p>1.3 V</p>
				<p>Rear wiper switch ON (Wiper intermittent dial 4)</p>  <p>JPMIA0039GB</p> <p>1.3 V</p>
				<p>Any of the conditions below with all switches OFF</p> <ul style="list-style-type: none"> • Wiper intermittent dial 1 • Wiper intermittent dial 2 • Wiper intermittent dial 6 • Wiper intermittent dial 7  <p>JPMIA0040GB</p> <p>1.3 V</p>

BCM (BODY CONTROL MODULE)
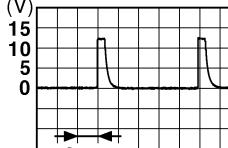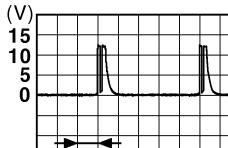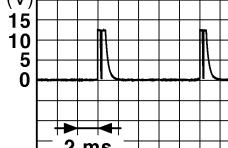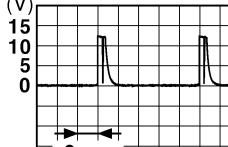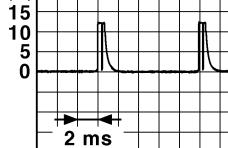
< ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color)	Description		Condition	Value (Approx.)		
	Signal name	Input/ Output				
88 (GR)	Ground	Combination switch INPUT 3	Input	All switches OFF (Wiper intermittent dial 4)	 JPMIA0041GB 1.4 V	
				Lighting switch HI (Wiper intermittent dial 4)	 JPMIA0036GB 1.3 V	
				Lighting switch 2ND (Wiper intermittent dial 4)	 JPMIA0037GB 1.3 V	
				Rear washer switch ON (Wiper intermittent dial 4)	 JPMIA0039GB 1.3 V	
				Any of the conditions below with all switches OFF <ul style="list-style-type: none"> • Wiper intermittent dial 1 • Wiper intermittent dial 2 • Wiper intermittent dial 3 	 JPMIA0040GB 1.3 V	
89 (BR)	Ground	Push-button ignition switch (push switch)	Input	Push-button igni-tion switch (push switch)	Pressed	0 V
					Not pressed	Battery voltage
90 (P)	Ground	CAN - L	Input/ Output	—		—
91 (L)	Ground	CAN - H	Input/ Output	—		—

A

B

C

D

E

F

G

H

I

J

K

L

BCS

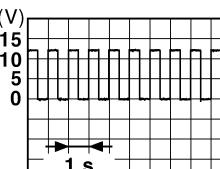
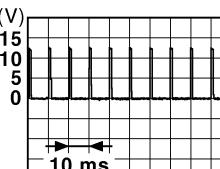
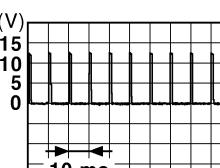
N

O

P





BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
92 (R)	Ground	Key slot illumination	Output	Key slot illumination	OFF	0 V
					Blinking	 (V) 15 10 5 0 1 s
					ON	Battery voltage
93 (P)	Ground	ON indicator lamp	Output	Ignition switch	OFF (LOCK and ACC indicator lamps are not illuminated.)	Battery voltage
					ON	0 V
95 (L)	Ground	ACC relay control	Output	Ignition switch	OFF	0 V
					ACC or ON	Battery voltage
96 (Y)	Ground	CVT shift selector (detention switch) power supply	Output	—		Battery voltage
97* ¹ (O)	Ground	Steering lock condition No. 1	Input	Steering lock	LOCK status	0 V
					UNLOCK status	Battery voltage
98* ¹ (L)	Ground	Steering lock condition No. 2	Input	Steering lock	LOCK status	Battery voltage
					UNLOCK status	0 V
99 (V)	Ground	Selector lever P position switch	Input	Selector lever	P position	0 V
					Any position other than P	Battery voltage
100 (P)	Ground	Passenger door request switch	Input	Passenger door request switch	ON (Pressed)	0 V
					OFF (Not pressed)	 (V) 15 10 5 0 10 ms
						JPMIA0016GB 1.0 V
101 (W)	Ground	Driver door request switch	Input	Driver door request switch	ON (Pressed)	0 V
					OFF (Not pressed)	 (V) 15 10 5 0 10 ms
						JPMIA0016GB 1.0 V
102 (Y)	Ground	Blower fan motor relay control	Output	Ignition switch	OFF or ACC	0 V
					ON	Battery voltage
103 (L)	Ground	Remote keyless entry receiver power supply	Output	Ignition switch OFF		Battery voltage

BCM (BODY CONTROL MODULE)

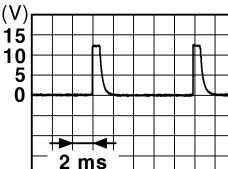
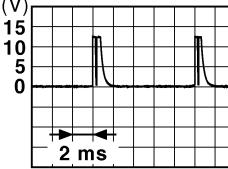
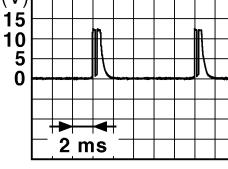
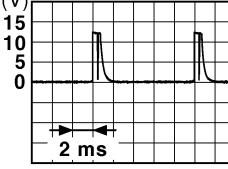
< ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color)	Description		Condition	Value (Approx.)		
	+	-				
106*1 (Y)	Ground	Steering lock unit power supply	Output	Ignition switch	OFF or ACC ON	Battery voltage 0 V
					All switches OFF	 JPMIA0041GB 1.4 V
					Turn signal switch LH	 JPMIA0037GB 1.3 V
107 (O)	Ground	Combination switch INPUT 1	Input	Combination switch (Wiper intermittent dial 4)	Turn signal switch RH	 JPMIA0036GB 1.3 V
					Front wiper switch LO	 JPMIA0038GB 1.3 V
					Front washer switch ON	 JPMIA0039GB 1.3 V

A
B
C
D
E
F
G
H
I
J
K
L
BCS
N
O
P






BCM (BODY CONTROL MODULE)
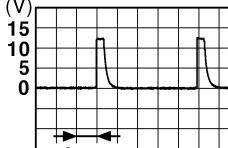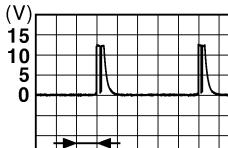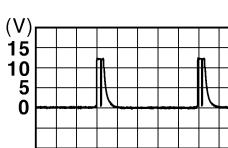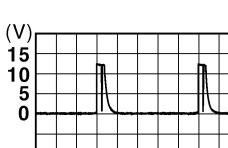
< ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color)	Description		Condition	Value (Approx.)
	Signal name	Input/ Output		
+	-			
108 (P)	Ground	Combination switch INPUT 4	Input	 All switches OFF (Wiper intermittent dial 4)  Lighting switch AUTO (Wiper intermittent dial 4)  Lighting switch 1ST (Wiper intermittent dial 4)  Rear wiper switch INT (Wiper intermittent dial 4)  Any of the conditions below with all switches OFF <ul style="list-style-type: none"> • Wiper intermittent dial 1 • Wiper intermittent dial 5 • Wiper intermittent dial 6
				JPMIA0041GB 1.4 V
				JPMIA0038GB 1.3 V
				JPMIA0036GB 1.3 V
				JPMIA0040GB 1.3 V




BCM (BODY CONTROL MODULE)
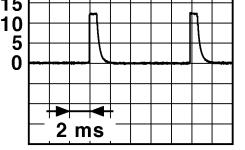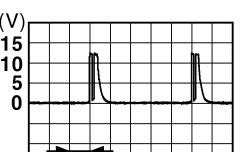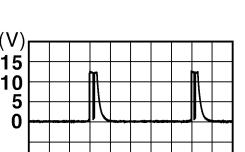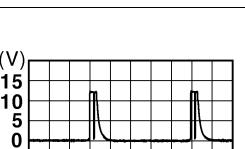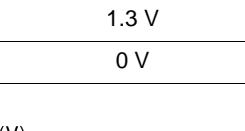
< ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color)	Description		Condition	Value (Approx.)
	Signal name	Input/ Output		
+	-			
109 (SB)	Ground	Combination switch INPUT 2	Input Combination switch (Wiper intermittent dial 4)	All switches OFF  1.4 V JPMIA0041GB
				Lighting switch PASS  1.3 V JPMIA0037GB
				Lighting switch 2ND  1.3 V JPMIA0036GB
				Front wiper switch INT/AUTO  1.3 V JPMIA0038GB
				Front wiper switch HI  1.3 V JPMIA0040GB
				ON 0 V
110 (G)	Ground	Hazard switch	Input Hazard switch	OFF  1.1 V JPMIA0012GB





BCM (BODY CONTROL MODULE)
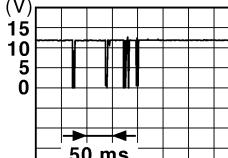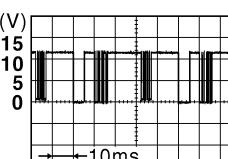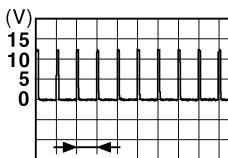
< ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color)	Description		Condition	Value (Approx.)			
	Signal name	Input/ Output					
+	-						
111*1 (LG)	Ground	Steering lock unit communication	Input/ Output	LOCK status			
				LOCK or UNLOCK			
				Steering lock			
				<p>For 15 seconds after UN-LOCK</p>  <p>50 ms</p>			
112 (R)	Ground	Rain sensor serial link	Input/ Output	15 seconds or later after UNLOCK			
				0 V			
113 (O)	Ground	Optical sensor	Input	Ignition switch ON			
				<p>When bright outside of the vehicle</p>  <p>10ms</p>			
116 (GR)	Ground	Stop lamp switch 1	Input	—			
118 (L)	Ground	Stop lamp switch 2	Input	OFF (Brake pedal is not depressed)			
				ON (Brake pedal is depressed)			
119 (W)	Ground	Front door lock assembly driver side (Unlock sensor)	Input	Driver door			
				<p>LOCK status (unlock sensor switch OFF)</p>  <p>10 ms</p>			
121 (Y)	Ground	Key slot switch	Input	UNLOCK status (unlock sensor switch ON)			
				0 V			
123 (G)	Ground	IGN feedback	Input	When Intelligent Key is inserted into key slot			
				Battery voltage			
				When Intelligent Key is not inserted into key slot			
				0 V			
			Input	Ignition switch			
				<p>OFF or ACC</p> <p>ON</p>			
				0 V			
				Battery voltage			

BCM (BODY CONTROL MODULE)


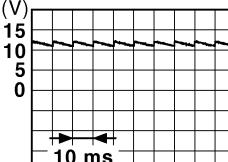
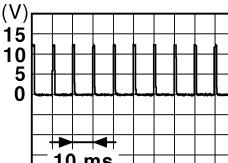
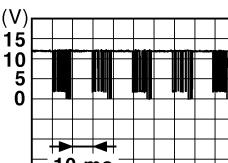
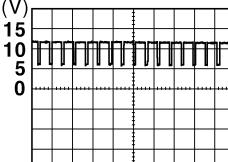
< ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color)	Description		Condition	Value (Approx.)	A B C D E F G H I J K L BCS N O P	
	Signal name	Input/ Output				
124 (R)	Ground	Passenger door switch	Input	Passenger door switch	OFF (When passenger door closes)	 11.8 V JPMIA0011GB
					ON (When passenger door opens)	0 V
130*2 (BR)	Ground	Rear window defogger switch	Input	Ignition switch ON	Rear window defogger switch OFF	 1.1 V JPMIA0012GB
					Rear window defogger switch ON	0 V
132 (G)	Ground	Power window switch communication	Input/ Output	Ignition switch ON		 10.2 V JPMIA0013GB
					Ignition switch OFF or ACC	Battery voltage
133 (W)	Ground	Push-button ignition switch illumination	Output	Push-button ignition switch illumination	ON (When tail lamps OFF)	9.5 V
					ON (When tail lamps ON)	 JPMIA0159GB
					OFF	0 V
134 (R)	Ground	LOCK indicator lamp	Output	LOCK indicator lamp	OFF (ACC and ON indicator lamps are not illuminated.)	Battery voltage
					ON	0 V
137 (P)	Ground	Receiver and sensor ground	Input	Ignition switch ON		0 V
138 (V)	Ground	Receiver and sensor power supply	Output	Ignition switch	OFF	0 V
					ACC or ON	5.0 V

BCM (BODY CONTROL MODULE)





< ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color)	Description		Condition	Value (Approx.)
	Signal name	Input/ Output		
+	-			
139 (O)	Ground	Tire pressure receiver communication	Input/ Output	Ignition switch ON
140 (GR)	Ground	Selector lever P/N position	Input	Selector lever
141 (O)	Ground	Security indicator	Output	Security indicator
142 (L)	Ground	Combination switch OUTPUT 5	Output	Combination switch (Wiper intermittent dial 4)
143 (W)	Ground	Combination switch OUTPUT 1	Output	Combination switch

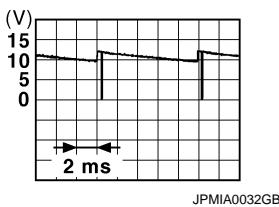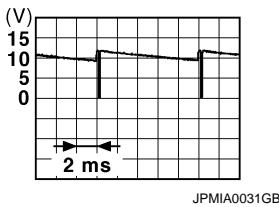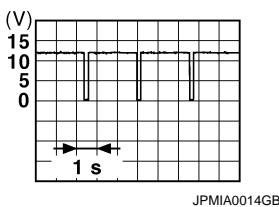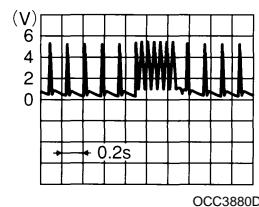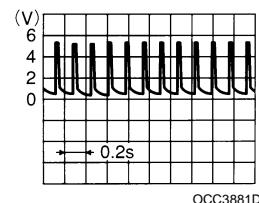

BCM (BODY CONTROL MODULE)
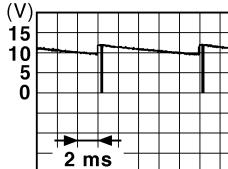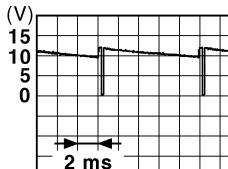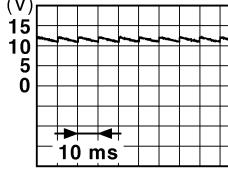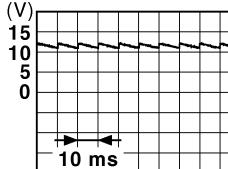
< ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
144 (P)	Ground	Combination switch OUTPUT 2	Output	Combination switch	All switches OFF (Wiper intermittent dial 4)	0 V
					Front washer switch ON (Wiper intermittent dial 4)	 <p>JPMIA0033GB</p> <p>10.7 V</p>
					Rear wiper switch ON (Wiper intermittent dial 4)	
					Rear washer switch ON (Wiper intermittent dial 4)	
					Any of the conditions below with all switches OFF	
					<ul style="list-style-type: none"> • Wiper intermittent dial 1 • Wiper intermittent dial 5 • Wiper intermittent dial 6 	
145 (V)	Ground	Combination switch OUTPUT 3	Output	Combination switch (Wiper intermittent dial 4)	All switches OFF	0 V
					Front wiper switch INT/AUTO	 <p>JPMIA0034GB</p> <p>10.7 V</p>
					Front wiper switch LO	
					Lighting switch AUTO	
146 (Y)	Ground	Combination switch OUTPUT 4	Output	Combination switch (Wiper intermittent dial 4)	All switches OFF	0 V
					Front fog lamp switch ON	 <p>JPMIA0035GB</p> <p>10.7 V</p>
					Lighting switch 2ND	
					Lighting switch PASS	
					Turn signal switch LH	
149 (W)	Ground	Tire pressure warning check switch	Input	Ignition switch ON	 <p>JPMIA0011GB</p> <p>11.8 V</p>	
150 (SB)	Ground	Driver door switch	Input	Driver door switch	OFF (When driver door closes)	 <p>JPMIA0011GB</p> <p>11.8 V</p>
					ON (When driver door opens)	

A

B

C

D

E

F

G

H

I

J

K

L

BCS

N

O

P

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color)	Description		Condition	Value (Approx.)
	Signal name	Input/ Output		
151 (G)	Ground	Rear window defog- ger relay control	Output	Rear window de- fogger
				Active
				Not activated
				Battery voltage

NOTE:

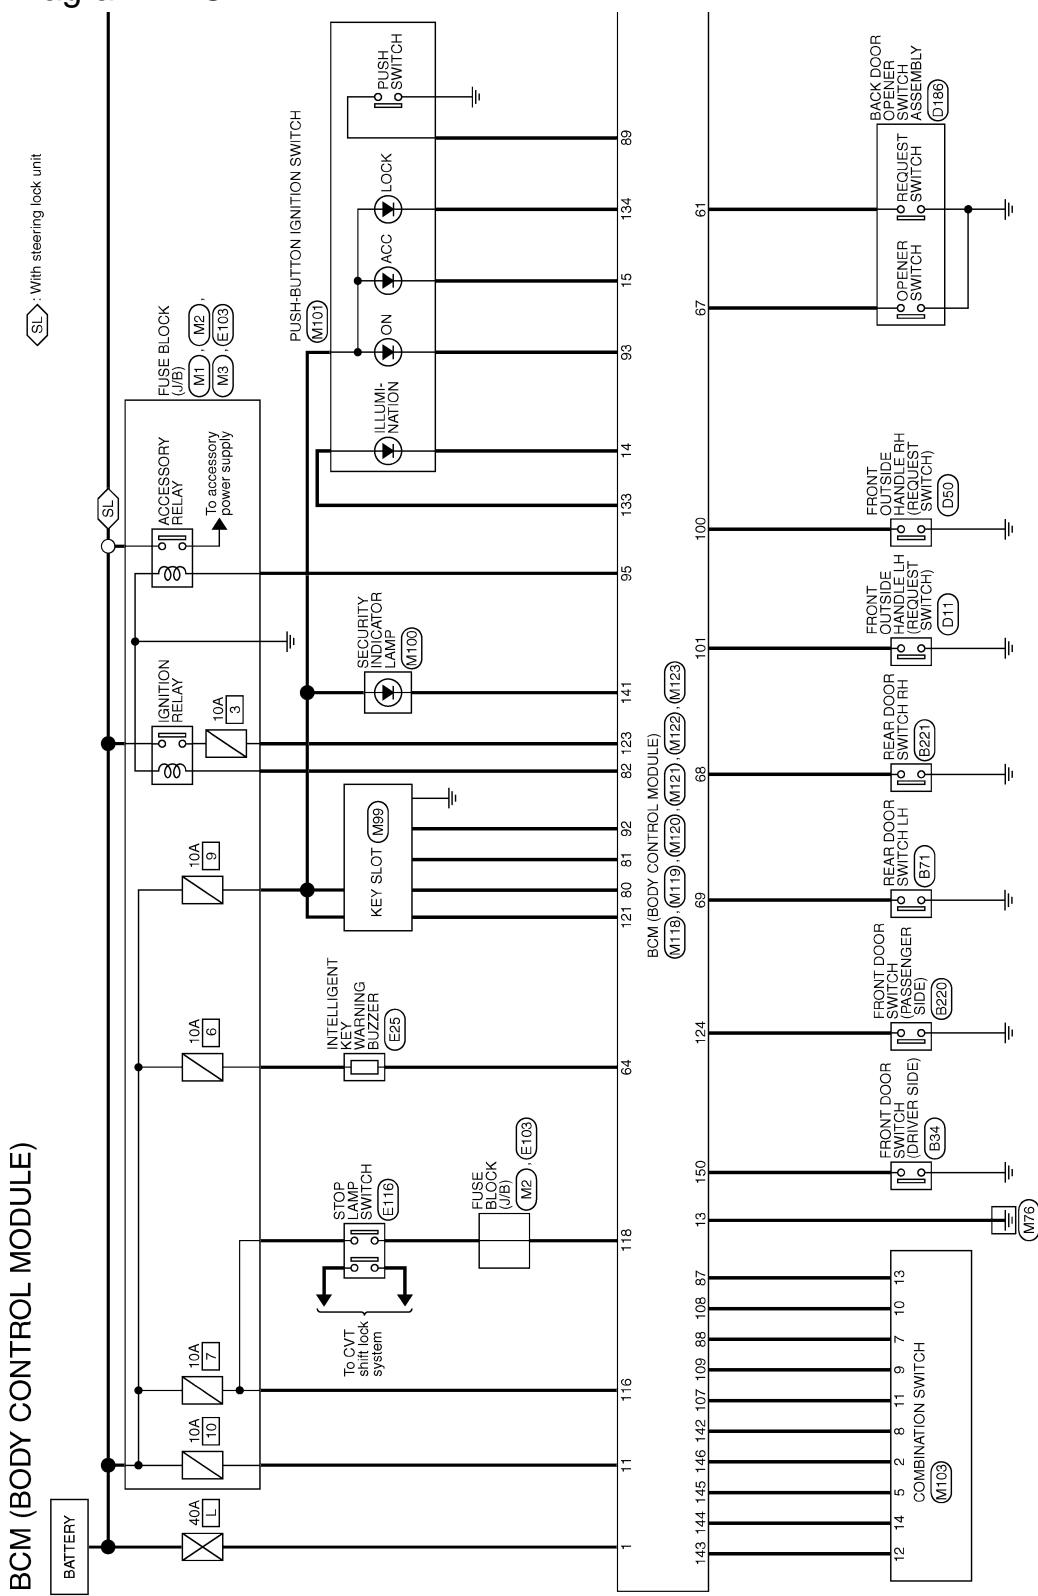
- *1: With steering lock unit
- *2: Without BOSE audio system

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

Wiring Diagram - BCM -

INFOID:000000005518309




2009/08/07

JCMWM4865GB

A B C D E F G H I J K L M N O P Z BCS

BCM (BODY CONTROL MODULE)
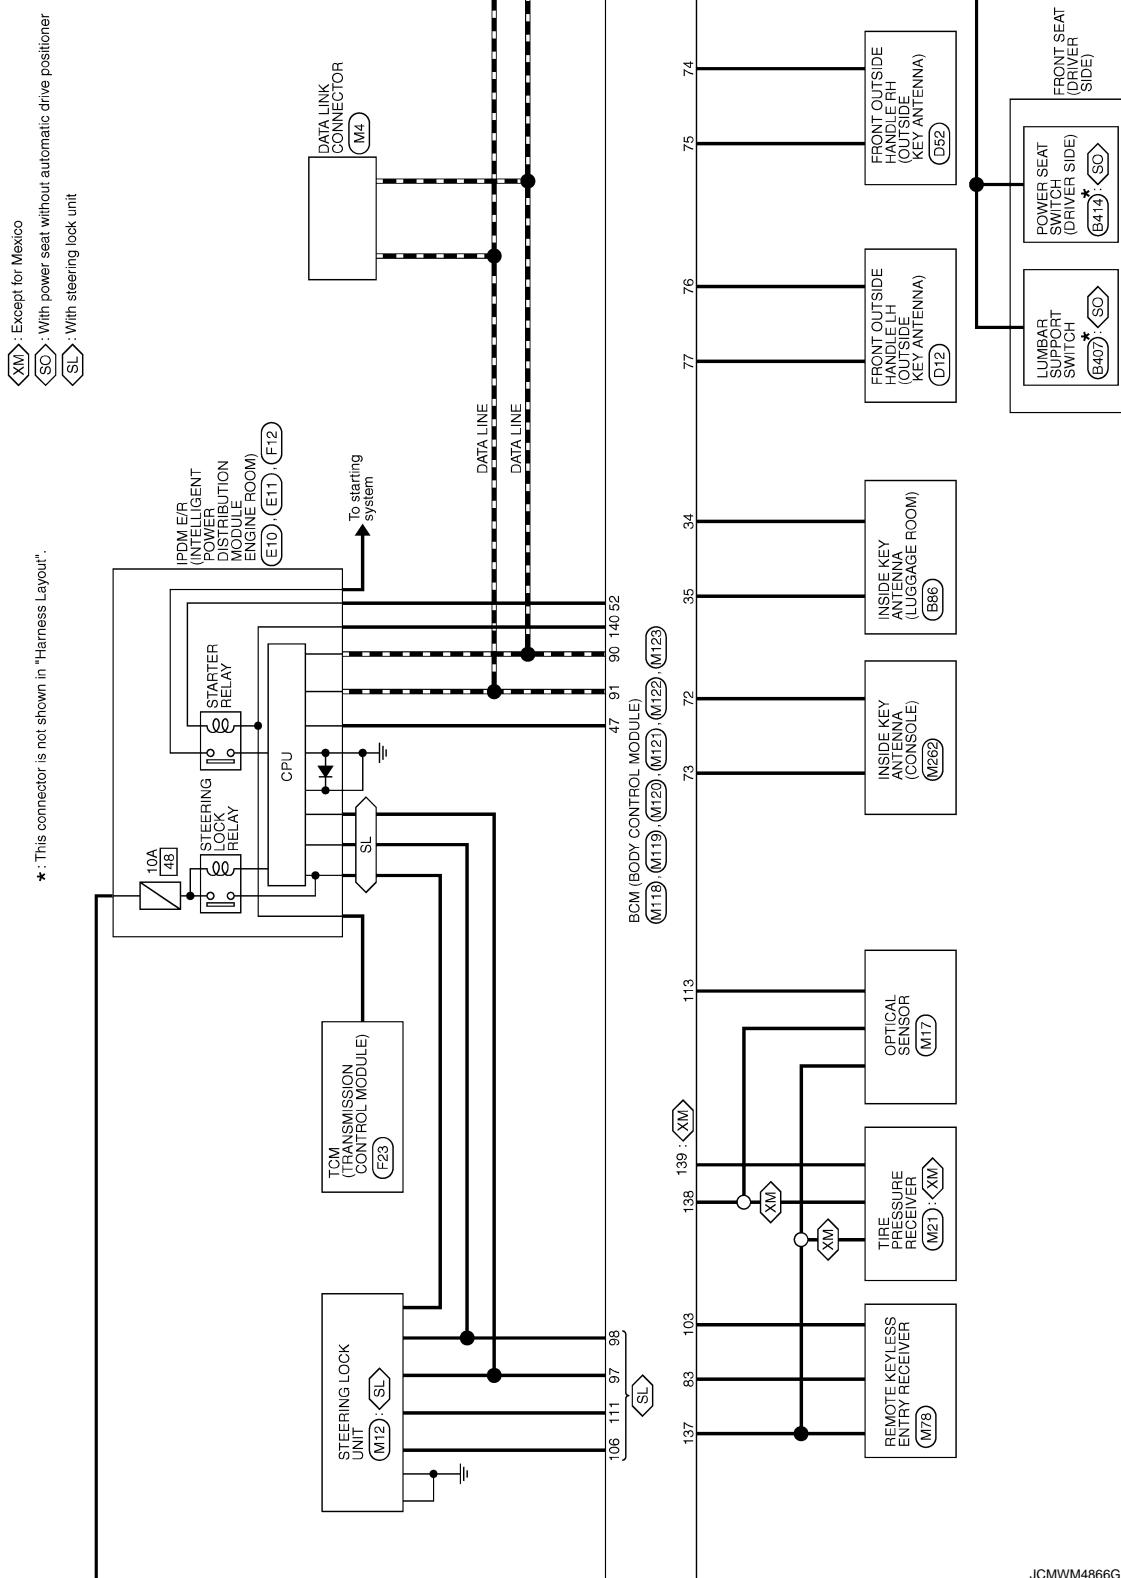
< ECU DIAGNOSIS INFORMATION >





JCMWM4866GB

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

- NV : With navigation system
- BO : With BOSE system without navigation system
- RF : With sunroof
- PM : With automatic drive positioner
- SO : With power seat without automatic drive positioner
- AB : With automatic back door

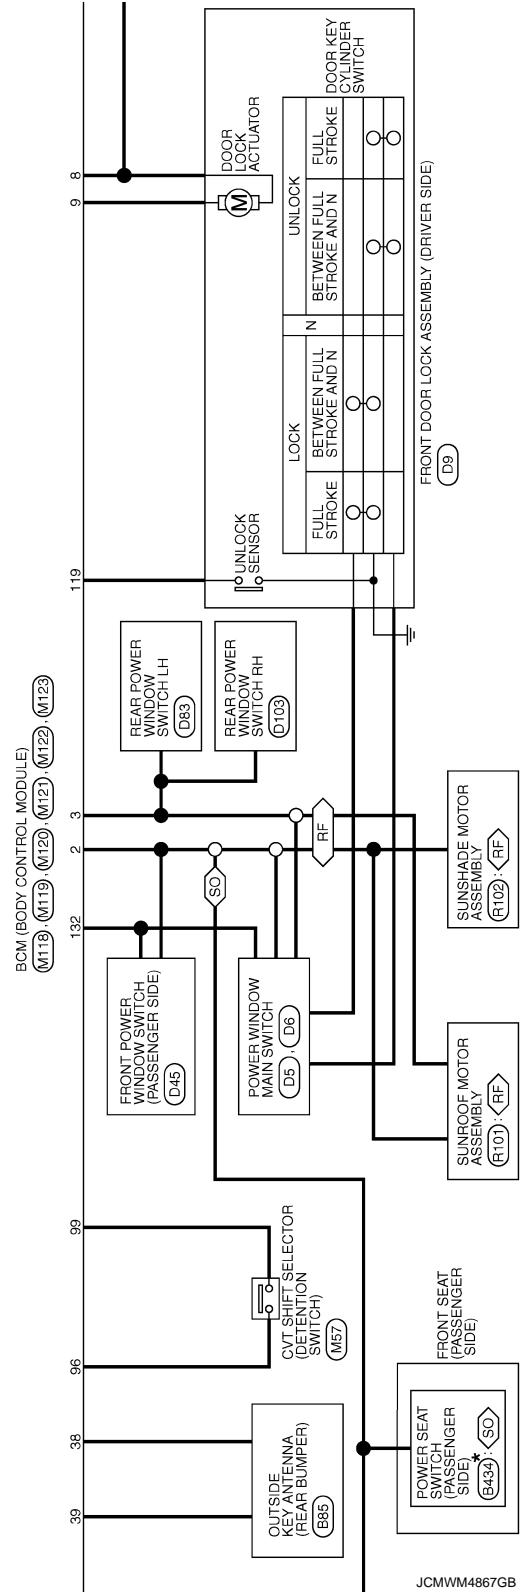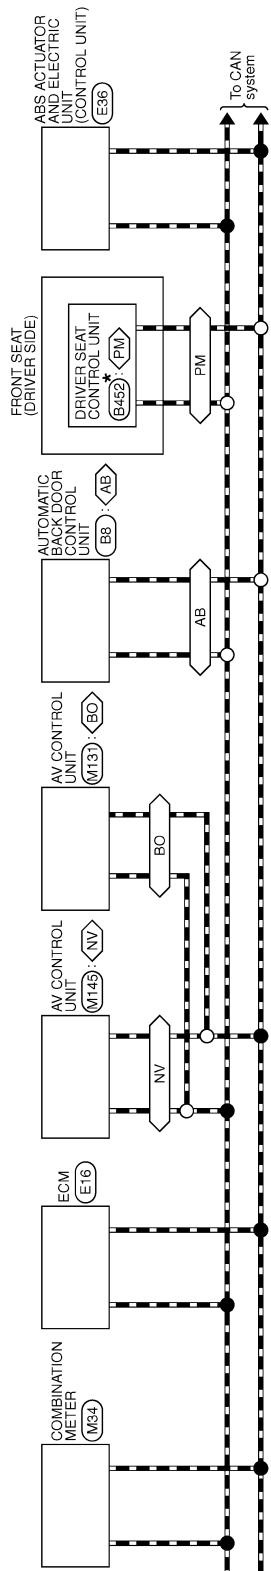* : This connector is not shown in "Harness Layout".




JCMWMM4867GB

A B C D E F G H I J K L M N O P Q R S T

BCS

BCM (BODY CONTROL MODULE)
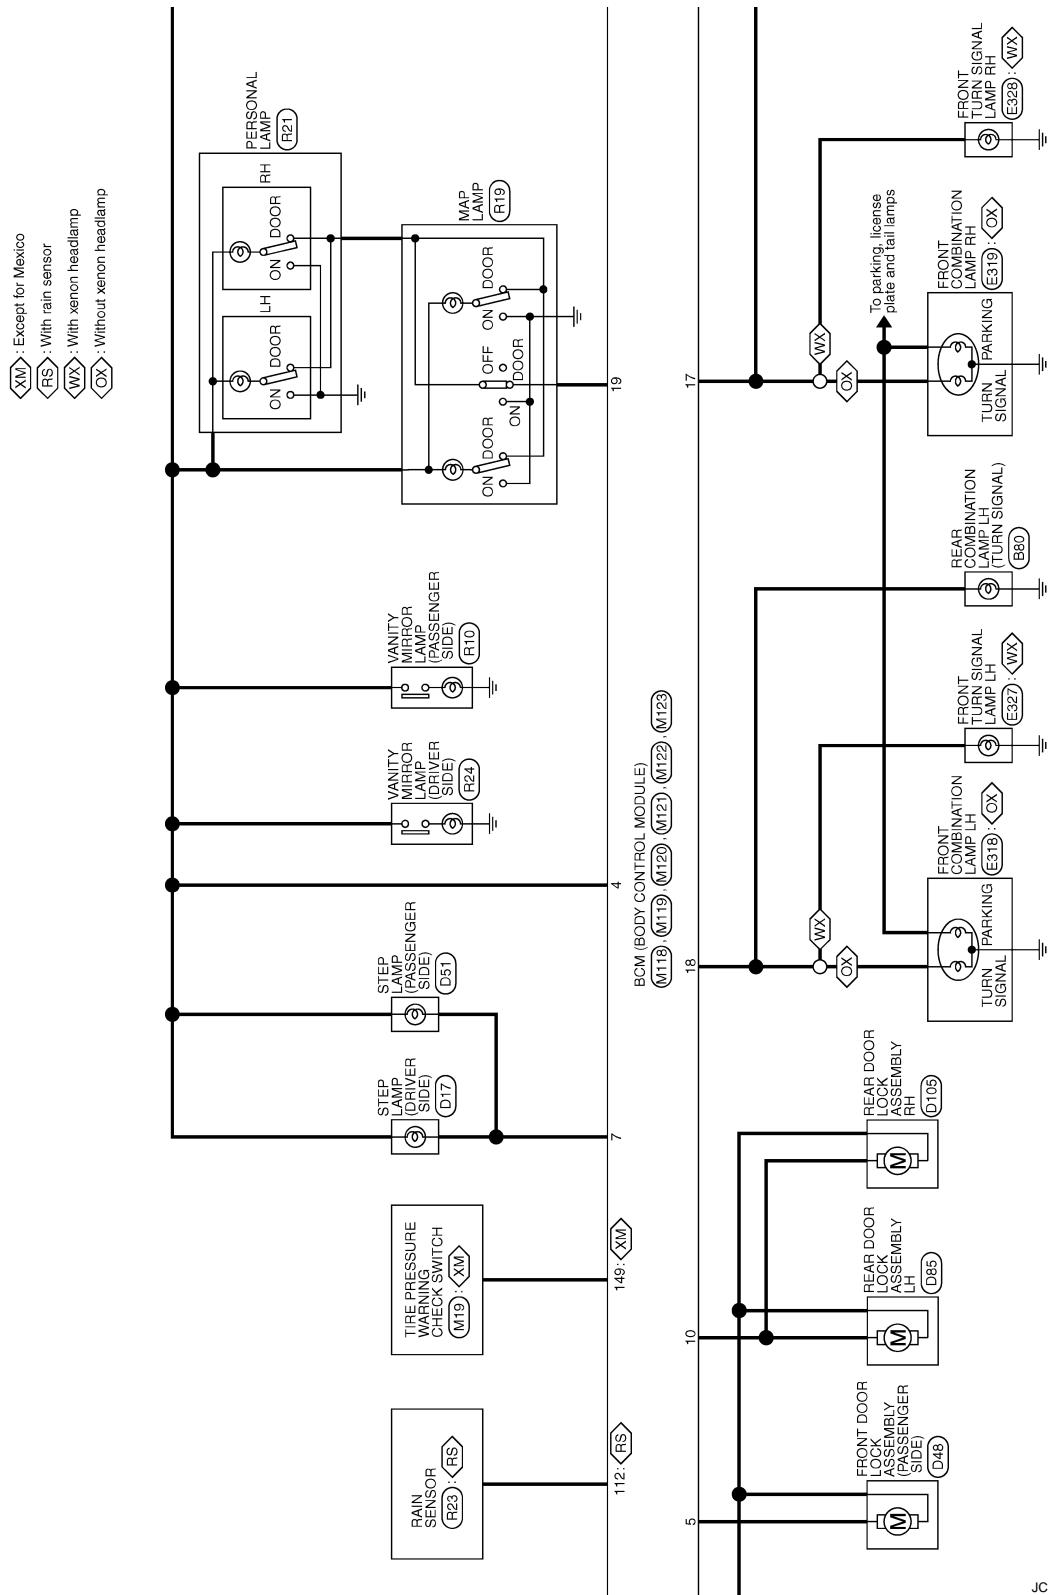
< ECU DIAGNOSIS INFORMATION >




JCMWM4868GB

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

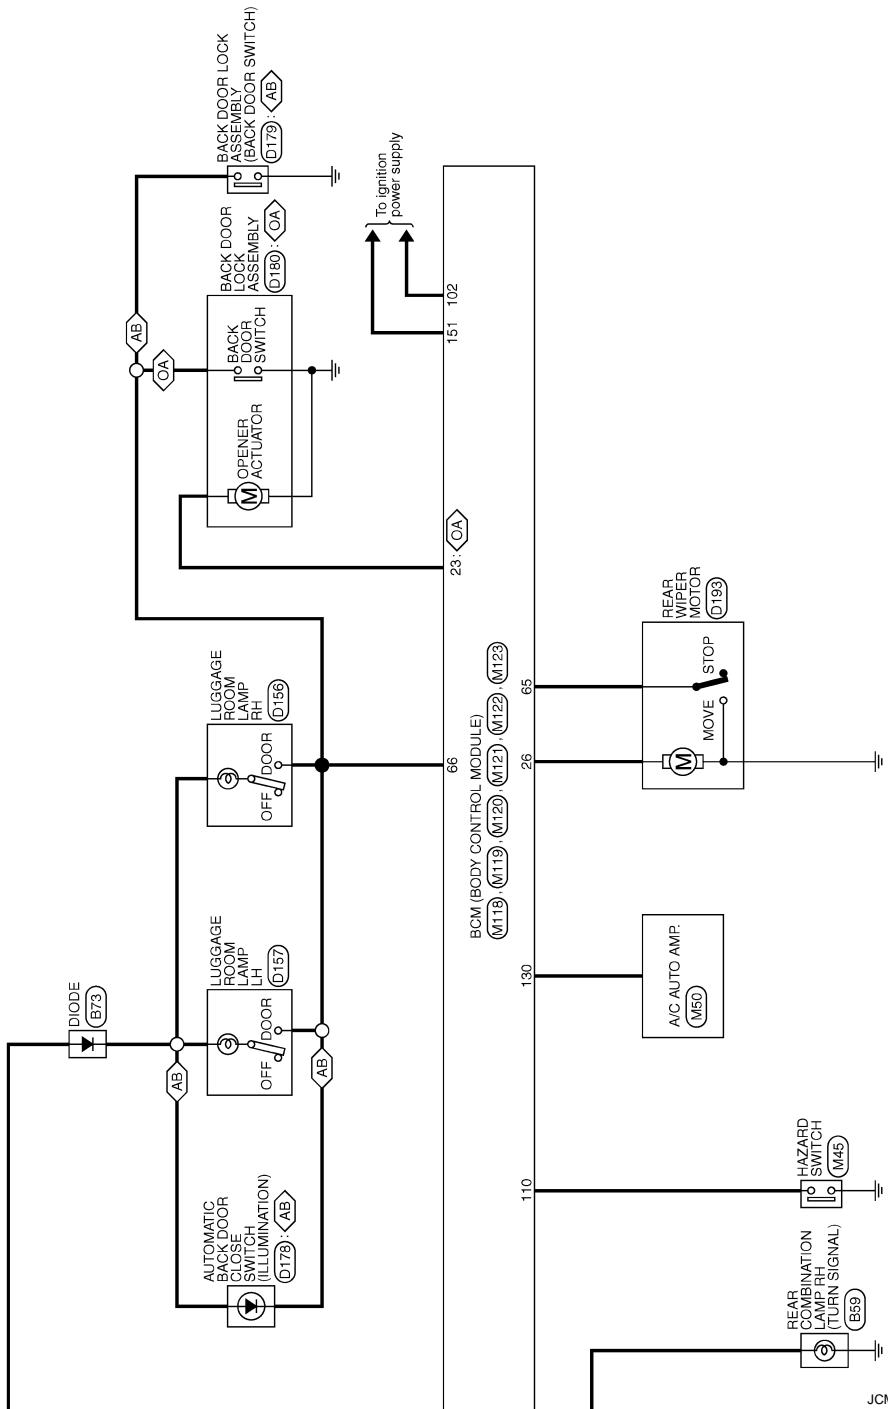: With automatic back door
 : Without automatic back door



JCMW4869GB

BCS

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

BCM (BODY CONTROL MODULE)

<table border="1" style="width: 100%; border-collapse: collapse;"> <tr><td>Connector No.</td><td>B73</td></tr> <tr><td>Connector Name</td><td>DIODE</td></tr> <tr><td>Connector Type</td><td>24335_C3902</td></tr> </table>	Connector No.	B73	Connector Name	DIODE	Connector Type	24335_C3902	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr><td>1</td><td>R</td><td>-</td></tr> <tr><td>2</td><td>G</td><td>-</td></tr> </table>	1	R	-	2	G	-	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr><td>1</td><td>R</td><td>-</td></tr> <tr><td>2</td><td>G</td><td>-</td></tr> </table>	1	R	-	2	G	-																																																																								
Connector No.	B73																																																																																											
Connector Name	DIODE																																																																																											
Connector Type	24335_C3902																																																																																											
1	R	-																																																																																										
2	G	-																																																																																										
1	R	-																																																																																										
2	G	-																																																																																										
<table border="1" style="width: 100%; border-collapse: collapse;"> <tr><td>Connector No.</td><td>B59</td></tr> <tr><td>Connector Name</td><td>REAR COMBINATION LAMP RH</td></tr> <tr><td>Connector Type</td><td>NS04MW-CS</td></tr> </table>  H.S.	Connector No.	B59	Connector Name	REAR COMBINATION LAMP RH	Connector Type	NS04MW-CS	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr><td>2</td><td>SB</td><td>-</td></tr> </table>	2	SB	-	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr><td>1</td><td>R</td><td>-</td></tr> <tr><td>2</td><td>G</td><td>-</td></tr> </table>	1	R	-	2	G	-																																																																											
Connector No.	B59																																																																																											
Connector Name	REAR COMBINATION LAMP RH																																																																																											
Connector Type	NS04MW-CS																																																																																											
2	SB	-																																																																																										
1	R	-																																																																																										
2	G	-																																																																																										
<table border="1" style="width: 100%; border-collapse: collapse;"> <tr><td>Terminal No.</td><td>Color of Wire</td><td>Signal Name [Specification]</td></tr> <tr><td>1</td><td>BR</td><td>BLAZER</td></tr> <tr><td>2</td><td>Y</td><td>AED SW</td></tr> <tr><td>4</td><td>Y</td><td>AED CLOSE SW</td></tr> <tr><td>6</td><td>L</td><td>CAN HI</td></tr> <tr><td>7</td><td>P</td><td>CAN LOW</td></tr> <tr><td>8</td><td>LG</td><td>HALF LATCH SW</td></tr> <tr><td>9</td><td>GR</td><td>IGN</td></tr> <tr><td>10</td><td>SB</td><td>BAT</td></tr> <tr><td>11</td><td>V</td><td>CLOSURE MTR (CLOSE)</td></tr> <tr><td>12</td><td>R</td><td>CLOSURE MTR (OPEN)</td></tr> <tr><td>14</td><td>V</td><td>TOUCH SENS LH</td></tr> <tr><td>15</td><td>O</td><td>TOUCH SENS GRID</td></tr> <tr><td>16</td><td>W</td><td>TOUCH SENS RH</td></tr> <tr><td>17</td><td>LG</td><td>MAIN SW</td></tr> <tr><td>19</td><td>P</td><td>CLOSE SW</td></tr> <tr><td>20</td><td>L</td><td>OPEN SW</td></tr> <tr><td>21</td><td>B</td><td>GND</td></tr> <tr><td>22</td><td>B</td><td>GND</td></tr> <tr><td>23</td><td>GR</td><td>GND</td></tr> <tr><td>24</td><td>BR</td><td>ENCODER B</td></tr> <tr><td>25</td><td>Y</td><td>ENCODER A</td></tr> <tr><td>26</td><td>G</td><td>ENCODER PWR</td></tr> </table>	Terminal No.	Color of Wire	Signal Name [Specification]	1	BR	BLAZER	2	Y	AED SW	4	Y	AED CLOSE SW	6	L	CAN HI	7	P	CAN LOW	8	LG	HALF LATCH SW	9	GR	IGN	10	SB	BAT	11	V	CLOSURE MTR (CLOSE)	12	R	CLOSURE MTR (OPEN)	14	V	TOUCH SENS LH	15	O	TOUCH SENS GRID	16	W	TOUCH SENS RH	17	LG	MAIN SW	19	P	CLOSE SW	20	L	OPEN SW	21	B	GND	22	B	GND	23	GR	GND	24	BR	ENCODER B	25	Y	ENCODER A	26	G	ENCODER PWR	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr><td>1</td><td>LG</td><td>[With rear view camera]</td></tr> <tr><td>1</td><td>BR</td><td>[Without rear view camera]</td></tr> <tr><td>2</td><td>BR</td><td>-</td></tr> <tr><td>3</td><td>P</td><td>-</td></tr> <tr><td>4</td><td>L</td><td>-</td></tr> </table>	1	LG	[With rear view camera]	1	BR	[Without rear view camera]	2	BR	-	3	P	-	4	L	-	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr><td>1</td><td>W</td><td>-</td></tr> <tr><td>2</td><td>B</td><td>-</td></tr> </table>	1	W	-	2	B	-
Terminal No.	Color of Wire	Signal Name [Specification]																																																																																										
1	BR	BLAZER																																																																																										
2	Y	AED SW																																																																																										
4	Y	AED CLOSE SW																																																																																										
6	L	CAN HI																																																																																										
7	P	CAN LOW																																																																																										
8	LG	HALF LATCH SW																																																																																										
9	GR	IGN																																																																																										
10	SB	BAT																																																																																										
11	V	CLOSURE MTR (CLOSE)																																																																																										
12	R	CLOSURE MTR (OPEN)																																																																																										
14	V	TOUCH SENS LH																																																																																										
15	O	TOUCH SENS GRID																																																																																										
16	W	TOUCH SENS RH																																																																																										
17	LG	MAIN SW																																																																																										
19	P	CLOSE SW																																																																																										
20	L	OPEN SW																																																																																										
21	B	GND																																																																																										
22	B	GND																																																																																										
23	GR	GND																																																																																										
24	BR	ENCODER B																																																																																										
25	Y	ENCODER A																																																																																										
26	G	ENCODER PWR																																																																																										
1	LG	[With rear view camera]																																																																																										
1	BR	[Without rear view camera]																																																																																										
2	BR	-																																																																																										
3	P	-																																																																																										
4	L	-																																																																																										
1	W	-																																																																																										
2	B	-																																																																																										
<table border="1" style="width: 100%; border-collapse: collapse;"> <tr><td>Terminal No.</td><td>Color of Wire</td><td>Signal Name [Specification]</td></tr> <tr><td>1</td><td>W</td><td>-</td></tr> <tr><td>2</td><td>L</td><td>-</td></tr> </table>	Terminal No.	Color of Wire	Signal Name [Specification]	1	W	-	2	L	-	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr><td>1</td><td>R</td><td>-</td></tr> <tr><td>2</td><td>G</td><td>-</td></tr> </table>	1	R	-	2	G	-	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr><td>1</td><td>R</td><td>-</td></tr> <tr><td>2</td><td>G</td><td>-</td></tr> </table>	1	R	-	2	G	-																																																																					
Terminal No.	Color of Wire	Signal Name [Specification]																																																																																										
1	W	-																																																																																										
2	L	-																																																																																										
1	R	-																																																																																										
2	G	-																																																																																										
1	R	-																																																																																										
2	G	-																																																																																										
<table border="1" style="width: 100%; border-collapse: collapse;"> <tr><td>Connector No.</td><td>B71</td></tr> <tr><td>Connector Name</td><td>REAR DOOR SWITCH LH</td></tr> <tr><td>Connector Type</td><td>AG3FW</td></tr> </table>  H.S.	Connector No.	B71	Connector Name	REAR DOOR SWITCH LH	Connector Type	AG3FW	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr><td>2</td><td>SB</td><td>-</td></tr> </table>	2	SB	-	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr><td>1</td><td>R</td><td>-</td></tr> <tr><td>2</td><td>G</td><td>-</td></tr> </table>	1	R	-	2	G	-																																																																											
Connector No.	B71																																																																																											
Connector Name	REAR DOOR SWITCH LH																																																																																											
Connector Type	AG3FW																																																																																											
2	SB	-																																																																																										
1	R	-																																																																																										
2	G	-																																																																																										
<table border="1" style="width: 100%; border-collapse: collapse;"> <tr><td>Terminal No.</td><td>Color of Wire</td><td>Signal Name [Specification]</td></tr> <tr><td>1</td><td>LG</td><td>-</td></tr> <tr><td>2</td><td>BR</td><td>-</td></tr> <tr><td>3</td><td>P</td><td>-</td></tr> <tr><td>4</td><td>L</td><td>-</td></tr> </table>	Terminal No.	Color of Wire	Signal Name [Specification]	1	LG	-	2	BR	-	3	P	-	4	L	-	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr><td>1</td><td>R</td><td>-</td></tr> <tr><td>2</td><td>G</td><td>-</td></tr> </table>	1	R	-	2	G	-	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr><td>1</td><td>R</td><td>-</td></tr> <tr><td>2</td><td>G</td><td>-</td></tr> </table>	1	R	-	2	G	-																																																															
Terminal No.	Color of Wire	Signal Name [Specification]																																																																																										
1	LG	-																																																																																										
2	BR	-																																																																																										
3	P	-																																																																																										
4	L	-																																																																																										
1	R	-																																																																																										
2	G	-																																																																																										
1	R	-																																																																																										
2	G	-																																																																																										
<table border="1" style="width: 100%; border-collapse: collapse;"> <tr><td>Connector No.</td><td>B34</td></tr> <tr><td>Connector Name</td><td>FRONT DOOR SWITCH (DRIVER SIDE)</td></tr> <tr><td>Connector Type</td><td>AG3FW</td></tr> </table>  H.S.	Connector No.	B34	Connector Name	FRONT DOOR SWITCH (DRIVER SIDE)	Connector Type	AG3FW	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr><td>2</td><td>BR</td><td>-</td></tr> </table>	2	BR	-	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr><td>1</td><td>R</td><td>-</td></tr> <tr><td>2</td><td>G</td><td>-</td></tr> </table>	1	R	-	2	G	-																																																																											
Connector No.	B34																																																																																											
Connector Name	FRONT DOOR SWITCH (DRIVER SIDE)																																																																																											
Connector Type	AG3FW																																																																																											
2	BR	-																																																																																										
1	R	-																																																																																										
2	G	-																																																																																										
<table border="1" style="width: 100%; border-collapse: collapse;"> <tr><td>Terminal No.</td><td>Color of Wire</td><td>Signal Name [Specification]</td></tr> <tr><td>1</td><td>R</td><td>-</td></tr> <tr><td>2</td><td>G</td><td>-</td></tr> </table>	Terminal No.	Color of Wire	Signal Name [Specification]	1	R	-	2	G	-	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr><td>1</td><td>R</td><td>-</td></tr> <tr><td>2</td><td>G</td><td>-</td></tr> </table>	1	R	-	2	G	-	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr><td>1</td><td>R</td><td>-</td></tr> <tr><td>2</td><td>G</td><td>-</td></tr> </table>	1	R	-	2	G	-																																																																					
Terminal No.	Color of Wire	Signal Name [Specification]																																																																																										
1	R	-																																																																																										
2	G	-																																																																																										
1	R	-																																																																																										
2	G	-																																																																																										
1	R	-																																																																																										
2	G	-																																																																																										

JCMWM4870GB

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

JCMWM4871GB

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

JCMWM4872GB

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

BCM (BODY CONTROL MODULE)

Connector No.		Signal Name [Specification]		Terminal No.		Color of Wire		Signal Name [Specification]		Terminal No.		Color of Wire		Signal Name [Specification]	
Connector No.	D103			1	R			1	R	1	W			1	W
Connector Name	REAR POWER WINDOW SWITCH RH			2	P			2	V	2	B			2	B
Connector Type	NS08FW-CS			3	SB			4	G	3	G			3	G
				4	LG			5	L	4	V			4	V
				5	L			6	W						
Connector No.	D105			7	LG			7	LG						
Connector Name	REAR DOOR LOCK ASSEMBLY RH			8	B			8	B						
Connector Type	EB08GY-RS														
Connector No.	D150			1	2	3	4	5	6	1	2	3	4	1	2
Connector Name	REAR DOOR LOCK ASSEMBLY / WITHOUT AUTOMATIC BACK DOOR CLOSE SWITCH			2	W			3	V	2	B	3	G	4	O
Connector Type	TK08FGY			4	LG			5	GR	4	LG	5	GR	6	GR
Connector No.	D151			6	5	4	3	2	1						
Connector Name	LLUGGAGE ROOM LAMP RH			7	W			8	GR						
Connector Type	CJ04FW			9	LG			10	GR						

JCMWM4873GB

P

Z

BCS

N

O

L

K

I

G

T

M

D

C

B

A

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

BCM (BODY CONTROL MODULE)

Connector No.	E10	Signal Name [Specification]
Connector Name	FRW L/R INTELLIGENT POWER DISTRIBUTION MODULE FRW L/R (R/C00)	
Connector Type	TH20DFW-CS12-M4-IV	
		
Terminal No.	Color of Wire	Signal Name [Specification]
4	LG	-
5	Y	-
7	GR	-
10	BR	-
11	P	-
12	B	-
13	S5	-
15	W	-
16	L/Y	-
19	Y	-
20	L	-
21	O	-
22	SB	-
23	GR	-
24	G	-
25	GR	-
26	Y	-
27	W	-
28	SB	-
30	BR	-
32	V	-
33	G	-
34	O	-
35	P	-
36	G	-
38	GR	-

Connector No.	E11	Signal Name [Specification]
Connector Name	FRW R INTELLIGENT POWER DISTRIBUTION MODULE FRW R (R/C00)	
Connector Type	TH08FW-NH	
		
Terminal No.	Color of Wire	Signal Name [Specification]
97	P	VEHCAN-L
98	L	VEHCAN-H
100	G	GNDA-APS2
102	R	NEUT-H
104	SB	CLUSTER GND
105	V	VEBR
106	SB	BRAKE
107	B	GND
108	B	MOTOR GND
109	W	MOTOR SUPPLY
110	G	BLS
111	B	DIGK
112	B	CANH
		GND
39	P	IGN
40	L	CANI L
41	B	VDC OFF SW
42	Y	CANI H
43	Y	CANL
44	W	VALVE/ECU GND
45	O	
46	BR	

Connector No.	E12	Signal Name [Specification]
Connector Name	FRW L/R INTELLIGENT POWER DISTRIBUTION MODULE FRW L/R (R/C00)	
Connector Type	TH20DFW-CS12-M4-IV	
		
Terminal No.	Color of Wire	Signal Name [Specification]
42	41	40
43	39	38
44	45	46
45	44	43

Connector No.	E16	Signal Name [Specification]
Connector Name	ECM	
Connector Type	RH24FB-RZ8-L-LH	
		
Terminal No.	Color of Wire	Signal Name [Specification]
81	W	APSL
82	SB	APSL
83	BR	AVCC2-FTPRES
84	B	AVCC1-FTPRES
85	Y	GNDA-APS1
86	SB	ASCD SW
87	GR	FTPRES
88	O	AVCC2-FTPRES
91	L	AVCC1-FTPRES
92	BR	GNDA-ASD3W
93	BR	IGN SW
94	GR	TACHO(GBN)
95	Y	TF
96	GR	GNDA-FTPRES

Connector No.	E103	Signal Name [Specification]
Connector Name	FUSE BLOCK (J/B)	
Connector Type	NS16FW-CS	
		
Terminal No.	Color of Wire	Signal Name [Specification]
7F	6F	5F
7F	6F	4F
16	15	14F
16	15	13F
16	15	12F
16	15	11F
16	15	10F
16	15	9F
16	15	8F

Connector No.	E104	Signal Name [Specification]
Connector Name	FRW L/R INTELLIGENT POWER DISTRIBUTION MODULE FRW L/R (R/C00)	
Connector Type	TH08FW-NH	
		
Terminal No.	Color of Wire	Signal Name [Specification]
97	P	VEHCAN-L
98	L	VEHCAN-H
100	G	GNDA-APS2
102	R	NEUT-H
104	SB	CLUSTER GND
105	V	VEBR
106	SB	BRAKE
107	B	GND
108	B	MOTOR GND
109	W	MOTOR SUPPLY
110	G	BLS
111	B	DIGK
112	B	CANH
		GND
113	P	IGN
114	L	CANI L
115	Y	VDC OFF SW
116	Y	CANI H
117	Y	CANL
118	W	VALVE/ECU GND
119	O	
120	SB	
121	GR	
122	V	
123	G	
124	GR	
125	Y	
126	W	
127	SB	
128	BR	
129	B	
130	Y	
131	Y	
132	Y	
133	Y	
134	O	
135	P	
136	G	
137	GR	
138	V	
139	G	
140	GR	
141	Y	
142	W	
143	SB	
144	BR	
145	B	
146	Y	
147	Y	
148	Y	
149	Y	
150	Y	
151	Y	
152	Y	
153	Y	
154	Y	
155	Y	
156	Y	
157	Y	
158	Y	
159	Y	
160	Y	
161	Y	
162	Y	
163	Y	
164	Y	
165	Y	
166	Y	
167	Y	
168	Y	
169	Y	
170	Y	
171	Y	
172	Y	
173	Y	
174	Y	
175	Y	
176	Y	
177	Y	
178	Y	
179	Y	
180	Y	
181	Y	
182	Y	
183	Y	
184	Y	
185	Y	
186	Y	
187	Y	
188	Y	
189	Y	
190	Y	
191	Y	
192	Y	
193	Y	
194	Y	
195	Y	
196	Y	
197	Y	
198	Y	
199	Y	
200	Y	
201	Y	
202	Y	
203	Y	
204	Y	
205	Y	
206	Y	
207	Y	
208	Y	
209	Y	
210	Y	
211	Y	
212	Y	
213	Y	
214	Y	
215	Y	
216	Y	
217	Y	
218	Y	
219	Y	
220	Y	
221	Y	
222	Y	
223	Y	
224	Y	
225	Y	
226	Y	
227	Y	
228	Y	
229	Y	
230	Y	
231	Y	
232	Y	
233	Y	
234	Y	
235	Y	
236	Y	
237	Y	
238	Y	
239	Y	
240	Y	
241	Y	
242	Y	
243	Y	
244	Y	
245	Y	
246	Y	
247	Y	
248	Y	
249	Y	
250	Y	
251	Y	
252	Y	
253	Y	
254	Y	
255	Y	
256	Y	
257	Y	
258	Y	
259	Y	
260	Y	
261	Y	
262	Y	
263	Y	
264	Y	
265	Y	
266	Y	
267	Y	
268	Y	
269	Y	
270	Y	
271	Y	
272	Y	
273	Y	
274	Y	
275	Y	
276	Y	
277	Y	
278	Y	
279	Y	
280	Y	
281	Y	
282	Y	
283	Y	
284	Y	
285	Y	
286	Y	
287	Y	
288	Y	
289	Y	
290	Y	
291	Y	
292	Y	
293	Y	
294	Y	
295	Y	
296	Y	
297	Y	
298	Y	
299	Y	
300	Y	
301	Y	
302	Y	
303	Y	
304	Y	
305	Y	
306	Y	
307	Y	
308	Y	
309	Y	
310	Y	
311	Y	
312	Y	
313	Y	
314	Y	
315	Y	
316	Y	
317	Y	
318	Y	
319	Y	
320	Y	
321	Y	
322	Y	
323	Y	
324	Y	
325	Y	
326	Y	
327	Y	
328	Y	
329	Y	
330	Y	
331	Y	
332	Y	
333	Y	
334	Y	
335	Y	
336	Y	
337	Y	
338	Y	
339	Y	
340	Y	
341	Y	
342	Y	
343	Y	
344	Y	
345	Y	
346	Y	
347	Y	
348	Y	
349	Y	
350	Y	
351	Y	
352	Y	
353	Y	
354	Y	
355	Y	
356	Y	
357	Y	
358	Y	
359	Y	
360	Y	
361	Y	
362	Y	
363	Y	
364	Y	
365	Y	
366	Y	
367	Y	
368	Y	
369	Y	
370	Y	
371	Y	
372	Y	
373	Y	
374	Y	
375	Y	
376	Y	
377	Y	
378	Y	
379	Y	
380	Y	
381	Y	
382	Y	
383	Y	
384	Y	
385	Y	
386	Y	
387	Y	
388	Y	
389	Y	
390	Y	
391	Y	
392	Y	
393	Y	
394	Y	
395	Y	
396	Y	
397	Y	
398	Y	
399	Y	
400	Y	
401	Y	
402	Y	
403	Y	
404	Y	
405	Y	
406	Y	
407	Y	
408	Y	
409	Y	
410	Y	
411	Y	
412	Y	
413	Y	

BCM (BODY CONTROL MODULE)


< ECU DIAGNOSIS INFORMATION >

BCM (BODY CONTROL MODULE)


Connector No.	E16	Terminal No.	Color of Wire	Signal Name [Specification]
Connector Name	STOP LAMP SWITCH	1	R	-
Connector Type	MD40W-LC	2	B	-
		3	G	-




Terminal No.	Color of Wire	Signal Name [Specification]
1	R	-
2	LG	-
3	G	-
4	Y	-

 


Connector No.	E327	Terminal No.	Color of Wire	Signal Name [Specification]
Connector Name	FRONT TURN SIGNAL LAMP LH	48	W	-
Connector Type	RS202FGY	49	R/G	-
		51	LG	-
		52	Y/G	-
		53	R/W	-
		54	G/W	-
		55	WL	-
		56	R/Y	-
		57	O	-
		58	Y	-
		59	W/B	-
		60	W/B	-
		70	O	-
		72	R/B	-
		75	LG	-
		76	SB	-
		77	GR	-
		80	B	-

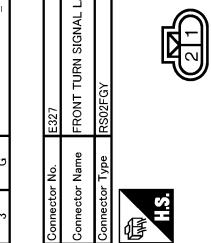


Terminal No.	Color of Wire	Signal Name [Specification]
1	Y	-
2	B	-
3	Y	-

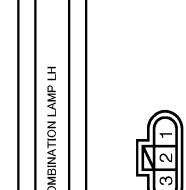

Terminal No.	Color of Wire	Signal Name [Specification]
1	Y	-
2	B	-
3	Y	-

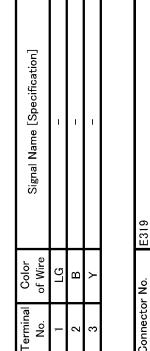

Terminal No.	Color of Wire	Signal Name [Specification]
1	G	-
2	B	-
3	Y	-

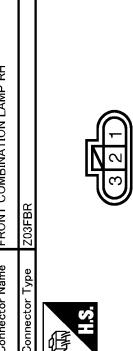

Terminal No.	Color of Wire	Signal Name [Specification]
1	P/B	INT SW 2
2	P/L	INT SW 3
3	GO	INT SW 4
4	GR	INT SW 3 MON
5	B	GND

JCMWM4875GB

P

Z

BCS

—

G

T

M

D

C

○

A

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

BCM (BODY CONTROL MODULE)

Connector No.		Signal Name [Specification]		Terminal No.		Color of Wire		Signal Name [Specification]	
Connector No.	M1	Color of Wire	Signal Name [Specification]	1	A	P	W	Signal Name [Specification]	
Connector Name	FUSE BLOCK (J/B)	Y	-	2	B	S/L 12V MECHANICAL(Y1)	-		
Connector Type	NSD0FW-M2	G	-	3	G	S/L COM	-		
		Y	-	4	R	S/L CONDITION 1	-		
		GR	-	5	GR	-	-		
		R	-	6	SB	GND 1	-		
		SA	-	7	B	S/L 12V OPEN(Y2)	-		
		W	-	8	R	S/L CONDITION 2	-		
		LG	-	9	O	-	-		
		YA	-	10	Y	-	-		
		BA	-	11	Y	-	-		
				12	Y	-	-		
				13	Y	-	-		
				14	Y	-	-		
				15	Y	-	-		
				16	Y	-	-		

JCMWMM4876GB

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

BODY CONTROL MODULE					
Connector No.	M34	Terminal Color of Wire No.	Signal Name [Specification]	Terminal Color of Wire No.	Signal Name [Specification]
Connector Name	COMBINATION METER	1 Y	BAT	1 Y	BAT
Connector Type	TH40FW-NH	2 G	IGN	2 G	IGN
Connector No.	M45	3 B	GROUND	3 R	GROUND
Connector Name	HAZARD SWITCH	4 SB	GROUND	4 SB	GROUND
Connector Type	TK40FW	5 SB	ILLUMINATION CONTROL	5 SB	ILLUMINATION CONTROL
Connector No.	M50	6 SB	TRIP RESET SWITCH	6 SB	TRIP RESET SWITCH
Connector Name	A/C AUTO AMP.	7 W	SW TLL POWER	7 W	SW TLL POWER
Connector Type	SAB40FW	8 O	METER CONTROL SW GND	8 O	METER CONTROL SW GND
Connector No.	M57	9 R	ENTER SWITCH	9 R	ENTER SWITCH
Connector Name	C/V SHIFT SELECTOR	10 V	ILLUMINATION CONTROL SW GND (Only necessary for rear)	10 V	ILLUMINATION CONTROL SW GND (Only necessary for rear)
Connector Type	TK10FW	11 Y	ILLUMINATION CONTROL SW GND (Only necessary for rear)	11 Y	ILLUMINATION CONTROL SW GND (Only necessary for rear)
Connector No.	M59	12 L	AMBNT SENS PWR	12 L	AMBNT SENS PWR
Connector Name	KEY SLOT	13 L	AMBNT SENS GROUND	13 L	AMBNT SENS GROUND
Connector Type	TH12FW-NH	14 GR	CAN-L	14 GR	CAN-L
Connector No.	M60	15 BR	CAN-H	15 BR	CAN-H
Connector Name	SECURITY INDICATOR AMP	16 L	TXAMP(SW/DSP)	16 L	TXAMP(SW/DSP)
Connector Type	TK20FBR	17 P	RXAMP(SW/AMP)	17 P	RXAMP(SW/AMP)
Connector No.	M61	18 G	VACTR	18 G	VACTR
Connector Name	REMOTE KEYLESS ENTRY RECEIVER	19 G	SUN SENS	19 G	SUN SENS
Connector Type	JASD0FB	20 Y	INTAKE SENS	20 Y	INTAKE SENS
Connector No.	M62	21 L	ACC	21 L	ACC
Connector Name	INCAR SENS	22 P	GND	22 P	GND
Connector Type	TK20FBR	23 B	IGN	23 B	IGN
Connector No.	M63	24 W	FR DEF F/B	24 W	FR DEF F/B
Connector Name	FUEL LEVEL SENSOR GND	25 BR	RR DEF ON	25 BR	RR DEF ON
Connector Type	OHG	26 G	FAN FWD	26 G	FAN FWD
Connector No.	M64	27 V	AMB POWER	27 V	AMB POWER
Connector Name	PARKING BRAKE SWITCH	28 R	AMB SENS	28 R	AMB SENS
Connector Type	TK40FW	29 R	SEAT BELT BUCKLE SWITCH (DRIVER SIDE)	29 R	SEAT BELT BUCKLE SWITCH (DRIVER SIDE)
Connector No.	M65	30 P	SEAT BELT BUCKLE SWITCH (PASSENGER SIDE)	30 P	SEAT BELT BUCKLE SWITCH (PASSENGER SIDE)
Connector Name	VEHICLE SPEED (2-PULSE)	31 V	VEHICLE SPEED (8-PULSE)	31 V	VEHICLE SPEED (8-PULSE)
Connector Type	TK40FW	32 LG	OD OFF/SPORTS	32 LG	OD OFF/SPORTS
Connector No.	M66	33 G	FUEL LEVEL SENSOR	33 G	FUEL LEVEL SENSOR
Connector Name	SEAT BELT BUCKLE SWITCH (PASSENGER SIDE)	34 G	SEAT BELT BUCKLE SWITCH (PASSENGER SIDE)	34 G	SEAT BELT BUCKLE SWITCH (PASSENGER SIDE)
Connector Type	TK40FW	35 R	SEAT BELT BUCKLE SWITCH (PASSENGER SIDE)	35 R	SEAT BELT BUCKLE SWITCH (PASSENGER SIDE)
Connector No.	M67	36 R	SEAT BELT BUCKLE SWITCH (PASSENGER SIDE)	36 R	SEAT BELT BUCKLE SWITCH (PASSENGER SIDE)
Connector Name	KEY SWITCH SIGNAL	37 Y	SENS GND	37 Y	SENS GND
Connector Type	TK10FW	38 G	+12V	38 G	+12V
Connector No.	M68	39 B	GND(POWER)	39 B	GND(POWER)
Connector Name	BAT	40 Y	BAT	40 Y	BAT
Connector Type	TK10FW	41 G	-	41 G	-

JCMWM4877GB

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

BCM (BODY CONTROL MODULE)

Connector No.	M101	Connector No.	M120
Connector Name	PUSH-BUTTON IGNITION SWITCH	Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TK03FBFR	Connector Type	NS12FW-CS

HS

COMBINATION SWITCH

Connector No.	M118	Connector No.	M121
Connector Name	BCM (BODY CONTROL MODULE)	Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	MO3FB-LC	Connector Type	TH40F-NH

HS

COMBINATION SWITCH

Connector No.	M119	Connector No.	M121
Connector Name	BCM (BODY CONTROL MODULE)	Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	NS16FW-CS	Connector Type	TH40F-G-NH

HS

COMBINATION SWITCH

Terminal No.	1	Signal Name [Specification]	WIRE
1	B	BAT (F/L)	-
2	O	-	POWER WINDOW POWER SUPPLY (BAT)
3	W	-	POWER WINDOW POWER SUPPLY (RAP)
4	BR	-	-
5	R	-	-
6	L	-	-
7	P	-	-
8	GR	-	-

Terminal No.	1	Signal Name [Specification]	WIRE
1	W	BAT (F/L)	-
2	GR	POWER WINDOW POWER SUPPLY (BAT)	POWER WINDOW POWER SUPPLY (RAP)
3	Q	-	-
4	G	-	-
5	LG	-	-
6	LG	-	-
7	LG	-	-
8	LG	-	-
9	LG	-	-
10	LG	-	-
11	LG	-	-
12	LG	-	-
13	LG	-	-
14	LG	-	-
15	LG	-	-
16	LG	-	-
17	LG	-	-
18	LG	-	-
19	LG	-	-

HS

COMBINATION SWITCH

Terminal No.	1	Signal Name [Specification]	WIRE
1	W	INTERIOR ROOM LAMP POWER SUPPLY	-
2	GR	PASSENGER DOOR UNLOCK OUTPUT	-
3	LG	STEP LAMP OUTPUT	-
4	LG	ALL DOOR FUEL LID LOCK OUTPUT	-
5	LG	DRIVER DOOR FUEL LID UNLOCK OUTPUT	-
6	LG	BEAR DOOR UNLOCK OUTPUT	-
7	LG	BAT (FUSE)	-
8	LG	FR	-
9	LG	IGN	-
10	LG	OUTPUT 4	-
11	LG	OUTPUT 3	-
12	LG	OUTPUT 2	-
13	LG	OUTPUT 1	-
14	LG	INPUT 5	-
15	LG	INPUT 4	-
16	LG	INPUT 3	-
17	LG	INPUT 2	-
18	LG	INPUT 1	-
19	LG	INPUT 0	-

HS

COMBINATION SWITCH

Terminal No.	1	Signal Name [Specification]	WIRE
1	W	INTERIOR ROOM LAMP POWER SUPPLY	-
2	GR	PASSENGER DOOR UNLOCK OUTPUT	-
3	LG	STEP LAMP OUTPUT	-
4	LG	ALL DOOR FUEL LID LOCK OUTPUT	-
5	LG	DRIVER DOOR FUEL LID UNLOCK OUTPUT	-
6	LG	BEAR DOOR UNLOCK OUTPUT	-
7	LG	BAT (FUSE)	-
8	LG	FR	-
9	LG	IGN	-
10	LG	OUTPUT 4	-
11	LG	OUTPUT 3	-
12	LG	OUTPUT 2	-
13	LG	OUTPUT 1	-
14	LG	INPUT 5	-
15	LG	INPUT 4	-
16	LG	INPUT 3	-
17	LG	INPUT 2	-
18	LG	INPUT 1	-
19	LG	INPUT 0	-

HS

COMBINATION SWITCH

Terminal No.	1	Signal Name [Specification]	WIRE
1	W	INTERIOR ROOM LAMP POWER SUPPLY	-
2	GR	PASSENGER DOOR UNLOCK OUTPUT	-
3	LG	STEP LAMP OUTPUT	-
4	LG	ALL DOOR FUEL LID LOCK OUTPUT	-
5	LG	DRIVER DOOR FUEL LID UNLOCK OUTPUT	-
6	LG	BEAR DOOR UNLOCK OUTPUT	-
7	LG	BAT (FUSE)	-
8	LG	FR	-
9	LG	IGN	-
10	LG	OUTPUT 4	-
11	LG	OUTPUT 3	-
12	LG	OUTPUT 2	-
13	LG	OUTPUT 1	-
14	LG	INPUT 5	-
15	LG	INPUT 4	-
16	LG	INPUT 3	-
17	LG	INPUT 2	-
18	LG	INPUT 1	-
19	LG	INPUT 0	-

HS

COMBINATION SWITCH

Terminal No.	1	Signal Name [Specification]	WIRE
1	W	INTERIOR ROOM LAMP POWER SUPPLY	-
2	GR	PASSENGER DOOR UNLOCK OUTPUT	-
3	LG	STEP LAMP OUTPUT	-
4	LG	ALL DOOR FUEL LID LOCK OUTPUT	-
5	LG	DRIVER DOOR FUEL LID UNLOCK OUTPUT	-
6	LG	BEAR DOOR UNLOCK OUTPUT	-
7	LG	BAT (FUSE)	-
8	LG	FR	-
9	LG	IGN	-
10	LG	OUTPUT 4	-
11	LG	OUTPUT 3	-
12	LG	OUTPUT 2	-
13	LG	OUTPUT 1	-
14	LG	INPUT 5	-
15	LG	INPUT 4	-
16	LG	INPUT 3	-
17	LG	INPUT 2	-
18	LG	INPUT 1	-
19	LG	INPUT 0	-

HS

COMBINATION SWITCH

Terminal No.	1	Signal Name [Specification]	WIRE
1	W	INTERIOR ROOM LAMP POWER SUPPLY	-
2	GR	PASSENGER DOOR UNLOCK OUTPUT	-
3	LG	STEP LAMP OUTPUT	-
4	LG	ALL DOOR FUEL LID LOCK OUTPUT	-
5	LG	DRIVER DOOR FUEL LID UNLOCK OUTPUT	-
6	LG	BEAR DOOR UNLOCK OUTPUT	-
7	LG	BAT (FUSE)	-
8	LG	FR	-
9	LG	IGN	-
10	LG	OUTPUT 4	-
11	LG	OUTPUT 3	-
12	LG	OUTPUT 2	-
13	LG	OUTPUT 1	-
14	LG	INPUT 5	-
15	LG	INPUT 4	-
16	LG	INPUT 3	-
17	LG	INPUT 2	-
18	LG	INPUT 1	-
19	LG	INPUT 0	-

HS

COMBINATION SWITCH

Terminal No.	1	Signal Name [Specification]	WIRE
1	W	INTERIOR ROOM LAMP POWER SUPPLY	-
2	GR	PASSENGER DOOR UNLOCK OUTPUT	-
3	LG	STEP LAMP OUTPUT	-
4	LG	ALL DOOR FUEL LID LOCK OUTPUT	-
5	LG	DRIVER DOOR FUEL LID UNLOCK OUTPUT	-
6	LG	BEAR DOOR UNLOCK OUTPUT	-
7	LG	BAT (FUSE)	-
8	LG	FR	-
9	LG	IGN	-
10	LG	OUTPUT 4	-
11	LG	OUTPUT 3	-
12	LG	OUTPUT 2	-
13	LG	OUTPUT 1	-
14	LG	INPUT 5	-
15	LG	INPUT 4	-
16	LG	INPUT 3	-
17	LG	INPUT 2	-
18	LG	INPUT 1	-
19	LG	INPUT 0	-

HS

COMBINATION SWITCH

Terminal No.	1	Signal Name [Specification]	WIRE
1	W	INTERIOR ROOM LAMP POWER SUPPLY	-
2	GR	PASSENGER DOOR UNLOCK OUTPUT	-
3	LG	STEP LAMP OUTPUT	-
4	LG	ALL DOOR FUEL LID LOCK OUTPUT	-
5	LG	DRIVER DOOR FUEL LID UNLOCK OUTPUT	-
6	LG	BEAR DOOR UNLOCK OUTPUT	-
7	LG	BAT (FUSE)	-
8	LG	FR	-
9	LG	IGN	-
10	LG	OUTPUT 4	-
11	LG	OUTPUT 3	-
12	LG	OUTPUT 2	-
13	LG	OUTPUT 1	-
14	LG	INPUT 5	-
15	LG	INPUT 4	-
16	LG	INPUT 3	-
17	LG	INPUT 2	-
18	LG	INPUT 1	-
19	LG	INPUT 0	-

HS

COMBINATION SWITCH

Terminal No.	1	Signal Name [Specification]	WIRE
1	W	INTERIOR ROOM LAMP POWER SUPPLY	-
2	GR	PASSENGER DOOR UNLOCK OUTPUT	-
3	LG	STEP LAMP OUTPUT	-
4	LG	ALL DOOR FUEL LID LOCK OUTPUT	-
5	LG	DRIVER DOOR FUEL LID UNLOCK OUTPUT	-
6	LG	BEAR DOOR UNLOCK OUTPUT	-
7	LG	BAT (FUSE)	-
8	LG	FR	-
9	LG	IGN	-
10	LG	OUTPUT 4	-
11	LG	OUTPUT 3	-
12	LG	OUTPUT 2	-
13	LG	OUTPUT 1	-
14	LG	INPUT 5	-
15	LG	INPUT 4	-
16	LG	INPUT 3	-
17	LG	INPUT 2	-
18	LG	INPUT 1	-
19	LG	INPUT 0	-

HS

COMBINATION SWITCH

Terminal No.	1	Signal Name [Specification]	WIRE


</tbl

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

BCM (BODY CONTROL MODULE)


Connector No.	M123
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FG-NH

 

Terminal No.	Color of Wire	Signal Name [Specification]	Signal Name [Specification]
112	R	RAIN SENSOR SERIAL LINK	TEL VOICE SIGNAL (-)
113	O	OPTICAL SENSOR	TEL VOICE SIGNAL (+)
116	GR	FUSE CHECK	SHIELD
118	L	STOP LAMP SW	SOUND SIGNAL RH (-) (With DVD player)
119	W	DR DOOR UNLOCK SW	SOUND SIGNAL RH (-) (Without DVD player)
21	Y	KEY SLOT SW	iPod SOUND SIGNAL RH (-) (With DVD player)
23	G	IGN F/B	iPod SOUND SIGNAL RH (+) (Without DVD player)
24	R	PASSENGER DOOR SW	GND
30	BR	REAR DEFOGGER SW	L
32	G	POWER WINDOW SW COMM	CAN-H
33	W	PUSH-BUTTON IGNITION SW/ILL POWER	CAN-L
34	R	LOCK RD	AV COMM (H)
37	P	RECEIVER/SENSOR GND	AV COMM (L)
38	V	RECEIVER/SENSOR POWER SUPPLY	AV COMM (H)
39	O	TIRE PRESS RECEIVER SIGNAL	AV COMM (L)
40	CR	SHIFT LIP	AUX SOUND SIGNAL RH (-)
41	O	SECURITY INDICATOR OUTPUT	AUX SOUND SIGNAL LH (-)
42	L	COMBI SW OUTPUT 5	AUX SOUND SIGNAL GND
43	W	COMBI SW OUTPUT 1	COMBI SW OUTPUT 1
44	P	COMBI SW OUTPUT 2	COMBI SW OUTPUT 2
45	V	COMBI SW OUTPUT 3	COMBI SW OUTPUT 3
46	Y	COMBI SW OUTPUT 4	COMBI SW OUTPUT 4
49	W	TIRE PRESS WARNING CHECK SW	SW GND
50	SB	DRIVER DOOR SW	EFFECT SIGNAL
51	G	REAR WINDOW DEFROGER RELAY	IGNITION
103	V	SW GND	REVERSE
104	G	SW GND	PARKING BRAKE
105	SB	SW GND	VEHICLE SPEED (8-PULSE)
107	V	SW GND	VEHICLE SPEED (8-PULSE)

BCM (BODY CONTROL MODULE)


Connector No.	M31
Connector Name	AV CONTROL UNIT (WITHOUT NAVIGATION SYSTEM)
Connector Type	TH32EW-NH

 

Terminal No.	Color of Wire	Signal Name [Specification]	Signal Name [Specification]
79	L	TEL VOICE SIGNAL (-)	GND
80	R	TEL VOICE SIGNAL (+)	BATTERY
81	SHIELD	SHIELD	GND
82	W	SOUND SIGNAL RH (-) (With DVD player)	BATTERY
82	W	iPod SOUND SIGNAL RH (-) (Without DVD player)	ACC
83	R	iPod SOUND SIGNAL RH (+) (Without DVD player)	MICROPHONE VCC
83	R	iPod SOUND SIGNAL RH (-) (With DVD player)	SHIELD
85	B	GND	MICROPHONE GND
86	L	CAN-H	MICROPHONE SIGNAL
87	P	CAN-L	IGNITION
88	R	AV COMM (H)	PARKING BRAKE
89	L	AV COMM (L)	REVERSE
90	L	AV COMM (H)	VEHICLE SPEED (8-PULSE)
91	L	AV COMM (L)	CONNECTION RECOGNITION
95	R	AUX SOUND SIGNAL RH (-)	CONTROL SIGNAL
96	B	AUX SOUND SIGNAL LH (-)	AV COMM (H)
97	W	AUX SOUND SIGNAL GND	AV COMM (L)
98	G	COMBI SW OUTPUT 5	AV COMM (H)
98	L	iPod SOUND SIGNAL LH (-) (Without DVD player)	CAN-H
99	B	SOUND SIGNAL LH (+) (With DVD player)	CAN-L
99	BR	iPod SOUND SIGNAL LH (-) (Without DVD player)	P/W
100	SHIELD	SHIELD (Without DVD player)	-
100	SHIELD	SHIELD (With DVD player)	-
101	V	SW GND	-
103	V	EFFECT SIGNAL	-
104	G	IGNITION	-
105	SB	REVERSE	-
106	G	PARKING BRAKE	-
107	V	VEHICLE SPEED (8-PULSE)	-

BCM (BODY CONTROL MODULE)

Connector No.	M145
Connector Name	AV CONTROL UNIT (WITH NAVIGATION SYSTEM)
Connector Type	TH40FW-NH

 

Terminal No.	Color of Wire	Signal Name [Specification]	Signal Name [Specification]
1	B	SW GND	SW GND
2	W	EFFECT SIGNAL	SW GND
3	W	IGNITION	SW GND
4	SB	REVERSE	SW GND
5	R/Y	PARKING BRAKE	SW GND
6	R/L	VEHICLE SPEED (8-PULSE)	SW GND



Terminal No.	Color of Wire	Signal Name [Specification]	Signal Name [Specification]
1	W	SW GND	-
2	W	-	-

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

BCM (BODY CONTROL MODULE)

Connector No.	RZ1
Connector Name	PERSONAL LAMP
Connector Type	TH04FW-NH



Terminal No.	Color of Wire	Signal Name [Specification]
1	P/W	-
2	B	-
3	SB	-



Terminal No.	Color of Wire	Signal Name [Specification]
1	Y/R	-
2	R	-
3	B	-




Terminal No.	Color of Wire	Signal Name [Specification]
1	Y/R	VANITY MIRROR LAMP (DRIVER SIDE)
2	B	-



Connector No.	RZ1
Connector Name	PERSONAL LAMP
Connector Type	TH04FW-NH

Connector No.	R101
Connector Name	SUNROOF MOTOR ASSEMBLY
Connector Type	YEATOFGY

 

Terminal No.	Color of Wire	Signal Name [Specification]
1	B	GND
2	O	GND
3	L	IGN
4	Y	PUSH SW
5	LG	OPEN SW
6	R	BAT
7	P	COMM
8	BR	SPEED(UP)
9	W	2ND SW
10	V	CLOSE SW



Connector No.	R102
Connector Name	SUNSHADE MOTOR ASSEMBLY
Connector Type	YEATOFGY



Terminal No.	Color of Wire	Signal Name [Specification]
1	2	GND
2	LG	BAT
3	P	COMM
4	BR	SPEED(DP)



JCMWM4880GB

INFOID:0000000005518310

Fail-safe

FAIL-SAFE CONTROL BY DTC

BCM performs fail-safe control when any DTC are detected.

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

Display contents of CONSULT	Fail-safe	Cancellation
B2013: ID DISCORD BCM-S/L	Inhibit engine cranking	Erase DTC
B2014: CHAIN OF S/L-BCM	Inhibit engine cranking	Erase DTC
B2190: NATS ANTENNA AMP	Inhibit engine cranking	Erase DTC
B2191: DIFFERENCE OF KEY	Inhibit engine cranking	Erase DTC
B2192: ID DISCORD BCM-ECM	Inhibit engine cranking	Erase DTC
B2193: CHAIN OF BCM-ECM	Inhibit engine cranking	Erase DTC
B2195: ANTI SCANNING	Inhibit engine cranking	Ignition switch ON → OFF
B2557: VEHICLE SPEED	Inhibit steering lock	When normal vehicle speed signals are received from ABS actuator and electric unit (control unit) for 500 ms
B2560: STARTER CONT RELAY	Inhibit engine cranking	500 ms after the following CAN signal communication status becomes consistent <ul style="list-style-type: none"> • Starter control relay signal • Starter relay status signal
B2601: SHIFT POSITION	Inhibit steering lock	500 ms after the following signal reception status becomes consistent <ul style="list-style-type: none"> • Selector lever P position switch signal • P range signal (CAN)
B2602: SHIFT POSITION	Inhibit steering lock	5 seconds after the following BCM recognition conditions are fulfilled <ul style="list-style-type: none"> • Ignition switch is in the ON position • Selector lever P position switch signal: Except P position (battery voltage) • Vehicle speed: 4 km/h (2.5 MPH) or more
B2603: SHIFT POSI STATUS	Inhibit steering lock	500 ms after the following BCM recognition conditions are fulfilled <ul style="list-style-type: none"> • Ignition switch is in the ON position • Selector lever P position switch signal: Except P position (battery voltage) • Selector lever P/N position signal: Except P and N positions (0 V)
B2604: PNP SW	Inhibit steering lock	500 ms after any of the following BCM recognition conditions are fulfilled <ul style="list-style-type: none"> • Status 1 <ul style="list-style-type: none"> - Ignition switch is in the ON position - Selector lever P/N position signal: P and N position (battery voltage) - P range signal or N range signal (CAN): ON • Status 2 <ul style="list-style-type: none"> - Ignition switch is in the ON position - Selector lever P/N position signal: Except P and N positions (0 V) - P range signal and N range signal (CAN): OFF
B2605: PNP SW	Inhibit steering lock	500 ms after any of the following BCM recognition conditions are fulfilled <ul style="list-style-type: none"> • Ignition switch is in the ON position • Power position: IGN • Selector lever P/N position signal: Except P and N positions (0 V) • Interlock/PNP switch signal (CAN): OFF • Status 2 <ul style="list-style-type: none"> - Ignition switch is in the ON position - Selector lever P/N position signal: P or N position (battery voltage) - PNP switch signal (CAN): ON
B2606: S/L RELAY	Inhibit engine cranking	500 ms after the following CAN signal communication status becomes consistent <ul style="list-style-type: none"> • Steering lock relay signal (Request signal) • Steering lock relay signal (Condition signal)

A

B

C

D

E

F

G

H

I

J

K

L

BCS

N

O

P

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

Display contents of CONSULT	Fail-safe	Cancellation
B2607: S/L RELAY	Inhibit engine cranking	500 ms after the following CAN signal communication status becomes consistent <ul style="list-style-type: none"> • Steering lock relay signal (Request signal) • Steering lock relay signal (Condition signal)
B2608: STARTER RELAY	Inhibit engine cranking	500 ms after the following signal communication status becomes consistent <ul style="list-style-type: none"> • Starter motor relay control signal • Starter relay status signal (CAN)
B2609: S/L STATUS	<ul style="list-style-type: none"> • Inhibit engine cranking • Inhibit steering lock 	When the following steering lock conditions agree <ul style="list-style-type: none"> • BCM steering lock control status • Steering lock condition No. 1 signal status • Steering lock condition No. 2 signal status
B260A: IGNITION RELAY	Inhibit engine cranking	500 ms after the following conditions are fulfilled <ul style="list-style-type: none"> • IGN relay (IPDM E/R) control signal: OFF (Battery voltage) • Ignition ON signal (CAN to IPDM E/R): OFF (Request signal) • Ignition ON signal (CAN from IPDM E/R): OFF (Condition signal)
B260F: ENG STATE SIG LOST	Maintains the power supply position attained at the time of DTC detection	When any of the following conditions are fulfilled <ul style="list-style-type: none"> • Power position changes to ACC • Receives engine status signal (CAN)
B2612: S/L STATUS	<ul style="list-style-type: none"> • Inhibit engine cranking • Inhibit steering lock 	When any of the following conditions are fulfilled <ul style="list-style-type: none"> • Steering lock unit status signal (CAN) is received normally • The BCM steering lock control status matches the steering lock status recognized by the steering lock unit status signal (CAN from IPDM E/R)
B2617: STARTER RELAY CIRC	Inhibit engine cranking	1 second after the starter motor relay control inside BCM becomes normal
B2618: BCM	Inhibit engine cranking	1 second after the ignition relay (IPDM E/R) control inside BCM becomes normal
B2619: BCM	Inhibit engine cranking	1 second after the steering lock unit power supply output control inside BCM becomes normal
B261E: VEHICLE TYPE	Inhibit engine cranking	BCM initialization
B26E9: S/L STATUS	<ul style="list-style-type: none"> • Inhibit engine cranking • Inhibit steering lock 	When BCM transmits the LOCK request signal to steering lock unit, and receives LOCK response signal from steering lock unit, the following conditions are fulfilled <ul style="list-style-type: none"> • Steering condition No. 1 signal: LOCK (0V) • Steering condition No. 2 signal: LOCK (Battery voltage)

HIGH FLASHER OPERATION

BCM detects the turn signal lamp circuit status by the current value.

BCM increases the turn signal lamp blinking speed if the bulb or harness open is detected with the turn signal lamp operating.

NOTE:

The blinking speed is normal while activating the hazard warning lamp.

FAIL-SAFE CONTROL BY RAIN SENSOR MALFUNCTION

- BCM judges the rain sensor serial link error by the rain sensor serial link condition and detects the rain sensor malfunction by rain sensor malfunction signal.
- When BCM detects the rain sensor serial link error or the rain sensor malfunction while front wiper AUTO operation, BCM operates a fail-safe control.

NOTE:

If rain sensor malfunction is detected when ignition switch is turned OFF \Rightarrow ON and front wiper switch is INT/AUTO position, BCM operates a fail-safe control.

REAR WIPER MOTOR PROTECTION

BCM detects the rear wiper stopping position according to the rear wiper stop position signal.

When the rear wiper stop position signal does not change for more than 5 seconds while driving the rear wiper, BCM stops power supply to protect the rear wiper motor.

Condition of cancellation

1. More than 1 minute is passed after the rear wiper stop.

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

2. Turn rear wiper switch OFF.
3. Operate the rear wiper switch or rear washer switch.

DTC Inspection Priority Chart

INFOID:000000005518311

If some DTCs are displayed at the same time, perform inspections one by one based on the following priority chart.

Priority	DTC	
1	B2562: LOW VOLTAGE	A
2	<ul style="list-style-type: none">• U1000: CAN COMM• U1010: CONTROL UNIT(CAN)	B
3	<ul style="list-style-type: none">• B2190: NATS ANTENNA AMP• B2191: DIFFERENCE OF KEY• B2192: ID DISCORD BCM-ECM• B2193: CHAIN OF BCM-ECM• B2195: ANTI SCANNING	C
		D
		E
		F
		G
		H
		I
		J
		K
		L
4	<ul style="list-style-type: none">• B2013: ID DISCORD BCM-S/L• B2014: CHAIN OF S/L-BCM• B2553: IGNITION RELAY• B2555: STOP LAMP• B2556: PUSH-BTN IGN SW• B2557: VEHICLE SPEED• B2560: STARTER CONT RELAY• B2601: SHIFT POSITION• B2602: SHIFT POSITION• B2603: SHIFT POSI STATUS• B2604: PNP SW• B2605: PNP SW• B2606: S/L RELAY• B2607: S/L RELAY• B2608: STARTER RELAY• B2609: S/L STATUS• B260A: IGNITION RELAY• B260B: STEERING LOCK UNIT• B260C: STEERING LOCK UNIT• B260D: STEERING LOCK UNIT• B260F: ENG STATE SIG LOST• B2612: S/L STATUS• B2614: ACC RELAY CIRC• B2615: BLOWER RELAY CIRC• B2616: IGN RELAY CIRC• B2617: STARTER RELAY CIRC• B2618: BCM• B2619: BCM• B261A: PUSH-BTN IGN SW• B261E: VEHICLE TYPE• B26E9: S/L STATUS• B26EA: KEY REGISTRATION• C1729: VHCL SPEED SIG ERR• U0415: VEHICLE SPEED SIG	BCS
		M
		N
		O
		P

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

Priority	DTC
5	<ul style="list-style-type: none"> • C1704: LOW PRESSURE FL • C1705: LOW PRESSURE FR • C1706: LOW PRESSURE RR • C1707: LOW PRESSURE RL • C1708: [NO DATA] FL • C1709: [NO DATA] FR • C1710: [NO DATA] RR • C1711: [NO DATA] RL • C1716: [PRESSDATA ERR] FL • C1717: [PRESSDATA ERR] FR • C1718: [PRESSDATA ERR] RR • C1719: [PRESSDATA ERR] RL • C1734: CONTROL UNIT
6	<ul style="list-style-type: none"> • B2622: INSIDE ANTENNA • B2623: INSIDE ANTENNA

DTC Index

INFOID:0000000005518312

NOTE:

The details of time display are as follows.

- CRNT: A malfunction is detected now.
- PAST: A malfunction was detected in the past.

IGN counter is displayed on Freeze Frame Data. For details of Freeze Frame Data, refer to [BCS-17, "COMMON ITEM : CONSULT-III Function \(BCM - COMMON ITEM\)".](#)

CONSULT display	Fail-safe	Freeze Frame Data •Vehicle Speed •Odo/Trip Meter •Vehicle Condition	Intelligent Key warning lamp ON	Tire pressure monitor warning lamp ON	Reference page
No DTC is detected. further testing may be required.	—	—	—	—	—
U1000: CAN COMM	—	—	—	—	BCS-38
U1010: CONTROL UNIT(CAN)	—	—	—	—	BCS-39
U0415: VEHICLE SPEED SIG	—	—	—	—	BCS-40
B2013: ID DISCORD BCM-S/L*	×	×	—	—	SEC-51
B2014: CHAIN OF S/L-BCM*	×	×	—	—	SEC-52
B2190: NATS ANTENNA AMP	×	—	—	—	SEC-43
B2191: DIFFERENCE OF KEY	×	—	—	—	SEC-46
B2192: ID DISCORD BCM-ECM	×	—	—	—	SEC-47
B2193: CHAIN OF BCM-ECM	×	—	—	—	SEC-49
B2195: ANTI SCANNING	×	—	—	—	SEC-50
B2553: IGNITION RELAY	—	×	—	—	PCS-48
B2555: STOP LAMP	—	×	—	—	SEC-55
B2556: PUSH-BTN IGN SW	—	×	×	—	SEC-57
B2557: VEHICLE SPEED	×	×	×	—	SEC-59
B2560: STARTER CONT RELAY	×	×	×	—	SEC-60
B2562: LOW VOLTAGE	—	×	—	—	BCS-41
B2601: SHIFT POSITION	×	×	×	—	SEC-61
B2602: SHIFT POSITION	×	×	×	—	SEC-64
B2603: SHIFT POSI STATUS	×	×	×	—	SEC-66
B2604: PNP SW	×	×	×	—	SEC-69

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

CONSULT display	Fail-safe	Freeze Frame Data •Vehicle Speed •Odo/Trip Meter •Vehicle Condition	Intelligent Key warning lamp ON	Tire pressure monitor warning lamp ON	Reference page
B2605: PNP SW	×	×	×	—	SEC-71
B2606: S/L RELAY*	×	×	×	—	SEC-73
B2607: S/L RELAY*	×	×	×	—	SEC-74
B2608: STARTER RELAY	×	×	×	—	SEC-76
B2609: S/L STATUS*	×	×	×	—	SEC-78
B260A: IGNITION RELAY	×	×	×	—	PCS-50
B260B: STEERING LOCK UNIT*	—	×	×	—	SEC-82
B260C: STEERING LOCK UNIT*	—	×	×	—	SEC-83
B260D: STEERING LOCK UNIT*	—	×	×	—	SEC-84
B260F: ENG STATE SIG LOST	×	×	×	—	SEC-85
B2612: S/L STATUS*	×	×	×	—	SEC-88
B2614: ACC RELAY CIRC	—	×	×	—	PCS-52
B2615: BLOWER RELAY CIRC	—	×	×	—	PCS-55
B2616: IGN RELAY CIRC	—	×	×	—	PCS-58
B2617: STARTER RELAY CIRC	×	×	×	—	SEC-92
B2618: BCM	×	×	×	—	PCS-61
B2619: BCM*	×	×	×	—	SEC-94
B261A: PUSH-BTN IGN SW	—	×	×	—	SEC-95
B261E: VEHICLE TYPE	×	×	× (Turn ON for 15 seconds)	—	SEC-98
B2622: INSIDE ANTENNA	—	×	—	—	DLK-91
B2623: INSIDE ANTENNA	—	×	—	—	DLK-93
B26E9: S/L STATUS*	×	×	× (Turn ON for 15 seconds)	—	SEC-86
B26EA: KEY REGISTRATION	—	×	× (Turn ON for 15 seconds)	—	SEC-87
C1704: LOW PRESSURE FL	—	—	—	×	WT-25
C1705: LOW PRESSURE FR	—	—	—	×	
C1706: LOW PRESSURE RR	—	—	—	×	
C1707: LOW PRESSURE RL	—	—	—	×	
C1708: [NO DATA] FL	—	—	—	×	WT-27
C1709: [NO DATA] FR	—	—	—	×	
C1710: [NO DATA] RR	—	—	—	×	
C1711: [NO DATA] RL	—	—	—	×	
C1716: [PRESSDATA ERR] FL	—	—	—	×	WT-30
C1717: [PRESSDATA ERR] FR	—	—	—	×	
C1718: [PRESSDATA ERR] RR	—	—	—	×	
C1719: [PRESSDATA ERR] RL	—	—	—	×	
C1729: VHCL SPEED SIG ERR	—	—	—	×	WT-32
C1734: CONTROL UNIT	—	—	—	×	WT-34

NOTE:

*: For models without steering lock unit this DTC is not applied.

A
B
C
D
E
F
G
H
I
J
K
L

BCS

N
O
P

COMBINATION SWITCH SYSTEM SYMPTOMS

<SYMPTOM DIAGNOSIS>

SYMPTOM DIAGNOSIS

COMBINATION SWITCH SYSTEM SYMPTOMS

Symptom Table

INFOID:000000005518313

1. Perform "Data Monitor" of CONSULT-III to check for any malfunctioning item.
2. Check the malfunction combinations.

Malfunction combination	Data monitor item															Malfunction item: x	
	FR WIPER HI	FR WIPER LOW	FR WASHER SW	FR WIPER INT	RR WIPER ON	RR WIPER INT	RR WASHER SW	INT VOLUME	TURN SIGNAL R	TURN SIGNAL L	TAIL LAMP SW	HI BEAM SW	HEAD LAMP SW 1	HEAD LAMP SW 2	PASSING SW	AUTO LIGHT SW	FR FOG SW
A		x	x						x	x							
B	x			x								x		x			
C							x	x				x		x			
D						x		x			x					x	
E					x			x									x
F	x					x		x									
G			x		x		x	x									
H		x		x												x	
I										x				x	x		x
J									x		x	x	x				
K	All Items																
L	If only one item is detected or the item is not applicable to the combinations A to K																

3. Identify the malfunctioning part from the agreed combination and repair or replace the part.

Malfunction combination	Malfunctioning part	Repair or replace
A	Combination switch INPUT 1 circuit	Inspect the combination switch input circuit applicable to the malfunctioning part. Refer to BCS-43, "Diagnosis Procedure" .
B	Combination switch INPUT 2 circuit	
C	Combination switch INPUT 3 circuit	
D	Combination switch INPUT 4 circuit	
E	Combination switch INPUT 5 circuit	
F	Combination switch OUTPUT 1 circuit	Inspect the combination switch output circuit applicable to the malfunctioning part. Refer to BCS-45, "Diagnosis Procedure" .
G	Combination switch OUTPUT 2 circuit	
H	Combination switch OUTPUT 3 circuit	
I	Combination switch OUTPUT 4 circuit	
J	Combination switch OUTPUT 5 circuit	
K	BCM	Replace BCM. Refer to BCS-95, "Exploded View" .
L	Combination switch	Replace the combination switch.

PRECAUTIONS

< PRECAUTION >

PRECAUTION

PRECAUTIONS

FOR USA AND CANADA

FOR USA AND CANADA : Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000005716244

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted.

Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the "SRS AIR BAG".
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

FOR MEXICO

FOR MEXICO : Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000005716243

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the "SRS AIR BAG".
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s)

A

B

C

D

E

F

G

H

I

J

K

L

BCS

N

O

P

PRECAUTIONS

< PRECAUTION >

-
- with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
 - When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

BCM (BODY CONTROL MODULE)

< REMOVAL AND INSTALLATION >

REMOVAL AND INSTALLATION

BCM (BODY CONTROL MODULE)

Exploded View

INFOID:000000005518315

A

B

C

D

E

F

G

H

I

J

K

L


BCS

N

O

P

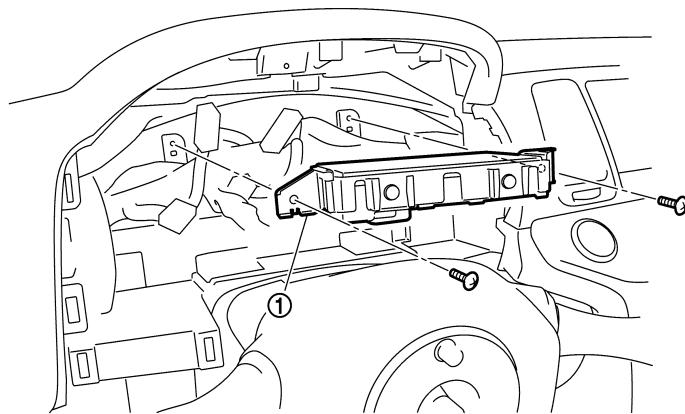SEC. 253



JPMIA0895ZZ

1. BCM

Removal and Installation

INFOID:000000005518316

I

CAUTION:

Before replacing BCM, perform "READ CONFIGURATION" to save or print current vehicle specification. Refer to [BCS-3, "ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT \(BCM\) : Description"](#).

REMOVAL

1. Remove combination meter. Refer to [MWI-103, "Exploded View"](#).
2. Remove screws.
3. Remove BCM and disconnect the connector.

INSTALLATION

Install in the reverse order of removal.

CAUTION:

- Be sure to perform "WRITE CONFIGURATION" when replacing BCM.
- Be sure to perform the system initialization (NATS) when replacing BCM. Refer to [BCS-3, "ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT \(BCM\) : Special Repair Requirement"](#).

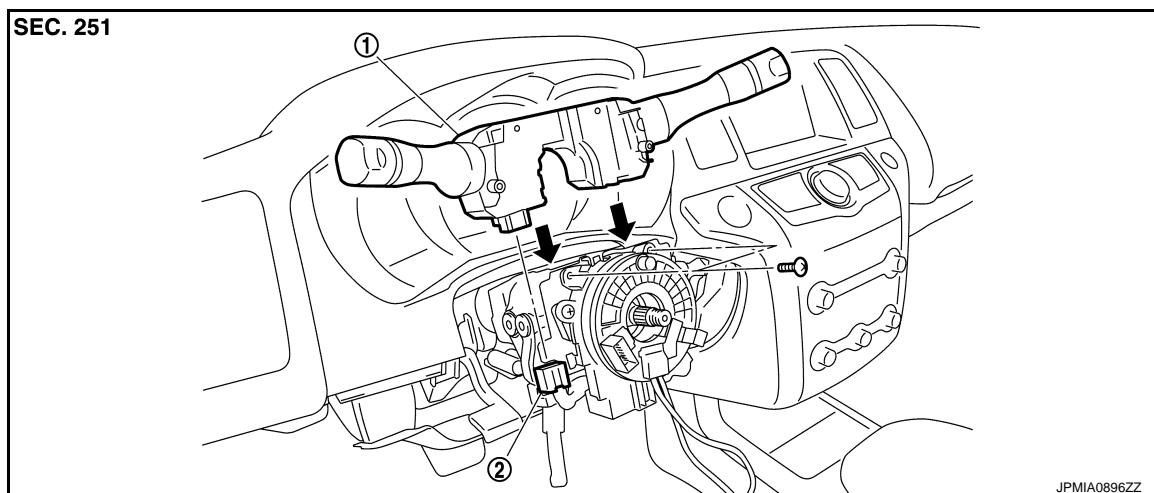
COMBINATION SWITCH

< REMOVAL AND INSTALLATION >

COMBINATION SWITCH

Exploded View

INFOID:0000000005518317



1. Combination switch
2. Combination switch connector

INFOID:0000000005518318

Removal and Installation

REMOVAL

1. Remove steering column cover. Refer to [IP-12, "Exploded View"](#).
2. Remove screws.
3. Disconnect the connector.
4. Pull up the combination switch to remove it.

INSTALLATION

Install in the reverse order of removal.