

SECTION **HRN**
HORN

A
B
C
D
E
F
G
H
I
J
K
M
N
O
P

CONTENTS

DTC/CIRCUIT DIAGNOSIS	2	FOR MEXICO	5
HORN	2	FOR MEXICO : Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	5
Wiring Diagram - HORN -	2	REMOVAL AND INSTALLATION	7
PRECAUTION	5	HORN	7
PRECAUTIONS	5	Exploded View	7
FOR USA AND CANADA	5	Removal and Installation	7
FOR USA AND CANADA : Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	5		

HRN

HORN


< DTC/CIRCUIT DIAGNOSIS >

DTC/CIRCUIT DIAGNOSIS

HORN

Wiring Diagram - HORN -

INFOID:000000006258193

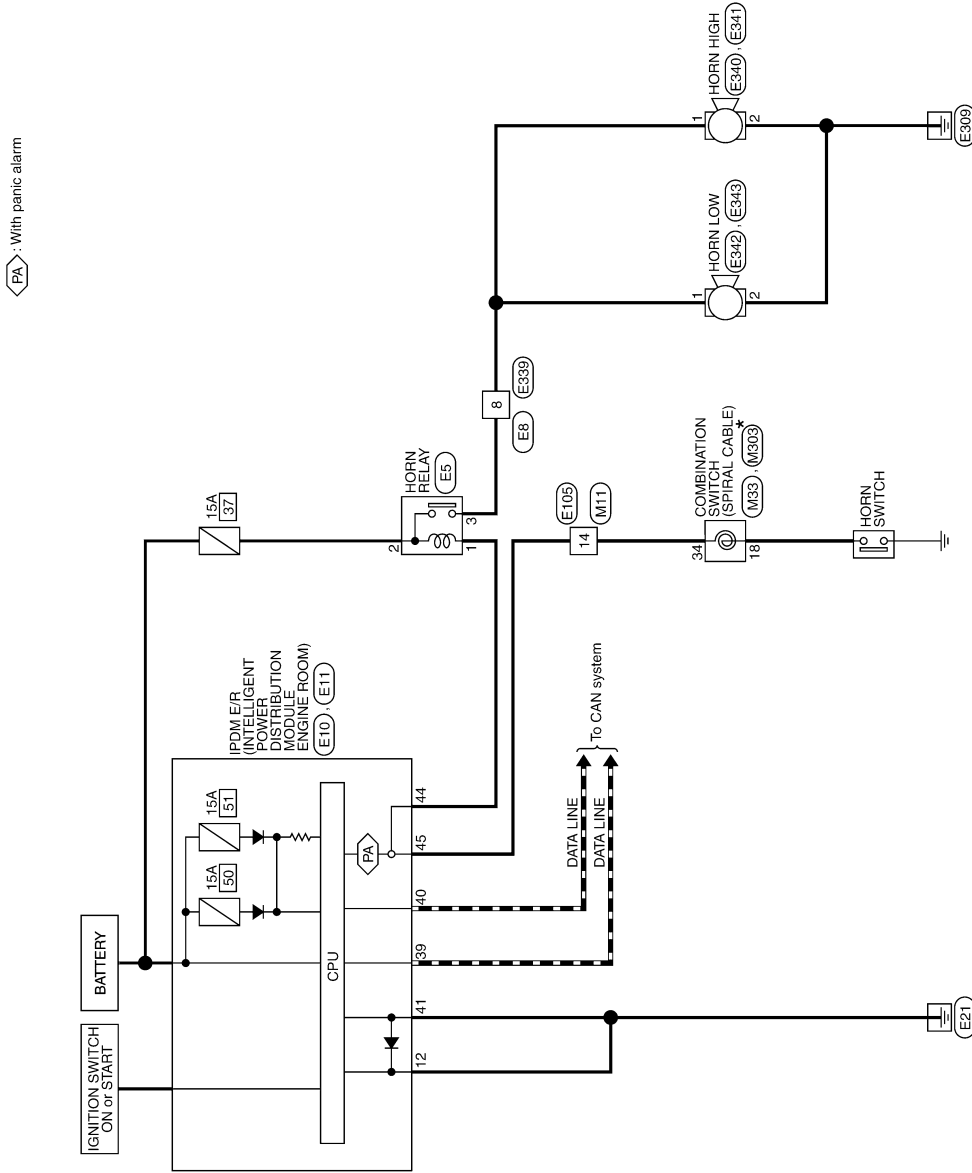

HORN

2008/09/23

JCLWM2824GB

HORN

< DTC/CIRCUIT DIAGNOSIS >

HORN

Connector No.	E5
Connector Name	HORN RELAY
Connector Type	-



2	3	1
---	---	---

Terminal No.	Color of Wire	Signal Name [Specification]
1	W	-
2	SB	-
3	G	-

Connector No.	E8
Connector Name	WIRE TO WIRE
Connector Type	NS12MBR-CS



1	2	3	4	5
6	7	8	9	10
11	12			

Terminal No.	Color of Wire	Signal Name [Specification]
3	GR	-
4	SB	-
5	O	-
8	G	-
9	W	-
10	Y	-
11	G	-

Connector No.	E10
Connector Name	IRPME R INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)
Connector Type	TH20FY-CS12-M4-1V



9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38
---	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----

Terminal No.	Color of Wire	Signal Name [Specification]
4	LG	-
5	Y	-
7	GR	-
10	BR	-
12	B	-
13	SB	-
15	W	-
16	R	-
19	Y	-
20	L	-
21	O	-
22	SB	-
23	GR	-
24	G	-
25	GR	-
26	Y	-
27	W	-
28	SB	-
30	BR	-
34	O	-
35	P	-
36	G	-
38	GR	-

Connector No.	E11
Connector Name	IRPME R INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)
Connector Type	TH08FY-NH



42	41	40	39
46	45	44	43

Terminal No.	Color of Wire	Signal Name [Specification]
38	P	-
40	L	-
41	B	-
42	SB	-
43	Y	-
44	W	-
45	O	-
46	BR	-

Connector No.	E105
Connector Name	WIRE TO WIRE
Connector Type	TH70MW-CS10-M3



Terminal No.	Color of Wire	Signal Name [Specification]
3	Y	-
5	LG	-
6	GR	-
8	G	-
11	P	-
12	L	-
13	Y	-
14	O	-
15	BR	-
20	Y	-
21	BR	-
22	P	-
24	L	-
25	O	-
28	SB	-
29	W	-
30	Y	-
47	P	-
48	L	-
48	SB	-
50	GR	-
51	LG	-
52	V	-
53	GR	-
54	BR	-
55	Y	-

Terminal No.	W/L
56	-
60	V
61	BR
62	O
63	L/O
64	SHIELD
66	W
67	BR
68	Y
69	SB
70	GR
71	SB
72	Y
73	L
74	W
75	BR
76	GR
77	O
78	Y
78	G
78	V
79	Y
80	R
81	W
82	LG
83	O

Connector No.	E339
Connector Name	WIRE TO WIRE
Connector Type	NS12FBR-CS



5	4	3	2	1
12	11	10	9	8
7	6			

Terminal No.	Color of Wire	Signal Name [Specification]
3	O	-
4	G	-
5	O	-
8	G	-
9	W	-
10	Y	-
11	R	-

A
B
C
D
E
F
G
H
I
J
K
HRN
M
N
O
P

HORN

< DTC/CIRCUIT DIAGNOSIS >

HORN

Connector No.	E340
Connector Name	HORN HIGH
Connector Type	P01FE-A



Terminal No.	2	Color of Wire	B	Signal Name [Specification]	-
--------------	---	---------------	---	-----------------------------	---

Connector No.	E341
Connector Name	HORN HIGH
Connector Type	P01FE-A



Terminal No.	1	Color of Wire	G	Signal Name [Specification]	-
--------------	---	---------------	---	-----------------------------	---

Connector No.	E342
Connector Name	HORN LOW
Connector Type	P01FE-A



Terminal No.	2	Color of Wire	B	Signal Name [Specification]	-
--------------	---	---------------	---	-----------------------------	---

Connector No.	E343
Connector Name	HORN LOW
Connector Type	P01FE-A



Terminal No.	1	Color of Wire	G	Signal Name [Specification]	-
--------------	---	---------------	---	-----------------------------	---


Connector No.	M11
Connector Name	WIRE TO WIRE
Connector Type	TH77FPI-CS10-M3



Terminal No.	3	Color of Wire	P	Signal Name [Specification]	-
	5	O	-	-	-
	6	G	-	-	-
	8	R	-	-	-
	11	P	-	-	-
	12	L	-	-	-
	13	Y	-	-	-
	14	Y	-	-	-
	15	R	-	-	-
	20	Y	-	-	-
	21	BR	-	-	-
	22	G	-	-	-
	24	Y	-	-	-
	25	L	-	-	-
	28	BR	-	-	-
	29	L	-	-	-
	30	R	-	-	-
	47	P	-	-	-
	48	L	-	-	-
	49	W	-	-	-
	50	GR	-	-	-

51	LG	-	-	-
52	Y	-	-	-
53	V	-	-	-
54	SB	-	-	-
55	P	-	-	-
56	SB	-	-	-
60	V	-	-	-
61	GR	-	-	-
62	O	-	-	-
63	V	-	-	-
64	SHIELD	-	-	-
66	W	-	-	-
67	R	-	-	-
68	W	-	-	-
69	P	-	-	-
70	G	-	-	-
71	G	-	-	-
72	BR	-	-	-
73	L	-	-	-
74	W	-	-	-
75	BR	-	-	-
76	R	-	-	-
77	G	-	-	-
78	Y	-	-	-
79	G	-	-	-
80	R	-	-	-
81	W	-	-	-
82	W	-	-	-
83	O	-	-	-

Connector No.	M33
Connector Name	COMBINATION SWITCH (SPIRAL CABLE)
Connector Type	TKG8FGY-IV

 

Terminal No.	24	Color of Wire	BR	Signal Name [Specification]	-
	25	P	-	-	-
	26	SB	-	-	-
	31	G	-	-	-
	32	SB	-	-	-
	33	L	-	-	-
	34	Y	-	-	-

Connector No.	M303
Connector Name	COMBINATION SWITCH (SPIRAL CABLE)
Connector Type	TKG8FGY



Terminal No.	13	Color of Wire	-	Signal Name [Specification]	-
	14	-	-	-	-
	15	-	-	-	-
	16	-	-	-	-
	17	-	-	-	-
	18	-	-	-	-
	19	-	-	-	-
	20	-	-	-	-

PRECAUTIONS

< PRECAUTION >

PRECAUTION

PRECAUTIONS FOR USA AND CANADA

FOR USA AND CANADA : Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000006882257

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

WARNING:

Always observe the following items for preventing accidental activation.

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision that would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see "SRS AIR BAG".
- Never use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

Always observe the following items for preventing accidental activation.

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, never use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

FOR MEXICO

FOR MEXICO : Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000006882261

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

WARNING:

Always observe the following items for preventing accidental activation.

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision that would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see "SRS AIR BAG".
- Never use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

A

B

C

D

E

F

G

H

I

J

K

HRN

M

N

O

P

PRECAUTIONS

< PRECAUTION >

Always observe the following items for preventing accidental activation.

- **When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, never use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.**
- **When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.**

HORN


< REMOVAL AND INSTALLATION >

REMOVAL AND INSTALLATION

HORN

Exploded View

INFOID:000000006258196

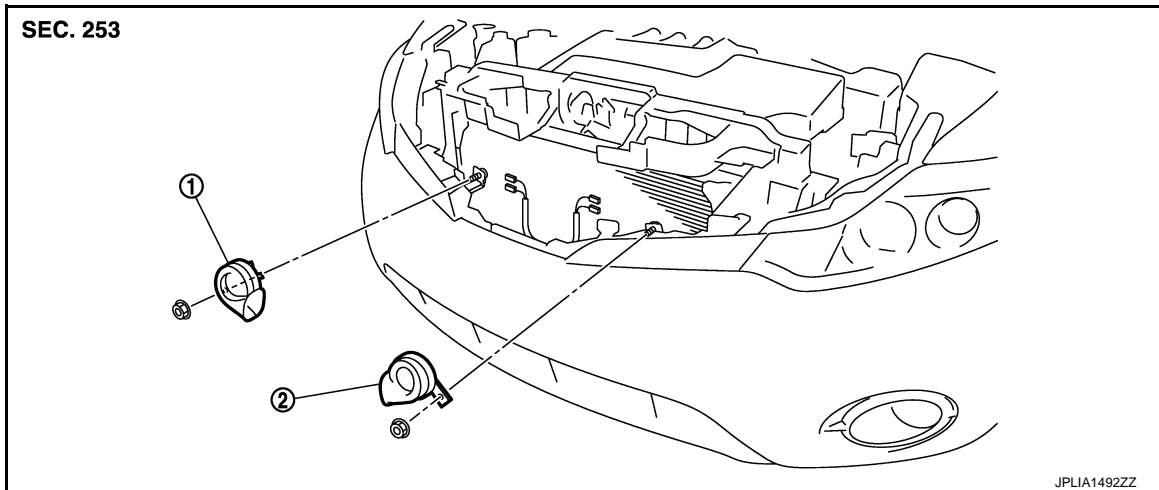

1. Horn (HIGH)

2. Horn (LOW)

Removal and Installation

INFOID:000000006258197

REMOVAL

1. Remove the front grille. Refer to [EXT-18. "Exploded View"](#).
2. Disconnect the horn (LOW, HIGH) connector.
3. Remove the horn mounting nut, and remove the horn (LOW, HIGH) from the vehicle.

INSTALLATION

Install in the reverse order of removal.

A
B
C
D
E
F
G
H
I
J
K

HRN

M
N
O
P