

---

## ALPHABETICAL INDEX

---

### A

---

A-BAG BRANCH LINE CIRCUIT .LAN-45, LAN-62,  
LAN-78, LAN-95, LAN-111

A/T CONTROL SYSTEM ..... TM-50

A/T FLUID ..... TM-67

A/T FLUID COOLER ..... TM-71

A/T SHIFT LOCK SYSTEM..... TM-60, TM-138

A/T SHIFT SELECTOR..... TM-163

ABBREVIATIONS ..... GI-13

ABS ACTUATOR AND ELECTRIC UNIT  
(CONTROL UNIT).....BRC-37, BRC-143

ABS BRANCH LINE CIRCUIT ..... LAN-53, LAN-69,  
LAN-86, LAN-102, LAN-119

ABS FUNCTION DOES NOT OPERATE. BRC-136

ABS WARNING LAMP ..... BRC-128

AC 120 V OUTLET ..... PWO-51

AC 120 V OUTLET MAIN SWITCH INDICATOR  
CIRCUIT ..... PWO-43

AC 120 V OUTLET MAIN SWITCH INDICATOR  
DOES NOT TURN ON ..... PWO-47

AC 120 V OUTLET MAIN SWITCH INPUT SIGNAL  
CIRCUIT ..... PWO-38

AC 120 V OUTLET MAIN SWITCH POWER  
SUPPLY CIRCUIT ..... PWO-37

AC 120 V POWER OUTPUT CIRCUIT ..... PWO-40

AC 120V OUTLET MAIN SW ..... PWO-50

ACCELERATOR CONTROL SYSTEM ..... ACC-3

ACCELERATOR PEDAL RELEASED POSITION  
LEARNING ..... EC-137, EC-590

ADDITIONAL SERVICE WHEN REPLACING ABS  
ACTUATOR AND ELECTRIC UNIT (CONTROL  
UNIT) ..... BRC-55

ADDITIONAL SERVICE WHEN REPLACING  
CONTROL VALVE & TCM ..... TM-66

ADDITIONAL SERVICE WHEN REPLACING ECM  
EC-134, EC-588

ADDITIONAL SERVICE WHEN REPLACING LOW  
TIRE PRESSURE WARNING CONTROL UNIT  
WT-25

ADDITIONAL SERVICE WHEN REPLACING  
TRANSMISSION ASSEMBLY..... TM-65

ADJUSTMENT OF STEERING ANGLE SENSOR  
NEUTRAL POSITION ..... BRC-56

AIR BREATHER HOSE ..... TM-181

AIR CLEANER AND AIR DUCT ..... EM-24, EM-165

AIR CLEANER FILTER ..... EM-15, EM-155

AIR CONDITIONER CONTROL HAC-35, HAC-145

AMBIENT SENSOR ..... HAC-111, HAC-213

ASCD BRAKE SWITCH ..... EC-421, EC-869

ASCD INDICATOR ..... EC-423, EC-872

AUDIO ANTENNA ..... AV-30, AV-85, AV-152

AUDIO SYSTEM ..... AV-24, AV-42, AV-73

AUDIO UNIT ..... AV-10, AV-27, AV-78

AUTO OPERATION DOES NOT OPERATE BUT  
MANUAL OPERATES NORMALLY .... PWC-39

AUTOMATIC SPEED CONTROL DEVICE (ASCD)  
CCS-3

AUXILIARY INPUT JACK ..... AV-137

AV BRANCH LINE CIRCUIT ..... LAN-46, LAN-79,  
LAN-112

AV CONTROL UNIT ..... AV-99, AV-146

AXLE SHAFT ..... RAX-5, RAX-6

### B

---

B TERMINAL CIRCUIT ..... CHG-17, STR-23

B0001, B0002 DRIVER AIRBAG MODULE SRC-45

B0010, B0011 PASSENGER AIRBAG MODULE ....  
SRC-48

B0020 SIDE AIRBAG MODULE LH ..... SRC-51

B0021 SIDE CURTAIN AIR BAG MODULE LH .....  
SRC-54

B0022 CURTAIN AIR BAG MODULE ..... SRC-57

B0028 SIDE AIRBAG MODULE RH ..... SRC-60

B0029 SIDE CURTAIN AIR BAG MODULE RH.....  
SRC-63

B002A CURTAIN AIR BAG MODULE ..... SRC-66

B0091 FRONT SIDE AIR BAG SATELLITE  
SENSOR LH ..... SRC-69

B0092 REAR SIDE AIR BAG SATELLITE SENSOR  
LH ..... SRC-72

B0093 FRONT DOOR SATELLITE SENSOR LH ...  
SRC-75

B0094 CRASH ZONE SENSOR ..... SRC-78

B0096 FRONT SIDE AIR BAG SATELLITE  
SENSOR RH ..... SRC-81

B0097 REAR SIDE AIR BAG SATELLITE SENSOR  
RH ..... SRC-84

B0098 FRONT DOOR SATELLITE SENSOR RH...  
SRC-87

B1427 CONFIG SETTING ..... SRC-103

B1428 SEAT BELT BUCKLE SWITCH LH. SRC-90

B1429 SEAT BELT BUCKLE SWITCH RH SRC-92

B142A IGNITION VOLTAGE ..... SRC-98

B142X COLLISION DETECTION..... SRC-100

B1430 SEAT BELT PRE-TENSIONER..... SRC-94

B1431 SEAT BELT PRE-TENSIONER..... SRC-96

B14XX AIR BAG DIAGNOSIS SENSOR UNIT .....  
SRC-101

B2190 NATS ANTENNA AMP. .... SEC-43

B2191 DIFFERENCE OF KEY ..... SEC-45

B2192 ID DISCORD, IMMU-ECM ..... SEC-46

B2193 CHAIN OF ECM-IMMU ..... SEC-48

B2195 ANTI-SCANNING ..... SEC-49

B2578, B2579 IN-VEHICLE SENSOR ..... HAC-58

B257B, B257C AMBIENT SENSOR ..... HAC-61,  
HAC-168

B2581, B2582 INTAKE SENSOR HAC-65, HAC-172

B2630, B2631 SUNLOAD SENSOR ..... HAC-68  
 B2632, B2633 FRONT AIR MIX DOOR MOTOR ....  
 HAC-175  
 B2632, B2633 FRONT AIR MIX DOOR MOTOR  
 (DRIVER SIDE) ..... HAC-71  
 B2634, B2635 FRONT AIR MIX DOOR MOTOR  
 (PASSENGER SIDE)..... HAC-73  
 B2636, B2637, B2638, B2639, B2654 MODE DOOR  
 MOTOR (FRONT) ..... HAC-75, HAC-177  
 B263D, B263E, B263F INTAKE DOOR MOTOR ....  
 HAC-77  
 B263D, B263F INTAKE DOOR MOTOR .. HAC-179  
 B27B0 FRONT AIR CONTROL. HAC-79, HAC-181  
 BACK DOOR FINISHER ..... INT-21  
 BACK DOOR LOCK ..... DLK-120  
 BACK DOOR WINDOW GLASS ..... GW-25  
 BACK-UP LAMP ..... EXL-76  
 BASE AUDIO SYSTEM ..... AV-12  
 BASIC INSPECTION ..... EC-142, EC-584  
 BATTERY ..... PG-86, PG-95  
 BATTERY SAVER OUTPUT/POWER SUPPLY  
 CIRCUIT ..... INL-53  
 BATTERY TERMINAL WITH FUSIBLE LINK PG-97  
 BCM ..... PWC-13  
 BCM (BODY CONTROL MODULE) ..... BCS-28,  
 BCS-41, BCS-62, DLK-19, INL-14  
 BCM BRANCH LINE CIRCUIT .... LAN-48, LAN-64,  
 LAN-81, LAN-97, LAN-114  
 BCM, COMBINATION METER ..... WCS-15  
 BCM, IPDM E/R DEF-15, EXL-23, MWI-23, WW-14  
 BLOWER MOTOR ..... VTL-14  
 BLOWER MOTOR RESISTOR ..... VTL-16  
 BLUETOOTH CONTROL UNIT ..... AV-45, AV-83  
 BODY ALIGNMENT BRM-73, BRM-169, BRM-275  
 BODY COMPONENT PARTS ... BRM-9, BRM-108,  
 BRM-205  
 BODY CONSTRUCTION ..... BRM-22, BRM-121,  
 BRM-218  
 BODY EXTERIOR PAINT COLOR ..... BRM-3,  
 BRM-102, BRM-199  
 BODY SIDE TRIM ..... INT-23  
 BOTH DOORS MIRROR DEFOGGER DON'T  
 OPERATE BUT REAR WINDOW DEFOGGER  
 OPERATES ..... DEF-40  
 BOTH HIGH- AND LOW-PRESSURE SIDES ARE  
 TOO HIGH ..... HA-29  
 BOTH HIGH- AND LOW-PRESSURE SIDES ARE  
 TOO LOW ..... HA-32  
 BOTH SIDE FRONT FOG LAMPS ARE NOT  
 TURNED ON ..... EXL-116  
 BOTH SIDE HEADLAMPS (LO) ARE NOT TURNED  
 ON ..... EXL-114  
 BOTH SIDE HEADLAMPS DO NOT SWITCH TO  
 HIGH BEAM ..... EXL-113  
 BRAKE CONTROL SYSTEM ..... BRC-45  
 BRAKE FLUID ..... BR-12

BRAKE PEDAL ..... BR-10, BR-22  
 BRAKE PIPING ..... BR-24  
 BRAKE WARNING LAMP ..... BRC-129  
 BULB SPECIFICATIONS ..... INL-71

## C

C1101, C1102, C1103, C1104 WHEEL SENSOR ...  
 BRC-60  
 C1105, C1106, C1107, C1108 WHEEL SENSOR ...  
 BRC-65  
 C1109 POWER AND GROUND SYSTEM . BRC-72  
 C1111 ABS MOTOR, MOTOR RELAY SYSTEM .....  
 BRC-74  
 C1115 WHEEL SENSOR ..... BRC-77  
 C1116 STOP LAMP SWITCH ..... BRC-84  
 C1120, C1122, C1124, C1126 ABS IN VALVE  
 SYSTEM ..... BRC-88  
 C1121, C1123, C1125, C1127 ABS OUT VALVE  
 SYSTEM ..... BRC-90  
 C1130 ENGINE SIGNAL ..... BRC-92  
 C1140 ACTUATOR RELAY SYSTEM ..... BRC-94  
 C1142 PRESS SENSOR ..... BRC-96  
 C1143 STEERING ANGLE SENSOR ..... BRC-99  
 C1144 INCOMPLETE STEERING ANGLE SENSOR  
 ADJUSTMENT ..... BRC-103  
 C1145, C1146 YAW RATE/SIDE/DECEL G SENSOR  
 BRC-105  
 C1155 BRAKE FLUID LEVEL SWITCH ... BRC-108  
 C1160 INCOMPLETE DECEL G SENSOR  
 CALIBRATION ..... BRC-112  
 C1164, C1165 CV SYSTEM ..... BRC-114  
 C1166, C1167 SV SYSTEM ..... BRC-116  
 C1170 VARIANT CODING ..... BRC-118  
 C118E ACCUMULATOR ..... BRC-119  
 C1704, C1705, C1706, C1707 LOW TIRE  
 PRESSURE ..... WT-30  
 C1708, C1709, C1710, C1711 TIRE PRESSURE  
 SENSOR ..... WT-32  
 C1716, C1717, C1718, C1719 TIRE PRESSURE  
 SENSOR ..... WT-36  
 C1728 RECEIVER ID ..... WT-38  
 C1729 VEHICLE SPEED SIGNAL ..... WT-41  
 C1735 IGN CIRCUIT OPEN ..... BCS-54  
 C1750, C1751, C1752, C1753 RECEIVER .. WT-43  
 C1754 LOW TIRE PRESSURE WARNING  
 CONTROL UNIT ..... WT-46  
 C1755, C1756, C1757, C1758 POOR RECEIVING  
 CONDITIONS ..... WT-49  
 CALIBRATION OF DECEL G SENSOR .... BRC-58  
 CAMSHAFT ..... EM-77, EM-200  
 CAMSHAFT VALVE CLEARANCE EM-18, EM-158  
 CAN COMMUNICATION CIRCUIT LAN-56, LAN-72,  
 LAN-89, LAN-105, LAN-122  
 CAN SYSTEM ..... LAN-33  
 CARGO LAMP ..... INL-68  
 CARRIER COVER ..... DLN-41

CENTER CONSOLE ASSEMBLY..... IP-25, IP-26  
 CHARGING SYSTEM .....CHG-6, CHG-22  
 CHARGING SYSTEM PRELIMINARY INSPECTION  
 CHG-16  
 CHASSIS AND BODY MAINTENANCE .....MA-41  
 CLUSTER LID A .....IP-21  
 CLUSTER LID C .....IP-22  
 COIL SPRING AND SHOCK ABSORBER..FSU-21  
 COLLISION DIAGNOSIS ..... SR-5  
 COMBINATION AND LIGHTING SWITCH INPUT  
 CIRCUIT .....BCS-56  
 COMBINATION AND LIGHTING SWITCH OUTPUT  
 CIRCUIT .....BCS-58  
 COMBINATION AND LIGHTING SWITCH SYSTEM  
 SYMPTOMS.....BCS-60  
 COMBINATION METER ..... MWI-20, MWI-68  
 COMBINATION SWITCH..... EXL-127  
 COMPASS .....MWI-43  
 COMPRESSION PRESSURE ..... EM-22, EM-163  
 COMPRESSOR .....HA-10, HA-47  
 CONDENSER ..... HA-67  
 CONTROL CABLE ..... TM-165  
 CONTROL UNIT .....HAC-107, HAC-211  
 CONTROL VALVE WITH TCM..... TM-171  
 COOLER PIPE AND HOSE ..... HA-56  
 COOLING FAN..... EC-424, EC-873  
 COOLING SYSTEM..... CO-7, CO-39  
 CORROSION PROTECTION .. BRM-16, BRM-115,  
 BRM-212  
 COWL TOP ..... EXT-30  
 CRASH ZONE SENSOR ..... SR-27  
 CYLINDER HEAD ..... EM-91, EM-217

**D**

DAYTIME RUNNING LIGHT SYSTEM ..... EXL-38  
 DEFOGGER.....DEF-16  
 DEFOGGER SYSTEM SYMPTOMS .....DEF-37  
 DIAGNOSIS AND REPAIR WORK FLOW BRC-52,  
 PWO-32, SRC-38, WT-23  
 DIAGNOSIS SENSOR UNIT..... SR-33, SRC-16  
 DIAGNOSIS SYSTEM (AIR BAG) ..... SRC-13  
 DIAGNOSIS SYSTEM (AUDIO UNIT) ..... AV-38  
 DIAGNOSIS SYSTEM (AV CONTROL UNIT)AV-96  
 DIAGNOSIS SYSTEM (BCM)..... BCS-16, DEF-9,  
 DLK-15, EXL-14, INL-11, PWC-9, SEC-10,  
 WCS-13, WW-8  
 DIAGNOSIS SYSTEM (BLUETOOTH CONTROL  
 UNIT) ..... AV-40  
 DIAGNOSIS SYSTEM (COMBINATION METER) ..  
 MWI-16, WCS-9  
 DIAGNOSIS SYSTEM (ECM).....EC-57, EC-508  
 DIAGNOSIS SYSTEM (HVAC) ..HAC-26, HAC-138  
 DIAGNOSIS SYSTEM (IPDM E/R)DEF-11, EXL-19,  
 PCS-8, SEC-13, WW-10  
 DIAGNOSIS SYSTEM (LOW TIRE PRESSURE  
 WARNING CONTROL UNIT)..... WT-9

DIAGNOSIS SYSTEM (SONAR CONTROL UNIT)  
 SN-8  
 DIAGNOSIS SYSTEM (TCM) ..... TM-39  
 DIAGNOSIS SYSTEM [ABS ACTUATOR AND  
 ELECTRIC UNIT (CONTROL UNIT)]... BRC-32  
 DIFFERENTIAL GEAR OIL.....DLN-36  
 DIRECT CLUTCH .....TM-256  
 DLC BRANCH LINE CIRCUIT ....LAN-49, LAN-65,  
 LAN-82, LAN-98, LAN-115  
 DOOR.....DLK-97  
 DOOR LOCK ACTUATOR .....DLK-58  
 DOOR LOCK AND UNLOCK SWITCH.....DLK-53  
 DOOR MIRROR ..... MIR-4, MIR-21  
 DOOR MIRROR DEFOGGER LH.....DEF-33  
 DOOR MIRROR DEFOGGER RH .....DEF-35  
 DOOR MIRROR REMOTE CONTROL SWITCH....  
 MIR-13, MIR-23  
 DOOR MOTOR .....HAC-114, HAC-216  
 DOOR MOTOR COMMUNICATION CIRCUIT.....  
 HAC-80, HAC-182  
 DOOR OUTSIDE MOLDING.....EXT-37  
 DOOR SWITCH .....DLK-50, DLK-108, PWC-31  
 DRIVE BELTS .....EM-13, EM-153  
 DRIVER AIR BAG MODULE ..... SR-11  
 DRIVER SIDE DOOR MIRROR DEFOGGER DOES  
 NOT OPERATE.....DEF-41  
 DRIVER SIDE POWER WINDOW ALONE DOES  
 NOT OPERATE.....PWC-37  
 DTC B2205 VEHICLE SPEED CIRCUIT ... MWI-50  
 DUCTS AND GRILLES ..... VTL-5

**E**

ECM BRANCH LINE CIRCUIT.....LAN-44, LAN-61,  
 LAN-77, LAN-94, LAN-110  
 ECM, IPDM E/R, BCM HAC-34, HAC-144, SEC-15  
 ELECTRICAL LEAK DETECTOR ..... HA-44  
 ELECTRICAL LOAD SIGNAL .....EC-426, EC-875  
 ELECTRICAL UNITS LOCATION .....PG-4  
 ENCODER CIRCUIT ..... PWC-29  
 ENGINE ASSEMBLY .....EM-102, EM-227  
 ENGINE CONTROL SYSTEM .....EC-108, EC-558  
 ENGINE CONTROL SYSTEM SYMPTOMSEC-452,  
 EC-894  
 ENGINE COOLANT ..... CO-11, CO-43  
 ENGINE COOLING FAN .....CO-21, CO-52  
 ENGINE MAINTENANCE (VK56DE) ..... MA-30  
 ENGINE MAINTENANCE (VQ40DE)..... MA-20  
 ENGINE OIL ..... LU-8, LU-25  
 ENGINE ROOM COVER..... EM-164  
 ENGINE UNIT .....EM-105, EM-230  
 EVAP CANISTER.....FL-13  
 EVAP CANISTER FILTER.....FL-16  
 EVAP CANISTER VENT CONTROL VALVE..FL-15  
 EVAP CONTROL SYSTEM PRESSURE SENSOR  
 FL-17  
 EVAP LEAK CHECK .....EC-459, EC-901

EVAPORATOR .....	HA-70
EXCESSIVE ABS FUNCTION OPERATION FREQUENCY .....	BRC-133
EXHAUST MANIFOLD AND THREE WAY CATALYST .....	EM-30, EM-170
EXHAUST SYSTEM .....	EX-4, EX-5
EXPANSION VALVE .....	HA-72
EXTERIOR LIGHTING SYSTEM SYMPTOMS .....	EXL-111

## F

FENDER PROTECTOR .....	EXT-33
FILAMENT .....	DEF-44
FLOOR TRIM .....	INT-44
FLUID COOLER SYSTEM .....	TM-184
FLUORESCENT LEAK DETECTOR .....	HA-42
FOURTH ROW SEAT BELT .....	SB-20
FOURTH ROW SEATS .....	SE-37, SE-72
FRONT AIR CONTROL .....	HAC-29, HAC-140
FRONT BLOWER MOTOR .....	HAC-87, HAC-189
FRONT BRAKE CALIPER .....	BR-45
FRONT BUMPER .....	EXT-15
FRONT CARRIER, INPUT CLUTCH, REAR INTERNAL GEAR .....	TM-244
FRONT COMBINATION LAMP .....	EXL-122
FRONT DISC BRAKE .....	BR-8, BR-18, BR-32
FRONT DOOR FINISHER .....	INT-15
FRONT DOOR GLASS AND REGULATOR .....	GW-15
FRONT DOOR LOCK .....	DLK-109
FRONT DOOR SPEAKER .....	AV-20, AV-28, AV-62, AV-79, AV-124, AV-147
FRONT FENDER .....	DLK-94
FRONT FOG LAMP .....	EXL-52, EXL-121, EXL-124
FRONT FOG LAMP CIRCUIT .....	EXL-103
FRONT FOG LIGHT SWITCH .....	EXL-126
FRONT GRILLE .....	EXT-28
FRONT OIL SEAL .....	DLN-38
FRONT PASSENGER AIR BAG MODULE .....	SR-16
FRONT PASSENGER SIDE POWER WINDOW ALONE DOES NOT OPERATE .....	PWC-38
FRONT ROOM/MAP LAMP .....	INL-62
FRONT SEAT .....	SE-22, SE-42
FRONT SEAT BELT .....	SB-8
FRONT SEAT BELT PRE-TENSIONER .....	SR-32
FRONT SIDE AIR BAG MODULE .....	SR-25
FRONT SUN GEAR, 3RD ONE-WAY CLUTCH .....	TM-242
FRONT SUSPENSION ASSEMBLY .....	FSU-6
FRONT TIMING CHAIN CASE .....	EM-52
FRONT UNDER COVER .....	EXT-38
FRONT WASHER NOZZLE .....	WW-46
FRONT WASHER TUBE .....	WW-45
FRONT WHEEL ALIGNMENT INSPECTION AND ADJUSTMENT .....	FSU-8
FRONT WIPER AND WASHER SWITCH .....	WW-48
FRONT WIPER AND WASHER SYSTEM .....	WW-15

FRONT WIPER ARM .....	WW-37
FRONT WIPER AUTO STOP SIGNAL CIRCUIT ... .....	WW-27
FRONT WIPER BLADE .....	WW-39
FRONT WIPER DOES NOT OPERATE .....	WW-34
FRONT WIPER DRIVE ASSEMBLY .....	WW-43
FRONT WIPER MOTOR GROUND CIRCUIT .....	WW-29
FRONT WIPER MOTOR HI CIRCUIT .....	WW-25
FRONT WIPER MOTOR LO CIRCUIT .....	WW-23
FUEL FILLER DOOR .....	DLK-124
FUEL INJECTOR .....	EC-428, EC-877
FUEL INJECTOR AND FUEL TUBE .....	EM-45, EM-181
FUEL LEVEL SENSOR SIGNAL CIRCUIT .....	MWI-54
FUEL LEVEL SENSOR UNIT, FUEL FILTER AND FUEL PUMP ASSEMBLY .....	FL-11, FL-18
FUEL PRESSURE .....	EC-596
FUEL PRESSURE CHECK .....	EC-146
FUEL PUMP .....	EC-430, EC-879
FUEL SYSTEM .....	FL-5
FUEL TANK .....	FL-6
FUSE BLOCK - JUNCTION BOX (J/B) .....	PG-81
FUSE INSPECTION .....	PG-90
FUSE, FUSIBLE LINK AND RELAY BOX .....	PG-82
FUSIBLE LINK INSPECTION .....	PG-94

## G

GENERAL MAINTENANCE .....	MA-5
GENERATOR .....	CHG-23, CHG-25
GPS ANTENNA .....	AV-156
GROUND .....	PG-33

## H

HARNESS .....	PG-46
HAZARD FUNCTION .....	DLK-71
HAZARD SWITCH .....	EXL-128
HEADLAMP .....	EXL-24, EXL-134
HEADLAMP (HI) CIRCUIT .....	EXL-93
HEADLAMP (LO) CIRCUIT .....	EXL-98
HEADLAMP AIMING ADJUSTMENT .....	EXL-118
HEADLAMP FUNCTION .....	DLK-73
HEADLINING .....	INT-47
HEATED SEAT .....	SE-12
HEATER & COOLING UNIT ASSEMBLY .....	HA-76
HEATER AND AIR CONDITIONING SYSTEM CONTROL SYMPTOMS .....	HAC-101, HAC-206
HEATER AND AIR CONDITIONING SYSTEM SYMPTOMS .....	HA-27
HEATER CORE .....	HA-74
HEATER PUMP .....	HA-65, HAC-199
HIGH AND LOW REVERSE CLUTCH .....	TM-254
HIGH-MOUNTED STOP LAMP .....	EXL-131
HIGH-PRESSURE SIDE IS TOO HIGH AND LOW- PRESSURE SIDE IS TOO LOW .....	HA-30



HIGH-PRESSURE SIDE IS TOO LOW AND LOW-PRESSURE SIDE IS TOO HIGH..... HA-31  
 HOOD ..... DLK-84  
 HORN..... HRN-4, HRN-7  
 HORN FUNCTION ..... DLK-69  
 HOW TO ERASE PERMANENT DTC ..... EC-154, EC-604  
 HOW TO FOLLOW TROUBLE DIAGNOSES .. GI-6  
 HOW TO READ WIRING DIAGRAMS ..... GI-9  
 HOW TO SELECT PISTON AND BEARINGEM-127, EM-250  
 HOW TO SET SRT CODE ..... EC-148, EC-598  
 HOW TO USE THIS MANUAL ..... GI-3  
 HOW TO USE THIS SECTION ..... LAN-5, LAN-21  
 HVAC BRANCH LINE CIRCUIT ... LAN-47, LAN-63, LAN-80, LAN-96, LAN-113  
 HYDRAULIC BOOSTER ASSEMBLYBR-17, BR-28, BR-42  
 HYDRAULIC LINE ..... ST-29

**I**

ID REGISTRATION ..... WT-26  
 ID REGISTRATION CANNOT BE COMPLETED.... WT-59  
 IDENTIFICATION INFORMATION ..... GI-22  
 IDLE AIR VOLUME LEARNING.... EC-139, EC-592  
 IDLE SPEED ..... EC-457, EC-899  
 IGNITION COIL ..... EM-40, EM-178  
 IGNITION SIGNAL ..... EC-433, EC-882  
 IGNITION TIMING ..... EC-458, EC-900  
 ILLUMINATION ..... INL-38  
 ILLUMINATION CONTROL SWITCH ..... INL-70  
 IN-CABIN MICROFILTER ..... VTL-4  
 IN-VEHICLE SENSOR..... HAC-110  
 INSIDE MIRROR..... MIR-10, MIR-20  
 INSTRUMENT LOWER PANEL LH ..... IP-18  
 INSTRUMENT LOWER PANEL RH AND GLOVE BOX ..... IP-24  
 INSTRUMENT PANEL ASSEMBLY ..... IP-14  
 INSUFFICIENT COOLING ..... HAC-103, HAC-207  
 INSUFFICIENT HEATING..... HAC-105, HAC-209  
 INTAKE MANIFOLD ..... EM-28, EM-166  
 INTAKE MANIFOLD COLLECTOR..... EM-25  
 INTAKE SENSOR ..... HAC-112, HAC-214  
 INTAKE VALVE TIMING CONTROL EM-51, EM-185  
 INTERIOR LIGHTING SYSTEM SYMPTOMSINL-61  
 INTERIOR ROOM LAMP CONTROL CIRCUIT ..... INL-56  
 INTERIOR ROOM LAMP CONTROL SYSTEM..... INL-15  
 INTERMITTENT INCIDENT ..... SRC-42  
 INVERTER UNIT ..... PWO-17, PWO-20, PWO-49  
 IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) .. PCS-12, PCS-19, PCS-25, PG-85

IPDM-E BRANCH LINE CIRCUIT LAN-55, LAN-71, LAN-88, LAN-104, LAN-121

**K**

KEY CYLINDER SWITCH ..... DLK-56, SEC-58  
 KEY INTERLOCK CABLE ..... TM-167  
 KEY SWITCH (BCM INPUT) ..... DLK-72  
 KEY SWITCH SIGNAL CIRCUIT ..... WCS-28  
 KEYFOB BATTERY AND FUNCTION ..... DLK-67  
 KNUCKLE ..... FSU-11

**L**

L TERMINAL CIRCUIT (OPEN) ..... CHG-18  
 L TERMINAL CIRCUIT (SHORT)..... CHG-20  
 LEAF SPRING ..... RSU-10  
 LICENSE LAMP FINISHER ..... EXT-39  
 LICENSE PLATE LAMP ..... EXL-129  
 LIFTING POINT..... GI-35  
 LIGHTING SWITCH ..... EXL-125  
 LINE PRESSURE TEST ..... TM-76  
 LIQUID TANK ..... HA-69  
 LOCATION OF PLASTIC PARTS..... BRM-99, BRM-196, BRM-301  
 LOW TIRE PRESSURE WARNING CONTROL UNIT ..... WT-12, WT-64  
 LOW TIRE PRESSURE WARNING LAMP BLINKS WT-57  
 LOW TIRE PRESSURE WARNING LAMP DOES NOT TURN OFF ..... WT-56  
 LOW TIRE PRESSURE WARNING LAMP DOES NOT TURN ON ..... WT-55  
 LOW-PRESSURE SIDE BECOMES NEGATIVE .... HA-34  
 LOW-PRESSURE SIDE SOMETIMES BECOMES NEGATIVE ..... HA-33  
 LOWER LINK ..... FSU-14  
 LUBRICATION SYSTEM..... LU-7, LU-23

**M**

M&A BRANCH LINE CIRCUIT ..... LAN-50, LAN-66, LAN-83, LAN-99, LAN-116  
 MAGNET CLUTCH ..... HAC-97, HAC-202  
 MAIN LINE BETWEEN ABS AND TCM CIRCUIT .. LAN-43, LAN-60, LAN-76, LAN-93, LAN-109  
 MAIN LINE BETWEEN DLC AND ABS CIRCUIT ... LAN-42, LAN-59, LAN-75, LAN-92, LAN-108  
 MAIN LINE BETWEEN HVAC AND DLC CIRCUIT LAN-41, LAN-58, LAN-74, LAN-91, LAN-107  
 MAIN POWER SUPPLY AND GROUND CIRCUIT. TM-130  
 MAIN POWER WINDOW AND DOOR LOCK/ UNLOCK SWITCH ..... PWC-11, PWC-42  
 MALFUNCTION AREA CHART ..... LAN-40  
 MALFUNCTION INDICATOR LAMPEC-438, EC-887

METER BUZZER CIRCUIT ..... WCS-25  
METER SYSTEM ..... MWI-24  
MICROPHONE ..... AV-84, AV-151  
MICROPHONE SIGNAL CIRCUIT .. AV-71, AV-132  
MID AUDIO SYSTEM ..... AV-48  
MID SUN GEAR, REAR SUN GEAR, HIGH AND  
LOW REVERSE CLUTCH HUB ..... TM-249  
MIXTURE RATIO SELF-LEARNING VALUE CLEAR  
EC-141, EC-594  
MUDGUARD ..... EXT-35  
MULTI AV SYSTEM ..... AV-138

## N

NATS ANTENNA AMP ..... SEC-65  
NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS  
SYMPTOMS ..... SEC-64  
NO OUTPUT FROM AC 120 V OUTLET .. PWO-46  
NOISE ..... HA-35  
NOISE VIBRATION AND HARSHNESS (NVH)  
TROUBLESHOOTING ..... RSU-4  
NOISE, VIBRATION AND HARSHNESS (NVH)  
TROUBLESHOOTING ... BR-7, DLN-34, EM-11  
NONE OF THE POWER WINDOWS CAN BE  
OPERATED USING ANY SWITCH ..... PWC-36  
NORMAL OPERATING CONDITION AV-26, AV-76,  
AV-141, BCS-61, BRC-139, EC-456, EC-898,  
MWI-67, PWO-48, WW-36  
NVIS ..... SEC-29

## O

OIL ..... HA-23, HA-39  
OIL COOLER ..... LU-12, LU-29  
OIL FILTER ..... LU-11, LU-28  
OIL PAN ..... TM-168  
OIL PAN AND OIL STRAINER ..... EM-34, EM-173  
OIL PRESSURE SWITCH SIGNAL CIRCUIT .....  
MWI-56  
OIL PUMP ... LU-14, LU-16, LU-31, LU-33, TM-239  
OIL SEAL ..... EM-87, EM-212  
ON BOARD DIAGNOSTIC (OBD) SYSTEM EC-56,  
EC-507, TM-37  
ON BOARD REFUELING VAPOR RECOVERY  
(ORVR) ..... EC-439, EC-888  
OPERATION .... EC-54, EC-505, HAC-23, HAC-134  
OPERATION INSPECTION ..... HAC-51, HAC-162  
OVERHEATING CAUSE ANALYSIS .. CO-9, CO-41

## P

P0011, P0021 IVT CONTROL ..... EC-174, EC-624  
P0030, P0031, P0032, P0036, P0051, P0052 A/F  
SENSOR 1 HEATER ..... EC-178, EC-630  
P0037, P0038, P0057, P0058 HO2S2 HEATER .....  
EC-181, EC-633

P0075, P0081 IVT CONTROL SOLENOID VALVE .  
EC-184, EC-636  
P0101 MAF SENSOR ..... EC-186, EC-639  
P0102, P0103 MAF SENSOR ..... EC-192, EC-645  
P0111 IAT SENSOR ..... EC-197, EC-650  
P0112, P0113 IAT SENSOR ..... EC-199, EC-652  
P0116 ECT SENSOR ..... EC-201, EC-654  
P0117, P0118 ECT SENSOR ..... EC-203, EC-656  
P0122, P0123 TP SENSOR ..... EC-205, EC-658  
P0125 ECT SENSOR ..... EC-209, EC-662  
P0127 IAT SENSOR ..... EC-211, EC-664  
P0128 THERMOSTAT FUNCTION EC-213, EC-666  
P0130, P0150 A/F SENSOR 1 ..... EC-216, EC-669  
P0131, P0151 A/F SENSOR 1 ..... EC-220, EC-673  
P0132, P0152 A/F SENSOR 1 ..... EC-223, EC-676  
P0137, P0157 HO2S2 ..... EC-226, EC-679  
P0138, P0158 HO2S2 ..... EC-232, EC-685  
P0139, P0159 HO2S2 ..... EC-240, EC-693  
P014C, P014D, P014E, P014F, P015A, P015B,  
P015C, P015D, A/F SENSOR 1 EC-247, EC-699  
P0171, P0174 FUEL INJECTION SYSTEM  
FUNCTION ..... EC-253, EC-705  
P0172, P0175 FUEL INJECTION SYSTEM  
FUNCTION ..... EC-257, EC-709  
P0181 FTT SENSOR ..... EC-261, EC-713  
P0182, P0183 FTT SENSOR ..... EC-265, EC-717  
P0222, P0223 TP SENSOR ..... EC-268, EC-720  
P0300, P0301, P0302, P0303, P0304, P0305,  
P0306 MISFIRE ..... EC-272  
P0300, P0301, P0302, P0303, P0304, P0305,  
P0306, P0307, P0308 MISFIRE ..... EC-723  
P0327, P0328, P0332, P0333 KS EC-278, EC-729  
P0335 CKP SENSOR (POS) ..... EC-280, EC-731  
P0340 CMP SENSOR (PHASE) ..... EC-734  
P0340, P0345 CMP SENSOR (PHASE) .... EC-283  
P0420, P0430 THREE WAY CATALYST FUNCTION  
EC-286, EC-737  
P0441 EVAP CONTROL SYSTEM EC-291, EC-742  
P0443 EVAP CANISTER PURGE VOLUME  
CONTROL SOLENOID VALVE EC-296, EC-748  
P0444, P0445 EVAP CANISTER PURGE VOLUME  
CONTROL SOLENOID VALVE EC-301, EC-753  
P0447 EVAP CANISTER VENT CONTROL VALVE  
EC-304, EC-756  
P0448 EVAP CANISTER VENT CONTROL VALVE  
EC-308, EC-760  
P0451 EVAP CONTROL SYSTEM PRESSURE  
SENSOR ..... EC-312, EC-764  
P0452 EVAP CONTROL SYSTEM PRESSURE  
SENSOR ..... EC-315, EC-768  
P0453 EVAP CONTROL SYSTEM PRESSURE  
SENSOR ..... EC-318, EC-771  
P0455 EVAP CONTROL SYSTEM ..... EC-322  
P0456 EVAP CONTROL SYSTEM EC-328, EC-775  
P0460 FUEL LEVEL SENSOR ..... EC-334, EC-781  
P0461 FUEL LEVEL SENSOR ..... EC-335, EC-782

P0462, P0463 FUEL LEVEL SENSOR.....	EC-337, EC-784	P1715 INPUT SPEED SENSOR (PRIMARY SPEED SENSOR).....	EC-381, EC-831
P0500 VSS.....	EC-338, EC-785	P1721 VEHICLE SPEED SIGNAL .....	TM-114
P0506 ISC SYSTEM.....	EC-340, EC-787	P1730 INTERLOCK .....	TM-116
P0507 ISC SYSTEM.....	EC-342, EC-789	P1731 1ST ENGINE BRAKING .....	TM-118
P050A, P050E COLD START CONTROL..	EC-344, EC-791	P1752 INPUT CLUTCH SOLENOID .....	TM-119
P0550 PSP SENSOR .....	EC-346, EC-793	P1757 FRONT BRAKE SOLENOID.....	TM-120
P0603 ECM.....	EC-349, EC-796	P1762 DIRECT CLUTCH SOLENOID .....	TM-121
P0604 ECM.....	EC-351, EC-797	P1767 HIGH AND LOW REVERSE CLUTCH SOLENOID.....	TM-123
P0605 ECM.....	EC-352, EC-798	P1772 LOW COAST BRAKE SOLENOID...	TM-124
P0606 ECM.....	EC-353, EC-799	P1774 LOW COAST BRAKE SOLENOID...	TM-125
P0607 ECM.....	EC-354, EC-800	P1800 VIAS CONTROL SOLENOID VALVE 1.....	EC-382
P060A ECM .....	EC-355, EC-801	P1805 BRAKE SWITCH.....	EC-385, EC-832
P060B ECM .....	EC-356, EC-802	P1815 M-MODE SWITCH.....	TM-127
P0615 STARTER RELAY .....	TM-85	P2096, P2097, P2098, P2099 A/F SENSOR 1 .....	EC-387, EC-834
P0643 SENSOR POWER SUPPLY.....	EC-357, EC-803	P2100, P2103 THROTTLE CONTROL MOTOR RELAY.....	EC-391, EC-838
P0700 TRANSMISSION CONTROL.....	TM-87	P2101 ELECTRIC THROTTLE CONTROL FUNCTION.....	EC-393, EC-841
P0705 TRANSMISSION RANGE SWITCH .....	ATM-88	P2118 THROTTLE CONTROL MOTOR ....	EC-396, EC-844
P0717 INPUT SPEED SENSOR A .....	TM-90	P2119 ELECTRIC THROTTLE CONTROL ACTUATOR.....	EC-398, EC-846
P0720 OUTPUT SPEED SENSOR.....	TM-92	P2122, P2123 APP SENSOR .....	EC-400, EC-848
P0725 ENGINE SPEED.....	TM-95	P2127, P2128 APP SENSOR .....	EC-403, EC-851
P0731 1GR INCORRECT RATIO .....	TM-97	P2135 TP SENSOR .....	EC-407, EC-855
P0732 2GR INCORRECT RATIO .....	TM-99	P2138 APP SENSOR.....	EC-411, EC-858
P0733 3GR INCORRECT RATIO .....	TM-101	P219A, P219B AIR FUEL RATIO ..	EC-416, EC-863
P0734 4GR INCORRECT RATIO .....	TM-103	PARKING BRAKE CONTROL.....	PB-6
P0735 5GR INCORRECT RATIO .....	TM-105	PARKING BRAKE SHOE .....	PB-8
P0740 TORQUE CONVERTER.....	TM-107	PARKING BRAKE SWITCH .....	BRC-124
P0744 TORQUE CONVERTER.....	TM-108	PARKING BRAKE SWITCH SIGNAL CIRCUIT .....	MWI-58
P0745 PRESSURE CONTROL SOLENOID A .....	TM-109	PARKING BRAKE SYSTEM .....	PB-4
P0850 PNP SWITCH .....	EC-359, EC-805	PARKING LAMP CIRCUIT .....	EXL-105
P1140, P1145 IVT CONTROL POSITION SENSOR	EC-808	PARKING, LICENSE PLATE AND TAIL LAMPS ARE NOT TURNED ON .....	EXL-115
P1148, P1168 CLOSED LOOP CONTROL	EC-362, EC-812	PARKING, LICENSE PLATE AND TAIL LAMPS SYSTEM .....	EXL-63
P1211 TCS CONTROL UNIT .....	EC-363, EC-813	PASSENGER SIDE DOOR MIRROR DEFOGGER DOES NOT OPERATE. ....	DEF-42
P1212 TCS COMMUNICATION LINE.....	EC-364, EC-814	PEDAL VIBRATION OR ABS OPERATION SOUND OCCURS.....	BRC-137
P1217 ENGINE OVER TEMPERATURE...	EC-365, EC-815	PERFORMANCE TEST .....	HA-25
P1225 TP SENSOR .....	EC-369, EC-819	PERIODIC MAINTENANCE.....	MA-9
P1226 TP SENSOR.....	EC-370, EC-820	PERSONAL LAMP .....	INL-64
P1564 ASCD STEERING SWITCH.....	EC-371, EC-821	POSITIVE CRANKCASE VENTILATION ...	EC-461, EC-903
P1572 ASCD BRAKE SWITCH ....	EC-374, EC-824	POWER DOOR LOCK SYSTEM .....	DLK-20
P1574 ASCD VEHICLE SPEED SENSOR	EC-379, EC-829	POWER DOOR LOCK SYSTEM SYMPTOMS.....	DLK-74
P1610 LOCK MODE .....	SEC-50	POWER SEAT FOR DRIVER SIDE .....	SE-8
P1611 ID DISCORD, IMMU-ECM .....	SEC-51	POWER SOCKET .....	PWO-6, PWO-10
P1612 CHAIN OF ECM-IMMU .....	SEC-53		
P1614 CHAIN OF IMMU-KEY.....	SEC-54		
P1615 DIFFERENCE OF KEY .....	SEC-56		
P1705 TP SENSOR .....	TM-110		
P1710 TRANSMISSION FLUID TEMPERATURE SENSOR.....	TM-111		

POWER STEERING FLUID ..... ST-6  
 POWER STEERING OIL PUMP ST-9, ST-25, ST-36  
 POWER SUPPLY ROUTING CIRCUIT ..... PG-13  
 POWER WINDOW AND DOOR LOCK/UNLOCK  
 SWITCH RH ..... PWC-12, PWC-43  
 POWER WINDOW CONTROL SYSTEM  
 SYMPTOMS ..... PWC-35  
 POWER WINDOW LOCK SWITCH ..... PWC-34  
 POWER WINDOW LOCK SWITCH DOES NOT  
 FUNCTION ..... PWC-41  
 POWER WINDOW MOTOR ..... PWC-26  
 POWER WINDOW RETAINED POWER  
 OPERATION DOES NOT OPERATE  
 PROPERLY ..... PWC-40  
 POWER WINDOW SYSTEM ..... PWC-14  
 PRE-INSPECTION FOR DIAGNOSTIC .... SEC-39  
 PRECAUTION ..... SN-2, WW-3  
 PRECAUTIONS ACC-2, AV-5, AV-32, AV-87, BCS-3,  
 BR-3, BRC-4, BRM-4, BRM-103, BRM-200,  
 CCS-2, CHG-2, CO-3, CO-35, DEF-3, DLK-4,  
 DLN-3, DLN-16, DLN-29, EC-14, EC-464, EM-4,  
 EM-143, EX-2, EXL-4, EXT-2, FAX-2, FL-2,  
 FSU-2, GI-30, GW-2, HA-3, HAC-6, HAC-117,  
 HRN-2, INL-3, INT-3, IP-2, LAN-6, LAN-22,  
 LU-3, LU-19, MA-3, MIR-2, MWI-4, PB-2,  
 PCS-2, PG-2, PWC-3, PWO-3, PWO-11, RAX-2,  
 RSU-2, SB-2, SE-2, SEC-3, SR-2, SRC-4, ST-2,  
 STR-2, TM-5, VTL-2, WCS-3, WT-3  
 PREMIUM AUDIO SYSTEM ..... AV-103  
 PROPELLER SHAFT ASSEMBLY .. DLN-6, DLN-7,  
 DLN-9, DLN-19, DLN-20, DLN-22

## R

RADIATOR ..... CO-17, CO-18, CO-48, CO-49  
 RADIATOR CORE SUPPORT ..... DLK-92  
 REAR AIR MIX DOOR MOTOR HAC-83, HAC-185  
 REAR BLOWER MOTOR ..... HAC-92, HAC-194  
 REAR BRAKE CALIPER ..... BR-46  
 REAR BUMPER ..... EXT-23  
 REAR COMBINATION LAMP ..... EXL-132  
 REAR DISC BRAKE ..... BR-9, BR-20, BR-37  
 REAR FINAL DRIVE ..... DLN-35, DLN-43, DLN-45  
 REAR MODE DOOR MOTOR... HAC-85, HAC-187  
 REAR OIL SEAL ..... TM-179  
 REAR SEAT RAILS ..... SE-41  
 REAR SPEAKER ..... AV-22, AV-66, AV-128  
 REAR SPEAKERS ..... AV-29, AV-81, AV-149  
 REAR SUSPENSION ASSEMBLY .. RSU-5, RSU-6  
 REAR TIMING CHAIN CASE ..... EM-72  
 REAR VIEW CAMERA ..... AV-157  
 REAR VIEW CAMERA IMAGE SIGNAL CIRCUIT..  
 AV-134  
 REAR WINDOW DEFOGGER AND DOOR  
 MIRROR DEFOGGER DO NOT OPERATE. ....  
 DEF-38

REAR WINDOW DEFOGGER DOES NOT  
 OPERATE BUT BOTH OF DOOR MIRROR  
 DEFOGGER OPERATE. .... DEF-39  
 REAR WINDOW DEFOGGER POWER SUPPLY  
 AND GROUND CIRCUIT ..... DEF-31  
 REAR WINDOW DEFOGGER RELAY ..... DEF-30  
 REAR WINDOW DEFOGGER SWITCH .... DEF-28  
 REAR WINDOW DEFOGGER SWITCH DOES NOT  
 LIGHT, BUT REAR WINDOW DEFOGGER  
 OPERATES ..... DEF-43  
 RECOMMENDED CHEMICAL PRODUCTS AND  
 SEALANTS ..... GI-21  
 RECOMMENDED FLUIDS AND LUBRICANTS .....  
 MA-15  
 REFRIGERANT ..... HA-19  
 REFRIGERANT PRESSURE SENSOR .... EC-444,  
 EC-892, HAC-113, HAC-215  
 REFRIGERATION SYSTEM ..... HA-37  
 REMOTE KEYLESS ENTRY RECEIVER . DLK-64,  
 SEC-66  
 REMOTE KEYLESS ENTRY SYSTEM ..... DLK-33  
 REMOTE KEYLESS ENTRY SYSTEM SYMPTOMS  
 DLK-76  
 REPAIRING MATERIAL BRM-7, BRM-106, BRM-203  
 REPLACEMENT OPERATIONS BRM-24, BRM-123,  
 BRM-220  
 ROAD TEST ..... TM-78  
 ROCKER COVER ..... EM-41, EM-179

## S

S CONNECTOR CIRCUIT ..... STR-24  
 S TERMINAL CIRCUIT ..... CHG-21  
 SATELLITE RADIO ANTENNA ..... AV-155  
 SEAT BELT BUCKLE SWITCH SIGNAL CIRCUIT..  
 WCS-26  
 SEAT BELT WARNING SYSTEM ..... SRC-106  
 SECOND ROW SEAT BELT ..... SB-12  
 SECOND ROW SEATS ..... SE-31, SE-56  
 SENSOR POWER SUPPLY2 CIRCUIT .... EC-446  
 SENSOR ROTOR ..... BRC-142  
 SERVICE DATA AND SPECIFICATIONS (SDS) .....  
 ACC-5, BR-47, CO-34, CO-60, DLN-15, DLN-28,  
 DLN-58, EC-463, EC-905, EM-132, EM-257,  
 EXL-135, FAX-8, FL-19, FSU-24, HA-79, LU-18,  
 LU-35, PB-12, PG-98, PWO-52, RSU-12, ST-38,  
 TM-258, WT-69, WW-49  
 SERVICE INFORMATION FOR ELECTRICAL  
 INCIDENT ..... GI-39  
 SHIFT POSITION INDICATOR CIRCUIT ... TM-137  
 SHIPPING MODE CANCEL OPERATION . BCS-50  
 SHOCK ABSORBER ..... RSU-7  
 SIDE AIR BAG (SATELLITE) SENSOR ..... SR-29  
 SIDE CURTAIN AIR BAG MODULE ..... SR-18  
 SIDE WINDOW GLASS ..... GW-21  
 SLIDE DOOR FINISHER ..... INT-19  
 SLIDE DOOR GLASS ..... GW-19



SLIDE DOOR GUIDE RAIL..... DLK-118  
 SLIDE DOOR LOCK..... DLK-112  
 SLIP INDICATOR LAMP..... BRC-131  
 SONAR CONTROL UNIT..... SN-11, SN-38  
 SONAR SENSOR..... SN-35  
 SONAR SENSOR CIRCUIT INSPECTION... SN-29  
 SONAR SYSTEM..... SN-15  
 SONAR SYSTEM OFF SWITCH..... SN-39  
 SONAR SYSTEM OFF SWITCH CIRCUIT  
 INSPECTION..... SN-32  
 SONAR SYSTEM SYMPTOMS..... SN-34  
 SPARK PLUG..... EM-16, EM-156  
 SPIRAL CABLE..... SR-14  
 SQUEAK AND RATTLE TROUBLE DIAGNOSES..  
 DLK-78, EXT-9, GW-5, INT-9, IP-8, MIR-14,  
 SE-16  
 SRS AIR BAG CONTROL SYSTEM..... SRC-22  
 SRS AIR BAG WARNING LAMP DOES NOT TURN  
 OFF..... SRC-105  
 SRS AIR BAG WARNING LAMP DOES NOT TURN  
 ON..... SRC-104  
 STABILIZER BAR..... FSU-18, RSU-8  
 STALL TEST..... TM-74  
 STARTER MOTOR..... STR-27, STR-30  
 STARTING SYSTEM..... STR-9, STR-26  
 STEERING ANGLE SENSOR..... BRC-145  
 STEERING COLUMN..... ST-12, ST-33  
 STEERING COLUMN COVERS..... IP-20  
 STEERING GEAR AND LINKAGE..... ST-16  
 STEERING LOCK UNIT..... DLK-125  
 STEERING SWITCH..... AV-68, AV-130  
 STEERING WHEEL..... ST-8, ST-10  
 STEERING WHEEL AUDIO CONTROL SWITCH..  
 AV-82, AV-150  
 STEP LAMP..... INL-66  
 STEP LAMP CIRCUIT..... INL-60  
 STOP LAMP..... EXL-71  
 STRG BRANCH LINE CIRCUIT .. LAN-51, LAN-67,  
 LAN-84, LAN-100, LAN-117  
 STRUCTURE AND OPERATION .. EC-35, EC-486,  
 TM-16  
 SUNLOAD SENSOR..... HAC-109  
 SYSTEM SETTING..... HAC-54, HAC-165  
 SYSTEM SYMPTOM..... TM-139

**T**

TCM..... TM-45  
 TCM BRANCH LINE CIRCUIT..... LAN-54, LAN-70,  
 LAN-87, LAN-103, LAN-120  
 THE AMBIENT TEMPERATURE DISPLAY IS  
 INCORRECT..... MWI-66  
 THE BRAKING DISTANCE IS LONG..... BRC-135  
 THE DOOR OPEN WARNING CONTINUES  
 DISPLAYING, OR DOES NOT DISPLAY MWI-65  
 THE FUEL GAUGE POINTER DOES NOT MOVE  
 MWI-59

THE FUEL GAUGE POINTER DOES NOT MOVE  
 TO.....  
 THE KEY WARNING DOES NOT SOUND WCS-32  
 THE LIGHT REMINDER WARNING DOES NOT  
 SOUND..... WCS-30  
 THE LOW WASHER FLUID WARNING  
 CONTINUES DISPLAYING, or DOES NOT  
 DISPLAY..... MWI-64  
 THE OIL PRESSURE WARNING LAMP DOES NOT  
 TURN OFF..... MWI-62  
 THE OIL PRESSURE WARNING LAMP DOES NOT  
 TURN ON..... MWI-61  
 THE PARKING BRAKE RELEASE WARNING  
 CONTINUES DISPLAYING, OR DOES NOT  
 DISPLAY..... MWI-63  
 THE PARKING BRAKE RELEASE WARNING  
 CONTINUES SOUNDING, OR DOES NOT  
 SOUND..... WCS-33  
 THE SEAT BELT WARNING CONTINUES  
 SOUNDING, OR DOES NOT SOUND WCS-31  
 THERMOSTAT AND WATER PIPING..... CO-56  
 THIRD ROW SEAT BELT..... SB-16  
 THIRD ROW SEATS..... SE-34, SE-64  
 THROTTLE VALVE CLOSED POSITION  
 LEARNING..... EC-138, EC-591  
 TIGHTENING TORQUE OF STANDARD BOLTS...  
 GI-18  
 TIMING CHAIN..... EM-61, EM-193  
 TIMING CHAIN COVER..... EM-188  
 TIMING CHAIN TENSIONER..... EM-69  
 TIRE PRESSURE MONITORING SYSTEM WT-17  
 TIRE PRESSURE RECEIVER..... WT-67  
 TOW MODE SWITCH..... TM-135  
 TOW TRUCK TOWING..... GI-36  
 TPMS BRANCH LINE CIRCUIT... LAN-52, LAN-68,  
 LAN-85, LAN-101, LAN-118  
 TPMS SYMPTOMS..... WT-54  
 TRAILER TOW..... EXL-81  
 TRANSIT MODE CANCEL OPERATION... BCS-51  
 TRANSMISSION ASSEMBLY..... TM-190, TM-195  
 TRANSMITTER..... WT-65  
 TROUBLE DIAGNOSIS..... LAN-9  
 TROUBLE DIAGNOSIS - SPECIFICATION VALUE  
 EC-160, EC-610  
 TURN SIGNAL AND HAZARD WARNING LAMP  
 SYSTEM..... EXL-57  
 TURN SIGNAL LAMP CIRCUIT..... EXL-108  
 TWEETER..... AV-64, AV-80, AV-126, AV-148

**U**

U0100 LOST COMMUNICATION (ECM A)... TM-83  
 U0101 CAN COMM CIRCUIT..... EC-172, EC-622  
 U1000 CAN COMM..... BCS-52, DLK-47, SEC-41  
 U1000 CAN COMM CIRCUIT .. BRC-120, HAC-56,  
 HAC-166, MWI-48, PCS-23, SRC-43, TM-84,  
 WT-51

---

U1001 CAN COMM CIRCUIT .....	EC-173, EC-623
U1010 CONTROL UNIT (CAN) ...	BCS-53, DLK-48, HAC-57, HAC-167, MWI-49, SEC-42, SRC-44, WT-52
UNEXPECTED PEDAL REACTION.....	BRC-134
UPPER BALL JOINT AND LOWER BALL JOINT ...	FSU-13
UPPER LINK .....	FSU-16
USB CONNECTOR .....	AV-136
USB CONNECTOR AND AUX JACK .....	AV-154

**V**

---

VARIABLE INDUCTION AIR CONTROL SYSTEM (VIAS).....	EC-448
VDC OFF INDICATOR LAMP.....	BRC-130
VDC OFF SWITCH.....	BRC-126, BRC-146
VDC/TCS/ABS.....	BRC-132
VEHICLE JERKS DURING VDC/TCS/ABS CONTROL .....	BRC-138
VEHICLE SECURITY INDICATOR.....	SEC-61
VEHICLE SECURITY SYSTEM .....	SEC-16
VEHICLE SECURITY SYSTEM SYMPTOMS .....	SEC-63
VIN REGISTRATION.....	EC-136, EC-595

**W**

---

WARNING CHIME SYSTEM .....	WCS-16
WASHER LEVEL SWITCH SIGNAL CIRCUIT .....	MWI-57
WASHER MOTOR CIRCUIT .....	WW-30
WASHER SWITCH.....	WW-31
WASHER TANK.....	WW-47
WATER CONTROL VALVE .....	HA-66
WATER INLET AND THERMOSTAT ASSEMBLY ...	CO-30
WATER OUTLET AND WATER PIPING .....	CO-32
WATER PUMP .....	CO-24, CO-54
WATER VALVE CIRCUIT .....	HAC-95, HAC-197
WHEEL.....	WT-61
WHEEL AND TIRE ASSEMBLY .....	WT-62
WHEEL HUB .....	FAX-5, FAX-6
WHEEL SENSOR.....	BRC-140
WINDSHIELD GLASS .....	GW-11
WIPER AND WASHER FUSE.....	WW-22
WIPER AND WASHER SYSTEM SYMPTOMS .....	WW-32

**Y**

---

YAW RATE/SIDE/DECEL G SENSOR .....	BRC-144
------------------------------------	---------











