



## Clutch Damper

### REMOVAL & INSTALLATION

1. Loosen the union nuts and disconnect the two hydraulic lines at the damper.
2. Remove the mounting bolts and then remove the clutch damper from the firewall.

#### **To install:**

3. Install the damper and tighten the bolts to 6–8 ft. lbs. (8–11 Nm).
4. Reconnect the hydraulic lines being careful not to damage the union nuts.
5. Bleed the system.

