




Clutch Master Cylinder

REMOVAL & INSTALLATION

NOTE: Replace the clutch master cylinder and slave cylinder as a set for added reliability.

1. Disconnect the master cylinder pushrod from the clutch pedal.

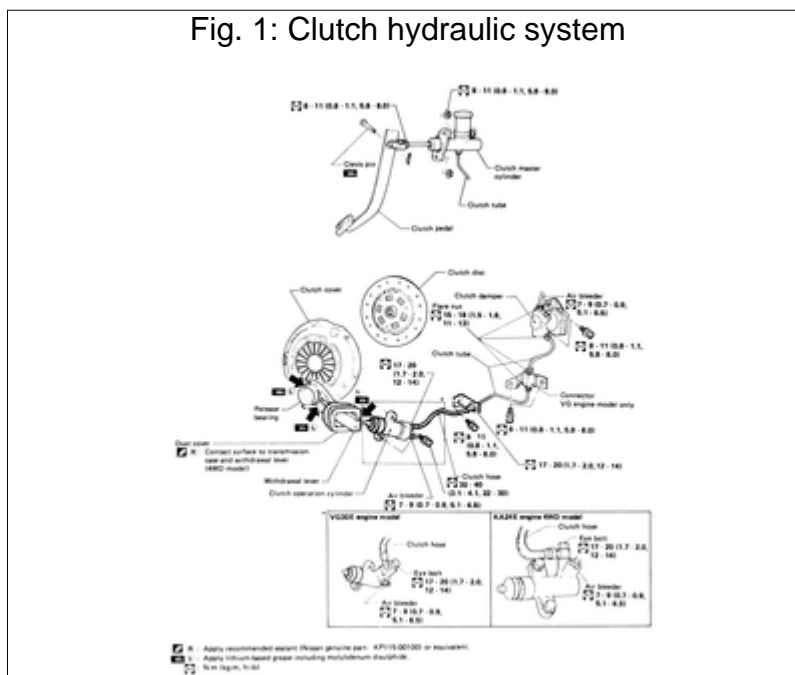

2. Remove the hydraulic line from the master cylinder being careful not to damage the compression fitting.
3. Remove the two bolts holding the clutch master cylinder to the engine compartment.

WARNING

Brake fluid dissolves paint. Do not allow it to drip onto the body when removing the master cylinder. If any does get on the paint, wipe it off immediately.

To install:

4. Install the master cylinder and tighten the mounting bolts to 6–8 ft. lbs. (8–11 Nm). Partially tighten the hydraulic line and then tighten the cylinder mounting bolts.
5. Connect the pushrod to the clutch pedal.
6. Bleed the system and adjust the clutch pedal.

