

# ALPHABETICAL INDEX

## SECTION **IDX**

GE

MA

EM

LC

EF &  
EC

FE

CL

MT

AT

TF

PD

FA

RA

BR

ST

BF

HA

EL

**IDX**

## ALPHABETICAL INDEX

### A

ABS actuator.....	BR-30
ABS circuit diagram.....	BR-37
ABS component parts and connector locations.....	BR-36
ABS control unit.....	BR-30
ABS hydraulic circuit.....	BR-28
ABS self-diagnosis.....	BR-35
ABS symptom chart.....	BR-33
ABS system components.....	BR-28
ABS trouble diagnoses.....	BR-31
ABS wheel sensors.....	BR-30
ABS wiring diagram.....	BR-29
A/C air flow.....	HA-9
A/C circuit diagram (auto A/C).....	HA-63
A/C circuit diagram (manual A/C).....	HA-40
A/C component layout.....	HA-8
A/C compressor clutch removal and installation.....	HA-24
A/C compressor mounting.....	HA-20
A/C compressor precaution.....	HA-5
A/C compressor special service tool.....	HA-11
A/C control operation (auto A/C).....	HA-7
A/C control operation (manual A/C).....	HA-7
A/C diagnostic work flow (auto A/C).....	HA-27
A/C diagnostic work flow (manual A/C).....	HA-27
A/C harness layout (auto A/C).....	HA-61
A/C harness layout (manual A/C).....	HA-39
A/C HFC134a (R134a) system identification.....	HA-2
A/C HFC134a (R134a) system introduction.....	HA-2
A/C HFC134a (R134a) system precaution.....	HA-3
A/C HFC134a (R134a) system service equipment precaution.....	HA-14
A/C HFC134a (R134a) system service procedure.....	HA-16
A/C HFC134a (R134a) system service tools.....	HA-12
A/C lubrication oil.....	HA-22
A/C operational check.....	HA-28
A/C performance chart.....	HA-30
A/C performance test diagnoses.....	HA-31
A/C push control.....	HA-95
A/C relay.....	HA-53
A/C switch (auto A/C).....	HA-93
A/C switch.....	HA-52
A/C symptom chart (auto A/C).....	HA-56
A/C symptom chart (manual A/C).....	HA-36
A/C system description (auto A/C).....	HA-95
A/C trouble diagnoses (auto A/C).....	HA-55
A/C trouble diagnoses (manual A/C).....	HA-36
A/C wiring diagram (auto A/C).....	HA-64
A/C wiring diagram (manual A/C).....	HA-42

Acceleration cut control (KA engine).....	EF&EC-165
Acceleration cut control (VG engine).....	EF&EC-22
Accelerator control system.....	FE-2
Accelerator wire adjustment.....	FE-2
Activated carbon canister (KA engine).....	EF&EC-157
Activated carbon canister inspection (VG engine).....	EF&EC-141
Air bleeding for brake system.....	BR-3
Air cleaner filter replacement (KA24E).....	MA-17
Air cleaner filter replacement (VG30E).....	MA-12
Air control cable adjustment.....	HA-54
Air mix door control linkage adjustment.....	HA-94
Alternator.....	EL-19
Ambient sensor.....	HA-100
Angular tightening application.....	EM-2
Anti-freeze coolant.....	MA-8
ASCD (automatic speed control device).....	EL-61
AT control unit.....	AT-68
AT fluid temperature sensor.....	AT-72
AT indicator lamp.....	EL-42
AT removal and installation.....	AT-112
AT self-diagnoses.....	AT-39
AT trouble diagnoses.....	AT-13
Audio.....	EL-57
Auto lock free running hub.....	FA-19
Automatic transmission fluid.....	MA-8
Automatic transmission fluid replacement.....	MA-21
Automatic transmission number.....	GI-19
Auxiliary air control (AAC) (VG engine).....	EF&EC-14

### B

Back door.....	BF-8
Back door window.....	BF-48
Back-up lamp.....	EL-30
Back-up lamp switch (MT) FS5R30A.....	MT-33
Back-up lamp switch (MT) FS5W71C.....	MT-10
Ball joint front axle.....	FA-45
Battery.....	EL-8
Baulk ring (MT) FS5R30A.....	MT-34
Baulk ring (MT) FS5W71C.....	MT-11
Belt inspection (drive belt) (KA24E).....	MA-15
Belt inspection (drive belt) (VG30E).....	MA-10
Blower motor.....	HA-52
Blower relay.....	HA-53
Blower resistor.....	HA-52
Body alignment.....	BF-58
Body mounting.....	BF-56

# ALPHABETICAL INDEX

Brake booster.....	BR-10
Brake fluid.....	MA-8
Brake fluid change.....	BR-3
Brake fluid level.....	MA-23
Brake fluid level and line check.....	BR-3
Brake hydraulic line.....	BR-4
Brake inspection.....	MA-23
Brake lines and cables inspection.....	MA-23
Brake master cylinder.....	BR-8
Brake pedal.....	BR-6

C

Cab body.....	BF-55
Camshaft inspection (KA engine).....	EM-64
Camshaft inspection (VG engine).....	EM-24
Camshaft position sensor (CMPS) (KA engine).....	EF&EC-152
Camshaft position sensor (CMPS) (VG engine).....	EF&EC-11
Camshaft position sensor inspection (KA engine).....	EF&EC-280
Camshaft position sensor inspection (VG engine).....	EF&EC-133
Cargo space.....	GI-20
Center bearing assembly (propeller shaft).....	PD-12
Center bearing disassembly (propeller shaft).....	PD-11
Charging system.....	EL-18
Check connector for ECCS checker box (KA engine).....	EF&EC-157
Check connector for ECCS checker box (VG engine).....	EF&EC-16
Cigarette lighter.....	EL-52
Clearance lamp.....	EL-28
Clock.....	EL-52
Clutch cover.....	CL-13
Clutch damper.....	CL-9
Clutch disc.....	CL-12
Clutch fluid.....	MA-8
Clutch fluid level.....	MA-20
Clutch master cylinder.....	CL-7
Clutch operating cylinder.....	CL-8
Clutch pedal.....	CL-4
Clutch pedal free play.....	CL-5
Clutch pedal height.....	CL-5
Clutch release bearing.....	CL-10
Clutch withdrawal lever.....	CL-10
Coil spring (rear).....	RA-18
Combination meter.....	EL-38
Combination switch.....	EL-21
Compression pressure (KA engine).....	EM-53
Compression pressure (VG engine).....	EM-8
Compressor clutch removal and installation.....	HA-24
Compressor mounting.....	HA-20

Compressor precaution.....	HA-5
Compressor special service tool.....	HA-11
Connecting rod (KA engine).....	EM-77
Connecting rod (VG engine).....	EM-38
Connecting rod bearing clearance (KA engine).....	EM-80
Connecting rod bearing clearance (VG engine).....	EM-42
Connecting rod bushing clearance (KA engine).....	EM-81
Connecting rod bushing clearance (VG engine).....	EM-43
Control lever (MT) FS5R30A.....	MT-36
Control lever (MT) FS5W71C.....	MT-13
Control lever Transfer.....	TF-8
Control valve (AT) RE4R01A.....	AT-140
Control valve (AT) RL4R01A.....	AT-146
Converter housing installation.....	AT-113
Coolant.....	MA-8
Coolant replacement (KA24E).....	MA-15
Coolant replacement (VG30E).....	MA-11
Cooling circuit (KA engine).....	LC-13
Cooling circuit (VG engine).....	LC-6
Cooling fan (KA engine).....	LC-16
Cooling fan (VG engine).....	LC-9
Counter gear (MT) FS5R30A.....	MT-34
Counter gear (MT) FS5W71C.....	MT-11
Counter gear Transfer.....	TF-10
Coupling sleeve (MT) FS5R30A.....	MT-34
Coupling sleeve (MT) FS5W71C.....	MT-11
Crankcase emission control system (KA engine).....	EF&EC-291
Crankshaft assembly (KA engine).....	EM-82
Crankshaft assembly (VG engine).....	EM-44
Crankshaft bearing clearance (KA engine).....	EM-79
Crankshaft bearing clearance (VG engine).....	EM-41
Crankshaft inspection (KA engine).....	EM-79
Crankshaft inspection (VG engine).....	EM-40
Cylinder block (KA engine).....	EM-75
Cylinder block (VG engine).....	EM-36
Cylinder block boring (KA engine).....	EM-78
Cylinder block boring (VG engine).....	EM-40
Cylinder head (KA engine).....	EM-61
Cylinder head (VG engine).....	EM-20
Cylinder head bolt tightening (KA engine).....	EM-71
Cylinder head bolt tightening (VG engine).....	EM-31

D

Daytime light system.....	EL-23
Defroster door control rod adjustment.....	HA-53

## ALPHABETICAL INDEX

Differential carrier assembly (H190A) .....	PD-68
Differential carrier assembly (H233B) .....	PD-91
Differential carrier assembly (R180A) .....	PD-31
Differential carrier assembly (R200A) .....	PD-50
Differential carrier disassembly (H190A) .....	PD-57
Differential carrier disassembly (H233B) .....	PD-75
Differential gear oil .....	MA-8
Differential gear oil replacement .....	MA-22
Dimensions .....	GI-20
Door adjustment (front) .....	BF-12
Door adjustment (rear) .....	BF-13
Door mirror .....	BF-52
Drive plate runout (KA engine) .....	EM-81
Drive plate runout (VG engine) .....	EM-43
Drive shaft (front) .....	FA-29
Dropping resistor (AT) .....	AT-72
Dual pressure switch .....	HA-52

### E

ECCS basic inspection (VG engine) ....	EF&EC-48
ECCS basic inspection(KA engine)....	EF&EC-195
ECCS circuit diagram (KA engine) ....	EF&EC-149
ECCS circuit diagram (VG engine) .....	EF&EC-10
ECCS component parts location (KA engine) .....	EF&EC-145
ECCS component parts location (VG engine) .....	EF&EC-4
ECCS on-board diagnostic system (KA engine) .....	EF&EC-177
ECCS on-board diagnostic system (VG engine) .....	EF&EC-34
ECCS relay inspection (VG engine)...	EF&EC-138
ECCS system diagram and chart (KA engine) .....	EF&EC-147
ECCS system diagram and chart (VG engine) .....	EF&EC-6
ECCS trouble diagnoses (KA engine) .....	EF&EC-171
ECCS trouble diagnoses (VG engine) .....	EF&EC-29
ECCS wiring diagram .....	Foldout page
ECM input/output signal inspection (VG engine) .....	EF&EC-127
EGR canister control solenoid valve inspection (KA engine) .....	EF&EC-282
EGR canister control solenoid valve inspection (VG engine) .....	EF&EC-134
EGR control (EGRC) - BPT valve (KA engine) .....	EF&EC-156

EGR control (EGRC) - BPT valve (VG engine) .....	EF&EC-15
EGR control (EGRC) - solenoid valve (KA engine) .....	EF&EC-156
EGR control (EGRC) - solenoid valve (VG engine) .....	EF&EC-16
EGR temperature sensor (KA engine) .....	EF&EC-157
EGR temperature sensor (VG engine) .....	EF&EC-16
EGR temperature sensor inspection (KA engine) .....	EF&EC-282
EGR temperature sensor inspection (VG engine) .....	EF&EC-135
EGR valve inspection (KA engine) ...	EF&EC-281
EGR valve inspection (VG engine) ...	EF&EC-135
EGRC - BPT valve inspection (KA engine) .....	EF&EC-281
EGRC - BPT valve inspection (VG engine) .....	EF&EC-135
Electrical units location .....	EL-75
Engine control module (ECM) (KA engine) .....	EF&EC-152
Engine control module (ECM) (VG engine) .....	EF&EC-11
Engine coolant temperature sensor (ECTS) (KA engine) .....	EF&EC-153
Engine coolant temperature sensor (ECTS) (VG engine) .....	EF&EC-12
Engine coolant temperature sensor inspection (KA engine) .....	EF&EC-280
Engine coolant temperature sensor inspection (VG engine) .....	EF&EC-133
Engine oil .....	MA-8
Engine oil filter replacement (KA24E) .....	MA-18
Engine oil filter replacement (VG30E) .....	MA-13
Engine oil precautions .....	GI-4
Engine oil replacement (KA24E) .....	MA-17
Engine oil replacement (VG30E) .....	MA-13
Engine outer component parts (KA engine) .....	EM-52
Engine outer component parts (VG engine) .....	EM-6
Engine removal (KA engine) .....	EM-73
Engine removal (VG engine) .....	EM-34
Engine serial number .....	GI-18
Evaporative emission system (KA engine) .....	EF&EC-289
Exhaust gas recirculation (EGR) system (KA engine) .....	EF&EC-163
Exhaust gas recirculation (EGR) system (VG engine) .....	EF&EC-21
Exhaust gas recirculation (EGR) valve (KA engine) .....	EF&EC-156
Exhaust gas recirculation (EGR) valve (VG engine) .....	EF&EC-15

# ALPHABETICAL INDEX

Exhaust system..... FE-5  
 Exhaust system inspection ..... MA-20  
 Exterior..... BF-35  
 Exterior lamp ..... EL-28

## F

Fan switch (auto A/C) ..... HA-93  
 Fan switch ..... HA-52  
 Fast idle cam (FIC) inspection and  
 adjustment (KA engine)..... EF&EC-287  
 Final drive disassembly (H190A)..... PD-57  
 Final drive disassembly (H233B)..... PD-75  
 Final drive pre-inspection (H190A)..... PD-57  
 Final drive pre-inspection (H233B)..... PD-75  
 Fluid temperature sensor (AT) ..... AT-72  
 Fluids ..... MA-8  
 Flywheel runout (KA engine) ..... EM-81  
 Flywheel runout (VG engine) ..... EM-43  
 Fork rod (MT) FS5R30A ..... MT-36  
 Fork rod (MT) FS5W71C ..... MT-13  
 Forward clutch RE4R01A and  
 RL4R01A ..... AT-173  
 Front axle..... FA-15  
 Front bumper..... BF-6  
 Front disc brake ..... BR-14  
 Front drive shaft Transfer ..... TF-10  
 Front final drive disassembly (4WD)  
 (R180A)..... PD-19  
 Front final drive disassembly (4WD)  
 (R200A)..... PD-37  
 Front final drive pre-inspection (4WD)  
 (R180A)..... PD-19  
 Front final drive pre-inspection (4WD)  
 (R200A)..... PD-37  
 Front final drive removal and instal-  
 lation (4WD)..... PD-16  
 Front suspension..... FA-36  
 Fuel check valve inspection  
 (KA engine) ..... EF&EC-290  
 Fuel check valve inspection  
 (VG engine) ..... EF&EC-142  
 Fuel filler lid ..... BF-8  
 Fuel filter (KA engine)..... EF&EC-157  
 Fuel filter (VG engine)..... EF&EC-16  
 Fuel filter replacement (KA24E) ..... MA-16  
 Fuel filter replacement (VG30E) ..... MA-12  
 Fuel gauge ..... EL-40  
 Fuel injector (KA engine) ..... EF&EC-153  
 Fuel injector (VG engine)..... EF&EC-13  
 Fuel line inspection (KA24E)..... MA-16  
 Fuel line inspection (VG30E) ..... MA-12  
 Fuel precautions..... GI-5  
 Fuel pressure check (KA engine)..... EF&EC-286  
 Fuel pressure check (VG engine)..... EF&EC-139  
 Fuel pressure regulator  
 (KA engine) ..... EF&EC-154

Fuel pressure regulator (VG engine) .. EF&EC-13  
 Fuel pressure release (KA engine) ... EF&EC-286  
 Fuel pressure release (VG engine) ... EF&EC-139  
 Fuel pump (KA engine) ..... EF&EC-154  
 Fuel pump (VG engine) ..... EF&EC-13  
 Fuel pump control (KA engine)..... EF&EC-162  
 Fuel pump control (VG engine) ..... EF&EC-21  
 Fuel pump relay inspection  
 (VG engine) ..... EF&EC-138  
 Fuel system..... FE-3  
 Fuel tank vacuum relief valve  
 inspection (KA engine) ..... EF&EC-290  
 Fuse..... EL-6  
 Fusible link..... EL-6

## G

Gears (MT) FS5R30A ..... MT-34  
 Gears (MT) FS5W71C ..... MT-11  
 Governor valve assembly RL4R01A ..... AT-165  
 Grease ..... MA-8

## H

Harness connector ..... EL-3  
 Harness layout..... EL-79  
 Hazard warning lamp ..... EL-31  
 Headlamp (For Canada) ..... EL-23  
 Headlamp  
 (For U.S.A.)..... EL-25  
 Heated oxygen sensor (H02S)  
 (VG engine) ..... EF&EC-13  
 Heated oxygen sensor heater  
 inspection (VG engine) ..... EF&EC-135  
 Heated oxygen sensor monitor  
 (KA engine) ..... EF&EC-180  
 Heated oxygen sensor monitor  
 (VG engine) ..... EF&EC-36  
 Heated seat..... BF-44  
 Heater wiring diagram..... HA-41  
 Height (Dimensions)..... GI-20  
 HFC134a (R134a) system  
 identification ..... HA-2  
 HFC134a (R134a) system  
 introduction..... HA-2  
 HFC134a (R134a) system precaution ..... HA-3  
 HFC134a (R134a) system service  
 procedure..... HA-16  
 HFC134a (R134a) system service  
 tools..... HA-12  
 HFC134a system service equipment  
 precaution ..... HA-14  
 High clutch RE4R01A and RL4R01A ..... AT-171  
 Hood adjustment ..... BF-6  
 Horn..... EL-52

## ALPHABETICAL INDEX

How to follow flow chart in trouble diagnoses.....	GI-11
How to read wiring diagrams.....	GI-8
How to use this manual.....	GI-6
Hydraulic lash adjuster inspection (KA engine).....	EM-72
Hydraulic lash adjuster inspection (VG engine).....	EM-29

### I

IACV - air regulator inspection (VG engine).....	EF&EC-137
IACV - FICD solenoid valve inspection (KA engine).....	EF&EC-284
IACV-AAC valve inspection (KA engine).....	EF&EC-283
IACV-AAC valve inspection (VG engine).....	EF&EC-136
Identification plate.....	GI-18
Idle air adjusting (IAA) unit (VG engine).....	EF&EC-14
Idle air control (IAC) system (KA engine).....	EF&EC-161
Idle air control (IAC) system (VG engine).....	EF&EC-20
Idle air control valve (IACV) (KA engine).....	EF&EC-155
Idle air control valve (IACV) (VG engine).....	EF&EC-14
Idle air control valve (IACV) - air regulator (VG engine).....	EF&EC-14
Idle mixture ratio inspection (KA engine).....	EF&EC-166
Idle mixture ratio inspection (VG engine).....	EF&EC-24
Idle speed inspection (KA engine).....	EF&EC-166
Idle speed inspection (VG engine).....	EF&EC-24
Ignition coil inspection (KA engine).....	EF&EC-281
Ignition coil inspection (VG engine).....	EF&EC-134
Ignition timing inspection (KA engine).....	EF&EC-166
Ignition timing inspection (VG engine).....	EF&EC-24
Illumination.....	EL-34
In vehicle sensor.....	HA-99
Inhibitor switch.....	AT-71
Inhibitor switch.....	AT-93
Inhibitor switch inspection (KA engine).....	EF&EC-285
Inhibitor switch inspection (VG engine).....	EF&EC-138
Injection removal and installation (KA engine).....	EF&EC-287
Injection removal and installation (VG engine).....	EF&EC-139
Injector inspection (KA engine).....	EF&EC-283

Injector inspection (VG engine).....	EF&EC-137
Instrument panel.....	BF-27
Intake door control linkage adjustment (auto A/C).....	HA-94
Intake door control linkage adjustment (manual A/C).....	HA-54
Interior.....	BF-29
Interior lamp.....	EL-36

### J

Jacking points.....	GI-22
Journal bearing assembly (propeller shaft).....	PD-13
Journal bearing disassembly (propeller shaft).....	PD-12
Jump seat.....	BF-42

### K

Knock sensor (KS) (VG engine).....	EF&EC-15
Knock sensor inspection (VG engine).....	EF&EC-137
Knuckle spindle.....	FA-26

### L

Leaf spring (rear).....	RA-14
Length (Dimensions).....	GI-20
Lifting points.....	GI-23
Limited slip diff. adjustment (H233B).....	PD-82
Limited slip diff. assembly (H233B).....	PD-83
Limited slip diff. disassembly (H233B).....	PD-80
Limited slip diff. inspection (H233B).....	PD-81
Line pressure solenoid valve.....	AT-72
Line pressure test (AT) RE4R01A.....	AT-75
Line pressure test (AT) RL4R01A.....	AT-89
Liquid gasket application.....	EM-2
Low and reverse brake RE4R01A and RL4R01A.....	AT-177
LSV (Load sensing valve).....	BR-12
Lubricants.....	MA-8
Lubrication circuit (KA engine).....	LC-10
Lubrication circuit (VG engine).....	LC-3
Lubrication oil A/C.....	HA-22

### M

Magnet clutch.....	HA-24
Main drive gear (MT) FS5R30A.....	MT-34
Main drive gear (MT) FS5W71C.....	MT-11
Main gear Transfer.....	TF-10

## ALPHABETICAL INDEX

Mainshaft (MT) FS5R30A .....	MT-34
Mainshaft (MT) FS5W71C .....	MT-11
Mainshaft Transfer .....	TF-10
Maintenance .....	MA-1
Maintenance general .....	MA-3
Maintenance periodic.....	MA-5
Maintenance schedule (1).....	MA-6
Maintenance schedule (2).....	MA-7
Manual lock free running hub .....	FA-18
Manual steering gear.....	ST-11
Manual steering gear oil .....	MA-8
Manual transmission number.....	GI-18
Manual transmission oil .....	MA-8
Manual transmission oil replacement .....	MA-20
Mass air flow sensor (MAFS) (KA engine) .....	EF&EC-152
Mass air flow sensor (MAFS) (VG engine) .....	EF&EC-11
Mass air flow sensor inspection (KA engine) .....	EF&EC-280
Mass air flow sensor inspection (VG engine) .....	EF&EC-133
Master cylinder (brake) .....	BR-8
Master cylinder (clutch) .....	CL-7
Meter and gauges.....	EL-38
Mode door control linkage adjustment .....	HA-93
Model variation .....	GI-14
Molding .....	BF-35
MT overhaul FS5R30A .....	MT-33
MT overhaul FS5W71C .....	MT-10
MT removal and installation .....	MT-7
Multi purpose grease.....	MA-8
Multipoint fuel injection (MFI) system (KA engine) .....	EF&EC-158
Multipoint fuel injection (MFI) system (VG engine) .....	EF&EC-17
Multipoint fuel injection precautions .....	GI-3
Multipoint fuel injection system inspection (KA engine) .....	EF&EC-286

### N

Neutral position switch (MT) FS5R30A .....	MT-33
Neutral position switch inspection (KA engine) .....	EF&EC-284
Neutral position switch inspection (VG engine) .....	EF&EC-138

### O

Oil pan (KA engine).....	EM-54
Oil pan (VG engine).....	EM-9
Oil pressure (KA engine).....	LC-11

Oil pressure (VG engine).....	LC-3
Oil pressure relief valve (KA engine) .....	LC-12
Oil pressure relief valve (VG engine) .....	LC-5
Oil pump (AT) RE4R01A and RL4R01A .....	AT-136
Oil pump (KA engine).....	LC-11
Oil pump (VG engine) .....	LC-4
Oil pump regulator valve (KA engine) .....	LC-12
Oil pump regulator valve (VG engine).....	LC-5
Oil seal replacement (front final drive 4WD) .....	PD-14
Oil seal replacement (front of final drive).....	PD-14
Oil seal replacement (KA engine) .....	EM-59
Oil seal replacement (VG engine) .....	EM-18
Operating cylinder (clutch) .....	CL-8
Overrun clutch RE4R01A and RL4R01A .....	AT-173
Overrun clutch solenoid valve.....	AT-72
Oversize piston (KA engine).....	EM-78
Oversize piston (VG engine).....	EM-40
Oxygen sensor (02S) (KA engine) .....	EF&EC-154

### P

PAIR valve filter replacement (KA24E).....	MA-19
Park/Neutral position (PNP) relay inspection (KA engine) .....	EF&EC-285
Park/Neutral position (PNP) relay inspection (VG engine) .....	EF&EC-138
Parking brake control .....	BR-26
Parking drum brake .....	BR-24
PCV (positive crankcase ventilation) inspection (KA engine) .....	EF&EC-291
PCV (positive crankcase ventilation) inspection (VG engine) .....	EF&EC-143
PCV filter replacement (KA24E).....	MA-19
Pilot bushing replacement (VG engine) .....	EM-45
Pinion bearing preload diff. (H233B).....	PD-86
Pinion bearing preload diff. (R180A).....	PD-26
Pinion bearing preload diff. (R200A).....	PD-44
Pinion gear height diff. (H190A) .....	PD-63
Pinion gear height diff. (H233B) .....	PD-86
Pinion gear height diff. (R180A) .....	PD-26
Pinion gear height diff. (R200A) .....	PD-44
Piston assembly (KA engine).....	EM-82
Piston assembly (VG engine).....	EM-43
Piston pin inspection (KA engine) .....	EM-76
Piston pin inspection (VG engine) .....	EM-37
Piston ring inspection (KA engine).....	EM-76
Piston ring inspection (VG engine).....	EM-38

GI

MA

EM

LC

EF &  
EC

FE

CL

MT

AT

TF

PD

FA

RA

BR

ST

BF

HA

EL

IDX

## ALPHABETICAL INDEX

Piston to bore clearance (KA engine).....	EM-78
Piston to bore clearance (VG engine).....	EM-39
Power door lock.....	BF-15
Power steering fluid .....	MA-8
Power steering fluid level .....	MA-25
Power steering fluid level .....	ST-5
Power steering gear (Model PB48S) .....	ST-25
Power steering gear (Model PB59K) .....	ST-18
Power steering hydraulic pressure .....	ST-7
Power steering oil pressure switch (KA engine).....	EF&EC-155
Power steering oil pressure switch (VG engine) .....	EF&EC-15
Power steering oil pressure switch inspection (KA engine) .....	EF&EC-285
Power steering oil pressure switch inspection (VG engine) .....	EF&EC-138
Power steering oil pump.....	ST-32
Power steering system bleeding .....	ST-6
Power supply routing.....	EL-6
Power transistor and ignition coil (KA engine).....	EF&EC-155
Power transistor and ignition coil (VG engine) .....	EF&EC-14
Power transistor inspection (KA engine).....	EF&EC-281
Power transistor inspection (VG engine).....	EF&EC-134
Power window.....	BF-24
Precautions (General).....	GI-2
Pressure test (AT) RE4R01A .....	AT-75
Pressure test (AT) RL4R01A .....	AT-89
Propeller shaft.....	PD-8
Propeller shaft inspection .....	MA-22
Propeller shaft on vehicle service.....	PD-10
Propeller shaft vibration .....	PD-10

### R

Radiator (KA engine).....	LC-16
Radiator (VG engine).....	LC-8
Rear axle (disc brake type) .....	RA-9
Rear axle (drum brake type) .....	RA-5
Rear body.....	BF-55
Rear bumper.....	BF-8
Rear cover packing replacement diff.....	PD-15
Rear disc brake .....	BR-21
Rear drum brake .....	BR-18
Rear side window .....	BF-49
Rear suspension (5-link type).....	RA-17
Rear suspension .....	RA-13
Rear wheel anti-lock brake system (R-ABS) .....	BR-28
Rear window defogger .....	EL-53

Refrigerant connection precaution.....	HA-4
Refrigerant general precaution .....	HA-3
Refrigerant lines.....	HA-18
Refrigeration cycle .....	HA-10
Release bearing (clutch) .....	CL-10
Resistor inspection (KA engine) .....	EF&EC-285
Reverse clutch RE4R01A and RL4R01A .....	AT-167
Reverse gear (MT) FS5R30A .....	MT-34
Reverse gear (MT) FS5W71C .....	MT-11
Reverse idler shaft (MT) FS5R30A .....	MT-34
Reverse idler shaft (MT) FS5W71C .....	MT-11
Revolution sensor (AT).....	AT-71
Road wheel size .....	GI-21
Rotor disc (front).....	FA-25

### S

SAE J1930 terminology list.....	GI-27
Seat (front) .....	BF-41
Seat (rear).....	BF-43
Self-diagnostic results (KA engine) .....	EF&EC-181
Self-diagnostic results (VG engine).....	EF&EC-37
Shift control (MT) FS5R30A .....	MT-36
Shift control (MT) FS5W71C .....	MT-13
Shift control (TF).....	TF-11
Shift control (TF).....	TF-23
Shift fork (MT) FS5R30A .....	MT-36
Shift fork (MT) FS5W71C .....	MT-13
Shift lock system.....	AT-95
Shift schedule RE4R01A .....	AT-28
Shift schedule RL4R01A .....	AT-81
Shift solenoid valve (AT) .....	AT-72
Shock absorber (adjustable, front) .....	FA-47
Shock absorber (front).....	FA-38
Shock absorber (rear).....	RA-14
Side bearing preload (front final drive 4WD) (R180A) .....	PD-25
Side bearing preload (front final drive 4WD) (R200A) .....	PD-43
Side bearing preload diff. (H190A) .....	PD-62
SMJ (super multiple junction).....	Foldout page
Soft/Hard closed throttle position (CTP) switch (VG engine) .....	EF&EC-12
Soft/Hard closed throttle position (CTP) switch (KA engine).....	EF&EC-153
Spark plug replacement (KA24E).....	MA-18
Spark plug replacement (VG30E) .....	MA-14
Stabilizer bar (front) .....	FA-41
Stabilizer bar (rear) .....	RA-19
Stall test (AT) .....	AT-73
Standardized relay.....	EL-4
Starter.....	EL-14
Starting system .....	EL-12
Steering gear and linkage inspection .....	MA-25
Steering gear oil level.....	MA-25



## ALPHABETICAL INDEX

Steering linkage.....	ST-35
Steering wheel and column .....	ST-8
Steering wheel play.....	ST-4
Steering wheel turning force .....	ST-6
Stop lamp .....	EL-28
Striking rod (MT) FS5R30A .....	MT-36
Striking rod (MT) FS5W71C .....	MT-13
Sun roof.....	BF-51
Sunload sensor.....	HA-101
Synchronizer (MT) FS5R30A.....	MT-34
Synchronizer (MT) FS5W71C.....	MT-11

T

Tail lamp.....	EL-28
Temperature control cable and linkage adjustment.....	HA-54
Tension rod (front).....	FA-43
Thermal protector.....	HA-53
Thermo control amp.....	HA-53
Thermostat (KA engine).....	LC-15
Thermostat (VG engine).....	LC-8
Three way catalyst precautions.....	GI-4
Throttle position sensor (TPS) (KA engine).....	EF&EC-153
Throttle position sensor (TPS) (VG engine).....	EF&EC-12
Throttle position sensor inspection and adjustment (KA engine).....	EF&EC-282
Throttle position sensor inspection and adjustment (VG engine).....	EF&EC-135
Tie-rod.....	ST-36
Tie-rod ball joints.....	ST-37
Tightening torque of standard bolts .....	GI-26
Timing belt (VG engine).....	EM-12
Timing chain (KA engine).....	EM-55
Tire rotation .....	MA-23
Tire size .....	GI-21
Tooth contact (front final drive 4WD) (R180A).....	PD-30
Tooth contact (front final drive 4WD) (R200A).....	PD-49
Tooth contact diff. (H190A).....	PD-67
Tooth contact diff. (H233B).....	PD-90
Torque converter clutch solenoid valve .....	AT-72
Torque converter installation.....	AT-113
Torsion bar spring.....	FA-38
Tow truck towing .....	GI-24
Towing points .....	GI-25
Transfer case .....	TF-9
Transfer gear oil.....	MA-8
Transfer oil replacement.....	MA-21
Transfer overhaul .....	TF-9
Transfer removal and installation.....	TF-7
Transfer serial number .....	GI-19
Transmission case (MT) FS5R30A .....	MT-33

Transmission case (MT) FS5W71C .....	MT-10
Tread-FR&RR (Dimensions).....	GI-20
Trim - door .....	BF-29
Trim - roof.....	BF-30
Trim - side and floor.....	BF-29
Turn signal lamp.....	EL-31

U

Upper link (front susp.).....	FA-42
-------------------------------	-------

V

Vacuum hose (brake system).....	BR-11
Vacuum hose drawing (ECCS) (VG engine).....	EF&EC-7
Valve clearance (VG engine).....	EM-47
Valve guide inspection (KA engine).....	EM-66
Valve guide inspection (VG engine).....	EM-26
Valve seat inspection (KA engine).....	EM-67
Valve seat inspection (VG engine).....	EM-27
Valve spring inspection (KA engine).....	EM-68
Valve spring inspection (VG engine).....	EM-28
Vapor lines inspection (KA24E).....	MA-19
Vapor lines inspection (VG30E).....	MA-14
Vehicle identification number .....	GI-17
Vehicle speed sensor (VSS) (KA engine).....	EF&EC-155
Vehicle speed sensor (VSS) (VG engine).....	EF&EC-15
Ventilator door control rod adjustment.....	HA-53
Viscosity number (SAE) .....	MA-9

W

Warning chime .....	EL-46
Warning lamps .....	EL-44
Washer, front.....	EL-48
Washer, rear .....	EL-49
Water cock control rod adjustment .....	HA-54
Water pump (KA engine).....	LC-14
Water pump (VG engine).....	LC-7
Water temperature gauge .....	EL-40
Water temperature sensor.....	HA-102
Weatherstrip.....	BF-35
Wheel alignment (front).....	FA-9
Wheel balance .....	MA-23
Wheel bearing (front axle) .....	FA-7
Wheel bearing (rear).....	RA-4
Wheel hub (front).....	FA-25
Wheel sensors (ABS).....	BR-30
Wheelbase (Dimensions) .....	GI-20
Width (Dimensions) .....	GI-20

## ALPHABETICAL INDEX

---

Windshield and windows.....	BF-46	Wiper, rear .....	EL-49
Wiper and washer.....	EL-48	Withdrawal lever (clutch) .....	CL-10
Wiper, front.....	EL-48		