


ELECTRICAL UNITS

Terminal Arrangement

ECM (ECCS CONTROL MODULE) (F24)

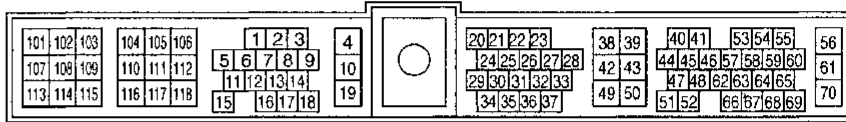

 
A/T CONTROL UNIT (M13)




ABS CONTROL UNIT (M54)



SMART ENTRANCE CONTROL UNIT (M16)



SUPER MULTIPLE JUNCTION (SMJ)

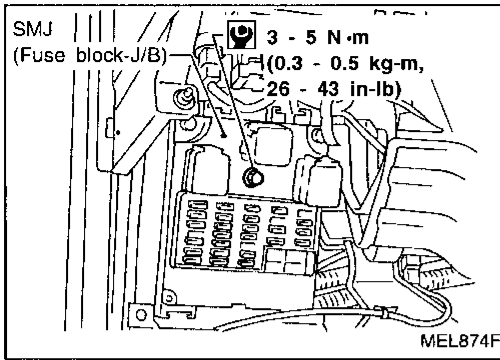


INSTALLATION

To install SMJ, tighten bolts until orange “fulltight” mark appears and then retighten to specified torque as required.

 : 3 - 5 N·m
(0.3 - 0.5 kg-m, 26 - 43 in-lb)

CAUTION:

Do not overtighten bolts, otherwise, they may be damaged.

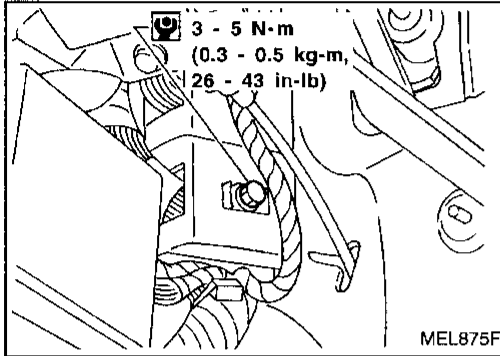


SUPER MULTIPLE JUNCTION (SMJ)

Terminal Arrangement


MAIN HARNESS




(M2)

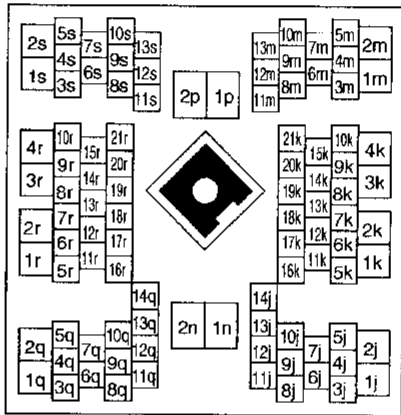


(M1)

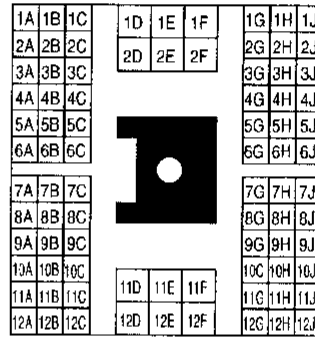

(B1)

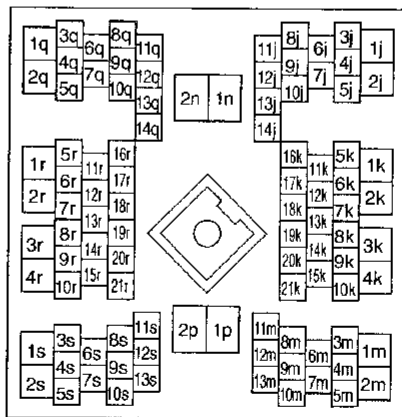

(E1)

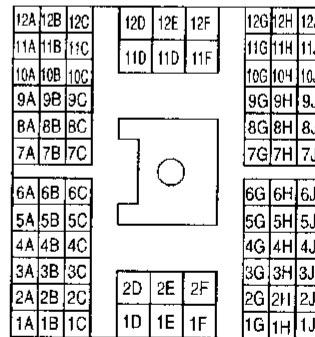


BODY HARNESS



ENGINE ROOM HARNESS

FUSE BLOCK — Junction Box (J/B)

Terminal Arrangement

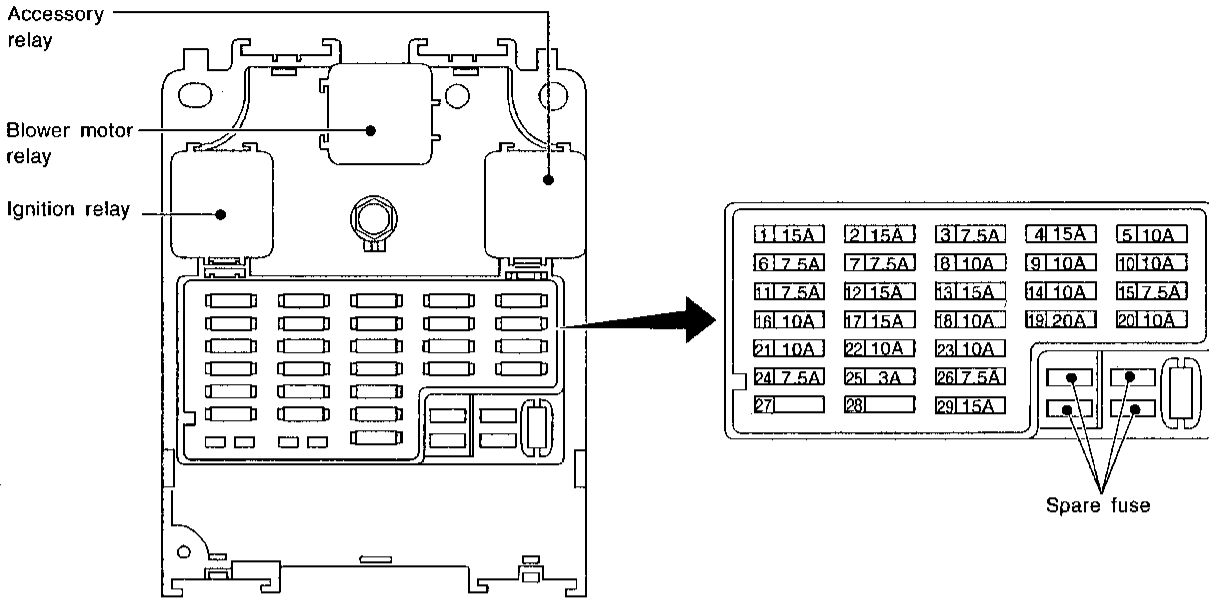


To main harness (M10)

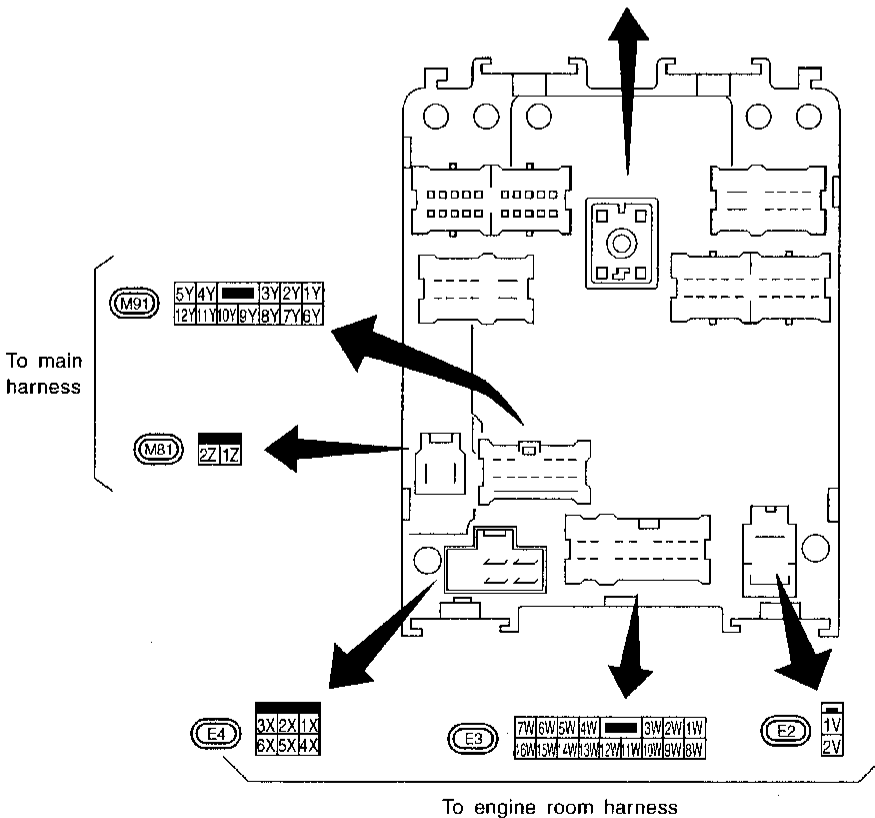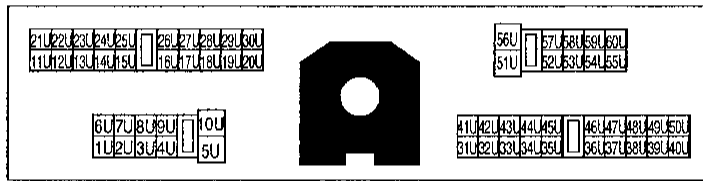

FUSE AND FUSIBLE LINK BOX

Terminal Arrangement

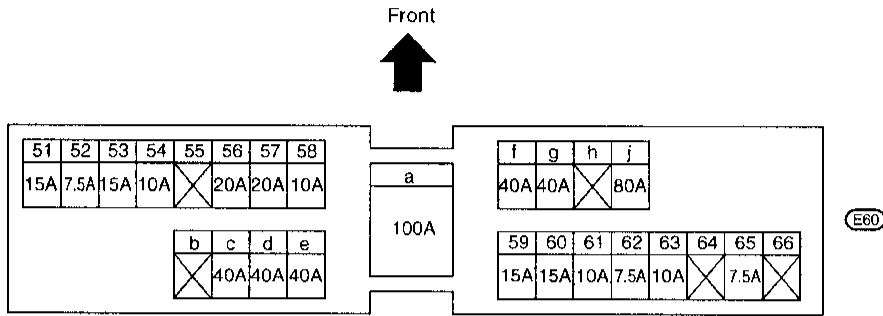

No. 51 - 66: FUSE a - j: FUSIBLE LINK