Edition: August 1999 Revision: July 2000

Publication No. SM0E-1R50U2

NISSAN PATHFINDER

MODEL R50 SERIES

© 2000 NISSAN MOTOR CO., LTD.

All rights reserved. No part of this Service Manual may be reproduced or stored in a retrieval system, or transmitted in any form, or by any means, electronic, mechanical, photocopying, recording or otherwise, without the prior written permission of Nissan Motor Company Ltd., Tokyo, Japan.

QUICK REFERENCE INDEX GENERAL INFORMATION — GI MAINTENANCE —— MA ENGINE MECHANICAL EM ENGINE LUBRICATION & _____COOLING SYSTEMS LC EC ENGINE CONTROL SYSTEM — ACCELERATOR CONTROL, FUEL & _____EXHAUST SYSTEMS FE **CLUTCH-**CL MANUAL TRANSMISSION — MT **AT AUTOMATIC TRANSMISSION -**TF TRANSFER -PROPELLER SHAFT & DIFFERENTIAL CARRIER PD FRONT & REAR AXLE — AX SU FRONT & REAR SUSPENSION — BR **BRAKE SYSTEM –** ST STEERING SYSTEM —— RESTRAINT SYSTEM —— RS BODY & TRIM BT

HEATER & AIR CONDITIONER —

ELECTRICAL SYSTEM ———

ALPHABETICAL INDEX ———

STARTING & CHARGING SYSTEM -

HA

SC

EL

IDX

FOREWORD

This manual contains maintenance and repair procedures for the 2000 Nissan PATHFINDER.

In order to assure your safety and the efficient functioning of the vehicle, this manual should be read thoroughly. It is especially important that the PRECAUTIONS in the GI section be completely understood before starting any repair task.

All information in this manual is based on the latest product information at the time of publication. The right is reserved to make changes in specifications and methods at any time without notice.

IMPORTANT SAFETY NOTICE

The proper performance of service is essential for both the safety of the technician and the efficient functioning of the vehicle. The service methods in this Service Manual are described in such a manner that the service may be performed safely and accurately. Service varies with the procedures used, the skills of the technician and the tools and parts available. Accordingly, anyone using service procedures, tools or parts which are not specifically recommended by NISSAN must first be completely satisfied that neither parsonal safety nor the vehicle's safety will be jeopardized by the service method selected.



Tokyo, Japan



NISSAN PLEASE HELP MAKE THIS SERVICE MANUAL BETTER!

Your comments are important to NISSAN and will help us to improve our Service Manuals.

Use this form to report any issues or comments you may have regarding our Service Manuals.

Please print this form and type or write your comments below. Mail or fax to:

Nissan North America, Inc. Technical Service Information 39001 Sunrise Drive, P.O. Box 9200 Farmington Hills, MI USA 48331

FAX: (248) 488-3910

SERVICE MANUAL:	Model:		Year:	
PUBLICATION NO.	(Please photocopy b	oack cover):		
VEHICLE INFORMA	TION VIN:		Production Date:	
•	issues or problems in Not		by of each page, man	ked with your comments.
•	•	ogical and easy to use	•	rer) YES NO rked with your comments.
	` '	etail:		•
_		and easy to follow? (o		YES NO
What information s repairing customer		n NISSAN Service Mai	nuals to better supp	port you in servicing or
DATE:	YOUR NAME:		POSI	TION:
DEALER:	DEALE	R NO.:	_ ADDRESS:	
CITY:	STATE/P	PROV./COUNTRY:	ZIP/POS	STAL CODE:

NOTES

TEST VALUE AND TEST LIMIT (GST ONLY — NOT APPLICABLE TO CONSULT-II)

The following is the information specified in Mode 6 of SAE J1979.

The test value is a parameter used to determine whether a system/circuit diagnostic test is "OK" or "NG" while being monitored by the ECM during self-diagnosis. The test limit is a reference value which is specified as the maximum or minimum value and is compared with the test value being monitored.

Items for which these data (test value and test limit) are displayed are the same as SRT code items.

These data (test value and test limit) are specified by Test ID (TID) and Component ID (CID) and can be displayed on the GST screen.

SRT item	Self-diagnostic test item	DTC	Test value (GST display)		Test limit	Conversion
			TID	CID		
CATALYST	Three way establish function (Donk 4)	P0420	01H	01H	Max.	1/128
	Three way catalyst function (Bank 1)	P0420	02H	81H	Min.	1
	TI (1 (7 (7 10)	P0430	03H	02H	Max.	1/128
	Three way catalyst function (Bank 2)	P0430	04H	82H	Min.	1
EVAP SYSTEM	EVAD control overteen (Croall look)	P0440	05H	03H	Max.	1/128mm ²
	EVAP control system (Small leak)	P1440	05H	03H	Max.	1/128mm ²
	EVAP control system purge flow monitoring	P1447	06H	83H	Min.	20mV
HO2S	Heated oxygen sensor 1 (Bank 1)	P0133	09H	04H	Max.	16ms
		P0131	0AH	84H	Min.	10mV
		P0130	0BH	04H	Max.	10mV
		P0132	0CH	04H	Max.	10mV
		P0134	0DH	04H	Max.	1s
	Heated oxygen sensor 1 (Bank 2)	P0153	11H	05H	Max.	16ms
		P0151	12H	85H	Min.	10mV
		P0150	13H	05H	Max.	10mV
		P0152	14H	05H	Max.	10mV
		P0154	15H	05H	Max.	1s
	Heated oxygen sensor 2 (Bank 1)	P0139	19H	86H	Min.	10mV/500ms
		P0137	1AH	86H	Min.	10mV
		P0140	1BH	06H	Max.	10mV
		P0138	1CH	06H	Max.	10mV
	Heated oxygen sensor 2 (Bank 2)	P0159	21H	87H	Min.	10mV/500ms
		P0157	22H	87H	Min.	10mV
		P0160	23H	07H	Max.	10mV
		P0158	24H	07H	Max.	10mV
HO2S HTR	Heated oxygen sensor 1 heater (Bank 1)	P0135	29H	08H	Max.	20mV
		P0135	2AH	88H	Min.	20mV
	Heated oxygen sensor 1 heater (Bank 2)	P0155	2BH	09H	Max.	20mV
		P0155	2CH	89H	Min.	20mV
	Heated oxygen sensor 2 heater (Bank 1)	P0141	2DH	0AH	Max.	20mV
		P0141	2EH	8AH	Min.	20mV
	Heated oxygen sensor 2 heater (Bank 2)	P0161	2FH	0BH	Max.	20mV
		P0161	30H	8BH	Min.	20mV
EGR SYSTEM	EGR function	P0400	31H	8CH	Min.	1°C
		P0400	32H	8CH	Min.	1°C
		P0400	33H	8CH	Min.	1°C
		P0400	34H	8CH	Min.	1°C
		P1402	35H	0CH	Max.	1°C
		P0402	36H	0CH	Max.	1count
	EGRC-BPT valve function	P0402	37H	8CH	Min.	1count