

SECTION SE

SEAT

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

CONTENTS

SERVICE INFORMATION	2	Precaution Necessary for Steering Wheel Rotation After Battery Disconnect	22
SQUEAK AND RATTLE TROUBLE DIAGNOSES	2	Precaution for Work	23
Work Flow	2		
Generic Squeak and Rattle Troubleshooting	4		
Diagnostic Worksheet	6		
DTC/CIRCUIT DIAGNOSIS	8		
HEATED SEAT	8		
Description	8		
WIRING DIAGRAM	9		
POWER SEAT FOR DRIVER SIDE	9		
Wiring Diagram - Without Automatic Drive Positioner	9		
POWER SEAT FOR PASSENGER SIDE	13		
Wiring Diagram	13		
HEATED SEAT	16		
Wiring Diagram	16		
PRECAUTION	22		
PRECAUTIONS	22		
Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	22		
PREPARATION	24		
PREPARATION	24		
Special Service Tool	24		
Commercial Service Tool	24		
CLIP LIST	25		
Descriptions for Clips	25		
REMOVAL AND INSTALLATION	29		
FRONT SEAT	29		
Exploded View	29		
Removal and Installation	33		
REAR SEAT	35		
Removal and Installation	35		
UNIT DISASSEMBLY AND ASSEMBLY	37		
FRONT SEAT	37		
Exploded View	37		
Seatback Assembly	41		
Passenger Seatback Board	43		
Seat Cushion Trim and Pad	45		
REAR SEAT	47		
Exploded View	47		
Disassembly and Assembly	47		

SQUEAK AND RATTLE TROUBLE DIAGNOSES


< SERVICE INFORMATION >

SERVICE INFORMATION

SQUEAK AND RATTLE TROUBLE DIAGNOSES

Work Flow

INFOID:000000007356058

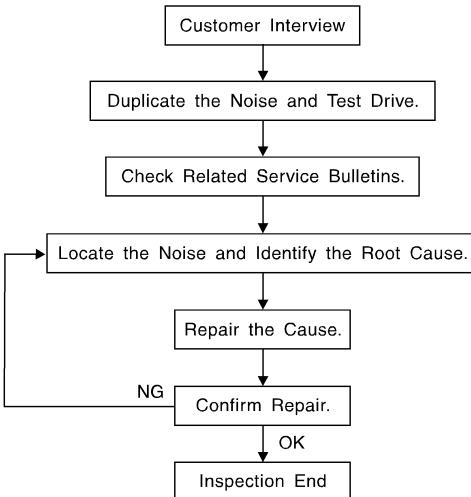

SBT842

CUSTOMER INTERVIEW

Interview the customer if possible, to determine the conditions that exist when the noise occurs. Use the Diagnostic Worksheet during the interview to document the facts and conditions when the noise occurs and any customer's comments; refer to [SE-6, "Diagnostic Worksheet"](#). This information is necessary to duplicate the conditions that exist when the noise occurs.

- The customer may not be able to provide a detailed description or the location of the noise. Attempt to obtain all the facts and conditions that exist when the noise occurs (or does not occur).
- If there is more than one noise in the vehicle, be sure to diagnose and repair the noise that the customer is concerned about. This can be accomplished by test driving the vehicle with the customer.
- After identifying the type of noise, isolate the noise in terms of its characteristics. The noise characteristics are provided so the customer, service adviser and technician are all speaking the same language when defining the noise.
- Squeak —(Like tennis shoes on a clean floor)
Squeak characteristics include the light contact/fast movement/brought on by road conditions/hard surfaces = higher pitch noise/softer surfaces = lower pitch noises/edge to surface = chirping.
- Creak—(Like walking on an old wooden floor)
Creak characteristics include firm contact/slow movement/twisting with a rotational movement/pitch dependent on materials/often brought on by activity.
- Rattle—(Like shaking a baby rattle)
Rattle characteristics include the fast repeated contact/vibration or similar movement/loose parts/missing clip or fastener/incorrect clearance.
- Knock —(Like a knock on a door)
Knock characteristics include hollow sounding/sometimes repeating/often brought on by driver action.
- Tick—(Like a clock second hand)
Tick characteristics include gentle contacting of light materials/loose components/can be caused by driver action or road conditions.
- Thump—(Heavy, muffled knock noise)
Thump characteristics include softer knock/dead sound often brought on by activity.
- Buzz—(Like a bumble bee)
Buzz characteristics include high frequency rattle/firm contact.
- Often the degree of acceptable noise level will vary depending upon the person. A noise that you may judge as acceptable may be very irritating to the customer.
- Weather conditions, especially humidity and temperature, may have a great effect on noise level.

DUPLICATE THE NOISE AND TEST DRIVE

SQUEAK AND RATTLE TROUBLE DIAGNOSES

< SERVICE INFORMATION >

If possible, drive the vehicle with the customer until the noise is duplicated. Note any additional information on the Diagnostic Worksheet regarding the conditions or location of the noise. This information can be used to duplicate the same conditions when you confirm the repair.

If the noise can be duplicated easily during the test drive, to help identify the source of the noise, try to duplicate the noise with the vehicle stopped by doing one or all of the following:

- 1) Close a door.
 - 2) Tap or push/pull around the area where the noise appears to be coming from.
 - 3) Rev the engine.
 - 4) Use a floor jack to recreate vehicle "twist".
 - 5) At idle, apply engine load (electrical load, half-clutch on M/T model, drive position on CVT and A/T models).
 - 6) Raise the vehicle on a hoist and hit a tire with a rubber hammer.
- Drive the vehicle and attempt to duplicate the conditions the customer states exist when the noise occurs.
 - If it is difficult to duplicate the noise, drive the vehicle slowly on an undulating or rough road to stress the vehicle body.

CHECK RELATED SERVICE BULLETINS

After verifying the customer concern or symptom, check ASIST for Technical Service Bulletins (TSBs) related to that concern or symptom.

If a TSB relates to the symptom, follow the procedure to repair the noise.

LOCATE THE NOISE AND IDENTIFY THE ROOT CAUSE

1. Narrow down the noise to a general area. To help pinpoint the source of the noise, use a listening tool (Chassis Ear: J-39570, Engine Ear: J-39565 and mechanic's stethoscope).
 2. Narrow down the noise to a more specific area and identify the cause of the noise by:
 - removing the components in the area that you suspect the noise is coming from.
Do not use too much force when removing clips and fasteners, otherwise clips and fasteners can be broken or lost during the repair, resulting in the creation of new noise.
 - tapping or pushing/pulling the component that you suspect is causing the noise.
Do not tap or push/pull the component with excessive force, otherwise the noise will be eliminated only temporarily.
 - feeling for a vibration with your hand by touching the component(s) that you suspect is (are) causing the noise.
 - placing a piece of paper between components that you suspect are causing the noise.
 - looking for loose components and contact marks.
- Refer to [SE-4, "Generic Squeak and Rattle Troubleshooting"](#).

REPAIR THE CAUSE

- If the cause is a loose component, tighten the component securely.
- If the cause is insufficient clearance between components:
 - separate components by repositioning or loosening and retightening the component, if possible.
 - insulate components with a suitable insulator such as urethane pads, foam blocks, felt cloth tape or urethane tape. A NISSAN Squeak and Rattle Kit (J-43980) is available through your authorized NISSAN Parts Department.

CAUTION:

Do not use excessive force as many components are constructed of plastic and may be damaged.

Always check with the Parts Department for the latest parts information.

The following materials are contained in the NISSAN Squeak and Rattle Kit (J-43980). Each item can be ordered separately as needed.

URETHANE PADS [1.5 mm (0.059 in) thick]

Insulates connectors, harness, etc.

76268-9E005: 100×135 mm (3.94×5.31 in)/76884-71L01: 60×85 mm (2.36×3.35 in)/76884-71L02: 15×25 mm (0.59×0.98 in)

INSULATOR (Foam blocks)

Insulates components from contact. Can be used to fill space behind a panel.

73982-9E000: 45 mm (1.77 in) thick, 50×50 mm (1.97×1.97 in)/73982-50Y00: 10 mm (0.39 in) thick, 50×50 mm (1.97×1.97 in)

INSULATOR (Light foam block)

80845-71L00: 30 mm (1.18 in) thick, 30×50 mm (1.18×1.97 in)

FELT CLOTH TAPE

Used to insulate where movement does not occur. Ideal for instrument panel applications.

68370-4B000: 15×25 mm (0.59×0.98 in) pad/68239-13E00: 5 mm (0.20 in) wide tape roll. The following materials not found in the kit can also be used to repair squeaks and rattles.

SQUEAK AND RATTLE TROUBLE DIAGNOSES

< SERVICE INFORMATION >

UHMW (TEFLON) TAPE

Insulates where slight movement is present. Ideal for instrument panel applications.

SILICONE GREASE

Used instead of UHMW tape that will be visible or not fit.

Note: Will only last a few months.

SILICONE SPRAY

Use when grease cannot be applied.

DUCT TAPE

Use to eliminate movement.

CONFIRM THE REPAIR

Confirm that the cause of a noise is repaired by test driving the vehicle. Operate the vehicle under the same conditions as when the noise originally occurred. Refer to the notes on the Diagnostic Worksheet.

Generic Squeak and Rattle Troubleshooting

INFOID:000000007356059

Refer to Table of Contents for specific component removal and installation information.

INSTRUMENT PANEL

Most incidents are caused by contact and movement between:

1. The cluster lid A and instrument panel
2. Acrylic lens and combination meter housing
3. Instrument panel to front pillar garnish
4. Instrument panel to windshield
5. Instrument panel mounting pins
6. Wiring harnesses behind the combination meter
7. A/C defroster duct and duct joint

These incidents can usually be located by tapping or moving the components to duplicate the noise or by pressing on the components while driving to stop the noise. Most of these incidents can be repaired by applying felt cloth tape or silicone spray (in hard to reach areas). Urethane pads can be used to insulate wiring harness.

CAUTION:

Do not use silicone spray to isolate a squeak or rattle. If you saturate the area with silicone, you will not be able to recheck the repair.

CENTER CONSOLE

Components to pay attention to include:

1. Shift selector assembly cover to finisher
2. A/C control unit and cluster lid C
3. Wiring harnesses behind audio and A/C control unit

The instrument panel repair and isolation procedures also apply to the center console.

DOORS

Pay attention to the:

1. Finisher and inner panel making a slapping noise
2. Inside handle escutcheon to door finisher
3. Wiring harnesses tapping
4. Door striker out of alignment causing a popping noise on starts and stops

Tapping or moving the components or pressing on them while driving to duplicate the conditions can isolate many of these incidents. You can usually insulate the areas with felt cloth tape or insulator foam blocks from the NISSAN Squeak and Rattle Kit (J-43980) to repair the noise.

TRUNK

Trunk noises are often caused by a loose jack or loose items put into the trunk by the owner.

In addition look for:

1. Trunk lid bumpers out of adjustment
2. Trunk lid striker out of adjustment
3. The trunk lid torsion bars knocking together

SQUEAK AND RATTLE TROUBLE DIAGNOSES

< SERVICE INFORMATION >

4. A loose license plate or bracket

Most of these incidents can be repaired by adjusting, securing or insulating the item(s) or component(s) causing the noise.

A

SUNROOF/HEADLINING

Noises in the sunroof/headlining area can often be traced to one of the following:

B

1. Sunroof lid, rail, linkage or seals making a rattle or light knocking noise
2. Sun visor shaft shaking in the holder
3. Front or rear windshield touching headliner and squeaking

C

Again, pressing on the components to stop the noise while duplicating the conditions can isolate most of these incidents. Repairs usually consist of insulating with felt cloth tape.

D

OVERHEAD CONSOLE (FRONT AND REAR)

E

Overhead console noises are often caused by the console panel clips not being engaged correctly. Most of these incidents are repaired by pushing up on the console at the clip locations until the clips engage.

In addition look for:

F

1. Loose harness or harness connectors.
2. Front console map/reading lamp lense loose.
3. Loose screws at console attachment points.

G

SEATS

H

When isolating seat noise it's important to note the position the seat is in and the load placed on the seat when the noise is present. These conditions should be duplicated when verifying and isolating the cause of the noise.

I

Cause of seat noise include:

J

1. Headrest rods and holder
2. A squeak between the seat pad cushion and frame
3. The rear seatback lock and bracket

SE

These noises can be isolated by moving or pressing on the suspected components while duplicating the conditions under which the noise occurs. Most of these incidents can be repaired by repositioning the component or applying urethane tape to the contact area.

K

UNDERHOOD

L

Some interior noise may be caused by components under the hood or on the engine wall. The noise is then transmitted into the passenger compartment.

M

Causes of transmitted underhood noise include:

N

1. Any component mounted to the engine wall
2. Components that pass through the engine wall
3. Engine wall mounts and connectors
4. Loose radiator mounting pins
5. Hood bumpers out of adjustment
6. Hood striker out of adjustment

O

These noises can be difficult to isolate since they cannot be reached from the interior of the vehicle. The best method is to secure, move or insulate one component at a time and test drive the vehicle. Also, engine RPM or load can be changed to isolate the noise. Repairs can usually be made by moving, adjusting, securing, or insulating the component causing the noise.

P

SQUEAK AND RATTLE TROUBLE DIAGNOSES

< SERVICE INFORMATION >

Diagnostic Worksheet

INFOID:0000000007356060





Dear Customer:

We are concerned about your satisfaction with your vehicle. Repairing a squeak or rattle sometimes can be very difficult. To help us fix your vehicle right the first time, please take a moment to note the area of the vehicle where the squeak or rattle occurs and under what conditions. You may be asked to take a test drive with a service advisor or technician to ensure we confirm the noise you are hearing.

SQUEAK & RATTLE DIAGNOSTIC WORKSHEET

I. WHERE DOES THE NOISE COME FROM? (circle the area of the vehicle)

The illustrations are for reference only, and may not reflect the actual configuration of your vehicle.

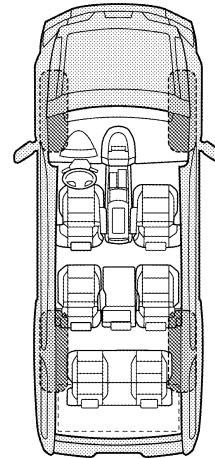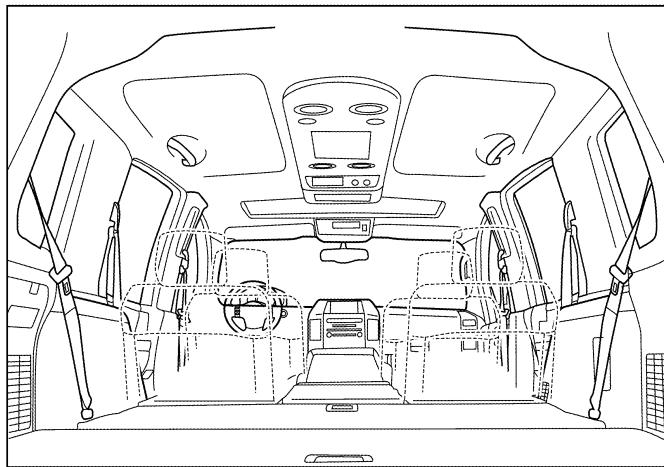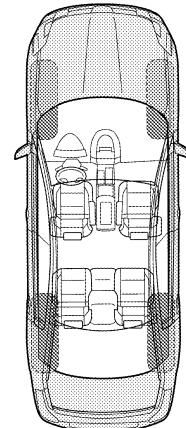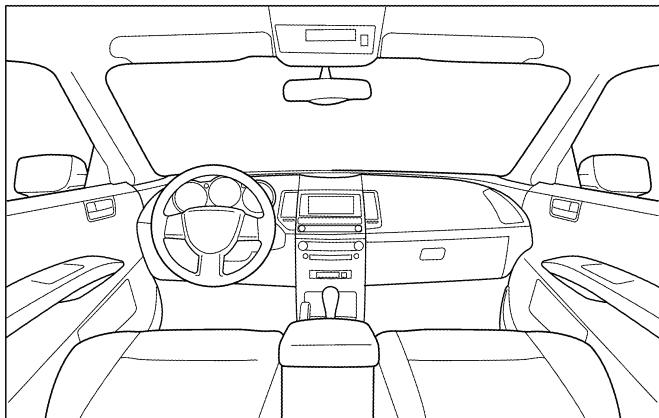

Continue to page 2 of the worksheet and briefly describe the location of the noise or rattle. In addition, please indicate the conditions which are present when the noise occurs.

SQUEAK AND RATTLE TROUBLE DIAGNOSES

< SERVICE INFORMATION >

SQUEAK & RATTLE DIAGNOSTIC WORKSHEET - page 2

Briefly describe the location where the noise occurs:

II. WHEN DOES IT OCCUR? (please check the boxes that apply)

- | | |
|---|--|
| <input type="checkbox"/> Anytime | <input type="checkbox"/> After sitting out in the rain |
| <input type="checkbox"/> 1st time in the morning | <input type="checkbox"/> When it is raining or wet |
| <input type="checkbox"/> Only when it is cold outside | <input type="checkbox"/> Dry or dusty conditions |
| <input type="checkbox"/> Only when it is hot outside | <input type="checkbox"/> Other: |

A

B

C

D

III. WHEN DRIVING:

- | | |
|---|--|
| <input type="checkbox"/> Through driveways | <input type="checkbox"/> Squeak (like tennis shoes on a clean floor) |
| <input type="checkbox"/> Over rough roads | <input type="checkbox"/> Creak (like walking on an old wooden floor) |
| <input type="checkbox"/> Over speed bumps | <input type="checkbox"/> Rattle (like shaking a baby rattle) |
| <input type="checkbox"/> Only about _____ mph | <input type="checkbox"/> Knock (like a knock at the door) |
| <input type="checkbox"/> On acceleration | <input type="checkbox"/> Tick (like a clock second hand) |
| <input type="checkbox"/> Coming to a stop | <input type="checkbox"/> Thump (heavy muffled knock noise) |
| <input type="checkbox"/> On turns: left, right or either (circle) | <input type="checkbox"/> Buzz (like a bumble bee) |
| <input type="checkbox"/> With passengers or cargo | |
| <input type="checkbox"/> Other: _____ | |
| <input type="checkbox"/> After driving _____ miles or _____ minutes | |

IV. WHAT TYPE OF NOISE

- | | |
|---|--|
| <input type="checkbox"/> Through driveways | <input type="checkbox"/> Squeak (like tennis shoes on a clean floor) |
| <input type="checkbox"/> Over rough roads | <input type="checkbox"/> Creak (like walking on an old wooden floor) |
| <input type="checkbox"/> Over speed bumps | <input type="checkbox"/> Rattle (like shaking a baby rattle) |
| <input type="checkbox"/> Only about _____ mph | <input type="checkbox"/> Knock (like a knock at the door) |
| <input type="checkbox"/> On acceleration | <input type="checkbox"/> Tick (like a clock second hand) |
| <input type="checkbox"/> Coming to a stop | <input type="checkbox"/> Thump (heavy muffled knock noise) |
| <input type="checkbox"/> On turns: left, right or either (circle) | <input type="checkbox"/> Buzz (like a bumble bee) |
| <input type="checkbox"/> With passengers or cargo | |
| <input type="checkbox"/> Other: _____ | |
| <input type="checkbox"/> After driving _____ miles or _____ minutes | |

E

F

G

H

I

TO BE COMPLETED BY DEALERSHIP PERSONNEL

Test Drive Notes:

YES	NO	Initials of person performing
-----	----	-------------------------------

SE

K

- | | | | |
|--|--------------------------|--------------------------|-------|
| Vehicle test driven with customer | <input type="checkbox"/> | <input type="checkbox"/> | _____ |
| - Noise verified on test drive | <input type="checkbox"/> | <input type="checkbox"/> | _____ |
| - Noise source located and repaired | <input type="checkbox"/> | <input type="checkbox"/> | _____ |
| - Follow up test drive performed to confirm repair | <input type="checkbox"/> | <input type="checkbox"/> | _____ |

L

M

VIN: _____ Customer Name: _____
W.O.# _____ Date: _____

N

This form must be attached to Work Order

O

P

HEATED SEAT

< DTC/CIRCUIT DIAGNOSIS >

DTC/CIRCUIT DIAGNOSIS


HEATED SEAT

Description

INFOID:0000000007356061

- When handling seat, be extremely careful not to scratch heating unit (1).
- To replace heating unit, seat trim and pad should be separated for the front seat cushion LH. For seatback and front seat cushion RH, complete cushion (2) or seatback assembly (3) must be replaced.
- Do not use any organic solvent, such as thinner, benzene, alcohol, etc. to clean trim.

Thermostat operation	ON	OFF
Trim temperature °C (°F)	25 -35 (77 - 95)	35 - 45 (95 - 113)

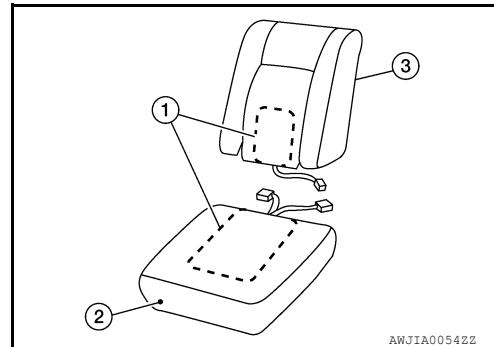

AWJIA00542Z

POWER SEAT FOR DRIVER SIDE

< WIRING DIAGRAM >

WIRING DIAGRAM


POWER SEAT FOR DRIVER SIDE

Wiring Diagram - Without Automatic Drive Positioner

INFOID:000000007356062

POWER SEAT FOR DRIVER SIDE - WITHOUT AUTOMATIC DRIVE POSITIONER

PP : WITH FRONT PASSENGER POWER SEAT

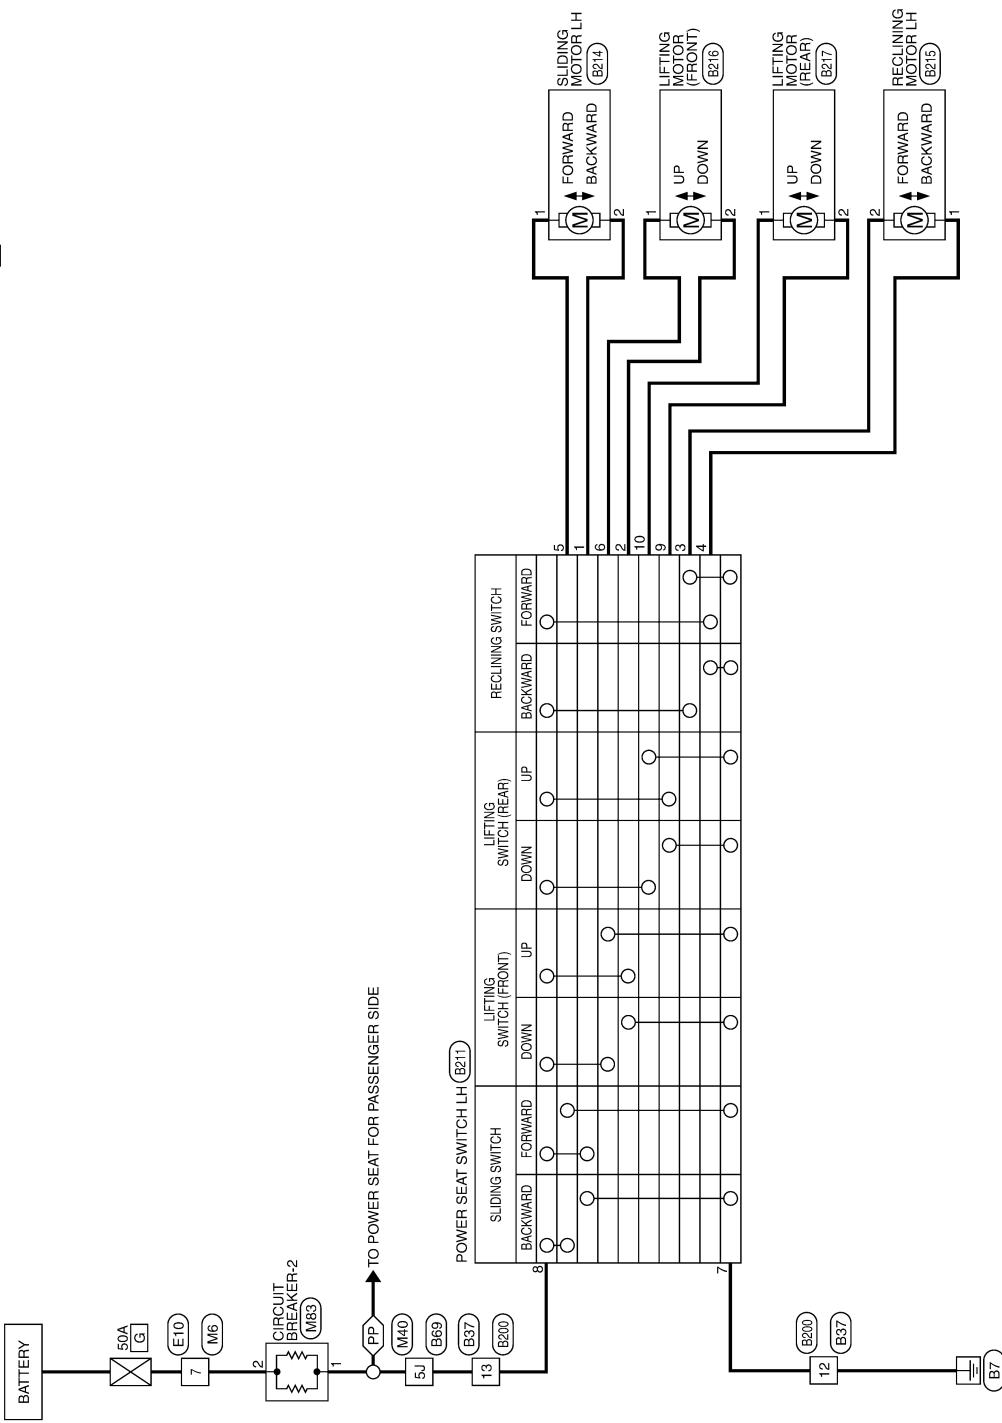


ABJWA0003GB

POWER SEAT FOR DRIVER SIDE CONNECTORS - WITHOUT AUTOMATIC DRIVE POSITIONER


< WIRING DIAGRAM >

POWER SEAT FOR DRIVER SIDE CONNECTORS - WITHOUT AUTOMATIC DRIVE POSITIONER

Connector No.	M6
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 

Connector No.	M40
Connector Name	WIRE TO WIRE
Connector Color	WHITE

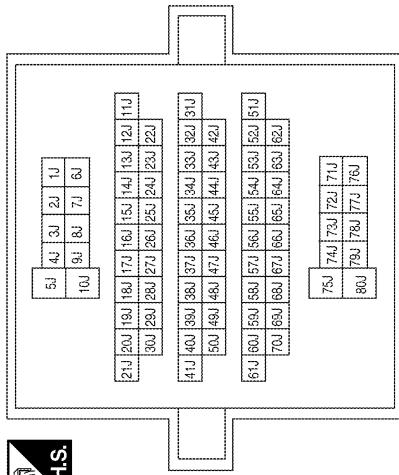

Terminal No.	Color of Wire	Signal Name
5J	G	—

Terminal No.	Color of Wire	Signal Name
7	W	—
8J		

Terminal No.	Color of Wire	Signal Name
5J	G	—

Terminal No.	Color of Wire	Signal Name
7	W	—
8J		

Terminal No.	Color of Wire	Signal Name
5J	G	—

Terminal No.	Color of Wire	Signal Name
7	W	—
8J		

Terminal No.	Color of Wire	Signal Name
5J	G	—

Terminal No.	Color of Wire	Signal Name
7	W	—
8J		

Terminal No.	Color of Wire	Signal Name
5J	G	—

Terminal No.	Color of Wire	Signal Name
7	W	—
8J		


Terminal No.	Color of Wire	Signal Name
5J	G	—

ABJIA0376GB


POWER SEAT FOR DRIVER SIDE

< WIRING DIAGRAM >

Connector No.	B200
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
5J	G	-

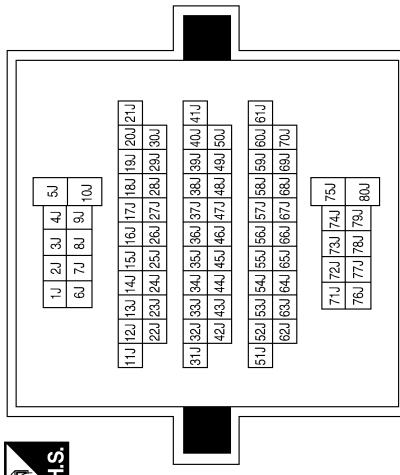

Connector No.	B69
Connector Name	WIRE TO WIRE
Connector Color	WHITE


Terminal No.	Color of Wire	Signal Name
12	B	-
13	W/L	-



Terminal No.	Color of Wire	Signal Name
12	B	-
13	W/L	-

Terminal No.	Color of Wire	Signal Name
3	G/W	-
4	R/W	-
5	R	-
6	Y/B	-
7	B	-
8	W/L	-
9	L/W	-

Terminal No.	Color of Wire	Signal Name
10	L	-
11	-	-

 

Terminal No.	Color of Wire	Signal Name
1	R	-
2	G	-

SE

K

M

Z

O

P

A

B

C

D

E

F

G

H

I

J

L

N

S

T

U

V

W

X

Y

Z

POWER SEAT FOR DRIVER SIDE

< WIRING DIAGRAM >

Connector No.	B217
Connector Name	LIFTING MOTOR (REAR) (WITHOUT AUTOMATIC DRIVE POSITIONER)
Connector Color	GRAY



Connector No.	B216
Connector Name	LIFTING MOTOR (FRONT) (WITHOUT AUTOMATIC DRIVE POSITIONER)
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
1	Y/W	-
2	Y	-

Connector No.	B215
Connector Name	RECLINING MOTOR LH (WITHOUT AUTOMATIC DRIVE POSITIONER)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	R/W	-
2	G/W	-

ABJIA0006GB


POWER SEAT FOR PASSENGER SIDE

< WIRING DIAGRAM >

POWER SEAT FOR PASSENGER SIDE

Wiring Diagram

INFOID:0000000007356063

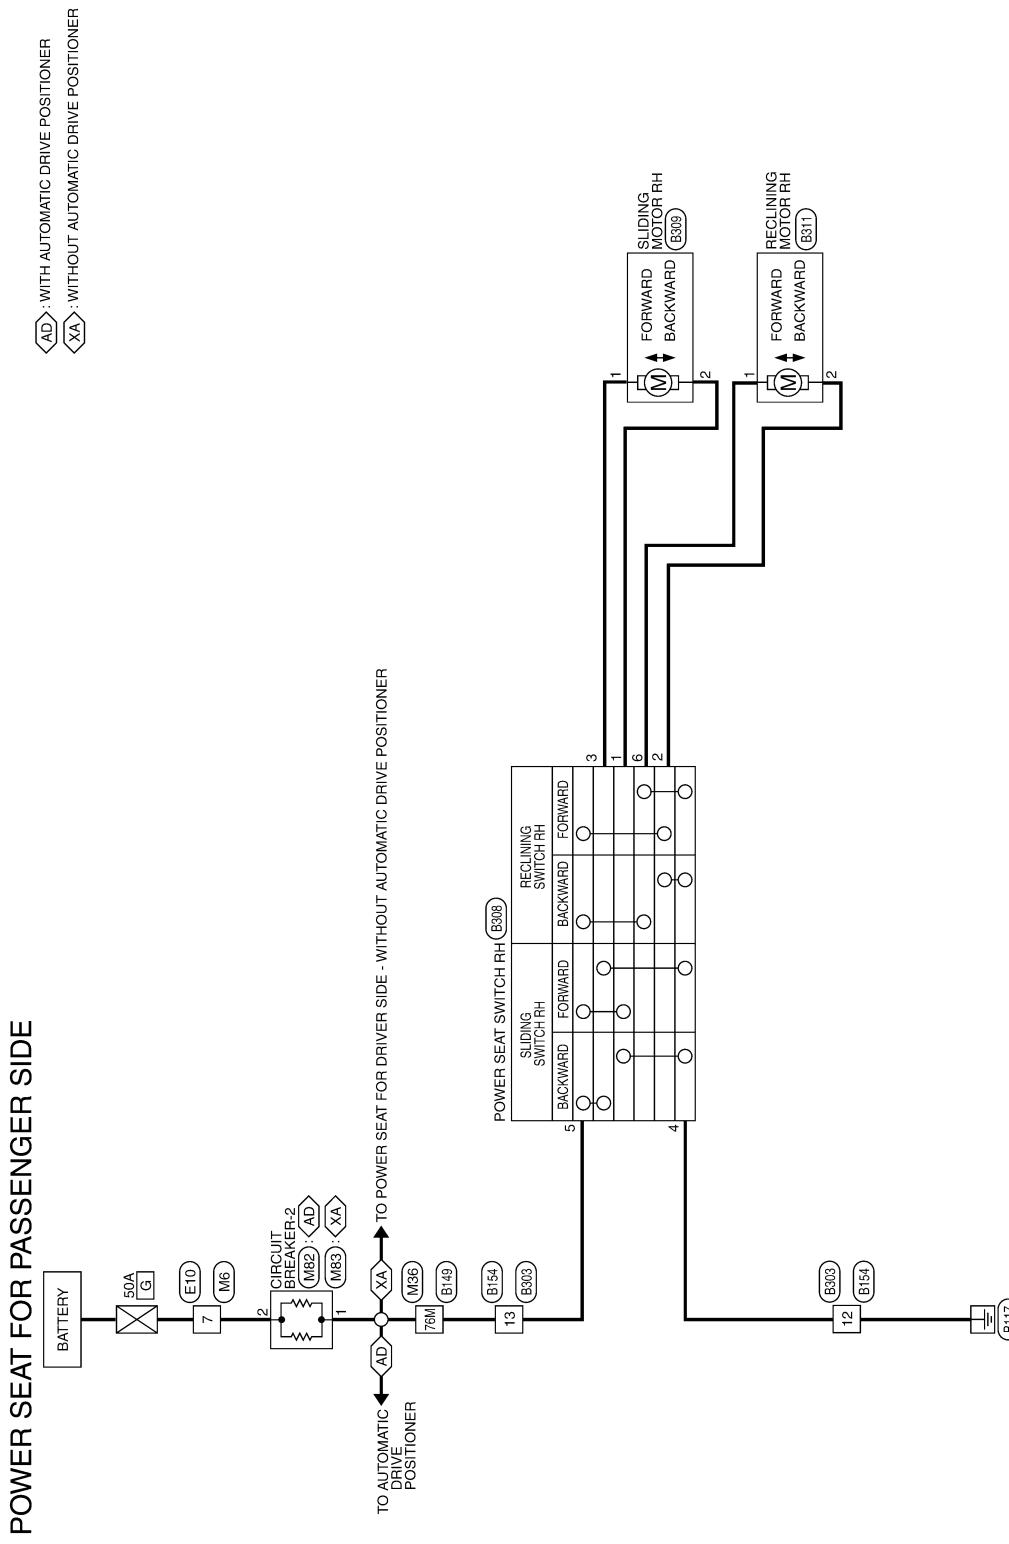


ABJWA0255GB

POWER SEAT FOR PASSENGER SIDE


< WIRING DIAGRAM >

POWER SEAT FOR PASSENGER SIDE CONNECTORS

Connector No.	M6
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 


Connector No.	M36
Connector Name	WIRE TO WIRE
Connector Color	WHITE

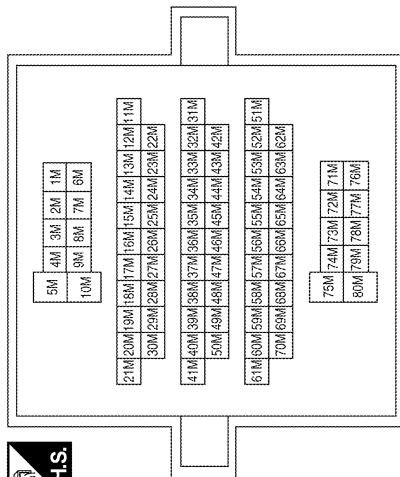

Terminal No.	Color of Wire	Signal Name
7	W	—

Terminal No.	Color of Wire	Signal Name
76M	LG	—

Connector No.	M83
Connector Name	CIRCUIT BREAKER-2 (WITHOUT AUTOMATIC DRIVE POSITIONER)
Connector Color	WHITE

 

Connector No.	E10
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
7	W	—

Connector No.	M82
Connector Name	CIRCUIT BREAKER-2 (WITH AUTOMATIC DRIVE POSITIONER)
Connector Color	WHITE






Terminal No.	Color of Wire	Signal Name
1	SB	—
2	P	—

ABJIA0373GB


POWER SEAT FOR PASSENGER SIDE

< WIRING DIAGRAM >

Connector No.	B149
Connector Name	WIRE TO WIRE
Connector Color	WHITE

  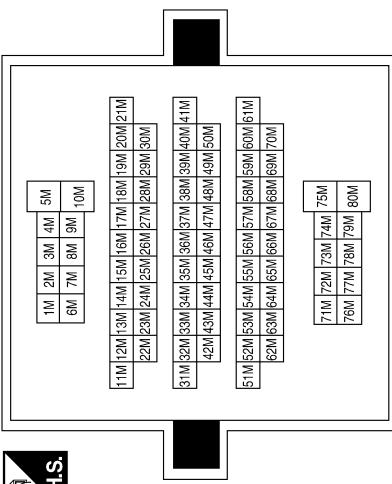

Connector No.	B303
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
12	B	-
13	LG	-

Terminal No.	Color of Wire	Signal Name
76M	LG	-



Terminal No.	Color of Wire	Signal Name
12	B	-
13	W/L	-


Connector No.	B311
Connector Name	RECLINING MOTOR RH
Connector Color	WHITE



Connector No.	B309
Connector Name	SLIDING MOTOR RH
Connector Color	GRAY



Connector No.	B308
Connector Name	POWER SEAT SWITCH RH
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
1	Y	-
2	Y/B	-

Terminal No.	Color of Wire	Signal Name
3	G	-
4	B	-

Terminal No.	Color of Wire	Signal Name
5	W/L	-
6	G/B	-

Terminal No.	Color of Wire	Signal Name
1	G/B	-
2	Y/B	-

Terminal No.	Color of Wire	Signal Name
1	2	1

Terminal No.	Color of Wire	Signal Name
2	1	2
3	2	1

ABJIA0007GB

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P
Q
R
S
T
U
V
W
X
Y
Z

HEATED SEAT


< WIRING DIAGRAM >

HEATED SEAT

Wiring Diagram

INFOID:0000000007356064

 : WITH FRONT PASSENGER POWER SEAT
 : WITHOUT FRONT PASSENGER POWER SEAT

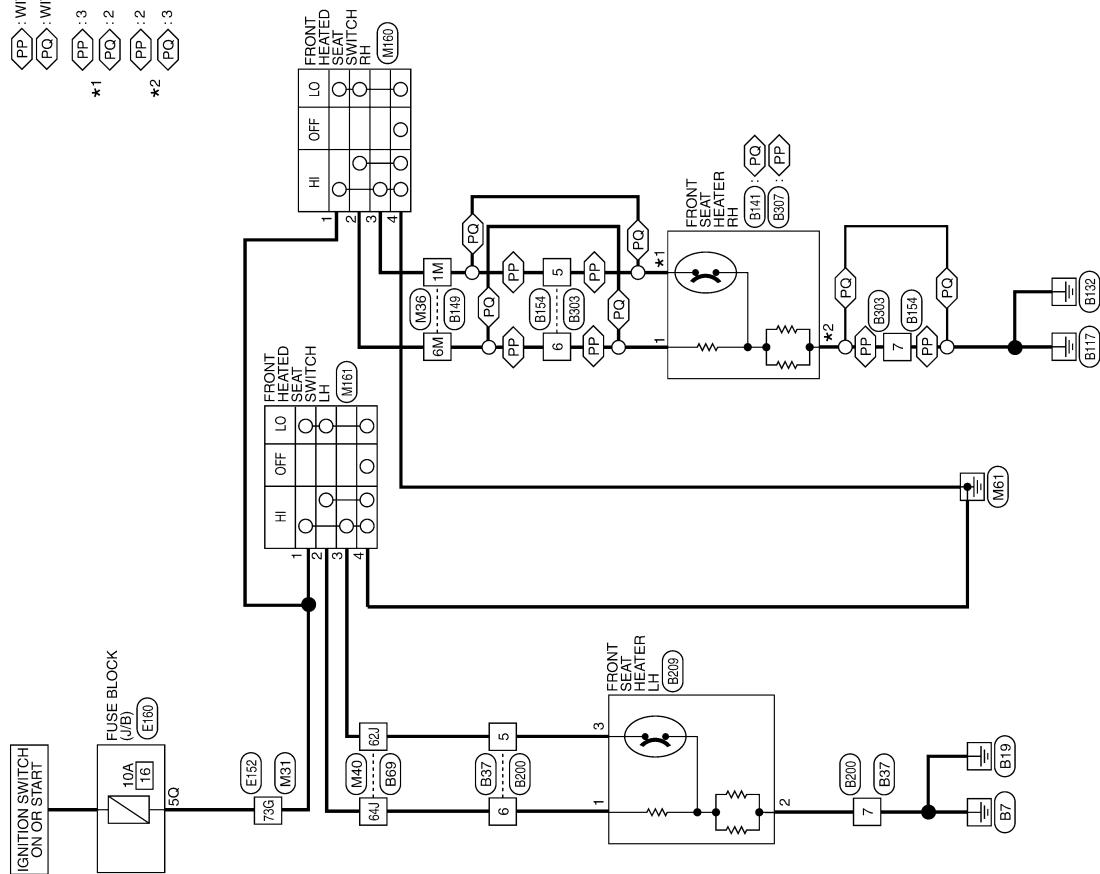

HEATED SEAT


ABJWA0213GP

HEATED SEAT

< WIRING DIAGRAM >


HEATED SEAT CONNECTORS

Connector No.	M31
Connector Name	WIRE TO WIRE
Connector Color	WHITE

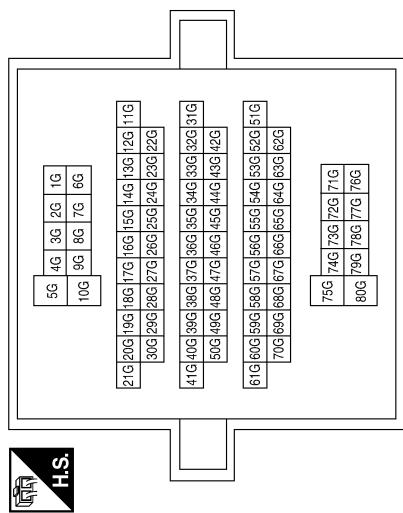

Terminal No.	Color of Wire	Signal Name
73G	W/R	-

Connector No.	M36
Connector Name	WIRE TO WIRE
Connector Color	WHITE

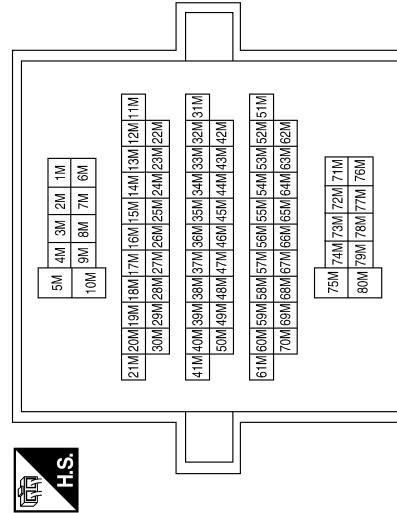


Terminal No.	Color of Wire	Signal Name
1M	GR	-
6M	W	-

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P
SE

ABJIA0021GB

HEATED SEAT

< WIRING DIAGRAM >

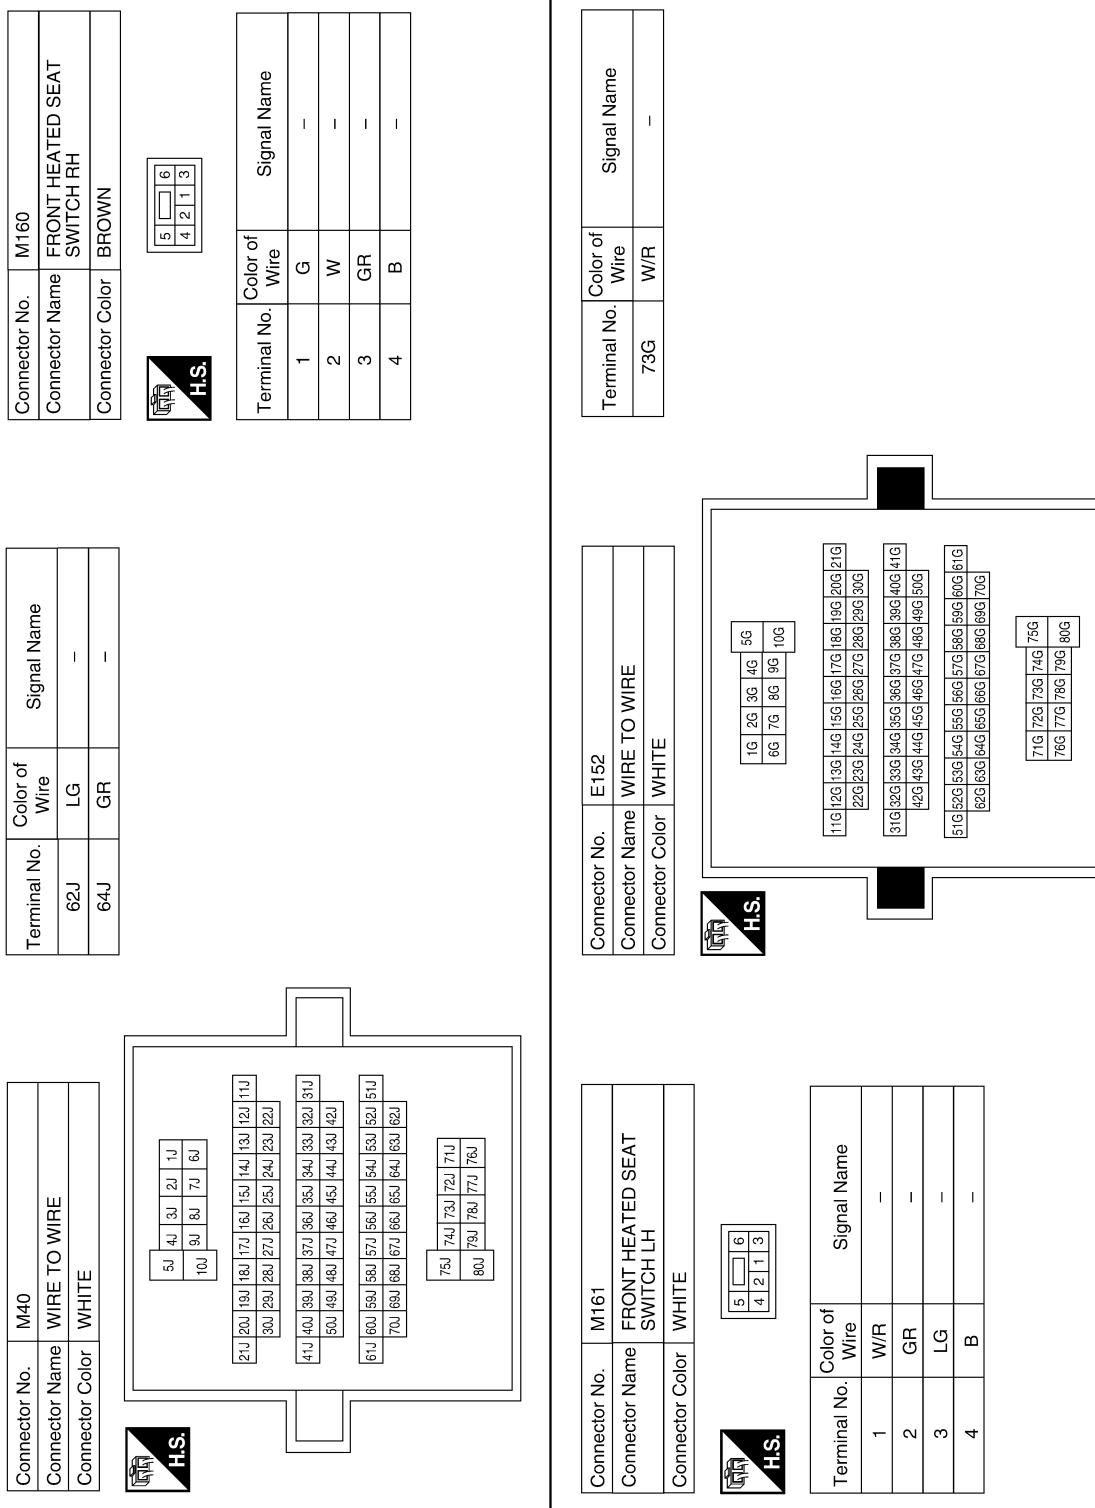


ABJIA0022GB

HEATED SEAT

< WIRING DIAGRAM >

Connector No.	E160
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE

 


Terminal No.	Color of Wire	Signal Name
5Q	W/R	—

Terminal No.	Color of Wire	Signal Name
5	LG	—
6	GR	—
7	B	—

Connector No.	B69
Connector Name	WIRE TO WIRE
Connector Color	WHITE

Terminal No.	Color of Wire	Signal Name
62J	LG	—
64J	GR	—

Connector No.	B141
Connector Name	FRONT SEAT HEATER RH (WITHOUT FRONT PASSENGER POWER SEAT)
Connector Color	WHITE

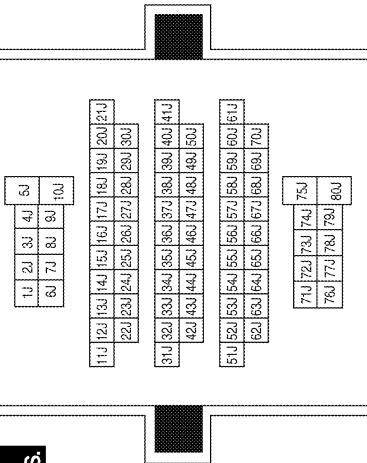


ABJIA0374GB

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P
Q
R
S
T
U
V
W
X
Y
Z
SE

HEATED SEAT


< WIRING DIAGRAM >

Connector No.	B154
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
1M	GR	-
6M	W	-

 Signal Name



Terminal No.	Color of Wire	Signal Name
5	GR	-
6	W	-
7	B	-

Terminal No.	Color of Wire	Signal Name
1	2	3
2	3	4
3	4	5
4	5	6
5	6	7
6	7	-
7	8	-
8	9	-
9	10	-
10	11	-
11	12	-
12	13	-
13	14	-
14	15	-
15	16	-



Terminal No.	Color of Wire	Signal Name
1M	GR	-
6M	W	-

Signal Name



Terminal No.	Color of Wire	Signal Name
5	GR	-
6	W	-
7	B	-



Terminal No.	Color of Wire	Signal Name
1	2	3
2	3	4
3	4	5
4	5	6
5	6	7
6	7	-
7	8	-
8	9	-
9	10	-
10	11	-
11	12	-
12	13	-
13	14	-
14	15	-
15	16	-



HEATED SEAT

< WIRING DIAGRAM >

A

B

C

D

E

F

G

H

I

SE

K

L

M

N

O

P

Connector No.	B307
Connector Name	FRONT SEAT HEATER RH (WITH FRONT PASSENGER POWER SEAT)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	Y	—
2	G/W	—
3	Y/B	—

ABJIA0375GB

PRECAUTIONS

< PRECAUTION >

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:0000000007356065

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SR and SB section of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SR section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

- When working near the Airbag Diagnosis Sensor Unit or other Airbag System sensors with the Ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the Ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

Precaution Necessary for Steering Wheel Rotation After Battery Disconnect

INFOID:0000000007356066

NOTE:

- This Procedure is applied only to models with Intelligent Key system and NATS (NISSAN ANTI-THEFT SYSTEM).
- Remove and install all control units after disconnecting both battery cables with the ignition knob in the "LOCK" position.
- Always use CONSULT to perform self-diagnosis as a part of each function inspection after finishing work. If DTC is detected, perform trouble diagnosis according to self-diagnostic results.

For models equipped with the Intelligent Key system and NATS, an electrically controlled steering lock mechanism is adopted on the key cylinder.

For this reason, if the battery is disconnected or if the battery is discharged, the steering wheel will lock and steering wheel rotation will become impossible.

If steering wheel rotation is required when battery power is interrupted, follow the procedure below before starting the repair operation.

OPERATION PROCEDURE

1. Connect both battery cables.

NOTE:

Supply power using jumper cables if battery is discharged.

2. Use the Intelligent Key or mechanical key to turn the ignition switch to the "ACC" position. At this time, the steering lock will be released.
3. Disconnect both battery cables. The steering lock will remain released and the steering wheel can be rotated.
4. Perform the necessary repair operation.

PRECAUTIONS

< PRECAUTION >

5. When the repair work is completed, return the ignition switch to the "LOCK" position before connecting the battery cables. (At this time, the steering lock mechanism will engage.)
6. Perform a self-diagnosis check of all control units using CONSULT.

A

Precaution for Work

INFOID:000000007356067

B

- When removing or disassembling each component, be careful not to damage or deform it. If a component may be subject to interference, be sure to protect it with a shop cloth.
- When removing (disengaging) components with a screwdriver or similar tool, be sure to wrap the component with a shop cloth or vinyl tape to protect it.
- Protect the removed parts with a shop cloth and prevent them from being dropped.
- Replace a deformed or damaged clip.
- If a part is specified as a non-reusable part, always replace it with new one.
- Be sure to tighten bolts and nuts securely to the specified torque.
- After installation is complete, be sure to check that each part works properly.
- Follow the steps below to clean components.
 - Water soluble dirt: Dip a soft cloth into lukewarm water, and wring the water out of the cloth to wipe the dirty area.
Then rub with a soft and dry cloth.
 - Oily dirt: Dip a soft cloth into lukewarm water with mild detergent (concentration: within 2 to 3%), and wipe the dirty area.
Then dip a cloth into fresh water, and wring the water out of the cloth to wipe the detergent off. Then rub with a soft and dry cloth.
 - Do not use organic solvent such as thinner, benzene, alcohol, or gasoline.
 - For genuine leather seats, use a genuine leather seat cleaner.

C

D

E

F

G

H

I

SE

K

L

M

N

O

P

PREPARATION

< PREPARATION >



PREPARATION

PREPARATION

Special Service Tool


INFOID:0000000007356068

The actual shapes of Kent-Moore tools may differ from those of special service tools illustrated here.

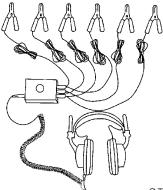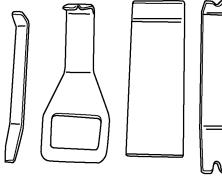Tool number (Kent-Moore No.) Tool name	Description
— (J-39570) Chassis ear	 SIIA0993E Locating the noise
— (J-43980) NISSAN Squeak and Rattle Kit	 SIIA0994E Repairing the cause of noise
— (J-46534) Trim Tool Set	 AWJIA0483ZZ Removing trim components

Commercial Service Tool

INFOID:0000000007356069

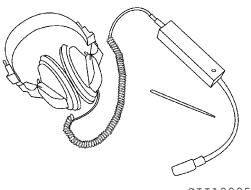(Kent-Moore No.) Tool name	Description
(J-39565) Engine ear	 SIIA0995E Locating the noise

CLIP LIST


 





 

< PREPARATION >

CLIP LIST

Descriptions for Clips

INFOID:0000000007836150

Replace any clips which are damaged during removal or installation.

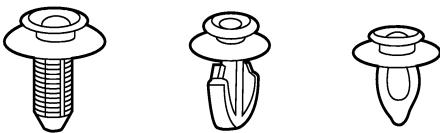
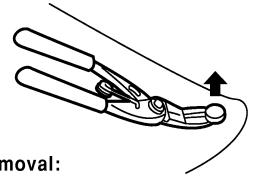
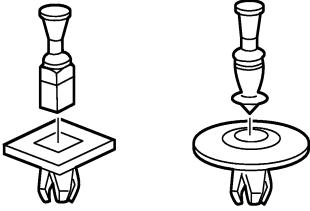
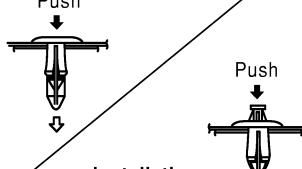
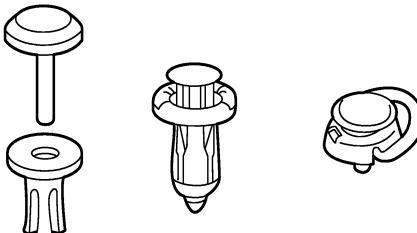
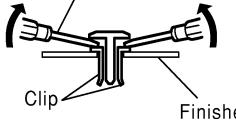

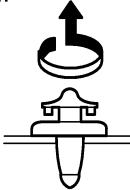
Symbol No.	Shapes	Removal & Installation
C101		<p>Removal: Remove by bending up with flat-bladed screwdrivers or clip remover.</p> 
C103		<p>Removal: Remove with a clip remover.</p> 
C203		<p>Removal: Push center pin to catching position. (Do not remove center pin by hitting it.)</p>  <p>Installation:</p> 
C205		<p>Removal:</p> 
C206		<p>Removal:</p> 

SIIA0315E

A
B
C
D
E
F
G
H
I
SE
K
L
M
N
O
P

CLIP LIST




< PREPARATION >

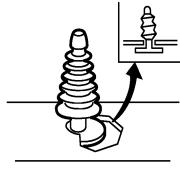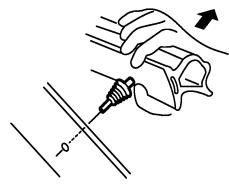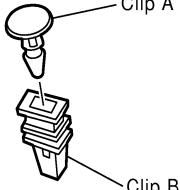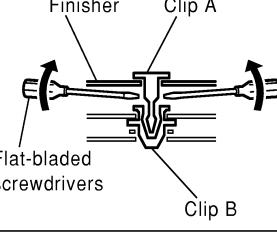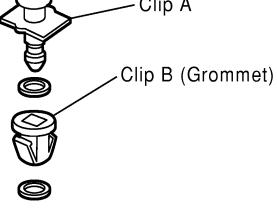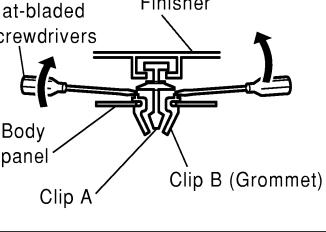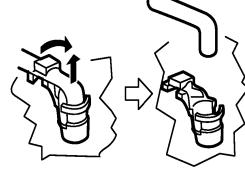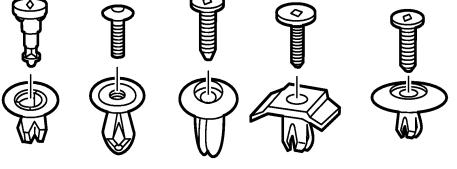Symbol No.	Shapes	Removal & Installation
CE103 		Removal: 
CF110 		Removal: 
CF118 		Removal: 
CR103 		Removal: Holder portion of clip must be spread out to remove rod. 
CS101 		Removal: 1. Screw out with a Phillips screwdriver. 2. Remove female portion with flat-bladed screwdriver. 

SIIA0316E

CLIP LIST
 
< PREPARATION >





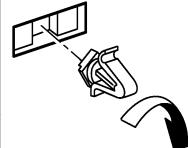
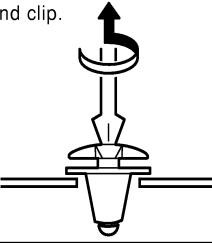
Symbol No.	Shapes	Removal & Installation	
CG101 		Removal:  Rotate 45° to remove	Installation: 
CS102 			
CS113 		Removal: Disconnect upper connection of clip with a flat-bladed screwdriver, then remove clip while inserting a flat-bladed screwdriver between body panel and clip.	
C111 			

SIIA0317E

A
B
C
D
E
F
G
H
I
SE
K
L
M
N
O
P

CLIP LIST
 
< PREPARATION >

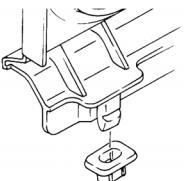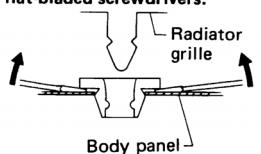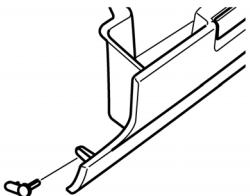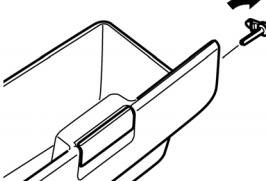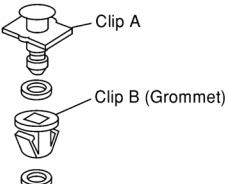Symbol No.	Shapes	Removal & Installation
CG104 		Removal: Remove by bending up with flat-bladed screwdrivers.  <p>Radiator grille Body panel</p>
CE114 		
CF118 	 <p>Clip A Clip B (Grommet)</p>	Removal: Flat-bladed screwdrivers Finisher Body panel Clip A Clip B (Grommet) 

ALJIA0564GB

FRONT SEAT

< REMOVAL AND INSTALLATION >

REMOVAL AND INSTALLATION FRONT SEAT

Exploded View

INFOID:000000007356070

A

B

C

D

E

F

G

H

I

SE

K

L


M

N

O

P

Power Driver Seat

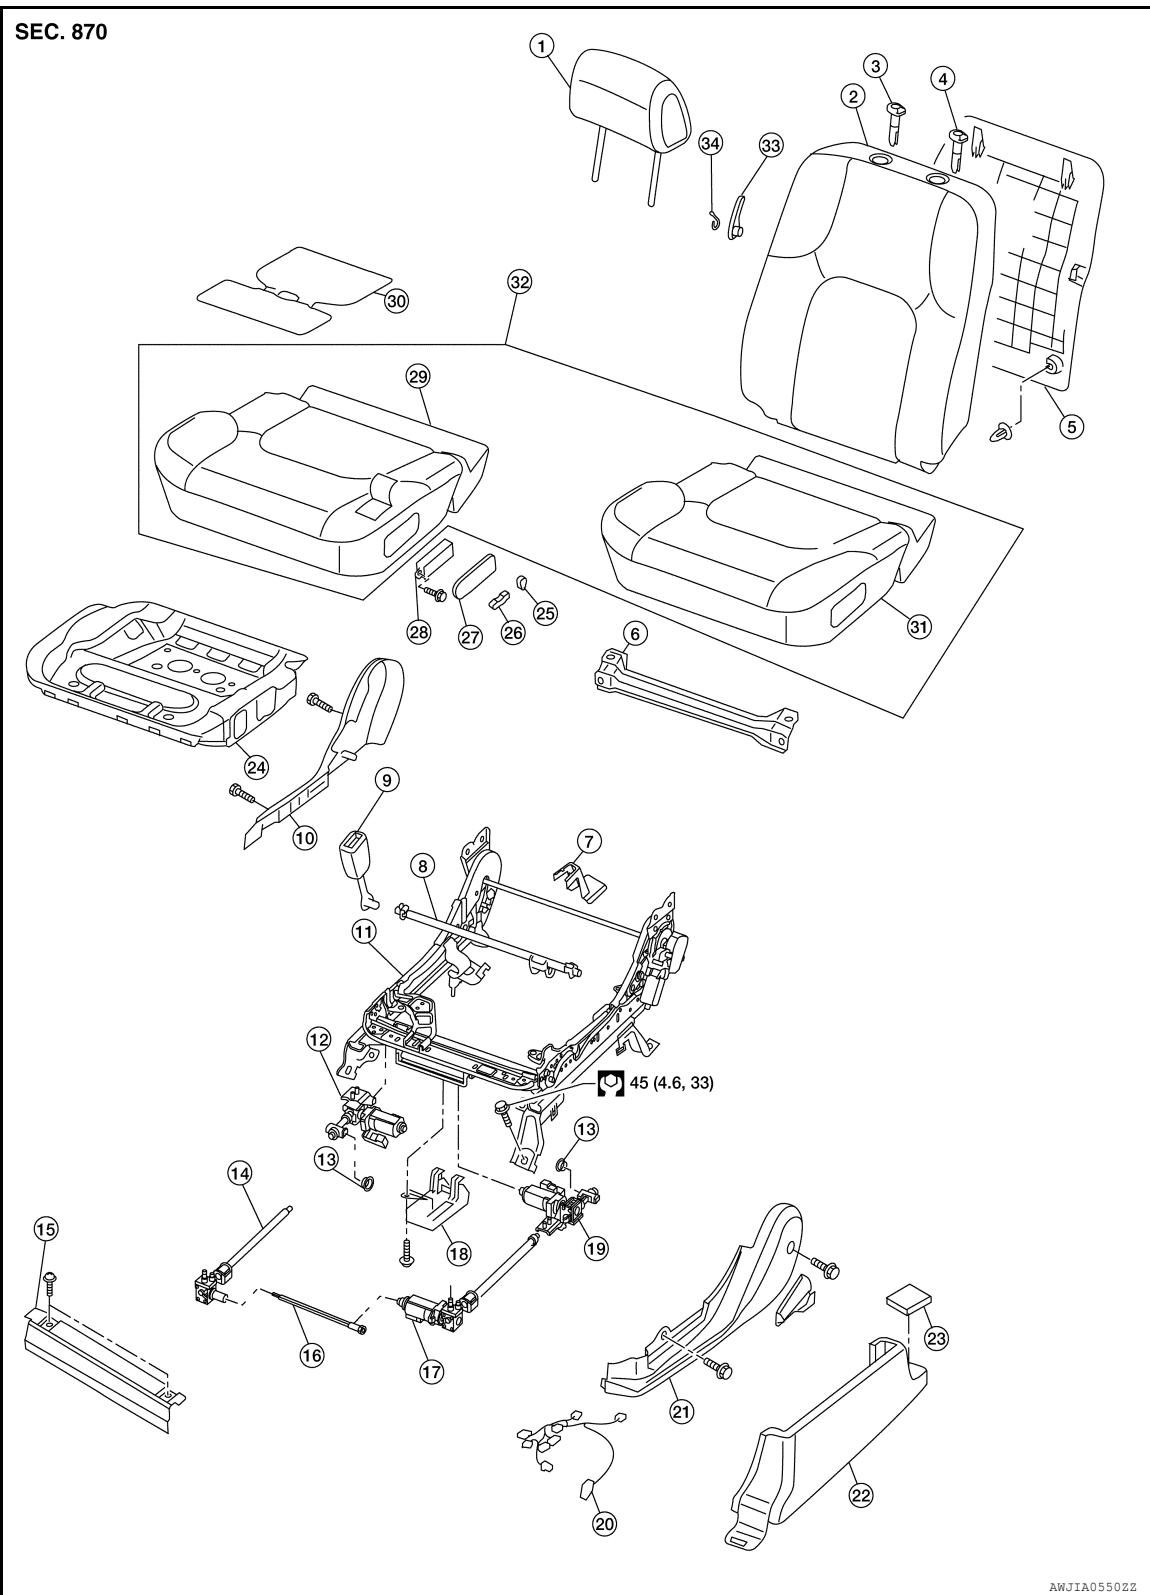

AMJIA0550Z2

FRONT SEAT


< REMOVAL AND INSTALLATION >

- | | | |
|---|-------------------------------------|-------------------------------------|
| 1. Headrest | 2. Seatback assembly | 3. Headrest holder |
| 4. Headrest holder with multi position lock | 5. Seatback board | 6. Power seat cushion rear finisher |
| 7. Leg Cover | 8. Lifter motor link bar | 9. Seat belt buckle assembly |
| 10. Seat cushion inner finisher | 11. Seat frame assembly | 12. Seat lifter motor assembly |
| 13. Seat spacer | 14. Lock gear | 15. Seat cushion front finisher |
| 16. Flexible seat wire | 17. Front seat slide motor assembly | 18. Power seat control assembly |
| 19. Lifter motor bracket assembly | 20. Driver seat wiring harness | 21. Seat cushion outer finisher |
| 22. Leg cover | 23. Bolt cover | 24. Seat cushion frame |
| 25. Recliner switch knob | 26. Slide switch knob | 27. Power seat switch escutcheon |
| 28. Switch assembly | 29. Seat cushion pad | 30. Seat cushion heating element |
| 31. Seat cushion trim | 32. Seat cushion assembly | 33. Lumbar support lever knob |
| 34. Snap ring | | |

FRONT SEAT

< REMOVAL AND INSTALLATION >

Manual Driver Seat

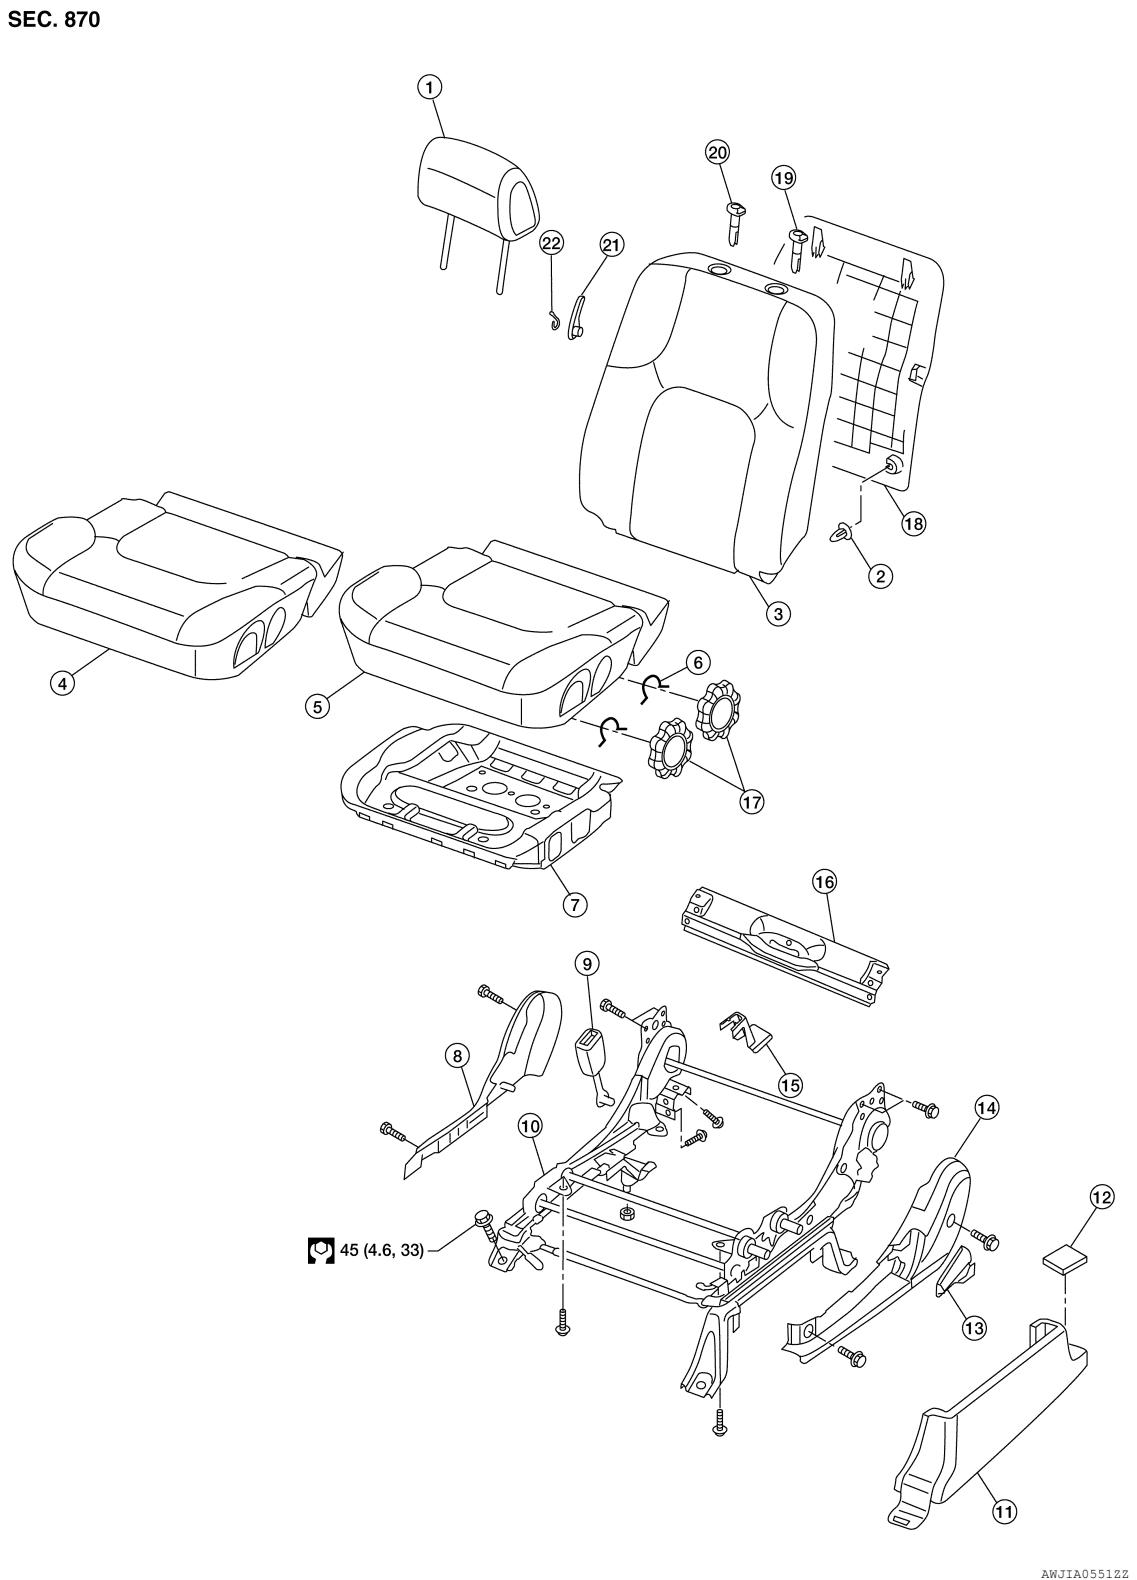

1. Headrest
2. Trim clip
3. Seatback assembly
4. Seat cushion trim cover
5. Seat cushion pad
6. Snap ring
7. Seat cushion frame
8. Seat cushion inner finisher
9. Seat belt buckle assembly
10. Seat frame assembly
11. Leg cover
12. Bolt cover
13. Recline lever
14. Seat cushion outer finisher
15. Leg cover
16. Seat cushion rear finisher
17. Seat cushion lift knobs
18. Seatback board


A
B
C
D
E
F
G
H
I
SE
K
L
M
N
O
P

FRONT SEAT

< REMOVAL AND INSTALLATION >

- | | | |
|--|---------------------|-------------------------------|
| 19. Headrest holder with multi position lock | 20. Headrest holder | 21. Lumbar support lever knob |
| 22. Snap ring | | |

Conventional Passenger Seat

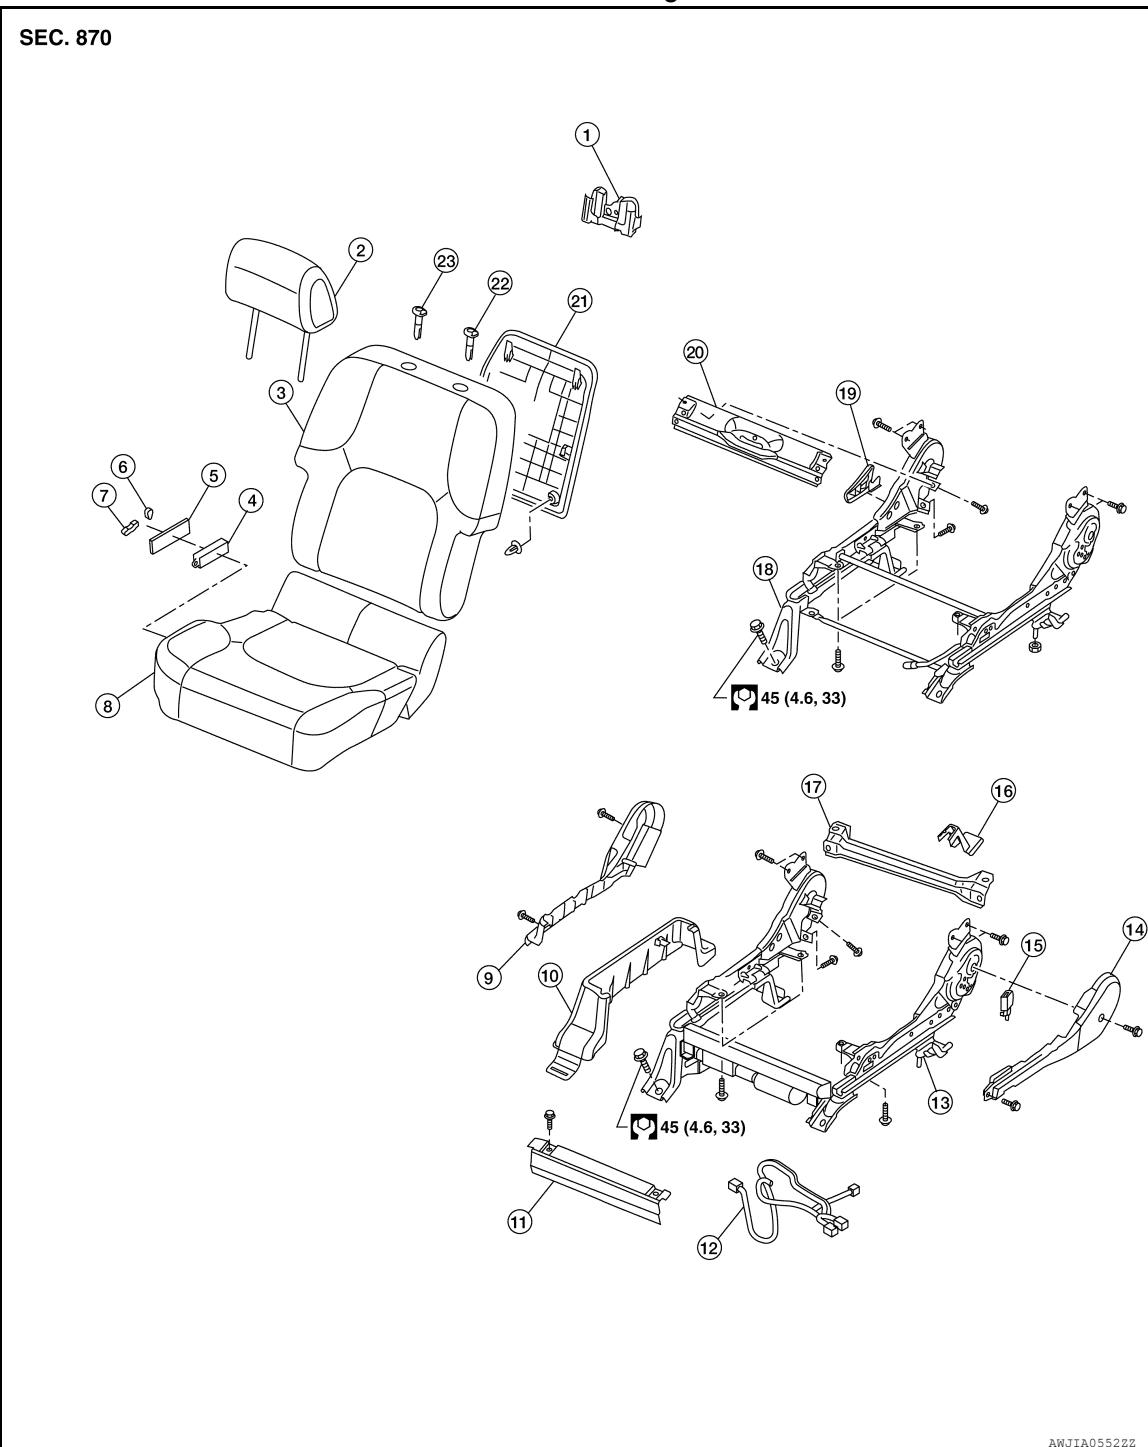

AWJIA0552Z

- | | | |
|-------------------------------|---------------------------------|-----------------------------------|
| 1. Damper assembly | 2. Headrest | 3. Seatback assembly |
| 4. Switch assembly | 5. Power seat switch escutcheon | 6. Recliner switch knob |
| 7. Slide switch knob | 8. Seat cushion assembly | 9. Seat cushion outer cover |
| 10. Leg cover | 11. Seat cushion front finisher | 12. Passenger seat wiring harness |
| 13. Power seat frame assembly | 14. Seat cushion inner finisher | 15. Seat belt buckle assembly |
| 16. Leg cover | 17. Seat cushion rear finisher | 18. Manual seat frame assembly |
| 19. Recline lever | 20. Seat cushion rear finisher | 21. Seatback board |


FRONT SEAT

< REMOVAL AND INSTALLATION >

22. Headrest holder with multi position lock 23. Headrest holder

A
B
C
D
E
F
G
H
I
SE
K
L
M
N
O
P

Fold Flat Passenger Seat

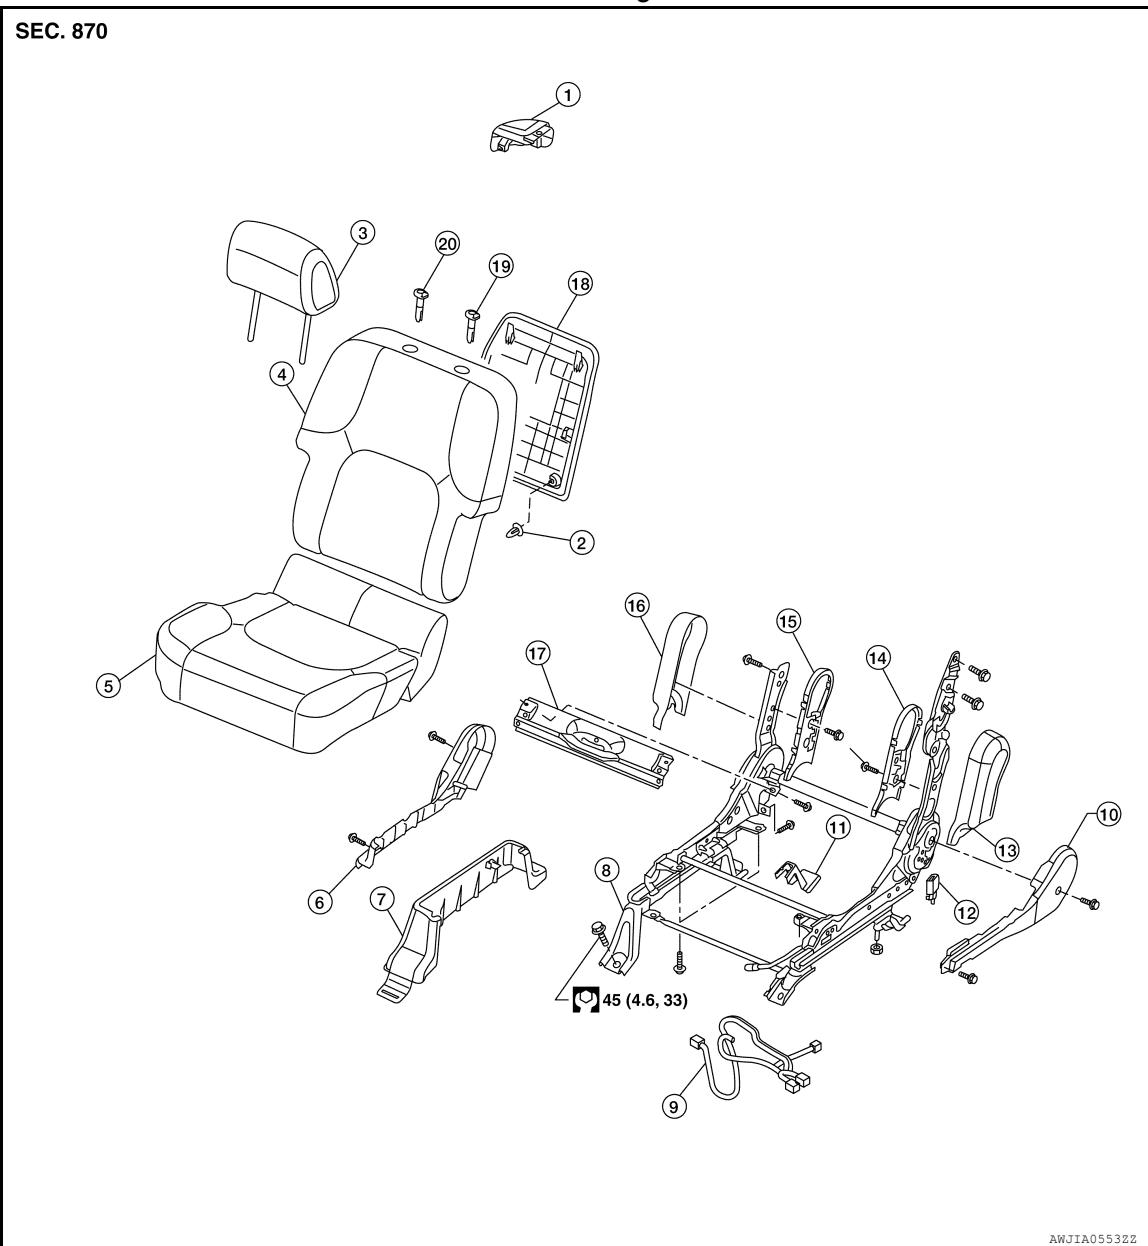

- | | | |
|--|---------------------------------------|--|
| 1. Front seatback lever | 2. Trim clip | 3. Headrest |
| 4. Seatback assembly | 5. Seat cushion assembly | 6. Seat cushion outer finisher |
| 7. Leg cover | 8. Seat frame assembly | 9. Passenger seat wiring harness |
| 10. Seat cushion inner cover | 11. Leg cover | 12. Seat belt buckle assembly |
| 13. Inboard reclining arm outer cover | 14. Inboard reclining arm inner cover | 15. Outboard reclining arm inner cover |
| 16. Outboard reclining arm outer cover | 17. Seat cushion rear finisher | 18. Seatback board |
| 19. Headrest holder with multi position lock | 20. Headrest holder | |

Removal and Installation

INFOID:000000007356071

REMOVAL

FRONT SEAT

< REMOVAL AND INSTALLATION >

CAUTION:

- When removing or installing the seat trim, handle it carefully to keep dirt out and avoid damage.
- Before removing the front seat, turn the ignition switch off, disconnect both battery terminals and wait at least 3 minutes.
- When checking the power seat circuit for continuity using a circuit tester, do not confuse its connector with the side air bag module connector. Such an error may cause the air bag to deploy.
- Do not drop, tilt, or bump the side air bag module while installing the seat. Always handle it with care.
- After front side air bag module inflates, front seatback assembly must be replaced.
- Front passenger seat is equipped with an Occupant Classification System sensor and control module. Do not disassemble front passenger seat cushion assembly or remove the trim as this will affect the Occupant Classification System calibration.
- Always replace passenger seat cushion as an assembly.

1. Slide the seat until the four front seat bolts are visible and a tool can be inserted.

NOTE:

Set the front/rear cushion lifters to the top position.

2. Disconnect both the negative and positive battery terminals and wait at least three minutes.
3. Disconnect the side air bag module harness connector.
4. If removing the passenger seat, disconnect the Occupant Classification System harness.
5. Remove the four front seat bolts.
6. Disconnect the power seat harness connectors (if equipped) and remove the seat from the vehicle.

CAUTION:

When removing and installing the seat, use shop cloths to protect the vehicle from damage.

INSTALLATION

Installation is in the reverse order of removal.

REAR SEAT

< REMOVAL AND INSTALLATION >

REAR SEAT


Removal and Installation

INFOID:0000000007356072

SECOND ROW OUTBOARD

Removal

1. Tilt seat cushion forward.
2. Remove two seat bolts.

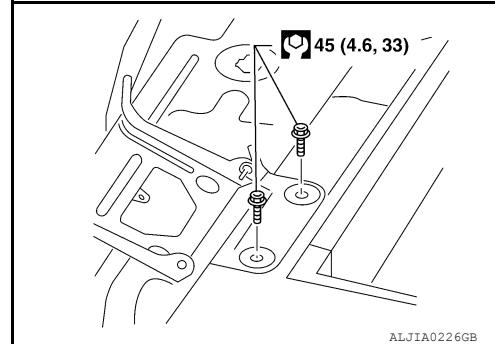

3. Lower seat cushion and tilt seatback forward.
4. Remove seat base trim cover.
5. Remove forward seat nuts and assembly.


Installation

Installation is in the reverse order of removal.

SECOND ROW CENTER

Removal

1. Tilt the seat cushion forward.
2. Remove the seat cushion bolts and assembly.
3. Remove the seatback bolts and assembly.

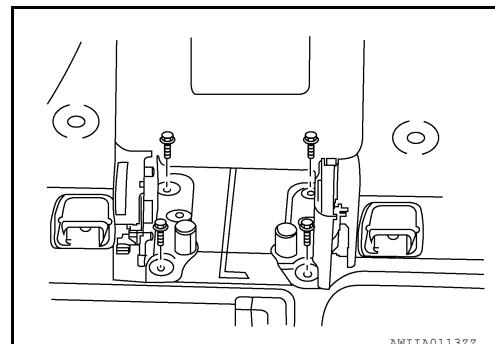


Installation

Installation is in the reverse order of removal.

THIRD ROW

Removal

1. Remove the lower base trim covers.
2. Remove front anchor bolts.
3. Lower the seatback into the cargo floor position.
4. Remove the rear anchor bolts from the seat assembly.
5. Remove the seat assembly.

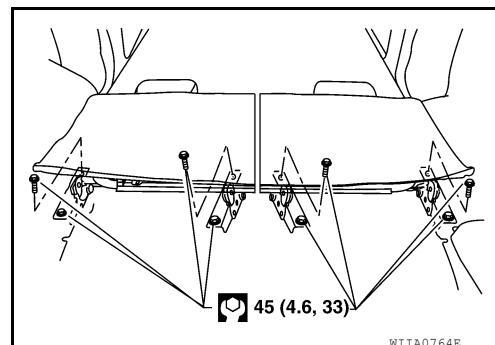

REAR SEAT

< REMOVAL AND INSTALLATION >

Installation

Installation is in the reverse order of removal.

FRONT SEAT

< UNIT DISASSEMBLY AND ASSEMBLY >

UNIT DISASSEMBLY AND ASSEMBLY

FRONT SEAT

Exploded View

INFOID:000000007356073

A

B

C

D

E

F

G

H

I

SE

K

L


M

N

O

P

Power Driver Seat

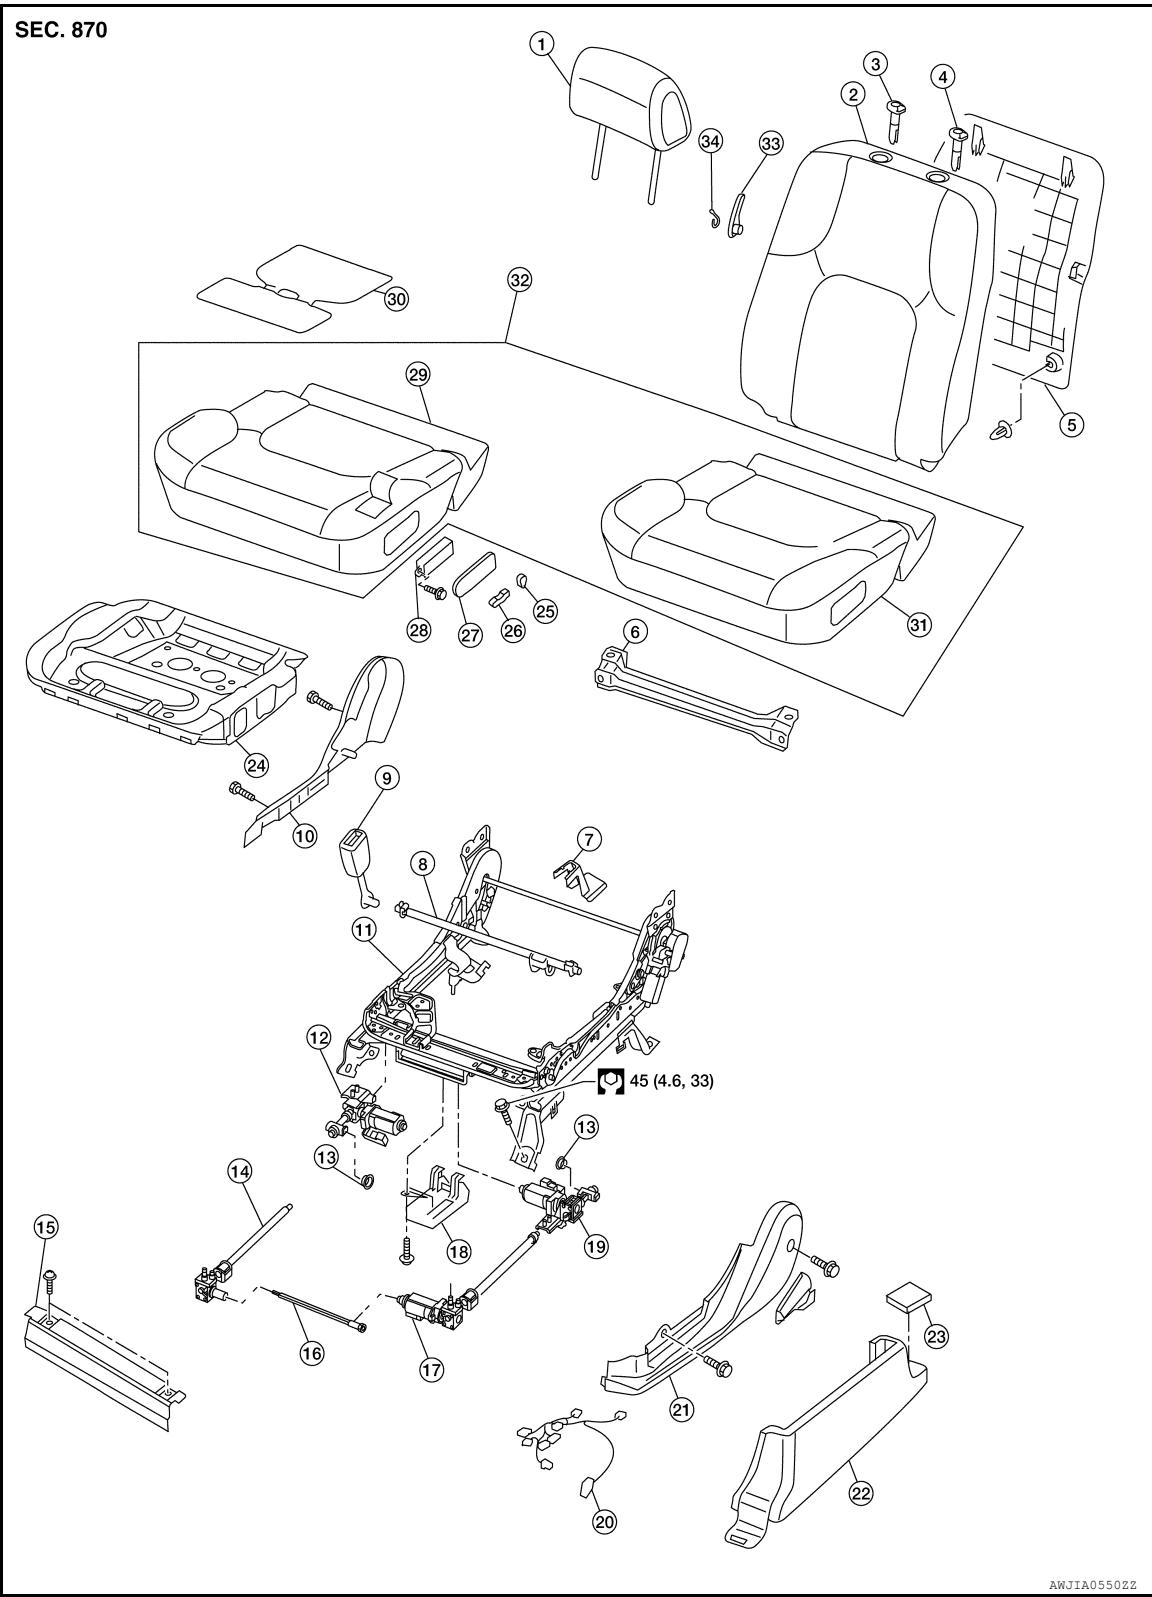

AMJIA0550Z2

FRONT SEAT

< UNIT DISASSEMBLY AND ASSEMBLY >


- | | | |
|---|--|-------------------------------------|
| 1. Headrest | 2. Seatback assembly | 3. Headrest holder |
| 4. Headrest holder with multi position lock | 5. Seatback board | 6. Power seat cushion rear finisher |
| 7. Leg Cover | 8. Lifter motor link bar | 9. Seat belt buckle assembly |
| 10. Seat cushion inner finisher | 11. Seat frame assembly | 12. Seat lifter motor assembly |
| 13. Seat spacer | 14. Lock gear | 15. Seat cushion front finisher |
| 16. Flexible seat wire | 17. Front seat slide motor assembly (LH) | 18. Power seat control assembly |
| 19. Lifter motor bracket assembly | 20. Driver seat wiring harness | 21. Seat cushion outer finisher |
| 22. Leg cover | 23. Bolt cover | 24. Seat cushion frame |
| 25. Recliner switch knob | 26. Slide switch knob | 27. Power seat switch escutcheon |
| 28. Switch assembly | 29. Seat cushion pad | 30. Seat cushion heating element |
| 31. Seat cushion trim | 32. Seat cushion assembly | 33. Lumbar support lever knob |
| 34. Snap ring | | |

FRONT SEAT

< UNIT DISASSEMBLY AND ASSEMBLY >

Manual Driver Seat

SEC. 870

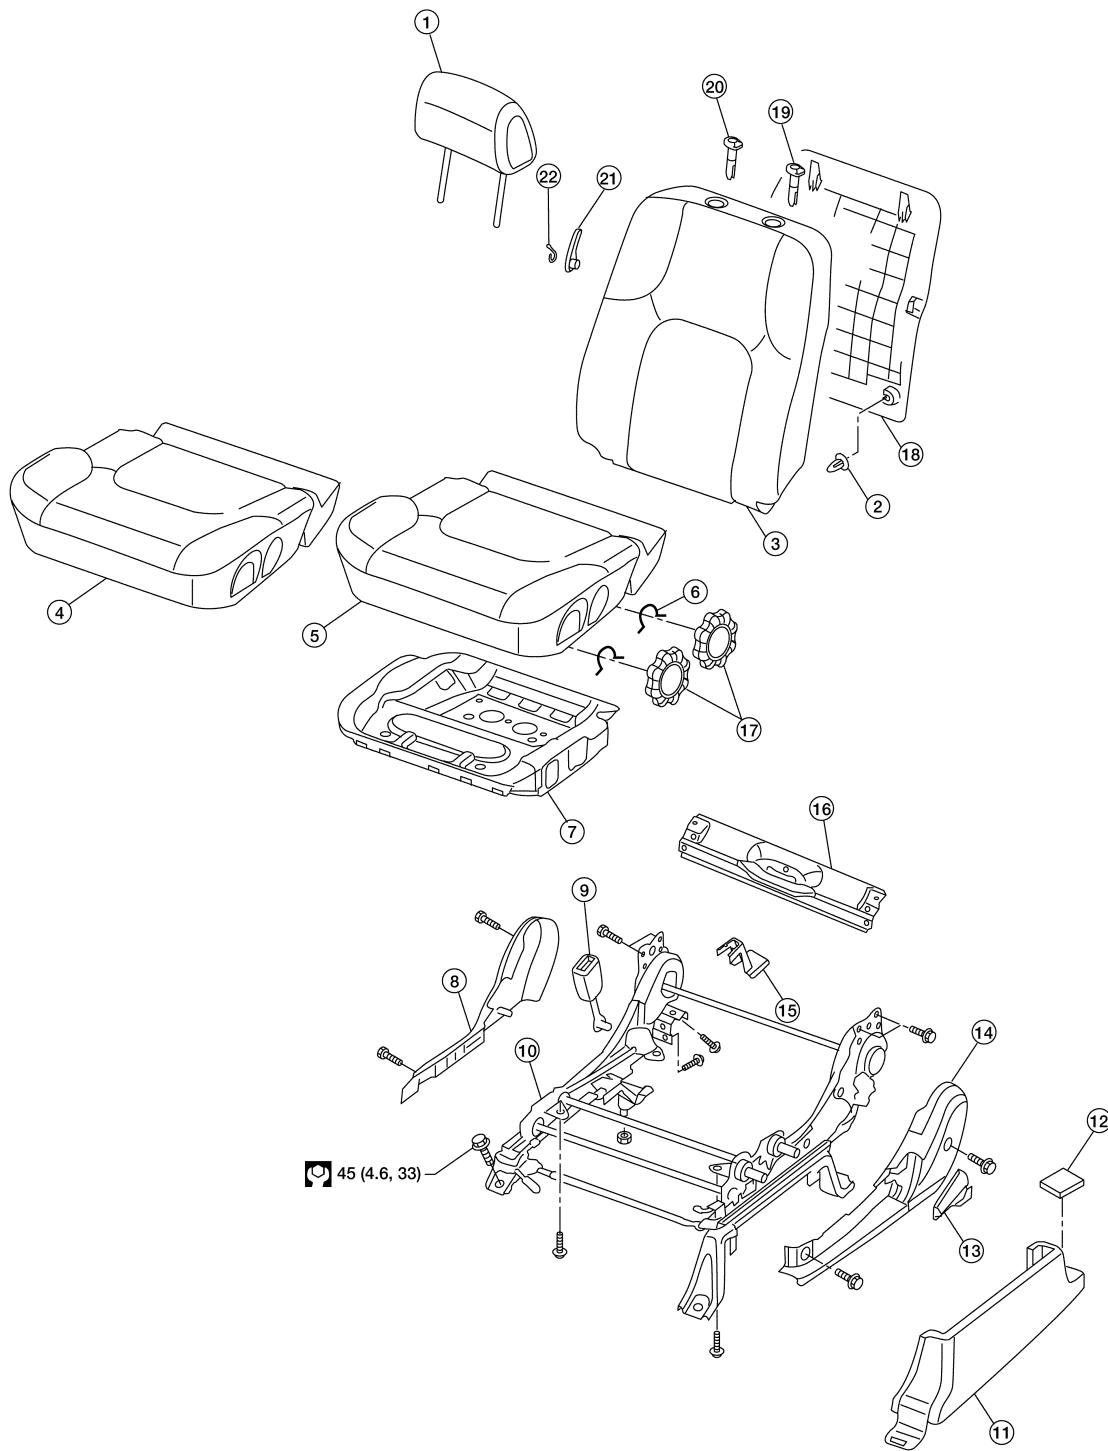

AWJIA0551ZZ

- | | | |
|--------------------------------|---------------------------------|------------------------------|
| 1. Headrest | 2. Trim clip | 3. Seatback assembly |
| 4. Seat cushion trim cover | 5. Seat cushion pad | 6. Snap ring |
| 7. Seat cushion frame | 8. Seat cushion inner finisher | 9. Seat belt buckle assembly |
| 10. Seat frame assembly | 11. Leg cover | 12. Bolt cover |
| 13. Recline lever | 14. Seat cushion outer finisher | 15. Leg cover |
| 16. Seat cushion rear finisher | 17. Seat cushion lift knobs | 18. Seatback board |


FRONT SEAT

< UNIT DISASSEMBLY AND ASSEMBLY >

- | | | |
|--|---------------------|-------------------------------|
| 19. Headrest holder with multi position lock | 20. Headrest holder | 21. Lumbar support lever knob |
| 22. Snap ring | | |

Conventional Passenger Seat

SEC. 870

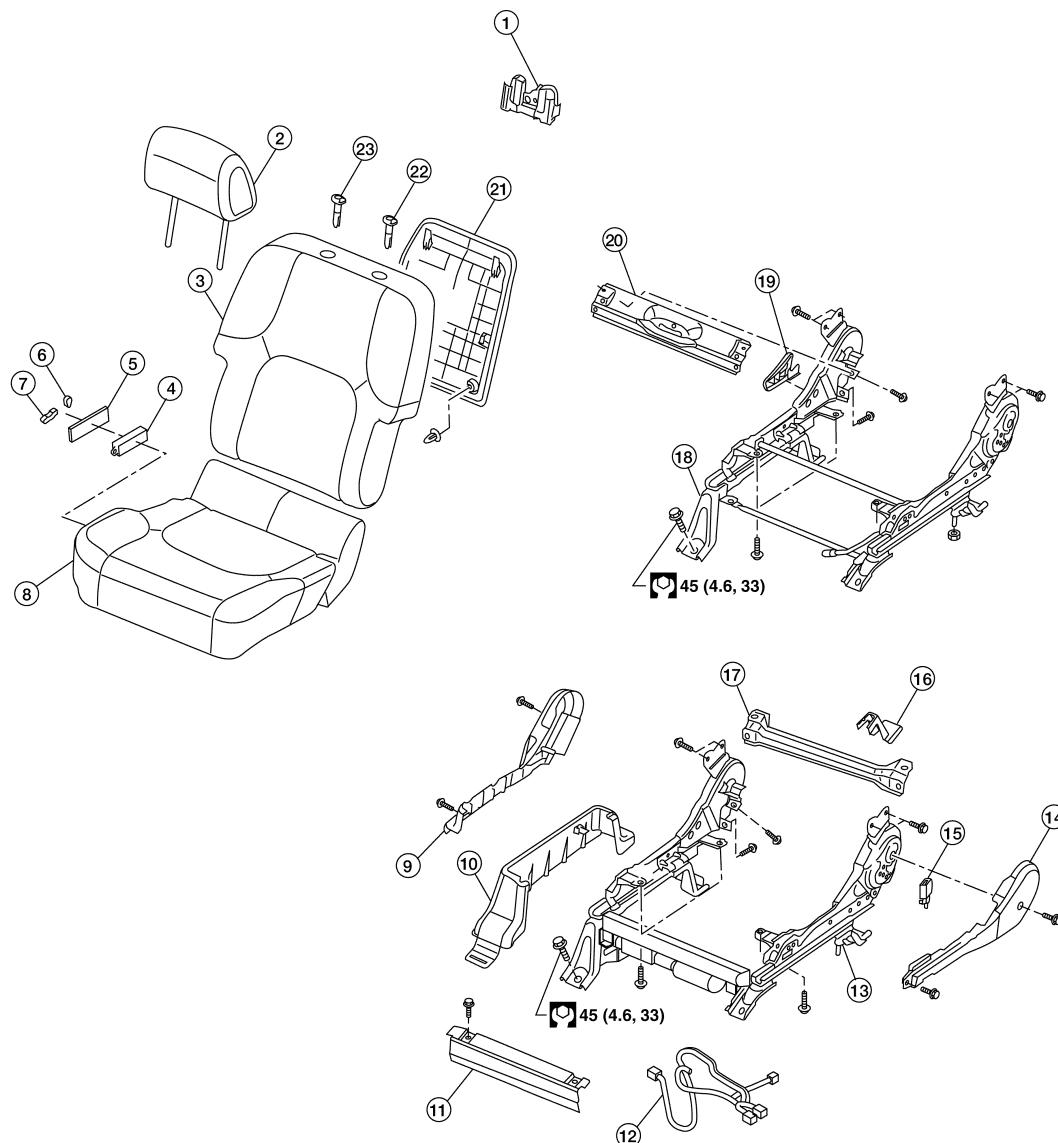

AWJIA0552ZZ


- | | | |
|-------------------------------|---------------------------------|-----------------------------------|
| 1. Damper assembly | 2. Headrest | 3. Seatback assembly |
| 4. Switch assembly | 5. Power seat switch escutcheon | 6. Recliner switch knob |
| 7. Slide switch knob | 8. Seat cushion assembly | 9. Seat cushion outer cover |
| 10. Leg cover | 11. Seat cushion front finisher | 12. Passenger seat wiring harness |
| 13. Power seat frame assembly | 14. Seat cushion inner finisher | 15. Seat belt buckle assembly |
| 16. Leg cover | 17. Seat cushion rear finisher | 18. Manual seat frame assembly |

FRONT SEAT

< UNIT DISASSEMBLY AND ASSEMBLY >

- | | | |
|--|--------------------------------|--------------------|
| 19. Recline lever | 20. Seat cushion rear finisher | 21. Seatback board |
| 22. Headrest holder with multi position lock | 23. Headrest holder | |

Fold Flat Passenger Seat

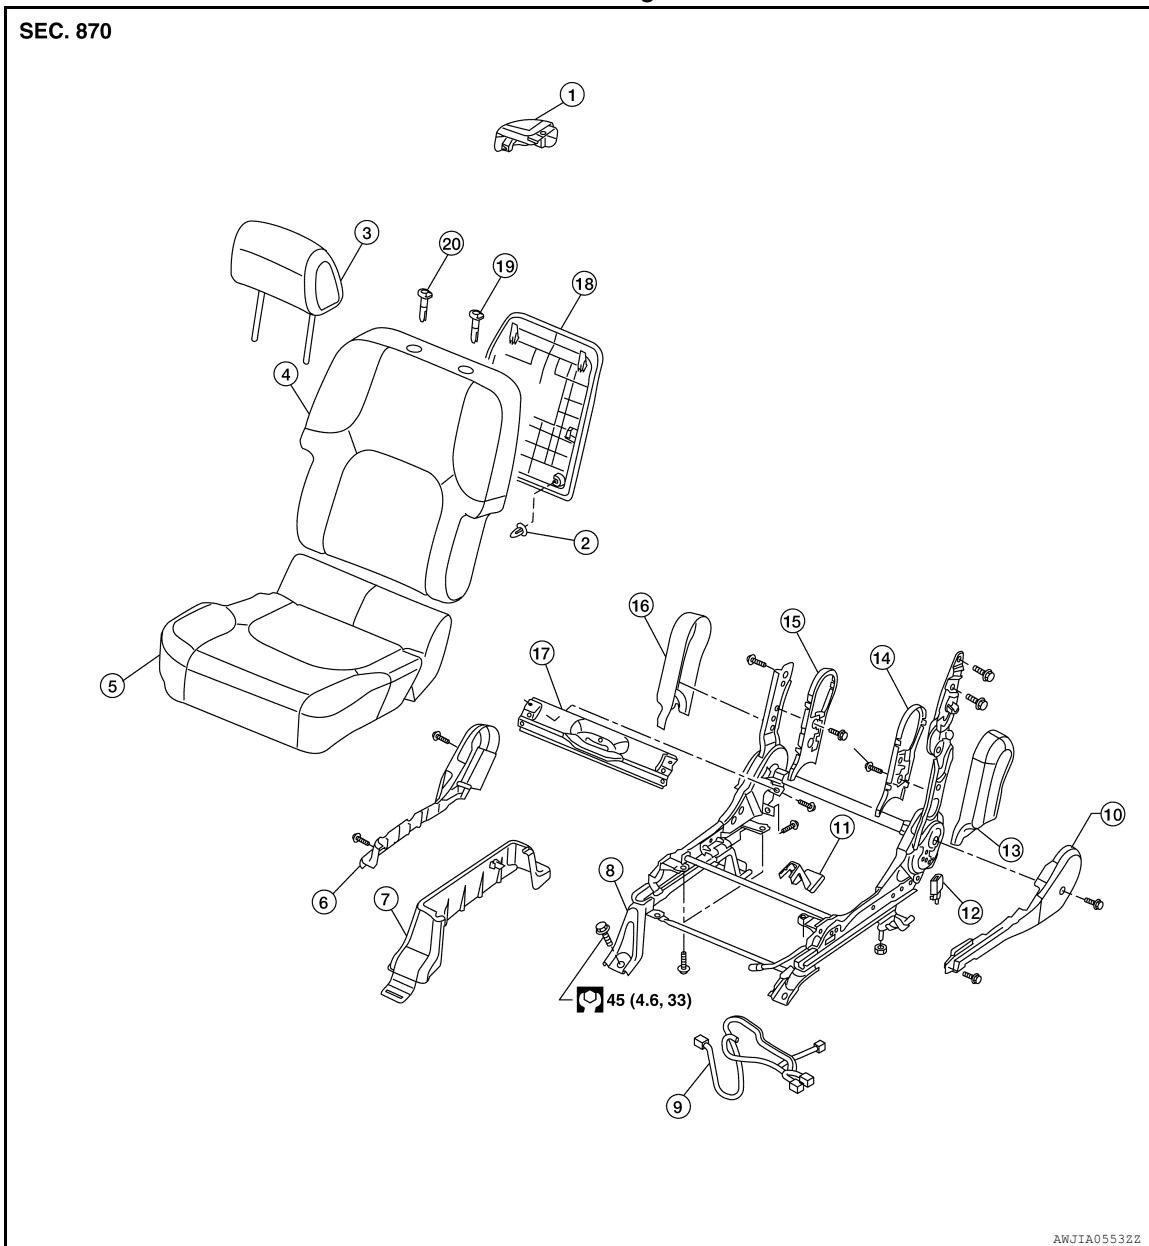

- | | | |
|--|---------------------------------------|--|
| 1. Front seatback lever | 2. Trim clip | 3. Headrest |
| 4. Seatback assembly | 5. Seat cushion assembly | 6. Seat cushion outer finisher |
| 7. Leg cover | 8. Seat frame assembly | 9. Passenger seat wiring harness |
| 10. Seat cushion inner cover | 11. Leg cover | 12. Seat belt buckle assembly |
| 13. Inboard reclining arm outer cover | 14. Inboard reclining arm inner cover | 15. Outboard reclining arm inner cover |
| 16. Outboard reclining arm outer cover | 17. Seat cushion rear finisher | 18. Seatback board |
| 19. Headrest holder with multi position lock | 20. Headrest holder | |

Seatback Assembly

INFOID:0000000007356074

REMOVAL


CAUTION:

FRONT SEAT


< UNIT DISASSEMBLY AND ASSEMBLY >

Seats equipped with side air bags can only be serviced as an assembly.


1. Remove the seat assembly. Refer to [SE-33, "Removal and Installation".](#)
2. Unzip the seatback trim flap (1).
3. Unclip the lower retainer (2).

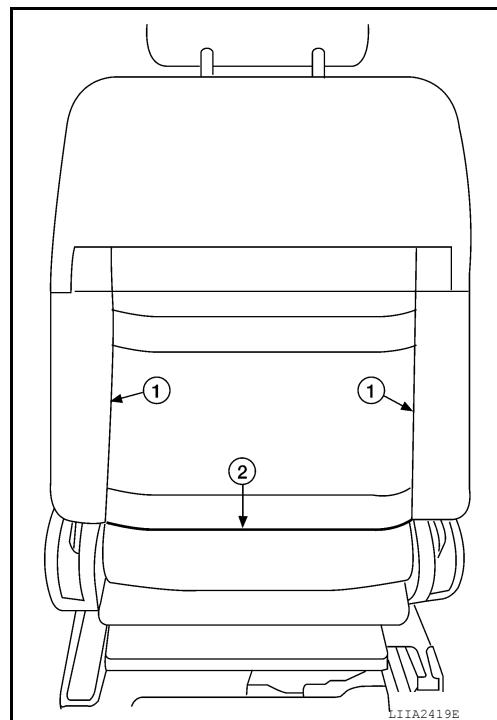

4. For the passenger seatback, remove the seatback board from the seatback. Refer to [SE-43, "Passenger Seatback Board".](#)
5. Unclip the seatback trim J-clips.

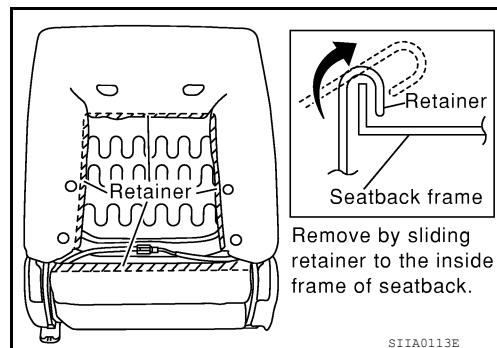

6. Remove the bolts (two for each side) and the seatback assembly.

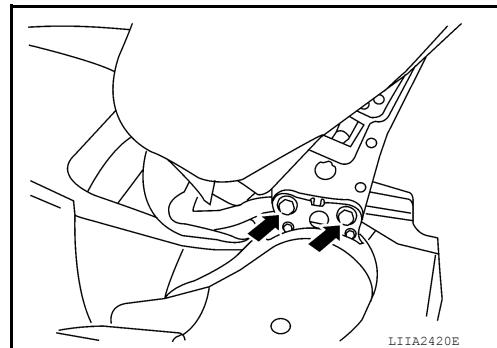

DISASSEMBLY

CAUTION:

Seats equipped with side air bags can only be serviced as an assembly.

1. Remove the seatback assembly.
2. Remove the headrest.


FRONT SEAT

< UNIT DISASSEMBLY AND ASSEMBLY >


3. From inside of the seatback, squeeze the headrest holder tabs at the base of the stay pipe and pull up to remove.

NOTE:

Before installing the headrest holder, check its orientation (front/rear and right/left).

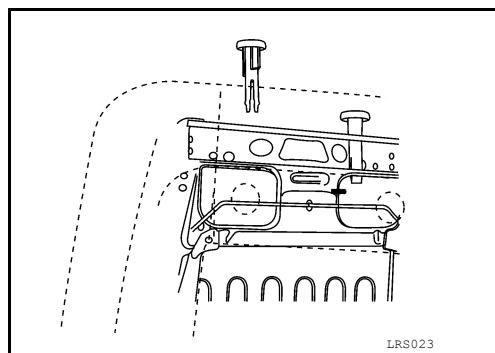

4. Remove the snap ring and the lumbar support lever knob.

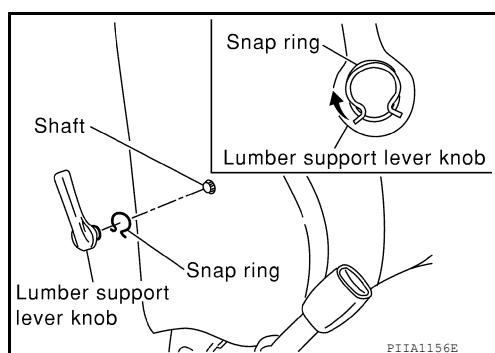

5. Remove the seatback trim and pad assembly.

6. Remove the hog rings to separate the seatback trim from the pad and the heating element (if equipped).

ASSEMBLY

Assembly is in the reverse order of disassembly.

INSTALLATION

Installation is in the reverse order of removal.


Passenger Seatback Board

INFOID:000000007356075

SOFT SEATBACK

Removal


1. The seatback board is attached to the seat frame with the following:
 - Two top tabs (A)
 - Two side tabs (B)
 - Two bottom clips (C) (must be replaced)
2. Move seat to forward position.

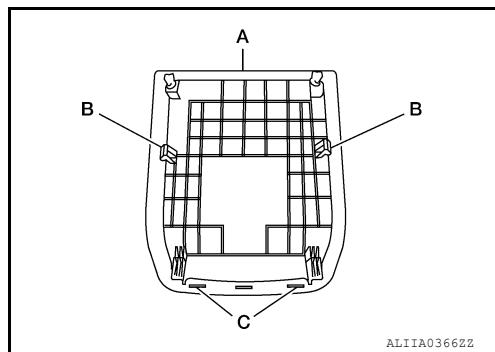

FRONT SEAT


< UNIT DISASSEMBLY AND ASSEMBLY >

3. Hold the seatback board as shown and pull the top of the seatback board away from the seat back frame.

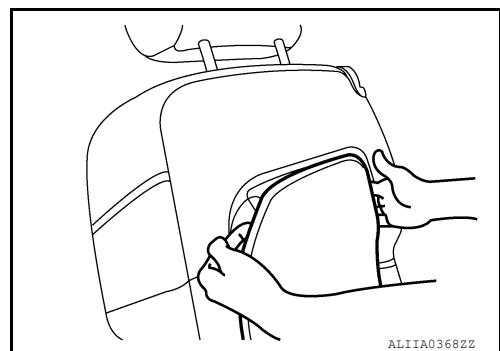

ALIIA0368ZZ

4. Pull the middle part of the seatback board to disengage the side tabs (A) from the seatback frame.
5. Pull the lower part of the seatback board to disengage the bottom clips from the seatback frame.

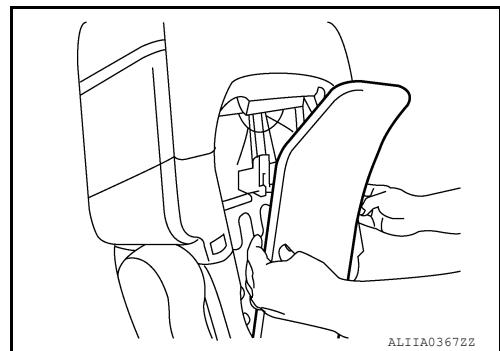

ALIIA0367ZZ


Installation

Installation is in the reverse order of removal.

HARD SEATBACK


Removal

1. The seatback board is attached to the seat frame with the following:
 - Two top tabs (A)
 - Two side tabs (B)
 - Two bottom clips (C) (must be replaced)
2. Move seat to forward position.

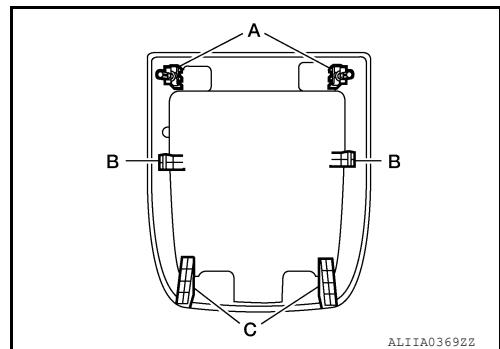

ALIIA0369ZZ

3. Hold the seatback board as shown and pull the bottom of the seatback board away from the seat back frame.

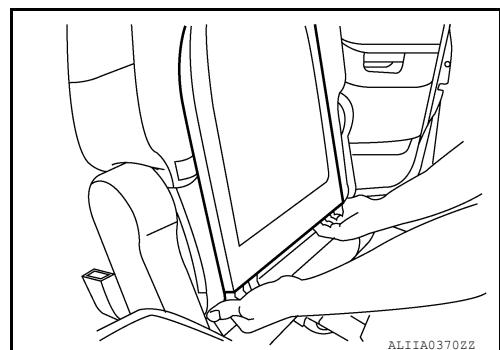


ALIIA0370ZZ

FRONT SEAT

< UNIT DISASSEMBLY AND ASSEMBLY >

4. Pull the middle part of the seatback board to disengage the side tabs (A) from the seatback frame.
5. Lift the upper part of the seatback board to disengage the top tabs from the seatback frame.

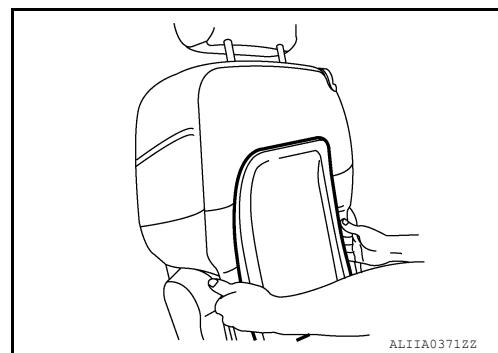

A
B
C
D
E

Installation

Installation is in the reverse order of removal.

Seat Cushion Trim and Pad

INFOID:000000007356076


F
G
H
I

REMOVAL

CAUTION:


- Front passenger seat is equipped with an Occupant Classification System sensor and control module. Do not disassemble front passenger seat cushion assembly or remove the trim as this will affect the Occupant Classification System calibration.
- Always replace passenger seat cushion as an assembly.
- When removed, the passenger seat cushion must always be placed pan side UP to prevent damage.
- During installation, the wire harness clips must be reinstalled in the holes they were originally in. Do not add additional clips.
- The Occupant Classification System control module can only be replaced as part of the seat cushion assembly.

1. Remove the front seat assembly. Refer to [SE-33, "Removal and Installation"](#).
2. Remove the power seat switch knobs and power seat switch escutcheon (if equipped) or lift knobs on manual seats.

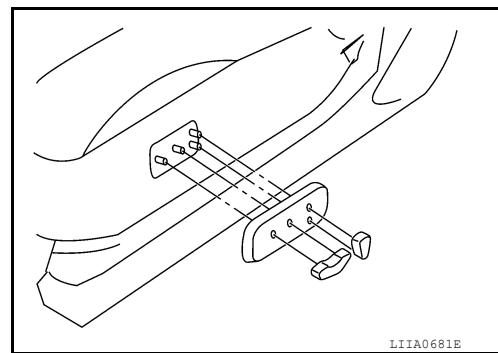

SE
K
L
M
N
O
P

3. Remove the seat cushion outer finisher.

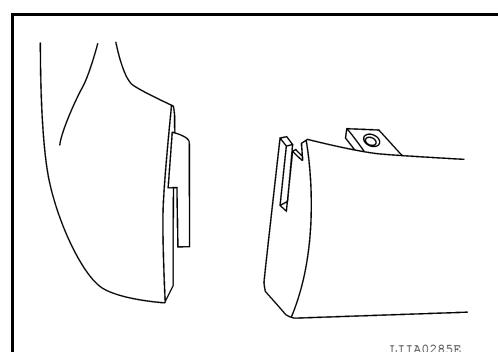


4. Remove the power seat switch screws.
5. Remove four bolts and the seat cushion assembly.

FRONT SEAT

< UNIT DISASSEMBLY AND ASSEMBLY >

- On the fold flat passenger seat it is necessary to unclip the rear flap j-clip from the seat pan.

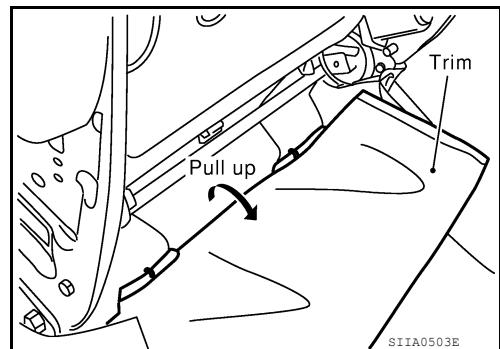

- Remove the retainer on the seat cushion frame, then remove the harness connector for the seat cushion heater (if equipped).

DISASSEMBLY

CAUTION:

- Front passenger seat is equipped with an Occupant Classification System sensor and control module. Do not disassemble front passenger seat cushion assembly or remove the trim as this will affect the Occupant Classification System calibration.

- Remove the seat cushion assembly.
- On the drivers seat only, remove the hog rings to separate the trim cover from the pad and seat cushion heater unit.

ASSEMBLY

Assembly is in the reverse order of disassembly.

INSTALLATION

Installation is in the reverse order of removal.

REAR SEAT

< UNIT DISASSEMBLY AND ASSEMBLY >

REAR SEAT

Exploded View

INFOID:0000000007356077

Disassembly and Assembly

INFOID:0000000007356078

A

B

C

D

E

F

G

H

I

SE

K

L

M


N

O

P

Second Row Outer

SEC. 880

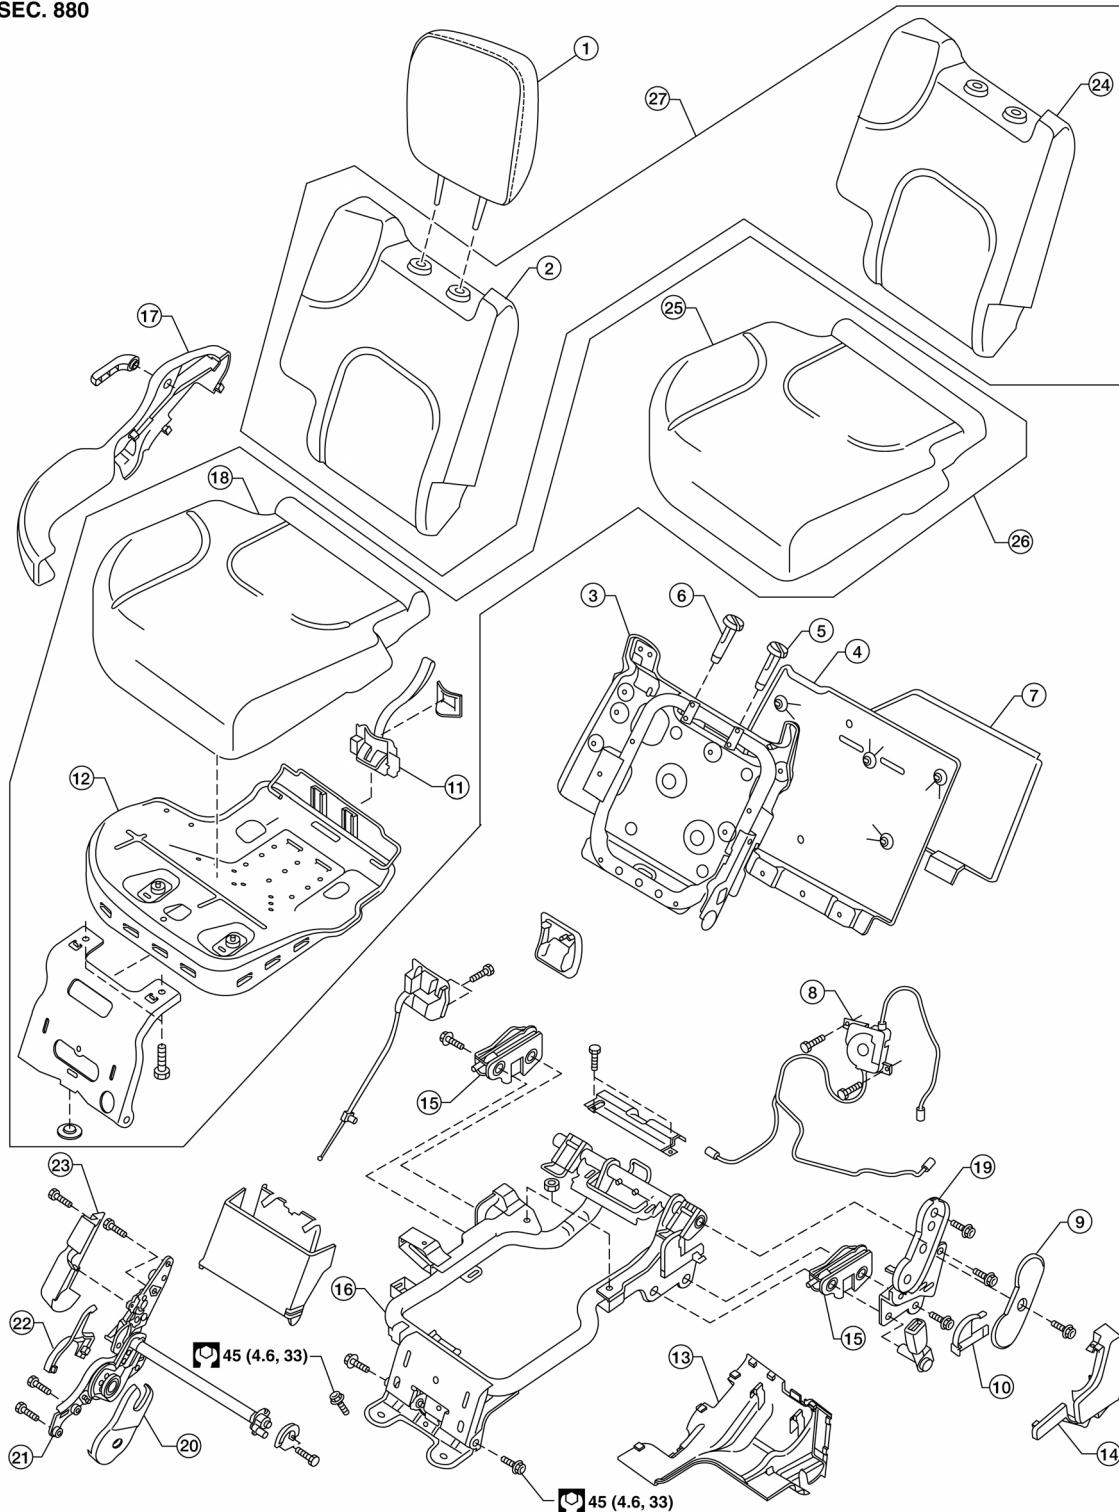

AWJIA0788GB

REAR SEAT

< UNIT DISASSEMBLY AND ASSEMBLY >


- | | | |
|--|---|---------------------------------|
| 1. Headrest | 2. Seatback pad | 3. Seatback frame |
| 4. Seatback panel | 5. LH Headrest locking guide | 6. RH Headrest guide |
| 7. Flipper panel | 8. Seat actuator assembly | 9. Reclining device inner cover |
| 10. Reclining device inner mid cover | 11. Latch assembly | 12. Seat cushion frame assembly |
| 13. Lower rear seat cover | 14. Lower rear seat cover inner | 15. Cushion floor latch |
| 16. Seat cushion support frame assembly | 17. Lower rear seat cover outer | 18. Seat cushion pad |
| 19. Inner inboard reclining device cover | 20. Inner outboard reclining device cover | 21. Reclining device lever |
| 22. Reclining device outer mid cover | 23. Reclining device outer cover | 24. Seatback trim cover |
| 25. Seat cushion trim cover | 26. Seat cushion assembly | 27. Seatback assembly |

REAR SEAT

< UNIT DISASSEMBLY AND ASSEMBLY >

Second row center

SEC. 880

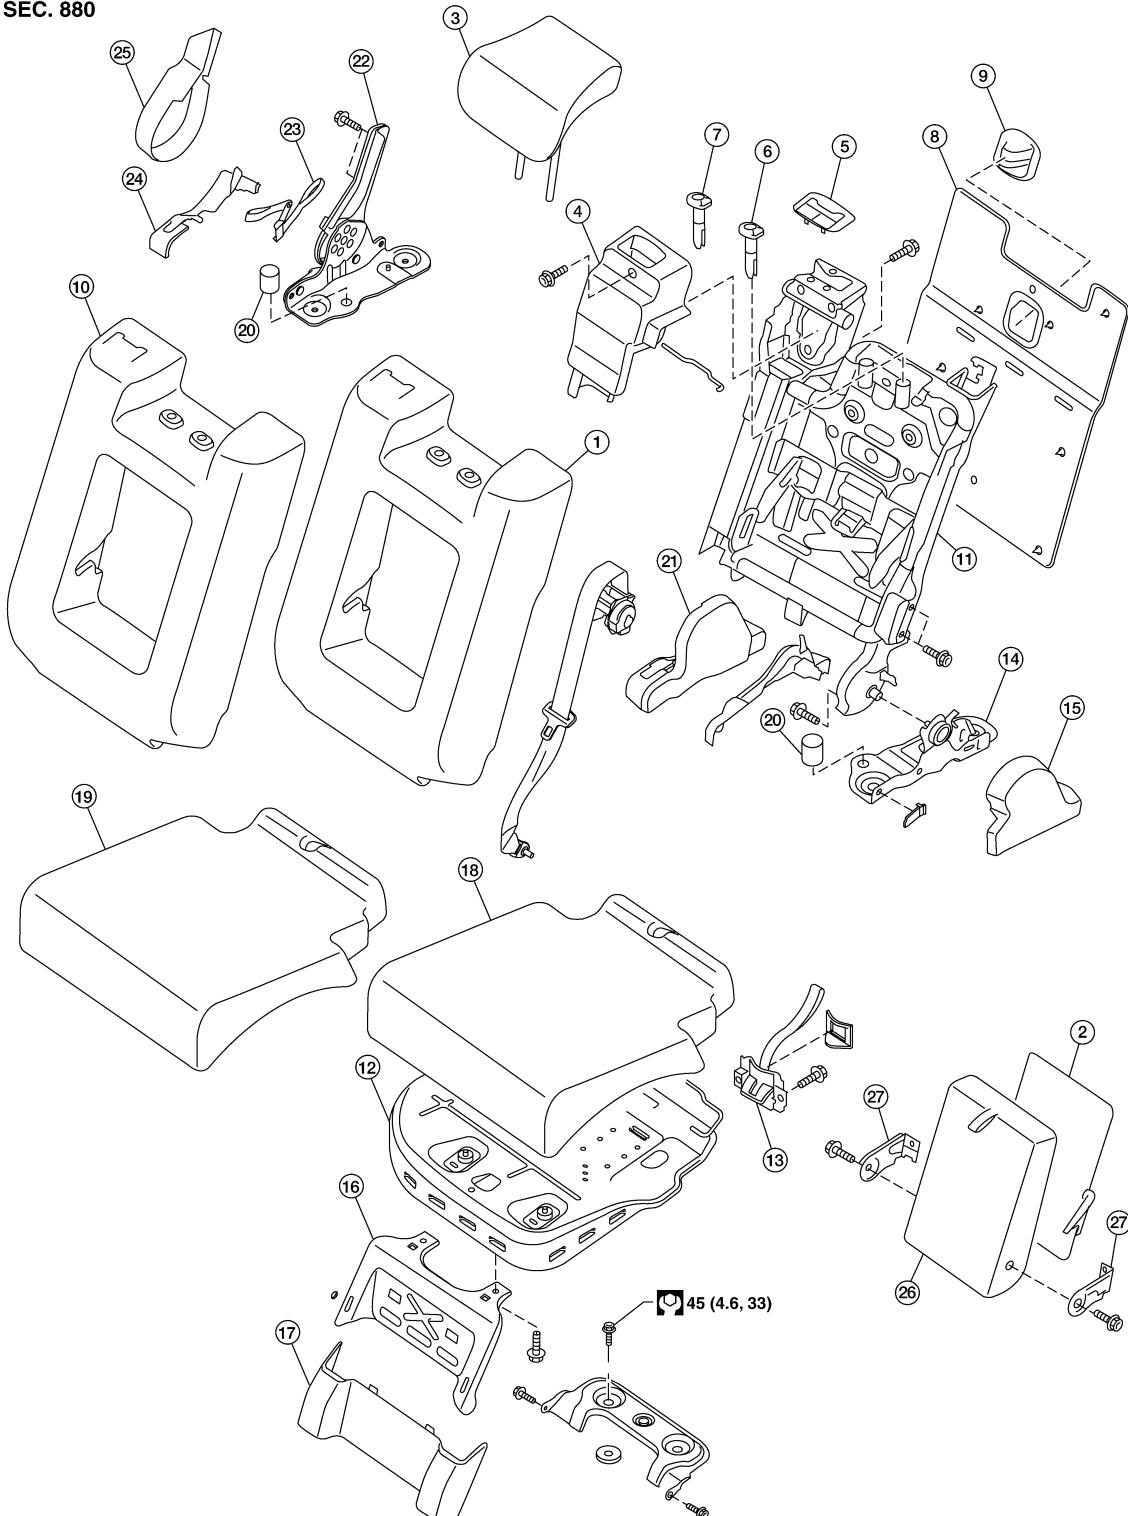

AWJIA0414GB

- | | | |
|-------------------------------|--------------------------------------|------------------------------|
| 1. Seatback pad | 2. Armrest finisher | 3. Headrest |
| 4. Seat belt retractor cover | 5. Seat belt bezel | 6. LH headrest guide locking |
| 7. RH headrest guide free | 8. Seatback board | 9. Seat bracket cover |
| 10. Seatback trim cover | 11. Seatback frame | 12. Seat cushion frame |
| 13. Latch assembly | 14. Lower rear pivot bracket support | 15. Outer hinge cover |
| 16. Center seat base assembly | 17. Link and pivot bracket apron | 18. Seat cushion pad |
| 19. Seat cushion trim cover | 20. Cushion stop bumper | 21. Inner lever cover |


REAR SEAT

< UNIT DISASSEMBLY AND ASSEMBLY >

- | | | |
|-----------------------------|-------------------------|-----------------------|
| 22. Seatback hinge assembly | 23. Seat lever assembly | 24. Outer lever cover |
| 25. Seat lock cover | 26. Armrest | 27. Armrest bracket |
| 28. Seat cushion assembly | 29. Seatback assembly | |

Third row

SEC. 882

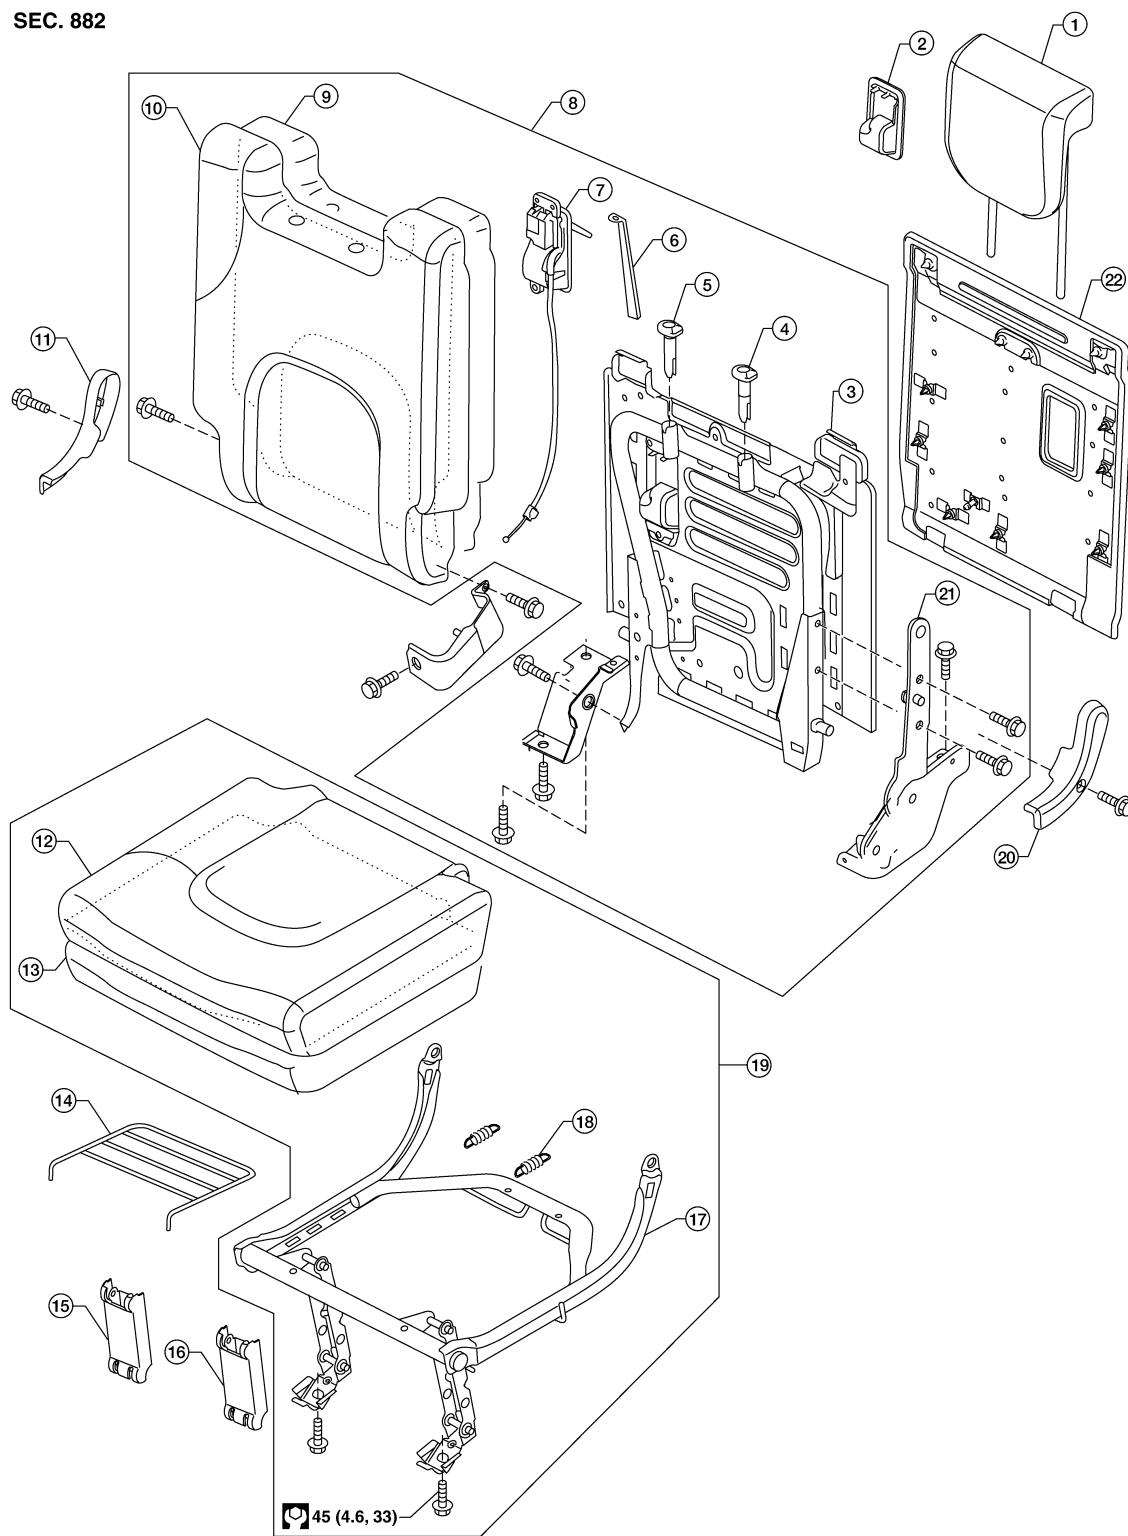

ALJIA0477GB

- | | | |
|-----------------------------|-------------------------|-------------------|
| 1. Headrest | 2. Release handle cover | 3. Seatback frame |
| 4. Headrest locking guide | 5. Headrest guide free | 6. Strap |
| 7. Release handle and cable | 8. Seatback assembly | 9. Seatback pad |

REAR SEAT

< UNIT DISASSEMBLY AND ASSEMBLY >

- | | | | |
|---------------------------|------------------------|-----------------------------|----|
| 10. Seatback trim cover | 11. RH side link cover | 12. Seat cushion trim cover | A |
| 13. Seat cushion pad | 14. Flex mat | 15. Front link cover RH | |
| 16. Front link cover LH | 17. Seat cushion frame | 18. Extension spring | |
| 19. Seat cushion assembly | 20. RH side link cover | 21. Seatback latch | B |
| 22. Seatback panel | | | |
| | | | C |
| | | | D |
| | | | E |
| | | | F |
| | | | G |
| | | | H |
| | | | I |
| | | | SE |
| | | | K |
| | | | L |
| | | | M |
| | | | N |
| | | | O |
| | | | P |