

A  
B  
C

# TM

## SECTION

# TRANSAXLE & TRANSMISSION

TM

### CONTENTS

<b>CVT: RE0F10E</b>		E
<b>PRECAUTION</b> .....	<b>10</b>	F
<b>PRECAUTIONS</b> .....	<b>10</b>	G
Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER" .....	10	H
Precaution for Procedure without Cowl Top Cover... ..	10	I
Precaution for TCM and Transaxle Assembly Replacement .....	10	J
General Precautions .....	11	K
On Board Diagnosis (OBD) System of CVT and Engine .....	12	L
Removal and Installation Procedure for CVT Unit Connector .....	12	M
<b>PREPARATION</b> .....	<b>14</b>	N
<b>PREPARATION</b> .....	<b>14</b>	O
Special Service Tools .....	14	P
Commercial Service Tools .....	14	
<b>SYSTEM DESCRIPTION</b> .....	<b>15</b>	
<b>COMPONENT PARTS</b> .....	<b>15</b>	
<b>CVT CONTROL SYSTEM</b> .....	<b>15</b>	
CVT CONTROL SYSTEM : Component Parts Location .....	15	
CVT CONTROL SYSTEM : TCM .....	17	
CVT CONTROL SYSTEM : Transmission Range Switch .....	17	
CVT CONTROL SYSTEM : Input Speed Sensor .....	17	
CVT CONTROL SYSTEM : Primary Speed Sensor .....	18	
CVT CONTROL SYSTEM : Output Speed Sensor... ..	19	
CVT CONTROL SYSTEM : CVT Fluid Temperature Sensor .....	19	
CVT CONTROL SYSTEM : Primary Pressure Sensor .....	20	
CVT CONTROL SYSTEM : Secondary Pressure Sensor .....	20	
CVT CONTROL SYSTEM : Line Pressure Solenoid Valve .....	20	
CVT CONTROL SYSTEM : Primary Pressure Solenoid Valve .....	21	
CVT CONTROL SYSTEM : Secondary Pressure Solenoid Valve .....	21	
CVT CONTROL SYSTEM : Torque Converter Clutch Solenoid Valve .....	21	
CVT CONTROL SYSTEM : Select Solenoid Valve .....	22	
CVT CONTROL SYSTEM : Overdrive Control Switch .....	22	
CVT CONTROL SYSTEM : Tow Mode Switch .....	22	
CVT CONTROL SYSTEM : OD OFF Indicator Lamp .....	22	
CVT CONTROL SYSTEM : TOW Mode Indicator Lamp .....	23	
CVT CONTROL SYSTEM : Shift Position Indicator .....	23	
CVT CONTROL SYSTEM : Malfunction Indicator Lamp (MIL) .....	23	
<b>SHIFT LOCK SYSTEM</b> .....	<b>23</b>	
SHIFT LOCK SYSTEM : Component Parts Location .....	24	
<b>STRUCTURE AND OPERATION</b> .....	<b>25</b>	
<b>TRANSAXLE</b> .....	<b>25</b>	
TRANSAXLE : Cross-Sectional View .....	25	
TRANSAXLE : Transaxle Mechanism .....	26	
TRANSAXLE : Operation Status .....	28	
TRANSAXLE : Oil Pressure System .....	29	
TRANSAXLE : Component Description .....	29	
<b>FLUID COOLER &amp; FLUID WARMER SYSTEM</b> .....	<b>30</b>	
FLUID COOLER & FLUID WARMER SYSTEM : System Description .....	30	
<b>SHIFT LOCK SYSTEM</b> .....	<b>32</b>	

SHIFT LOCK SYSTEM : System Description .....	32	Description .....	84
<b>SYSTEM .....</b>	<b>34</b>	Work Procedure .....	84
<b>CVT CONTROL SYSTEM .....</b>	<b>34</b>	<b>ADDITIONAL SERVICE WHEN REPLACING</b>	
CVT CONTROL SYSTEM : System Description ...	34	<b>TRANSAXLE ASSEMBLY .....</b>	<b>85</b>
CVT CONTROL SYSTEM : Fail-safe .....	35	Description .....	85
CVT CONTROL SYSTEM : Protection Control ....	38	Work Procedure .....	85
<b>LINE PRESSURE CONTROL .....</b>	<b>39</b>	<b>ADDITIONAL SERVICE WHEN REPLACING</b>	
LINE PRESSURE CONTROL : System Description .....	39	<b>TCM AND TRANSAXLE ASSEMBLY .....</b>	<b>87</b>
<b>SHIFT CONTROL .....</b>	<b>40</b>	Description .....	87
SHIFT CONTROL : System Description .....	40	Work Procedure .....	87
<b>SELECT CONTROL .....</b>	<b>42</b>	<b>CVT FLUID COOLER SYSTEM .....</b>	<b>89</b>
SELECT CONTROL : System Description .....	42	Cleaning .....	89
<b>LOCK-UP CONTROL .....</b>	<b>42</b>	<b>STALL TEST .....</b>	<b>92</b>
LOCK-UP CONTROL : System Description .....	43	Work Procedure .....	92
<b>ON BOARD DIAGNOSTIC (OBD) SYSTEM ....</b>	<b>44</b>	<b>CVT POSITION .....</b>	<b>93</b>
Description .....	44	Inspection and Adjustment .....	93
Function of OBD .....	44	<b>DTC/CIRCUIT DIAGNOSIS .....</b>	<b>94</b>
<b>DIAGNOSIS SYSTEM (TCM) .....</b>	<b>45</b>	<b>U0073 COMMUNICATION BUS A OFF .....</b>	<b>94</b>
<b>DIAGNOSIS DESCRIPTION .....</b>	<b>45</b>	DTC Logic .....	94
DIAGNOSIS DESCRIPTION : 1 Trip Detection Di-	45	Diagnosis Procedure .....	94
agnosis and 2 Trip Detection Diagnosis .....	45	<b>U0100 LOST COMMUNICATION (ECM A) .....</b>	<b>95</b>
DIAGNOSIS DESCRIPTION : DTC and DTC of	45	DTC Logic .....	95
1st Trip .....	45	Diagnosis Procedure .....	95
DIAGNOSIS DESCRIPTION : Malfunction Indica-	45	<b>U0102 LOST COMMUNICATION (TRANS-</b>	
tor Lamp (MIL) .....	45	<b>FER) .....</b>	<b>96</b>
DIAGNOSIS DESCRIPTION : Counter System ....	45	DTC Logic .....	96
CONSULT Function .....	47	Diagnosis Procedure .....	96
<b>ECU DIAGNOSIS INFORMATION .....</b>	<b>52</b>	<b>U0140 LOST COMMUNICATION (BCM) .....</b>	<b>97</b>
<b>TCM .....</b>	<b>52</b>	DTC Logic .....	97
Reference Value .....	52	Diagnosis Procedure .....	97
Fail-safe .....	58	<b>U0141 LOST COMMUNICATION (BCM A) .....</b>	<b>98</b>
Protection Control .....	61	DTC Logic .....	98
DTC Inspection Priority Chart .....	62	Diagnosis Procedure .....	98
DTC Index .....	63	<b>U0155 LOST COMMUNICATION (IPC) .....</b>	<b>99</b>
<b>WIRING DIAGRAM .....</b>	<b>65</b>	DTC Logic .....	99
<b>CVT CONTROL SYSTEM .....</b>	<b>65</b>	Diagnosis Procedure .....	99
Wiring diagram .....	65	<b>U0300 CAN COMMUNICATION DATA .....</b>	<b>100</b>
<b>CVT SHIFT LOCK SYSTEM .....</b>	<b>77</b>	DTC Logic .....	100
Wiring diagram .....	77	Diagnosis Procedure .....	100
<b>BASIC INSPECTION .....</b>	<b>81</b>	<b>U1000 CAN COMM CIRCUIT .....</b>	<b>101</b>
<b>DIAGNOSIS AND REPAIR WORK FLOW .....</b>	<b>81</b>	Description .....	101
Work Flow .....	81	DTC Logic .....	101
Diagnostic Work Sheet .....	82	Diagnosis Procedure .....	101
<b>ADDITIONAL SERVICE WHEN REPLACING</b>		<b>U1117 LOST COMMUNICATION (ABS) .....</b>	<b>102</b>
<b>TCM .....</b>	<b>84</b>	DTC Logic .....	102
		Diagnosis Procedure .....	102

<b>P062F EEPROM</b> .....	<b>103</b>	<b>P0779 PRESSURE CONTROL SOLENOID B.</b>	<b>137</b>	A
Description .....	103	DTC Logic .....	137	
DTC Logic .....	103	Diagnosis Procedure .....	137	
Diagnosis Procedure .....	103			
<b>P0705 TRANSMISSION RANGE SENSOR A.</b>	<b>104</b>	<b>P0841 TRANSMISSION FLUID PRESSURE</b>		B
DTC Logic .....	104	<b>SEN/SW A</b> .....	<b>139</b>	
Diagnosis Procedure .....	104	DTC Logic .....	139	
Component Inspection .....	108	Diagnosis Procedure .....	139	C
<b>P0706 TRANSMISSION RANGE SENSOR A.</b>	<b>110</b>	<b>P0847 TRANSMISSION FLUID PRESSURE</b>		
DTC Logic .....	110	<b>SEN/SW B</b> .....	<b>140</b>	TM
Diagnosis Procedure .....	110	DTC Logic .....	140	
Component Inspection .....	112	Diagnosis Procedure .....	140	
<b>P0711 TRANSMISSION FLUID TEMPERA-</b>		<b>P0848 TRANSMISSION FLUID PRESSURE</b>		E
<b>TURE SENSOR A</b> .....	<b>113</b>	<b>SEN/SW B</b> .....	<b>142</b>	
DTC Logic .....	113	DTC Logic .....	142	F
Diagnosis Procedure .....	113	Diagnosis Procedure .....	142	
<b>P0712 TRANSMISSION FLUID TEMPERA-</b>		<b>P084C TRANSMISSION FLUID PRESSURE</b>		G
<b>TURE SENSOR A</b> .....	<b>115</b>	<b>SEN/SW H</b> .....	<b>144</b>	
DTC Logic .....	115	DTC Logic .....	144	
Diagnosis Procedure .....	115	Diagnosis Procedure .....	144	H
<b>P0713 TRANSMISSION FLUID TEMPERA-</b>		<b>P084D TRANSMISSION FLUID PRESSURE</b>		I
<b>TURE SENSOR A</b> .....	<b>117</b>	<b>SEN/SW H</b> .....	<b>146</b>	
DTC Logic .....	117	DTC Logic .....	146	J
Diagnosis Procedure .....	117	Diagnosis Procedure .....	146	
<b>P0715 INPUT SPEED SENSOR A</b> .....	<b>119</b>	<b>P0863 TCM COMMUNICATION</b> .....	<b>148</b>	K
DTC Logic .....	119	DTC Logic .....	148	
Diagnosis Procedure .....	120	Diagnosis Procedure .....	148	L
<b>P0717 INPUT SPEED SENSOR A</b> .....	<b>122</b>	<b>P0890 TCM</b> .....	<b>149</b>	
DTC Logic .....	122	DTC Logic .....	149	
Diagnosis Procedure .....	123	Diagnosis Procedure .....	149	M
<b>P0740 TORQUE CONVERTER</b> .....	<b>125</b>	<b>P0962 PRESSURE CONTROL SOLENOID A.</b>	<b>151</b>	N
DTC Logic .....	125	DTC Logic .....	151	
Diagnosis Procedure .....	126	Diagnosis Procedure .....	151	O
<b>P0743 TORQUE CONVERTER</b> .....	<b>127</b>	<b>P0963 PRESSURE CONTROL SOLENOID A.</b>	<b>153</b>	
DTC Logic .....	127	DTC Logic .....	153	P
Diagnosis Procedure .....	128	Diagnosis Procedure .....	153	
<b>P0744 TORQUE CONVERTER</b> .....	<b>129</b>	<b>P0965 PRESSURE CONTROL SOLENOID B.</b>	<b>155</b>	
DTC Logic .....	129	DTC Logic .....	155	
Diagnosis Procedure .....	130	Diagnosis Procedure .....	156	
<b>P0746 PRESSURE CONTROL SOLENOID A.</b>	<b>131</b>	<b>P0966 PRESSURE CONTROL SOLENOID B.</b>	<b>157</b>	
DTC Logic .....	131	DTC Logic .....	157	
Diagnosis Procedure .....	132	Diagnosis Procedure .....	157	
<b>P0776 PRESSURE CONTROL SOLENOID B.</b>	<b>133</b>	<b>P0967 PRESSURE CONTROL SOLENOID B.</b>	<b>159</b>	
DTC Logic .....	133	DTC Logic .....	159	
Diagnosis Procedure .....	134	Diagnosis Procedure .....	159	
<b>P0778 PRESSURE CONTROL SOLENOID B.</b>	<b>135</b>	<b>P2765 INPUT SPEED SENSOR B</b> .....	<b>161</b>	
DTC Logic .....	135	DTC Logic .....	161	
Diagnosis Procedure .....	135	Diagnosis Procedure .....	162	
		<b>P2813 SELECT SOLENOID</b> .....	<b>164</b>	

DTC Logic .....	164	Inspection and Adjustment .....	195
Diagnosis Procedure .....	165	<b>TOW MODE SWITCH .....</b>	<b>197</b>
<b>P2814 SELECT SOLENOID .....</b>	<b>166</b>	Removal and Installation .....	197
DTC Logic .....	166	<b>TCM .....</b>	<b>198</b>
Diagnosis Procedure .....	166	Exploded View .....	198
<b>P2815 SELECT SOLENOID .....</b>	<b>168</b>	Removal and Installation .....	198
DTC Logic .....	168	Adjustment .....	198
Diagnosis Procedure .....	168	<b>AIR BREATHER HOSE .....</b>	<b>200</b>
<b>MAIN POWER SUPPLY AND GROUND CIR- CUIT .....</b>	<b>170</b>	Removal and Installation .....	200
Diagnosis Procedure .....	170	<b>OIL PAN .....</b>	<b>201</b>
<b>SHIFT POSITION INDICATOR CIRCUIT .....</b>	<b>172</b>	Exploded View .....	201
Component Parts Function Inspection .....	172	Removal and Installation .....	201
Diagnosis Procedure .....	172	Inspection and Adjustment .....	202
<b>OVERDRIVE CONTROL SWITCH .....</b>	<b>173</b>	<b>INPUT SPEED SENSOR .....</b>	<b>203</b>
Component Function Check .....	173	Exploded View .....	203
Diagnosis Procedure .....	173	Removal and Installation .....	203
Component Inspection .....	174	Inspection and Adjustment .....	203
<b>OD OFF INDICATOR LAMP .....</b>	<b>176</b>	<b>PRIMARY SPEED SENSOR .....</b>	<b>205</b>
Component Function Check .....	176	Exploded View .....	205
Diagnosis Procedure .....	176	Removal and Installation .....	205
<b>TOW MODE SYSTEM .....</b>	<b>177</b>	Inspection and Adjustment .....	205
Component Function Check .....	177	<b>OUTPUT SPEED SENSOR .....</b>	<b>207</b>
Diagnosis Procedure .....	177	Exploded View .....	207
Component Inspection .....	178	Removal and Installation .....	207
<b>SHIFT LOCK SYSTEM .....</b>	<b>180</b>	Inspection and Adjustment .....	207
Component Function Check .....	180	<b>DIFFERENTIAL SIDE OIL SEAL .....</b>	<b>208</b>
Diagnosis Procedure .....	180	Exploded View .....	208
Component Inspection (Shift Lock Solenoid) .....	181	Removal and Installation .....	208
Component Inspection (Park Position Switch) .....	181	Inspection and Adjustment .....	209
Component Inspection (Stop Lamp Switch) .....	182	<b>WATER HOSE .....</b>	<b>210</b>
<b>SYMPTOM DIAGNOSIS .....</b>	<b>183</b>	Exploded View .....	210
<b>CVT CONTROL SYSTEM .....</b>	<b>183</b>	Removal and Installation .....	210
Symptom Table .....	183	Inspection .....	211
<b>PERIODIC MAINTENANCE .....</b>	<b>188</b>	<b>CVT FLUID COOLER SYSTEM .....</b>	<b>212</b>
<b>CVT FLUID .....</b>	<b>188</b>	Exploded View .....	212
Inspection .....	188	Removal and Installation .....	212
Replacement .....	188	Inspection .....	213
Adjustment .....	190	<b>CVT OIL WARMER .....</b>	<b>215</b>
<b>REMOVAL AND INSTALLATION .....</b>	<b>192</b>	Exploded View .....	215
<b>CVT SHIFT SELECTOR .....</b>	<b>192</b>	Removal and Installation .....	215
Exploded View .....	192	Inspection .....	215
Removal and Installation .....	192	<b>PLUG .....</b>	<b>216</b>
Inspection .....	193	Description .....	216
<b>CONTROL CABLE .....</b>	<b>194</b>	Exploded View .....	216
Exploded View .....	194	Removal and Installation .....	216
Removal and Installation .....	194	Inspection and Adjustment .....	216
<b>UNIT REMOVAL AND INSTALLATION ...</b>	<b>217</b>	<b>TRANSMISSION ASSEMBLY .....</b>	<b>217</b>

Exploded View .....	217	CVT CONTROL SYSTEM : CVT Fluid Temperature Sensor .....	233	A
Removal and Installation .....	218	CVT CONTROL SYSTEM : Primary Pressure Sensor .....	234	B
Inspection and Adjustment .....	220	CVT CONTROL SYSTEM : Secondary Pressure Sensor .....	234	C
<b>UNIT DISASSEMBLY AND ASSEMBLY . 221</b>		CVT CONTROL SYSTEM : Line Pressure Solenoid Valve .....	234	TM
<b>TORQUE CONVERTER AND CONVERTER HOUSING OIL SEAL ..... 221</b>		CVT CONTROL SYSTEM : Primary Pressure Solenoid Valve .....	235	E
Exploded View .....	221	CVT CONTROL SYSTEM : Secondary Pressure Solenoid Valve .....	235	F
Disassembly .....	221	CVT CONTROL SYSTEM : Torque Converter Clutch Solenoid Valve .....	235	G
Assembly .....	221	CVT CONTROL SYSTEM : Select Solenoid Valve .....	236	H
Inspection .....	222	CVT CONTROL SYSTEM : Overdrive Control Switch .....	236	I
<b>SERVICE DATA AND SPECIFICATIONS (SDS) ..... 223</b>		CVT CONTROL SYSTEM : Tow Mode Switch .....	236	J
<b>SERVICE DATA AND SPECIFICATIONS (SDS) ..... 223</b>		CVT CONTROL SYSTEM : OD OFF Indicator Lamp .....	236	K
General Specification .....	223	CVT CONTROL SYSTEM : TOW Mode Indicator Lamp .....	237	L
Shift Characteristics .....	223	CVT CONTROL SYSTEM : Shift Position Indicator .....	237	M
Stall Speed .....	223	CVT CONTROL SYSTEM : Malfunction Indicator Lamp (MIL) .....	237	
Torque Converter .....	223	<b>SHIFT LOCK SYSTEM ..... 237</b>		
Heater Thermostat .....	223	SHIFT LOCK SYSTEM : Component Parts Location .....	238	
<b>CVT: RE0F10J</b>		<b>STRUCTURE AND OPERATION ..... 239</b>		
<b>PRECAUTION ..... 224</b>		<b>TRANSAXLE ..... 239</b>		
<b>PRECAUTIONS ..... 224</b>		TRANSAXLE : Cross-Sectional View .....	239	
Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER" .....	224	TRANSAXLE : Transaxle Mechanism .....	240	
Precaution for Procedure without Cowl Top Cover. ....	224	TRANSAXLE : Operation Status .....	242	
Precaution for TCM and Transaxle Assembly Replacement .....	224	TRANSAXLE : Oil Pressure System .....	243	
General Precautions .....	225	TRANSAXLE : Component Description .....	243	
On Board Diagnosis (OBD) System of CVT and Engine .....	226	<b>FLUID COOLER &amp; FLUID WARMER SYSTEM ..... 244</b>		
Removal and Installation Procedure for CVT Unit Connector .....	226	FLUID COOLER & FLUID WARMER SYSTEM : System Description .....	244	
<b>PREPARATION ..... 228</b>		<b>SHIFT LOCK SYSTEM ..... 246</b>		
<b>PREPARATION ..... 228</b>		SHIFT LOCK SYSTEM : System Description .....	246	
Special Service Tools .....	228	<b>SYSTEM ..... 248</b>		
Commercial Service Tools .....	228	<b>CVT CONTROL SYSTEM ..... 248</b>		
<b>SYSTEM DESCRIPTION ..... 229</b>		CVT CONTROL SYSTEM : System Description .....	248	
<b>COMPONENT PARTS ..... 229</b>		CVT CONTROL SYSTEM : Fail-safe .....	249	
<b>CVT CONTROL SYSTEM ..... 229</b>		CVT CONTROL SYSTEM : Protection Control .....	252	
CVT CONTROL SYSTEM : Component Parts Location .....	229	<b>LINE PRESSURE CONTROL ..... 253</b>		
CVT CONTROL SYSTEM : TCM .....	231	LINE PRESSURE CONTROL : System Description .....	253	
CVT CONTROL SYSTEM : Transmission Range Switch .....	231	<b>SHIFT CONTROL ..... 254</b>		
CVT CONTROL SYSTEM : Input Speed Sensor .....	231	SHIFT CONTROL : System Description .....	254	
CVT CONTROL SYSTEM : Primary Speed Sensor .....	232			
CVT CONTROL SYSTEM : Output Speed Sensor .....	233			

<b>SELECT CONTROL</b> .....	<b>256</b>	<b>STALL TEST</b> .....	<b>306</b>
SELECT CONTROL : System Description .....	256	Work Procedure .....	306
<b>LOCK-UP CONTROL</b> .....	<b>256</b>	<b>CVT POSITION</b> .....	<b>307</b>
LOCK-UP CONTROL : System Description .....	257	Inspection and Adjustment .....	307
<b>ON BOARD DIAGNOSTIC (OBD) SYSTEM</b> ..	<b>258</b>	<b>DTC/CIRCUIT DIAGNOSIS</b> .....	<b>308</b>
Description .....	258	<b>U0073 COMMUNICATION BUS A OFF</b> .....	<b>308</b>
Function of OBD .....	258	DTC Logic .....	308
<b>DIAGNOSIS SYSTEM (TCM)</b> .....	<b>259</b>	Diagnosis Procedure .....	308
<b>DIAGNOSIS DESCRIPTION</b> .....	<b>259</b>	<b>U0100 LOST COMMUNICATION (ECM A)</b> .....	<b>309</b>
DIAGNOSIS DESCRIPTION : 1 Trip Detection Di-		DTC Logic .....	309
agnosis and 2 Trip Detection Diagnosis .....	259	Diagnosis Procedure .....	309
DIAGNOSIS DESCRIPTION : DTC and DTC of		<b>U0102 LOST COMMUNICATION (TRANS-</b>	
1st Trip .....	259	<b>FER)</b> .....	<b>310</b>
DIAGNOSIS DESCRIPTION : Malfunction Indica-		DTC Logic .....	310
tor Lamp (MIL) .....	259	Diagnosis Procedure .....	310
DIAGNOSIS DESCRIPTION : Counter System ..	259	<b>U0140 LOST COMMUNICATION (BCM)</b> .....	<b>311</b>
CONSULT Function .....	261	DTC Logic .....	311
<b>ECU DIAGNOSIS INFORMATION</b> .....	<b>266</b>	Diagnosis Procedure .....	311
<b>TCM</b> .....	<b>266</b>	<b>U0141 LOST COMMUNICATION (BCM A)</b> .....	<b>312</b>
Reference Value .....	266	DTC Logic .....	312
Fail-safe .....	272	Diagnosis Procedure .....	312
Protection Control .....	275	<b>U0155 LOST COMMUNICATION (IPC)</b> .....	<b>313</b>
DTC Inspection Priority Chart .....	276	DTC Logic .....	313
DTC Index .....	277	Diagnosis Procedure .....	313
<b>WIRING DIAGRAM</b> .....	<b>279</b>	<b>U0300 CAN COMMUNICATION DATA</b> .....	<b>314</b>
<b>CVT CONTROL SYSTEM</b> .....	<b>279</b>	DTC Logic .....	314
Wiring diagram .....	279	Diagnosis Procedure .....	314
<b>CVT SHIFT LOCK SYSTEM</b> .....	<b>291</b>	<b>U1000 CAN COMM CIRCUIT</b> .....	<b>315</b>
Wiring diagram .....	291	Description .....	315
<b>BASIC INSPECTION</b> .....	<b>295</b>	DTC Logic .....	315
<b>DIAGNOSIS AND REPAIR WORK FLOW</b> .....	<b>295</b>	Diagnosis Procedure .....	315
Work Flow .....	295	<b>U1117 LOST COMMUNICATION (ABS)</b> .....	<b>316</b>
Diagnostic Work Sheet .....	296	DTC Logic .....	316
<b>ADDITIONAL SERVICE WHEN REPLACING</b>		Diagnosis Procedure .....	316
<b>TCM</b> .....	<b>298</b>	<b>P062F EEPROM</b> .....	<b>317</b>
Description .....	298	Description .....	317
Work Procedure .....	298	DTC Logic .....	317
<b>ADDITIONAL SERVICE WHEN REPLACING</b>		Diagnosis Procedure .....	317
<b>TRANSAXLE ASSEMBLY</b> .....	<b>299</b>	<b>P0705 TRANSMISSION RANGE SENSOR A</b> ..	<b>318</b>
Description .....	299	DTC Logic .....	318
Work Procedure .....	299	Diagnosis Procedure .....	318
<b>ADDITIONAL SERVICE WHEN REPLACING</b>		Component Inspection .....	322
<b>TCM AND TRANSAXLE ASSEMBLY</b> .....	<b>301</b>	<b>P0706 TRANSMISSION RANGE SENSOR A</b> ..	<b>324</b>
Description .....	301	DTC Logic .....	324
Work Procedure .....	301	Diagnosis Procedure .....	324
<b>CVT FLUID COOLER SYSTEM</b> .....	<b>303</b>	Component Inspection .....	326
Cleaning .....	303		

<b>P0711 TRANSMISSION FLUID TEMPERATURE SENSOR A</b> .....	<b>327</b>	<b>P0848 TRANSMISSION FLUID PRESSURE SEN/SW B</b> .....	<b>357</b>	A
DTC Logic .....	327	DTC Logic .....	357	
Diagnosis Procedure .....	328	Diagnosis Procedure .....	357	
<b>P0712 TRANSMISSION FLUID TEMPERATURE SENSOR A</b> .....	<b>330</b>	<b>P084C TRANSMISSION FLUID PRESSURE SEN/SW H</b> .....	<b>359</b>	B
DTC Logic .....	330	DTC Logic .....	359	
Diagnosis Procedure .....	330	Diagnosis Procedure .....	359	C
<b>P0713 TRANSMISSION FLUID TEMPERATURE SENSOR A</b> .....	<b>332</b>	<b>P084D TRANSMISSION FLUID PRESSURE SEN/SW H</b> .....	<b>361</b>	TM
DTC Logic .....	332	DTC Logic .....	361	
Diagnosis Procedure .....	332	Diagnosis Procedure .....	361	
<b>P0715 INPUT SPEED SENSOR A</b> .....	<b>334</b>	<b>P0863 TCM COMMUNICATION</b> .....	<b>363</b>	E
DTC Logic .....	334	DTC Logic .....	363	
Diagnosis Procedure .....	335	Diagnosis Procedure .....	363	
<b>P0717 INPUT SPEED SENSOR A</b> .....	<b>337</b>	<b>P0890 TCM</b> .....	<b>364</b>	F
DTC Logic .....	337	DTC Logic .....	364	
Diagnosis Procedure .....	338	Diagnosis Procedure .....	364	G
<b>P0740 TORQUE CONVERTER</b> .....	<b>340</b>	<b>P0962 PRESSURE CONTROL SOLENOID A</b> .....	<b>366</b>	H
DTC Logic .....	340	DTC Logic .....	366	
Diagnosis Procedure .....	341	Diagnosis Procedure .....	366	
<b>P0743 TORQUE CONVERTER</b> .....	<b>342</b>	<b>P0963 PRESSURE CONTROL SOLENOID A</b> .....	<b>368</b>	I
DTC Logic .....	342	DTC Logic .....	368	
Diagnosis Procedure .....	343	Diagnosis Procedure .....	368	
<b>P0744 TORQUE CONVERTER</b> .....	<b>344</b>	<b>P0965 PRESSURE CONTROL SOLENOID B</b> .....	<b>370</b>	J
DTC Logic .....	344	DTC Logic .....	370	
Diagnosis Procedure .....	345	Diagnosis Procedure .....	371	
<b>P0746 PRESSURE CONTROL SOLENOID A</b> .....	<b>346</b>	<b>P0966 PRESSURE CONTROL SOLENOID B</b> .....	<b>372</b>	K
DTC Logic .....	346	DTC Logic .....	372	
Diagnosis Procedure .....	347	Diagnosis Procedure .....	372	
<b>P0776 PRESSURE CONTROL SOLENOID B</b> .....	<b>348</b>	<b>P0967 PRESSURE CONTROL SOLENOID B</b> .....	<b>374</b>	L
DTC Logic .....	348	DTC Logic .....	374	
Diagnosis Procedure .....	349	Diagnosis Procedure .....	374	
<b>P0778 PRESSURE CONTROL SOLENOID B</b> .....	<b>350</b>	<b>P2765 INPUT SPEED SENSOR B</b> .....	<b>376</b>	M
DTC Logic .....	350	DTC Logic .....	376	
Diagnosis Procedure .....	350	Diagnosis Procedure .....	377	
<b>P0779 PRESSURE CONTROL SOLENOID B</b> .....	<b>352</b>	<b>P2813 SELECT SOLENOID</b> .....	<b>379</b>	N
DTC Logic .....	352	DTC Logic .....	379	
Diagnosis Procedure .....	352	Diagnosis Procedure .....	380	O
<b>P0841 TRANSMISSION FLUID PRESSURE SEN/SW A</b> .....	<b>354</b>	<b>P2814 SELECT SOLENOID</b> .....	<b>381</b>	P
DTC Logic .....	354	DTC Logic .....	381	
Diagnosis Procedure .....	354	Diagnosis Procedure .....	381	
<b>P0847 TRANSMISSION FLUID PRESSURE SEN/SW B</b> .....	<b>355</b>	<b>P2815 SELECT SOLENOID</b> .....	<b>383</b>	
DTC Logic .....	355	DTC Logic .....	383	
Diagnosis Procedure .....	355	Diagnosis Procedure .....	383	
		<b>MAIN POWER SUPPLY AND GROUND CIRCUIT</b> .....	<b>385</b>	
		Diagnosis Procedure .....	385	

<b>SHIFT POSITION INDICATOR CIRCUIT</b> .....	<b>387</b>	Exploded View .....	416
Component Parts Function Inspection .....	387	Removal and Installation .....	416
Diagnosis Procedure .....	387	Inspection and Adjustment .....	417
<b>OVERDRIVE CONTROL SWITCH</b> .....	<b>388</b>	<b>INPUT SPEED SENSOR</b> .....	<b>418</b>
Component Function Check .....	388	Exploded View .....	418
Diagnosis Procedure .....	388	Removal and Installation .....	418
Component Inspection .....	389	Inspection and Adjustment .....	418
<b>OD OFF INDICATOR LAMP</b> .....	<b>391</b>	<b>PRIMARY SPEED SENSOR</b> .....	<b>420</b>
Component Function Check .....	391	Exploded View .....	420
Diagnosis Procedure .....	391	Removal and Installation .....	420
<b>TOW MODE SYSTEM</b> .....	<b>392</b>	Inspection and Adjustment .....	420
Component Function Check .....	392	<b>OUTPUT SPEED SENSOR</b> .....	<b>422</b>
Diagnosis Procedure .....	392	Exploded View .....	422
Component Inspection .....	393	Removal and Installation .....	422
<b>SHIFT LOCK SYSTEM</b> .....	<b>395</b>	Inspection and Adjustment .....	422
Component Function Check .....	395	<b>DIFFERENTIAL SIDE OIL SEAL</b> .....	<b>423</b>
Diagnosis Procedure .....	395	Exploded View .....	423
Component Inspection (Shift Lock Solenoid) .....	396	Removal and Installation .....	423
Component Inspection (Park Position Switch) .....	396	Inspection and Adjustment .....	424
Component Inspection (Stop Lamp Switch) .....	397	<b>WATER HOSE</b> .....	<b>425</b>
<b>SYMPTOM DIAGNOSIS</b> .....	<b>398</b>	Exploded View .....	425
<b>CVT CONTROL SYSTEM</b> .....	<b>398</b>	Removal and Installation .....	425
Symptom Table .....	398	Inspection .....	426
<b>PERIODIC MAINTENANCE</b> .....	<b>403</b>	<b>CVT FLUID COOLER SYSTEM</b> .....	<b>427</b>
<b>CVT FLUID</b> .....	<b>403</b>	Exploded View .....	427
Inspection .....	403	Removal and Installation .....	427
Replacement .....	403	Inspection .....	428
Adjustment .....	405	<b>CVT OIL WARMER</b> .....	<b>430</b>
<b>REMOVAL AND INSTALLATION</b> .....	<b>407</b>	Exploded View .....	430
<b>CVT SHIFT SELECTOR</b> .....	<b>407</b>	Removal and Installation .....	430
Exploded View .....	407	Inspection .....	430
Removal and Installation .....	407	<b>PLUG</b> .....	<b>431</b>
Inspection .....	408	Description .....	431
<b>CONTROL CABLE</b> .....	<b>409</b>	Exploded View .....	431
Exploded View .....	409	Removal and Installation .....	431
Removal and Installation .....	409	Inspection and Adjustment .....	431
Inspection and Adjustment .....	410	<b>UNIT REMOVAL AND INSTALLATION</b> ...	<b>432</b>
<b>TOW MODE SWITCH</b> .....	<b>412</b>	<b>TRANSMISSION ASSEMBLY</b> .....	<b>432</b>
Removal and Installation .....	412	Exploded View .....	432
<b>TCM</b> .....	<b>413</b>	Removal and Installation .....	433
Exploded View .....	413	Inspection and Adjustment .....	435
Removal and Installation .....	413	<b>UNIT DISASSEMBLY AND ASSEMBLY</b> ..	<b>436</b>
Adjustment .....	413	<b>TORQUE CONVERTER AND CONVERTER</b>	
<b>AIR BREATHER HOSE</b> .....	<b>415</b>	<b>HOUSING OIL SEAL</b> .....	<b>436</b>
Removal and Installation .....	415	Exploded View .....	436
<b>OIL PAN</b> .....	<b>416</b>	Disassembly .....	436
		Assembly .....	436
		Inspection .....	437



<b>SERVICE DATA AND SPECIFICATIONS</b>	General Specification .....	438	
<b>(SDS) .....</b>	Shift Characteristics .....	438	A
	Stall Speed .....	438	
<b>SERVICE DATA AND SPECIFICATIONS</b>	Torque Converter .....	438	
<b>(SDS) .....</b>	Heater Thermostat .....	438	B

C

**TM**

E

F

G

H

I

J

K

L

M

N

O

P

# PRECAUTIONS

< PRECAUTION >

[CVT: RE0F10E]

## PRECAUTION

### PRECAUTIONS

#### Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000011149256

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. Information necessary to service the system safely is included in the SR and SB section of this Service Manual.

#### **WARNING:**

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SR section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

#### PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS


#### **WARNING:**

- When working near the Airbag Diagnosis Sensor Unit or other Airbag System sensors with the Ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the Ignition OFF, disconnect the battery and wait at least three minutes before performing any service.

#### Precaution for Procedure without Cowl Top Cover

INFOID:000000011149257

When performing the procedure after removing cowl top cover, cover the lower end of windshield with urethane, etc to prevent damage to windshield.

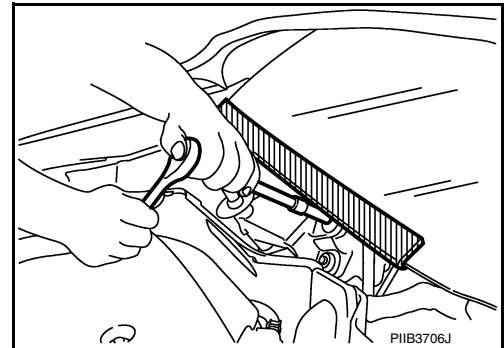

#### Precaution for TCM and Transaxle Assembly Replacement

INFOID:000000011149258

#### **CAUTION:**

- To replace TCM, refer to [TM-84, "Description"](#).
- To replace transaxle assembly, refer to [TM-85, "Description"](#).

# PRECAUTIONS


< PRECAUTION >

[CVT: RE0F10E]


INFOID:000000011149259

## General Precautions


- Turn ignition switch OFF and disconnect the battery cable from the negative terminal before connecting or disconnecting the CVT assembly harness connector. Because battery voltage is applied to TCM even if ignition switch is turned OFF.

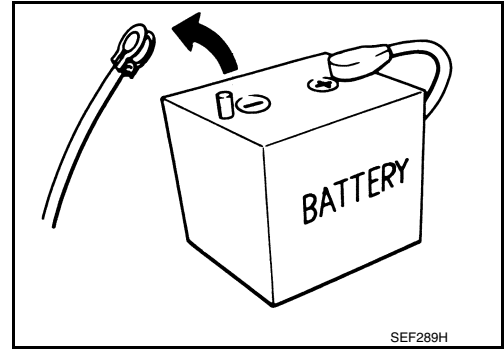


- When connecting or disconnecting pin connectors into or from TCM, do not damage pin terminals (bend or break). Check that there are not any bends or breaks on TCM pin terminal, when connecting pin connectors.

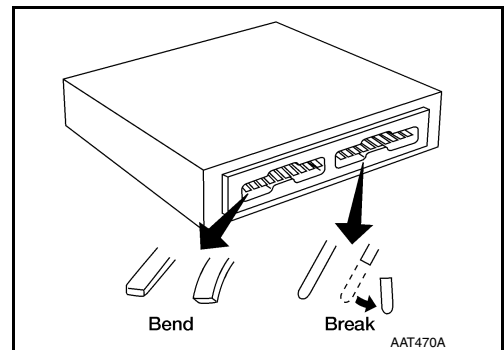

- Perform TCM input/output signal inspection and check whether TCM functions normally or not before replacing TCM. Refer to [TM-52, "Reference Value"](#).

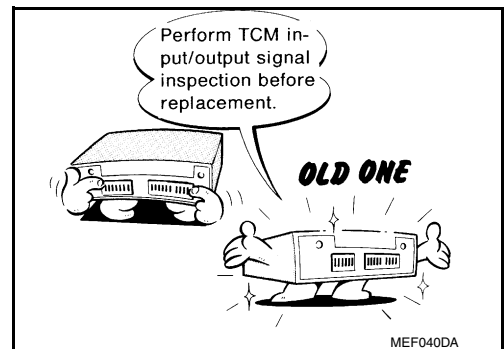

- Perform "DTC (Diagnostic Trouble Code) CONFIRMATION PROCEDURE". If the repair is completed DTC should not be displayed in the "DTC CONFIRMATION PROCEDURE".

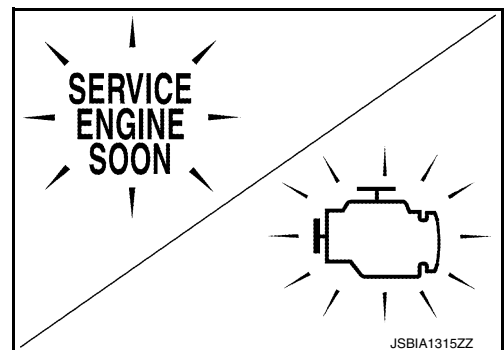

- Always use the specified brand of CVT fluid. Refer to [MA-15, "FOR USA AND CANADA : Fluids and Lubricants"](#) (For United States and Canada), [MA-17, "FOR MEXICO : Fluids and Lubricants"](#) (For Mexico).
- Use lint-free paper not cloth rags during work.
- Dispose of the waste oil using the methods prescribed by law, ordinance, etc. after replacing the CVT fluid.

A  
B  
C  
TM  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# PRECAUTIONS

< PRECAUTION >

[CVT: RE0F10E]

## On Board Diagnosis (OBD) System of CVT and Engine

INFOID:000000011149260

The TCM and ECM have an on board diagnostic system. It will light up the malfunction indicator lamp (MIL) to warn the driver of a malfunction causing emission deterioration.

### CAUTION:


- Be sure to turn the ignition switch OFF and disconnect the battery cable from the negative terminal before any repair or inspection work. The open/short circuit of related switches, sensors, solenoid valves, etc. will cause the MIL to light up.
- Be sure to connect and lock the connectors securely after work. A loose (unlocked) connector will cause the MIL to light up due to an open circuit. (Be sure the connector is free from water, grease, dirt, bent terminals, etc.)
- Be sure to route and secure the harnesses properly after work. Interference of the harness with a bracket, etc. may cause the MIL to light up due to a short circuit.
- Be sure to connect rubber tubes properly after work. A misconnected or disconnected rubber tube may cause the MIL to light up due to a malfunction of the EGR system or fuel injection system, etc.
- Be sure to erase the unnecessary malfunction information (repairs completed) from the TCM and ECM before returning the vehicle to the customer.

## Removal and Installation Procedure for CVT Unit Connector

INFOID:000000011149261


### REMOVAL

- Rotate bayonet ring ① counterclockwise. Pull out CVT unit harness connector ② upward and remove it.

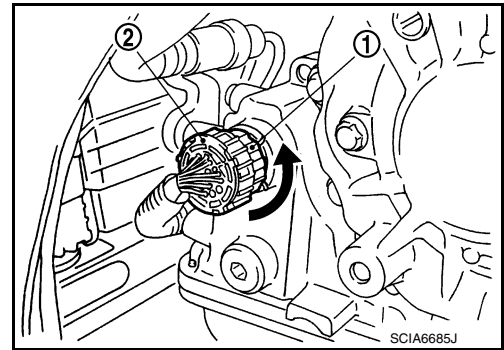


### INSTALLATION

1. Align marking (A) on CVT unit harness connector terminal with marking (B) on bayonet ring. Insert CVT unit harness connector.
2. Rotate bayonet ring clockwise.

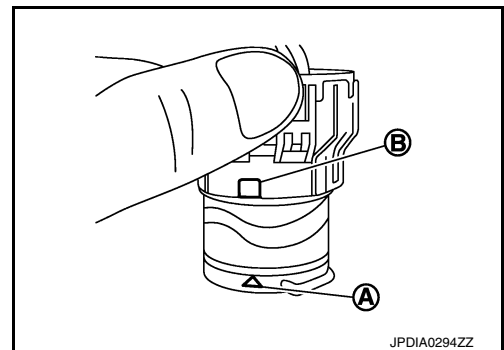

3. Rotate bayonet ring clockwise until marking (A) on CVT unit harness connector terminal body is aligned with the slit (B) on bayonet ring as shown in the figure (correctly fitting condition).

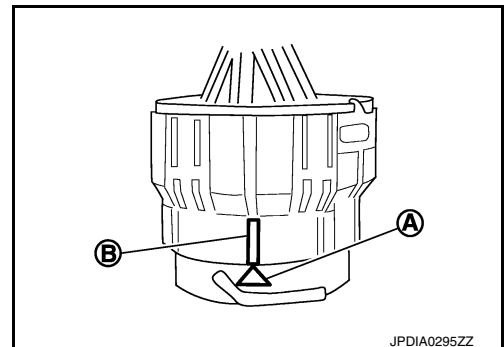


### CAUTION:

# PRECAUTIONS

[CVT: RE0F10E]

## < PRECAUTION >

- Securely align marking (A) on CVT unit harness connector terminal body with bayonet ring slit (B). Then, be careful not to make a half fit condition as shown in the figure.
- Never mistake the slit of bayonet ring for other dent portion.

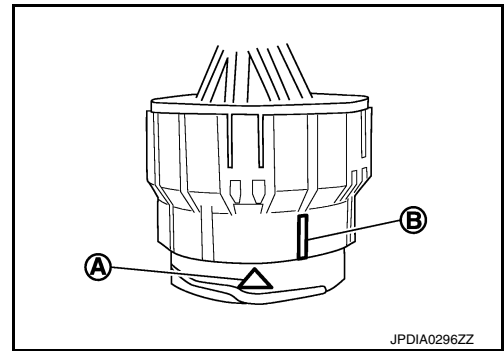

A  
B  
C

TM

E

F

G

H

I

J

K

L

M

N

O

P

# PREPARATION

< PREPARATION >

[CVT: RE0F10E]



## PREPARATION

### PREPARATION

#### Special Service Tools

INFOID:0000000011149262


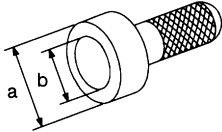
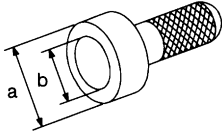
The actual shape of the tools may differ from those illustrated here.

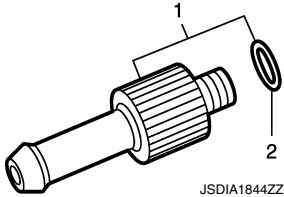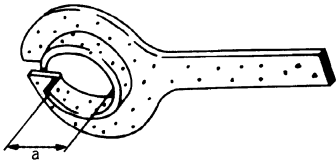Tool number (TechMate No.) Tool name	Description
1. KV311039S0 ( — ) Charging pipe set 2. KV31103920* ( — ) O-ring	CVT fluid changing and adjustment 
KV38107900 ( — ) Protector	Installing drive shaft a: 32 mm (1.26 in) dia. 

\*: The O-ring as a unit part is set as a SST.

#### Commercial Service Tools

INFOID:0000000011149263


Tool name	Description
Power tool 	Loosening nuts, screws and bolts
Drift 	Installing differential side oil seal a: 56 mm (2.20 in) dia. b: 50 mm (1.97 in) dia.
Drift 	Installing converter housing oil seal a: 65 mm (2.56 in) dia. b: 60 mm (2.36 in) dia.

# SYSTEM DESCRIPTION

## COMPONENT PARTS CVT CONTROL SYSTEM

### CVT CONTROL SYSTEM : Component Parts Location

INFOID:000000011149264

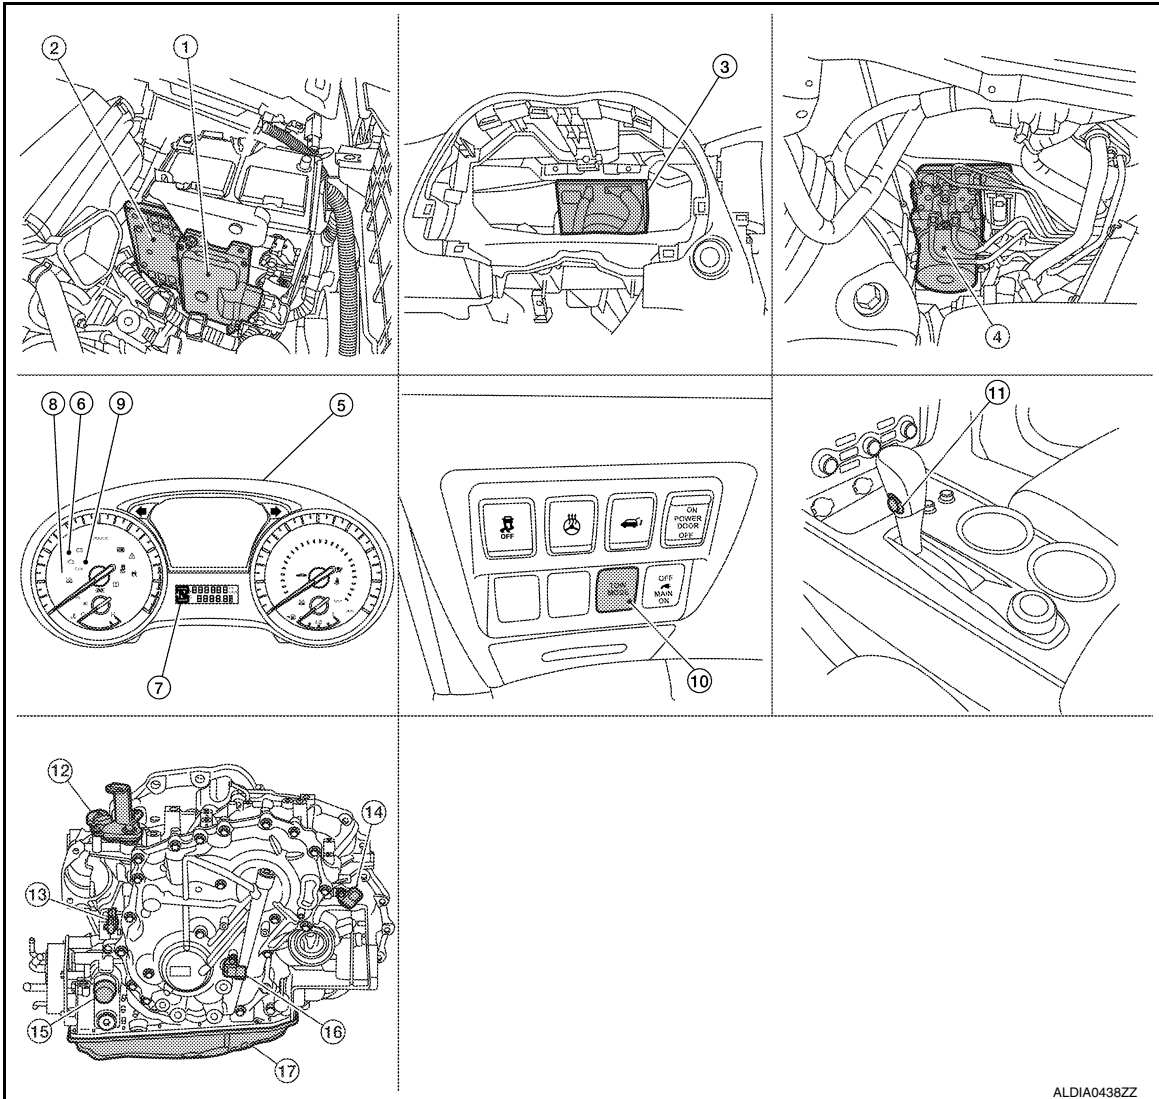

### COMPONENT DESCRIPTION

A  
B  
C  
TM  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# COMPONENT PARTS

< SYSTEM DESCRIPTION >

[CVT: RE0F10E]

NO.	Component	Function
①	TCM	<a href="#">TM-17. "CVT CONTROL SYSTEM : TCM"</a>
②	ECM	<p>Mainly transmits the following signal to TCM via CAN communication.</p> <ul style="list-style-type: none"> <li>• Engine and CVT integrated control signal</li> </ul> <p><b>NOTE:</b> General term for the communication (torque-down permission, torque-down request, etc.) exchanged between the ECM and TCM.</p> <ul style="list-style-type: none"> <li>• Engine speed signal</li> <li>• Engine coolant temperature signal</li> <li>• Accelerator pedal position signal</li> <li>• Closed throttle position signal</li> </ul> <p>Mainly receives the following signals from TCM via CAN communication.</p> <ul style="list-style-type: none"> <li>• Malfunction indicator lamp (MIL) signal</li> </ul> <p>Refer to <a href="#">EC-20. "ENGINE CONTROL SYSTEM : Component Parts Location"</a> for detailed installation location.</p>
③	BCM	<p>Mainly transmits the following signal to TCM via CAN communication.</p> <ul style="list-style-type: none"> <li>• Stop lamp switch signal</li> </ul> <p>Refer to <a href="#">BCS-4. "BODY CONTROL SYSTEM : Component Parts Location"</a> for detailed installation location.</p>
④	ABS actuator and electric unit (control unit)	<p>Mainly transmits the following signal to TCM via CAN communication.</p> <ul style="list-style-type: none"> <li>• Vehicle speed signal (ABS)</li> <li>• ABS operation signal</li> <li>• TCS operation signal</li> <li>• VDC operation signal</li> <li>• ABS malfunction signal</li> </ul> <p>Refer to <a href="#">BRC-139. "Component Parts Location"</a> for detailed installation location.</p>
⑤	Combination meter	<p>Mainly transmits the following signal to TCM via CAN communication.</p> <ul style="list-style-type: none"> <li>• Overdrive control switch signal</li> <li>• Tow mode switch signal</li> </ul> <p>Mainly receives the following signals from TCM via CAN communication.</p> <ul style="list-style-type: none"> <li>• Shift position indicator signal</li> <li>• OD OFF indicator lamp signal</li> <li>• Tow mode indicator lamp signal</li> </ul> <p>Refer to <a href="#">MWI-6. "METER SYSTEM : Component Parts Location"</a> for detailed installation location.</p>
⑥	Malfunction indicator lamp (MIL)	<a href="#">TM-23. "CVT CONTROL SYSTEM : Malfunction Indicator Lamp (MIL)"</a>
⑦	Shift position indicator	<a href="#">TM-23. "CVT CONTROL SYSTEM : Shift Position Indicator"</a>
⑧	OD OFF indicator lamp	<a href="#">TM-22. "CVT CONTROL SYSTEM : OD OFF Indicator Lamp"</a>
⑨	Tow mode indicator lamp	<a href="#">TM-23. "CVT CONTROL SYSTEM : TOW Mode Indicator Lamp"</a>
⑩	Tow mode switch	<a href="#">TM-22. "CVT CONTROL SYSTEM : Tow Mode Switch"</a>
⑪	Overdrive control switch	<a href="#">TM-22. "CVT CONTROL SYSTEM : Overdrive Control Switch"</a>
⑫	Transmission range switch	<a href="#">TM-17. "CVT CONTROL SYSTEM : Transmission Range Switch"</a>
⑬	Input speed sensor	<a href="#">TM-17. "CVT CONTROL SYSTEM : Input Speed Sensor"</a>
⑭	Output speed sensor	<a href="#">TM-19. "CVT CONTROL SYSTEM : Output Speed Sensor"</a>
⑮	CVT unit connector	—
⑯	Primary speed sensor	<a href="#">TM-18. "CVT CONTROL SYSTEM : Primary Speed Sensor"</a>



# COMPONENT PARTS

< SYSTEM DESCRIPTION >

[CVT: RE0F10E]


NO.	Component	Function
⑰	Control valve	
	CVT fluid temperature sensor*	<a href="#">TM-19. "CVT CONTROL SYSTEM : CVT Fluid Temperature Sensor"</a>
	Primary pressure sensor*	<a href="#">TM-20. "CVT CONTROL SYSTEM : Primary Pressure Sensor"</a>
	Secondary pressure sensor*	<a href="#">TM-20. "CVT CONTROL SYSTEM : Secondary Pressure Sensor"</a>
	Line pressure solenoid valve*	<a href="#">TM-20. "CVT CONTROL SYSTEM : Line Pressure Solenoid Valve"</a>
	Primary pressure solenoid valve*	<a href="#">TM-21. "CVT CONTROL SYSTEM : Primary Pressure Solenoid Valve"</a>
	Secondary pressure solenoid valve*	<a href="#">TM-21. "CVT CONTROL SYSTEM : Secondary Pressure Solenoid Valve"</a>
	Torque converter clutch solenoid valve*	<a href="#">TM-21. "CVT CONTROL SYSTEM : Torque Converter Clutch Solenoid Valve"</a>
Select solenoid valve*	<a href="#">TM-22. "CVT CONTROL SYSTEM : Select Solenoid Valve"</a>	

\*: These components are included in control valve assembly.

## CVT CONTROL SYSTEM : TCM

INFOID:0000000011149265


- The TCM consists of a microcomputer and connectors for signal input and output and for power supply.
- The vehicle driving status is judged based on the signals from the sensors, switches, and other control units, and the optimal transaxle control is performed.
- For TCM control items, refer to [TM-34. "CVT CONTROL SYSTEM : System Description"](#).

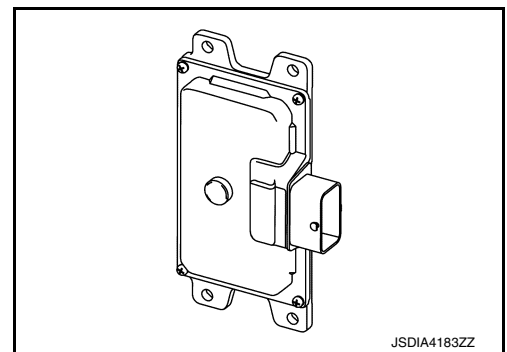

## CVT CONTROL SYSTEM : Transmission Range Switch

INFOID:0000000011149266


- The transmission range switch is installed to upper part of transaxle case.
- The transmission range switch detects the selector lever position.

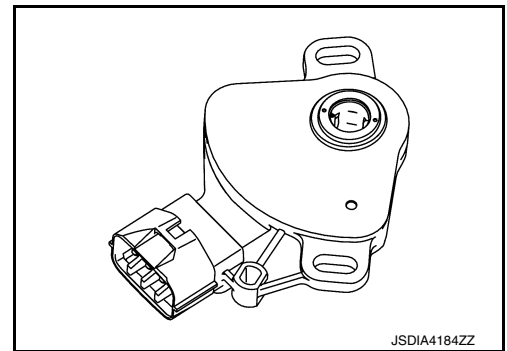

## CVT CONTROL SYSTEM : Input Speed Sensor

INFOID:0000000011149267

- The input speed sensor is installed to the front side of transaxle case.
- The input speed sensor detects input shaft speed.

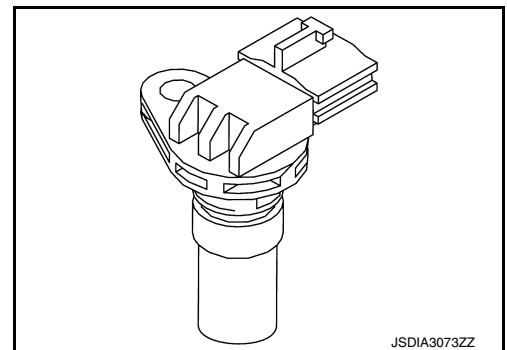


# COMPONENT PARTS

< SYSTEM DESCRIPTION >

[CVT: RE0F10E]


- The input speed sensor generates an ON-OFF pulse signal according to the rotating body speed. TCM judges the rotating body speed from the pulse signal.

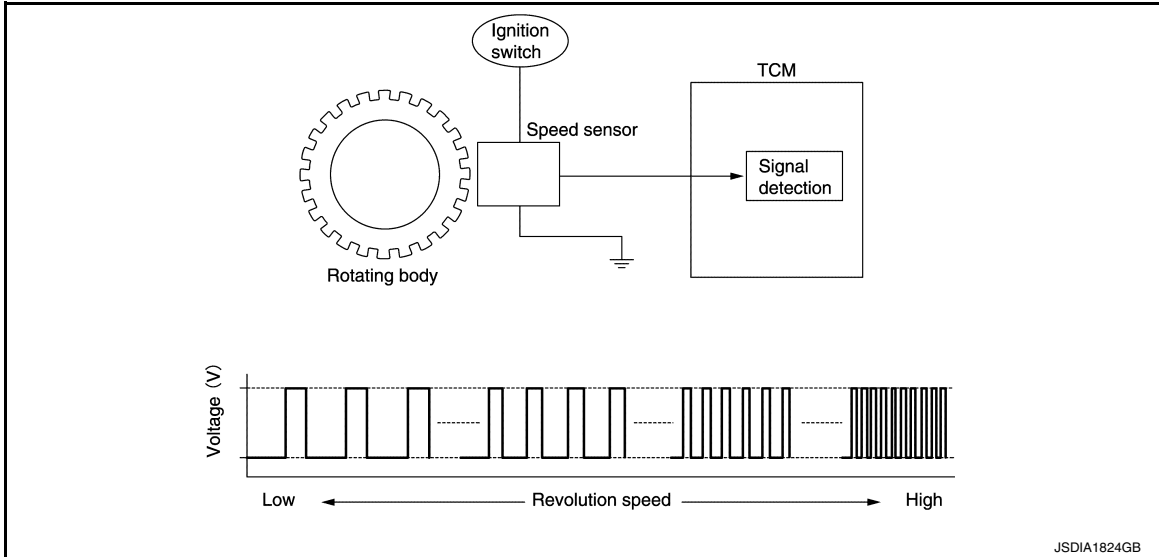


## CVT CONTROL SYSTEM : Primary Speed Sensor

INFOID:000000011149268

- The primary speed sensor is installed to transaxle side cover.
- The primary speed sensor detects primary pulley speed.

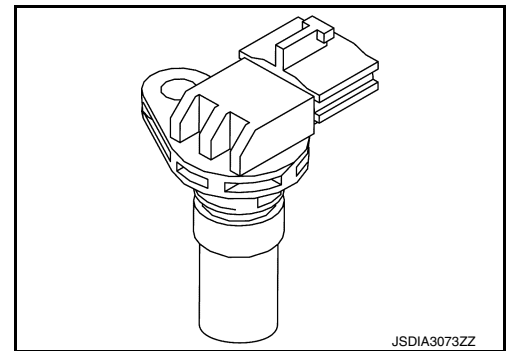

- The primary speed sensor generates an ON-OFF pulse signal according to the rotating body speed. TCM judges the rotating body speed from the pulse signal.

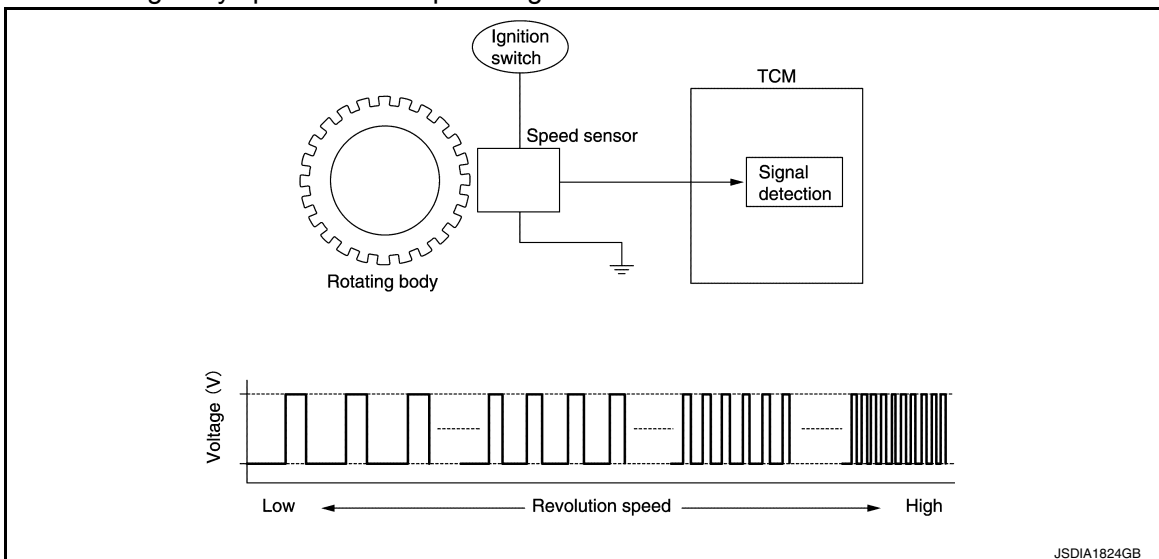

# COMPONENT PARTS


< SYSTEM DESCRIPTION >

[CVT: RE0F10E]


## CVT CONTROL SYSTEM : Output Speed Sensor

INFOID:000000011149269

- The output speed sensor is installed to the back side of transaxle case.
- The output speed sensor detects final gear speed.
- 

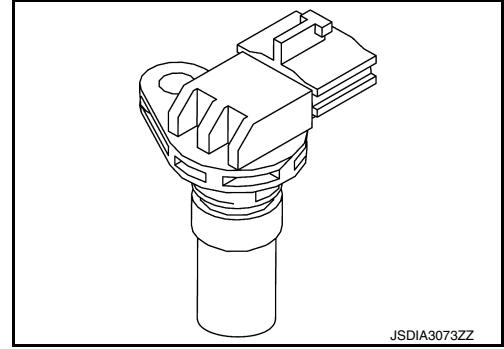


- The output speed sensor generates an ON-OFF pulse signal according to the rotating body speed. TCM judges the rotating body speed from the pulse signal.

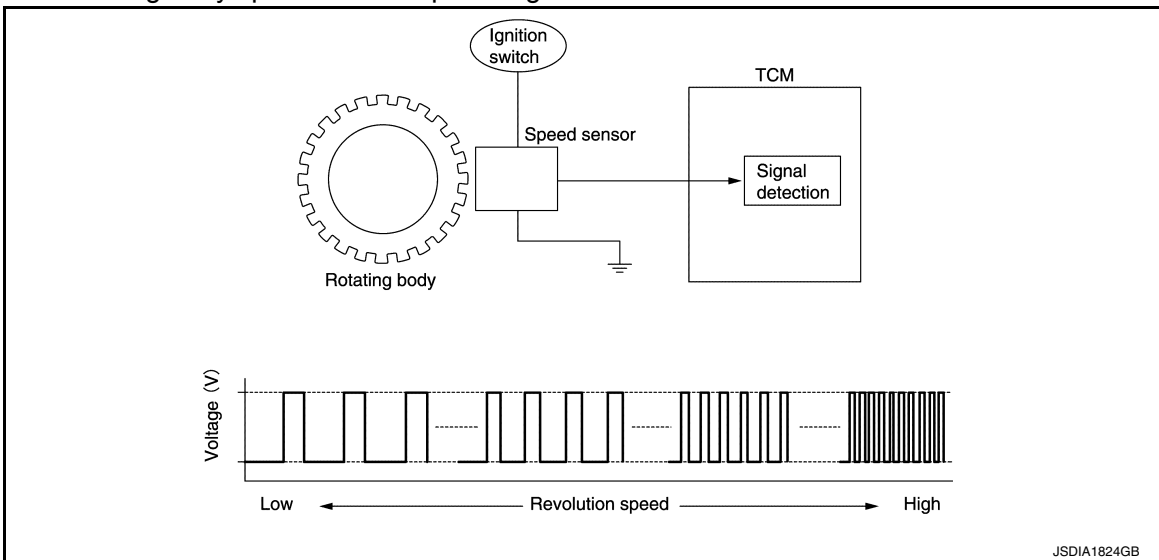

## CVT CONTROL SYSTEM : CVT Fluid Temperature Sensor

INFOID:000000011149270

- The CVT fluid temperature sensor is installed to control valve.
- The CVT fluid temperature sensor detects CVT fluid temperature in oil pan.
- The fluid temperature sensor uses a thermistor, and changes the signal voltage by converting changes in the CVT fluid temperature to a resistance value. TCM evaluates the CVT fluid temperature from the signal voltage value.

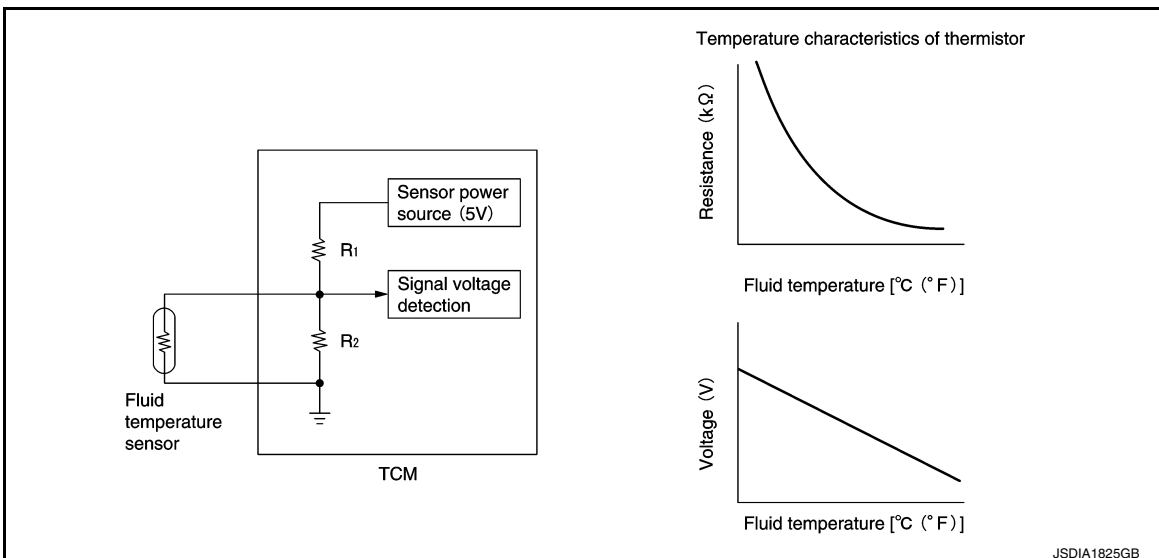

# COMPONENT PARTS


< SYSTEM DESCRIPTION >

[CVT: RE0F10E]

## CVT CONTROL SYSTEM : Primary Pressure Sensor

INFOID:0000000011149271


- The primary pressure sensor is installed to control valve.
- The primary pressure sensor detects the pressure applied to the primary pulley.
- When pressure is applied to the ceramic device in the primary pressure sensor, the ceramic device is deformed, resulting in voltage change. TCM evaluates the primary pressure from its voltage change. Voltage is increased along with pressure increase.

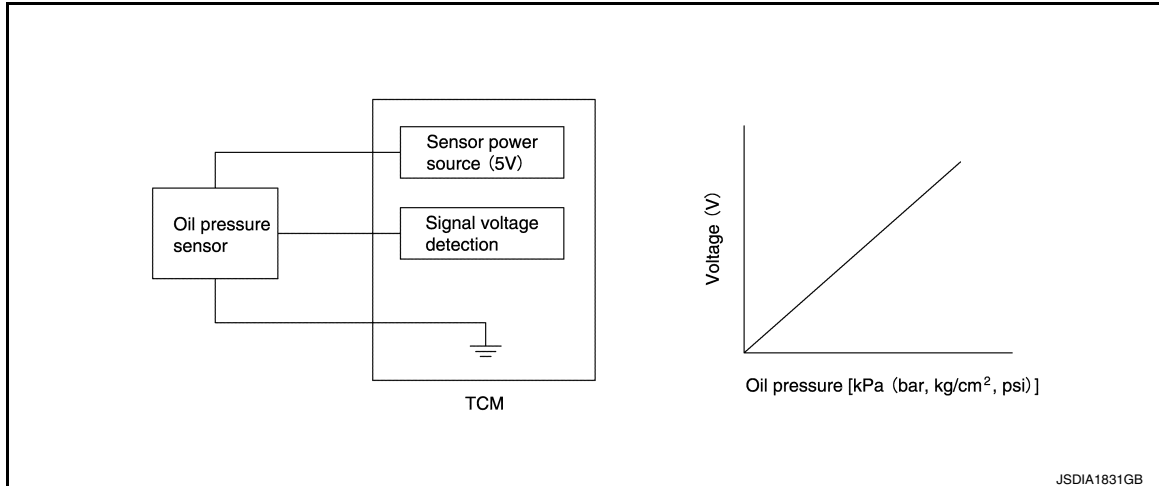

## CVT CONTROL SYSTEM : Secondary Pressure Sensor

INFOID:0000000011149272

- The secondary pressure sensor is installed to control valve.
- The secondary pressure sensor detects the pressure applied to the secondary pulley.
- When pressure is applied to the metal diaphragm in the secondary pressure sensor, the metal diaphragm is deformed, resulting in voltage change. TCM evaluates the secondary pressure from its voltage change. Voltage is increased along with pressure increase.

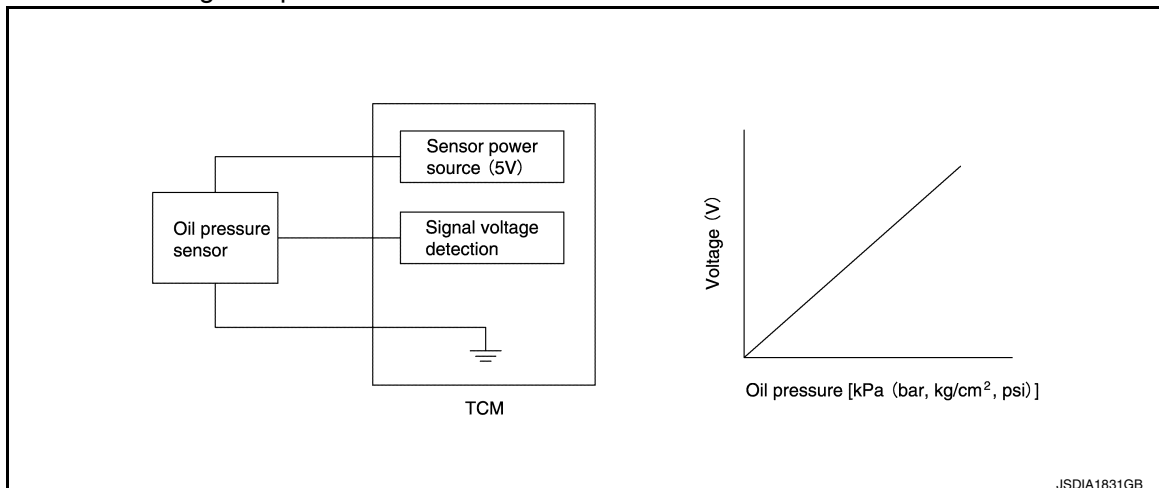

## CVT CONTROL SYSTEM : Line Pressure Solenoid Valve

INFOID:0000000011149273

- The line pressure solenoid valve is installed to control valve.
- The line pressure solenoid valve controls the pressure regulator valve. For information about the pressure regulator valve, refer to [TM-29, "TRANSAXLE : Component Description"](#).

# COMPONENT PARTS


## < SYSTEM DESCRIPTION >

[CVT: RE0F10E]

- The line pressure solenoid valve uses the linear solenoid valve [N/H (normal high) type].

**NOTE:**

- The principle of the linear solenoid valve utilizes the fact that the force pressing on the valve spool installed inside the coil increases nearly in proportion to the current. This allows it to produce a fluid pressure that is proportional to this pressing force.
- The N/H (normal high) produces hydraulic control when the coil is not energized.

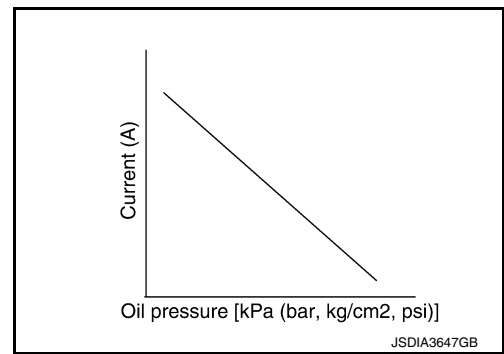


## CVT CONTROL SYSTEM : Primary Pressure Solenoid Valve

INFOID:0000000011149274

- The primary pressure solenoid valve is installed to control valve.
- The primary pressure solenoid valve controls the primary reducing valve. For information about the primary reducing valve, refer to [TM-29, "TRANSAXLE : Component Description"](#).
- The primary pressure solenoid valve uses the linear solenoid valve [N/H (normal high) type].

**NOTE:**

- The principle of the linear solenoid valve utilizes the fact that the force pressing on the valve spool installed inside the coil increases nearly in proportion to the current. This allows it to produce a fluid pressure that is proportional to this pressing force.
- The N/H (normal high) produces hydraulic control when the coil is not energized.

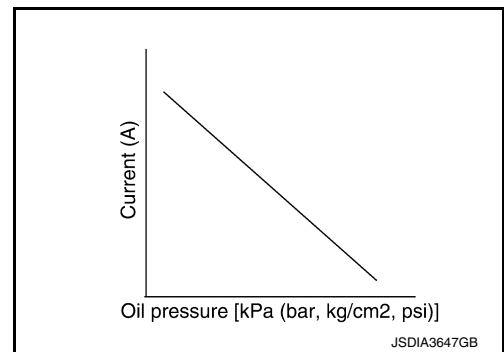


## CVT CONTROL SYSTEM : Secondary Pressure Solenoid Valve

INFOID:0000000011149275

- The secondary pressure solenoid valve is installed to control valve.
- The secondary pressure solenoid valve controls the secondary reducing valve. For information about the secondary reducing valve, refer to [TM-29, "TRANSAXLE : Component Description"](#).
- The secondary pressure solenoid valve uses the linear solenoid valve [N/H (normal high) type].

**NOTE:**

- The principle of the linear solenoid valve utilizes the fact that the force pressing on the valve spool installed inside the coil increases nearly in proportion to the current. This allows it to produce a fluid pressure that is proportional to this pressing force.
- The N/H (normal high) produces hydraulic control when the coil is not energized.

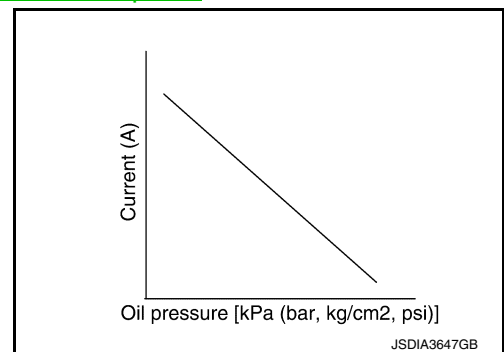

## CVT CONTROL SYSTEM : Torque Converter Clutch Solenoid Valve

INFOID:0000000011149276

- The torque converter clutch solenoid valve is installed to control valve.
- The torque converter clutch solenoid valve controls the torque converter clutch control valve. For information about the torque converter clutch control valve, refer to [TM-29, "TRANSAXLE : Component Description"](#).

A  
B  
C  
TM  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# COMPONENT PARTS


## < SYSTEM DESCRIPTION >

[CVT: RE0F10E]

- The torque converter clutch solenoid valve utilizes a linear solenoid valve [N/L (normal low) type].

**NOTE:**

- The principle of the linear solenoid valve utilizes the fact that the force pressing on the valve spool installed inside the coil increases nearly in proportion to the current. This allows it to produce a fluid pressure that is proportional to this pressing force.
- The N/L (normal low) type does not produce hydraulic control when the coil is not energized.

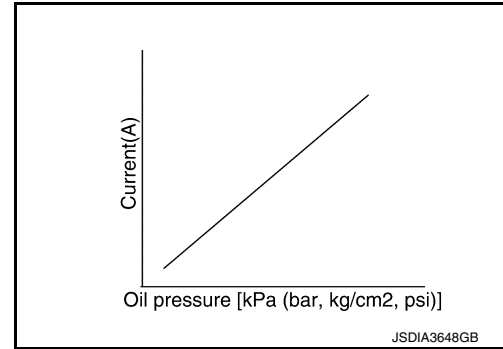


## CVT CONTROL SYSTEM : Select Solenoid Valve

INFOID:0000000011149277

- The select solenoid valve is installed to control valve.
- The select solenoid valve adjusts the forward clutch engaging pressure and the reverse brake engaging pressure.
- The select solenoid valve uses the linear solenoid valve [N/H (normal high) type].

**NOTE:**

- The principle of the linear solenoid valve utilizes the fact that the force pressing on the valve spool installed inside the coil increases nearly in proportion to the current. This allows it to produce a fluid pressure that is proportional to this pressing force.
- The N/H (normal high) produces hydraulic control when the coil is not energized.

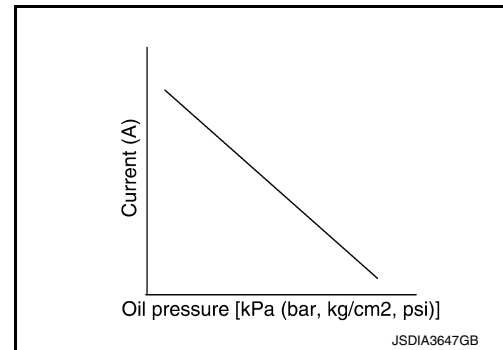

## CVT CONTROL SYSTEM : Overdrive Control Switch

INFOID:0000000011149278

- The overdrive control switch is installed to the selector lever handle.
- When the OD OFF indicator lamp on the combination meter is OFF and the overdrive control switch is pressed, the overdrive is cancelled and the OD OFF indicator lamp is ON.
- When the OD OFF indicator lamp on the combination meter is ON and the overdrive control switch is pressed, the overdrive is active and the OD OFF indicator lamp is OFF.

## CVT CONTROL SYSTEM : Tow Mode Switch

INFOID:0000000011149279


- The Tow mode switch is installed to instrument lower panel (LH).
- When the Tow mode indicator lamp on the combination meter is OFF and the Tow mode switch is pressed, the Tow mode is active and the Tow mode indicator lamp is ON.
- When the Tow mode indicator lamp on the combination meter is ON and the Tow mode switch is pressed, the Tow mode is cancelled and the Tow mode indicator lamp is OFF.

## CVT CONTROL SYSTEM : OD OFF Indicator Lamp

INFOID:0000000011149280

- OD OFF indicator lamp is positioned on the combination meter.
- OD OFF indicator lamp is ON when set to the overdrive OFF.
- OD OFF indicator lamp turns on for a certain period of time when the ignition switch turns ON, and then turns OFF.

Condition (status)	OD OFF indicator lamp
Ignition switch OFF.	OFF
Ignition switch ON.	ON (Approx. 2 sec.)
Overdrive control switch is pressed when the selector lever is in the "D" position and the OD OFF indicator lamp is OFF	ON

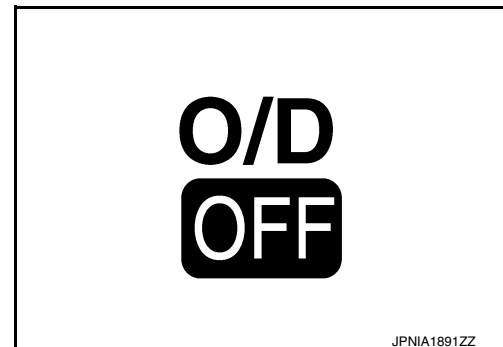

# COMPONENT PARTS

< SYSTEM DESCRIPTION >

[CVT: RE0F10E]


Condition (status)	OD OFF indicator lamp
Overdrive control switch is pressed when the selector lever is in the "D" position and the OD OFF indicator lamp is ON.	OFF
Selector lever is shifted to other position when the selector lever is at "D" position and the OD OFF indicator lamp is ON.	OFF

## CVT CONTROL SYSTEM : TOW Mode Indicator Lamp

INFOID:000000011149281

- TOW mode indicator lamp is positioned on the combination meter.
- TOW mode indicator lamp is ON when set to the tow mode.


Condition (status)	Tow mode indicator lamp
Ignition switch OFF.	OFF
Ignition switch ON.	OFF
Tow mode switch is pressed when the TOW mode indicator lamp is OFF	ON
Tow mode switch is pressed when the TOW mode indicator lamp is ON.	OFF

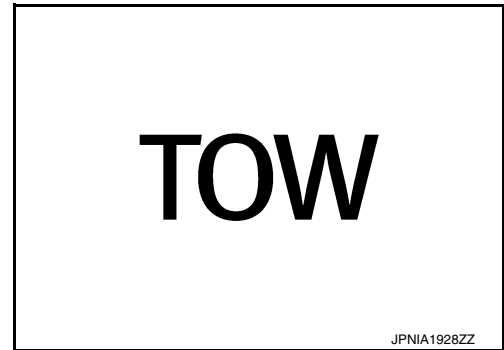

## CVT CONTROL SYSTEM : Shift Position Indicator

INFOID:000000011149282

TCM transmits shift position signal to combination meter via CAN communication. The actual shift position is displayed on combination meter according to the signal.

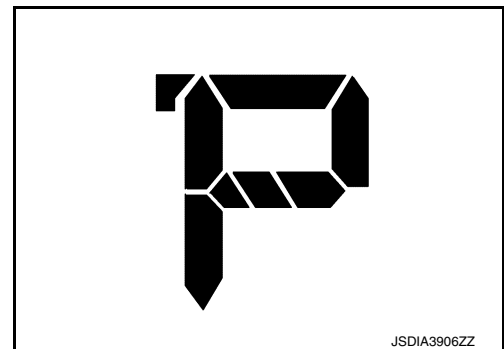

## CVT CONTROL SYSTEM : Malfunction Indicator Lamp (MIL)


INFOID:000000011149283

The malfunction indicator lamp (MIL) is located on the combination meter.

The MIL will illuminate when the ignition switch is turned ON without the engine running. This is a bulb check.

When the engine is started, the MIL should turn off. If the MIL remains illuminated, the on board diagnostic system has detected an engine system malfunction.

For details, refer to [EC-33, "Malfunction Indicator Lamp \(MIL\)"](#).

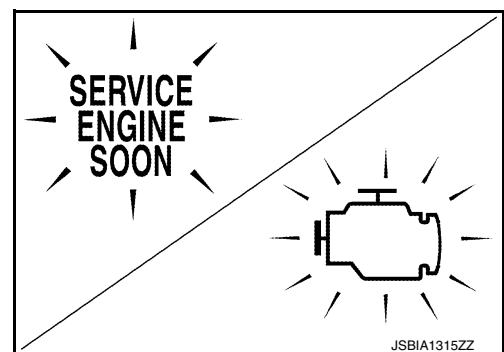

## SHIFT LOCK SYSTEM

A  
B  
C  
TM  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P


# COMPONENT PARTS

< SYSTEM DESCRIPTION >

[CVT: RE0F10E]

## SHIFT LOCK SYSTEM : Component Parts Location

INFOID:000000011149284

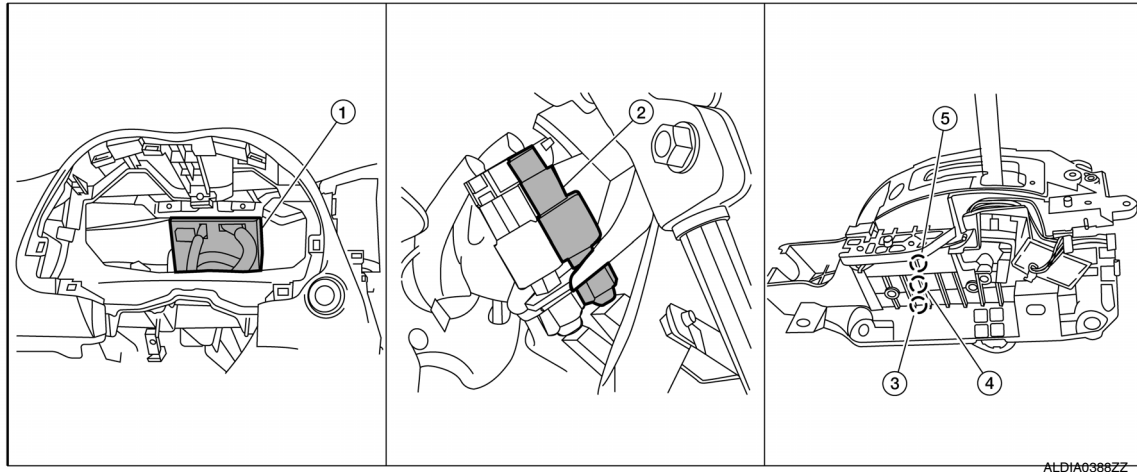

- |   |  |   |
|---|--|---|
| 1. BCM (view with combination meter removed)              | 2. Stop lamp switch  | 3. Shift lock release button (view with center console removed) |
| 4. Shift lock solenoid (view with center console removed) | 5. Park position switch (view with center console removed) |   |

## COMPONENT DESCRIPTION

Component	Function
Stop lamp switch	<ul style="list-style-type: none"> <li>The stop lamp switch turns ON when the brake pedal is depressed.</li> <li>When the stop lamp switch turns ON, the shift lock solenoid is energized.</li> </ul>
Shift lock release button	Forcibly releases the shift lock when pressed.
Shift lock solenoid	It operates according to the signal from the stop lamp switch and moves the lock lever.
Park position switch	It detects that the selector lever is in "P" position.



# STRUCTURE AND OPERATION


< SYSTEM DESCRIPTION >

[CVT: RE0F10E]

## STRUCTURE AND OPERATION TRANSAXLE

TRANSAXLE : Cross-Sectional View

INFOID:000000011149285

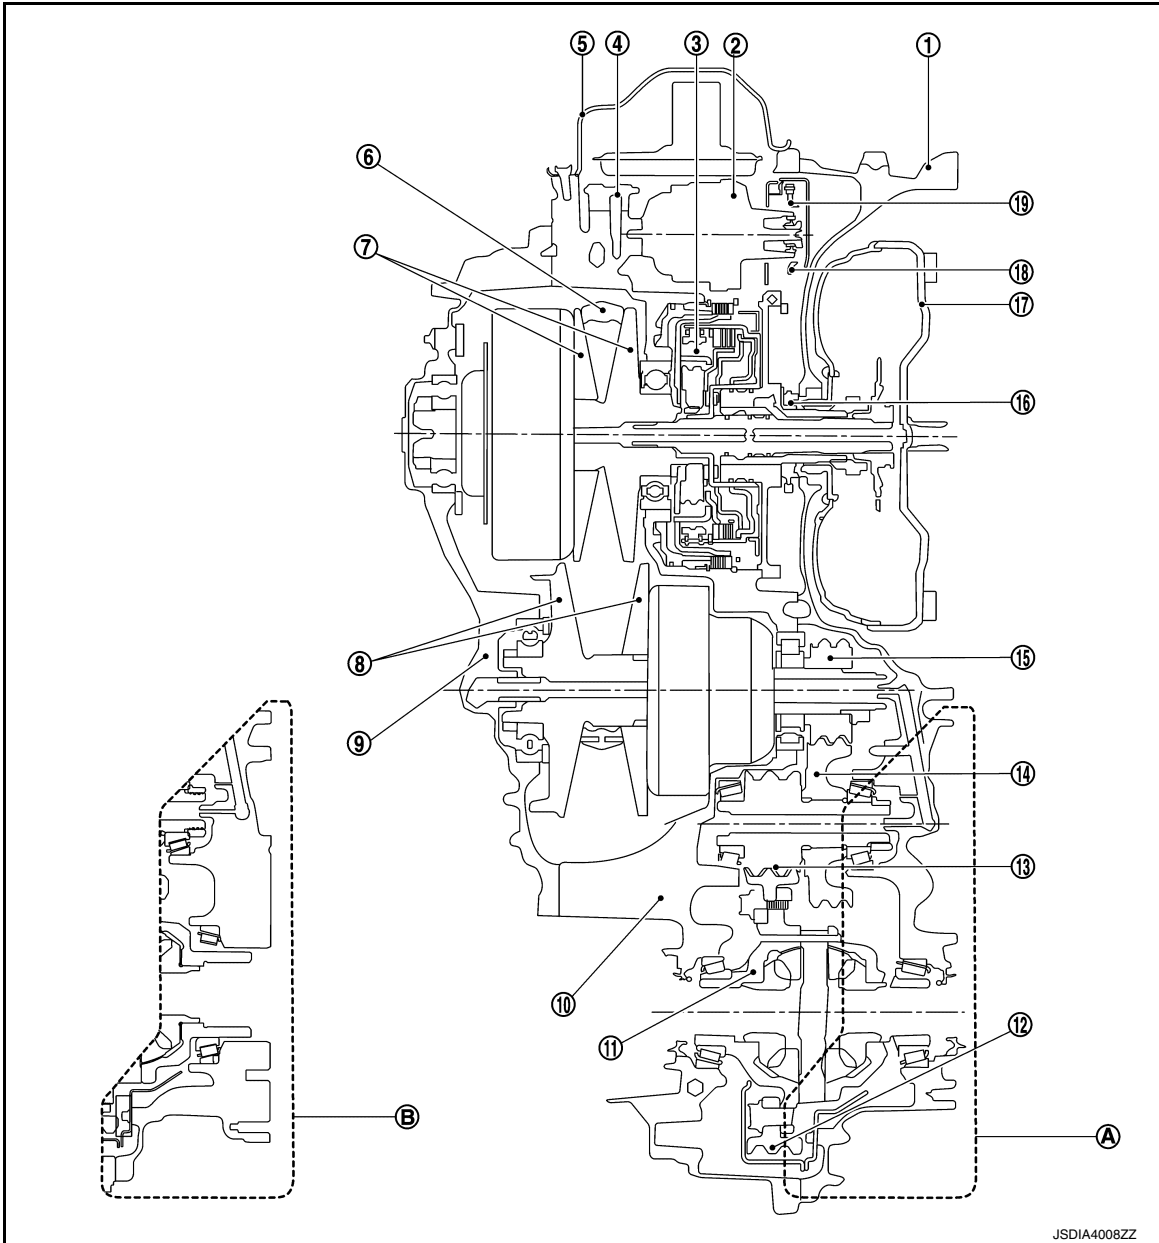

- |                     |                     |                   |
|---------------------|---------------------|-------------------|
| ① Converter housing | ② Oil pump          | ③ Planetary gear  |
| ④ Control valve     | ⑤ Oil pan           | ⑥ Chain belt      |
| ⑦ Planetary pulley  | ⑧ Secondary pulley  | ⑨ Side cover      |
| ⑩ Transaxle case    | ⑪ Differential case | ⑫ Final gear      |
| ⑬ Reduction gear    | ⑭ Idler gear        | ⑮ Output gear     |
| ⑯ Drive sprocket    | ⑰ Torque converter  | ⑱ Driven sprocket |
| Ⓐ 2WD models        | Ⓑ 4WD models        |                   |

A  
B  
C  
TM  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# STRUCTURE AND OPERATION

< SYSTEM DESCRIPTION >

[CVT: RE0F10E]

## TRANSAXLE : Transaxle Mechanism

INFOID:000000011149286

### TORQUE CONVERTER (WITH LOCK-UP FUNCTION)

In the same way as a conventional A/T, the torque converter is a system that increases the engine torque and transmits the torque to the transaxle. A symmetrical 3-element, 1-stage, 2-phase type is used here.


### OIL PUMP

Utilizes a vane-type oil pump that is driven by the engine through the oil pump drive chain in order to increase efficiency of pump discharge volume in low-speed zone and optimize pump discharge volume in high-speed zone. Discharged oil from oil pump is transmitted to control valve. It is used as the oil of primary and secondary pulley operation, the oil of clutch operation, and the lubricant for each part.

### PLANETARY GEAR

- A planetary gear type of forward/reverse selector mechanism is installed between the torque converter and primary pulley.
- The power from the torque converter is input via the input shaft, operating a wet multi-plate clutch by means of hydraulic pressure to switch between forward and reverse driving.

#### Operation of Planetary gear

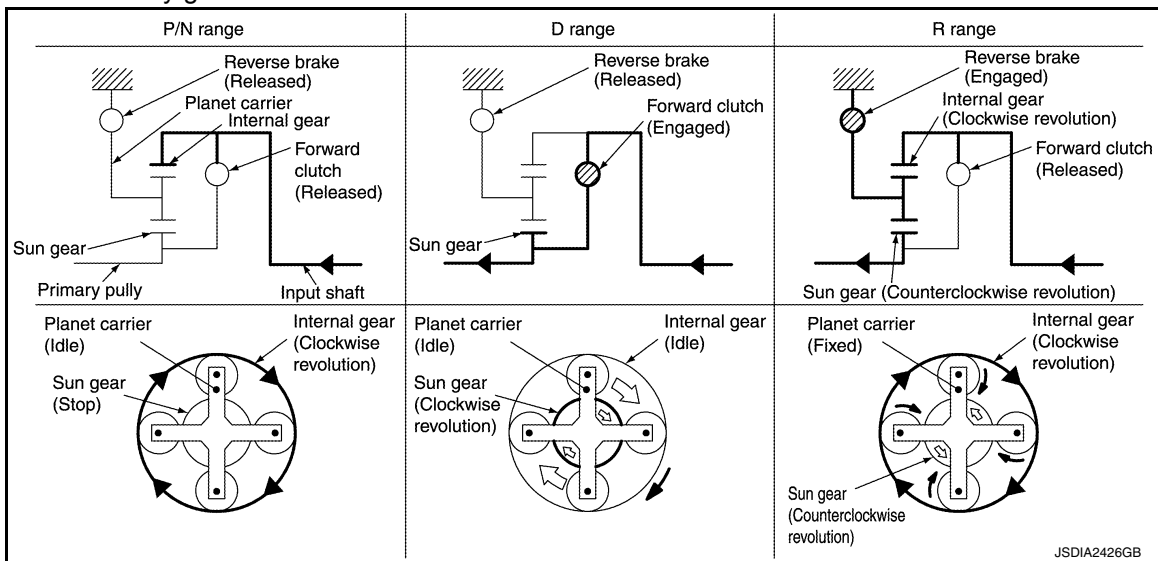


### BELT & PULLEY

It is composed of a pair of pulleys (the groove width is changed freely in the axial direction) and the chain belt. The groove width changes according to wrapping radius of chain belt and pulley from low status to overdrive status continuously with non-step. It is controlled with the oil pressures of primary pulley and secondary pulley.

#### Chain belt

The chain belt consists of approximately 150 locker pins ① and 1,000 link plates ②. Chains are rotated by locker pins sandwiched by pulleys. This produces tension difference in chains among pulleys. Accordingly, the power is transferred by the tension.

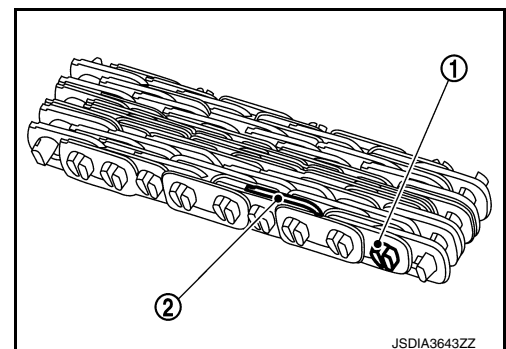

#### Pulley


The primary pulley (input shaft side) and the secondary pulley (output shaft side) have the shaft with slope (fixed cone surface), movable sheave (movable cone surface that can move in the axial direction) and oil pressure chamber at the back of the movable sheave.

# STRUCTURE AND OPERATION

< SYSTEM DESCRIPTION >

[CVT: RE0F10E]

The movable sheave slides on the shaft to change the groove width of the pulley. Input signals of engine load (accelerator pedal opening), primary pulley speed and secondary pulley speed change the operation pressures of the primary pulley and the secondary pulley, and controls the pulley groove width.

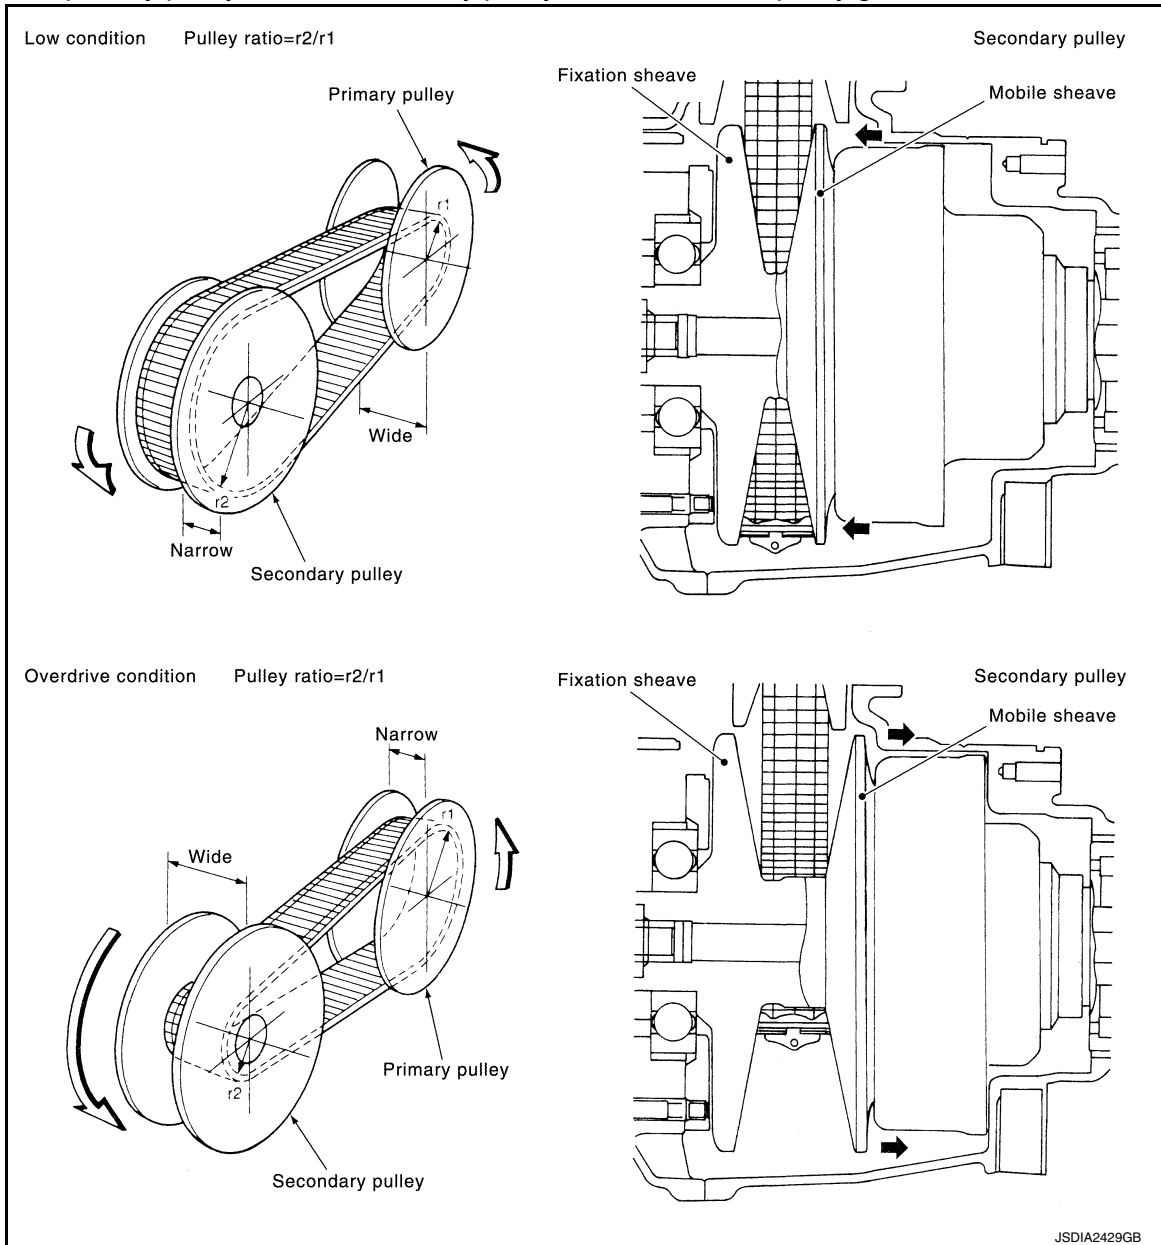

## FINAL DRIVE AND DIFFERENTIAL

The deceleration gears are composed of 2 stages: primary deceleration (output gear, idler gear pair) and secondary deceleration (reduction gear, final gear pair). All of these gears are helical gears.


A  
B  
C  
TM  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# STRUCTURE AND OPERATION

< SYSTEM DESCRIPTION >

[CVT: RE0F10E]

The lubrication oil is the same as the CVT fluid which lubricates the entire transaxle.

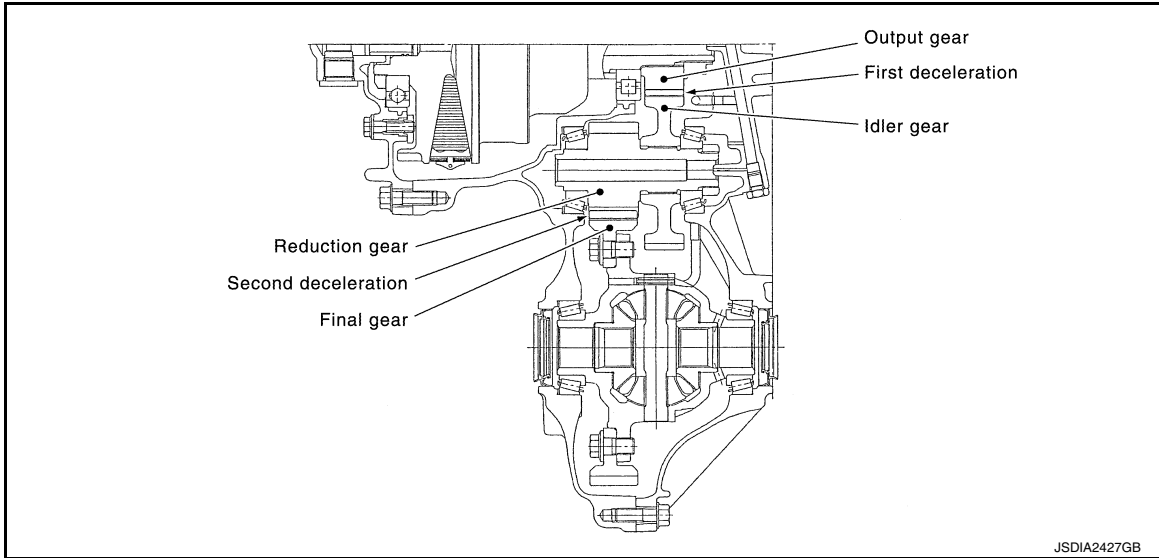

## TRANSAXLE : Operation Status

INFOID:000000011149287

×: Engaged or applied.

Selector lever position	Parking mechanism	Forward clutch	Reverse brake	Primary pulley	Secondary pulley	Chain belt	Final drive
P	×						
R			×	×	×	×	×
N							
D, L		×		×	×	×	×

# STRUCTURE AND OPERATION


< SYSTEM DESCRIPTION >

[CVT: RE0F10E]

## TRANSAXLE : Oil Pressure System

INFOID:000000011149288

Oil pressure required for operation of the transaxle transmission mechanism is generated by oil pump, oil pressure control valve, solenoid valve, etc.

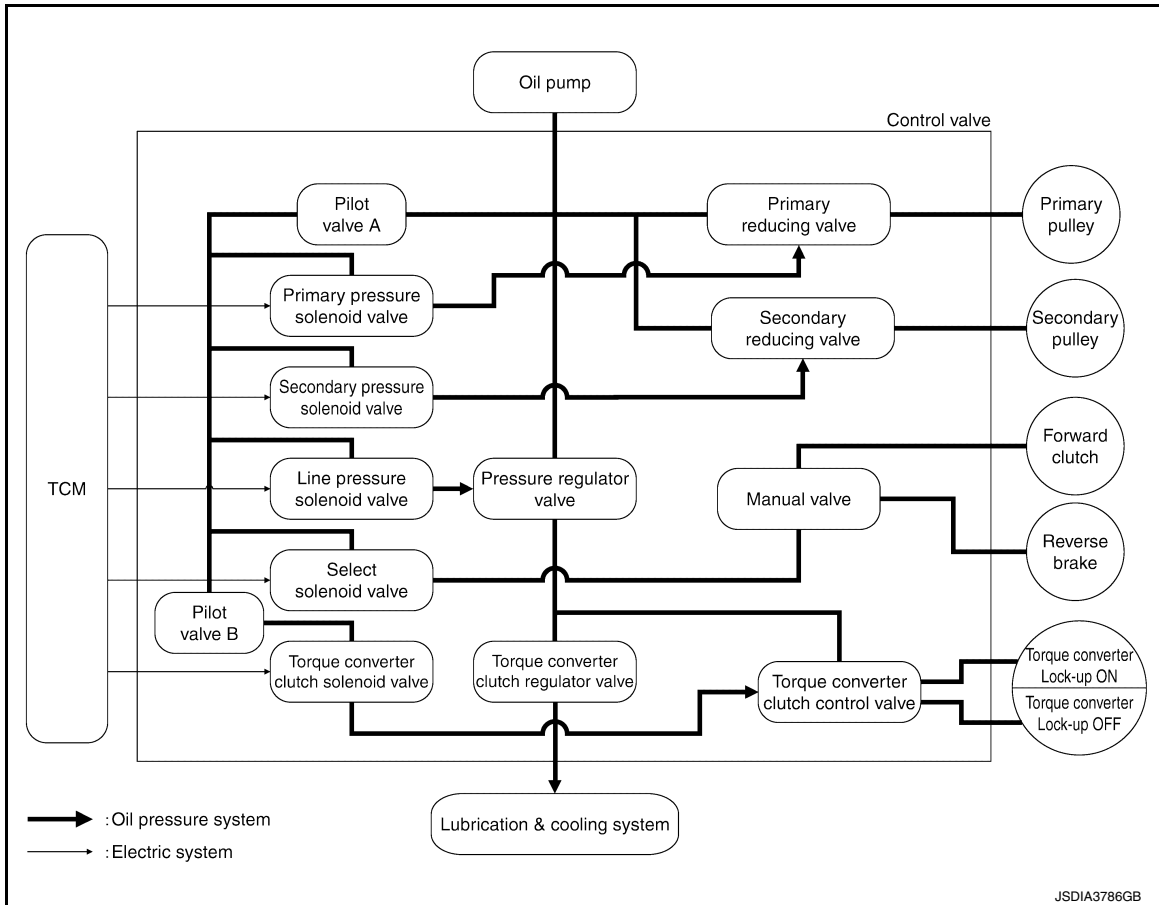

## TRANSAXLE : Component Description

INFOID:000000011149289

Part name	Function
Torque converter	Increases engine torque and transmits it to the transaxle.
Oil pump	Utilizes a vane-type oil pump that is driven by the engine through the oil pump drive chain in order to increase efficiency of pump discharge volume in low-speed zone and optimize pump discharge volume in high-speed zone. Discharged oil from oil pump is transmitted to control valve. It is used as the oil of primary and secondary pulley operation, the oil of clutch operation, and the lubricant for each part.
Forward clutch	The forward clutch is wet and multiple plate type clutch that consists of clutch drum, piston, drive plate, and driven plate. It is a clutch to move the vehicle forward by activating piston hydraulically, engaging plates, and directly connecting sun gear and input shaft.
Reverse brake	The reverse brake is a wet multiple-plate type brake that consists of transaxle case, piston, drive plate, and driven plate. It is a brake to move the vehicle in reverse by activating piston hydraulically, engaging plates, and fixing planetary gear.
Internal gear	The internal gear is directly connected to forward clutch drum. It is a gear that moves the outer edge of pinion planet of planet carrier. It transmits power to move the vehicle in reverse when the planet carrier is fixed.
Planet carrier	Composed of a carrier, pinion planet, and pinion shaft. This gear fixes and releases the planet carrier in order to switch between forward and reverse driving.
Sun gear	Sun gear is a set part with planet carrier and internal gear. It transmits transmitted force to primary fixed sheave. It rotates in forward or reverse direction according to activation of either forward clutch or reverse brake.

# STRUCTURE AND OPERATION

< SYSTEM DESCRIPTION >

[CVT: RE0F10E]


Part name	Function
Input shaft	The input shaft is directly connected to forward clutch drum and transmits traction force from torque converter. In shaft center, there are holes for hydraulic distribution to primary pulley and hydraulic distribution for lockup ON/OFF.
Primary pulley	It is composed of a pair of pulleys (the groove width is changed freely in the axial direction) and the chain belt. The groove width changes according to wrapping radius of steel belt and pulley from low status to overdrive status continuously with non-step. It is controlled with the oil pressures of primary pulley and secondary pulley.
Secondary pulley	
Chain belt	
Manual shaft	When the manual shaft is in the P position, the parking rod that is linked to the manual shaft rotates the parking pole. When the parking pole rotates, it engages with the parking gear, fixing the parking gear. As a result, the secondary pulley that is integrated with the parking gear is fixed.
Parking rod	
Parking pawl	
Parking gear	
Output gear	The deceleration gears are composed of 2 stages: primary deceleration (output gear, idler gear pair) and secondary deceleration (reduction gear, final gear pair). All of these gears are helical gears.
Idler gear	
Reduction gear	
Differential	
Torque converter regulator valve	Adjusts the feed pressure to the torque converter to the optimum pressure corresponding to the driving condition.
Pressure regulator valve	Adjusts the discharge pressure from the oil pump to the optimum pressure (line pressure) corresponding to the driving condition.
Torque converter clutch control valve	Adjusts the torque converter engage and disengage pressures.
Manual valve	Distributes the clutch operation pressure to each circuit according to the selector lever position.
Secondary reducing valve	Reduces line pressure and adjusts secondary pressure.
Primary reducing valve	Reduces line pressure and adjusts primary pressure.
Pilot valve A	Reduces line pressure and adjusts pilot pressure to the solenoid valves listed below. <ul style="list-style-type: none"> <li>• Primary pressure solenoid valve</li> <li>• Secondary pressure solenoid valve</li> <li>• Select solenoid valve</li> <li>• Line pressure solenoid valve</li> </ul>
Pilot valve B	Reduces pilot pressure and adjusts pilot pressure to the torque converter clutch solenoid valve.

## FLUID COOLER & FLUID WARMER SYSTEM

### FLUID COOLER & FLUID WARMER SYSTEM : System Description

INFOID:000000011149290

#### CVT FLUID COOLER SCHEMATIC

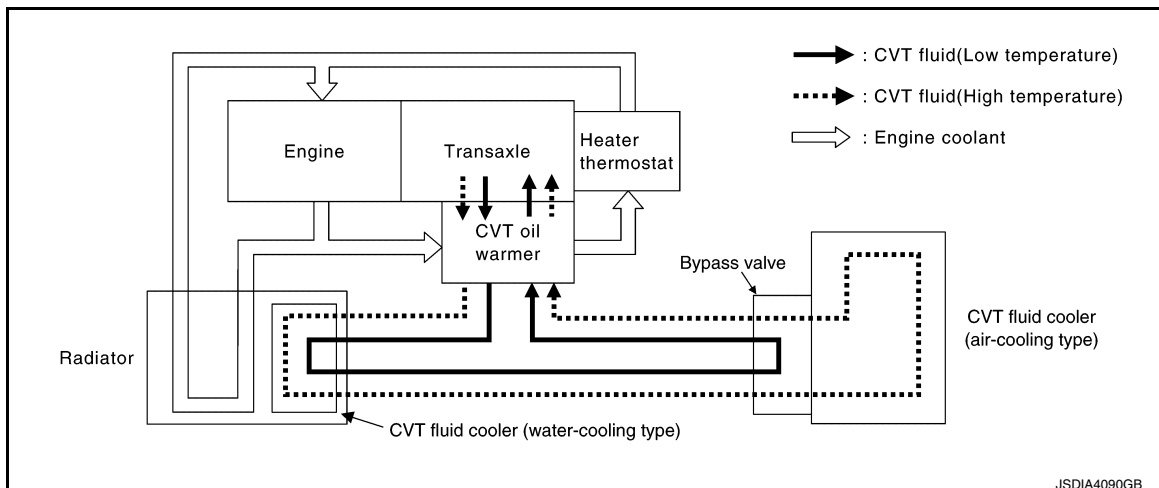

#### COMPONENT DESCRIPTION


##### CVT Oil Warmer

# STRUCTURE AND OPERATION

## < SYSTEM DESCRIPTION >


[CVT: RE0F10E]

- The CVT oil warmer ① is installed on the front part of transaxle assembly.
- When engine is started while engine and CVT are cold, engine coolant temperature rises more quickly than CVT fluid temperature. CVT oil warmer is provided with two circuits for CVT and engine coolant respectively so that warmed engine coolant warms CVT quickly. This helps shorten CVT warming up time, improving fuel economy.
- A cooling effect is obtained when CVT fluid temperature is high.

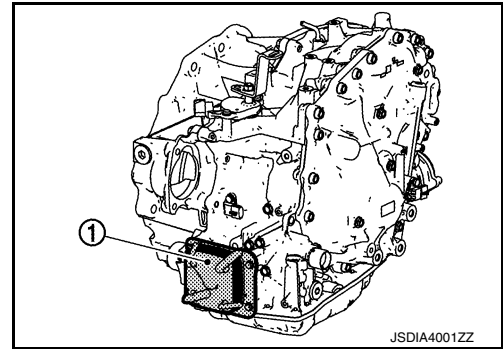


### CVT Fluid Cooler

- The CVT fluid cooler is installed to the vehicle front LH.
- The CVT fluid cooler prevents CVT fluid temperature from an abnormal increase while driving the vehicle. When flowing into the CVT fluid cooler, CVT fluid is cooled by driving blast while driving the vehicle.

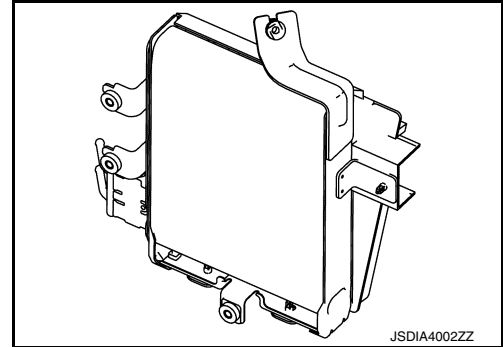


### Bypass Valve

- The bypass valve ① is installed to the CVT fluid cooler.
- Bypass valve controls CVT fluid flow.

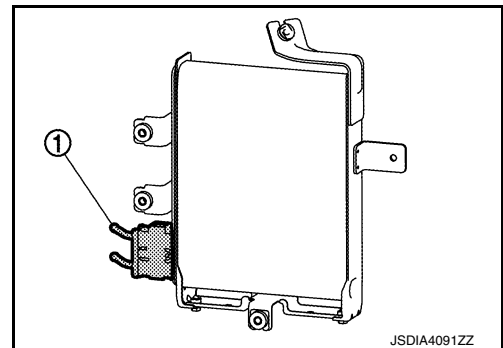

- When CVT fluid temperature is low, the bypass valve is open. Most of CVT fluid therefore returns to the transaxle without flowing into the cooler core that has larger flow resistance.

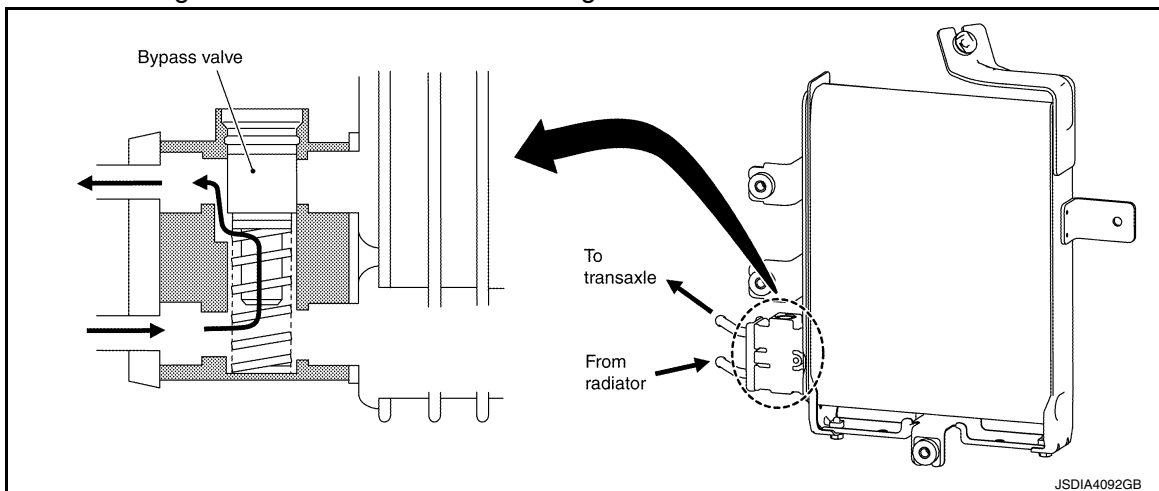


A  
B  
C  
TM  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# STRUCTURE AND OPERATION

## < SYSTEM DESCRIPTION >


[CVT: RE0F10E]

- When CVT fluid temperature rises [to approximately 65°C (149°F)], bypass valve fully closes and allows CVT fluid to flow into cooler core. CVT fluid flowing into cooler core is cooled by air stream caused by vehicle travel and returned to transaxle.

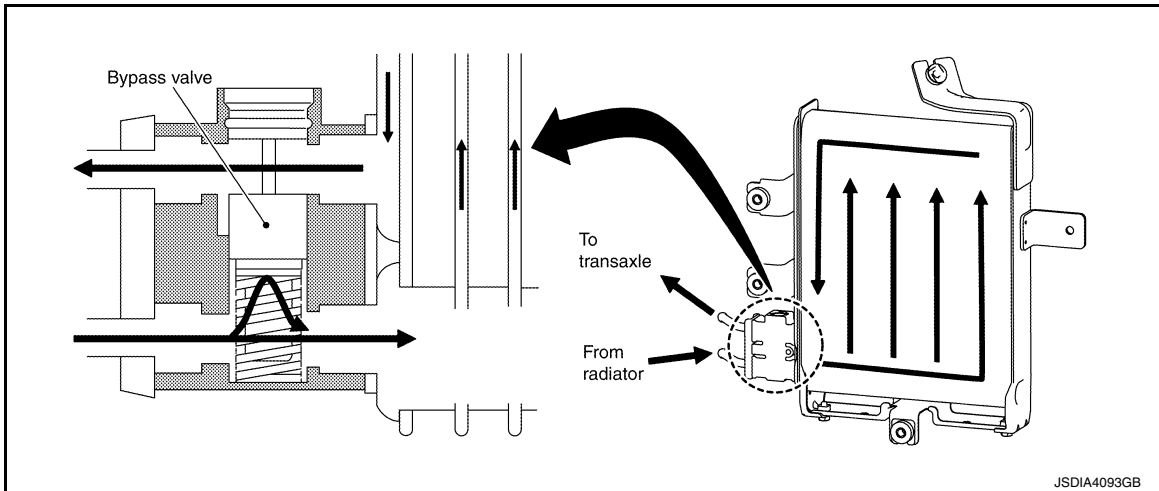

### Heater Thermostat

- The heater thermostat ① is installed on the front part of transaxle assembly.
- The heater thermostat open and close with set temperature.

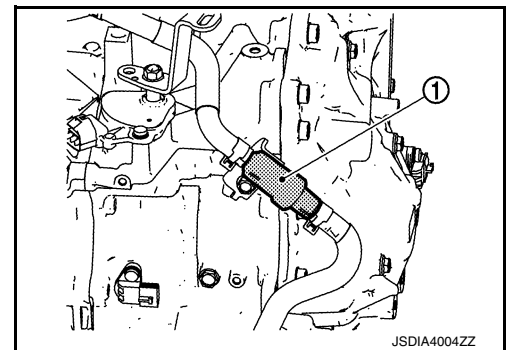

## SHIFT LOCK SYSTEM

### SHIFT LOCK SYSTEM : System Description

INFOID:000000011149291


The shift lever cannot be shifted from the “P” position unless the brake pedal is depressed while the ignition switch is set to ON. The shift lock is unlocked by turning the shift lock solenoid ON when the ignition switch is set to ON, the park position switch is turned ON (selector lever is in “P” position), and the stop lamp switch is turned ON (brake pedal is depressed) as shown in the operation chart in the figure. Therefore, the shift lock solenoid receives no ON signal and the shift lock remains locked if all of the above conditions are not fulfilled. However, selector operation is allowed if the shift lock release button is pressed.

### SHIFT LOCK OPERATION AT “P” POSITION

#### When Brake Pedal Is Not Depressed (No Selector Operation Allowed)

The shift lock solenoid (A) is turned OFF (not energized) and the solenoid rod (B) is extended with the spring when the brake pedal is not depressed (no selector operation allowed) with the ignition switch ON.

The connecting lock lever (C) is located at the position shown in the figure when the solenoid rod is extended. It prevents the movement of the detent rod (D). For these reasons, the selector lever cannot be shifted from the “P” position.

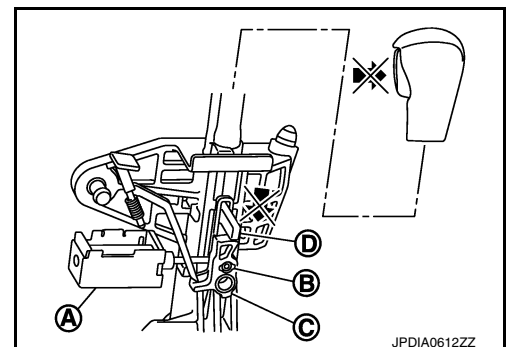

#### When Brake Pedal Is Depressed (Shift Operation Allowed)




# STRUCTURE AND OPERATION

< SYSTEM DESCRIPTION >


[CVT: RE0F10E]

The shift lock solenoid (A) is turned ON (energized) when the brake pedal is depressed with the ignition switch ON. The solenoid rod (B) is compressed by the electromagnetic force. The connecting lock lever (C) rotates when the solenoid is activated. Therefore, the detent rod (D) can be moved. For these reasons, the selector lever can be shifted to other positions.

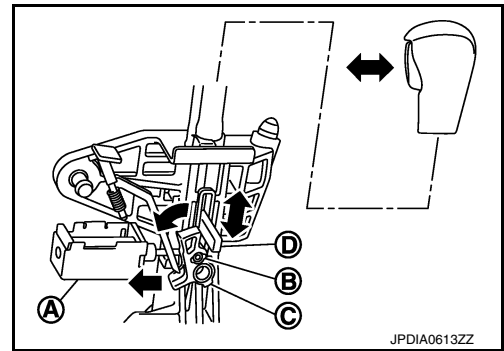

## “P” POSITION HOLD MECHANISM (IGNITION SWITCH LOCK)

The shift lock solenoid (A) is not energized when the ignition switch is in any position other than ON. In this condition, the shift mechanism is locked and “P” position is held. The operation cannot be performed from “P” position if the brake pedal is depressed with the ignition switch ON when the operation system of shift lock solenoid is malfunctioning. However, the lock lever (B) is forcibly rotated and the shift lock is released when the shift lock release button (C) is pressed from above. Then the selector operation from “P” position can be performed.

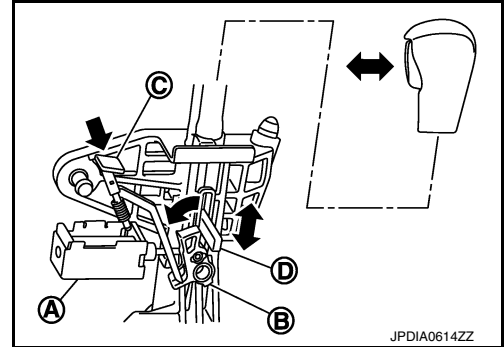

D : Detent rod

### CAUTION:

Use the shift lock release button only when the selector lever cannot be operated even if the brake pedal is depressed with the ignition switch ON.

A  
B  
C  
TM  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# SYSTEM


< SYSTEM DESCRIPTION >

[CVT: RE0F10E]

## SYSTEM CVT CONTROL SYSTEM CVT CONTROL SYSTEM : System Description

INFOID:000000011149292

### SYSTEM DIAGRAM

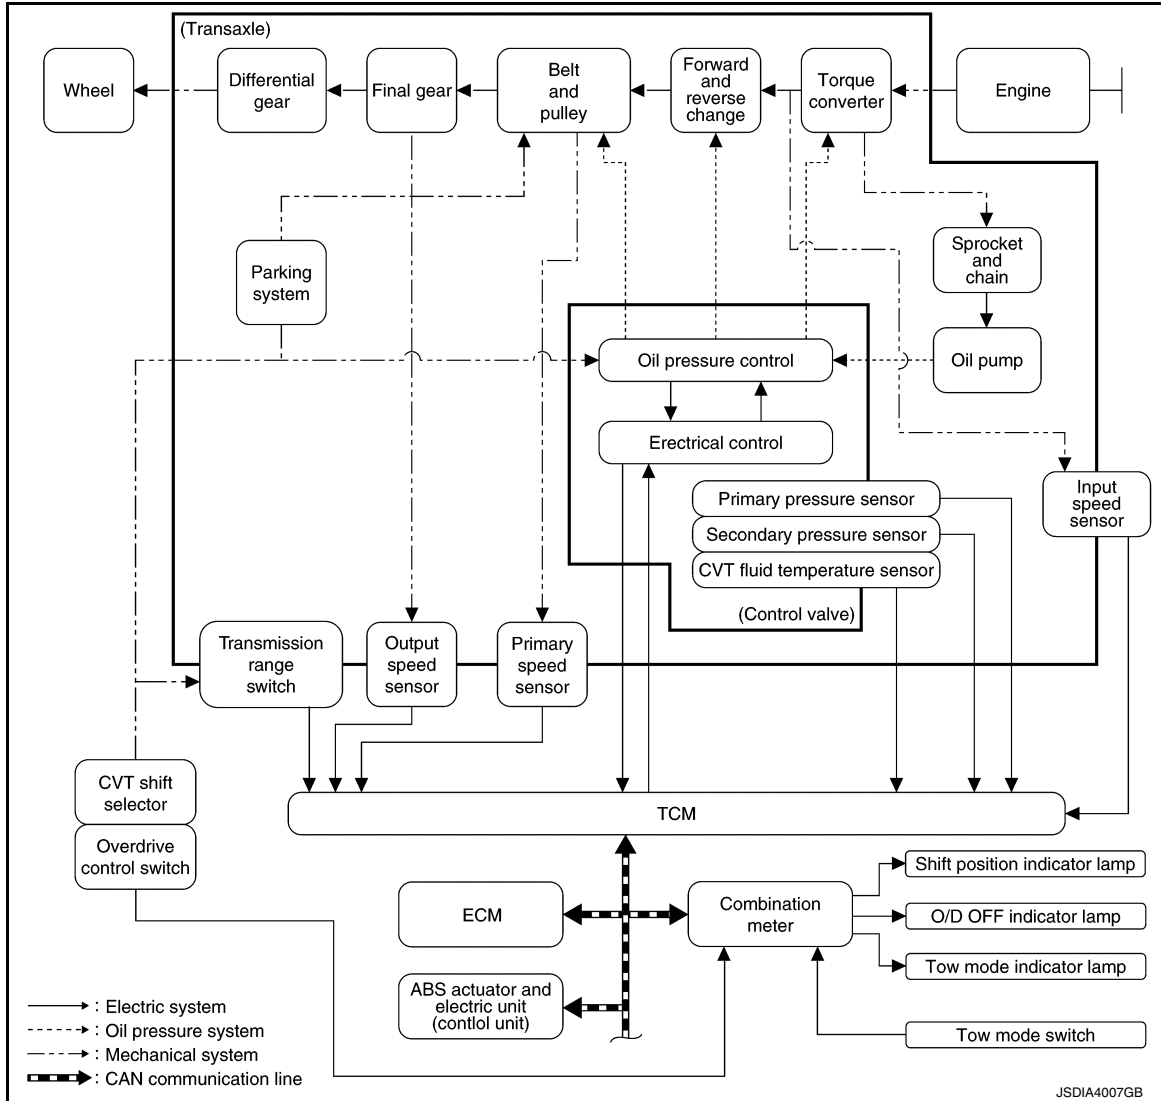

### MAIN CONTROL CONTENTS OF TCM

Controls	Reference
Line pressure control	<a href="#">TM-39, "LINE PRESSURE CONTROL : System Description"</a>
Shift control	<a href="#">TM-40, "SHIFT CONTROL : System Description"</a>
Select control	<a href="#">TM-42, "SELECT CONTROL : System Description"</a>
Lock-up control	<a href="#">TM-43, "LOCK-UP CONTROL : System Description"</a>
Fail-safe	<a href="#">TM-58, "Fail-safe"</a>
Self-diagnosis function	<a href="#">TM-47, "CONSULT Function"</a>
Communication function with CONSULT	<a href="#">TM-47, "CONSULT Function"</a>

### LIST OF CONTROL ITEMS AND INPUT/OUTPUT

# SYSTEM

< SYSTEM DESCRIPTION >

[CVT: RE0F10E]

Control Item		Shift control	Line pressure control	Select control	Lock-up control	Fail-safe function*
Input	Engine torque signal (CAN communication)	×	×	×	×	×
	Engine speed signal (CAN communication)	×	×	×	×	×
	Accelerator pedal position signal (CAN communication)	×	×	×	×	
	Closed throttle position signal (CAN communication)	×	×		×	
	Stop lamp switch signal (CAN communication)	×	×	×	×	
	Primary pressure sensor					×
	Secondary pressure sensor	×	×			×
	CVT fluid temperature sensor	×	×	×	×	×
	Primary speed sensor	×	×	×	×	×
	Output speed sensor	×	×		×	×
	Input speed sensor	×	×	×	×	×
	Transmission range switch	×	×	×	×	×
	Overdrive control switch (CAN communication)	×	×		×	
Output	Line pressure solenoid valve	×	×	×		×
	Primary pressure solenoid valve	×	×			×
	Torque converter clutch solenoid valve				×	×
	Secondary pressure solenoid valve	×	×			×
	Select solenoid valve	×		×		×
	Shift position indicator (CAN communication)			×		
	Overdrive control switch (CAN communication)	×				

\*: If these input/output signals show errors, TCM activates the fail-safe function.

## CVT CONTROL SYSTEM : Fail-safe

INFOID:0000000011149293

TCM has a fail-safe mode. The mode functions so that operation can be continued even if the signal circuit of the main electronically controlled input/output parts is damaged.

If the vehicle shows following behaviors including “poor acceleration”, a malfunction of the applicable system is detected by TCM and the vehicle may be in a fail-safe mode. At this time, check the DTC code and perform inspection and repair according to the malfunction diagnosis procedures.

### Fail-safe function

DTC	Vehicle behavior	Conditions of vehicle
P062F	<ul style="list-style-type: none"> <li>Not changed from normal driving</li> </ul>	—
P0705	<ul style="list-style-type: none"> <li>Shift position indicator on combination meter is not displayed</li> <li>Selector shock is large</li> <li>Start is slow</li> <li>Acceleration is slow</li> <li>Lock-up is not performed</li> </ul>	—

# SYSTEM

< SYSTEM DESCRIPTION >

[CVT: RE0F10E]

DTC	Vehicle behavior	Conditions of vehicle
P0706	<ul style="list-style-type: none"> <li>• Shift position indicator on combination meter is not displayed</li> <li>• Selector shock is large</li> <li>• Start is slow</li> <li>• Acceleration is slow</li> <li>• Lock-up is not performed</li> </ul>	—
P0711	<ul style="list-style-type: none"> <li>• Start is slow</li> <li>• Acceleration is slow</li> </ul>	Engine coolant temperature when engine start: Temp. $\geq 10^{\circ}\text{C}$ (50°F)
	<ul style="list-style-type: none"> <li>• Selector shock is large</li> <li>• Start is slow</li> <li>• Acceleration is slow</li> </ul>	Engine coolant temperature when engine start: $-35^{\circ}\text{C}$ (-31°F) $\leq$ Temp. $< 10^{\circ}\text{C}$ (50°F)
	<ul style="list-style-type: none"> <li>• Selector shock is large</li> <li>• Start is slow</li> <li>• Acceleration is slow</li> </ul>	Engine coolant temperature when engine start: Temp. $< -35^{\circ}\text{C}$ (-31°F)
P0712	<ul style="list-style-type: none"> <li>• Start is slow</li> <li>• Acceleration is slow</li> </ul>	Engine coolant temperature when engine start: Temp. $\geq 10^{\circ}\text{C}$ (50°F)
	<ul style="list-style-type: none"> <li>• Selector shock is large</li> <li>• Start is slow</li> <li>• Acceleration is slow</li> </ul>	Engine coolant temperature when engine start: $-35^{\circ}\text{C}$ (-31°F) $\leq$ Temp. $< 10^{\circ}\text{C}$ (50°F)
	<ul style="list-style-type: none"> <li>• Selector shock is large</li> <li>• Start is slow</li> <li>• Acceleration is slow</li> </ul>	Engine coolant temperature when engine start: Temp. $< -35^{\circ}\text{C}$ (-31°F)
P0713	<ul style="list-style-type: none"> <li>• Start is slow</li> <li>• Acceleration is slow</li> </ul>	Engine coolant temperature when engine start: Temp. $\geq 10^{\circ}\text{C}$ (50°F)
	<ul style="list-style-type: none"> <li>• Selector shock is large</li> <li>• Start is slow</li> <li>• Acceleration is slow</li> </ul>	Engine coolant temperature when engine start: $-35^{\circ}\text{C}$ (-31°F) $\leq$ Temp. $< 10^{\circ}\text{C}$ (50°F)
	<ul style="list-style-type: none"> <li>• Selector shock is large</li> <li>• Start is slow</li> <li>• Acceleration is slow</li> </ul>	Engine coolant temperature when engine start: Temp. $< -35^{\circ}\text{C}$ (-31°F)
P0715	<ul style="list-style-type: none"> <li>• Start is slow</li> <li>• Acceleration is slow</li> <li>• Lock-up is not performed</li> </ul>	—
P0717	<ul style="list-style-type: none"> <li>• Start is slow</li> <li>• Acceleration is slow</li> <li>• Lock-up is not performed</li> </ul>	—
P0740	<ul style="list-style-type: none"> <li>• Start is slow</li> <li>• Acceleration is slow</li> <li>• Lock-up is not performed</li> </ul>	—
P0743	<ul style="list-style-type: none"> <li>• Start is slow</li> <li>• Acceleration is slow</li> <li>• Lock-up is not performed</li> </ul>	—
P0744	<ul style="list-style-type: none"> <li>• Start is slow</li> <li>• Acceleration is slow</li> <li>• Lock-up is not performed</li> </ul>	—
P0746	<ul style="list-style-type: none"> <li>• Selector shock is large</li> <li>• Start is slow</li> <li>• Acceleration is slow</li> <li>• Lock-up is not performed</li> </ul>	—

# SYSTEM

< SYSTEM DESCRIPTION >

[CVT: RE0F10E]

DTC	Vehicle behavior	Conditions of vehicle	
P0776	<ul style="list-style-type: none"> <li>• Selector shock is large</li> <li>• Start is slow</li> <li>• Acceleration is slow</li> <li>• Lock-up is not performed</li> <li>• Vehicle speed is not increased</li> </ul>	When a malfunction occurs on the low oil pressure side	A
	<ul style="list-style-type: none"> <li>• Selector shock is large</li> <li>• Start is slow</li> <li>• Acceleration is slow</li> <li>• Lock-up is not performed</li> </ul>	When a malfunction occurs on the high oil pressure side	B
P0778	<ul style="list-style-type: none"> <li>• Selector shock is large</li> <li>• Start is slow</li> <li>• Acceleration is slow</li> <li>• Lock-up is not performed</li> </ul>	—	C
P0779	<ul style="list-style-type: none"> <li>• Selector shock is large</li> <li>• Start is slow</li> <li>• Acceleration is slow</li> <li>• Lock-up is not performed</li> </ul>		TM
P0841	<ul style="list-style-type: none"> <li>• Not changed from normal driving</li> </ul>		E
P0847	<ul style="list-style-type: none"> <li>• Not changed from normal driving</li> </ul>	—	F
P0848	<ul style="list-style-type: none"> <li>• Not changed from normal driving</li> </ul>	—	G
P084C	<ul style="list-style-type: none"> <li>• Not changed from normal driving</li> </ul>		H
P084D	<ul style="list-style-type: none"> <li>• Not changed from normal driving</li> </ul>		I
P0863	<ul style="list-style-type: none"> <li>• Selector shock is large</li> <li>• Start is slow</li> <li>• Acceleration is slow</li> <li>• Lock-up is not performed</li> </ul>	—	J
P0890	<ul style="list-style-type: none"> <li>• Selector shock is large</li> <li>• Start is slow</li> <li>• Acceleration is slow</li> <li>• Lock-up is not performed</li> <li>• Vehicle speed is not increased</li> </ul>		K
P0962	<ul style="list-style-type: none"> <li>• Selector shock is large</li> <li>• Start is slow</li> <li>• Acceleration is slow</li> <li>• Lock-up is not performed</li> </ul>	—	L
P0963	<ul style="list-style-type: none"> <li>• Selector shock is large</li> <li>• Start is slow</li> <li>• Acceleration is slow</li> <li>• Lock-up is not performed</li> </ul>	—	M
P0965	<ul style="list-style-type: none"> <li>• Selector shock is large</li> <li>• Start is slow</li> <li>• Acceleration is slow</li> <li>• Lock-up is not performed</li> </ul>	When a malfunction occurs on the low oil pressure side	N
	<ul style="list-style-type: none"> <li>• Selector shock is large</li> <li>• Lock-up is not performed</li> </ul>	When a malfunction occurs on the high oil pressure side	O
P0966	<ul style="list-style-type: none"> <li>• Selector shock is large</li> <li>• Start is slow</li> <li>• Acceleration is slow</li> <li>• Lock-up is not performed</li> </ul>	—	P
P0967	<ul style="list-style-type: none"> <li>• Selector shock is large</li> <li>• Start is slow</li> <li>• Acceleration is slow</li> <li>• Lock-up is not performed</li> </ul>	—	
P2765	<ul style="list-style-type: none"> <li>• Start is slow</li> <li>• Acceleration is slow</li> <li>• Lock-up is not performed</li> </ul>	—	

# SYSTEM

< SYSTEM DESCRIPTION >

[CVT: RE0F10E]

DTC	Vehicle behavior	Conditions of vehicle
P2813	<ul style="list-style-type: none"> <li>• Selector shock is large</li> <li>• Start is slow</li> <li>• Acceleration is slow</li> <li>• Vehicle speed is not increased</li> </ul>	When a malfunction occurs on the low oil pressure side
	<ul style="list-style-type: none"> <li>• Selector shock is large</li> </ul>	When a malfunction occurs on the high oil pressure side
P2814	<ul style="list-style-type: none"> <li>• Selector shock is large</li> </ul>	—
P2815	<ul style="list-style-type: none"> <li>• Selector shock is large</li> </ul>	—
U0073	<ul style="list-style-type: none"> <li>• Selector shock is large</li> <li>• Start is slow</li> <li>• Acceleration is slow</li> <li>• Lock-up is not performed</li> </ul>	—
	<ul style="list-style-type: none"> <li>• Selector shock is large</li> <li>• Start is slow</li> <li>• Acceleration is slow</li> <li>• Lock-up is not performed</li> </ul>	—
U0102	<ul style="list-style-type: none"> <li>• Not changed from normal driving</li> </ul>	—
U0140	<ul style="list-style-type: none"> <li>• Not changed from normal driving</li> </ul>	—
U0141	<ul style="list-style-type: none"> <li>• Not changed from normal driving</li> </ul>	—
U0155	<ul style="list-style-type: none"> <li>• Not changed from normal driving</li> </ul>	—
U0300	<ul style="list-style-type: none"> <li>• Selector shock is large</li> <li>• Start is slow</li> <li>• Acceleration is slow</li> <li>• Lock-up is not performed</li> </ul>	—
	<ul style="list-style-type: none"> <li>• Selector shock is large</li> <li>• Start is slow</li> <li>• Acceleration is slow</li> <li>• Lock-up is not performed</li> </ul>	—
U1000	<ul style="list-style-type: none"> <li>• Not changed from normal driving</li> </ul>	—
U1117	<ul style="list-style-type: none"> <li>• Not changed from normal driving</li> </ul>	—

## CVT CONTROL SYSTEM : Protection Control

INFOID:000000011149294

The TCM becomes the protection control status temporarily to protect the safety when the safety of TCM and transmission is lost. It automatically returns to the normal status if the safety is secured.  
The TCM has the following protection control.

### CONTROL FOR WHEEL SPIN

Control	When a wheel spin is detected, the engine output and gear ratio are limited and the line pressure is increased. Limits engine output when a wheel spin occurs in any of right and left drive wheels.
Vehicle behavior in control	If the accelerator is kept depressing during wheel spin, the engine revolution and vehicle speed are limited to a certain degree.
Normal return condition	Wheel spin convergence returns the control to the normal control.

### TORQUE IS REDUCED WHEN DRIVING WITH THE REVERSE GEAR

Control	Engine output is controlled according to a vehicle speed while reversing the vehicle.
Vehicle behavior in control	Power performance may be lowered while reversing the vehicle.
Normal return condition	Torque returns to normal by positioning the selector lever in a range other than "R" position.

### CONTROL WHEN FLUID TEMPERATURE IS HIGH

Control	When the CVT fluid temperature is high, the gear shift permission maximum revolution and the maximum torque are reduced than usual to prevent increase of the oil temperature.
---------	--

# SYSTEM

< SYSTEM DESCRIPTION >

[CVT: RE0F10E]

Vehicle behavior in control	Power performance may be lowered, compared to normal control.
Normal return condition	The control returns to the normal control when CVT fluid temperature is lowered.

## REVERSE PROHIBIT CONTROL


Control	The reverse brake is controlled to avoid becoming engaged when the selector lever is set in "R" position while driving in forward direction at more than the specified speed.
Vehicle behavior in control	If the selector lever is put at "R" position when driving with the forward gear, the gear becomes neutral, not reverse.
Normal return condition	The control returns to normal control when the vehicle is driven at low speeds. (The reverse brake becomes engaged.)

## LINE PRESSURE CONTROL

### LINE PRESSURE CONTROL : System Description

INFOID:000000011149295

### SYSTEM DIAGRAM

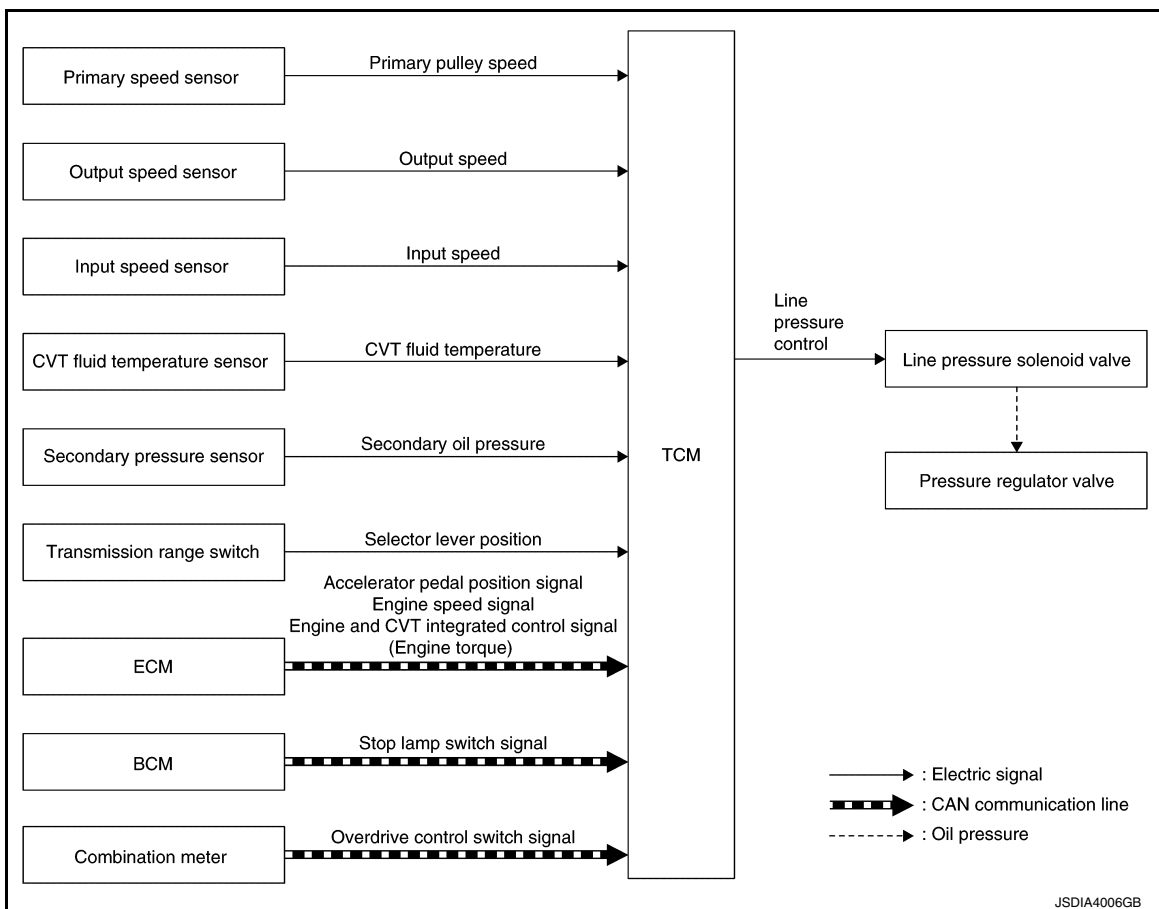

### DESCRIPTION

Highly accurate line pressure control (secondary pressure control) reduces friction for improvement of fuel economy.

#### Normal Oil Pressure Control

Appropriate line pressure and secondary pressure suitable for driving condition are determined based on the accelerator pedal position, engine speed, primary pulley (input) speed, secondary pulley (output) speed, vehicle speed, input torque, stop lamp switch signal, transmission range switch signal, lock-up signal, power voltage, target shift ratio, oil temperature, oil pressure, and overdrive control switch signal.

#### Secondary Pressure Feedback Control

# SYSTEM

< SYSTEM DESCRIPTION >


[CVT: RE0F10E]

In normal oil pressure control and oil pressure control in shifting, highly accurate secondary pressure is determined by detecting the secondary pressure using an oil pressure sensor and by feedback control.  
**SHIFT CONTROL**

## SHIFT CONTROL : System Description

INFOID:000000011149296

### SYSTEM DIAGRAM

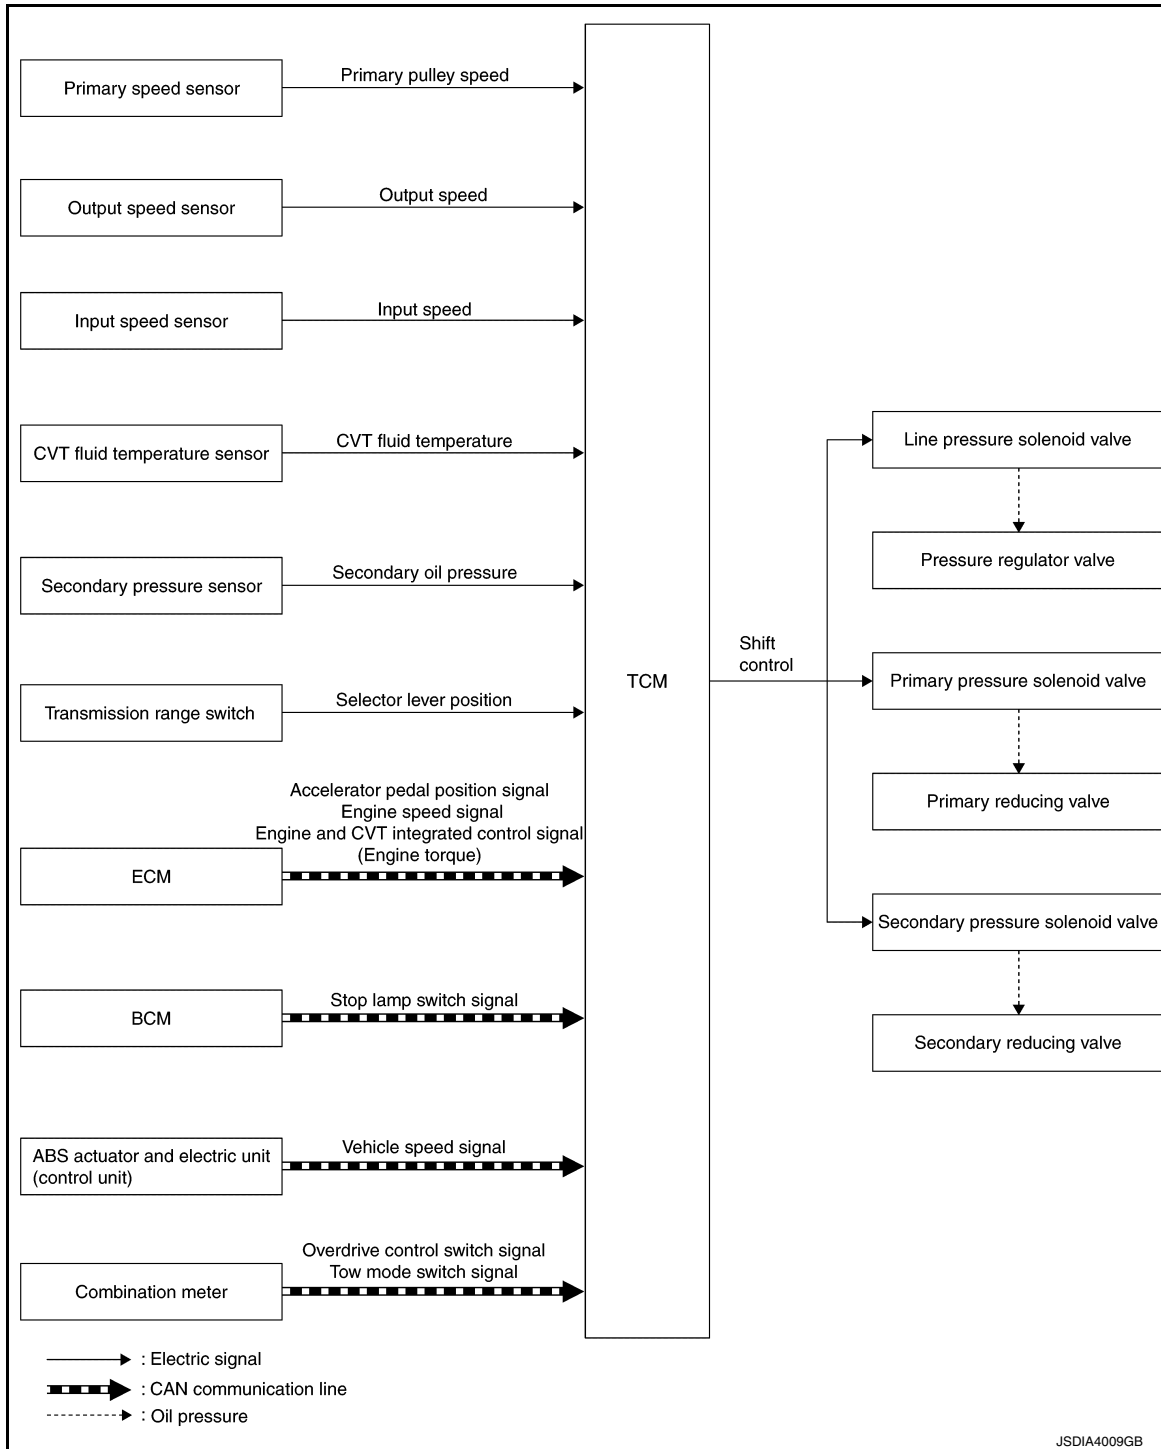

### DESCRIPTION

To select the gear ratio that can give the driving force to meet driver's intent or vehicle situation, the vehicle driving condition such as vehicle speed or accelerator pedal position is detected and the most appropriate gear ratio is selected and the shifting method before reaching the speed is determined. The information is out-



# SYSTEM

## < SYSTEM DESCRIPTION >


[CVT: RE0F10E]

put to the primary pressure solenoid valve and secondary pressure solenoid valve to control the line pressure input/output to the pulley, to determine the pulley (movable pulley) position and to control the gear position.

### Shift Position Function


- D Position (Normal)

Gear shifting is performed in all shifting ranges from the lowest to the highest gear ratio.

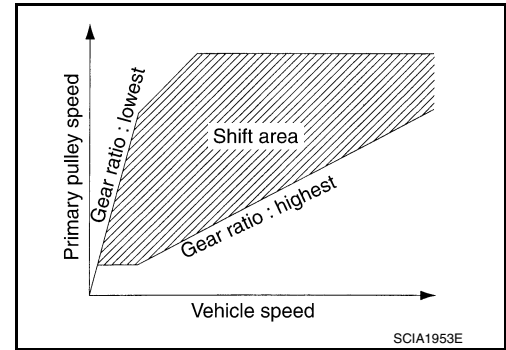


- D Position (OD OFF)

The gear ratio is generally high by limiting the shifting range on the high side, and this always generates a large driving power.

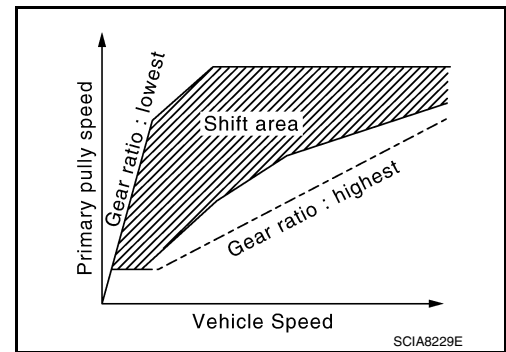

- L Position

By limiting the shifting range only to the lowest of the gear ratio, a large driving force and engine brake are obtained.

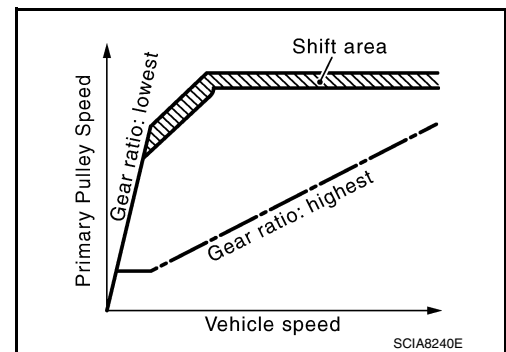


### Hill Climbing And Descending Control

If a downhill is detected with the accelerator pedal is released, the system performs downshift to increase the engine brake force so that vehicle may not be accelerated more than necessary. If a climbing hill is detected, the system improves the acceleration performance in re-acceleration by limiting the gear shift range on the high side.

#### NOTE:

For engine brake control on a downhill, the control can be stopped with CONSULT.

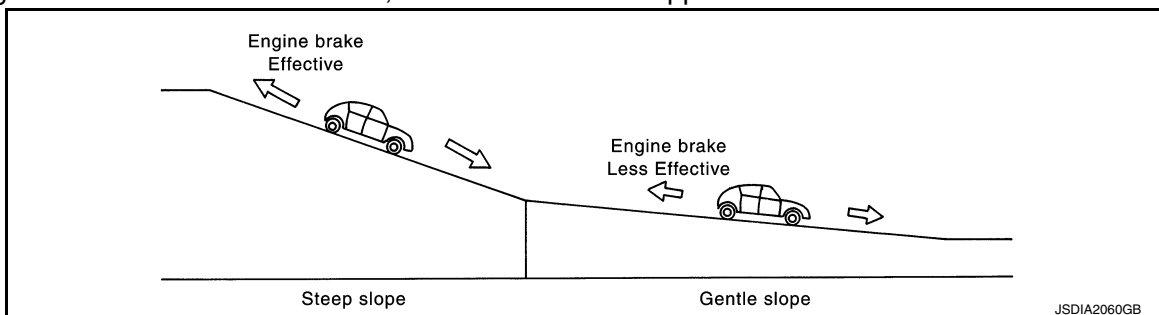

# SYSTEM

## < SYSTEM DESCRIPTION >

[CVT: RE0F10E]

### Control In Acceleration

From change of the vehicle speed or accelerator pedal position, the acceleration request level of the driver or driving scene is evaluated. In start or acceleration during driving, the gear shift characteristics with linearity of revolution increase and vehicle speed increase are gained to improve the acceleration feel.

### Tow Mode

- In tow mode, sluggish acceleration and insufficient engine brake output resulting from towing are assisted and improved by CVT gear shifting.
- When all of the following conditions are satisfied, CVT goes into tow mode.
  - Tow mode switch is ON
  - When CVT judges a towing condition from vehicle behavior.

### Tow Mode Function


Situation		Operation
Road condition	Brake pedal operation	
Flat road	Depressed	To assist deceleration resulting from brake operation, the tow mode function increases engine revolution by shifting down and makes the engine brake effective.
Uphill	—	In tow mode, the shift range on the HIGH side is limited more than that of normal mode and uphill driving control is improved.
Downhill	Depressed	To assist deceleration resulting from brake operation, the tow mode function increases engine revolution by shifting down more than the time when driving on flat roads and makes the engine brake effective.

## SELECT CONTROL

### SELECT CONTROL : System Description

INFOID:000000011149297

### SYSTEM DIAGRAM

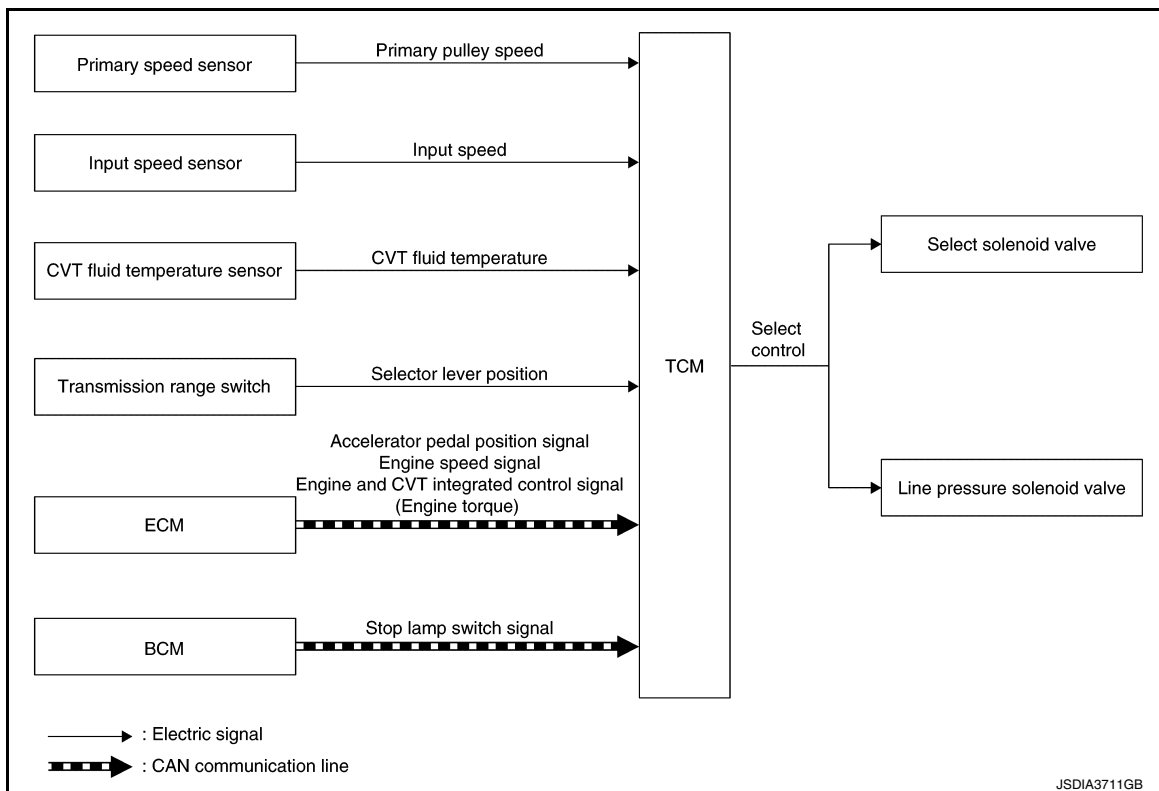

### DESCRIPTION


Based on accelerator pedal angle, engine speed, primary pulley speed, and the input speed, the optimum operating pressure is set to reduce impact of a selector lever operation while shifting from "N" ("P") to "D" ("R") position.

### LOCK-UP CONTROL

LOCK-UP CONTROL : System Description

INFOID:000000011149298

SYSTEM DIAGRAM

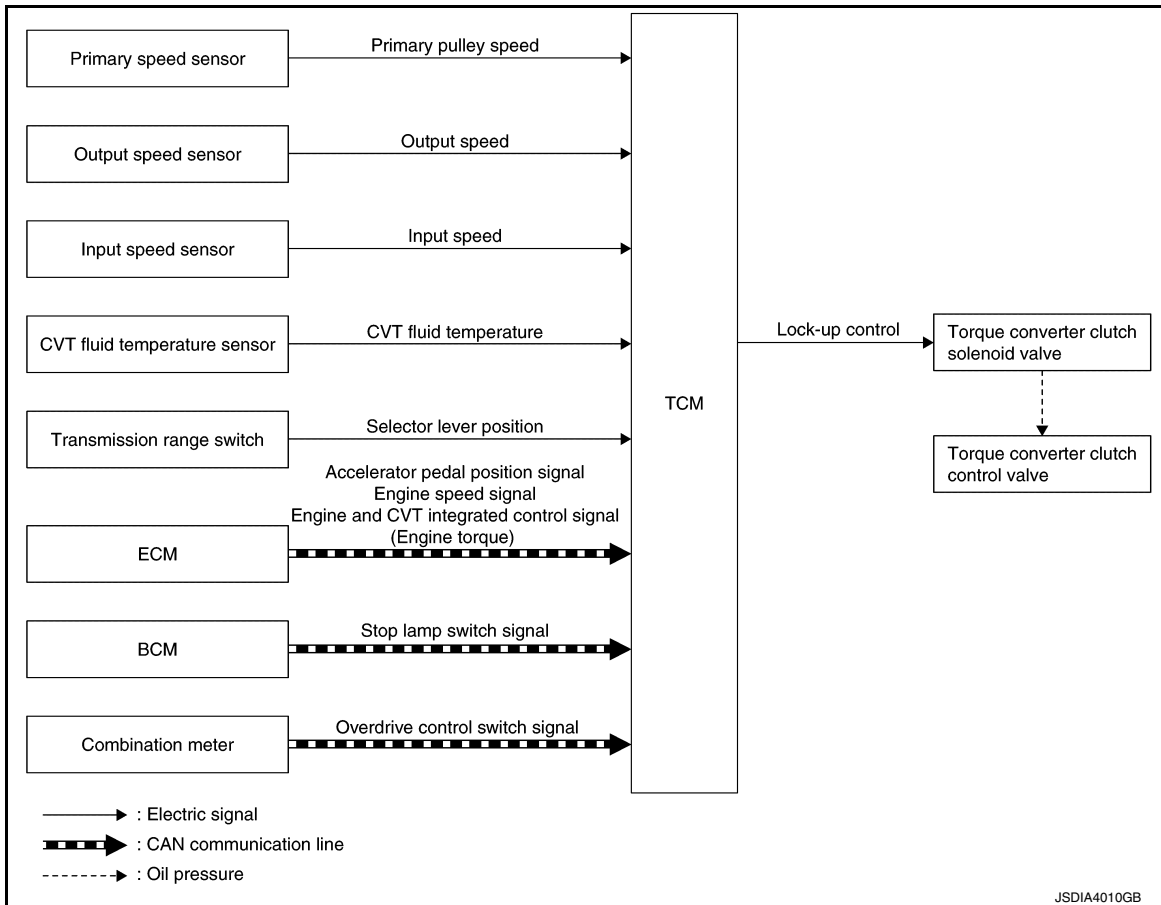

DESCRIPTION

- Controls for improvement of the transmission efficiency by engaging the torque converter clutch in the torque converter and eliminating slip of the converter. Achieves comfortable driving with slip control of the torque converter clutch.
- The oil pressure feed circuit for the torque converter clutch piston chamber is connected to the torque converter clutch control valve. The torque converter clutch control valve is switched by the torque converter clutch solenoid valve with the signal from TCM. This controls the oil pressure circuit, which is supplied to the torque converter clutch piston chamber, to the release side or engagement side.
- If the CVT fluid temperature is low or the vehicle is in fail-safe mode due to malfunction, lock-up control is prohibited.

Lock-up engagement

In lock-up engagement, the torque converter clutch solenoid valve makes the torque converter clutch control valve locked up to generate the lock-up apply pressure. This pushes the torque converter clutch piston for engagement.

Lock-up release condition

In lock-up release, the torque converter clutch solenoid valve makes the torque converter clutch control valve non-locked up to drain the lock-up apply pressure. This does not engage the torque converter clutch piston.

A  
B  
C  
TM  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# ON BOARD DIAGNOSTIC (OBD) SYSTEM

< SYSTEM DESCRIPTION >

[CVT: RE0F10E]

---

## ON BOARD DIAGNOSTIC (OBD) SYSTEM

### Description

INFOID:000000011149299

This is an on board diagnosis system which records diagnosis information related to the exhaust gases. It detects malfunctions related to sensors and actuators. The malfunctions are indicated by means of the malfunction indicator lamp (MIL) and are stored as DTC in the ECU memory. The diagnosis information can be checked using a diagnosis tool (GST: Generic Scan Tool).

### Function of OBD

INFOID:000000011149300

The GST is connected to the diagnosis connector on the vehicle and communicates with the on-board control units to perform diagnosis. The diagnosis connector is the same as for CONSULT. Refer to [GI-55. "Description"](#).

## DIAGNOSIS SYSTEM (TCM)

### DIAGNOSIS DESCRIPTION

DIAGNOSIS DESCRIPTION : 1 Trip Detection Diagnosis and 2 Trip Detection Diagnosis

INFOID:0000000011149301

**NOTE:**

"Start the engine and turn OFF the ignition switch after warm-up." This is defined as 1 trip.

#### 1 TRIP DETECTION DIAGNOSIS

When initial malfunction is detected, TCM memorizes DTC. In these diagnoses, some illuminate MIL and some do not. Refer to [TM-63, "DTC Index"](#).

#### 2 TRIP DETECTION DIAGNOSIS

When initial malfunction is detected, TCM memorizes DTC of the 1st trip. MIL does not light at this stage. <1 trip>

If the same malfunction is detected again in next driving, TCM memorizes DTC. When DTC is memorized, MIL lights. <2 trip>

"Trip" of the "2 trip detection diagnosis" indicates the driving mode that executes self-diagnosis during driving.

×: Check possible    —: Check not possible

Item	DTC at the 1st trip		DTC		MIL	
	Display at the 1st trip	Display at the 2nd trip	Display at the 1st trip	Display at the 2nd trip	Illumination at the 1st trip	Illumination at the 2nd trip
1 trip detection diagnosis (Refer to <a href="#">TM-63, "DTC Index"</a> )	—	—	×	—	×	—
2 trip detection diagnosis (Refer to <a href="#">TM-63, "DTC Index"</a> )	×	—	—	×	—	×

DIAGNOSIS DESCRIPTION : DTC and DTC of 1st Trip

INFOID:0000000011149302

#### 2 TRIP DETECTION DIAGNOSIS THAT ILLUMINATES MIL

- The DTC number of the 1st trip is the same as the DTC number.
- When a malfunction is detected at the 1st trip, TCM memorizes DTC of the 1st trip. MIL does not light at this stage. If the same malfunction is not detected at the 2nd trip (conforming to necessary driving conditions), DTC at the 1st trip is erased from TCM. If the same malfunction is detected at the 2nd trip, TCM memorizes DTC and MIL lights at the same time.
- The DTC of the 1st trip is specified in Service \$01 of SAE J1979/ISO 15031-5. Since detection of DTC at the 1st trip does not illuminate MIL, warning for a problem is not given to a driver.
- For procedure to delete DTC and 1st trip DTC from TCM, refer to [TM-47, "CONSULT Function"](#).
- If DTC of the 1st trip is detected, it is necessary to check the cause according to the "Diagnosis flow". Refer to [TM-81, "Work Flow"](#).

DIAGNOSIS DESCRIPTION : Malfunction Indicator Lamp (MIL)

INFOID:0000000011149303

- TCM not only detects DTC, but also sends the MIL signal to ECM through CAN communication. ECM sends the MIL signal to the combination meter through CAN communication according to the signal, and illuminates MIL.
- For malfunction indicator lamp (MIL) description, refer to [EC-33, "Malfunction Indicator Lamp \(MIL\)"](#).

DIAGNOSIS DESCRIPTION : Counter System

INFOID:0000000011149304

RELATION BETWEEN DTC AT 1ST TRIP/DTC/MIL AND DRIVING CONDITIONS (FOR 2 TRIP DETECTION DIAGNOSIS THAT ILLUMINATES MIL)

- When initial malfunction is detected, TCM memorizes DTC of the 1st trip. MIL does not light at this stage.
- If the same malfunction is detected at the 2nd trip, TCM memorizes DTC and MIL lights at the same time.
- Then, MIL goes after driving the vehicle for 3 trips under "Driving condition B" without malfunction.
- DTC is displayed until 40 trips of "Driving condition A" are satisfied without detecting the same malfunction. DTC is erased when 40 trips are satisfied.

# DIAGNOSIS SYSTEM (TCM)

[CVT: RE0F10E]

## < SYSTEM DESCRIPTION >

- When the self-diagnosis result is acceptable at the 2nd trip (conforming to driving condition B), DTC of the 1st trip is erased.

## COUNTER SYSTEM LIST

Item	Driving condition	Trip
MIL (OFF)	B	3
DTC (clear)	A	40
DTC at 1st trip (clear)	B	1

## DRIVING CONDITION

### Driving condition A

Driving condition A is the driving condition that provides warm-up.

In specific, count-up is performed when all of the following conditions are satisfied.

- Engine speed is 400 rpm or more.
- After start of the engine, the water temperature increased by 20°C (36°F) or more.
- Water temperature was 70°C (158°F) or more.
- The ignition switch was changed from ON to OFF.

### NOTE:

- If the same malfunction is detected regardless of the driving condition, reset the A counter.
- When the above is satisfied without detecting the same malfunction, count up the A counter.
- When MIL goes off due to the malfunction and the A counter reaches 40, the DTC is erased.

### Driving condition B

Driving condition B is the driving condition that performs all diagnoses once.

In specific, count-up is performed when all of the following conditions are satisfied.

- Engine speed is 400 rpm or more.
- Water temperature was 70°C (158°F) or more.
- In closed loop control, vehicle speed of 70 – 120 km/h (43 – 75 MPH) continued for 60 seconds or more.
- In closed loop control, vehicle speed of 30 – 60 km/h (19 – 37 MPH) continued for 10 seconds or more.
- In closed loop control, vehicle speed of 4 km/h (2 MPH) or less and idle determination ON continued for 12 seconds or more.
- After start of the engine, 22 minutes or more have passed.
- The condition that the vehicle speed is 10 km/h (6 MPH) or more continued for 10 seconds or more in total.
- The ignition switch was changed from ON to OFF.

### NOTE:


- If the same malfunction is detected regardless of the driving condition, reset the B counter.
- When the above is satisfied without detecting the same malfunction, count up the B counter.
- When the B counter reaches 3 without malfunction, MIL goes off.
- When the B counter is counted once without detecting the same malfunction after TCM memorizes DTC of the 1st trip, DTC of the 1st trip is erased.

# DIAGNOSIS SYSTEM (TCM)

< SYSTEM DESCRIPTION >

[CVT: RE0F10E]

## TIME CHART

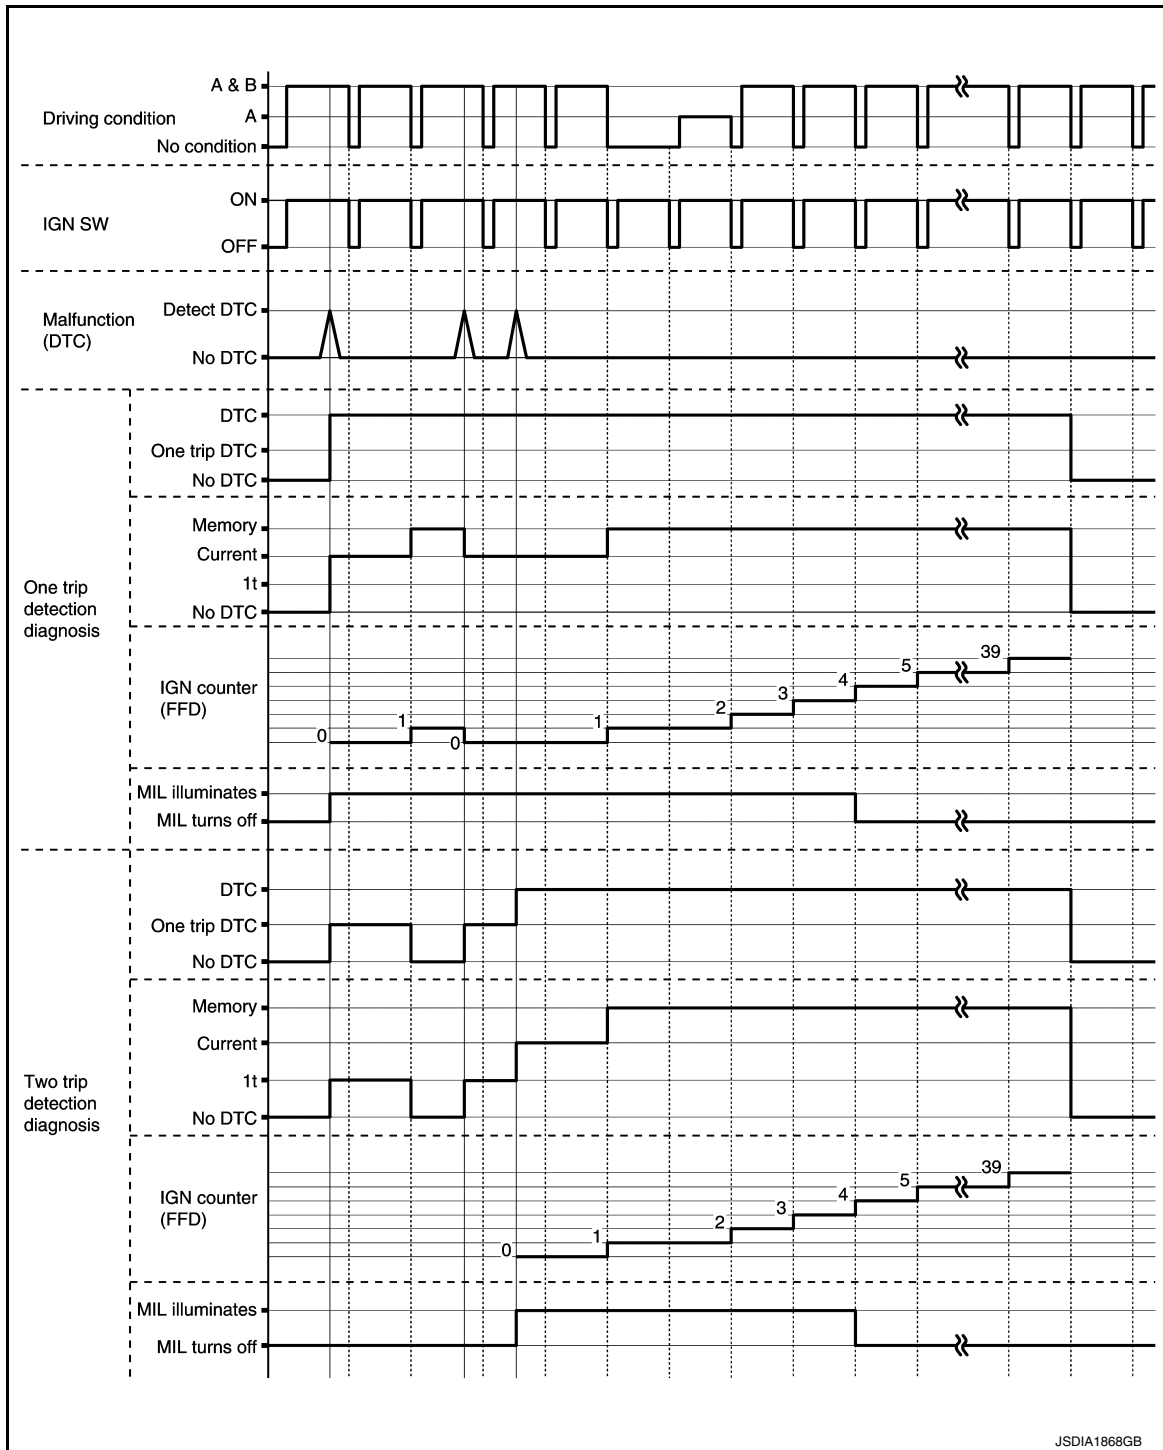

### CONSULT Function

INFOID:000000011149305

#### CAUTION:

After disconnecting the CONSULT vehicle interface (VI) from the data link connector, the ignition must be cycled OFF → ON (for at least 5 seconds) → OFF. If this step is not performed, the BCM may not go to "sleep mode", potentially causing a discharged battery and a no-start condition.

### APPLICABLE ITEM

# DIAGNOSIS SYSTEM (TCM)

< SYSTEM DESCRIPTION >

[CVT: RE0F10E]

Conditions	Function
Work Support	The settings for ECU functions can be changed.
Self Diagnostic Results	The ECU self diagnostic results are displayed.
Data Monitor	The ECU input/output data is displayed in real time.
CAN Diagnosis Support Monitor	The result of transmit/receive diagnosis of CAN communication is displayed.
ECU Identification	The ECU part number is displayed.
CALIB DATA	The calibration data status of TCM can be checked.

## SELF DIAGNOSTIC RESULTS

Refer to [TM-63, "DTC Index"](#).

DTC at 1st trip and method to read DTC

- DTC (P0705, P0711, P0720, etc.) is specified by SAE J2012/ISO 15031-6.
- DTC and DTC at 1st trip are displayed on "Self Diagnostic results" of CONSULT.  
When DTC is currently detected, "CRNT" is displayed. If "PAST" is displayed, it shows a malfunction occurred in the past. The trip number of drive without malfunction of concerned DTC can be confirmed with "IGN counter" inside "FFD".
- When the DTC at the 1st trip is detected, "1t" is displayed.

DTC deletion method

### NOTE:

If the ignition switch is left ON after repair, turn OFF the ignition switch and wait for 10 seconds or more. Then, turn the ignition ON again. (Engine stop)

1. Touch "TRANSMISSION" of CONSULT.
2. Touch "Self Diagnostic Result".
3. Touch "Erase". (DTC memorized in TCM is erased.)

IGN counter

The ignition counter is displayed in "FFD" and the number of times of satisfied "Driving condition A" is displayed after normal recovery of DTC. Refer to [TM-45, "DIAGNOSIS DESCRIPTION : Counter System"](#).

- If malfunction (DTC) is currently detected, "0" is displayed.
- After normal recovery, every time "Driving condition A" is satisfied, the display value increases from 1 → 2 → 3...38 → 39.
- When MIL turns OFF due to the malfunction and the counter reaches 40, the DTC is erased.

### NOTE:

The counter display of "40" cannot be checked.

## DATA MONITOR

### NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

Monitored item	(Unit)	Remarks
VSP SENSOR	(km/h or mph)	Displays the vehicle speed calculated from the CVT output shaft speed.
ESTM VSP SIG	(km/h or mph)	<ul style="list-style-type: none"> <li>• Displays the vehicle speed signal (ABS) received through CAN communication.</li> <li>• Models with ABS are displayed.</li> </ul>
INPUT SPEED SENSOR	(rpm)	Displays the input speed calculated from the pulse signal of the input speed sensor.
PRI SPEED SEN	(rpm)	Displays the primary pulley speed calculated from the pulse signal of the primary speed sensor.
SEC REV SENSOR	(rpm)	Displays the secondary pulley speed calculated from the pulse signal of the output speed sensor.
ENG SPEED SIG	(rpm)	Displays the engine speed received through CAN communication.
SEC PRESSURE SEN	(V)	Displays the signal voltage of the secondary pressure sensor.
PRI PRESSURE SEN	(V)	Displays the signal voltage of the primary pressure sensor.
ATF TEMP SEN	(V)	Displays the signal voltage of the CVT fluid temperature sensor.
G SENSOR*	(G)	Displays the signal voltage of the G sensor.



## DIAGNOSIS SYSTEM (TCM)

< SYSTEM DESCRIPTION >

[CVT: RE0F10E]

Monitored item	(Unit)	Remarks
VIGN SEN	(V)	Displays the battery voltage applied to TCM.
PVING VOLT	(V)	Displays the backup voltage of TCM.
VEHICLE SPEED	(km/h or mph)	Displays the vehicle speed recognized by TCM.
INPUT REV	(rpm)	Displays the input shaft speed of CVT recognized by TCM.
PRI SPEED	(rpm)	Displays the primary pulley speed recognized by TCM.
SEC SPEED	(rpm)	Displays the secondary pulley speed recognized by TCM.
ENG SPEED	(rpm)	Displays the engine speed recognized by TCM.
SLIP REV	(rpm)	Displays the speed difference between the input shaft speed of CVT and the engine speed.
PULLEY GEAR RATIO		Displays the pulley gear ratio calculated from primary pulley speed/secondary pulley speed.
G SPEED	(G)	Displays the acceleration and deceleration speed of the vehicle calculated from vehicle speed change.
ACCEL POSI SEN 1	(deg)	Displays the estimated throttle position received through CAN communication.
VENG TRQ	(Nm)	Display the engine torque recognized by TCM.
PRI TRQ	(Nm)	Display the input shaft torque of CVT.
TRQ RTO		Display the torque ratio of torque converter.
SEC PRESSURE	(MPa)	Displays the secondary pressure calculated from the signal voltage of the secondary pressure sensor.
PRI PRESSURE	(MPa)	Displays the primary pressure calculated from the signal voltage of the primary pressure sensor.
FLUID TEMP	(°C or °F)	Displays the CVT fluid temperature calculated from the signal voltage of the CVT fluid temperature sensor.
DSR REV	(rpm)	Displays the target primary pulley speed calculated from processing of gear shift control.
TGT PLY GR RATIO		Displays the target gear ratio of the pulley from processing of gear shift control.
LU PRS	(MPa)	Displays the target oil pressure of the torque converter clutch solenoid valve calculated from oil pressure processing of gear shift control.
LINE PRS	(MPa)	Displays the target oil pressure of the line pressure solenoid valve calculated from oil pressure processing of gear shift control.
TRGT PRI PRESSURE	(MPa)	Displays the target oil pressure of the primary pressure solenoid valve calculated from oil pressure processing of gear shift control.
TRGT SELECT PRESSURE	(MPa)	Displays the target oil pressure of the select solenoid valve calculated from oil pressure processing of gear shift control.
TRGT SEC PRESSURE	(MPa)	Displays the target oil pressure of the secondary pressure solenoid valve calculated from oil pressure processing of gear shift control.
ISOLT1	(A)	Displays the command current from TCM to the torque converter clutch solenoid valve.
ISOLT2	(A)	Displays the command current from TCM to the line pressure solenoid valve.
PRI SOLENOID	(A)	Displays the command current from TCM to the primary pressure solenoid valve.
SEC SOLENOID CURRENT	(A)	Displays the command current from TCM to the secondary pressure solenoid valve.
SELECT SOLENOID CURRENT	(A)	Displays the command current from TCM to the select solenoid valve.
SOLMON1	(A)	Monitors the command current from TCM to the torque converter clutch solenoid valve and displays the monitored value.
SOLMON2	(A)	Monitors the command current from TCM to the line pressure solenoid valve and displays the monitored value.
PRI SOL MON	(A)	Monitors the command current from TCM to the primary pressure solenoid valve and displays the monitored value.

A

B

C

TM

E

F

G

H

I

J

K

L

M

N

O

P

## DIAGNOSIS SYSTEM (TCM)

< SYSTEM DESCRIPTION >

[CVT: RE0F10E]

Monitored item	(Unit)	Remarks
SEC SOL MON CURRENT	(A)	Monitors the command current from TCM to the secondary pressure solenoid valve and displays the monitored value.
SELECT SOL MON CURRENT	(A)	Monitors the command current from TCM to the select solenoid valve and displays the monitored value.
D POSITION SW	(On/Off)	Displays the operation status of the transmission range switch (D position).
N POSITION SW	(On/Off)	Displays the operation status of the transmission range switch (N position).
R POSITION SW	(On/Off)	Displays the operation status of the transmission range switch (R position).
P POSITION SW	(On/Off)	Displays the operation status of the transmission range switch (P position).
L POSITION SW	(On/Off)	Displays the operation status of the transmission range switch (L position).
DS RANGE SW*	(On/Off)	Displays the operation status of the transmission range switch (Ds position).
BRAKESW	(On/Off)	Displays the reception status of the stop lamp switch signal received through CAN communication.
IDLE SW	(On/Off)	Displays the reception status of the closed throttle position signal received through CAN communication.
SPORT MODE SW	(On/Off)	Displays the reception status of the overdrive control switch signal received through CAN communication.
ECO MODE SW*	(On/Off)	Displays the reception status of the ECO mode switch signal received through CAN communication.
STRDWSW*	(On/Off)	Displays the operation status of the paddle shifter (down switch).
STRUPSW*	(On/Off)	Displays the operation status of the paddle shifter (up switch).
DOWNLVR*	(On/Off)	Displays the operation status of the selector lever (down switch).
UPLVR*	(On/Off)	Displays the operation status of the selector lever (up switch).
NONMMODE*	(On/Off)	Displays if the selector lever position is not at the manual shift gate.
MMODE*	(On/Off)	Displays if the selector lever position is at the manual shift gate.
TOW MODE SW	(On/Off)	Displays the reception status of the TOW mode switch signal received through CAN communication.
SHIFT IND SIGNAL		Displays the transaxle value of shift position signal transmitted via CAN communication.
CVT LAMP*	(On/Off)	Displays the transaxle status of the CVT warning lamp signal transmitted through CAN communication.
SPORT MODE IND	(On/Off)	Displays the transaxle status of the O/D OFF indicator lamp signal transmitted through CAN communication.
MANU MODE SIGNAL*	(On/Off)	Displays the transaxle status of the manual mode signal transmitted through CAN communication.
DS RANGE SIGNAL*	(On/Off)	Displays the shift position signal status from transmission range switch (Ds position).
ECO MODE SIGNAL*	(On/Off)	Displays the transaxle status of the ECO mode signal transmitted through CAN communication.
VDC ON	(On/Off)	Displays the reception status of the VDC operation signal received through CAN communication.
TCS ON	(On/Off)	Displays the reception status of the TCS operation signal received through CAN communication.
ABS FAIL SIGNAL	(On/Off)	Displays the reception status of the ABS malfunction signal received through CAN communication.
ABS ON	(On/Off)	Displays the reception status of the ABS operation signal received through CAN communication.
RANGE		Displays the gear position recognized by TCM.
M GEAR POS*		Display the target gear of manual mode
G SEN SLOPE*	(%)	Displays the gradient angle calculated from the G sensor signal voltage.
G SEN CALIBRATION*	(YET/DONE)	Displays the status of "G SENSOR CALIBRATION" in "Work Support".

# DIAGNOSIS SYSTEM (TCM)

< SYSTEM DESCRIPTION >

[CVT: RE0F10E]

Monitored item	(Unit)	Remarks
N IDLE STATUS*	(On/Off)	Displays idle neutral status.
ENGBRKLVL	(On/Off)	Displays the setting of "ENGINE BRAKE ADJ" in "Work Support".
DRIVE MODE STATS*		Displays the drive mode status recognized by TCM.
SNOW MODE*	(On/Off)	Displays whether it is the SNOW mode.
ECO MODE*	(On/Off)	Displays whether it is the ECO mode.
NORMAL MODE*	(On/Off)	Displays whether it is the NORMAL mode.
SPORT MODE*	(On/Off)	Displays whether it is the SPORT mode.
AIR BLDING STATE*	(INCOMP/ COMP)	Displays the status of "ELECTRIC O.P. AIR BLEEDING" in "Work Support".
ELECTRIC OP DUTY*	(%)	Displays the command signal value (duty) of the electric oil pump transmitted from TCM.
E-OP DUTY MON*	(%)	Monitors the status signal value (duty) transmitted from the electric oil pump and displays the monitored value.
ELECTRIC OP RELAY*	(On/Off)	Displays the command status from TCM to the electric oil pump relay.
E-OP RELAY MON*	(On/Off)	Monitors the command status from TCM to the oil pump relay and displays the monitored value.
CVT-B		<ul style="list-style-type: none"> <li>Displays CVT fluid temperature count.</li> <li>This monitor item does not use.</li> </ul>
CVT-A	(On/Off)	<ul style="list-style-type: none"> <li>Displays CVT fluid temperature count.</li> <li>This monitor item does not use.</li> </ul>

\*: Not applicable but displayed.

## WORK SUPPORT

Item name	Description
CONFORM CVTF DETERIORTN	Checks the degradation level of the CVT fluid under severe conditions.
ERASE MEMORY DATA	Performs "erasing of the calibration data" and "erasing of the learned value" at the same time.
G SENSOR CALIBRATION	Compensates the G sensor.
ERASE LEARNING VALUE	Erases learning value memorized by TCM.
ENGINE BRAKE ADJ.	Although there is no malfunction on the transaxle and the CVT system, if a customer make a complaint like "I do not feel comfortable with automatic operation of the engine brake on downhill", the engine brake may be cancelled with "engine brake adjustment".
ERASE CALIBRATION DATA	Erases calibration data memorized by TCM.
WRITE IP CHARA - REPLACEMENT AT/CVT	Writes IP characteristics when transaxle assembly is replaced.
READ IP CHARA - REPLACEMENT TCM	Reads IP characteristics when TCM is replaced.
WRITE IP CHARA - REPLACEMENT TCM	Writes IP characteristics when TCM is replaced.

### Engine brake adjustment

#### ENGINE BRAKE LEVEL

ON : Turn ON the engine brake control.

OFF : Turn OFF the engine brake control.

Check the degradation level of the CVT fluid.

#### CVTF degradation level data

210,000 or more : Replacement of the CVT fluid is required.

Less than 210,000 : Replacement of the CVT fluid is not required.

# ECU DIAGNOSIS INFORMATION

## TCM

### Reference Value

INFOID:0000000011149306

#### CONSULT DATA MONITOR STANDARD VALUE

- In CONSULT, electric shift timing or lock-up timing, i.e. operation timing of each solenoid valve, is displayed. Therefore, if there is an obvious difference between the shift timing estimated from a shift shock (or engine speed variations) and that shown on the CONSULT, the mechanism parts (including the hydraulic circuit) excluding the solenoids and sensors may be malfunctioning. In this case, check the mechanical parts following the appropriate diagnosis procedure.
- Shift point (gear position) displayed on CONSULT slightly differs from shift pattern described in Service Manual. This is due to the following reasons.
  - Actual shift pattern may vary slightly within specified tolerances.
  - While shift pattern described in Service Manual indicates start of each shift, CONSULT shows gear position at end of shift.
  - The solenoid display (ON/OFF) on CONSULT is changed at the start of gear shifting. In contrast, the gear position display is changed at the time when gear shifting calculated in the control unit is completed.

#### NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

Monitor item	Condition	Value/Status (Approx.)
VSP SENSOR	While driving	Almost same as the speedometer display.
ESTM VSP SIG	While driving	Almost same as the speedometer display.
INPUT SPEED SENSOR	In driving (lock-up ON)	Approximately matches the engine speed.
PRI SPEED SEN	In driving (lock-up ON)	Approximately matches the engine speed.
SEC REV SENSOR	While driving	VSP SENSOR × 40
ENG SPEED SIG	Engine running	Almost same reading as tachometer
SEC PRESSURE SEN	<ul style="list-style-type: none"> <li>• After engine warm up</li> <li>• Selector lever: "N" position</li> <li>• At idle</li> </ul>	1.7 V
PRI PRESSURE SEN	<ul style="list-style-type: none"> <li>• After engine warm up</li> <li>• Selector lever: "N" position</li> <li>• At idle</li> </ul>	1.23 V
ATF TEMP SEN	CVT fluid: Approx. 20°C (68°F)	2.01 – 2.05 V
	CVT fluid: Approx. 50°C (122°F)	1.45 – 1.50 V
	CVT fluid: Approx. 80°C (176°F)	0.90 – 0.94 V
G SENSOR	Always	0 V
VIGN SEN	Ignition switch: ON	10.0 – 16.0 V
PVIGN VOLT	Ignition switch: ON	10.0 – 16.0 V
VEHICLE SPEED	While driving	Almost same as the speedometer display.
INPUT REV	In driving (lock-up ON)	Almost same as the engine speed.
PRI SPEED	In driving (lock-up ON)	Approximately matches the engine speed.
SEC SPEED	While driving	VSP SENSOR × 40
ENG SPEED	Engine running	Almost same reading as tachometer
SLIP REV	While driving	Engine speed – Input speed
PULLEY GEAR RATIO	In driving (forward)	2.43 – 0.38
	In driving (reverse)	2.43

# TCM

< ECU DIAGNOSIS INFORMATION >

[CVT: RE0F10E]

Monitor item	Condition	Value/Status (Approx.)	
G SPEED	Vehicle stopped	0.00 G	A
	During acceleration	The value changes to the positive side along with acceleration.	B
	During deceleration	The value changes to the positive side along with deceleration.	
ACCEL POSI SEN 1	Accelerator pedal released	0.00 deg	C
	Accelerator pedal fully depressed	80.00 deg	
VENG TRQ	While driving	The value changes along with acceleration/ deceleration.	TM
PRI TRQ	While driving	The value changes along with acceleration/ deceleration.	
TRQ RTO	While driving	The value changes along with acceleration/ deceleration.	E
SEC PRESSURE	<ul style="list-style-type: none"> <li>• After engine warm up</li> <li>• Selector lever: "N" position</li> <li>• At idle</li> </ul>	1.800 MPa	F
PRI PRESSURE	<ul style="list-style-type: none"> <li>• After engine warm up</li> <li>• Selector lever: "N" position</li> <li>• At idle</li> </ul>	1.100 MPa	G
FLUID TEMP	Ignition switch ON.	Displays the CVT fluid temperature.	
DSR REV	While driving	It varies along with the driving condition.	H
TGT PLY GR RATIO	In driving (forward)	2.43 – 0.38	
	In driving (reverse)	2.43	
LU PRS	<ul style="list-style-type: none"> <li>• Engine started</li> <li>• Vehicle is stopped.</li> </ul>	-0.50 MPa	I
	<ul style="list-style-type: none"> <li>• Selector lever: "D" position</li> <li>• Accelerator pedal position: 1/8 or less</li> <li>• Vehicle speed: 20 km/h (12 MPH) or more</li> </ul>	0.45 MPa	J
LINE PRS	<ul style="list-style-type: none"> <li>• After engine warm up</li> <li>• Selector lever: "N" position</li> <li>• At idle</li> </ul>	1.800 MPa	K
	<ul style="list-style-type: none"> <li>• After engine warm up</li> <li>• Selector lever: "N" position</li> <li>• Depress the accelerator pedal fully</li> </ul>	4.930 – 5.430 MPa	L
TRGT PRI PRESSURE	<ul style="list-style-type: none"> <li>• After engine warm up</li> <li>• Selector lever: "N" position</li> <li>• At idle</li> </ul>	1.100 MPa	M
TARGET SELECT PRESSURE	<ul style="list-style-type: none"> <li>• After engine warm up</li> <li>• Selector lever: "N" position</li> <li>• At idle</li> </ul>	0.000 MPa	N
TARGET SEC PRESSUR	<ul style="list-style-type: none"> <li>• After engine warm up</li> <li>• Selector lever: "N" position</li> <li>• At idle</li> </ul>	1.800 MPa	O
ISOLT1	—	—	
ISOLT2	—	—	
PRI SOLENOID	—	—	P
SEC SOLENOID CURRENT	—	—	
SELECT SOLENOID CURRENT	—	—	
SOLMON1	—	—	
SOLMON2	—	—	
PRI SOL MON	—	—	

# TCM

< ECU DIAGNOSIS INFORMATION >

[CVT: RE0F10E]

Monitor item	Condition	Value/Status (Approx.)
SEC SOL MON CURRENT	—	—
SELECT SOL MON CURRENT	—	—
D POSITION SW	Selector lever: "D" position	On
	Other than the above	Off
N POSITION SW	Selector lever: "N" position	On
	Other than the above	Off
R POSITION SW	Selector lever: "R" position	On
	Other than the above	Off
P POSITION SW	Selector lever: "P" position	On
	Other than the above	Off
L POSITION SW	Selector lever: "L" position	On
	Other than the above	Off
DS RANGE SW	Always	Off
BRAKESW	Brake pedal is depressed	On
	Brake pedal is released	Off
IDLE SW	Accelerator pedal is released	On
	Accelerator pedal is fully depressed	Off
SPORT MODE SW	Press the overdrive control switch	On
	Release the overdrive control switch	Off
ECO MODE SW	Always	Off
STRDWN SW	Always	Off
STRUP SW	Always	Off
DOWNLVR	Always	Off
UPLVR	Always	Off
NONMMODE	Always	On
MMODE	Always	Off
TOW MODE SW	In tow mode	On
	Other than above	Off
SHIFT IND SIGNAL	When the selector lever is positioned in between each position.	OFF
	Selector lever: P position	P
	Selector lever: R position	R
	Selector lever: N position	N
	Selector lever: D position	D
	Selector lever: L position	L
CVT LAMP	Approx. 2 seconds after ignition switch ON	On
	Other than the above	Off
SPORT MODE IND	In OD OFF	On
	Other than the above	Off
MANU MODE SIGNAL	Always	Off
DS RANGE SIGNAL	Always	Off
ECO MODE SIGNAL	Always	Off
VDC ON	VDC is activated	On
	Other than the above	Off

# TCM


< ECU DIAGNOSIS INFORMATION >

[CVT: RE0F10E]

Monitor item	Condition	Value/Status (Approx.)
TCS ON	TCS is activated	On
	Other than the above	Off
ABS FAIL SIGNAL	When ABS malfunction signal is received	On
	Other than the above	Off
ABS ON	ABS is activated	On
	Other than the above	Off
RANGE	Selector lever: P and N positions	N/P
	Selector lever: R position	R
	Selector lever: D position	D
	Selector lever: D position (in OD OFF)	S
	Selector lever: L position	L
M GEAR POS	Always	1
G SEN SLOPE	Always	0%
G SEN CALIBRATION	When G sensor calibration is completed	DONE
	When G sensor calibration is not completed	YET
N IDLE STATUS	Always	Off
ENGBRKLVL	When the engine brake level of "ENGINE BRAKE ADJ". in "Work Support" is ON	On
	When the engine brake level of "ENGINE BRAKE ADJ". in "Work Support" is OFF	Off
DRIVE MODE STATS	Always	NOMAL
SNOW MODE	Always	Off
ECO MODE	Always	Off
NORMAL MODE	Always	Off
SPORT MODE	Always	Off
AIR BLDING STATE	Always	COMP
ELECTRIC OP DUTY	Always	0%
E-OP DUTY MON	Always	0%
ELECTRIC OP RELAY	Always	Off
E-OP RELAY MON	Always	Off
CVT-A*	—	—
CVT-B*	—	—

\*: These monitor items do not use.

## TERMINAL LAYOUT

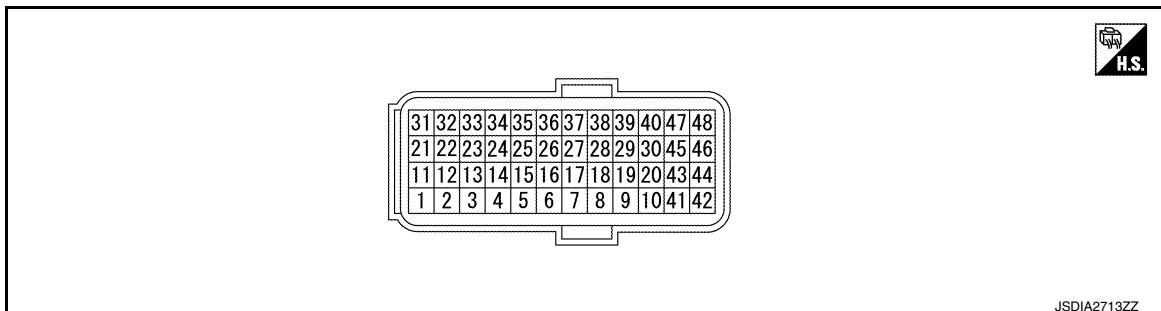


## INPUT/OUTPUT SIGNAL STANDARD

# TCM

< ECU DIAGNOSIS INFORMATION >

[CVT: RE0F10E]

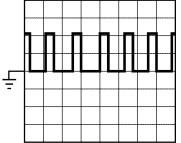Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal	Input/ Output			
2 (SB)	Ground	L position switch	Input	Ignition switch ON	Selector lever: "L" position	10 – 16 V
					Other than the above	0 V
4 (Y)	Ground	D position switch	Input		Selector lever: "D" position	10 – 16 V
					Other than the above	0 V
5 (L)	Ground	N position switch	Input		Selector lever: "N" position	10 – 16 V
					Other than the above	0 V
6 (BR)	Ground	R position switch	Input		Selector lever: "R" position	10 – 16 V
					Other than the above	0 V
7 (V)	Ground	P position switch	Input	Selector lever: "P" position	10 – 16 V	
				Other than the above	0 V	
11 (Y)	Ground	Sensor ground	—	Always	0 V	
12 (LG)	Ground	CVT fluid tempera- ture sensor	Output	Ignition switch ON	CVT fluid: Approx. 20°C (68°F)	2.01 – 2.05 V
					CVT fluid: Approx. 50°C (122°F)	1.45 – 1.50 V
					CVT fluid: Approx. 80°C (176°F)	0.90 – 0.94 V
16 (Y)	Ground	Secondary pres- sure sensor	Input	• Selector lever: "N" position • At idle	1.67 – 1.69 V	
17 (LG)	Ground	Primary pressure sensor	Input	• Selector lever: "N" position • At idle	0.90 – 0.92 V	
23 (P)	—	CAN-L	Input/ Output	—	—	
24 (LG)	Ground	Input speed sensor	Input	• Selector lever: "L" position • Vehicle speed: 20 km/h (12 MPH)	<div style="text-align: center;"> <p>800 Hz</p> <p>1mSec/div</p>  <p>5V/div</p> <p style="text-align: right;">JSDIA3770GB</p> </div>	
26 (LG)	Ground	Sensor power sup- ply	Output	Ignition switch: ON	5.0 V	
				Ignition switch: OFF	0 V	



# TCM

< ECU DIAGNOSIS INFORMATION >

[CVT: RE0F10E]





Terminal No. (Wire color)		Description		Condition	Value (Approx.)
+	-	Signal	Input/ Output		
30 (SB)	Ground	Line pressure solenoid valve	Output	<ul style="list-style-type: none"> <li>• After engine warming up</li> <li>• Selector lever: "N" position</li> <li>• At idle</li> </ul>	<p style="text-align: right;">JSDIA1897GB</p>
				<ul style="list-style-type: none"> <li>• After engine warming up</li> <li>• Selector lever: "N" position</li> <li>• Depress the accelerator pedal fully</li> </ul>	<p style="text-align: right;">JSDIA1898GB</p>
33 (L)	—	CAN-H	Input/ Output	—	—
34 (BR)	Ground	Output speed sensor	Input	<ul style="list-style-type: none"> <li>• Selector lever: "L" position</li> <li>• Vehicle speed: 20 km/h (12 MPH)</li> </ul>	<p style="text-align: right;">JSDIA1897GB</p>
35 (LG)	Ground	Primary speed sensor	Input	<ul style="list-style-type: none"> <li>• Selector lever: "L" position</li> <li>• Vehicle speed: 20 km/h (12 MPH)</li> </ul>	<p style="text-align: right;">JSDIA3770GB</p>
37 (BR)	Ground	Select solenoid valve	Output	<ul style="list-style-type: none"> <li>• Engine started</li> <li>• Vehicle is stopped</li> <li>• Selector lever: "N" position</li> </ul>	<p style="text-align: right;">JSDIA1897GB</p>

A  
B  
C  
TM  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# TCM

< ECU DIAGNOSIS INFORMATION >

[CVT: RE0F10E]

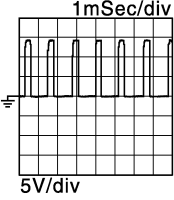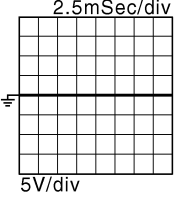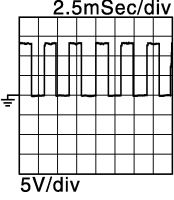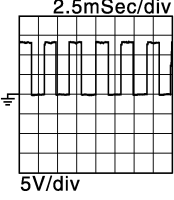Terminal No. (Wire color)		Description		Condition	Value (Approx.)
+	-	Signal	Input/ Output		
38 (Y)	Ground	Torque converter clutch solenoid valve	Output	<ul style="list-style-type: none"> <li>Selector lever: "D" position</li> <li>Accelerator pedal position: 1/8 or less</li> <li>Vehicle speed: 20 km/h (12 MPH) or more</li> </ul>	 <p style="text-align: right;">JSDIA1900GB</p>
				<ul style="list-style-type: none"> <li>Engine started</li> <li>Vehicle is stopped</li> </ul>	 <p style="text-align: right;">JSDIA1903GB</p>
39 (L)	Ground	Secondary pres- sure solenoid valve	Output	<ul style="list-style-type: none"> <li>Selector lever: "L" position</li> <li>Vehicle speed: 20 km/h (12 MPH)</li> </ul>	 <p style="text-align: right;">JSDIA1897GB</p>
40 (V)	Ground	Primary pressure solenoid valve	Output	<ul style="list-style-type: none"> <li>Selector lever: "L" position</li> <li>Vehicle speed: 20 km/h (12 MPH)</li> </ul>	 <p style="text-align: right;">JSDIA1897GB</p>
41 (B)	Ground	Ground	Output	Always	0 V
42 (B)	Ground	Ground	Output	Always	0 V
45 (LG)	Ground	Power (backup)	Input	Always	10 – 16 V
46 (LG)	Ground	Power (backup)	Input	Always	10 – 16 V
47 (Y)	Ground	Power supply	Input	Ignition switch: ON	10 – 16 V
				Ignition switch: OFF	0 V
48 (Y)	Ground	Power supply	Input	Ignition switch: ON	10 – 16 V
				Ignition switch: OFF	0 V

## Fail-safe

INFOID:000000011149307

TCM has a fail-safe mode. The mode functions so that operation can be continued even if the signal circuit of the main electronically controlled input/output parts is damaged.

If the vehicle shows following behaviors including "poor acceleration", a malfunction of the applicable system is detected by TCM and the vehicle may be in a fail-safe mode. At this time, check the DTC code and perform inspection and repair according to the malfunction diagnosis procedures.

## Fail-safe function

# TCM

< ECU DIAGNOSIS INFORMATION >

[CVT: RE0F10E]

DTC	Vehicle behavior	Conditions of vehicle	A
P062F	<ul style="list-style-type: none"> <li>• Not changed from normal driving</li> </ul>	—	A
P0705	<ul style="list-style-type: none"> <li>• Shift position indicator on combination meter is not displayed</li> </ul>	—	B
	<ul style="list-style-type: none"> <li>• Selector shock is large</li> </ul>	—	C
	<ul style="list-style-type: none"> <li>• Start is slow</li> </ul>	—	TM
	<ul style="list-style-type: none"> <li>• Acceleration is slow</li> </ul>	—	E
P0706	<ul style="list-style-type: none"> <li>• Shift position indicator on combination meter is not displayed</li> </ul>	—	E
	<ul style="list-style-type: none"> <li>• Selector shock is large</li> </ul>	—	F
	<ul style="list-style-type: none"> <li>• Start is slow</li> </ul>	—	G
P0711	<ul style="list-style-type: none"> <li>• Acceleration is slow</li> </ul>	Engine coolant temperature when engine start: Temp. $\geq 10^{\circ}\text{C}$ (50°F)	E
	<ul style="list-style-type: none"> <li>• Selector shock is large</li> </ul>	Engine coolant temperature when engine start: $-35^{\circ}\text{C}$ (-31°F) $\leq$ Temp. $< 10^{\circ}\text{C}$ (50°F)	F
	<ul style="list-style-type: none"> <li>• Start is slow</li> </ul>	Engine coolant temperature when engine start: Temp. $< -35^{\circ}\text{C}$ (-31°F)	G
P0712	<ul style="list-style-type: none"> <li>• Acceleration is slow</li> </ul>	Engine coolant temperature when engine start: Temp. $\geq 10^{\circ}\text{C}$ (50°F)	H
	<ul style="list-style-type: none"> <li>• Start is slow</li> </ul>	Engine coolant temperature when engine start: $-35^{\circ}\text{C}$ (-31°F) $\leq$ Temp. $< 10^{\circ}\text{C}$ (50°F)	I
	<ul style="list-style-type: none"> <li>• Selector shock is large</li> </ul>	Engine coolant temperature when engine start: Temp. $< -35^{\circ}\text{C}$ (-31°F)	J
P0713	<ul style="list-style-type: none"> <li>• Acceleration is slow</li> </ul>	Engine coolant temperature when engine start: Temp. $\geq 10^{\circ}\text{C}$ (50°F)	J
	<ul style="list-style-type: none"> <li>• Start is slow</li> </ul>	Engine coolant temperature when engine start: $-35^{\circ}\text{C}$ (-31°F) $\leq$ Temp. $< 10^{\circ}\text{C}$ (50°F)	K
	<ul style="list-style-type: none"> <li>• Selector shock is large</li> </ul>	Engine coolant temperature when engine start: Temp. $< -35^{\circ}\text{C}$ (-31°F)	L
P0715	<ul style="list-style-type: none"> <li>• Start is slow</li> </ul>	—	M
P0717	<ul style="list-style-type: none"> <li>• Acceleration is slow</li> </ul>	—	M
	<ul style="list-style-type: none"> <li>• Lock-up is not performed</li> </ul>	—	N
P0740	<ul style="list-style-type: none"> <li>• Start is slow</li> </ul>	—	O
	<ul style="list-style-type: none"> <li>• Acceleration is slow</li> </ul>	—	O
	<ul style="list-style-type: none"> <li>• Lock-up is not performed</li> </ul>	—	P
P0743	<ul style="list-style-type: none"> <li>• Start is slow</li> </ul>	—	P
	<ul style="list-style-type: none"> <li>• Acceleration is slow</li> </ul>	—	P
	<ul style="list-style-type: none"> <li>• Lock-up is not performed</li> </ul>	—	P
P0744	<ul style="list-style-type: none"> <li>• Start is slow</li> </ul>	—	P
	<ul style="list-style-type: none"> <li>• Acceleration is slow</li> </ul>	—	P
	<ul style="list-style-type: none"> <li>• Lock-up is not performed</li> </ul>	—	P
P0746	<ul style="list-style-type: none"> <li>• Selector shock is large</li> </ul>	—	P
	<ul style="list-style-type: none"> <li>• Start is slow</li> </ul>	—	P
	<ul style="list-style-type: none"> <li>• Acceleration is slow</li> </ul>	—	P
	<ul style="list-style-type: none"> <li>• Lock-up is not performed</li> </ul>	—	P

# TCM

< ECU DIAGNOSIS INFORMATION >

[CVT: RE0F10E]

DTC	Vehicle behavior	Conditions of vehicle
P0776	<ul style="list-style-type: none"> <li>• Selector shock is large</li> <li>• Start is slow</li> <li>• Acceleration is slow</li> <li>• Lock-up is not performed</li> <li>• Vehicle speed is not increased</li> </ul>	When a malfunction occurs on the low oil pressure side
	<ul style="list-style-type: none"> <li>• Selector shock is large</li> <li>• Start is slow</li> <li>• Acceleration is slow</li> <li>• Lock-up is not performed</li> </ul>	When a malfunction occurs on the high oil pressure side
P0778	<ul style="list-style-type: none"> <li>• Selector shock is large</li> <li>• Start is slow</li> <li>• Acceleration is slow</li> <li>• Lock-up is not performed</li> </ul>	—
P0779	<ul style="list-style-type: none"> <li>• Selector shock is large</li> <li>• Start is slow</li> <li>• Acceleration is slow</li> <li>• Lock-up is not performed</li> </ul>	
P0841	<ul style="list-style-type: none"> <li>• Not changed from normal driving</li> </ul>	
P0847	<ul style="list-style-type: none"> <li>• Not changed from normal driving</li> </ul>	—
P0848	<ul style="list-style-type: none"> <li>• Not changed from normal driving</li> </ul>	—
P084C	<ul style="list-style-type: none"> <li>• Not changed from normal driving</li> </ul>	
P084D	<ul style="list-style-type: none"> <li>• Not changed from normal driving</li> </ul>	
P0863	<ul style="list-style-type: none"> <li>• Selector shock is large</li> <li>• Start is slow</li> <li>• Acceleration is slow</li> <li>• Lock-up is not performed</li> </ul>	—
P0890	<ul style="list-style-type: none"> <li>• Selector shock is large</li> <li>• Start is slow</li> <li>• Acceleration is slow</li> <li>• Lock-up is not performed</li> <li>• Vehicle speed is not increased</li> </ul>	
P0962	<ul style="list-style-type: none"> <li>• Selector shock is large</li> <li>• Start is slow</li> <li>• Acceleration is slow</li> <li>• Lock-up is not performed</li> </ul>	—
P0963	<ul style="list-style-type: none"> <li>• Selector shock is large</li> <li>• Start is slow</li> <li>• Acceleration is slow</li> <li>• Lock-up is not performed</li> </ul>	—
P0965	<ul style="list-style-type: none"> <li>• Selector shock is large</li> <li>• Start is slow</li> <li>• Acceleration is slow</li> <li>• Lock-up is not performed</li> </ul>	When a malfunction occurs on the low oil pressure side
	<ul style="list-style-type: none"> <li>• Selector shock is large</li> <li>• Lock-up is not performed</li> </ul>	When a malfunction occurs on the high oil pressure side
P0966	<ul style="list-style-type: none"> <li>• Selector shock is large</li> <li>• Start is slow</li> <li>• Acceleration is slow</li> <li>• Lock-up is not performed</li> </ul>	—
P0967	<ul style="list-style-type: none"> <li>• Selector shock is large</li> <li>• Start is slow</li> <li>• Acceleration is slow</li> <li>• Lock-up is not performed</li> </ul>	—
P2765	<ul style="list-style-type: none"> <li>• Start is slow</li> <li>• Acceleration is slow</li> <li>• Lock-up is not performed</li> </ul>	—

# TCM

< ECU DIAGNOSIS INFORMATION >

[CVT: RE0F10E]

DTC	Vehicle behavior	Conditions of vehicle
P2813	<ul style="list-style-type: none"> <li>• Selector shock is large</li> <li>• Start is slow</li> <li>• Acceleration is slow</li> <li>• Vehicle speed is not increased</li> </ul>	When a malfunction occurs on the low oil pressure side
	<ul style="list-style-type: none"> <li>• Selector shock is large</li> </ul>	When a malfunction occurs on the high oil pressure side
P2814	<ul style="list-style-type: none"> <li>• Selector shock is large</li> </ul>	—
P2815	<ul style="list-style-type: none"> <li>• Selector shock is large</li> </ul>	—
U0073	<ul style="list-style-type: none"> <li>• Selector shock is large</li> <li>• Start is slow</li> <li>• Acceleration is slow</li> <li>• Lock-up is not performed</li> </ul>	—
U0100	<ul style="list-style-type: none"> <li>• Selector shock is large</li> <li>• Start is slow</li> <li>• Acceleration is slow</li> <li>• Lock-up is not performed</li> </ul>	—
U0102	<ul style="list-style-type: none"> <li>• Not changed from normal driving</li> </ul>	—
U0140	<ul style="list-style-type: none"> <li>• Not changed from normal driving</li> </ul>	—
U0141	<ul style="list-style-type: none"> <li>• Not changed from normal driving</li> </ul>	—
U0155	<ul style="list-style-type: none"> <li>• Not changed from normal driving</li> </ul>	—
U0300	<ul style="list-style-type: none"> <li>• Selector shock is large</li> <li>• Start is slow</li> <li>• Acceleration is slow</li> <li>• Lock-up is not performed</li> </ul>	—
U1000	<ul style="list-style-type: none"> <li>• Not changed from normal driving</li> </ul>	—
U1117	<ul style="list-style-type: none"> <li>• Not changed from normal driving</li> </ul>	—

## Protection Control

INFOID:000000011149308

The TCM becomes the protection control status temporarily to protect the safety when the safety of TCM and transmission is lost. It automatically returns to the normal status if the safety is secured.  
The TCM has the following protection control.

### CONTROL FOR WHEEL SPIN

Control	When a wheel spin is detected, the engine output and gear ratio are limited and the line pressure is increased. Limits engine output when a wheel spin occurs in any of right and left drive wheels.
Vehicle behavior in control	If the accelerator is kept depressing during wheel spin, the engine revolution and vehicle speed are limited to a certain degree.
Normal return condition	Wheel spin convergence returns the control to the normal control.

### TORQUE IS REDUCED WHEN DRIVING WITH THE REVERSE GEAR

Control	Engine output is controlled according to a vehicle speed while reversing the vehicle.
Vehicle behavior in control	Power performance may be lowered while reversing the vehicle.
Normal return condition	Torque returns to normal by positioning the selector lever in a range other than "R" position.

### CONTROL WHEN FLUID TEMPERATURE IS HIGH

Control	When the CVT fluid temperature is high, the gear shift permission maximum revolution and the maximum torque are reduced than usual to prevent increase of the oil temperature.
---------	--

Vehicle behavior in control	Power performance may be lowered, compared to normal control.
Normal return condition	The control returns to the normal control when CVT fluid temperature is lowered.

REVERSE PROHIBIT CONTROL

Control	The reverse brake is controlled to avoid becoming engaged when the selector lever is set in "R" position while driving in forward direction at more than the specified speed.
Vehicle behavior in control	If the selector lever is put at "R" position when driving with the forward gear, the gear becomes neutral, not reverse.
Normal return condition	The control returns to normal control when the vehicle is driven at low speeds. (The reverse brake becomes engaged.)

DTC Inspection Priority Chart

INFOID:000000011149309

If multiple malfunction codes are detected at the same time, check each code according to the DTC check priority list below.

Priority	DTC (Diagnostic Trouble Code)	Reference
1	P0863 CONTROL UNIT (CAN)	<a href="#">TM-148, "DTC Logic"</a>
	U0073 COMM BUS A OFF	<a href="#">TM-94, "DTC Logic"</a>
	U0100 LOST COMM (ECM A)	<a href="#">TM-95, "DTC Logic"</a>
	U0102 LOST COMM (TRANSFER)	<a href="#">TM-96, "DTC Logic"</a>
	U0140 LOST COMM (BCM)	<a href="#">TM-97, "DTC Logic"</a>
	U0141 LOST COMM (BCM A)	<a href="#">TM-98, "DTC Logic"</a>
	U0155 LOST COMM (IPC)	<a href="#">TM-99, "DTC Logic"</a>
	U0300 CAN COMM DATA	<a href="#">TM-100, "DTC Logic"</a>
	U1000 CAN COMM CIRC	<a href="#">TM-101, "DTC Logic"</a>
	U1117 LOST COMM (ABS)	<a href="#">TM-102, "DTC Logic"</a>
2	P0740 TORQUE CONVERTER	<a href="#">TM-125, "DTC Logic"</a>
	P0743 TORQUE CONVERTER	<a href="#">TM-127, "DTC Logic"</a>
	P0778 PC SOLENOID B	<a href="#">TM-135, "DTC Logic"</a>
	P0779 PC SOLENOID B	<a href="#">TM-137, "DTC Logic"</a>
	P0962 PC SOLENOID A	<a href="#">TM-151, "DTC Logic"</a>
	P0963 PC SOLENOID A	<a href="#">TM-153, "DTC Logic"</a>
	P0966 PC SOLENOID B	<a href="#">TM-157, "DTC Logic"</a>
	P0967 PC SOLENOID B	<a href="#">TM-159, "DTC Logic"</a>
	P2814 SELECT SOLENOID	<a href="#">TM-166, "DTC Logic"</a>
	P2815 SELECT SOLENOID	<a href="#">TM-168, "DTC Logic"</a>

# TCM

< ECU DIAGNOSIS INFORMATION >

[CVT: RE0F10E]

Priority	DTC (Diagnostic Trouble Code)	Reference
3	P062F EEPROM	<a href="#">TM-103, "DTC Logic"</a>
	P0705 T/M RANGE SENSOR A	<a href="#">TM-104, "DTC Logic"</a>
	P0706 T/M RANGE SENSOR A	<a href="#">TM-110, "DTC Logic"</a>
	P0711 FLUID TEMP SENSOR A	<a href="#">TM-113, "DTC Logic"</a>
	P0712 FLUID TEMP SENSOR A	<a href="#">TM-115, "DTC Logic"</a>
	P0713 FLUID TEMP SENSOR A	<a href="#">TM-117, "DTC Logic"</a>
	P0715 INPUT SPEED SENSOR A	<a href="#">TM-119, "DTC Logic"</a>
	P0717 INPUT SPEED SENSOR A	<a href="#">TM-122, "DTC Logic"</a>
	P0841 FLUID PRESS SEN/SW A	<a href="#">TM-139, "DTC Logic"</a>
	P0847 FLUID PRESS SEN/SW B	<a href="#">TM-140, "DTC Logic"</a>
	P0848 FLUID PRESS SEN/SW B	<a href="#">TM-142, "DTC Logic"</a>
	P084C FLUID PRESS SEN/SW H	<a href="#">TM-144, "DTC Logic"</a>
	P084D FLUID PRESS SEN/SW H	<a href="#">TM-146, "DTC Logic"</a>
	P0890 TCM	<a href="#">TM-149, "DTC Logic"</a>
	P2765 INPUT SPEED SENSOR B	<a href="#">TM-161, "DTC Logic"</a>
4	P0744 TORQUE CONVERTER	<a href="#">TM-129, "DTC Logic"</a>
	P0746 PC SOLENOID A	<a href="#">TM-131, "DTC Logic"</a>
	P0776 PC SOLENOID B	<a href="#">TM-133, "DTC Logic"</a>
	P0965 PC SOLENOID B	<a href="#">TM-155, "DTC Logic"</a>
	P2813 SELECT SOLENOID	<a href="#">TM-164, "DTC Logic"</a>

## DTC Index

INFOID:000000011149310

### NOTE:

- If multiple malfunction codes are detected at the same time, check each code according to the "DTC check priority list". [TM-62, "DTC Inspection Priority Chart"](#).
- The ignition counter is displayed in "FFD". Refer to [TM-47, "CONSULT Function"](#).

DTC*1,*2		Items (CONSULT screen terms)	Trip	MIL	Reference
GST	CONSULT (TRANSMISSION)				
P062F	P062F	EEPROM	1	ON	<a href="#">TM-103</a>
P0705	P0705	T/M RANGE SENSOR A	2	ON	<a href="#">TM-104</a>
P0706	P0706	T/M RANGE SENSOR A	2	ON	<a href="#">TM-110</a>
P0711	P0711	FLUID TEMP SENSOR A	2	ON	<a href="#">TM-113</a>
P0712	P0712	FLUID TEMP SENSOR A	2	ON	<a href="#">TM-115</a>
P0713	P0713	FLUID TEMP SENSOR A	2	ON	<a href="#">TM-117</a>
P0715	P0715	INPUT SPEED SENSOR A	2	ON	<a href="#">TM-119</a>
P0717	P0717	INPUT SPEED SENSOR A	2	ON	<a href="#">TM-122</a>
P0740	P0740	TORQUE CONVERTER	2	ON	<a href="#">TM-125</a>
P0743	P0743	TORQUE CONVERTER	2	ON	<a href="#">TM-127</a>
P0744	P0744	TORQUE CONVERTER	2	ON	<a href="#">TM-129</a>
P0746	P0746	PC SOLENOID A	2	ON	<a href="#">TM-131</a>
P0776	P0776	PC SOLENOID B	2	ON	<a href="#">TM-133</a>
P0778	P0778	PC SOLENOID B	2	ON	<a href="#">TM-135</a>
P0779	P0779	PC SOLENOID B	2	ON	<a href="#">TM-137</a>
P0841	P0841	FLUID PRESS SEN/SW A	2	ON	<a href="#">TM-139</a>

# TCM

< ECU DIAGNOSIS INFORMATION >

[CVT: RE0F10E]

DTC*1, *2		Items (CONSULT screen terms)	Trip	MIL	Reference
GST	CONSULT (TRANSMISSION)				
P0847	P0847	FLUID PRESS SEN/SW B	2	ON	<a href="#">TM-140</a>
P0848	P0848	FLUID PRESS SEN/SW B	2	ON	<a href="#">TM-142</a>
P084C	P084C	FLUID PRESS SEN/SW H	2	ON	<a href="#">TM-144</a>
P084D	P084D	FLUID PRESS SEN/SW H	2	ON	<a href="#">TM-146</a>
P0863	P0863	CONTROL UNIT (CAN)	1	ON	<a href="#">TM-148</a>
P0890	P0890	TCM	1	ON	<a href="#">TM-149</a>
P0962	P0962	PC SOLENOID A	2	ON	<a href="#">TM-151</a>
P0963	P0963	PC SOLENOID A	2	ON	<a href="#">TM-153</a>
P0965	P0965	PC SOLENOID B	2	ON	<a href="#">TM-155</a>
P0966	P0966	PC SOLENOID B	2	ON	<a href="#">TM-157</a>
P0967	P0967	PC SOLENOID B	2	ON	<a href="#">TM-159</a>
P2765	P2765	INPUT SPEED SENSOR B	2	ON	<a href="#">TM-161</a>
P2813	P2813	SELECT SOLENOID	2	ON	<a href="#">TM-164</a>
P2814	P2814	SELECT SOLENOID	2	ON	<a href="#">TM-166</a>
P2815	P2815	SELECT SOLENOID	2	ON	<a href="#">TM-168</a>
U0073	U0073	COMM BUS A OFF	1	ON	<a href="#">TM-94</a>
U0100	U0100	LOST COMM (ECM A)	1	ON	<a href="#">TM-95</a>
—	U0102	LOST COMM (TRANSFER)	1	—	<a href="#">TM-96</a>
—	U0140	LOST COMM (BCM)	1	—	<a href="#">TM-97</a>
—	U0141	LOST COMM (BCM A)	1	—	<a href="#">TM-98</a>
—	U0155	LOST COMM (IPC)	1	—	<a href="#">TM-99</a>
—	U0300	CAN COMM DATA	1	—	<a href="#">TM-100</a>
—	U1000	CAN COMM CIRC	1	—	<a href="#">TM-101</a>
—	U1117	LOST COMM (ABS)	1	—	<a href="#">TM-102</a>

\*1: These numbers are specified by SAE J2012/ISO 15031-6.

\*2: The DTC number of the 1st trip is the same as the DTC number.




# WIRING DIAGRAM

## CVT CONTROL SYSTEM

Wiring diagram

INFOID:0000000011149311

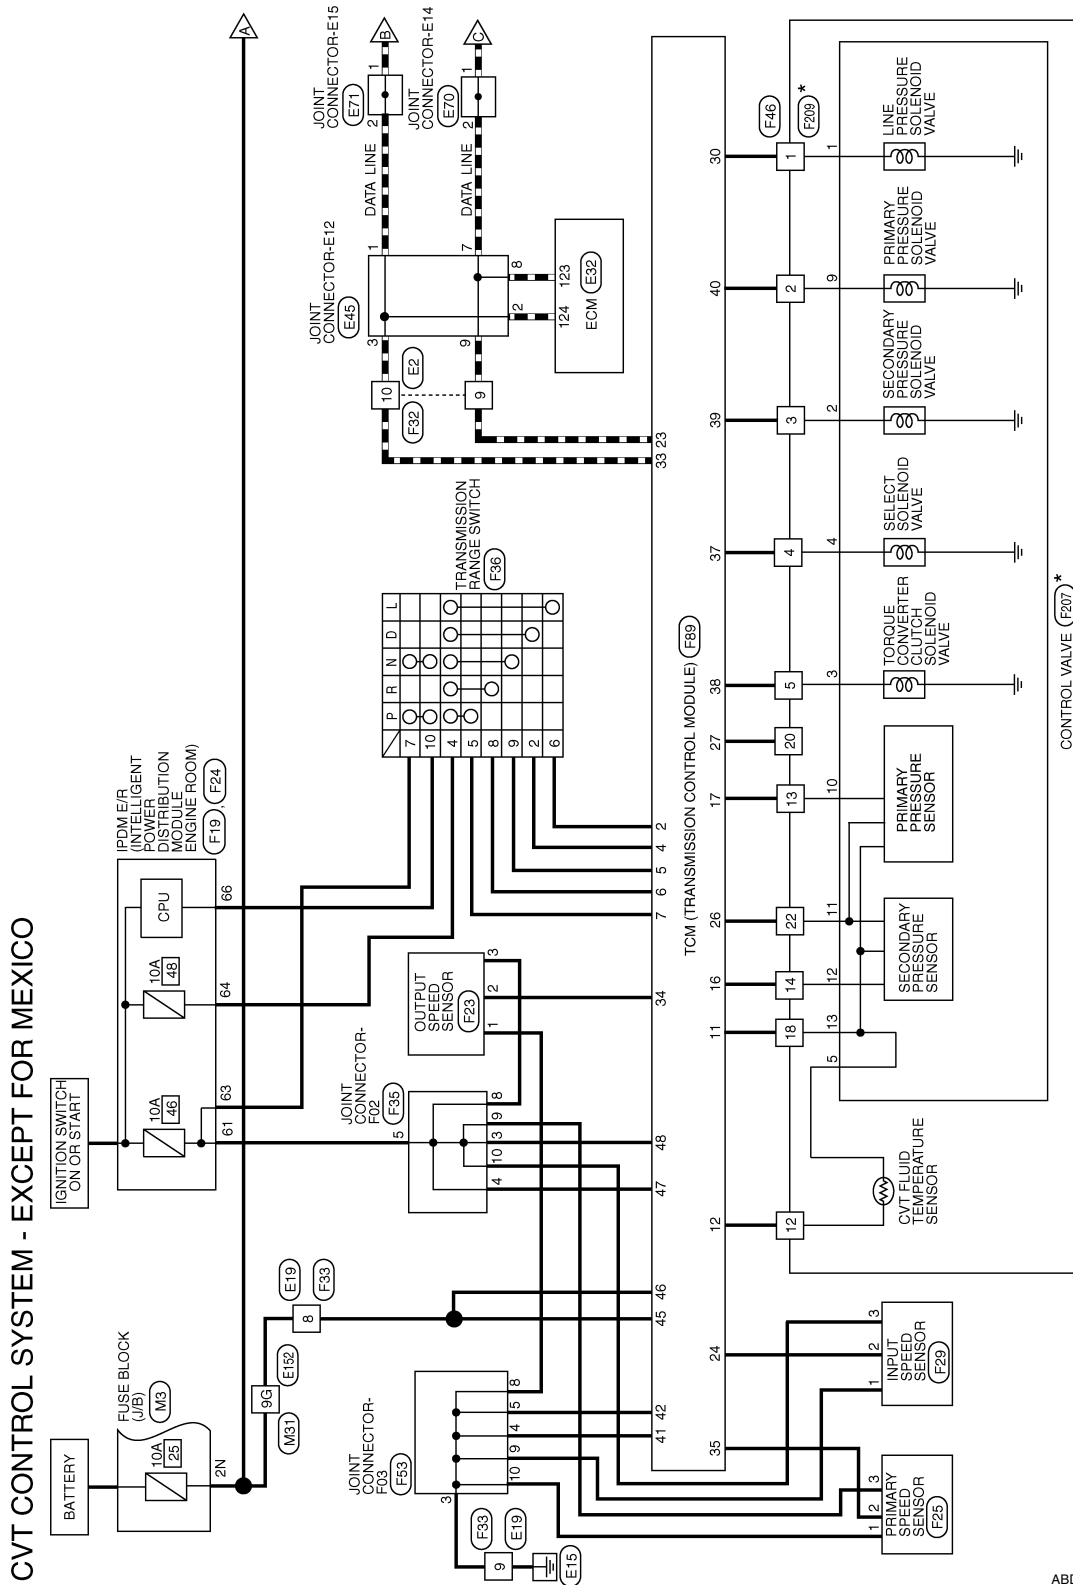

\*.THIS CONNECTOR IS NOT SHOWN IN "HARNES LAYOUT" OF PG SECTION.


ABDWA0840GB

A  
B  
C  
TM  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# CVT CONTROL SYSTEM

< WIRING DIAGRAM >

[CVT: RE0F10E]

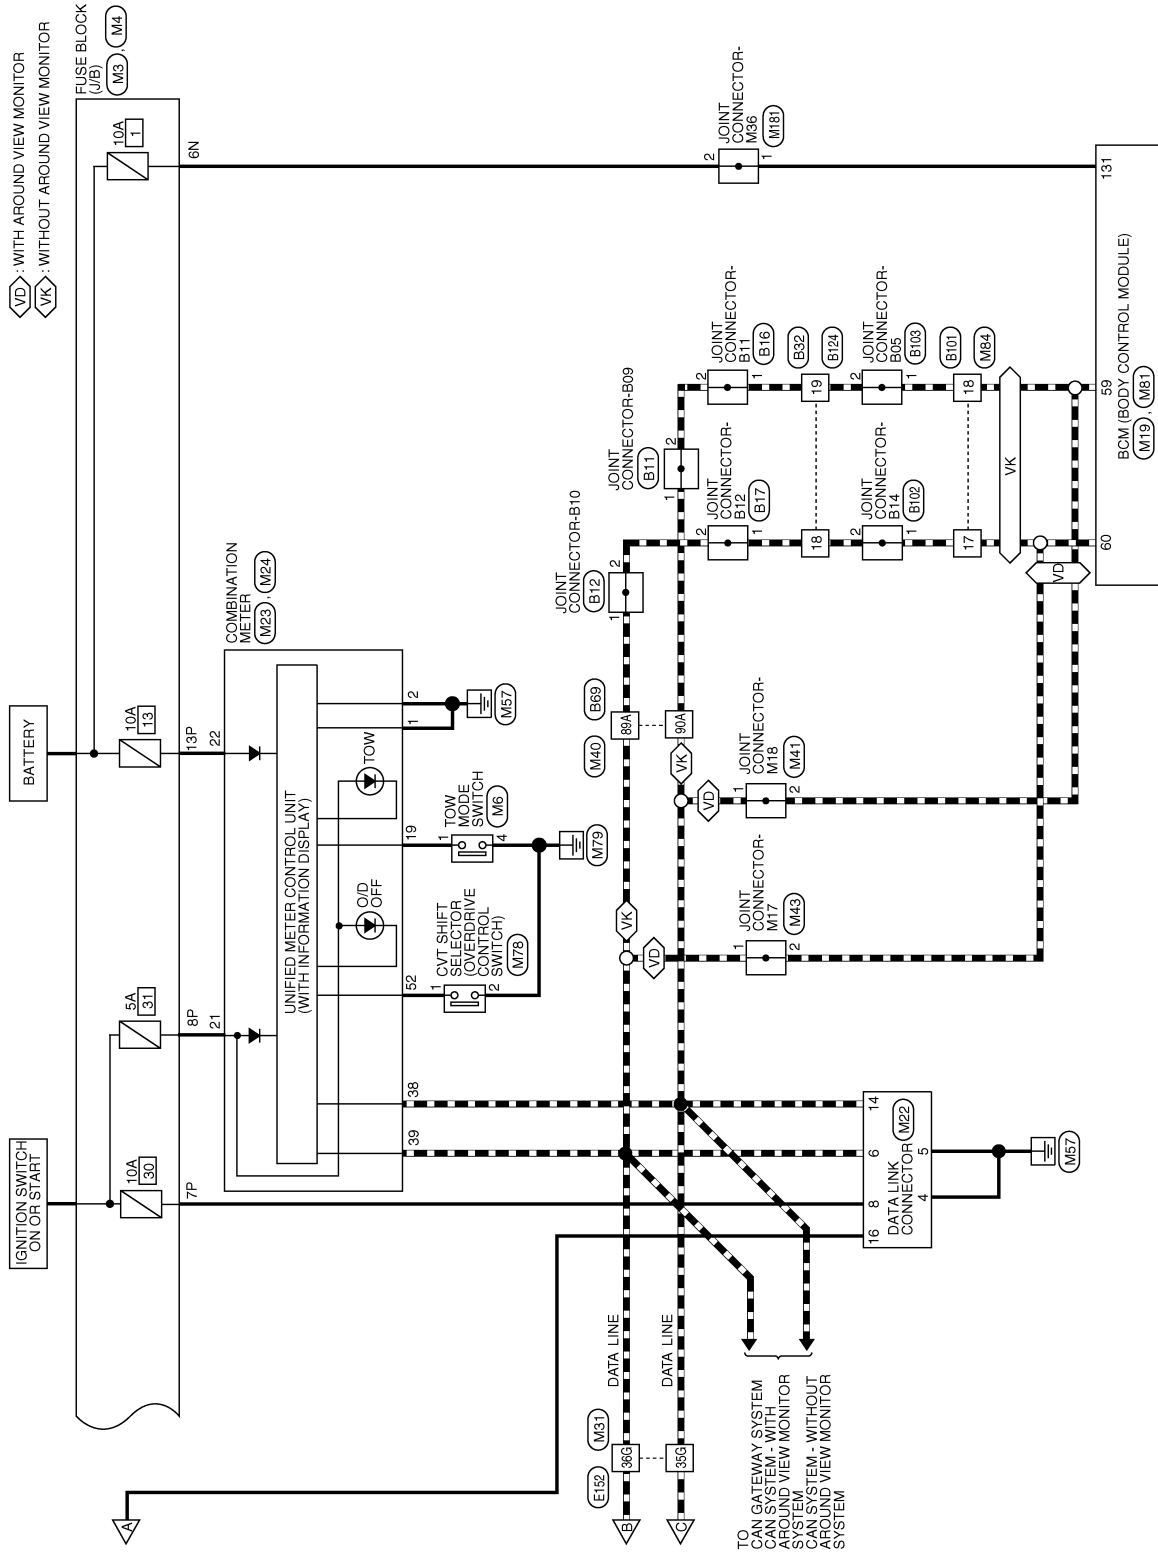

ABDWA0841GB


# CVT CONTROL SYSTEM
 
< WIRING DIAGRAM >

[CVT: RE0F10E]

## CVT CONTROL SYSTEM CONNECTORS - EXCEPT FOR MEXICO

Connector No.	M6
Connector Name	TOW MODE SWITCH
Connector Color	GRAY




Terminal No.	Color of Wire	Signal Name
1	SB	-
4	B	-

Connector No.	M4
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
7P	LG	-
8P	BG	-
13P	W	-

Connector No.	M3
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE

 


Terminal No.	Color of Wire	Signal Name
2N	BG	-
6N	W	-

Connector No.	M23
Connector Name	COMBINATION METER
Connector Color	WHITE

 


Terminal No.	Color of Wire	Signal Name
52	P	O/D OFF/SPORTS SW

Connector No.	M22
Connector Name	DATA LINK CONNECTOR
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
4	B	-
5	B	-
6	L	-
8	LG	-
14	P	-
16	BG	-

Connector No.	M19
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BLACK

 

Terminal No.	Color of Wire	Signal Name
59	P	CAN-L
60	L	CAN-H


ABDIA1538GB

A  
B  
C  
TM  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# CVT CONTROL SYSTEM

< WIRING DIAGRAM >

[CVT: RE0F10E]

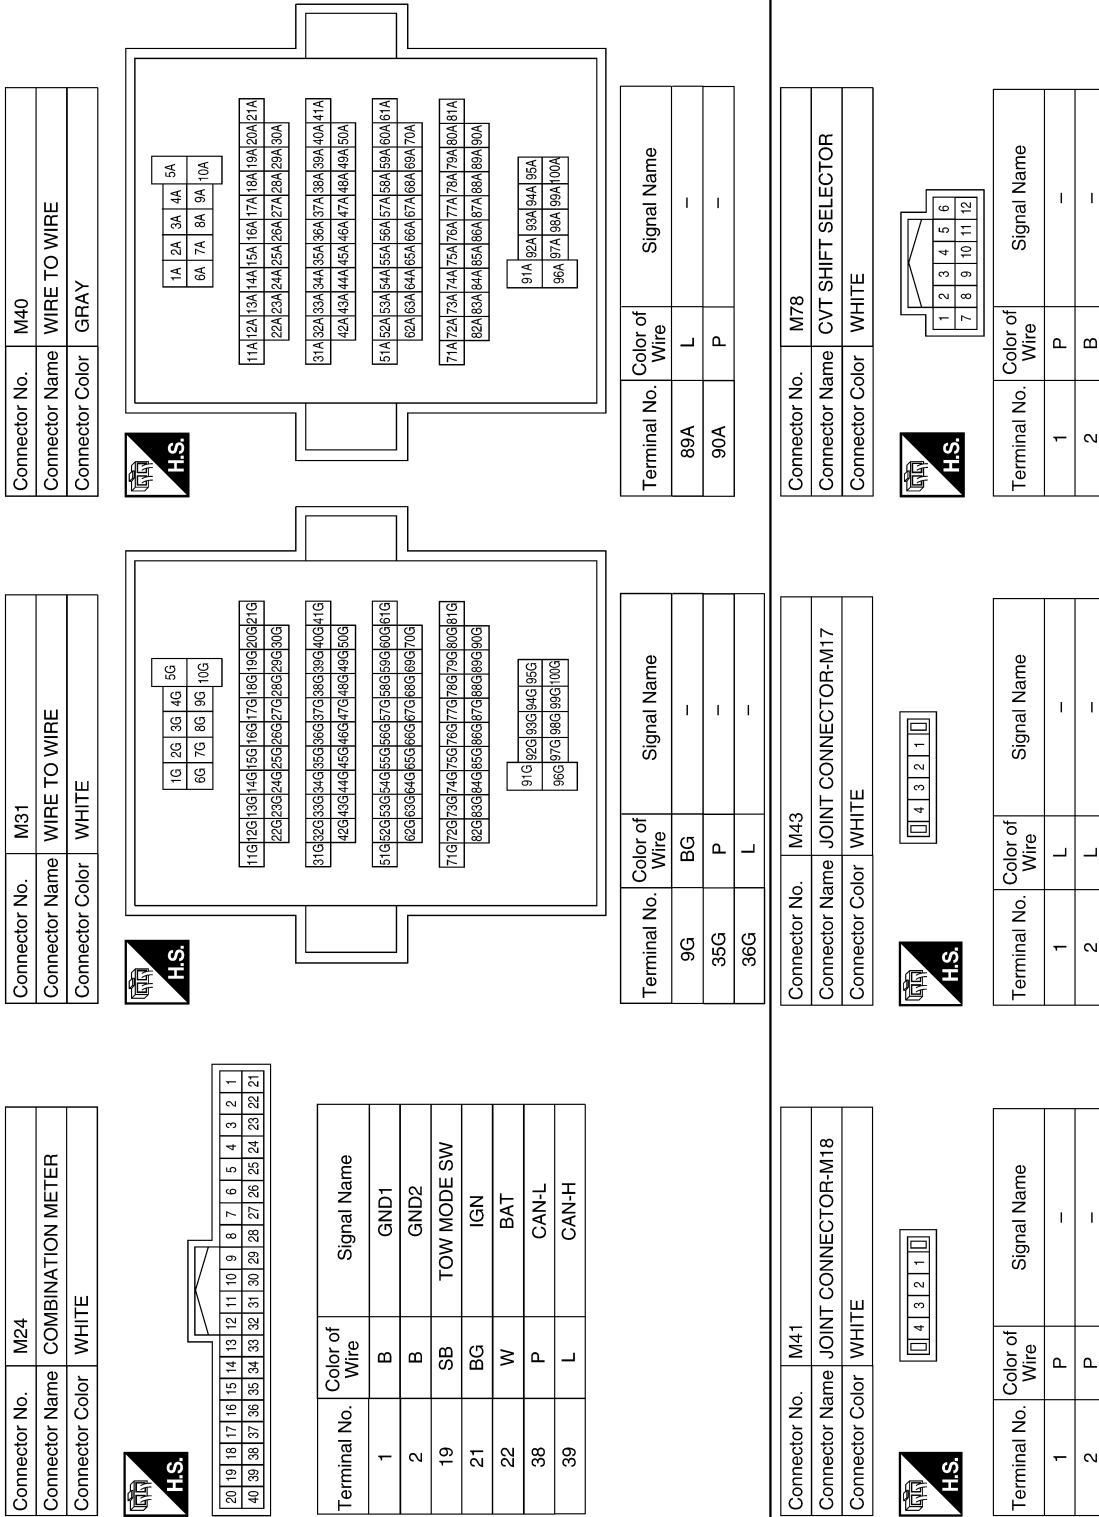

# CVT CONTROL SYSTEM

< WIRING DIAGRAM >

 
[CVT: RE0F10E]

Connector No.	M181
Connector Name	JOINT CONNECTOR-M36
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1	W	-
2	W	-

Connector No.	M84
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
17	L	-
18	P	-

Connector No.	M81
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE

 


Terminal No.	Color of Wire	Signal Name
131	W	BAT BCM FUSE

Connector No.	E32
Connector Name	ECM (EXCEPT FOR MEXICO)
Connector Color	BLACK

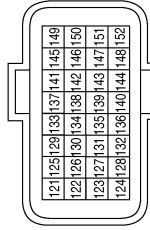


Terminal No.	Color of Wire	Signal Name
123	P	CAN-L
124	L	CAN-H

Connector No.	E19
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
8	LG	-
9	B	-

Connector No.	E2
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
9	P	-
10	L	-

ABDIA1539GB


A  
B  
C  
TM  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# CVT CONTROL SYSTEM
 
< WIRING DIAGRAM >


[CVT: RE0F10E]

Connector No.	E71
Connector Name	JOINT CONNECTOR-E15
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
1	L	-
2	L	-

Connector No.	E70
Connector Name	JOINT CONNECTOR-E14
Connector Color	BLACK

 


Terminal No.	Color of Wire	Signal Name
1	P	-
2	P	-

Connector No.	E45
Connector Name	JOINT CONNECTOR-E12
Connector Color	BLUE

 

Terminal No.	Color of Wire	Signal Name
1	L	-
2	L	-
3	L	-
7	P	-
8	P	-
9	P	-


Connector No.	F19
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
61	Y	AT ECU

Terminal No.	Color of Wire	Signal Name
9G	LG	-
35G	P	-
36G	L	-

Connector No.	E152
Connector Name	WIRE TO WIRE
Connector Color	WHITE

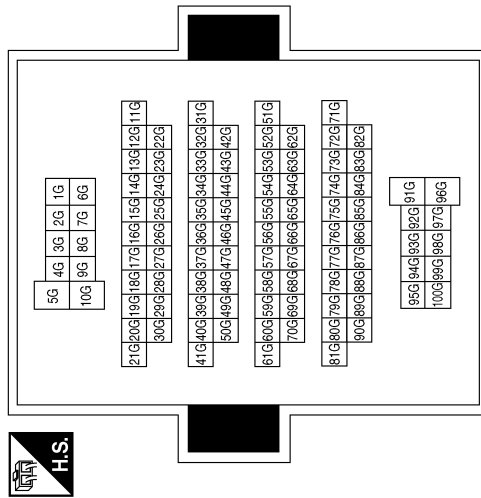

ABDIA1540GB

# CVT CONTROL SYSTEM

< WIRING DIAGRAM >

 
[CVT: RE0F10E]

Connector No.	F25
Connector Name	PRIMARY SPEED SENSOR
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	B	-
2	LG	-
3	Y	-

Connector No.	F24
Connector Name	IPDM/E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
63	L	INHIBIT SW
64	LG	START IG EGI
66	G	NP SW

Connector No.	F23
Connector Name	OUTPUT SPEED SENSOR
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
1	B	-
2	BR	-
3	Y	-

Connector No.	F33
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
8	LG	-
9	B	-

Connector No.	F32
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
9	P	-
10	L	-

Connector No.	F29
Connector Name	INPUT SPEED SENSOR
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	B	-
2	LG	-
3	Y	-

ABDIA1541GB

A  
B  
C  
TM  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P


# CVT CONTROL SYSTEM
 
< WIRING DIAGRAM >

[CVT: RE0F10E]


Terminal No.	Color of Wire	Signal Name
9	L	-
10	G	-

Connector No.	F36
Connector Name	TRANSMISSION RANGE SWITCH
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
2	Y	-
4	LG	-
5	V	-
6	SB	-
7	L	-
8	BR	-

Connector No.	F35
Connector Name	JOINT CONNECTOR-F02
Connector Color	BLACK

 

Terminal No.	Color of Wire	Signal Name
3	Y	-
4	Y	-
5	Y	-
8	Y	-
9	Y	-
10	Y	-


Connector No.	F53
Connector Name	JOINT CONNECTOR-F03
Connector Color	BLACK

 

Terminal No.	Color of Wire	Signal Name
3	B	-
4	B	-
5	B	-
8	B	-
9	B	-
10	B	-

Terminal No.	Color of Wire	Signal Name
7	-	-
8	-	-
9	-	-
10	-	-
11	-	-
12	LG	-
13	LG	-
14	Y	-
15	-	-
16	-	-
17	-	-
18	Y	-
19	-	-
20	G	-
21	-	-
22	LG	-

Connector No.	F46
Connector Name	CVT UNIT
Connector Color	GRAY

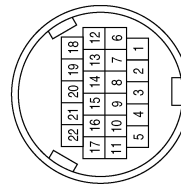

Terminal No.	Color of Wire	Signal Name
1	SB	-
2	V	-
3	L	-
4	BR	-
5	Y	-
6	-	-

ABDIA1542GB



# CVT CONTROL SYSTEM


< WIRING DIAGRAM >

[CVT: RE0F10E]

Terminal No.	Color of Wire	Signal Name
32	-	-
33	L	CAN-H
34	BR	OUTPUT SPEED SENS
35	LG	PRI SPEED SENS
36	-	-
37	BR	SELECT SOL VALVE
38	Y	TCC SOLE VALVE
39	L	SEC PRESS SOLE VALVE
40	V	PRI PRESS SOLE VALVE
41	B	GND
42	B	GND
43	-	-
44	-	-
45	LG	BATT
46	LG	BATT
47	Y	VIGN
48	Y	VIGN

Terminal No.	Color of Wire	Signal Name
11	Y	SENSOR GND
12	LG	CVT FLUID TEMP SENS
13	-	-
14	-	-
15	-	-
16	Y	SEC PRESS SENS
17	LG	PRI PRESS SENS
18	-	-
19	-	-
20	-	-
21	-	-
22	-	-
23	P	CAN-L
24	LG	INPUT SPEED SENS
25	-	-
26	LG	SENS PWR SUPPLY
27	G	-
28	-	-
29	-	-
30	SB	LINE PRESS SOL VALVE
31	-	-

Connector No.	F89
Connector Name	TCM (TRANSMISSION CONTROL MODULE) (EXCEPT FOR MEXICO)
Connector Color	BLACK

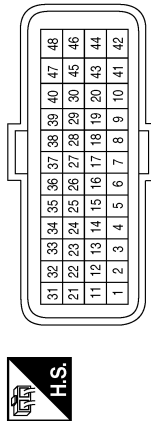

Terminal No.	Color of Wire	Signal Name
1	-	-
2	SB	L RANGE SW
3	-	-
4	Y	D RANGE SW
5	L	N RANGE SW
6	BR	R RANGE SW
7	V	P RANGE SW
8	-	-
9	-	-
10	-	-

Terminal No.	Color of Wire	Signal Name
12	R	-
13	B/Y	-
14	-	-

Terminal No.	Color of Wire	Signal Name
3	Y	-
4	P	-
5	B	-
6	-	-
7	-	-
8	-	-
9	O	-
10	L	-
11	W	-

Connector No.	F207
Connector Name	CONTROL VALVE
Connector Color	-



Terminal No.	Color of Wire	Signal Name
1	GR	-
2	BR	-

ABDIA1543GB

A  
B  
C  
TM  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# CVT CONTROL SYSTEM

< WIRING DIAGRAM >

[CVT: RE0F10E]


Connector No.	B11
Connector Name	JOINT CONNECTOR-B09
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	P	-
2	P	-

Terminal No.	Color of Wire	Signal Name
7	-	-
8	-	-
9	-	-
10	-	-
11	-	-
12	V	-
13	LG	-
14	Y	-
15	-	-
16	-	-
17	-	-
18	Y	-
19	-	-
20	SB	-
21	-	-
22	LG	-

Connector No.	F209
Connector Name	CVT UNIT
Connector Color	BLACK

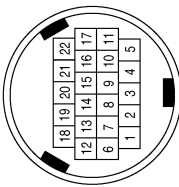


Terminal No.	Color of Wire	Signal Name
1	BR	-
2	LG	-
3	L	-
4	Y	-
5	BR	-
6	-	-

Connector No.	B17
Connector Name	JOINT CONNECTOR-B12
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1	L	-
2	L	-

Connector No.	B16
Connector Name	JOINT CONNECTOR-B11
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
1	P	-
2	P	-

Connector No.	B12
Connector Name	JOINT CONNECTOR-B10
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
1	L	-
2	L	-

ABDIA1544GB



# CVT CONTROL SYSTEM

< WIRING DIAGRAM >

[CVT: RE0F10E]

Terminal No.	Color of Wire	Signal Name
89A	L	-
90A	P	-

Connector No.	B32
Connector Name	WIRE TO WIRE
Connector Color	WHITE


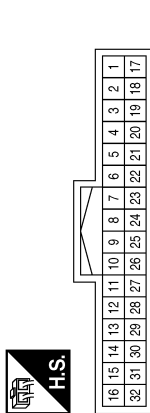
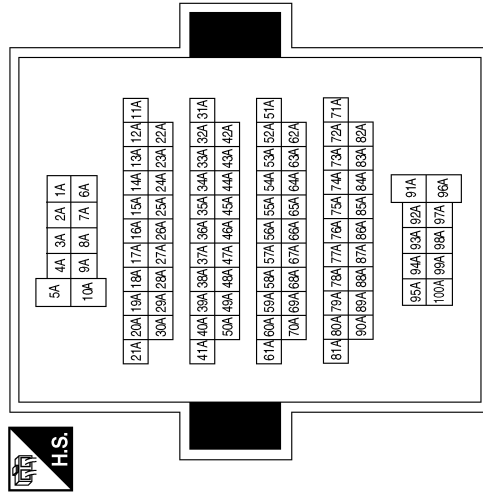


Terminal No.	Color of Wire	Signal Name
18	L	-
19	P	-

Connector No.	B103
Connector Name	JOINT CONNECTOR-B05
Connector Color	WHITE

Connector No.	B102
Connector Name	JOINT CONNECTOR-B14
Connector Color	WHITE

Connector No.	B101
Connector Name	WIRE TO WIRE
Connector Color	WHITE

   

Terminal No.	Color of Wire	Signal Name
1	P	-
2	P	-

Terminal No.	Color of Wire	Signal Name
1	L	-
2	L	-

Terminal No.	Color of Wire	Signal Name
17	L	-
18	P	-

ABDIA1545GB

A  
B  
C  
TM  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# CVT CONTROL SYSTEM

< WIRING DIAGRAM >

[CVT: RE0F10E]

Connector No.	B124
Connector Name	WIRE TO WIRE
Connector Color	WHITE



1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32

Terminal No.	Color of Wire	Signal Name
18	L	-
19	P	-

ABDIA1546GB

# CVT SHIFT LOCK SYSTEM

< WIRING DIAGRAM >

[CVT: RE0F10E]


## CVT SHIFT LOCK SYSTEM

Wiring diagram

INFOID:000000011149312

A  
B  
C  
TM  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

CVT SHIFT LOCK SYSTEM

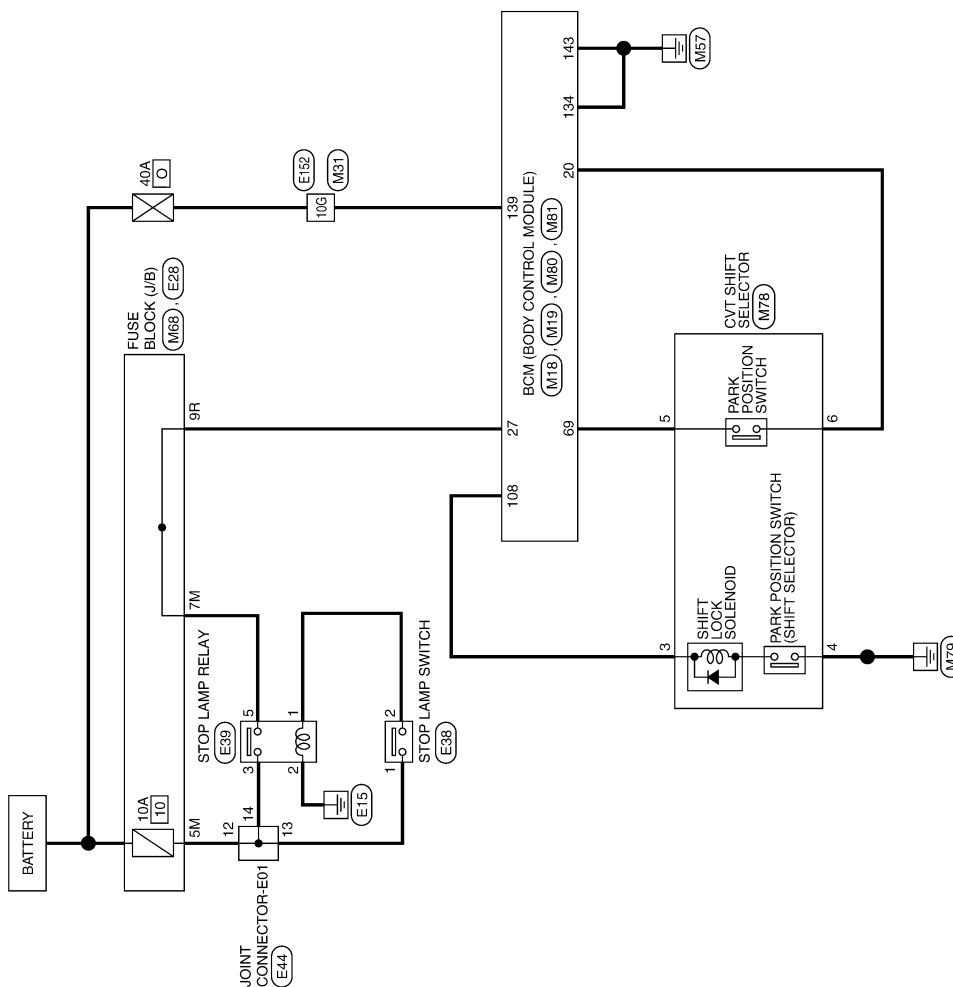

AADWA0264GB

# CVT SHIFT LOCK SYSTEM

< WIRING DIAGRAM >

[CVT: RE0F10E]

## CVT SHIFT LOCK SYSTEM CONNECTORS

Connector No.	M18
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	GREEN



20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1
40	39	38	37	36	35	34	33	32	31	30	29	28	27	26	25	24	23	22	21

Terminal No.	Color of Wire	Signal Name
20	W	SHIFT P
27	G	BRAKE SW LAMP

Connector No.	M19
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BLACK



60	59	58	57	56	55	54	53	52	51	50	49	48	47	46	45	44	43	42	41
80	79	78	77	76	75	74	73	72	71	70	69	68	67	66	65	64	63	62	61

Terminal No.	Color of Wire	Signal Name
69	G	AT DEVICE OUT

Connector No.	M31
Connector Name	WIRE TO WIRE
Connector Color	WHITE



11G	12G	13G	14G	15G	16G	17G	18G	19G	20G	21G
22G	23G	24G	25G	26G	27G	28G	29G	30G		
31G	32G	33G	34G	35G	36G	37G	38G	39G	40G	41G
42G	43G	44G	45G	46G	47G	48G	49G	50G		
51G	52G	53G	54G	55G	56G	57G	58G	59G	60G	61G
62G	63G	64G	65G	66G	67G	68G	69G	70G		
71G	72G	73G	74G	75G	76G	77G	78G	79G	80G	81G
82G	83G	84G	85G	86G	87G	88G	89G	90G		
91G	92G	93G	94G	95G						
96G	97G	98G	99G	100G						

Terminal No.	Color of Wire	Signal Name
10G	W	-

Connector No.	M78
Connector Name	CVT SHIFT SELECTOR
Connector Color	WHITE



1	2	3	4	5	6
7	8	9	10	11	12

Terminal No.	Color of Wire	Signal Name
3	GR	-
4	B	-
5	G	-
6	W	-

Connector No.	M68
Connector Name	FUSE BLOCK (J/B)
Connector Color	BROWN



7R	8R	5R	4R	3R	2R	1R
16R	15R	14R	13R	12R	11R	10R
9R	8R					

Terminal No.	Color of Wire	Signal Name
9R	G	-

Connector No.	M80
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BLACK



116	115	114	113	112	111	110	109	108	107	106	105
128	127	126	125	124	123	122	121	120	119	118	117

Terminal No.	Color of Wire	Signal Name
108	GR	SHIFT LOCK SOLENOID OUT

# CVT SHIFT LOCK SYSTEM

< WIRING DIAGRAM >

 
[CVT: RE0F10E]

Connector No.	E38
Connector Name	STOP LAMP SWITCH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	Y	-
2	W	-

Connector No.	E28
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
5M	Y	-
7M	R	-

Connector No.	M81
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
134	B	GND2
139	W	BAT POWER F/L
143	B	GND1

Connector No.	E44
Connector Name	JOINT CONNECTOR-E01
Connector Color	WHITE

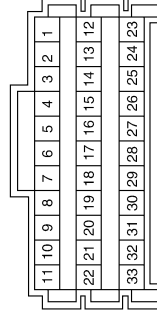

Terminal No.	Color of Wire	Signal Name
12	Y	-
13	Y	-
14	Y	-

Connector No.	E39
Connector Name	STOP LAMP RELAY
Connector Color	BLUE



Terminal No.	Color of Wire	Signal Name
1	W	-
2	B	-
3	Y	-
5	R	-

ABDIA1101GB

A  
B  
C  
TM  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P


# CVT SHIFT LOCK SYSTEM

< WIRING DIAGRAM >

[CVT: RE0F10E]

Terminal No.	Color of Wire	Signal Name
10G	P	-

Connector No.	E152
Connector Name	WIRE TO WIRE
Connector Color	WHITE

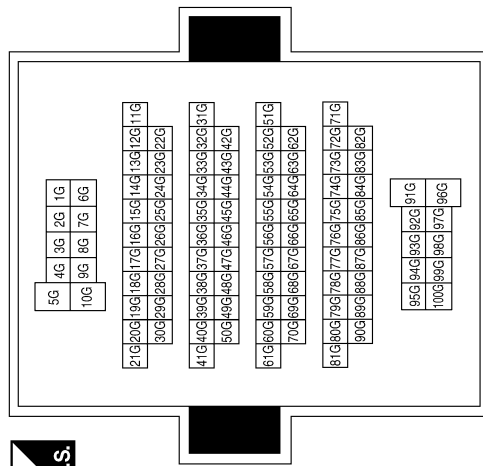

ABDIA1102GB



## BASIC INSPECTION

### DIAGNOSIS AND REPAIR WORK FLOW

#### Work Flow

INFOID:000000011149313

**NOTE:**

“DTC” includes DTC at the 1st trip.

#### 1.OBTAIN INFORMATION ABOUT SYMPTOM

Refer to [TM-82, "Diagnostic Work Sheet"](#) and interview the customer to obtain the malfunction information (conditions and environment when the malfunction occurred) as much as possible when the customer brings in the vehicle.

>> GO TO 2.

#### 2.CHECK DTC

1. Before checking the malfunction, check whether any DTC exists.
2. If DTC exists, perform the following operations.
  - Records the DTCs. (Print out using CONSULT and affix to the Work Order Sheet.)
  - Erase DTCs.
  - Check the relation between the cause found by DTC and the malfunction information from customer. [TM-183, "Symptom Table"](#) can be used effectively.
3. Check the relevant information including STI, etc.

Do malfunction information and DTC exists?

- Malfunction information and DTC exists.>>GO TO 3.
- Malfunction information exists but no DTC.>>GO TO 4.
- No malfunction information, but DTC exists.>>GO TO 5.

#### 3.REPRODUCE MALFUCTION SYSTEM

Check the malfunction described by the customer on the vehicle.  
 Check if the behavior is fail safe or normal operation. Refer to [TM-58, "Fail-safe"](#).  
 Interview sheet can be used effectively when reproduce malfunction conditions. Refer to [TM-82, "Diagnostic Work Sheet"](#).  
 Verify the relationship between the symptom and the conditions in which the malfunction described by the customer occurs.

>> GO TO 5.

#### 4.REPRODUCE MALFUNCTION SYMPTOM

Check the malfunction described by the customer on the vehicle.  
 Check if the behavior is fail safe or normal operation. Refer to [TM-58, "Fail-safe"](#).  
 Interview sheet can be used effectively when reproduce malfunction conditions. Refer to [TM-82, "Diagnostic Work Sheet"](#).  
 Verify the relationship between the symptom and the conditions in which the malfunction described by the customer occurs.

>> GO TO 6.

#### 5.PERFORM “DTC CONFIRMATION PROCEDURE”

Perform “DTC CONFIRMATION PROCEDURE” of the appropriate DTC to check if DTC is detected again. Refer to [TM-62, "DTC Inspection Priority Chart"](#) when multiple DTCs are detected, and then determine the order for performing the diagnosis.

Is any DTC detected?

- YES >> GO TO 7.
- NO >> Follow [GI-47, "Intermittent Incident"](#) to check.

#### 6.IDENTIFY MALFUNCTIONING SYSTEM WITH “DIAGNOSIS CHART BY SYMPTOM”

# DIAGNOSIS AND REPAIR WORK FLOW

[CVT: RE0F10E]

< BASIC INSPECTION >

Use [TM-183. "Symptom Table"](#) from the symptom inspection result in step 4. Then identify where to start performing the diagnosis based on possible causes and symptoms.

>> GO TO 8.

## 7. REPAIR OR REPLACE THE MALFUNCTIONING PARTS

Repair or replace the detected malfunctioning parts.

Reconnect parts or connector after repairing or replacing, and then erase DTC if necessary.

>> GO TO 8.

## 8. FINAL CHECK

Perform "DTC CONFIRMATION PROCEDURE" again to make sure that the repair is correctly performed.

Check that malfunctions are not reproduced when obtaining the malfunction information from the customer, referring to the symptom inspection result in step 3 or 4.

Is DTC or malfunction symptom reproduced?

YES-1 (DTC is reproduced.)>>GO TO 5.

YES-2 (Malfunction is reproduced.)>>GO TO 6.

NO >> Before delivering the vehicle to the customer, make sure that DTC is erased.

## Diagnostic Work Sheet

INFOID:0000000011149314

### DESCRIPTION

There are many operating conditions that may cause a malfunction of the transmission parts. By understanding those conditions properly, a quick and exact diagnosis can be achieved.

In general, perception of a problem varies depending on individuals. Ask the customer about his/her concerns carefully. It is important to understand the phenomenon or status. To systemize all the information for the diagnosis, prepare the question sheet referring to the question points.

In some cases, multiple conditions that appear simultaneously may cause a DTC to be detected.

### KEY POINTS

**WHAT** ..... Vehicle & engine model  
**WHEN** ..... Date, Frequencies  
**WHERE**..... Road conditions  
**HOW** ..... Operating conditions,  
Weather conditions,  
Symptoms

SEF907L

### Worksheet Sample

#### Question sheet

Customer's name	MR/MS	Registration number	Initial year registration	Year	Month	day
		Vehicle type	Chassis No.			
Storage date	Year	Month	day	Engine	Mileage	km/mile
Symptom	<input type="checkbox"/> Vehicle does not start. ( <input type="checkbox"/> R position <input type="checkbox"/> D position <input type="checkbox"/> L position)					
	<input type="checkbox"/> Upshifting does not occur. <input type="checkbox"/> Downshifting does not occur.					
	<input type="checkbox"/> Lock-up malfunction					
	<input type="checkbox"/> Shift point is too high. <input type="checkbox"/> Shift point is too low.					
	<input type="checkbox"/> Shift shock ( <input type="checkbox"/> N⇒D <input type="checkbox"/> Lock-up <input type="checkbox"/> R, D, and L position)					
	<input type="checkbox"/> Slip ( <input type="checkbox"/> N⇒D <input type="checkbox"/> Lock-up <input type="checkbox"/> R, D, and L position)					
	<input type="checkbox"/> Noise <input type="checkbox"/> Vibration					
	When selector lever position is shifted, shift pattern does not change.					
	<input type="checkbox"/> Other ( )					
First occurrence	<input type="checkbox"/> Recently (as from month of year )					
Frequency of occurrence	<input type="checkbox"/> Always <input type="checkbox"/> Under certain conditions <input type="checkbox"/> Sometimes ( time(s)/day)					

# DIAGNOSIS AND REPAIR WORK FLOW

< BASIC INSPECTION >

[CVT: RE0F10E]

## Question sheet

Customer's name	MR/MS	Registration number		Initial year registration	Year    Month day
		Vehicle type		Chassis No.	
Storage date	Year    Month day	Engine		Mileage	km/mile
Climate conditions		Irrelevant			
Weather		<input type="checkbox"/> Clear <input type="checkbox"/> Cloud <input type="checkbox"/> Rain <input type="checkbox"/> Snow <input type="checkbox"/> Others    )			
Temperature		<input type="checkbox"/> Hot <input type="checkbox"/> Warm <input type="checkbox"/> Cool <input type="checkbox"/> Cold <input type="checkbox"/> Temperature (Approx. °C/°F)			
Relative humidity		<input type="checkbox"/> High <input type="checkbox"/> Moderate <input type="checkbox"/> Low			
Transaxle condition		<input type="checkbox"/> In cold-start <input type="checkbox"/> During warm-up (approx. °C/°F) <input type="checkbox"/> After warm-up <input type="checkbox"/> Engine speed:                  rpm			
Road conditions		<input type="checkbox"/> Urban area <input type="checkbox"/> Suburb area <input type="checkbox"/> Highway <input type="checkbox"/> Mountainous road (uphill or downhill)			
Operating condition, etc.		Irrelevant <input type="checkbox"/> When engine starts <input type="checkbox"/> During idling <input type="checkbox"/> During driving <input type="checkbox"/> During acceleration <input type="checkbox"/> At constant speed driving <input type="checkbox"/> During deceleration <input type="checkbox"/> During cornering (RH curve or LH curve)			
Other conditions					

A  
B  
C  
TM  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

## ADDITIONAL SERVICE WHEN REPLACING TCM

< BASIC INSPECTION >

[CVT: RE0F10E]

### ADDITIONAL SERVICE WHEN REPLACING TCM

#### Description

INFOID:000000011149315

Always perform the following items when the TCM is replaced.

#### SAVING AND WRITING OF TCM DATA

- TCM performs accurate control by retrieving data (inherent characteristic value) of each solenoid. For this reason, it is necessary to save data of current TCM in CONSULT before replacing the TCM. After this, the saved data must be written in new TCM.

#### Work Procedure

INFOID:000000011149316

#### **CAUTION:**

When replacing TCM together with transaxle assembly, perform “ADDITIONAL SERVICE WHEN REPLACING TRANSAXLE ASSEMBLY”. Refer to [TM-85, "Work Procedure"](#).

#### 1. SAVE THE TCM DATA

##### **NOTE:**

Save necessary data stored in TCM in CONSULT according to the following instructions:

##### **Ⓟ With CONSULT**

1. Turn ignition switch OFF and wait for 10 seconds.
2. Turn ignition switch ON.
3. Select “Work Support” in “TRANSMISSION”.
4. Select “READ IP CHARA - REPLACEMENT TCM”.
5. Import data according to the instructions on the CONSULT screen.

>> GO TO 2.

#### 2. REPLACE THE TCM

1. Turn ignition switch OFF and wait for 10 seconds.
2. Replace the TCM. Refer to [TM-198, "Removal and Installation"](#).

>> GO TO 3.

#### 3. WRITE THE TCM DATA

##### **NOTE:**

Write data saved in CONSULT into a new TCM according to the following instructions:

##### **Ⓟ With CONSULT**

1. Turn ignition switch OFF and wait for 10 seconds.
2. Turn ignition switch ON.
3. Select “Work Support” in “TRANSMISSION”.
4. Select “WRITE IP CHARA - REPLACEMENT TCM”.
5. Write data saved in CONSULT in TCM according to the instructions on the CONSULT screen.

>> WORK END

# ADDITIONAL SERVICE WHEN REPLACING TRANSAXLE ASSEMBLY

< BASIC INSPECTION >

[CVT: RE0F10E]

## ADDITIONAL SERVICE WHEN REPLACING TRANSAXLE ASSEMBLY

### Description

INFOID:000000011149317

Perform the following work after the transaxle assembly is replaced.

#### ERASING AND WRITING TCM DATA

- TCM performs accurate control by retrieving data (inherent characteristic value) of each solenoid. For this reason, after replacing transaxle assembly, it is necessary to erase data stored in TCM and write new data.

#### ERASING OF CVT FLUID DEGRADATION LEVEL DATA


- TCM records the degradation level of the CVT fluid calculated from the vehicle driving status. Therefore, if the transaxle assembly is replaced, it is necessary to erase the CVT fluid degradation level data recorded by TCM.

### Work Procedure

INFOID:000000011149318

#### 1. CHECK THE SERIAL NUMBER (PART 1)

Write down the serial number of new transaxle assembly.

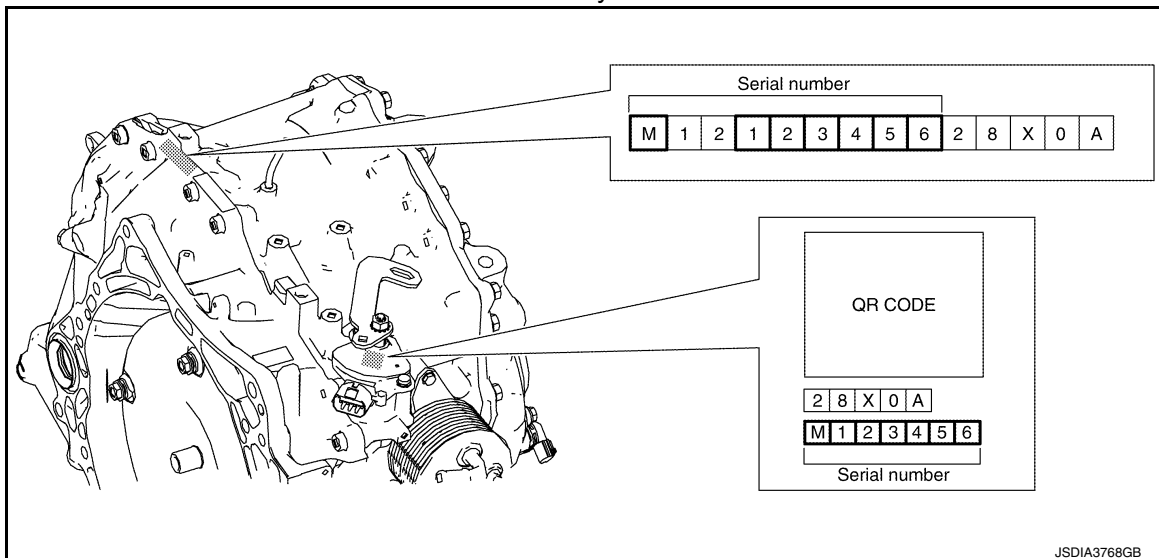

>> GO TO 2.

#### 2. CHECK THE SERIAL NUMBER (PART 2)

##### With CONSULT

1. Turn ignition switch ON.
2. Insert the attached CD into CONSULT.
3. Select "Work Support" in "TRANSMISSION".
4. Select "WRITE IP CHARA - REPLACEMENT AT/CVT".
5. Check that the serial number displayed on CONSULT screen and those written in the memo agree.

#### CAUTION:

**Never perform writing procedure.**

6. Go back to MENU of "Work Support".

>> GO TO 3.

#### 3. INITIALIZE TCM

##### With CONSULT

1. Set parking brake.
2. Select "ERASE MEMORY DATA".
3. Touch "Start" according to the instructions on the CONSULT screen.

Is "COMPLETED" displayed?

## ADDITIONAL SERVICE WHEN REPLACING TRANSAXLE ASSEMBLY

< BASIC INSPECTION >

[CVT: RE0F10E]

YES >> GO TO 4.

NO >> Turn ignition switch OFF and wait for a minimum of 10 seconds then perform the work again.

### 4. WRITE THE DATA

---

**NOTE:**

Write data of new solenoid in TCM according to the following instructions:

 **With CONSULT**

1. Shift the selector lever to the P position.
2. Turn ignition switch OFF and wait for 10 seconds.
3. Turn ignition switch ON.
4. Select "Work Support" in "TRANSMISSION".
5. Select "WRITE IP CHARA - REPLACEMENT AT/CVT".
6. Write data in TCM according to the instructions on the CONSULT screen.

**NOTE:**

When writing is complete, the shift position indicator of the combination meter displays P.

>> GO TO 5.

### 5. ERASE CVT FLUID DEGRADATION LEVEL DATA

---

1. Select "WORK SUPPORT" in "TRANSMISSION".
2. Select "CONFORM CVTF DETERIORTN".
3. Touch "Clear".

>> WORK END

# ADDITIONAL SERVICE WHEN REPLACING TCM AND TRANSAXLE ASSEMBLY

< BASIC INSPECTION >

[CVT: RE0F10E]

## ADDITIONAL SERVICE WHEN REPLACING TCM AND TRANSAXLE ASSEMBLY

### Description

INFOID:000000011463886

When replacing TCM and transaxle assembly simultaneously, perform the following work.

#### TCM PROGRAMMING

- Since vehicle specifications are not yet written in a new TCM, it is necessary to write them with CONSULT.

#### CAUTION:

When replacing TCM, save TCM data on CONSULT before removing TCM.

#### WRITING TCM DATA

- TCM performs accurate control by retrieving data (inherent characteristic value) of each solenoid. For this reason, after replacing TCM and transaxle assembly, it is necessary to write new data in TCM.

### Work Procedure

INFOID:000000011463887

#### 1. SAVE TCM DATA (VEHICLE SPECIFICATIONS)

##### With CONSULT

1. Turn ignition switch OFF.
2. Connect all of disconnected connectors.
3. Turn ignition switch ON.
4. Select "Re/programming, Configuration".
5. Select "AT/CVT".

#### NOTE:

If "AT/CVT" is not displayed and TCM data cannot be saved on CONSULT, GO TO 2.

6. Select "Programming".
7. Save TCM data on CONSULT according to the CONSULT display.


>> GO TO 2.

#### 2. REPLACE TCM AND TRANSAXLE ASSEMBLY

1. Turn ignition switch OFF and wait for 10 seconds.
2. Replace TCM and transaxle assembly. Refer to [TM-198. "Removal and Installation"](#) (TCM), [TM-218. "Removal and Installation"](#) (Transaxle assembly).

#### CAUTION:

Write down the serial number of new transaxle assembly.

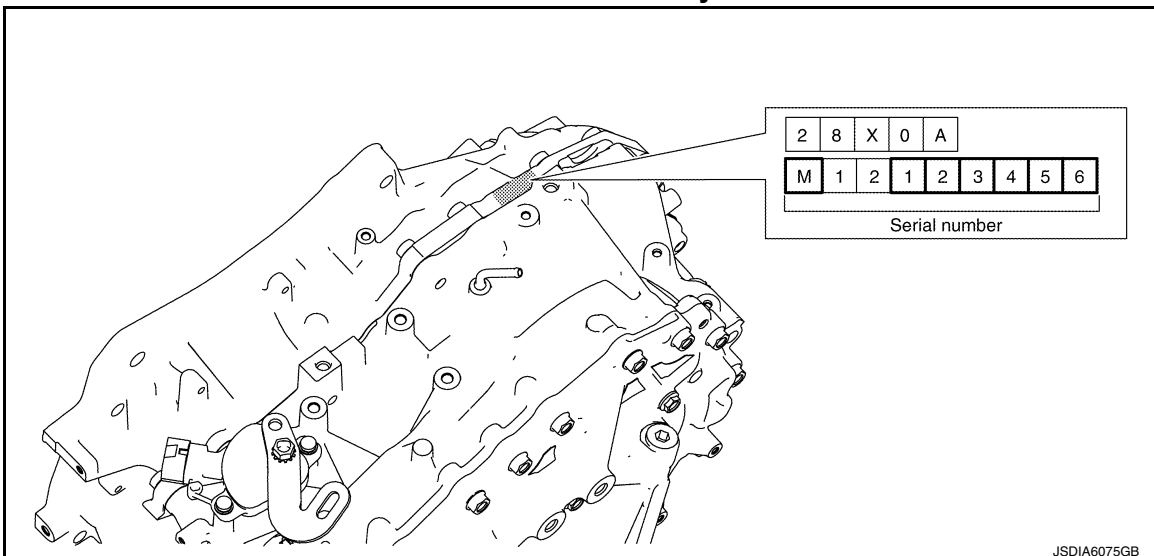

>> GO TO 3.

# ADDITIONAL SERVICE WHEN REPLACING TCM AND TRANSAXLE ASSEMBLY

< BASIC INSPECTION >

[CVT: RE0F10E]

---

## 3. WRITE TCM DATA (VEHICLE SPECIFICATIONS)

---

### NOTE:

Write data saved in CONSULT into a new TCM according to the following instructions:

#### Ⓟ With CONSULT

1. Select "Programming".
2. Perform programming according to the CONSULT display.

>> GO TO 4.

---

## 4. WRITE TCM DATA (IP CHARACTERISTICS VALUE)

---

### NOTE:

Write data of new solenoid in TCM according to the following instructions:

#### Ⓟ With CONSULT

#### CAUTION:

**When the work is interrupted, obtain data again from the supplied CD.**

1. Shift the selector lever to the P position.
2. Turn ignition switch OFF and wait for 10 seconds.
3. Turn ignition switch ON.
4. Insert the supplied CD into CONSULT.
5. Select "Work Support" in "TRANSMISSION".
6. Select "WRITE IP CHARA - REPLACEMENT AT/CVT".
7. Check that the serial number displayed on CONSULT screen and those written in the memo agree.
8. Write data in TCM according to the instructions on the CONSULT screen.

#### NOTE:

When writing is complete, the shift position indicator of the combination meter displays P.

>> WORK END



## CVT FLUID COOLER SYSTEM

### Cleaning

INFOID:000000011149319

Whenever an automatic transaxle is repaired, overhauled, or replaced, the CVT fluid cooler mounted in the radiator must be inspected and cleaned.

Metal debris and friction material, if present, can be trapped or be deposited in the CVT fluid cooler. This debris can contaminate the newly serviced CVT or, in severe cases, can block or restrict the flow of CVT fluid. In either case, malfunction of the newly serviced CVT may occur.

Debris, if present, may deposit as CVT fluid enters the cooler inlet. It will be necessary to back flush the cooler through the cooler outlet in order to flush out any built up debris.


### CVT FLUID COOLER CLEANING PROCEDURE

1. Position an oil pan under the transaxle's inlet and outlet cooler hoses.
2. Identify the inlet and outlet fluid cooler hoses.
3. Disconnect the fluid cooler inlet and outlet rubber hoses from the steel cooler tubes or bypass valve.

**NOTE:**

Replace the cooler hoses if rubber material from the hose remains on the tube fitting.

4. Allow any CVT fluid that remains in the cooler hoses to drain into the oil pan.

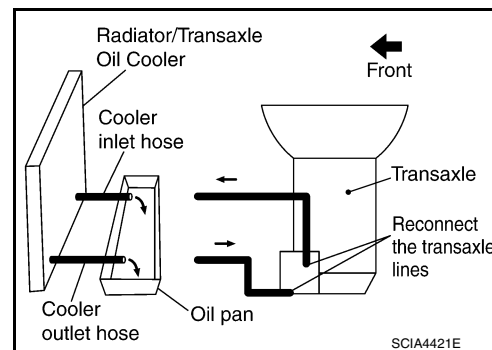


5. Insert the extension adapter hose of a can of Transmission Cooler Cleaner (Nissan P/N 999MP-AM006) into the cooler outlet hose.

**CAUTION:**

- **Wear safety glasses and rubber gloves when spraying the Transmission Cooler Cleaner.**
- **Spray Transmission Cooler Cleaner only with adequate ventilation.**
- **Avoid contact with eyes and skin.**
- **Never breath vapors or spray mist.**

6. Hold the hose and can as high as possible and spray Transmission Cooler Cleaner in a continuous stream into the cooler outlet hose until CVT fluid flows out of the cooler inlet hose for 5 seconds.

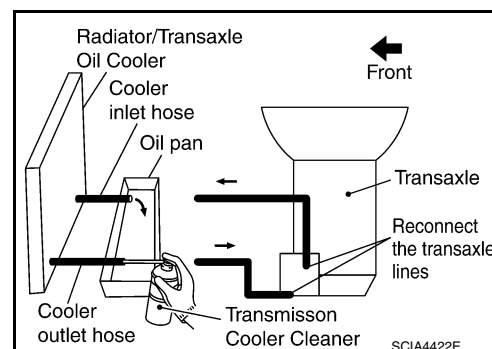

7. Insert the tip of an air gun into the end of the cooler outlet hose.
8. Wrap a shop rag around the air gun tip and end of the cooler outlet hose.

9. Blow compressed air regulated to 5 to 9 kg/cm<sup>2</sup> (70 to 130 psi) through the cooler outlet hose for 10 seconds to force out any remaining CVT fluid.

10. Repeat steps 5 through 9 three additional times.

11. Position an oil pan under the banjo bolts that connect the CVT fluid cooler steel lines to the transaxle.


12. Remove the banjo bolts.

13. Flush each steel line from the cooler side back toward the transaxle by spraying Transmission Cooler Cleaner in a continuous stream for 5 seconds.

14. Blow compressed air regulated to 5 to 9 kg/cm<sup>2</sup> (70 to 130 psi) through each steel line from the cooler side back toward the transaxle for 10 seconds to force out any remaining CVT fluid.

15. Ensure all debris is removed from the steel cooler lines.

16. Ensure all debris is removed from the banjo bolts and fittings.

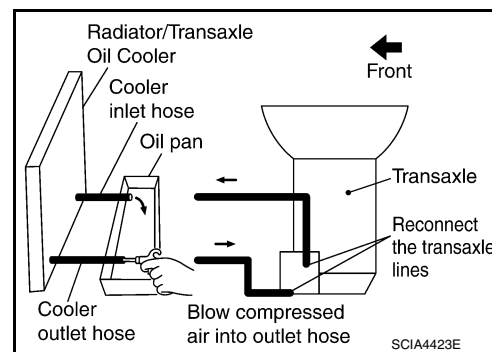

# CVT FLUID COOLER SYSTEM

< BASIC INSPECTION >

[CVT: RE0F10E]

17. Perform "CVT FLUID COOLER DIAGNOSIS PROCEDURE".

## CVT FLUID COOLER DIAGNOSIS PROCEDURE

### NOTE:

Insufficient cleaning of the cooler inlet hose exterior may lead to inaccurate debris identification.



1. Position an oil pan under the transaxle's inlet and outlet cooler hoses.
2. Clean the exterior and tip of the cooler inlet hose.

3. Insert the extension adapter hose of a can of Transmission Cooler Cleaner (Nissan P/N 999MP-AM006) into the cooler outlet hose.


### CAUTION:

- Wear safety glasses and rubber gloves when spraying the Transmission Cooler Cleaner.
- Spray Transmission Cooler Cleaner only with adequate ventilation.
- Avoid contact with eyes and skin.
- Never breath vapors or spray mist.

4. Hold the hose and can as high as possible and spray Transmission Cooler Cleaner in a continuous stream into the cooler outlet hose until CVT fluid flows out of the cooler inlet hose for 5 seconds.
5. Tie a common white, basket-type coffee filter to the end of the cooler inlet hose.

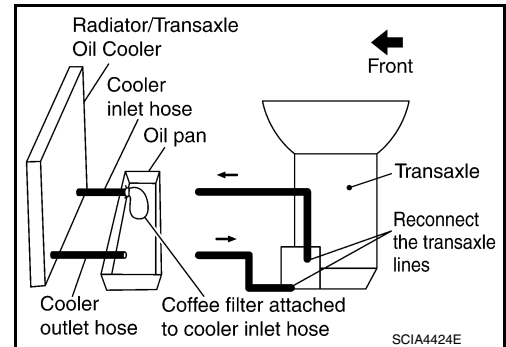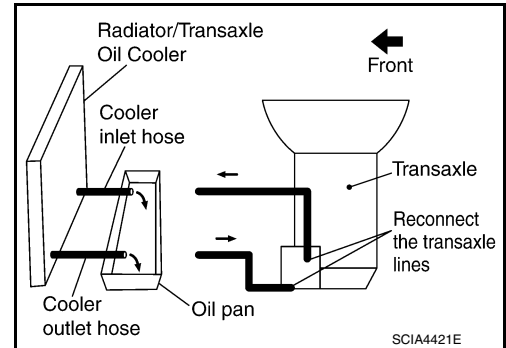


6. Insert the tip of an air gun into the end of the cooler outlet hose.
7. Wrap a shop rag around the air gun tip and end of cooler outlet hose.
8. Blow compressed air regulated to 5 to 9 kg/cm<sup>2</sup> (70 to 130 psi) through the cooler outlet hose to force any remaining CVT fluid into the coffee filter.
9. Remove the coffee filter from the end of the cooler inlet hose.
10. Perform "CVT FLUID COOLER INSPECTION PROCEDURE".

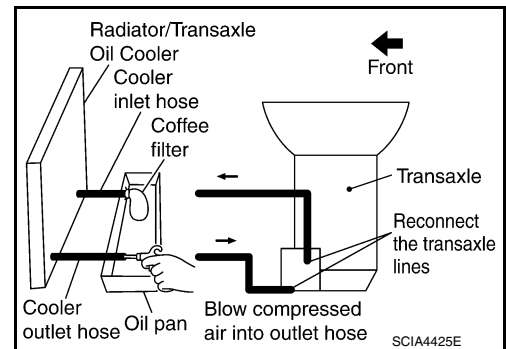

## CVT FLUID COOLER INSPECTION PROCEDURE

1. Inspect the coffee filter for debris.
  - a. If small metal debris less than 1 mm (0.040 in) in size or metal powder is found in the coffee filter, this is normal. If normal debris is found, the CVT fluid cooler/radiator can be reused and the procedure is ended.

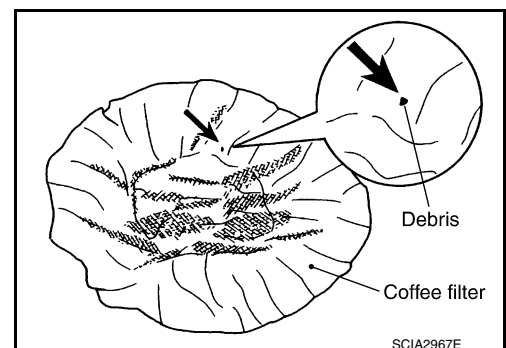


# CVT FLUID COOLER SYSTEM

< BASIC INSPECTION >

[CVT: RE0F10E]

- b. If one or more pieces of debris are found that are over 1 mm (0.040 in) in size and/or peeled clutch facing material is found in the coffee filter, the fluid cooler is not serviceable. The radiator/ fluid cooler must be replaced and the inspection procedure is ended.

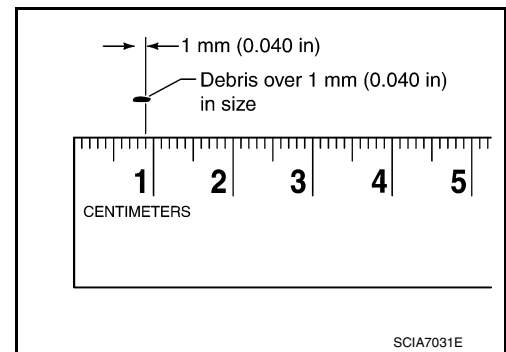

A  
B  
C

TM

## CVT FLUID COOLER FINAL INSPECTION

After performing all procedures, ensure that all remaining oil is cleaned from all components.

E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# STALL TEST

< BASIC INSPECTION >

[CVT: RE0F10E]

## STALL TEST

### Work Procedure

INFOID:000000011149320

### INSPECTION

1. Check the engine oil level. Replenish if necessary. Refer to [LU-8, "Inspection"](#).
2. Check for leak of the CVT fluid. Refer to [TM-188, "Inspection"](#).
3. Drive for about 10 minutes to warm up the vehicle so that the CVT fluid temperature is 50 to 80°C (122 to 176°F).
4. Be sure to apply the parking brake and block the tires.
5. Start the engine, depress the brake pedal and shift the selector lever to "D" position.
6. While depressing the brake pedal, depress the accelerator pedal gradually.
7. Read the stall speed quickly and release your foot from the accelerator pedal quickly.

**CAUTION:**

**Do not depress the accelerator pedal for 5 seconds or more during the test.**

**Stall speed** : Refer to [TM-223, "Stall Speed"](#).

8. Shift the selector lever to "N" position.
9. Cool the CVT fluid.  
**CAUTION:**  
**Run the engine with the idle speed for at least 1 minute.**
10. Put the selector lever to the R position and perform Step 6 to Step 9 again.

### NARROWING-DOWN MALFUNCTIONING PARTS

	Selector lever position		Possible cause
	D	R	
Stall speed	H	O	• Forward clutch
	O	H	• Reverse brake
	L	L	• Engine • Torque converter one way clutch
	H	H	• Line pressure is low. • Primary pulley • Secondary pulley • Chain belt

O: Within the stall speed standard value.

H: Stall speed is higher than the standard value.

L: Stall speed is lower than the standard value.


## CVT POSITION

## Inspection and Adjustment

INFOID:000000011149321

## INSPECTION

1. Turn ON the ignition switch with the shift selector at the "P" position.
2. Press the shift selector button with the brake pedal depressed, and confirm that the shift selector can be moved to positions other than "P". Also confirm that movement is not allowed from the "P" position to other position without depressing the brake pedal.
3. Move the shift selector and check for "excessive effort", "sticking", "noise" or "rattle".
4. Confirm that shift selector stops at each position with the feel of engagement when it is moved through all the positions. Check whether or not the actual position the shift selector is in matches the position shown by the transaxle body.
5. Make sure that the shift selector is moved to all the shift positions in the manner shown.
  - (A): Press shift selector button to operate shift selector, while depressing the brake pedal.
  - (B): Press shift selector button to operate shift selector.
  - (C): Shift selector can be operated without pressing the shift selector button.
6. When the shift selector button is pressed without applying forward/backward force to the shift selector at "P", "R", "N", "D" or "Ds" positions, there should be no "sticking" on the shift selector button operation.
7. Check that the back-up lamps do not illuminate when the shift selector is in the "P" position.
8. Check that the engine can be started with the shift selector in the "P" and "N" positions only.
9. Check that the transaxle is locked completely when the shift selector is in the "P" position.

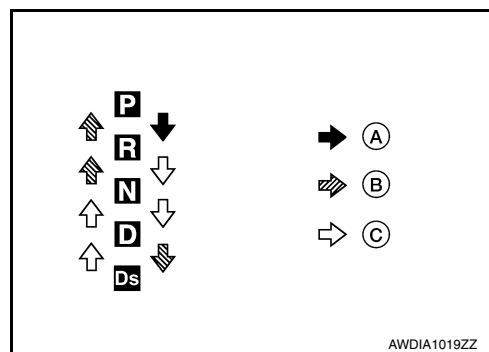


## ADJUSTMENT

1. Move the selector lever to the "P" position.
 

**CAUTION:**  
Rotate the wheels at least a quarter turn and be certain the Park position mechanism is fully engaged.
2. Loosen control cable nut (A) and set manual lever (B) to the "P" position.
 

**CAUTION:**  
Do not apply force to the manual lever.
3. Tighten control cable nut to the specified torque. Refer to [TM-194](#). "Exploded View".
 

**CAUTION:**  
Hold the manual lever securely in the "P" position when tightening control cable nut.

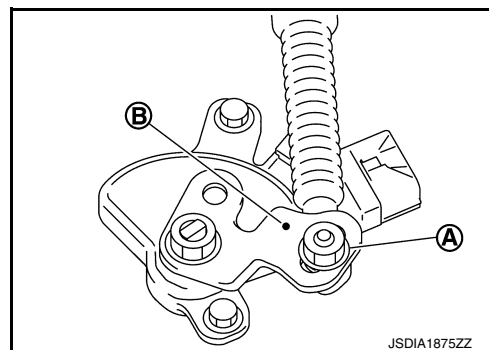

# U0073 COMMUNICATION BUS A OFF

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10E]

## DTC/CIRCUIT DIAGNOSIS

### U0073 COMMUNICATION BUS A OFF

#### DTC Logic

INFOID:000000011149322

#### DTC DETECTION LOGIC

DTC	CONSULT screen terms (Trouble diagnosis content)	DTC detection condition	Possible causes
U0073	COMM BUS A OFF (Control Module Communication Bus A Off)	TCM communication blockage lasts for 2 seconds or more when turning ON the ignition switch. (Communication not established.)	Harness or connector (CAN communication line is error)

#### DTC CONFIRMATION PROCEDURE

##### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

##### 2. PERFORM DTC CONFIRMATION PROCEDURE

1. Start the engine and wait for at least 5 seconds.
2. Check the DTC.

Is "U0073" detected?

- YES >> Go to [TM-94, "Diagnosis Procedure"](#).
- NO >> INSPECTION END

#### Diagnosis Procedure

INFOID:000000011149323

For the diagnosis procedure, refer to [LAN-21, "Trouble Diagnosis Flow Chart"](#).

# U0100 LOST COMMUNICATION (ECM A)

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10E]

## U0100 LOST COMMUNICATION (ECM A)

### DTC Logic

INFOID:0000000011149324

### DTC DETECTION LOGIC

DTC	CONSULT screen terms (Trouble diagnosis content)	DTC detection condition	Possible causes
U0100	LOST COMM (ECM A) (Lost Communication With ECM/PCM A)	When the ignition switch is ON, TCM is unable to receive the CAN communications signal from ECM continuously for 2 seconds or more.	<ul style="list-style-type: none"><li>• ECM</li><li>• Harness or connector (CAN communication line is open or shorted)</li></ul>

### DTC CONFIRMATION PROCEDURE

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2. PERFORM DTC CONFIRMATION PROCEDURE

1. Start the engine and wait for at least 5 seconds.
2. Check the DTC.

Is "U0100" detected?

- YES >> Go to [TM-95, "Diagnosis Procedure"](#).  
NO >> INSPECTION END

### Diagnosis Procedure

INFOID:0000000011149325

For the diagnosis procedure, refer to [LAN-21, "Trouble Diagnosis Flow Chart"](#).

# U0102 LOST COMMUNICATION (TRANSFER)

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10E]

## U0102 LOST COMMUNICATION (TRANSFER)

### DTC Logic

INFOID:000000011149326

### DTC DETECTION LOGIC

DTC	CONSULT screen terms (Trouble diagnosis content)	DTC detection condition	Possible causes
U0140	LOST COMM (TRANSFER) (Lost Communication With Transfer Case Control Mod- ule)	When the ignition switch is ON, TCM is unable to receive the CAN communications signal from 4WD control unit continuously for 2 seconds or more.	<ul style="list-style-type: none"><li>• 4WD control unit</li><li>• Harness or connector (CAN communication line is open or shorted)</li></ul>

### DTC CONFIRMATION PROCEDURE

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2. PERFORM DTC CONFIRMATION PROCEDURE

##### With CONSULT

1. Start the engine and wait for at least 5 seconds.
2. Check the DTC.

##### Is "U0102" detected?

- YES >> Go to [TM-96, "Diagnosis Procedure"](#).  
NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000011149327

For the diagnosis procedure, refer to [LAN-21, "Trouble Diagnosis Flow Chart"](#).



# U0140 LOST COMMUNICATION (BCM)

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10E]

## U0140 LOST COMMUNICATION (BCM)

### DTC Logic

INFOID:000000011149328

### DTC DETECTION LOGIC

DTC	CONSULT screen terms (Trouble diagnosis content)	DTC detection condition	Possible causes
U0140	LOST COMM (BCM) (Lost Communication With Body Control Module)	When the ignition switch is ON, TCM is unable to receive the CAN communications signal from BCM continuously for 2 seconds or more.	<ul style="list-style-type: none"><li>• BCM</li><li>• Harness or connector (CAN communication line is open or shorted)</li></ul>

### DTC CONFIRMATION PROCEDURE

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2. PERFORM DTC CONFIRMATION PROCEDURE

##### With CONSULT

1. Start the engine and wait for at least 5 seconds.
2. Check the DTC.

##### Is "U0140" detected?

- YES >> Go to [TM-97, "Diagnosis Procedure"](#).  
NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000011149329

For the diagnosis procedure, refer to [LAN-21, "Trouble Diagnosis Flow Chart"](#).

# U0141 LOST COMMUNICATION (BCM A)

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10E]

## U0141 LOST COMMUNICATION (BCM A)

### DTC Logic

INFOID:000000011149330

### DTC DETECTION LOGIC

DTC	CONSULT screen terms (Trouble diagnosis content)	DTC detection condition	Possible causes
U0141	LOST COMM (BCM A) (Lost Communication With Body Control Module A)	When the ignition switch is turned ON, TCM continues no reception of the CAN communication signal from IPDM E/R for 2 seconds or more.	<ul style="list-style-type: none"><li>• IPDM E/R</li><li>• Harness or connector (CAN communication line is open or shorted)</li></ul>

### DTC CONFIRMATION PROCEDURE

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2. PERFORM DTC CONFIRMATION PROCEDURE

##### With CONSULT

1. Start the engine and wait for at least 5 seconds.
2. Check the DTC.

##### Is "U0141" detected?

- YES >> Go to [TM-98, "Diagnosis Procedure"](#).  
NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000011149331

For the diagnosis procedure, refer to [LAN-21, "Trouble Diagnosis Flow Chart"](#).

# U0155 LOST COMMUNICATION (IPC)

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10E]

## U0155 LOST COMMUNICATION (IPC)

### DTC Logic

INFOID:000000011149332

### DTC DETECTION LOGIC

DTC	CONSULT screen terms [Trouble diagnosis content]	DTC detection condition	Possible causes
U0155	LOST COMM (IPC) [Lost Communication With Instrument Panel Cluster (IPC) Control Module]	When the ignition switch is ON, TCM is unable to receive the CAN communications signal from the combination meter continuously for 2 seconds or more.	<ul style="list-style-type: none"><li>• Combination meter</li><li>• Harness or connector (CAN communication line is open or shorted)</li></ul>

### DTC CONFIRMATION PROCEDURE

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2. PERFORM DTC CONFIRMATION PROCEDURE

1. Start the engine and wait for at least 5 seconds.
2. Check the DTC.

Is "U0155" detected?

- YES >> Go to [TM-99, "Diagnosis Procedure"](#).  
NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000011149333

For the diagnosis procedure, refer to [LAN-21, "Trouble Diagnosis Flow Chart"](#).

# U0300 CAN COMMUNICATION DATA

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10E]

## U0300 CAN COMMUNICATION DATA

### DTC Logic

INFOID:0000000011149334

### DTC DETECTION LOGIC

DTC	CONSULT screen terms (Trouble diagnosis content)	DTC detection condition	Possible causes
U0300	CAN COMM DATA (Internal Control Module Software Incompatibility)	When the ignition switch is ON, the data length transmitted from each control unit is shorter than the specified length and the status continues for 2 seconds or more.	Control unit other than TCM

### DTC CONFIRMATION PROCEDURE

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2. CHECK DTC DETECTION

##### With CONSULT

1. Start the engine and wait for 5 seconds or more.
2. Check the DTC.

Is "U0300" detected?

- YES >> Go to [TM-100, "Diagnosis Procedure"](#).  
NO >> INSPECTION END

### Diagnosis Procedure

INFOID:0000000011149335

#### 1. CONTROL UNIT CHECK

Check the number of control units replaced before "U0300" is detected.

Is one control unit replaced?

- YES >> The specification of the control unit replaced may be incorrect. Check the part number and the specification.  
NO >> GO TO 2.

#### 2. CONTROL UNIT CHECK

##### With CONSULT

1. Remove one of the control unit replaced.
2. Assemble the old control unit before replacement.
3. Turn ignition switch ON, and wait for 2 seconds or more.
4. Select "Self Diagnostic Results" in "TRANSMISSION".

Is "U0300" detected?

- YES >> Turn OFF the ignition switch and check other control units in the same manner.  
NO >> The specification of the control unit removed may be incorrect. Check the part number and the specification.

# U1000 CAN COMM CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10E]

## U1000 CAN COMM CIRCUIT

### Description

INFOID:0000000011149336

CAN (Controller Area Network) is a serial communication line for real-time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent malfunction detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independently). In CAN communication, control units are connected with 2 communication lines (CAN-H line, CAN-L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

### DTC Logic

INFOID:0000000011149337

### DTC DETECTION LOGIC

DTC	CONSULT screen terms (Trouble diagnosis content)	DTC detection condition	Possible causes
U1000	CAN COMM CIRCUIT (CAN Communication Line)	When the ignition switch is ON, TCM cannot send the CAN communication signal continuously for 2 seconds or more.	Harness or connector (CAN communication line is open or shorted)

### DTC CONFIRMATION PROCEDURE

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2. CHECK DTC DETECTION

##### With CONSULT

1. Start the engine and wait for at least 5 seconds.
2. Check the DTC.

Is "U1000" detected?

- YES >> Go to [TM-101, "Diagnosis Procedure"](#).
- NO >> INSPECTION END

### Diagnosis Procedure

INFOID:0000000011149338

For the diagnosis procedure, refer to [LAN-21, "Trouble Diagnosis Flow Chart"](#).

# U1117 LOST COMMUNICATION (ABS)

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10E]

## U1117 LOST COMMUNICATION (ABS)

### DTC Logic

INFOID:000000011149339

### DTC DETECTION LOGIC

DTC	CONSULT screen terms (Trouble diagnosis content)	DTC detection condition	Possible causes
U1117	LOST COMM (ABS) (Lost Communication With ABS)	When the ignition switch is ON, TCM is unable to receive the CAN communications signal from ABS actuator and electric unit (control unit) continuously for 2 seconds or more.	<ul style="list-style-type: none"><li>• ABS actuator and electric unit (control unit)</li><li>• Harness or connector (CAN communication line is open or shorted)</li></ul>

### DTC CONFIRMATION PROCEDURE

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2. PERFORM DTC CONFIRMATION PROCEDURE

##### With CONSULT

1. Start the engine and wait for 5 seconds or more.
2. Check the DTC.

Is "U1117" detected?

- YES >> Go to [TM-102, "Diagnosis Procedure"](#).  
NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000011149340

For the diagnosis procedure, refer to [LAN-21, "Trouble Diagnosis Flow Chart"](#).

P062F EEPROM

Description

INFOID:0000000011149341

TCM compares the calculated value stored in the flash ROM with the value stored in TCM. If the calculated value does not agree with the stored value, TCM judges this as a malfunction.

DTC Logic

INFOID:0000000011149342

DTC DETECTION LOGIC

DTC	CONSULT screen terms (Trouble diagnosis content)	DTC detection condition	Possible causes
P062F	EEPROM (Internal Control Module EEPROM Error)	Flash ROM error is detected when turning ON the ignition switch.	<ul style="list-style-type: none"> <li>• TCM (Flash ROM)</li> <li>• Harness or connector [TCM power supply (back-up) circuit is open or shorted]</li> </ul>

DTC CONFIRMATION PROCEDURE

1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

1. Start the engine.
2. Check the DTC.

Is "P062F" detected?

- YES >> Go to [TM-103, "Diagnosis Procedure"](#).
- NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000011149343

1. CHECK INTERMITTENT INCIDENT

Refer to [GI-47, "Intermittent Incident"](#).

Is the inspection result normal?

- YES >> Replace the TCM. Refer to [TM-198, "Removal and Installation"](#).
- NO >> Repair or replace malfunctioning parts.

# P0705 TRANSMISSION RANGE SENSOR A

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10E]

## P0705 TRANSMISSION RANGE SENSOR A

### DTC Logic

INFOID:0000000011149344

### DTC DETECTION LOGIC

DTC	CONSULT screen terms (Trouble diagnosis content)	DTC detection condition	Possible causes
P0705	T/M RANGE SENSOR A [Transmission Range Sensor A Circuit (PRNDL Input)]	When all of the following conditions are satisfied and this state is maintained for 2 seconds: <ul style="list-style-type: none"> <li>Two or more range signals simultaneously stay ON continuously</li> <li>TCM power supply voltage: More than 11 V</li> </ul>	<ul style="list-style-type: none"> <li>Harness or connector (Short circuit between transmission range switch and TCM)</li> <li>Transmission range switch</li> </ul>

### DTC CONFIRMATION PROCEDURE

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2. CHECK DTC DETECTION

- Turn ignition switch ON.
- Shift the selector lever through entire positions from "P" to "L". (Hold the selector lever at each position for 5 seconds or more.)
- Check the first trip DTC.

Is "P0705" detected?

- YES >> Go to [TM-104, "Diagnosis Procedure"](#).  
 NO >> INSPECTION END

### Diagnosis Procedure

INFOID:0000000011149345

#### 1. CHECK TCM INPUT SIGNALS

##### Ⓟ With CONSULT

- Turn ignition switch ON.
- Select "Data Monitor" in "TRANSMISSION".
- Select "D POSITION SW", "N POSITION SW", "R POSITION SW", "P POSITION SW" and "L RANGE SW".
- Shift the selector lever through entire positions from "P" to "L" and check ON/OFF of each monitor item.

Monitor item	Condition	Condition
D POSITION SW	Selector lever: "D" position	On
	Other than the above	Off
N POSITION SW	Selector lever: "N" position	On
	Other than the above	Off
R POSITION SW	Selector lever: "R" position	On
	Other than the above	Off
P POSITION SW	Selector lever: "P" position	On
	Other than the above	Off
L POSITION SW	Selector lever: "L" position	On
	Other than the above	Off

##### ⓧ Without CONSULT

- Turn ignition switch OFF.
- Disconnect TCM connector.



# P0705 TRANSMISSION RANGE SENSOR A

[CVT: RE0F10E]

## < DTC/CIRCUIT DIAGNOSIS >

3. Turn ignition switch ON.
4. Shift the selector lever from "P" to "L" and check voltage between TCM harness connector terminals and ground.

+		-	Condition	Voltage
TCM				
Connector	Terminal			
F15	2	Ground	Selector lever: "L" position	10 – 16 V
			Other than the above	Approx. 0 V
	4		Selector lever: "D" position	10 – 16 V
			Other than the above	Approx. 0 V
	5		Selector lever: "N" position	10 – 16 V
			Other than the above	Approx. 0 V
	6		Selector lever: "R" position	10 – 16 V
			Other than the above	Approx. 0 V
	7		Selector lever: "P" position	10 – 16 V
			Other than the above	Approx. 0 V

### Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-47, "Intermittent Incident"](#).

NO-1 ["D POSITION SW" is "ON" when selector is not in "D" position. (Or connector terminal 4 is at power voltage.)]>>GO TO 2.

NO-2 ["N POSITION SW" is "ON" when selector is not in "N" position. (Or connector terminal 5 is at power voltage.)]>>GO TO 4.

NO-3 ["R POSITION SW" is "ON" when selector is not in "R" position. (Or connector terminal 6 is at power voltage.)]>>GO TO 6.

NO-4 ["P POSITION SW" is "ON" when selector is not in "P" position. (Or connector terminal 7 is at power voltage.)]>>GO TO 8.

NO-5 ["L POSITION SW" is "ON" when selector is not in "L" position. (Or connector terminal 2 is at power voltage.)]>>GO TO 10.

## 2.CHECK D POSITION SW CIRCUIT (PART 1)

1. Turn ignition switch OFF.
2. Disconnect TCM connector.
3. Check continuity between TCM harness connector terminals.

TCM		Terminal	Continuity
Connector			
F15	4	2	Not existed
		5	
		6	
		7	

### Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace malfunctioning parts.

## 3.CHECK D POSITION SW CIRCUIT (PART 2)

1. Disconnect transmission range switch connector.
2. Turn ignition switch ON.
3. Check voltage between TCM harness connector terminal and ground.

# P0705 TRANSMISSION RANGE SENSOR A

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10E]

+		-	Voltage (Approx.)
TCM			
Connector	Terminal		
F15	4	Ground	0 V

Is the inspection result normal?

YES >> GO TO 12.

NO >> Repair or replace malfunctioning parts.

## 4. CHECK N POSITION SW CIRCUIT (PART 1)

1. Turn ignition switch OFF.
2. Disconnect TCM connector.
3. Check continuity between TCM harness connector terminals.

TCM			Continuity
Connector	Terminal		
F15	5	2	Not existed
		4	
		6	
		7	

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair or replace malfunctioning parts.

## 5. CHECK N POSITION SW CIRCUIT (PART 2)

1. Disconnect transmission range switch connector.
2. Turn ignition switch ON.
3. Check voltage between TCM harness connector terminal and ground.

+		-	Voltage (Approx.)
TCM			
Connector	Terminal		
F15	5	Ground	0 V

Is the inspection result normal?

YES >> GO TO 12.

NO >> Repair or replace malfunctioning parts.

## 6. CHECK P POSITION SW CIRCUIT (PART 1)

1. Turn ignition switch OFF.
2. Disconnect TCM connector.
3. Check continuity between TCM harness connector terminals.

TCM			Continuity
Connector	Terminal		
F15	7	2	Not existed
		4	
		5	
		6	

Is the inspection result normal?

YES >> GO TO 7.

NO >> Repair or replace malfunctioning parts.

# P0705 TRANSMISSION RANGE SENSOR A

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10E]

## 7. CHECK P POSITION SW CIRCUIT (PART 2)

1. Disconnect transmission range switch connector.
2. Turn ignition switch ON.
3. Check voltage between TCM harness connector terminal and ground.

+		-	Voltage (Approx.)
TCM			
Connector	Terminal		
F15	7	Ground	0 V

Is the inspection result normal?

YES >> GO TO 12.

NO >> Repair or replace malfunctioning parts.

## 8. CHECK R POSITION SW CIRCUIT (PART 1)

1. Turn ignition switch OFF.
2. Disconnect TCM connector.
3. Check continuity between TCM harness connector terminals.

TCM		Continuity	
Connector	Terminal		
F15	6	2	Not existed
		4	
		5	
		7	

Is the inspection result normal?

YES >> GO TO 9.

NO >> Repair or replace malfunctioning parts.

## 9. CHECK R POSITION SW CIRCUIT (PART 2)

1. Disconnect transmission range switch connector.
2. Turn ignition switch ON.
3. Check voltage between TCM harness connector terminal and ground.

+		-	Voltage (Approx.)
TCM			
Connector	Terminal		
F15	6	Ground	0 V

Is the inspection result normal?

YES >> GO TO 12.

NO >> Repair or replace malfunctioning parts.

## 10. CHECK L POSITION SWITCH CIRCUIT (PART 1)

1. Turn ignition switch OFF.
2. Disconnect TCM connector.
3. Check continuity between TCM harness connector terminals.

A  
B  
C  
TM  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# P0705 TRANSMISSION RANGE SENSOR A

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10E]

TCM		Continuity
Connector	Terminal	
F15	2	4
		5
		6
		7
		Not existed

Is the inspection result normal?

YES >> GO TO 11.

NO >> Repair or replace malfunctioning parts.

## 11. CHECK L POSITION SWITCH CIRCUIT (PART 2)

1. Disconnect transmission range switch connector.
2. Turn ignition switch ON.
3. Check voltage between TCM harness connector terminal and ground.

+		-	Voltage (Approx.)
TCM			
Connector	Terminal		
F15	2	Ground	0 V

Is the inspection result normal?

YES >> GO TO 12.

NO >> Repair or replace malfunctioning parts.

## 12. CHECK TRANSMISSION RANGE SWITCH

Check transmission range switch. Refer to [TM-108, "Component Inspection"](#).

Is the check result normal?

YES >> Check intermittent incident. Refer to [GI-47, "Intermittent Incident"](#).

NO >> Repair or replace malfunctioning parts.

## Component Inspection

INFOID:000000011149346

## 1. CHECK TRANSMISSION RANGE SWITCH

Check continuity between transmission range switch connector terminals.

Transmission range switch	Condition	Continuity
Terminal		
7 – 10	Manual lever: "P" and "N" positions	Existed
	Other than the above	Not existed
4 – 5	Manual lever: "P" position	Existed
	Other than the above	Not existed
4 – 8	Manual lever: "R" position	Existed
	Other than the above	Not existed
4 – 9	Manual lever: "N" position	Existed
	Other than the above	Not existed
4 – 2	Manual lever: "D" position	Existed
	Other than the above	Not existed
4 – 6	Manual lever: "L" position	Existed
	Other than the above	Not existed

Is the inspection result normal?

# P0705 TRANSMISSION RANGE SENSOR A

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10E]

YES >> INSPECTION END

NO >> There is a malfunction of transmission range switch. Replace transaxle assembly. Refer to [TM-218. "Removal and Installation"](#).

A

B

C

TM

E

F

G

H

I

J

K

L

M

N

O

P

# P0706 TRANSMISSION RANGE SENSOR A

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10E]

## P0706 TRANSMISSION RANGE SENSOR A

### DTC Logic

INFOID:0000000011149347

### DTC DETECTION LOGIC

DTC	CONSULT screen terms (Trouble diagnosis content)	DTC detection condition	Possible causes
P0706	T/M RANGE SENSOR A (Transmission Range Sensor A Circuit Range/Performance)	When all of the following conditions are satisfied and this state is maintained for 30 seconds: <ul style="list-style-type: none"><li>• All range signals stay OFF</li><li>• TCM power supply voltage: More than 11 V</li></ul>	<ul style="list-style-type: none"><li>• Harness or connector (Open circuit between ignition switch and transmission range switch/open circuit between transmission range switch and TCM)</li><li>• Transmission range switch</li><li>• Control cable</li></ul>

### DTC CONFIRMATION PROCEDURE

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2. PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON.
2. Shift the selector lever through entire positions from "P" to "L". (Hold the selector lever at each position for 40 seconds or more.)
3. Check the first trip DTC.

Is "P0706" detected?

- YES >> Go to [TM-110, "Diagnosis Procedure"](#).  
NO >> INSPECTION END

### Diagnosis Procedure

INFOID:0000000011149348

#### 1. ADJUSTMENT OF CONTROL CABLE

Adjust control cable. Refer to [TM-93, "Inspection and Adjustment"](#).

>> GO TO 2.

#### 2. PERFORM DTC CONFIRMATION PROCEDURE

 **With CONSULT**

1. Turn ignition switch ON.
2. Select "Self Diagnostic Results" in "TRANSMISSION".
3. Touch "Erase".
4. Perform "DTC CONFIRMATION PROCEDURE". Refer to [TM-110, "DTC Logic"](#).

Is "P0706" detected?

- YES >> GO TO 3.  
NO >> INSPECTION END

#### 3. CHECK POWER CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect transmission range switch connector.
3. Turn ignition switch ON.
4. Check voltage between transmission range switch harness connector terminal and ground.

# P0706 TRANSMISSION RANGE SENSOR A

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10E]

+		-	Voltage
Transmission range switch			
Connector	Terminal		
F36	4	Ground	10 – 16 V

Is the inspection result normal?

- YES >> GO TO 4.
- NO >> GO TO 7.

## 4. CHECK CIRCUIT BETWEEN TRANSMISSION RANGE SWITCH AND TCM (PART 1)

1. Turn ignition switch OFF.
2. Disconnect TCM connector.
3. Check continuity between transmission range switch harness connector terminals and TCM harness connector terminals.

Transmission range switch		TCM		Continuity
Connector	Terminal	Connector	Terminal	
F36	2	F15	4	Existed
	5		7	
	6		2	
	8		6	
	9		5	

Is the inspection result normal?

- YES >> GO TO 5.
- NO >> Repair or replace malfunctioning parts.

## 5. CHECK CIRCUIT BETWEEN TRANSMISSION RANGE SWITCH AND TCM (PART 2)

Check continuity between transmission range switch harness connector terminals and ground.

Transmission range switch		—	Continuity
Connector	Terminal		
F36	2	Ground	Not existed
	5		
	6		
	8		
	9		

Is the inspection result normal?

- YES >> GO TO 6.
- NO >> Repair or replace malfunctioning parts.

## 6. CHECK TRANSMISSION RANGE SWITCH

Check transmission range switch. Refer to [TM-112. "Component Inspection"](#).

Is the inspection result normal?

- YES >> Check intermittent incident. Refer to [GI-47. "Intermittent Incident"](#).
- NO >> Repair or replace malfunctioning parts.

## 7. DETECT MALFUNCTIONING ITEMS

Check the following items:

- Open circuit or short circuit in harness between ignition switch and IPDM E/R. Refer to [PG-29. "Wiring Diagram - IGNITION POWER SUPPLY -"](#).
- Open circuit or short circuit in harness between IPDM E/R harness connector terminal 64 and transmission range switch harness connector terminal 4.

# P0706 TRANSMISSION RANGE SENSOR A

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10E]

- 10A fuse (No. 48, located in the IPDM E/R). Refer to [PG-85, "IPDM E/R Terminal Arrangement"](#).
- IPDM E/R

Is the check result normal?

YES >> Check intermittent incident. Refer to [GI-47, "Intermittent Incident"](#).

NO >> Repair or replace malfunctioning parts.

## Component Inspection

INFOID:000000011149349

### 1. CHECK TRANSMISSION RANGE SWITCH

Check continuity between transmission range switch connector terminals.

Transmission range switch Terminal	Condition	Continuity
7 – 10	Manual lever: "P" and "N" positions	Existed
	Other than the above	Not existed
4 – 5	Manual lever: "P" position	Existed
	Other than the above	Not existed
4 – 8	Manual lever: "R" position	Existed
	Other than the above	Not existed
4 – 9	Manual lever: "N" position	Existed
	Other than the above	Not existed
4 – 2	Manual lever: "D" position	Existed
	Other than the above	Not existed
4 – 6	Manual lever: "L" position	Existed
	Other than the above	Not existed

Is the inspection result normal?

YES >> INSPECTION END

NO >> There is a malfunction of transmission range switch. Replace transaxle assembly. Refer to [TM-218, "Removal and Installation"](#).



# P0711 TRANSMISSION FLUID TEMPERATURE SENSOR A

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10E]

## P0711 TRANSMISSION FLUID TEMPERATURE SENSOR A

### DTC Logic

INFOID:000000011149351

### DTC DETECTION LOGIC

DTC	CONSULT screen terms (Trouble diagnosis content)	DTC detection condition	Possible causes
P0711	FLUID TEMP SENSOR A (Transmission Fluid Temperature Sensor A Circuit Range/Performance)	When the temperature does not increase to the specified temperature within a specified time after all of the following conditions are satisfied: <ul style="list-style-type: none"><li>• TCM power supply voltage: More than 11 V</li><li>• CAN communication is normal</li><li>• Engine speed: 450 rpm or more</li><li>• Accelerator pedal position: 3 deg. or more</li><li>• Vehicle speed: 10 km/h (7 MPH) or more</li><li>• U0100, P0705 and P0706 are not detected.</li><li>• Selector lever: "D" position</li></ul>	CVT fluid temperature sensor

### DTC CONFIRMATION PROCEDURE

#### CAUTION:

**Always drive vehicle at a safe speed.**

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2. PRECONDITIONING

1. Turn ignition switch ON.
2. Select "Data Monitor" in "TRANSMISSION".
3. Select "ATF TEMP SEN".

Is "ATF TEMP SEN" value within 2.03 – 0.16 V?

YES >> INSPECTION END

NO-1 ("ATF TEMP SEN" indicates 0.15 V or less.)>>Go to [TM-113, "Diagnosis Procedure"](#).

NO-2 ("ATF TEMP SEN" indicates 2.04 V or more.)>>GO TO 3.

#### 3. CHECK DTC DETECTION

1. Start the engine.
2. Drive the vehicle.
3. Maintain the following conditions for 14 minutes or more.

Selector lever : "D" position  
Vehicle speed : More than 10 km/h (7 MPH)

4. Stop the vehicle.
5. Check the first trip DTC.

Is "P0711" detected?

YES >> Go to [TM-113, "Diagnosis Procedure"](#).

NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000011149352

#### 1. CHECK CVT FLUID TEMPERATURE SENSOR

1. Turn ignition switch OFF.
2. Disconnect CVT unit connector.
3. Check resistance between CVT unit connector terminals.

# P0711 TRANSMISSION FLUID TEMPERATURE SENSOR A

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10E]

CVT unit		Condition	Resistance (Approx.)
Connector	Terminal		
F209	12 – 18	CVT fluid temperature: 20°C (68°F)	6.5 kΩ
		CVT fluid temperature: 50°C (122°F)	2.2 kΩ
		CVT fluid temperature: 80°C (176°F)	0.87 kΩ

Is the inspection result normal?

YES >> GO TO 2.

NO >> Replace transaxle assembly. Refer to [TM-218, "Removal and Installation"](#)

## 2. CHECK CIRCUIT BETWEEN TCM AND CVT UNIT (CVT FLUID TEMPERATURE SENSOR) (PART 1)

1. Disconnect the TCM connector.
2. Check continuity between TCM harness connector terminals and CVT unit harness connector terminals.

TCM		CVT unit		Continuity
Connector	Terminal	Connector	Terminal	
F15	11	F46	18	Existed
	12		12	

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace damaged parts.

## 3. CHECK CIRCUIT BETWEEN TCM AND CVT UNIT (CVT FLUID TEMPERATURE SENSOR) (PART 2)

Check continuity between TCM harness connector terminals and ground.

TCM		Ground	Continuity
Connector	Terminal		
F15	11	Ground	Not existed
	12		

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-47, "Intermittent Incident"](#).

NO >> Repair or replace damaged parts.

# P0712 TRANSMISSION FLUID TEMPERATURE SENSOR A

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10E]

## P0712 TRANSMISSION FLUID TEMPERATURE SENSOR A

### DTC Logic

INFOID:0000000011149353

### DTC DETECTION LOGIC

DTC	CONSULT screen terms (Trouble diagnosis content)	DTC detection condition	Possible causes
P0712	FLUID TEMP SENSOR A (Transmission Fluid Temperature Sensor A Circuit Low)	When all of the following conditions are satisfied and this state is maintained for 5 seconds: <ul style="list-style-type: none"><li>• TCM power supply voltage: More than 11 V</li><li>• Fluid temperature sensor detection voltage: 0.15 V or less</li></ul>	<ul style="list-style-type: none"><li>• Harness or connector (CVT fluid temperature sensor circuit is shorted to ground)</li><li>• CVT fluid temperature sensor</li></ul>

### DTC CONFIRMATION PROCEDURE

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2. PERFORM DTC CONFIRMATION PROCEDURE

1. Start the engine and wait for 10 seconds or more.
2. Check the first trip DTC.

Is "P0712" detected?

YES >> Go to [TM-115, "Diagnosis Procedure"](#).

NO >> INSPECTION END

### Diagnosis Procedure

INFOID:0000000011149354

#### 1. CHECK CIRCUIT BETWEEN TCM AND CVT UNIT

1. Turn ignition switch OFF.
2. Disconnect TCM connector and CVT unit connector.
3. Check continuity between TCM harness connector terminal and ground.

TCM		—	Continuity
Connector	Terminal		
F15	12	Ground	Not existed

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace malfunctioning part.

#### 2. CHECK TERMINAL CODE ASSEMBLY

Check continuity between CVT unit connector terminal and ground

CVT unit		—	Continuity
Connector	Terminal		
F209	12	Ground	Not existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Replace transaxle assembly. Refer to [TM-218, "Removal and Installation"](#).

#### 3. CHECK CVT FLUID TEMPERATURE SENSOR

Check resistance between CVT unit connector terminals.

# P0712 TRANSMISSION FLUID TEMPERATURE SENSOR A

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10E]

CVT unit		Condition	Resistance (Approx.)
Connector	Terminal		
F209	12 – 18	CVT fluid temperature: 20°C (68°F)	6.5 kΩ
		CVT fluid temperature: 50°C (122°F)	2.2 kΩ
		CVT fluid temperature: 80°C (176°F)	0.87 kΩ

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-47, "Intermittent Incident"](#).

NO >> Replace transaxle assembly. Refer to [TM-218, "Removal and Installation"](#).

# P0713 TRANSMISSION FLUID TEMPERATURE SENSOR A

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10E]

## P0713 TRANSMISSION FLUID TEMPERATURE SENSOR A

### DTC Logic

INFOID:000000011149355

### DTC DETECTION LOGIC

DTC	CONSULT screen terms (Trouble diagnosis content)	DTC detection condition	Possible causes
P0713	FLUID TEMP SENSOR A (Transmission Fluid Temperature Sensor A Circuit High)	When all of the following conditions are satisfied and this state is maintained for 5 seconds: <ul style="list-style-type: none"><li>• TCM power supply voltage: More than 11 V</li><li>• Vehicle speed: More than 10 km/h (7 MPH)</li><li>• Fluid temperature sensor detection voltage: 2.48 V or more</li></ul>	<ul style="list-style-type: none"><li>• Harness or connector (CVT fluid temperature sensor circuit is open or shorted to power supply)</li><li>• CVT fluid temperature sensor</li></ul>

### DTC CONFIRMATION PROCEDURE

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2. PERFORM DTC CONFIRMATION PROCEDURE

1. Start the engine.
2. Maintain the following condition for 10 seconds or more.

Vehicle speed : 20 km/h (12 MPH) or more

3. Stop the vehicle.
4. Check the first trip DTC.

Is "P0713" detected?

- YES >> Go to [TM-117, "Diagnosis Procedure"](#).  
NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000011149356

#### 1. CHECK CIRCUIT BETWEEN TCM AND CVT UNIT (PART 1)

1. Turn ignition switch OFF.
2. Disconnect TCM connector and CVT unit connector.
3. Check continuity between TCM harness connector terminals and CVT unit harness connector terminals.

TCM		CVT unit		Continuity
Connector	Terminal	Connector	Terminal	
F15	11	F46	18	Existed
	12		12	

Is the inspection result normal?

- YES >> GO TO 2.  
NO >> Repair or replace malfunctioning parts.

#### 2. CHECK CIRCUIT BETWEEN TCM AND CVT UNIT (PART 2)

1. Turn ignition switch ON.
2. Check voltage between TCM harness connector terminal and ground.

# P0713 TRANSMISSION FLUID TEMPERATURE SENSOR A

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10E]

+		-	Voltage (Approx.)
TCM			
Connector	Terminal		
F15	12	Ground	0 V

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace malfunctioning parts.

## 3. CHECK CVT FLUID TEMPERATURE SENSOR

1. Turn ignition switch OFF.
2. Check resistance between CVT unit connector terminals.

CVT unit		Condition	Resistance (Approx.)
Connector	Terminal		
F209	12 – 18	CVT fluid temperature: 20°C (68°F)	6.5 kΩ
		CVT fluid temperature: 50°C (122°F)	2.2 kΩ
		CVT fluid temperature: 80°C (176°F)	0.87 kΩ

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-47, "Intermittent Incident"](#).

NO >> There is malfunction of CVT fluid temperature sensor circuit. Replace transaxle assembly. Refer to [TM-218, "Removal and Installation"](#).

# P0715 INPUT SPEED SENSOR A

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10E]

## P0715 INPUT SPEED SENSOR A

### DTC Logic

INFOID:000000011149357

### DTC DETECTION LOGIC

DTC	CONSULT screen terms (Trouble diagnosis content)	DTC detection condition	Possible causes
P0715	INPUT SPEED SENSOR A (Input/Turbine Speed Sensor A Circuit)	<p>When 1 is satisfied and any of 2, 3 or 4 is satisfied:</p> <ol style="list-style-type: none"> <li>When the following conditions are satisfied: <ul style="list-style-type: none"> <li>- TCM power supply voltage: More than 11 V</li> <li>- After range change completion, it spends 2 seconds or more.</li> </ul> </li> <li>When all of the following conditions are satisfied and this state is maintained for 5 seconds: <ul style="list-style-type: none"> <li>- Primary pulley speed: Less than 150 rpm</li> <li>- Secondary pulley speed: 500 rpm or more</li> </ul> </li> <li>When all of the following conditions are satisfied and this state is maintained for 0.5 seconds: <ul style="list-style-type: none"> <li>- 10-msec-ago primary pulley speed: 1,000 rpm or more</li> <li>- Now primary pulley speed: 0 rpm</li> </ul> </li> <li>When all of the following conditions are satisfied and this state is maintained for 5 seconds: <ul style="list-style-type: none"> <li>- Range: D or L</li> <li>- Engine speed: 450 rpm or more</li> <li>- Input speed: 300 rpm or more</li> <li>- Primary pulley speed: 300 rpm or more</li> <li>- Secondary pulley speed: 300 rpm or more</li> <li>- Differences between engine speed and primary pulley speed: More than 1,000 rpm</li> <li>- Differences between primary pulley speed and input speed: More than 1,000 rpm</li> <li>- Differences between engine speed and input speed: 1,000 rpm or less</li> <li>- Lock-up command is being given (except for slip lock-up)</li> <li>- DTC other than the applicable DTC is not detected.</li> </ul> </li> </ol>	<ul style="list-style-type: none"> <li>• Harness or connector (Primary speed sensor circuit is open or shorted)</li> <li>• Primary speed sensor</li> </ul>

### DTC CONFIRMATION PROCEDURE

**CAUTION:**

**Be careful of the driving speed.**

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2. CHECK DTC DETECTION

1. Start the engine.
2. Drive the vehicle.
3. Maintain the following conditions for 10 seconds or more.

Selector lever : "D" position  
 Engine speed : 1,200 rpm or more  
 Vehicle speed : 40 km/h (25 MPH) or more

4. Stop the vehicle.
5. Check the first trip DTC.

Is "P0715" detected?

# P0715 INPUT SPEED SENSOR A

[CVT: RE0F10E]

< DTC/CIRCUIT DIAGNOSIS >

- YES >> Go to [TM-120. "Diagnosis Procedure"](#).  
NO >> INSPECTION END

## Diagnosis Procedure

INFOID:000000011149358

### 1. CHECK PRIMARY SPEED SENSOR POWER CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect primary speed sensor connector.
3. Turn ignition switch ON.
4. Check voltage between primary speed sensor harness connector terminal and ground.

+		-	Voltage
Primary speed sensor Connector	Terminal		
F25	3	Ground	10 – 16 V

Is the inspection result normal?

- YES >> GO TO 2.  
NO >> GO TO 6.

### 2. CHECK PRIMARY SPEED SENSOR GROUND CIRCUIT

Check continuity between primary speed sensor harness connector terminal and ground.

Primary speed sensor		—	Continuity
Connector	Terminal		
F25	1	Ground	Existed

Is the inspection result normal?

- YES >> GO TO 3.  
NO >> Repair or replace malfunctioning parts.

### 3. CHECK CIRCUIT BETWEEN PRIMARY SPEED SENSOR AND TCM (PART 1)

1. Turn ignition switch OFF.
2. Disconnect TCM connector.
3. Check continuity between primary speed sensor harness connector terminal and TCM harness connector terminal.

Primary speed sensor		TCM		Continuity
Connector	Terminal	Connector	Terminal	
F25	2	F15	35	Existed

Is the inspection result normal?

- YES >> GO TO 4.  
NO >> Repair or replace malfunctioning parts.

### 4. CHECK CIRCUIT BETWEEN PRIMARY SPEED SENSOR AND TCM (PART 2)

Check continuity between primary speed sensor harness connector terminal and ground.

Primary speed sensor		—	Continuity
Connector	Terminal		
F25	2	Ground	Not existed

Is the inspection result normal?

- YES >> GO TO 5.  
NO >> Repair or replace malfunctioning parts.

### 5. CHECK TCM INPUT SIGNALS




# P0715 INPUT SPEED SENSOR A

[CVT: RE0F10E]

## < DTC/CIRCUIT DIAGNOSIS >

1. Connect all of disconnected connectors.
2. Lift the vehicle.
3. Start the engine.
4. Check frequency of primary speed sensor.

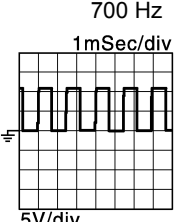+		-	Condition	Frequency (Approx.)
TCM				
Connector	Terminal			
F15	35	Ground	<ul style="list-style-type: none"> <li>• Selector lever: "L" position</li> <li>• Vehicle speed: 20 km/h (12 MPH)</li> </ul>	<p>700 Hz</p>  <p>5V/div</p> <p>JSDIA1905GB</p>

### Is the inspection result normal?

- YES >> Check intermittent incident. Refer to [GI-47, "Intermittent Incident"](#).  
 NO >> Replace primary speed sensor. Refer to [TM-205, "Removal and Installation"](#).

## 6. DETECT MALFUNCTIONING ITEMS

Check the following items:

- Open circuit or short circuit in harness between ignition switch and IPDM E/R. Refer to [PG-29, "Wiring Diagram - IGNITION POWER SUPPLY -"](#).
- Open circuit or short circuit in harness between IPDM E/R harness connector terminal 61 and primary speed sensor harness connector terminal 3.
- 10A fuse (No.46, located in the IPDM E/R). Refer to [PG-85, "IPDM E/R Terminal Arrangement"](#).
- IPDM E/R

### Is the check result normal?

- YES >> Check intermittent incident. Refer to [GI-47, "Intermittent Incident"](#).  
 NO >> Repair or replace malfunctioning parts.

A  
B  
C  
TM  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# P0717 INPUT SPEED SENSOR A

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10E]

## P0717 INPUT SPEED SENSOR A

### DTC Logic

INFOID:000000011149359

### DTC DETECTION LOGIC

DTC	CONSULT screen terms (Trouble diagnosis content)	DTC detection condition	Possible cause
P0717	INPUT SPEED SENSOR A (Input/Turbine Speed Sensor "A" Circuit No Signal)	<p>When 1 is satisfied and any of 2, 3 or 4 is satisfied:</p> <ol style="list-style-type: none"> <li>When the following conditions are satisfied: <ul style="list-style-type: none"> <li>- TCM power supply voltage: More than 11 V</li> <li>- After range change completion, it spends 2 seconds or more.</li> </ul> </li> <li>When all of the following conditions are satisfied and this state is maintained for 5 seconds: <ul style="list-style-type: none"> <li>- Primary pulley speed: 500 rpm or more</li> <li>- Input speed: Less than 150 rpm</li> <li>- Range: Other than P, N</li> <li>- P0715 is not detected</li> </ul> </li> <li>When all of the following conditions are satisfied and this state is maintained for 0.5 seconds: <ul style="list-style-type: none"> <li>- 10-msec-ago input speed: 1,000 rpm or more</li> <li>- Now input speed: 0 rpm</li> </ul> </li> <li>When all of the following conditions are satisfied and this state is maintained for 5 seconds: <ul style="list-style-type: none"> <li>- Range: D or L</li> <li>- Engine speed: 450 rpm or more</li> <li>- Input speed: 300 rpm or more</li> <li>- Primary pulley speed: 300 rpm or more</li> <li>- Secondary pulley speed: 300 rpm or more</li> <li>- Differences between engine speed and primary pulley speed: 1,000 rpm or less</li> <li>- Differences between primary pulley speed and input speed: More than 1,000 rpm</li> <li>- Differences between engine speed and input speed: More than 1,000 rpm</li> <li>- Lock-up command is being given (except for slip lock-up)</li> <li>- DTC other than the applicable DTC is not detected.</li> </ul> </li> </ol>	<ul style="list-style-type: none"> <li>• Harness or connectors (Input speed sensor circuit is open or shorted.)</li> <li>• Input speed sensor</li> </ul>

### DTC CONFIRMATION PROCEDURE

#### CAUTION:

Always drive vehicle at a safe speed.

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2. CHECK DTC DETECTION

##### Ⓜ With CONSULT

1. Start the engine.
2. Drive the vehicle.
3. Maintain the following conditions for 10 seconds or more.

Selector lever : "D" position

# P0717 INPUT SPEED SENSOR A

[CVT: RE0F10E]

## < DTC/CIRCUIT DIAGNOSIS >

Engine speed : 1,200 rpm or more  
Vehicle speed : 40 km/h (25 MPH) or more

4. Stop the vehicle.
5. Check the first trip DTC.

Is "P0717" detected?

YES >> Go to [TM-123, "Diagnosis Procedure"](#).  
NO >> INSPECTION END

## Diagnosis Procedure

INFOID:000000011149360

### 1.CHECK INPUT SPEED SENSOR POWER CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect input speed sensor connector.
3. Turn ignition switch ON.
4. Check voltage between input speed sensor harness connector terminal and ground.

+		-	Voltage
Connector	Terminal		
F29	3	Ground	10 – 16 V

Is the inspection result normal?

YES >> GO TO 2.  
NO >> GO TO 6.

### 2.CHECK INPUT SPEED SENSOR GROUND CIRCUIT

Check continuity between input speed sensor harness connector terminal and ground.

Input speed sensor		—	Continuity
Connector	Terminal		
F29	1	Ground	Existed

Is the inspection result normal?

YES >> GO TO 3.  
NO >> Repair or replace malfunctioning parts.

### 3.CHECK CIRCUIT BETWEEN INPUT SPEED SENSOR AND TCM (PART 1)

1. Turn ignition switch OFF.
2. Disconnect TCM connector.
3. Check continuity between input speed sensor harness connector terminal and TCM harness connector terminal.

Input speed sensor		TCM		Continuity
Connector	Terminal	Connector	Terminal	
F29	2	F15	24	Existed

Is the inspection result normal?

YES >> GO TO 4.  
NO >> Repair or replace malfunctioning parts.

### 4.CHECK CIRCUIT BETWEEN INPUT SPEED SENSOR AND TCM (PART 2)

Check continuity between input speed sensor harness connector terminal and ground.

# P0717 INPUT SPEED SENSOR A

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10E]

Input speed sensor		—	Continuity
Connector	Terminal		
F29	2	Ground	Not existed


Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair or replace malfunctioning parts.

## 5. CHECK TCM INPUT SIGNALS

1. Connect all of disconnected connectors.
2. Lift the vehicle.
3. Start the engine.
4. Check frequency of input speed sensor.

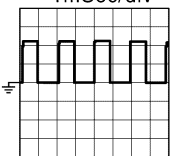+		-	Condition	Frequency (Approx.)
TCM				
Connector	Terminal			
F15	24	Ground	<ul style="list-style-type: none"> <li>• Selector lever: "L" position</li> <li>• Vehicle speed: 20 km/h (12 MPH)</li> </ul>	<p>880 Hz</p> <p>1mSec/div</p>  <p>5V/div</p> <p>JSDIA3769GB</p>

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-47, "Intermittent Incident"](#).

NO >> Replace input speed sensor. Refer to [TM-203, "Removal and Installation"](#).

## 6. DETECT MALFUNCTIONING ITEMS

Check the following items:

- Open circuit or short circuit in harness between ignition switch and IPDM E/R. Refer to [PG-29, "Wiring Diagram - IGNITION POWER SUPPLY -"](#).
- Open circuit or short circuit in harness between IPDM E/R harness connector terminal 61 and input speed sensor harness connector terminal 3.
- 10A fuse (No.46, located in the IPDM E/R). Refer to [PG-85, "IPDM E/R Terminal Arrangement"](#).
- IPDM E/R

Is the check result normal?

YES >> Check intermittent incident. Refer to [GI-47, "Intermittent Incident"](#).

NO >> Repair or replace malfunctioning parts.

# P0740 TORQUE CONVERTER

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10E]

## P0740 TORQUE CONVERTER

### DTC Logic

INFOID:000000011149361

### DTC DETECTION LOGIC

DTC	CONSULT screen terms (Trouble diagnosis content)	DTC detection condition	Possible causes
P0740	TORQUE CONVERTER (Torque Converter Clutch Circuit/Open)	When all of the following conditions are satisfied and this state is maintained for 5 seconds: <ul style="list-style-type: none"><li>• TCM power supply voltage: More than 11 V</li><li>• P0743 is not detected.</li><li>• TCM judges that solenoid valve circuit is open.</li></ul>	<ul style="list-style-type: none"><li>• Harness or connector (Torque converter clutch solenoid valve circuit is open or shorted to power supply)</li><li>• Torque converter clutch solenoid valve</li></ul>

### DTC CONFIRMATION PROCEDURE

#### CAUTION:

Be careful of the driving speed.

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2. PREPARATION BEFORE OPERATION

##### With CONSULT

1. Start the engine.
2. Select "Data Monitor" in "TRANSMISSION".
3. Select "FLUID TEMP".
4. Confirm that the CVT fluid temperature is in the following range.

FLUID TEMP : 20°C (68°F) or more

##### With GST

1. Start the engine.
2. Set the CVT fluid to 20°C (68°F) or more.

#### NOTE:

When the ambient temperature is 20°C (68°F), the CVT fluid usually increases to 50 to 80°C (122 to 176°F) with driving in an urban area for approximately 10 minutes.

#### Is the CVT fluid 20°C (68°F) or more?

YES >> GO TO 3.

- NO >> 1. Warm the transaxle.  
2. GO TO 3.

#### 3. CHECK DTC DETECTION

1. Drive the vehicle.
2. Maintain the following conditions for 10 seconds or more.

Selector lever : "D" position

Vehicle speed : 40 km/h (25 MPH) or more

3. Stop the vehicle.
4. Check the first trip DTC.

#### Is "P0740" detected?

YES >> Go to [TM-126. "Diagnosis Procedure"](#).

NO >> INSPECTION END

# P0740 TORQUE CONVERTER

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10E]

INFOID:000000011149362

## Diagnosis Procedure

### 1. CHECK CIRCUIT BETWEEN TCM AND CVT UNIT

1. Turn ignition switch OFF.
2. Disconnect TCM connector and CVT unit connector.
3. Check continuity between TCM harness connector terminal and CVT unit harness connector terminal.

TCM		CVT unit		Continuity
Connector	Terminal	Connector	Terminal	
F15	38	F46	2	Existed

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace malfunctioning parts.

### 2. CHECK TORQUE CONVERTER CLUTCH SOLENOID VALVE CIRCUIT

Check resistance between CVT unit harness connector terminal and ground.

CVT unit		—	Condition	Resistance
Connector	Terminal			
F209	5	Ground	CVT fluid temperature: 20°C (68°F)	5.5 – 7.0 Ω
			CVT fluid temperature: 50°C (122°F)	6.0 – 8.0 Ω
			CVT fluid temperature: 80°C (176°F)	6.5 – 8.5 Ω

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-47, "Intermittent Incident"](#).

NO >> There is malfunction of torque converter clutch solenoid valve circuit. Replace transaxle assembly. Refer to [TM-218, "Removal and Installation"](#).

# P0743 TORQUE CONVERTER

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10E]

## P0743 TORQUE CONVERTER

### DTC Logic

INFOID:000000011149363

### DTC DETECTION LOGIC

DTC	CONSULT screen terms (Trouble diagnosis content)	DTC detection condition	Possible causes
P0743	TORQUE CONVERTER (Torque Converter Clutch Circuit Electrical)	When all of the following conditions are satisfied and this state is maintained for 0.48 seconds: <ul style="list-style-type: none"><li>• TCM power supply voltage: More than 11 V</li><li>• TCM judges that solenoid valve circuit is shorted to ground.</li></ul>	<ul style="list-style-type: none"><li>• Harness or connector (Torque converter clutch solenoid valve circuit is shorted to ground)</li><li>• Torque converter clutch solenoid valve</li></ul>

### DTC CONFIRMATION PROCEDURE

#### CAUTION:

Be careful of the driving speed.

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2. PREPARATION BEFORE OPERATION

##### With CONSULT

1. Start the engine.
2. Select "Data Monitor" in "TRANSMISSION".
3. Select "FLUID TEMP".
4. Confirm that the CVT fluid temperature is in the following range.

FLUID TEMP : 20°C (68°F) or more

##### With GST

1. Start the engine.
2. Set the CVT fluid to 20°C (68°F) or more.

#### NOTE:

When the ambient temperature is 20°C (68°F), the CVT fluid usually increases to 50 to 80°C (122 to 176°F) with driving in an urban area for approximately 10 minutes.

#### Is the CVT fluid 20°C (68°F) or more?

YES >> GO TO 3.

- NO >> 1. Warm the transaxle.  
2. GO TO 3.

#### 3. CHECK DTC DETECTION

1. Drive the vehicle.
2. Maintain the following conditions for 10 seconds or more.

Selector lever : "D" position

Vehicle speed : 40 km/h (25 MPH) or more

3. Stop the vehicle.
4. Check the first trip DTC.

#### Is "P0743" detected?

YES >> Go to [TM-128. "Diagnosis Procedure"](#).

NO >> INSPECTION END

# P0743 TORQUE CONVERTER

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10E]

INFOID:000000011149364

## Diagnosis Procedure

### 1. CHECK CIRCUIT BETWEEN TCM AND CVT UNIT

1. Turn ignition switch OFF.
2. Disconnect TCM connector and CVT unit connector.
3. Check continuity between TCM harness connector terminal and ground.

TCM		—	Continuity
Connector	Terminal		
F15	38	Ground	Not existed

Is the inspection result normal?

- YES >> GO TO 2.  
NO >> Repair or replace malfunctioning parts.

### 2. CHECK TORQUE CONVERTER CLUTCH SOLENOID VALVE CIRCUIT

Check resistance between CVT unit harness connector terminal and ground.

CVT unit		—	Condition	Resistance
Connector	Terminal			
F209	5	Ground	CVT fluid temperature: 20°C (68°F)	5.5 – 7.0 Ω
			CVT fluid temperature: 50°C (122°F)	6.0 – 8.0 Ω
			CVT fluid temperature: 80°C (176°F)	6.5 – 8.5 Ω

Is the inspection result normal?

- YES >> Check intermittent incident. Refer to [GI-47, "Intermittent Incident"](#).  
NO >> There is malfunction of torque converter clutch solenoid valve circuit. Replace transaxle assembly. Refer to [TM-218, "Removal and Installation"](#).



# P0744 TORQUE CONVERTER

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10E]

## P0744 TORQUE CONVERTER

### DTC Logic

INFOID:000000011149365

### DTC DETECTION LOGIC

DTC	CONSULT screen terms (Trouble diagnosis content)	DTC detection condition	Possible causes
P0744	TORQUE CONVERTER (Torque converter clutch circuit intermittent)	When all of the following conditions are satisfied and this state is maintained for 30 seconds: <ul style="list-style-type: none"><li>• TCM power supply voltage: More than 11 V</li><li>• P0717 is not detected.</li><li>• CAN communication is normal</li><li>• Torque converter slip speed: (40+vehicle speed/2) rpm</li><li>• LU pressure: More than 0.2 MPa</li></ul>	<ul style="list-style-type: none"><li>• Torque converter clutch solenoid valve</li><li>• Control valve assembly</li><li>• Torque converter</li></ul>

### DTC CONFIRMATION PROCEDURE

#### CAUTION:

Be careful of the driving speed.

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2. PREPARATION BEFORE OPERATION

##### With CONSULT

1. Start the engine.
2. Select "Data Monitor" in "TRANSMISSION".
3. Select "FLUID TEMP".
4. Confirm that the CVT fluid temperature is in the following range.

FLUID TEMP : 20°C (68°F) or more

##### With GST

1. Start the engine.
2. Set the CVT fluid to 20°C (68°F) or more.

##### NOTE:

When the ambient temperature is 20°C (68°F), the CVT fluid usually increases to 50 to 80°C (122 to 176°F) with driving in an urban area for approximately 10 minutes.

Is the CVT fluid 20°C (68°F) or more?

YES >> GO TO 3.

- NO >> 1. Warm the transaxle.  
2. GO TO 3.

#### 3. CHECK DTC DETECTION

1. Drive the vehicle.
2. Maintain the following conditions for 10 seconds or more.

Selector lever : "D" position  
Accelerator pedal position : 0.5/8 or more  
Vehicle speed : 40 km/h (25 MPH) or more

3. Stop the vehicle.
4. Check the first trip DTC.

Is "P0744" detected?

YES >> Go to [TM-130. "Diagnosis Procedure"](#).

## P0744 TORQUE CONVERTER

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10E]

---

NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000011149366

#### 1. CHECK INTERMITTENT INCIDENT

---

Refer to [GI-47, "Intermittent Incident"](#).

Is the inspection result normal?

- YES >> Replace transaxle assembly. Refer to [TM-218, "Removal and Installation"](#).  
NO >> Repair or replace the malfunction items.

# P0746 PRESSURE CONTROL SOLENOID A

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10E]

## P0746 PRESSURE CONTROL SOLENOID A

### DTC Logic

INFOID:000000011149367

### DTC DETECTION LOGIC

DTC	CONSULT screen terms (Trouble diagnosis content)	DTC detection condition	Possible causes
P0746	PC SOLENOID A (Pressure Control Solenoid A Performance/Stuck Off)	<p>The detecting condition A or detection condition B is detected twice or more (1 second or more later after detection of the first) in the same DC under the following diagnosis conditions:</p> <ul style="list-style-type: none"> <li>• Diagnosis conditions                             <ul style="list-style-type: none"> <li>- Engine speed: More than 600 rpm</li> <li>- Primary pulley speed: More than 450 rpm</li> <li>- Idle is not being detected.</li> <li>- Acceleration/deceleration speed: <math>-0.49 \text{ m/s}^2</math> (<math>-0.05 \text{ G}</math>) or more</li> <li>- The primary pulley speed experienced 300 rpm or more and the secondary pulley speed experienced 250 rpm or more at least once.</li> <li>- Secondary pulley speed: More than 150 rpm</li> <li>- TCM power supply voltage: More than 11 V</li> </ul> </li> <li>• Detection condition A                             <ul style="list-style-type: none"> <li>- Status with the shifting ratio of the primary pulley speed/secondary pulley ratio exceeding 2.825 is 0.2 sec or more continuously.</li> </ul> </li> <li>• Detection condition B                             <ul style="list-style-type: none"> <li>- Status with the shifting ratio of the primary pulley speed/secondary pulley ratio exceeding 3.625 is 0.1 sec or more continuously.</li> </ul> </li> </ul>	<ul style="list-style-type: none"> <li>• Line pressure solenoid valve</li> <li>• Control valve assembly</li> </ul>

#### NOTE:

DC stands for "DRIVING CYCLE" and indicates a series of driving cycle of "Ignition switch OFF → ON → driving → OFF".

### DTC CONFIRMATION PROCEDURE

#### CAUTION:

**Be careful of the driving speed.**

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2. CHECK DTC DETECTION

1. Start the engine.
2. Drive the vehicle.
3. Maintain the following conditions for 10 seconds or more.

Selector lever	: "D" position
Accelerator pedal position	: 0.5/8 or more
Vehicle speed	: 40 km/h (25 MPH) or more

4. Stop the vehicle.
5. Check the first trip DTC.

#### Is "P0746" detected?

YES >> Go to [TM-132. "Diagnosis Procedure"](#).

## P0746 PRESSURE CONTROL SOLENOID A

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10E]

---

NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000011149368

#### 1. CHECK INTERMITTENT INCIDENT

---

Refer to [GI-47, "Intermittent Incident"](#).

Is the inspection result normal?

- YES >> Replace transaxle assembly. Refer to [TM-218, "Removal and Installation"](#).  
NO >> Repair or replace the malfunction items.

# P0776 PRESSURE CONTROL SOLENOID B

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10E]

## P0776 PRESSURE CONTROL SOLENOID B

### DTC Logic

INFOID:0000000011149369

### DTC DETECTION LOGIC

DTC	CONSULT screen terms (Trouble diagnosis content)	DTC detection condition	Possible cause
P0776	PC SOLENOID B (Pressure Control Solenoid "B" Performance/Stuck Off)	<p>When any of 1 or 2 is satisfied and this state is maintained for 10 seconds:</p> <ol style="list-style-type: none"> <li>1. When all of the following conditions are satisfied:                             <ul style="list-style-type: none"> <li>- DTC other than the applicable DTC is not detected.</li> <li>- Engine speed: More than 625 rpm</li> <li>- Selector lever: Other than P/N position</li> <li>- CVT fluid temperature: More than -20°C (-4°F)</li> <li>- TCM power supply: More than 11 V</li> <li>- The difference between instruction pressure of secondary pressure and 10-msec-ago instruction secondary pressure is 0 MPa or more</li> <li>- Instruction pressure of secondary pressure: 0 MPa or more</li> <li>- Instruction pressure of secondary pressure - secondary pressure: More than 1.2 MPa</li> </ul> </li> <li>When all of the following conditions are satisfied and this state is maintained for 5.5 seconds:                             <ul style="list-style-type: none"> <li>• DTC other than the applicable DTC is not detected.</li> <li>• CVT fluid temperature: More than -20°C (-4°F)</li> <li>• Selector lever: Other than P/N position</li> <li>• Secondary pressure - instruction pressure of secondary pressure: 1.2 MPa or more</li> </ul> </li> <li>2. When all of the following conditions are satisfied:                             <ul style="list-style-type: none"> <li>- DTC other than the applicable DTC is not detected.</li> <li>- CVT fluid temperature: More than -20°C (-4°F)</li> <li>- Selector lever: Other than P/N position</li> <li>- TCM power supply: More than 11 V</li> <li>- When all of the following conditions are satisfied and this state is maintained for 5.5 seconds:                                     <ul style="list-style-type: none"> <li>• DTC other than the applicable DTC is not detected.</li> <li>• CVT fluid temperature: More than -20°C (-4°F)</li> <li>• Selector lever: Other than P/N position</li> <li>• Secondary pressure - instruction pressure of secondary pressure: 1.2 MPa or more</li> </ul> </li> <li>- The difference between instruction pressure of secondary pressure and 10-msec-ago instruction secondary pressure is 0 MPa or more</li> <li>- Secondary pressure - instruction pressure of secondary pressure: More than 1.2 MPa</li> </ul> </li> </ol>	Secondary pressure solenoid valve

# P0776 PRESSURE CONTROL SOLENOID B

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10E]

---

## DTC CONFIRMATION PROCEDURE

### CAUTION:

**Always drive vehicle at a safe speed.**

### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

### 2. CHECK DTC DETECTION

- 
1. Start the engine.
  2. Drive the vehicle.
  3. Maintain the following condition for 20 seconds or more.

Selector lever : "D" position  
Vehicle speed : 40 km/h (25 MPH) or more  
Accelerator pedal position : 1.0/8 or more

4. Stop the vehicle.
5. Check the first trip DTC.

#### Is "P0776" detected?

YES >> Go to [TM-134, "Diagnosis Procedure"](#).  
NO >> INSPECTION END

## Diagnosis Procedure

INFOID:000000011149370

### 1. CHECK INTERMITTENT INCIDENT

---

Refer to [GI-47, "Intermittent Incident"](#).

#### Is the inspection result normal?

YES >> Replace transaxle assembly. Refer to [TM-218, "Removal and Installation"](#).  
NO >> Repair or replace the malfunction items.

# P0778 PRESSURE CONTROL SOLENOID B

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10E]

## P0778 PRESSURE CONTROL SOLENOID B

### DTC Logic

INFOID:0000000011149371

### DTC DETECTION LOGIC

DTC	CONSULT screen terms (Trouble diagnosis content)	DTC detection condition	Possible cause
P0778	PC SOLENOID B (Pressure Control Solenoid "B" Electrical)	When all of the following conditions are satisfied and this state is maintained for 0.48 seconds: • TCM power supply voltage: More than 11 V • TCM judges that solenoid valve circuit is shorted to ground.	<ul style="list-style-type: none"> <li>• Harness or connectors (Secondary pressure solenoid valve circuit is shorted to ground.)</li> <li>• Secondary pressure solenoid valve</li> </ul>

### DTC CONFIRMATION PROCEDURE

#### CAUTION:

**Always drive vehicle at a safe speed.**

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2. CHECK DTC DETECTION

1. Start the engine and wait for 5 seconds or more.
2. Check the first trip DTC.

Is "P0778" detected?

- YES >> Go to [TM-135, "Diagnosis Procedure"](#).  
NO >> INSPECTION END

### Diagnosis Procedure

INFOID:0000000011149372

#### 1. CHECK CIRCUIT BETWEEN TCM AND CVT UNIT

1. Turn ignition switch OFF.
2. Disconnect TCM connector and CVT unit connector.
3. Check continuity between TCM harness connector terminal and ground.

TCM		—	Continuity
Connector	Terminal		
F15	39	Ground	Not existed

Is the inspection result normal?

- YES >> GO TO 2.  
NO >> Repair or replace damaged parts.

#### 2. CHECK SECONDARY PRESSURE SOLENOID VALVE CIRCUIT

Check continuity between CVT unit harness connector terminal and ground.

CVT unit		—	Condition	Resistance
Connector	Terminal			
F209	3	Ground	CVT fluid temperature: 20°C (68°F)	5.5 – 7.0 Ω
			CVT fluid temperature: 50°C (122°F)	6.0 – 8.0 Ω
			CVT fluid temperature: 80°C (176°F)	6.5 – 8.5 Ω

Is the inspection result normal?

- YES >> Check intermittent incident. Refer to [GI-47, "Intermittent Incident"](#).

## P0778 PRESSURE CONTROL SOLENOID B

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10E]

---

NO >> There is malfunction of secondary pressure solenoid valve circuit. Replace transaxle assembly.  
Refer to [TM-218, "Removal and Installation"](#).



# P0779 PRESSURE CONTROL SOLENOID B

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10E]

## P0779 PRESSURE CONTROL SOLENOID B

### DTC Logic

INFOID:000000011149373

### DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC detection condition	Possible causes
P0779	Pressure control solenoid B Intermittent	When all of the following conditions are satisfied and this state is maintained for 0.2 seconds: <ul style="list-style-type: none"> <li>• TCM power supply voltage: More than 11 V</li> <li>• P0778 is not detected</li> <li>• TCM judges that solenoid valve circuit is open or shorted to power supply.</li> </ul>	<ul style="list-style-type: none"> <li>• Harness or connector (Secondary pressure solenoid valve circuit open or shorted to power supply)</li> <li>• Secondary pressure solenoid valve</li> </ul>

### DTC CONFIRMATION PROCEDURE

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2. CHECK DTC DETECTION

1. Start the engine.
2. Drive the vehicle.
3. Maintain the following conditions for 5 seconds or more.

Selector lever : "D" position  
 Vehicle speed : 40 km/h (25 MPH) or more

4. Stop the vehicle.
5. Check the first trip DTC.

Is "P0779" detected?

- YES >> Go to [TM-137, "Diagnosis Procedure"](#).  
 NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000011149374

#### 1. CHECK CIRCUIT BETWEEN TCM AND CVT UNIT

1. Turn ignition switch OFF.
2. Disconnect TCM connector and CVT unit connector.
3. Check continuity between TCM harness connector terminal and CVT unit harness connector terminal.

TCM		CVT unit		Continuity
Connector	Terminal	Connector	Terminal	
F15	39	F46	3	Existed

Is the inspection result normal?

- YES >> GO TO 2.  
 NO >> Repair or replace damaged parts.

#### 2. CHECK SECONDARY PRESSURE SOLENOID VALVE CIRCUIT

Check continuity between CVT unit harness connector terminal and ground.

# P0779 PRESSURE CONTROL SOLENOID B

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10E]

CVT unit		—	Condition	Resistance
Connector	Terminal			
F209	3	Ground	CVT fluid temperature: 20°C (68°F)	5.5 – 7.0 Ω
			CVT fluid temperature: 50°C (122°F)	6.0 – 8.0 Ω
			CVT fluid temperature: 80°C (176°F)	6.5 – 8.5 Ω

Is the inspection result normal?

- YES >> Check intermittent incident. Refer to [GI-47. "Intermittent Incident"](#).
- NO >> There is malfunction of secondary pressure solenoid valve circuit. Replace transaxle assembly.  
Refer to [TM-218. "Removal and Installation"](#).

# P0841 TRANSMISSION FLUID PRESSURE SEN/SW A

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10E]

## P0841 TRANSMISSION FLUID PRESSURE SEN/SW A

### DTC Logic

INFOID:0000000011149375

### DTC DETECTION LOGIC

DTC	CONSULT screen terms (Trouble diagnosis content)	DTC detection condition	Possible cause
P0841	FLUID PRESS SEN/SW A (Transmission Fluid Pressure Sensor/Switch "A" Circuit Range/Performance)	When all of the following conditions are satisfied and this state is maintained for 5 seconds: <ul style="list-style-type: none"><li>• TCM power supply voltage: More than 11 V</li><li>• DTC other than the applicable DTC is not detected.</li><li>• Primary pulley speed: 300 rpm or more</li><li>• Secondary pulley speed: 250 rpm or more</li><li>• Target speed for shifting: Less than 0.1 seconds</li><li>• Primary pulley pressure is outside the specified value.</li></ul>	<ul style="list-style-type: none"><li>• Harness or connectors (Secondary pressure sensor circuit is open or shorted.)</li><li>• Harness or connectors (Primary pressure sensor circuit is open or shorted.)</li><li>• Secondary pressure sensor</li></ul>

### DTC CONFIRMATION PROCEDURE

#### CAUTION:

**Always drive vehicle at a safe speed.**

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2. CHECK DTC DETECTION

1. Start the engine.
2. Drive the vehicle.
3. Maintain the following condition for 10 seconds or more.

Selector lever : "D" position

Vehicle speed : Constant speed of 40 km/h (25 MPH)

#### CAUTION:

**Also keep the accelerator pedal position constant.**

4. Stop the vehicle.
5. Check the first trip DTC.

Is "P0841" detected?

YES >> Go to [TM-139, "Diagnosis Procedure"](#).

NO >> INSPECTION END

### Diagnosis Procedure

INFOID:0000000011149376

#### 1. CHECK INTERMITTENT INCIDENT

Refer to [GI-47, "Intermittent Incident"](#).

Is the inspection result normal?

YES >> Replace the transaxle assembly. Refer to [TM-218, "Removal and Installation"](#).

NO >> Repair or replace damaged parts.

# P0847 TRANSMISSION FLUID PRESSURE SEN/SW B

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10E]

## P0847 TRANSMISSION FLUID PRESSURE SEN/SW B

### DTC Logic

INFOID:0000000011149377

### DTC DETECTION LOGIC

DTC	CONSULT screen terms (Trouble diagnosis content)	DTC detection condition	Possible causes
P0847	FLUID PRESS SEN/SW B (Transmission Fluid Pressure Sensor/Switch B Circuit Low)	When all of the following conditions are satisfied and this state is maintained for 5 seconds: <ul style="list-style-type: none"> <li>CVT fluid temperature: More than <math>-20^{\circ}\text{C}</math> (<math>-4^{\circ}\text{F}</math>)</li> <li>TCM power supply voltage: 11 V or more</li> <li>Secondary pressure sensor voltage: 0.09 V or less</li> </ul>	<ul style="list-style-type: none"> <li>Harness or connector (Secondary pressure sensor circuit is open or shorted to ground)</li> <li>Secondary pressure sensor</li> <li>Control valve assembly</li> </ul>

### DTC CONFIRMATION PROCEDURE

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2. CHECK DTC DETECTION

##### With CONSULT

- Start the engine.
- Select "Data Monitor" in "TRANSMISSION".
- Select "FLUID TEMP".
- Maintain the following conditions for 10 seconds or more.

FLUID TEMP :  $-20^{\circ}\text{C}$  ( $-4^{\circ}\text{F}$ )

- Check the first trip DTC.

##### With GST

- Start the engine and wait for at least 10 seconds.

##### **CAUTION:**

**When the ambient temperature is less than  $-20^{\circ}\text{C}$  ( $-4^{\circ}\text{F}$ ) and the engine is cold, warm up the engine for approximately 5 minutes.**

- Check the first trip DTC.

##### Is "P0847" detected?

YES >> Go to [TM-140, "Diagnosis Procedure"](#).

NO >> INSPECTION END

### Diagnosis Procedure

INFOID:0000000011149378

#### 1. CHECK TCM INPUT SIGNALS

- Turn ignition switch OFF.
- Start the engine.
- Check voltage between TCM harness connector terminals.

+		-	Condition	Voltage
TCM				
Connector	Terminal			
F15	16	Ground	<ul style="list-style-type: none"> <li>Selector lever: "N" position</li> <li>At idle</li> </ul>	1.67 – 1.69 V

##### Is the inspection result normal?

# P0847 TRANSMISSION FLUID PRESSURE SEN/SW B

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10E]

- YES >> Check intermittent incident. Refer to [GI-47. "Intermittent Incident"](#).
- NO >> GO TO 2.

## 2.CHECK CIRCUIT BETWEEN TCM AND CVT UNIT (PART 1)

1. Turn ignition switch OFF.
2. Disconnect TCM connector and CVT unit connector.
3. Check continuity between TCM harness connector terminals and CVT unit harness connector terminals.

TCM		CVT unit		Continuity
Connector	Terminal	Connector	Terminal	
F15	11	F46	18	Existed
	16		14	
	26		22	

Is the inspection result normal?

- YES >> GO TO 3.
- NO >> Repair or replace malfunctioning parts.

## 3.CHECK CIRCUIT BETWEEN TCM AND CVT UNIT (PART 2)

Check continuity between TCM harness connector terminals and ground.

TCM		—	Continuity
Connector	Terminal		
F15	16	Ground	Not existed
	26		

Is the inspection result normal?

- YES >> There is malfunction of secondary pressure sensor circuit. Replace transaxle assembly. Refer to [TM-218. "Removal and Installation"](#).
- NO >> Repair or replace malfunctioning parts.

A  
B  
C  
TM  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# P0848 TRANSMISSION FLUID PRESSURE SEN/SW B

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10E]

## P0848 TRANSMISSION FLUID PRESSURE SEN/SW B

### DTC Logic

INFOID:000000011149379

### DTC DETECTION LOGIC

DTC	CONSULT screen terms (Trouble diagnosis content)	DTC detection condition	Possible causes
P0848	FLUID PRESS SEN/SW B (Transmission Fluid Pressure Sensor/Switch B Circuit Low)	When all of the following conditions are satisfied and this state is maintained for 5 seconds: <ul style="list-style-type: none"> <li>• CVT fluid temperature: More than <math>-20^{\circ}\text{C}</math> (<math>-4^{\circ}\text{F}</math>)</li> <li>• TCM power supply voltage: More than 11 V</li> <li>• Instruction secondary pressure: 5.7 MPa or less</li> <li>• Secondary pressure sensor voltage: 4.7 V or more</li> </ul>	<ul style="list-style-type: none"> <li>• Harness or connector (Secondary pressure sensor circuit is shorted to power supply)</li> <li>• Secondary pressure sensor</li> <li>• Control valve assembly</li> </ul>

### DTC CONFIRMATION PROCEDURE

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, the ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2. CHECK DTC DETECTION

##### With CONSULT

1. Start the engine.
2. Select "Data Monitor" in "TRANSMISSION".
3. Select "FLUID TEMP".
4. Maintain the following conditions for 10 seconds or more.

FLUID TEMP : More than  $-20^{\circ}\text{C}$  ( $-4^{\circ}\text{F}$ )

5. Check the first trip DTC.

##### With GST

1. Start the engine and wait for at least 10 seconds.

##### **CAUTION:**

**When the ambient temperature is less than  $-20^{\circ}\text{C}$  ( $-4^{\circ}\text{F}$ ) and the engine is cold, warm up the engine for approximately 5 minutes.**

2. Check the first trip DTC.

##### Is "P0848" detected?

- YES >> Go to [TM-142, "Diagnosis Procedure"](#).  
 NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000011149380

#### 1. CHECK TCM INPUT SIGNALS

1. Turn ignition switch OFF.
2. Start the engine.
3. Check voltage between TCM harness connector terminals.

+		-	Condition	Voltage
TCM				
Connector	Terminal			
F15	16	Ground	<ul style="list-style-type: none"> <li>• Selector lever: "N" position</li> <li>• At idle</li> </ul>	1.67 – 1.69 V

# P0848 TRANSMISSION FLUID PRESSURE SEN/SW B

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10E]

Is the inspection result normal?

- YES >> Check intermittent incident. Refer to [GI-47, "Intermittent Incident"](#).
- NO >> GO TO 2.

## 2. CHECK SECONDARY PRESSURE SENSOR POWER CIRCUIT

1. Turn ignition switch OFF.
2. Connect TCM connector.
3. Disconnect CVT unit connector.
4. Turn ignition switch ON.
5. Check voltage between CVT unit harness connector terminal and ground.

+		-	Voltage (Approx.)
CVT unit			
Connector	Terminal		
F46	22	Ground	5.0 V

Is the inspection result normal?

- YES >> GO TO 3.
- NO >> Repair or replace malfunctioning parts.

## 3. CHECK SECONDARY PRESSURE SENSOR SIGNAL CIRCUIT

Check voltage between CVT unit harness connector terminal and ground.

+		-	Voltage (Approx.)
CVT unit			
Connector	Terminal		
F46	14	Ground	0 V

Is the inspection result normal?

- YES >> There is malfunction of secondary pressure sensor circuit. Replace transaxle assembly. Refer to [TM-218, "Removal and Installation"](#).
- NO >> Repair or replace malfunctioning parts.

A  
B  
C  
TM  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# P084C TRANSMISSION FLUID PRESSURE SEN/SW H

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10E]

## P084C TRANSMISSION FLUID PRESSURE SEN/SW H

### DTC Logic

INFOID:0000000011149381

### DTC DETECTION LOGIC

DTC	CONSULT screen terms (Trouble diagnosis content)	DTC detection condition	Possible causes
P084C	FLUID PRESS SEN/SW H (Transmission Fluid Pressure Sensor/Switch H Circuit Low)	When all of the following conditions are satisfied and this state is maintained for 5 seconds: <ul style="list-style-type: none"> <li>• CVT fluid temperature: More than <math>-20^{\circ}\text{C}</math> (<math>-4^{\circ}\text{F}</math>)</li> <li>• TCM power supply voltage: More than 11 V</li> <li>• Primary pressure sensor voltage: 0.09 V or less</li> </ul>	<ul style="list-style-type: none"> <li>• Harness or connector (Primary pressure sensor circuit is open or shorted to ground)</li> <li>• Primary pressure sensor</li> <li>• Control valve assembly</li> </ul>

### DTC CONFIRMATION PROCEDURE

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2. CHECK DTC DETECTION

##### With CONSULT

1. Start the engine.
2. Select "Data Monitor" in "TRANSMISSION".
3. Select "FLUID TEMP".
4. Maintain the following conditions for 10 seconds or more.

FLUID TEMP : More than  $-20^{\circ}\text{C}$  ( $-4^{\circ}\text{F}$ )

5. Check the first trip DTC.

##### With GST

1. Start the engine and wait for at least 10 seconds.

##### **CAUTION:**

**When the ambient temperature is less than  $-20^{\circ}\text{C}$  ( $-4^{\circ}\text{F}$ ) and the engine is cold, warm up the engine for approximately 5 minutes.**

2. Check the first trip DTC.

Is "P084C" detected?

YES >> Go to [TM-144, "Diagnosis Procedure"](#).

NO >> INSPECTION END

### Diagnosis Procedure

INFOID:0000000011149382

#### 1. CHECK TCM INPUT SIGNALS

1. Turn ignition switch OFF.
2. Start the engine.
3. Check voltage between TCM harness connector terminals.

+		-	Condition	Voltage
TCM				
Connector	Terminal			
F15	17	Ground	<ul style="list-style-type: none"> <li>• Selector lever: "N" position</li> <li>• At idle</li> </ul>	0.90 – 0.92 V

Is the inspection result normal?



# P084C TRANSMISSION FLUID PRESSURE SEN/SW H

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10E]

- YES >> Check intermittent incident. Refer to [GI-47, "Intermittent Incident"](#).
- NO >> GO TO 2.

## 2.CHECK CIRCUIT BETWEEN TCM AND CVT UNIT (PART 1)

1. Turn ignition switch OFF.
2. Disconnect TCM connector and CVT unit connector.
3. Check continuity between TCM harness connector terminals and CVT unit harness connector terminals.

TCM		CVT unit		Continuity
Connector	Terminal	Connector	Terminal	
F15	11	F46	18	Existed
	17		13	
	26		22	

Is the inspection result normal?

- YES >> GO TO 3.
- NO >> Repair or replace malfunctioning parts.

## 3.CHECK CIRCUIT BETWEEN TCM AND CVT UNIT (PART 2)

Check continuity between TCM harness connector terminals and ground.

TCM		—	Continuity
Connector	Terminal		
F15	17	Ground	Not existed
	26		

Is the inspection result normal?

- YES >> There is malfunction of primary pressure sensor circuit. Replace transaxle assembly. Refer to [TM-218, "Removal and Installation"](#).
- NO >> Repair or replace malfunctioning parts.

A  
B  
C  
TM  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# P084D TRANSMISSION FLUID PRESSURE SEN/SW H

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10E]

## P084D TRANSMISSION FLUID PRESSURE SEN/SW H

### DTC Logic

INFOID:0000000011149383

### DTC DETECTION LOGIC

DTC	CONSULT screen terms (Trouble diagnosis content)	DTC detection condition	Possible causes
P084D	FLUID PRESS SEN/SW H (Transmission Fluid Pressure Sensor/Switch "H" Circuit High)	When all of the following conditions are satisfied and this state is maintained for 5 seconds: <ul style="list-style-type: none"> <li>CVT fluid temperature: More than <math>-20^{\circ}\text{C}</math> (<math>-4^{\circ}\text{F}</math>)</li> <li>TCM power supply voltage: More than 11 V</li> <li>Primary pressure sensor voltage: 4.7 V or more</li> </ul>	<ul style="list-style-type: none"> <li>Harness or connector (Primary pressure sensor circuit is open or shorted to ground)</li> <li>Primary pressure sensor</li> <li>Control valve assembly</li> </ul>

### DTC CONFIRMATION PROCEDURE

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2. CHECK DTC DETECTION

##### With CONSULT

- Start the engine.
- Select "Data Monitor" in "TRANSMISSION".
- Select "FLUID TEMP".
- Maintain the following conditions for 10 seconds or more.

FLUID TEMP : More than  $-20^{\circ}\text{C}$  ( $-4^{\circ}\text{F}$ )

- Check the first trip DTC.

##### With GST

- Start the engine and wait for at least 10 seconds.

##### **CAUTION:**

**When the ambient temperature is less than  $-20^{\circ}\text{C}$  ( $-4^{\circ}\text{F}$ ) and the engine is cold, warm up the engine for approximately 5 minutes.**

- Check the first trip DTC.

##### Is "P084D" detected?

YES >> Go to [TM-146, "Diagnosis Procedure"](#).

NO >> INSPECTION END

### Diagnosis Procedure

INFOID:0000000011149384

#### 1. CHECK TCM INPUT SIGNALS

- Turn ignition switch OFF.
- Start the engine.
- Check voltage between TCM harness connector terminals.

+		-	Condition	Voltage
TCM				
Connector	Terminal			
F15	17	Ground	<ul style="list-style-type: none"> <li>Selector lever: "N" position</li> <li>At idle</li> </ul>	0.90 – 0.92 V

##### Is the inspection result normal?

# P084D TRANSMISSION FLUID PRESSURE SEN/SW H

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10E]

- YES >> Check intermittent incident. Refer to [GI-47, "Intermittent Incident"](#).
- NO >> GO TO 2.

## 2. CHECK PRIMARY PRESSURE SENSOR POWER CIRCUIT

1. Turn ignition switch OFF.
2. Connect TCM connector.
3. Disconnect CVT unit connector.
4. Turn ignition switch ON.
5. Check voltage between CVT unit harness connector terminal and ground.

+		-	Voltage (Approx.)
CVT unit			
Connector	Terminal		
F46	22	Ground	5.0 V

Is the inspection result normal?

- YES >> GO TO 3.
- NO >> Repair or replace malfunctioning parts.

## 3. CHECK PRIMARY PRESSURE SENSOR SIGNAL CIRCUIT

Check voltage between CVT unit harness connector terminal and ground.

+		-	Voltage (Approx.)
CVT unit			
Connector	Terminal		
F46	13	Ground	0 V

Is the inspection result normal?

- YES >> There is malfunction of primary pressure sensor circuit. Replace transaxle assembly. Refer to [TM-218, "Removal and Installation"](#).
- NO >> Repair or replace malfunctioning parts.

# P0863 TCM COMMUNICATION

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10E]

## P0863 TCM COMMUNICATION

### DTC Logic

INFOID:0000000011149385

### DTC DETECTION LOGIC

DTC	CONSULT screen terms (Trouble diagnosis content)	DTC detection condition	Possible causes
P0863	CONTROL UNIT (CAN) (TCM Communication Circuit)	An error is detected at the initial CAN diagnosis of TCM.	TCM

### DTC CONFIRMATION PROCEDURE

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2. CHECK DTC DETECTION

1. Start the engine.
2. Check the DTC.

Is "P0863" detected?

- YES >> Go to [TM-148, "Diagnosis Procedure"](#).  
NO >> INSPECTION END

### Diagnosis Procedure

INFOID:0000000011149386

#### 1. CHECK INTERMITTENT INCIDENT

Refer to [GI-47, "Intermittent Incident"](#).

Is the inspection result normal?

- YES >> Replace TCM. Refer to [TM-198, "Removal and Installation"](#).  
NO >> Repair or replace malfunctioning parts.

# P0890 TCM

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10E]

## P0890 TCM

### DTC Logic

INFOID:0000000011149387

### DTC DETECTION LOGIC

DTC	CONSULT screen terms (Trouble diagnosis content)	DTC detection condition	Possible causes
P0890	TCM (Transmission Control Module Power Relay Sense Circuit Low)	When all of the following conditions are satisfied and this state is maintained for 0.2 seconds: • TCM power supply voltage: More than 11 V • Battery voltage: Less than 8.4 V	<ul style="list-style-type: none"> <li>• Harness or connector (TCM power supply (back-up) circuit is open or shorted.)</li> <li>• TCM</li> </ul>

### DTC CONFIRMATION PROCEDURE

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2. CHECK DTC DETECTION

1. Start the engine and wait for 5 seconds or more.
2. Check the DTC.

Is "P0890" detected?

YES >> Go to [TM-149, "Diagnosis Procedure"](#).

NO >> INSPECTION END

### Diagnosis Procedure

INFOID:0000000011149388

#### 1. CHECK TCM POWER SUPPLY (BACK-UP) CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect TCM connector.
3. Check voltage between TCM harness connector terminals and ground.

TCM		Ground	Voltage
Connector	Terminal		
F15	45	Ground	10 – 16 V
	46		

Is the inspection result normal?

YES >> GO TO 3.

NO >> GO TO 2.

#### 2. DETECT MALFUNCTIONING ITEMS

Check the following items:

- Open circuit or short circuit in harness between battery positive terminal and TCM harness connector terminals 45, and 46.
- 10A fuse [No.25, located in the fuse block (J/B)]. Refer to [PG-80, "Terminal Arrangement"](#).

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-47, "Intermittent Incident"](#).

NO >> Repair or replace malfunctioning parts.

#### 3. CHECK INTERMITTENT INCIDENT

Refer to [GI-47, "Intermittent Incident"](#).

Is the inspection result normal?

## P0890 TCM

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10E]

---

- YES >> Replace the TCM. Refer to [TM-198. "Removal and Installation"](#).
- NO >> Repair or replace malfunctioning parts.

# P0962 PRESSURE CONTROL SOLENOID A

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10E]

## P0962 PRESSURE CONTROL SOLENOID A

### DTC Logic

INFOID:0000000011149389

### DTC DETECTION LOGIC

DTC	CONSULT screen terms (Trouble diagnosis content)	DTC detection condition	Possible causes
P0962	PC SOLENOID A (Pressure Control Solenoid A Control Circuit Low)	When all of the following conditions are satisfied and this state is maintained for 0.2 seconds: <ul style="list-style-type: none"> <li>• TCM power supply voltage: More than 11 V</li> <li>• TCM judges that solenoid valve circuit is shorted to ground.</li> </ul>	<ul style="list-style-type: none"> <li>• Harness or connector (Line pressure solenoid valve circuit is shorted to ground)</li> <li>• Line pressure solenoid valve</li> </ul>

### DTC CONFIRMATION PROCEDURE

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2. CHECK DTC DETECTION

1. Start the engine and wait for 5 seconds or more.
2. Check the first trip DTC.

Is "P0962" detected?

- YES >> Go to [TM-151, "Diagnosis Procedure"](#).  
 NO >> INSPECTION END

### Diagnosis Procedure

INFOID:0000000011149390

#### 1. CHECK CIRCUIT BETWEEN TCM AND CVT UNIT

1. Turn ignition switch OFF.
2. Disconnect TCM connector and CVT unit connector.
3. Check continuity between TCM harness connector terminal and ground.

TCM		—	Continuity
Connector	Terminal		
F15	30	Ground	Not existed

Is the inspection result normal?

- YES >> GO TO 2.  
 NO >> Repair or replace damaged parts.

#### 2. CHECK LINE PRESSURE SOLENOID VALVE CIRCUIT

Check continuity between CVT unit harness connector terminal and ground.

CVT unit		—	Condition	Resistance
Connector	Terminal			
F209	1	Ground	CVT fluid temperature: 20°C (68°F)	5.5 – 7.0 Ω
			CVT fluid temperature: 50°C (122°F)	6.0 – 8.0 Ω
			CVT fluid temperature: 80°C (176°F)	6.5 – 8.5 Ω

Is the inspection result normal?

- YES >> Check intermittent incident. Refer to [GI-47, "Intermittent Incident"](#).

## P0962 PRESSURE CONTROL SOLENOID A

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10E]

---

NO >> There is malfunction of line pressure solenoid valve circuit. Replace transaxle assembly. Refer to [TM-218, "Removal and Installation"](#).



# P0963 PRESSURE CONTROL SOLENOID A

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10E]

## P0963 PRESSURE CONTROL SOLENOID A

### DTC Logic

INFOID:0000000011149391

### DTC DETECTION LOGIC

DTC	CONSULT screen terms (Trouble diagnosis content)	DTC detection condition	Possible causes
P0963	PC SOLENOID A (Pressure Control Solenoid A Control Circuit High)	When all of the following conditions are satisfied and this state is maintained for 0.2 seconds: <ul style="list-style-type: none"> <li>• TCM power supply voltage: More than 11 V</li> <li>• P0962 is not detected</li> <li>• TCM judges that solenoid valve circuit is open.</li> </ul>	<ul style="list-style-type: none"> <li>• Harness or connector (Line pressure solenoid valve circuit is open or shorted to power supply)</li> <li>• Line pressure solenoid valve</li> </ul>

### DTC CONFIRMATION PROCEDURE

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2. CHECK DTC DETECTION

1. Start the engine and wait for 5 seconds or more.
2. Check the first trip DTC.

Is "P0963" detected?

- YES >> Go to [TM-153, "Diagnosis Procedure"](#).  
 NO >> INSPECTION END

### Diagnosis Procedure

INFOID:0000000011149392

#### 1. CHECK CIRCUIT BETWEEN TCM AND CVT UNIT

1. Turn ignition switch OFF.
2. Disconnect TCM connector and CVT unit connector.
3. Check continuity between TCM harness connector terminal and ground.

TCM		CVT unit		Continuity
Connector	Terminal	Connector	Terminal	
F15	30	F46	1	Existed

Is the inspection result normal?

- YES >> GO TO 2.  
 NO >> Repair or replace damaged parts.

#### 2. CHECK LINE PRESSURE SOLENOID VALVE CIRCUIT

Check continuity between CVT unit harness connector terminal and ground.

CVT unit		—	Condition	Resistance
Connector	Terminal			
F209	1	Ground	CVT fluid temperature: 20°C (68°F)	5.5 – 7.0 Ω
			CVT fluid temperature: 50°C (122°F)	6.0 – 8.0 Ω
			CVT fluid temperature: 80°C (176°F)	6.5 – 8.5 Ω

Is the inspection result normal?

- YES >> Check intermittent incident. Refer to [GI-47, "Intermittent Incident"](#).

## P0963 PRESSURE CONTROL SOLENOID A

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10E]

---

NO >> There is malfunction of line pressure solenoid valve circuit. Replace transaxle assembly. Refer to [TM-218, "Removal and Installation"](#).

# P0965 PRESSURE CONTROL SOLENOID B

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10E]

## P0965 PRESSURE CONTROL SOLENOID B

### DTC Logic

INFOID:0000000011149393

### DTC DETECTION LOGIC

DTC	CONSULT screen terms (Trouble diagnosis content)	DTC detection condition	Possible causes
P0965	PC SOLENOID B (Pressure Control Solenoid B Control Circuit Range Performance)	<p>When any of 1 or 2 is satisfied and this state is maintained for 10 seconds:</p> <ol style="list-style-type: none"> <li>1. When all of the following conditions are satisfied:                             <ul style="list-style-type: none"> <li>- DTC other than the applicable DTC is not detected.</li> <li>- Engine speed: More than 625 rpm</li> <li>- Selector lever: Other than P/N position</li> <li>- CVT fluid temperature: More than -20°C (-4°F)</li> <li>- TCM power supply: More than 11 V</li> <li>- The difference between instruction pressure of primary pressure and 10-msec-ago instruction primary pressure is 0 MPa or more</li> <li>- Instruction pressure of primary pressure: 0.86 MPa or more</li> <li>- Instruction pressure of primary pressure - primary pressure: More than 1.2 MPa</li> </ul> </li> <li>When all of the following conditions are satisfied and this state is maintained for 1 second:                             <ul style="list-style-type: none"> <li>• DTC other than the applicable DTC is not detected.</li> <li>• CVT fluid temperature: More than -20°C (-4°F)</li> <li>• Selector lever: Other than P/N position</li> <li>• Engine speed: More than 625 rpm</li> <li>• Instruction pressure of primary pressure: More than 2 MPa</li> <li>• Primary pressure: 0.4 MPa or less</li> </ul> </li> <li>2. When all of the following conditions are satisfied:                             <ul style="list-style-type: none"> <li>- DTC other than the applicable DTC is not detected.</li> <li>- CVT fluid temperature: More than -20°C (-4°F)</li> <li>- Selector lever: Other than P/N position</li> <li>- TCM power supply: More than 11 V</li> </ul> </li> <li>When all of the following conditions are satisfied and this state is maintained for 5.5 seconds:                             <ul style="list-style-type: none"> <li>• DTC other than the applicable DTC is not detected.</li> <li>• CVT fluid temperature: More than -20°C (-4°F)</li> <li>• Selector lever: Other than P/N position</li> <li>• Primary pressure - instruction pressure of primary pressure: 1.2 MPa or more</li> </ul> </li> <li>- The difference between instruction pressure of primary pressure and 10-msec-ago instruction primary pressure is 0 MPa or more</li> <li>- Primary pressure - instruction pressure of primary pressure: More than 1.2 MPa</li> </ol>	<ul style="list-style-type: none"> <li>• Harness or connector (Primary pressure solenoid valve circuit is open or shorted.)</li> <li>• Primary pressure solenoid valve</li> </ul>

### DTC CONFIRMATION PROCEDURE

A  
B  
C  
TM  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# P0965 PRESSURE CONTROL SOLENOID B

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10E]

## 1. PREPARATION BEFORE WORK

---

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

## 2. CHECK DTC DETECTION

---

1. Start the engine.
2. Drive the vehicle.
3. Maintain the following conditions for 20 seconds or more.

Vehicle speed : 40 km/h (25 MPH) or more

4. Stop the vehicle.
5. Check the first trip DTC.

Is "P0965" detected?

- YES >> Go to [TM-156, "Diagnosis Procedure"](#).  
NO >> INSPECTION END

## Diagnosis Procedure

INFOID:000000011149394

### 1. CHECK INTERMITTENT INCIDENT

---

Refer to [GI-47, "Intermittent Incident"](#).

Is the inspection result normal?

- YES >> Replace transaxle assembly. Refer to [TM-218, "Removal and Installation"](#).  
NO >> Repair or replace malfunctioning parts.

# P0966 PRESSURE CONTROL SOLENOID B

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10E]

## P0966 PRESSURE CONTROL SOLENOID B

### DTC Logic

INFOID:0000000011149395

### DTC DETECTION LOGIC

DTC	CONSULT screen terms (Trouble diagnosis content)	DTC detection condition	Possible causes
P0966	PC SOLENOID B (Pressure Control Solenoid B Control Circuit Low)	When all of the following conditions are satisfied and this state is maintained for 0.48 seconds: <ul style="list-style-type: none"> <li>• TCM power supply voltage: More than 11 V</li> <li>• TCM judges that solenoid valve circuit is shorted to ground.</li> </ul>	<ul style="list-style-type: none"> <li>• Harness or connector (Primary pressure solenoid valve circuit shorted to ground)</li> <li>• Primary pressure solenoid valve</li> </ul>

### DTC CONFIRMATION PROCEDURE

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2. CHECK DTC DETECTION

1. Start the engine and wait for 5 seconds or more.
2. Check the first trip DTC.

Is "P0966" detected?

- YES >> Go to [TM-157, "Diagnosis Procedure"](#).  
 NO >> INSPECTION END

### Diagnosis Procedure

INFOID:0000000011149396

#### 1. CHECK CIRCUIT BETWEEN TCM AND CVT UNIT

1. Turn ignition switch OFF.
2. Disconnect TCM connector and CVT unit connector.
3. Check continuity between TCM harness connector terminal and ground.

TCM		—	Continuity
Connector	Terminal		
F15	40	Ground	Not existed

Is the inspection result normal?

- YES >> GO TO 2.  
 NO >> Repair or replace damaged parts.

#### 2. CHECK PRIMARY PRESSURE SOLENOID VALVE CIRCUIT

Check continuity between CVT unit harness connector terminal and ground.

CVT unit		—	Condition	Resistance
Connector	Terminal			
F209	2	Ground	CVT fluid temperature: 20°C (68°F)	5.5 – 7.0 Ω
			CVT fluid temperature: 50°C (122°F)	6.0 – 8.0 Ω
			CVT fluid temperature: 80°C (176°F)	6.5 – 8.5 Ω

Is the inspection result normal?

- YES >> Check intermittent incident. Refer to [GI-47, "Intermittent Incident"](#).

## P0966 PRESSURE CONTROL SOLENOID B

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10E]

---

NO >> There is malfunction of primary pressure solenoid valve circuit. Replace transaxle assembly.  
Refer to [TM-218, "Removal and Installation"](#).

# P0967 PRESSURE CONTROL SOLENOID B

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10E]

## P0967 PRESSURE CONTROL SOLENOID B

### DTC Logic

INFOID:000000011149397

### DTC DETECTION LOGIC

DTC	CONSULT screen terms (Trouble diagnosis content)	DTC detection condition	Possible causes
P0967	PC SOLENOID B (Pressure Control Solenoid B Control Circuit High)	When all of the following conditions are satisfied and this state is maintained for 0.2 seconds: <ul style="list-style-type: none"> <li>• TCM power supply voltage: More than 11 V</li> <li>• P0966 is not detected</li> <li>• TCM judges that solenoid valve circuit is open.</li> </ul>	<ul style="list-style-type: none"> <li>• Harness or connector (Primary pressure solenoid valve circuit open or shorted to power supply)</li> <li>• Primary pressure solenoid valve</li> </ul>

### DTC CONFIRMATION PROCEDURE

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2. CHECK DTC DETECTION

1. Start the engine and wait for 5 seconds or more.
2. Check the first trip DTC.

Is "P0967" detected?

- YES >> Go to [TM-159, "Diagnosis Procedure"](#).  
 NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000011149398

#### 1. CHECK CIRCUIT BETWEEN TCM AND CVT UNIT

1. Turn ignition switch OFF.
2. Disconnect TCM connector and CVT unit connector.
3. Check continuity between TCM harness connector terminal and ground.

TCM		CVT unit		Continuity
Connector	Terminal	Connector	Terminal	
F15	40	F46	2	Existed

Is the inspection result normal?

- YES >> GO TO 2.  
 NO >> Repair or replace damaged parts.

#### 2. CHECK PRIMARY PRESSURE SOLENOID VALVE CIRCUIT

Check continuity between CVT unit harness connector terminal and ground.

CVT unit		—	Condition	Resistance
Connector	Terminal			
F209	2	Ground	CVT fluid temperature: 20°C (68°F)	5.5 – 7.0 Ω
			CVT fluid temperature: 50°C (122°F)	6.0 – 8.0 Ω
			CVT fluid temperature: 80°C (176°F)	6.5 – 8.5 Ω

Is the inspection result normal?

- YES >> Check intermittent incident. Refer to [GI-47, "Intermittent Incident"](#).

## P0967 PRESSURE CONTROL SOLENOID B

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10E]

---

NO >> There is malfunction of primary pressure solenoid valve circuit. Replace transaxle assembly.  
Refer to [TM-218, "Removal and Installation"](#).



# P2765 INPUT SPEED SENSOR B

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10E]

## P2765 INPUT SPEED SENSOR B

### DTC Logic

INFOID:000000011149399

### DTC DETECTION LOGIC

DTC	CONSULT screen terms (Trouble diagnosis content)	DTC detection condition	Possible causes
P2765	INPUT SPEED SENSOR B (Input/Turbine Speed Sensor B Circuit)	<p>When 1 is satisfied and any of 2, 3 or 4 is satisfied and this state is maintained for 5 seconds:</p> <ol style="list-style-type: none"> <li>When all of the following conditions are satisfied: <ul style="list-style-type: none"> <li>- TCM power supply voltage: More than 11 V</li> <li>- After range change completion, it spends 2 seconds or more.</li> </ul> </li> <li>When all of the following conditions are satisfied and this state is maintained for 5 seconds: <ul style="list-style-type: none"> <li>- Secondary pulley speed: Less than 149 rpm</li> <li>- Primary pulley speed: 1,000 rpm or more</li> </ul> </li> <li>When all of the following conditions are satisfied and this state is maintained for 0.5 seconds: <ul style="list-style-type: none"> <li>- 10-msec-ago secondary pulley speed: 1000 rpm or more</li> <li>- Now secondary pulley speed: 0 rpm</li> </ul> </li> <li>When all of the following conditions are satisfied and this state is maintained for 5 seconds: <ul style="list-style-type: none"> <li>- Range: D or L</li> <li>- Engine speed: 450 rpm or more</li> <li>- Primary pulley speed: 300 rpm or more</li> <li>- Secondary pulley speed: 300 rpm or more</li> <li>- Input speed: 300 rpm or more</li> <li>- The difference between engine speed and primary pulley speed is 1,000 rpm or less</li> <li>- The difference between engine speed and input speed is 1,000 rpm or less</li> <li>- The difference between primary pulley speed and input speed is 1,000 rpm or less</li> <li>- Lock-up command is being given (except for slip lock-up)</li> <li>- DTC other than the applicable DTC is not detected.</li> <li>- When any of following items are satisfied: <ul style="list-style-type: none"> <li>• Primary pulley speed/secondary pulley speed: More than 2.9</li> <li>• Primary pulley speed/secondary pulley speed: Less than 0.3</li> </ul> </li> </ul> </li> </ol>	<ul style="list-style-type: none"> <li>• Harness or connector (Output speed sensor circuit is open or shorted)</li> <li>• Output speed sensor</li> </ul>

### DTC CONFIRMATION PROCEDURE

**CAUTION:**

**Be careful of the driving speed.**

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

# P2765 INPUT SPEED SENSOR B

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10E]

>> GO TO 2.

## 2. CHECK DTC DETECTION

1. Start the engine.
2. Drive the vehicle.
3. Maintain the following conditions for 10 seconds or more.

Selector lever : "D" position  
Engine speed : 1,200 rpm or more  
Vehicle speed : 55 km/h (34 MPH) or more

4. Stop the vehicle.
5. Check the first trip DTC.

Is "P2765" detected?

YES >> Go to [TM-162, "Diagnosis Procedure"](#).  
NO >> INSPECTION END

## Diagnosis Procedure

INFOID:000000011149400

### 1. CHECK OUTPUT SPEED SENSOR POWER CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect output speed sensor connector.
3. Turn ignition switch ON.
4. Check voltage between output speed sensor harness connector terminal and ground.

+		-	Voltage
Connector	Terminal		
F23	3	Ground	10 – 16 V

Is the inspection result normal?

YES >> GO TO 2.  
NO >> GO TO 6.

### 2. CHECK OUTPUT SPEED SENSOR GROUND CIRCUIT

Check continuity between output speed sensor harness connector terminal and ground.

Output speed sensor		—	Continuity
Connector	Terminal		
F23	1	Ground	Existed

Is the inspection result normal?

YES >> GO TO 3.  
NO >> Repair or replace malfunctioning parts.

### 3. CHECK CIRCUIT BETWEEN OUTPUT SPEED SENSOR AND TCM (PART 1)

1. Turn ignition switch OFF.
2. Disconnect TCM connector.
3. Check continuity between output speed sensor harness connector terminal and TCM harness connector terminal.

Output speed sensor		TCM		Continuity
Connector	Terminal	Connector	Terminal	
F23	2	F15	34	Existed

Is the inspection result normal?

# P2765 INPUT SPEED SENSOR B

[CVT: RE0F10E]

## < DTC/CIRCUIT DIAGNOSIS >

- YES >> GO TO 4.
- NO >> Repair or replace malfunctioning parts.

### 4. CHECK CIRCUIT BETWEEN OUTPUT SPEED SENSOR AND TCM (PART 2)

Check continuity between output speed sensor harness connector terminal and ground.


Output speed sensor		—	Continuity
Connector	Terminal		
F23	2	Ground	Not existed

Is the inspection result normal?

- YES >> GO TO 5.
- NO >> Repair or replace malfunctioning parts.

### 5. CHECK TCM INPUT SIGNALS

1. Connect all of disconnected connectors.
2. Lift the vehicle.
3. Start the engine.
4. Check frequency of output speed sensor.

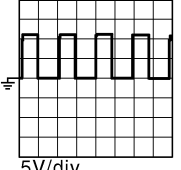+		-	Condition	Frequency (Approx.)
TCM				
Connector	Terminal			
F15	34	Ground	<ul style="list-style-type: none"> <li>• Selector lever: "L" position</li> <li>• Vehicle speed: 20 km/h (12 MPH)</li> </ul>	<p>200 Hz</p> <p>2.5mSec/div</p>  <p>5V/div</p> <p>JSDIA1904GB</p>

Is the inspection result normal?

- YES >> Check intermittent incident. Refer to [GI-47, "Intermittent Incident"](#).
- NO >> Replace output speed sensor. Refer to [TM-207, "Removal and Installation"](#).

### 6. DETECT MALFUNCTIONING ITEMS

Check the following items:

- Open circuit or short circuit in harness between ignition switch and IPDM E/R. Refer to [PG-29, "Wiring Diagram - IGNITION POWER SUPPLY -"](#).
- Open circuit or short circuit in harness between IPDM E/R harness connector terminal 61 and output speed sensor harness connector terminal 3.
- 10A fuse (No.46, located in the IPDM E/R). Refer to [PG-80, "Terminal Arrangement"](#).
- IPDM E/R

Is the check result normal?

- YES >> Check intermittent incident. Refer to [GI-47, "Intermittent Incident"](#).
- NO >> Repair or replace malfunctioning parts.

# P2813 SELECT SOLENOID

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10E]

## P2813 SELECT SOLENOID

### DTC Logic

INFOID:000000011149401

### DTC DETECTION LOGIC

DTC	CONSULT screen terms (Trouble diagnosis content)	DTC detection condition	Possible causes
P2813	SELECT SOLENOID (Select solenoid)	<p>When any of 1, or 2 is satisfied:</p> <ol style="list-style-type: none"> <li>When all the following conditions are established three times in 1DC <ul style="list-style-type: none"> <li>- Precondition</li> <li>• DTC other than the applicable DTC is not detected.</li> <li>• Throttle position: More than 6.27 deg.</li> <li>• Vehicle speed: Less than 3 km/h (1 MPH)</li> <li>• CVT fluid temperature: More than 20°C (68°F)</li> <li>• Selector lever: Other than P, N</li> <li>• Turbine speed when performed N → D, N (P) → R: More than 500 rpm</li> <li>• TCM power supply voltage: More than 11 V</li> </ul> </li> <li>- Detection time <ul style="list-style-type: none"> <li>• N → D: 0.4 seconds</li> <li>• N → R: 0.3 seconds</li> <li>• P → R: 0.3 seconds</li> </ul> </li> <li>When all of the following conditions are satisfied and this state is maintained for 30 seconds: <ul style="list-style-type: none"> <li>- The counting of time continues while all of the following conditions are satisfied and stops when the conditions become unsatisfied (the count is maintained). When accumulated time reaches 30 seconds (Clutch is judged as engaged and the count is reset.) <ul style="list-style-type: none"> <li>• Selector lever: Other than P, N</li> <li>• Vehicle speed: Less than 3 km/h (1 MPH)</li> <li>• Differences between primary pulley speed and secondary speed: Less than 120 rpm</li> <li>• Clutch instructions pressure: 0.95 MPa or more</li> <li>• Differences between turbine speed and input speed: Less than 200 rpm</li> <li>• Turbine speed – speed: More than 450 rpm</li> <li>• DTC other than the applicable DTC is not detected.</li> <li>• TCM power supply voltage: More than 11 V</li> </ul> </li> </ul> </li> </ol>	Select solenoid valve

#### NOTE:

DC stands for “DRIVING CYCLE” and indicates a series of driving cycle of “Ignition switch OFF → ON → driving → OFF”.

#### DTC CONFIRMATION PROCEDURE

#### CAUTION:

Be careful of the driving speed.

#### 1. PREPARATION BEFORE WORK

# P2813 SELECT SOLENOID

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10E]

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

## 2.CHECK DTC DETECTION 1

1. Start the engine.
2. Maintain the following conditions. (Keep 30seconds or more after the selector lever shifted.)

Selector lever : N→ D, N → R, P→ R

3. Check the first trip DTC.

Is "P2813"detected?

- YES >> Go to [TM-165, "Diagnosis Procedure"](#).
- NO >> INSPECTION END

## Diagnosis Procedure

INFOID:0000000011149402

### 1.CHECK INTERMITTENT INCIDENT

Refer to [GI-47, "Intermittent Incident"](#).

Is the inspection result normal?

- YES >> Replace transaxle assembly. Refer to [TM-218, "Removal and Installation"](#).
- NO >> Repair or replace malfunctioning parts.

A  
B  
C  
TM  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# P2814 SELECT SOLENOID

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10E]

## P2814 SELECT SOLENOID

### DTC Logic

INFOID:000000011149403

### DTC DETECTION LOGIC

DTC	CONSULT screen terms (Trouble diagnosis content)	DTC detection condition	Possible causes
P2814	SELECT SOLENOID (Select solenoid)	When all of the following conditions are satisfied and this state is maintained for 0.48 seconds: <ul style="list-style-type: none"><li>• TCM power supply voltage: 11 V or more</li><li>• TCM judges that solenoid valve circuit is shorted to ground.</li></ul>	<ul style="list-style-type: none"><li>• Harness or connector (Select solenoid valve circuit shorted to ground)</li><li>• Select solenoid valve</li></ul>

### DTC CONFIRMATION PROCEDURE

#### CAUTION:

Be careful of the driving speed.

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2. CHECK DTC DETECTION

1. Start the engine.
2. Maintain the following conditions. (Keep 5 seconds or more after the selector lever shifted.)

Selector lever : N → D, N → R, P → R

3. Check the first trip DTC.

Is "P2814" detected?

- YES >> Go to [TM-166, "Diagnosis Procedure"](#).  
NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000011149404

#### 1. CHECK CIRCUIT BETWEEN TCM AND CVT UNIT

1. Turn ignition switch OFF.
2. Disconnect TCM connector and CVT unit connector.
3. Check continuity between TCM harness connector terminal and ground.

TCM		—	Continuity
Connector	Terminal		
F15	37	Ground	Not existed

Is the inspection result normal?

- YES >> GO TO 2.  
NO >> Repair or replace damaged parts.

#### 2. CHECK SELECT SOLENOID VALVE CIRCUIT

Check continuity between CVT unit harness connector terminal and ground.

# P2814 SELECT SOLENOID

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10E]

CVT unit		—	Condition	Resistance
Connector	Terminal			
F209	4	Ground	CVT fluid temperature: 20°C (68°F)	5.5 – 7.0 Ω
			CVT fluid temperature: 50°C (122°F)	6.0 – 8.0 Ω
			CVT fluid temperature: 80°C (176°F)	6.5 – 8.5 Ω

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-47. "Intermittent Incident"](#).

NO >> There is malfunction of select solenoid valve circuit. Replace transaxle assembly. Refer to [TM-218. "Removal and Installation"](#).

A  
B  
C  
TM  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# P2815 SELECT SOLENOID

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10E]

## P2815 SELECT SOLENOID

### DTC Logic

INFOID:0000000011149405

### DTC DETECTION LOGIC

DTC	CONSULT screen terms (Trouble diagnosis content)	DTC detection condition	Possible causes
P2815	SELECT SOLENOID (Select solenoid)	When all of the following conditions are satisfied and this state is maintained for 0.2 seconds: <ul style="list-style-type: none"><li>• TCM power supply voltage: More than 11 V</li><li>• TCM judges that solenoid valve circuit is open.</li><li>• P2814 is not detected.</li></ul>	<ul style="list-style-type: none"><li>• Harness or connector (Select solenoid valve circuit open or shorted to power supply)</li><li>• Select solenoid valve</li></ul>

### DTC CONFIRMATION PROCEDURE

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2. CHECK DTC DETECTION

1. Start the engine.
2. Maintain the following conditions. (Keep 5 seconds or more after the selector lever shifted.)

Selector lever : N → D, N → R, P → R

3. Check the first trip DTC.

Is "P2815" detected?

YES >> Go to [TM-168, "Diagnosis Procedure"](#).  
NO >> INSPECTION END

### Diagnosis Procedure

INFOID:0000000011149406

#### 1. CHECK CIRCUIT BETWEEN TCM AND CVT UNIT

1. Turn ignition switch OFF.
2. Disconnect TCM connector and CVT unit connector.
3. Check continuity between TCM harness connector terminal and ground.

TCM		CVT unit		Continuity
Connector	Terminal	Connector	Terminal	
F15	37	F46	4	Existed

Is the inspection result normal?

YES >> GO TO 2.  
NO >> Repair or replace damaged parts.

#### 2. CHECK SELECT SOLENOID VALVE CIRCUIT

Check continuity between CVT unit harness connector terminal and ground.



# P2815 SELECT SOLENOID

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10E]

CVT unit		—	Condition	Resistance
Connector	Terminal			
F209	4	Ground	CVT fluid temperature: 20°C (68°F)	5.5 – 7.0 Ω
			CVT fluid temperature: 50°C (122°F)	6.0 – 8.0 Ω
			CVT fluid temperature: 80°C (176°F)	6.5 – 8.5 Ω

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-47. "Intermittent Incident"](#).

NO >> There is malfunction of select solenoid valve circuit. Replace transaxle assembly. Refer to [TM-218. "Removal and Installation"](#).

A  
B  
C  
TM  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# MAIN POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10E]

## MAIN POWER SUPPLY AND GROUND CIRCUIT

### Diagnosis Procedure

INFOID:000000011149407

#### 1. CHECK TCM POWER CIRCUIT (PART 1)

1. Turn ignition switch OFF.
2. Disconnect TCM connector.
3. Check voltage between TCM harness connector terminals and ground.

+		-	Voltage
TCM			
Connector	Terminal	Ground	10 – 16 V
F15	45		
	46		

Is the inspection result normal?

- YES >> GO TO 2.  
NO >> GO TO 4.

#### 2. CHECK TCM POWER CIRCUIT (PART 2)

Check voltage between TCM harness connector terminals and ground.

+		-	Condition	Voltage			
TCM							
Connector	Terminal	Ground	Ignition switch ON	10 – 16 V			
F15	47				Ground	Ignition switch OFF	Approx. 0 V
						Ignition switch ON	10 – 16 V
	48					Ignition switch OFF	Approx. 0 V
		Ignition switch ON	10 – 16 V				

Is the inspection result normal?

- YES >> GO TO 3.  
NO >> GO TO 5.

#### 3. CHECK TCM GROUND CIRCUIT

Check continuity between TCM harness connector terminals and ground.

TCM		—	Continuity
Connector	Terminal		
F15	41	Ground	Existed
	42		

Is the inspection result normal?

- YES >> Check intermittent incident. Refer to [GI-47, "Intermittent Incident"](#).  
NO >> Repair or replace malfunctioning parts.

#### 4. DETECT MALFUNCTION ITEMS (PART 1)

Check the following items:

- Open circuit or short circuit in harness between battery positive terminal and fuse block (J/B). Refer to [PG-16, "Wiring Diagram - BATTERY POWER SUPPLY -"](#).
- Open circuit or short circuit in harness between fuse block (J/B) harness connector terminal 2N and TCM harness connector terminal 45, and 46.
- 10A fuse [No.25, located in the fuse block (J/B)]. Refer to [PG-80, "Terminal Arrangement"](#).

Is the inspection result normal?

- YES >> Check intermittent incident. Refer to [GI-47, "Intermittent Incident"](#).

# MAIN POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10E]

NO >> Repair or replace malfunctioning parts.

## 5. DETECT MALFUNCTIONING ITEMS (PART 2)

Check the following items:

- Open circuit or short circuit in harness between ignition switch and IPDM E/R. Refer to [PG-29. "Wiring Diagram - IGNITION POWER SUPPLY -"](#).
- Open circuit or short circuit in harness between IPDM E/R harness connector terminal 61 and TCM harness connector terminal 47, and 48.
- 10A fuse (No.46, located in the IPDM E/R). Refer to [PG-85. "IPDM E/R Terminal Arrangement"](#).
- IPDM E/R

Is the check result normal?

YES >> Check intermittent incident. Refer to [GI-47. "Intermittent Incident"](#).

NO >> Repair or replace malfunctioning parts.

A  
B  
C  
TM  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# SHIFT POSITION INDICATOR CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10E]

## SHIFT POSITION INDICATOR CIRCUIT

### Component Parts Function Inspection

INFOID:000000011149408

#### 1. CHECK SHIFT POSITION INDICATOR

1. Start the engine.
2. Shift selector lever.
3. Check that the selector lever position and the shift position indicator on the combination meter are identical.

Is the inspection result normal?

- YES >> INSPECTION END  
NO >> Go to [TM-172, "Diagnosis Procedure"](#).

### Diagnosis Procedure

INFOID:000000011149409

#### 1. CHECK TCM INPUT/OUTPUT SIGNAL

##### With CONSULT

1. Start the engine.
2. Select "Data Monitor" in "TRANSMISSION".
3. Select "RANGE".
4. Shift selector lever.
5. Check that selector lever position, "RANGE" on CONSULT screen, and shift position indicator display on combination meter are identical.

Is the check result normal?

- YES >> INSPECTION END  
NO-1 ("RANGE" is changed but is not displayed on shift position indicator.)>>Check "Self Diagnostic Result" in "TRANSMISSION".  
NO-2 ("RANGE" and shift position indicator are different.)>>Check "Self Diagnostic Result" in "TRANSMISSION".  
NO-3 (Specific "RANGE" is not displayed on shift position indicator.)>>Check "Self Diagnostic Result" in "METER/M&A".

# OVERDRIVE CONTROL SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10E]

## OVERDRIVE CONTROL SWITCH

### Component Function Check

INFOID:0000000011149410

#### 1. CHECK OD OFF INDICATOR LAMP FUNCTION

Check OD OFF indicator lamp turns ON for approx. 2 seconds when ignition switch turns ON.

Is the inspection results normal?

YES >> GO TO 2.

NO >> Go to [TM-176, "Diagnosis Procedure"](#).

#### 2. CHECK OVERDRIVE CONTROL SWITCH FUNCTION

- Shift the selector lever to "D" position.
- Check that OD OFF indicator lamp turns ON/OFF when overdrive control switch is operated.

Is the inspection results normal?

YES >> INSPECTION END

NO >> Go to [TM-173, "Diagnosis Procedure"](#).

### Diagnosis Procedure

INFOID:0000000011149411

#### 1. CHECK OVERDRIVE CONTROL SWITCH CIRCUIT

- Turn ignition switch OFF.
- Disconnect CVT shift selector connector.
- Turn ignition switch ON.
- Check voltage between CVT shift selector harness connector terminals.

Connector	CVT shift selector		Voltage (Approx.)
	+	-	
M78	1	2	Battery voltage

Is the inspection result normal?

YES >> GO TO 2.

NO >> GO TO 4.

#### 2. CHECK CVT SHIFT SELECTOR ASSEMBLY

Check continuity between CVT shift selector connector terminals.

CVT shift selector Terminal	Condition	Continuity
1 - 2	Overdrive control switch is depressed.	Existed
	Overdrive control switch is released.	Not existed

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-47, "Intermittent Incident"](#).

NO >> GO TO 3.

#### 3. CHECK OVERDRIVE CONTROL SWITCH

- Remove shift selector handle. Refer to [TM-192, "Exploded View"](#).
- Check overdrive control switch. Refer to [TM-174, "Component Inspection"](#).

Is the inspection result normal?

YES >> Replace CVT shift selector assembly. Refer to [TM-192, "Removal and Installation"](#).

NO >> Repair or replace malfunctioning parts.

#### 4. CHECK GROUND CIRCUIT

Check continuity between CVT shift selector harness connector terminal and ground.

# OVERDRIVE CONTROL SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10E]

CVT shift selector		—	Continuity
Connector	Terminal		
M78	2	Ground	Existed

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair or replace malfunctioning parts.

## 5. CHECK CIRCUIT BETWEEN CVT SHIFT SELECTOR AND COMBINATION METER (PART 1)

1. Turn ignition switch OFF.
2. Disconnect combination meter connector.
3. Check continuity between CVT shift selector harness connector terminal and combination meter harness connector terminal.

CVT shift selector		Combination meter		Continuity
Connector	Terminal	Connector	Terminal	
M78	1	M24	52	Existed

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair or replace malfunctioning parts.

## 6. CHECK CIRCUIT BETWEEN CVT SHIFT SELECTOR AND COMBINATION METER (PART 2)

Check continuity between CVT shift selector harness connector terminal and ground.

CVT shift selector		—	Continuity
Connector	Terminal		
M78	1	Ground	Not existed

Is the inspection result normal?

YES >> GO TO 7.

NO >> Repair or replace malfunctioning parts.

## 7. CHECK COMBINATION METER INPUT SIGNAL

1. Connect all of disconnected connectors.
2. Turn ignition switch ON.
3. Select "Data Monitor" in "METER/M&A".
4. Select "O/D OFF SW".
5. Check that "O/D OFF SW" turns ON/OFF when overdrive control switch is operated. Refer to [MWI-23](#), "[Reference Value](#)".

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-47](#), "[Intermittent Incident](#)".

NO >> Replace combination meter. Refer to [MWI-85](#), "[Removal and Installation](#)".

## Component Inspection

INFOID:0000000011149412

## 1. CHECK OVERDRIVE CONTROL SWITCH

# OVERDRIVE CONTROL SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10E]


Check continuity between wires of shift selector handle ①.

Condition	Continuity
Overdrive control switch is depressed	Existed
Overdrive control switch is released	Not existed

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace shift selector handle. Refer to [TM-192](#).  
["Exploded View"](#).

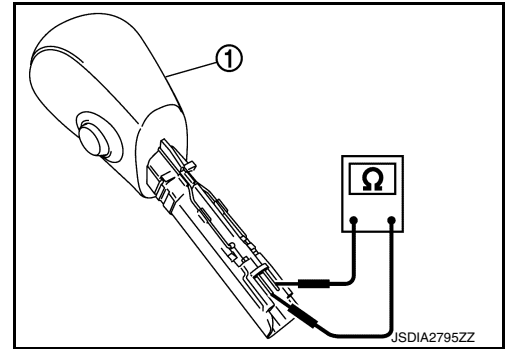

A

B

C

TM

E

F

G

H

I

J

K

L

M

N

O

P

# OD OFF INDICATOR LAMP

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10E]

## OD OFF INDICATOR LAMP

### Component Function Check

INFOID:0000000011149413

#### 1. CHECK OD OFF INDICATOR LAMP FUNCTION

Check OD OFF indicator lamp turns ON for approx. 2 seconds when ignition switch turns ON.

Is the inspection results normal?

- YES >> INSPECTION END
- NO >> Go to [TM-176, "Diagnosis Procedure"](#).

### Diagnosis Procedure

INFOID:0000000011149414

#### 1. CHECK DTC (TCM)

##### With CONSULT

1. Turn ignition switch ON.
2. Check "Self Diagnostic Results" in "TRANSMISSION".

Is any DTC detected?

- YES >> Check DTC detected item. Refer to [TM-63, "DTC Index"](#).
- NO >> GO TO 2.

#### 2. CHECK DTC (COMBINATION METER)

##### With CONSULT

Check "Self Diagnostic Results" in "METER/M&A".

Is any DTC detected?

- YES >> Check DTC detected item. Refer to [MWI-29, "DTC Index"](#).
- NO >> GO TO 3.

#### 3. CHECK COMBINATION METER INPUT/OUTPUT SIGNAL

##### With CONSULT

1. Shift the selector lever to "D" position.
2. Select "Data Monitor" in "METER/M&A".
3. Select "O/D OFF IND".
4. Check that "O/D OFF IND" turns ON/OFF when overdrive control switch is operated. Refer to [MWI-23, "Reference Value"](#).

Is the inspection result normal?

- YES >> Replace combination meter. Refer to [MWI-85, "Removal and Installation"](#).
- NO >> GO TO 4.

#### 4. CHECK TCM INPUT/OUTPUT SIGNAL

##### With CONSULT

1. Select "Data Monitor" in "TCM".
2. Select "SPORT MODE IND".
3. Check that "SPORT MODE IND" turns ON/OFF when overdrive control switch is operated. Refer to [TM-52, "Reference Value"](#).

Is the inspection result normal?

- YES >> Replace combination meter. Refer to [MWI-85, "Removal and Installation"](#).
- NO >> Check overdrive control switch circuit. Refer to [TM-173, "Diagnosis Procedure"](#).



# TOW MODE SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10E]

## TOW MODE SYSTEM

### Component Function Check

INFOID:000000011149415

#### 1. CHECK TOW MODE SWITCH FUNCTION

Check that TOW mode indicator lamp turns ON/OFF when tow mode switch is operated.

Is the inspection results normal?

- YES >> INSPECTION END
- NO >> Go to [TM-177, "Diagnosis Procedure"](#).

### Diagnosis Procedure

INFOID:000000011149416

#### 1. CHECK DTC (TCM)

##### With CONSULT

1. Start the engine.
2. Check "Self Diagnostic Results" in "TRANSMISSION".

Is any DTC detected?

- YES >> Check DTC detected item. Refer to [TM-63, "DTC Index"](#).
- NO >> GO TO 2.

#### 2. CHECK DTC (COMBINATION METER)

##### With CONSULT

Check "Self Diagnostic Results" in "METER/M&A".

Is any DTC detected?

- YES >> Check DTC detected item. Refer to [MWI-29, "DTC Index"](#).
- NO >> GO TO 3.

#### 3. CHECK COMBINATION METER INPUT/OUTPUT SIGNAL

##### With CONSULT

1. Select "Data Monitor" in "METER/M&A".
2. Select "TOW MODE IND".
3. Check that "TOW MODE IND" turns ON/OFF when tow mode switch is operated. Refer to [MWI-23, "Reference Value"](#).

Is the inspection result normal?

- YES >> Replace the combination meter. Refer to [MWI-85, "Removal and Installation"](#).
- NO >> GO TO 4.

#### 4. CHECK TOW MODE SWITCH CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect tow mode switch connector.
3. Turn ignition switch ON.
4. Check voltage between tow mode switch harness connector terminals.

Tow mode switch			Voltage (Approx.)
Connector	+	-	
	Terminal		
M6	1	4	Battery voltage

Is the inspection result normal?

- YES >> GO TO 5.
- NO >> GO TO 6.

#### 5. CHECK TOW MODE SWITCH

Check tow mode switch. Refer to [TM-178, "Component Inspection"](#).

Is the inspection result normal?

- YES >> Check intermittent incident. Refer to [GI-47, "Intermittent Incident"](#).

# TOW MODE SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10E]

NO >> Repair or replace malfunctioning parts.

## 6. CHECK TOW MODE SWITCH GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Check continuity between tow mode switch harness connector terminal and ground.

Tow mode switch		—	Continuity
Connector	Terminal		
M6	4	Ground	Existed

Is the inspection result normal?

YES >> GO TO 7.

NO >> Repair or replace malfunctioning parts.

## 7. CHECK CIRCUIT BETWEEN COMBINATION METER AND TOW MODE SWITCH (PART 1)

1. Disconnect combination meter connector.
2. Check continuity between combination meter harness connector terminal and tow mode switch harness connector terminal.

Combination meter		Tow mode switch		Continuity
Connector	Terminal	Connector	Terminal	
M24	19	M6	1	Existed

Is the inspection result normal?

YES >> GO TO 8.

NO >> Repair or replace malfunctioning parts.

## 8. CHECK CIRCUIT BETWEEN COMBINATION METER AND TOW MODE SWITCH (PART 2)

Check continuity between combination meter harness connector terminal and ground.

Combination meter		—	Continuity
Connector	Terminal		
M24	19	Ground	Not existed

Is the inspection result normal?

YES >> GO TO 9.

NO >> Repair or replace malfunctioning parts.

## 9. CHECK COMBINATION METER INPUT/OUTPUT SIGNAL (PART 3)

1. Connect combination meter connector.
2. Turn ignition switch ON.
3. Check voltage between combination meter harness connector terminal and ground.

+		-	Voltage
Combination meter			
Connector	Terminal		
M24	19	Ground	Battery voltage

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-47, "Intermittent Incident"](#).

NO >> Replace the combination meter. Refer to [MWI-85, "Removal and Installation"](#).

## Component Inspection

### 1. CHECK TOW MODE SWITCH

Check continuity between tow mode switch connector terminals.

INFOID:000000011149417

# TOW MODE SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10E]

TOW mode switch Terminal	Condition	Continuity
1 - 4	Tow mode switch is depressed.	Existed
	Tow mode switch is released.	Not existed

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace tow mode switch. Refer to [TM-197. "Removal and Installation"](#).

A

B

C

TM

E

F

G

H

I

J

K

L

M

N

O

P

# SHIFT LOCK SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10E]

## SHIFT LOCK SYSTEM

### Component Function Check

INFOID:0000000011149418

#### 1. CHECK SHIFT LOCK OPERATION (PART 1)

1. Turn ignition ON.
2. Shift the selector lever to "P" (Park) position.
3. Attempt to shift the selector lever to any other position with the brake pedal released.

Can the selector lever be shifted to any other position?

- YES >> Go to [TM-180, "Diagnosis Procedure"](#).  
NO >> GO TO 2.

#### 2. CHECK SHIFT LOCK OPERATION (PART 2)

Attempt to shift the selector lever to any other position with the brake pedal depressed.

Can the selector lever be shifted to any other position?

- YES >> Inspection End.  
NO >> Go to [TM-180, "Diagnosis Procedure"](#).

### Diagnosis Procedure

INFOID:0000000011149419

Regarding Wiring Diagram information, refer to [TM-77, "Wiring diagram"](#).

#### 1. CHECK POWER SOURCE

1. Turn ignition switch OFF.
2. Disconnect BCM connector M18.
3. Check voltage between BCM connector M18 terminal 27 and ground while pressing the brake pedal.

BCM		Ground	Condition	Voltage
Connector	Terminal		Brake pedal depressed	Battery voltage
M18	27			

Is the inspection result normal?

- YES >> GO TO 3.  
NO >> GO TO 2.

#### 2. CHECK STOP LAMPS

Do the stop lamps operate normally?

Is the inspection result normal?

- YES >> Check the following:
- Harness between fuse block (J/B) and BCM.
  - Fuse block (J/B).
- NO >> Refer to [TM-77, "Wiring diagram"](#).

#### 3. CHECK HARNESS BETWEEN BCM AND CVT SHIFT SELECTOR

1. Disconnect CVT shift selector connector.
2. Check continuity between BCM connector M80 terminal 108 and CVT shift selector connector M78 terminal 3.

BCM		CVT shift selector		Continuity
Connector	Terminal	Connector	Terminal	
M80	108	M78	3	Yes

3. Check continuity between BCM connector M80 terminal 108 and ground.

# SHIFT LOCK SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10E]

BCM		Ground	Continuity
Connector	Terminal		
M80	108		No

Is the inspection result normal?

- YES >> GO TO 4.
- NO >> Repair or replace harness or connector.

## 4.CHECK GROUND CIRCUIT (CVT SHIFT SELECTOR)

Check continuity between CVT shift selector connector M78 terminal 4 and ground.

CVT shift selector		Ground	Continuity
Connector	Terminal		
M78	4		Yes

Is the inspection result normal?

- YES >> Replace CVT shift selector. Refer to [TM-192, "Removal and Installation"](#).
- NO >> Repair or replace harness or connector.

## Component Inspection (Shift Lock Solenoid)

INFOID:000000011149420

### 1.CHECK SHIFT LOCK SOLENOID

Apply voltage to terminals of shift lock solenoid and park position switch (shift selector) connector and check that shift lock solenoid is activated.

#### CAUTION:

- Connect the fuse between the terminals when applying the voltage.
- Never cause shorting between terminals.

+ (fuse)	-	Condition	Status
Shift lock solenoid			
Terminal			
3	4	Apply 12 V between terminals 3 and 4 with the park position switch (shift selector) in the "P" (park) position.	Shift lock solenoid operates

Is the inspection result normal?

- YES >> Inspection End.
- NO >> Replace CVT shift selector. Refer to [TM-192, "Removal and Installation"](#).

## Component Inspection (Park Position Switch)

INFOID:000000011149421

### 1.CHECK PARK POSITION SWITCH (SHIFT SELECTOR)

Apply voltage to terminals of shift lock solenoid and park position switch (shift selector) connector and check that shift lock solenoid is activated.

#### CAUTION:

- Connect the fuse between the terminals when applying the voltage.
- Never cause shorting between terminals.

# SHIFT LOCK SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10E]

+ (fuse)	-	Condition	Status
Shift lock solenoid			
Terminal			
3	4	Apply 12 V between terminals 3 and 4 with the park position switch (shift selector) in the "P" (park) position.	Shift lock solenoid operates

Is the inspection result normal?

YES >> Inspection End.

NO >> Replace CVT shift selector. Refer to [TM-192, "Removal and Installation"](#).

## Component Inspection (Stop Lamp Switch)

INFOID:000000011149422

### 1. CHECK STOP LAMP SWITCH

Check the continuity between the stop lamp switch connector terminals.

Stop lamp switch		Condition	Continuity
Terminal			
1	2	Depressed brake pedal	Yes
		Released brake pedal	No

Is the inspection result normal?

YES >> Inspection End.

NO >> Replace stop lamp switch. Refer to [BR-20, "Exploded View"](#).

# CVT CONTROL SYSTEM

< SYMPTOM DIAGNOSIS >

[CVT: RE0F10E]

## SYMPTOM DIAGNOSIS

### CVT CONTROL SYSTEM

#### Symptom Table

INFOID:000000011149423

- The diagnosis item number indicates the order of check. Start checking in the order from 1.
- Perform diagnoses of symptom table 1 before symptom table 2.

#### Symptom Table 1

Symptom	Engine system											Stall test	CVT position	Power supply	Control valve	CVT fluid level and state	Ignition switch and starter	
	EC-150	TM-63									TM-92							TM-93
Shift Shock	Large shock (N→ D position)	1	4	8					3			6		2		9	5	
	Large shock (N→ R position)	1	4	8					3			6		2		9	5	
	Shock is too large for lock-up.	2	3									6		1		5	4	
Slips/Will Not Engage	Vehicle cannot be started from D position.	8	3		5	6	7	9	10	11		4	2	12	13	1		
	Vehicle cannot be started from R position.	8	3		5	6	7	9	10	11		4	2	12	13	1		
	Does not lock-up.	2	6	8	3	4	10	9	11	12	5	7			13	1		
	Does not hold lock-up condition.	2	6	8	3	4	10	9	11	12	5	7			13	1		
	Lock-up is not released.	2	6		3	4						5	7			8	1	
	With selector lever in D position, acceleration is extremely poor.	3	4	5	7	8	9	12	10	11			2	6	13	14	1	
	With selector lever in R position, acceleration is extremely poor.	3	4	5	7	8	9	12	10	11			2	6	13	14	1	
Slips at lock-up.	2	6	8	3	4	10	9	11	12	5	7				13	1		

A  
B  
C  
TM  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P





# CVT CONTROL SYSTEM

< SYMPTOM DIAGNOSIS >

[CVT: RE0F10E]

Symptom		Engine system	CAN communication line	Transmission range switch (P0705, P0706)	Input speed sensor (P0717)	Primary speed sensor (P0715)	Secondary speed sensor (P2765)	CVT fluid temperature sensor (P0711, P0712, P0713)	Primary pressure sensor (P084C, P084D)	Secondary pressure sensor (P0841, P0847, P0848)	Torque converter clutch solenoid valve (P0740, P0743, P0744)	Stall test	CVT position	Power supply	Control valve	CVT fluid level and state	Ignition switch and starter	
		<a href="#">EC-150</a>	<a href="#">TM-63</a>										<a href="#">TM-92</a>	<a href="#">TM-93</a>	<a href="#">TM-170</a>	<a href="#">TM-218</a>	<a href="#">TM-188</a>	<a href="#">PG-29, STR-5</a>
Other	Engine does not start in N or P position.			3									2				1	
	Engine starts in positions other than N or P.			3									2				1	

Symptom Table 2

Symptom		Torque converter	Transmission range switch	Oil pump	Forward clutch	Reverse brake	Planetary gear	Bearings	Parking mechanism	Stop lamp switch	Shift lock solenoid	CVT shift selector
		<a href="#">TM-221</a>	<a href="#">TM-217</a>							<a href="#">BR-7</a>	<a href="#">TM-180</a>	<a href="#">TM-192</a>
Shift Shock	Large shock (N→ D position)		2		1							
	Large shock (N→ R position)		2			1						
	Shock is too large for lock-up.	1										

A  
B  
C  
**TM**  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

## CVT CONTROL SYSTEM

< SYMPTOM DIAGNOSIS >

[CVT: RE0F10E]

Symptom		Torque converter	Transmission range switch	Oil pump	Forward clutch	Reverse brake	Planetary gear	Bearings	Parking mechanism	Stop lamp switch	Shift lock solenoid	CVT shift selector
		TM-221	TM-217						BR-7	TM-180	TM-192	
Slips/Will Not Engage	Vehicle cannot be started from D position.		3	1	2							
	Vehicle cannot be started from R position.		4	1		2			3			
	Does not lock-up.	1	3	2								
	Does not hold lock-up condition.	1	3	2								
	Lock-up is not released.	1		2								
	With selector lever in D position, acceleration is extremely poor.	1	3		2							
	With selector lever in R position, acceleration is extremely poor.	1	4	2		3						
Slips at lock-up.	1		2									
Other	No creep at all.	1	6	2	4	5	3					
	Vehicle cannot run in all positions.	1		2	4	5	3		6			
	With selector lever in D position, driving is not possible.	1		2	4		3		5			
	With selector lever in R position, driving is not possible.	1		2		4	3		5			
	Judder occurs during lock-up.	1										
	Strange noise in D position.	1		2	4		3	5				
	Strange noise in R position.	1		2		4	3					
	Strange noise in N position.	1		2			3					
	Maximum speed low.	1	5	2	4		3					
	With selector lever in P position, vehicle does not enter parking condition or, with selector lever in another position, parking condition is not cancelled.								1			
	Vehicle runs with CVT in P position.						2		1			
	Vehicle runs with CVT in N position.				2	3	1					
	Engine stall.	1										
	Engine stalls when selector lever shifted N → D or R.	1										
	Does not shift			1								

# CVT CONTROL SYSTEM

< SYMPTOM DIAGNOSIS >

[CVT: RE0F10E]

Symptom		Torque converter	Transmission range switch	Oil pump	Forward clutch	Reverse brake	Planetary gear	Bearings	Parking mechanism	Stop lamp switch	Shift lock solenoid	CVT shift selector
		TM-221	TM-217							BR-7	TM-180	TM-192
Other	When brake pedal is depressed with ignition switch ON, selector lever cannot be shifted from P position to other position.									1	2	3
	When brake pedal is not depressed with ignition switch ON, selector lever can be shifted from P position to other position.									1	2	3

A  
B  
C  
**TM**  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

## PERIODIC MAINTENANCE


### CVT FLUID

#### Inspection

INFOID:0000000011149424

#### FLUID LEAKAGE

- Check transaxle surrounding area (oil seal and plug etc.)for fluid leakage.
- If anything is found, repair or replace damaged parts and adjust CVT fluid level. Refer to [TM-190, "Adjustment"](#).

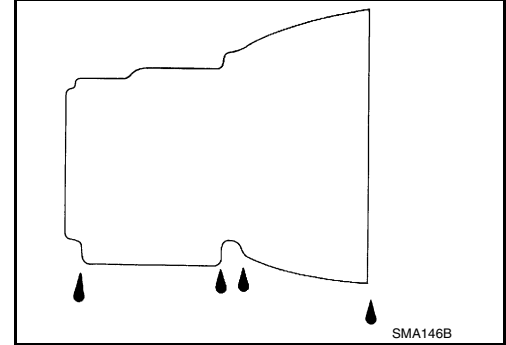

#### Replacement

INFOID:0000000011149425

- CVT fluid** : Refer to [TM-223, "General Specification"](#).
- Fluid capacity** : Refer to [TM-223, "General Specification"](#).

#### CAUTION:

- Always use shop paper. Never use shop cloth.
- Replace a drain plug gasket with new ones at the final stage of the operation when installing.
- Use caution when looking into the drain hole as there is a risk of dripping fluid entering the eye.
- After replacement, always perform CVT fluid leakage check.


1. Select "Data Monitor" in "TRANSMISSION" using CONSULT.
2. Select "FLUID TEMP" and confirm that the CVT fluid temperature is 40°C (104°F) or less.
3. Check that the selector lever is in the "P" position, then completely engage the parking brake.
4. Lift up the vehicle.
5. Remove the drain plug and drain the CVT fluid from the oil pan. Refer to [TM-201, "Exploded View"](#).
6. Install the drain plug to oil pan.

#### CAUTION:

**Drain plug gasket use the old one.**

7. Remove the overflow plug ① from converter housing.

← : Vehicle front

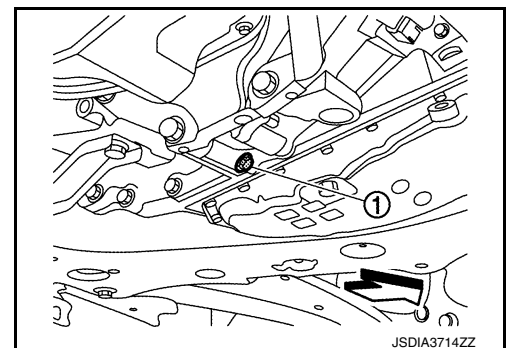

# CVT FLUID

< PERIODIC MAINTENANCE >

[CVT: RE0F10E]

8. Install the charging pipe set (KV311039S0) (A) into the overflow plug hole.

**CAUTION:**

**Tighten the charging pipe by hand.**

9. Install the ATF changer hose (B) to the charging pipe.

**CAUTION:**

**Press the ATF changer hose all the way onto the charging pipe until it stops.**

10. Fill approximately 3 liter (3-1/8 US qt, 2-5/8 Imp qt) of the CVT fluid.

11. Remove the ATF changer hose and charging pipe, then install the overflow plug.

**NOTE:**

Perform this work quickly because CVT fluid leaks.

12. Lift down the vehicle.

13. Start the engine.

14. While depressing the brake pedal, shift the selector lever to the entire position from "P" to "L", and shift it to the "P" position.

**NOTE:**

Hold the lever at each position for 5 seconds.

15. Check that the CONSULT "Data Monitor" in "FLUID TEMP" is 35°C (95°F) to 45°C (113°F).

16. Stop the engine.

17. Lift up the vehicle.

18. Remove the drain plug, and then drain CVT fluid from oil pan.

19. Repeat steps 8 to 18 (one time).

20. Tighten the drain plug to the specified torque. Refer to [TM-201, "Exploded View"](#).

21. Remove the overflow plug.

22. Install the charging pipe set (KV311039S0) into the overflow plug hole.

**CAUTION:**

**Tighten the charging pipe by hand.**

23. Install the ATF changer hose to the charging pipe.

**CAUTION:**

**Press the ATF changer hose all the way onto the charging pipe until it stops.**

24. Fill approximately 3 liter (3-1/8 US qt, 2-5/8 Imp qt) of the CVT fluid.

25. Remove the ATF changer hose and charging pipe, then install the overflow plug.

**NOTE:**

Perform this work quickly because CVT fluid leaks.

26. Lift down the vehicle.

27. Start the engine.

28. While depressing the brake pedal, shift the selector lever to the entire position from "P" to "L", and shift it to the "P" position.

**NOTE:**

Hold the lever at each position for 5 seconds.

29. Check that the CONSULT "Data Monitor" in "FLUID TEMP" is 35°C (95°F) to 45°C (113°F).

30. Lift up the vehicle.

31. Remove the overflow plug and confirm that the CVT fluid is drained from the overflow plug hole.

**CAUTION:**

**Perform this work with the vehicle idling.**

**NOTE:**


If the CVT fluid is not drained, refer to "Adjustment" and refill with the CVT fluid.

32. When the flow of CVT fluid slows to a drip, tighten the overflow plug to the specified torque. Refer to [TM-201, "Exploded View"](#).

**CAUTION:**

**Never reuse O-ring.**

33. Lift down the vehicle.

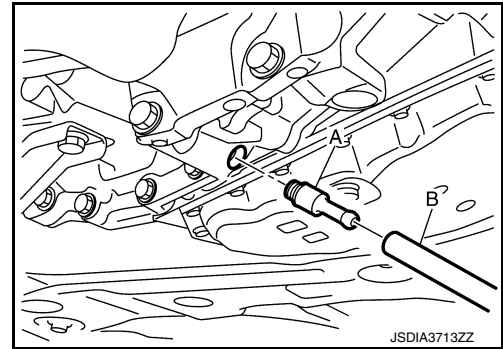

A

B

C

TM

E

F

G

H

I

J

K

L

M

N

O

P

# CVT FLUID

< PERIODIC MAINTENANCE >

[CVT: RE0F10E]

34. Select "Data Monitor" in "TRANSMISSION" using CONSULT.
35. Select "CONFORM CVTF DETERIORATION".
36. Select "Erase".
37. Stop the engine.

## Adjustment

INFOID:000000011149426

- CVT fluid** : Refer to [TM-223, "General Specification"](#).  
**Fluid capacity** : Refer to [TM-223, "General Specification"](#).

### CAUTION:

- During adjustment of the CVT fluid level, check CONSULT so that the oil temperature may be maintained from 35 to 45°C (95 to 113°F).
  - Maintain specified engine idle speed during CVT fluid level adjustment. Refer to [EC-917, "Idle Speed"](#).
  - Use caution when looking into the drain hole as there is a risk of dripping fluid entering the eye.
1. Check that the selector lever is in the "P" position, then completely engage the parking brake.
  2. Start the engine.
  3. Adjust the CVT fluid temperature to be approximately 40°C (104°F).

#### NOTE:

The CVT fluid is largely affected by temperature. Therefore be sure to use CONSULT and check the "FLUID TEMP" under "TRANSMISSION" in "Data Monitor" while adjusting.


4. While depressing the brake pedal, shift the selector lever to the entire position from "P" to "L", and shift it to the "P" position.

#### NOTE:

Hold the lever at each position for 5 seconds.

5. Lift up the vehicle.
6. Check that there is no CVT fluid leakage.
7. Remove the overflow plug ① from converter housing.

← : Vehicle front

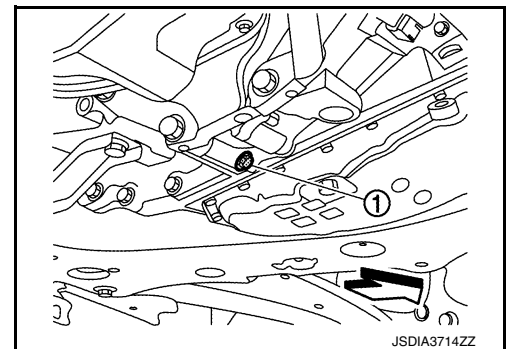

8. Install the charging pipe set (KV311039S0) (A) into the overflow plug hole.

#### CAUTION:

**Tighten the charging pipe by hand.**

9. Install the ATF changer hose (B) to the charging pipe.

#### CAUTION:


**Press the ATF changer hose all the way onto the charging pipe until it stops.**

10. Fill approximately 0.5 liter (1/2 US qt, 1/2 Imp qt) of the CVT fluid.
11. Remove the ATF changer hose from the charging pipe, and check that the CVT fluid drains out from the charging pipe. If it does not drain out, perform charging again.

#### CAUTION:

**Perform this work with the vehicle idling.**

12. When the flow of CVT fluid slows to a drip, remove the charging pipe from the converter housing.
13. Tighten the overflow plug to the specified torque. Refer to [TM-201, "Exploded View"](#).

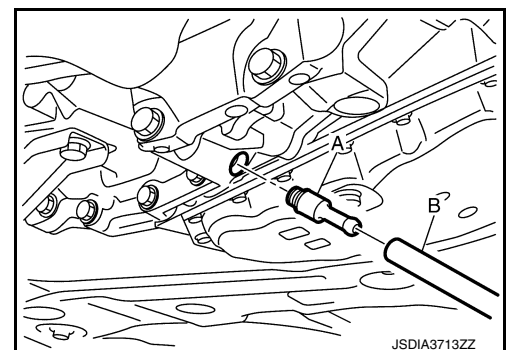

# CVT FLUID

< PERIODIC MAINTENANCE >

[CVT: RE0F10E]

**CAUTION:**

**Never reuse O-ring.**

- 14. Lift down the vehicle.
- 15. Stop the engine.

A

B

C

TM

E

F

G

H

I

J

K

L

M

N

O

P

# CVT SHIFT SELECTOR

< REMOVAL AND INSTALLATION >


[CVT: RE0F10E]

## REMOVAL AND INSTALLATION

### CVT SHIFT SELECTOR

Exploded View

INFOID:0000000011149427

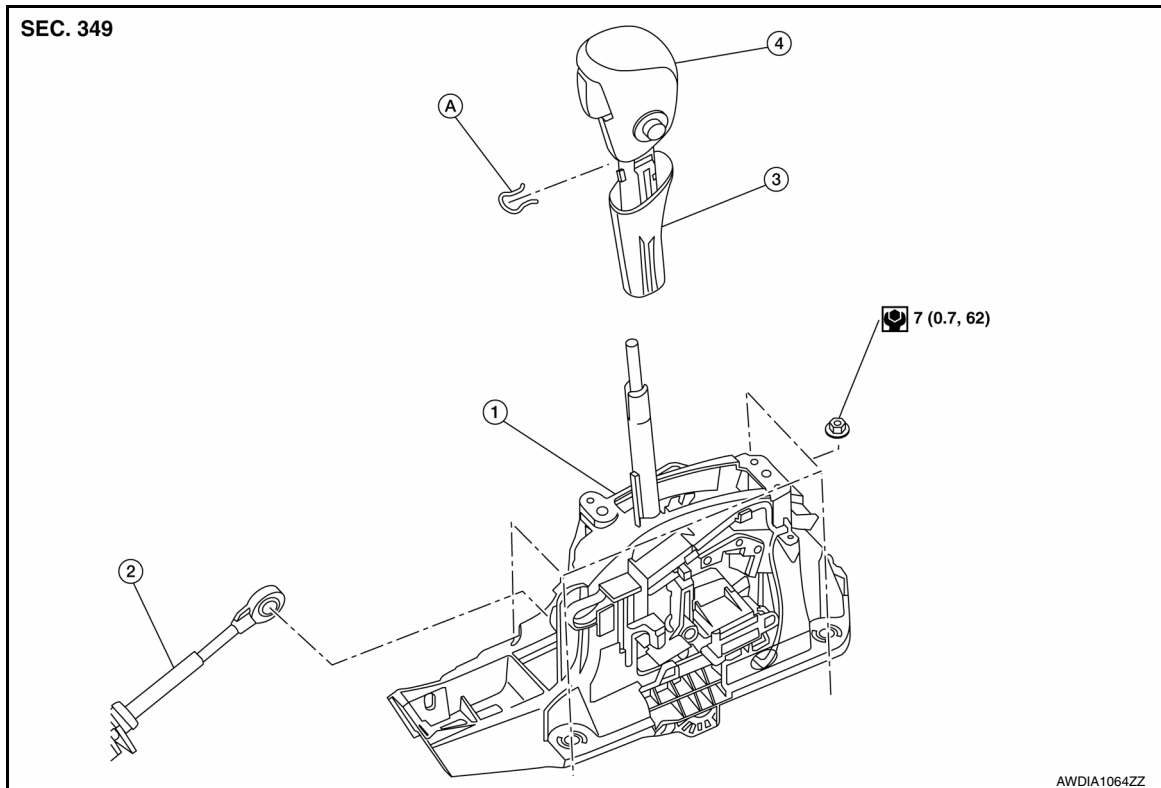

- |                                |                               |                                |
|--------------------------------|-------------------------------|--------------------------------|
| 1. CVT shift selector assembly | 2. Control cable              | 3. Shift selector handle cover |
| 4. Shift selector handle       | A. Shift selector handle clip |                                |

### Removal and Installation

INFOID:0000000011149428

#### REMOVAL


1. Apply the parking brake.

**CAUTION:**

**Make sure the vehicle cannot move with the parking brake applied.**

2. Remove shift lock override button cover (1) using suitable tool, and insert suitable tool into opening to depress the shift lock override button. Move shift selector to "N" position while depressing shift lock override button.

↔: Front

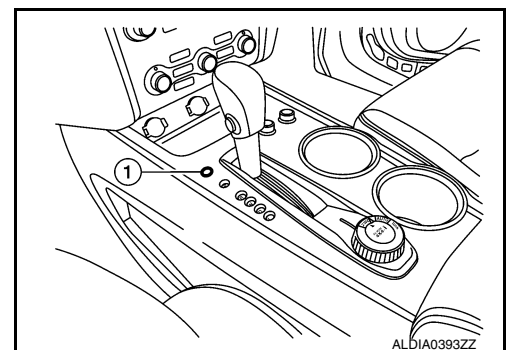




# CVT SHIFT SELECTOR

## < REMOVAL AND INSTALLATION >


[CVT: RE0F10E]

3. Remove the shift selector handle (1).
  - a. Release the shift selector handle cover (2) using a suitable tool from the base of the shift selector handle (1).
  - b. Remove the shift selector handle clip (A).
  - c. Pull upward and remove the shift selector handle (1).

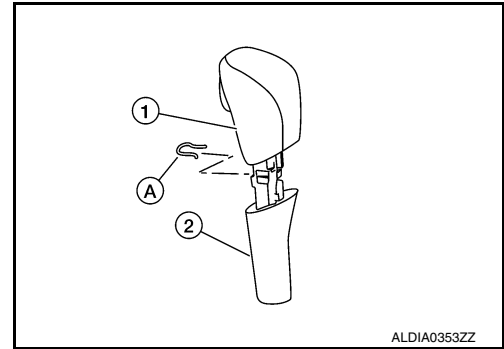

4. Remove center console upper side finisher (LH). Refer to [IP-18, "Exploded View"](#).
5. Release center console side finisher (LH/RH) clip and pawls using a suitable tool and remove.

- △: Clip
- : Pawl
- ⇐: Front

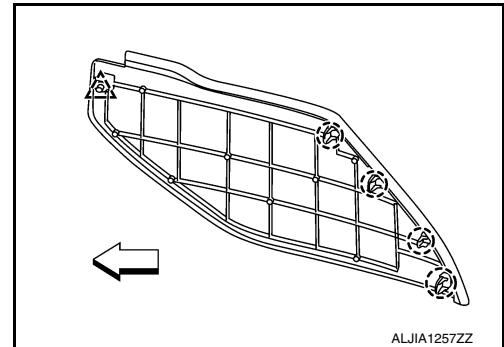

6. Release shift selector finisher clips and pawls using a suitable tool, disconnect the harness connectors and remove. Refer to [IP-18, "Exploded View"](#).
7. Release the harness clip, then disconnect the harness connector from shift selector.
8. Remove the control cable from the shift selector assembly. Refer to [TM-194, "Removal and Installation"](#).
9. Remove the four shift selector assembly nuts and the shift selector assembly from the vehicle.


## INSTALLATION

Installation is in the reverse order of removal.

- When installing control cable (1) to the shift selector assembly (2), check that control cable is fully pressed in until it stops with the ribbed surface (A) facing upward.

### NOTE:

- Apply multi-purpose grease to control cable eye before installation.
- Adjust control cable as necessary. Refer to [TM-195, "Inspection and Adjustment"](#).

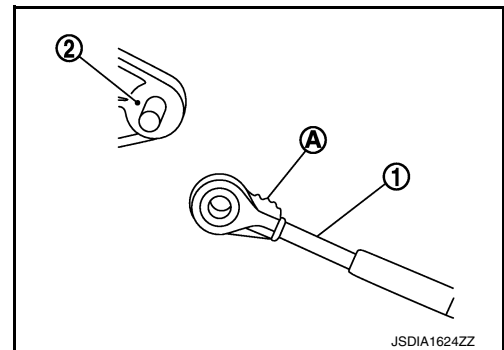

INFOID:000000011149429

## Inspection

### INSPECTION

Check the CVT position. If a malfunction is found, adjust the CVT position. Refer to [TM-93, "Inspection and Adjustment"](#).

# CONTROL CABLE


< REMOVAL AND INSTALLATION >

[CVT: RE0F10E]

## CONTROL CABLE

Exploded View

INFOID:0000000011149430

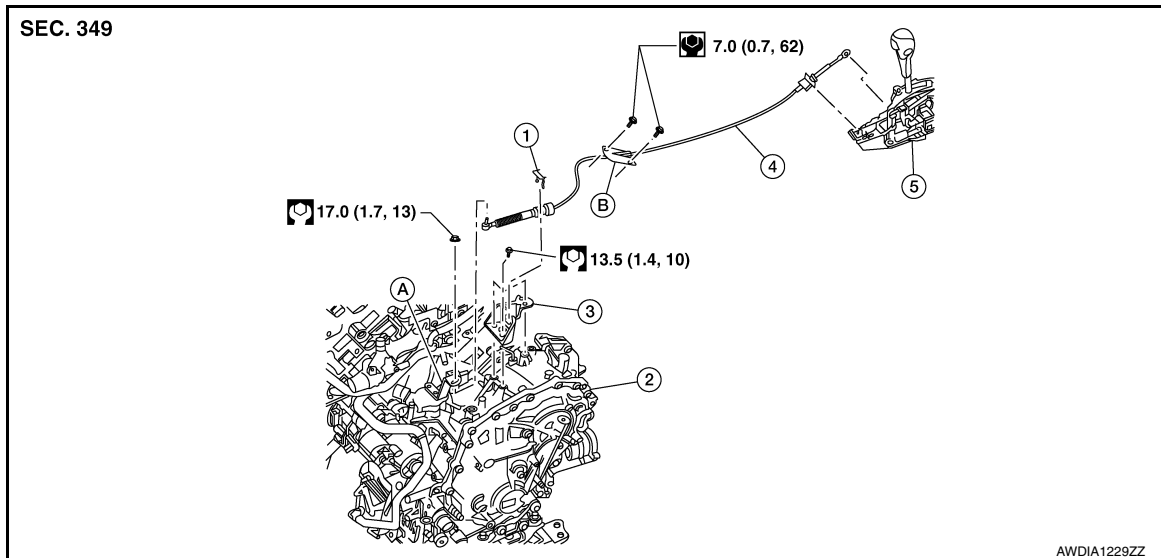

- |                 |                  |                                |
|-----------------|------------------|--------------------------------|
| 1. Bracket B    | 2. Lock plate    | 3. Transaxle assembly          |
| 4. Bracket A    | 5. Control cable | 6. CVT shift selector assembly |
| A: Manual lever | B: Grommet       |                                |

## Removal and Installation


INFOID:0000000011149431

### INSTALLATION

#### CAUTION:

**Always apply the parking brake before performing removal and installation.**

1. Remove the front air duct and air cleaner case assembly. Refer to [EM-24. "Removal and Installation"](#).
2. Remove the control cable nut from the manual lever.
3. Remove the lock plate (1).

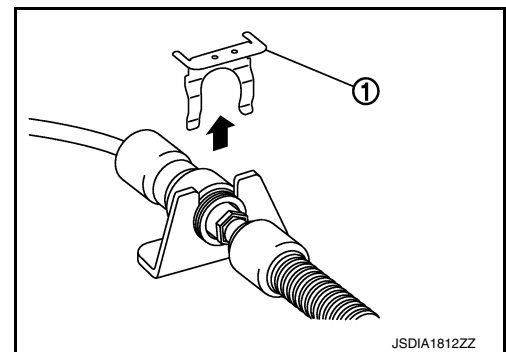


4. Remove center console upper side finisher (LH). Refer to [IP-18. "Exploded View"](#).

# CONTROL CABLE



## < REMOVAL AND INSTALLATION >

[CVT: RE0F10E]

5. Release center console side finisher (LH/RH) clip and pawls using a suitable tool and remove.

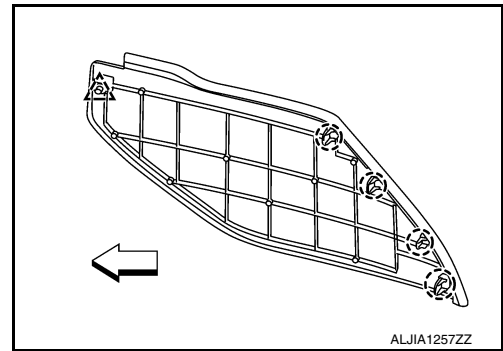

 6. Release shift selector finisher clips and pawls using a suitable tool, disconnect the harness connectors and remove. Refer to [IP-18, "Exploded View"](#).
7. Remove the control cable from the CVT shift selector assembly.
8. Remove the bolts (1) from the grommet (2).

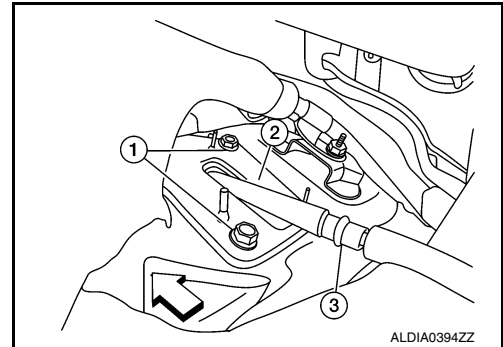


9. Remove the control cable from the vehicle.

## INSTALLATION

Installation is in the reverse order of removal.

- Pay attention to the following when connecting the control cable to the CVT shift selector.


1. When connecting the control cable (1) to the CVT shift selector assembly (2), face the grooved surface of the rib (A) up and insert the control cable until it stops.

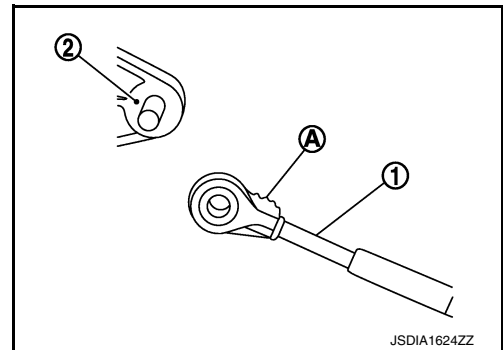

2. Install the socket (A) onto the CVT shift selector.

### CAUTION:

- Place the socket onto the CVT shift lever, then fasten it in place from above.
- Check that pulling on the socket does not disconnect it.

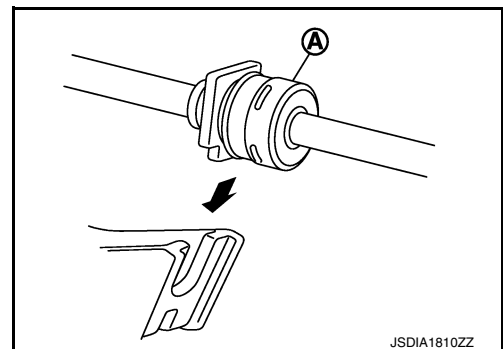

## Inspection and Adjustment

INFOID:000000011149432

## INSPECTION AFTER INSTALLATION

## CONTROL CABLE

< REMOVAL AND INSTALLATION >

[CVT: RE0F10E]

---

Check the CVT position. If a malfunction is found, adjust the CVT position. Refer to [TM-193, "Inspection"](#).

# TOW MODE SWITCH

< REMOVAL AND INSTALLATION >

[CVT: RE0F10E]


## TOW MODE SWITCH

### Removal and Installation

INFOID:000000011149433

#### REMOVAL

1. Remove instrument lower panel (LH). Refer to [IP-25. "Removal and Installation"](#).
2. Remove screws (1) from the bracket.
3. Remove tow mode switch.

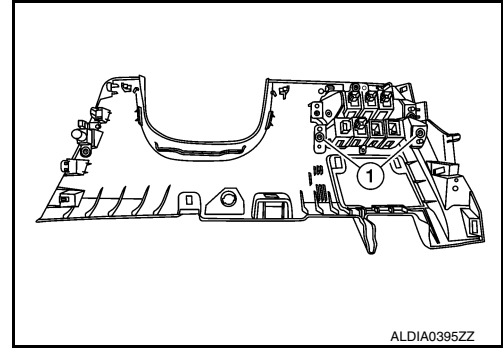

#### INSTALLATION

Installation is in the reverse order of removal.

A

B

C

TM

E

F

G

H

I

J

K

L

M

N


O

P

## TCM


## Exploded View

INFOID:000000011149434

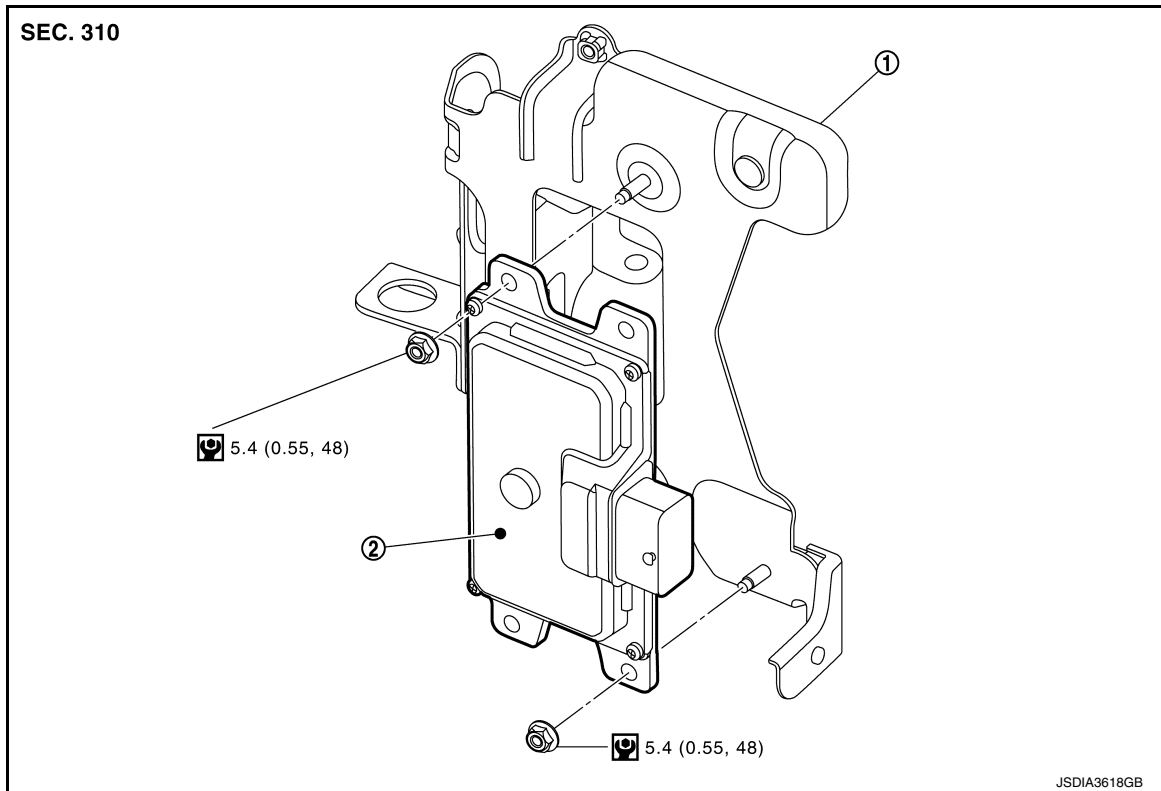

① Bracket

② TCM

 : N·m (kg-m, in-lb)

## Removal and Installation

INFOID:000000011149435

**CAUTION:**

- To replace TCM, perform "WRITE IP CHARA – REPLACEMENT TCM" of the CONSULT Work Support before removing TCM and save TCM data in CONSULT. Refer to [TM-84, "Description"](#).
- When replacing TCM, note the "CVTF DETERIORATION DATE" value displayed on CONSULT "CONFORM CVTF DETERIORATION" in MAINTENANCE BOOKLET, before start the operation.
- When replacing TCM, perform "ADDITIONAL SERVICE WHEN REPLACING TCM". Refer to [TM-84, "Work Procedure"](#).
- When replacing TCM and transaxle assembly simultaneously, replace transaxle assembly first and then replace TCM.

## REMOVAL

1. Remove the front air duct. Refer to [EM-24, "Exploded View"](#).
2. Disconnect the negative battery terminal. Refer to [PG-95, "Removal and Installation"](#).
3. Disconnect the TCM harness connector.
4. Remove the TCM and bracket as a set.
5. Remove the TCM from the bracket.

## INSTALLATION

Installation is the reverse order of removal.

## Adjustment

INFOID:000000011149436

## ADJUSTMENT AFTER INSTALLATION

# TCM

< REMOVAL AND INSTALLATION >

[CVT: RE0F10E]

Perform "ADDITIONAL SERVICE WHEN REPLACING TCM". Refer to [TM-84, "Description"](#).

A

B

C

TM

E

F

G

H

I

J

K

L

M

N

O

P

# AIR BREATHER HOSE

< REMOVAL AND INSTALLATION >

[CVT: RE0F10E]

## AIR BREATHER HOSE

### Removal and Installation

INFOID:000000011149437

#### REMOVAL


1. Remove the front air duct and air cleaner case assembly. Refer to [EM-24. "Removal and Installation"](#).
2. Remove air breather hose.

#### INSTALLATION

Installation is in the reverse order of removal.

#### CAUTION:

- Check that air breather hose is not collapsed or blocked due to folding or bending when installed.
- Insert air breather hose (1) to air breather tube (2) all the way to the curve of the tube.
- Insert air breather hose to air breather tube so that the paint mark (A) is facing upward.

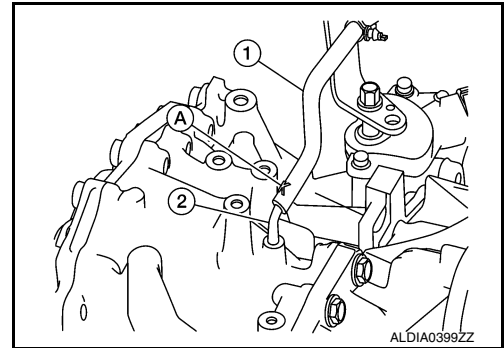



# OIL PAN


< REMOVAL AND INSTALLATION >

[CVT: RE0F10E]

## OIL PAN

### Exploded View

INFOID:000000011149438

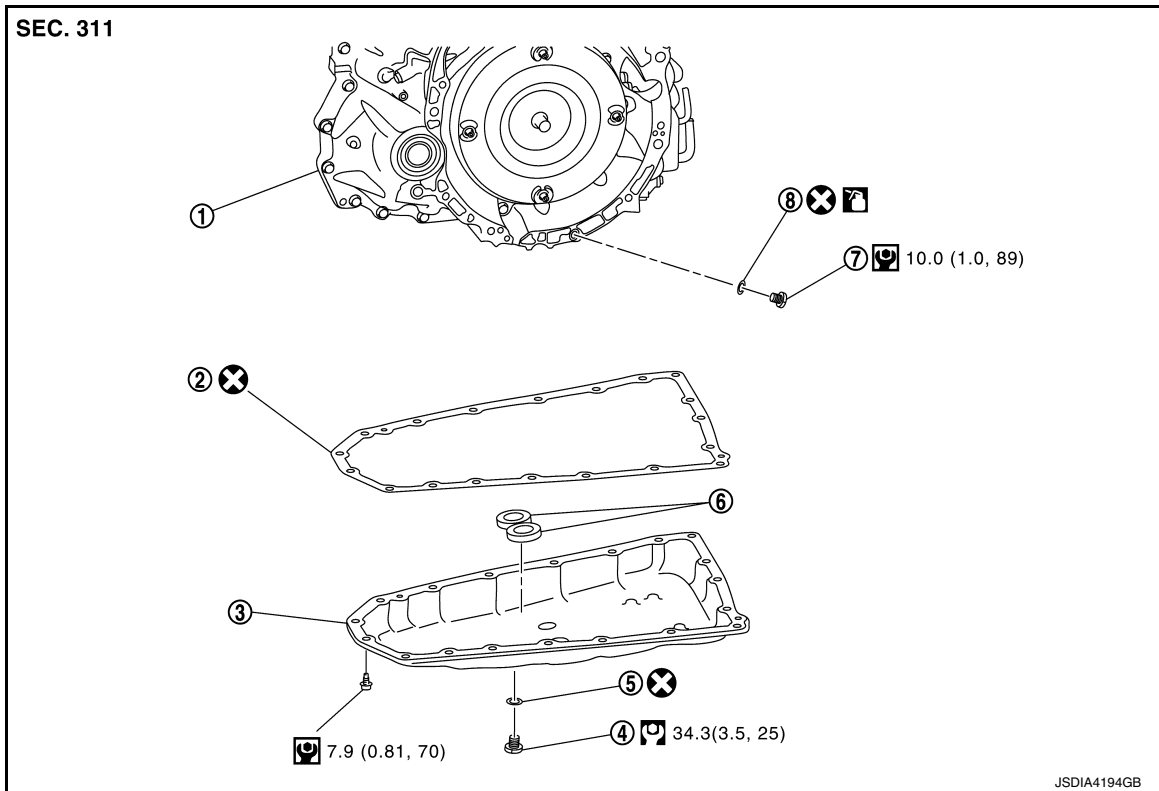

- |                      |                     |           |
|----------------------|---------------------|-----------|
| ① Transaxle assembly | ② Oil pan gasket    | ③ Oil pan |
| ④ Drain plug         | ⑤ Drain plug gasket | ⑥ Magnet  |
| ⑦ Overflow plug      | ⑧ O-ring            |           |

⊗ : Always replace after every disassembly.

🔧 : N·m (kg-m, ft-lb)

🔧 : N·m (kg-m, in-lb)

🛢 : Apply CVT fluid

## Removal and Installation

INFOID:000000011149439

### REMOVAL

1. Remove drain plug from oil pan and then drain the CVT fluid.
2. Remove drain plug gasket.  
**CAUTION:**  
**Do not reuse drain plug gasket.**
3. Remove the oil pan bolts, and then remove the oil pan and oil pan gasket.  
**CAUTION:**  
**Do not reuse oil pan gasket.**
4. Remove the magnets from the oil pan.

### INSTALLATION

Installation is in the reverse order of removal.

- CAUTION:**
- Do not reuse oil pan gasket.
  - Do not reuse drain plug gasket.

A  
B  
C  
TM  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# OIL PAN

< REMOVAL AND INSTALLATION >

[CVT: RE0F10E]

- Do not reuse O-ring.
- Completely clean the iron powder from the magnet area of oil pan and the magnets.

Install the oil pan to the transaxle case with the following procedure.

1. Install the oil pan gasket to the oil pan.


**CAUTION:**

**Completely wipe out any moisture, oil, and old gasket from the oil pan gasket surface and bolt hole of oil pan and transaxle case.**

2. Install the oil pan assembly to the transaxle case, and then temporarily tighten the oil pan bolt.
3. Tighten the oil pan bolts in the order shown to the specified torque.

⇐ : Front

4. Tighten the oil pan bolts again clockwise from (1) shown to the specified torque.

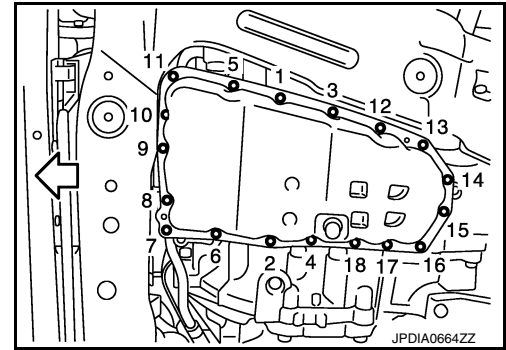

INFOID:000000011149440

## Inspection and Adjustment

### INSPECTION AFTER REMOVAL

Check oil pan for foreign material.

- If a large amount of worn material is found, clutch plate may be worn.
  - If iron powder is found, bearings, gears, or clutch plates may be worn.
  - If aluminum powder is found, bushing may be worn, or chips or burrs of aluminum casting parts may enter.
- Check points where wear is found in all cases.

### INSPECTION AFTER INSTALLATION

Check for CVT fluid leakage. Refer to [TM-188, "Inspection"](#).

# INPUT SPEED SENSOR


< REMOVAL AND INSTALLATION >

[CVT: RE0F10E]

## INPUT SPEED SENSOR

### Exploded View

INFOID:000000011149441

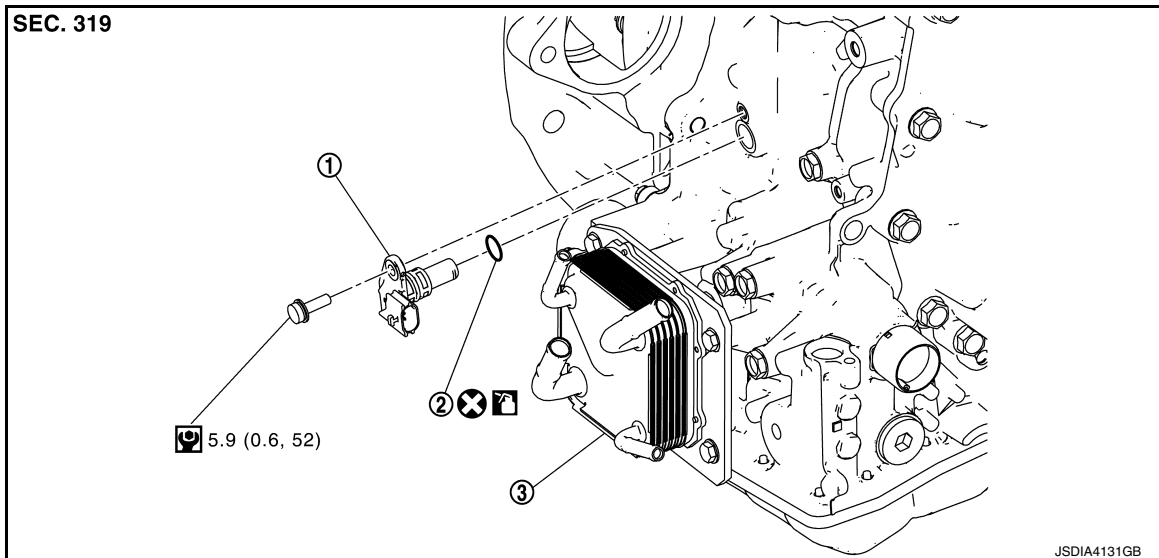

- ① Input speed sensor                      ② O-ring                      ③ Transaxle assembly

⊗ : Always replace after every disassembly.

⊙ : N·m (kg-m, in-lb)

☑ : Apply CVT fluid

## Removal and Installation


INFOID:000000011149442

### REMOVAL

1. Remove the battery tray. Refer to [PG-97, "Removal and Installation"](#).
2. Remove the starter motor. Refer to [STR-20, "Removal and Installation"](#).
3. Disconnect the harness connector from the input speed sensor (1).
4. Remove the input speed sensor bolt, then the input speed sensor (1).
5. Remove the O-ring (2) from the input speed sensor (1).

**CAUTION:**

**Do not reuse O-ring.**

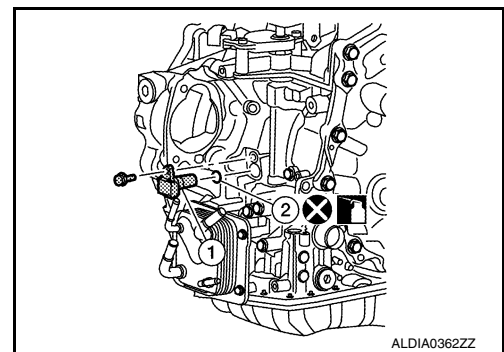

### INSTALLATION

Installation is in the reverse order of removal.

**CAUTION:**

- Do not reuse O-ring.
- Apply Genuine NISSAN CVT Fluid NS-3 to the O-ring.

## Inspection and Adjustment

INFOID:000000011149443

### INSPECTION AFTER INSTALLATION

Check for CVT fluid leakage. Refer to [TM-188, "Inspection"](#).

### ADJUSTMENT AFTER INSTALLATION

## INPUT SPEED SENSOR

< REMOVAL AND INSTALLATION >

[CVT: RE0F10E]

---

Adjust CVT fluid level. Refer to [TM-190. "Adjustment"](#).

# PRIMARY SPEED SENSOR


< REMOVAL AND INSTALLATION >

[CVT: RE0F10E]

## PRIMARY SPEED SENSOR

### Exploded View

INFOID:0000000011149444

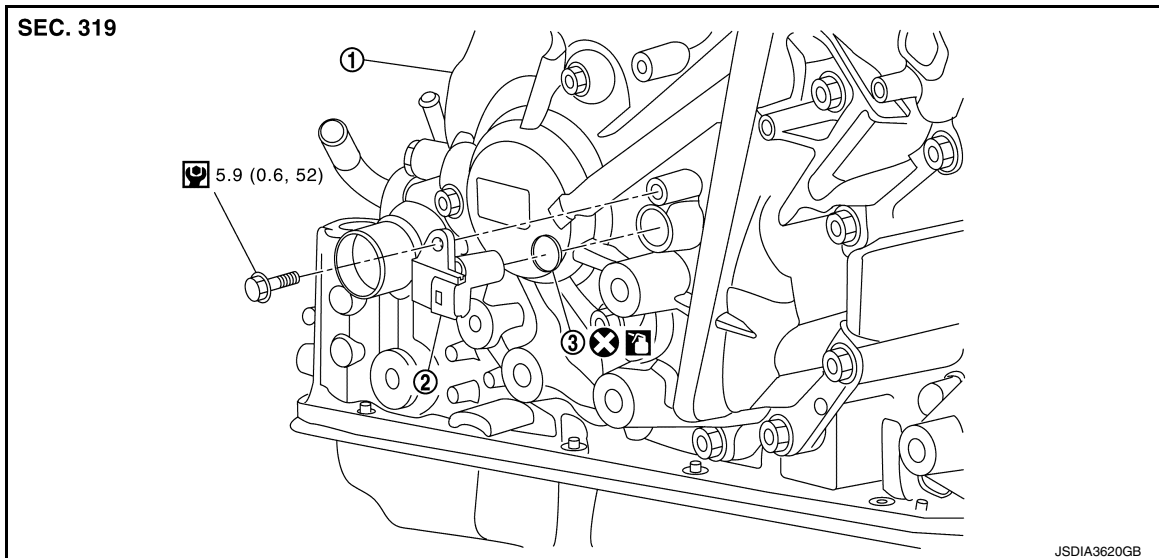


- ① Transaxle assembly      ② Primary speed sensor      ③ O-ring
- ⊗ : Always replace after every disassembly.
- Ⓜ : N·m (kg-m, in-lb)
- 🔧 : Apply CVT fluid

### Removal and Installation

INFOID:0000000011149445

#### REMOVAL

1. Disconnect the negative battery terminal. Refer to [PG-95, "Removal and Installation"](#).
2. Remove the front fender protector side cover (LH). Refer to [EXT-28, "FENDER PROTECTOR : Removal and Installation"](#).
3. Disconnect the harness connector from primary speed sensor (1).
4. Remove the primary speed sensor bolt, then the primary speed sensor (1).
5. Remove the O-ring (2) from the primary speed sensor (1).  
**CAUTION:**  
**Do not reuse O-ring.**

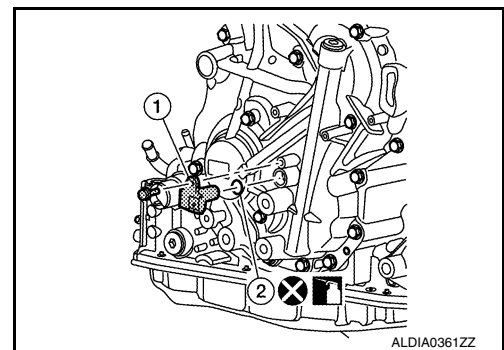

#### INSTALLATION

Installation is in the reverse order of removal.

#### **CAUTION:**

- Do not reuse O-ring.
- Apply Genuine NISSAN CVT Fluid NS-3 to the O-ring.

### Inspection and Adjustment

INFOID:0000000011149446

#### INSPECTION AFTER INSTALLATION

Check for CVT fluid leakage. Refer to [TM-188, "Inspection"](#).

## PRIMARY SPEED SENSOR

[CVT: RE0F10E]

< REMOVAL AND INSTALLATION >

ADJUSTMENT AFTER INSTALLATION

Adjust CVT fluid level. Refer to [TM-190. "Adjustment"](#).

# OUTPUT SPEED SENSOR


< REMOVAL AND INSTALLATION >

[CVT: RE0F10E]

## OUTPUT SPEED SENSOR

### Exploded View

INFOID:000000011149447

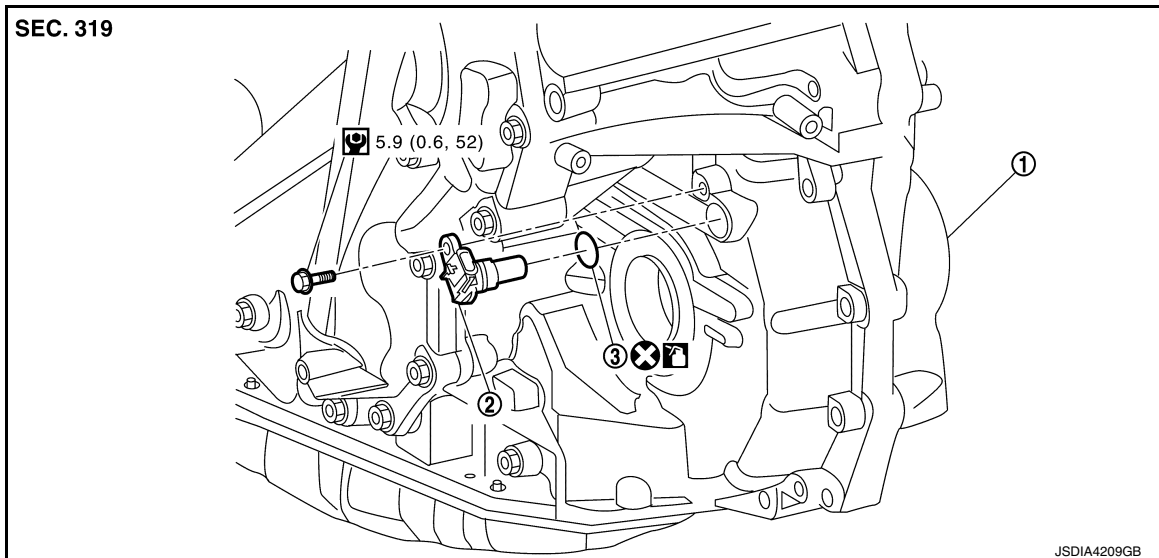

- ① Transaxle assembly      ② Output speed sensor      ③ O-ring

⊗ : Always replace after every disassembly.

🔧 : N·m (kg-m, in-lb)

👉 : Apply CVT fluid

### Removal and Installation


INFOID:000000011149448

#### REMOVAL

1. Disconnect the battery negative terminal. Refer to [PG-95, "Removal and Installation"](#).
2. Disconnect the harness connector from output speed sensor (1).
3. Remove the output speed sensor bolt, then the output speed sensor (1).
4. Remove the O-ring (2) from the output speed sensor (1).

#### CAUTION:

**Do not reuse O-ring.**

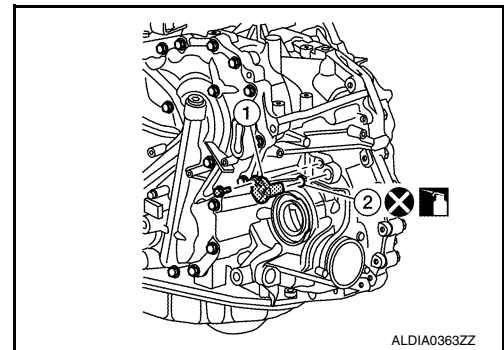

#### INSTALLATION

Installation is in the reverse order of removal.

#### CAUTION:

- Do not reuse O-ring.
- Apply Genuine NISSAN CVT Fluid NS-3 to the O-ring.

### Inspection and Adjustment

INFOID:000000011149449

#### INSPECTION AFTER INSTALLATION

Check for CVT fluid leakage. Refer to [TM-188, "Inspection"](#).

#### ADJUSTMENT AFTER INSTALLATION

Adjust CVT fluid level. Refer to [TM-190, "Adjustment"](#).

# DIFFERENTIAL SIDE OIL SEAL


< REMOVAL AND INSTALLATION >

[CVT: RE0F10E]

## DIFFERENTIAL SIDE OIL SEAL

Exploded View

INFOID:000000011149450

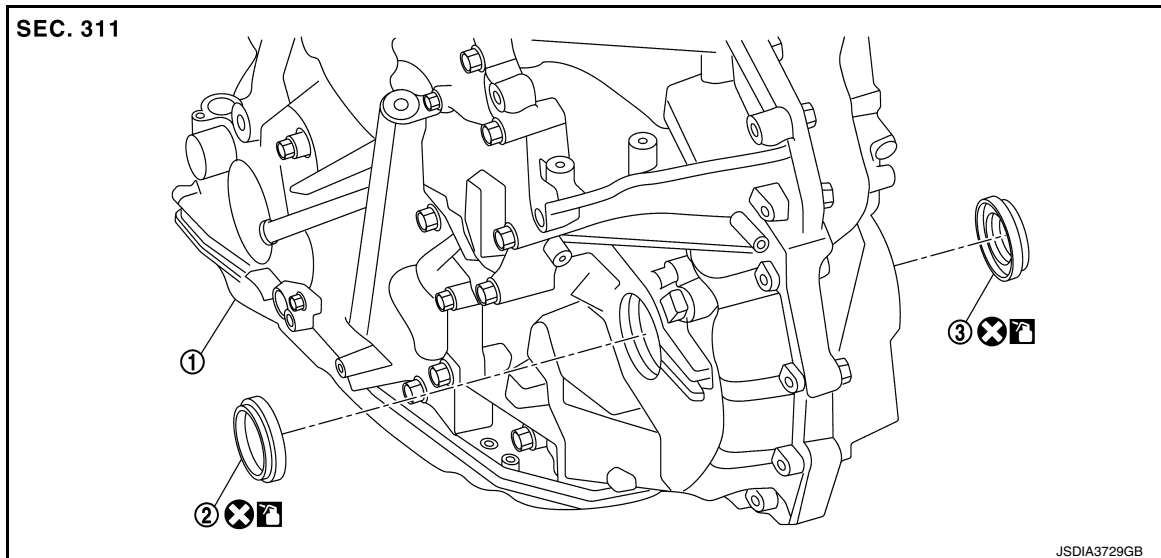

- ① Transaxle assembly      ② Differential side oil seal (left side)      ③ Differential side oil seal (right side) (2WD models only)

⊗ : Always replace after every disassembly.

🔧 : Apply CVT fluid

## Removal and Installation

INFOID:000000011149451

### REMOVAL

1. Remove front drive shaft. Refer to [FAX-15, "Removal and Installation \(LH\)"](#) (LH) or [FAX-18, "Removal and Installation \(RH\)"](#) (RH).
2. Use oil seal remover or a similar means and remove the differential side oil seal.

#### CAUTION:

**When removing the differential side oil seal, be careful not to scratch the oil seal mounting surfaces of the transaxle case and converter housing.**

### INSTALLATION

Installation is in the reverse order of removal.

#### CAUTION:

- Do not reuse differential side oil seal.
- Apply Genuine NISSAN CVT Fluid NS-3 to differential side oil seals.
- When inserting the drive shaft, be sure to use Tool.

Tool number : KV38107900 ( — )




# DIFFERENTIAL SIDE OIL SEAL

## < REMOVAL AND INSTALLATION >

[CVT: RE0F10E]

Install each differential side oil seal evenly using Tool so that differential side oil seal protrudes by the dimension (C) and (D) respectively.

- (A) : Differential side oil seal (LH)
- (B) : Differential side oil seal (RH)(2WD models only)

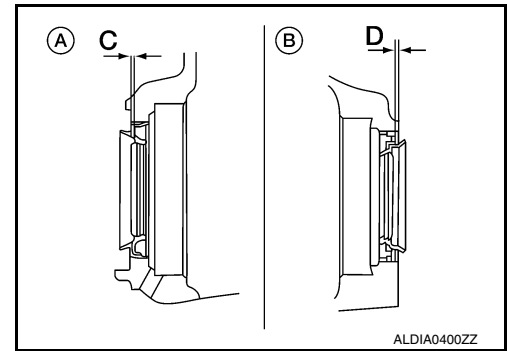

**Dimension (C) : Height difference from case end surface is within  $0 \pm 0.5$  mm ( $0.00 \pm 0.020$  in).**

**Dimension (D) : Height difference from case end surface is within  $0 \pm 0.5$  mm ( $0.00 \pm 0.020$  in).**

### NOTE:

The reference is the installation direction of the differential side oil seal.

Drift to be used:

Location	Commercial Service Tools
Transaxle case side	Commercial service tool with outer dia. 56 mm (2.20 in) and inner dia. 50 mm (1.97 in)
Converter housing side	

## Inspection and Adjustment

INFOID:000000011149452

### INSPECTION AFTER INSTALLATION

Check for CVT fluid leakage. Refer to [TM-188, "Inspection"](#).

### ADJUSTMENT AFTER INSTALLATION

Adjust CVT fluid level. Refer to [TM-190, "Adjustment"](#).

# WATER HOSE


< REMOVAL AND INSTALLATION >

[CVT: RE0F10E]

## WATER HOSE

### Exploded View

INFOID:000000011149453

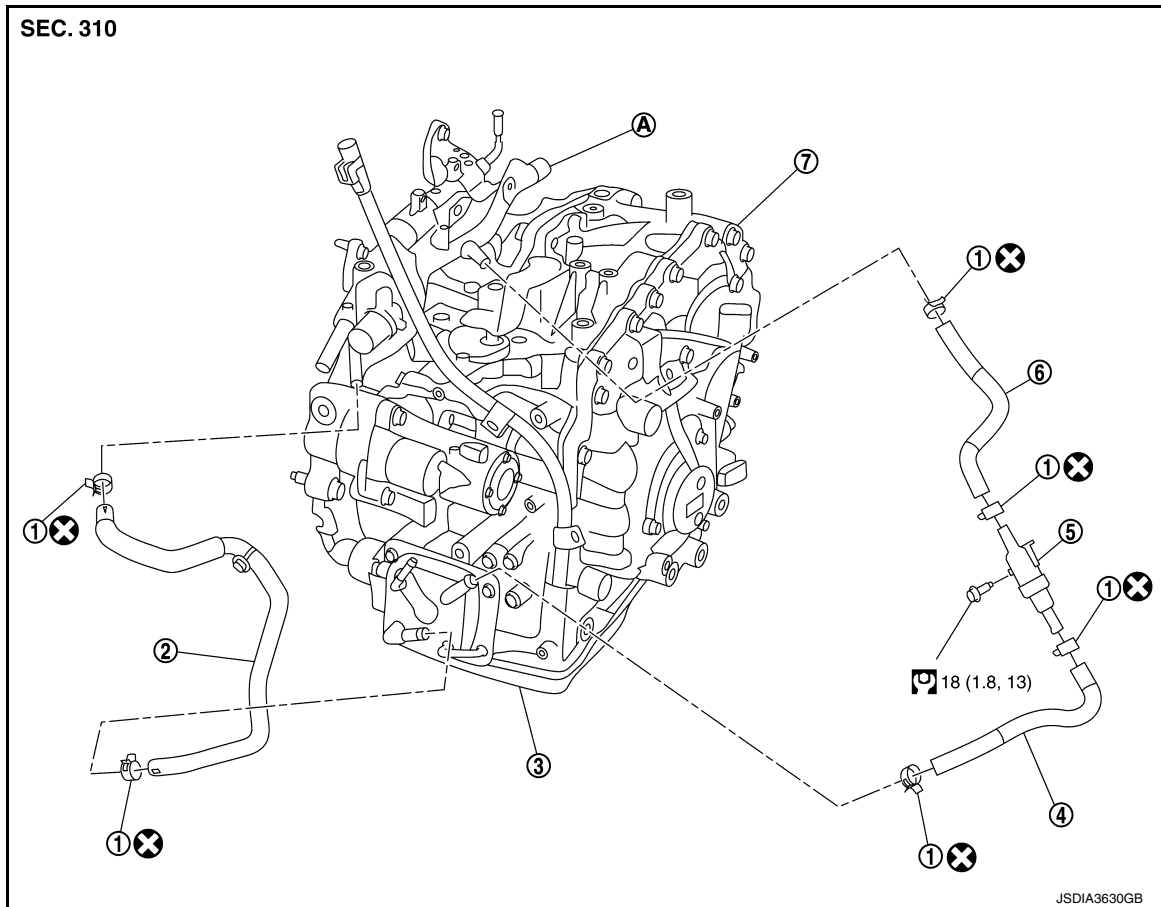

- |                      |                     |                      |
|----------------------|---------------------|----------------------|
| ① Hose clamp         | ② CVT water hose A  | ③ Transaxle assembly |
| ④ CVT water hose B   | ⑤ Heater thermostat | ⑥ CVT water hose C   |
| ⑦ Transaxle assembly |                     |                      |
| Ⓐ Water outlet       |                     |                      |

⊗ : Always replace after every disassembly.

⓪ : N·m (kg·m, ft·lb)

## Removal and Installation

INFOID:000000011149454

### REMOVAL

#### **WARNING:**

Do not remove the radiator cap when the engine is hot. Serious burns could occur from high pressure engine coolant escaping from the radiator. Wrap a thick cloth around the cap. Slowly turn it a quarter turn to allow built-up pressure to escape. Carefully remove the cap by turning it all the way.

#### **CAUTION:**

Perform this step engine is cold.

#### **NOTE:**

When removing components such as hoses, tubes/lines, etc., cap or plug openings to prevent fluid from spilling.

1. Drain engine coolant from radiator. Refer to [CO-11, "Changing Engine Coolant"](#).
2. Remove front air duct. Refer to [EM-24, "Exploded View"](#).
3. Remove hose clamps, and remove CVT water hose A.

# WATER HOSE

[CVT: RE0F10E]

## < REMOVAL AND INSTALLATION >

4. Remove hose clamps, and remove CVT water hose B.
5. Remove hose clamps, and remove CVT water hose C.
6. Remove CVT water tube.

### INSTALLATION


Installation is in the reverse order of removal.

#### CAUTION:

- Do not reuse hose clamp.
- Hose clamp should not interfere with the spool or bulge.


\*Refer to the following when installing water hose.

Water hose (1)	Installation side tube (2)	Direction of paint mark	Hose insertion depth
CVT water hose A	Water outlet	Upward	End reaches the 2-stage bulge.
	CVT oil warmer	Frontward	
CVT water hose B	CVT oil warmer	Frontward	
	Heater thermostat	Align with the mark on the heater thermostat side	
CVT water hose C	Heater thermostat	Align with the mark on the heater thermostat side	End reaches the expansion part.
	Water outlet	Upward	End reaches the 2-stage bulge.

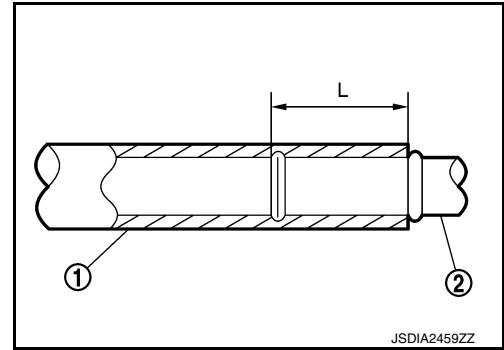

\*Refer to the following when installing hose clamps.

Water hose (1)	Installation side tube (2)	Hose clamp (3)	
		Direction of tab	Clamping position*
Water hose A	Water outlet	Downward and 45° rightward	A: 5-7 mm (0.20 - 0.28 in) (L) from hose end.
	CVT oil warmer	Downward	
Water hose B	CVT oil warmer	Forward and 45° downward	B: Align with the paint mark (C) as shown.
	Heater thermostat	Downward	
Water hose C	Heater thermostat	Downward	
	Water outlet	Upward	

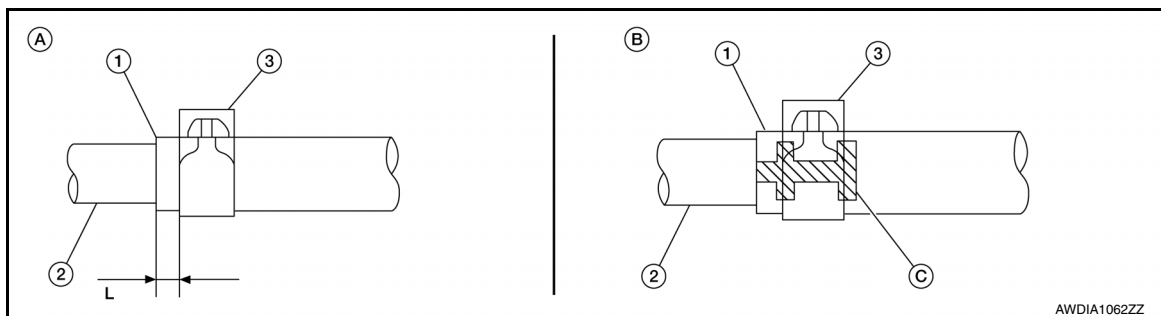

### Inspection

INFOID:000000011149455

### INSPECTION AFTER INSTALLATION

Start and warm up the engine. Visually check that there is no leakage of engine coolant and CVT fluid.

# CVT FLUID COOLER SYSTEM

< REMOVAL AND INSTALLATION >


[CVT: RE0F10E]

## CVT FLUID COOLER SYSTEM

### Exploded View

INFOID:000000011149456

### COMPONENT PARTS LOCATION

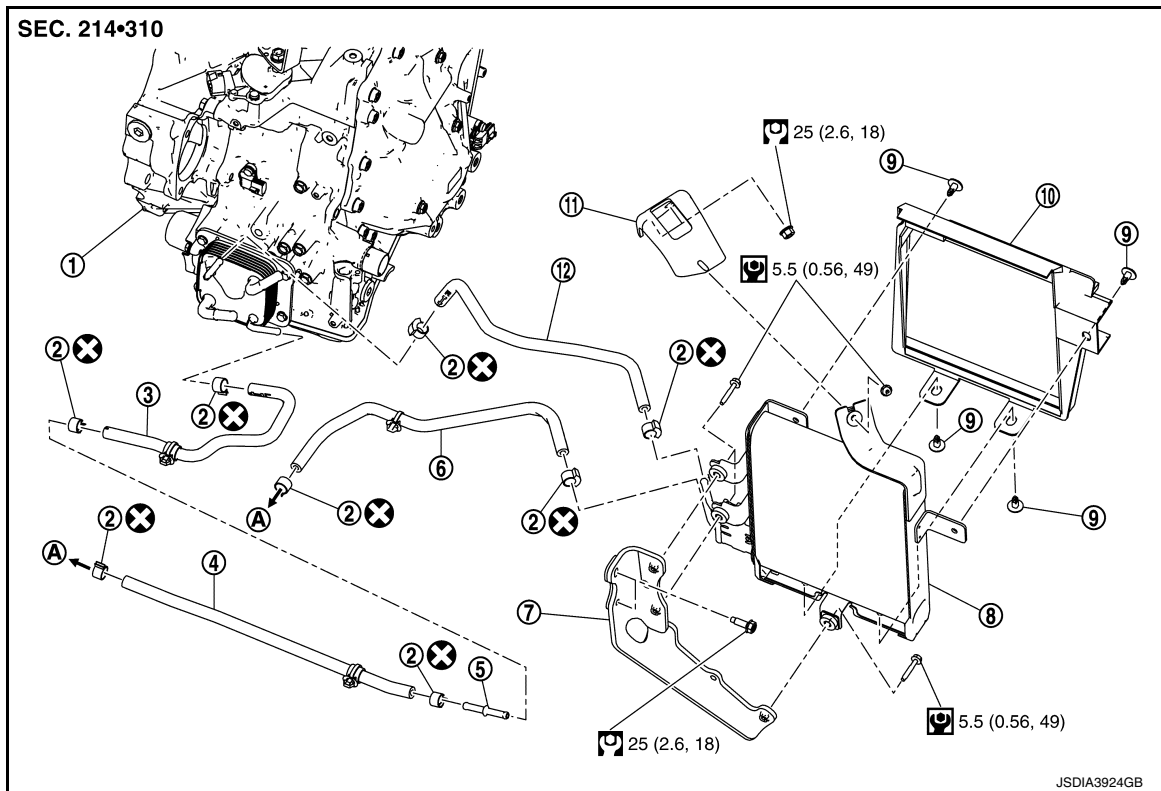

- |                           |                    |                           |
|---------------------------|--------------------|---------------------------|
| ① Transaxle assembly      | ② Hose clamp       | ③ CVT fluid cooler hose A |
| ④ CVT fluid cooler hose B | ⑤ Connector tube   | ⑥ CVT fluid cooler hose C |
| ⑦ Bracket                 | ⑧ CVT fluid cooler | ⑨ Clip                    |
| ⑩ Air guide               | ⑪ Bracket          | ⑫ CVT fluid cooler hose D |

A To radiator

⊗ : Always replace after every disassembly.

⊙ : N·m (kg-m, ft-lb)

⊙ : N·m (kg-m, in-lb)

## Removal and Installation

INFOID:000000011149457

### REMOVAL

#### NOTE:

When removing components such as hoses, tubes/lines, etc., cap or plug openings to prevent fluid from spilling.

1. Drain engine coolant from radiator. Refer to [CO-11, "Changing Engine Coolant"](#).
2. Remove front air duct. Refer to [EM-24, "Exploded View"](#).
3. Remove hose clamps, and remove CVT fluid cooler hose A.
4. Remove hose clamps, and remove CVT fluid cooler hose B.
5. Remove CVT fluid cooler tube A and CVT fluid cooler tube B.

### INSTALLATION

Installation is in the reverse order of removal.

# CVT FLUID COOLER SYSTEM

< REMOVAL AND INSTALLATION >


[CVT: RE0F10E]

**CAUTION:**

- Do not reuse hose clamps.
- Hose clamps should not interfere with the spool or bulge.


\*Refer to the following when installing CVT fluid cooler hoses

Hose name (1)	Installation side tube (2)	Direction of paint mark	Hose insertion depth (L)
CVT fluid cooler hose A	CVT oil warmer	Downward	B: End reaches the 2-step bulge.
	Connector tube	Upward	
CVT fluid cooler hose B	Connector tube	Upward	B: End reaches the spool.
	Radiator	Upward	A: End reaches the radius curve end.
CVT fluid cooler hose C	Radiator	Downward	C: Insert the hose until hose touches the radiator.
	CVT fluid cooler	Leftward	A: End reaches the radius curve end.
CVT fluid cooler hose D	CVT fluid cooler	Leftward	B: End reaches the 2-step bulge
	CVT oil warmer	Frontward	

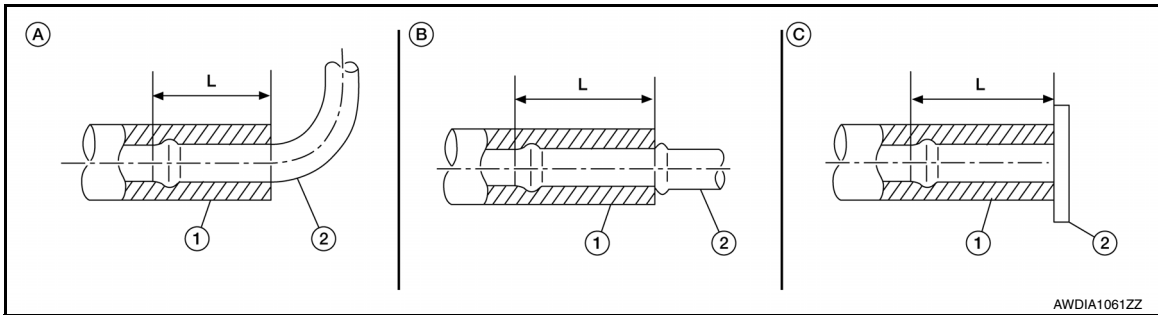

\*Refer to the following when installing CVT fluid cooler hoses

Hose name (1)	Installation side tube (2)	Hose clamp (3)	
		Direction of tab	Clamping position
CVT fluid cooler hose A	CVT oil warmer	Downward	B: Align with the paint mark (C) as shown in the figure.
	Connector tube	Downward and 35° backward	
CVT fluid cooler hose B	Connector tube	Downward and 35° backward	A: 3 - 7 mm (0.12 - 0.28 in) (L) from hose end
	Radiator	Upward	
CVT fluid cooler hose C	Radiator	Downward	
	CVT fluid cooler	Leftward	B: Align with the paint mark (C) as shown in the figure.
CVT fluid cooler hose D	CVT fluid cooler	Leftward	
	CVT oil warmer	Frontward	

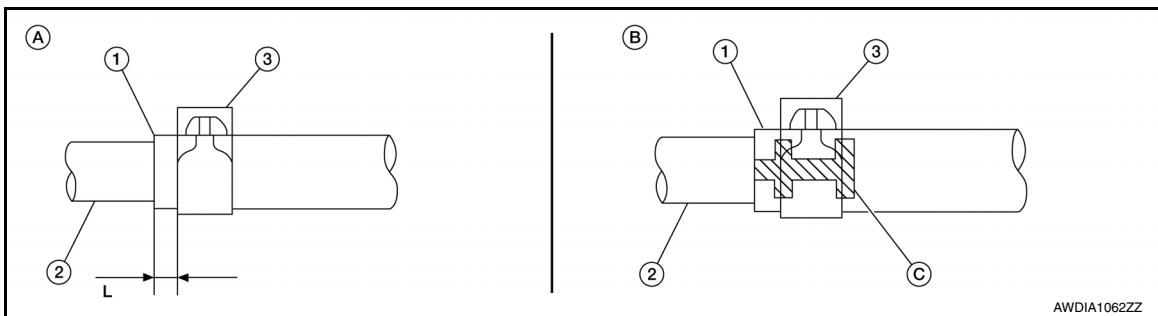

## Inspection

INFOID:000000011149458

### INSPECTION AFTER INSTALLATION

Check for CVT fluid leakage. Refer to [TM-188, "Inspection"](#).

## CVT FLUID COOLER SYSTEM

< REMOVAL AND INSTALLATION >

[CVT: RE0F10E]

---

### ADJUSTMENT AFTER INSTALLATION

Adjust CVT fluid level. Refer to [TM-190. "Adjustment"](#).

# CVT OIL WARMER


< REMOVAL AND INSTALLATION >

[CVT: RE0F10E]

## CVT OIL WARMER

### Exploded View

INFOID:0000000011149459

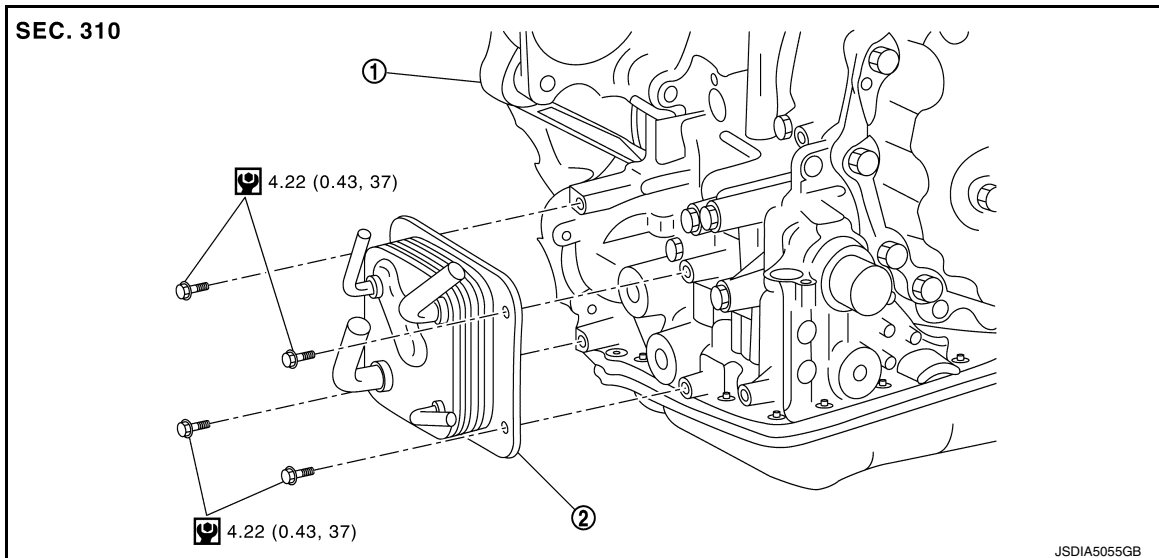

- ① Transaxle assembly                      ② CVT oil warmer

⊗ : Always replace after every disassembly.

⊕ : N·m (kg-m, in-lb)

### Removal and Installation

INFOID:0000000011149460

#### REMOVAL

##### **WARNING:**

**Do not remove the radiator cap when the engine is hot. Serious burns could occur from high pressure coolant escaping from the radiator. Wrap a thick cloth around the cap. Slowly turn it a quarter turn to allow built-up pressure to escape. Carefully remove the cap by turning it all the way.**

##### **CAUTION:**

**Perform this step engine is cold.**

##### **NOTE:**

When removing components such as hoses, tubes/lines, etc., cap or plug openings to prevent fluid from spilling.

1. Drain engine coolant from radiator. Refer to [CO-11, "Changing Engine Coolant"](#).
2. Remove CVT water hose from CVT oil warmer. Refer to [TM-210, "Exploded View"](#).
3. Remove CVT fluid cooler hose from CVT oil warmer. Refer to [TM-212, "Exploded View"](#).
4. Remove CVT oil warmer.
5. Remove bracket.

#### INSTALLATION

Installation is in the reverse order of removal.

#### Inspection

INFOID:0000000011149461

#### INSPECTION AFTER INSTALLATION

- Check for CVT fluid leakage. Refer to [TM-188, "Inspection"](#).
- Start and warm up the engine. Visually check that there is no leakage of engine coolant and CVT fluid.

#### ADJUSTMENT AFTER INSTALLATION

Adjust CVT fluid level. Refer to [TM-190, "Adjustment"](#).

# PLUG

< REMOVAL AND INSTALLATION >

[CVT: RE0F10E]

## PLUG


### Description

INFOID:0000000011149462

Replace the O-ring if oil leaks from the plug.

### Exploded View

INFOID:0000000011149463

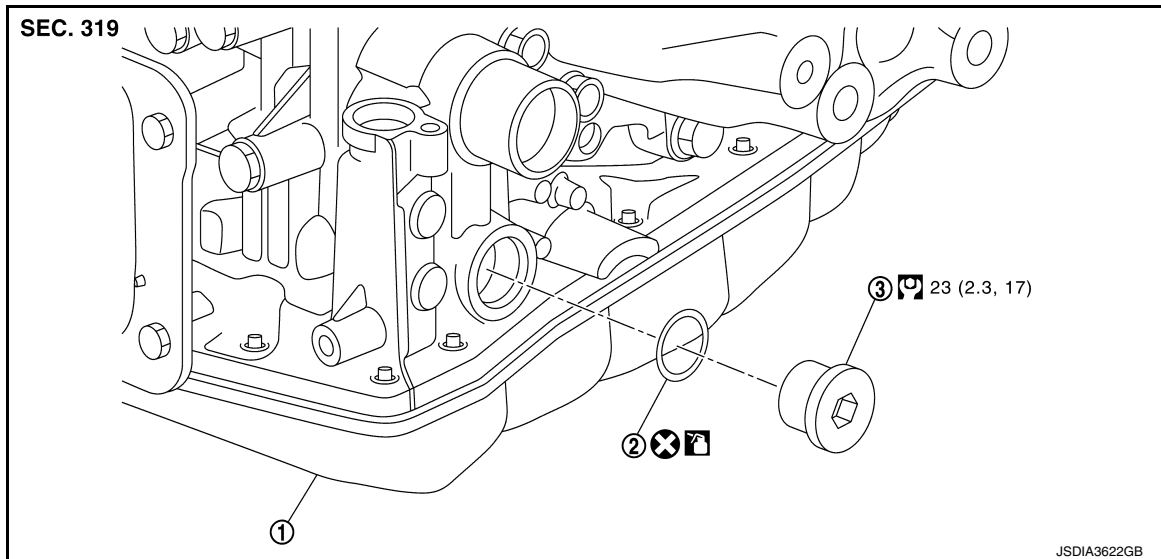

① Transaxle assembly

② O-ring

③ Plug

⊗ : Always replace after every disassembly.

Ⓜ : N·m (kg·m, ft·lb)

🔧 : Apply CVT fluid

### Removal and Installation

INFOID:0000000011149464

#### NOTE:

Replace the O-rings if oil leaks from the plugs.

#### REMOVAL

Remove the plugs and O-rings.

#### INSTALLATION

Installation is in the reverse order of removal.

#### CAUTION:

- Do not reuse O-ring.
- Apply Genuine NISSAN CVT Fluid NS-3 to O-ring.

### Inspection and Adjustment

INFOID:0000000011149465

#### INSPECTION AFTER INSTALLATION

Check for CVT fluid leakage. Refer to [TM-188, "Inspection"](#).

#### ADJUSTMENT AFTER INSTALLATION

Adjust CVT fluid level. Refer to [TM-190, "Adjustment"](#).



# TRANSMISSION ASSEMBLY

< UNIT REMOVAL AND INSTALLATION >

[CVT: RE0F10E]


## UNIT REMOVAL AND INSTALLATION

### TRANSMISSION ASSEMBLY

Exploded View

INFOID:000000011149466

2WD Models

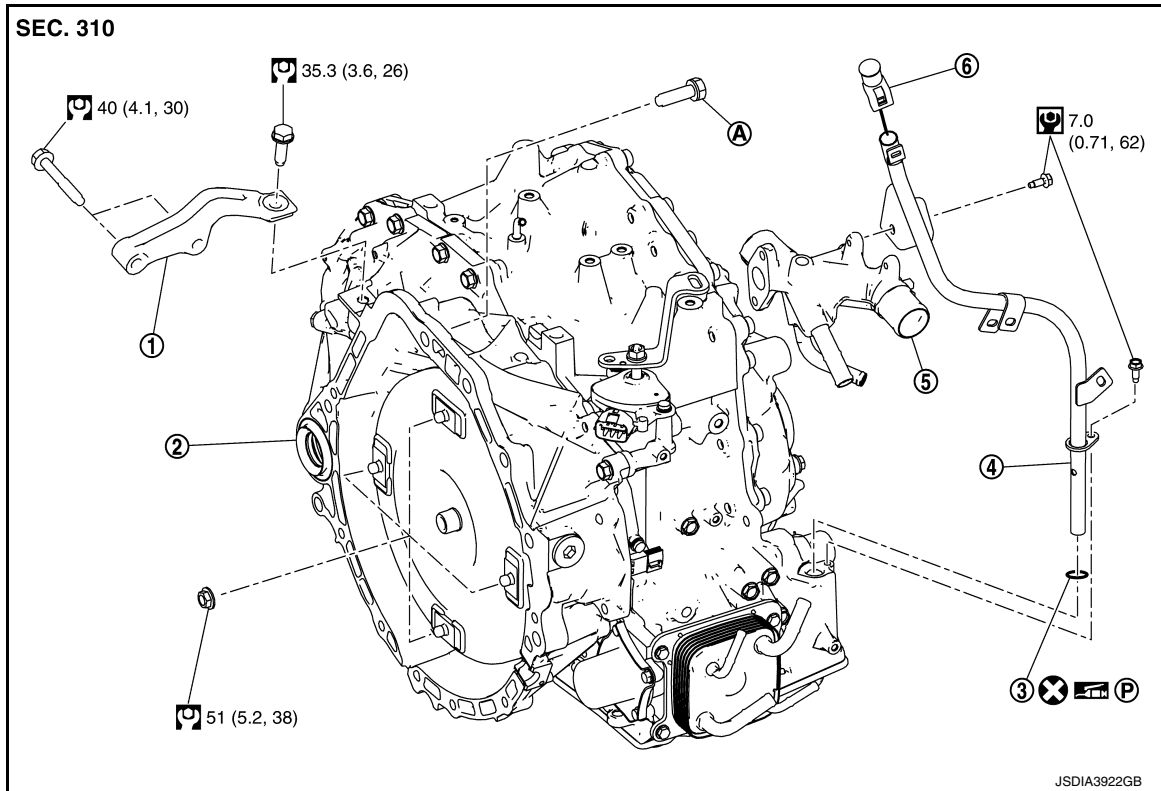

- ① Gusset
- ② Transaxle assembly
- ③ O-ring
- ④ CVT fluid charging pipe
- ⑤ Water outlet
- ⑥ CVT fluid charging pipe cap
- Ⓐ : For the tightening torque, refer to [TM-218, "Removal and Installation"](#).
- ⊗ : Always replace after every disassembly.
- Ⓜ : N·m (kg-m, ft-lb)
- Ⓝ : N·m (kg-m, in-lb)
- Ⓟ : Apply petroleum jelly


A  
B  
C  
TM  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# TRANSMISSION ASSEMBLY

< UNIT REMOVAL AND INSTALLATION >

[CVT: RE0F10E]

4WD Models

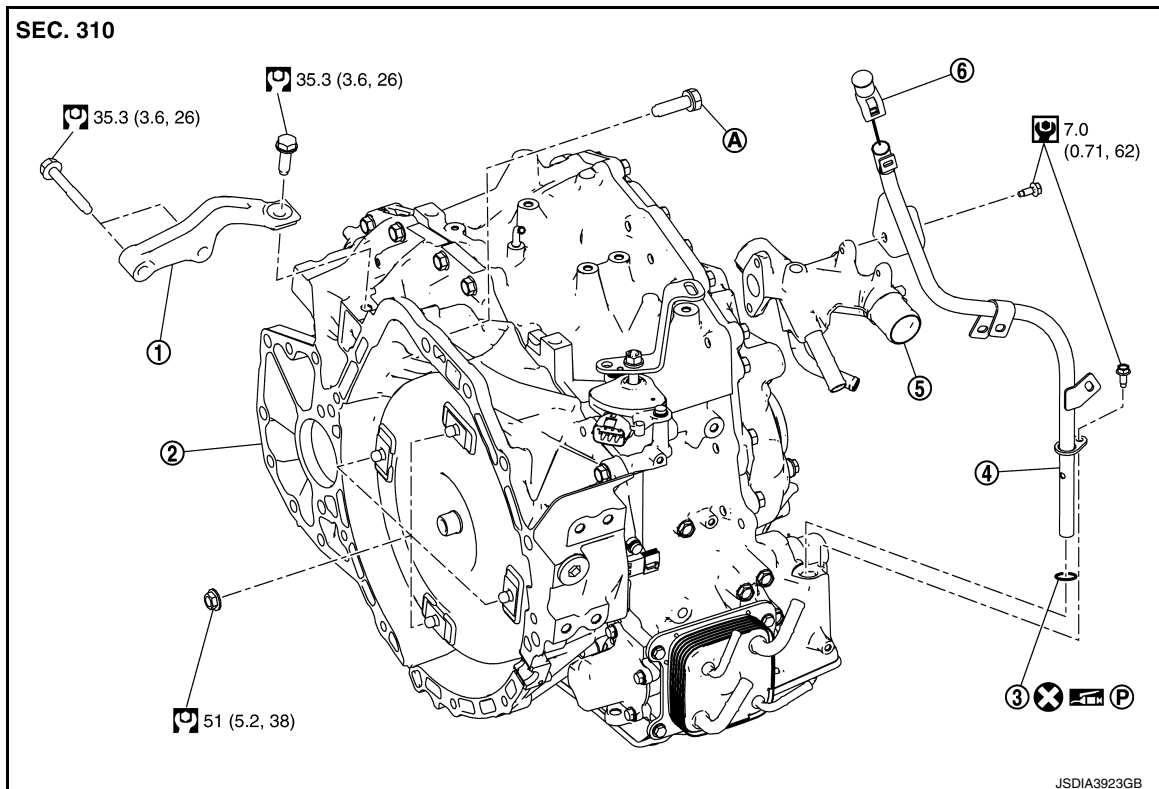

- |                           |                      |                               |
|---------------------------|----------------------|-------------------------------|
| ① Gusset                  | ② Transaxle assembly | ③ O-ring                      |
| ④ CVT fluid charging pipe | ⑤ Water outlet       | ⑥ CVT fluid charging pipe cap |

Ⓐ : For the tightening torque, refer to [TM-218, "Removal and Installation"](#).

⊗ : Always replace after every disassembly.

Ⓜ : N·m (kg-m, ft-lb)

Ⓝ : N·m (kg-m, in-lb)

Ⓟ : Apply petroleum jelly

## Removal and Installation

INFOID:000000011149467

### REMOVAL

#### WARNING:

Do not remove the radiator cap when the engine is hot. Serious burns could occur from high pressure coolant escaping from the radiator. Wrap a thick cloth around the cap. Slowly turn it a quarter turn to allow built-up pressure to escape. Carefully remove the cap by turning it all the way.

#### CAUTION:

- Perform when the engine is cold.
- When replacing TCM and transaxle assembly as a set, replace transaxle assembly first and then replace TCM. Refer to [TM-84, "Description"](#).
- When replacing TCM and transaxle assembly simultaneously, perform "ADDITIONAL SERVICE WHEN REPLACING TCM AND TRANSAXLE ASSEMBLY" before to [TM-87, "Work Procedure"](#).

#### NOTE:

When removing components such as hoses, tubes/lines, etc., cap or plug openings to prevent fluid from spilling.

1. Remove the engine and transaxle with the front suspension member as a unit. Refer to [EM-103, "2WD : Removal and Installation"](#) (2WD) or [EM-108, "4WD : Removal and Installation"](#) (4WD).
2. Disconnect the transaxle harness connectors.
3. Disconnect the CVT oil warmer water hoses from engine side. Refer to [TM-210, "Removal and Installation"](#).

# TRANSMISSION ASSEMBLY

< UNIT REMOVAL AND INSTALLATION >

[CVT: RE0F10E]


4. Remove the CVT fluid charging pipe.
5. Remove the transaxle to engine and engine to transaxle bolts.
6. Separate the engine from the transaxle and remove the engine from the front suspension member. Refer to [EM-103. "2WD : Removal and Installation"](#) (2WD) or [EM-108. "4WD : Removal and Installation"](#) (4WD).  
**NOTE:**  
 Using paint, put matching marks on the drive plate and torque converter when removing the torque converter to drive plate nuts.
7. Remove transmission bracket.
8. Lift the transaxle from the front suspension member.

## INSTALLATION

Installation is in the reverse order of removal.

### NOTE:

Write down the serial number of the new transaxle assembly.

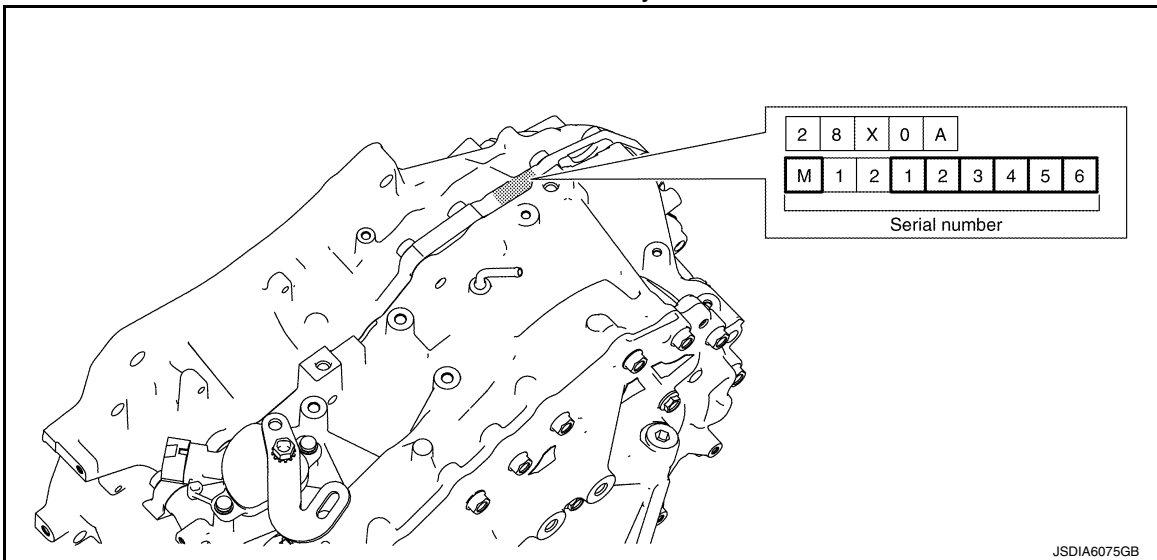


### CAUTION:

- When replacing an engine or transaxle you must make sure any dowels are installed correctly during re-assembly
- Improper alignment caused by missing dowels may cause vibration, oil leaks or breakage of drive train components.
- Do not reuse O-rings or copper sealing washers.
- When turning crankshaft, turn it clockwise as viewed from the front of the engine.
- When tightening the nuts for the torque converter while securing the crankshaft pulley bolt, be sure to confirm the tightening torque of the crankshaft pulley bolt. Refer to [EM-63. "Removal and Installation"](#).
- After converter is installed to drive plate, rotate crankshaft several turns to check that CVT rotates freely without binding.
- When installing the CVT to the engine, align the matching mark on the drive plate with the matching mark on the torque converter.

When installing CVT assembly to the engine assembly, attach the bolts in accordance with the following standard.

Bolt No.	1	2	3	4	5
Number of bolts	1	2	1	1	4
Bolt length "ℓ" mm (in)	55 (2.17)	39 (1.54)	35 (1.38)	50 (1.97)	45 (1.77)
Tightening torque N·m (kg-m, ft-lb)	74.5 (7.6, 55)				50.0 (5.1, 37)

- When installing the drive plate to torque converter nuts, tighten them temporarily. then tighten the nuts to the specified torque.

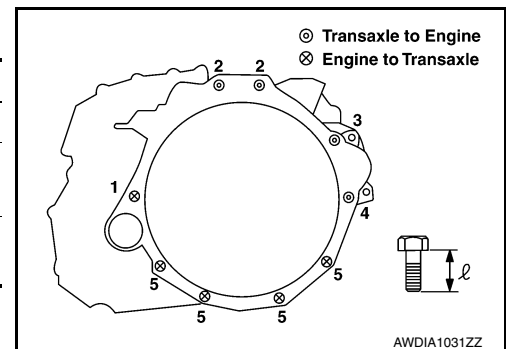

# TRANSMISSION ASSEMBLY

< UNIT REMOVAL AND INSTALLATION >

[CVT: RE0F10E]

INFOID:000000011149468


## Inspection and Adjustment

### INSPECTION BEFORE INSTALLATION

After inserting a torque converter to the CVT, check dimension (A) with in the reference value limit.

- B : Scale
- C : Straightedge

**Dimension (A)** : Refer to [TM-223, "Torque Converter"](#).

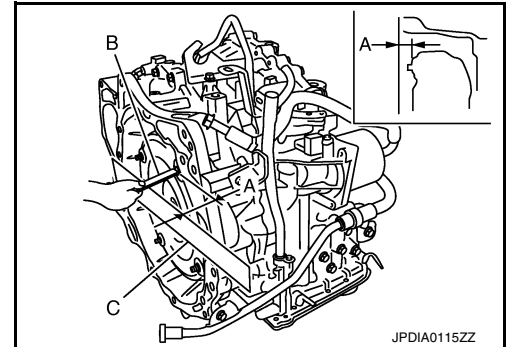

### INSPECTION AFTER INSTALLATION

Check the following items:

- CVT fluid leakage, refer to [TM-188, "Inspection"](#).
- For CVT position, refer to [TM-93, "Inspection and Adjustment"](#).
- Start the engine and check for coolant leakage from the parts which are removed and reinstalled.

### ADJUSTMENT AFTER INSTALLATION

- Adjust the CVT fluid level. Refer to [TM-190, "Adjustment"](#).
- Perform "ADDITIONAL SERVICE WHEN REPLACE TRANSAXLE ASSEMBLY". Refer to [TM-85, "Description"](#).

# TORQUE CONVERTER AND CONVERTER HOUSING OIL SEAL

< UNIT DISASSEMBLY AND ASSEMBLY >


[CVT: RE0F10E]

## UNIT DISASSEMBLY AND ASSEMBLY

### TORQUE CONVERTER AND CONVERTER HOUSING OIL SEAL

Exploded View

INFOID:000000011149469

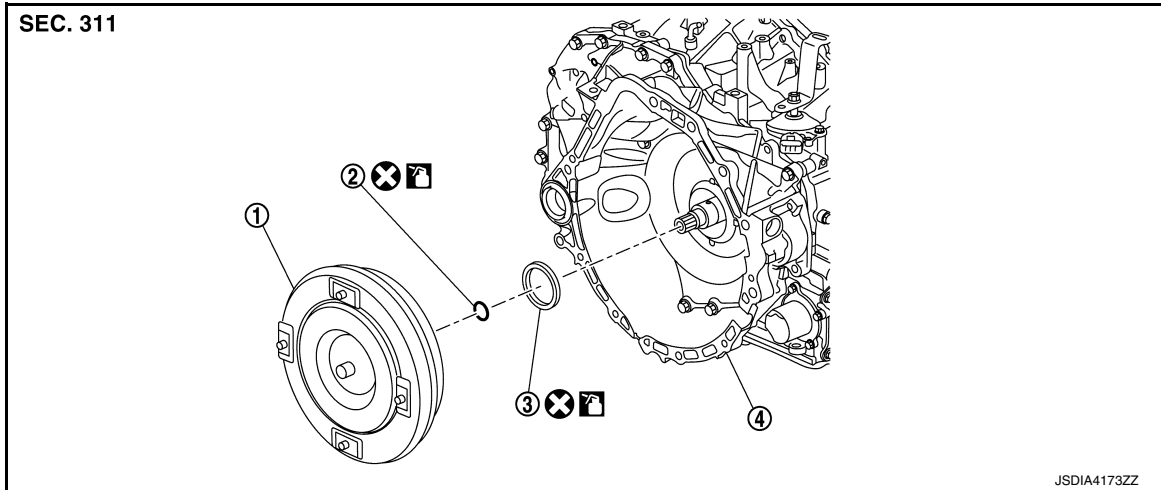

- ① Torque converter                      ② O-ring                      ③ Converter housing oil seal
- ④ Transaxle assembly
- ⊗ : Always replace after every disassembly.
- 👉 : Apply CVT fluid

### Disassembly

INFOID:000000011149470

1. Remove transaxle assembly. Refer to [TM-218, "Removal and Installation"](#).
2. Remove torque converter from transaxle assembly.  
**CAUTION:**  
Do not damage the bushing on the inside of torque converter sleeve when removing torque converter.
3. Remove converter housing oil seal using suitable tool.  
**CAUTION:**  
Be careful not to scratch converter housing.

### Assembly

INFOID:000000011149471

Assembly is in the reverse order of disassembly.

**CAUTION:**  
Do not reuse converter housing oil seal.


**NOTE:**

Lubricate converter housing oil seal prior to installation.

- Drive converter housing oil seal ① evenly using a drift (A) (commercial service tool) so that converter housing oil seal protrudes by the dimension (B) respectively.

Unit: mm (in)	
Commercial service tool: (A)	Outer diameter: 65 (2.56)
	Inner diameter: 60 (2.36)

- ② : Transaxle assembly

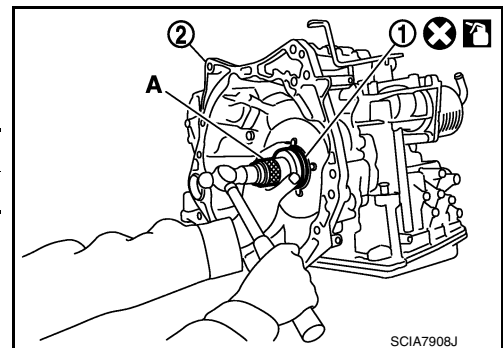

SCIA7908J

# TORQUE CONVERTER AND CONVERTER HOUSING OIL SEAL


< UNIT DISASSEMBLY AND ASSEMBLY >

[CVT: RE0F10E]

Unit: mm (in)	
Dimension (B)	$1.0 \pm 0.5$ ( $0.039 \pm 0.020$ )

**NOTE:**

Converter housing oil seal pulling direction is used as the reference.


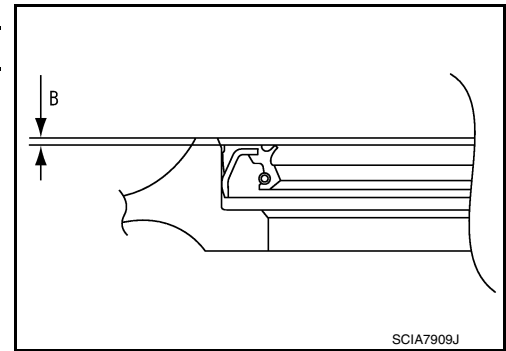


SCIA7909J

- Attach the pawl (A) of the torque converter to the drive sprocket hole (B) on the transaxle assembly side.

**CAUTION:**

- Rotate the torque converter for installing torque converter.
- Do not damage the bushing inside the torque converter sleeve when installing the converter housing oil seal.

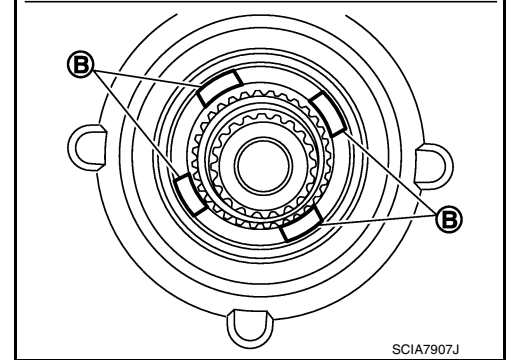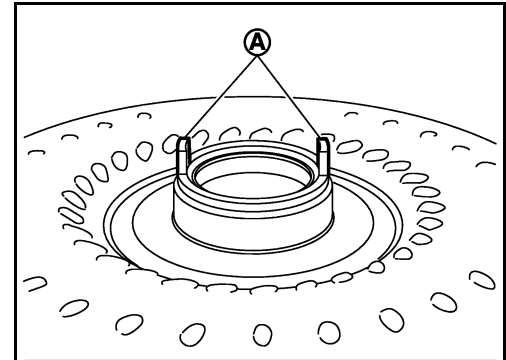

SCIA7907J

## Inspection

INFOID:000000011149472


### INSPECTION AFTER INSTALLATION

- After inserting a torque converter to the CVT, check dimension (A) with in the reference value limit.

B : Scale

C : Straightedge

**Dimension (A) : Refer to [TM-223, "Torque Converter"](#).**

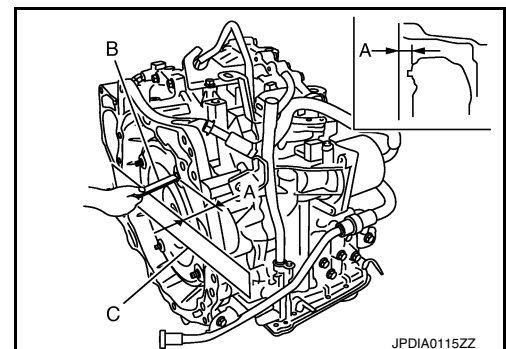

JPDIA0115ZZ

# SERVICE DATA AND SPECIFICATIONS (SDS)

< SERVICE DATA AND SPECIFICATIONS (SDS)

[CVT: RE0F10E]

## SERVICE DATA AND SPECIFICATIONS (SDS)

### SERVICE DATA AND SPECIFICATIONS (SDS)

#### General Specification

INFOID:0000000011149473

Engine model	VQ35DE		
Drive type	2WD	4WD	
Transaxle model	RE0F10E		
Transaxle gear ratio	D position	2.413 – 0.383	
	R position	1.798	
	Final drive	5.577	
Recommended fluid	Refer to <a href="#">MA-17, "FOR MEXICO : Fluids and Lubricants"</a>		
Fluid capacity liter			

#### Shift Characteristics

INFOID:0000000011149474

Unit: rpm

Throttle position	Shift pattern	CVT input speed	
		At 40 km/h (25 MPH)	At 60 km/h (37 MPH)
2/8	"D" position (Normal)	1,570–1,730	1,710–1,890
	"D" position (OD OFF)	1,690–1,870	2,180–2,420
	"L" position	2,030–2,250	2,860–3,180
8/8	"D" position (Normal)	3,620–4,020	4,750–5,250
	"D" position (OD OFF)	3,620–4,020	4,750–5,250
	"L" position	3,620–4,020	4,750–5,250

#### NOTE:

Lock-up is engaged at the vehicle speed of approximately 18 km/h (12 MPH) to 40 km/h (24 MPH).

#### Stall Speed

INFOID:0000000011149475

Unit: rpm

Stall speed	2,400 – 2,700
-------------	---------------

#### Torque Converter

INFOID:0000000011149476

Unit: mm (in)

Distance "A" between the converter housing and torque converter	14.0 (0.55)
---	-------------

#### Heater Thermostat

INFOID:0000000011149477

Valve lift	More than 5.0 mm (0.197 in)
Valve opening temperature	Approx. 71°C (160°F)
Minimum valve lift	5.0 mm/Approx. 85°C (0.197 in/Approx. 203°F)

## PRECAUTION

### PRECAUTIONS

#### Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000011355492

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. Information necessary to service the system safely is included in the SR and SB section of this Service Manual.

**WARNING:**

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SR section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

#### PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS


**WARNING:**

- When working near the Airbag Diagnosis Sensor Unit or other Airbag System sensors with the Ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the Ignition OFF, disconnect the battery and wait at least three minutes before performing any service.

#### Precaution for Procedure without Cowl Top Cover

INFOID:000000011355493

When performing the procedure after removing cowl top cover, cover the lower end of windshield with urethane, etc to prevent damage to windshield.

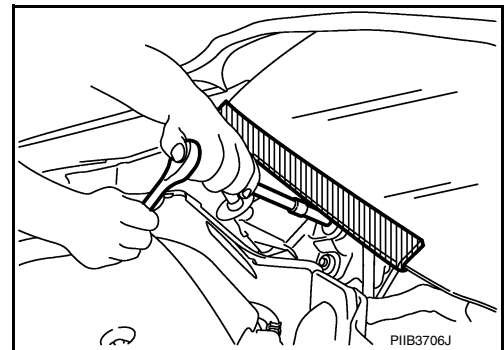

#### Precaution for TCM and Transaxle Assembly Replacement

INFOID:000000011355494

**CAUTION:**

- To replace TCM, refer to [TM-298, "Description"](#).
- To replace transaxle assembly, refer to [TM-299, "Description"](#).



# PRECAUTIONS


< PRECAUTION >

[CVT: RE0F10J]


INFOID:000000011355495

## General Precautions


- Turn ignition switch OFF and disconnect the battery cable from the negative terminal before connecting or disconnecting the CVT assembly harness connector. Because battery voltage is applied to TCM even if ignition switch is turned OFF.

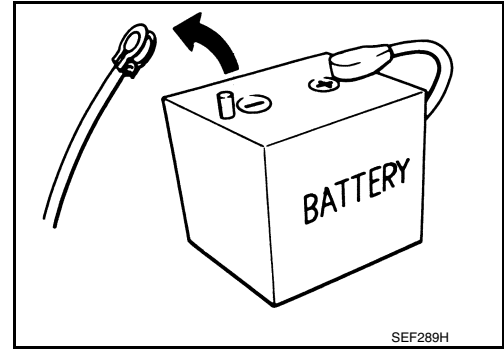


- When connecting or disconnecting pin connectors into or from TCM, do not damage pin terminals (bend or break). Check that there are not any bends or breaks on TCM pin terminal, when connecting pin connectors.

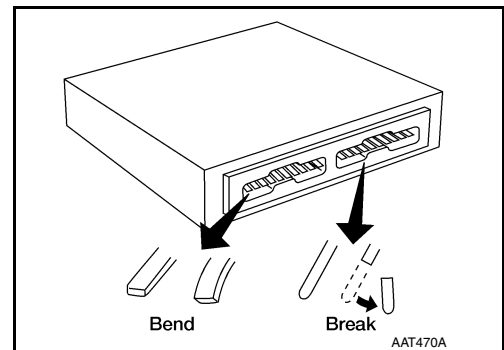

- Perform TCM input/output signal inspection and check whether TCM functions normally or not before replacing TCM. Refer to [TM-266, "Reference Value"](#).

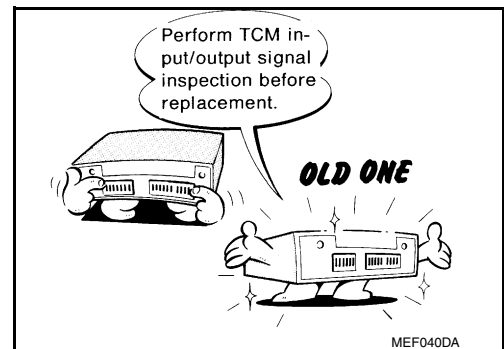

- Perform "DTC (Diagnostic Trouble Code) CONFIRMATION PROCEDURE". If the repair is completed DTC should not be displayed in the "DTC CONFIRMATION PROCEDURE".

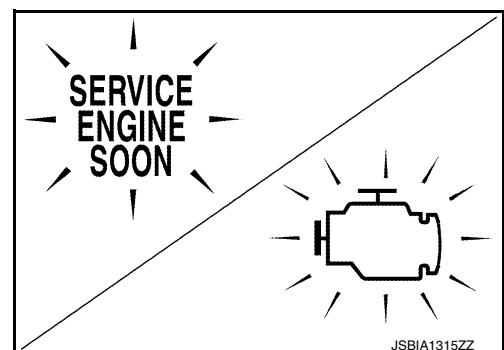

- Always use the specified brand of CVT fluid. Refer to [MA-15, "FOR USA AND CANADA : Fluids and Lubricants"](#).
- Use lint-free paper not cloth rags during work.
- Dispose of the waste oil using the methods prescribed by law, ordinance, etc. after replacing the CVT fluid.

# PRECAUTIONS

< PRECAUTION >

[CVT: RE0F10J]

## On Board Diagnosis (OBD) System of CVT and Engine

INFOID:000000011355496

The TCM and ECM have an on board diagnostic system. It will light up the malfunction indicator lamp (MIL) to warn the driver of a malfunction causing emission deterioration.

### CAUTION:


- Be sure to turn the ignition switch OFF and disconnect the battery cable from the negative terminal before any repair or inspection work. The open/short circuit of related switches, sensors, solenoid valves, etc. will cause the MIL to light up.
- Be sure to connect and lock the connectors securely after work. A loose (unlocked) connector will cause the MIL to light up due to an open circuit. (Be sure the connector is free from water, grease, dirt, bent terminals, etc.)
- Be sure to route and secure the harnesses properly after work. Interference of the harness with a bracket, etc. may cause the MIL to light up due to a short circuit.
- Be sure to connect rubber tubes properly after work. A misconnected or disconnected rubber tube may cause the MIL to light up due to a malfunction of the EGR system or fuel injection system, etc.
- Be sure to erase the unnecessary malfunction information (repairs completed) from the TCM and ECM before returning the vehicle to the customer.

## Removal and Installation Procedure for CVT Unit Connector

INFOID:000000011355497


### REMOVAL

- Rotate bayonet ring ① counterclockwise. Pull out CVT unit harness connector ② upward and remove it.

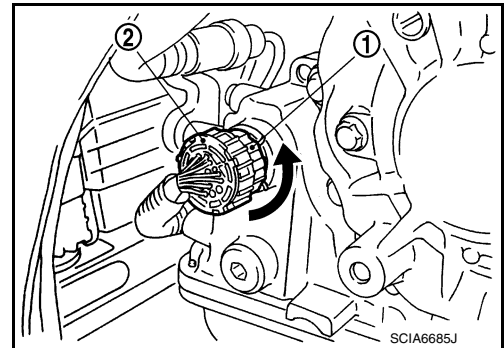


### INSTALLATION

1. Align marking (A) on CVT unit harness connector terminal with marking (B) on bayonet ring. Insert CVT unit harness connector.
2. Rotate bayonet ring clockwise.

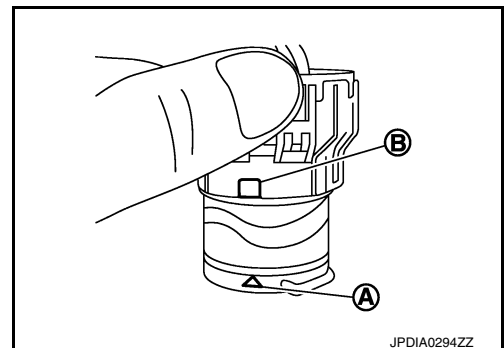

3. Rotate bayonet ring clockwise until marking (A) on CVT unit harness connector terminal body is aligned with the slit (B) on bayonet ring as shown in the figure (correctly fitting condition).

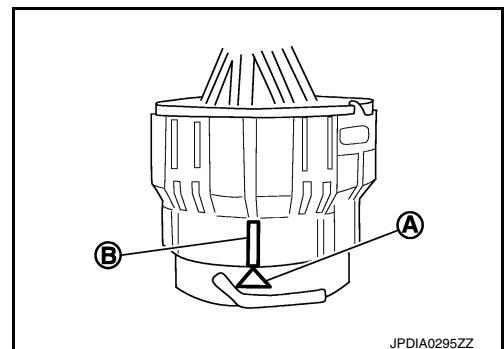


### CAUTION:

# PRECAUTIONS

[CVT: RE0F10J]

## < PRECAUTION >

- Securely align marking (A) on CVT unit harness connector terminal body with bayonet ring slit (B). Then, be careful not to make a half fit condition as shown in the figure.
- Never mistake the slit of bayonet ring for other dent portion.

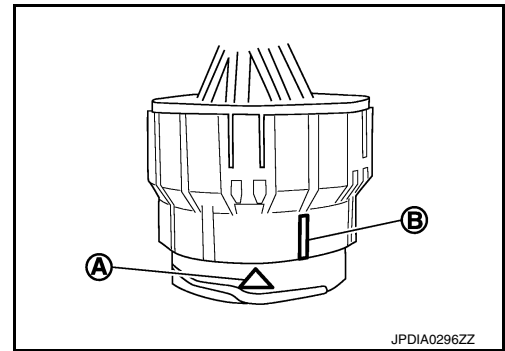

A  
B  
C

TM

E

F

G

H

I

J

K

L

M

N

O

P

# PREPARATION

< PREPARATION >

[CVT: RE0F10J]



## PREPARATION

### PREPARATION

#### Special Service Tools

INFOID:000000011355498




The actual shape of the tools may differ from those illustrated here.

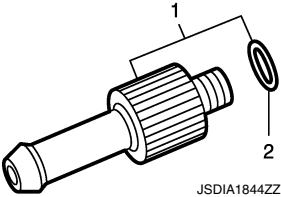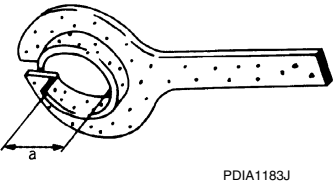Tool number (TechMate No.) Tool name	Description
1. KV311039S0 ( — ) Charging pipe set 2. KV31103920* ( — ) O-ring	CVT fluid changing and adjustment 
KV38107900 ( — ) Protector	Installing drive shaft a: 32 mm (1.26 in) dia. 

\*: The O-ring as a unit part is set as a SST.

#### Commercial Service Tools

INFOID:000000011355499

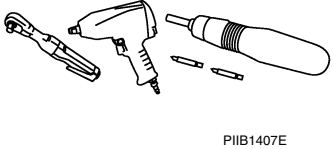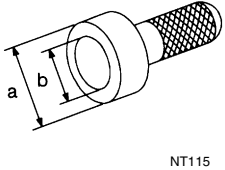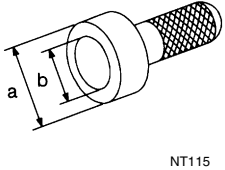
Tool name	Description
Power tool	Loosening nuts, screws and bolts 
Drift	Installing differential side oil seal a: 56 mm (2.20 in) dia. b: 50 mm (1.97 in) dia. 
Drift	Installing converter housing oil seal a: 65 mm (2.56 in) dia. b: 60 mm (2.36 in) dia. 

# SYSTEM DESCRIPTION

## COMPONENT PARTS CVT CONTROL SYSTEM

### CVT CONTROL SYSTEM : Component Parts Location

INFOID:000000011355500

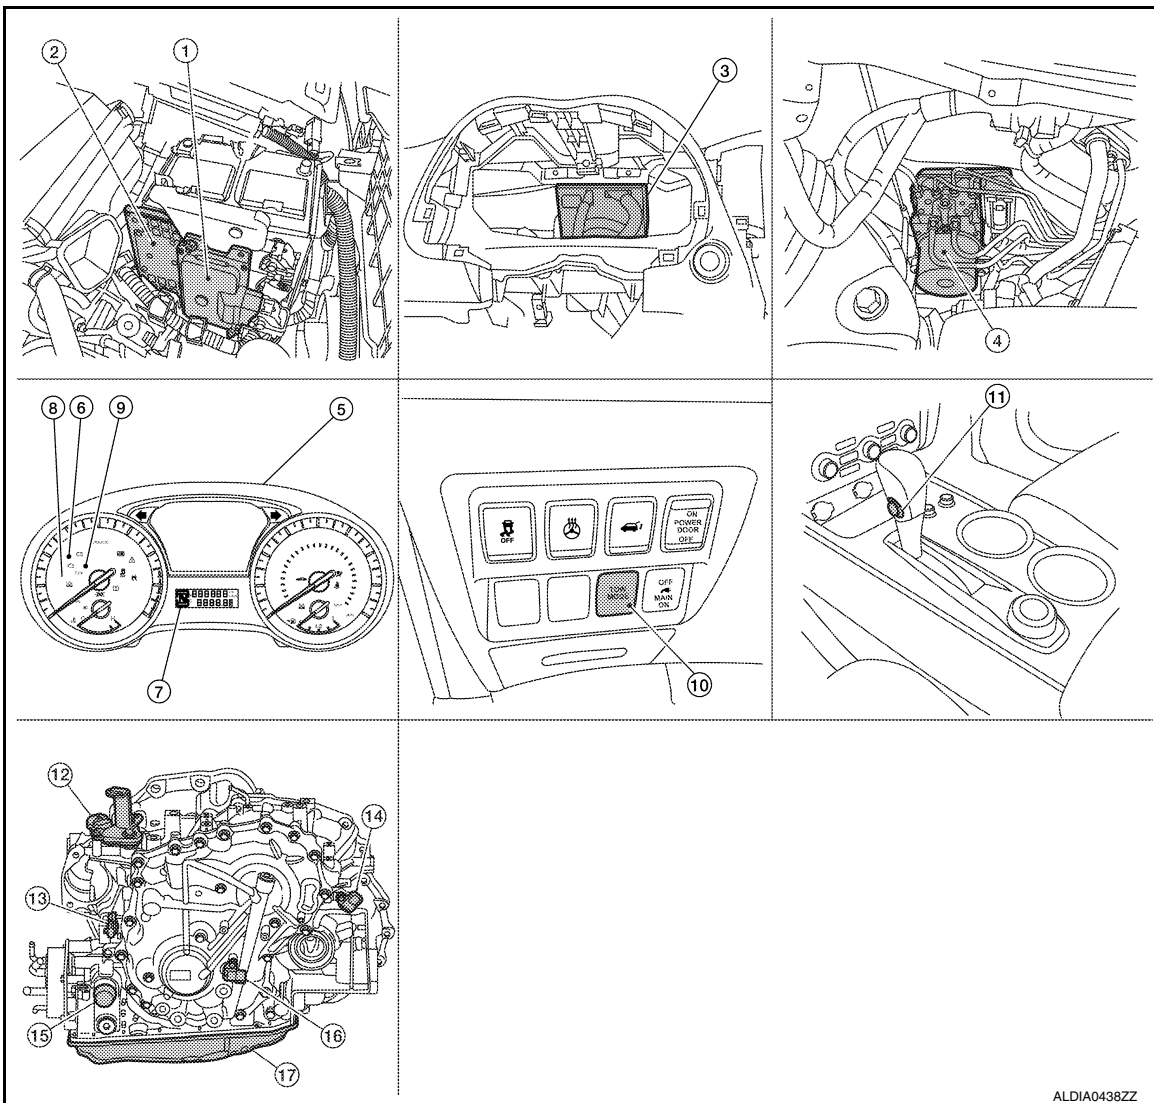

### COMPONENT DESCRIPTION

A  
B  
C  
TM  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# COMPONENT PARTS

< SYSTEM DESCRIPTION >

[CVT: RE0F10J]

NO.	Component	Function
①	TCM	<a href="#">TM-231, "CVT CONTROL SYSTEM : TCM"</a>
②	ECM	<p>Mainly transmits the following signal to TCM via CAN communication.</p> <ul style="list-style-type: none"> <li>• Engine and CVT integrated control signal</li> </ul> <p><b>NOTE:</b> General term for the communication (torque-down permission, torque-down request, etc.) exchanged between the ECM and TCM.</p> <ul style="list-style-type: none"> <li>• Engine speed signal</li> <li>• Engine coolant temperature signal</li> <li>• Accelerator pedal position signal</li> <li>• Closed throttle position signal</li> </ul> <p>Mainly receives the following signals from TCM via CAN communication.</p> <ul style="list-style-type: none"> <li>• Malfunction indicator lamp (MIL) signal</li> </ul> <p>Refer to <a href="#">EC-20, "ENGINE CONTROL SYSTEM : Component Parts Location"</a> for detailed installation location.</p>
③	BCM	<p>Mainly transmits the following signal to TCM via CAN communication.</p> <ul style="list-style-type: none"> <li>• Stop lamp switch signal</li> </ul> <p>Refer to <a href="#">BCS-4, "BODY CONTROL SYSTEM : Component Parts Location"</a> for detailed installation location.</p>
④	ABS actuator and electric unit (control unit)	<p>Mainly transmits the following signal to TCM via CAN communication.</p> <ul style="list-style-type: none"> <li>• Vehicle speed signal (ABS)</li> <li>• ABS operation signal</li> <li>• TCS operation signal</li> <li>• VDC operation signal</li> <li>• ABS malfunction signal</li> </ul> <p>Refer to <a href="#">BRC-139, "Component Parts Location"</a> for detailed installation location.</p>
⑤	Combination meter	<p>Mainly transmits the following signal to TCM via CAN communication.</p> <ul style="list-style-type: none"> <li>• Overdrive control switch signal</li> <li>• Tow mode switch signal</li> </ul> <p>Mainly receives the following signals from TCM via CAN communication.</p> <ul style="list-style-type: none"> <li>• Shift position indicator signal</li> <li>• OD OFF indicator lamp signal</li> <li>• Tow mode indicator lamp signal</li> </ul> <p>Refer to <a href="#">MWI-6, "METER SYSTEM : Component Parts Location"</a> for detailed installation location.</p>
⑥	Malfunction indicator lamp (MIL)	<a href="#">TM-237, "CVT CONTROL SYSTEM : Malfunction Indicator Lamp (MIL)"</a>
⑦	Shift position indicator	<a href="#">TM-237, "CVT CONTROL SYSTEM : Shift Position Indicator"</a>
⑧	OD OFF indicator lamp	<a href="#">TM-236, "CVT CONTROL SYSTEM : OD OFF Indicator Lamp"</a>
⑨	Tow mode indicator lamp	<a href="#">TM-237, "CVT CONTROL SYSTEM : TOW Mode Indicator Lamp"</a>
⑩	Tow mode switch	<a href="#">TM-236, "CVT CONTROL SYSTEM : Tow Mode Switch"</a>
⑪	Overdrive control switch	<a href="#">TM-236, "CVT CONTROL SYSTEM : Overdrive Control Switch"</a>
⑫	Transmission range switch	<a href="#">TM-231, "CVT CONTROL SYSTEM : Transmission Range Switch"</a>
⑬	Input speed sensor	<a href="#">TM-231, "CVT CONTROL SYSTEM : Input Speed Sensor"</a>
⑭	Output speed sensor	<a href="#">TM-233, "CVT CONTROL SYSTEM : Output Speed Sensor"</a>
⑮	CVT unit connector	—
⑯	Primary speed sensor	<a href="#">TM-232, "CVT CONTROL SYSTEM : Primary Speed Sensor"</a>

# COMPONENT PARTS

< SYSTEM DESCRIPTION >

[CVT: RE0F10J]


NO.	Component	Function
⑰	Control valve	
	CVT fluid temperature sensor*	<a href="#">TM-233, "CVT CONTROL SYSTEM : CVT Fluid Temperature Sensor"</a>
	Primary pressure sensor*	<a href="#">TM-234, "CVT CONTROL SYSTEM : Primary Pressure Sensor"</a>
	Secondary pressure sensor*	<a href="#">TM-234, "CVT CONTROL SYSTEM : Secondary Pressure Sensor"</a>
	Line pressure solenoid valve*	<a href="#">TM-234, "CVT CONTROL SYSTEM : Line Pressure Solenoid Valve"</a>
	Primary pressure solenoid valve*	<a href="#">TM-235, "CVT CONTROL SYSTEM : Primary Pressure Solenoid Valve"</a>
	Secondary pressure solenoid valve*	<a href="#">TM-235, "CVT CONTROL SYSTEM : Secondary Pressure Solenoid Valve"</a>
	Torque converter clutch solenoid valve*	<a href="#">TM-235, "CVT CONTROL SYSTEM : Torque Converter Clutch Solenoid Valve"</a>
Select solenoid valve*	<a href="#">TM-236, "CVT CONTROL SYSTEM : Select Solenoid Valve"</a>	

\*: These components are included in control valve assembly.

## CVT CONTROL SYSTEM : TCM

INFOID:000000011355501


- The TCM consists of a microcomputer and connectors for signal input and output and for power supply.
- The vehicle driving status is judged based on the signals from the sensors, switches, and other control units, and the optimal transaxle control is performed.
- For TCM control items, refer to [TM-248, "CVT CONTROL SYSTEM : System Description"](#).

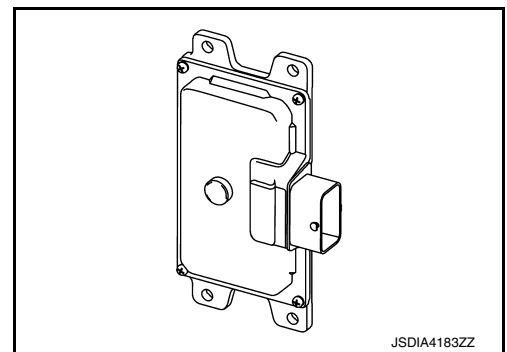

## CVT CONTROL SYSTEM : Transmission Range Switch

INFOID:000000011355502


- The transmission range switch is installed to upper part of transaxle case.
- The transmission range switch detects the selector lever position.

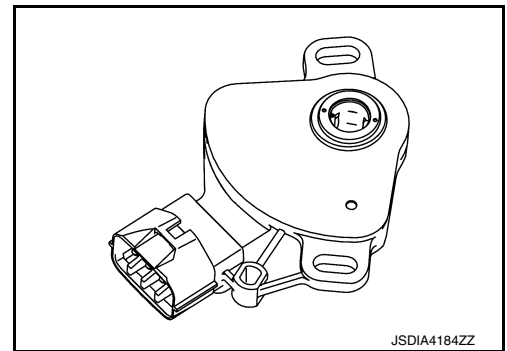

## CVT CONTROL SYSTEM : Input Speed Sensor

INFOID:000000011355503

- The input speed sensor is installed to the front side of transaxle case.
- The input speed sensor detects input shaft speed.

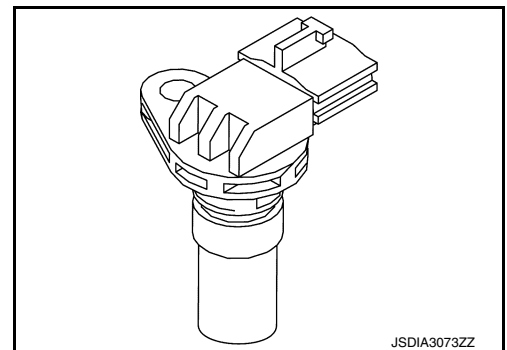


# COMPONENT PARTS

## < SYSTEM DESCRIPTION >

[CVT: RE0F10J]


- The input speed sensor generates an ON-OFF pulse signal according to the rotating body speed. TCM judges the rotating body speed from the pulse signal.

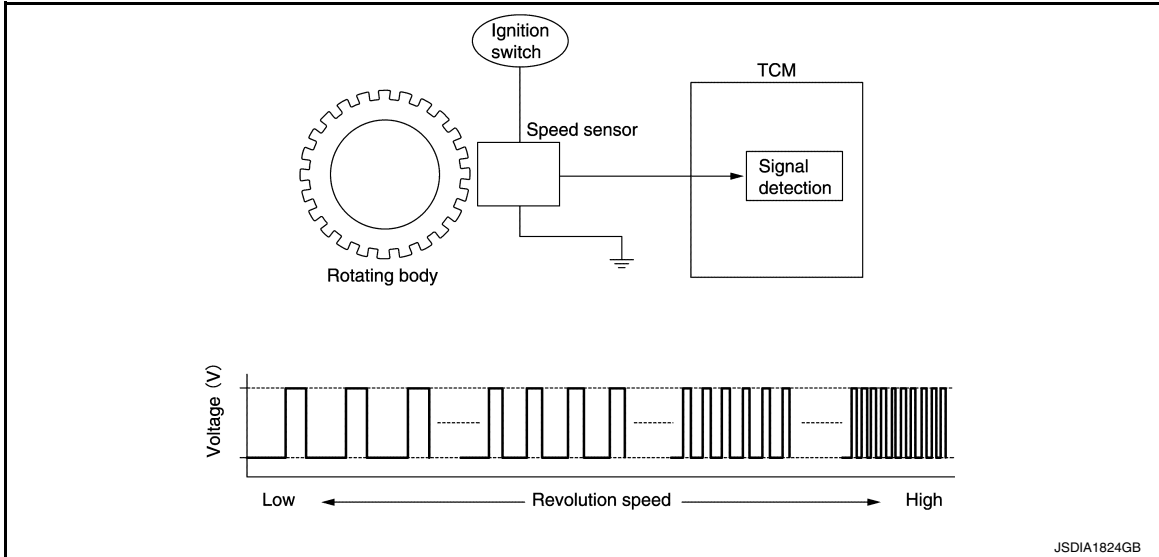


## CVT CONTROL SYSTEM : Primary Speed Sensor

INFOID:00000001135504

- The primary speed sensor is installed to transaxle side cover.
- The primary speed sensor detects primary pulley speed.

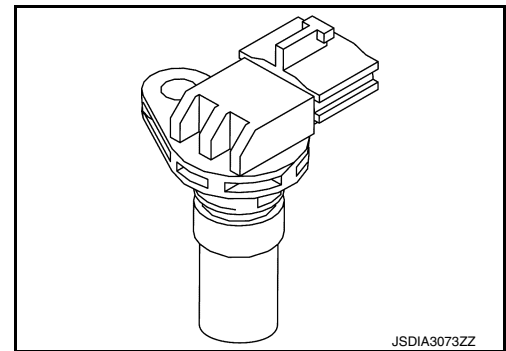

- The primary speed sensor generates an ON-OFF pulse signal according to the rotating body speed. TCM judges the rotating body speed from the pulse signal.

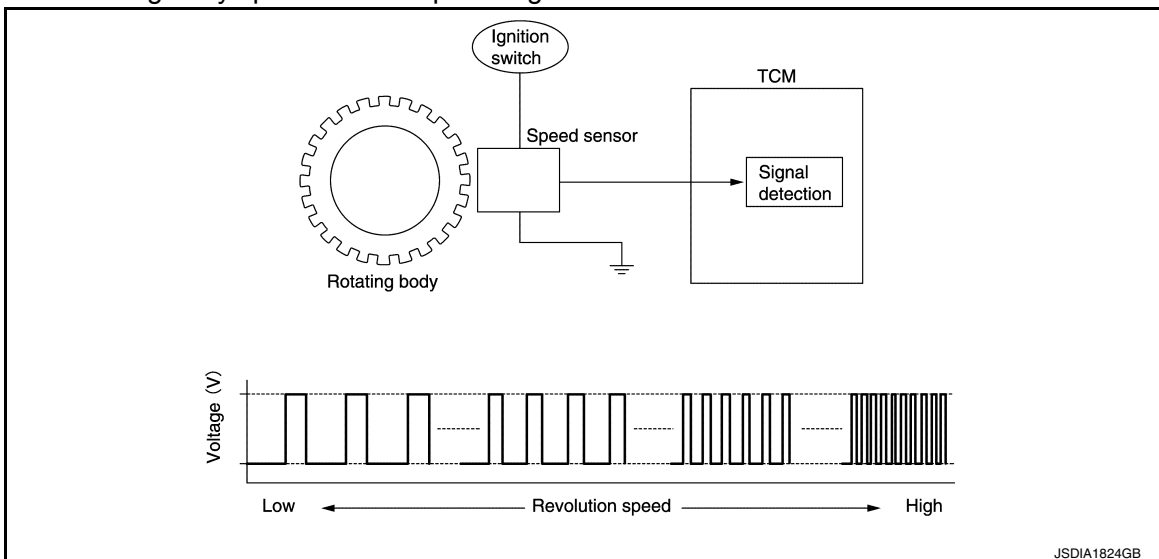



# COMPONENT PARTS


< SYSTEM DESCRIPTION >

[CVT: RE0F10J]


## CVT CONTROL SYSTEM : Output Speed Sensor

INFOID:000000011355505

- The output speed sensor is installed to the back side of transaxle case.
- The output speed sensor detects final gear speed.
- 

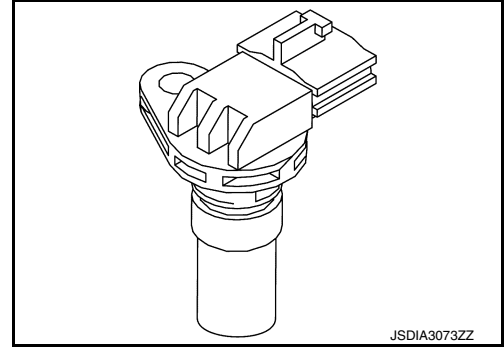


- The output speed sensor generates an ON-OFF pulse signal according to the rotating body speed. TCM judges the rotating body speed from the pulse signal.

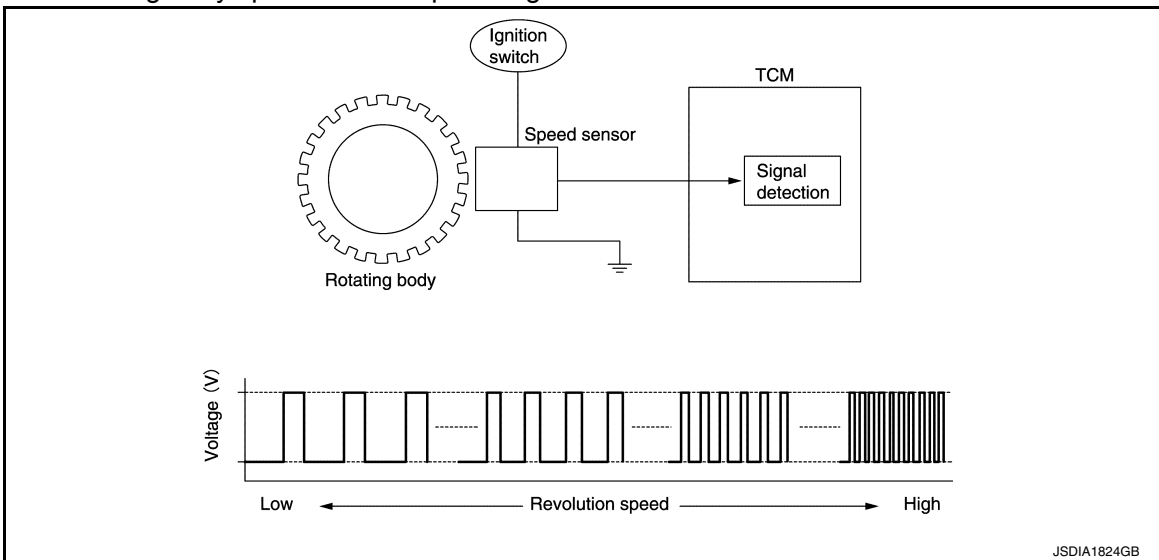

## CVT CONTROL SYSTEM : CVT Fluid Temperature Sensor

INFOID:000000011355506

- The CVT fluid temperature sensor is installed to control valve.
- The CVT fluid temperature sensor detects CVT fluid temperature in oil pan.
- The fluid temperature sensor uses a thermistor, and changes the signal voltage by converting changes in the CVT fluid temperature to a resistance value. TCM evaluates the CVT fluid temperature from the signal voltage value.

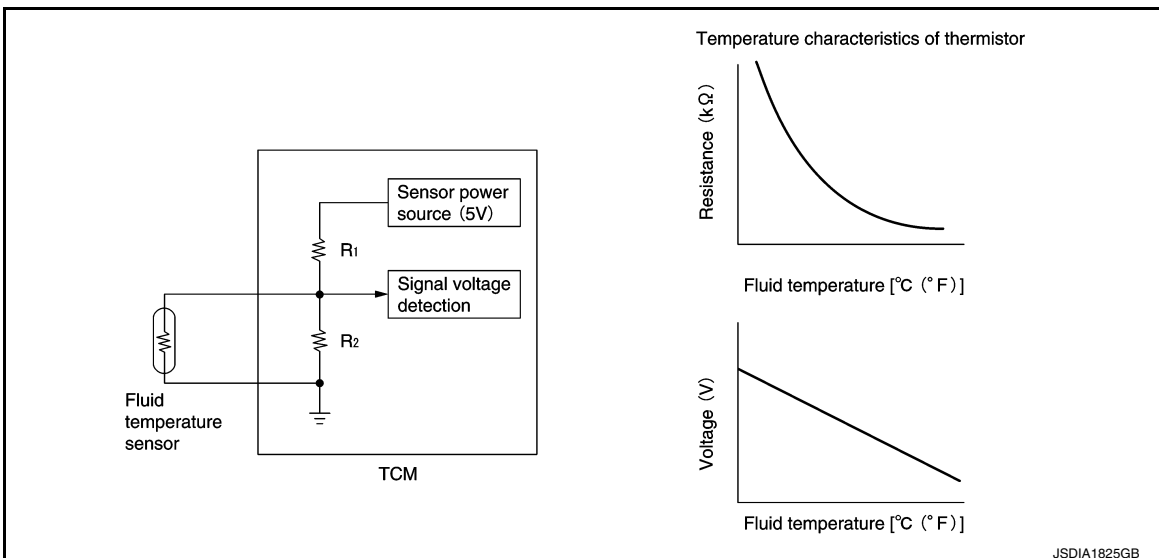

A  
B  
C  
TM

E  
F  
G  
H  
I  
J  
K

L  
M  
N  
O  
P

# COMPONENT PARTS


< SYSTEM DESCRIPTION >

[CVT: RE0F10J]

## CVT CONTROL SYSTEM : Primary Pressure Sensor

INFOID:000000011355507


- The primary pressure sensor is installed to control valve.
- The primary pressure sensor detects the pressure applied to the primary pulley.
- When pressure is applied to the ceramic device in the primary pressure sensor, the ceramic device is deformed, resulting in voltage change. TCM evaluates the primary pressure from its voltage change. Voltage is increased along with pressure increase.

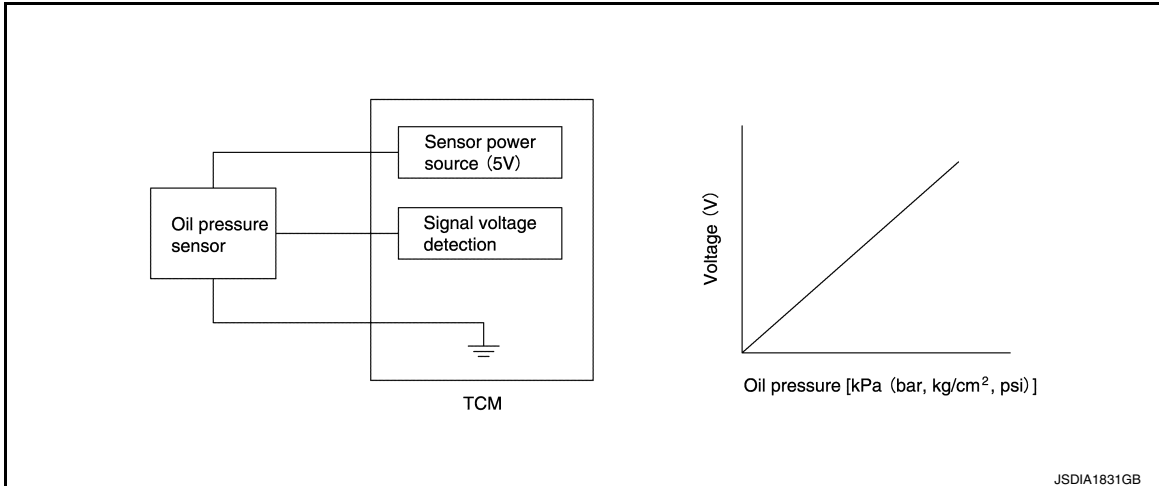

## CVT CONTROL SYSTEM : Secondary Pressure Sensor

INFOID:000000011355508

- The secondary pressure sensor is installed to control valve.
- The secondary pressure sensor detects the pressure applied to the secondary pulley.
- When pressure is applied to the metal diaphragm in the secondary pressure sensor, the metal diaphragm is deformed, resulting in voltage change. TCM evaluates the secondary pressure from its voltage change. Voltage is increased along with pressure increase.

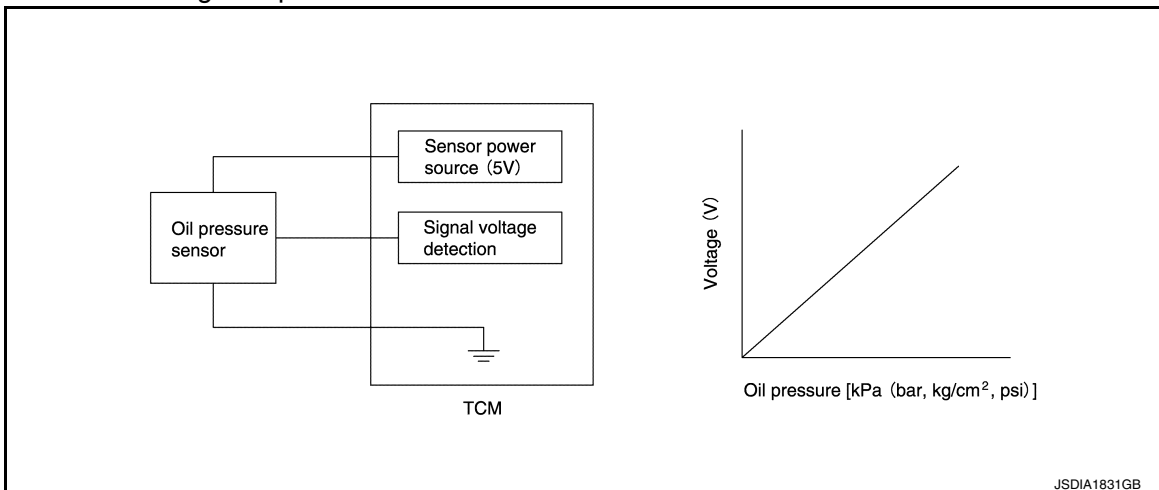

## CVT CONTROL SYSTEM : Line Pressure Solenoid Valve

INFOID:000000011355509

- The line pressure solenoid valve is installed to control valve.
- The line pressure solenoid valve controls the pressure regulator valve. For information about the pressure regulator valve, refer to [TM-243, "TRANSAXLE : Component Description"](#).

# COMPONENT PARTS


## < SYSTEM DESCRIPTION >

[CVT: RE0F10J]

- The line pressure solenoid valve uses the linear solenoid valve [N/H (normal high) type].

**NOTE:**

- The principle of the linear solenoid valve utilizes the fact that the force pressing on the valve spool installed inside the coil increases nearly in proportion to the current. This allows it to produce a fluid pressure that is proportional to this pressing force.
- The N/H (normal high) produces hydraulic control when the coil is not energized.

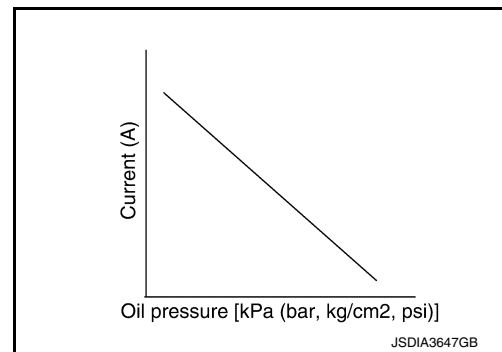


## CVT CONTROL SYSTEM : Primary Pressure Solenoid Valve

INFOID:00000001135510

- The primary pressure solenoid valve is installed to control valve.
- The primary pressure solenoid valve controls the primary reducing valve. For information about the primary reducing valve, refer to [TM-243. "TRANSAXLE : Component Description"](#).
- The primary pressure solenoid valve uses the linear solenoid valve [N/H (normal high) type].

**NOTE:**

- The principle of the linear solenoid valve utilizes the fact that the force pressing on the valve spool installed inside the coil increases nearly in proportion to the current. This allows it to produce a fluid pressure that is proportional to this pressing force.
- The N/H (normal high) produces hydraulic control when the coil is not energized.

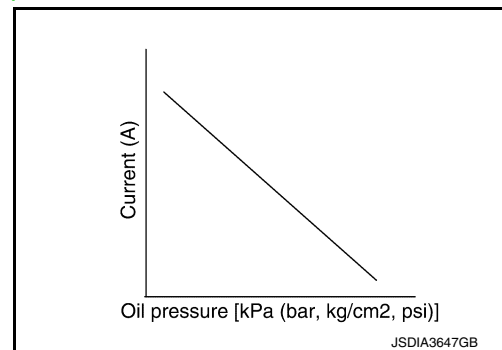


## CVT CONTROL SYSTEM : Secondary Pressure Solenoid Valve

INFOID:00000001135511

- The secondary pressure solenoid valve is installed to control valve.
- The secondary pressure solenoid valve controls the secondary reducing valve. For information about the secondary reducing valve, refer to [TM-243. "TRANSAXLE : Component Description"](#).
- The secondary pressure solenoid valve uses the linear solenoid valve [N/H (normal high) type].

**NOTE:**

- The principle of the linear solenoid valve utilizes the fact that the force pressing on the valve spool installed inside the coil increases nearly in proportion to the current. This allows it to produce a fluid pressure that is proportional to this pressing force.
- The N/H (normal high) produces hydraulic control when the coil is not energized.

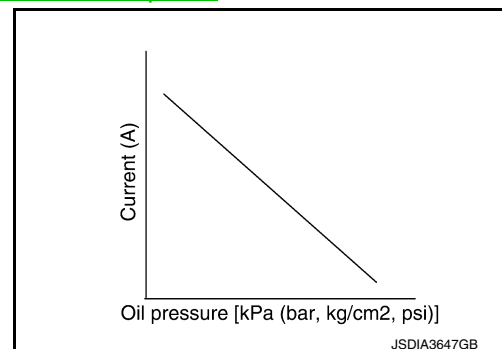

## CVT CONTROL SYSTEM : Torque Converter Clutch Solenoid Valve

INFOID:00000001135512

- The torque converter clutch solenoid valve is installed to control valve.
- The torque converter clutch solenoid valve controls the torque converter clutch control valve. For information about the torque converter clutch control valve, refer to [TM-243. "TRANSAXLE : Component Description"](#).

A  
B  
C  
TM  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# COMPONENT PARTS


## < SYSTEM DESCRIPTION >

[CVT: RE0F10J]

- The torque converter clutch solenoid valve utilizes a linear solenoid valve [N/L (normal low) type].

**NOTE:**

- The principle of the linear solenoid valve utilizes the fact that the force pressing on the valve spool installed inside the coil increases nearly in proportion to the current. This allows it to produce a fluid pressure that is proportional to this pressing force.
- The N/L (normal low) type does not produce hydraulic control when the coil is not energized.

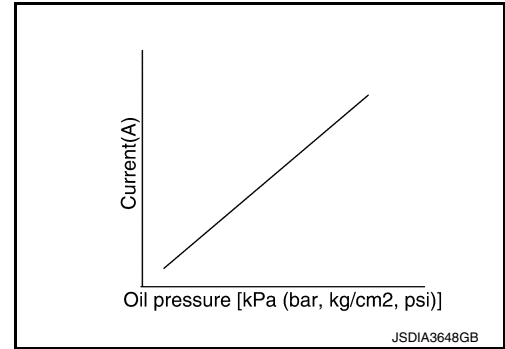


## CVT CONTROL SYSTEM : Select Solenoid Valve

INFOID:000000011355513

- The select solenoid valve is installed to control valve.
- The select solenoid valve adjusts the forward clutch engaging pressure and the reverse brake engaging pressure.
- The select solenoid valve uses the linear solenoid valve [N/H (normal high) type].

**NOTE:**

- The principle of the linear solenoid valve utilizes the fact that the force pressing on the valve spool installed inside the coil increases nearly in proportion to the current. This allows it to produce a fluid pressure that is proportional to this pressing force.
- The N/H (normal high) produces hydraulic control when the coil is not energized.

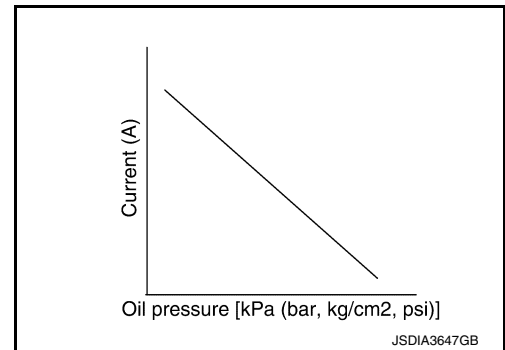

## CVT CONTROL SYSTEM : Overdrive Control Switch

INFOID:000000011355514

- The overdrive control switch is installed to the selector lever handle.
- When the OD OFF indicator lamp on the combination meter is OFF and the overdrive control switch is pressed, the overdrive is cancelled and the OD OFF indicator lamp is ON.
- When the OD OFF indicator lamp on the combination meter is ON and the overdrive control switch is pressed, the overdrive is active and the OD OFF indicator lamp is OFF.

## CVT CONTROL SYSTEM : Tow Mode Switch

INFOID:000000011355515


- The Tow mode switch is installed to instrument lower panel (LH).
- When the Tow mode indicator lamp on the combination meter is OFF and the Tow mode switch is pressed, the Tow mode is active and the Tow mode indicator lamp is ON.
- When the Tow mode indicator lamp on the combination meter is ON and the Tow mode switch is pressed, the Tow mode is cancelled and the Tow mode indicator lamp is OFF.

## CVT CONTROL SYSTEM : OD OFF Indicator Lamp

INFOID:000000011355516

- OD OFF indicator lamp is positioned on the combination meter.
- OD OFF indicator lamp is ON when set to the overdrive OFF.
- OD OFF indicator lamp turns on for a certain period of time when the ignition switch turns ON, and then turns OFF.

Condition (status)	OD OFF indicator lamp
Ignition switch OFF.	OFF
Ignition switch ON.	ON (Approx. 2 sec.)
Overdrive control switch is pressed when the selector lever is in the "D" position and the OD OFF indicator lamp is OFF	ON

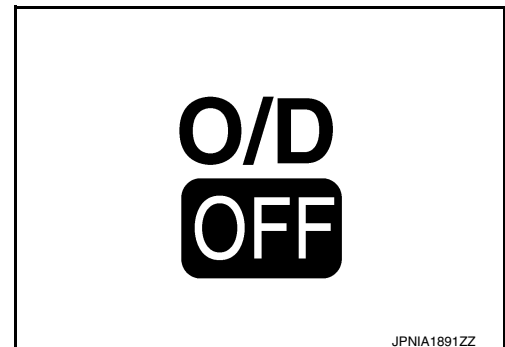

# COMPONENT PARTS

< SYSTEM DESCRIPTION >

[CVT: RE0F10J]


Condition (status)	OD OFF indicator lamp
Overdrive control switch is pressed when the selector lever is in the "D" position and the OD OFF indicator lamp is ON.	OFF
Selector lever is shifted to other position when the selector lever is at "D" position and the OD OFF indicator lamp is ON.	OFF

## CVT CONTROL SYSTEM : TOW Mode Indicator Lamp

INFOID:0000000011355517

- TOW mode indicator lamp is positioned on the combination meter.
- TOW mode indicator lamp is ON when set to the tow mode.


Condition (status)	Tow mode indicator lamp
Ignition switch OFF.	OFF
Ignition switch ON.	OFF
Tow mode switch is pressed when the TOW mode indicator lamp is OFF	ON
Tow mode switch is pressed when the TOW mode indicator lamp is ON.	OFF

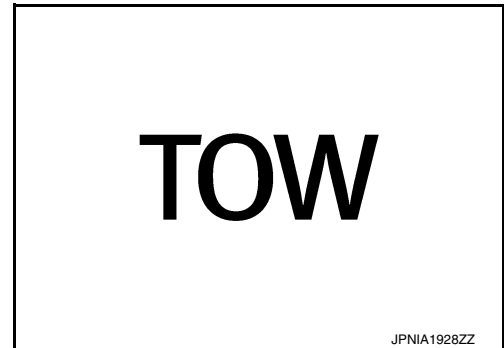

## CVT CONTROL SYSTEM : Shift Position Indicator

INFOID:0000000011355518

TCM transmits shift position signal to combination meter via CAN communication. The actual shift position is displayed on combination meter according to the signal.

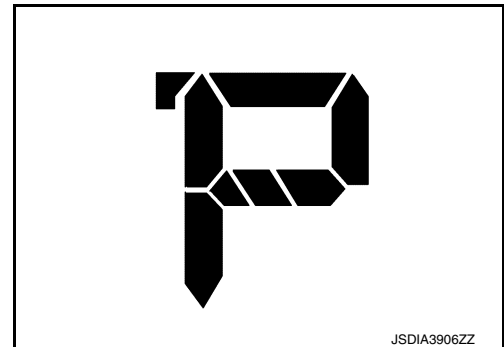

## CVT CONTROL SYSTEM : Malfunction Indicator Lamp (MIL)


INFOID:0000000011355519

The malfunction indicator lamp (MIL) is located on the combination meter.

The MIL will illuminate when the ignition switch is turned ON without the engine running. This is a bulb check.

When the engine is started, the MIL should turn off. If the MIL remains illuminated, the on board diagnostic system has detected an engine system malfunction.

For details, refer to [EC-33, "Malfunction Indicator Lamp \(MIL\)"](#).

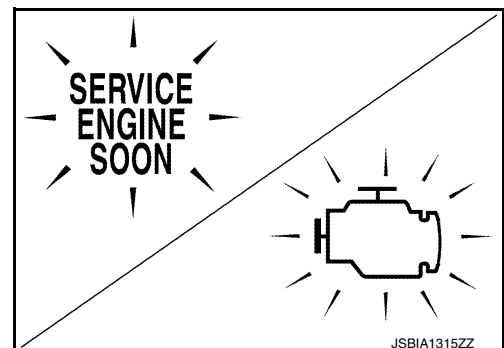

## SHIFT LOCK SYSTEM

A  
B  
C  
TM  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P


# COMPONENT PARTS

< SYSTEM DESCRIPTION >

[CVT: RE0F10J]

## SHIFT LOCK SYSTEM : Component Parts Location

INFOID:00000001135520

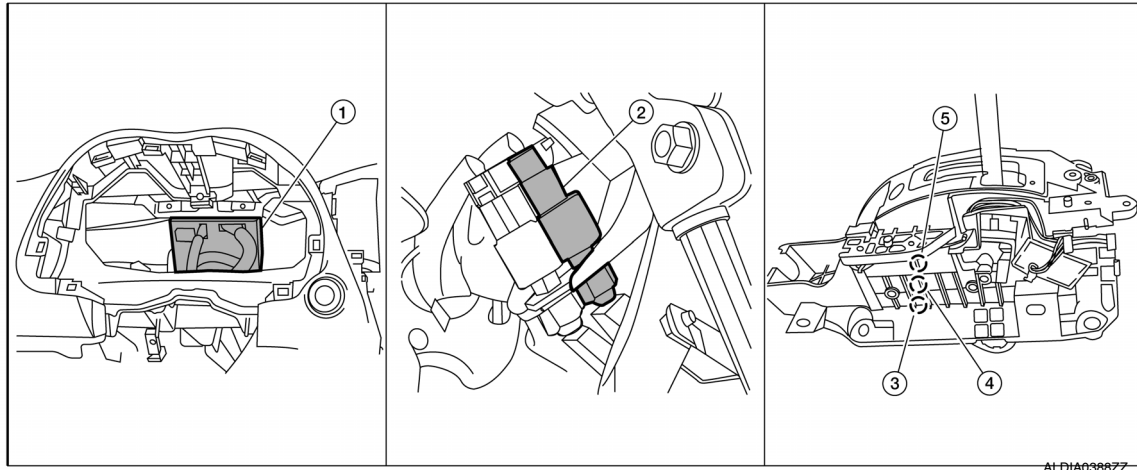

- |   |  |   |
|---|--|---|
| 1. BCM (view with combination meter removed)              | 2. Stop lamp switch  | 3. Shift lock release button (view with center console removed) |
| 4. Shift lock solenoid (view with center console removed) | 5. Park position switch (view with center console removed) |   |

## COMPONENT DESCRIPTION

Component	Function
Stop lamp switch	<ul style="list-style-type: none"> <li>The stop lamp switch turns ON when the brake pedal is depressed.</li> <li>When the stop lamp switch turns ON, the shift lock solenoid is energized.</li> </ul>
Shift lock release button	Forcibly releases the shift lock when pressed.
Shift lock solenoid	It operates according to the signal from the stop lamp switch and moves the lock lever.
Park position switch	It detects that the selector lever is in "P" position.

# STRUCTURE AND OPERATION


< SYSTEM DESCRIPTION >

[CVT: RE0F10J]

## STRUCTURE AND OPERATION TRANSAXLE

TRANSAXLE : Cross-Sectional View

INFOID:00000001135521

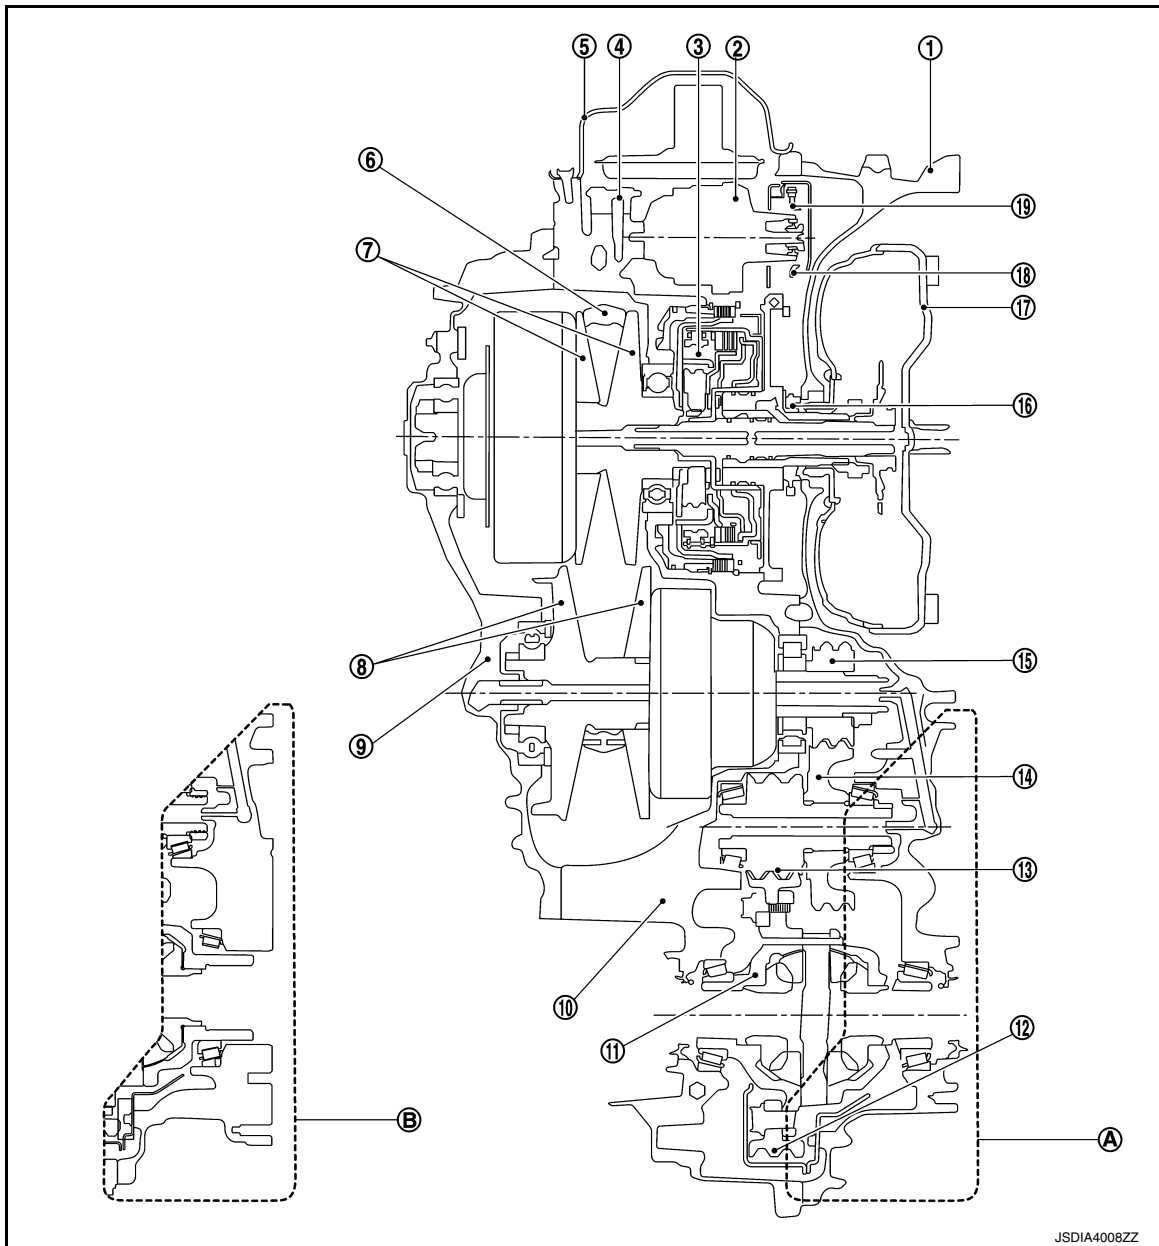

- |                     |                     |                   |
|---------------------|---------------------|-------------------|
| ① Converter housing | ② Oil pump          | ③ Planetary gear  |
| ④ Control valve     | ⑤ Oil pan           | ⑥ Chain belt      |
| ⑦ Planetary pulley  | ⑧ Secondary pulley  | ⑨ Side cover      |
| ⑩ Transaxle case    | ⑪ Differential case | ⑫ Final gear      |
| ⑬ Reduction gear    | ⑭ Idler gear        | ⑮ Output gear     |
| ⑯ Drive sprocket    | ⑰ Torque converter  | ⑱ Driven sprocket |
| Ⓐ 2WD models        | Ⓑ 4WD models        |                   |

A  
B  
C  
TM  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

## TRANSAXLE : Transaxle Mechanism

INFOID:00000001135522

### TORQUE CONVERTER (WITH LOCK-UP FUNCTION)

In the same way as a conventional A/T, the torque converter is a system that increases the engine torque and transmits the torque to the transaxle. A symmetrical 3-element, 1-stage, 2-phase type is used here.


### OIL PUMP

Utilizes a vane-type oil pump that is driven by the engine through the oil pump drive chain in order to increase efficiency of pump discharge volume in low-speed zone and optimize pump discharge volume in high-speed zone. Discharged oil from oil pump is transmitted to control valve. It is used as the oil of primary and secondary pulley operation, the oil of clutch operation, and the lubricant for each part.

### PLANETARY GEAR

- A planetary gear type of forward/reverse selector mechanism is installed between the torque converter and primary pulley.
- The power from the torque converter is input via the input shaft, operating a wet multi-plate clutch by means of hydraulic pressure to switch between forward and reverse driving.

#### Operation of Planetary gear

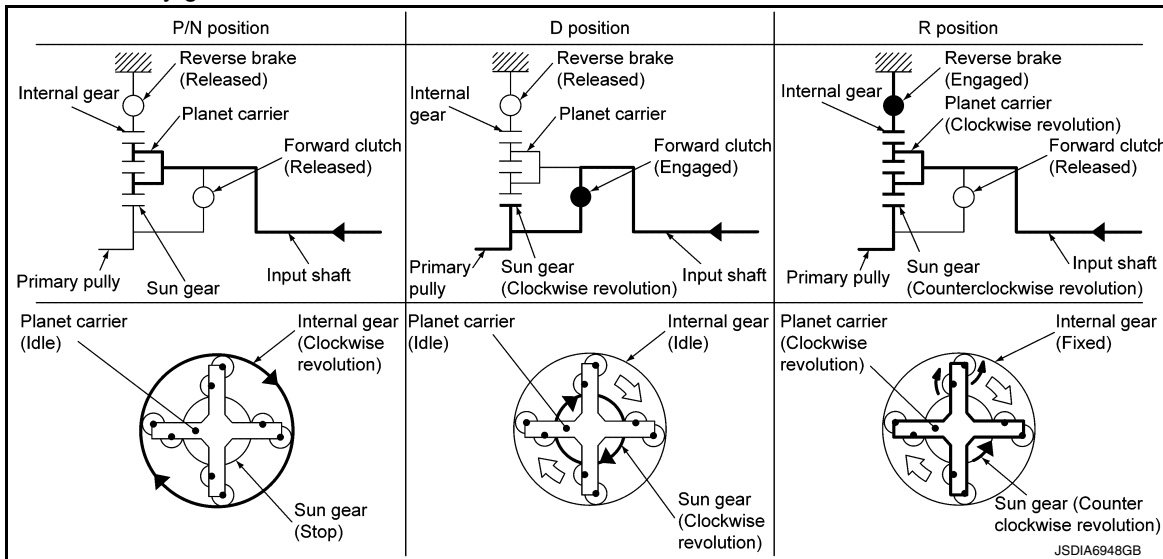


### BELT & PULLEY

It is composed of a pair of pulleys (the groove width is changed freely in the axial direction) and the chain belt. The groove width changes according to wrapping radius of chain belt and pulley from low status to overdrive status continuously with non-step. It is controlled with the oil pressures of primary pulley and secondary pulley.

#### Chain belt

The chain belt consists of approximately 150 locker pins ① and 1,000 link plates ②. Chains are rotated by locker pins sandwiched by pulleys. This produces tension difference in chains among pulleys. Accordingly, the power is transferred by the tension.

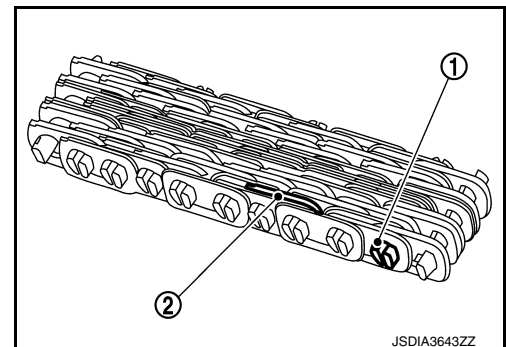

#### Pulley

The primary pulley (input shaft side) and the secondary pulley (output shaft side) have the shaft with slope (fixed cone surface), movable sheave (movable cone surface that can move in the axial direction) and oil pressure chamber at the back of the movable sheave.




# STRUCTURE AND OPERATION

< SYSTEM DESCRIPTION >

[CVT: RE0F10J]

The movable sheave slides on the shaft to change the groove width of the pulley. Input signals of engine load (accelerator pedal opening), primary pulley speed and secondary pulley speed change the operation pressures of the primary pulley and the secondary pulley, and controls the pulley groove width.

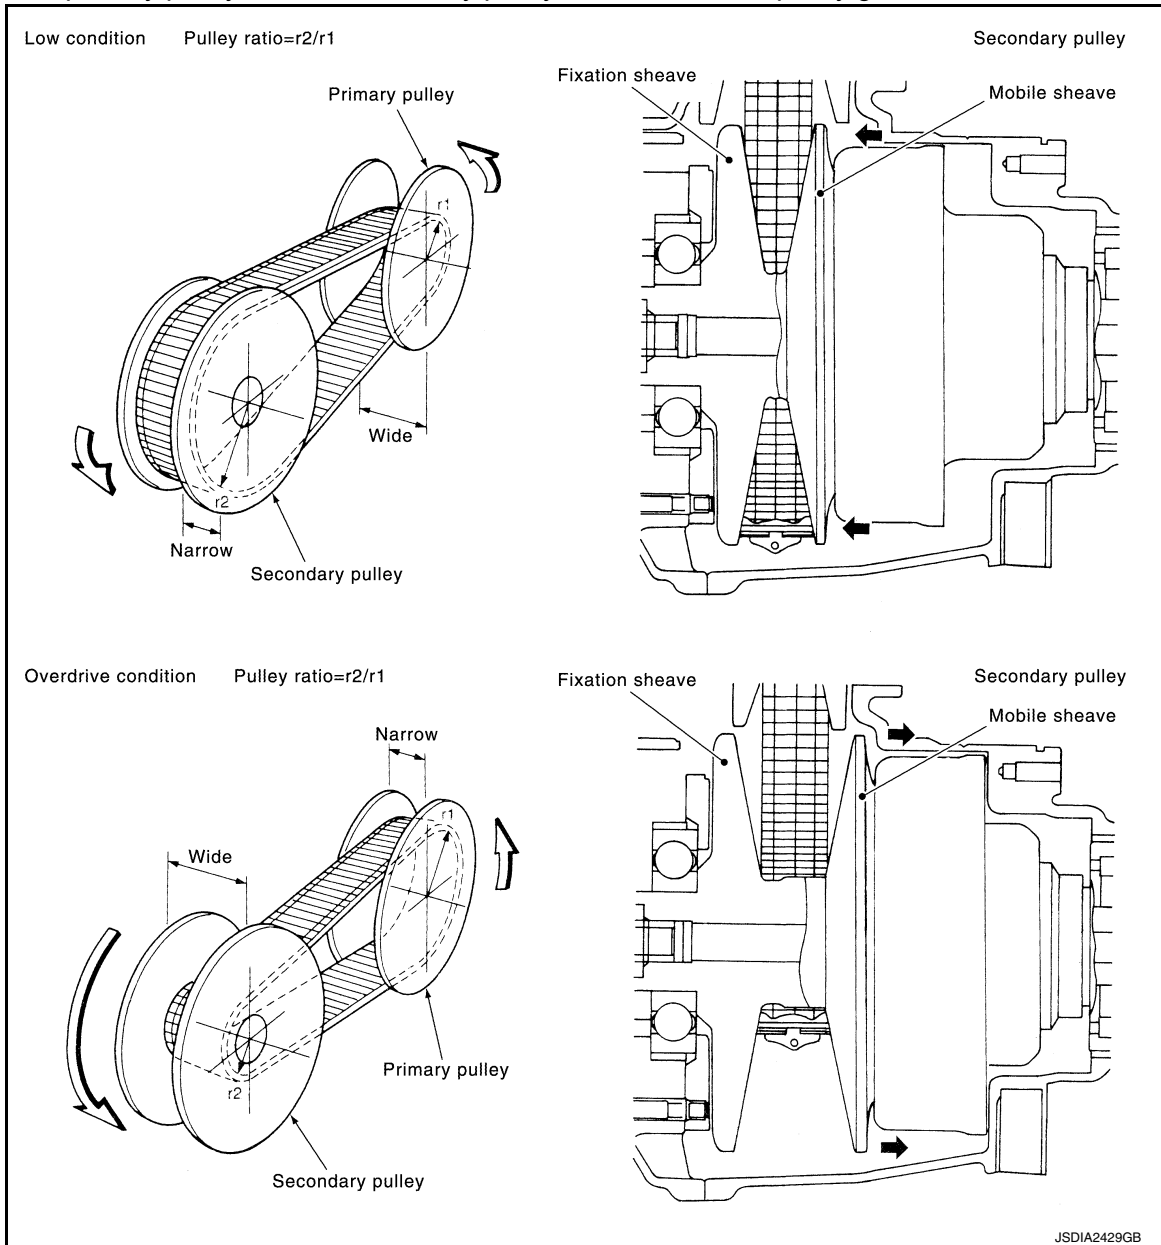

## FINAL DRIVE AND DIFFERENTIAL

The deceleration gears are composed of 2 stages: primary deceleration (output gear, idler gear pair) and secondary deceleration (reduction gear, final gear pair). All of these gears are helical gears.


A  
B  
C  
TM  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# STRUCTURE AND OPERATION

< SYSTEM DESCRIPTION >

[CVT: RE0F10J]

The lubrication oil is the same as the CVT fluid which lubricates the entire transaxle.

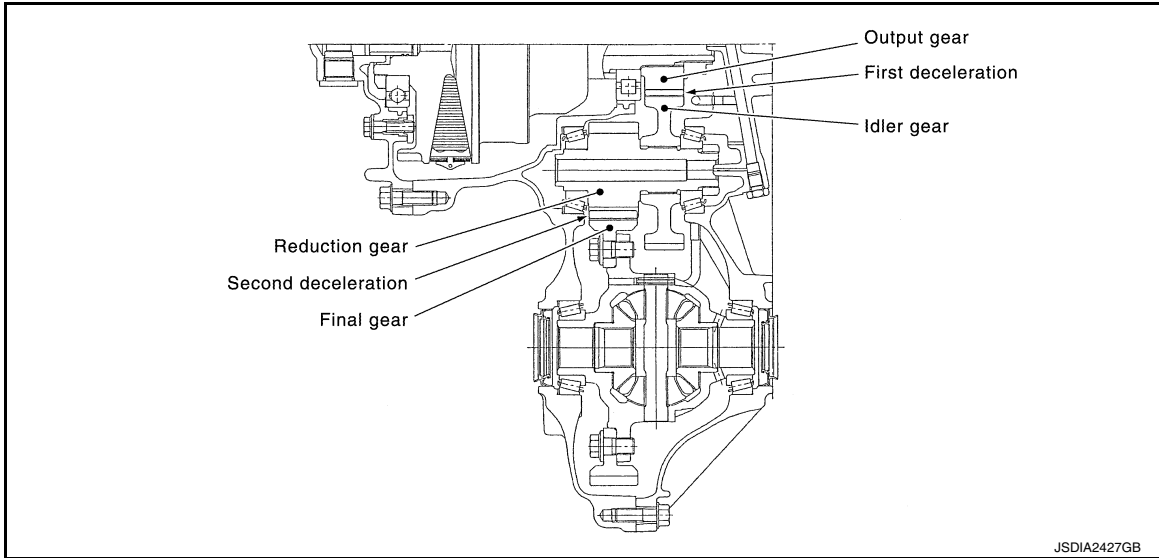

## TRANSAXLE : Operation Status

INFOID:000000011355523

×: Engaged or applied.

Selector lever position	Parking mechanism	Forward clutch	Reverse brake	Primary pulley	Secondary pulley	Chain belt	Final drive
P	×						
R			×	×	×	×	×
N							
D, L		×		×	×	×	×

# STRUCTURE AND OPERATION


< SYSTEM DESCRIPTION >

[CVT: RE0F10J]

## TRANSAXLE : Oil Pressure System

INFOID:00000001135524

Oil pressure required for operation of the transaxle transmission mechanism is generated by oil pump, oil pressure control valve, solenoid valve, etc.

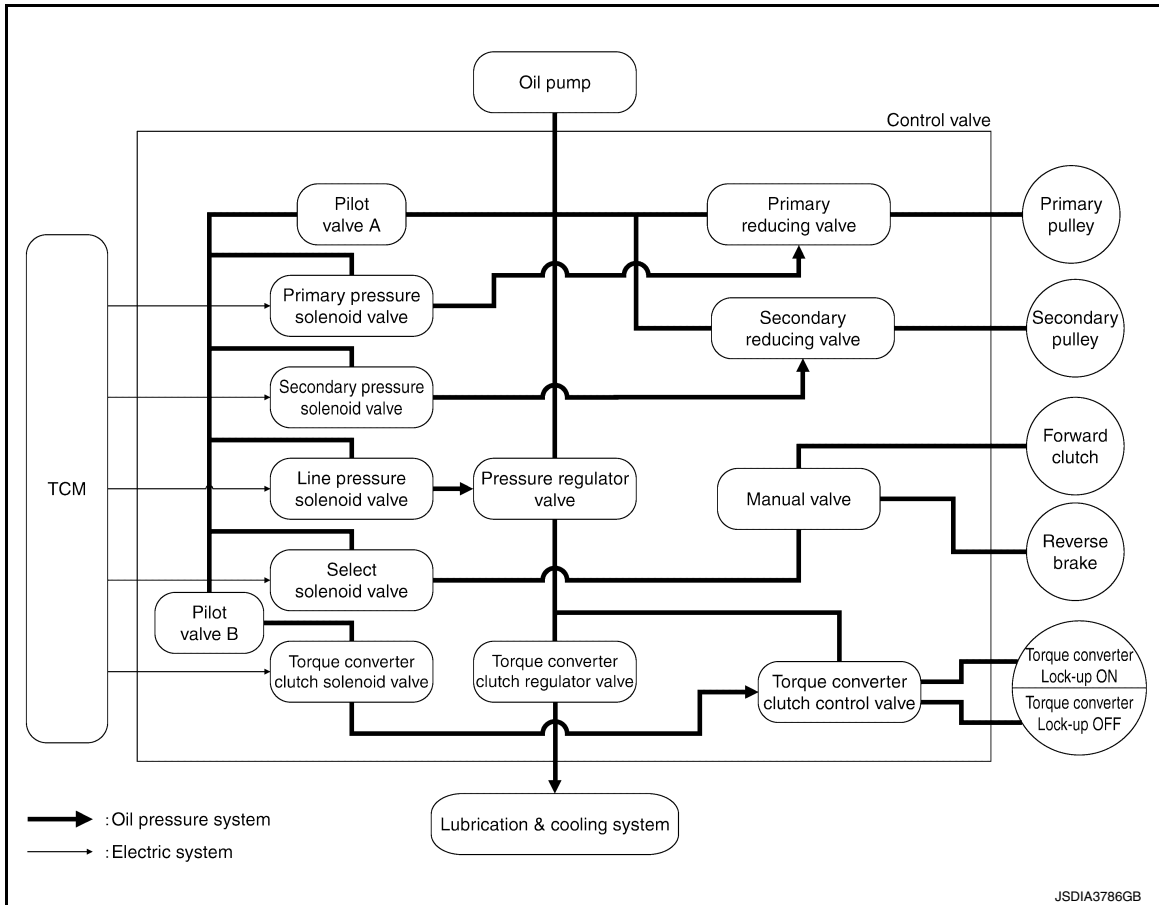

## TRANSAXLE : Component Description

INFOID:00000001135525

Part name	Function
Torque converter	Increases engine torque and transmits it to the transaxle.
Oil pump	Utilizes a vane-type oil pump that is driven by the engine through the oil pump drive chain in order to increase efficiency of pump discharge volume in low-speed zone and optimize pump discharge volume in high-speed zone. Discharged oil from oil pump is transmitted to control valve. It is used as the oil of primary and secondary pulley operation, the oil of clutch operation, and the lubricant for each part.
Forward clutch	The forward clutch is wet and multiple plate type clutch that consists of clutch drum, piston, drive plate, and driven plate. It is a clutch to move the vehicle forward by activating piston hydraulically, engaging plates, and directly connecting sun gear and input shaft.
Reverse brake	The reverse brake is a wet multiple-plate type brake that consists of transaxle case, piston, drive plate, and driven plate. It is a brake to move the vehicle in reverse by activating piston hydraulically, engaging plates, and fixing planetary gear.
Internal gear	The internal gear is directly connected to forward clutch drum. It is a gear that moves the outer edge of pinion planet of planet carrier. It transmits power to move the vehicle in reverse when the planet carrier is fixed.
Planet carrier	Composed of a carrier, pinion planet, and pinion shaft. This gear fixes and releases the planet carrier in order to switch between forward and reverse driving.
Sun gear	Sun gear is a set part with planet carrier and internal gear. It transmits transmitted force to primary fixed sheave. It rotates in forward or reverse direction according to activation of either forward clutch or reverse brake.

# STRUCTURE AND OPERATION

< SYSTEM DESCRIPTION >

[CVT: RE0F10J]


Part name	Function
Input shaft	The input shaft is directly connected to forward clutch drum and transmits traction force from torque converter. In shaft center, there are holes for hydraulic distribution to primary pulley and hydraulic distribution for lockup ON/OFF.
Primary pulley	It is composed of a pair of pulleys (the groove width is changed freely in the axial direction) and the chain belt. The groove width changes according to wrapping radius of steel belt and pulley from low status to overdrive status continuously with non-step. It is controlled with the oil pressures of primary pulley and secondary pulley.
Secondary pulley	
Chain belt	
Manual shaft	When the manual shaft is in the P position, the parking rod that is linked to the manual shaft rotates the parking pole. When the parking pole rotates, it engages with the parking gear, fixing the parking gear. As a result, the secondary pulley that is integrated with the parking gear is fixed.
Parking rod	
Parking pawl	
Parking gear	
Output gear	The deceleration gears are composed of 2 stages: primary deceleration (output gear, idler gear pair) and secondary deceleration (reduction gear, final gear pair). All of these gears are helical gears.
Idler gear	
Reduction gear	
Differential	
Torque converter regulator valve	Adjusts the feed pressure to the torque converter to the optimum pressure corresponding to the driving condition.
Pressure regulator valve	Adjusts the discharge pressure from the oil pump to the optimum pressure (line pressure) corresponding to the driving condition.
Torque converter clutch control valve	Adjusts the torque converter engage and disengage pressures.
Manual valve	Distributes the clutch operation pressure to each circuit according to the selector lever position.
Secondary reducing valve	Reduces line pressure and adjusts secondary pressure.
Primary reducing valve	Reduces line pressure and adjusts primary pressure.
Pilot valve A	Reduces line pressure and adjusts pilot pressure to the solenoid valves listed below. <ul style="list-style-type: none"> <li>• Primary pressure solenoid valve</li> <li>• Secondary pressure solenoid valve</li> <li>• Select solenoid valve</li> <li>• Line pressure solenoid valve</li> </ul>
Pilot valve B	Reduces pilot pressure and adjusts pilot pressure to the torque converter clutch solenoid valve.

## FLUID COOLER & FLUID WARMER SYSTEM

### FLUID COOLER & FLUID WARMER SYSTEM : System Description

INFOID:00000001135526

#### CVT FLUID COOLER SCHEMATIC

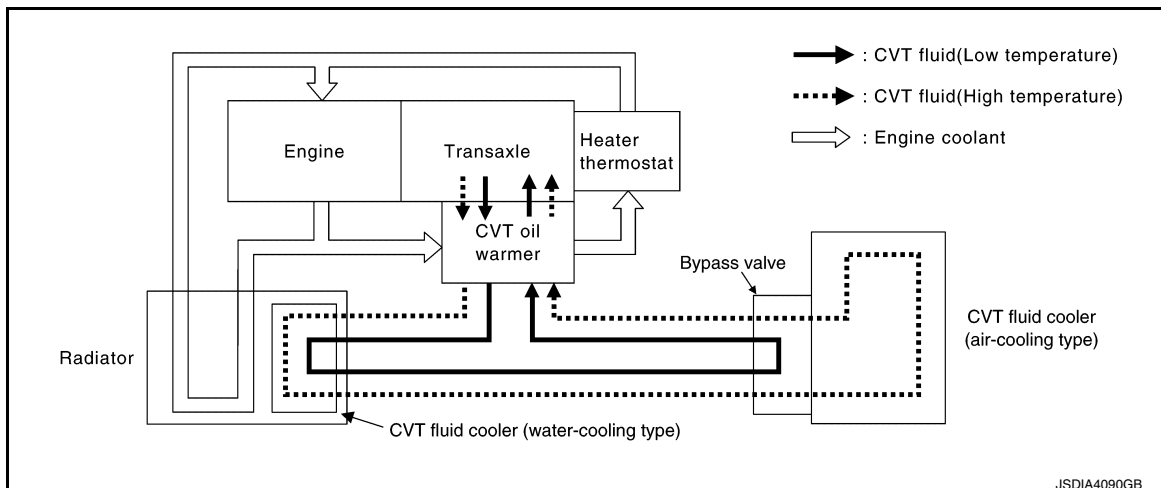

#### COMPONENT DESCRIPTION

##### CVT Oil Warmer

Revision: September 2014

TM-244


2015 Pathfinder

# STRUCTURE AND OPERATION

## < SYSTEM DESCRIPTION >


[CVT: RE0F10J]

- The CVT oil warmer ① is installed on the front part of transaxle assembly.
- When engine is started while engine and CVT are cold, engine coolant temperature rises more quickly than CVT fluid temperature. CVT oil warmer is provided with two circuits for CVT and engine coolant respectively so that warmed engine coolant warms CVT quickly. This helps shorten CVT warming up time, improving fuel economy.
- A cooling effect is obtained when CVT fluid temperature is high.

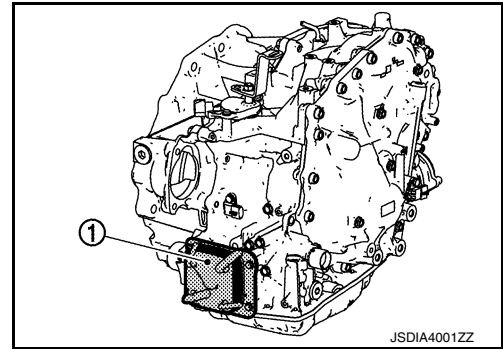


### CVT Fluid Cooler

- The CVT fluid cooler is installed to the vehicle front LH.
- The CVT fluid cooler prevents CVT fluid temperature from an abnormal increase while driving the vehicle. When flowing into the CVT fluid cooler, CVT fluid is cooled by driving blast while driving the vehicle.

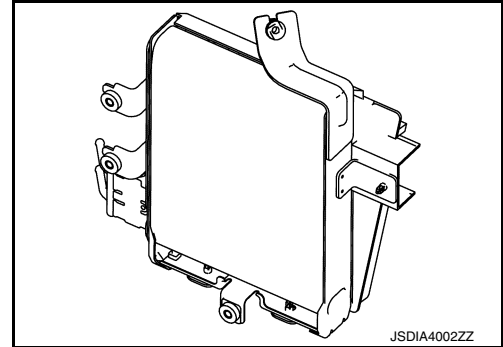


### Bypass Valve

- The bypass valve ① is installed to the CVT fluid cooler.
- Bypass valve controls CVT fluid flow.

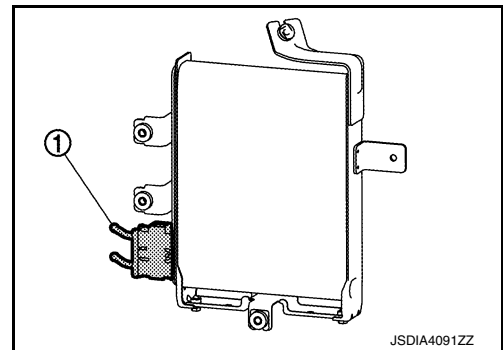

- When CVT fluid temperature is low, the bypass valve is open. Most of CVT fluid therefore returns to the transaxle without flowing into the cooler core that has larger flow resistance.

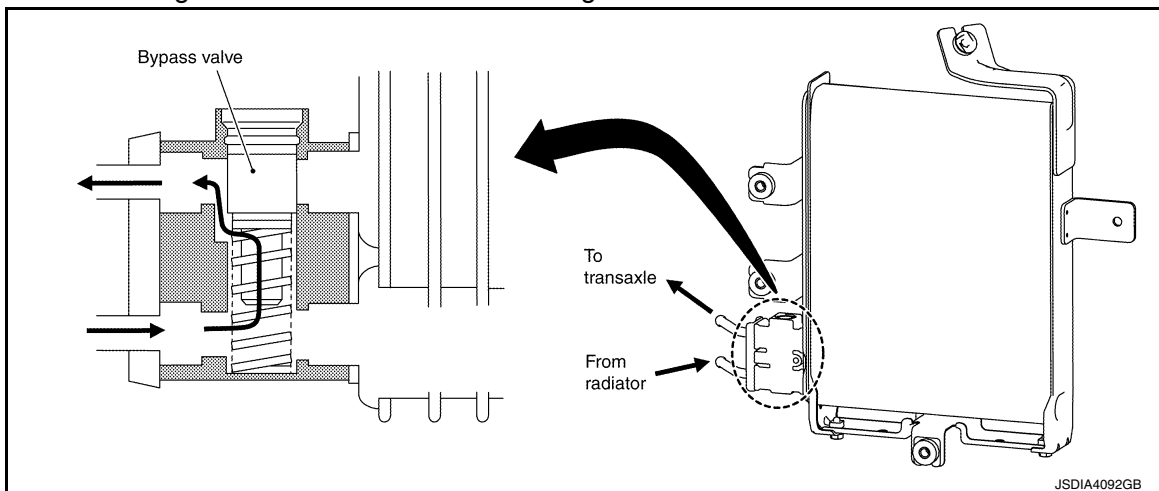


A  
B  
C  
TM  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# STRUCTURE AND OPERATION

## < SYSTEM DESCRIPTION >


[CVT: RE0F10J]

- When CVT fluid temperature rises [to approximately 65°C (149°F)], bypass valve fully closes and allows CVT fluid to flow into cooler core. CVT fluid flowing into cooler core is cooled by air stream caused by vehicle travel and returned to transaxle.

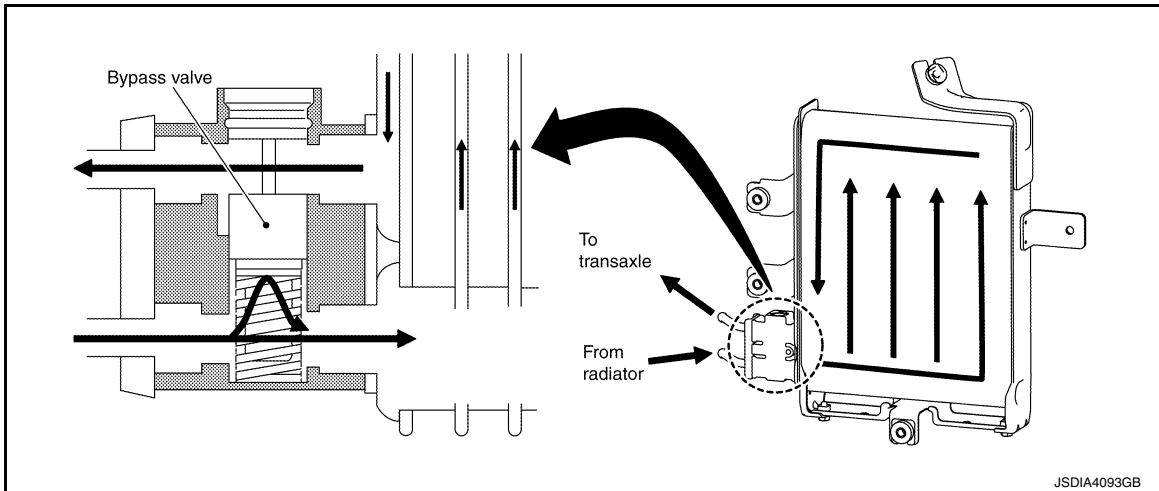

### Heater Thermostat

- The heater thermostat ① is installed on the front part of transaxle assembly.
- The heater thermostat open and close with set temperature.

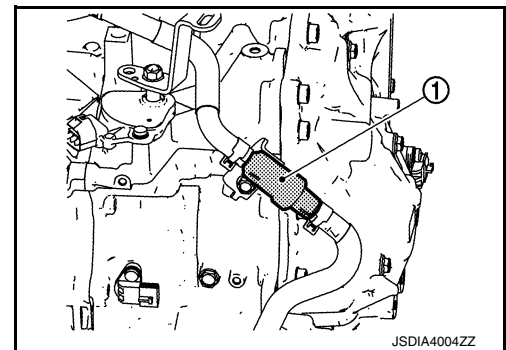

## SHIFT LOCK SYSTEM

### SHIFT LOCK SYSTEM : System Description

INFOID:000000011355527


The shift lever cannot be shifted from the “P” position unless the brake pedal is depressed while the ignition switch is set to ON. The shift lock is unlocked by turning the shift lock solenoid ON when the ignition switch is set to ON, the park position switch is turned ON (selector lever is in “P” position), and the stop lamp switch is turned ON (brake pedal is depressed) as shown in the operation chart in the figure. Therefore, the shift lock solenoid receives no ON signal and the shift lock remains locked if all of the above conditions are not fulfilled. However, selector operation is allowed if the shift lock release button is pressed.

### SHIFT LOCK OPERATION AT “P” POSITION

#### When Brake Pedal Is Not Depressed (No Selector Operation Allowed)

The shift lock solenoid (A) is turned OFF (not energized) and the solenoid rod (B) is extended with the spring when the brake pedal is not depressed (no selector operation allowed) with the ignition switch ON.

The connecting lock lever (C) is located at the position shown in the figure when the solenoid rod is extended. It prevents the movement of the detent rod (D). For these reasons, the selector lever cannot be shifted from the “P” position.

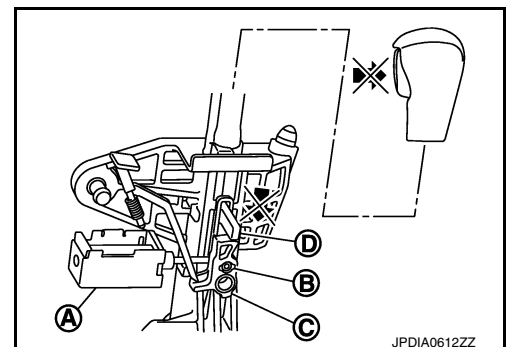


#### When Brake Pedal Is Depressed (Shift Operation Allowed)

# STRUCTURE AND OPERATION

## < SYSTEM DESCRIPTION >


[CVT: RE0F10J]

The shift lock solenoid (A) is turned ON (energized) when the brake pedal is depressed with the ignition switch ON. The solenoid rod (B) is compressed by the electromagnetic force. The connecting lock lever (C) rotates when the solenoid is activated. Therefore, the detent rod (D) can be moved. For these reasons, the selector lever can be shifted to other positions.

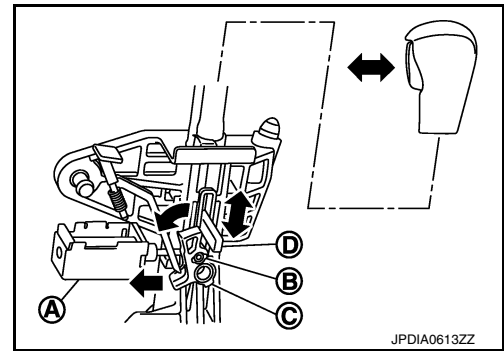

### “P” POSITION HOLD MECHANISM (IGNITION SWITCH LOCK)

The shift lock solenoid (A) is not energized when the ignition switch is in any position other than ON. In this condition, the shift mechanism is locked and “P” position is held. The operation cannot be performed from “P” position if the brake pedal is depressed with the ignition switch ON when the operation system of shift lock solenoid is malfunctioning. However, the lock lever (B) is forcibly rotated and the shift lock is released when the shift lock release button (C) is pressed from above. Then the selector operation from “P” position can be performed.

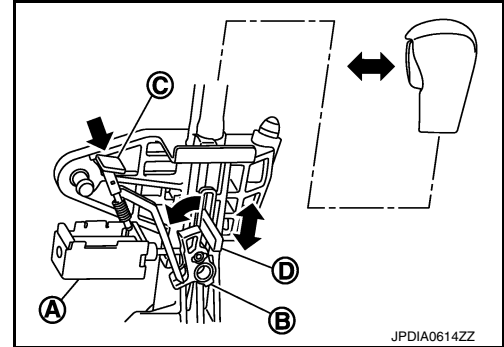

D : Detent rod

### **CAUTION:**

**Use the shift lock release button only when the selector lever cannot be operated even if the brake pedal is depressed with the ignition switch ON.**

# SYSTEM

< SYSTEM DESCRIPTION >

[CVT: RE0F10J]


## SYSTEM

### CVT CONTROL SYSTEM

#### CVT CONTROL SYSTEM : System Description

INFOID:00000001135528

#### SYSTEM DIAGRAM

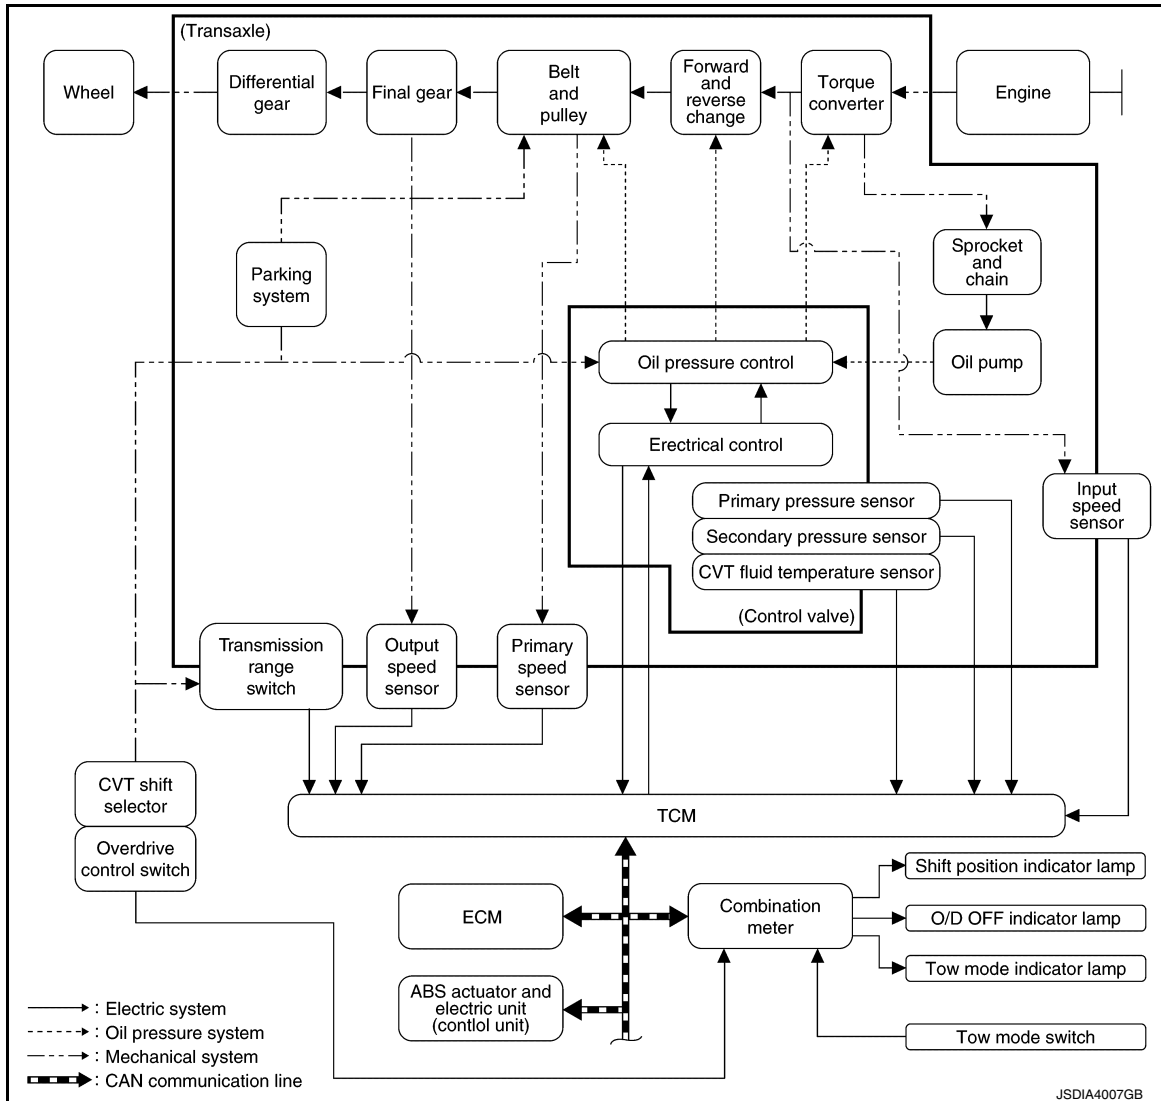

#### MAIN CONTROL CONTENTS OF TCM

Controls	Reference
Line pressure control	<a href="#">TM-253, "LINE PRESSURE CONTROL : System Description"</a>
Shift control	<a href="#">TM-254, "SHIFT CONTROL : System Description"</a>
Select control	<a href="#">TM-256, "SELECT CONTROL : System Description"</a>
Lock-up control	<a href="#">TM-257, "LOCK-UP CONTROL : System Description"</a>
Fail-safe	<a href="#">TM-272, "Fail-safe"</a>
Self-diagnosis function	<a href="#">TM-261, "CONSULT Function"</a>
Communication function with CONSULT	<a href="#">TM-261, "CONSULT Function"</a>

#### LIST OF CONTROL ITEMS AND INPUT/OUTPUT



# SYSTEM

< SYSTEM DESCRIPTION >

[CVT: RE0F10J]

Control Item		Shift control	Line pressure control	Select control	Lock-up control	Fail-safe function*	
Input	Engine torque signal (CAN communication)	×	×	×	×	×	A
	Engine speed signal (CAN communication)	×	×	×	×	×	B
	Accelerator pedal position signal (CAN communication)	×	×	×	×		C
	Closed throttle position signal (CAN communication)	×	×		×		TM
	Stop lamp switch signal (CAN communication)	×	×	×	×		
	Primary pressure sensor					×	E
	Secondary pressure sensor	×	×			×	
	CVT fluid temperature sensor	×	×	×	×	×	
	Primary speed sensor	×	×	×	×	×	F
	Output speed sensor	×	×		×	×	
	Input speed sensor	×	×	×	×	×	G
	Transmission range switch	×	×	×	×	×	
	Overdrive control switch (CAN communication)	×	×			×	H
Output	Line pressure solenoid valve	×	×	×		×	
	Primary pressure solenoid valve	×	×			×	
	Torque converter clutch solenoid valve				×	×	I
	Secondary pressure solenoid valve	×	×			×	J
	Select solenoid valve	×		×		×	
	Shift position indicator (CAN communication)			×			K
	Overdrive control switch (CAN communication)	×					

\*: If these input/output signals show errors, TCM activates the fail-safe function.

## CVT CONTROL SYSTEM : Fail-safe

INFOID:0000000011355529

TCM has a fail-safe mode. The mode functions so that operation can be continued even if the signal circuit of the main electronically controlled input/output parts is damaged.

If the vehicle shows following behaviors including “poor acceleration”, a malfunction of the applicable system is detected by TCM and the vehicle may be in a fail-safe mode. At this time, check the DTC code and perform inspection and repair according to the malfunction diagnosis procedures.

### Fail-safe function

DTC	Vehicle behavior	Conditions of vehicle
P062F	<ul style="list-style-type: none"> <li>Not changed from normal driving</li> </ul>	—
P0705	<ul style="list-style-type: none"> <li>Shift position indicator on combination meter is not displayed</li> <li>Selector shock is large</li> <li>Start is slow</li> <li>Acceleration is slow</li> <li>Lock-up is not performed</li> </ul>	—

# SYSTEM

< SYSTEM DESCRIPTION >

[CVT: RE0F10J]

DTC	Vehicle behavior	Conditions of vehicle
P0706	<ul style="list-style-type: none"> <li>• Shift position indicator on combination meter is not displayed</li> <li>• Selector shock is large</li> <li>• Start is slow</li> <li>• Acceleration is slow</li> <li>• Lock-up is not performed</li> </ul>	—
P0711	<ul style="list-style-type: none"> <li>• Start is slow</li> <li>• Acceleration is slow</li> </ul>	Engine coolant temperature when engine start: Temp. $\geq 10^{\circ}\text{C}$ ( $50^{\circ}\text{F}$ )
	<ul style="list-style-type: none"> <li>• Selector shock is large</li> <li>• Start is slow</li> <li>• Acceleration is slow</li> </ul>	Engine coolant temperature when engine start: $-35^{\circ}\text{C}$ ( $-31^{\circ}\text{F}$ ) $\leq$ Temp. $< 10^{\circ}\text{C}$ ( $50^{\circ}\text{F}$ )
	<ul style="list-style-type: none"> <li>• Selector shock is large</li> <li>• Start is slow</li> <li>• Acceleration is slow</li> </ul>	Engine coolant temperature when engine start: Temp. $< -35^{\circ}\text{C}$ ( $-31^{\circ}\text{F}$ )
P0712	<ul style="list-style-type: none"> <li>• Start is slow</li> <li>• Acceleration is slow</li> </ul>	Engine coolant temperature when engine start: Temp. $\geq 10^{\circ}\text{C}$ ( $50^{\circ}\text{F}$ )
	<ul style="list-style-type: none"> <li>• Selector shock is large</li> <li>• Start is slow</li> <li>• Acceleration is slow</li> </ul>	Engine coolant temperature when engine start: $-35^{\circ}\text{C}$ ( $-31^{\circ}\text{F}$ ) $\leq$ Temp. $< 10^{\circ}\text{C}$ ( $50^{\circ}\text{F}$ )
	<ul style="list-style-type: none"> <li>• Selector shock is large</li> <li>• Start is slow</li> <li>• Acceleration is slow</li> </ul>	Engine coolant temperature when engine start: Temp. $< -35^{\circ}\text{C}$ ( $-31^{\circ}\text{F}$ )
P0713	<ul style="list-style-type: none"> <li>• Start is slow</li> <li>• Acceleration is slow</li> </ul>	Engine coolant temperature when engine start: Temp. $\geq 10^{\circ}\text{C}$ ( $50^{\circ}\text{F}$ )
	<ul style="list-style-type: none"> <li>• Selector shock is large</li> <li>• Start is slow</li> <li>• Acceleration is slow</li> </ul>	Engine coolant temperature when engine start: $-35^{\circ}\text{C}$ ( $-31^{\circ}\text{F}$ ) $\leq$ Temp. $< 10^{\circ}\text{C}$ ( $50^{\circ}\text{F}$ )
	<ul style="list-style-type: none"> <li>• Selector shock is large</li> <li>• Start is slow</li> <li>• Acceleration is slow</li> </ul>	Engine coolant temperature when engine start: Temp. $< -35^{\circ}\text{C}$ ( $-31^{\circ}\text{F}$ )
P0715	<ul style="list-style-type: none"> <li>• Start is slow</li> <li>• Acceleration is slow</li> <li>• Lock-up is not performed</li> </ul>	—
P0717	<ul style="list-style-type: none"> <li>• Start is slow</li> <li>• Acceleration is slow</li> <li>• Lock-up is not performed</li> </ul>	—
P0740	<ul style="list-style-type: none"> <li>• Start is slow</li> <li>• Acceleration is slow</li> <li>• Lock-up is not performed</li> </ul>	—
P0743	<ul style="list-style-type: none"> <li>• Start is slow</li> <li>• Acceleration is slow</li> <li>• Lock-up is not performed</li> </ul>	—
P0744	<ul style="list-style-type: none"> <li>• Start is slow</li> <li>• Acceleration is slow</li> <li>• Lock-up is not performed</li> </ul>	—
P0746	<ul style="list-style-type: none"> <li>• Selector shock is large</li> <li>• Start is slow</li> <li>• Acceleration is slow</li> <li>• Lock-up is not performed</li> </ul>	—

# SYSTEM

< SYSTEM DESCRIPTION >

[CVT: RE0F10J]

DTC	Vehicle behavior	Conditions of vehicle	
P0776	<ul style="list-style-type: none"> <li>• Selector shock is large</li> <li>• Start is slow</li> <li>• Acceleration is slow</li> <li>• Lock-up is not performed</li> <li>• Vehicle speed is not increased</li> </ul>	When a malfunction occurs on the low oil pressure side	A
	<ul style="list-style-type: none"> <li>• Selector shock is large</li> <li>• Start is slow</li> <li>• Acceleration is slow</li> <li>• Lock-up is not performed</li> </ul>	When a malfunction occurs on the high oil pressure side	B
P0778	<ul style="list-style-type: none"> <li>• Selector shock is large</li> <li>• Start is slow</li> <li>• Acceleration is slow</li> <li>• Lock-up is not performed</li> </ul>	—	C
P0779	<ul style="list-style-type: none"> <li>• Selector shock is large</li> <li>• Start is slow</li> <li>• Acceleration is slow</li> <li>• Lock-up is not performed</li> </ul>		TM
P0841	<ul style="list-style-type: none"> <li>• Not changed from normal driving</li> </ul>		E
P0847	<ul style="list-style-type: none"> <li>• Not changed from normal driving</li> </ul>	—	F
P0848	<ul style="list-style-type: none"> <li>• Not changed from normal driving</li> </ul>	—	G
P084C	<ul style="list-style-type: none"> <li>• Not changed from normal driving</li> </ul>		H
P084D	<ul style="list-style-type: none"> <li>• Not changed from normal driving</li> </ul>		I
P0863	<ul style="list-style-type: none"> <li>• Selector shock is large</li> <li>• Start is slow</li> <li>• Acceleration is slow</li> <li>• Lock-up is not performed</li> </ul>	—	J
P0890	<ul style="list-style-type: none"> <li>• Selector shock is large</li> <li>• Start is slow</li> <li>• Acceleration is slow</li> <li>• Lock-up is not performed</li> <li>• Vehicle speed is not increased</li> </ul>		K
P0962	<ul style="list-style-type: none"> <li>• Selector shock is large</li> <li>• Start is slow</li> <li>• Acceleration is slow</li> <li>• Lock-up is not performed</li> </ul>	—	L
P0963	<ul style="list-style-type: none"> <li>• Selector shock is large</li> <li>• Start is slow</li> <li>• Acceleration is slow</li> <li>• Lock-up is not performed</li> </ul>	—	M
P0965	<ul style="list-style-type: none"> <li>• Selector shock is large</li> <li>• Start is slow</li> <li>• Acceleration is slow</li> <li>• Lock-up is not performed</li> </ul>	When a malfunction occurs on the low oil pressure side	N
	<ul style="list-style-type: none"> <li>• Selector shock is large</li> <li>• Lock-up is not performed</li> </ul>	When a malfunction occurs on the high oil pressure side	O
P0966	<ul style="list-style-type: none"> <li>• Selector shock is large</li> <li>• Start is slow</li> <li>• Acceleration is slow</li> <li>• Lock-up is not performed</li> </ul>	—	P
P0967	<ul style="list-style-type: none"> <li>• Selector shock is large</li> <li>• Start is slow</li> <li>• Acceleration is slow</li> <li>• Lock-up is not performed</li> </ul>	—	
P2765	<ul style="list-style-type: none"> <li>• Start is slow</li> <li>• Acceleration is slow</li> <li>• Lock-up is not performed</li> </ul>	—	

# SYSTEM

< SYSTEM DESCRIPTION >

[CVT: RE0F10J]

DTC	Vehicle behavior	Conditions of vehicle
P2813	<ul style="list-style-type: none"> <li>• Selector shock is large</li> <li>• Start is slow</li> <li>• Acceleration is slow</li> <li>• Vehicle speed is not increased</li> </ul>	When a malfunction occurs on the low oil pressure side
	<ul style="list-style-type: none"> <li>• Selector shock is large</li> </ul>	When a malfunction occurs on the high oil pressure side
P2814	<ul style="list-style-type: none"> <li>• Selector shock is large</li> </ul>	—
P2815	<ul style="list-style-type: none"> <li>• Selector shock is large</li> </ul>	—
U0073	<ul style="list-style-type: none"> <li>• Selector shock is large</li> <li>• Start is slow</li> <li>• Acceleration is slow</li> <li>• Lock-up is not performed</li> </ul>	—
	<ul style="list-style-type: none"> <li>• Selector shock is large</li> <li>• Start is slow</li> <li>• Acceleration is slow</li> <li>• Lock-up is not performed</li> </ul>	—
U0102	<ul style="list-style-type: none"> <li>• Not changed from normal driving</li> </ul>	—
U0140	<ul style="list-style-type: none"> <li>• Not changed from normal driving</li> </ul>	—
U0141	<ul style="list-style-type: none"> <li>• Not changed from normal driving</li> </ul>	—
U0155	<ul style="list-style-type: none"> <li>• Not changed from normal driving</li> </ul>	—
U0300	<ul style="list-style-type: none"> <li>• Selector shock is large</li> <li>• Start is slow</li> <li>• Acceleration is slow</li> <li>• Lock-up is not performed</li> </ul>	—
	<ul style="list-style-type: none"> <li>• Selector shock is large</li> <li>• Start is slow</li> <li>• Acceleration is slow</li> <li>• Lock-up is not performed</li> </ul>	—
U1000	<ul style="list-style-type: none"> <li>• Not changed from normal driving</li> </ul>	—
U1117	<ul style="list-style-type: none"> <li>• Not changed from normal driving</li> </ul>	—

## CVT CONTROL SYSTEM : Protection Control

INFOID:000000011355530

The TCM becomes the protection control status temporarily to protect the safety when the safety of TCM and transmission is lost. It automatically returns to the normal status if the safety is secured.  
The TCM has the following protection control.

### CONTROL FOR WHEEL SPIN

Control	When a wheel spin is detected, the engine output and gear ratio are limited and the line pressure is increased. Limits engine output when a wheel spin occurs in any of right and left drive wheels.
Vehicle behavior in control	If the accelerator is kept depressing during wheel spin, the engine revolution and vehicle speed are limited to a certain degree.
Normal return condition	Wheel spin convergence returns the control to the normal control.

### TORQUE IS REDUCED WHEN DRIVING WITH THE REVERSE GEAR

Control	Engine output is controlled according to a vehicle speed while reversing the vehicle.
Vehicle behavior in control	Power performance may be lowered while reversing the vehicle.
Normal return condition	Torque returns to normal by positioning the selector lever in a range other than "R" position.

### CONTROL WHEN FLUID TEMPERATURE IS HIGH

Control	When the CVT fluid temperature is high, the gear shift permission maximum revolution and the maximum torque are reduced than usual to prevent increase of the oil temperature.
---------	--

# SYSTEM

< SYSTEM DESCRIPTION >

[CVT: RE0F10J]

Vehicle behavior in control	Power performance may be lowered, compared to normal control.
Normal return condition	The control returns to the normal control when CVT fluid temperature is lowered.

## REVERSE PROHIBIT CONTROL


Control	The reverse brake is controlled to avoid becoming engaged when the selector lever is set in "R" position while driving in forward direction at more than the specified speed.
Vehicle behavior in control	If the selector lever is put at "R" position when driving with the forward gear, the gear becomes neutral, not reverse.
Normal return condition	The control returns to normal control when the vehicle is driven at low speeds. (The reverse brake becomes engaged.)

## LINE PRESSURE CONTROL

### LINE PRESSURE CONTROL : System Description

INFOID:000000011355531

### SYSTEM DIAGRAM

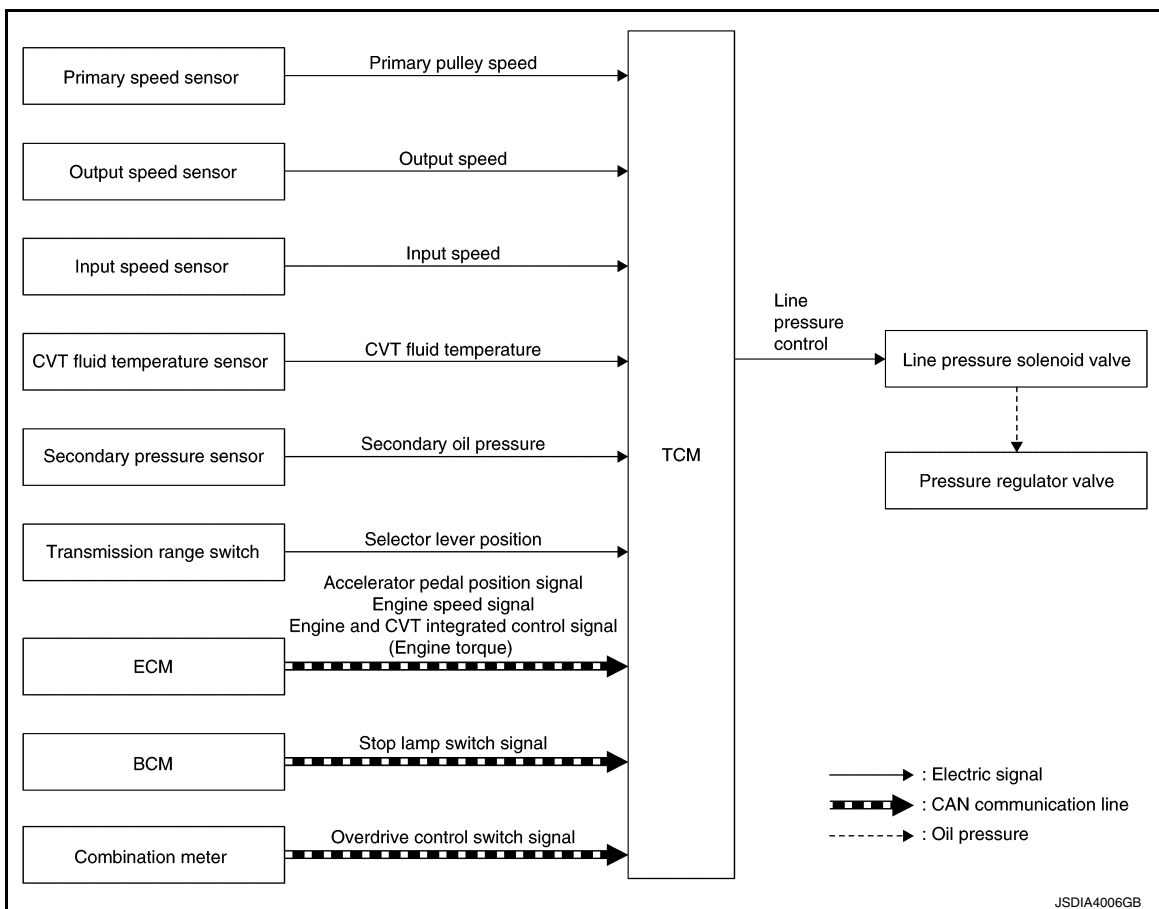

### DESCRIPTION

Highly accurate line pressure control (secondary pressure control) reduces friction for improvement of fuel economy.

#### Normal Oil Pressure Control

Appropriate line pressure and secondary pressure suitable for driving condition are determined based on the accelerator pedal position, engine speed, primary pulley (input) speed, secondary pulley (output) speed, vehicle speed, input torque, stop lamp switch signal, transmission range switch signal, lock-up signal, power voltage, target shift ratio, oil temperature, oil pressure, and overdrive control switch signal.

#### Secondary Pressure Feedback Control

# SYSTEM

< SYSTEM DESCRIPTION >

[CVT: RE0F10J]


In normal oil pressure control and oil pressure control in shifting, highly accurate secondary pressure is determined by detecting the secondary pressure using an oil pressure sensor and by feedback control.

## SHIFT CONTROL

### SHIFT CONTROL : System Description

INFOID:00000001135532

#### SYSTEM DIAGRAM

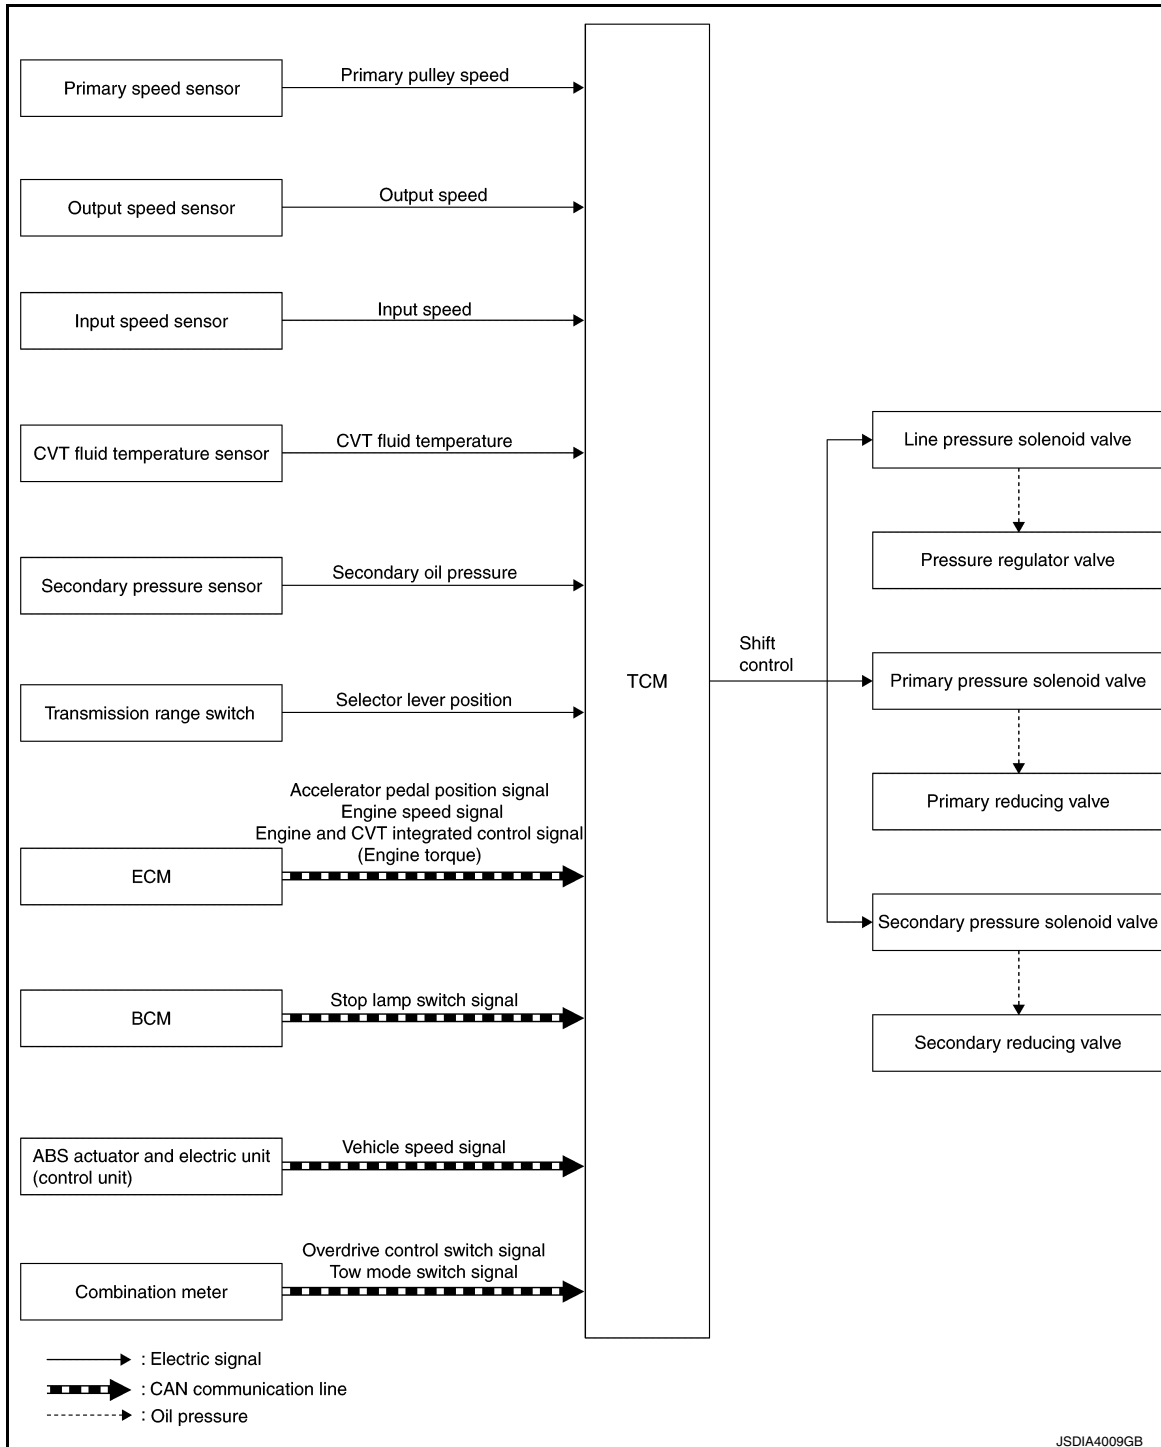

#### DESCRIPTION

To select the gear ratio that can give the driving force to meet driver's intent or vehicle situation, the vehicle driving condition such as vehicle speed or accelerator pedal position is detected and the most appropriate gear ratio is selected and the shifting method before reaching the speed is determined. The information is out-

# SYSTEM

## < SYSTEM DESCRIPTION >


[CVT: RE0F10J]

put to the primary pressure solenoid valve and secondary pressure solenoid valve to control the line pressure input/output to the pulley, to determine the pulley (movable pulley) position and to control the gear position.

### Shift Position Function


- D Position (Normal)

Gear shifting is performed in all shifting ranges from the lowest to the highest gear ratio.

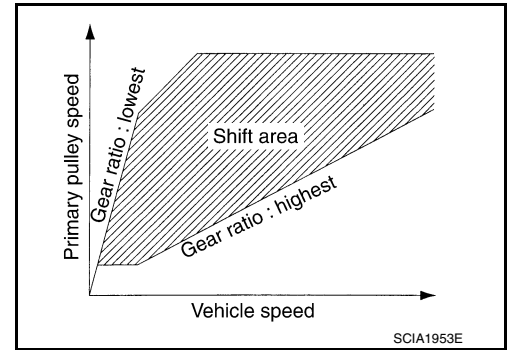


- D Position (OD OFF)

The gear ratio is generally high by limiting the shifting range on the high side, and this always generates a large driving power.

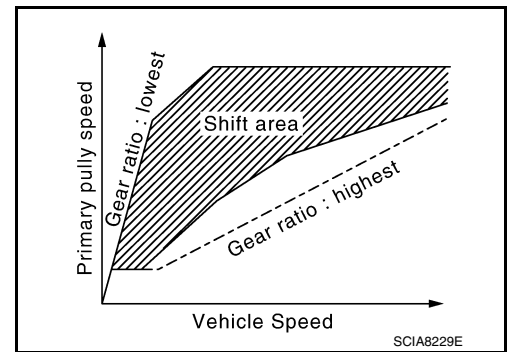

- L Position

By limiting the shifting range only to the lowest of the gear ratio, a large driving force and engine brake are obtained.

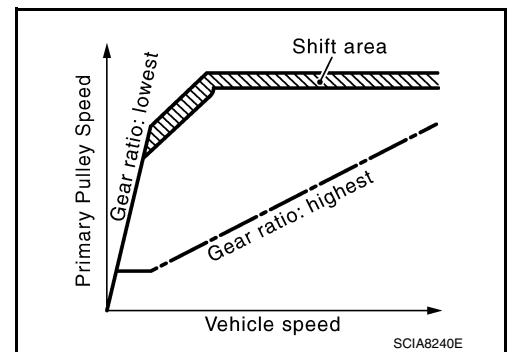


### Hill Climbing And Descending Control

If a downhill is detected with the accelerator pedal is released, the system performs downshift to increase the engine brake force so that vehicle may not be accelerated more than necessary. If a climbing hill is detected, the system improves the acceleration performance in re-acceleration by limiting the gear shift range on the high side.

#### NOTE:

For engine brake control on a downhill, the control can be stopped with CONSULT.

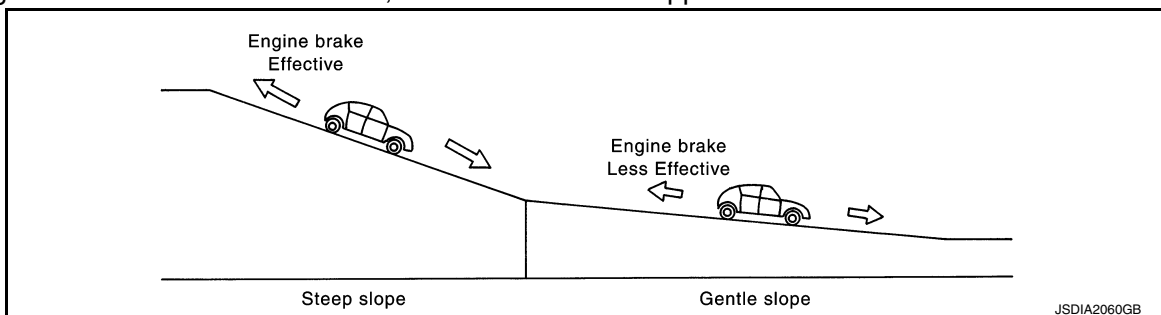

# SYSTEM

[CVT: RE0F10J]

## < SYSTEM DESCRIPTION >

### Control In Acceleration

From change of the vehicle speed or accelerator pedal position, the acceleration request level of the driver or driving scene is evaluated. In start or acceleration during driving, the gear shift characteristics with linearity of revolution increase and vehicle speed increase are gained to improve the acceleration feel.

### Tow Mode

- In tow mode, sluggish acceleration and insufficient engine brake output resulting from towing are assisted and improved by CVT gear shifting.
- When all of the following conditions are satisfied, CVT goes into tow mode.
  - Tow mode switch is ON
  - When CVT judges a towing condition from vehicle behavior.

### Tow Mode Function


Situation		Operation
Road condition	Brake pedal operation	
Flat road	Depressed	To assist deceleration resulting from brake operation, the tow mode function increases engine revolution by shifting down and makes the engine brake effective.
Uphill	—	In tow mode, the shift range on the HIGH side is limited more than that of normal mode and uphill driving control is improved.
Downhill	Depressed	To assist deceleration resulting from brake operation, the tow mode function increases engine revolution by shifting down more than the time when driving on flat roads and makes the engine brake effective.

## SELECT CONTROL

### SELECT CONTROL : System Description

INFOID:000000011355533

### SYSTEM DIAGRAM

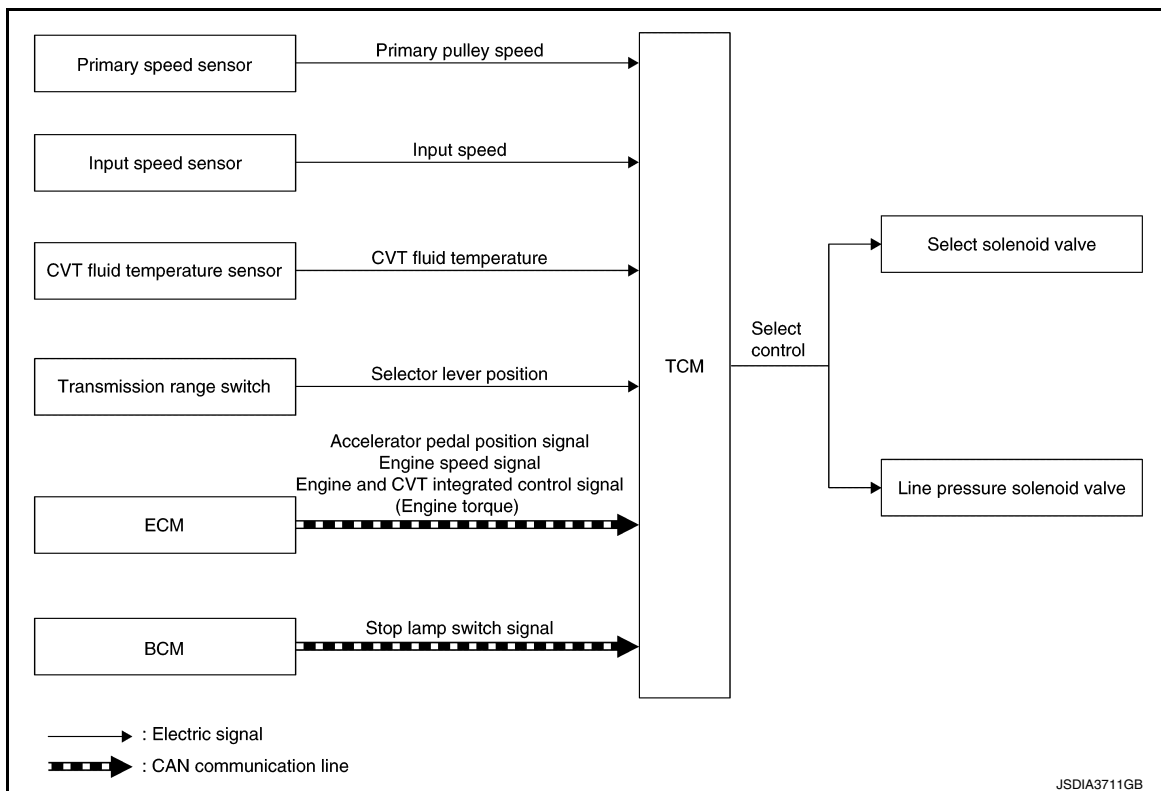

### DESCRIPTION

Based on accelerator pedal angle, engine speed, primary pulley speed, and the input speed, the optimum operating pressure is set to reduce impact of a selector lever operation while shifting from "N" ("P") to "D" ("R") position.


### LOCK-UP CONTROL



LOCK-UP CONTROL : System Description

INFOID:000000011355534

SYSTEM DIAGRAM

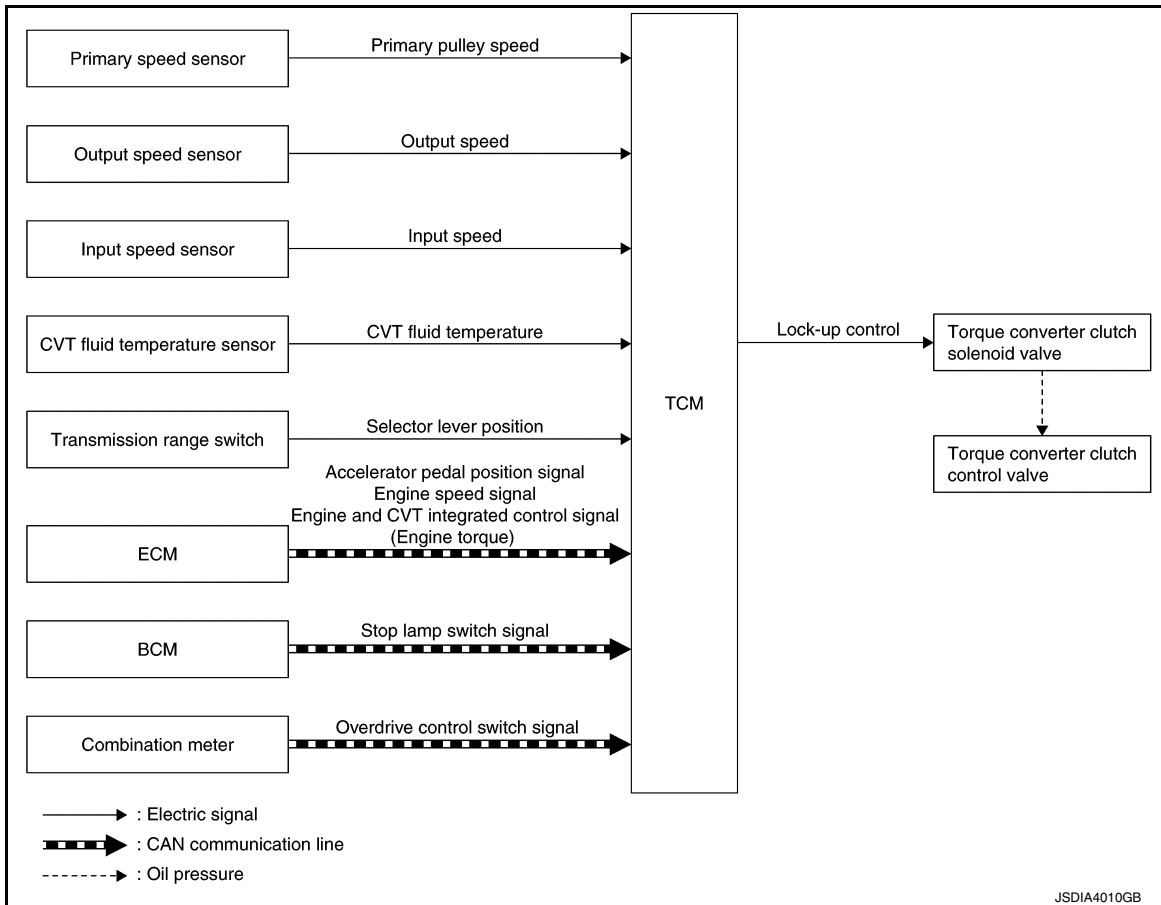

DESCRIPTION

- Controls for improvement of the transmission efficiency by engaging the torque converter clutch in the torque converter and eliminating slip of the converter. Achieves comfortable driving with slip control of the torque converter clutch.
- The oil pressure feed circuit for the torque converter clutch piston chamber is connected to the torque converter clutch control valve. The torque converter clutch control valve is switched by the torque converter clutch solenoid valve with the signal from TCM. This controls the oil pressure circuit, which is supplied to the torque converter clutch piston chamber, to the release side or engagement side.
- If the CVT fluid temperature is low or the vehicle is in fail-safe mode due to malfunction, lock-up control is prohibited.

Lock-up engagement

In lock-up engagement, the torque converter clutch solenoid valve makes the torque converter clutch control valve locked up to generate the lock-up apply pressure. This pushes the torque converter clutch piston for engagement.

Lock-up release condition

In lock-up release, the torque converter clutch solenoid valve makes the torque converter clutch control valve non-locked up to drain the lock-up apply pressure. This does not engage the torque converter clutch piston.

A  
B  
C  
TM  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# ON BOARD DIAGNOSTIC (OBD) SYSTEM

< SYSTEM DESCRIPTION >

[CVT: RE0F10J]

---

## ON BOARD DIAGNOSTIC (OBD) SYSTEM

### Description

INFOID:000000011355535

This is an on board diagnosis system which records diagnosis information related to the exhaust gases. It detects malfunctions related to sensors and actuators. The malfunctions are indicated by means of the malfunction indicator lamp (MIL) and are stored as DTC in the ECU memory. The diagnosis information can be checked using a diagnosis tool (GST: Generic Scan Tool).

### Function of OBD

INFOID:000000011355536

The GST is connected to the diagnosis connector on the vehicle and communicates with the on-board control units to perform diagnosis. The diagnosis connector is the same as for CONSULT. Refer to [GI-55, "Description"](#).

## DIAGNOSIS SYSTEM (TCM)

### DIAGNOSIS DESCRIPTION

DIAGNOSIS DESCRIPTION : 1 Trip Detection Diagnosis and 2 Trip Detection Diagnosis

INFOID:0000000011355537

**NOTE:**

"Start the engine and turn OFF the ignition switch after warm-up." This is defined as 1 trip.

#### 1 TRIP DETECTION DIAGNOSIS

When initial malfunction is detected, TCM memorizes DTC. In these diagnoses, some illuminate MIL and some do not. Refer to [TM-277, "DTC Index"](#).

#### 2 TRIP DETECTION DIAGNOSIS

When initial malfunction is detected, TCM memorizes DTC of the 1st trip. MIL does not light at this stage. <1 trip>

If the same malfunction is detected again in next driving, TCM memorizes DTC. When DTC is memorized, MIL lights. <2 trip>

"Trip" of the "2 trip detection diagnosis" indicates the driving mode that executes self-diagnosis during driving.

×: Check possible    —: Check not possible

Item	DTC at the 1st trip		DTC		MIL	
	Display at the 1st trip	Display at the 2nd trip	Display at the 1st trip	Display at the 2nd trip	Illumination at the 1st trip	Illumination at the 2nd trip
1 trip detection diagnosis (Refer to <a href="#">TM-277, "DTC Index"</a> )	—	—	×	—	×	—
2 trip detection diagnosis (Refer to <a href="#">TM-277, "DTC Index"</a> )	×	—	—	×	—	×

### DIAGNOSIS DESCRIPTION : DTC and DTC of 1st Trip

INFOID:0000000011355538

#### 2 TRIP DETECTION DIAGNOSIS THAT ILLUMINATES MIL

- The DTC number of the 1st trip is the same as the DTC number.
- When a malfunction is detected at the 1st trip, TCM memorizes DTC of the 1st trip. MIL does not light at this stage. If the same malfunction is not detected at the 2nd trip (conforming to necessary driving conditions), DTC at the 1st trip is erased from TCM. If the same malfunction is detected at the 2nd trip, TCM memorizes DTC and MIL lights at the same time.
- The DTC of the 1st trip is specified in Service \$01 of SAE J1979/ISO 15031-5. Since detection of DTC at the 1st trip does not illuminate MIL, warning for a problem is not given to a driver.
- For procedure to delete DTC and 1st trip DTC from TCM, refer to [TM-261, "CONSULT Function"](#).
- If DTC of the 1st trip is detected, it is necessary to check the cause according to the "Diagnosis flow". Refer to [TM-295, "Work Flow"](#).

### DIAGNOSIS DESCRIPTION : Malfunction Indicator Lamp (MIL)

INFOID:0000000011355539

- TCM not only detects DTC, but also sends the MIL signal to ECM through CAN communication. ECM sends the MIL signal to the combination meter through CAN communication according to the signal, and illuminates MIL.
- For malfunction indicator lamp (MIL) description, refer to [EC-33, "Malfunction Indicator Lamp \(MIL\)"](#).

### DIAGNOSIS DESCRIPTION : Counter System

INFOID:0000000011355540

#### RELATION BETWEEN DTC AT 1ST TRIP/DTC/MIL AND DRIVING CONDITIONS (FOR 2 TRIP DETECTION DIAGNOSIS THAT ILLUMINATES MIL)

- When initial malfunction is detected, TCM memorizes DTC of the 1st trip. MIL does not light at this stage.
- If the same malfunction is detected at the 2nd trip, TCM memorizes DTC and MIL lights at the same time.
- Then, MIL goes after driving the vehicle for 3 trips under "Driving condition B" without malfunction.
- DTC is displayed until 40 trips of "Driving condition A" are satisfied without detecting the same malfunction. DTC is erased when 40 trips are satisfied.

# DIAGNOSIS SYSTEM (TCM)

[CVT: RE0F10J]

## < SYSTEM DESCRIPTION >

- When the self-diagnosis result is acceptable at the 2nd trip (conforming to driving condition B), DTC of the 1st trip is erased.

## COUNTER SYSTEM LIST

Item	Driving condition	Trip
MIL (OFF)	B	3
DTC (clear)	A	40
DTC at 1st trip (clear)	B	1

## DRIVING CONDITION

### Driving condition A

Driving condition A is the driving condition that provides warm-up.

In specific, count-up is performed when all of the following conditions are satisfied.

- Engine speed is 400 rpm or more.
- After start of the engine, the water temperature increased by 20°C (36°F) or more.
- Water temperature was 70°C (158°F) or more.
- The ignition switch was changed from ON to OFF.

#### NOTE:

- If the same malfunction is detected regardless of the driving condition, reset the A counter.
- When the above is satisfied without detecting the same malfunction, count up the A counter.
- When MIL goes off due to the malfunction and the A counter reaches 40, the DTC is erased.

### Driving condition B

Driving condition B is the driving condition that performs all diagnoses once.

In specific, count-up is performed when all of the following conditions are satisfied.

- Engine speed is 400 rpm or more.
- Water temperature was 70°C (158°F) or more.
- In closed loop control, vehicle speed of 70 – 120 km/h (43 – 75 MPH) continued for 60 seconds or more.
- In closed loop control, vehicle speed of 30 – 60 km/h (19 – 37 MPH) continued for 10 seconds or more.
- In closed loop control, vehicle speed of 4 km/h (2 MPH) or less and idle determination ON continued for 12 seconds or more.
- After start of the engine, 22 minutes or more have passed.
- The condition that the vehicle speed is 10 km/h (6 MPH) or more continued for 10 seconds or more in total.
- The ignition switch was changed from ON to OFF.

#### NOTE:


- If the same malfunction is detected regardless of the driving condition, reset the B counter.
- When the above is satisfied without detecting the same malfunction, count up the B counter.
- When the B counter reaches 3 without malfunction, MIL goes off.
- When the B counter is counted once without detecting the same malfunction after TCM memorizes DTC of the 1st trip, DTC of the 1st trip is erased.

# DIAGNOSIS SYSTEM (TCM)

< SYSTEM DESCRIPTION >

[CVT: RE0F10J]

## TIME CHART

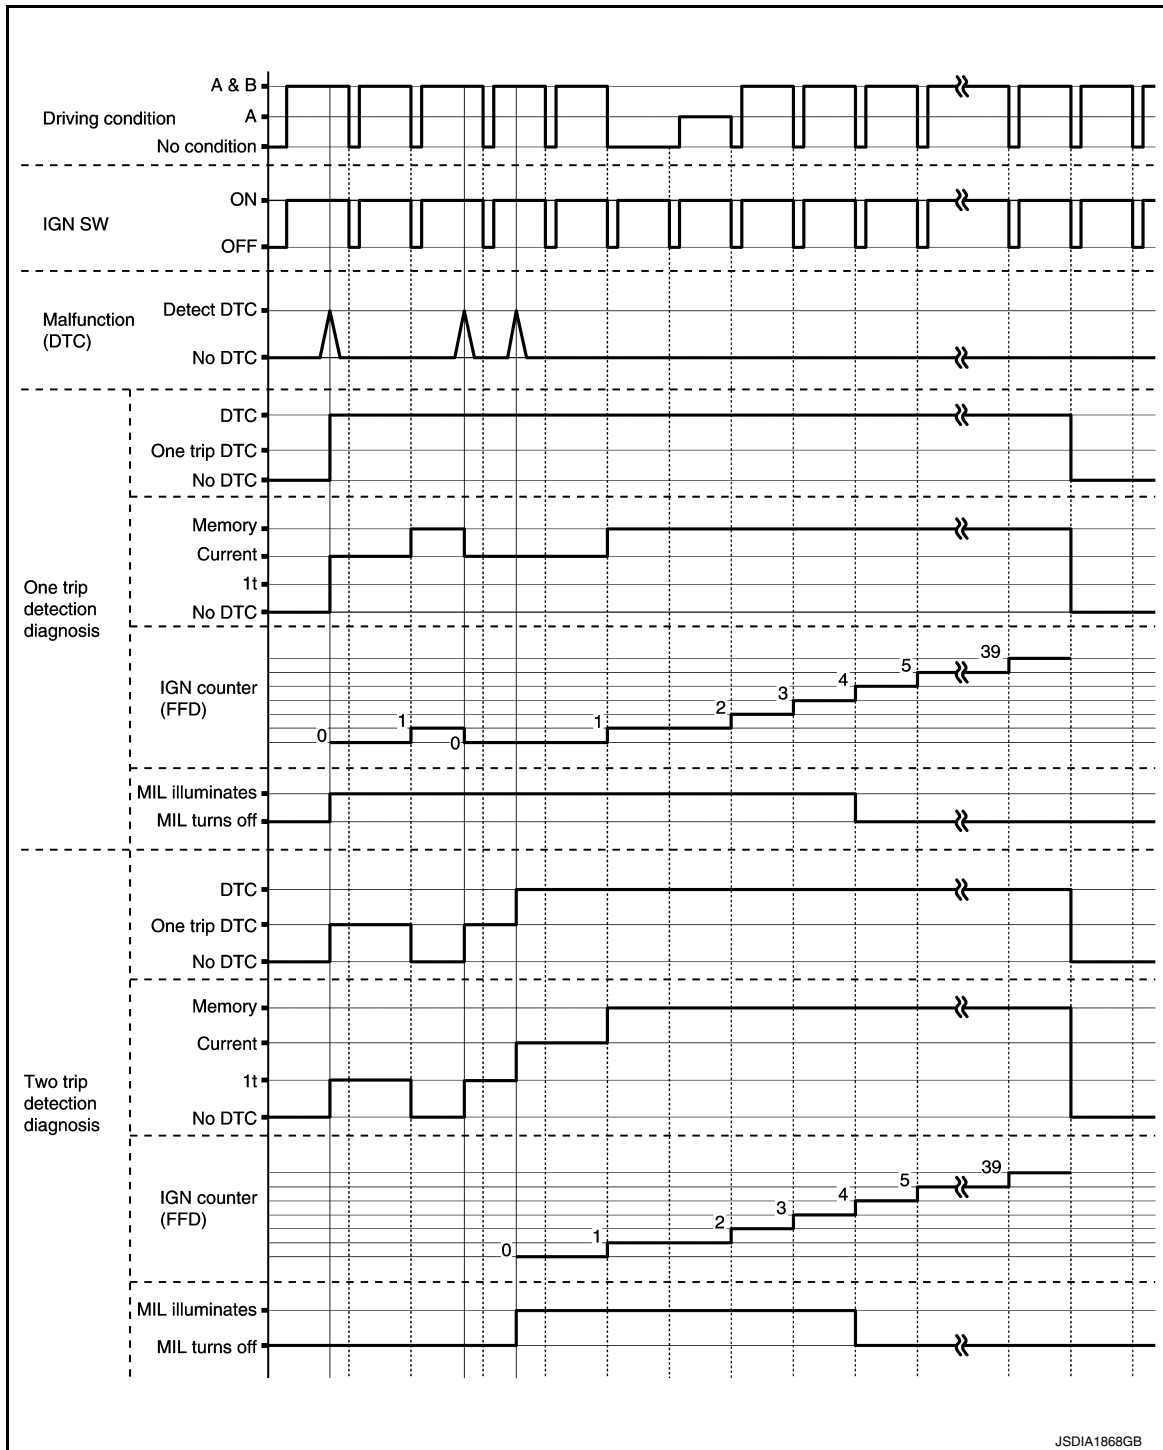

### CONSULT Function

INFOID:000000011355541

#### CAUTION:

After disconnecting the CONSULT vehicle interface (VI) from the data link connector, the ignition must be cycled OFF → ON (for at least 5 seconds) → OFF. If this step is not performed, the BCM may not go to "sleep mode", potentially causing a discharged battery and a no-start condition.

### APPLICABLE ITEM

# DIAGNOSIS SYSTEM (TCM)

< SYSTEM DESCRIPTION >

[CVT: RE0F10J]

Conditions	Function
Work Support	The settings for ECU functions can be changed.
Self Diagnostic Results	The ECU self diagnostic results are displayed.
Data Monitor	The ECU input/output data is displayed in real time.
CAN Diagnosis Support Monitor	The result of transmit/receive diagnosis of CAN communication is displayed.
ECU Identification	The ECU part number is displayed.
CALIB DATA	The calibration data status of TCM can be checked.

## SELF DIAGNOSTIC RESULTS

Refer to [TM-277, "DTC Index"](#).

DTC at 1st trip and method to read DTC

- DTC (P0705, P0711, P0720, etc.) is specified by SAE J2012/ISO 15031-6.
- DTC and DTC at 1st trip are displayed on "Self Diagnostic results" of CONSULT.  
When DTC is currently detected, "CRNT" is displayed. If "PAST" is displayed, it shows a malfunction occurred in the past. The trip number of drive without malfunction of concerned DTC can be confirmed with "IGN counter" inside "FFD".
- When the DTC at the 1st trip is detected, "1t" is displayed.

DTC deletion method

### NOTE:

If the ignition switch is left ON after repair, turn OFF the ignition switch and wait for 10 seconds or more. Then, turn the ignition ON again. (Engine stop)

1. Touch "TRANSMISSION" of CONSULT.
2. Touch "Self Diagnostic Result".
3. Touch "Erase". (DTC memorized in TCM is erased.)

IGN counter

The ignition counter is displayed in "FFD" and the number of times of satisfied "Driving condition A" is displayed after normal recovery of DTC. Refer to [TM-259, "DIAGNOSIS DESCRIPTION : Counter System"](#).

- If malfunction (DTC) is currently detected, "0" is displayed.
- After normal recovery, every time "Driving condition A" is satisfied, the display value increases from 1 → 2 → 3...38 → 39.
- When MIL turns OFF due to the malfunction and the counter reaches 40, the DTC is erased.

### NOTE:

The counter display of "40" cannot be checked.

## DATA MONITOR

### NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

Monitored item	(Unit)	Remarks
VSP SENSOR	(km/h or mph)	Displays the vehicle speed calculated from the CVT output shaft speed.
ESTM VSP SIG	(km/h or mph)	<ul style="list-style-type: none"> <li>• Displays the vehicle speed signal (ABS) received through CAN communication.</li> <li>• Models with ABS are displayed.</li> </ul>
INPUT SPEED SENSOR	(rpm)	Displays the input speed calculated from the pulse signal of the input speed sensor.
PRI SPEED SEN	(rpm)	Displays the primary pulley speed calculated from the pulse signal of the primary speed sensor.
SEC REV SENSOR	(rpm)	Displays the secondary pulley speed calculated from the pulse signal of the output speed sensor.
ENG SPEED SIG	(rpm)	Displays the engine speed received through CAN communication.
SEC PRESSURE SEN	(V)	Displays the signal voltage of the secondary pressure sensor.
PRI PRESSURE SEN	(V)	Displays the signal voltage of the primary pressure sensor.
ATF TEMP SEN	(V)	Displays the signal voltage of the CVT fluid temperature sensor.
G SENSOR*	(G)	Displays the signal voltage of the G sensor.

## DIAGNOSIS SYSTEM (TCM)

< SYSTEM DESCRIPTION >

[CVT: RE0F10J]

Monitored item	(Unit)	Remarks
VIGN SEN	(V)	Displays the battery voltage applied to TCM.
PVING VOLT	(V)	Displays the backup voltage of TCM.
VEHICLE SPEED	(km/h or mph)	Displays the vehicle speed recognized by TCM.
INPUT REV	(rpm)	Displays the input shaft speed of CVT recognized by TCM.
PRI SPEED	(rpm)	Displays the primary pulley speed recognized by TCM.
SEC SPEED	(rpm)	Displays the secondary pulley speed recognized by TCM.
ENG SPEED	(rpm)	Displays the engine speed recognized by TCM.
SLIP REV	(rpm)	Displays the speed difference between the input shaft speed of CVT and the engine speed.
PULLEY GEAR RATIO		Displays the pulley gear ratio calculated from primary pulley speed/secondary pulley speed.
G SPEED	(G)	Displays the acceleration and deceleration speed of the vehicle calculated from vehicle speed change.
ACCEL POSI SEN 1	(deg)	Displays the estimated throttle position received through CAN communication.
VENG TRQ	(Nm)	Display the engine torque recognized by TCM.
PRI TRQ	(Nm)	Display the input shaft torque of CVT.
TRQ RTO		Display the torque ratio of torque converter.
SEC PRESSURE	(MPa)	Displays the secondary pressure calculated from the signal voltage of the secondary pressure sensor.
PRI PRESSURE	(MPa)	Displays the primary pressure calculated from the signal voltage of the primary pressure sensor.
FLUID TEMP	(°C or °F)	Displays the CVT fluid temperature calculated from the signal voltage of the CVT fluid temperature sensor.
DSR REV	(rpm)	Displays the target primary pulley speed calculated from processing of gear shift control.
TGT PLY GR RATIO		Displays the target gear ratio of the pulley from processing of gear shift control.
LU PRS	(MPa)	Displays the target oil pressure of the torque converter clutch solenoid valve calculated from oil pressure processing of gear shift control.
LINE PRS	(MPa)	Displays the target oil pressure of the line pressure solenoid valve calculated from oil pressure processing of gear shift control.
TRGT PRI PRESSURE	(MPa)	Displays the target oil pressure of the primary pressure solenoid valve calculated from oil pressure processing of gear shift control.
TRGT SELECT PRESSURE	(MPa)	Displays the target oil pressure of the select solenoid valve calculated from oil pressure processing of gear shift control.
TRGT SEC PRESSURE	(MPa)	Displays the target oil pressure of the secondary pressure solenoid valve calculated from oil pressure processing of gear shift control.
ISOLT1	(A)	Displays the command current from TCM to the torque converter clutch solenoid valve.
ISOLT2	(A)	Displays the command current from TCM to the line pressure solenoid valve.
PRI SOLENOID	(A)	Displays the command current from TCM to the primary pressure solenoid valve.
SEC SOLENOID CURRENT	(A)	Displays the command current from TCM to the secondary pressure solenoid valve.
SELECT SOLENOID CURRENT	(A)	Displays the command current from TCM to the select solenoid valve.
SOLMON1	(A)	Monitors the command current from TCM to the torque converter clutch solenoid valve and displays the monitored value.
SOLMON2	(A)	Monitors the command current from TCM to the line pressure solenoid valve and displays the monitored value.
PRI SOL MON	(A)	Monitors the command current from TCM to the primary pressure solenoid valve and displays the monitored value.

A

B

C

TM

E

F

G

H

I

J

K

L

M

N

O

P

## DIAGNOSIS SYSTEM (TCM)

< SYSTEM DESCRIPTION >

[CVT: RE0F10J]

Monitored item	(Unit)	Remarks
SEC SOL MON CURRENT	(A)	Monitors the command current from TCM to the secondary pressure solenoid valve and displays the monitored value.
SELECT SOL MON CURRENT	(A)	Monitors the command current from TCM to the select solenoid valve and displays the monitored value.
D POSITION SW	(On/Off)	Displays the operation status of the transmission range switch (D position).
N POSITION SW	(On/Off)	Displays the operation status of the transmission range switch (N position).
R POSITION SW	(On/Off)	Displays the operation status of the transmission range switch (R position).
P POSITION SW	(On/Off)	Displays the operation status of the transmission range switch (P position).
L POSITION SW	(On/Off)	Displays the operation status of the transmission range switch (L position).
DS RANGE SW*	(On/Off)	Displays the operation status of the transmission range switch (Ds position).
BRAKESW	(On/Off)	Displays the reception status of the stop lamp switch signal received through CAN communication.
IDLE SW	(On/Off)	Displays the reception status of the closed throttle position signal received through CAN communication.
SPORT MODE SW	(On/Off)	Displays the reception status of the overdrive control switch signal received through CAN communication.
ECO MODE SW*	(On/Off)	Displays the reception status of the ECO mode switch signal received through CAN communication.
STRDWSW*	(On/Off)	Displays the operation status of the paddle shifter (down switch).
STRUPSW*	(On/Off)	Displays the operation status of the paddle shifter (up switch).
DOWNLVR*	(On/Off)	Displays the operation status of the selector lever (down switch).
UPLVR*	(On/Off)	Displays the operation status of the selector lever (up switch).
NONMMODE*	(On/Off)	Displays if the selector lever position is not at the manual shift gate.
MMODE*	(On/Off)	Displays if the selector lever position is at the manual shift gate.
TOW MODE SW	(On/Off)	Displays the reception status of the TOW mode switch signal received through CAN communication.
SHIFT IND SIGNAL		Displays the transaxle value of shift position signal transmitted via CAN communication.
CVT LAMP*	(On/Off)	Displays the transaxle status of the CVT warning lamp signal transmitted through CAN communication.
SPORT MODE IND	(On/Off)	Displays the transaxle status of the O/D OFF indicator lamp signal transmitted through CAN communication.
MANU MODE SIGNAL *	(On/Off)	Displays the transaxle status of the manual mode signal transmitted through CAN communication.
DS RANGE SIGNAL *	(On/Off)	Displays the shift position signal status from transmission range switch (Ds position).
ECO MODE SIGNAL *	(On/Off)	Displays the transaxle status of the ECO mode signal transmitted through CAN communication.
VDC ON	(On/Off)	Displays the reception status of the VDC operation signal received through CAN communication.
TCS ON	(On/Off)	Displays the reception status of the TCS operation signal received through CAN communication.
ABS FAIL SIGNAL	(On/Off)	Displays the reception status of the ABS malfunction signal received through CAN communication.
ABS ON	(On/Off)	Displays the reception status of the ABS operation signal received through CAN communication.
RANGE		Displays the gear position recognized by TCM.
M GEAR POS*		Display the target gear of manual mode
G SEN SLOPE*	(%)	Displays the gradient angle calculated from the G sensor signal voltage.
G SEN CALIBRATION*	(YET/DONE)	Displays the status of "G SENSOR CALIBRATION" in "Work Support".



# DIAGNOSIS SYSTEM (TCM)

< SYSTEM DESCRIPTION >

[CVT: RE0F10J]

Monitored item	(Unit)	Remarks
N IDLE STATUS*	(On/Off)	Displays idle neutral status.
ENGBRKLVL	(On/Off)	Displays the setting of "ENGINE BRAKE ADJ" in "Work Support".
DRIVE MODE STATS*		Displays the drive mode status recognized by TCM.
SNOW MODE*	(On/Off)	Displays whether it is the SNOW mode.
ECO MODE*	(On/Off)	Displays whether it is the ECO mode.
NORMAL MODE*	(On/Off)	Displays whether it is the NORMAL mode.
SPORT MODE*	(On/Off)	Displays whether it is the SPORT mode.
AIR BLDING STATE*	(INCOMP/ COMP)	Displays the status of "ELECTRIC O.P. AIR BLEEDING" in "Work Support".
ELECTRIC OP DUTY*	(%)	Displays the command signal value (duty) of the electric oil pump transmitted from TCM.
E-OP DUTY MON*	(%)	Monitors the status signal value (duty) transmitted from the electric oil pump and displays the monitored value.
ELECTRIC OP RELAY*	(On/Off)	Displays the command status from TCM to the electric oil pump relay.
E-OP RELAY MON*	(On/Off)	Monitors the command status from TCM to the oil pump relay and displays the monitored value.
CVT-B		<ul style="list-style-type: none"> <li>Displays CVT fluid temperature count.</li> <li>This monitor item does not use.</li> </ul>
CVT-A	(On/Off)	<ul style="list-style-type: none"> <li>Displays CVT fluid temperature count.</li> <li>This monitor item does not use.</li> </ul>

\*: Not applicable but displayed.

## WORK SUPPORT

Item name	Description
CONFORM CVTF DETERIORTN	Checks the degradation level of the CVT fluid under severe conditions.
ERASE MEMORY DATA	Performs "erasing of the calibration data" and "erasing of the learned value" at the same time.
G SENSOR CALIBRATION	Compensates the G sensor.
ERASE LEARNING VALUE	Erases learning value memorized by TCM.
ENGINE BRAKE ADJ.	Although there is no malfunction on the transaxle and the CVT system, if a customer make a complaint like "I do not feel comfortable with automatic operation of the engine brake on downhill", the engine brake may be cancelled with "engine brake adjustment".
ERASE CALIBRATION DATA	Erases calibration data memorized by TCM.
WRITE IP CHARA - REPLACEMENT AT/CVT	Writes IP characteristics when transaxle assembly is replaced.
READ IP CHARA - REPLACEMENT TCM	Reads IP characteristics when TCM is replaced.
WRITE IP CHARA - REPLACEMENT TCM	Writes IP characteristics when TCM is replaced.

### Engine brake adjustment

#### ENGINE BRAKE LEVEL

ON : Turn ON the engine brake control.

OFF : Turn OFF the engine brake control.

Check the degradation level of the CVT fluid.

#### CVTF degradation level data

210,000 or more : Replacement of the CVT fluid is required.

Less than 210,000 : Replacement of the CVT fluid is not required.

# ECU DIAGNOSIS INFORMATION

## TCM

### Reference Value

INFOID:0000000011355542

#### CONSULT DATA MONITOR STANDARD VALUE

- In CONSULT, electric shift timing or lock-up timing, i.e. operation timing of each solenoid valve, is displayed. Therefore, if there is an obvious difference between the shift timing estimated from a shift shock (or engine speed variations) and that shown on the CONSULT, the mechanism parts (including the hydraulic circuit) excluding the solenoids and sensors may be malfunctioning. In this case, check the mechanical parts following the appropriate diagnosis procedure.
- Shift point (gear position) displayed on CONSULT slightly differs from shift pattern described in Service Manual. This is due to the following reasons.
  - Actual shift pattern may vary slightly within specified tolerances.
  - While shift pattern described in Service Manual indicates start of each shift, CONSULT shows gear position at end of shift.
  - The solenoid display (ON/OFF) on CONSULT is changed at the start of gear shifting. In contrast, the gear position display is changed at the time when gear shifting calculated in the control unit is completed.

#### NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

Monitor item	Condition	Value/Status (Approx.)
VSP SENSOR	While driving	Almost same as the speedometer display.
ESTM VSP SIG	While driving	Almost same as the speedometer display.
INPUT SPEED SENSOR	In driving (lock-up ON)	Approximately matches the engine speed.
PRI SPEED SEN	In driving (lock-up ON)	Approximately matches the engine speed.
SEC REV SENSOR	While driving	VSP SENSOR × 40
ENG SPEED SIG	Engine running	Almost same reading as tachometer
SEC PRESSURE SEN	<ul style="list-style-type: none"> <li>• After engine warm up</li> <li>• Selector lever: "N" position</li> <li>• At idle</li> </ul>	1.7 V
PRI PRESSURE SEN	<ul style="list-style-type: none"> <li>• After engine warm up</li> <li>• Selector lever: "N" position</li> <li>• At idle</li> </ul>	1.23 V
ATF TEMP SEN	CVT fluid: Approx. 20°C (68°F)	2.01 – 2.05 V
	CVT fluid: Approx. 50°C (122°F)	1.45 – 1.50 V
	CVT fluid: Approx. 80°C (176°F)	0.90 – 0.94 V
G SENSOR	Always	0 V
VIGN SEN	Ignition switch: ON	10.0 – 16.0 V
PVIGN VOLT	Ignition switch: ON	10.0 – 16.0 V
VEHICLE SPEED	While driving	Almost same as the speedometer display.
INPUT REV	In driving (lock-up ON)	Almost same as the engine speed.
PRI SPEED	In driving (lock-up ON)	Approximately matches the engine speed.
SEC SPEED	While driving	VSP SENSOR × 40
ENG SPEED	Engine running	Almost same reading as tachometer
SLIP REV	While driving	Engine speed – Input speed
PULLEY GEAR RATIO	In driving (forward)	2.43 – 0.38
	In driving (reverse)	2.43

# TCM

< ECU DIAGNOSIS INFORMATION >

[CVT: RE0F10J]

Monitor item	Condition	Value/Status (Approx.)	
G SPEED	Vehicle stopped	0.00 G	A
	During acceleration	The value changes to the positive side along with acceleration.	B
	During deceleration	The value changes to the positive side along with deceleration.	
ACCEL POSI SEN 1	Accelerator pedal released	0.00 deg	C
	Accelerator pedal fully depressed	80.00 deg	
VENG TRQ	While driving	The value changes along with acceleration/ deceleration.	TM
PRI TRQ	While driving	The value changes along with acceleration/ deceleration.	
TRQ RTO	While driving	The value changes along with acceleration/ deceleration.	E
SEC PRESSURE	<ul style="list-style-type: none"> <li>• After engine warm up</li> <li>• Selector lever: "N" position</li> <li>• At idle</li> </ul>	1.800 MPa	F
PRI PRESSURE	<ul style="list-style-type: none"> <li>• After engine warm up</li> <li>• Selector lever: "N" position</li> <li>• At idle</li> </ul>	1.100 MPa	G
FLUID TEMP	Ignition switch ON.	Displays the CVT fluid temperature.	
DSR REV	While driving	It varies along with the driving condition.	H
TGT PLY GR RATIO	In driving (forward)	2.43 – 0.38	
	In driving (reverse)	2.43	
LU PRS	<ul style="list-style-type: none"> <li>• Engine started</li> <li>• Vehicle is stopped.</li> </ul>	-0.50 MPa	I
	<ul style="list-style-type: none"> <li>• Selector lever: "D" position</li> <li>• Accelerator pedal position: 1/8 or less</li> <li>• Vehicle speed: 20 km/h (12 MPH) or more</li> </ul>	0.45 MPa	J
LINE PRS	<ul style="list-style-type: none"> <li>• After engine warm up</li> <li>• Selector lever: "N" position</li> <li>• At idle</li> </ul>	1.800 MPa	K
	<ul style="list-style-type: none"> <li>• After engine warm up</li> <li>• Selector lever: "N" position</li> <li>• Depress the accelerator pedal fully</li> </ul>	4.930 – 5.430 MPa	L
TRGT PRI PRESSURE	<ul style="list-style-type: none"> <li>• After engine warm up</li> <li>• Selector lever: "N" position</li> <li>• At idle</li> </ul>	1.100 MPa	M
TARGET SELECT PRESSURE	<ul style="list-style-type: none"> <li>• After engine warm up</li> <li>• Selector lever: "N" position</li> <li>• At idle</li> </ul>	0.000 MPa	N
TARGET SEC PRESSUR	<ul style="list-style-type: none"> <li>• After engine warm up</li> <li>• Selector lever: "N" position</li> <li>• At idle</li> </ul>	1.800 MPa	O
ISOLT1	—	—	
ISOLT2	—	—	
PRI SOLENOID	—	—	P
SEC SOLENOID CURRENT	—	—	
SELECT SOLENOID CURRENT	—	—	
SOLMON1	—	—	
SOLMON2	—	—	
PRI SOL MON	—	—	

# TCM

< ECU DIAGNOSIS INFORMATION >

[CVT: RE0F10J]

Monitor item	Condition	Value/Status (Approx.)
SEC SOL MON CURRENT	—	—
SELECT SOL MON CURRENT	—	—
D POSITION SW	Selector lever: "D" position	On
	Other than the above	Off
N POSITION SW	Selector lever: "N" position	On
	Other than the above	Off
R POSITION SW	Selector lever: "R" position	On
	Other than the above	Off
P POSITION SW	Selector lever: "P" position	On
	Other than the above	Off
L POSITION SW	Selector lever: "L" position	On
	Other than the above	Off
DS RANGE SW	Always	Off
BRAKESW	Brake pedal is depressed	On
	Brake pedal is released	Off
IDLE SW	Accelerator pedal is released	On
	Accelerator pedal is fully depressed	Off
SPORT MODE SW	Press the overdrive control switch	On
	Release the overdrive control switch	Off
ECO MODE SW	Always	Off
STRDWN SW	Always	Off
STRUP SW	Always	Off
DOWNLVR	Always	Off
UPLVR	Always	Off
NONMMODE	Always	On
MMODE	Always	Off
TOW MODE SW	In tow mode	On
	Other than above	Off
SHIFT IND SIGNAL	When the selector lever is positioned in between each position.	OFF
	Selector lever: P position	P
	Selector lever: R position	R
	Selector lever: N position	N
	Selector lever: D position	D
	Selector lever: L position	L
CVT LAMP	Approx. 2 seconds after ignition switch ON	On
	Other than the above	Off
SPORT MODE IND	In OD OFF	On
	Other than the above	Off
MANU MODE SIGNAL	Always	Off
DS RANGE SIGNAL	Always	Off
ECO MODE SIGNAL	Always	Off
VDC ON	VDC is activated	On
	Other than the above	Off

# TCM


< ECU DIAGNOSIS INFORMATION >

[CVT: RE0F10J]

Monitor item	Condition	Value/Status (Approx.)
TCS ON	TCS is activated	On
	Other than the above	Off
ABS FAIL SIGNAL	When ABS malfunction signal is received	On
	Other than the above	Off
ABS ON	ABS is activated	On
	Other than the above	Off
RANGE	Selector lever: P and N positions	N/P
	Selector lever: R position	R
	Selector lever: D position	D
	Selector lever: D position (in OD OFF)	S
	Selector lever: L position	L
M GEAR POS	Always	1
G SEN SLOPE	Always	0%
G SEN CALIBRATION	When G sensor calibration is completed	DONE
	When G sensor calibration is not completed	YET
N IDLE STATUS	Always	Off
ENGBRKLVL	When the engine brake level of "ENGINE BRAKE ADJ". in "Work Support" is ON	On
	When the engine brake level of "ENGINE BRAKE ADJ". in "Work Support" is OFF	Off
DRIVE MODE STATS	Always	NOMAL
SNOW MODE	Always	Off
ECO MODE	Always	Off
NORMAL MODE	Always	Off
SPORT MODE	Always	Off
AIR BLDING STATE	Always	COMP
ELECTRIC OP DUTY	Always	0%
E-OP DUTY MON	Always	0%
ELECTRIC OP RELAY	Always	Off
E-OP RELAY MON	Always	Off
CVT-A*	—	—
CVT-B*	—	—

\*: These monitor items do not use.

## TERMINAL LAYOUT

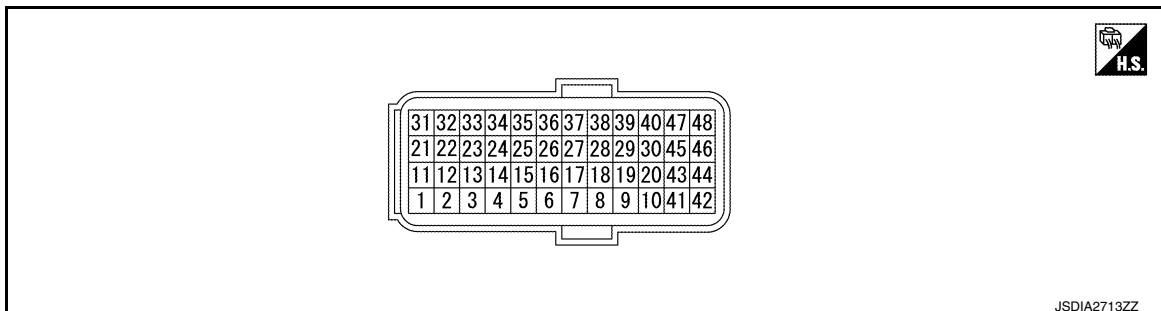


## INPUT/OUTPUT SIGNAL STANDARD

# TCM

< ECU DIAGNOSIS INFORMATION >






[CVT: RE0F10J]

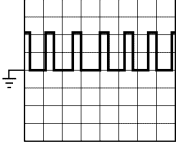Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal	Input/ Output			
2 (SB)	Ground	L position switch	Input	Ignition switch ON	Selector lever: "L" position	10 – 16 V
					Other than the above	0 V
4 (Y)	Ground	D position switch	Input		Selector lever: "D" position	10 – 16 V
					Other than the above	0 V
5 (L)	Ground	N position switch	Input		Selector lever: "N" position	10 – 16 V
					Other than the above	0 V
6 (BR)	Ground	R position switch	Input		Selector lever: "R" position	10 – 16 V
					Other than the above	0 V
7 (V)	Ground	P position switch	Input	Selector lever: "P" position	10 – 16 V	
				Other than the above	0 V	
11 (Y)	Ground	Sensor ground	—	Always	0 V	
12 (LG)	Ground	CVT fluid tempera- ture sensor	Output	Ignition switch ON	CVT fluid: Approx. 20°C (68°F)	2.01 – 2.05 V
					CVT fluid: Approx. 50°C (122°F)	1.45 – 1.50 V
					CVT fluid: Approx. 80°C (176°F)	0.90 – 0.94 V
16 (Y)	Ground	Secondary pres- sure sensor	Input	• Selector lever: "N" position • At idle	1.67 – 1.69 V	
17 (LG)	Ground	Primary pressure sensor	Input	• Selector lever: "N" position • At idle	0.90 – 0.92 V	
23 (P)	—	CAN-L	Input/ Output	—	—	
24 (LG)	Ground	Input speed sensor	Input	• Selector lever: "L" position • Vehicle speed: 20 km/h (12 MPH)	<div style="text-align: center;"> <p>800 Hz</p> <p>1mSec/div</p>  <p>5V/div</p> <p style="text-align: right;">JSDIA3770GB</p> </div>	
26 (LG)	Ground	Sensor power sup- ply	Output	Ignition switch: ON	5.0 V	
				Ignition switch: OFF	0 V	
27* (G)	—	—	—	—	—	

# TCM

< ECU DIAGNOSIS INFORMATION >

[CVT: RE0F10J]

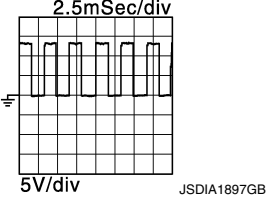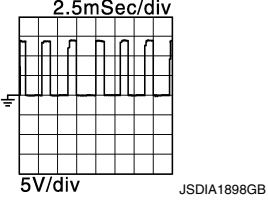
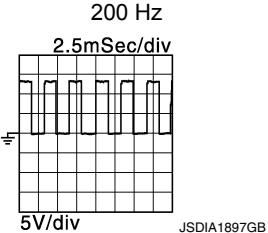
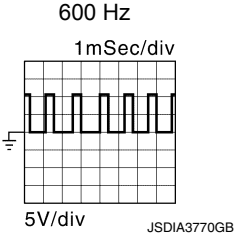
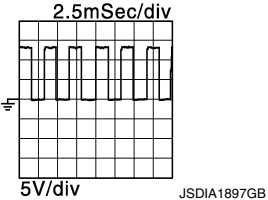
Terminal No. (Wire color)		Description		Condition	Value (Approx.)
+	-	Signal	Input/ Output		
30 (SB)	Ground	Line pressure solenoid valve	Output	<ul style="list-style-type: none"> <li>After engine warming up</li> <li>Selector lever: "N" position</li> <li>At idle</li> </ul>	
				<ul style="list-style-type: none"> <li>After engine warming up</li> <li>Selector lever: "N" position</li> <li>Depress the accelerator pedal fully</li> </ul>	
33 (L)	—	CAN-H	Input/ Output	—	—
34 (BR)	Ground	Output speed sensor	Input	<ul style="list-style-type: none"> <li>Selector lever: "L" position</li> <li>Vehicle speed: 20 km/h (12 MPH)</li> </ul>	
35 (LG)	Ground	Primary speed sensor	Input	<ul style="list-style-type: none"> <li>Selector lever: "L" position</li> <li>Vehicle speed: 20 km/h (12 MPH)</li> </ul>	
37 (BR)	Ground	Select solenoid valve	Output	<ul style="list-style-type: none"> <li>Engine started</li> <li>Vehicle is stopped</li> <li>Selector lever: "N" position</li> </ul>	

A  
B  
C  
TM  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# TCM

< ECU DIAGNOSIS INFORMATION >

[CVT: RE0F10J]

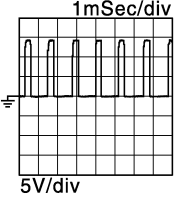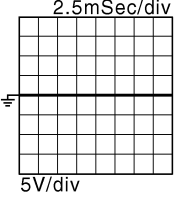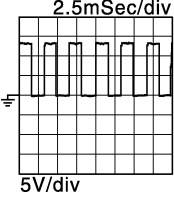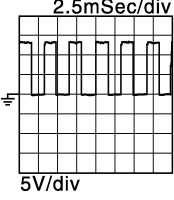Terminal No. (Wire color)		Description		Condition	Value (Approx.)
+	-	Signal	Input/ Output		
38 (Y)	Ground	Torque converter clutch solenoid valve	Output	<ul style="list-style-type: none"> <li>Selector lever: "D" position</li> <li>Accelerator pedal position: 1/8 or less</li> <li>Vehicle speed: 20 km/h (12 MPH) or more</li> </ul>	 <p style="text-align: right; font-size: small;">JSDIA1900GB</p>
				<ul style="list-style-type: none"> <li>Engine started</li> <li>Vehicle is stopped</li> </ul>	 <p style="text-align: right; font-size: small;">JSDIA1903GB</p>
39 (L)	Ground	Secondary pres- sure solenoid valve	Output	<ul style="list-style-type: none"> <li>Selector lever: "L" position</li> <li>Vehicle speed: 20 km/h (12 MPH)</li> </ul>	 <p style="text-align: right; font-size: small;">JSDIA1897GB</p>
40 (V)	Ground	Primary pressure solenoid valve	Output	<ul style="list-style-type: none"> <li>Selector lever: "L" position</li> <li>Vehicle speed: 20 km/h (12 MPH)</li> </ul>	 <p style="text-align: right; font-size: small;">JSDIA1897GB</p>
41 (B)	Ground	Ground	Output	Always	0 V
42 (B)	Ground	Ground	Output	Always	0 V
45 (LG)	Ground	Power (backup)	Input	Always	10 – 16 V
46 (LG)	Ground	Power (backup)	Input	Always	10 – 16 V
47 (Y)	Ground	Power supply	Input	Ignition switch: ON	10 – 16 V
				Ignition switch: OFF	0 V
48 (Y)	Ground	Power supply	Input	Ignition switch: ON	10 – 16 V
				Ignition switch: OFF	0 V

\*: This harness does not use.

## Fail-safe

INFOID:000000011355543

TCM has a fail-safe mode. The mode functions so that operation can be continued even if the signal circuit of the main electronically controlled input/output parts is damaged.

If the vehicle shows following behaviors including "poor acceleration", a malfunction of the applicable system is detected by TCM and the vehicle may be in a fail-safe mode. At this time, check the DTC code and perform inspection and repair according to the malfunction diagnosis procedures.



## Fail-safe function

DTC	Vehicle behavior	Conditions of vehicle	
P062F	<ul style="list-style-type: none"> <li>Not changed from normal driving</li> </ul>	—	A
P0705	<ul style="list-style-type: none"> <li>Shift position indicator on combination meter is not displayed</li> <li>Selector shock is large</li> <li>Start is slow</li> <li>Acceleration is slow</li> <li>Lock-up is not performed</li> </ul>	—	B
P0706	<ul style="list-style-type: none"> <li>Shift position indicator on combination meter is not displayed</li> <li>Selector shock is large</li> <li>Start is slow</li> <li>Acceleration is slow</li> <li>Lock-up is not performed</li> </ul>	—	C
P0711	<ul style="list-style-type: none"> <li>Start is slow</li> <li>Acceleration is slow</li> </ul>	Engine coolant temperature when engine start: Temp. $\geq 10^{\circ}\text{C}$ ( $50^{\circ}\text{F}$ )	TM
P0711	<ul style="list-style-type: none"> <li>Selector shock is large</li> <li>Start is slow</li> <li>Acceleration is slow</li> </ul>	Engine coolant temperature when engine start: $-35^{\circ}\text{C}$ ( $-31^{\circ}\text{F}$ ) $\leq$ Temp. $< 10^{\circ}\text{C}$ ( $50^{\circ}\text{F}$ )	E
	<ul style="list-style-type: none"> <li>Selector shock is large</li> <li>Start is slow</li> <li>Acceleration is slow</li> </ul>	Engine coolant temperature when engine start: Temp. $< -35^{\circ}\text{C}$ ( $-31^{\circ}\text{F}$ )	F
	<ul style="list-style-type: none"> <li>Start is slow</li> <li>Acceleration is slow</li> </ul>	Engine coolant temperature when engine start: Temp. $\geq 10^{\circ}\text{C}$ ( $50^{\circ}\text{F}$ )	G
P0712	<ul style="list-style-type: none"> <li>Selector shock is large</li> <li>Start is slow</li> <li>Acceleration is slow</li> </ul>	Engine coolant temperature when engine start: $-35^{\circ}\text{C}$ ( $-31^{\circ}\text{F}$ ) $\leq$ Temp. $< 10^{\circ}\text{C}$ ( $50^{\circ}\text{F}$ )	H
	<ul style="list-style-type: none"> <li>Selector shock is large</li> <li>Start is slow</li> <li>Acceleration is slow</li> </ul>	Engine coolant temperature when engine start: Temp. $< -35^{\circ}\text{C}$ ( $-31^{\circ}\text{F}$ )	I
	<ul style="list-style-type: none"> <li>Start is slow</li> <li>Acceleration is slow</li> </ul>	Engine coolant temperature when engine start: Temp. $\geq 10^{\circ}\text{C}$ ( $50^{\circ}\text{F}$ )	J
P0713	<ul style="list-style-type: none"> <li>Start is slow</li> <li>Acceleration is slow</li> </ul>	Engine coolant temperature when engine start: Temp. $\geq 10^{\circ}\text{C}$ ( $50^{\circ}\text{F}$ )	K
	<ul style="list-style-type: none"> <li>Selector shock is large</li> <li>Start is slow</li> <li>Acceleration is slow</li> </ul>	Engine coolant temperature when engine start: $-35^{\circ}\text{C}$ ( $-31^{\circ}\text{F}$ ) $\leq$ Temp. $< 10^{\circ}\text{C}$ ( $50^{\circ}\text{F}$ )	L
	<ul style="list-style-type: none"> <li>Selector shock is large</li> <li>Start is slow</li> <li>Acceleration is slow</li> </ul>	Engine coolant temperature when engine start: Temp. $< -35^{\circ}\text{C}$ ( $-31^{\circ}\text{F}$ )	M
P0715	<ul style="list-style-type: none"> <li>Start is slow</li> <li>Acceleration is slow</li> <li>Lock-up is not performed</li> </ul>	—	N
P0717	<ul style="list-style-type: none"> <li>Start is slow</li> <li>Acceleration is slow</li> <li>Lock-up is not performed</li> </ul>	—	O
P0740	<ul style="list-style-type: none"> <li>Start is slow</li> <li>Acceleration is slow</li> <li>Lock-up is not performed</li> </ul>	—	P
P0743	<ul style="list-style-type: none"> <li>Start is slow</li> <li>Acceleration is slow</li> <li>Lock-up is not performed</li> </ul>	—	
P0744	<ul style="list-style-type: none"> <li>Start is slow</li> <li>Acceleration is slow</li> <li>Lock-up is not performed</li> </ul>	—	

# TCM

## < ECU DIAGNOSIS INFORMATION >

[CVT: RE0F10J]

DTC	Vehicle behavior	Conditions of vehicle
P0746	<ul style="list-style-type: none"> <li>• Selector shock is large</li> <li>• Start is slow</li> <li>• Acceleration is slow</li> <li>• Lock-up is not performed</li> </ul>	—
P0776	<ul style="list-style-type: none"> <li>• Selector shock is large</li> <li>• Start is slow</li> <li>• Acceleration is slow</li> <li>• Lock-up is not performed</li> <li>• Vehicle speed is not increased</li> </ul>	When a malfunction occurs on the low oil pressure side
	<ul style="list-style-type: none"> <li>• Selector shock is large</li> <li>• Start is slow</li> <li>• Acceleration is slow</li> <li>• Lock-up is not performed</li> </ul>	When a malfunction occurs on the high oil pressure side
P0778	<ul style="list-style-type: none"> <li>• Selector shock is large</li> <li>• Start is slow</li> <li>• Acceleration is slow</li> <li>• Lock-up is not performed</li> </ul>	—
P0779	<ul style="list-style-type: none"> <li>• Selector shock is large</li> <li>• Start is slow</li> <li>• Acceleration is slow</li> <li>• Lock-up is not performed</li> </ul>	
P0841	<ul style="list-style-type: none"> <li>• Not changed from normal driving</li> </ul>	
P0847	<ul style="list-style-type: none"> <li>• Not changed from normal driving</li> </ul>	—
P0848	<ul style="list-style-type: none"> <li>• Not changed from normal driving</li> </ul>	—
P084C	<ul style="list-style-type: none"> <li>• Not changed from normal driving</li> </ul>	
P084D	<ul style="list-style-type: none"> <li>• Not changed from normal driving</li> </ul>	
P0863	<ul style="list-style-type: none"> <li>• Selector shock is large</li> <li>• Start is slow</li> <li>• Acceleration is slow</li> <li>• Lock-up is not performed</li> </ul>	—
P0890	<ul style="list-style-type: none"> <li>• Selector shock is large</li> <li>• Start is slow</li> <li>• Acceleration is slow</li> <li>• Lock-up is not performed</li> <li>• Vehicle speed is not increased</li> </ul>	
P0962	<ul style="list-style-type: none"> <li>• Selector shock is large</li> <li>• Start is slow</li> <li>• Acceleration is slow</li> <li>• Lock-up is not performed</li> </ul>	—
P0963	<ul style="list-style-type: none"> <li>• Selector shock is large</li> <li>• Start is slow</li> <li>• Acceleration is slow</li> <li>• Lock-up is not performed</li> </ul>	—
P0965	<ul style="list-style-type: none"> <li>• Selector shock is large</li> <li>• Start is slow</li> <li>• Acceleration is slow</li> <li>• Lock-up is not performed</li> </ul>	When a malfunction occurs on the low oil pressure side
	<ul style="list-style-type: none"> <li>• Selector shock is large</li> <li>• Lock-up is not performed</li> </ul>	When a malfunction occurs on the high oil pressure side
P0966	<ul style="list-style-type: none"> <li>• Selector shock is large</li> <li>• Start is slow</li> <li>• Acceleration is slow</li> <li>• Lock-up is not performed</li> </ul>	—
P0967	<ul style="list-style-type: none"> <li>• Selector shock is large</li> <li>• Start is slow</li> <li>• Acceleration is slow</li> <li>• Lock-up is not performed</li> </ul>	—

# TCM

< ECU DIAGNOSIS INFORMATION >

[CVT: RE0F10J]

DTC	Vehicle behavior	Conditions of vehicle
P2765	<ul style="list-style-type: none"> <li>Start is slow</li> <li>Acceleration is slow</li> <li>Lock-up is not performed</li> </ul>	—
P2813	<ul style="list-style-type: none"> <li>Selector shock is large</li> <li>Start is slow</li> <li>Acceleration is slow</li> <li>Vehicle speed is not increased</li> </ul>	When a malfunction occurs on the low oil pressure side
	<ul style="list-style-type: none"> <li>Selector shock is large</li> </ul>	When a malfunction occurs on the high oil pressure side
P2814	<ul style="list-style-type: none"> <li>Selector shock is large</li> </ul>	—
P2815	<ul style="list-style-type: none"> <li>Selector shock is large</li> </ul>	—
U0073	<ul style="list-style-type: none"> <li>Selector shock is large</li> <li>Start is slow</li> <li>Acceleration is slow</li> <li>Lock-up is not performed</li> </ul>	—
U0100	<ul style="list-style-type: none"> <li>Selector shock is large</li> <li>Start is slow</li> <li>Acceleration is slow</li> <li>Lock-up is not performed</li> </ul>	—
U0102	<ul style="list-style-type: none"> <li>Not changed from normal driving</li> </ul>	—
U0140	<ul style="list-style-type: none"> <li>Not changed from normal driving</li> </ul>	—
U0141	<ul style="list-style-type: none"> <li>Not changed from normal driving</li> </ul>	—
U0155	<ul style="list-style-type: none"> <li>Not changed from normal driving</li> </ul>	—
U0300	<ul style="list-style-type: none"> <li>Selector shock is large</li> <li>Start is slow</li> <li>Acceleration is slow</li> <li>Lock-up is not performed</li> </ul>	—
U1000	<ul style="list-style-type: none"> <li>Not changed from normal driving</li> </ul>	—
U1117	<ul style="list-style-type: none"> <li>Not changed from normal driving</li> </ul>	—

## Protection Control

INFOID:000000011355544

The TCM becomes the protection control status temporarily to protect the safety when the safety of TCM and transmission is lost. It automatically returns to the normal status if the safety is secured.  
The TCM has the following protection control.

### CONTROL FOR WHEEL SPIN

Control	When a wheel spin is detected, the engine output and gear ratio are limited and the line pressure is increased. Limits engine output when a wheel spin occurs in any of right and left drive wheels.
Vehicle behavior in control	If the accelerator is kept depressing during wheel spin, the engine revolution and vehicle speed are limited to a certain degree.
Normal return condition	Wheel spin convergence returns the control to the normal control.

### TORQUE IS REDUCED WHEN DRIVING WITH THE REVERSE GEAR

Control	Engine output is controlled according to a vehicle speed while reversing the vehicle.
Vehicle behavior in control	Power performance may be lowered while reversing the vehicle.
Normal return condition	Torque returns to normal by positioning the selector lever in a range other than "R" position.

### CONTROL WHEN FLUID TEMPERATURE IS HIGH

Control	When the CVT fluid temperature is high, the gear shift permission maximum revolution and the maximum torque are reduced than usual to prevent increase of the oil temperature.
Vehicle behavior in control	Power performance may be lowered, compared to normal control.
Normal return condition	The control returns to the normal control when CVT fluid temperature is lowered.

REVERSE PROHIBIT CONTROL

Control	The reverse brake is controlled to avoid becoming engaged when the selector lever is set in "R" position while driving in forward direction at more than the specified speed.
Vehicle behavior in control	If the selector lever is put at "R" position when driving with the forward gear, the gear becomes neutral, not reverse.
Normal return condition	The control returns to normal control when the vehicle is driven at low speeds. (The reverse brake becomes engaged.)

DTC Inspection Priority Chart

INFOID:0000000011355545

If multiple malfunction codes are detected at the same time, check each code according to the DTC check priority list below.

Priority	DTC (Diagnostic Trouble Code)	Reference
1	P0863 CONTROL UNIT (CAN)	<a href="#">TM-363, "DTC Logic"</a>
	U0073 COMM BUS A OFF	<a href="#">TM-308, "DTC Logic"</a>
	U0100 LOST COMM (ECM A)	<a href="#">TM-309, "DTC Logic"</a>
	U0102 LOST COMM (TRANSFER)	<a href="#">TM-310, "DTC Logic"</a>
	U0140 LOST COMM (BCM)	<a href="#">TM-311, "DTC Logic"</a>
	U0141 LOST COMM (BCM A)	<a href="#">TM-312, "DTC Logic"</a>
	U0155 LOST COMM (IPC)	<a href="#">TM-313, "DTC Logic"</a>
	U0300 CAN COMM DATA	<a href="#">TM-314, "DTC Logic"</a>
	U1000 CAN COMM CIRC	<a href="#">TM-315, "DTC Logic"</a>
	U1117 LOST COMM (ABS)	<a href="#">TM-316, "DTC Logic"</a>
2	P0740 TORQUE CONVERTER	<a href="#">TM-340, "DTC Logic"</a>
	P0743 TORQUE CONVERTER	<a href="#">TM-342, "DTC Logic"</a>
	P0778 PC SOLENOID B	<a href="#">TM-350, "DTC Logic"</a>
	P0779 PC SOLENOID B	<a href="#">TM-352, "DTC Logic"</a>
	P0962 PC SOLENOID A	<a href="#">TM-366, "DTC Logic"</a>
	P0963 PC SOLENOID A	<a href="#">TM-368, "DTC Logic"</a>
	P0966 PC SOLENOID B	<a href="#">TM-372, "DTC Logic"</a>
	P0967 PC SOLENOID B	<a href="#">TM-374, "DTC Logic"</a>
	P2814 SELECT SOLENOID	<a href="#">TM-381, "DTC Logic"</a>
P2815 SELECT SOLENOID	<a href="#">TM-383, "DTC Logic"</a>	

# TCM

< ECU DIAGNOSIS INFORMATION >

[CVT: RE0F10J]

Priority	DTC (Diagnostic Trouble Code)	Reference
3	P062F EEPROM	<a href="#">TM-317, "DTC Logic"</a>
	P0705 T/M RANGE SENSOR A	<a href="#">TM-318, "DTC Logic"</a>
	P0706 T/M RANGE SENSOR A	<a href="#">TM-324, "DTC Logic"</a>
	P0711 FLUID TEMP SENSOR A	<a href="#">TM-327, "DTC Logic"</a>
	P0712 FLUID TEMP SENSOR A	<a href="#">TM-330, "DTC Logic"</a>
	P0713 FLUID TEMP SENSOR A	<a href="#">TM-332, "DTC Logic"</a>
	P0715 INPUT SPEED SENSOR A	<a href="#">TM-334, "DTC Logic"</a>
	P0717 INPUT SPEED SENSOR A	<a href="#">TM-337, "DTC Logic"</a>
	P0841 FLUID PRESS SEN/SW A	<a href="#">TM-354, "DTC Logic"</a>
	P0847 FLUID PRESS SEN/SW B	<a href="#">TM-355, "DTC Logic"</a>
	P0848 FLUID PRESS SEN/SW B	<a href="#">TM-357, "DTC Logic"</a>
	P084C FLUID PRESS SEN/SW H	<a href="#">TM-359, "DTC Logic"</a>
	P084D FLUID PRESS SEN/SW H	<a href="#">TM-361, "DTC Logic"</a>
	P0890 TCM	<a href="#">TM-364, "DTC Logic"</a>
	P2765 INPUT SPEED SENSOR B	<a href="#">TM-376, "DTC Logic"</a>
4	P0744 TORQUE CONVERTER	<a href="#">TM-344, "DTC Logic"</a>
	P0746 PC SOLENOID A	<a href="#">TM-346, "DTC Logic"</a>
	P0776 PC SOLENOID B	<a href="#">TM-348, "DTC Logic"</a>
	P0965 PC SOLENOID B	<a href="#">TM-370, "DTC Logic"</a>
	P2813 SELECT SOLENOID	<a href="#">TM-379, "DTC Logic"</a>

## DTC Index

INFOID:000000011355546

### NOTE:

- If multiple malfunction codes are detected at the same time, check each code according to the "DTC check priority list". [TM-276, "DTC Inspection Priority Chart"](#).
- The ignition counter is displayed in "FFD". Refer to [TM-261, "CONSULT Function"](#).

DTC*1,*2		Items (CONSULT screen terms)	Trip	MIL	Reference
GST	CONSULT (TRANSMISSION)				
P062F	P062F	EEPROM	1	ON	<a href="#">TM-317</a>
P0705	P0705	T/M RANGE SENSOR A	2	ON	<a href="#">TM-318</a>
P0706	P0706	T/M RANGE SENSOR A	2	ON	<a href="#">TM-324</a>
P0711	P0711	FLUID TEMP SENSOR A	2	ON	<a href="#">TM-327</a>
P0712	P0712	FLUID TEMP SENSOR A	2	ON	<a href="#">TM-330</a>
P0713	P0713	FLUID TEMP SENSOR A	2	ON	<a href="#">TM-332</a>
P0715	P0715	INPUT SPEED SENSOR A	2	ON	<a href="#">TM-334</a>
P0717	P0717	INPUT SPEED SENSOR A	2	ON	<a href="#">TM-337</a>
P0740	P0740	TORQUE CONVERTER	2	ON	<a href="#">TM-340</a>
P0743	P0743	TORQUE CONVERTER	2	ON	<a href="#">TM-342</a>
P0744	P0744	TORQUE CONVERTER	2	ON	<a href="#">TM-344</a>
P0746	P0746	PC SOLENOID A	2	ON	<a href="#">TM-346</a>
P0776	P0776	PC SOLENOID B	2	ON	<a href="#">TM-348</a>
P0778	P0778	PC SOLENOID B	2	ON	<a href="#">TM-350</a>
P0779	P0779	PC SOLENOID B	2	ON	<a href="#">TM-352</a>
P0841	P0841	FLUID PRESS SEN/SW A	2	ON	<a href="#">TM-354</a>

# TCM

< ECU DIAGNOSIS INFORMATION >

[CVT: RE0F10J]

DTC*1, *2		Items (CONSULT screen terms)	Trip	MIL	Reference
GST	CONSULT (TRANSMISSION)				
P0847	P0847	FLUID PRESS SEN/SW B	2	ON	<a href="#">TM-355</a>
P0848	P0848	FLUID PRESS SEN/SW B	2	ON	<a href="#">TM-357</a>
P084C	P084C	FLUID PRESS SEN/SW H	2	ON	<a href="#">TM-359</a>
P084D	P084D	FLUID PRESS SEN/SW H	2	ON	<a href="#">TM-361</a>
P0863	P0863	CONTROL UNIT (CAN)	1	ON	<a href="#">TM-363</a>
P0890	P0890	TCM	1	ON	<a href="#">TM-364</a>
P0962	P0962	PC SOLENOID A	2	ON	<a href="#">TM-366</a>
P0963	P0963	PC SOLENOID A	2	ON	<a href="#">TM-368</a>
P0965	P0965	PC SOLENOID B	2	ON	<a href="#">TM-370</a>
P0966	P0966	PC SOLENOID B	2	ON	<a href="#">TM-372</a>
P0967	P0967	PC SOLENOID B	2	ON	<a href="#">TM-374</a>
P2765	P2765	INPUT SPEED SENSOR B	2	ON	<a href="#">TM-376</a>
P2813	P2813	SELECT SOLENOID	2	ON	<a href="#">TM-379</a>
P2814	P2814	SELECT SOLENOID	2	ON	<a href="#">TM-381</a>
P2815	P2815	SELECT SOLENOID	2	ON	<a href="#">TM-383</a>
U0073	U0073	COMM BUS A OFF	1	ON	<a href="#">TM-308</a>
U0100	U0100	LOST COMM (ECM A)	1	ON	<a href="#">TM-309</a>
—	U0102	LOST COMM (TRANSFER)	1	—	<a href="#">TM-310</a>
—	U0140	LOST COMM (BCM)	1	—	<a href="#">TM-311</a>
—	U0141	LOST COMM (BCM A)	1	—	<a href="#">TM-312</a>
—	U0155	LOST COMM (IPC)	1	—	<a href="#">TM-313</a>
—	U0300	CAN COMM DATA	1	—	<a href="#">TM-314</a>
—	U1000	CAN COMM CIRC	1	—	<a href="#">TM-315</a>
—	U1117	LOST COMM (ABS)	1	—	<a href="#">TM-316</a>

\*1: These numbers are specified by SAE J2012/ISO 15031-6.


\*2: The DTC number of the 1st trip is the same as the DTC number.

# WIRING DIAGRAM

## CVT CONTROL SYSTEM

Wiring diagram

INFOID:000000011355547

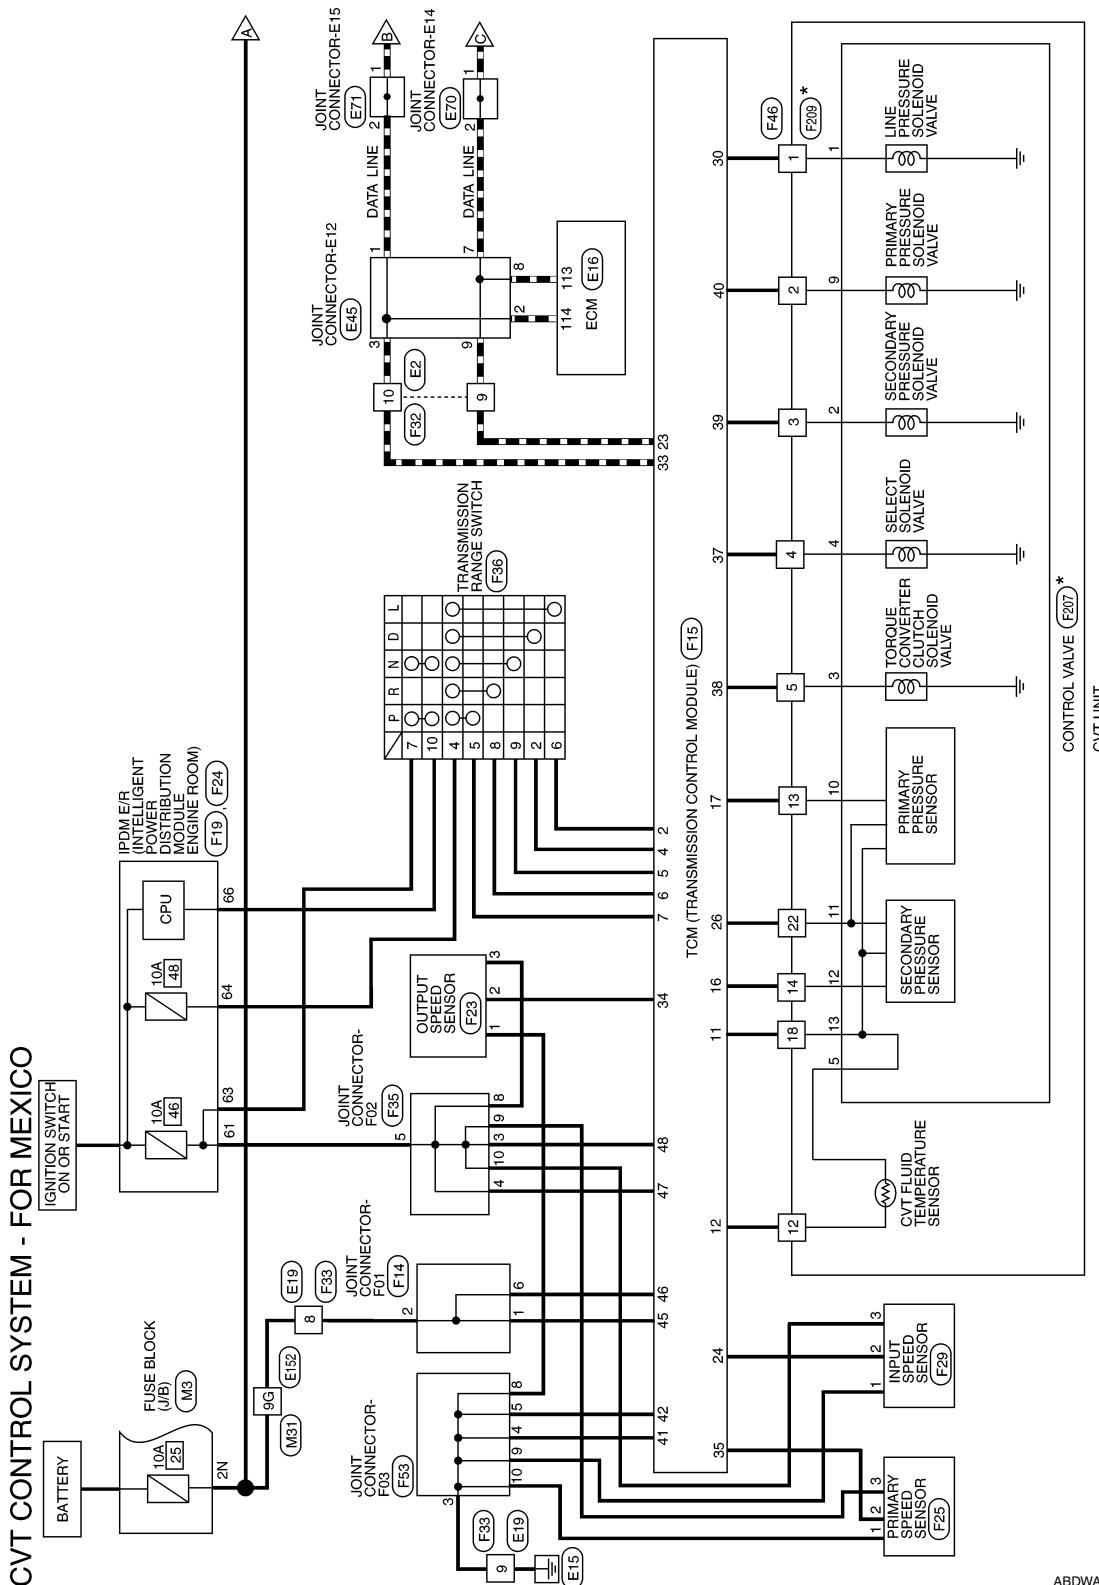

\* THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT" OF PG SECTION.


ABDWA0838GB

A  
B  
C  
TM  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# CVT CONTROL SYSTEM

< WIRING DIAGRAM >

[CVT: RE0F10J]

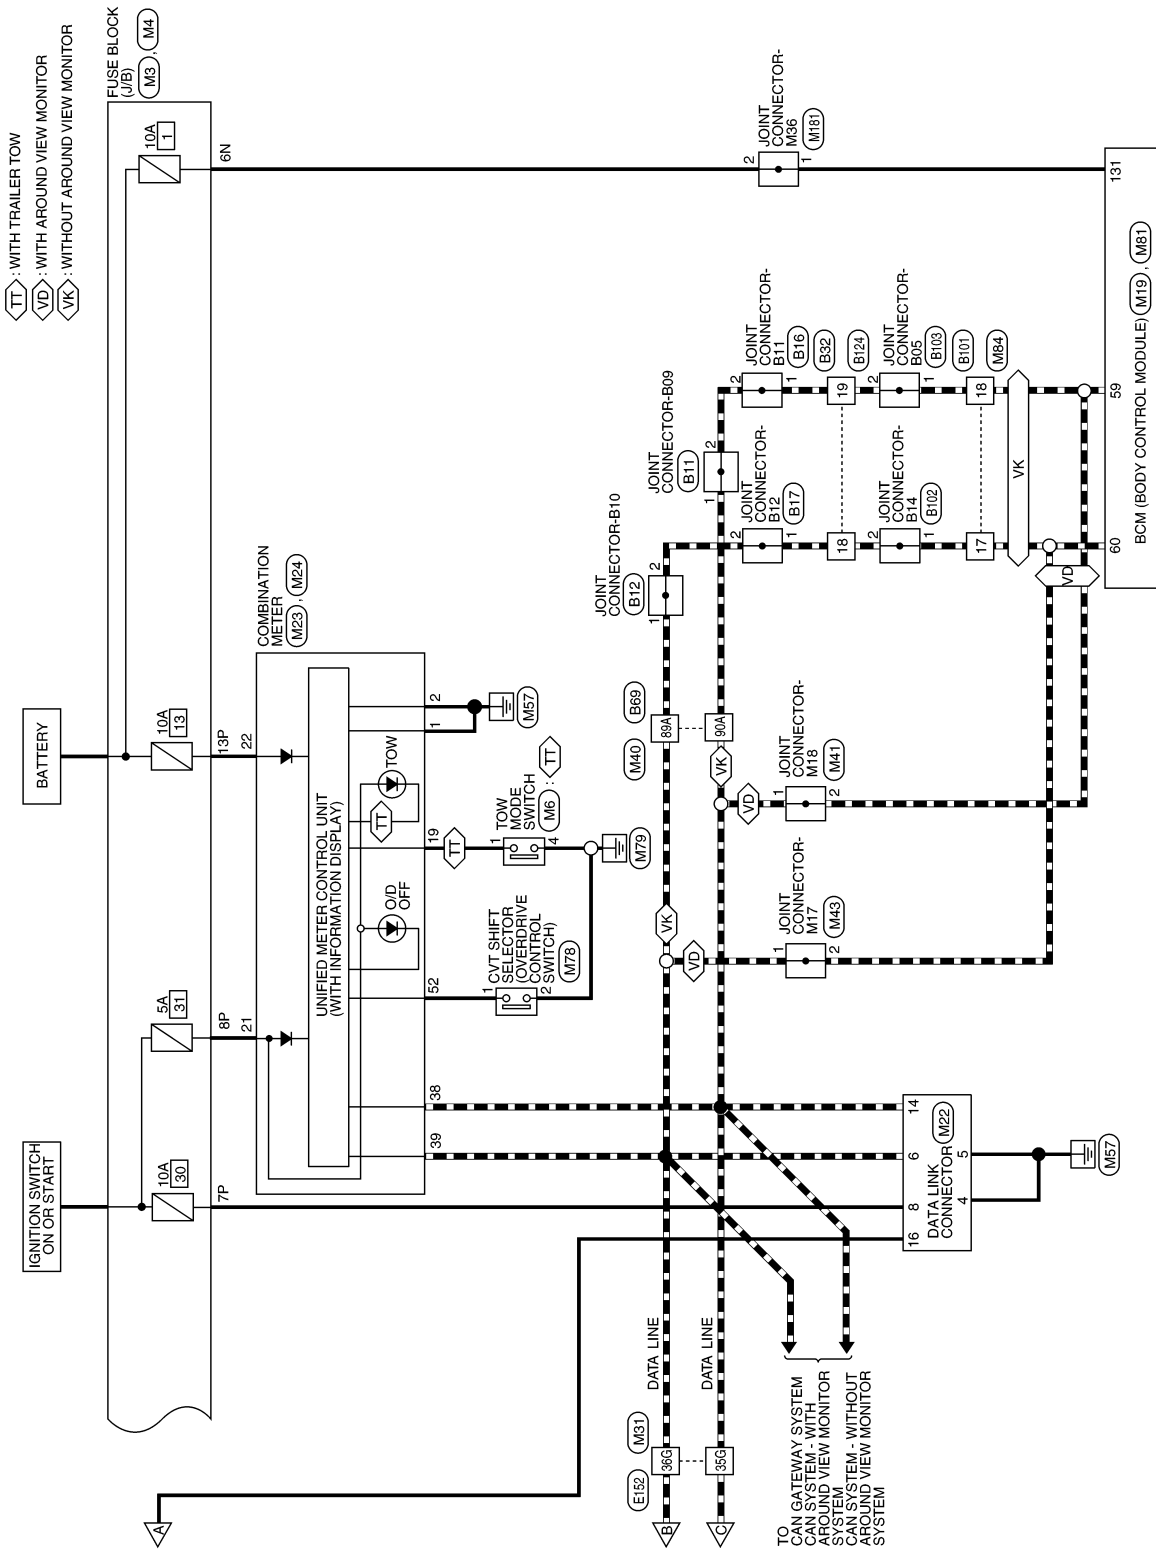

ABDWA0839GB




# CVT CONTROL SYSTEM
 
< WIRING DIAGRAM >

[CVT: RE0F10J]

## CVT CONTROL SYSTEM CONNECTORS - FOR MEXICO

Connector No.	M3
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
2N	BG	-
6N	W	-

Connector No.	M4
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
7P	LG	-
8P	BG	-
13P	W	-

Connector No.	M6
Connector Name	TOW MODE SWITCH
Connector Color	GRAY

 


Terminal No.	Color of Wire	Signal Name
1	SB	-
4	B	-

Connector No.	M19
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BLACK

 


Terminal No.	Color of Wire	Signal Name
59	P	CAN-L
60	L	CAN-H

Connector No.	M22
Connector Name	DATA LINK CONNECTOR
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
4	B	-
5	B	-
6	L	-
8	LG	-
14	P	-
16	BG	-

Connector No.	M23
Connector Name	COMBINATION METER
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
52	P	O/D OFF/SPORTS SW


A  
B  
C  
TM  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# CVT CONTROL SYSTEM
 
< WIRING DIAGRAM >


[CVT: RE0F10J]

Connector No.	M24
Connector Name	COMBINATION METER
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1	B	GND1
2	B	GND2
19	SB	TOW MODE SW
21	BG	IGN
22	W	BAT
38	P	CAN-L
39	L	CAN-H

Connector No.	M31
Connector Name	WIRE TO WIRE
Connector Color	WHITE

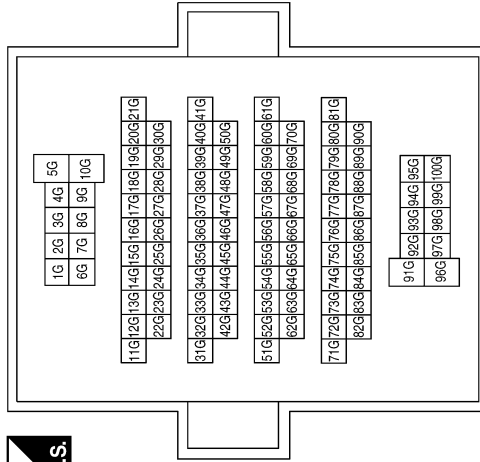


Terminal No.	Color of Wire	Signal Name
9G	BG	-
35G	P	-
36G	L	-

Connector No.	M41
Connector Name	JOINT CONNECTOR-M18
Connector Color	WHITE

 


Terminal No.	Color of Wire	Signal Name
1	P	-
2	P	-

Connector No.	M40
Connector Name	WIRE TO WIRE
Connector Color	GRAY

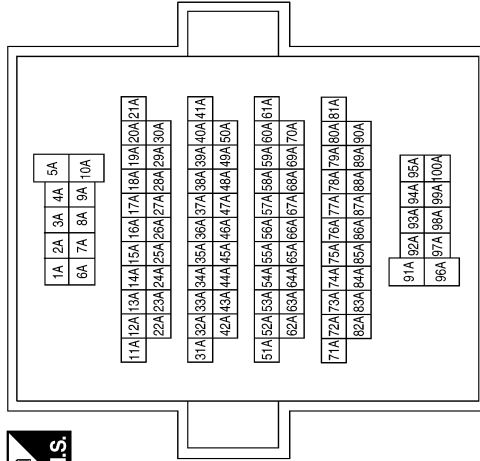

Terminal No.	Color of Wire	Signal Name
89A	L	-
90A	P	-

Connector No.	M78
Connector Name	CVT SHIFT SELECTOR
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
1	P	-
2	B	-

ABDIA1091GB

# CVT CONTROL SYSTEM

< WIRING DIAGRAM >

 
[CVT: RE0F10J]

Connector No.	M181
Connector Name	JOINT CONNECTOR-M36
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1	W	-
2	W	-

Connector No.	M84
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
17	L	-
18	P	-

Connector No.	M81
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE

 


Terminal No.	Color of Wire	Signal Name
131	W	BAT BCM FUSE

Connector No.	E19
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 


Connector No.	E16
Connector Name	ECM (FOR MEXICO)
Connector Color	GRAY

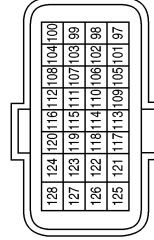

Terminal No.	Color of Wire	Signal Name
8	LG	-
9	B	-

Connector No.	E2
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
9	P	-
10	L	-

ABDIA1535GB


A  
B  
C  
TM  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# CVT CONTROL SYSTEM
 
< WIRING DIAGRAM >

[CVT: RE0F10J]

Connector No.	E45
Connector Name	JOINT CONNECTOR-E12
Connector Color	BLUE



Terminal No.	Color of Wire	Signal Name
1	L	-
2	L	-
3	L	-
7	P	-
8	P	-
9	P	-

Connector No.	E70
Connector Name	JOINT CONNECTOR-E14
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
1	P	-
2	P	-

Connector No.	E71
Connector Name	JOINT CONNECTOR-E15
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	L	-
2	L	-

Connector No.	E152
Connector Name	WIRE TO WIRE
Connector Color	WHITE

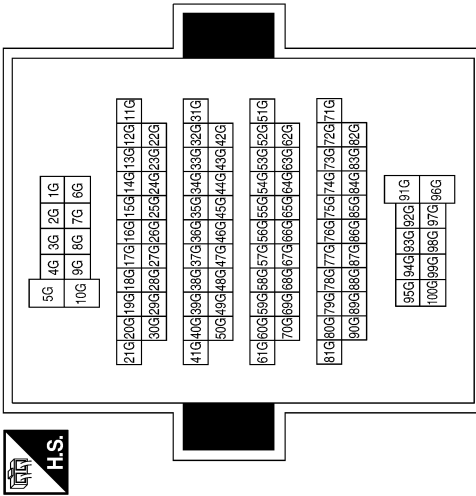

Terminal No.	Color of Wire	Signal Name
9G	LG	-
35G	P	-
36G	L	-

Connector No.	F14
Connector Name	JOINT CONNECTOR-F01
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	LG	-
2	LG	-
6	LG	-

ABDIA1093GB

# CVT CONTROL SYSTEM


< WIRING DIAGRAM >

[CVT: RE0F10J]

Terminal No.	Color of Wire	Signal Name
32	-	-
33	L	CAN-H
34	BR	OUTPUT SPEED SENS
35	LG	PRI SPEED SENS
36	-	-
37	BR	SELECT SOL VALVE
38	Y	TCC SOLE VALVE
39	L	SEC PRESS SOLE VALVE
40	V	PRI PRESS SOLE VALVE
41	B	GND
42	B	GND
43	-	-
44	-	-
45	LG	BATT
46	LG	BATT
47	Y	VIGN
48	Y	VIGN

Terminal No.	Color of Wire	Signal Name
11	Y	SENSOR GND
12	LG	CVT FLUID TEMP SENS
13	-	-
14	-	-
15	-	-
16	Y	SEC PRESS SENS
17	LG	PRI PRESS SENS
18	-	-
19	-	-
20	-	-
21	-	-
22	-	-
23	P	CAN-L
24	LG	INPUT SPEED SENS
25	-	-
26	LG	SENS PWR SUPPLY
27	-	-
28	-	-
29	-	-
30	SB	LINE PRESS SOL VALVE
31	-	-

Connector No.	F15
Connector Name	TCM (TRANSMISSION CONTROL MODULE) (FOR MEXICO)
Connector Color	BLACK

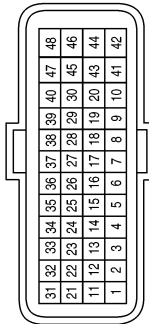


Terminal No.	Color of Wire	Signal Name
1	-	-
2	SB	L RANGE SW
3	-	-
4	Y	D RANGE SW
5	L	N RANGE SW
6	BR	R RANGE SW
7	V	P RANGE SW
8	-	-
9	-	-
10	-	-

Connector No.	F23
Connector Name	OUTPUT SPEED SENSOR
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	B	-
2	BR	-
3	Y	-

Connector No.	F19
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
61	Y	ATECU

ABDIA1536GB

A  
B  
C  
TM  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# CVT CONTROL SYSTEM

< WIRING DIAGRAM >

[CVT: RE0F10J]

Connector No.	F29
Connector Name	INPUT SPEED SENSOR
Connector Color	BLACK



 
Terminal No.	Color of Wire	Signal Name
1	B	-
2	LG	-
3	Y	-

Connector No.	F25
Connector Name	PRIMARY SPEED SENSOR
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
1	B	-
2	LG	-
3	Y	-

Connector No.	F24
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
63	L	INHIBIT SW
64	LG	START IG EGI
66	G	NP SW

Connector No.	F35
Connector Name	JOINT CONNECTOR-F02
Connector Color	BLACK

 


Terminal No.	Color of Wire	Signal Name
3	Y	-
4	Y	-
5	Y	-
8	Y	-
9	Y	-
10	Y	-

Connector No.	F33
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
8	LG	-
9	B	-

Connector No.	F32
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
9	P	-
10	L	-


ABDIA1095GB

# CVT CONTROL SYSTEM
 
< WIRING DIAGRAM >


[CVT: RE0F10J]

Connector No.	F36
Connector Name	TRANSMISSION RANGE SWITCH
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	-	-
2	Y	-
3	-	-
4	LG	-
5	V	-
6	SB	-
7	L	-
8	BR	-
9	L	-
10	G	-


Connector No.	F46
Connector Name	CVT UNIT
Connector Color	GRAY

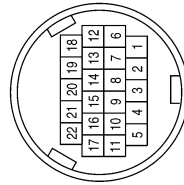

Terminal No.	Color of Wire	Signal Name
7	-	-
8	-	-
9	-	-
10	-	-
11	-	-
12	LG	-
13	LG	-
14	Y	-
15	-	-
16	-	-
17	-	-
18	Y	-
19	-	-
20	-	-
21	-	-
22	LG	-

Terminal No.	Color of Wire	Signal Name
1	SB	-
2	V	-
3	L	-
4	BR	-
5	Y	-
6	-	-

Connector No.	F53
Connector Name	JOINT CONNECTOR-F03
Connector Color	BLACK

 

Terminal No.	Color of Wire	Signal Name
3	B	-
4	B	-
5	B	-
8	B	-
9	B	-
10	B	-

ABDIA1096GB

A  
B  
C  
TM  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# CVT CONTROL SYSTEM

< WIRING DIAGRAM >

[CVT: RE0F10J]

 
Terminal No.	Color of Wire	Signal Name
6	-	-
7	-	-
8	-	-
9	O	-
10	L	-
11	W	-
12	R	-
13	B/Y	-
14	-	-

Connector No.	F207
Connector Name	CONTROL VALVE
Connector Color	-



Terminal No.	Color of Wire	Signal Name
1	GR	-
2	BR	-
3	Y	-
4	P	-
5	B	-


Connector No.	B11
Connector Name	JOINT CONNECTOR-B09
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	P	-
2	P	-

Terminal No.	Color of Wire	Signal Name
7	-	-
8	-	-
9	-	-
10	-	-
11	-	-
12	V	-
13	LG	-
14	Y	-
15	-	-
16	-	-
17	-	-
18	Y	-
19	-	-
20	-	-
21	-	-
22	LG	-

Connector No.	F209
Connector Name	CVT UNIT
Connector Color	BLACK

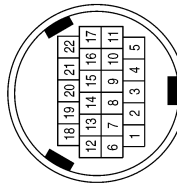

Terminal No.	Color of Wire	Signal Name
1	BR	-
2	LG	-
3	L	-
4	Y	-
5	BR	-
6	-	-

ABDIA1097GB



# CVT CONTROL SYSTEM

< WIRING DIAGRAM >

 
[CVT: RE0F10J]

Connector No.	B17
Connector Name	JOINT CONNECTOR-B12
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1	L	-
2	L	-

Connector No.	B16
Connector Name	JOINT CONNECTOR-B11
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1	P	-
2	P	-

Connector No.	B12
Connector Name	JOINT CONNECTOR-B10
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
1	L	-
2	L	-

Connector No.	B69
Connector Name	WIRE TO WIRE
Connector Color	GRAY

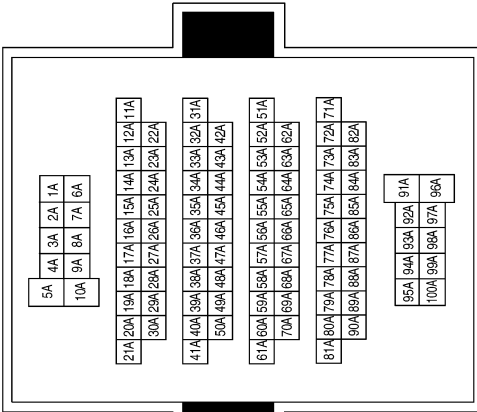

Connector No.	B32
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
18	L	-
19	P	-

ABDIA1098GB

A  
B  
C  
TM  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# CVT CONTROL SYSTEM

< WIRING DIAGRAM >

[CVT: RE0F10J]

Connector No.	B103
Connector Name	JOINT CONNECTOR-B05
Connector Color	WHITE



 
Terminal No.	Color of Wire	Signal Name
1	P	-
2	P	-

Connector No.	B102
Connector Name	JOINT CONNECTOR-B14
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1	L	-
2	L	-

Connector No.	B101
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
17	L	-
18	P	-

Connector No.	B124
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
18	L	-
19	P	-

ABDIA1537GB

# CVT SHIFT LOCK SYSTEM

< WIRING DIAGRAM >


[CVT: RE0F10J]

## CVT SHIFT LOCK SYSTEM

Wiring diagram

INFOID:000000011355548

### CVT SHIFT LOCK SYSTEM

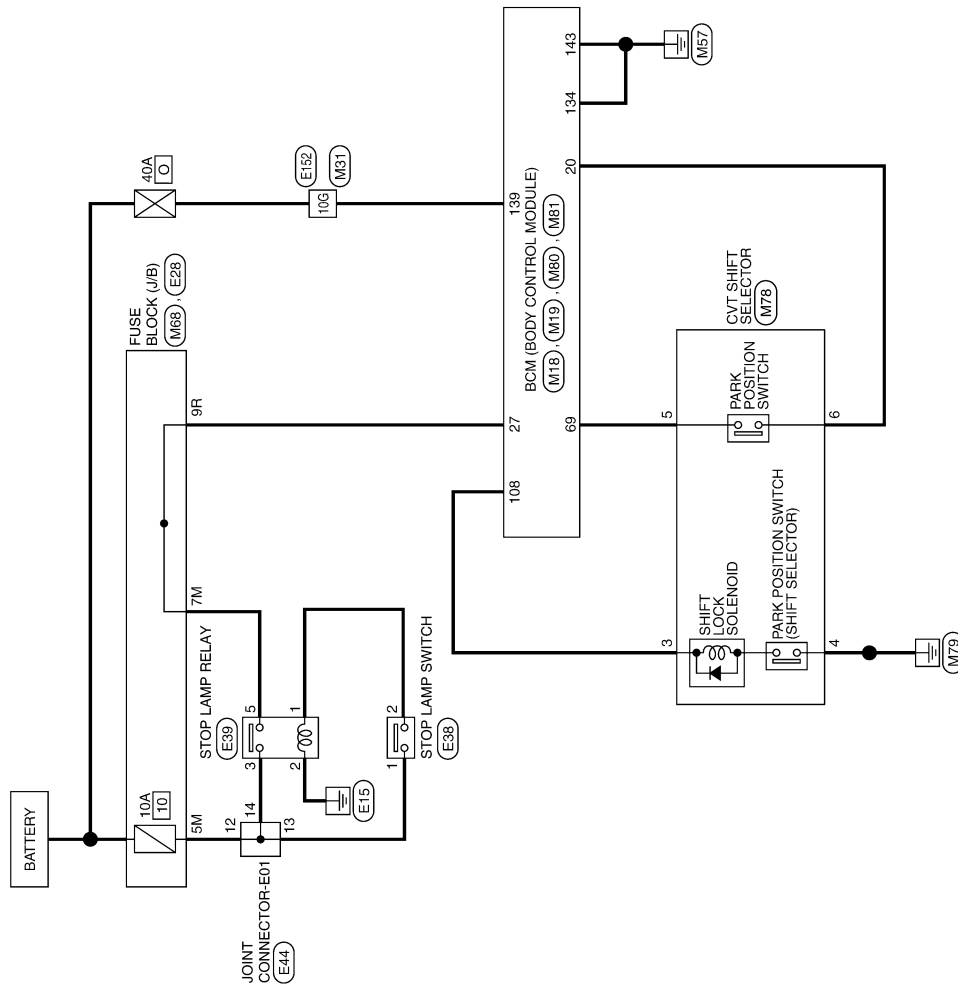

AADWA0264GB

A  
B  
C  
TM  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# CVT SHIFT LOCK SYSTEM

< WIRING DIAGRAM >

[CVT: RE0F10J]

## CVT SHIFT LOCK SYSTEM CONNECTORS

Connector No.	M18
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	GREEN



20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1
40	39	38	37	36	35	34	33	32	31	30	29	28	27	26	25	24	23	22	21

Terminal No.	Color of Wire	Signal Name
20	W	SHIFT P
27	G	BRAKE SW LAMP

Connector No.	M19
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BLACK



60	59	58	57	56	55	54	53	52	51	50	49	48	47	46	45	44	43	42	41
80	79	78	77	76	75	74	73	72	71	70	69	68	67	66	65	64	63	62	61

Terminal No.	Color of Wire	Signal Name
69	G	AT DEVICE OUT

Connector No.	M31
Connector Name	WIRE TO WIRE
Connector Color	WHITE



11G	12G	13G	14G	15G	16G	17G	18G	19G	20G	21G
22G	23G	24G	25G	26G	27G	28G	29G	30G		
31G	32G	33G	34G	35G	36G	37G	38G	39G	40G	41G
42G	43G	44G	45G	46G	47G	48G	49G	50G		
51G	52G	53G	54G	55G	56G	57G	58G	59G	60G	61G
62G	63G	64G	65G	66G	67G	68G	69G	70G		
71G	72G	73G	74G	75G	76G	77G	78G	79G	80G	81G
82G	83G	84G	85G	86G	87G	88G	89G	90G		
91G	92G	93G	94G	95G						
96G	97G	98G	99G	100G						

Terminal No.	Color of Wire	Signal Name
10G	W	-

Connector No.	M68
Connector Name	FUSE BLOCK (J/B)
Connector Color	BROWN



7R	8R	5R	4R	3R	2R	1R
16R	15R	14R	13R	12R	11R	10R
9R	8R					

Terminal No.	Color of Wire	Signal Name
9R	G	-

Connector No.	M78
Connector Name	CVT SHIFT SELECTOR
Connector Color	WHITE



1	2	3	4	5	6
7	8	9	10	11	12

Terminal No.	Color of Wire	Signal Name
3	GR	-
4	B	-
5	G	-
6	W	-

Connector No.	M80
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BLACK



116	115	114	113	112	111	110	109	108	107	106	105
128	127	126	125	124	123	122	121	120	119	118	117

Terminal No.	Color of Wire	Signal Name
108	GR	SHIFT LOCK SOLENOID OUT

# CVT SHIFT LOCK SYSTEM

< WIRING DIAGRAM >

 
[CVT: RE0F10J]

Connector No.	E38
Connector Name	STOP LAMP SWITCH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	Y	-
2	W	-

Connector No.	E28
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
5M	Y	-
7M	R	-

Connector No.	M81
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
134	B	GND2
139	W	BAT POWER F/L
143	B	GND1

Connector No.	E44
Connector Name	JOINT CONNECTOR-E01
Connector Color	WHITE

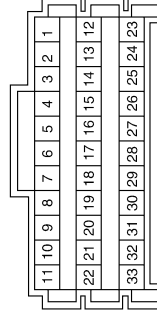

Terminal No.	Color of Wire	Signal Name
12	Y	-
13	Y	-
14	Y	-

Connector No.	E39
Connector Name	STOP LAMP RELAY
Connector Color	BLUE



Terminal No.	Color of Wire	Signal Name
1	W	-
2	B	-
3	Y	-
5	R	-

ABDIA1101GB

A  
B  
C  
TM  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P


# CVT SHIFT LOCK SYSTEM

< WIRING DIAGRAM >

[CVT: RE0F10J]

Terminal No.	Color of Wire	Signal Name
10G	P	-

Connector No.	E152
Connector Name	WIRE TO WIRE
Connector Color	WHITE

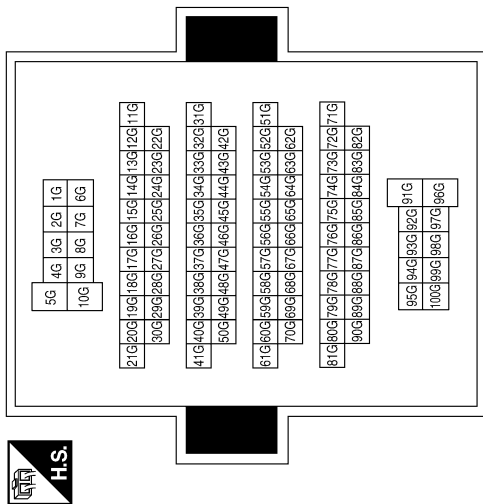

ABDIA1102GB

# DIAGNOSIS AND REPAIR WORK FLOW

< BASIC INSPECTION >

[CVT: RE0F10J]

## BASIC INSPECTION

### DIAGNOSIS AND REPAIR WORK FLOW

#### Work Flow

INFOID:000000011355549

#### NOTE:

"DTC" includes DTC at the 1st trip.

#### 1.OBTAIN INFORMATION ABOUT SYMPTOM

Refer to [TM-296, "Diagnostic Work Sheet"](#) and interview the customer to obtain the malfunction information (conditions and environment when the malfunction occurred) as much as possible when the customer brings in the vehicle.

>> GO TO 2.

#### 2.CHECK DTC

1. Before checking the malfunction, check whether any DTC exists.
2. If DTC exists, perform the following operations.
  - Records the DTCs. (Print out using CONSULT and affix to the Work Order Sheet.)
  - Erase DTCs.
  - Check the relation between the cause found by DTC and the malfunction information from customer. [TM-398, "Symptom Table"](#) can be used effectively.
3. Check the relevant information including STI, etc.

#### Do malfunction information and DTC exists?

Malfunction information and DTC exists.>>GO TO 3.

Malfunction information exists but no DTC.>>GO TO 4.

No malfunction information, but DTC exists.>>GO TO 5.

#### 3.REPRODUCE MALFUCTION SYSTEM

Check the malfunction described by the customer on the vehicle.

Check if the behavior is fail safe or normal operation. Refer to [TM-272, "Fail-safe"](#).

Interview sheet can be used effectively when reproduce malfunction conditions. Refer to [TM-296, "Diagnostic Work Sheet"](#).

Verify the relationship between the symptom and the conditions in which the malfunction described by the customer occurs.

>> GO TO 5.

#### 4.REPRODUCE MALFUNCTION SYMPTOM

Check the malfunction described by the customer on the vehicle.

Check if the behavior is fail safe or normal operation. Refer to [TM-272, "Fail-safe"](#).

Interview sheet can be used effectively when reproduce malfunction conditions. Refer to [TM-296, "Diagnostic Work Sheet"](#).

Verify the relationship between the symptom and the conditions in which the malfunction described by the customer occurs.

>> GO TO 6.

#### 5.PERFORM "DTC CONFIRMATION PROCEDURE"

Perform "DTC CONFIRMATION PROCEDURE" of the appropriate DTC to check if DTC is detected again.

Refer to [TM-276, "DTC Inspection Priority Chart"](#) when multiple DTCs are detected, and then determine the order for performing the diagnosis.

#### Is any DTC detected?

YES >> GO TO 7.

NO >> Follow [GI-47, "Intermittent Incident"](#) to check.

#### 6.IDENTIFY MALFUNCTIONING SYSTEM WITH "DIAGNOSIS CHART BY SYMPTOM"

# DIAGNOSIS AND REPAIR WORK FLOW

< BASIC INSPECTION >

[CVT: RE0F10J]

Use [TM-398, "Symptom Table"](#) from the symptom inspection result in step 4. Then identify where to start performing the diagnosis based on possible causes and symptoms.

>> GO TO 8.

## 7. REPAIR OR REPLACE THE MALFUNCTIONING PARTS

Repair or replace the detected malfunctioning parts.

Reconnect parts or connector after repairing or replacing, and then erase DTC if necessary.

>> GO TO 8.

## 8. FINAL CHECK

Perform "DTC CONFIRMATION PROCEDURE" again to make sure that the repair is correctly performed. Check that malfunctions are not reproduced when obtaining the malfunction information from the customer, referring to the symptom inspection result in step 3 or 4.

Is DTC or malfunction symptom reproduced?

YES-1 (DTC is reproduced.)>>GO TO 5.

YES-2 (Malfunction is reproduced.)>>GO TO 6.

NO >> Before delivering the vehicle to the customer, make sure that DTC is erased.

## Diagnostic Work Sheet

INFOID:0000000011355550

### DESCRIPTION

There are many operating conditions that may cause a malfunction of the transmission parts. By understanding those conditions properly, a quick and exact diagnosis can be achieved.

In general, perception of a problem varies depending on individuals. Ask the customer about his/her concerns carefully. It is important to understand the phenomenon or status. To systemize all the information for the diagnosis, prepare the question sheet referring to the question points.

In some cases, multiple conditions that appear simultaneously may cause a DTC to be detected.

### KEY POINTS

**WHAT** ..... Vehicle & engine model  
**WHEN** ..... Date, Frequencies  
**WHERE**..... Road conditions  
**HOW** ..... Operating conditions,  
Weather conditions,  
Symptoms

SEF907L

### Worksheet Sample

#### Question sheet

Customer's name	MR/MS	Registration number		Initial year registration	Year	Month	day
		Vehicle type		Chassis No.			
Storage date	Year	Month	day	Engine		Mileage	km/mile
Symptom		<input type="checkbox"/> Vehicle does not start. ( <input type="checkbox"/> R position <input type="checkbox"/> D position <input type="checkbox"/> L position)					
		<input type="checkbox"/> Upshifting does not occur. <input type="checkbox"/> Downshifting does not occur.					
		<input type="checkbox"/> Lock-up malfunction					
		<input type="checkbox"/> Shift point is too high. <input type="checkbox"/> Shift point is too low.					
		<input type="checkbox"/> Shift shock ( <input type="checkbox"/> N⇒D <input type="checkbox"/> Lock-up <input type="checkbox"/> R, D, and L position)					
		<input type="checkbox"/> Slip ( <input type="checkbox"/> N⇒D <input type="checkbox"/> Lock-up <input type="checkbox"/> R, D, and L position)					
		<input type="checkbox"/> Noise <input type="checkbox"/> Vibration					
		When selector lever position is shifted, shift pattern does not change.					
		<input type="checkbox"/> Other ( )					
First occurrence		<input type="checkbox"/> Recently (as from month of year )					
Frequency of occurrence		<input type="checkbox"/> Always <input type="checkbox"/> Under certain conditions <input type="checkbox"/> Sometimes ( time(s)/day)					



# DIAGNOSIS AND REPAIR WORK FLOW

< BASIC INSPECTION >

[CVT: RE0F10J]

## Question sheet

Customer's name	MR/MS	Registration number		Initial year registration	Year    Month day
		Vehicle type		Chassis No.	
Storage date	Year    Month day	Engine		Mileage	km/mile
Climate conditions		Irrelevant			
		<input type="checkbox"/> Clear <input type="checkbox"/> Cloud <input type="checkbox"/> Rain <input type="checkbox"/> Snow <input type="checkbox"/> Others    )			
		<input type="checkbox"/> Hot <input type="checkbox"/> Warm <input type="checkbox"/> Cool <input type="checkbox"/> Cold <input type="checkbox"/> Temperature (Approx. °C/°F)			
		<input type="checkbox"/> High <input type="checkbox"/> Moderate <input type="checkbox"/> Low			
Transaxle condition		<input type="checkbox"/> In cold-start <input type="checkbox"/> During warm-up (approx. °C/°F) <input type="checkbox"/> After warm-up <input type="checkbox"/> Engine speed:                  rpm			
Road conditions		<input type="checkbox"/> Urban area <input type="checkbox"/> Suburb area <input type="checkbox"/> Highway <input type="checkbox"/> Mountainous road (uphill or downhill)			
Operating condition, etc.		Irrelevant <input type="checkbox"/> When engine starts <input type="checkbox"/> During idling <input type="checkbox"/> During driving <input type="checkbox"/> During acceleration <input type="checkbox"/> At constant speed driving <input type="checkbox"/> During deceleration <input type="checkbox"/> During cornering (RH curve or LH curve)			
Other conditions					

A  
B  
C  
TM  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# ADDITIONAL SERVICE WHEN REPLACING TCM

< BASIC INSPECTION >

[CVT: RE0F10J]

## ADDITIONAL SERVICE WHEN REPLACING TCM

### Description

INFOID:00000001135551

Always perform the following items when the TCM is replaced.

#### SAVING AND WRITING OF TCM DATA

- TCM performs accurate control by retrieving data (inherent characteristic value) of each solenoid. For this reason, it is necessary to save data of current TCM in CONSULT before replacing the TCM. After this, the saved data must be written in new TCM.

### Work Procedure

INFOID:00000001135552

#### **CAUTION:**

When replacing TCM together with transaxle assembly, perform “ADDITIONAL SERVICE WHEN REPLACING TRANSAXLE ASSEMBLY”. Refer to [TM-299, "Work Procedure"](#).

#### 1. SAVE THE TCM DATA

##### **NOTE:**

Save necessary data stored in TCM in CONSULT according to the following instructions:

##### **Ⓟ With CONSULT**

1. Turn ignition switch OFF and wait for 10 seconds.
2. Turn ignition switch ON.
3. Select “Work Support” in “TRANSMISSION”.
4. Select “READ IP CHARA - REPLACEMENT TCM”.
5. Import data according to the instructions on the CONSULT screen.

>> GO TO 2.

#### 2. REPLACE THE TCM

1. Turn ignition switch OFF and wait for 10 seconds.
2. Replace the TCM. Refer to [TM-413, "Removal and Installation"](#).

>> GO TO 3.

#### 3. WRITE THE TCM DATA

##### **NOTE:**

Write data saved in CONSULT into a new TCM according to the following instructions:

##### **Ⓟ With CONSULT**

1. Turn ignition switch OFF and wait for 10 seconds.
2. Turn ignition switch ON.
3. Select “Work Support” in “TRANSMISSION”.
4. Select “WRITE IP CHARA - REPLACEMENT TCM”.
5. Write data saved in CONSULT in TCM according to the instructions on the CONSULT screen.

>> WORK END

# ADDITIONAL SERVICE WHEN REPLACING TRANSAXLE ASSEMBLY

< BASIC INSPECTION >

[CVT: RE0F10J]

## ADDITIONAL SERVICE WHEN REPLACING TRANSAXLE ASSEMBLY

### Description

INFOID:00000001135553

Perform the following work after the transaxle assembly is replaced.

#### ERASING AND WRITING TCM DATA

- TCM performs accurate control by retrieving data (inherent characteristic value) of each solenoid. For this reason, after replacing transaxle assembly, it is necessary to erase data stored in TCM and write new data.

#### ERASING OF CVT FLUID DEGRADATION LEVEL DATA


- TCM records the degradation level of the CVT fluid calculated from the vehicle driving status. Therefore, if the transaxle assembly is replaced, it is necessary to erase the CVT fluid degradation level data recorded by TCM.

### Work Procedure

INFOID:00000001135554

#### 1. CHECK THE SERIAL NUMBER (PART 1)

Write down the serial number of new transaxle assembly.

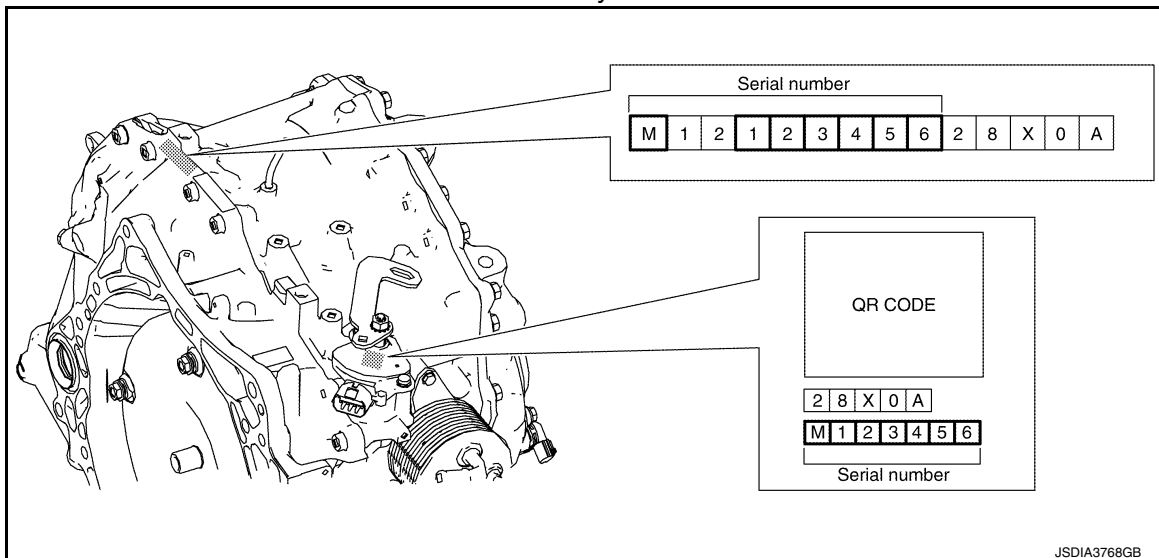

>> GO TO 2.

#### 2. CHECK THE SERIAL NUMBER (PART 2)

##### With CONSULT

1. Turn ignition switch ON.
2. Insert the attached CD into CONSULT.
3. Select "Work Support" in "TRANSMISSION".
4. Select "WRITE IP CHARA - REPLACEMENT AT/CVT".
5. Check that the serial number displayed on CONSULT screen and those written in the memo agree.

##### CAUTION:

**Never perform writing procedure.**

6. Go back to MENU of "Work Support".

>> GO TO 3.

#### 3. INITIALIZE TCM

##### With CONSULT

1. Set parking brake.
2. Select "ERASE MEMORY DATA".
3. Touch "Start" according to the instructions on the CONSULT screen.

Is "COMPLETED" displayed?

## ADDITIONAL SERVICE WHEN REPLACING TRANSAXLE ASSEMBLY

< BASIC INSPECTION >

[CVT: RE0F10J]

YES >> GO TO 4.

NO >> Turn ignition switch OFF and wait for a minimum of 10 seconds then perform the work again.

### 4. WRITE THE DATA

---

**NOTE:**

Write data of new solenoid in TCM according to the following instructions:

 **With CONSULT**

1. Shift the selector lever to the P position.
2. Turn ignition switch OFF and wait for 10 seconds.
3. Turn ignition switch ON.
4. Select "Work Support" in "TRANSMISSION".
5. Select "WRITE IP CHARA - REPLACEMENT AT/CVT".
6. Write data in TCM according to the instructions on the CONSULT screen.

**NOTE:**

When writing is complete, the shift position indicator of the combination meter displays P.

>> GO TO 5.

### 5. ERASE CVT FLUID DEGRADATION LEVEL DATA

---

1. Select "WORK SUPPORT" in "TRANSMISSION".
2. Select "CONFORM CVTF DETERIORTN".
3. Touch "Clear".

>> WORK END

# ADDITIONAL SERVICE WHEN REPLACING TCM AND TRANSAXLE ASSEMBLY

< BASIC INSPECTION >

[CVT: RE0F10J]

## ADDITIONAL SERVICE WHEN REPLACING TCM AND TRANSAXLE ASSEMBLY

### Description

INFOID:000000011463884

When replacing TCM and transaxle assembly simultaneously, perform the following work.

#### TCM PROGRAMMING

- Since vehicle specifications are not yet written in a new TCM, it is necessary to write them with CONSULT.

#### CAUTION:

**When replacing TCM, save TCM data on CONSULT before removing TCM.**

#### WRITING TCM DATA

- TCM performs accurate control by retrieving data (inherent characteristic value) of each solenoid. For this reason, after replacing TCM and transaxle assembly, it is necessary to write new data in TCM.

### Work Procedure

INFOID:000000011463885

#### 1. SAVE TCM DATA (VEHICLE SPECIFICATIONS)

##### Ⓜ With CONSULT

1. Turn ignition switch OFF.
2. Connect all of disconnected connectors.
3. Turn ignition switch ON.
4. Select "Re/programming, Configuration".
5. Select "AT/CVT".

#### NOTE:

If "AT/CVT" is not displayed and TCM data cannot be saved on CONSULT, GO TO 2.

6. Select "Programming".
7. Save TCM data on CONSULT according to the CONSULT display.


>> GO TO 2.

#### 2. REPLACE TCM AND TRANSAXLE ASSEMBLY

1. Turn ignition switch OFF and wait for 10 seconds.
2. Replace TCM and transaxle assembly. Refer to [TM-413. "Removal and Installation"](#) (TCM), [TM-433. "Removal and Installation"](#) (Transaxle assembly).

#### CAUTION:

**Write down the serial number of new transaxle assembly.**

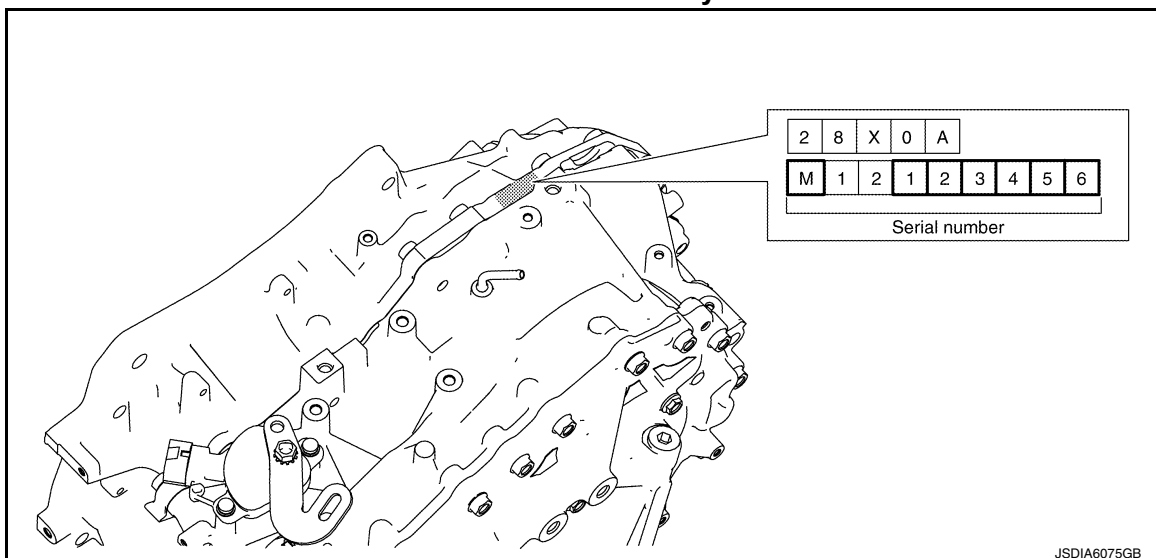

>> GO TO 3.

# ADDITIONAL SERVICE WHEN REPLACING TCM AND TRANSAXLE ASSEMBLY

< BASIC INSPECTION >

[CVT: RE0F10J]

---

## 3. WRITE TCM DATA (VEHICLE SPECIFICATIONS)

---

### NOTE:

Write data saved in CONSULT into a new TCM according to the following instructions:

#### Ⓟ With CONSULT

1. Select "Programming".
2. Perform programming according to the CONSULT display.

>> GO TO 4.

---

## 4. WRITE TCM DATA (IP CHARACTERISTICS VALUE)

---

### NOTE:

Write data of new solenoid in TCM according to the following instructions:

#### Ⓟ With CONSULT

#### CAUTION:

**When the work is interrupted, obtain data again from the supplied CD.**

1. Shift the selector lever to the P position.
2. Turn ignition switch OFF and wait for 10 seconds.
3. Turn ignition switch ON.
4. Insert the supplied CD into CONSULT.
5. Select "Work Support" in "TRANSMISSION".
6. Select "WRITE IP CHARA - REPLACEMENT AT/CVT".
7. Check that the serial number displayed on CONSULT screen and those written in the memo agree.
8. Write data in TCM according to the instructions on the CONSULT screen.

#### NOTE:

When writing is complete, the shift position indicator of the combination meter displays P.

>> WORK END

## CVT FLUID COOLER SYSTEM

### Cleaning

INFOID:00000001135555

Whenever an automatic transaxle is repaired, overhauled, or replaced, the CVT fluid cooler mounted in the radiator must be inspected and cleaned.

Metal debris and friction material, if present, can be trapped or be deposited in the CVT fluid cooler. This debris can contaminate the newly serviced CVT or, in severe cases, can block or restrict the flow of CVT fluid. In either case, malfunction of the newly serviced CVT may occur.

Debris, if present, may deposit as CVT fluid enters the cooler inlet. It will be necessary to back flush the cooler through the cooler outlet in order to flush out any built up debris.


### CVT FLUID COOLER CLEANING PROCEDURE

1. Position an oil pan under the transaxle's inlet and outlet cooler hoses.
2. Identify the inlet and outlet fluid cooler hoses.
3. Disconnect the fluid cooler inlet and outlet rubber hoses from the steel cooler tubes or bypass valve.

**NOTE:**

Replace the cooler hoses if rubber material from the hose remains on the tube fitting.

4. Allow any CVT fluid that remains in the cooler hoses to drain into the oil pan.

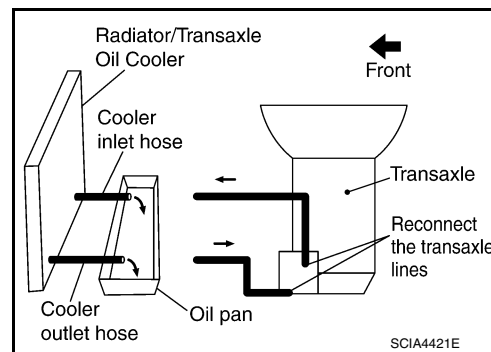


5. Insert the extension adapter hose of a can of Transmission Cooler Cleaner (Nissan P/N 999MP-AM006) into the cooler outlet hose.

**CAUTION:**

- **Wear safety glasses and rubber gloves when spraying the Transmission Cooler Cleaner.**
- **Spray Transmission Cooler Cleaner only with adequate ventilation.**
- **Avoid contact with eyes and skin.**
- **Never breath vapors or spray mist.**

6. Hold the hose and can as high as possible and spray Transmission Cooler Cleaner in a continuous stream into the cooler outlet hose until CVT fluid flows out of the cooler inlet hose for 5 seconds.

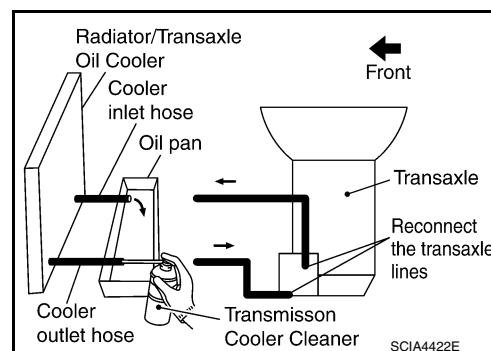

7. Insert the tip of an air gun into the end of the cooler outlet hose.

8. Wrap a shop rag around the air gun tip and end of the cooler outlet hose.

9. Blow compressed air regulated to 5 to 9 kg/cm<sup>2</sup> (70 to 130 psi) through the cooler outlet hose for 10 seconds to force out any remaining CVT fluid.

10. Repeat steps 5 through 9 three additional times.

11. Position an oil pan under the banjo bolts that connect the CVT fluid cooler steel lines to the transaxle.


12. Remove the banjo bolts.

13. Flush each steel line from the cooler side back toward the transaxle by spraying Transmission Cooler Cleaner in a continuous stream for 5 seconds.

14. Blow compressed air regulated to 5 to 9 kg/cm<sup>2</sup> (70 to 130 psi) through each steel line from the cooler side back toward the transaxle for 10 seconds to force out any remaining CVT fluid.

15. Ensure all debris is removed from the steel cooler lines.

16. Ensure all debris is removed from the banjo bolts and fittings.

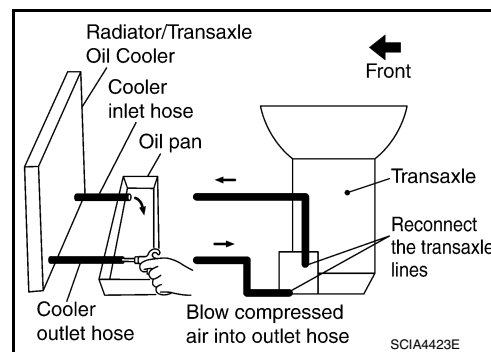

# CVT FLUID COOLER SYSTEM

[CVT: RE0F10J]

< BASIC INSPECTION >

17. Perform "CVT FLUID COOLER DIAGNOSIS PROCEDURE".

## CVT FLUID COOLER DIAGNOSIS PROCEDURE



### NOTE:

Insufficient cleaning of the cooler inlet hose exterior may lead to inaccurate debris identification.


1. Position an oil pan under the transaxle's inlet and outlet cooler hoses.
2. Clean the exterior and tip of the cooler inlet hose.
3. Insert the extension adapter hose of a can of Transmission Cooler Cleaner (Nissan P/N 999MP-AM006) into the cooler outlet hose.

### CAUTION:

- Wear safety glasses and rubber gloves when spraying the Transmission Cooler Cleaner.
  - Spray Transmission Cooler Cleaner only with adequate ventilation.
  - Avoid contact with eyes and skin.
  - Never breath vapors or spray mist.
4. Hold the hose and can as high as possible and spray Transmission Cooler Cleaner in a continuous stream into the cooler outlet hose until CVT fluid flows out of the cooler inlet hose for 5 seconds.
  5. Tie a common white, basket-type coffee filter to the end of the cooler inlet hose.

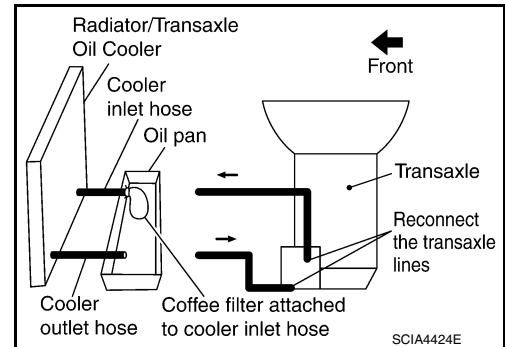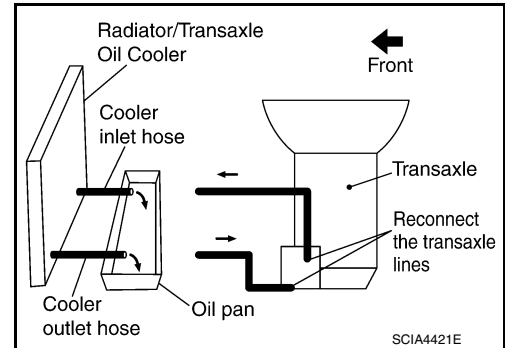


6. Insert the tip of an air gun into the end of the cooler outlet hose.
7. Wrap a shop rag around the air gun tip and end of cooler outlet hose.
8. Blow compressed air regulated to 5 to 9 kg/cm<sup>2</sup> (70 to 130 psi) through the cooler outlet hose to force any remaining CVT fluid into the coffee filter.
9. Remove the coffee filter from the end of the cooler inlet hose.
10. Perform "CVT FLUID COOLER INSPECTION PROCEDURE".

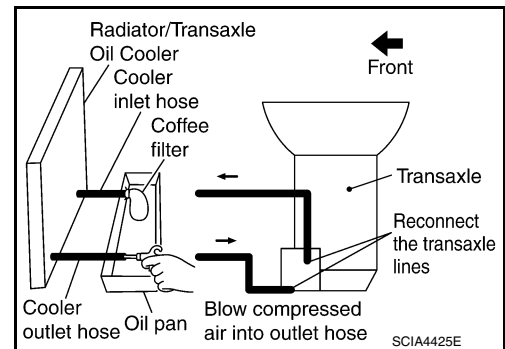

## CVT FLUID COOLER INSPECTION PROCEDURE

1. Inspect the coffee filter for debris.
  - a. If small metal debris less than 1 mm (0.040 in) in size or metal powder is found in the coffee filter, this is normal. If normal debris is found, the CVT fluid cooler/radiator can be reused and the procedure is ended.

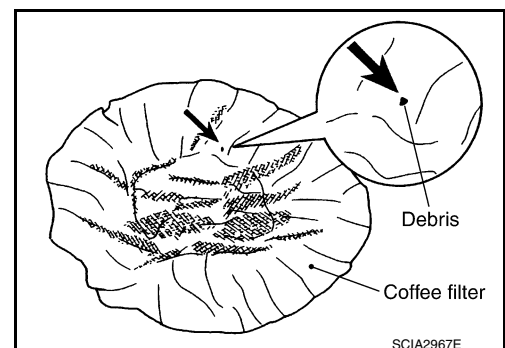




# CVT FLUID COOLER SYSTEM

< BASIC INSPECTION >

[CVT: RE0F10J]

- b. If one or more pieces of debris are found that are over 1 mm (0.040 in) in size and/or peeled clutch facing material is found in the coffee filter, the fluid cooler is not serviceable. The radiator/ fluid cooler must be replaced and the inspection procedure is ended.

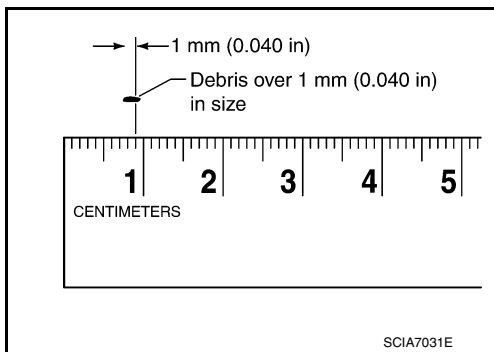

A  
B  
C

TM

## CVT FLUID COOLER FINAL INSPECTION

After performing all procedures, ensure that all remaining oil is cleaned from all components.

E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# STALL TEST

< BASIC INSPECTION >

[CVT: RE0F10J]

## STALL TEST

### Work Procedure

INFOID:00000001135556

### INSPECTION

1. Check the engine oil level. Replenish if necessary. Refer to [LU-8, "Inspection"](#).
2. Check for leak of the CVT fluid. Refer to [TM-403, "Inspection"](#).
3. Drive for about 10 minutes to warm up the vehicle so that the CVT fluid temperature is 50 to 80°C (122 to 176°F).
4. Be sure to apply the parking brake and block the tires.
5. Start the engine, depress the brake pedal and shift the selector lever to "D" position.
6. While depressing the brake pedal, depress the accelerator pedal gradually.
7. Read the stall speed quickly and release your foot from the accelerator pedal quickly.

**CAUTION:**

**Do not depress the accelerator pedal for 5 seconds or more during the test.**

**Stall speed** : Refer to [TM-438, "Stall Speed"](#).

8. Shift the selector lever to "N" position.
9. Cool the CVT fluid.  
**CAUTION:**  
**Run the engine with the idle speed for at least 1 minute.**
10. Put the selector lever to the R position and perform Step 6 to Step 9 again.

### NARROWING-DOWN MALFUNCTIONING PARTS

	Selector lever position		Possible cause
	D	R	
Stall speed	H	O	• Forward clutch
	O	H	• Reverse brake
	L	L	• Engine • Torque converter one way clutch
	H	H	• Line pressure is low. • Primary pulley • Secondary pulley • Chain belt

O: Within the stall speed standard value.

H: Stall speed is higher than the standard value.

L: Stall speed is lower than the standard value.

# CVT POSITION

< BASIC INSPECTION >

[CVT: RE0F10J]


## CVT POSITION

### Inspection and Adjustment

INFOID:00000001135557


#### INSPECTION

1. Turn ON the ignition switch with the shift selector at the "P" position.
2. Press the shift selector button with the brake pedal depressed, and confirm that the shift selector can be moved to positions other than "P". Also confirm that movement is not allowed from the "P" position to other position without depressing the brake pedal.
3. Move the shift selector and check for "excessive effort", "sticking", "noise" or "rattle".
4. Confirm that shift selector stops at each position with the feel of engagement when it is moved through all the positions. Check whether or not the actual position the shift selector is in matches the position shown by the transaxle body.
5. Make sure that the shift selector is moved to all the shift positions in the manner shown.
  - (A): Press shift selector button to operate shift selector, while depressing the brake pedal.
  - (B): Press shift selector button to operate shift selector.
  - (C): Shift selector can be operated without pressing the shift selector button.
6. When the shift selector button is pressed without applying forward/backward force to the shift selector at "P", "R", "N", "D" or "Ds" positions, there should be no "sticking" on the shift selector button operation.
7. Check that the back-up lamps do not illuminate when the shift selector is in the "P" position.
8. Check that the engine can be started with the shift selector in the "P" and "N" positions only.
9. Check that the transaxle is locked completely when the shift selector is in the "P" position.

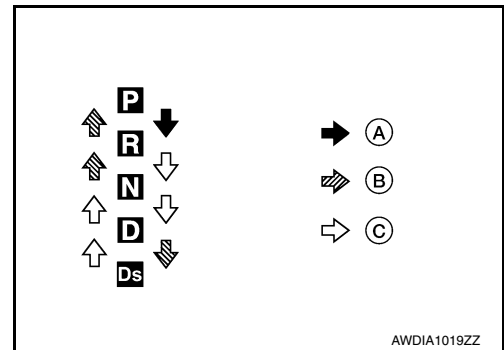

#### ADJUSTMENT

1. Move the selector lever to the "P" position.  
**CAUTION:**  
**Rotate the wheels at least a quarter turn and be certain the Park position mechanism is fully engaged.**
2. Loosen control cable nut (A) and set manual lever (B) to the "P" position.  
**CAUTION:**  
**Do not apply force to the manual lever.**
3. Tighten control cable nut to the specified torque. Refer to [TM-409. "Exploded View"](#).  
**CAUTION:**  
**Hold the manual lever securely in the "P" position when tightening control cable nut.**

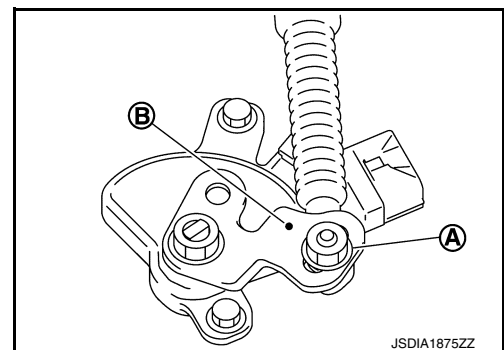

# U0073 COMMUNICATION BUS A OFF

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10J]

## DTC/CIRCUIT DIAGNOSIS

### U0073 COMMUNICATION BUS A OFF

#### DTC Logic

INFOID:0000000011355558

#### DTC DETECTION LOGIC

DTC	CONSULT screen terms (Trouble diagnosis content)	DTC detection condition	Possible causes
U0073	COMM BUS A OFF (Control Module Communication Bus A Off)	TCM communication blockage lasts for 2 seconds or more when turning ON the ignition switch. (Communication not established.)	Harness or connector (CAN communication line is error)

#### DTC CONFIRMATION PROCEDURE

##### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

##### 2. PERFORM DTC CONFIRMATION PROCEDURE

1. Start the engine and wait for at least 5 seconds.
2. Check the DTC.

Is "U0073" detected?

- YES >> Go to [TM-308, "Diagnosis Procedure"](#).
- NO >> INSPECTION END

#### Diagnosis Procedure

INFOID:0000000011355559

For the diagnosis procedure, refer to [LAN-21, "Trouble Diagnosis Flow Chart"](#).

# U0100 LOST COMMUNICATION (ECM A)

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10J]

## U0100 LOST COMMUNICATION (ECM A)

### DTC Logic

INFOID:000000011355560

### DTC DETECTION LOGIC

DTC	CONSULT screen terms (Trouble diagnosis content)	DTC detection condition	Possible causes
U0100	LOST COMM (ECM A) (Lost Communication With ECM/PCM A)	When the ignition switch is ON, TCM is unable to receive the CAN communications signal from ECM continuously for 2 seconds or more.	<ul style="list-style-type: none"><li>• ECM</li><li>• Harness or connector (CAN communication line is open or shorted)</li></ul>

A

B

C

TM

### DTC CONFIRMATION PROCEDURE

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2. PERFORM DTC CONFIRMATION PROCEDURE

1. Start the engine and wait for at least 5 seconds.
2. Check the DTC.

Is "U0100" detected?

- YES >> Go to [TM-309, "Diagnosis Procedure"](#).  
NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000011355561

For the diagnosis procedure, refer to [LAN-21, "Trouble Diagnosis Flow Chart"](#).

E

F

G

H

I

J

K

L

M

N

O

P

# U0102 LOST COMMUNICATION (TRANSFER)

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10J]

## U0102 LOST COMMUNICATION (TRANSFER)

### DTC Logic

INFOID:000000011355562

### DTC DETECTION LOGIC

DTC	CONSULT screen terms (Trouble diagnosis content)	DTC detection condition	Possible causes
U0140	LOST COMM (TRANSFER) (Lost Communication With Transfer Case Control Mod- ule)	When the ignition switch is ON, TCM is unable to receive the CAN communications signal from 4WD control unit continuously for 2 seconds or more.	<ul style="list-style-type: none"><li>• 4WD control unit</li><li>• Harness or connector (CAN communication line is open or shorted)</li></ul>

### DTC CONFIRMATION PROCEDURE

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2. PERFORM DTC CONFIRMATION PROCEDURE

##### With CONSULT

1. Start the engine and wait for at least 5 seconds.
2. Check the DTC.

##### Is "U0102" detected?

- YES >> Go to [TM-310, "Diagnosis Procedure"](#).  
NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000011355563

For the diagnosis procedure, refer to [LAN-21, "Trouble Diagnosis Flow Chart"](#).

# U0140 LOST COMMUNICATION (BCM)

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10J]

## U0140 LOST COMMUNICATION (BCM)

### DTC Logic

INFOID:0000000011355564

### DTC DETECTION LOGIC

DTC	CONSULT screen terms (Trouble diagnosis content)	DTC detection condition	Possible causes
U0140	LOST COMM (BCM) (Lost Communication With Body Control Module)	When the ignition switch is ON, TCM is unable to receive the CAN communications signal from BCM continuously for 2 seconds or more.	<ul style="list-style-type: none"><li>• BCM</li><li>• Harness or connector (CAN communication line is open or shorted)</li></ul>

### DTC CONFIRMATION PROCEDURE

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2. PERFORM DTC CONFIRMATION PROCEDURE

##### With CONSULT

1. Start the engine and wait for at least 5 seconds.
2. Check the DTC.

##### Is "U0140" detected?

- YES >> Go to [TM-311, "Diagnosis Procedure"](#).  
NO >> INSPECTION END

### Diagnosis Procedure

INFOID:0000000011355565

For the diagnosis procedure, refer to [LAN-21, "Trouble Diagnosis Flow Chart"](#).

# U0141 LOST COMMUNICATION (BCM A)

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10J]

## U0141 LOST COMMUNICATION (BCM A)

### DTC Logic

INFOID:00000001135566

### DTC DETECTION LOGIC

DTC	CONSULT screen terms (Trouble diagnosis content)	DTC detection condition	Possible causes
U0141	LOST COMM (BCM A) (Lost Communication With Body Control Module A)	When the ignition switch is turned ON, TCM continues no reception of the CAN communication signal from IPDM E/R for 2 seconds or more.	<ul style="list-style-type: none"><li>• IPDM E/R</li><li>• Harness or connector (CAN communication line is open or shorted)</li></ul>

### DTC CONFIRMATION PROCEDURE

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2. PERFORM DTC CONFIRMATION PROCEDURE

##### With CONSULT

1. Start the engine and wait for at least 5 seconds.
2. Check the DTC.

##### Is "U0141" detected?

- YES >> Go to [TM-312, "Diagnosis Procedure"](#).  
NO >> INSPECTION END

### Diagnosis Procedure

INFOID:00000001135567

For the diagnosis procedure, refer to [LAN-21, "Trouble Diagnosis Flow Chart"](#).



# U0155 LOST COMMUNICATION (IPC)

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10J]

## U0155 LOST COMMUNICATION (IPC)

### DTC Logic

INFOID:000000011355568

### DTC DETECTION LOGIC

DTC	CONSULT screen terms [Trouble diagnosis content]	DTC detection condition	Possible causes
U0155	LOST COMM (IPC) [Lost Communication With Instrument Panel Cluster (IPC) Control Module]	When the ignition switch is ON, TCM is unable to receive the CAN communications signal from the combination meter continuously for 2 seconds or more.	<ul style="list-style-type: none"><li>• Combination meter</li><li>• Harness or connector (CAN communication line is open or shorted)</li></ul>

### DTC CONFIRMATION PROCEDURE

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2. PERFORM DTC CONFIRMATION PROCEDURE

1. Start the engine and wait for at least 5 seconds.
2. Check the DTC.

Is "U0155" detected?

- YES >> Go to [TM-313, "Diagnosis Procedure"](#).  
NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000011355569

For the diagnosis procedure, refer to [LAN-21, "Trouble Diagnosis Flow Chart"](#).

# U0300 CAN COMMUNICATION DATA

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10J]

## U0300 CAN COMMUNICATION DATA

### DTC Logic

INFOID:00000001135570

### DTC DETECTION LOGIC

DTC	CONSULT screen terms (Trouble diagnosis content)	DTC detection condition	Possible causes
U0300	CAN COMM DATA (Internal Control Module Software Incompatibility)	When the ignition switch is ON, the data length transmitted from each control unit is shorter than the specified length and the status continues for 2 seconds or more.	Control unit other than TCM

### DTC CONFIRMATION PROCEDURE

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2. CHECK DTC DETECTION

##### With CONSULT

1. Start the engine and wait for 5 seconds or more.
2. Check the DTC.

Is "U0300" detected?

- YES >> Go to [TM-314, "Diagnosis Procedure"](#).  
NO >> INSPECTION END

### Diagnosis Procedure

INFOID:00000001135571

#### 1. CONTROL UNIT CHECK

Check the number of control units replaced before "U0300" is detected.

Is one control unit replaced?

- YES >> The specification of the control unit replaced may be incorrect. Check the part number and the specification.  
NO >> GO TO 2.

#### 2. CONTROL UNIT CHECK

##### With CONSULT

1. Remove one of the control unit replaced.
2. Assemble the old control unit before replacement.
3. Turn ignition switch ON, and wait for 2 seconds or more.
4. Select "Self Diagnostic Results" in "TRANSMISSION".

Is "U0300" detected?

- YES >> Turn OFF the ignition switch and check other control units in the same manner.  
NO >> The specification of the control unit removed may be incorrect. Check the part number and the specification.

# U1000 CAN COMM CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10J]

## U1000 CAN COMM CIRCUIT

### Description

INFOID:00000001135572

CAN (Controller Area Network) is a serial communication line for real-time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent malfunction detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independently). In CAN communication, control units are connected with 2 communication lines (CAN-H line, CAN-L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

### DTC Logic

INFOID:00000001135573

### DTC DETECTION LOGIC

DTC	CONSULT screen terms (Trouble diagnosis content)	DTC detection condition	Possible causes
U1000	CAN COMM CIRCUIT (CAN Communication Line)	When the ignition switch is ON, TCM cannot send the CAN communication signal continuously for 2 seconds or more.	Harness or connector (CAN communication line is open or shorted)

### DTC CONFIRMATION PROCEDURE

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2. CHECK DTC DETECTION

##### With CONSULT

1. Start the engine and wait for at least 5 seconds.
2. Check the DTC.

Is "U1000" detected?

- YES >> Go to [TM-315, "Diagnosis Procedure"](#).  
NO >> INSPECTION END

### Diagnosis Procedure

INFOID:00000001135574

For the diagnosis procedure, refer to [LAN-21, "Trouble Diagnosis Flow Chart"](#).

# U1117 LOST COMMUNICATION (ABS)

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10J]

## U1117 LOST COMMUNICATION (ABS)

### DTC Logic

INFOID:000000011355575

### DTC DETECTION LOGIC

DTC	CONSULT screen terms (Trouble diagnosis content)	DTC detection condition	Possible causes
U1117	LOST COMM (ABS) (Lost Communication With ABS)	When the ignition switch is ON, TCM is unable to receive the CAN communications signal from ABS actuator and electric unit (control unit) continuously for 2 seconds or more.	<ul style="list-style-type: none"><li>• ABS actuator and electric unit (control unit)</li><li>• Harness or connector (CAN communication line is open or shorted)</li></ul>

### DTC CONFIRMATION PROCEDURE

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2. PERFORM DTC CONFIRMATION PROCEDURE

##### With CONSULT

1. Start the engine and wait for 5 seconds or more.
2. Check the DTC.

Is "U1117" detected?

- YES >> Go to [TM-316, "Diagnosis Procedure"](#).  
NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000011355576

For the diagnosis procedure, refer to [LAN-21, "Trouble Diagnosis Flow Chart"](#).

P062F EEPROM

Description

INFOID:000000011355577

TCM compares the calculated value stored in the flash ROM with the value stored in TCM. If the calculated value does not agree with the stored value, TCM judges this as a malfunction.

DTC Logic

INFOID:000000011355578

DTC DETECTION LOGIC

DTC	CONSULT screen terms (Trouble diagnosis content)	DTC detection condition	Possible causes
P062F	EEPROM (Internal Control Module EEPROM Error)	Flash ROM error is detected when turning ON the ignition switch.	<ul style="list-style-type: none"> <li>• TCM (Flash ROM)</li> <li>• Harness or connector [TCM power supply (back-up) circuit is open or shorted]</li> </ul>

DTC CONFIRMATION PROCEDURE

1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

1. Start the engine.
2. Check the DTC.

Is "P062F" detected?

- YES >> Go to [TM-317, "Diagnosis Procedure"](#).
- NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000011355579

1. CHECK INTERMITTENT INCIDENT

Refer to [GI-47, "Intermittent Incident"](#).

Is the inspection result normal?

- YES >> Replace the TCM. Refer to [TM-413, "Removal and Installation"](#).
- NO >> Repair or replace malfunctioning parts.

# P0705 TRANSMISSION RANGE SENSOR A

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10J]

## P0705 TRANSMISSION RANGE SENSOR A

### DTC Logic

INFOID:000000011355580

### DTC DETECTION LOGIC

DTC	CONSULT screen terms (Trouble diagnosis content)	DTC detection condition	Possible causes
P0705	T/M RANGE SENSOR A [Transmission Range Sensor A Circuit (PRNDL Input)]	When all of the following conditions are satisfied and this state is maintained for 2 seconds: <ul style="list-style-type: none"> <li>Two or more range signals simultaneously stay ON continuously</li> <li>TCM power supply voltage: More than 11 V</li> </ul>	<ul style="list-style-type: none"> <li>Harness or connector (Short circuit between transmission range switch and TCM)</li> <li>Transmission range switch</li> </ul>

### DTC CONFIRMATION PROCEDURE

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2. CHECK DTC DETECTION

- Turn ignition switch ON.
- Shift the selector lever through entire positions from "P" to "L". (Hold the selector lever at each position for 5 seconds or more.)
- Check the first trip DTC.

Is "P0705" detected?

- YES >> Go to [TM-318. "Diagnosis Procedure"](#).  
 NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000011355581

#### 1. CHECK TCM INPUT SIGNALS

##### Ⓟ With CONSULT

- Turn ignition switch ON.
- Select "Data Monitor" in "TRANSMISSION".
- Select "D POSITION SW", "N POSITION SW", "R POSITION SW", "P POSITION SW" and "L RANGE SW".
- Shift the selector lever through entire positions from "P" to "L" and check ON/OFF of each monitor item.

Monitor item	Condition	Condition
D POSITION SW	Selector lever: "D" position	On
	Other than the above	Off
N POSITION SW	Selector lever: "N" position	On
	Other than the above	Off
R POSITION SW	Selector lever: "R" position	On
	Other than the above	Off
P POSITION SW	Selector lever: "P" position	On
	Other than the above	Off
L POSITION SW	Selector lever: "L" position	On
	Other than the above	Off

##### ⓧ Without CONSULT

- Turn ignition switch OFF.
- Disconnect TCM connector.

# P0705 TRANSMISSION RANGE SENSOR A

[CVT: RE0F10J]

## < DTC/CIRCUIT DIAGNOSIS >

3. Turn ignition switch ON.
4. Shift the selector lever from "P" to "L" and check voltage between TCM harness connector terminals and ground.

+		-	Condition	Voltage
TCM				
Connector	Terminal			
F89	2	Ground	Selector lever: "L" position	10 – 16 V
			Other than the above	Approx. 0 V
	4		Selector lever: "D" position	10 – 16 V
			Other than the above	Approx. 0 V
	5		Selector lever: "N" position	10 – 16 V
			Other than the above	Approx. 0 V
	6		Selector lever: "R" position	10 – 16 V
			Other than the above	Approx. 0 V
	7		Selector lever: "P" position	10 – 16 V
			Other than the above	Approx. 0 V

### Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-47, "Intermittent Incident"](#).

NO-1 ["D POSITION SW" is "ON" when selector is not in "D" position. (Or connector terminal 4 is at power voltage.)]>>GO TO 2.

NO-2 ["N POSITION SW" is "ON" when selector is not in "N" position. (Or connector terminal 5 is at power voltage.)]>>GO TO 4.

NO-3 ["R POSITION SW" is "ON" when selector is not in "R" position. (Or connector terminal 6 is at power voltage.)]>>GO TO 6.

NO-4 ["P POSITION SW" is "ON" when selector is not in "P" position. (Or connector terminal 7 is at power voltage.)]>>GO TO 8.

NO-5 ["L POSITION SW" is "ON" when selector is not in "L" position. (Or connector terminal 2 is at power voltage.)]>>GO TO 10.

## 2.CHECK D POSITION SW CIRCUIT (PART 1)

1. Turn ignition switch OFF.
2. Disconnect TCM connector.
3. Check continuity between TCM harness connector terminals.

TCM		Terminal	Continuity
Connector			
F89	4	2	Not existed
		5	
		6	
		7	

### Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace malfunctioning parts.

## 3.CHECK D POSITION SW CIRCUIT (PART 2)

1. Disconnect transmission range switch connector.
2. Turn ignition switch ON.
3. Check voltage between TCM harness connector terminal and ground.

# P0705 TRANSMISSION RANGE SENSOR A

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10J]

+		-	Voltage (Approx.)
TCM			
Connector	Terminal		
F89	4	Ground	0 V

Is the inspection result normal?

YES >> GO TO 12.

NO >> Repair or replace malfunctioning parts.

## 4. CHECK N POSITION SW CIRCUIT (PART 1)

1. Turn ignition switch OFF.
2. Disconnect TCM connector.
3. Check continuity between TCM harness connector terminals.

TCM			Continuity
Connector	Terminal		
F89	5	2	Not existed
		4	
		6	
		7	

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair or replace malfunctioning parts.

## 5. CHECK N POSITION SW CIRCUIT (PART 2)

1. Disconnect transmission range switch connector.
2. Turn ignition switch ON.
3. Check voltage between TCM harness connector terminal and ground.

+		-	Voltage (Approx.)
TCM			
Connector	Terminal		
F89	5	Ground	0 V

Is the inspection result normal?

YES >> GO TO 12.

NO >> Repair or replace malfunctioning parts.

## 6. CHECK P POSITION SW CIRCUIT (PART 1)

1. Turn ignition switch OFF.
2. Disconnect TCM connector.
3. Check continuity between TCM harness connector terminals.

TCM			Continuity
Connector	Terminal		
F89	7	2	Not existed
		4	
		5	
		6	

Is the inspection result normal?

YES >> GO TO 7.

NO >> Repair or replace malfunctioning parts.



# P0705 TRANSMISSION RANGE SENSOR A

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10J]

## 7. CHECK P POSITION SW CIRCUIT (PART 2)

1. Disconnect transmission range switch connector.
2. Turn ignition switch ON.
3. Check voltage between TCM harness connector terminal and ground.

+		-	Voltage (Approx.)
TCM			
Connector	Terminal		
F89	7	Ground	0 V

Is the inspection result normal?

YES >> GO TO 12.

NO >> Repair or replace malfunctioning parts.

## 8. CHECK R POSITION SW CIRCUIT (PART 1)

1. Turn ignition switch OFF.
2. Disconnect TCM connector.
3. Check continuity between TCM harness connector terminals.

TCM		Continuity	
Connector	Terminal		
F89	6	2	Not existed
		4	
		5	
		7	

Is the inspection result normal?

YES >> GO TO 9.

NO >> Repair or replace malfunctioning parts.

## 9. CHECK R POSITION SW CIRCUIT (PART 2)

1. Disconnect transmission range switch connector.
2. Turn ignition switch ON.
3. Check voltage between TCM harness connector terminal and ground.

+		-	Voltage (Approx.)
TCM			
Connector	Terminal		
F89	6	Ground	0 V

Is the inspection result normal?

YES >> GO TO 12.

NO >> Repair or replace malfunctioning parts.

## 10. CHECK L POSITION SWITCH CIRCUIT (PART 1)

1. Turn ignition switch OFF.
2. Disconnect TCM connector.
3. Check continuity between TCM harness connector terminals.

A  
B  
C  
TM  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# P0705 TRANSMISSION RANGE SENSOR A

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10J]

TCM		Continuity	
Connector	Terminal		
F89	2	4	Not existed
		5	
		6	
		7	

Is the inspection result normal?

YES >> GO TO 11.

NO >> Repair or replace malfunctioning parts.

## 11. CHECK L POSITION SWITCH CIRCUIT (PART 2)

1. Disconnect transmission range switch connector.
2. Turn ignition switch ON.
3. Check voltage between TCM harness connector terminal and ground.

+		-	Voltage (Approx.)
TCM			
Connector	Terminal		
F89	2	Ground	0 V

Is the inspection result normal?

YES >> GO TO 12.

NO >> Repair or replace malfunctioning parts.

## 12. CHECK TRANSMISSION RANGE SWITCH

Check transmission range switch. Refer to [TM-322, "Component Inspection"](#).

Is the check result normal?

YES >> Check intermittent incident. Refer to [GI-47, "Intermittent Incident"](#).

NO >> Repair or replace malfunctioning parts.

## Component Inspection

INFOID:00000001135582

### 1. CHECK TRANSMISSION RANGE SWITCH

Check continuity between transmission range switch connector terminals.

Transmission range switch	Condition	Continuity
Terminal		
7 – 10	Manual lever: "P" and "N" positions	Existed
	Other than the above	Not existed
4 – 5	Manual lever: "P" position	Existed
	Other than the above	Not existed
4 – 8	Manual lever: "R" position	Existed
	Other than the above	Not existed
4 – 9	Manual lever: "N" position	Existed
	Other than the above	Not existed
4 – 2	Manual lever: "D" position	Existed
	Other than the above	Not existed
4 – 6	Manual lever: "L" position	Existed
	Other than the above	Not existed

Is the inspection result normal?

# P0705 TRANSMISSION RANGE SENSOR A

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10J]

YES >> INSPECTION END

NO >> There is a malfunction of transmission range switch. Replace transaxle assembly. Refer to [TM-433. "Removal and Installation"](#).

A

B

C

TM

E

F

G

H

I

J

K

L

M

N

O

P

# P0706 TRANSMISSION RANGE SENSOR A

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10J]

## P0706 TRANSMISSION RANGE SENSOR A

### DTC Logic

INFOID:000000011355583

### DTC DETECTION LOGIC

DTC	CONSULT screen terms (Trouble diagnosis content)	DTC detection condition	Possible causes
P0706	T/M RANGE SENSOR A (Transmission Range Sensor A Circuit Range/Performance)	When all of the following conditions are satisfied and this state is maintained for 30 seconds: <ul style="list-style-type: none"><li>• All range signals stay OFF</li><li>• TCM power supply voltage: More than 11 V</li></ul>	<ul style="list-style-type: none"><li>• Harness or connector (Open circuit between ignition switch and transmission range switch/open circuit between transmission range switch and TCM)</li><li>• Transmission range switch</li><li>• Control cable</li></ul>

### DTC CONFIRMATION PROCEDURE

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2. PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON.
2. Shift the selector lever through entire positions from "P" to "L". (Hold the selector lever at each position for 40 seconds or more.)
3. Check the first trip DTC.

Is "P0706" detected?

- YES >> Go to [TM-324, "Diagnosis Procedure"](#).  
NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000011355584

#### 1. ADJUSTMENT OF CONTROL CABLE

Adjust control cable. Refer to [TM-307, "Inspection and Adjustment"](#).

>> GO TO 2.

#### 2. PERFORM DTC CONFIRMATION PROCEDURE

 **With CONSULT**

1. Turn ignition switch ON.
2. Select "Self Diagnostic Results" in "TRANSMISSION".
3. Touch "Erase".
4. Perform "DTC CONFIRMATION PROCEDURE". Refer to [TM-324, "DTC Logic"](#).

Is "P0706" detected?

- YES >> GO TO 3.  
NO >> INSPECTION END

#### 3. CHECK POWER CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect transmission range switch connector.
3. Turn ignition switch ON.
4. Check voltage between transmission range switch harness connector terminal and ground.

# P0706 TRANSMISSION RANGE SENSOR A

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10J]

+		-	Voltage
Transmission range switch	Connector		
	Terminal		
F36	4	Ground	10 – 16 V

Is the inspection result normal?

- YES >> GO TO 4.
- NO >> GO TO 7.

## 4. CHECK CIRCUIT BETWEEN TRANSMISSION RANGE SWITCH AND TCM (PART 1)

1. Turn ignition switch OFF.
2. Disconnect TCM connector.
3. Check continuity between transmission range switch harness connector terminals and TCM harness connector terminals.

Transmission range switch		TCM		Continuity
Connector	Terminal	Connector	Terminal	
F36	2	F89	4	Existed
	5		7	
	6		2	
	8		6	
	9		5	

Is the inspection result normal?

- YES >> GO TO 5.
- NO >> Repair or replace malfunctioning parts.

## 5. CHECK CIRCUIT BETWEEN TRANSMISSION RANGE SWITCH AND TCM (PART 2)

Check continuity between transmission range switch harness connector terminals and ground.

Transmission range switch		—	Continuity
Connector	Terminal		
F36	2	Ground	Not existed
	5		
	6		
	8		
	9		

Is the inspection result normal?

- YES >> GO TO 6.
- NO >> Repair or replace malfunctioning parts.

## 6. CHECK TRANSMISSION RANGE SWITCH

Check transmission range switch. Refer to [TM-326. "Component Inspection"](#).

Is the inspection result normal?

- YES >> Check intermittent incident. Refer to [GI-47. "Intermittent Incident"](#).
- NO >> Repair or replace malfunctioning parts.

## 7. DETECT MALFUNCTIONING ITEMS

Check the following items:

- Open circuit or short circuit in harness between ignition switch and IPDM E/R. Refer to [PG-29. "Wiring Diagram - IGNITION POWER SUPPLY -"](#).
- Open circuit or short circuit in harness between IPDM E/R harness connector terminal 64 and transmission range switch harness connector terminal 4.

# P0706 TRANSMISSION RANGE SENSOR A

[CVT: RE0F10J]

< DTC/CIRCUIT DIAGNOSIS >

- 10A fuse (No. 48, located in the IPDM E/R). Refer to [PG-85, "IPDM E/R Terminal Arrangement"](#).
- IPDM E/R

Is the check result normal?

- YES >> Check intermittent incident. Refer to [GI-47, "Intermittent Incident"](#).  
NO >> Repair or replace malfunctioning parts.

## Component Inspection

INFOID:0000000011355585

### 1. CHECK TRANSMISSION RANGE SWITCH

Check continuity between transmission range switch connector terminals.

Transmission range switch Terminal	Condition	Continuity
7 – 10	Manual lever: "P" and "N" positions	Existed
	Other than the above	Not existed
4 – 5	Manual lever: "P" position	Existed
	Other than the above	Not existed
4 – 8	Manual lever: "R" position	Existed
	Other than the above	Not existed
4 – 9	Manual lever: "N" position	Existed
	Other than the above	Not existed
4 – 2	Manual lever: "D" position	Existed
	Other than the above	Not existed
4 – 6	Manual lever: "L" position	Existed
	Other than the above	Not existed

Is the inspection result normal?

- YES >> INSPECTION END  
NO >> There is a malfunction of transmission range switch. Replace transaxle assembly. Refer to [TM-433, "Removal and Installation"](#).

# P0711 TRANSMISSION FLUID TEMPERATURE SENSOR A

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10J]

## P0711 TRANSMISSION FLUID TEMPERATURE SENSOR A

### DTC Logic

INFOID:0000000011355586

### DTC DETECTION LOGIC

DTC	CONSULT screen terms (Trouble diagnosis content)	DTC detection condition	Possible causes
P0711	FLUID TEMP SENSOR A (Transmission Fluid Temperature Sensor A Circuit Range/Performance)	<p>When any of 1 or 2 is satisfied:</p> <ol style="list-style-type: none"> <li>Under the following diagnosis conditions, CVT fluid temperature does not rise to 10°C (50°F) after driving for a certain period of time with the TCM-received fluid temperature sensor value between -40°C (-40°F) and 9°C (48.2°F). <ul style="list-style-type: none"> <li>- TCM power supply voltage: More than 11 V</li> <li>- CAN communication is normal</li> <li>- Engine speed: 450 rpm or more</li> <li>- Accelerator pedal position: 3 deg. or more</li> <li>- Vehicle speed: 10 km/h (7 MPH) or more</li> <li>- U0100, P0705 and P0706 are not detected.</li> <li>- Selector lever: "D" position</li> </ul> </li> <li>When the condition of the final judgment is satisfied after satisfying that of the provisional judgment: <ul style="list-style-type: none"> <li>- Provisional judgment: All of the following conditions are satisfied within 2 seconds after the ignition switch is turned ON. <ul style="list-style-type: none"> <li>• U0073, U0100, P0712 and P0713 are not detected.</li> <li>• CAN communication is normal.</li> <li>• TCM power supply voltage: More than 11 V</li> <li>• The difference between CVT fluid temperature and engine coolant temperature is 55°C (131°F) or more, or -27°C (-16°F) or less.</li> </ul> </li> <li>- Final judgment: When all of the following conditions are satisfied and this state is maintained for 300 seconds: <ul style="list-style-type: none"> <li>• ECM is normal.</li> <li>• Provisional judgment is satisfied.</li> </ul> </li> </ul> </li> </ol>	CVT fluid temperature sensor

### DTC CONFIRMATION PROCEDURE

**CAUTION:**

**Always drive vehicle at a safe speed.**

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2. PERFORM DTC CONFIRMATION PROCEDURE

**With CONSULT**

- Turn ignition switch OFF and cool the engine.
- Turn ignition switch ON.

**CAUTION:**

**Never start the engine.**

- Select "Data Monitor" in "TRANSMISSION".
- Select "FLUID TEMP".
- Record CVT fluid temperature.
- Start the engine and wait for at least 2 minutes.
- Drive the vehicle for the total minutes specified in the Driving time column below with the following conditions satisfied.

# P0711 TRANSMISSION FLUID TEMPERATURE SENSOR A

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10J]

Selector lever : "D" position  
Accelerator pedal position : 1.0/8 or more  
Vehicle speed : 10 km/h (7 MPH) or more

CVT fluid temperature before engine start	Driving time
-40°C (-40°F) – -31°C (-23.8°F)	20 minutes or more
-30°C (-22°F) – -21°C (-5.8°F)	18 minutes or more
-20°C (-4°F) – -11°C (-12.2°F)	14 minutes or more
-10°C (14°F) – -1°C (30.2°F)	10 minutes or more
0°C (32°F) – 9°C (48.2°F)	7 minutes or more
Other than the above	— (Go to 3.)

8. Stop the vehicle.
9. Check the first trip DTC.

## ⊗ With GST

1. Turn ignition switch OFF and cool the engine.
2. Start the engine and wait for at least 2 minutes.
3. Drive the vehicle and maintain the following conditions for 20 minutes or more.

Selector lever : "D" position  
Accelerator pedal position : 1.0/8 or more  
Vehicle speed : 10 km/h (7 MPH) or more

4. Stop the vehicle.
5. Check the first trip DTC.

## Is "P0711" detected?

YES >> Go to [TM-328. "Diagnosis Procedure"](#).  
NO >> GO TO 3.

## 3. CHECK CVT FLUID TEMPERATURE SENSOR

1. Turn ignition switch OFF.
2. Disconnect CVT unit connector.
3. Check resistance between CVT unit connector terminals.

CVT unit Terminal	Condition	Resistance (Approx.)
12 – 18	CVT fluid temperature: 20°C (68°F)	6.5 kΩ
	CVT fluid temperature: 50°C (122°F)	2.2 kΩ
	CVT fluid temperature: 80°C (176°F)	0.87 kΩ

## Is the inspection result normal?

YES >> INSPECTION END  
NO >> There is a malfunction of CVT fluid temperature sensor. Replace transaxle assembly. Refer to [TM-433. "Removal and Installation"](#).

## Diagnosis Procedure

INFOID:000000011355588

## 1. CHECK CVT FLUID TEMPERATURE SENSOR

1. Turn ignition switch OFF.
2. Disconnect CVT unit connector.
3. Check resistance between CVT unit connector terminals.



# P0711 TRANSMISSION FLUID TEMPERATURE SENSOR A

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10J]

CVT unit		Condition	Resistance (Approx.)
Connector	Terminal		
F209	12 – 18	CVT fluid temperature: 20°C (68°F)	6.5 kΩ
		CVT fluid temperature: 50°C (122°F)	2.2 kΩ
		CVT fluid temperature: 80°C (176°F)	0.87 kΩ

Is the inspection result normal?

YES >> GO TO 2.

NO >> Replace transaxle assembly. Refer to [TM-433, "Removal and Installation"](#)

## 2. CHECK CIRCUIT BETWEEN TCM AND CVT UNIT (CVT FLUID TEMPERATURE SENSOR) (PART 1)

1. Disconnect the TCM connector.
2. Check continuity between TCM harness connector terminals and CVT unit harness connector terminals.

TCM		CVT unit		Continuity
Connector	Terminal	Connector	Terminal	
F89	11	F46	18	Existed
	12		12	

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace damaged parts.

## 3. CHECK CIRCUIT BETWEEN TCM AND CVT UNIT (CVT FLUID TEMPERATURE SENSOR) (PART 2)

Check continuity between TCM harness connector terminals and ground.

TCM		Ground	Continuity
Connector	Terminal		
F89	11	Ground	Not existed
	12		

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-47, "Intermittent Incident"](#).

NO >> Repair or replace damaged parts.

# P0712 TRANSMISSION FLUID TEMPERATURE SENSOR A

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10J]

## P0712 TRANSMISSION FLUID TEMPERATURE SENSOR A

### DTC Logic

INFOID:000000011355589

### DTC DETECTION LOGIC

DTC	CONSULT screen terms (Trouble diagnosis content)	DTC detection condition	Possible causes
P0712	FLUID TEMP SENSOR A (Transmission Fluid Temperature Sensor A Circuit Low)	When all of the following conditions are satisfied and this state is maintained for 5 seconds: <ul style="list-style-type: none"><li>• TCM power supply voltage: More than 11 V</li><li>• Fluid temperature sensor detection voltage: 0.15 V or less</li></ul>	<ul style="list-style-type: none"><li>• Harness or connector (CVT fluid temperature sensor circuit is shorted to ground)</li><li>• CVT fluid temperature sensor</li></ul>

### DTC CONFIRMATION PROCEDURE

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2. PERFORM DTC CONFIRMATION PROCEDURE

1. Start the engine and wait for 10 seconds or more.
2. Check the first trip DTC.

Is "P0712" detected?

YES >> Go to [TM-330, "Diagnosis Procedure"](#).

NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000011355590

#### 1. CHECK CIRCUIT BETWEEN TCM AND CVT UNIT

1. Turn ignition switch OFF.
2. Disconnect TCM connector and CVT unit connector.
3. Check continuity between TCM harness connector terminal and ground.

TCM		—	Continuity
Connector	Terminal		
F89	12	Ground	Not existed

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace malfunctioning part.

#### 2. CHECK TERMINAL CODE ASSEMBLY

Check continuity between CVT unit connector terminal and ground

CVT unit		—	Continuity
Connector	Terminal		
F209	12	Ground	Not existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Replace transaxle assembly. Refer to [TM-433, "Removal and Installation"](#).

#### 3. CHECK CVT FLUID TEMPERATURE SENSOR

Check resistance between CVT unit connector terminals.

# P0712 TRANSMISSION FLUID TEMPERATURE SENSOR A

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10J]

CVT unit		Condition	Resistance (Approx.)
Connector	Terminal		
F209	12 – 18	CVT fluid temperature: 20°C (68°F)	6.5 kΩ
		CVT fluid temperature: 50°C (122°F)	2.2 kΩ
		CVT fluid temperature: 80°C (176°F)	0.87 kΩ

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-47, "Intermittent Incident"](#).

NO >> Replace transaxle assembly. Refer to [TM-433, "Removal and Installation"](#).

A

B

C

TM

E

F

G

H

I

J

K

L

M

N

O

P

# P0713 TRANSMISSION FLUID TEMPERATURE SENSOR A

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10J]

## P0713 TRANSMISSION FLUID TEMPERATURE SENSOR A

### DTC Logic

INFOID:000000011355591

### DTC DETECTION LOGIC

DTC	CONSULT screen terms (Trouble diagnosis content)	DTC detection condition	Possible causes
P0713	FLUID TEMP SENSOR A (Transmission Fluid Temperature Sensor A Circuit High)	When all of the following conditions are satisfied and this state is maintained for 5 seconds: <ul style="list-style-type: none"><li>• TCM power supply voltage: More than 11 V</li><li>• Vehicle speed: More than 10 km/h (7 MPH)</li><li>• Fluid temperature sensor detection voltage: 2.48 V or more</li></ul>	<ul style="list-style-type: none"><li>• Harness or connector (CVT fluid temperature sensor circuit is open or shorted to power supply)</li><li>• CVT fluid temperature sensor</li></ul>

### DTC CONFIRMATION PROCEDURE

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2. PERFORM DTC CONFIRMATION PROCEDURE

1. Start the engine.
2. Maintain the following condition for 10 seconds or more.

Vehicle speed : 20 km/h (12 MPH) or more

3. Stop the vehicle.
4. Check the first trip DTC.

Is "P0713" detected?

- YES >> Go to [TM-332, "Diagnosis Procedure"](#).  
NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000011355592

#### 1. CHECK CIRCUIT BETWEEN TCM AND CVT UNIT (PART 1)

1. Turn ignition switch OFF.
2. Disconnect TCM connector and CVT unit connector.
3. Check continuity between TCM harness connector terminals and CVT unit harness connector terminals.

TCM		CVT unit		Continuity
Connector	Terminal	Connector	Terminal	
F89	11	F46	18	Existed
	12		12	

Is the inspection result normal?

- YES >> GO TO 2.  
NO >> Repair or replace malfunctioning parts.

#### 2. CHECK CIRCUIT BETWEEN TCM AND CVT UNIT (PART 2)

1. Turn ignition switch ON.
2. Check voltage between TCM harness connector terminal and ground.

# P0713 TRANSMISSION FLUID TEMPERATURE SENSOR A

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10J]

+		-	Voltage (Approx.)
TCM			
Connector	Terminal		
F89	12	Ground	0 V

A

B

Is the inspection result normal?

C

YES >> GO TO 3.

NO >> Repair or replace malfunctioning parts.

## 3. CHECK CVT FLUID TEMPERATURE SENSOR

TM

1. Turn ignition switch OFF.
2. Check resistance between CVT unit connector terminals.

CVT unit		Condition	Resistance (Approx.)
Connector	Terminal		
F209	12 – 18	CVT fluid temperature: 20°C (68°F)	6.5 kΩ
		CVT fluid temperature: 50°C (122°F)	2.2 kΩ
		CVT fluid temperature: 80°C (176°F)	0.87 kΩ

E

F

Is the inspection result normal?

G

YES >> Check intermittent incident. Refer to [GI-47, "Intermittent Incident"](#).

NO >> There is malfunction of CVT fluid temperature sensor circuit. Replace transaxle assembly. Refer to [TM-433, "Removal and Installation"](#).

H

I

J

K

L

M

N

O

P

# P0715 INPUT SPEED SENSOR A

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10J]

## P0715 INPUT SPEED SENSOR A

### DTC Logic

INFOID:000000011355593

### DTC DETECTION LOGIC

DTC	CONSULT screen terms (Trouble diagnosis content)	DTC detection condition	Possible causes
P0715	INPUT SPEED SENSOR A (Input/Turbine Speed Sensor A Circuit)	<p>When 1 is satisfied and any of 2, 3 or 4 is satisfied:</p> <ol style="list-style-type: none"> <li>When the following conditions are satisfied: <ul style="list-style-type: none"> <li>- TCM power supply voltage: More than 11 V</li> <li>- After range change completion, it spends 2 seconds or more.</li> </ul> </li> <li>When all of the following conditions are satisfied and this state is maintained for 5 seconds: <ul style="list-style-type: none"> <li>- Primary pulley speed: Less than 150 rpm</li> <li>- Secondary pulley speed: 500 rpm or more</li> </ul> </li> <li>When all of the following conditions are satisfied and this state is maintained for 0.5 seconds: <ul style="list-style-type: none"> <li>- 10-msec-ago primary pulley speed: 1,000 rpm or more</li> <li>- Now primary pulley speed: 0 rpm</li> </ul> </li> <li>When all of the following conditions are satisfied and this state is maintained for 5 seconds: <ul style="list-style-type: none"> <li>- Range: D or L</li> <li>- Engine speed: 450 rpm or more</li> <li>- Input speed: 300 rpm or more</li> <li>- Primary pulley speed: 300 rpm or more</li> <li>- Secondary pulley speed: 300 rpm or more</li> <li>- Differences between engine speed and primary pulley speed: More than 1,000 rpm</li> <li>- Differences between primary pulley speed and input speed: More than 1,000 rpm</li> <li>- Differences between engine speed and input speed: 1,000 rpm or less</li> <li>- Lock-up command is being given (except for slip lock-up)</li> <li>- DTC other than the applicable DTC is not detected.</li> </ul> </li> </ol>	<ul style="list-style-type: none"> <li>• Harness or connector (Primary speed sensor circuit is open or shorted)</li> <li>• Primary speed sensor</li> </ul>

### DTC CONFIRMATION PROCEDURE

#### CAUTION:

**Be careful of the driving speed.**

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2. CHECK DTC DETECTION

1. Start the engine.
2. Drive the vehicle.
3. Maintain the following conditions for 10 seconds or more.

Selector lever : "D" position  
 Engine speed : 1,200 rpm or more  
 Vehicle speed : 40 km/h (25 MPH) or more

4. Stop the vehicle.
5. Check the first trip DTC.

Is "P0715" detected?

# P0715 INPUT SPEED SENSOR A

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10J]

- YES >> Go to [TM-335, "Diagnosis Procedure"](#).
- NO >> INSPECTION END

## Diagnosis Procedure

INFOID:00000001135594

### 1. CHECK PRIMARY SPEED SENSOR POWER CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect primary speed sensor connector.
3. Turn ignition switch ON.
4. Check voltage between primary speed sensor harness connector terminal and ground.

+		-	Voltage
Connector	Terminal		
F25	3	Ground	10 – 16 V

Is the inspection result normal?

- YES >> GO TO 2.
- NO >> GO TO 6.

### 2. CHECK PRIMARY SPEED SENSOR GROUND CIRCUIT

Check continuity between primary speed sensor harness connector terminal and ground.

Primary speed sensor		—	Continuity
Connector	Terminal		
F25	1	Ground	Existed

Is the inspection result normal?

- YES >> GO TO 3.
- NO >> Repair or replace malfunctioning parts.

### 3. CHECK CIRCUIT BETWEEN PRIMARY SPEED SENSOR AND TCM (PART 1)

1. Turn ignition switch OFF.
2. Disconnect TCM connector.
3. Check continuity between primary speed sensor harness connector terminal and TCM harness connector terminal.

Primary speed sensor		TCM		Continuity
Connector	Terminal	Connector	Terminal	
F25	2	F89	35	Existed

Is the inspection result normal?

- YES >> GO TO 4.
- NO >> Repair or replace malfunctioning parts.

### 4. CHECK CIRCUIT BETWEEN PRIMARY SPEED SENSOR AND TCM (PART 2)

Check continuity between primary speed sensor harness connector terminal and ground.

Primary speed sensor		—	Continuity
Connector	Terminal		
F25	2	Ground	Not existed

Is the inspection result normal?

- YES >> GO TO 5.
- NO >> Repair or replace malfunctioning parts.


### 5. CHECK TCM INPUT SIGNALS

# P0715 INPUT SPEED SENSOR A

[CVT: RE0F10J]

## < DTC/CIRCUIT DIAGNOSIS >

1. Connect all of disconnected connectors.
2. Lift the vehicle.
3. Start the engine.
4. Check frequency of primary speed sensor.

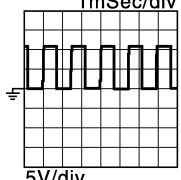+		-	Condition	Frequency (Approx.)
TCM				
Connector	Terminal			
F89	35	Ground	<ul style="list-style-type: none"> <li>• Selector lever: "L" position</li> <li>• Vehicle speed: 20 km/h (12 MPH)</li> </ul>	<p>700 Hz</p>  <p>5V/div</p> <p>JSDIA1905GB</p>

### Is the inspection result normal?

- YES >> Check intermittent incident. Refer to [GI-47, "Intermittent Incident"](#).  
 NO >> Replace primary speed sensor. Refer to [TM-420, "Removal and Installation"](#).

## 6. DETECT MALFUNCTIONING ITEMS

Check the following items:

- Open circuit or short circuit in harness between ignition switch and IPDM E/R. Refer to [PG-29, "Wiring Diagram - IGNITION POWER SUPPLY -"](#).
- Open circuit or short circuit in harness between IPDM E/R harness connector terminal 61 and primary speed sensor harness connector terminal 3.
- 10A fuse (No.46, located in the IPDM E/R). Refer to [PG-85, "IPDM E/R Terminal Arrangement"](#).
- IPDM E/R

### Is the check result normal?

- YES >> Check intermittent incident. Refer to [GI-47, "Intermittent Incident"](#).  
 NO >> Repair or replace malfunctioning parts.



# P0717 INPUT SPEED SENSOR A

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10J]

## P0717 INPUT SPEED SENSOR A

### DTC Logic

INFOID:0000000011355595

### DTC DETECTION LOGIC

DTC	CONSULT screen terms (Trouble diagnosis content)	DTC detection condition	Possible cause
P0717	INPUT SPEED SENSOR A (Input/Turbine Speed Sensor "A" Circuit No Signal)	When 1 is satisfied and any of 2, 3 or 4 is satisfied: 1. When the following conditions are satisfied: - TCM power supply voltage: More than 11 V - After range change completion, it spends 2 seconds or more. 2. When all of the following conditions are satisfied and this state is maintained for 5 seconds: - Primary pulley speed: 500 rpm or more - Input speed: Less than 150 rpm - Range: Other than P, N - P0715 is not detected 3. When all of the following conditions are satisfied and this state is maintained for 0.5 seconds: - 10-msec-ago input speed: 1,000 rpm or more - Now input speed: 0 rpm 4. When all of the following conditions are satisfied and this state is maintained for 5 seconds: - Range: D or L - Engine speed: 450 rpm or more - Input speed: 300 rpm or more - Primary pulley speed: 300 rpm or more - Secondary pulley speed: 300 rpm or more - Differences between engine speed and primary pulley speed: 1,000 rpm or less - Differences between primary pulley speed and input speed: More than 1,000 rpm - Differences between engine speed and input speed: More than 1,000 rpm - Lock-up command is being given (except for slip lock-up) - DTC other than the applicable DTC is not detected.	<ul style="list-style-type: none"> <li>Harness or connectors (Input speed sensor circuit is open or shorted.)</li> <li>Input speed sensor</li> </ul>

### DTC CONFIRMATION PROCEDURE

**CAUTION:**

**Always drive vehicle at a safe speed.**

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2. CHECK DTC DETECTION

 **With CONSULT**

1. Start the engine.
2. Drive the vehicle.
3. Maintain the following conditions for 10 seconds or more.

Selector lever : "D" position

# P0717 INPUT SPEED SENSOR A

[CVT: RE0F10J]

## < DTC/CIRCUIT DIAGNOSIS >

Engine speed : 1,200 rpm or more  
Vehicle speed : 40 km/h (25 MPH) or more

4. Stop the vehicle.
5. Check the first trip DTC.

### Is "P0717" detected?

YES >> Go to [TM-338, "Diagnosis Procedure"](#).  
NO >> INSPECTION END

## Diagnosis Procedure

INFOID:00000001135596

### 1. CHECK INPUT SPEED SENSOR POWER CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect input speed sensor connector.
3. Turn ignition switch ON.
4. Check voltage between input speed sensor harness connector terminal and ground.

+		-	Voltage
Connector	Terminal		
F29	3	Ground	10 – 16 V

#### Is the inspection result normal?

YES >> GO TO 2.  
NO >> GO TO 6.

### 2. CHECK INPUT SPEED SENSOR GROUND CIRCUIT

Check continuity between input speed sensor harness connector terminal and ground.

Input speed sensor		—	Continuity
Connector	Terminal		
F29	1	Ground	Existed

#### Is the inspection result normal?

YES >> GO TO 3.  
NO >> Repair or replace malfunctioning parts.

### 3. CHECK CIRCUIT BETWEEN INPUT SPEED SENSOR AND TCM (PART 1)

1. Turn ignition switch OFF.
2. Disconnect TCM connector.
3. Check continuity between input speed sensor harness connector terminal and TCM harness connector terminal.

Input speed sensor		TCM		Continuity
Connector	Terminal	Connector	Terminal	
F29	2	F89	24	Existed

#### Is the inspection result normal?

YES >> GO TO 4.  
NO >> Repair or replace malfunctioning parts.

### 4. CHECK CIRCUIT BETWEEN INPUT SPEED SENSOR AND TCM (PART 2)

Check continuity between input speed sensor harness connector terminal and ground.

# P0717 INPUT SPEED SENSOR A

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10J]

Input speed sensor		—	Continuity
Connector	Terminal		
F29	2	Ground	Not existed


Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair or replace malfunctioning parts.

## 5. CHECK TCM INPUT SIGNALS

1. Connect all of disconnected connectors.
2. Lift the vehicle.
3. Start the engine.
4. Check frequency of input speed sensor.

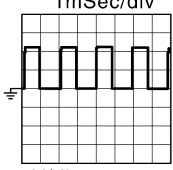+		-	Condition	Frequency (Approx.)
TCM				
Connector	Terminal			
F89	24	Ground	<ul style="list-style-type: none"> <li>• Selector lever: "L" position</li> <li>• Vehicle speed: 20 km/h (12 MPH)</li> </ul>	<p>880 Hz 1mSec/div</p>  <p>5V/div JSDIA3769GB</p>

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-47, "Intermittent Incident"](#).

NO >> Replace input speed sensor. Refer to [TM-418, "Removal and Installation"](#).

## 6. DETECT MALFUNCTIONING ITEMS

Check the following items:

- Open circuit or short circuit in harness between ignition switch and IPDM E/R. Refer to [PG-29, "Wiring Diagram - IGNITION POWER SUPPLY -"](#).
- Open circuit or short circuit in harness between IPDM E/R harness connector terminal 61 and input speed sensor harness connector terminal 3.
- 10A fuse (No.46, located in the IPDM E/R). Refer to [PG-85, "IPDM E/R Terminal Arrangement"](#).
- IPDM E/R

Is the check result normal?

YES >> Check intermittent incident. Refer to [GI-47, "Intermittent Incident"](#).

NO >> Repair or replace malfunctioning parts.

# P0740 TORQUE CONVERTER

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10J]

## P0740 TORQUE CONVERTER

### DTC Logic

INFOID:00000001135597

### DTC DETECTION LOGIC

DTC	CONSULT screen terms (Trouble diagnosis content)	DTC detection condition	Possible causes
P0740	TORQUE CONVERTER (Torque Converter Clutch Circuit/Open)	When all of the following conditions are satisfied and this state is maintained for 5 seconds: <ul style="list-style-type: none"><li>• TCM power supply voltage: More than 11 V</li><li>• P0743 is not detected.</li><li>• TCM judges that solenoid valve circuit is open.</li></ul>	<ul style="list-style-type: none"><li>• Harness or connector (Torque converter clutch solenoid valve circuit is open or shorted to power supply)</li><li>• Torque converter clutch solenoid valve</li></ul>

### DTC CONFIRMATION PROCEDURE

#### CAUTION:

Be careful of the driving speed.

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2. PREPARATION BEFORE OPERATION

##### With CONSULT

1. Start the engine.
2. Select "Data Monitor" in "TRANSMISSION".
3. Select "FLUID TEMP".
4. Confirm that the CVT fluid temperature is in the following range.

FLUID TEMP : 20°C (68°F) or more

##### With GST

1. Start the engine.
2. Set the CVT fluid to 20°C (68°F) or more.

#### NOTE:

When the ambient temperature is 20°C (68°F), the CVT fluid usually increases to 50 to 80°C (122 to 176°F) with driving in an urban area for approximately 10 minutes.

#### Is the CVT fluid 20°C (68°F) or more?

YES >> GO TO 3.

- NO >> 1. Warm the transaxle.  
2. GO TO 3.

#### 3. CHECK DTC DETECTION

1. Drive the vehicle.
2. Maintain the following conditions for 10 seconds or more.

Selector lever : "D" position

Vehicle speed : 40 km/h (25 MPH) or more

3. Stop the vehicle.
4. Check the first trip DTC.

#### Is "P0740" detected?

YES >> Go to [TM-341, "Diagnosis Procedure"](#).

NO >> INSPECTION END

# P0740 TORQUE CONVERTER

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10J]

INFOID:000000011355598

## Diagnosis Procedure

### 1. CHECK CIRCUIT BETWEEN TCM AND CVT UNIT

1. Turn ignition switch OFF.
2. Disconnect TCM connector and CVT unit connector.
3. Check continuity between TCM harness connector terminal and CVT unit harness connector terminal.

TCM		CVT unit		Continuity
Connector	Terminal	Connector	Terminal	
F89	38	F46	2	Existed

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace malfunctioning parts.

### 2. CHECK TORQUE CONVERTER CLUTCH SOLENOID VALVE CIRCUIT

Check resistance between CVT unit harness connector terminal and ground.

CVT unit		—	Condition	Resistance
Connector	Terminal			
F209	5	Ground	CVT fluid temperature: 20°C (68°F)	5.5 – 7.0 Ω
			CVT fluid temperature: 50°C (122°F)	6.0 – 8.0 Ω
			CVT fluid temperature: 80°C (176°F)	6.5 – 8.5 Ω

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-47, "Intermittent Incident"](#).

NO >> There is malfunction of torque converter clutch solenoid valve circuit. Replace transaxle assembly. Refer to [TM-433, "Removal and Installation"](#).

A  
B  
C  
TM  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# P0743 TORQUE CONVERTER

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10J]

## P0743 TORQUE CONVERTER

### DTC Logic

INFOID:000000011355599

### DTC DETECTION LOGIC

DTC	CONSULT screen terms (Trouble diagnosis content)	DTC detection condition	Possible causes
P0743	TORQUE CONVERTER (Torque Converter Clutch Circuit Electrical)	When all of the following conditions are satisfied and this state is maintained for 0.48 seconds: <ul style="list-style-type: none"><li>• TCM power supply voltage: More than 11 V</li><li>• TCM judges that solenoid valve circuit is shorted to ground.</li></ul>	<ul style="list-style-type: none"><li>• Harness or connector (Torque converter clutch solenoid valve circuit is shorted to ground)</li><li>• Torque converter clutch solenoid valve</li></ul>

### DTC CONFIRMATION PROCEDURE

#### CAUTION:

Be careful of the driving speed.

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2. PREPARATION BEFORE OPERATION

##### With CONSULT

1. Start the engine.
2. Select "Data Monitor" in "TRANSMISSION".
3. Select "FLUID TEMP".
4. Confirm that the CVT fluid temperature is in the following range.

FLUID TEMP : 20°C (68°F) or more

##### With GST

1. Start the engine.
2. Set the CVT fluid to 20°C (68°F) or more.

#### NOTE:

When the ambient temperature is 20°C (68°F), the CVT fluid usually increases to 50 to 80°C (122 to 176°F) with driving in an urban area for approximately 10 minutes.

#### Is the CVT fluid 20°C (68°F) or more?

YES >> GO TO 3.

- NO >> 1. Warm the transaxle.  
2. GO TO 3.

#### 3. CHECK DTC DETECTION

1. Drive the vehicle.
2. Maintain the following conditions for 10 seconds or more.

Selector lever : "D" position

Vehicle speed : 40 km/h (25 MPH) or more

3. Stop the vehicle.
4. Check the first trip DTC.

#### Is "P0743" detected?

YES >> Go to [TM-343, "Diagnosis Procedure"](#).

NO >> INSPECTION END

# P0743 TORQUE CONVERTER

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10J]

INFOID:000000011355600

## Diagnosis Procedure

### 1. CHECK CIRCUIT BETWEEN TCM AND CVT UNIT

1. Turn ignition switch OFF.
2. Disconnect TCM connector and CVT unit connector.
3. Check continuity between TCM harness connector terminal and ground.

TCM		—	Continuity
Connector	Terminal		
F89	38	Ground	Not existed

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace malfunctioning parts.

### 2. CHECK TORQUE CONVERTER CLUTCH SOLENOID VALVE CIRCUIT

Check resistance between CVT unit harness connector terminal and ground.

CVT unit		—	Condition	Resistance
Connector	Terminal			
F209	5	Ground	CVT fluid temperature: 20°C (68°F)	5.5 – 7.0 Ω
			CVT fluid temperature: 50°C (122°F)	6.0 – 8.0 Ω
			CVT fluid temperature: 80°C (176°F)	6.5 – 8.5 Ω

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-47, "Intermittent Incident"](#).

NO >> There is malfunction of torque converter clutch solenoid valve circuit. Replace transaxle assembly. Refer to [TM-433, "Removal and Installation"](#).

A  
B  
C  
TM  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# P0744 TORQUE CONVERTER

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10J]

## P0744 TORQUE CONVERTER

### DTC Logic

INFOID:000000011355601

### DTC DETECTION LOGIC

DTC	CONSULT screen terms (Trouble diagnosis content)	DTC detection condition	Possible causes
P0744	TORQUE CONVERTER (Torque converter clutch circuit intermittent)	When all of the following conditions are satisfied and this state is maintained for 30 seconds: <ul style="list-style-type: none"><li>• TCM power supply voltage: More than 11 V</li><li>• P0717 is not detected.</li><li>• CAN communication is normal</li><li>• Torque converter slip speed: (40+vehicle speed/2) rpm</li><li>• LU pressure: More than 0.2 MPa</li></ul>	<ul style="list-style-type: none"><li>• Torque converter clutch solenoid valve</li><li>• Control valve assembly</li><li>• Torque converter</li></ul>

### DTC CONFIRMATION PROCEDURE

#### CAUTION:

**Be careful of the driving speed.**

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2. PREPARATION BEFORE OPERATION

##### With CONSULT

1. Start the engine.
2. Select "Data Monitor" in "TRANSMISSION".
3. Select "FLUID TEMP".
4. Confirm that the CVT fluid temperature is in the following range.

FLUID TEMP : 20°C (68°F) or more

##### With GST

1. Start the engine.
2. Set the CVT fluid to 20°C (68°F) or more.

##### NOTE:

When the ambient temperature is 20°C (68°F), the CVT fluid usually increases to 50 to 80°C (122 to 176°F) with driving in an urban area for approximately 10 minutes.

Is the CVT fluid 20°C (68°F) or more?

- YES >> GO TO 3.  
NO >> 1. Warm the transaxle.  
2. GO TO 3.

#### 3. CHECK DTC DETECTION

1. Drive the vehicle.
2. Maintain the following conditions for 10 seconds or more.

Selector lever : "D" position  
Accelerator pedal position : 0.5/8 or more  
Vehicle speed : 40 km/h (25 MPH) or more

3. Stop the vehicle.
4. Check the first trip DTC.

Is "P0744" detected?

- YES >> Go to [TM-345. "Diagnosis Procedure"](#).



# P0744 TORQUE CONVERTER

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10J]

NO >> INSPECTION END

## Diagnosis Procedure

INFOID:000000011355602

### 1. CHECK INTERMITTENT INCIDENT

Refer to [GI-47, "Intermittent Incident"](#).

Is the inspection result normal?

YES >> Replace transaxle assembly. Refer to [TM-433, "Removal and Installation"](#).

NO >> Repair or replace the malfunction items.

A

B

C

TM

E

F

G

H

I

J

K

L

M

N

O

P

# P0746 PRESSURE CONTROL SOLENOID A

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10J]

## P0746 PRESSURE CONTROL SOLENOID A

### DTC Logic

INFOID:000000011355603

### DTC DETECTION LOGIC

DTC	CONSULT screen terms (Trouble diagnosis content)	DTC detection condition	Possible causes
P0746	PC SOLENOID A (Pressure Control Solenoid A Performance/Stuck Off)	<p>The detecting condition A or detection condition B is detected twice or more (1 second or more later after detection of the first) in the same DC under the following diagnosis conditions:</p> <ul style="list-style-type: none"> <li>• Diagnosis conditions                             <ul style="list-style-type: none"> <li>- Engine speed: More than 600 rpm</li> <li>- Primary pulley speed: More than 450 rpm</li> <li>- Idle is not being detected.</li> <li>- Acceleration/deceleration speed: <math>-0.49 \text{ m/s}^2</math> (<math>-0.05 \text{ G}</math>) or more</li> <li>- The primary pulley speed experienced 300 rpm or more and the secondary pulley speed experienced 250 rpm or more at least once.</li> <li>- Secondary pulley speed: More than 150 rpm</li> <li>- TCM power supply voltage: More than 11 V</li> </ul> </li> <li>• Detection condition A                             <ul style="list-style-type: none"> <li>- Status with the shifting ratio of the primary pulley speed/secondary pulley ratio exceeding 2.825 is 0.2 sec or more continuously.</li> </ul> </li> <li>• Detection condition B                             <ul style="list-style-type: none"> <li>- Status with the shifting ratio of the primary pulley speed/secondary pulley ratio exceeding 3.625 is 0.1 sec or more continuously.</li> </ul> </li> </ul>	<ul style="list-style-type: none"> <li>• Line pressure solenoid valve</li> <li>• Control valve assembly</li> </ul>

#### NOTE:

DC stands for "DRIVING CYCLE" and indicates a series of driving cycle of "Ignition switch OFF → ON → driving → OFF".

### DTC CONFIRMATION PROCEDURE

#### CAUTION:

**Be careful of the driving speed.**

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2. CHECK DTC DETECTION

1. Start the engine.
2. Drive the vehicle.
3. Maintain the following conditions for 10 seconds or more.

Selector lever	: "D" position
Accelerator pedal position	: 0.5/8 or more
Vehicle speed	: 40 km/h (25 MPH) or more

4. Stop the vehicle.
5. Check the first trip DTC.

Is "P0746" detected?

YES >> Go to [TM-347. "Diagnosis Procedure"](#).

# P0746 PRESSURE CONTROL SOLENOID A

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10J]

NO >> INSPECTION END

## Diagnosis Procedure

INFOID:000000011355604

### 1. CHECK INTERMITTENT INCIDENT

Refer to [GI-47, "Intermittent Incident"](#).

Is the inspection result normal?

- YES >> Replace transaxle assembly. Refer to [TM-433, "Removal and Installation"](#).
- NO >> Repair or replace the malfunction items.

A  
B  
C  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

TM

# P0776 PRESSURE CONTROL SOLENOID B

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10J]

## P0776 PRESSURE CONTROL SOLENOID B

### DTC Logic

INFOID:000000011355605

### DTC DETECTION LOGIC

DTC	CONSULT screen terms (Trouble diagnosis content)	DTC detection condition	Possible cause
P0776	PC SOLENOID B (Pressure Control Solenoid "B" Performance/Stuck Off)	<p>When any of 1 or 2 is satisfied and this state is maintained for 10 seconds:</p> <ol style="list-style-type: none"> <li>1. When all of the following conditions are satisfied: <ul style="list-style-type: none"> <li>- DTC other than the applicable DTC is not detected.</li> <li>- Engine speed: More than 625 rpm</li> <li>- Selector lever: Other than P/N position</li> <li>- CVT fluid temperature: More than - 20°C (-4°F)</li> <li>- TCM power supply: More than 11 V</li> <li>- The difference between instruction pressure of secondary pressure and 10-msec-ago instruction secondary pressure is 0 MPa or more</li> <li>- Instruction pressure of secondary pressure: 0 MPa or more</li> <li>- Instruction pressure of secondary pressure - secondary pressure: More than 1.2 MPa</li> </ul> </li> <li>- When all of the following conditions are satisfied and this state is maintained for 5.5 seconds: <ul style="list-style-type: none"> <li>• DTC other than the applicable DTC is not detected.</li> <li>• CVT fluid temperature: More than - 20°C (-4°F)</li> <li>• Selector lever: Other than P/N position</li> <li>• Secondary pressure - instruction pressure of secondary pressure: 1.2 MPa or more</li> </ul> </li> </ol> <ol style="list-style-type: none"> <li>2. When all of the following conditions are satisfied: <ul style="list-style-type: none"> <li>- DTC other than the applicable DTC is not detected.</li> <li>- CVT fluid temperature: More than - 20°C (-4°F)</li> <li>- Selector lever: Other than P/N position</li> <li>- TCM power supply: More than 11 V</li> <li>- When all of the following conditions are satisfied and this state is maintained for 5.5 seconds: <ul style="list-style-type: none"> <li>• DTC other than the applicable DTC is not detected.</li> <li>• CVT fluid temperature: More than - 20°C (-4°F)</li> <li>• Selector lever: Other than P/N position</li> <li>• Secondary pressure - instruction pressure of secondary pressure: 1.2 MPa or more</li> </ul> </li> <li>- The difference between instruction pressure of secondary pressure and 10-msec-ago instruction secondary pressure is 0 MPa or more</li> <li>- Secondary pressure - instruction pressure of secondary pressure: More than 1.2 MPa</li> </ul> </li> </ol>	Secondary pressure solenoid valve

# P0776 PRESSURE CONTROL SOLENOID B

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10J]

## DTC CONFIRMATION PROCEDURE

### CAUTION:

Always drive vehicle at a safe speed.

### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

### 2. CHECK DTC DETECTION

1. Start the engine.
2. Drive the vehicle.
3. Maintain the following condition for 20 seconds or more.

Selector lever : "D" position  
Vehicle speed : 40 km/h (25 MPH) or more  
Accelerator pedal position : 1.0/8 or more

4. Stop the vehicle.
5. Check the first trip DTC.

#### Is "P0776" detected?

YES >> Go to [TM-349, "Diagnosis Procedure"](#).  
NO >> INSPECTION END

## Diagnosis Procedure

INFOID:000000011355606

### 1. CHECK INTERMITTENT INCIDENT

Refer to [GI-47, "Intermittent Incident"](#).

#### Is the inspection result normal?

YES >> Replace transaxle assembly. Refer to [TM-433, "Removal and Installation"](#).  
NO >> Repair or replace the malfunction items.

# P0778 PRESSURE CONTROL SOLENOID B

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10J]

## P0778 PRESSURE CONTROL SOLENOID B

### DTC Logic

INFOID:0000000011355607

### DTC DETECTION LOGIC

DTC	CONSULT screen terms (Trouble diagnosis content)	DTC detection condition	Possible cause
P0778	PC SOLENOID B (Pressure Control Solenoid "B" Electrical)	When all of the following conditions are satisfied and this state is maintained for 0.48 seconds: <ul style="list-style-type: none"><li>• TCM power supply voltage: More than 11 V</li><li>• TCM judges that solenoid valve circuit is shorted to ground.</li></ul>	<ul style="list-style-type: none"><li>• Harness or connectors (Secondary pressure solenoid valve circuit is shorted to ground.)</li><li>• Secondary pressure solenoid valve</li></ul>

### DTC CONFIRMATION PROCEDURE

#### CAUTION:

Always drive vehicle at a safe speed.

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2. CHECK DTC DETECTION

1. Start the engine and wait for 5 seconds or more.
2. Check the first trip DTC.

Is "P0778" detected?

- YES >> Go to [TM-350, "Diagnosis Procedure"](#).  
NO >> INSPECTION END

### Diagnosis Procedure

INFOID:0000000011355608

#### 1. CHECK CIRCUIT BETWEEN TCM AND CVT UNIT

1. Turn ignition switch OFF.
2. Disconnect TCM connector and CVT unit connector.
3. Check continuity between TCM harness connector terminal and ground.

TCM		—	Continuity
Connector	Terminal		
F89	39	Ground	Not existed

Is the inspection result normal?

- YES >> GO TO 2.  
NO >> Repair or replace damaged parts.

#### 2. CHECK SECONDARY PRESSURE SOLENOID VALVE CIRCUIT

Check continuity between CVT unit harness connector terminal and ground.

CVT unit		—	Condition	Resistance
Connector	Terminal			
F209	3	Ground	CVT fluid temperature: 20°C (68°F)	5.5 – 7.0 Ω
			CVT fluid temperature: 50°C (122°F)	6.0 – 8.0 Ω
			CVT fluid temperature: 80°C (176°F)	6.5 – 8.5 Ω

Is the inspection result normal?

- YES >> Check intermittent incident. Refer to [GI-47, "Intermittent Incident"](#).

# P0778 PRESSURE CONTROL SOLENOID B

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10J]

NO >> There is malfunction of secondary pressure solenoid valve circuit. Replace transaxle assembly.  
Refer to [TM-433, "Removal and Installation"](#).

- A
- B
- C
- TM**
- E
- F
- G
- H
- I
- J
- K
- L
- M
- N
- O
- P

# P0779 PRESSURE CONTROL SOLENOID B

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10J]

## P0779 PRESSURE CONTROL SOLENOID B

### DTC Logic

INFOID:000000011355609

### DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC detection condition	Possible causes
P0779	Pressure control solenoid B Intermittent	When all of the following conditions are satisfied and this state is maintained for 0.2 seconds: <ul style="list-style-type: none"><li>• TCM power supply voltage: More than 11 V</li><li>• P0778 is not detected</li><li>• TCM judges that solenoid valve circuit is open or shorted to power supply.</li></ul>	<ul style="list-style-type: none"><li>• Harness or connector (Secondary pressure solenoid valve circuit open or shorted to power supply)</li><li>• Secondary pressure solenoid valve</li></ul>

### DTC CONFIRMATION PROCEDURE

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2. CHECK DTC DETECTION

1. Start the engine.
2. Drive the vehicle.
3. Maintain the following conditions for 5 seconds or more.

Selector lever : "D" position  
Vehicle speed : 40 km/h (25 MPH) or more

4. Stop the vehicle.
5. Check the first trip DTC.

Is "P0779" detected?

YES >> Go to [TM-352, "Diagnosis Procedure"](#).  
NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000011355610

#### 1. CHECK CIRCUIT BETWEEN TCM AND CVT UNIT

1. Turn ignition switch OFF.
2. Disconnect TCM connector and CVT unit connector.
3. Check continuity between TCM harness connector terminal and CVT unit harness connector terminal.

TCM		CVT unit		Continuity
Connector	Terminal	Connector	Terminal	
F89	39	F46	3	Existed

Is the inspection result normal?

YES >> GO TO 2.  
NO >> Repair or replace damaged parts.

#### 2. CHECK SECONDARY PRESSURE SOLENOID VALVE CIRCUIT

Check continuity between CVT unit harness connector terminal and ground.



# P0779 PRESSURE CONTROL SOLENOID B

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10J]

CVT unit		—	Condition	Resistance
Connector	Terminal			
F209	3	Ground	CVT fluid temperature: 20°C (68°F)	5.5 – 7.0 Ω
			CVT fluid temperature: 50°C (122°F)	6.0 – 8.0 Ω
			CVT fluid temperature: 80°C (176°F)	6.5 – 8.5 Ω

Is the inspection result normal?

- YES >> Check intermittent incident. Refer to [GI-47. "Intermittent Incident"](#).
- NO >> There is malfunction of secondary pressure solenoid valve circuit. Replace transaxle assembly. Refer to [TM-433. "Removal and Installation"](#).

A  
B  
C  
TM  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# P0841 TRANSMISSION FLUID PRESSURE SEN/SW A

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10J]

## P0841 TRANSMISSION FLUID PRESSURE SEN/SW A

### DTC Logic

INFOID:0000000011355611

### DTC DETECTION LOGIC

DTC	CONSULT screen terms (Trouble diagnosis content)	DTC detection condition	Possible cause
P0841	FLUID PRESS SEN/SW A (Transmission Fluid Pressure Sensor/Switch "A" Circuit Range/Performance)	When all of the following conditions are satisfied and this state is maintained for 5 seconds: <ul style="list-style-type: none"><li>• TCM power supply voltage: More than 11 V</li><li>• DTC other than the applicable DTC is not detected.</li><li>• Primary pulley speed: 300 rpm or more</li><li>• Secondary pulley speed: 250 rpm or more</li><li>• Target speed for shifting: Less than 0.1 seconds</li><li>• Primary pulley pressure is outside the specified value.</li></ul>	<ul style="list-style-type: none"><li>• Harness or connectors (Secondary pressure sensor circuit is open or shorted.)</li><li>• Harness or connectors (Primary pressure sensor circuit is open or shorted.)</li><li>• Secondary pressure sensor</li></ul>

### DTC CONFIRMATION PROCEDURE

#### CAUTION:

**Always drive vehicle at a safe speed.**

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2. CHECK DTC DETECTION

1. Start the engine.
2. Drive the vehicle.
3. Maintain the following condition for 10 seconds or more.

Selector lever : "D" position

Vehicle speed : Constant speed of 40 km/h (25 MPH)

#### CAUTION:

**Also keep the accelerator pedal position constant.**

4. Stop the vehicle.
5. Check the first trip DTC.

Is "P0841" detected?

YES >> Go to [TM-354, "Diagnosis Procedure"](#).

NO >> INSPECTION END

### Diagnosis Procedure

INFOID:0000000011355612

#### 1. CHECK INTERMITTENT INCIDENT

Refer to [GI-47, "Intermittent Incident"](#).

Is the inspection result normal?

YES >> Replace the transaxle assembly. Refer to [TM-433, "Removal and Installation"](#).

NO >> Repair or replace damaged parts.

# P0847 TRANSMISSION FLUID PRESSURE SEN/SW B

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10J]

## P0847 TRANSMISSION FLUID PRESSURE SEN/SW B

### DTC Logic

INFOID:0000000011355613

### DTC DETECTION LOGIC

DTC	CONSULT screen terms (Trouble diagnosis content)	DTC detection condition	Possible causes
P0847	FLUID PRESS SEN/SW B (Transmission Fluid Pressure Sensor/Switch B Circuit Low)	When all of the following conditions are satisfied and this state is maintained for 5 seconds: <ul style="list-style-type: none"> <li>CVT fluid temperature: More than <math>-20^{\circ}\text{C}</math> (<math>-4^{\circ}\text{F}</math>)</li> <li>TCM power supply voltage: 11 V or more</li> <li>Secondary pressure sensor voltage: 0.09 V or less</li> </ul>	<ul style="list-style-type: none"> <li>Harness or connector (Secondary pressure sensor circuit is open or shorted to ground)</li> <li>Secondary pressure sensor</li> <li>Control valve assembly</li> </ul>

### DTC CONFIRMATION PROCEDURE

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2. CHECK DTC DETECTION

##### With CONSULT

- Start the engine.
- Select "Data Monitor" in "TRANSMISSION".
- Select "FLUID TEMP".
- Maintain the following conditions for 10 seconds or more.

FLUID TEMP :  $-20^{\circ}\text{C}$  ( $-4^{\circ}\text{F}$ )

- Check the first trip DTC.

##### With GST

- Start the engine and wait for at least 10 seconds.

##### **CAUTION:**

**When the ambient temperature is less than  $-20^{\circ}\text{C}$  ( $-4^{\circ}\text{F}$ ) and the engine is cold, warm up the engine for approximately 5 minutes.**

- Check the first trip DTC.

##### Is "P0847" detected?

YES >> Go to [TM-355, "Diagnosis Procedure"](#).

NO >> INSPECTION END

### Diagnosis Procedure

INFOID:0000000011355614

#### 1. CHECK TCM INPUT SIGNALS

- Turn ignition switch OFF.
- Start the engine.
- Check voltage between TCM harness connector terminals.

+		-	Condition	Voltage
TCM				
Connector	Terminal			
F89	16	Ground	<ul style="list-style-type: none"> <li>Selector lever: "N" position</li> <li>At idle</li> </ul>	1.67 – 1.69 V

Is the inspection result normal?

# P0847 TRANSMISSION FLUID PRESSURE SEN/SW B

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10J]

- YES >> Check intermittent incident. Refer to [GI-47, "Intermittent Incident"](#).  
NO >> GO TO 2.

## 2.CHECK CIRCUIT BETWEEN TCM AND CVT UNIT (PART 1)

1. Turn ignition switch OFF.
2. Disconnect TCM connector and CVT unit connector.
3. Check continuity between TCM harness connector terminals and CVT unit harness connector terminals.

TCM		CVT unit		Continuity
Connector	Terminal	Connector	Terminal	
F89	11	F46	18	Existed
	16		14	
	26		22	

Is the inspection result normal?

- YES >> GO TO 3.  
NO >> Repair or replace malfunctioning parts.

## 3.CHECK CIRCUIT BETWEEN TCM AND CVT UNIT (PART 2)

Check continuity between TCM harness connector terminals and ground.

TCM		—	Continuity
Connector	Terminal		
F89	16	Ground	Not existed
	26		

Is the inspection result normal?

- YES >> There is malfunction of secondary pressure sensor circuit. Replace transaxle assembly. Refer to [TM-433, "Removal and Installation"](#).  
NO >> Repair or replace malfunctioning parts.

# P0848 TRANSMISSION FLUID PRESSURE SEN/SW B

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10J]

## P0848 TRANSMISSION FLUID PRESSURE SEN/SW B

### DTC Logic

INFOID:000000011355615

### DTC DETECTION LOGIC

DTC	CONSULT screen terms (Trouble diagnosis content)	DTC detection condition	Possible causes
P0848	FLUID PRESS SEN/SW B (Transmission Fluid Pressure Sensor/Switch B Circuit Low)	When all of the following conditions are satisfied and this state is maintained for 5 seconds: <ul style="list-style-type: none"> <li>• CVT fluid temperature: More than -20°C (-4°F)</li> <li>• TCM power supply voltage: More than 11 V</li> <li>• Instruction secondary pressure: 5.7 MPa or less</li> <li>• Secondary pressure sensor voltage: 4.7 V or more</li> </ul>	<ul style="list-style-type: none"> <li>• Harness or connector (Secondary pressure sensor circuit is shorted to power supply)</li> <li>• Secondary pressure sensor</li> <li>• Control valve assembly</li> </ul>

### DTC CONFIRMATION PROCEDURE

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, the ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2. CHECK DTC DETECTION

##### With CONSULT

1. Start the engine.
2. Select "Data Monitor" in "TRANSMISSION".
3. Select "FLUID TEMP".
4. Maintain the following conditions for 10 seconds or more.

FLUID TEMP : More than -20°C (-4°F)

5. Check the first trip DTC.

##### With GST

1. Start the engine and wait for at least 10 seconds.

##### **CAUTION:**

**When the ambient temperature is less than -20°C (-4°F) and the engine is cold, warm up the engine for approximately 5 minutes.**

2. Check the first trip DTC.

##### Is "P0848" detected?

YES >> Go to [TM-357, "Diagnosis Procedure"](#).

NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000011355616

#### 1. CHECK TCM INPUT SIGNALS

1. Turn ignition switch OFF.
2. Start the engine.
3. Check voltage between TCM harness connector terminals.

+		-	Condition	Voltage
TCM				
Connector	Terminal			
F89	16	Ground	<ul style="list-style-type: none"> <li>• Selector lever: "N" position</li> <li>• At idle</li> </ul>	1.67 – 1.69 V

# P0848 TRANSMISSION FLUID PRESSURE SEN/SW B

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10J]

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-47, "Intermittent Incident"](#).

NO >> GO TO 2.

## 2. CHECK SECONDARY PRESSURE SENSOR POWER CIRCUIT

1. Turn ignition switch OFF.
2. Connect TCM connector.
3. Disconnect CVT unit connector.
4. Turn ignition switch ON.
5. Check voltage between CVT unit harness connector terminal and ground.

+		-	Voltage (Approx.)
CVT unit			
Connector	Terminal		
F46	22	Ground	5.0 V

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace malfunctioning parts.

## 3. CHECK SECONDARY PRESSURE SENSOR SIGNAL CIRCUIT

Check voltage between CVT unit harness connector terminal and ground.

+		-	Voltage (Approx.)
CVT unit			
Connector	Terminal		
F46	14	Ground	0 V

Is the inspection result normal?

YES >> There is malfunction of secondary pressure sensor circuit. Replace transaxle assembly. Refer to [TM-433, "Removal and Installation"](#).

NO >> Repair or replace malfunctioning parts.

# P084C TRANSMISSION FLUID PRESSURE SEN/SW H

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10J]

## P084C TRANSMISSION FLUID PRESSURE SEN/SW H

### DTC Logic

INFOID:0000000011355617

### DTC DETECTION LOGIC

DTC	CONSULT screen terms (Trouble diagnosis content)	DTC detection condition	Possible causes
P084C	FLUID PRESS SEN/SW H (Transmission Fluid Pressure Sensor/Switch H Circuit Low)	When all of the following conditions are satisfied and this state is maintained for 5 seconds: <ul style="list-style-type: none"> <li>• CVT fluid temperature: More than -20°C (-4°F)</li> <li>• TCM power supply voltage: More than 11 V</li> <li>• Primary pressure sensor voltage: 0.09 V or less</li> </ul>	<ul style="list-style-type: none"> <li>• Harness or connector (Primary pressure sensor circuit is open or shorted to ground)</li> <li>• Primary pressure sensor</li> <li>• Control valve assembly</li> </ul>

### DTC CONFIRMATION PROCEDURE

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2. CHECK DTC DETECTION

##### With CONSULT

1. Start the engine.
2. Select "Data Monitor" in "TRANSMISSION".
3. Select "FLUID TEMP".
4. Maintain the following conditions for 10 seconds or more.

FLUID TEMP : More than -20°C (-4°F)

5. Check the first trip DTC.

##### With GST

1. Start the engine and wait for at least 10 seconds.

##### **CAUTION:**

**When the ambient temperature is less than -20°C (-4°F) and the engine is cold, warm up the engine for approximately 5 minutes.**

2. Check the first trip DTC.

Is "P084C" detected?

YES >> Go to [TM-359, "Diagnosis Procedure"](#).

NO >> INSPECTION END

### Diagnosis Procedure

INFOID:0000000011355618

#### 1. CHECK TCM INPUT SIGNALS

1. Turn ignition switch OFF.
2. Start the engine.
3. Check voltage between TCM harness connector terminals.

+		-	Condition	Voltage
TCM				
Connector	Terminal			
F89	17	Ground	<ul style="list-style-type: none"> <li>• Selector lever: "N" position</li> <li>• At idle</li> </ul>	0.90 – 0.92 V

Is the inspection result normal?

# P084C TRANSMISSION FLUID PRESSURE SEN/SW H

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10J]

- YES >> Check intermittent incident. Refer to [GI-47, "Intermittent Incident"](#).  
NO >> GO TO 2.

## 2.CHECK CIRCUIT BETWEEN TCM AND CVT UNIT (PART 1)

1. Turn ignition switch OFF.
2. Disconnect TCM connector and CVT unit connector.
3. Check continuity between TCM harness connector terminals and CVT unit harness connector terminals.

TCM		CVT unit		Continuity
Connector	Terminal	Connector	Terminal	
F89	11	F46	18	Existed
	17		13	
	26		22	

Is the inspection result normal?

- YES >> GO TO 3.  
NO >> Repair or replace malfunctioning parts.

## 3.CHECK CIRCUIT BETWEEN TCM AND CVT UNIT (PART 2)

Check continuity between TCM harness connector terminals and ground.

TCM		—	Continuity
Connector	Terminal		
F89	17	Ground	Not existed
	26		

Is the inspection result normal?

- YES >> There is malfunction of primary pressure sensor circuit. Replace transaxle assembly. Refer to [TM-433, "Removal and Installation"](#).  
NO >> Repair or replace malfunctioning parts.



# P084D TRANSMISSION FLUID PRESSURE SEN/SW H

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10J]

## P084D TRANSMISSION FLUID PRESSURE SEN/SW H

### DTC Logic

INFOID:0000000011355619

### DTC DETECTION LOGIC

DTC	CONSULT screen terms (Trouble diagnosis content)	DTC detection condition	Possible causes
P084D	FLUID PRESS SEN/SW H (Transmission Fluid Pressure Sensor/Switch "H" Circuit High)	When all of the following conditions are satisfied and this state is maintained for 5 seconds: <ul style="list-style-type: none"> <li>CVT fluid temperature: More than <math>-20^{\circ}\text{C}</math> (<math>-4^{\circ}\text{F}</math>)</li> <li>TCM power supply voltage: More than 11 V</li> <li>Primary pressure sensor voltage: 4.7 V or more</li> </ul>	<ul style="list-style-type: none"> <li>Harness or connector (Primary pressure sensor circuit is open or shorted to ground)</li> <li>Primary pressure sensor</li> <li>Control valve assembly</li> </ul>

### DTC CONFIRMATION PROCEDURE

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2. CHECK DTC DETECTION

##### With CONSULT

- Start the engine.
- Select "Data Monitor" in "TRANSMISSION".
- Select "FLUID TEMP".
- Maintain the following conditions for 10 seconds or more.

FLUID TEMP : More than  $-20^{\circ}\text{C}$  ( $-4^{\circ}\text{F}$ )

- Check the first trip DTC.

##### With GST

- Start the engine and wait for at least 10 seconds.

##### **CAUTION:**

**When the ambient temperature is less than  $-20^{\circ}\text{C}$  ( $-4^{\circ}\text{F}$ ) and the engine is cold, warm up the engine for approximately 5 minutes.**

- Check the first trip DTC.

Is "P084D" detected?

YES >> Go to [TM-361, "Diagnosis Procedure"](#).

NO >> INSPECTION END

### Diagnosis Procedure

INFOID:0000000011355620

#### 1. CHECK TCM INPUT SIGNALS

- Turn ignition switch OFF.
- Start the engine.
- Check voltage between TCM harness connector terminals.

+		-	Condition	Voltage
TCM				
Connector	Terminal			
F89	17	Ground	<ul style="list-style-type: none"> <li>Selector lever: "N" position</li> <li>At idle</li> </ul>	0.90 – 0.92 V

Is the inspection result normal?

# P084D TRANSMISSION FLUID PRESSURE SEN/SW H

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10J]

- YES >> Check intermittent incident. Refer to [GI-47, "Intermittent Incident"](#).  
NO >> GO TO 2.

## 2. CHECK PRIMARY PRESSURE SENSOR POWER CIRCUIT

1. Turn ignition switch OFF.
2. Connect TCM connector.
3. Disconnect CVT unit connector.
4. Turn ignition switch ON.
5. Check voltage between CVT unit harness connector terminal and ground.

+		-	Voltage (Approx.)
CVT unit			
Connector	Terminal		
F46	22	Ground	5.0 V

Is the inspection result normal?

- YES >> GO TO 3.  
NO >> Repair or replace malfunctioning parts.

## 3. CHECK PRIMARY PRESSURE SENSOR SIGNAL CIRCUIT

Check voltage between CVT unit harness connector terminal and ground.

+		-	Voltage (Approx.)
CVT unit			
Connector	Terminal		
F46	13	Ground	0 V

Is the inspection result normal?

- YES >> There is malfunction of primary pressure sensor circuit. Replace transaxle assembly. Refer to [TM-433, "Removal and Installation"](#).  
NO >> Repair or replace malfunctioning parts.

# P0863 TCM COMMUNICATION

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10J]

## P0863 TCM COMMUNICATION

### DTC Logic

INFOID:000000011355621

### DTC DETECTION LOGIC

DTC	CONSULT screen terms (Trouble diagnosis content)	DTC detection condition	Possible causes
P0863	CONTROL UNIT (CAN) (TCM Communication Circuit)	An error is detected at the initial CAN diagnosis of TCM.	TCM

### DTC CONFIRMATION PROCEDURE

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2. CHECK DTC DETECTION

1. Start the engine.
2. Check the DTC.

Is "P0863" detected?

- YES >> Go to [TM-363, "Diagnosis Procedure"](#).  
NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000011355622

#### 1. CHECK INTERMITTENT INCIDENT

Refer to [GI-47, "Intermittent Incident"](#).

Is the inspection result normal?

- YES >> Replace TCM. Refer to [TM-413, "Removal and Installation"](#).  
NO >> Repair or replace malfunctioning parts.

P0890 TCM

DTC Logic

INFOID:000000011355623

DTC DETECTION LOGIC

DTC	CONSULT screen terms (Trouble diagnosis content)	DTC detection condition	Possible causes
P0890	TCM (Transmission Control Module Power Relay Sense Circuit Low)	When all of the following conditions are satisfied and this state is maintained for 0.2 seconds: <ul style="list-style-type: none"> <li>• TCM power supply voltage: More than 11 V</li> <li>• Battery voltage: Less than 8.4 V</li> </ul>	<ul style="list-style-type: none"> <li>• Harness or connector (TCM power supply (back-up) circuit is open or shorted.)</li> <li>• TCM</li> </ul>

DTC CONFIRMATION PROCEDURE

1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

1. Start the engine and wait for 5 seconds or more.
2. Check the DTC.

Is "P0890" detected?

- YES >> Go to [TM-364, "Diagnosis Procedure"](#).  
 NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000011355624

1. CHECK TCM POWER SUPPLY (BACK-UP) CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect TCM connector.
3. Check voltage between TCM harness connector terminals and ground.

TCM		Ground	Voltage
Connector	Terminal		
F89	45	Ground	10 – 16 V
	46		

Is the inspection result normal?

- YES >> GO TO 3.  
 NO >> GO TO 2.

2. DETECT MALFUNCTIONING ITEMS

Check the following items:

- Open circuit or short circuit in harness between battery positive terminal and TCM harness connector terminals 45, and 46.
- 10A fuse [No.25, located in the fuse block (J/B)]. Refer to [PG-80, "Terminal Arrangement"](#).

Is the inspection result normal?

- YES >> Check intermittent incident. Refer to [GI-47, "Intermittent Incident"](#).  
 NO >> Repair or replace malfunctioning parts.

3. CHECK INTERMITTENT INCIDENT

Refer to [GI-47, "Intermittent Incident"](#).

Is the inspection result normal?

# P0890 TCM

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10J]

- 
- YES >> Replace the TCM. Refer to [TM-413, "Removal and Installation"](#).
  - NO >> Repair or replace malfunctioning parts.

A

B

C

**TM**

E

F

G

H

I

J

K

L

M

N

O

P

# P0962 PRESSURE CONTROL SOLENOID A

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10J]

## P0962 PRESSURE CONTROL SOLENOID A

### DTC Logic

INFOID:000000011355625

### DTC DETECTION LOGIC

DTC	CONSULT screen terms (Trouble diagnosis content)	DTC detection condition	Possible causes
P0962	PC SOLENOID A (Pressure Control Solenoid A Control Circuit Low)	When all of the following conditions are satisfied and this state is maintained for 0.2 seconds: <ul style="list-style-type: none"><li>• TCM power supply voltage: More than 11 V</li><li>• TCM judges that solenoid valve circuit is shorted to ground.</li></ul>	<ul style="list-style-type: none"><li>• Harness or connector (Line pressure solenoid valve circuit is shorted to ground)</li><li>• Line pressure solenoid valve</li></ul>

### DTC CONFIRMATION PROCEDURE

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2. CHECK DTC DETECTION

1. Start the engine and wait for 5 seconds or more.
2. Check the first trip DTC.

Is "P0962" detected?

- YES >> Go to [TM-366, "Diagnosis Procedure"](#).  
NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000011355626

#### 1. CHECK CIRCUIT BETWEEN TCM AND CVT UNIT

1. Turn ignition switch OFF.
2. Disconnect TCM connector and CVT unit connector.
3. Check continuity between TCM harness connector terminal and ground.

TCM		—	Continuity
Connector	Terminal		
F89	30	Ground	Not existed

Is the inspection result normal?

- YES >> GO TO 2.  
NO >> Repair or replace damaged parts.

#### 2. CHECK LINE PRESSURE SOLENOID VALVE CIRCUIT

Check continuity between CVT unit harness connector terminal and ground.

CVT unit		—	Condition	Resistance
Connector	Terminal			
F209	1	Ground	CVT fluid temperature: 20°C (68°F)	5.5 – 7.0 Ω
			CVT fluid temperature: 50°C (122°F)	6.0 – 8.0 Ω
			CVT fluid temperature: 80°C (176°F)	6.5 – 8.5 Ω

Is the inspection result normal?

- YES >> Check intermittent incident. Refer to [GI-47, "Intermittent Incident"](#).

# P0962 PRESSURE CONTROL SOLENOID A

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10J]

NO >> There is malfunction of line pressure solenoid valve circuit. Replace transaxle assembly. Refer to [TM-433, "Removal and Installation"](#).

- A
- B
- C
- TM**
- E
- F
- G
- H
- I
- J
- K
- L
- M
- N
- O
- P

# P0963 PRESSURE CONTROL SOLENOID A

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10J]

## P0963 PRESSURE CONTROL SOLENOID A

### DTC Logic

INFOID:000000011355627

### DTC DETECTION LOGIC

DTC	CONSULT screen terms (Trouble diagnosis content)	DTC detection condition	Possible causes
P0963	PC SOLENOID A (Pressure Control Solenoid A Control Circuit High)	When all of the following conditions are satisfied and this state is maintained for 0.2 seconds: <ul style="list-style-type: none"> <li>• TCM power supply voltage: More than 11 V</li> <li>• P0962 is not detected</li> <li>• TCM judges that solenoid valve circuit is open.</li> </ul>	<ul style="list-style-type: none"> <li>• Harness or connector (Line pressure solenoid valve circuit is open or shorted to power supply)</li> <li>• Line pressure solenoid valve</li> </ul>

### DTC CONFIRMATION PROCEDURE

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2. CHECK DTC DETECTION

1. Start the engine and wait for 5 seconds or more.
2. Check the first trip DTC.

Is "P0963" detected?

- YES >> Go to [TM-368, "Diagnosis Procedure"](#).  
 NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000011355628

#### 1. CHECK CIRCUIT BETWEEN TCM AND CVT UNIT

1. Turn ignition switch OFF.
2. Disconnect TCM connector and CVT unit connector.
3. Check continuity between TCM harness connector terminal and ground.

TCM		CVT unit		Continuity
Connector	Terminal	Connector	Terminal	
F89	30	F46	1	Existed

Is the inspection result normal?

- YES >> GO TO 2.  
 NO >> Repair or replace damaged parts.

#### 2. CHECK LINE PRESSURE SOLENOID VALVE CIRCUIT

Check continuity between CVT unit harness connector terminal and ground.

CVT unit		—	Condition	Resistance
Connector	Terminal			
F209	1	Ground	CVT fluid temperature: 20°C (68°F)	5.5 – 7.0 Ω
			CVT fluid temperature: 50°C (122°F)	6.0 – 8.0 Ω
			CVT fluid temperature: 80°C (176°F)	6.5 – 8.5 Ω

Is the inspection result normal?

- YES >> Check intermittent incident. Refer to [GI-47, "Intermittent Incident"](#).



# P0963 PRESSURE CONTROL SOLENOID A

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10J]

NO >> There is malfunction of line pressure solenoid valve circuit. Replace transaxle assembly. Refer to [TM-433, "Removal and Installation"](#).

- A
- B
- C
- TM**
- E
- F
- G
- H
- I
- J
- K
- L
- M
- N
- O
- P

# P0965 PRESSURE CONTROL SOLENOID B

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10J]

## P0965 PRESSURE CONTROL SOLENOID B

### DTC Logic

INFOID:000000011355629

### DTC DETECTION LOGIC

DTC	CONSULT screen terms (Trouble diagnosis content)	DTC detection condition	Possible causes
P0965	PC SOLENOID B (Pressure Control Solenoid B Control Circuit Range Performance)	<p>When any of 1 or 2 is satisfied and this state is maintained for 10 seconds:</p> <ol style="list-style-type: none"> <li>1. When all of the following conditions are satisfied: <ul style="list-style-type: none"> <li>- DTC other than the applicable DTC is not detected.</li> <li>- Engine speed: More than 625 rpm</li> <li>- Selector lever: Other than P/N position</li> <li>- CVT fluid temperature: More than -20°C (-4°F)</li> <li>- TCM power supply: More than 11 V</li> <li>- The difference between instruction pressure of primary pressure and 10-msec-ago instruction primary pressure is 0 MPa or more</li> <li>- Instruction pressure of primary pressure: 0.86 MPa or more</li> <li>- Instruction pressure of primary pressure - primary pressure: More than 1.2 MPa</li> </ul> </li> <li>When all of the following conditions are satisfied and this state is maintained for 1 second: <ul style="list-style-type: none"> <li>• DTC other than the applicable DTC is not detected.</li> <li>• CVT fluid temperature: More than -20°C (-4°F)</li> <li>• Selector lever: Other than P/N position</li> <li>• Engine speed: More than 625 rpm</li> <li>• Instruction pressure of primary pressure: More than 2 MPa</li> <li>• Primary pressure: 0.4 MPa or less</li> </ul> </li> <li>2. When all of the following conditions are satisfied: <ul style="list-style-type: none"> <li>- DTC other than the applicable DTC is not detected.</li> <li>- CVT fluid temperature: More than -20°C (-4°F)</li> <li>- Selector lever: Other than P/N position</li> <li>- TCM power supply: More than 11 V</li> <li>- When all of the following conditions are satisfied and this state is maintained for 5.5 seconds: <ul style="list-style-type: none"> <li>• DTC other than the applicable DTC is not detected.</li> <li>• CVT fluid temperature: More than -20°C (-4°F)</li> <li>• Selector lever: Other than P/N position</li> <li>• Primary pressure - instruction pressure of primary pressure: 1.2 MPa or more</li> </ul> </li> <li>- The difference between instruction pressure of primary pressure and 10-msec-ago instruction primary pressure is 0 MPa or more</li> <li>- Primary pressure - instruction pressure of primary pressure: More than 1.2 MPa</li> </ul> </li> </ol>	<ul style="list-style-type: none"> <li>• Harness or connector (Primary pressure solenoid valve circuit is open or shorted.)</li> <li>• Primary pressure solenoid valve</li> </ul>

### DTC CONFIRMATION PROCEDURE

# P0965 PRESSURE CONTROL SOLENOID B

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10J]

## 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

## 2. CHECK DTC DETECTION

1. Start the engine.
2. Drive the vehicle.
3. Maintain the following conditions for 20 seconds or more.

Vehicle speed : 40 km/h (25 MPH) or more

4. Stop the vehicle.
5. Check the first trip DTC.

Is "P0965" detected?

- YES >> Go to [TM-371, "Diagnosis Procedure"](#).  
NO >> INSPECTION END

## Diagnosis Procedure

INFOID:0000000011355630

### 1. CHECK INTERMITTENT INCIDENT

Refer to [GI-47, "Intermittent Incident"](#).

Is the inspection result normal?

- YES >> Replace transaxle assembly. Refer to [TM-433, "Removal and Installation"](#).  
NO >> Repair or replace malfunctioning parts.

A  
B  
C  
TM  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# P0966 PRESSURE CONTROL SOLENOID B

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10J]

## P0966 PRESSURE CONTROL SOLENOID B

### DTC Logic

INFOID:000000011355631

### DTC DETECTION LOGIC

DTC	CONSULT screen terms (Trouble diagnosis content)	DTC detection condition	Possible causes
P0966	PC SOLENOID B (Pressure Control Solenoid B Control Circuit Low)	When all of the following conditions are satisfied and this state is maintained for 0.48 seconds: <ul style="list-style-type: none"> <li>• TCM power supply voltage: More than 11 V</li> <li>• TCM judges that solenoid valve circuit is shorted to ground.</li> </ul>	<ul style="list-style-type: none"> <li>• Harness or connector (Primary pressure solenoid valve circuit shorted to ground)</li> <li>• Primary pressure solenoid valve</li> </ul>

### DTC CONFIRMATION PROCEDURE

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2. CHECK DTC DETECTION

1. Start the engine and wait for 5 seconds or more.
2. Check the first trip DTC.

Is "P0966" detected?

- YES >> Go to [TM-372, "Diagnosis Procedure"](#).  
 NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000011355632

#### 1. CHECK CIRCUIT BETWEEN TCM AND CVT UNIT

1. Turn ignition switch OFF.
2. Disconnect TCM connector and CVT unit connector.
3. Check continuity between TCM harness connector terminal and ground.

TCM		—	Continuity
Connector	Terminal		
F89	40	Ground	Not existed

Is the inspection result normal?

- YES >> GO TO 2.  
 NO >> Repair or replace damaged parts.

#### 2. CHECK PRIMARY PRESSURE SOLENOID VALVE CIRCUIT

Check continuity between CVT unit harness connector terminal and ground.

CVT unit		—	Condition	Resistance
Connector	Terminal			
F209	2	Ground	CVT fluid temperature: 20°C (68°F)	5.5 – 7.0 Ω
			CVT fluid temperature: 50°C (122°F)	6.0 – 8.0 Ω
			CVT fluid temperature: 80°C (176°F)	6.5 – 8.5 Ω

Is the inspection result normal?

- YES >> Check intermittent incident. Refer to [GI-47, "Intermittent Incident"](#).

# P0966 PRESSURE CONTROL SOLENOID B

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10J]

NO >> There is malfunction of primary pressure solenoid valve circuit. Replace transaxle assembly.  
Refer to [TM-433, "Removal and Installation"](#).

- A
- B
- C
- TM**
- E
- F
- G
- H
- I
- J
- K
- L
- M
- N
- O
- P

# P0967 PRESSURE CONTROL SOLENOID B

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10J]

## P0967 PRESSURE CONTROL SOLENOID B

### DTC Logic

INFOID:000000011355633

### DTC DETECTION LOGIC

DTC	CONSULT screen terms (Trouble diagnosis content)	DTC detection condition	Possible causes
P0967	PC SOLENOID B (Pressure Control Solenoid B Control Circuit High)	When all of the following conditions are satisfied and this state is maintained for 0.2 seconds: <ul style="list-style-type: none"> <li>• TCM power supply voltage: More than 11 V</li> <li>• P0966 is not detected</li> <li>• TCM judges that solenoid valve circuit is open.</li> </ul>	<ul style="list-style-type: none"> <li>• Harness or connector (Primary pressure solenoid valve circuit open or shorted to power supply)</li> <li>• Primary pressure solenoid valve</li> </ul>

### DTC CONFIRMATION PROCEDURE

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2. CHECK DTC DETECTION

1. Start the engine and wait for 5 seconds or more.
2. Check the first trip DTC.

Is "P0967" detected?

- YES >> Go to [TM-374, "Diagnosis Procedure"](#).  
 NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000011355634

#### 1. CHECK CIRCUIT BETWEEN TCM AND CVT UNIT

1. Turn ignition switch OFF.
2. Disconnect TCM connector and CVT unit connector.
3. Check continuity between TCM harness connector terminal and ground.

TCM		CVT unit		Continuity
Connector	Terminal	Connector	Terminal	
F89	40	F46	2	Existed

Is the inspection result normal?

- YES >> GO TO 2.  
 NO >> Repair or replace damaged parts.

#### 2. CHECK PRIMARY PRESSURE SOLENOID VALVE CIRCUIT

Check continuity between CVT unit harness connector terminal and ground.

CVT unit		—	Condition	Resistance
Connector	Terminal			
F209	2	Ground	CVT fluid temperature: 20°C (68°F)	5.5 – 7.0 Ω
			CVT fluid temperature: 50°C (122°F)	6.0 – 8.0 Ω
			CVT fluid temperature: 80°C (176°F)	6.5 – 8.5 Ω

Is the inspection result normal?

- YES >> Check intermittent incident. Refer to [GI-47, "Intermittent Incident"](#).

# P0967 PRESSURE CONTROL SOLENOID B

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10J]

NO >> There is malfunction of primary pressure solenoid valve circuit. Replace transaxle assembly.  
Refer to [TM-433, "Removal and Installation"](#).

- A
- B
- C
- TM**
- E
- F
- G
- H
- I
- J
- K
- L
- M
- N
- O
- P

# P2765 INPUT SPEED SENSOR B

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10J]

## P2765 INPUT SPEED SENSOR B

### DTC Logic

INFOID:000000011355635

### DTC DETECTION LOGIC

DTC	CONSULT screen terms (Trouble diagnosis content)	DTC detection condition	Possible causes
P2765	INPUT SPEED SENSOR B (Input/Turbine Speed Sensor B Circuit)	<p>When 1 is satisfied and any of 2, 3 or 4 is satisfied and this state is maintained for 5 seconds:</p> <ol style="list-style-type: none"> <li>1. When all of the following conditions are satisfied: <ul style="list-style-type: none"> <li>- TCM power supply voltage: More than 11 V</li> <li>- After range change completion, it spends 2 seconds or more.</li> </ul> </li> <li>2. When all of the following conditions are satisfied and this state is maintained for 5 seconds: <ul style="list-style-type: none"> <li>- Secondary pulley speed: Less than 149 rpm</li> <li>- Primary pulley speed: 1,000 rpm or more</li> </ul> </li> <li>3. When all of the following conditions are satisfied and this state is maintained for 0.5 seconds: <ul style="list-style-type: none"> <li>- 10-msec-ago secondary pulley speed: 1000 rpm or more</li> <li>- Now secondary pulley speed: 0 rpm</li> </ul> </li> <li>4. When all of the following conditions are satisfied and this state is maintained for 5 seconds: <ul style="list-style-type: none"> <li>- Range: D or L</li> <li>- Engine speed: 450 rpm or more</li> <li>- Primary pulley speed: 300 rpm or more</li> <li>- Secondary pulley speed: 300 rpm or more</li> <li>- Input speed: 300 rpm or more</li> <li>- The difference between engine speed and primary pulley speed is 1,000 rpm or less</li> <li>- The difference between engine speed and input speed is 1,000 rpm or less</li> <li>- The difference between primary pulley speed and input speed is 1,000 rpm or less</li> <li>- Lock-up command is being given (except for slip lock-up)</li> <li>- DTC other than the applicable DTC is not detected.</li> <li>- When any of following items are satisfied: <ul style="list-style-type: none"> <li>• Primary pulley speed/secondary pulley speed: More than 2.9</li> <li>• Primary pulley speed/secondary pulley speed: Less than 0.3</li> </ul> </li> </ul> </li> </ol>	<ul style="list-style-type: none"> <li>• Harness or connector (Output speed sensor circuit is open or shorted)</li> <li>• Output speed sensor</li> </ul>

### DTC CONFIRMATION PROCEDURE

#### CAUTION:

**Be careful of the driving speed.**

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.



# P2765 INPUT SPEED SENSOR B

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10J]

>> GO TO 2.

## 2. CHECK DTC DETECTION

1. Start the engine.
2. Drive the vehicle.
3. Maintain the following conditions for 10 seconds or more.

Selector lever : "D" position  
Engine speed : 1,200 rpm or more  
Vehicle speed : 55 km/h (34 MPH) or more

4. Stop the vehicle.
5. Check the first trip DTC.

Is "P2765" detected?

YES >> Go to [TM-377. "Diagnosis Procedure"](#).  
NO >> INSPECTION END

## Diagnosis Procedure

INFOID:0000000011355636

### 1. CHECK OUTPUT SPEED SENSOR POWER CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect output speed sensor connector.
3. Turn ignition switch ON.
4. Check voltage between output speed sensor harness connector terminal and ground.

+		-	Voltage
Connector	Terminal		
F23	3	Ground	10 – 16 V

Is the inspection result normal?

YES >> GO TO 2.  
NO >> GO TO 6.

### 2. CHECK OUTPUT SPEED SENSOR GROUND CIRCUIT

Check continuity between output speed sensor harness connector terminal and ground.

Output speed sensor		—	Continuity
Connector	Terminal		
F23	1	Ground	Existed

Is the inspection result normal?

YES >> GO TO 3.  
NO >> Repair or replace malfunctioning parts.

### 3. CHECK CIRCUIT BETWEEN OUTPUT SPEED SENSOR AND TCM (PART 1)

1. Turn ignition switch OFF.
2. Disconnect TCM connector.
3. Check continuity between output speed sensor harness connector terminal and TCM harness connector terminal.

Output speed sensor		TCM		Continuity
Connector	Terminal	Connector	Terminal	
F23	2	F89	34	Existed

Is the inspection result normal?

## P2765 INPUT SPEED SENSOR B

[CVT: RE0F10J]

### < DTC/CIRCUIT DIAGNOSIS >

- YES >> GO TO 4.  
 NO >> Repair or replace malfunctioning parts.

#### 4. CHECK CIRCUIT BETWEEN OUTPUT SPEED SENSOR AND TCM (PART 2)

Check continuity between output speed sensor harness connector terminal and ground.


Output speed sensor		—	Continuity
Connector	Terminal		
F23	2	Ground	Not existed

#### Is the inspection result normal?

- YES >> GO TO 5.  
 NO >> Repair or replace malfunctioning parts.

#### 5. CHECK TCM INPUT SIGNALS

1. Connect all of disconnected connectors.
2. Lift the vehicle.
3. Start the engine.
4. Check frequency of output speed sensor.

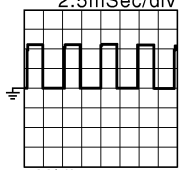+		—	Condition	Frequency (Approx.)
TCM				
Connector	Terminal			
F89	34	Ground	<ul style="list-style-type: none"> <li>• Selector lever: "L" position</li> <li>• Vehicle speed: 20 km/h (12 MPH)</li> </ul>	<p style="text-align: center;">200 Hz</p>  <p style="text-align: center;">2.5mSec/div</p> <p style="text-align: center;">5V/div</p> <p style="text-align: right; font-size: small;">JSDIA1904GB</p>

#### Is the inspection result normal?

- YES >> Check intermittent incident. Refer to [GI-47, "Intermittent Incident"](#).  
 NO >> Replace output speed sensor. Refer to [TM-422, "Removal and Installation"](#).

#### 6. DETECT MALFUNCTIONING ITEMS

Check the following items:

- Open circuit or short circuit in harness between ignition switch and IPDM E/R. Refer to [PG-29, "Wiring Diagram - IGNITION POWER SUPPLY -"](#).
- Open circuit or short circuit in harness between IPDM E/R harness connector terminal 61 and output speed sensor harness connector terminal 3.
- 10A fuse (No.46, located in the IPDM E/R). Refer to [PG-85, "IPDM E/R Terminal Arrangement"](#).
- IPDM E/R

#### Is the check result normal?

- YES >> Check intermittent incident. Refer to [GI-47, "Intermittent Incident"](#).  
 NO >> Repair or replace malfunctioning parts.

# P2813 SELECT SOLENOID

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10J]

## P2813 SELECT SOLENOID

### DTC Logic

INFOID:000000011355637

### DTC DETECTION LOGIC

DTC	CONSULT screen terms (Trouble diagnosis content)	DTC detection condition	Possible causes
P2813	SELECT SOLENOID (Select solenoid)	<p>When any of 1, or 2 is satisfied:</p> <ol style="list-style-type: none"> <li>When all the following conditions are established three times in 1DC <ul style="list-style-type: none"> <li>- Precondition</li> <li>• DTC other than the applicable DTC is not detected.</li> <li>• Throttle position: More than 6.27 deg.</li> <li>• Vehicle speed: Less than 3 km/h (1 MPH)</li> <li>• CVT fluid temperature: More than 20°C (68°F)</li> <li>• Selector lever: Other than P, N</li> <li>• Turbine speed when performed N → D, N (P) → R: More than 500 rpm</li> <li>• TCM power supply voltage: More than 11 V</li> </ul> </li> <li>When all of the following conditions are satisfied and this state is maintained for 30 seconds: <ul style="list-style-type: none"> <li>- Detection time <ul style="list-style-type: none"> <li>• N → D: 0.4 seconds</li> <li>• N → R: 0.3 seconds</li> <li>• P → R: 0.3 seconds</li> </ul> </li> </ul> </li> </ol> <p>- The counting of time continues while all of the following conditions are satisfied and stops when the conditions become unsatisfied (the count is maintained). When accumulated time reaches 30 seconds (Clutch is judged as engaged and the count is reset.)</p> <ul style="list-style-type: none"> <li>• Selector lever: Other than P, N</li> <li>• Vehicle speed: Less than 3 km/h (1 MPH)</li> <li>• Differences between primary pulley speed and secondary speed: Less than 120 rpm</li> <li>• Clutch instructions pressure: 0.95 MPa or more</li> <li>• Differences between turbine speed and input speed: Less than 200 rpm</li> <li>• Turbine speed – speed: More than 450 rpm</li> <li>• DTC other than the applicable DTC is not detected.</li> <li>• TCM power supply voltage: More than 11 V</li> </ul>	Select solenoid valve

**NOTE:**

DC stands for “DRIVING CYCLE” and indicates a series of driving cycle of “Ignition switch OFF → ON → driving → OFF”.

### DTC CONFIRMATION PROCEDURE

**CAUTION:**

**Be careful of the driving speed.**

**1. PREPARATION BEFORE WORK**

## P2813 SELECT SOLENOID

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10J]

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

### 2. CHECK DTC DETECTION 1

---

1. Start the engine.
2. Maintain the following conditions. (Keep 30seconds or more after the selector lever shifted.)

Selector lever : N→ D, N → R, P→ R

3. Check the first trip DTC.

Is "P2813" detected?

- YES >> Go to [TM-380, "Diagnosis Procedure"](#).  
NO >> INSPECTION END

### Diagnosis Procedure

INFOID:0000000011355638

### 1. CHECK INTERMITTENT INCIDENT

---

Refer to [GI-47, "Intermittent Incident"](#).

Is the inspection result normal?

- YES >> Replace transaxle assembly. Refer to [TM-433, "Removal and Installation"](#).  
NO >> Repair or replace malfunctioning parts.

# P2814 SELECT SOLENOID

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10J]

## P2814 SELECT SOLENOID

### DTC Logic

INFOID:000000011355639

### DTC DETECTION LOGIC

DTC	CONSULT screen terms (Trouble diagnosis content)	DTC detection condition	Possible causes
P2814	SELECT SOLENOID (Select solenoid)	When all of the following conditions are satisfied and this state is maintained for 0.48 seconds: <ul style="list-style-type: none"> <li>• TCM power supply voltage: 11 V or more</li> <li>• TCM judges that solenoid valve circuit is shorted to ground.</li> </ul>	<ul style="list-style-type: none"> <li>• Harness or connector (Select solenoid valve circuit shorted to ground)</li> <li>• Select solenoid valve</li> </ul>

### DTC CONFIRMATION PROCEDURE

#### CAUTION:

Be careful of the driving speed.

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2. CHECK DTC DETECTION

1. Start the engine.
2. Maintain the following conditions. (Keep 5 seconds or more after the selector lever shifted.)

Selector lever : N → D, N → R, P → R

3. Check the first trip DTC.

Is "P2814" detected?

- YES >> Go to [TM-381, "Diagnosis Procedure"](#).  
 NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000011355640

#### 1. CHECK CIRCUIT BETWEEN TCM AND CVT UNIT

1. Turn ignition switch OFF.
2. Disconnect TCM connector and CVT unit connector.
3. Check continuity between TCM harness connector terminal and ground.

TCM		—	Continuity
Connector	Terminal		
F89	37	Ground	Not existed

Is the inspection result normal?

- YES >> GO TO 2.  
 NO >> Repair or replace damaged parts.

#### 2. CHECK SELECT SOLENOID VALVE CIRCUIT

Check continuity between CVT unit harness connector terminal and ground.

## P2814 SELECT SOLENOID

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10J]

CVT unit		—	Condition	Resistance
Connector	Terminal			
F209	4	Ground	CVT fluid temperature: 20°C (68°F)	5.5 – 7.0 Ω
			CVT fluid temperature: 50°C (122°F)	6.0 – 8.0 Ω
			CVT fluid temperature: 80°C (176°F)	6.5 – 8.5 Ω

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-47. "Intermittent Incident"](#).

NO >> There is malfunction of select solenoid valve circuit. Replace transaxle assembly. Refer to [TM-433. "Removal and Installation"](#).

# P2815 SELECT SOLENOID

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10J]

## P2815 SELECT SOLENOID

### DTC Logic

INFOID:0000000011355641

### DTC DETECTION LOGIC

DTC	CONSULT screen terms (Trouble diagnosis content)	DTC detection condition	Possible causes
P2815	SELECT SOLENOID (Select solenoid)	When all of the following conditions are satisfied and this state is maintained for 0.2 seconds: <ul style="list-style-type: none"> <li>• TCM power supply voltage: More than 11 V</li> <li>• TCM judges that solenoid valve circuit is open.</li> <li>• P2814 is not detected.</li> </ul>	<ul style="list-style-type: none"> <li>• Harness or connector (Select solenoid valve circuit open or shorted to power supply)</li> <li>• Select solenoid valve</li> </ul>

### DTC CONFIRMATION PROCEDURE

#### 1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

#### 2. CHECK DTC DETECTION

1. Start the engine.
2. Maintain the following conditions. (Keep 5 seconds or more after the selector lever shifted.)

Selector lever : N → D, N → R, P → R

3. Check the first trip DTC.

Is "P2815" detected?

- YES >> Go to [TM-383. "Diagnosis Procedure"](#).  
 NO >> INSPECTION END

### Diagnosis Procedure

INFOID:0000000011355642

#### 1. CHECK CIRCUIT BETWEEN TCM AND CVT UNIT

1. Turn ignition switch OFF.
2. Disconnect TCM connector and CVT unit connector.
3. Check continuity between TCM harness connector terminal and ground.

TCM		CVT unit		Continuity
Connector	Terminal	Connector	Terminal	
F89	37	F46	4	Existed

Is the inspection result normal?

- YES >> GO TO 2.  
 NO >> Repair or replace damaged parts.

#### 2. CHECK SELECT SOLENOID VALVE CIRCUIT

Check continuity between CVT unit harness connector terminal and ground.

## P2815 SELECT SOLENOID

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10J]

CVT unit		—	Condition	Resistance
Connector	Terminal			
F209	4	Ground	CVT fluid temperature: 20°C (68°F)	5.5 – 7.0 Ω
			CVT fluid temperature: 50°C (122°F)	6.0 – 8.0 Ω
			CVT fluid temperature: 80°C (176°F)	6.5 – 8.5 Ω

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-47. "Intermittent Incident"](#).

NO >> There is malfunction of select solenoid valve circuit. Replace transaxle assembly. Refer to [TM-433. "Removal and Installation"](#).



# MAIN POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10J]

## MAIN POWER SUPPLY AND GROUND CIRCUIT

### Diagnosis Procedure

INFOID:0000000011355643

#### 1. CHECK TCM POWER CIRCUIT (PART 1)

1. Turn ignition switch OFF.
2. Disconnect TCM connector.
3. Check voltage between TCM harness connector terminals and ground.

+		-	Voltage
TCM			
Connector	Terminal	Ground	10 – 16 V
F89	45		
	46		

Is the inspection result normal?

- YES >> GO TO 2.  
NO >> GO TO 4.

#### 2. CHECK TCM POWER CIRCUIT (PART 2)

Check voltage between TCM harness connector terminals and ground.

+		-	Condition	Voltage			
TCM							
Connector	Terminal	Ground	Ignition switch ON	10 – 16 V			
F89	47				Ground	Ignition switch OFF	Approx. 0 V
						48	Ignition switch ON
	48						Ignition switch OFF

Is the inspection result normal?

- YES >> GO TO 3.  
NO >> GO TO 5.

#### 3. CHECK TCM GROUND CIRCUIT

Check continuity between TCM harness connector terminals and ground.

TCM		—	Continuity
Connector	Terminal		
F89	41	Ground	Existed
	42		

Is the inspection result normal?

- YES >> Check intermittent incident. Refer to [GI-47, "Intermittent Incident"](#).  
NO >> Repair or replace malfunctioning parts.

#### 4. DETECT MALFUNCTION ITEMS (PART 1)

Check the following items:

- Open circuit or short circuit in harness between battery positive terminal and fuse block (J/B). Refer to [PG-16, "Wiring Diagram - BATTERY POWER SUPPLY -"](#).
- Open circuit or short circuit in harness between fuse block (J/B) harness connector terminal 2N and TCM harness connector terminal 45, and 46.
- 10A fuse [No.25, located in the fuse block (J/B)]. Refer to [PG-80, "Terminal Arrangement"](#).

Is the inspection result normal?

- YES >> Check intermittent incident. Refer to [GI-47, "Intermittent Incident"](#).

## MAIN POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10J]

---

NO >> Repair or replace malfunctioning parts.

### 5. DETECT MALFUNCTIONING ITEMS (PART 2)

---

Check the following items:

- Open circuit or short circuit in harness between ignition switch and IPDM E/R. Refer to [PG-29. "Wiring Diagram - IGNITION POWER SUPPLY -"](#).
- Open circuit or short circuit in harness between IPDM E/R harness connector terminal 61 and TCM harness connector terminal 47, and 48.
- 10A fuse (No.46, located in the IPDM E/R). Refer to [PG-85. "IPDM E/R Terminal Arrangement"](#).
- IPDM E/R

Is the check result normal?

YES >> Check intermittent incident. Refer to [GI-47. "Intermittent Incident"](#).

NO >> Repair or replace malfunctioning parts.

# SHIFT POSITION INDICATOR CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10J]

## SHIFT POSITION INDICATOR CIRCUIT

### Component Parts Function Inspection

INFOID:0000000011355644

#### 1. CHECK SHIFT POSITION INDICATOR

1. Start the engine.
2. Shift selector lever.
3. Check that the selector lever position and the shift position indicator on the combination meter are identical.

Is the inspection result normal?

- YES >> INSPECTION END  
NO >> Go to [TM-387, "Diagnosis Procedure"](#).

### Diagnosis Procedure

INFOID:0000000011355645

#### 1. CHECK TCM INPUT/OUTPUT SIGNAL

##### Ⓜ With CONSULT

1. Start the engine.
2. Select "Data Monitor" in "TRANSMISSION".
3. Select "RANGE".
4. Shift selector lever.
5. Check that selector lever position, "RANGE" on CONSULT screen, and shift position indicator display on combination meter are identical.

Is the check result normal?

- YES >> INSPECTION END  
NO-1 ("RANGE" is changed but is not displayed on shift position indicator.)>>Check "Self Diagnostic Result" in "TRANSMISSION".  
NO-2 ("RANGE" and shift position indicator are different.)>>Check "Self Diagnostic Result" in "TRANSMISSION".  
NO-3 (Specific "RANGE" is not displayed on shift position indicator.)>>Check "Self Diagnostic Result" in "METER/M&A".

# OVERDRIVE CONTROL SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10J]

## OVERDRIVE CONTROL SWITCH

### Component Function Check

INFOID:000000011355646

#### 1. CHECK OD OFF INDICATOR LAMP FUNCTION

Check OD OFF indicator lamp turns ON for approx. 2 seconds when ignition switch turns ON.

Is the inspection results normal?

YES >> GO TO 2.

NO >> Go to [TM-391, "Diagnosis Procedure"](#).

#### 2. CHECK OVERDRIVE CONTROL SWITCH FUNCTION

1. Shift the selector lever to "D" position.
2. Check that OD OFF indicator lamp turns ON/OFF when overdrive control switch is operated.

Is the inspection results normal?

YES >> INSPECTION END

NO >> Go to [TM-388, "Diagnosis Procedure"](#).

### Diagnosis Procedure

INFOID:000000011355647

#### 1. CHECK OVERDRIVE CONTROL SWITCH CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect CVT shift selector connector.
3. Turn ignition switch ON.
4. Check voltage between CVT shift selector harness connector terminals.

Connector	CVT shift selector		Voltage (Approx.)
	+	-	
	Terminal		
M78	1	2	Battery voltage

Is the inspection result normal?

YES >> GO TO 2.

NO >> GO TO 4.

#### 2. CHECK CVT SHIFT SELECTOR ASSEMBLY

Check continuity between CVT shift selector connector terminals.

CVT shift selector Terminal	Condition	Continuity
1 - 2	Overdrive control switch is depressed.	Existed
	Overdrive control switch is released.	Not existed

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-47, "Intermittent Incident"](#).

NO >> GO TO 3.

#### 3. CHECK OVERDRIVE CONTROL SWITCH

1. Remove shift selector handle. Refer to [TM-407, "Exploded View"](#).
2. Check overdrive control switch. Refer to [TM-389, "Component Inspection"](#).

Is the inspection result normal?

YES >> Replace CVT shift selector assembly. Refer to [TM-407, "Removal and Installation"](#).

NO >> Repair or replace malfunctioning parts.

#### 4. CHECK GROUND CIRCUIT

Check continuity between CVT shift selector harness connector terminal and ground.

# OVERDRIVE CONTROL SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10J]

CVT shift selector		—	Continuity
Connector	Terminal		
M78	2	Ground	Existed

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair or replace malfunctioning parts.

## 5. CHECK CIRCUIT BETWEEN CVT SHIFT SELECTOR AND COMBINATION METER (PART 1)

1. Turn ignition switch OFF.
2. Disconnect combination meter connector.
3. Check continuity between CVT shift selector harness connector terminal and combination meter harness connector terminal.

CVT shift selector		Combination meter		Continuity
Connector	Terminal	Connector	Terminal	
M78	1	M24	52	Existed

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair or replace malfunctioning parts.

## 6. CHECK CIRCUIT BETWEEN CVT SHIFT SELECTOR AND COMBINATION METER (PART 2)

Check continuity between CVT shift selector harness connector terminal and ground.

CVT shift selector		—	Continuity
Connector	Terminal		
M78	1	Ground	Not existed

Is the inspection result normal?

YES >> GO TO 7.

NO >> Repair or replace malfunctioning parts.

## 7. CHECK COMBINATION METER INPUT SIGNAL

1. Connect all of disconnected connectors.
2. Turn ignition switch ON.
3. Select "Data Monitor" in "METER/M&A".
4. Select "O/D OFF SW".
5. Check that "O/D OFF SW" turns ON/OFF when overdrive control switch is operated. Refer to [MWI-23, "Reference Value"](#).

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-47, "Intermittent Incident"](#).

NO >> Replace combination meter. Refer to [MWI-85, "Removal and Installation"](#).

## Component Inspection

INFOID:0000000011355648

### 1. CHECK OVERDRIVE CONTROL SWITCH

## OVERDRIVE CONTROL SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10J]


Check continuity between wires of shift selector handle ①.

Condition	Continuity
Overdrive control switch is depressed	Existed
Overdrive control switch is released	Not existed

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace shift selector handle. Refer to [TM-407](#).  
["Exploded View"](#).

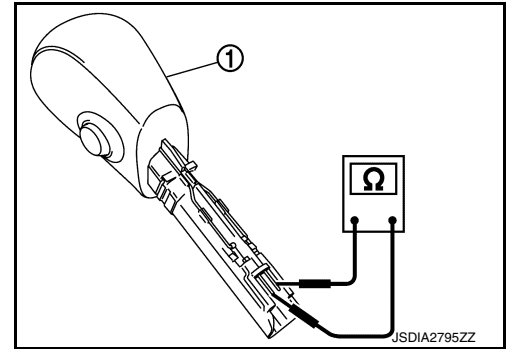

# OD OFF INDICATOR LAMP

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10J]

## OD OFF INDICATOR LAMP

### Component Function Check

INFOID:000000011355649

#### 1. CHECK OD OFF INDICATOR LAMP FUNCTION

Check OD OFF indicator lamp turns ON for approx. 2 seconds when ignition switch turns ON.

Is the inspection results normal?

- YES >> INSPECTION END
- NO >> Go to [TM-391, "Diagnosis Procedure"](#).

### Diagnosis Procedure

INFOID:000000011355650

#### 1. CHECK DTC (TCM)

##### With CONSULT

1. Turn ignition switch ON.
2. Check "Self Diagnostic Results" in "TRANSMISSION".

Is any DTC detected?

- YES >> Check DTC detected item. Refer to [TM-277, "DTC Index"](#).
- NO >> GO TO 2.

#### 2. CHECK DTC (COMBINATION METER)

##### With CONSULT

Check "Self Diagnostic Results" in "METER/M&A".

Is any DTC detected?

- YES >> Check DTC detected item. Refer to [TM-277, "DTC Index"](#).
- NO >> GO TO 3.

#### 3. CHECK COMBINATION METER INPUT/OUTPUT SIGNAL

##### With CONSULT

1. Shift the selector lever to "D" position.
2. Select "Data Monitor" in "METER/M&A".
3. Select "O/D OFF IND".
4. Check that "O/D OFF IND" turns ON/OFF when overdrive control switch is operated. Refer to [MWI-23, "Reference Value"](#).

Is the inspection result normal?

- YES >> Replace combination meter. Refer to [MWI-85, "Removal and Installation"](#).
- NO >> GO TO 4.

#### 4. CHECK TCM INPUT/OUTPUT SIGNAL

##### With CONSULT

1. Select "Data Monitor" in "TCM".
2. Select "SPORT MODE IND".
3. Check that "SPORT MODE IND" turns ON/OFF when overdrive control switch is operated. Refer to [TM-266, "Reference Value"](#).

Is the inspection result normal?

- YES >> Replace combination meter. Refer to [MWI-85, "Removal and Installation"](#).
- NO >> Check overdrive control switch circuit. Refer to [TM-388, "Diagnosis Procedure"](#).

## TOW MODE SYSTEM

### Component Function Check

INFOID:000000011355651

#### 1. CHECK TOW MODE SWITCH FUNCTION

Check that TOW mode indicator lamp turns ON/OFF when tow mode switch is operated.

Is the inspection results normal?

- YES >> INSPECTION END
- NO >> Go to [TM-392, "Diagnosis Procedure"](#).

### Diagnosis Procedure

INFOID:000000011355652

#### 1. CHECK DTC (TCM)

**With CONSULT**

1. Start the engine.
2. Check "Self Diagnostic Results" in "TRANSMISSION".

Is any DTC detected?

- YES >> Check DTC detected item. Refer to [TM-277, "DTC Index"](#).
- NO >> GO TO 2.

#### 2. CHECK DTC (COMBINATION METER)

**With CONSULT**

Check "Self Diagnostic Results" in "METER/M&A".

Is any DTC detected?

- YES >> Check DTC detected item. Refer to [MWI-29, "DTC Index"](#).
- NO >> GO TO 3.

#### 3. CHECK COMBINATION METER INPUT/OUTPUT SIGNAL

**With CONSULT**

1. Select "Data Monitor" in "METER/M&A".
2. Select "TOW MODE IND".
3. Check that "TOW MODE IND" turns ON/OFF when tow mode switch is operated. Refer to [MWI-23, "Reference Value"](#).

Is the inspection result normal?

- YES >> Replace the combination meter. Refer to [MWI-85, "Removal and Installation"](#).
- NO >> GO TO 4.

#### 4. CHECK TOW MODE SWITCH CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect tow mode switch connector.
3. Turn ignition switch ON.
4. Check voltage between tow mode switch harness connector terminals.

Connector	Tow mode switch		Voltage (Approx.)
	+	-	
M6	1	4	Battery voltage

Is the inspection result normal?

- YES >> GO TO 5.
- NO >> GO TO 6.

#### 5. CHECK TOW MODE SWITCH

Check tow mode switch. Refer to [TM-393, "Component Inspection"](#).

Is the inspection result normal?

- YES >> Check intermittent incident. Refer to [GI-47, "Intermittent Incident"](#).



# TOW MODE SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10J]

NO >> Repair or replace malfunctioning parts.

## 6. CHECK TOW MODE SWITCH GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Check continuity between tow mode switch harness connector terminal and ground.

Tow mode switch		—	Continuity
Connector	Terminal		
M6	4	Ground	Existed

Is the inspection result normal?

YES >> GO TO 7.

NO >> Repair or replace malfunctioning parts.

## 7. CHECK CIRCUIT BETWEEN COMBINATION METER AND TOW MODE SWITCH (PART 1)

1. Disconnect combination meter connector.
2. Check continuity between combination meter harness connector terminal and tow mode switch harness connector terminal.

Combination meter		Tow mode switch		Continuity
Connector	Terminal	Connector	Terminal	
M24	19	M6	1	Existed

Is the inspection result normal?

YES >> GO TO 8.

NO >> Repair or replace malfunctioning parts.

## 8. CHECK CIRCUIT BETWEEN COMBINATION METER AND TOW MODE SWITCH (PART 2)

Check continuity between combination meter harness connector terminal and ground.

Combination meter		—	Continuity
Connector	Terminal		
M24	19	Ground	Not existed

Is the inspection result normal?

YES >> GO TO 9.

NO >> Repair or replace malfunctioning parts.

## 9. CHECK COMBINATION METER INPUT/OUTPUT SIGNAL (PART 3)

1. Connect combination meter connector.
2. Turn ignition switch ON.
3. Check voltage between combination meter harness connector terminal and ground.

+		-	Voltage
Combination meter			
Connector	Terminal		
M24	19	Ground	Battery voltage

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-47, "Intermittent Incident"](#).

NO >> Replace the combination meter. Refer to [MWI-85, "Removal and Installation"](#).

## Component Inspection

INFOID:0000000011355653

### 1. CHECK TOW MODE SWITCH

Check continuity between tow mode switch connector terminals.

# TOW MODE SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10J]

TOW mode switch Terminal	Condition	Continuity
1 - 4	Tow mode switch is depressed.	Existed
	Tow mode switch is released.	Not existed

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace tow mode switch. Refer to [TM-412. "Removal and Installation"](#).

# SHIFT LOCK SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10J]

## SHIFT LOCK SYSTEM

### Component Function Check

INFOID:0000000011355654

#### 1. CHECK SHIFT LOCK OPERATION (PART 1)

1. Turn ignition ON.
2. Shift the selector lever to "P" (Park) position.
3. Attempt to shift the selector lever to any other position with the brake pedal released.

Can the selector lever be shifted to any other position?

- YES >> Go to [TM-395, "Diagnosis Procedure"](#).  
NO >> GO TO 2.

#### 2. CHECK SHIFT LOCK OPERATION (PART 2)

Attempt to shift the selector lever to any other position with the brake pedal depressed.

Can the selector lever be shifted to any other position?

- YES >> Inspection End.  
NO >> Go to [TM-395, "Diagnosis Procedure"](#).

### Diagnosis Procedure

INFOID:0000000011355655

Regarding Wiring Diagram information, refer to [TM-291, "Wiring diagram"](#).

#### 1. CHECK POWER SOURCE

1. Turn ignition switch OFF.
2. Disconnect BCM connector M18.
3. Check voltage between BCM connector M18 terminal 27 and ground while pressing the brake pedal.

BCM		Ground	Condition	Voltage
Connector	Terminal		Brake pedal depressed	Battery voltage
M18	27			

Is the inspection result normal?

- YES >> GO TO 3.  
NO >> GO TO 2.

#### 2. CHECK STOP LAMPS

Do the stop lamps operate normally?

Is the inspection result normal?

- YES >> Check the following:
- Harness between fuse block (J/B) and BCM.
  - Fuse block (J/B).
- NO >> Refer to [TM-291, "Wiring diagram"](#).

#### 3. CHECK HARNESS BETWEEN BCM AND CVT SHIFT SELECTOR

1. Disconnect CVT shift selector connector.
2. Check continuity between BCM connector M80 terminal 108 and CVT shift selector connector M78 terminal 3.

BCM		CVT shift selector		Continuity
Connector	Terminal	Connector	Terminal	
M80	108	M78	3	Yes

3. Check continuity between BCM connector M80 terminal 108 and ground.

# SHIFT LOCK SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10J]

BCM		Ground	Continuity
Connector	Terminal		
M80	108		No

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace harness or connector.

## 4. CHECK GROUND CIRCUIT (CVT SHIFT SELECTOR)

Check continuity between CVT shift selector connector M78 terminal 4 and ground.

CVT shift selector		Ground	Continuity
Connector	Terminal		
M78	4		Yes

Is the inspection result normal?

YES >> Replace CVT shift selector. Refer to [TM-407, "Removal and Installation"](#).

NO >> Repair or replace harness or connector.

## Component Inspection (Shift Lock Solenoid)

INFOID:0000000011355656

### 1. CHECK SHIFT LOCK SOLENOID

Apply voltage to terminals of shift lock solenoid and park position switch (shift selector) connector and check that shift lock solenoid is activated.

#### CAUTION:

- Connect the fuse between the terminals when applying the voltage.
- Never cause shorting between terminals.

+ (fuse)	-	Condition	Status
Shift lock solenoid			
Terminal			
3	4	Apply 12 V between terminals 3 and 4 with the park position switch (shift selector) in the "P" (park) position.	Shift lock solenoid operates

Is the inspection result normal?

YES >> Inspection End.

NO >> Replace CVT shift selector. Refer to [TM-407, "Removal and Installation"](#).

## Component Inspection (Park Position Switch)

INFOID:0000000011355657

### 1. CHECK PARK POSITION SWITCH (SHIFT SELECTOR)

Apply voltage to terminals of shift lock solenoid and park position switch (shift selector) connector and check that shift lock solenoid is activated.

#### CAUTION:

- Connect the fuse between the terminals when applying the voltage.
- Never cause shorting between terminals.

# SHIFT LOCK SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[CVT: RE0F10J]

+ (fuse)	-	Condition	Status
Shift lock solenoid			
Terminal			
3	4	Apply 12 V between terminals 3 and 4 with the park position switch (shift selector) in the "P" (park) position.	Shift lock solenoid operates

Is the inspection result normal?

YES >> Inspection End.

NO >> Replace CVT shift selector. Refer to [TM-407, "Removal and Installation"](#).

## Component Inspection (Stop Lamp Switch)

INFOID:0000000011355658

### 1.CHECK STOP LAMP SWITCH

Check the continuity between the stop lamp switch connector terminals.

Stop lamp switch		Condition	Continuity
Terminal			
1	2	Depressed brake pedal	Yes
		Released brake pedal	No

Is the inspection result normal?

YES >> Inspection End.

NO >> Replace stop lamp switch. Refer to [BR-20, "Exploded View"](#).

A  
B  
C  
TM  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# CVT CONTROL SYSTEM

< SYMPTOM DIAGNOSIS >

[CVT: RE0F10J]

## SYMPTOM DIAGNOSIS

### CVT CONTROL SYSTEM

#### Symptom Table

INFOID:000000011355659

- The diagnosis item number indicates the order of check. Start checking in the order from 1.
- Perform diagnoses of symptom table 1 before symptom table 2.

#### Symptom Table 1

Symptom		Engine system													Stall test	CVT position	Power supply	Control valve	CVT fluid level and state	Ignition switch and starter			
		EC-150	TM-277										TM-306	TM-307							TM-385	TM-433	TM-403
Shift Shock	Large shock (N→ D position)	1	4	8									3				6		2		9	5	
	Large shock (N→ R position)	1	4	8									3				6		2		9	5	
	Shock is too large for lock-up.	2	3														6		1		5	4	
Slips/Will Not Engage	Vehicle cannot be started from D position.	8	3		5	6	7	9	10	11							4	2	12	13	1		
	Vehicle cannot be started from R position.	8	3		5	6	7	9	10	11							4	2	12	13	1		
	Does not lock-up.	2	6	8	3	4	10	9	11	12	5	7									13	1	
	Does not hold lock-up condition.	2	6	8	3	4	10	9	11	12	5	7									13	1	
	Lock-up is not released.	2	6		3	4											5	7			8	1	
	With selector lever in D position, acceleration is extremely poor.	3	4	5	7	8	9	12	10	11							2	6	13	14	1		
	With selector lever in R position, acceleration is extremely poor.	3	4	5	7	8	9	12	10	11							2	6	13	14	1		
Slips at lock-up.	2	6	8	3	4	10	9	11	12	5	7									13	1		



# CVT CONTROL SYSTEM

< SYMPTOM DIAGNOSIS >

[CVT: RE0F10J]

Symptom		EC-150	TM-277							TM-306	TM-307	TM-385	TM-433	TM-403	PG-29, STR-5
Other	Engine does not start in N or P position.			3						2					1
	Engine starts in positions other than N or P.			3						2					1

Symptom Table 2

Symptom		TM-436	Transmission range switch	Oil pump	Forward clutch	Reverse brake	Planetary gear	Bearings	Parking mechanism	Stop lamp switch	Shift lock solenoid	CVT shift selector	
			TM-432								TM-397	TM-395	TM-407
Shift Shock	Large shock (N→ D position)		2		1								
	Large shock (N→ R position)		2			1							
	Shock is too large for lock-up.	1											



# CVT CONTROL SYSTEM

< SYMPTOM DIAGNOSIS >

[CVT: RE0F10J]

Symptom		Torque converter	Transmission range switch	Oil pump	Forward clutch	Reverse brake	Planetary gear	Bearings	Parking mechanism	Stop lamp switch	Shift lock solenoid	CVT shift selector
		TM-436	TM-432						TM-397	TM-395	TM-407	
Slips/Will Not Engage	Vehicle cannot be started from D position.		3	1	2							
	Vehicle cannot be started from R position.		4	1		2			3			
	Does not lock-up.	1	3	2								
	Does not hold lock-up condition.	1	3	2								
	Lock-up is not released.	1		2								
	With selector lever in D position, acceleration is extremely poor.	1	3		2							
	With selector lever in R position, acceleration is extremely poor.	1	4	2		3						
Slips at lock-up.	1		2									
Other	No creep at all.	1	6	2	4	5	3					
	Vehicle cannot run in all positions.	1		2	4	5	3		6			
	With selector lever in D position, driving is not possible.	1		2	4		3		5			
	With selector lever in R position, driving is not possible.	1		2		4	3		5			
	Judder occurs during lock-up.	1										
	Strange noise in D position.	1		2	4		3	5				
	Strange noise in R position.	1		2		4	3					
	Strange noise in N position.	1		2			3					
	Maximum speed low.	1	5	2	4		3					
	With selector lever in P position, vehicle does not enter parking condition or, with selector lever in another position, parking condition is not cancelled.								1			
	Vehicle runs with CVT in P position.						2		1			
	Vehicle runs with CVT in N position.				2	3	1					
	Engine stall.	1										
	Engine stalls when selector lever shifted N → D or R.	1										
Does not shift			1									

A  
B  
C  
TM  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# CVT CONTROL SYSTEM

< SYMPTOM DIAGNOSIS >

[CVT: RE0F10J]

Symptom		Torque converter	Transmission range switch	Oil pump	Forward clutch	Reverse brake	Planetary gear	Bearings	Parking mechanism	Stop lamp switch	Shift lock solenoid	CVT shift selector
		TM-436	TM-432							TM-397	TM-395	TM-407
Other	When brake pedal is depressed with ignition switch ON, selector lever cannot be shifted from P position to other position.									1	2	3
	When brake pedal is not depressed with ignition switch ON, selector lever can be shifted from P position to other position.									1	2	3

# PERIODIC MAINTENANCE


## CVT FLUID

### Inspection

INFOID:0000000011355660

#### FLUID LEAKAGE

- Check transaxle surrounding area (oil seal and plug etc.)for fluid leakage.
- If anything is found, repair or replace damaged parts and adjust CVT fluid level. Refer to [TM-405, "Adjustment"](#).

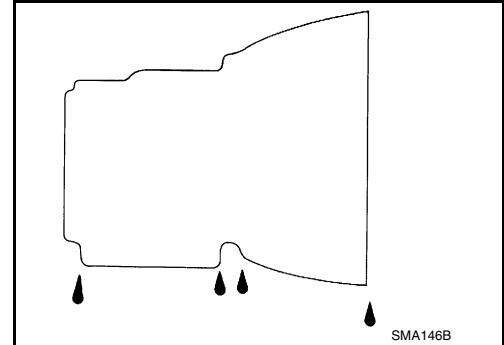

### Replacement

INFOID:0000000011355661

- CVT fluid** : Refer to [TM-438, "General Specification"](#).
- Fluid capacity** : Refer to [TM-438, "General Specification"](#).

#### CAUTION:

- Always use shop paper. Never use shop cloth.
- Replace a drain plug gasket with new ones at the final stage of the operation when installing.
- Use caution when looking into the drain hole as there is a risk of dripping fluid entering the eye.
- After replacement, always perform CVT fluid leakage check.


1. Select "Data Monitor" in "TRANSMISSION" using CONSULT.
2. Select "FLUID TEMP" and confirm that the CVT fluid temperature is 40°C (104°F) or less.
3. Check that the selector lever is in the "P" position, then completely engage the parking brake.
4. Lift up the vehicle.
5. Remove the drain plug and drain the CVT fluid from the oil pan. Refer to [TM-416, "Exploded View"](#).
6. Install the drain plug to oil pan.

#### CAUTION:

**Drain plug gasket use the old one.**

7. Remove the overflow plug ① from converter housing.

← : Vehicle front

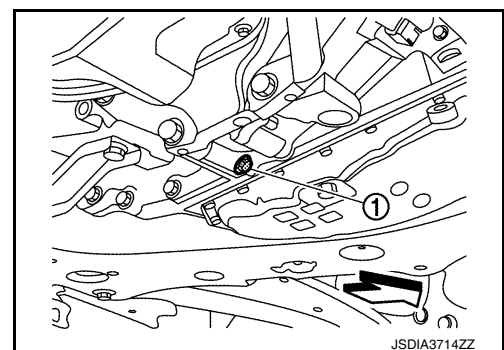

# CVT FLUID

< PERIODIC MAINTENANCE >

[CVT: RE0F10J]

8. Install the charging pipe set (KV311039S0) (A) into the overflow plug hole.

**CAUTION:**

**Tighten the charging pipe by hand.**

9. Install the ATF changer hose (B) to the charging pipe.

**CAUTION:**

**Press the ATF changer hose all the way onto the charging pipe until it stops.**

10. Fill approximately 3 liter (3-1/8 US qt, 2-5/8 Imp qt) of the CVT fluid.

11. Remove the ATF changer hose and charging pipe, then install the overflow plug.

**NOTE:**

Perform this work quickly because CVT fluid leaks.

12. Lift down the vehicle.

13. Start the engine.

14. While depressing the brake pedal, shift the selector lever to the entire position from “P” to “L”, and shift it to the “P” position.

**NOTE:**

Hold the lever at each position for 5 seconds.

15. Check that the CONSULT “Data Monitor” in “FLUID TEMP” is 35°C (95°F) to 45°C (113°F).

16. Stop the engine.

17. Lift up the vehicle.

18. Remove the drain plug, and then drain CVT fluid from oil pan.

19. Repeat steps 8 to 18 (one time).

20. Tighten the drain plug to the specified torque. Refer to [TM-416, "Exploded View"](#).

21. Remove the overflow plug.

22. Install the charging pipe set (KV311039S0) into the overflow plug hole.

**CAUTION:**

**Tighten the charging pipe by hand.**

23. Install the ATF changer hose to the charging pipe.

**CAUTION:**

**Press the ATF changer hose all the way onto the charging pipe until it stops.**

24. Fill approximately 3 liter (3-1/8 US qt, 2-5/8 Imp qt) of the CVT fluid.

25. Remove the ATF changer hose and charging pipe, then install the overflow plug.

**NOTE:**

Perform this work quickly because CVT fluid leaks.

26. Lift down the vehicle.

27. Start the engine.

28. While depressing the brake pedal, shift the selector lever to the entire position from “P” to “L”, and shift it to the “P” position.

**NOTE:**

Hold the lever at each position for 5 seconds.

29. Check that the CONSULT “Data Monitor” in “FLUID TEMP” is 35°C (95°F) to 45°C (113°F).

30. Lift up the vehicle.

31. Remove the overflow plug and confirm that the CVT fluid is drained from the overflow plug hole.

**CAUTION:**

**Perform this work with the vehicle idling.**

**NOTE:**


If the CVT fluid is not drained, refer to “Adjustment” and refill with the CVT fluid.

32. When the flow of CVT fluid slows to a drip, tighten the overflow plug to the specified torque. Refer to [TM-416, "Exploded View"](#).

**CAUTION:**

**Never reuse O-ring.**

33. Lift down the vehicle.

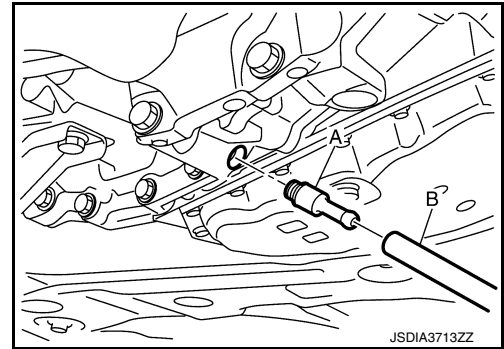

# CVT FLUID

< PERIODIC MAINTENANCE >

[CVT: RE0F10J]

34. Select "Data Monitor" in "TRANSMISSION" using CONSULT.
35. Select "CONFORM CVTF DETERIORATION".
36. Select "Erase".
37. Stop the engine.

## Adjustment

INFOID:000000011355662

**CVT fluid** : Refer to [TM-438, "General Specification"](#).

**Fluid capacity** : Refer to [TM-438, "General Specification"](#).

### CAUTION:

- During adjustment of the CVT fluid level, check CONSULT so that the oil temperature may be maintained from 35 to 45°C (95 to 113°F).
  - Maintain specified engine idle speed during CVT fluid level adjustment. Refer to [EC-527, "Idle Speed"](#).
  - Use caution when looking into the drain hole as there is a risk of dripping fluid entering the eye.
1. Check that the selector lever is in the "P" position, then completely engage the parking brake.
  2. Start the engine.
  3. Adjust the CVT fluid temperature to be approximately 40°C (104°F).

### NOTE:

The CVT fluid is largely affected by temperature. Therefore be sure to use CONSULT and check the "FLUID TEMP" under "TRANSMISSION" in "Data Monitor" while adjusting.


4. While depressing the brake pedal, shift the selector lever to the entire position from "P" to "L", and shift it to the "P" position.

### NOTE:

Hold the lever at each position for 5 seconds.

5. Lift up the vehicle.
6. Check that there is no CVT fluid leakage.
7. Remove the overflow plug ① from converter housing.

← : Vehicle front

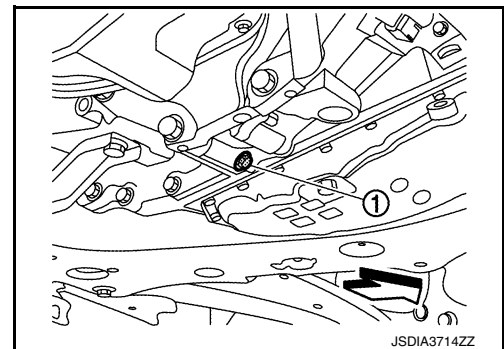

8. Install the charging pipe set (KV311039S0) (A) into the overflow plug hole.

### CAUTION:

**Tighten the charging pipe by hand.**

9. Install the ATF changer hose (B) to the charging pipe.

### CAUTION:


**Press the ATF changer hose all the way onto the charging pipe until it stops.**

10. Fill approximately 0.5 liter (1/2 US qt, 1/2 Imp qt) of the CVT fluid.
11. Remove the ATF changer hose from the charging pipe, and check that the CVT fluid drains out from the charging pipe. If it does not drain out, perform charging again.

### CAUTION:

**Perform this work with the vehicle idling.**

12. When the flow of CVT fluid slows to a drip, remove the charging pipe from the converter housing.
13. Tighten the overflow plug to the specified torque. Refer to [TM-416, "Exploded View"](#).

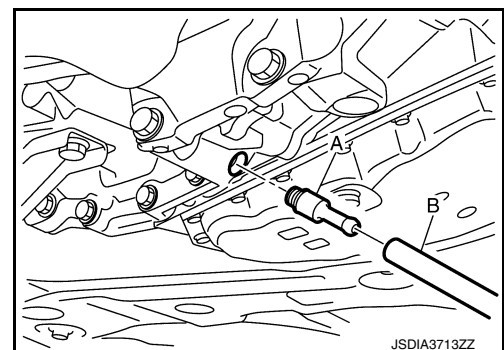

## CVT FLUID

< PERIODIC MAINTENANCE >

[CVT: RE0F10J]

---

**CAUTION:**

**Never reuse O-ring.**

14. Lift down the vehicle.
15. Stop the engine.

# CVT SHIFT SELECTOR

< REMOVAL AND INSTALLATION >


[CVT: RE0F10J]

## REMOVAL AND INSTALLATION

### CVT SHIFT SELECTOR

Exploded View

INFOID:0000000011355663

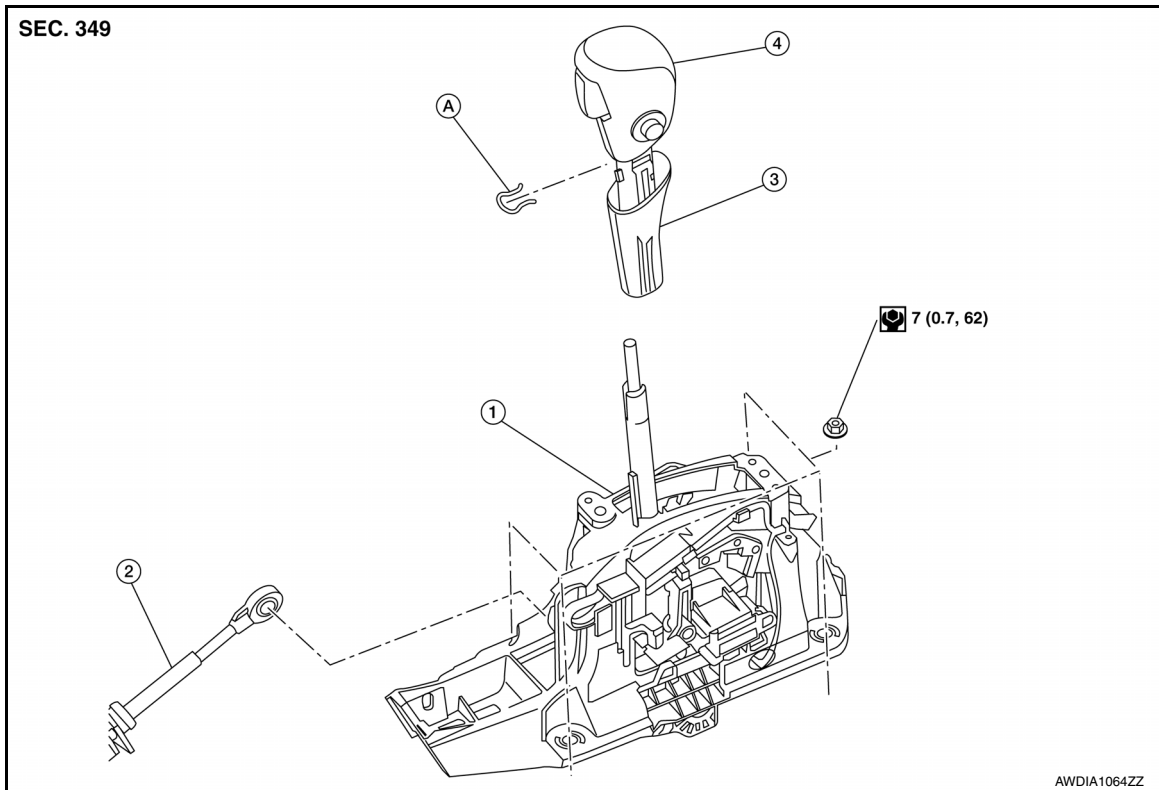


- |                                |                               |                                |
|--------------------------------|-------------------------------|--------------------------------|
| 1. CVT shift selector assembly | 2. Control cable              | 3. Shift selector handle cover |
| 4. Shift selector handle       | A. Shift selector handle clip |                                |

### Removal and Installation

INFOID:0000000011355664

#### REMOVAL

1. Apply the parking brake.  
**CAUTION:**  
**Make sure the vehicle cannot move with the parking brake applied.**
2. Remove shift lock override button cover (1) using suitable tool, and insert suitable tool into opening to depress the shift lock override button. Move shift selector to "N" position while depressing shift lock override button.  
⇐: Front

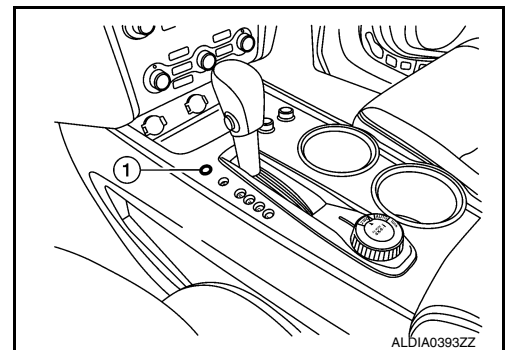


# CVT SHIFT SELECTOR

[CVT: RE0F10J]


## < REMOVAL AND INSTALLATION >

3. Remove the shift selector handle (1).
  - a. Release the shift selector handle cover (2) using a suitable tool from the base of the shift selector handle (1).
  - b. Remove the shift selector handle clip (A).
  - c. Pull upward and remove the shift selector handle (1).

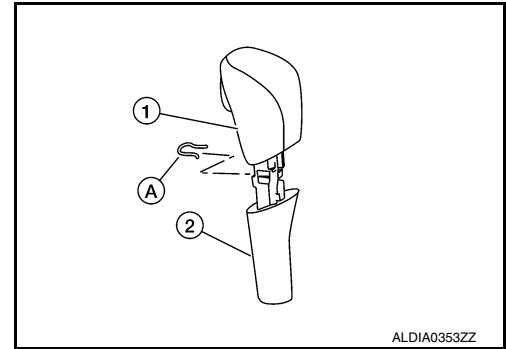

4. Remove center console upper side finisher (LH). Refer to [IP-18, "Exploded View"](#).
5. Release center console side finisher (LH/RH) clip and pawls using a suitable tool and remove.

- △: Clip
- : Pawl
- ⇐: Front

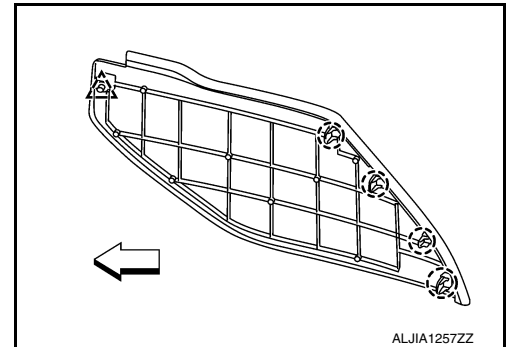

6. Release shift selector finisher clips and pawls using a suitable tool, disconnect the harness connectors and remove. Refer to [IP-18, "Exploded View"](#).
7. Release the harness clip, then disconnect the harness connector from shift selector.
8. Remove the control cable from the shift selector assembly. Refer to [TM-409, "Removal and Installation"](#).
9. Remove the four shift selector assembly nuts and the shift selector assembly from the vehicle.


## INSTALLATION

Installation is in the reverse order of removal.

- When installing control cable (1) to the shift selector assembly (2), check that control cable is fully pressed in until it stops with the ribbed surface (A) facing upward.

### NOTE:

- Apply multi-purpose grease to control cable eye before installation.
- Adjust control cable as necessary. Refer to [TM-410, "Inspection and Adjustment"](#).

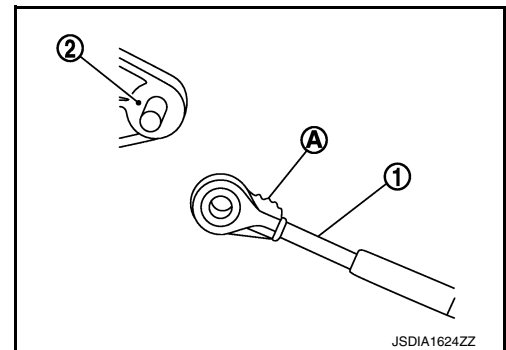

INFOID:000000011355665

## Inspection

### INSPECTION

Check the CVT position. If a malfunction is found, adjust the CVT position. Refer to [TM-307, "Inspection and Adjustment"](#).



# CONTROL CABLE


< REMOVAL AND INSTALLATION >

[CVT: RE0F10J]

## CONTROL CABLE

Exploded View

INFOID:000000011355666

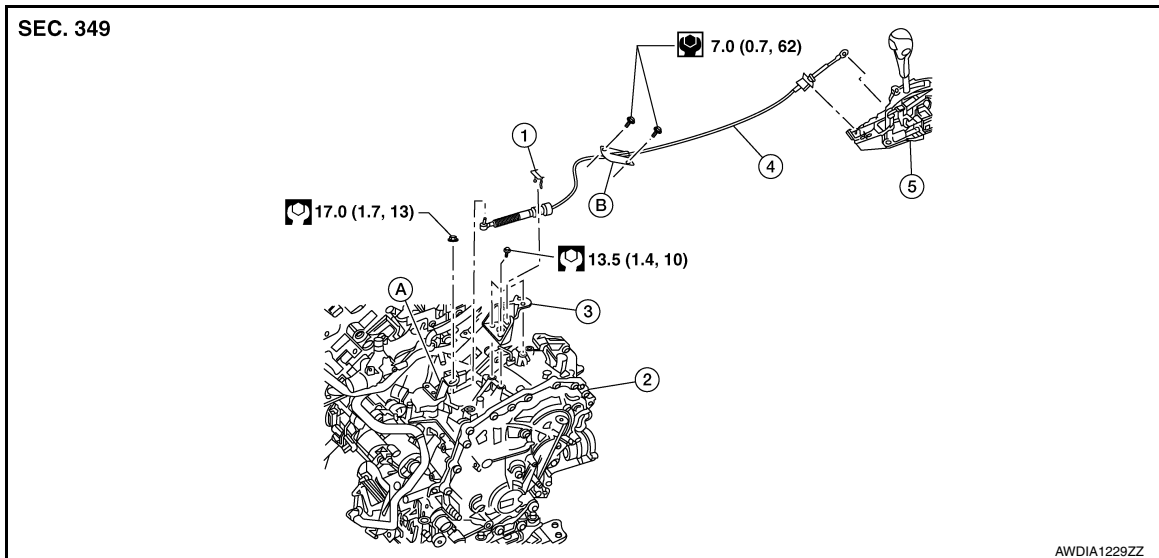

- |                 |                  |                                |
|-----------------|------------------|--------------------------------|
| 1. Bracket B    | 2. Lock plate    | 3. Transaxle assembly          |
| 4. Bracket A    | 5. Control cable | 6. CVT shift selector assembly |
| A: Manual lever | B: Grommet       |                                |

## Removal and Installation


INFOID:000000011355667

### INSTALLATION

#### **CAUTION:**

**Always apply the parking brake before performing removal and installation.**

1. Remove the front air duct and air cleaner case assembly. Refer to [EM-24. "Removal and Installation"](#).
2. Remove the control cable nut from the manual lever.
3. Remove the lock plate (1).

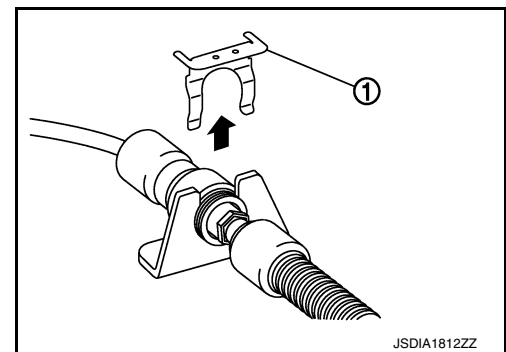

4. Remove center console upper side finisher (LH). Refer to [IP-18. "Exploded View"](#).


# CONTROL CABLE

## < REMOVAL AND INSTALLATION >

[CVT: RE0F10J]


5. Release center console side finisher (LH/RH) clip and pawls using a suitable tool and remove.

- △: Clip
- : Pawl
- ⇐: Front

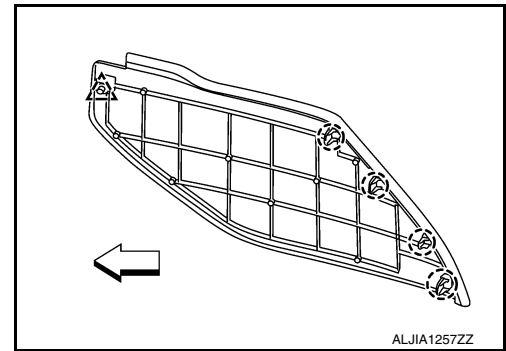

6. Release shift selector finisher clips and pawls using a suitable tool, disconnect the harness connectors and remove. Refer to [IP-18, "Exploded View"](#).
7. Remove the control cable from the CVT shift selector assembly.
8. Remove the bolts (1) from the grommet (2).

- (3) : Control cable
- ⇐ : Front

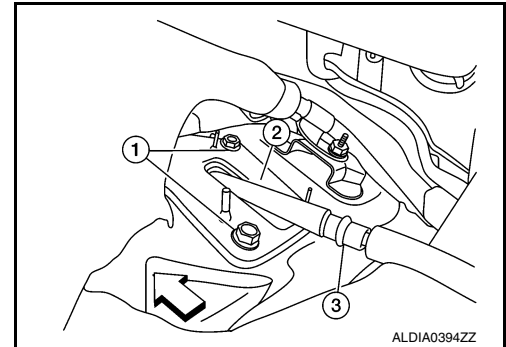


9. Remove the control cable from the vehicle.

## INSTALLATION

Installation is in the reverse order of removal.

- Pay attention to the following when connecting the control cable to the CVT shift selector.


1. When connecting the control cable (1) to the CVT shift selector assembly (2), face the grooved surface of the rib (A) up and insert the control cable until it stops.

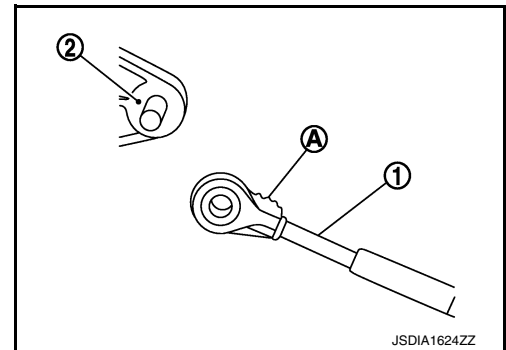

2. Install the socket (A) onto the CVT shift selector.

### CAUTION:

- Place the socket onto the CVT shift lever, then fasten it in place from above.
- Check that pulling on the socket does not disconnect it.

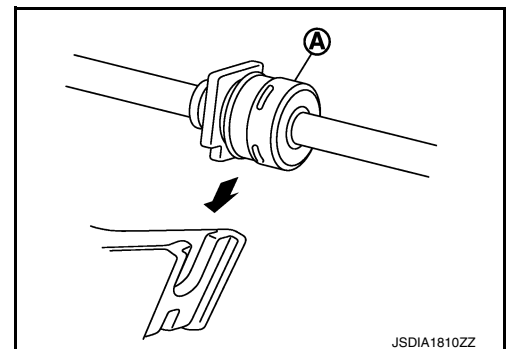

## Inspection and Adjustment

INFOID:000000011355668

## INSPECTION AFTER INSTALLATION

# CONTROL CABLE

< REMOVAL AND INSTALLATION >

[CVT: RE0F10J]

Check the CVT position. If a malfunction is found, adjust the CVT position. Refer to [TM-408, "Inspection"](#).

A

B

C

TM

E

F

G

H

I

J

K

L

M

N

O

P

# TOW MODE SWITCH

< REMOVAL AND INSTALLATION >

[CVT: RE0F10J]


## TOW MODE SWITCH

### Removal and Installation

INFOID:000000011355669

#### REMOVAL

1. Remove instrument lower panel (LH). Refer to [IP-25. "Removal and Installation"](#).
2. Remove screws (1) from the bracket.
3. Remove tow mode switch.

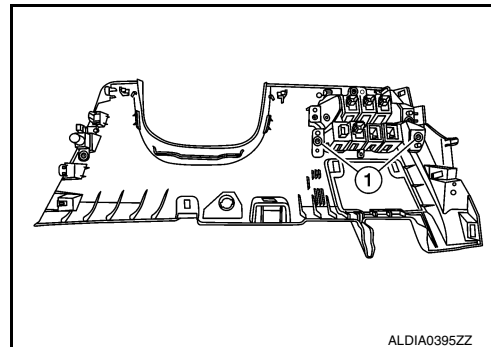

ALDIA0395ZZ


#### INSTALLATION

Installation is in the reverse order of removal.

## TCM

## Exploded View

INFOID:0000000011355670

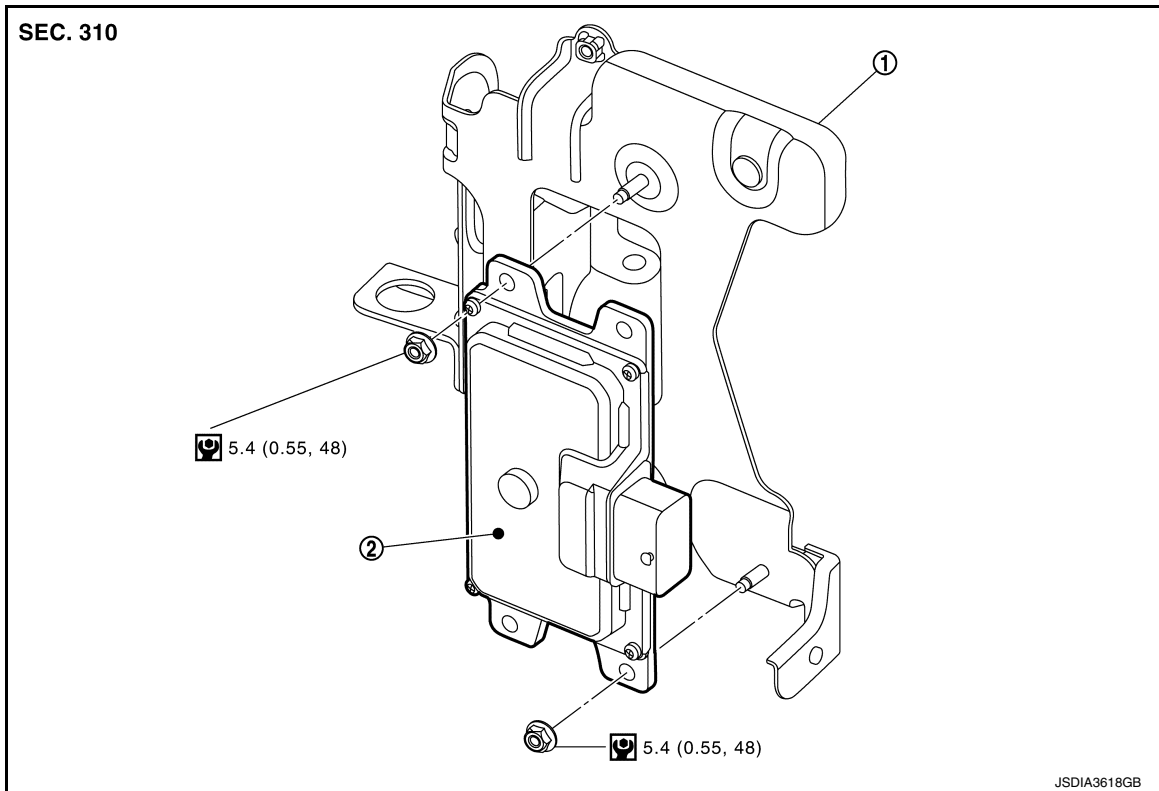

① Bracket

② TCM

: N·m (kg-m, in-lb)

## Removal and Installation

INFOID:0000000011355671

**CAUTION:**

- To replace TCM, perform "WRITE IP CHARA – REPLACEMENT TCM" of the CONSULT Work Support before removing TCM and save TCM data in CONSULT. Refer to [TM-298, "Description"](#).
- When replacing TCM, note the "CVTF DETERIORATION DATE" value displayed on CONSULT "CONFORM CVTF DETERIORATION" in MAINTENANCE BOOKLET, before start the operation.
- When replacing TCM, perform "ADDITIONAL SERVICE WHEN REPLACING TCM". Refer to [TM-298, "Work Procedure"](#).
- When replacing TCM and transaxle assembly simultaneously, replace transaxle assembly first and then replace TCM.

## REMOVAL

1. Remove the front air duct. Refer to [EM-24, "Exploded View"](#).
2. Disconnect the negative battery terminal. Refer to [PG-95, "Removal and Installation"](#).
3. Disconnect the TCM harness connector.
4. Remove the TCM and bracket as a set.
5. Remove the TCM from the bracket.

## INSTALLATION

Installation is the reverse order of removal.

## Adjustment

INFOID:0000000011355672

## ADJUSTMENT AFTER INSTALLATION

## TCM

< REMOVAL AND INSTALLATION >

[CVT: RE0F10J]

---

Perform "ADDITIONAL SERVICE WHEN REPLACING TCM". Refer to [TM-298](#). "Description".

# AIR BREATHER HOSE

< REMOVAL AND INSTALLATION >

[CVT: RE0F10J]

## AIR BREATHER HOSE

### Removal and Installation

INFOID:000000011355673

#### REMOVAL


1. Remove the front air duct and air cleaner case assembly. Refer to [EM-24. "Removal and Installation"](#).
2. Remove air breather hose.

#### INSTALLATION

Installation is in the reverse order of removal.

#### CAUTION:

- Check that air breather hose is not collapsed or blocked due to folding or bending when installed.
- Insert air breather hose (1) to air breather tube (2) all the way to the curve of the tube.
- Insert air breather hose to air breather tube so that the paint mark (A) is facing upward.

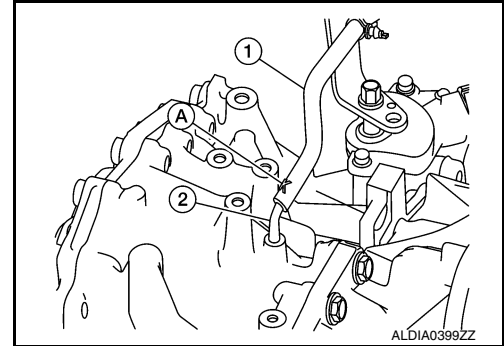

A

B

C

TM

E

F

G

H

I

J

K

L

M

N

O

P

# OIL PAN


< REMOVAL AND INSTALLATION >

[CVT: RE0F10J]

## OIL PAN

### Exploded View

INFOID:000000011355674

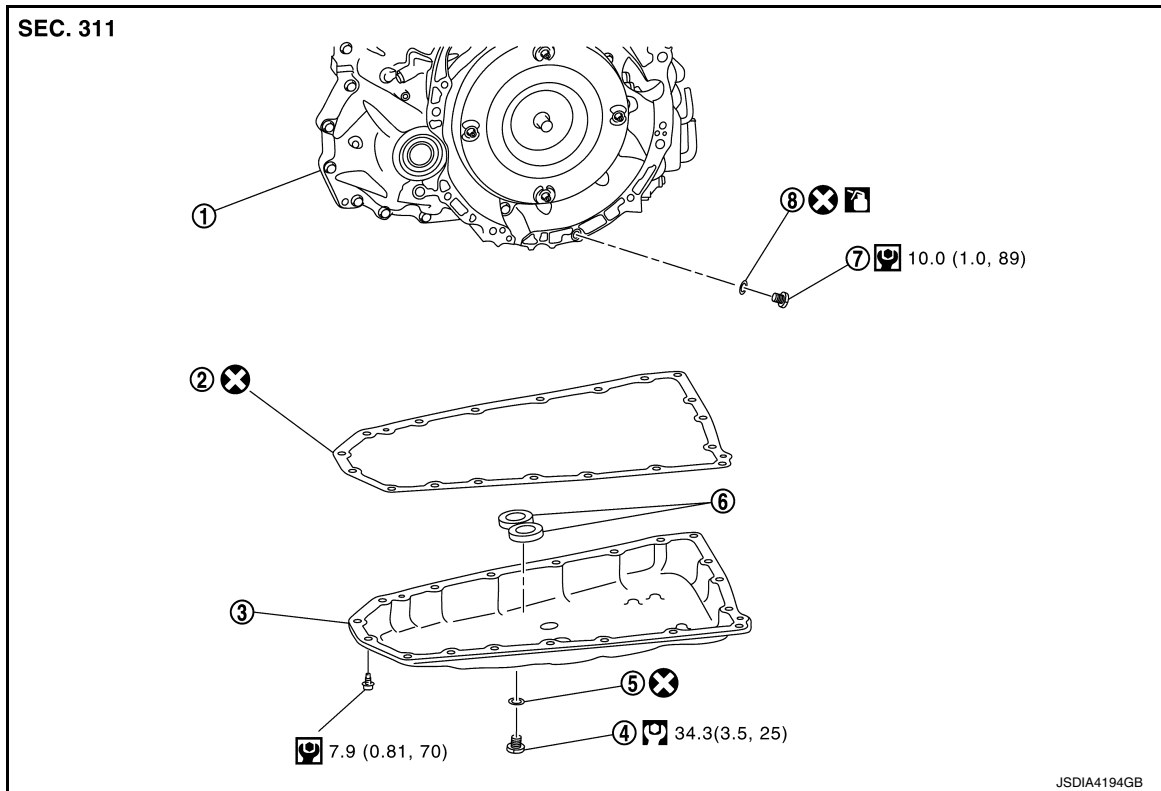

JSDIA4194GB

- |                      |                     |           |
|----------------------|---------------------|-----------|
| ① Transaxle assembly | ② Oil pan gasket    | ③ Oil pan |
| ④ Drain plug         | ⑤ Drain plug gasket | ⑥ Magnet  |
| ⑦ Overflow plug      | ⑧ O-ring            |           |

⊗ : Always replace after every disassembly.

🔧 : N·m (kg-m, ft-lb)

🔧 : N·m (kg-m, in-lb)

🔧 : Apply CVT fluid

## Removal and Installation

INFOID:000000011355675

### REMOVAL

1. Remove drain plug from oil pan and then drain the CVT fluid.
2. Remove drain plug gasket.  
**CAUTION:**  
**Do not reuse drain plug gasket.**
3. Remove the oil pan bolts, and then remove the oil pan and oil pan gasket.  
**CAUTION:**  
**Do not reuse oil pan gasket.**
4. Remove the magnets from the oil pan.

### INSTALLATION

Installation is in the reverse order of removal.

**CAUTION:**

- Do not reuse oil pan gasket.
- Do not reuse drain plug gasket.



# OIL PAN

< REMOVAL AND INSTALLATION >

[CVT: RE0F10J]

- Do not reuse O-ring.
  - Completely clean the iron powder from the magnet area of oil pan and the magnets.
- Install the oil pan to the transaxle case with the following procedure.

1. Install the oil pan gasket to the oil pan.


**CAUTION:**

**Completely wipe out any moisture, oil, and old gasket from the oil pan gasket surface and bolt hole of oil pan and transaxle case.**

2. Install the oil pan assembly to the transaxle case, and then temporarily tighten the oil pan bolt.
3. Tighten the oil pan bolts in the order shown to the specified torque.

⇐ : Front

4. Tighten the oil pan bolts again clockwise from (1) shown to the specified torque.

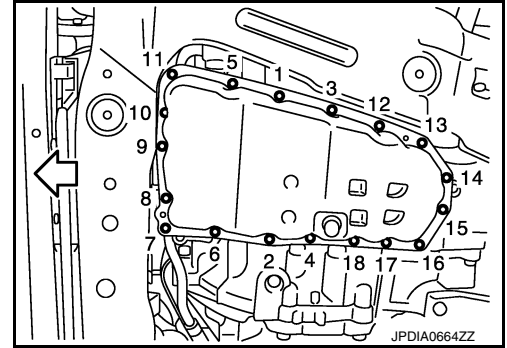

INFOID:000000011355676

## Inspection and Adjustment

### INSPECTION AFTER REMOVAL

Check oil pan for foreign material.

- If a large amount of worn material is found, clutch plate may be worn.
  - If iron powder is found, bearings, gears, or clutch plates may be worn.
  - If aluminum powder is found, bushing may be worn, or chips or burrs of aluminum casting parts may enter.
- Check points where wear is found in all cases.

### INSPECTION AFTER INSTALLATION

Check for CVT fluid leakage. Refer to [TM-403, "Inspection"](#).

# INPUT SPEED SENSOR


< REMOVAL AND INSTALLATION >

[CVT: RE0F10J]

## INPUT SPEED SENSOR

Exploded View

INFOID:000000011355677

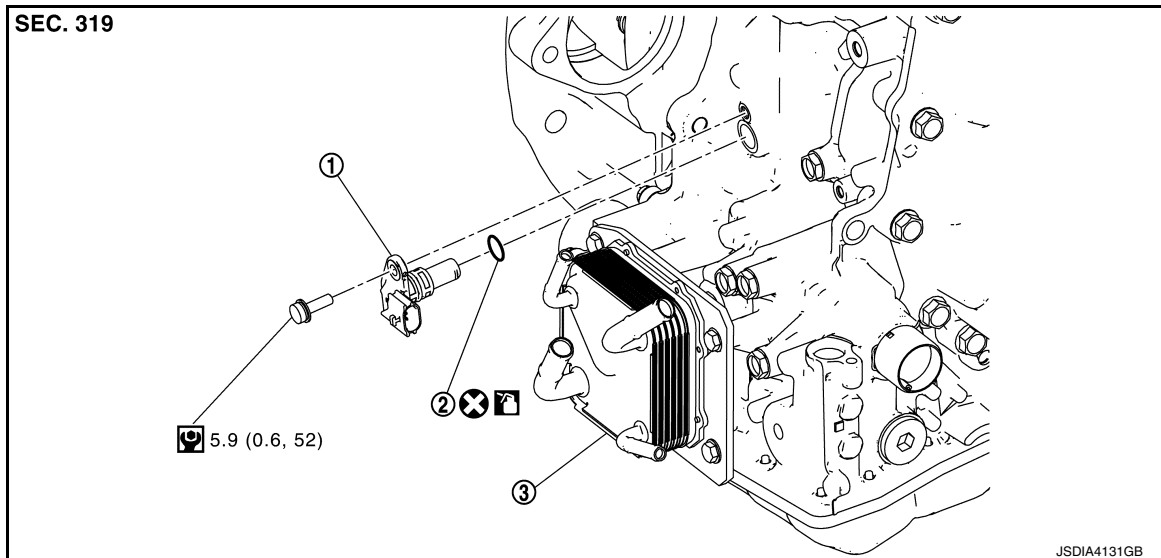

- ① Input speed sensor                      ② O-ring                                      ③ Transaxle assembly

⊗ : Always replace after every disassembly.

Ⓜ : N·m (kg-m, in-lb)

🔧 : Apply CVT fluid

## Removal and Installation


INFOID:000000011355678

### REMOVAL

1. Remove the battery tray. Refer to [PG-97, "Removal and Installation"](#).
2. Remove the starter motor. Refer to [STR-20, "Removal and Installation"](#).
3. Disconnect the harness connector from the input speed sensor (1).
4. Remove the input speed sensor bolt, then the input speed sensor (1).
5. Remove the O-ring (2) from the input speed sensor (1).

**CAUTION:**

**Do not reuse O-ring.**

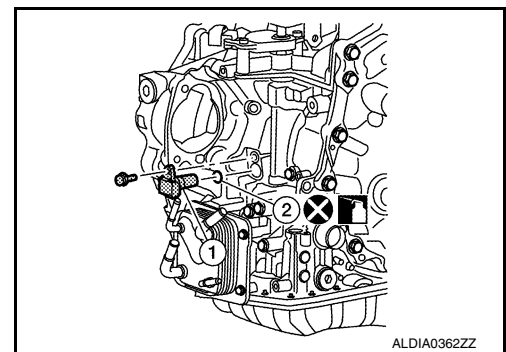

### INSTALLATION

Installation is in the reverse order of removal.

**CAUTION:**

- Do not reuse O-ring.
- Apply Genuine NISSAN CVT Fluid NS-3 to the O-ring.

## Inspection and Adjustment

INFOID:000000011355679

### INSPECTION AFTER INSTALLATION

Check for CVT fluid leakage. Refer to [TM-403, "Inspection"](#).

### ADJUSTMENT AFTER INSTALLATION

# INPUT SPEED SENSOR

< REMOVAL AND INSTALLATION >

[CVT: RE0F10J]

Adjust CVT fluid level. Refer to [TM-405, "Adjustment"](#).

A

B

C

TM

E

F

G

H

I

J

K

L

M

N

O

P

# PRIMARY SPEED SENSOR


< REMOVAL AND INSTALLATION >

[CVT: RE0F10J]

## PRIMARY SPEED SENSOR

Exploded View

INFOID:000000011355680

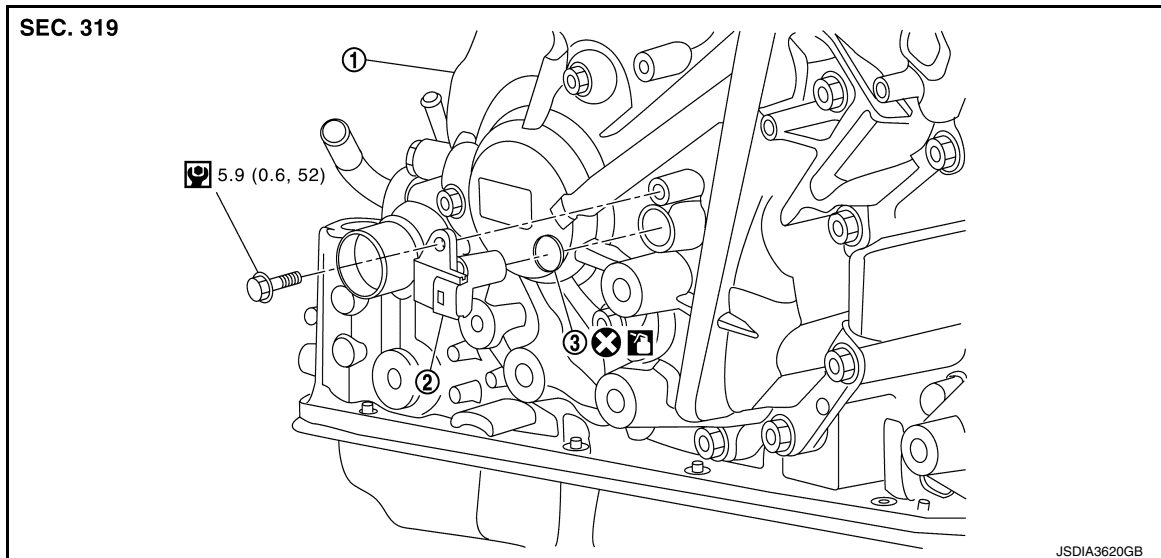


- ① Transaxle assembly                      ② Primary speed sensor                      ③ O-ring
- ⊗ : Always replace after every disassembly.
- 🔧 : N·m (kg-m, in-lb)
- 🛢️ : Apply CVT fluid

## Removal and Installation

INFOID:000000011355681

### REMOVAL

1. Disconnect the negative battery terminal. Refer to [PG-95, "Removal and Installation"](#).
2. Remove the front fender protector side cover (LH). Refer to [EXT-28, "FENDER PROTECTOR : Removal and Installation"](#).
3. Disconnect the harness connector from primary speed sensor (1).
4. Remove the primary speed sensor bolt, then the primary speed sensor (1).
5. Remove the O-ring (2) from the primary speed sensor (1).  
**CAUTION:**  
**Do not reuse O-ring.**

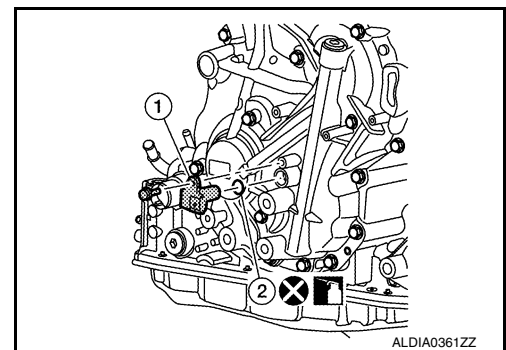

### INSTALLATION

Installation is in the reverse order of removal.

#### **CAUTION:**

- Do not reuse O-ring.
- Apply Genuine NISSAN CVT Fluid NS-3 to the O-ring.

## Inspection and Adjustment

INFOID:000000011355682

### INSPECTION AFTER INSTALLATION

Check for CVT fluid leakage. Refer to [TM-403, "Inspection"](#).

# PRIMARY SPEED SENSOR

< REMOVAL AND INSTALLATION >

[CVT: RE0F10J]

## ADJUSTMENT AFTER INSTALLATION

Adjust CVT fluid level. Refer to [TM-405. "Adjustment"](#).

A

B

C

TM

E

F

G

H

I

J

K

L

M

N

O

P

# OUTPUT SPEED SENSOR


< REMOVAL AND INSTALLATION >

[CVT: RE0F10J]

## OUTPUT SPEED SENSOR

Exploded View

INFOID:000000011355683

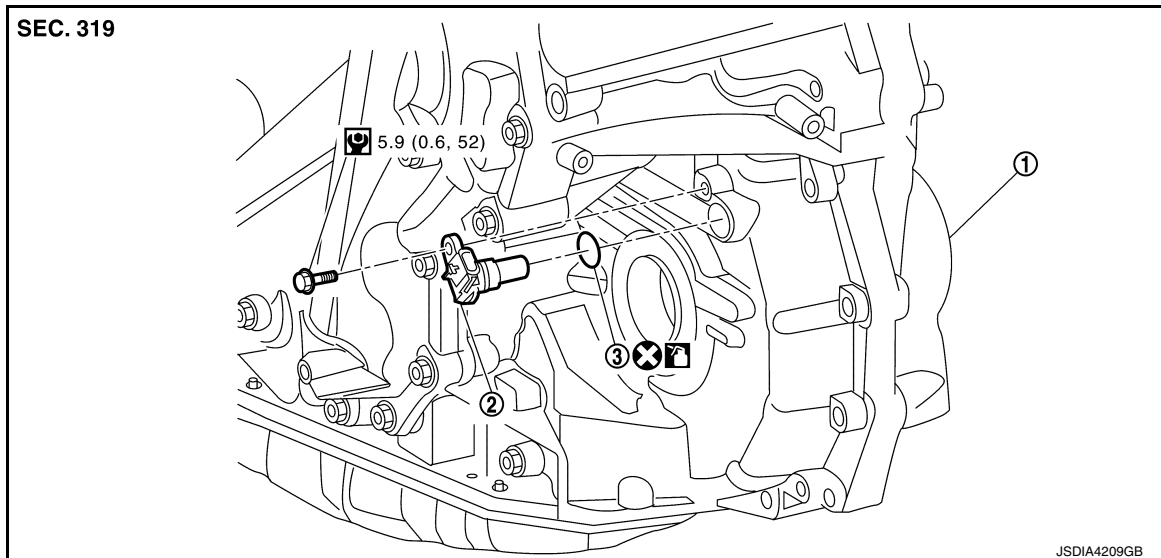

- ① Transaxle assembly                      ② Output speed sensor                      ③ O-ring

⊗ : Always replace after every disassembly.

🔧 : N·m (kg-m, in-lb)

👉 : Apply CVT fluid

## Removal and Installation


INFOID:000000011355684

### REMOVAL

1. Disconnect the battery negative terminal. Refer to [PG-95, "Removal and Installation"](#).
2. Disconnect the harness connector from output speed sensor (1).
3. Remove the output speed sensor bolt, then the output speed sensor (1).
4. Remove the O-ring (2) from the output speed sensor (1).

#### **CAUTION:**

**Do not reuse O-ring.**

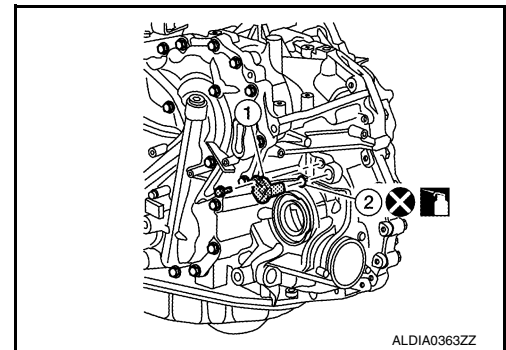

### INSTALLATION

Installation is in the reverse order of removal.

#### **CAUTION:**

- **Do not reuse O-ring.**
- **Apply Genuine NISSAN CVT Fluid NS-3 to the O-ring.**

## Inspection and Adjustment

INFOID:000000011355685

### INSPECTION AFTER INSTALLATION

Check for CVT fluid leakage. Refer to [TM-403, "Inspection"](#).

### ADJUSTMENT AFTER INSTALLATION

Adjust CVT fluid level. Refer to [TM-405, "Adjustment"](#).

# DIFFERENTIAL SIDE OIL SEAL


< REMOVAL AND INSTALLATION >

[CVT: RE0F10J]

## DIFFERENTIAL SIDE OIL SEAL

Exploded View

INFOID:000000011355686

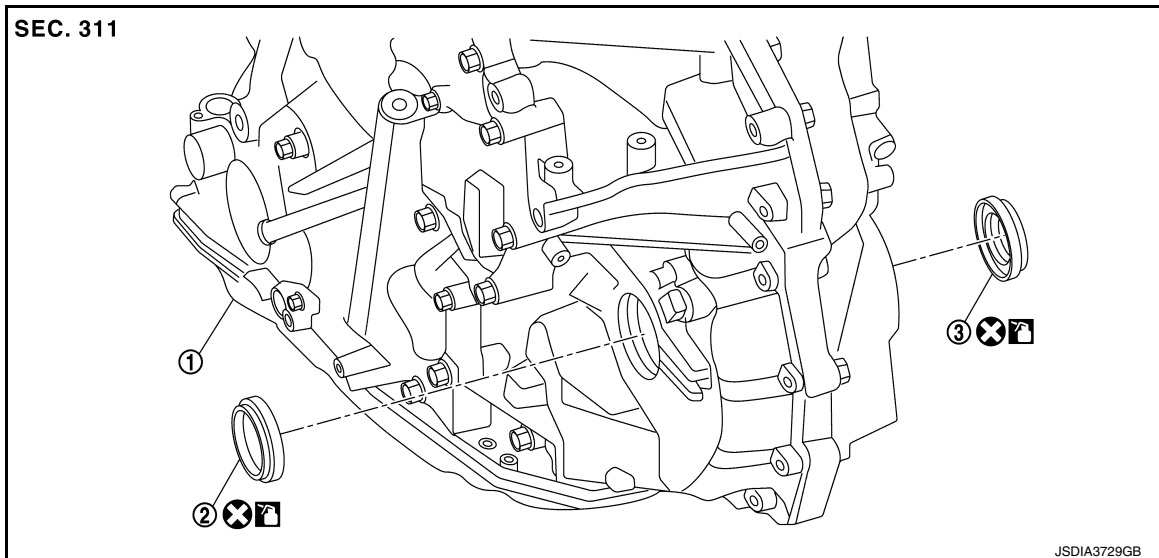

- ① Transaxle assembly      ② Differential side oil seal (left side)      ③ Differential side oil seal (right side) (2WD models only)

⊗ : Always replace after every disassembly.

🛢 : Apply CVT fluid

## Removal and Installation

INFOID:000000011355687

### REMOVAL

1. Remove front drive shaft. Refer to [FAX-15, "Removal and Installation \(LH\)"](#) (LH) or [FAX-18, "Removal and Installation \(RH\)"](#) (RH).
2. Use oil seal remover or a similar means and remove the differential side oil seal.

#### CAUTION:

**When removing the differential side oil seal, be careful not to scratch the oil seal mounting surfaces of the transaxle case and converter housing.**

### INSTALLATION

Installation is in the reverse order of removal.

#### CAUTION:

- Do not reuse differential side oil seal.
- Apply Genuine NISSAN CVT Fluid NS-3 to differential side oil seals.
- When inserting the drive shaft, be sure to use Tool.

Tool number : KV38107900 ( — )


# DIFFERENTIAL SIDE OIL SEAL

## < REMOVAL AND INSTALLATION >

[CVT: RE0F10J]

Install each differential side oil seal evenly using Tool so that differential side oil seal protrudes by the dimension (C) and (D) respectively.

- (A) : Differential side oil seal (LH)
- (B) : Differential side oil seal (RH)(2WD models only)

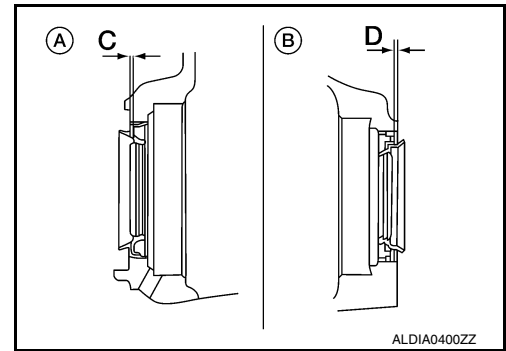

**Dimension (C) : Height difference from case end surface is within  $0 \pm 0.5$  mm ( $0.00 \pm 0.020$  in).**

**Dimension (D) : Height difference from case end surface is within  $0 \pm 0.5$  mm ( $0.00 \pm 0.020$  in).**

### NOTE:

The reference is the installation direction of the differential side oil seal.

Drift to be used:

Location	Commercial Service Tools
Transaxle case side	Commercial service tool with outer dia. 56 mm (2.20 in) and inner dia. 50 mm (1.97 in)
Converter housing side	

## Inspection and Adjustment

INFOID:000000011355688

### INSPECTION AFTER INSTALLATION

Check for CVT fluid leakage. Refer to [TM-403, "Inspection"](#).

### ADJUSTMENT AFTER INSTALLATION

Adjust CVT fluid level. Refer to [TM-405, "Adjustment"](#).



# WATER HOSE


< REMOVAL AND INSTALLATION >

[CVT: RE0F10J]

## WATER HOSE

### Exploded View

INFOID:000000011355689

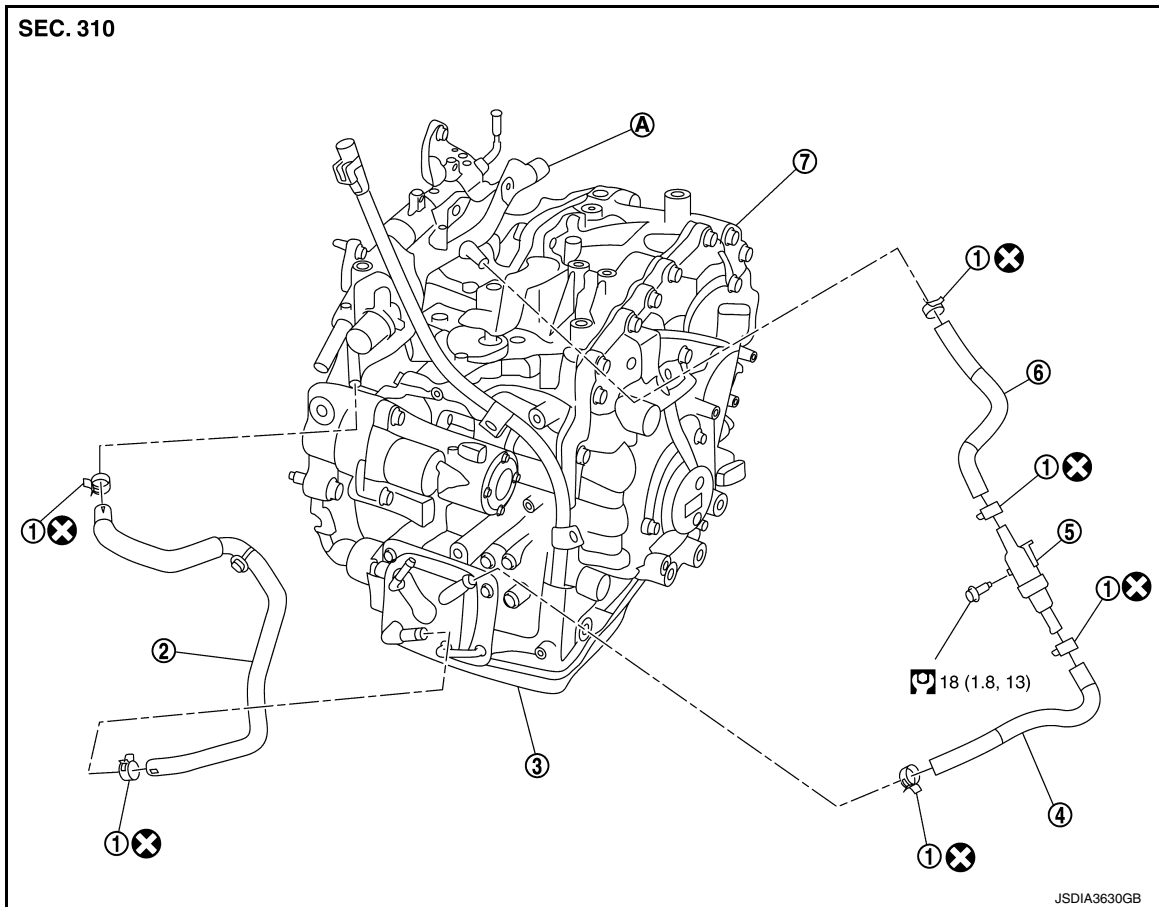

- |                      |                     |                      |
|----------------------|---------------------|----------------------|
| ① Hose clamp         | ② CVT water hose A  | ③ Transaxle assembly |
| ④ CVT water hose B   | ⑤ Heater thermostat | ⑥ CVT water hose C   |
| ⑦ Transaxle assembly |                     |                      |
| Ⓐ Water outlet       |                     |                      |

⊗ : Always replace after every disassembly.

⓪ : N-m (kg-m, ft-lb)

## Removal and Installation

INFOID:000000011355690

### REMOVAL

#### **WARNING:**

Do not remove the radiator cap when the engine is hot. Serious burns could occur from high pressure engine coolant escaping from the radiator. Wrap a thick cloth around the cap. Slowly turn it a quarter turn to allow built-up pressure to escape. Carefully remove the cap by turning it all the way.

#### **CAUTION:**

Perform this step engine is cold.

#### **NOTE:**

When removing components such as hoses, tubes/lines, etc., cap or plug openings to prevent fluid from spilling.

1. Drain engine coolant from radiator. Refer to [CO-11, "Changing Engine Coolant"](#).
2. Remove front air duct. Refer to [EM-24, "Exploded View"](#).
3. Remove hose clamps, and remove CVT water hose A.

# WATER HOSE

[CVT: RE0F10J]

## < REMOVAL AND INSTALLATION >

4. Remove hose clamps, and remove CVT water hose B.
5. Remove hose clamps, and remove CVT water hose C.
6. Remove CVT water tube.

### INSTALLATION


Installation is in the reverse order of removal.

#### CAUTION:

- Do not reuse hose clamp.
- Hose clamp should not interfere with the spool or bulge.


\*Refer to the following when installing water hose.

Water hose (1)	Installation side tube (2)	Direction of paint mark	Hose insertion depth
CVT water hose A	Water outlet	Upward	End reaches the 2-stage bulge.
	CVT oil warmer	Frontward	
CVT water hose B	CVT oil warmer	Frontward	
	Heater thermostat	Align with the mark on the heater thermostat side	
CVT water hose C	Heater thermostat	Align with the mark on the heater thermostat side	End reaches the expansion part.
	Water outlet	Upward	End reaches the 2-stage bulge.

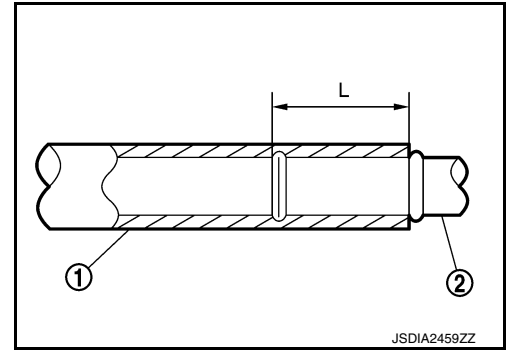

\*Refer to the following when installing hose clamps.

Water hose (1)	Installation side tube (2)	Hose clamp (3)	
		Direction of tab	Clamping position*
Water hose A	Water outlet	Downward and 45° rightward	A: 5-7 mm (0.20 - 0.28 in) (L) from hose end.
	CVT oil warmer	Downward	
Water hose B	CVT oil warmer	Forward and 45° downward	B: Align with the paint mark (C) as shown.
	Heater thermostat	Downward	
Water hose C	Heater thermostat	Downward	
	Water outlet	Upward	

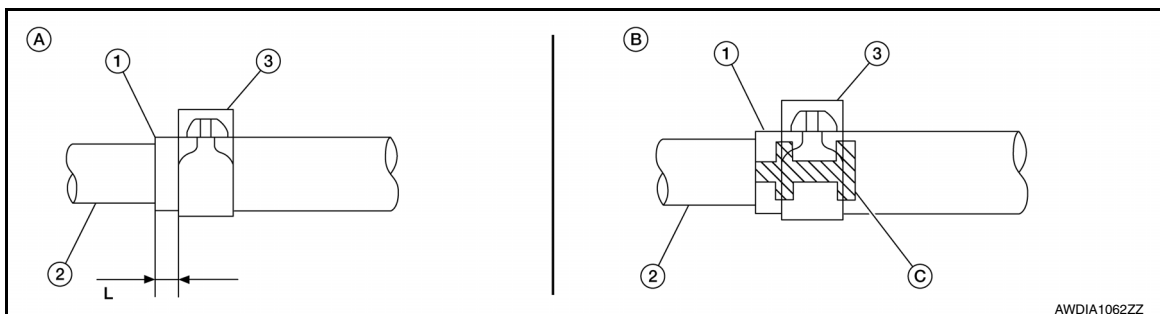

### Inspection

INFOID:000000011355691

### INSPECTION AFTER INSTALLATION

Start and warm up the engine. Visually check that there is no leakage of engine coolant and CVT fluid.

# CVT FLUID COOLER SYSTEM

< REMOVAL AND INSTALLATION >


[CVT: RE0F10J]

## CVT FLUID COOLER SYSTEM

### Exploded View

INFOID:000000011355692

### COMPONENT PARTS LOCATION

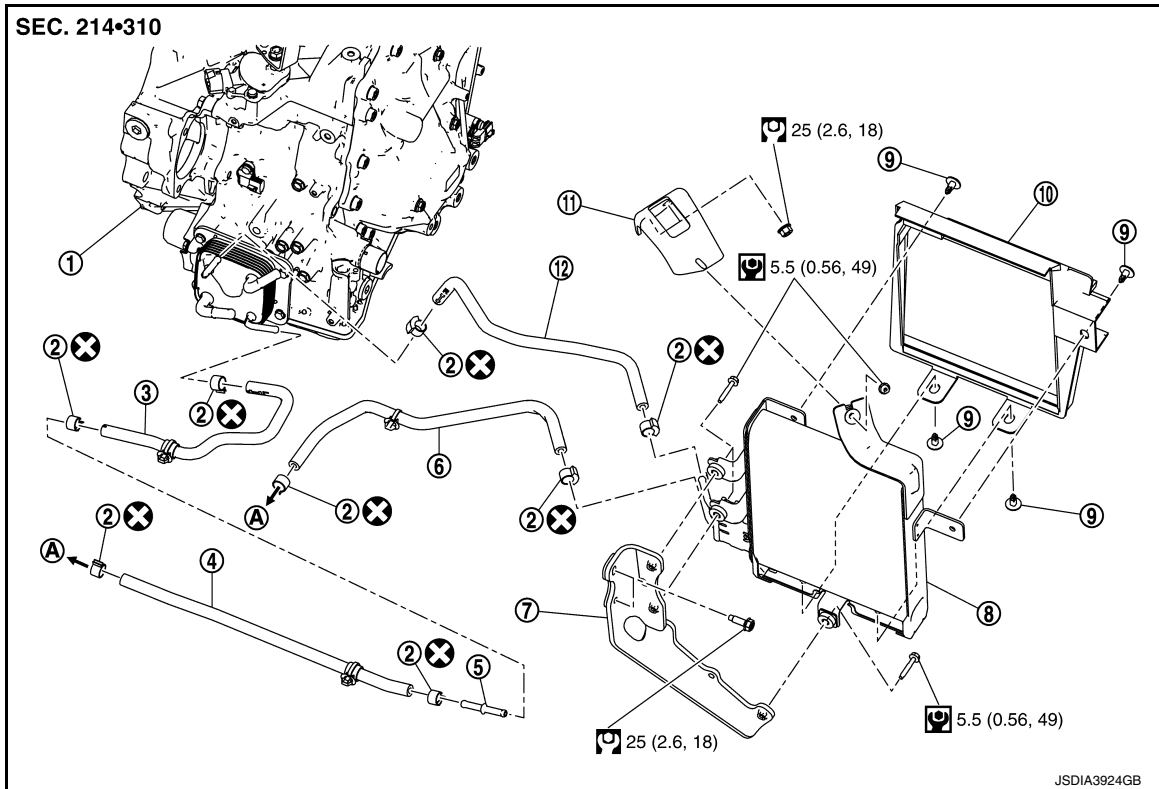

- |   |                    |                           |
|---|--------------------|---------------------------|
| ① Transaxle assembly                        | ② Hose clamp       | ③ CVT fluid cooler hose A |
| ④ CVT fluid cooler hose B                   | ⑤ Connector tube   | ⑥ CVT fluid cooler hose C |
| ⑦ Bracket                                   | ⑧ CVT fluid cooler | ⑨ Clip                    |
| ⑩ Air guide                                 | ⑪ Bracket          | ⑫ CVT fluid cooler hose D |
| (A) To radiator                             |                    |                           |
| ⊗ : Always replace after every disassembly. |                    |                           |
| 🔩 : N·m (kg-m, ft-lb)                       |                    |                           |
| 🔩 : N·m (kg-m, in-lb)                       |                    |                           |

### Removal and Installation

INFOID:000000011355693

#### REMOVAL

##### NOTE:

When removing components such as hoses, tubes/lines, etc., cap or plug openings to prevent fluid from spilling.

1. Drain engine coolant from radiator. Refer to [CO-11, "Changing Engine Coolant"](#).
2. Remove front air duct. Refer to [EM-24, "Exploded View"](#).
3. Remove hose clamps, and remove CVT fluid cooler hose A.
4. Remove hose clamps, and remove CVT fluid cooler hose B.
5. Remove CVT fluid cooler tube A and CVT fluid cooler tube B.

#### INSTALLATION

Installation is in the reverse order of removal.

# CVT FLUID COOLER SYSTEM

< REMOVAL AND INSTALLATION >


[CVT: RE0F10J]

**CAUTION:**

- Do not reuse hose clamps.
- Hose clamps should not interfere with the spool or bulge.


\*Refer to the following when installing CVT fluid cooler hoses

Hose name (1)	Installation side tube (2)	Direction of paint mark	Hose insertion depth (L)
CVT fluid cooler hose A	CVT oil warmer	Downward	B: End reaches the 2-step bulge.
	Connector tube	Upward	
CVT fluid cooler hose B	Connector tube	Upward	B: End reaches the spool.
	Radiator	Upward	A: End reaches the radius curve end.
CVT fluid cooler hose C	Radiator	Downward	C: Insert the hose until hose touches the radiator.
	CVT fluid cooler	Leftward	
CVT fluid cooler hose D	CVT fluid cooler	Leftward	A: End reaches the radius curve end.
	CVT oil warmer	Frontward	B: End reaches the 2-step bulge

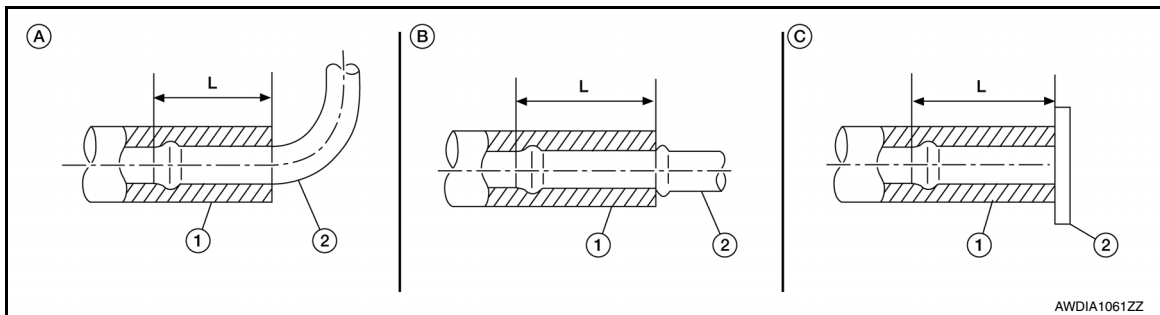

\*Refer to the following when installing CVT fluid cooler hoses

Hose name (1)	Installation side tube (2)	Hose clamp (3)	
		Direction of tab	Clamping position
CVT fluid cooler hose A	CVT oil warmer	Downward	B: Align with the paint mark (C) as shown in the figure.
	Connector tube	Downward and 35° backward	
CVT fluid cooler hose B	Connector tube	Downward and 35° backward	A: 3 - 7 mm (0.12 - 0.28 in) (L) from hose end
	Radiator	Upward	
CVT fluid cooler hose C	Radiator	Downward	B: Align with the paint mark (C) as shown in the figure.
	CVT fluid cooler	Leftward	
CVT fluid cooler hose D	CVT fluid cooler	Leftward	B: Align with the paint mark (C) as shown in the figure.
	CVT oil warmer	Frontward	

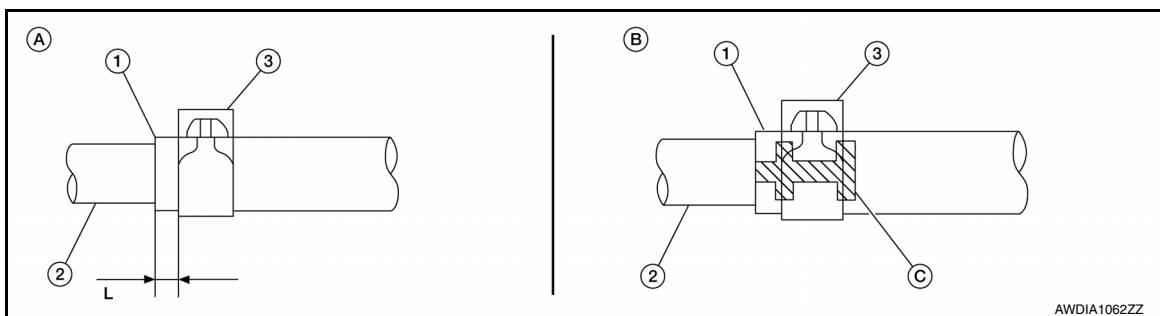

## Inspection

INFOID:0000000011355694

### INSPECTION AFTER INSTALLATION

Check for CVT fluid leakage. Refer to [TM-403. "Inspection"](#).

# CVT FLUID COOLER SYSTEM

< REMOVAL AND INSTALLATION >

[CVT: RE0F10J]

## ADJUSTMENT AFTER INSTALLATION

Adjust CVT fluid level. Refer to [TM-405. "Adjustment"](#).

A

B

C

TM

E

F

G

H

I

J

K

L

M

N

O

P

# CVT OIL WARMER


< REMOVAL AND INSTALLATION >

[CVT: RE0F10J]

## CVT OIL WARMER

Exploded View

INFOID:000000011355695

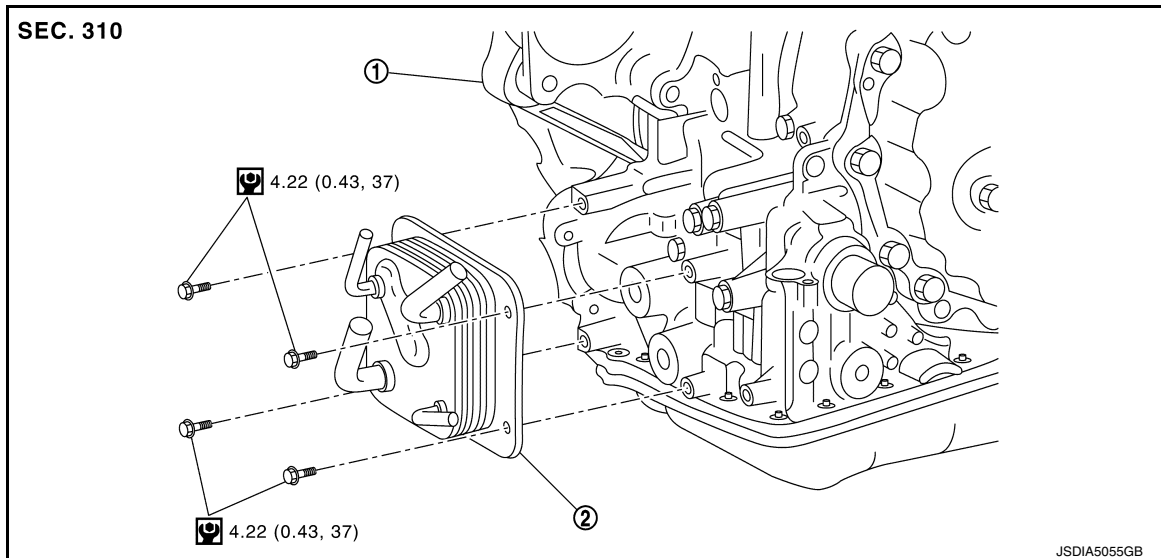

① Transaxle assembly                      ② CVT oil warmer

⊗ : Always replace after every disassembly.

⊕ : N·m (kg-m, in-lb)

## Removal and Installation

INFOID:000000011355696

### REMOVAL

#### **WARNING:**

**Do not remove the radiator cap when the engine is hot. Serious burns could occur from high pressure coolant escaping from the radiator. Wrap a thick cloth around the cap. Slowly turn it a quarter turn to allow built-up pressure to escape. Carefully remove the cap by turning it all the way.**

#### **CAUTION:**

**Perform this step engine is cold.**

#### **NOTE:**

When removing components such as hoses, tubes/lines, etc., cap or plug openings to prevent fluid from spilling.

1. Drain engine coolant from radiator. Refer to [CO-11, "Changing Engine Coolant"](#).
2. Remove CVT water hose from CVT oil warmer. Refer to [TM-425, "Exploded View"](#).
3. Remove CVT fluid cooler hose from CVT oil warmer. Refer to [TM-427, "Exploded View"](#).
4. Remove CVT oil warmer.
5. Remove bracket.

### INSTALLATION

Installation is in the reverse order of removal.

## Inspection

INFOID:000000011355697

### INSPECTION AFTER INSTALLATION

- Check for CVT fluid leakage. Refer to [TM-403, "Inspection"](#).
- Start and warm up the engine. Visually check that there is no leakage of engine coolant and CVT fluid.

### ADJUSTMENT AFTER INSTALLATION

Adjust CVT fluid level. Refer to [TM-405, "Adjustment"](#).

# PLUG

< REMOVAL AND INSTALLATION >

[CVT: RE0F10J]

## PLUG


### Description

INFOID:0000000011355698

Replace the O-ring if oil leaks from the plug.

### Exploded View

INFOID:0000000011355699

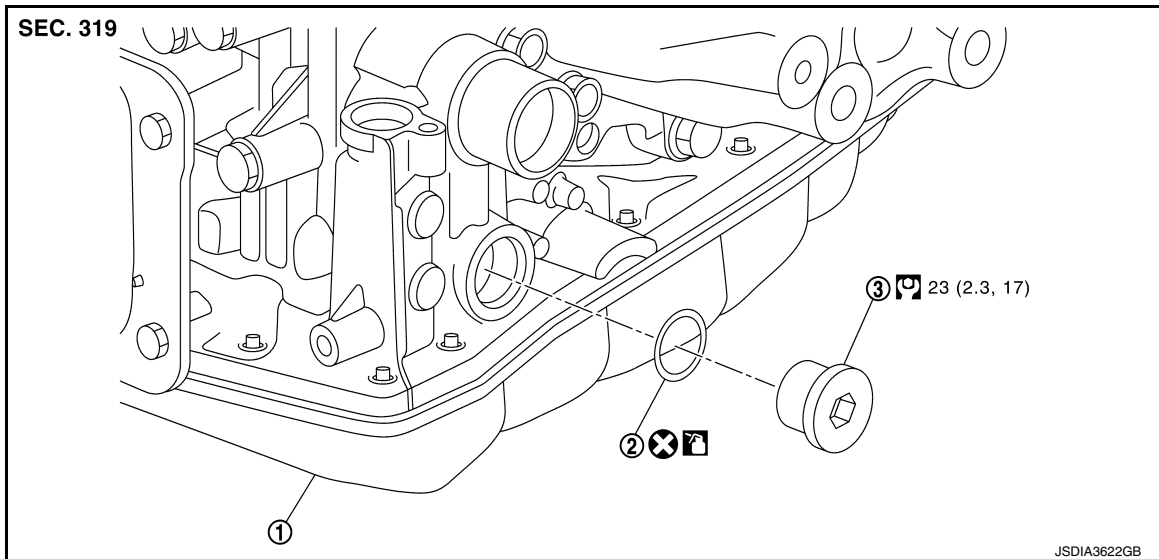

① Transaxle assembly

② O-ring

③ Plug

⊗ : Always replace after every disassembly.

⌘ : N·m (kg-m, ft-lb)

🖱 : Apply CVT fluid

### Removal and Installation

INFOID:0000000011355700

#### NOTE:

Replace the O-rings if oil leaks from the plugs.

#### REMOVAL

Remove the plugs and O-rings.

#### INSTALLATION

Installation is in the reverse order of removal.

#### CAUTION:

- Do not reuse O-ring.
- Apply Genuine NISSAN CVT Fluid NS-3 to O-ring.

### Inspection and Adjustment

INFOID:0000000011355701

#### INSPECTION AFTER INSTALLATION

Check for CVT fluid leakage. Refer to [TM-403. "Inspection"](#).

#### ADJUSTMENT AFTER INSTALLATION

Adjust CVT fluid level. Refer to [TM-405. "Adjustment"](#).






# TRANSMISSION ASSEMBLY

< UNIT REMOVAL AND INSTALLATION >

[CVT: RE0F10J]

4WD Models

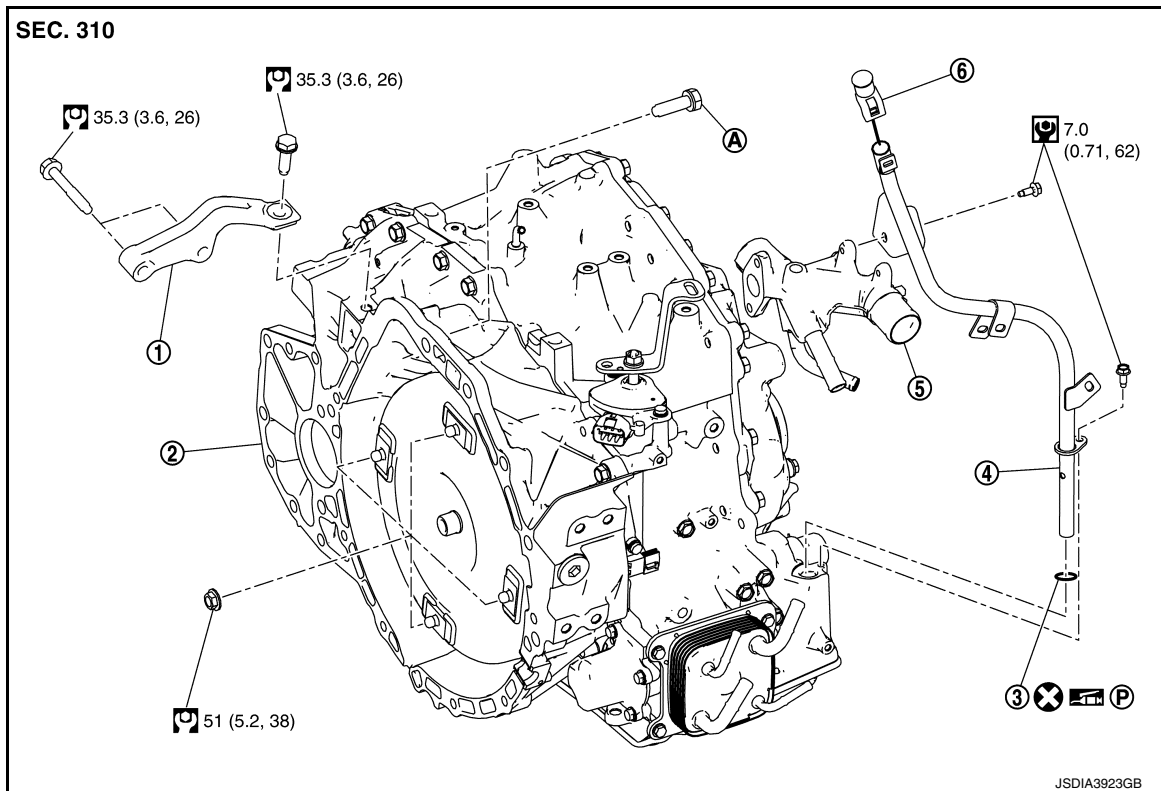

- |                           |                      |                               |
|---------------------------|----------------------|-------------------------------|
| ① Gusset                  | ② Transaxle assembly | ③ O-ring                      |
| ④ CVT fluid charging pipe | ⑤ Water outlet       | ⑥ CVT fluid charging pipe cap |

Ⓐ : For the tightening torque, refer to [TM-433, "Removal and Installation"](#).

ⓧ : Always replace after every disassembly.

Ⓜ : N·m (kg·m, ft·lb)

Ⓜ : N·m (kg·m, in·lb)

Ⓟ : Apply petroleum jelly

## Removal and Installation

INFOID:000000011355703

### REMOVAL

#### WARNING:

Do not remove the radiator cap when the engine is hot. Serious burns could occur from high pressure coolant escaping from the radiator. Wrap a thick cloth around the cap. Slowly turn it a quarter turn to allow built-up pressure to escape. Carefully remove the cap by turning it all the way.

#### CAUTION:

- Perform when the engine is cold.
- When replacing TCM and transaxle assembly as a set, replace transaxle assembly first and then replace TCM. Refer to [TM-298, "Description"](#).
- When replacing TCM and transaxle assembly simultaneously, perform "ADDITIONAL SERVICE WHEN REPLACING TCM AND TRANSAXLE ASSEMBLY" before to [TM-301, "Work Procedure"](#).

#### NOTE:

When removing components such as hoses, tubes/lines, etc., cap or plug openings to prevent fluid from spilling.

1. Remove the engine and transaxle with the front suspension member as a unit. Refer to [EM-103, "2WD : Removal and Installation"](#) (2WD) or [EM-108, "4WD : Removal and Installation"](#) (4WD).
2. Disconnect the transaxle harness connectors.
3. Disconnect the CVT oil warmer water hoses from engine side. Refer to [TM-425, "Removal and Installation"](#).

# TRANSMISSION ASSEMBLY

< UNIT REMOVAL AND INSTALLATION >

[CVT: RE0F10J]


4. Remove the CVT fluid charging pipe.
5. Remove the transaxle to engine and engine to transaxle bolts.
6. Separate the engine from the transaxle and remove the engine from the front suspension member. Refer to [EM-103. "2WD : Removal and Installation"](#) (2WD) or [EM-108. "4WD : Removal and Installation"](#) (4WD).  
**NOTE:**  
Using paint, put matching marks on the drive plate and torque converter when removing the torque converter to drive plate nuts.
7. Remove transmission bracket.
8. Lift the transaxle from the front suspension member.

## INSTALLATION

Installation is in the reverse order of removal.

### NOTE:

Write down the serial number of the new transaxle assembly.

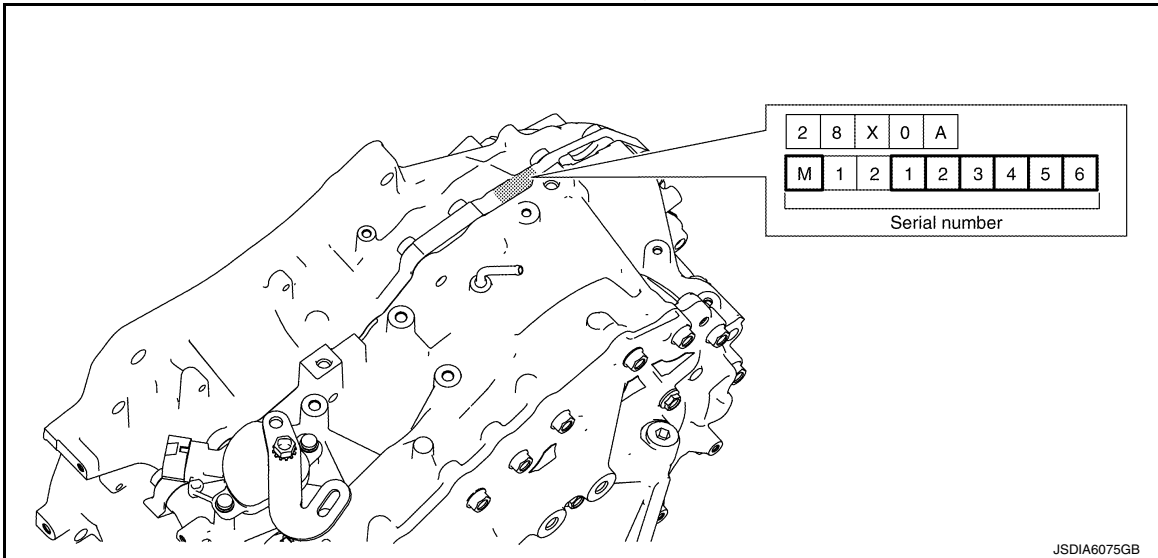


### CAUTION:

- When replacing an engine or transaxle you must make sure any dowels are installed correctly during re-assembly
- Improper alignment caused by missing dowels may cause vibration, oil leaks or breakage of drive train components.
- Do not reuse O-rings or copper sealing washers.
- When turning crankshaft, turn it clockwise as viewed from the front of the engine.
- When tightening the nuts for the torque converter while securing the crankshaft pulley bolt, be sure to confirm the tightening torque of the crankshaft pulley bolt. Refer to [EM-63. "Removal and Installation"](#).
- After converter is installed to drive plate, rotate crankshaft several turns to check that CVT rotates freely without binding.
- When installing the CVT to the engine, align the matching mark on the drive plate with the matching mark on the torque converter.

When installing CVT assembly to the engine assembly, attach the bolts in accordance with the following standard.

Bolt No.	1	2	3	4	5
Number of bolts	1	2	1	1	4
Bolt length "ℓ"mm (in)	55 (2.17)	39 (1.54)	35 (1.38)	50 (1.97)	45 (1.77)
Tightening torque N·m (kg·m, ft·lb)	74.5 (7.6, 55)				50.0 (5.1, 37)

- When installing the drive plate to torque converter nuts, tighten them temporarily. then tighten the nuts to the specified torque.

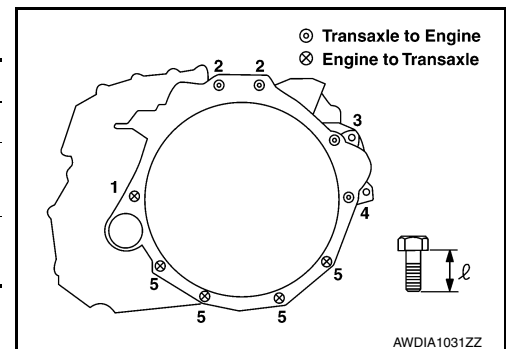

# TRANSMISSION ASSEMBLY

< UNIT REMOVAL AND INSTALLATION >

[CVT: RE0F10J]

INFOID:000000011355704


## Inspection and Adjustment

### INSPECTION BEFORE INSTALLATION

After inserting a torque converter to the CVT, check dimension (A) with in the reference value limit.

- B : Scale
- C : Straightedge

**Dimension (A)** : Refer to [TM-438, "Torque Converter"](#).

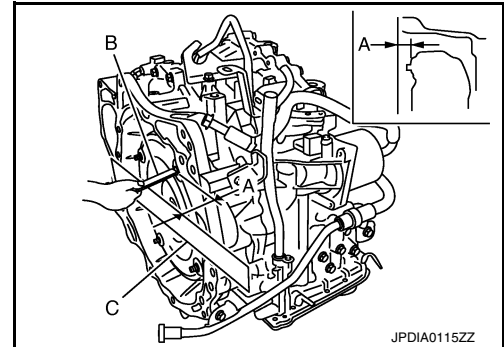

### INSPECTION AFTER INSTALLATION

Check the following items:

- CVT fluid leakage, refer to [TM-403, "Inspection"](#).
- For CVT position, refer to [TM-307, "Inspection and Adjustment"](#).
- Start the engine and check for coolant leakage from the parts which are removed and reinstalled.

### ADJUSTMENT AFTER INSTALLATION

- Adjust the CVT fluid level. Refer to [TM-405, "Adjustment"](#).
- Perform "ADDITIONAL SERVICE WHEN REPLACE TRANSAXLE ASSEMBLY". Refer to [TM-299, "Description"](#).



# TORQUE CONVERTER AND CONVERTER HOUSING OIL SEAL


< UNIT DISASSEMBLY AND ASSEMBLY >

[CVT: RE0F10J]

Unit: mm (in)	
Dimension (B)	1.0 ± 0.5 (0.039 ± 0.020)

**NOTE:**

Converter housing oil seal pulling direction is used as the reference.


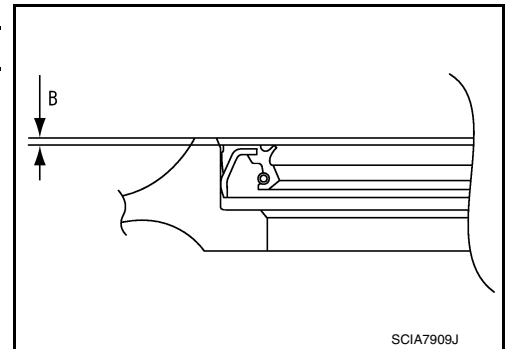


SCIA7909J

- Attach the pawl (A) of the torque converter to the drive sprocket hole (B) on the transaxle assembly side.

**CAUTION:**

- Rotate the torque converter for installing torque converter.
- Do not damage the bushing inside the torque converter sleeve when installing the converter housing oil seal.

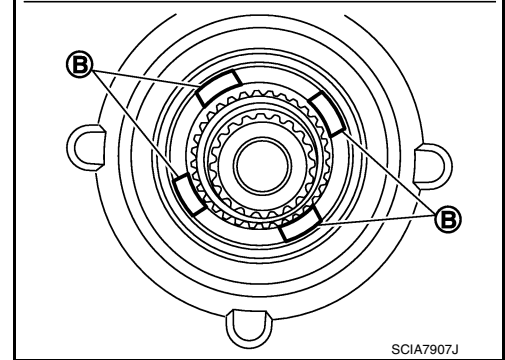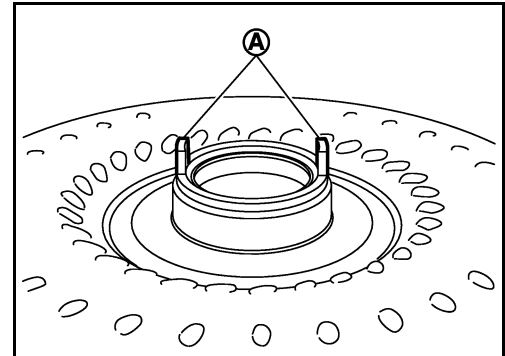

SCIA7907J

## Inspection


INFOID:0000000011355708

### INSPECTION AFTER INSTALLATION

- After inserting a torque converter to the CVT, check dimension (A) with in the reference value limit.

- B : Scale
- C : Straightedge

**Dimension (A) : Refer to [TM-438, "Torque Converter"](#).**

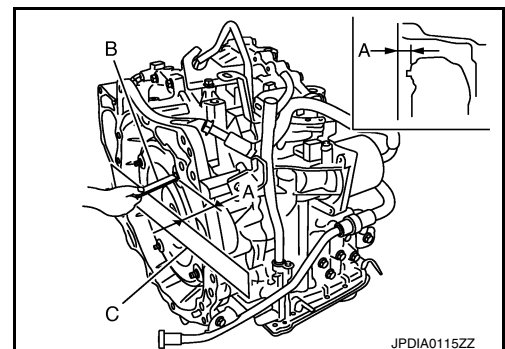

JPDIA0115ZZ

# SERVICE DATA AND SPECIFICATIONS (SDS)

< SERVICE DATA AND SPECIFICATIONS (SDS)

[CVT: RE0F10J]

## SERVICE DATA AND SPECIFICATIONS (SDS)

### SERVICE DATA AND SPECIFICATIONS (SDS)

#### General Specification

INFOID:0000000011355709

Engine model	VQ35DE		
Drive type	2WD	4WD	
Transaxle model	RE0F10J		
Transaxle gear ratio	D position	2.413 – 0.383	
	R position	2.312	
	Final drive	5.250	
Recommended fluid	Refer to <a href="#">MA-15, "FOR USA AND CANADA : Fluids and Lubricants"</a>		
Fluid capacity liter			

#### Shift Characteristics

INFOID:0000000011355710

Unit: rpm

Throttle position	Shift pattern	CVT input speed	
		At 40 km/h (25 MPH)	At 60 km/h (37 MPH)
2/8	"D" position (Normal)	1,570 – 1,730	1,710 – 1,890
	"D" position (OD OFF)	1,690 – 1,870	2,180 – 2,420
	"L" position	2,030 – 2,250	2,860 – 3,180
8/8	"D" position (Normal)	3,570 – 3,970	4,570 – 5,070
	"D" position (OD OFF)	3,570 – 3,970	4,570 – 5,070
	"L" position	3,570 – 3,970	4,570 – 5,070

#### NOTE:

Lock-up is engaged at the vehicle speed of approximately 18 km/h (12 MPH) to 40 km/h (24 MPH).

#### Stall Speed

INFOID:0000000011355711

Unit: rpm

Stall speed	2,400 – 2,700
-------------	---------------

#### Torque Converter

INFOID:0000000011355712

Unit: mm (in)

Distance "A" between the converter housing and torque converter	14.0 (0.55)
---	-------------

#### Heater Thermostat

INFOID:0000000011355713

Valve lift	More than 5.0 mm (0.197 in)
Valve opening temperature	Approx. 71°C (160°F)
Minimum valve lift	5.0 mm/Approx. 85°C (0.197 in/Approx. 203°F)