

---

## ALPHABETICAL INDEX

---

### Numerics

4WD BRANCH LINE CIRCUIT ..LAN-99, LAN-243,  
LAN-262, LAN-281, LAN-306, LAN-339  
4WD CONTROL UNIT ..... DLN-20, DLN-72  
4WD ERROR IS DISPLAYED ON INFORMATION  
DISPLAY .....DLN-64  
4WD HIGH TEMP IS DISPLAYED ON  
INFORMATION DISPLAY .....DLN-67  
4WD SHIFT SWITCH.....DLN-73  
4WD SYSTEM .....DLN-24  
4WD WARNING ICON/DISPLAY .....DLN-63

### A

A-BAG BRANCH LINE CIRCUITLAN-89, LAN-139,  
LAN-154, LAN-176, LAN-207, LAN-238,  
LAN-255, LAN-274, LAN-298, LAN-330  
A/B WARNING LAMP IS OFF, PASS A/B INDCTR  
LAMP TURNS ON INTERMIT .....SRC-116  
A/C AND AV SWITCH ASSEMBLYAV-188, AV-430,  
HAC-154  
A/C AUTO AMP.....HAC-42, HAC-156  
A/C DISPLAY ..... HAC-125  
A/C SWITCH ASSEMBLY ..... HAC-153  
A/C SWITCH ASSEMBLY SIGNAL CIRCUIT .....  
HAC-123  
ABBREVIATIONS ..... GI-14  
ABS ACTUATOR AND ELECTRIC UNIT  
(CONTROL UNIT)BRC-42, BRC-160, BRC-201,  
BRC-322  
ABS BRANCH LINE CIRCUIT ...LAN-87, LAN-137,  
LAN-152, LAN-174, LAN-205, LAN-236,  
LAN-253, LAN-272, LAN-296, LAN-328  
ABS FUNCTION DOES NOT OPERATE BRC-151,  
BRC-313  
ABS WARNING LAMP .....BRC-142, BRC-303  
AC 120 V OUTLET ..... PWO-34  
AC 120 V OUTLET MAIN SWITCH INDICATOR  
CIRCUIT ..... PWO-28  
AC 120 V OUTLET MAIN SWITCH INDICATOR  
DOES NOT TURN ON..... PWO-30  
AC 120 V OUTLET MAIN SWITCH INPUT SIGNAL  
CIRCUIT ..... PWO-24  
AC 120 V OUTLET MAIN SWITCH POWER  
SUPPLY CIRCUIT..... PWO-23  
AC 120 V POWER OUTPUT CIRCUIT ..... PWO-26  
AC 120V OUTLET MAIN SW ..... PWO-33  
ACCELERATOR PEDAL ASSEMBLY..... ACC-3  
ACCELERATOR PEDAL RELEASED POSITION  
LEARNING.....EC-156, EC-641  
ACTION TEST .....DAS-51, DAS-136  
ADAS CONTROL UNITDAS-26, DAS-88, DAS-111,  
DAS-174

ADDITIONAL SERVICE WHEN REMOVING  
BATTERY NEGATIVE TERMINAL..... DLK-111,  
PWC-90  
ADDITIONAL SERVICE WHEN REPLACING 4WD  
CONTROL UNIT .....DLN-43  
ADDITIONAL SERVICE WHEN REPLACING ABS  
ACTUATOR AND ELECTRIC UNIT (CONTROL  
UNIT)..... BRC-61, BRC-220  
ADDITIONAL SERVICE WHEN REPLACING  
AUTOMATIC BACK DOOR CONTROL UNIT...  
DLK-113  
ADDITIONAL SERVICE WHEN REPLACING BCM  
DLK-112  
ADDITIONAL SERVICE WHEN REPLACING CAN  
GATEWAY .....LAN-125  
ADDITIONAL SERVICE WHEN REPLACING  
CONTROL UNIT .....PWC-91, SEC-76  
ADDITIONAL SERVICE WHEN REPLACING  
CONTROL VALVE.....TM-90  
ADDITIONAL SERVICE WHEN REPLACING ECM  
EC-154, EC-639  
ADDITIONAL SERVICE WHEN REPLACING  
ELECTRIC CONTROLLED COUPLINGDLN-112  
ADDITIONAL SERVICE WHEN REPLACING REAR  
FINAL DRIVE ASSEMBLY ..... DLN-111  
ADDITIONAL SERVICE WHEN REPLACING TCM  
TM-85, TM-306  
ADDITIONAL SERVICE WHEN REPLACING TCM  
AND TRANSAXLE ASSEMBLYTM-88, TM-309  
ADDITIONAL SERVICE WHEN REPLACING  
TRANSAXLE ASSEMBLY..... TM-86, TM-307  
ADJUSTMENT OF STEERING ANGLE SENSOR  
NEUTRAL POSITION ..... BRC-62, BRC-221  
ADP BRANCH LINE CIRCUIT ...LAN-98, LAN-183,  
LAN-215, LAN-305, LAN-338  
ADP STEERING SWITCH ..... ADP-167  
ADP SYSTEM SYMPTOMS..... ADP-161  
AIR BAG DIAGNOSIS SENSOR UNIT .....SR-27  
AIR BREATHER HOSE ..... TM-205, TM-423  
AIR CLEANER AND AIR DUCT ..... EM-24  
AIR CLEANER FILTER ..... EM-15  
ALL DOORS DO NOT LOCK/UNLOCK OR TRUNK/  
BACK DOOR DO NOT OPEN WITH REQUEST  
SWITCH .....DLK-229  
AMBIENT SENSOR ..... HAC-157  
ANTI-PINCH FUNCTION DOES NOT OPERATE ..  
RF-41  
ANTI-PINCH SYSTEM DOES NOT OPERATE  
NORMALLY (DRIVER SIDE) ..... PWC-127  
ANTI-PINCH SYSTEM DOES NOT OPERATE  
NORMALLY (PASSENGER SIDE).... PWC-128  
APPLICATION NOTICEBRC-10, BRC-41, BRC-57,  
BRC-66, BRC-146, BRC-168, BRC-200,  
BRC-216, BRC-225, BRC-308

AROUND VIEW MONITOR CONTROL UNIT .....	B0029 SIDE CURTAIN AIR BAG MODULE RH .....
AV-255, AV-448	SRC-59
ASCD INDICATOR .....	B0091 FRONT SIDE AIR BAG SATELLITE
EC-461, EC-838	SENSOR LH .....
AUDIO ANTENNA .....	SRC-64
AV-50, AV-202, AV-454	B0092 REAR SIDE AIR BAG SATELLITE SENSOR
AUDIO SYSTEM .....	LH .....
AV-40	SRC-70
AUDIO UNIT .....	B0093 FRONT DOOR SATELLITE SENSOR LH....
AV-15, AV-43	SRC-76
AUTO LIGHT SYSTEM .....	B0094 CRASH ZONE SENSOR.....
EXL-41	SRC-61
AUTO OPERATION DOES NOT OPERATE .RF-40	B0096 FRONT SIDE AIR BAG SATELLITE
AUTO OPERATION DOES NOT OPERATE BUT	SENSOR RH .....
MANUAL OPERATE NORMALLY .....	SRC-67
PWC-56	B0097 REAR SIDE AIR BAG SATELLITE SENSOR
AUTO OPERATION DOES NOT OPERATE BUT	RH .....
MANUAL OPERATES NORMALLY (DRIVER	SRC-73
SIDE).....	B0098 FRONT DOOR SATELLITE SENSOR RH ...
PWC-129	SRC-79
AUTO OPERATION DOES NOT OPERATE BUT	B00A0 OCCUPANT CLASSIFICATION SYSTEM
MANUAL OPERATES NORMALLY	CONTROL UNIT .....
(PASSENGER SIDE).....	SRC-82
PWC-130	B00D2 FRONT PASSENGER AIR BAG ON
AUTOMATIC AIR CONDITIONING SYSTEM .....	INDICATOR .....
HAC-49	SRC-88
AUTOMATIC BACK DOOR CLOSE SWITCH.....	B00D5 PASSENGER AIR BAG OFF INDICATOR ..
DLK-205, DLK-295	SRC-90
AUTOMATIC BACK DOOR CONTROL MODULE ..	B1428 SEAT BELT BUCKLE SWITCH LH .
DLK-292	SRC-92
AUTOMATIC BACK DOOR CONTROL UNITDLK-54	B1429 SEAT BELT BUCKLE SWITCH RH. SRC-94
AUTOMATIC BACK DOOR MAIN SWITCH .....	B142A IGNITION VOLTAGE.....
DLK-207, DLK-293	SRC-106
AUTOMATIC BACK DOOR SWITCH .....	B142X COLLISION DETECTION .....
DLK-209,	SRC-108
DLK-294	B1430 SEAT BELT PRE-TENSIONER .....
AUTOMATIC BACK DOOR SYSTEM .....	SRC-96
DLK-94	B1431 SEAT BELT PRE-TENSIONER .....
AUTOMATIC BACK DOOR WARNING BUZZER....	SRC-98
DLK-221	B1432 LAP PRE-TENSIONER .....
AUTOMATIC DRIVE POSITIONER CONTROL UNIT	SRC-100
ADP-36, ADP-164, ST-9	B1433 LAP PRE-TENSIONER .....
AUTOMATIC DRIVE POSITIONER SYSTEM.....	SRC-102
ADP-40	B1436 ACTIVE VENT .....
AUTOMATIC SPEED CONTROL DEVICE (ASCD)	SRC-104
CCS-3	B14XX AIR BAG DIAGNOSIS SENSOR UNIT .....
AUX IMAGE SIGNAL CIRCUIT .....	SRC-109
AV-169	B1500 DOOR SATELLITE SENSOR.....
AUX IMAGE SIGNAL CIRCUIT (FRONT AUXILIARY	SRC-111
INPUT JACKS TO AV CONTROL UNIT)AV-398	B2098 IGNITION RELAY ON STUCK .....
AV BRANCH LINE CIRCUIT .....	PCS-29
LAN-90, LAN-155,	B2099 IGNITION RELAY OFF STUCK .....
LAN-177, LAN-208, LAN-256, LAN-275,	PCS-30
LAN-299, LAN-331	B210B STARTER CONTROL RELAY .....
AV CONTROL UNITAV-71, AV-186, AV-233, AV-428	SEC-83
AVM BRANCH LINE CIRCUIT LAN-107, LAN-223,	B210C STARTER CONTROL RELAY .....
LAN-347	SEC-84

## B

B TERMINAL CIRCUIT .....	B210D STARTER RELAY .....
CHG-17, STR-16	SEC-86
B0001, B0002 DRIVER AIRBAG MODULESRC-47	B210E STARTER RELAY .....
B0010, B0011 PASSENGER AIRBAG MODULE ....	SEC-88
SRC-50	B210F TRANSMISSION RANGE SWITCH SEC-90
B0020 SIDE AIRBAG MODULE LH .....	B2110 TRANSMISSION RANGE SWITCH SEC-93
SRC-53	B2112 SLIDING MOTOR.....
B0021 SIDE CURTAIN AIR BAG MODULE LH.....	ADP-81
SRC-57	B2113 RECLINING MOTOR.....
B0028 SIDE AIRBAG MODULE RH.....	ADP-83
SRC-55	B2116 TILT MOTOR .....
	ADP-85
	B2128 UART COMMUNICATION LINE.....
	ADP-87
	B2130 EEPROM.....
	ADP-89
	B2190 NATS ANTENNA AMP.....
	SEC-96
	B2191, P1615 DIFFERENCE OF KEY .....
	SEC-98
	B2192 ID DISCORD, IMMUN-ECM .....
	SEC-99
	B2193 CHAIN OF ECM-IMMU .....
	SEC-100
	B2195 ANTI-SCANNING .....
	SEC-101
	B2196 DONGLE UNIT .....
	SEC-102
	B2198 NATS ANTENNA AMP.....
	SEC-104
	B2205 VEHICLE SPEED .....
	MWI-58
	B2267 ENGINE SPEED .....
	MWI-59
	B2268 WATER TEMP .....
	MWI-60

B2401 IGNITION POWER SUPPLY CIRCUIT.....		B26F6 BCM.....	PCS-76
DLK-117		B26F7 BCM.....	SEC-136
B2409 HALF LATCH SWITCH.....	DLK-118	B26F8 BCM.....	SEC-137
B2416 TOUCH SENSOR RH.....	DLK-121	B26FD SHIFT LOCK SOLENOID .....	DLK-153
B2417 TOUCH SENSOR LH .....	DLK-124	B26FE HOOD SWITCH .....	DLK-156
B2419 OPEN SWITCH .....	DLK-127	B26FF REMOTE KEYLESS ENTRY RECEIVER ...	
B2420 CLOSE SWITCH .....	DLK-130	DLK-158	
B2422 BACK DOOR STATE .....	DLK-133	B2720 CORNER SENSOR [RL].....	SN-25
B2423 AUTOMATIC BACK DOOR MOTOR		B2721 CENTER SENSOR [RL] .....	SN-26
OPERATION TIME.....	DLK-136	B2722 CENTER SENSOR [RR].....	SN-27
B2426 ENCODER.....	DLK-138	B2723 CORNER SENSOR [RR].....	SN-28
B2427 ENCODER.....	DLK-141	B2724 SONAR CONTROL UNIT .....	SN-29
B2428 AUTOMATIC BACK DOOR CONTROL UNIT		B2725 REAR BUZZER.....	SN-30
DLK-144		B2796, B2797, B2798 COMMUNICATION ERROR	
B242A CLOSURE CONDITION.....	DLK-145	HAC-109	
B2555 STOP LAMP .....	SEC-106	B2799, B279A AIR MIX DOOR MOTOR (REAR) ...	
B2556 PUSH-BUTTON IGNITION SWITCH.....		HAC-103	
SEC-108		B279B, B279C MODE DOOR MOTOR (REAR) .....	
B2557 VEHICLE SPEED .....	SEC-110	HAC-105	
B2560 STARTER CONTROL RELAY .....	SEC-111	B279D, B279E REAR SHUT-OFF DOOR MOTOR	
B2562 LOW VOLTAGE .....	BCS-71	HAC-107	
B2578, B2579 IN-VEHICLE SENSOR.....	HAC-83	B27B0 A/C AUTO AMP. ....	HAC-111
B257B, B257C AMBIENT SENSOR .....	HAC-86	BACK DOOR.....	DLK-262
B2581, B2582 INTAKE SENSOR .....	HAC-89	BACK DOOR CLOSURE MOTOR .....	DLK-220
B259A ROOM LAMP FUSE.....	BCS-72	BACK DOOR LOCK.....	DLK-279
B2600 CONFIG ERROR.....	LAN-129	BACK DOOR OPENER SWITCH .....	DLK-197
B2601 SHIFT POSITION .....	SEC-112	BACK DOOR OUTER FINISHER .....	EXT-43
B2602 SHIFT POSITION .....	SEC-115	BACK DOOR REQUEST SWITCH .....	DLK-195
B2603 SHIFT POSITION .....	SEC-118	BACK DOOR SWITCH.....	DLK-170
B2604 SHIFT POSITION .....	SEC-122	BACK DOOR TRIM.....	INT-34
B2605 SHIFT POSITION .....	SEC-125	BACK DOOR WARNING CHIME .....	DLK-289
B2608 STARTER RELAY .....	SEC-128	BACK DOOR WINDOW GLASS .....	GW-28
B260A IGNITION RELAY .....	PCS-60	BACK-UP LAMP.....	EXL-84, EXL-156
B2614 ACC RELAY CIRCUIT .....	PCS-62	BASE AUDIO .....	AV-18
B2615 BLOWER RELAY CIRCUIT .....	PCS-64	BASIC INSPECTION.....	EC-162, EC-647
B2616 IGNITION RELAY CIRCUIT.....	PCS-66	BATTERY .....	PG-84, PG-93
B2617 STARTER RELAY CIRCUIT .....	SEC-130	BATTERY SAVER OUTPUT/POWER SUPPLY	
B2618 BCM.....	PCS-68	CIRCUIT.....	INL-50
B261A PUSH-BUTTON IGNITION SWITCH.....	PCS-70	BATTERY TERMINAL WITH FUSIBLE LINK.....	PG-96
B261B REMOTE ENGINE START .....	DLK-148	BATTERY TRAY .....	PG-95
B261E VEHICLE TYPE.....	SEC-132	BCM .....	BCS-31, BCS-55, DEF-9, DLK-60, INL-11,
B2622 INSIDE ANTENNA.....	DLK-149	WT-13	
B2623 INSIDE ANTENNA.....	DLK-151	BCM (BODY CONTROL MODULE).....	ADP-39,
B2630, B2631 SUNLOAD SENSOR.....	HAC-92	BCS-81, MWI-30, PCS-84, PWC-14, PWC-73,	
B2632, B2633 AIR MIX DOOR MOTOR (DRIVER		RF-13	
SIDE) .....	HAC-95	BCM BRANCH LINE CIRCUIT.....	LAN-103, LAN-144,
B2634, B2635 AIR MIX DOOR MOTOR		LAN-161, LAN-185, LAN-219, LAN-244,	
(PASSENGER SIDE) .....	HAC-97	LAN-263, LAN-283, LAN-308, LAN-343	
B2636, B2637, B2638, B2639, B2654 MODE DOOR		BCM, COMBINATION METER.....	WCS-16
MOTOR (FRONT).....	HAC-99	BCM, IPDM E/R .....	EXL-21, PCS-43, WW-20
B263D, B263E, B263F INTAKE DOOR MOTOR....		BLIND SPOT WARNING.....	DAS-34
HAC-101		BLIND SPOT WARNING/BLIND SPOT	
B26F1 IGNITION RELAY .....	PCS-72	INTERVENTION INDICATOR.....	DAS-90, DAS-176
B26F2 IGNITION RELAY .....	PCS-74	BLOWER MOTOR RESISTOR .....	HAC-166
B26F3 STARTER CONTROL RELAY .....	SEC-134	BLOWER UNIT .....	VTL-19
B26F4 STARTER CONTROL RELAY .....	SEC-135	BLUETOOTH® ANTENNA.....	AV-204

BLUETOOTH® CONTROL SIGNAL CIRCUIT .....  
[AV-176](#)  
 BLUETOOTH® CONTROL UNIT .... [AV-84](#), [AV-198](#)  
 BLUETOOTH® VOICE SIGNAL CIRCUIT .. [AV-158](#)  
 BODY ALIGNMENT ..... [BRM-43](#)  
 BODY COMPONENT PARTS ..... [BRM-12](#)  
 BODY CONSTRUCTION ..... [BRM-22](#)  
 BODY EXTERIOR PAINT COLOR ..... [BRM-2](#)  
 BODY SEALING ..... [BRM-19](#)  
 BODY SIDE TRIM ..... [INT-19](#)  
 BOSE AMP. .... [AV-244](#)  
 BOSE SPEAKER AMP ..... [AV-437](#)  
 BOTH DOORS MIRROR DEFOGGER DON'T  
 OPERATE BUT REAR WINDOW DEFOGGER  
 OPERATES ..... [DEF-46](#)  
 BOTH SIDE FRONT FOG LAMPS ARE NOT  
 TURNED ON ..... [EXL-139](#)  
 BOTH SIDE HEADLAMPS (LO) ARE NOT TURNED  
 ON ..... [EXL-137](#)  
 BOTH SIDE HEADLAMPS DO NOT SWITCH TO  
 HIGH BEAM ..... [EXL-136](#)  
 BRAKE BOOSTER ..... [BR-10](#), [BR-31](#)  
 BRAKE CONTROL SYSTEM .... [BRC-49](#), [BRC-208](#)  
 BRAKE FLUID ..... [BR-8](#), [BR-14](#)  
 BRAKE MASTER CYLINDER ..... [BR-9](#), [BR-28](#)  
 BRAKE PEDAL ..... [BR-7](#), [BR-13](#), [BR-20](#)  
 BRAKE PEDAL POSITION SWITCH ..... [EC-462](#),  
[EC-839](#)  
 BRAKE PEDAL VIBRATION OR OPERATION  
 SOUND OCCURS ..... [BRC-152](#), [BRC-314](#)  
 BRAKE PIPING ..... [BR-22](#)  
 BRAKE WARNING LAMP ..... [BRC-143](#), [BRC-304](#)  
 BSW ON INDICATOR CIRCUIT .[DAS-84](#), [DAS-169](#)  
 BSW SYSTEM SYMPTOMS ..... [DAS-86](#)  
 BSW/BUZZER BRANCH LINE CIRCUIT .[LAN-104](#),  
[LAN-186](#), [LAN-220](#), [LAN-309](#), [LAN-344](#)  
 BUZZER ..... [SN-36](#)

**C**

C1101, C1102, C1103, C1104 WHEEL SENSOR ...  
[BRC-67](#), [BRC-226](#)  
 C1105, C1106, C1107, C1108 WHEEL SENSOR ...  
[BRC-72](#), [BRC-231](#)  
 C1109 POWER AND GROUND SYSTEM [BRC-79](#),  
[BRC-238](#)  
 C1111 ABS MOTOR, MOTOR RELAY SYSTEM.....  
[BRC-81](#), [BRC-240](#)  
 C1115 WHEEL SENSOR..... [BRC-84](#), [BRC-243](#)  
 C1116 STOP LAMP SWITCH.... [BRC-91](#), [BRC-250](#)  
 C1120, C1122, C1124, C1126 ABS IN VALVE  
 SYSTEM..... [BRC-95](#), [BRC-254](#)  
 C1121, C1123, C1125, C1127 ABS OUT VALVE  
 SYSTEM..... [BRC-97](#), [BRC-256](#)  
 C1130 ENGINE SIGNAL ..... [BRC-99](#), [BRC-258](#)  
 C1140 ACTUATOR RELAY SYSTEM..... [BRC-101](#),  
[BRC-260](#)

C1142 PRESS SENSOR ..... [BRC-103](#), [BRC-262](#)  
 C1143 STEERING ANGLE SENSOR..... [BRC-106](#),  
[BRC-265](#), [STC-21](#)  
 C1144 INCOMPLETE STEERING ANGLE SENSOR  
 ADJUSTMENT ..... [BRC-110](#), [BRC-269](#)  
 C1145, C1146 YAW RATE/SIDE/DECEL G SENSOR  
[BRC-112](#), [BRC-271](#)  
 C1155 BRAKE FLUID LEVEL SWITCH .. [BRC-115](#),  
[BRC-274](#)  
 C1160 INCOMPLETE DECEL G SENSOR  
 CALIBRATION ..... [BRC-119](#), [BRC-278](#)  
 C1164, C1165 CV SYSTEM .... [BRC-121](#), [BRC-280](#)  
 C1170 VARIANT CODING ..... [BRC-123](#), [BRC-282](#)  
 C1197 VACUUM SENSOR ..... [BRC-124](#), [BRC-283](#)  
 C1198 VACUUM SENSOR ..... [BRC-127](#), [BRC-286](#)  
 C1199 BRAKE BOOSTER..... [BRC-129](#), [BRC-288](#)  
 C119A VACUUM SENSOR..... [BRC-132](#), [BRC-291](#)  
 C1201 4WD CONTROL UNIT ..... [DLN-45](#)  
 C1203 ABS ACTUATOR AND ELECTRIC UNIT  
 (CONTROL UNIT) ..... [DLN-46](#)  
 C1204 4WD SOLENOID..... [DLN-47](#)  
 C1205 4WD ACTUATOR RELAY ..... [DLN-50](#)  
 C1209 MODE SW..... [DLN-52](#)  
 C1210 ECM ..... [DLN-55](#)  
 C1601 BATTERY POWER SUPPLY ..... [STC-22](#)  
 C1602 NO TUNING SET ..... [STC-25](#)  
 C1606 EPS MOTOR..... [STC-26](#)  
 C1607, C1608 POWER STEERING CONTROL  
 MODULE ..... [STC-27](#)  
 C160A HEAT PROTECTION..... [STC-28](#)  
 C1704, C1705, C1706, C1707 LOW TIRE  
 PRESSURE ..... [WT-33](#)  
 C1708, C1709, C1710, C1711 TRANSMITTER (NO  
 DATA) ..... [WT-35](#)  
 C1712, C1713, C1714, C1715 TRANSMITTER  
 (CHECKSUM)..... [WT-38](#)  
 C1716, C1717, C1718, C1719 TRANSMITTER  
 (PRESSURE DATA) ..... [WT-40](#)  
 C1720, C1721, C1722, C1723 TRANSMITTER.....  
[WT-42](#)  
 C1724, C1725, C1726, C1727 TRANSMITTER  
 (BATT VOLT) ..... [WT-44](#)  
 C1729 VEHICLE SPEED SIGNAL ..... [WT-46](#)  
 C1730, C1731, C1732, C1733 FLAT TIRE... [WT-47](#)  
 C1734 BCM ..... [WT-49](#)  
 C1735 IGNITION SIGNAL ..... [WT-51](#)  
 C1A00 CONTROL UNIT ..... [DAS-53](#), [DAS-138](#)  
 C1A01 POWER SUPPLY CIRCUIT 1, C1A02  
 POWER SUPPLY CIRCUIT 2 [DAS-54](#), [DAS-139](#)  
 C1A03 VEHICLE SPEED SENSOR ..... [DAS-55](#),  
[DAS-140](#)  
 C1B50 SIDE RADAR MALFUNCTION..... [DAS-56](#),  
[DAS-141](#)  
 C1B51 BSW/BSI INDICATOR SHORT CIRCUIT ....  
[DAS-57](#), [DAS-142](#)



C1B52 BSW/BSI INDICATOR OPEN CIRCUIT .....	DAS-58, DAS-143	CLUTCH POINT LEARNING .....	TM-91
C1B53 SIDE RADAR RIGHT MALFUNCTION .....	DAS-60, DAS-145	COLLISION DIAGNOSIS .....	SR-5
C1B54 SIDE RADAR LEFT MALFUNCTION .....	DAS-61, DAS-146	COMBINATION METER.....	MWI-23, MWI-85
C1B55 RADAR BLOCKAGE.....	DAS-62, DAS-147	COMBINATION SWITCH .....	BCS-82
CALIBRATION OF AUTOMATIC BACK DOOR POSITION INFORMATION .....	DLK-114	COMBINATION SWITCH INPUT CIRCUIT	BCS-75
CALIBRATION OF DECEL G SENSOR ...	BRC-64, BRC-223	COMBINATION SWITCH OUTPUT CIRCUIT.....	BCS-77
CAMERA IMAGE SIGNAL CIRCUIT .....	AV-171	COMBINATION SWITCH SYSTEM SYMPTOMS...	BCS-79
CAMSHAFT .....	EM-80	COMPASS.....	MWI-52
CAMSHAFT VALVE CLEARANCE .....	EM-18	COMPOSITE IMAGE SIGNAL CIRCUIT ....	AV-167
CAN COMMUNICATION CIRCUIT .....	LAN-108, LAN-145, LAN-162, LAN-189, LAN-245, LAN-264, LAN-284, LAN-312	COMPOSITE IMAGE SIGNAL CIRCUIT (AV CONTROL UNIT TO FRONT DISPLAY UNIT) .	AV-395
CAN COMMUNICATION CIRCUIT 1 .....	LAN-110, LAN-224, LAN-348	COMPOSITE IMAGE SIGNAL CIRCUIT (AV CONTROL UNIT TO VIDEO DISTRIBUTOR)...	AV-396
CAN COMMUNICATION CIRCUIT 2 .....	LAN-112, LAN-226, LAN-350	COMPOSITE IMAGE SIGNAL CIRCUIT (VIDEO DISTRIBUTOR TO HEADREST DISPLAY UNIT)	AV-397
CAN GATEWAY .....	LAN-121, LAN-131	COMPRESSION PRESSURE.....	EM-22
CAN GATEWAY SYSTEM .....	LAN-123	COMPRESSOR .....	HA-30
CAN SYSTEM (WITH AROUND VIEW MONITOR SYSTEM).....	LAN-56	COMPRESSOR DOES NOT OPERATE..	HAC-151
CAN SYSTEM (WITHOUT AROUND VIEW MONITOR SYSTEM).....	LAN-43	CONDENSER .....	DEF-53, HA-38
CARGO LAMP .....	INL-67	CONFIGURATION (CAN GATEWAY) .....	LAN-126
CENTER CONSOLE ASSEMBLY.....	IP-18, IP-27	CONTROL CABLE .....	TM-200, TM-418
CENTER CONSOLE REAR FINISHER .....	IP-29	CONTROL VALVE.....	TM-208, TM-426
CENTER SPEAKER .....	AV-373, AV-441	COOLER PIPE AND HOSE .....	HA-34
CGW BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 1) .....	LAN-101, LAN-217, LAN-341	COOLING FAN.....	CO-17, EC-464, EC-841
CGW BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 2) .....	LAN-102, LAN-218, LAN-342	COOLING SYSTEM .....	CO-8
CHARGING SYSTEM .....	CHG-5, CHG-6, CHG-22	CORROSION PROTECTION.....	BRM-16
CHARGING SYSTEM PRELIMINARY INSPECTION	CHG-16	COWL TOP .....	EXT-25
CHASSIS AND BODY MAINTENANCE .....	MA-32	CRASH ZONE SENSOR.....	SR-23
CHECK ANTI-PINCH FUNCTION .....	PWC-93	CVT CONTROL SYSTEM	TM-67, TM-189, TM-288, TM-407
CLIMATE CONTROLLED SEAT BLOWER FILTER	SE-69	CVT FLUID.....	TM-194, TM-412
CLIMATE CONTROLLED SEAT BLOWER MOTOR	SE-64	CVT FLUID COOLER SYSTEM....	TM-92, TM-222, TM-311, TM-439
CLIMATE CONTROLLED SEAT CONTROL UNIT .	SE-13	CVT OIL WARMER .....	TM-224, TM-441
CLIMATE CONTROLLED SEAT SWITCH ....	SE-53	CVT POSITION .....	TM-96, TM-315
CLIMATE CONTROLLED SEAT SWITCH INDICATOR.....	SE-67	CVT SHIFT LOCK SYSTEM .....	TM-79, TM-300
CLIMATE CONTROLLED SEAT SYSTEM ..	SE-38, SE-70	CVT SHIFT SELECTOR .....	TM-198, TM-416
CLUSTER LID A .....	IP-21	CYLINDER BLOCK.....	EM-116
CLUSTER LID C .....	IP-22	CYLINDER HEAD .....	EM-94
CLUSTER LID D .....	IP-24		

**D**

DAYTIME LIGHT SYSTEM INOPERATIVE	EXL-140
DAYTIME RUNNING LIGHT RELAY CIRCUIT .....	EXL-116
DAYTIME RUNNING LIGHT SYSTEM .....	EXL-30
DEFOGGER SYSTEM SYMPTOMS.....	DEF-43
DIAGNOSIS AND REPAIR WORK FLOW	ADP-71, BRC-58, BRC-217, DAS-47, DAS-132, DEF-23, DLK-108, DLN-40, HAC-71, MWI-54, PCS-54, PWO-20, SE-47, SEC-73, SRC-41, ST-16, STC-18, TM-82, TM-303, WT-29

DIAGNOSIS SENSOR UNIT .....	SRC-18	DOOR DOES NOT LOCK/UNLOCK AND ENGINE DOES NOT START (ONE I-KEY/REQ SW/PUSH SW).....	DLK-241
DIAGNOSIS SYSTEM (4WD CONTROL UNIT) .....	DLN-18	DOOR DOES NOT LOCK/UNLOCK AND ENGINE DOES NOT START (REQ SW/PUSH SW) (ALL KEYS).....	DLK-231
DIAGNOSIS SYSTEM (ADAS CONTROL UNIT)....	DAS-20, DAS-105	DOOR DOES NOT LOCK/UNLOCK AND ENGINE DOES NOT START (REQ SW/PUSH SW) (ONE KEY) .....	SEC-150
DIAGNOSIS SYSTEM (AIR BAG).....	SRC-14	DOOR DOES NOT LOCK/UNLOCK WITH DOOR REQUEST SWITCH AND INTELLIGENT KEY .	DLK-237
DIAGNOSIS SYSTEM (AROUND VIEW MONITOR CONTROL UNIT) .....	AV-231	DOOR DOES NOT LOCK/UNLOCK WITH INTELLIGENT KEY .....	DLK-236
DIAGNOSIS SYSTEM (AUTOMATIC BACK DOOR CONTROL UNIT) .....	DLK-52	DOOR DOES NOT LOCK/UNLOCK WITH INTELLIGENT KEY (ONE KEY).....	DLK-240
DIAGNOSIS SYSTEM (AV CONTROL UNIT)AV-61,	AV-219	DOOR KEY CYLINDER SWITCH .....	DLK-189
DIAGNOSIS SYSTEM (BCM) .....	BCS-15, DEF-7, DLK-46, EXL-13, INL-8, PCS-38, PWC-12, PWC-71, RF-11, SEC-18, WCS-14, WT-10, WW-14	DOOR KEY CYLINDER SWITCH DOES NOT OPERATE POWER WINDOWS .....	PWC-132
DIAGNOSIS SYSTEM (BLUETOOTH® CONTROL UNIT).....	AV-70	DOOR LOCK ACTUATOR.....	DLK-180
DIAGNOSIS SYSTEM (CAN GATEWAY)..	LAN-119	DOOR LOCK AND UNLOCK SWITCH ...	DLK-174
DIAGNOSIS SYSTEM (COMBINATION METER)...	MWI-18, WCS-9	DOOR MIRROR .....	MIR-18
DIAGNOSIS SYSTEM (DRIVER SEAT CONTROL UNIT).....	ADP-26	DOOR MIRROR (WITHOUT ADP).....	MIR-4
DIAGNOSIS SYSTEM (ECM) .....	EC-61, EC-553	DOOR MIRROR ACTUATOR.....	MIR-21
DIAGNOSIS SYSTEM (HVAC).....	HAC-39	DOOR MIRROR DEFOGGER LH (WITH AROUND VIEW MONITOR) .....	DEF-37
DIAGNOSIS SYSTEM (IPDM E/R) EXL-17, PCS-8, SEC-24, WW-16		DOOR MIRROR DEFOGGER LH (WITHOUT AROUND VIEW MONITOR).....	DEF-35
DIAGNOSIS SYSTEM (POWER STEERING CONTROL MODULE) .....	STC-10	DOOR MIRROR DEFOGGER RH (WITH AROUND VIEW MONITOR) .....	DEF-41
DIAGNOSIS SYSTEM (SIDE RADAR LH) DAS-22, DAS-107		DOOR MIRROR DEFOGGER RH (WITHOUT AROUND VIEW MONITOR).....	DEF-39
DIAGNOSIS SYSTEM (SIDE RADAR RH)DAS-24, DAS-109		DOOR MIRROR GLASS .....	MIR-19
DIAGNOSIS SYSTEM (SONAR CONTROL UNIT). SN-8		DOOR MIRROR MOTOR .....	ADP-154
DIAGNOSIS SYSTEM (TCM).....	TM-47, TM-268	DOOR MIRROR REAR FINISHER.....	MIR-20
DIAGNOSIS SYSTEM [ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)]..	BRC-36, BRC-195	DOOR MIRROR REMOTE CONTROL SWITCH ....	ADP-112, MIR-23
DIFFERENTIAL SIDE OIL SEAL..	TM-218, TM-435	DOOR MOTOR.....	HAC-126, HAC-162
DISK EJECT SIGNAL CIRCUIT ....	AV-173, AV-400	DOOR MOTOR COMMUNICATION CIRCUIT .....	HAC-128
DISPLAY UNIT .....	AV-17, AV-46, AV-79, AV-192, AV-242, AV-434	DOOR OUTSIDE LOWER MOLDING .....	EXT-38
DLC BRANCH LINE CIRCUIT... LAN-91, LAN-140, LAN-156, LAN-178, LAN-239, LAN-257, LAN-276, LAN-300		DOOR OUTSIDE MOLDING .....	EXT-33
DLC BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 1).....	LAN-92, LAN-209, LAN-332	DOOR REQUEST SWITCH ....	DLK-193, DLK-285
DLC BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT 2).....	LAN-93, LAN-210, LAN-333	DOOR SWITCH.....	DLK-168, DLK-284, PWC-48, PWC-115, RF-36
DOOR DOES NOT LOCK/UNLOCK AND ENGINE DOES NOT START (ALL I-KEY/REQ SW/PUSH SW) .....	DLK-233	DRIVE BELT .....	EM-12
		DRIVE PINION .....	DLN-85
		DRIVER AIR BAG MODULE .....	SR-12
		DRIVER SEAT CONTROL UNIT	ADP-29, ADP-163
		DRIVER SIDE DOOR MIRROR DEFOGGER DOES NOT OPERATE. ....	DEF-48
		DRIVER SIDE POWER WINDOW ALONE DOES NOT OPERATE .....	PWC-52, PWC-123
		DUCTS AND GRILLES.....	VTL-10

---

**E**

---

EASY FILL TIRE ALERT DOES NOT ACTIVATE...  
[WT-56](#)

ECM BRANCH LINE CIRCUIT ..[LAN-84](#), [LAN-134](#),  
[LAN-149](#), [LAN-171](#), [LAN-202](#), [LAN-233](#),  
[LAN-250](#), [LAN-269](#), [LAN-293](#), [LAN-325](#)

ECM, IPDM E/R, BCM .....[HAC-48](#), [SEC-26](#)

ELECTRIC CONTROLLED COUPLING ...[DLN-120](#)

ELECTRICAL LOAD SIGNAL .....[EC-467](#), [EC-844](#)

ELECTRICAL UNITS LOCATION .....[PG-4](#)

ELECTRONIC CONTROLLED ENGINE MOUNT ..  
[EC-469](#), [EC-846](#)

ENCODER ..... [PWC-45](#), [PWC-110](#)

ENGINE ASSEMBLY .....[EM-107](#)

ENGINE CAN NOT START .....[SEC-146](#)

ENGINE CONTROL SYSTEM ..... [EC-117](#), [EC-604](#)

ENGINE CONTROL SYSTEM SYMPTOM[SEC-498](#),  
[EC-875](#)

ENGINE COOLANT .....[CO-10](#)

ENGINE DOES NOT START WHEN INTELLIGENT  
KEY IS INSIDE OF VEHICLE .....[SEC-147](#)

ENGINE DOES NOT START WHEN INTELLIGENT  
KEY IS INSIDE OF VEHICLE (ONE KEY).....  
[SEC-149](#)

ENGINE MAINTENANCE (VQ35DE).....[MA-21](#)

ENGINE MOUNT .....[EM-104](#)

ENGINE OIL ..... [LU-8](#)

ENGINE ROOM COVER .....[EM-23](#)

ENGINE START FUNCTION .....[SEC-27](#)

EPS BRANCH LINE CIRCUIT ...[LAN-88](#), [LAN-138](#),  
[LAN-153](#), [LAN-175](#), [LAN-206](#), [LAN-237](#),  
[LAN-254](#), [LAN-273](#), [LAN-297](#), [LAN-329](#)

EVAP CANISTER.....[FL-18](#)

EVAP CANISTER FILTER.....[FL-20](#)

EVAP CANISTER VENT CONTROL VALVE .[FL-21](#)

EVAP CONTROL SYSTEM PRESSURE SENSOR  
[FL-22](#)

EVAP LEAK CHECK .....[EC-505](#), [EC-882](#)

EXCESSIVE OPERATION FREQUENCY[BRC-148](#),  
[BRC-310](#)

EXHAUST MANIFOLD AND THREE WAY  
CATALYST .....[EM-31](#)

EXHAUST SYSTEM ..... [EX-4](#), [EX-5](#)

EXTERIOR LIGHTING SYSTEM SYMPTOMS.....  
[EXL-133](#)

---

**F**

---

FENDER PROTECTOR ..... [EXT-28](#)

FILAMENT .....[DEF-51](#)

FLOOR TRIM ..... [INT-24](#)

FOOT LAMP ..... [INL-63](#)

FRONT AUTOMATIC AIR CONDITIONING  
SYSTEM ..... [HAC-144](#)

FRONT AUXILIARY INPUT JACK AUDIO SIGNAL  
CIRCUIT .....[AV-154](#), [AV-393](#)

FRONT AUXILIARY INPUT JACKS [AV-197](#), [AV-446](#)

FRONT BLOWER MOTOR ..... [HAC-130](#)

FRONT BUMPER.....[EXT-16](#)

FRONT CAMERA..... [AV-449](#)

FRONT CAMERA IMAGE SIGNAL CIRCUIT [AV-406](#)

FRONT COIL SPRING AND STRUT [FSU-8](#), [FSU-17](#)

FRONT COMBINATION LAMP .[EXL-145](#), [EXL-159](#)

FRONT DISC BRAKE [BR-11](#), [BR-16](#), [BR-35](#), [BR-44](#)

FRONT DOOR ..... [DLK-254](#)

FRONT DOOR FINISHER ..... [INT-15](#)

FRONT DOOR GLASS AND REGULATOR. [GW-14](#)

FRONT DOOR LOCK ..... [DLK-272](#)

FRONT DOOR SPEAKER .. [AV-32](#), [AV-47](#), [AV-148](#),  
[AV-193](#), [AV-381](#), [AV-438](#)

FRONT DRIVE SHAFT ..... [FAX-7](#), [FAX-15](#), [FAX-20](#)

FRONT DRIVE SHAFT BOOT ..... [FAX-10](#)

FRONT FENDER ..... [DLK-252](#)

FRONT FOG LAMP ..... [EXL-148](#)

FRONT FOG LAMP AIMING ADJUSTMENT .....  
[EXL-144](#)

FRONT FOG LAMP CIRCUIT ..... [EXL-119](#)

FRONT FOG LAMP SYSTEM..... [EXL-51](#)

FRONT GRILLE ..... [EXT-23](#)

FRONT LOWER LINK..... [RSU-13](#)

FRONT OIL SEAL ..... [DLN-123](#)

FRONT PASSENGER AIR BAG MODULE ... [SR-18](#)

FRONT PASSENGER AIR BAG OFF INDICATOR.  
[SR-42](#)

FRONT PASSENGER SIDE POWER WINDOW  
ALONE DOES NOT OPERATE ..... [PWC-124](#)

FRONT PASSENGER SIDE POWER WINDOW  
DOES NOT OPERATE ..... [PWC-53](#)

FRONT POWER WINDOW MOTOR ..... [GW-18](#)

FRONT POWER WINDOW SWITCH ..... [PWC-77](#)

FRONT ROOM/MAP LAMP ASSEMBLY ..... [INL-59](#)

FRONT SEAT ..... [SE-77](#), [SE-114](#)

FRONT SEAT BELT ..... [SB-8](#)

FRONT SEAT BELT BUCKLE SWITCH..... [SR-30](#)

FRONT SIDE AIR BAG MODULE..... [SR-22](#)

FRONT STABILIZER..... [FSU-13](#)

FRONT STEP LAMP..... [INL-65](#)

FRONT SUSPENSION ASSEMBLY ..... [FSU-5](#)

FRONT SUSPENSION MEMBER..... [FSU-16](#)

FRONT TIMING CHAIN CASE ..... [EM-57](#)

FRONT TWEETER ..... [AV-378](#), [AV-439](#)

FRONT UNDER COVER ..... [EXT-30](#)

FRONT WASHER NOZZLE AND TUBE ..... [WW-58](#)

FRONT WHEEL HUB..... [FAX-6](#), [FAX-8](#)

FRONT WIPER AND WASHER SYSTEM .. [WW-21](#)

FRONT WIPER ARM ..... [WW-62](#)

FRONT WIPER BLADE ..... [WW-64](#)

FRONT WIPER DOES NOT OPERATE ..... [WW-52](#)

FRONT WIPER DRIVE ASSEMBLY ..... [WW-65](#)

FRONT WIPER MOTOR GROUND CIRCUIT .....  
[WW-41](#)

FRONT WIPER MOTOR HI CIRCUIT ..... [WW-39](#)

FRONT WIPER MOTOR LO CIRCUIT .....	WW-38
FRONT WIPER STOP POSITION SIGNAL CIRCUIT WW-40	
FUEL FILLER LID OPENER .....	DLK-281
FUEL INJECTOR.....	EC-472, EC-849
FUEL INJECTOR AND FUEL TUBE .....	EM-49
FUEL LEVEL SENSOR SIGNAL CIRCUIT	MWI-67
FUEL LEVEL SENSOR UNIT.....	FL-23
FUEL LEVEL SENSOR UNIT, FUEL FILTER AND FUEL PUMP ASSEMBLY .....	FL-6
FUEL LID LOCK ACTUATOR.....	DLK-185
FUEL PRESSURE.....	EC-166, EC-651
FUEL PUMP .....	EC-475, EC-852
FUEL SYSTEM.....	FL-5
FUEL TANK .....	FL-13
FUSE BLOCK - JUNCTION BOX (J/B) .....	PG-78
FUSE INSPECTION .....	PG-88
FUSE, FUSIBLE LINK AND RELAY BOX ....	PG-79
FUSIBLE LINK INSPECTION.....	PG-92

## G

GENERAL MAINTENANCE .....	MA-6
GENERATOR .....	CHG-23
GLASS LID .....	RF-49
GLOVE BOX ASSEMBLY .....	IP-26
GLOVE BOX LAMP .....	INL-62
GPS ANTENNA.....	AV-456
GROUND.....	PG-39
GROUND CIRCUIT .....	DLK-223

## H

HALF LATCH SWITCH.....	DLK-211
HANDLING PRECAUTION .....	DAS-19, DAS-104
HANDLING PRECAUTIONS FOR PLASTICS .....	BRM-4
HARNESS .....	PG-54
HAZARD FUNCTION .....	DLK-204
HAZARD SWITCH.....	EXL-131, EXL-152
HEADLAMP .....	EXL-22, EXL-141
HEADLAMP (HI) CIRCUIT .....	EXL-112
HEADLAMP (LO) CIRCUIT .....	EXL-114
HEADLAMP FUNCTION .....	SEC-138
HEADLINING.....	INT-26
HEADREST DISPLAY UNIT.....	AV-251, AV-435
HEATED SEAT SYSTEM .....	SE-29
HEATED STEERING WHEEL .....	ST-13
HEATED STEERING WHEEL SWITCH INDICATOR LAMP.....	ST-38
HEATED STEERING WHEEL SYSTEM .....	ST-34
HEATER AND AIR CONDITIONING SYSTEM SYMPTOMS .....	HA-17
HEATING AND COOLING UNIT ASSEMBLY	HA-41
HEAVY TIGHT-CORNER BRAKING SYMPTOM OCCURS.....	DLN-65
HIGH-MOUNTED STOP LAMP.....	EXL-155

HILL DESCENT CONTROL SWITCH .....	BRC-327
HOMELINK UNIVERSAL TRANSCEIVER	DLK-106
HOOD .....	DLK-246
HOOD LOCK.....	DLK-269
HOOD SWITCH.....	DLK-224, SEC-139
HORIZONTAL SYNCHRONIZING (HP) SIGNAL CIRCUIT .....	AV-165
HORN .....	HRN-3, HRN-7
HORN FUNCTION.....	SEC-141
HOW TO ERASE PERMANENT DTC .....	EC-174, TM-316
HOW TO FOLLOW TROUBLE DIAGNOSES ..	GI-6
HOW TO READ WIRING DIAGRAMS .....	GI-9
HOW TO SET SRT CODE.....	EC-168, EC-653
HOW TO USE THIS MANUAL .....	GI-3
HOW TO USE THIS SECTION ....	LAN-10, LAN-26
HVAC BRANCH LINE CIRCUIT	LAN-94, LAN-141, LAN-157, LAN-179, LAN-211, LAN-240, LAN-258, LAN-277, LAN-301, LAN-334
HYDRAULIC LINE .....	ST-55
HYDRAULIC PUMP ELECTRIC POWER STEERING SYSTEM .....	STC-14
HYDRAULIC PUMP ELECTRIC POWER STEERING WARNING LAMP .....	STC-30
HYDRAULIC PUMP ELECTRIC POWER STEERING WARNING LAMP DOES NOT TURN OFF .....	STC-32
HYDRAULIC PUMP ELECTRIC POWER STEERING WARNING LAMP DOES NOT TURN ON .....	STC-31
Hill descent control INDICATOR LAMP ....	BRC-305
Hill descent control SWITCH .....	BRC-298

## I

ID REGISTRATION PROCEDURE .....	WT-30
IDENTIFICATION INFORMATION.....	GI-23
IDLE AIR VOLUME LEARNING ...	EC-158, EC-643
IDLE SPEED.....	EC-503, EC-880
IGNITION COIL .....	EM-42
IGNITION SIGNAL.....	EC-479, EC-856
IGNITION TIMING .....	EC-504, EC-881
ILLUMINATION .....	INL-27
ILLUMINATION CONTROL SWITCH .....	INL-68
ILLUMINATION CONTROL SWITCH SIGNAL CIRCUIT .....	MWI-63
IMAGE SWITCH SIGNAL CIRCUIT .....	AV-399
IMMOBILIZER CONTROL MODULE .....	SEC-154
IN-CABIN MICROFILTER.....	VTL-6
IN-VEHICLE SENSOR .....	HAC-158
INFORMATION DISPLAY (ASCD)	EC-484, EC-861
INPUT SPEED SENSOR.....	TM-215, TM-432
INSIDE KEY ANTENNA .....	DLK-286
INSIDE MIRROR .....	MIR-8, MIR-16
INSTRUMENT LOWER PANEL LH.....	IP-25
INSTRUMENT PANEL ASSEMBLY.....	IP-14



INSTRUMENT PANEL SPEAKER/TWEETER [AV-34](#),  
[AV-48](#), [AV-150](#), [AV-194](#), [AV-375](#), [AV-440](#)  
INSUFFICIENT COOLING ..... [HAC-147](#)  
INSUFFICIENT HEATING ..... [HAC-149](#)  
INTAKE MANIFOLD ..... [EM-29](#)  
INTAKE MANIFOLD COLLECTOR ..... [EM-26](#)  
INTAKE SENSOR ..... [HAC-160](#)  
INTEGRATED HOMELINK TRANSMITTER [DLK-226](#)  
INTELLIGENT KEY ..... [DLK-201](#)  
INTELLIGENT KEY BATTERY ..... [DLK-291](#)  
INTELLIGENT KEY BUTTON OPERATION HAS  
POOR RANGE (ALL KEYS) ..... [DLK-238](#)  
INTELLIGENT KEY BUTTON OPERATION HAS  
POOR RANGE (ONE KEY) ..... [DLK-245](#)  
INTELLIGENT KEY SYSTEM ..... [DLK-74](#)  
INTELLIGENT KEY SYSTEM ALL FUNCTIONS  
CANNOT OPERATE (ALL KEYS) ..... [DLK-234](#)  
INTELLIGENT KEY SYSTEM ALL FUNCTIONS  
CANNOT OPERATE (ONE KEY) ..... [DLK-243](#)  
INTELLIGENT KEY SYSTEM SYMPTOMS .....  
[DLK-228](#), [SEC-145](#)  
INTELLIGENT KEY WARNING BUZZER [DLK-199](#),  
[DLK-288](#)  
INTERIOR LIGHTING SYSTEM SYMPTOMS [INL-58](#)  
INTERIOR ROOM LAMP CONTROL CIRCUIT .....  
[INL-52](#)  
INTERIOR ROOM LAMP CONTROL SYSTEM .....  
[INL-12](#)  
INTERMITTENT INCIDENT ..... [SRC-44](#)  
INVERTER UNIT ..... [PWO-14](#), [PWO-16](#), [PWO-32](#)  
IPDM E/R (INTELLIGENT POWER DISTRIBUTION  
MODULE ENGINE ROOM) .. [PCS-12](#), [PCS-21](#),  
[PCS-32](#), [PG-83](#)  
IPDM-E BRANCH LINE CIRCUIT [LAN-85](#), [LAN-135](#),  
[LAN-150](#), [LAN-172](#), [LAN-203](#), [LAN-234](#),  
[LAN-251](#), [LAN-270](#), [LAN-294](#), [LAN-326](#)  
ITS COMMUNICATION CIRCUIT ..... [LAN-114](#),  
[LAN-191](#), [LAN-228](#), [LAN-314](#), [LAN-352](#)

## K

KEY CYLINDER ..... [DLK-283](#)  
KEY WARNING LAMP ..... [DLK-203](#)  
KEYLESS POWER WINDOW DOWN DOES NOT  
OPERATE ..... [PWC-58](#), [PWC-133](#)

## L

L TERMINAL CIRCUIT (OPEN) ..... [CHG-18](#)  
L TERMINAL CIRCUIT (SHORT) ..... [CHG-20](#)  
LATCH (LOWER ANCHORS AND TETHER FOR  
CHILDREN) SYSTEM ..... [SB-19](#)  
LICENSE PLATE LAMP ..... [EXL-157](#)  
LIFTING MOTOR (FRONT) ..... [ADP-146](#)  
LIFTING MOTOR (REAR) ..... [ADP-148](#)  
LIFTING POINT ..... [GI-33](#)  
LIFTING SENSOR (FRONT) ..... [ADP-125](#)

LIFTING SENSOR (REAR) ..... [ADP-128](#)  
LIFTING SWITCH (FRONT) ..... [ADP-99](#)  
LIFTING SWITCH (REAR) ..... [ADP-102](#)  
LIGHTING & TURN SIGNAL SWITCH ..... [EXL-151](#)  
LOW TIRE PRESSURE WARNING LAMP DOES  
NOT TURN ON ..... [WT-54](#)  
LOW TIRE PRESSURE WARNING LAMP STAYS  
ON ..... [WT-55](#)  
LUBRICATION SYSTEM ..... [LU-6](#)  
LUGGAGE FLOOR TRIM ..... [INT-30](#)  
LUMBAR SUPPORT SYSTEM ..... [SE-25](#)

## M

M&A BRANCH LINE CIRCUIT ... [LAN-95](#), [LAN-142](#),  
[LAN-158](#), [LAN-180](#), [LAN-212](#), [LAN-241](#),  
[LAN-259](#), [LAN-278](#), [LAN-302](#), [LAN-335](#)  
MAGNET CLUTCH ..... [HAC-133](#)  
MAIN LINE BETWEEN ABS AND DLC CIRCUIT ...  
[LAN-74](#), [LAN-133](#), [LAN-148](#), [LAN-165](#),  
[LAN-194](#), [LAN-231](#), [LAN-248](#), [LAN-267](#),  
[LAN-287](#), [LAN-317](#)  
MAIN LINE BETWEEN ADP AND PWBD CIRCUIT  
[LAN-78](#), [LAN-167](#), [LAN-197](#), [LAN-289](#), [LAN-320](#)  
MAIN LINE BETWEEN AVM AND SONAR CIRCUIT  
[LAN-83](#), [LAN-201](#), [LAN-324](#)  
MAIN LINE BETWEEN DLC AND 4WD CIRCUIT ..  
[LAN-75](#), [LAN-232](#), [LAN-249](#), [LAN-268](#)  
MAIN LINE BETWEEN DLC AND ADP CIRCUIT ...  
[LAN-76](#), [LAN-166](#), [LAN-196](#), [LAN-288](#), [LAN-318](#)  
MAIN LINE BETWEEN DLC AND CGW CIRCUIT .  
[LAN-77](#), [LAN-195](#), [LAN-319](#)  
MAIN LINE BETWEEN IPDM-E AND ABS CIRCUIT  
[LAN-73](#), [LAN-132](#), [LAN-147](#), [LAN-164](#),  
[LAN-193](#), [LAN-230](#), [LAN-247](#), [LAN-266](#),  
[LAN-286](#), [LAN-316](#)  
MAIN LINE BETWEEN PWBD AND BSW/BUZZER  
CIRCUIT [LAN-79](#), [LAN-168](#), [LAN-198](#), [LAN-290](#),  
[LAN-321](#)  
MAIN LINE BETWEEN RDR-L AND AVM CIRCUIT  
[LAN-82](#), [LAN-200](#), [LAN-323](#)  
MAIN LINE BETWEEN RDR-L AND SONAR  
CIRCUIT ..... [LAN-81](#), [LAN-170](#), [LAN-292](#)  
MAIN LINE BETWEEN RDR-R AND RDR-L  
CIRCUIT [LAN-80](#), [LAN-169](#), [LAN-199](#), [LAN-291](#),  
[LAN-322](#)  
MAIN POWER SUPPLY AND GROUND CIRCUIT.  
[TM-176](#), [TM-394](#)  
MAIN POWER WINDOW AND DOOR LOCK/  
UNLOCK SWITCH ..... [PWC-61](#), [PWC-136](#)  
MALFUNCTION AREA CHART ..... [LAN-71](#)  
MALFUNCTION INDICATOR LAMP [EC-485](#), [EC-862](#)  
METER BUZZER CIRCUIT ..... [DLK-202](#), [WCS-30](#)  
METER SYSTEM ..... [MWI-31](#)  
MICROPHONE ..... [AV-199](#), [AV-447](#)  
MICROPHONE SIGNAL CIRCUIT [AV-174](#), [AV-401](#)  
MID AUDIO SYSTEM ..... [AV-86](#)

MIRROR SENSOR ..... ADP-137  
 MIXTURE RATIO SELF-LEARNING VALUE CLEAR  
 EC-160, EC-645  
 MOONROOF DOES NOT OPERATE PROPERLY .  
 RF-38  
 MOONROOF MOTOR ASSEMBLY...RF-14, RF-50  
 MOONROOF SWITCH.....RF-32, RF-61  
 MOONROOF SYSTEM .....RF-16  
 MOONROOF UNIT ASSEMBLY.....RF-51  
 MULTI AV SYSTEM..... AV-180, AV-412  
 MULTIFUNCTION SWITCH ..... AV-189, AV-431

**N**

NATS ANTENNA AMP..... SEC-152  
 NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS  
 SEC-44  
 NO OUTPUT FROM AC 120 V OUTLET ..PWO-29  
 NOISE .....HA-20  
 NOISE, VIBRATION AND HARSHNESS (NVH)  
 TROUBLESHOOTINGBR-6, DLN-69, DLN-100,  
 DLN-113, FAX-5, FSU-3, RAX-4, RSU-4, ST-42,  
 WT-57  
 NORMAL OPERATING CONDITION ..... ADP-162,  
 AV-42, AV-184, AV-419, BCS-80, BRC-154,  
 BRC-316, DAS-87, DAS-172, EC-502, EC-879,  
 EXL-135, MWI-84, PWO-31, WW-51

**O**

OCCUPANT CLASSIFICATION SYSTEM.....SR-31  
 OD OFF INDICATOR LAMP ..... TM-182, TM-400  
 OIL .....HA-25  
 OIL COOLER.....LU-15  
 OIL FILTER.....LU-10  
 OIL PAN..... TM-206, TM-424  
 OIL PAN AND OIL STRAINER ..... EM-36  
 OIL PUMP .....LU-12  
 OIL SEAL..... EM-90  
 ON BOARD DIAGNOSTIC (OBD) SYSTEM EC-60,  
 EC-552, TM-46, TM-267  
 ON BOARD REFUELING VAPOR RECOVERY  
 (ORVR)..... EC-486, EC-863  
 OPERATION... DAS-17, DAS-102, EC-58, EC-550,  
 HAC-31  
 OPERATION INSPECTION..... HAC-74  
 OPTICAL SENSOR .....EXL-128, EXL-150  
 OUTPUT SPEED SENSOR ..... TM-217, TM-434  
 OUTSIDE KEY ANTENNA .....DLK-287  
 OUTSIDE KEY ANTENNA (DRIVER SIDE)DLK-164  
 OUTSIDE KEY ANTENNA (PASSENGER SIDE) ...  
 DLK-162  
 OUTSIDE KEY ANTENNA (REAR BUMPER) .....  
 DLK-166  
 OVERDRIVE CONTROL SWITCHTM-179, TM-397  
 OVERHEATING CAUSE ANALYSIS ..... CO-6

**P**

P0011, P0021 IVT CONTROL ..... EC-194, EC-672  
 P0014, P0024 EVT CONTROL ..... EC-198  
 P0030, P0031, P0032, P0036, P0051, P0052 A/F  
 SENSOR 1 HEATER ..... EC-204  
 P0031, P0032, P0051, P0052 A/F SENSOR 1  
 HEATER ..... EC-676  
 P0037, P0038, P0057, P0058 HO2S2 HEATER .....  
 EC-207, EC-679  
 P0075, P0081 IVT CONTROL SOLENOID VALVE .  
 EC-210, EC-682  
 P0078, P0084 EVT CONTROL SOLENOID VALVE  
 EC-214  
 P0101 MAF SENSOR..... EC-217  
 P0102, P0103 MAF SENSOR ..... EC-222, EC-684  
 P0111 IAT SENSOR ..... EC-227  
 P0112, P0113 IAT SENSOR ..... EC-229, EC-688  
 P0116 ECT SENSOR ..... EC-231  
 P0117, P0118 ECT SENSOR ..... EC-233, EC-690  
 P0122, P0123 TP SENSOR ..... EC-235, EC-692  
 P0125 ECT SENSOR ..... EC-238  
 P0127 IAT SENSOR..... EC-240  
 P0128 THERMOSTAT FUNCTION..... EC-242  
 P0130, P0150 A/F SENSOR 1 ..... EC-245, EC-694  
 P0131, P0151 A/F SENSOR 1 ..... EC-249, EC-698  
 P0132, P0152 A/F SENSOR 1 ..... EC-252, EC-701  
 P0137, P0157 HO2S2 ..... EC-255, EC-704  
 P0138, P0158 HO2S2 ..... EC-261, EC-710  
 P0139, P0159 HO2S2 ..... EC-268, EC-717  
 P0141, P0161 HEATED OXYGEN SENSOR 2  
 HEATER ..... EC-274  
 P014C, P014D, P014E, P014F A/F SENSOR 1.....  
 EC-723  
 P014C, P014D, P014E, P014F, P015A, P015B,  
 P015C, P015D A/F SENSOR 1 ..... EC-277  
 P0171, P0174 FUEL INJECTION SYSTEM  
 FUNCTION ..... EC-283, EC-728  
 P0172, P0175 FUEL INJECTION SYSTEM  
 FUNCTION ..... EC-287, EC-732  
 P0181 FTT SENSOR..... EC-291  
 P0182, P0183 FTT SENSOR ..... EC-295  
 P0196 EOT SENSOR ..... EC-297  
 P0197, P0198 EOT SENSOR ..... EC-301, EC-736  
 P0222, P0223 TP SENSOR ..... EC-303, EC-738  
 P0300, P0301, P0302, P0303, P0304, P0305,  
 P0306 MISFIRE..... EC-306, EC-740  
 P0327, P0328, P0332, P0333 KS EC-312, EC-746  
 P0335 CKP SENSOR (POS)..... EC-314, EC-748  
 P0340, P0345 CMP SENSOR (PHASE) ... EC-317,  
 EC-751  
 P0420, P0430 THREE WAY CATALYST FUNCTION  
 EC-321, EC-754  
 P0441 EVAP CONTROL SYSTEM..... EC-326  
 P0443 EVAP CANISTER PURGE VOLUME  
 CONTROL SOLENOID VALVE ..... EC-331  
 P0444 EVAP PURGE CONTROL VALVE... EC-759

P0444, P0445 EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE.....	EC-336	P0779 PRESSURE CONTROL SOLENOID B.....	TM-140, TM-361
P0447 EVAP CANISTER VENT CONTROL VALVE	EC-339, EC-762	P0841 TRANSMISSION FLUID PRESSURE SEN/ SW A .....	TM-142, TM-363
P0448 EVAP CANISTER VENT CONTROL VALVE	EC-342	P0847 TRANSMISSION FLUID PRESSURE SEN/ SW B .....	TM-143, TM-364
P0451 EVAP CONTROL SYSTEM PRESSURE SENSOR.....	EC-346	P0848 TRANSMISSION FLUID PRESSURE SEN/ SW B .....	TM-145, TM-366
P0452 EVAP CONTROL SYSTEM PRESSURE SENSOR.....	EC-349, EC-765	P084C TRANSMISSION FLUID PRESSURE SEN/ SW H.....	TM-147, TM-368
P0453 EVAP CONTROL SYSTEM PRESSURE SENSOR.....	EC-352, EC-768	P084D TRANSMISSION FLUID PRESSURE SEN/ SW H.....	TM-149, TM-370
P0456 EVAP CONTROL SYSTEM.....	EC-356	P0850 PNP SWITCH .....	EC-396, EC-791
P0460 FUEL LEVEL SENSOR .....	EC-362	P0863 TCM COMMUNICATION ..	TM-151, TM-372
P0461 FUEL LEVEL SENSOR.....	EC-363	P0890 TCM .....	TM-152, TM-373
P0462, P0463 FUEL LEVEL SENSOR.....	EC-365	P0962 PRESSURE CONTROL SOLENOID A.....	TM-154, TM-375
P0500 VSS.....	EC-366, EC-772	P0963 PRESSURE CONTROL SOLENOID A.....	TM-156, TM-377
P0506 ISC SYSTEM .....	EC-368, EC-774	P0965 PRESSURE CONTROL SOLENOID B.....	TM-158, TM-379
P0507 ISC SYSTEM .....	EC-370, EC-776	P0966 PRESSURE CONTROL SOLENOID B.....	TM-160, TM-381
P050A, P050E COLD START CONTROL...	EC-372	P0967 PRESSURE CONTROL SOLENOID B.....	TM-162, TM-383
P0520 EOP SENSOR .....	EC-374, EC-778	P1078, P1084 EVT CONTROL POSITION SENSOR	EC-399
P0524 ENGINE OIL PRESSURE ..	EC-377, EC-781	P1148, P1168 CLOSED LOOP CONTROL..	EC-403
P052A, P052B, P052C, P052D INTAKE VALVE TIMING CONTROL.....	EC-380	P1212 TCS COMMUNICATION LINE .....	EC-404, EC-794
P0603 ECM POWER SUPPLY .....	EC-784	P1217 ENGINE OVER TEMPERATURE ...	EC-405, EC-795
P0603, P062F ECM .....	EC-386	P1225 TP SENSOR .....	EC-408, EC-798
P0604 ECM.....	EC-388	P1226 TP SENSOR .....	EC-409, EC-799
P0605 ECM.....	EC-389, EC-786	P1564 ASCD STEERING SWITCH.....	EC-410, EC-800
P0606 ECM.....	EC-390	P1572 ASCD BRAKE SWITCH.....	EC-413, EC-803
P0607 ECM.....	EC-391, EC-788	P1574 ASCD VEHICLE SPEED SENSOR	EC-419, EC-809
P060A ECM .....	EC-392	P1610 LOCK MODE .....	SEC-78
P060B ECM .....	EC-393	P1611 ID DISCORD, IMMU-ECM .....	SEC-79
P062F EEPROM .....	TM-106, TM-326	P1612 CHAIN OF ECM-IMMU .....	SEC-80
P0643 SENSOR POWER SUPPLY.....	EC-394, EC-789	P1614 CHAIN OF IMMU-KEY.....	SEC-81
P0705 TRANSMISSION RANGE SENSOR A .....	TM-107, TM-327	P1700 CVT CONTROL SYSTEM ..	EC-421, EC-811
P0706 TRANSMISSION RANGE SENSOR A .....	TM-113, TM-333	P1715 INPUT SPEED SENSOR (PRIMARY SPEED SENSOR).....	EC-422, EC-812
P0711 TRANSMISSION FLUID TEMPERATURE SENSOR A .....	TM-116, TM-336	P17F0 CVT JUDDER (T/M INSPECTION) ..	TM-164
P0712 TRANSMISSION FLUID TEMPERATURE SENSOR A .....	TM-118, TM-339	P17F1 CVT JUDDER (C/V INSPECTION)..	TM-165
P0713 TRANSMISSION FLUID TEMPERATURE SENSOR A .....	TM-120, TM-341	P17F2 CVT JUDDER (T/C INSPECTION)..	TM-166
P0715 INPUT SPEED SENSOR ..	ATM-122, TM-343	P1800 VIAS CONTROL SOLENOID VALVE 1.....	EC-423, EC-813
P0717 INPUT SPEED SENSOR ..	ATM-125, TM-346	P1801 VIAS CONTROL SOLENOID VALVE 2.....	EC-425, EC-815
P0740 TORQUE CONVERTER...	TM-128, TM-349	P1804 4WD CONTROL UNIT .....	DLN-56
P0743 TORQUE CONVERTER...	TM-130, TM-351	P1805 BRAKE SWITCH.....	EC-427, EC-817
P0744 TORQUE CONVERTER...	TM-132, TM-353	P181F INCOMPLETE CALIBRATION.....	DLN-57
P0746 PRESSURE CONTROL SOLENOID A .....	TM-134, TM-355		
P0776 PRESSURE CONTROL SOLENOID B .....	TM-136, TM-357		
P0778 PRESSURE CONTROL SOLENOID B .....	TM-138, TM-359		

P2096, P2097, P2098, P2099 A/F SENSOR 1 ..... EC-429	POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH RH ..... PWC-62, PWC-137
P2100, P2103 THROTTLE CONTROL MOTOR RELAY ..... EC-433, EC-819	POWER WINDOW LOCK SWITCH ..... PWC-50, PWC-117
P2101 ELECTRIC THROTTLE CONTROL FUNCTION ..... EC-435, EC-821	POWER WINDOW LOCK SWITCH DOES NOT FUNCTION ..... PWC-59, PWC-134
P2118 THROTTLE CONTROL MOTOR.....EC-438, EC-824	POWER WINDOW MAIN SWITCH ..... PWC-15, PWC-74
P2119 ELECTRIC THROTTLE CONTROL ACTUATOR ..... EC-440, EC-826	POWER WINDOW MOTOR .... PWC-38, PWC-103
P2122, P2123 APP SENSOR ..... EC-442, EC-828	POWER WINDOW RETAINED POWER FUNCTION DOES NOT OPERATE NORMALLY ... PWC-57
P2127, P2128 APP SENSOR ..... EC-445, EC-830	POWER WINDOW RETAINED POWER OPERATION DOES NOT OPERATE PROPERLY ..... PWC-131
P2135 TP SENSOR ..... EC-448, EC-833	POWER WINDOW SERIAL LINK..... PWC-118
P2138 APP SENSOR ..... EC-451, EC-835	POWER WINDOW SWITCH DOES NOT ILLUMINATE ..... PWC-60, PWC-135
P219A, P219B AIR FUEL RATIO ..... EC-454	POWER WINDOW SYSTEM..... PWC-17, PWC-79
P2610 ECM INTERNAL TIMER ..... EC-459	POWER WINDOWS DO NOT OPERATE WITH POWER WINDOW MAIN SWITCH .... PWC-51, PWC-122
P2765 INPUT SPEED SENSOR BTM-167, TM-385	PRE-INSPECTION FOR DIAGNOSIS..... DAS-50, DAS-135
P2813 SELECT SOLENOID..... TM-170, TM-388	PRECAUTION ..... SN-3
P2814 SELECT SOLENOID..... TM-172, TM-390	PRECAUTIONS..... ACC-2, ADP-5, AV-9, AV-52, AV-206, BCS-3, BR-3, BRC-7, BRC-165, BRM-3, CCS-2, CHG-2, CO-2, DAS-6, DAS-92, DEF-3, DLK-8, DLN-5, DLN-98, DLN-107, EC-14, EC-510, EM-3, EX-2, EXL-4, EXT-3, FAX-2, FL-2, FSU-2, GI-28, GW-2, HA-3, HAC-5, HRN-2, INL-3, INT-3, IP-2, LAN-11, LAN-27, LAN-116, LU-2, MA-3, MIR-2, MWI-4, PB-2, PCS-3, PCS-33, PG-2, PWC-6, PWC-64, PWO-3, PWO-10, RAX-2, RF-3, RSU-2, SB-2, SE-3, SEC-4, SR-2, SRC-4, ST-3, STC-3, STR-2, TM-10, TM-233, VTL-3, WCS-3, WT-3, WW-3
P2815 SELECT SOLENOID..... TM-174, TM-392	PREMIUM AUDIO SYSTEM..... AV-258
PANORAMIC ROOF GLASS..... GW-26	PRIMARY SPEED SENSOR ..... TM-216, TM-433
PARKING BRAKE CONTROL..... PB-7	PROCEDURE FOR TEMPORARILY DISABLING THE IGNITION BATTERY SAVER SYSTEM .... PCS-57
PARKING BRAKE SHOE ..... PB-6, PB-9	PROPELLER SHAFT ASSEMBLY ..... DLN-101
PARKING BRAKE SWITCH .... BRC-139, BRC-300	PTC HEATER ..... HA-49, HAC-136
PARKING BRAKE SWITCH SIGNAL CIRCUIT..... MWI-71	PTC HEATER RELAY ..... HAC-134
PARKING BRAKE SYSTEM..... PB-4	PUSH BUTTON IGNITION SWITCH ..... PCS-85
PARKING LAMP CIRCUIT ..... EXL-121	PUSH-BUTTON IGNITION SWITCH..... PCS-78, SEC-153
PARKING, LICENSE PLATE AND TAIL LAMPS SYSTEM..... EXL-68	PUSH-BUTTON IGNITION SWITCH DOES NOT OPERATE ..... PCS-83
PARKING, LICENSE PLATE, SIDE MARKER AND TAIL LAMPS ARE NOT TURNED ON. EXL-138	PUSH-BUTTON IGNITION SWITCH ILLUMINATION CIRCUIT ..... INL-56
PASSENGER SIDE DOOR MIRROR DEFOGGER DOES NOT OPERATE..... DEF-49	PWBD BRANCH LINE CIRCUIT LAN-100, LAN-184, LAN-216, LAN-282, LAN-307, LAN-340
PERFORMANCE TEST ..... HA-28	
PERIODIC MAINTENANCE ..... MA-10	
PERSONAL LAMP ..... INL-66	
PLUG ..... TM-225, TM-442	
POSITIVE CRANKCASE VENTILATION ... EC-507, EC-884	
POWER DISTRIBUTION SYSTEM..... PCS-44	
POWER DOOR LOCK SYSTEM..... DLK-61	
POWER SEAT FOR DRIVER SIDE WITHOUT AUTOMATIC DRIVE POSITIONER ..... SE-17	
POWER SEAT FOR PASSENGER SIDE ..... SE-21	
POWER SEAT SWITCH..... ADP-166	
POWER SEAT SWITCH GROUND CIRCUIT ..... ADP-117	
POWER SOCKET ..... PWO-6, PWO-9	
POWER STEERING CONTROL MODULE STC-11, STC-38	
POWER STEERING FLUID ..... ST-18, ST-43	
POWER STEERING OIL PUMP ..... ST-22, ST-53, ST-65	
POWER SUPPLY ROUTING CIRCUIT ..... PG-15	



---

**Q**

---

QUARTER WINDOW GLASS.....GW-24

---

**R**

---

RADIATOR.....CO-15  
RADIATOR CORE SUPPORT .....DLK-250  
RADIUS ROD.....RSU-12  
RCTA SYSTEM SYMPTOMS .....DAS-171  
RDR-L BRANCH LINE CIRCUITLAN-106, LAN-188,  
LAN-222, LAN-311, LAN-346  
RDR-R BRANCH LINE CIRCUITLAN-105, LAN-187,  
LAN-221, LAN-310, LAN-345  
REAR AIR CONTROL.....HAC-155  
REAR AUTOMATIC AIR CONDITIONING SYSTEM  
HAC-146  
REAR AUXILIARY INPUT JACKS .....AV-453  
REAR BLOWER MOTOR .....HAC-138  
REAR BUMPER.....EXT-20  
REAR CAMERA IMAGE SIGNAL CIRCUIT AV-407  
REAR COMBINATION LAMP... EXL-153, EXL-160  
REAR CROSS TRAFFIC AREA .....DAS-119  
REAR DIFFERENTIAL GEAR OIL.....DLN-114  
REAR DISC BRAKE BR-12, BR-18, BR-40, BR-47  
REAR DOOR .....DLK-258  
REAR DOOR FINISHER.....INT-17  
REAR DOOR GLASS AND REGULATOR...GW-19  
REAR DOOR LOCK.....DLK-276  
REAR DOOR SPEAKER ....AV-36, AV-49, AV-152,  
AV-195, AV-384, AV-442  
REAR DRIVE SHAFT .....RAX-6, RAX-9, RAX-11  
REAR FINAL DRIVE ASSEMBLY .....DLN-127,  
DLN-130  
REAR LH SIDE POWER WINDOW ALONE DOES  
NOT OPERATE.....PWC-54, PWC-125  
REAR LOWER LINK & COIL SPRING .....RSU-8  
REAR POWER WINDOW MOTOR .....GW-23  
REAR POWER WINDOW SWITCH.....PWC-63,  
PWC-138  
REAR PROPELLER SHAFT .....DLN-102  
REAR RH SIDE POWER WINDOW ALONE DOES  
NOT OPERATE.....PWC-55, PWC-126  
REAR SHOCK ABSORBER .....RSU-10, RSU-22  
REAR SPEAKER .....AV-387  
REAR SPEAKERS .....AV-443  
REAR SPOILER.....EXT-41  
REAR STABILIZER.....RSU-15  
REAR SUSPENSION ARM.....RSU-17  
REAR SUSPENSION ASSEMBLY .....RSU-5  
REAR SUSPENSION MEMBER.....RSU-19  
REAR TIMING CHAIN CASE.....EM-75  
REAR VIEW CAMERA.....AV-201, AV-450  
REAR WASHER NOZZLE AND TUBE .....WW-70  
REAR WHEEL HUB.....RAX-7

REAR WINDOW DEFOGGER AND DOOR  
MIRROR DEFOGGER DO NOT OPERATE. ....  
DEF-44  
REAR WINDOW DEFOGGER DOES NOT  
OPERATE BUT BOTH OF DOOR MIRROR  
DEFOGGER OPERATE.....DEF-45  
REAR WINDOW DEFOGGER POWER SUPPLY  
AND GROUND CIRCUIT .....DEF-33  
REAR WINDOW DEFOGGER RELAY .....DEF-31  
REAR WINDOW DEFOGGER SWITCH.....DEF-26  
REAR WINDOW DEFOGGER SWITCH DOES NOT  
LIGHT, BUT REAR WINDOW DEFOGGER  
OPERATES.....DEF-50  
REAR WINDOW DEFOGGER SYSTEM ....DEF-10  
REAR WIPER AND WASHER SYSTEM.....WW-29  
REAR WIPER ARM.....WW-67  
REAR WIPER MOTOR .....WW-69  
REAR WIPER MOTOR CIRCUIT.....WW-45  
REAR WIPER STOP POSITION SIGNAL CIRCUIT  
WW-47  
RECLINING MOTOR .....ADP-144  
RECLINING SENSOR.....ADP-122  
RECLINING SWITCH.....ADP-96  
RECOMMENDED CHEMICAL PRODUCTS AND  
SEALANTS .....GI-22  
RECOMMENDED FLUIDS AND LUBRICANTS .....  
MA-17  
REFRIGERANT.....HA-21  
REFRIGERANT PRESSURE SENSOR.....EC-490,  
EC-867, HAC-161  
REFRIGERATION SYSTEM SYMPTOMS....HA-18  
REMOTE KEYLESS ENTRY RECEIVER DLK-191,  
DLK-290  
REPAIRING HIGH STRENGTH STEEL .....BRM-8  
REPAIRING MATERIAL .....BRM-11  
REPLACEMENT OPERATIONS .....BRM-24  
RETAINED POWER OPERATION DOES NOT  
OPERATE PROPERLY .....RF-42  
RGB (B: BLUE) SIGNAL CIRCUIT .....AV-162  
RGB (G: GREEN) SIGNAL CIRCUIT .....AV-161  
RGB (R: RED) SIGNAL CIRCUIT .....AV-160  
RGB AREA (YS) SIGNAL CIRCUIT .....AV-164  
RGB SYNCHRONIZING SIGNAL CIRCUIT AV-163  
RING GEAR SHAFT .....DLN-81  
ROCKER COVER .....EM-43  
ROOF RACK .....EXT-37  
ROOF SIDE MOLDING.....EXT-31

---

**S**

---

S CONNECTOR CIRCUIT .....STR-18  
S TERMINAL CIRCUIT .....CHG-21  
SATELLITE AUDIO SIGNAL CIRCUIT .....AV-156  
SATELLITE RADIO ANTENNA .....AV-205, AV-457  
SATELLITE RADIO TUNER.....AV-82, AV-200  
SATELLITE SENSOR .....SR-24

SEAT BELT BUCKLE SWITCH SIGNAL CIRCUIT . WCS-31	SONAR BRANCH LINE CIRCUIT LAN-96, LAN-159, LAN-181, LAN-213, LAN-260, LAN-279, LAN-303, LAN-336
SEAT BELT INDCTR LAMP IS ON, PASS AIR BAG INDCTR IS ON OR OFF ..... SRC-117	SONAR CONTROL UNIT ..... SN-10, SN-34
SEAT BELT PRE-TENSIONER ..... SR-29	SONAR SENSOR ..... SN-35
SEAT BELT WARNING SYSTEM ..... SRC-115	SONAR SYSTEM ..... SN-13, SN-33
SEAT CUSHION THERMAL ELECTRIC DEVICE... SE-60	SPARK PLUG ..... EM-16
SEAT CUSHION THERMAL ELECTRIC DEVICE SENSOR ..... SE-62	SPINDLE MOTOR ..... DLK-218
SEAT MEMORY INDICATOR ..... ADP-159	SPIRAL CABLE ..... SR-15
SEAT MEMORY SWITCH ..... ADP-109, ADP-165	SQUEAK AND RATTLE TROUBLE DIAGNOSES .. EXT-10, GW-5, INT-9, IP-8, MIR-10, RF-43, SE-71
SEATBACK THERMAL ELECTRIC DEVICE SE-56	SRS AIR BAG SYSTEM ..... SRC-26
SEATBACK THERMAL ELECTRIC DEVICE SENSOR ..... SE-58	SRS AIR BAG WARNING LAMP DOES NOT TURN OFF ..... SRC-114
SECOND ROW SEAT ..... SE-128	SRS AIR BAG WARNING LAMP DOES NOT TURN ON ..... SRC-113
SECOND ROW SEAT BELT ..... SB-13	STALL TEST ..... TM-95, TM-314
SECOND ROW SEATS ..... SE-95	STARTER MOTOR ..... STR-20, STR-21
SECURITY INDICATOR LAMP ..... SEC-143	STARTING SYSTEM ..... STR-5, STR-6, STR-19
SENSOR POWER SUPPLY2 CIRCUIT .... EC-492, EC-869	STEERING ANGLE SENSOR . BRC-164, BRC-325
SENSOR ROTOR ..... BRC-159, BRC-321	STEERING COLUMN ST-10, ST-21, ST-41, ST-47
SERVICE AFTER REPLACING OR REMOVING ENGINE PARTS ..... EC-153, EC-638	STEERING COLUMN COVERS ..... IP-17
SERVICE DATA AND SPECIFICATIONS (SDS)..... ACC-5, BR-50, CHG-25, CO-28, DLN-97, DLN-106, DLN-135, EC-509, EC-886, EM-138, EXL-161, FAX-31, FL-25, FSU-21, HA-50, INL-69, LU-17, PB-12, PG-97, PWO-35, RAX-17, RSU-23, ST-66, TM-232, TM-449, WT-67, WW-72	STEERING GEAR AND LINKAGE ... ST-23, ST-49, ST-58, ST-62
SERVICE INFORMATION FOR ELECTRICAL INCIDENT ..... GI-43	STEERING KNUCKLE ..... FSU-15
SHIFT LOCK SYSTEM ..... TM-186, TM-404	STEERING SWITCH AV-38, AV-45, AV-177, AV-191, AV-403, AV-433, MWI-72
SHIFT POSITION INDICATOR CIRCUIT .. TM-178, TM-396	STEERING WHEEL ..... ST-19, ST-45
SHIPPING MODE CANCEL OPERATION . BCS-67	STEERING WHEEL TURNING FORCE IS HEAVY OR LIGHT ..... STC-33
SIDE AIR BAG MODULE ..... SE-92	STEP LAMP CIRCUIT ..... INL-54
SIDE CAMERA ..... AV-451	STOP LAMP ..... EXL-80
SIDE CAMERA FINISHER ..... MIR-22	STRG BRANCH LINE CIRCUIT LAN-97, LAN-143, LAN-160, LAN-182, LAN-214, LAN-242, LAN-261, LAN-280, LAN-304, LAN-337
SIDE CAMERA LH IMAGE SIGNAL CIRCUIT ..... AV-410	STRUCTURE AND OPERATION DLN-13, DLN-110, EC-35, EC-530, TM-26, TM-248
SIDE CAMERA RH IMAGE SIGNAL CIRCUIT ..... AV-411	SUBWOOFER ..... AV-390, AV-444
SIDE CURTAIN AIR BAG MODULE ..... SR-20	SUNLOAD SENSOR ..... HAC-159
SIDE GUARD MOLDING ..... EXT-35	SUNSHADE ..... RF-57
SIDE OIL SEAL ..... DLN-118	SUNSHADE MOTOR ASSEMBLY .... RF-15, RF-59
SIDE RADAR ..... DAS-89, DAS-175	SUNSHADE SWITCH ..... RF-34, RF-62
SIDE RADAR LH ..... DAS-29, DAS-114	SUNSHADE SYSTEM DOES NOT OPERATE PROPERLY ..... RF-39
SIDE RADAR RH ..... DAS-31, DAS-116	SYSTEM (AUTOMATIC BACK DOOR SYSTEM) ... DLK-38
SILL MOLDING ..... EXT-40	SYSTEM (INTEGRATED HOMELINK TRANSMITTER) ..... DLK-45
SLIDING MOTOR ..... ADP-142	SYSTEM (INTELLIGENT KEY SYSTEM) .. DLK-21
SLIDING SENSOR ..... ADP-119	SYSTEM INITIALIZATION ..... PWC-92
SLIDING SWITCH ..... ADP-93	SYSTEM SETTING ..... HAC-78
SLIP INDICATOR LAMP ..... BRC-145, BRC-307	
	<b>T</b>
	TCM ..... TM-54, TM-204, TM-275, TM-422

TCM BRANCH LINE CIRCUIT... LAN-86, LAN-136,  
 LAN-151, LAN-173, LAN-204, LAN-235,  
 LAN-252, LAN-271, LAN-295, LAN-327

TELESCOPIC MOTOR .....ADP-152, ST-32

TELESCOPIC SENSOR .....ADP-134

TELESCOPIC SWITCH .....ADP-107, ST-27

THE AMBIENT TEMPERATURE DISPLAY IS  
 INCORRECT .....MWI-83

THE BACK DOOR OPEN WARNING CONTINUES  
 DISPLAYING, OR DOES NOT DISPLAY MWI-81

THE BRAKING DISTANCE IS LONG .... BRC-150,  
 BRC-312

THE DOOR OPEN WARNING CONTINUES  
 DISPLAYING, OR DOES NOT DISPLAY MWI-80

THE FUEL GAUGE INDICATOR DOES NOT  
 OPERATE .....MWI-74

THE ILLUMINATION CONTROL SWITCH IS  
 INOPERATIVE .....MWI-75

THE LIGHT REMINDER WARNING DOES NOT  
 SOUND .....WCS-34

THE LOW WASHER FLUID WARNING  
 CONTINUES DISPLAYING, or DOES NOT  
 DISPLAY .....MWI-79

THE OIL PRESSURE WARNING CONTINUES  
 DISPLAYING, OR DOES NOT DISPLAY MWI-77

THE PARKING BRAKE RELEASE WARNING  
 CONTINUES DISPLAYING, OR DOES NOT  
 DISPLAY .....MWI-78

THE PARKING BRAKE RELEASE WARNING  
 CONTINUES SOUNDING, OR DOES NOT  
 SOUND .....WCS-36

THE SEAT BELT WARNING CONTINUES  
 SOUNDING, OR DOES NOT SOUND .WCS-35

THE STEERING SWITCHES ARE INOPERATIVE  
 MWI-82

THE TRIP RESET SWITCH IS INOPERATIVE .....  
 MWI-76

THERMOSTAT AND THERMOSTAT HOUSING ....  
 CO-24

THIRD ROW SEAT ..... SE-138

THIRD ROW SEAT BELT ..... SB-17

THIRD ROW SEATS ..... SE-112

THROTTLE VALVE CLOSED POSITION  
 LEARNING .....EC-157, EC-642

TIGHTENING TORQUE OF STANDARD BOLTS...  
 GI-19

TILT & TELESCOPIC SWITCH GROUND CIRCUIT  
 ADP-118, ST-29

TILT MOTOR .....ADP-150, ST-30

TILT SENSOR .....ADP-131

TILT SWITCH .....ADP-105, ST-25

TIMING CHAIN .....EM-66

TIRE PRESSURE MONITORING SYSTEM WT-14

TIRE PRESSURE RECEIVER ..... WT-66

TIRE PRESSURE SENSOR ..... WT-62

TIRE SIZE INCORRECT IS DISPLAYED ON  
 INFORMATION DISPLAY .....DLN-68

TOP TETHER STRAP CHILD RESTRAINT . SB-20

TORQUE CONVERTER AND CONVERTER  
 HOUSING OIL SEAL ..... TM-230, TM-447

TORSIONAL DAMPER .....DLN-116

TOUCH SENSOR .....DLK-213

TOW MODE SWITCH ..... TM-203, TM-421

TOW MODE SYSTEM ..... TM-183, TM-401

TOW TRUCK TOWING ..... GI-36

TPMS ..... WT-53

TRAILER TOW ..... EXL-94

TRANSFER ASSEMBLY .....DLN-75

TRANSFER CASE .....DLN-93

TRANSFER COVER ..... DLN-74, DLN-77

TRANSFER OIL .....DLN-70

TRANSMISSION ASSEMBLY ..... TM-226, TM-443

TRANSVERSE LINK ..... FSU-11

TRIP RESET AND ILLUMINATION CONTROL  
 SWITCH ..... MWI-86

TRIP RESET SWITCH SIGNAL CIRCUIT . MWI-65

TROUBLE DIAGNOSIS ..... LAN-14

TROUBLE DIAGNOSIS - SPECIFICATION VALUE  
 EC-180, EC-658

TURN SIGNAL AND HAZARD WARNING LAMP  
 SYSTEM ..... EXL-59

TURN SIGNAL LAMP CIRCUIT ..... EXL-125

## U

U0073 COMMUNICATION BUS A OFF .....TM-97,  
 TM-317

U0100 LOST COMMUNICATION (ECM A).. TM-98,  
 TM-318

U0101 CAN COMM CIRCUIT .....EC-192, EC-670

U0102 LOST COMMUNICATION (TRANSFER).....  
 TM-99, TM-319

U0104 ADAS CAN 1 .....DAS-67, DAS-152

U0121 VDC CAN 2.....DAS-68, DAS-153

U0140 LOST COMMUNICATION (BCM) ...TM-100,  
 TM-320

U0141 LOST COMMUNICATION (BCM A) TM-101,  
 TM-321

U0155 LOST COMMUNICATION (IPC) ..... TM-102,  
 TM-322

U0300 CAN COMMUNICATION DATA ..... TM-103,  
 TM-323

U0401 ECM CAN 1 .....DAS-69, DAS-154

U0402 TCM CAN 1 .....DAS-70, DAS-155

U0405 ADAS CAN 2 .....DAS-71, DAS-156

U0415 VDC CAN 1.....DAS-72, DAS-157

U0415 VEHICLE SPEED SIG ..... BCS-70

U1000 CAN COMM CIRCUIT ..... ADP-79, AV-118,  
 AV-316, BCS-68, BRC-135, BRC-294, DAS-63,  
 DAS-148, DLK-115, DLN-58, EC-193, HAC-81,  
 LAN-127, MWI-56, PCS-27, PCS-58, SN-23,  
 SRC-45, STC-29, TM-104, TM-324

U1001 CAN COMM CIRCUIT .....EC-671  
 U1010 CONTROL UNIT (CAN) ....ADP-80, AV-119,  
 AV-317, BCS-69, DAS-66, DAS-151, DLK-116,  
 DLN-59, HAC-82, LAN-128, MWI-57, PCS-28,  
 PCS-59, SN-24, SRC-46  
 U1117 LOST COMMUNICATION (ABS).... TM-105,  
 TM-325  
 U1200 AV CONTROL UNIT..... AV-120, AV-318  
 U1201 AV CONTROL UNIT..... AV-319  
 U1202 AV CONTROL UNIT..... AV-320  
 U1204 AV CONTROL UNIT..... AV-321  
 U1205 AV CONTROL UNIT..... AV-322  
 U1206 AV CONTROL UNIT..... AV-323  
 U1207 AV CONTROL UNIT..... AV-324  
 U1216 AV CONTROL UNIT..... AV-121, AV-325  
 U1217 AV CONTROL UNIT..... AV-326  
 U1218 AV CONTROL UNIT..... AV-122, AV-327  
 U1219 AV CONTROL UNIT..... AV-123, AV-328  
 U121A AV CONTROL UNIT ..... AV-124, AV-329  
 U121B AV CONTROL UNIT ..... AV-125, AV-330  
 U121C AV CONTROL UNIT ..... AV-126, AV-331  
 U121D AV CONTROL UNIT ..... AV-127, AV-332  
 U121E AV CONTROL UNIT ..... AV-128, AV-333  
 U1225 AV CONTROL UNIT..... AV-129, AV-334  
 U1227 AV CONTROL UNIT..... AV-130, AV-335  
 U1228 AV CONTROL UNIT..... AV-131, AV-336  
 U1229 AV CONTROL UNIT..... AV-132, AV-337  
 U122A AV CONTROL UNIT ..... AV-133, AV-338  
 U122E AV CONTROL UNIT ..... AV-134, AV-339  
 U1231 BOSE AMP..... AV-340  
 U1232 STEERING ANGLE SENSOR ..... AV-341  
 U1243 DISPLAY UNIT..... AV-135, AV-342  
 U1244 GPS ANTENNA ..... AV-344  
 U1255 SATELLITE RADIO TUNER..... AV-137  
 U1258 SATELLITE RADIO ANTENNA..... AV-345  
 U125A HEADREST DISPLAY UNIT ..... AV-346  
 U1263 USB..... AV-139, AV-347  
 U1264 ANTENNA AMP..... AV-140, AV-348  
 U1265 BOSE AMP..... AV-349  
 U1300 AV COMM CIRCUIT..... AV-141, AV-350  
 U1302 CAMERA POWER VOLT ..... AV-351  
 U1303 LED POWER SUPPLY VOLT ..... AV-355  
 U1304 CAMERA IMAGE CALIBRATION .... AV-357  
 U1305 CONFIG UNFINISH ..... AV-358  
 U1310 AV CONTROL UNIT..... AV-142, AV-359  
 U1503 SIDE RDR L CAN 2 .....DAS-73, DAS-158  
 U1504 SIDE RDR L CAN 1 .....DAS-74, DAS-159  
 U1505 SIDE RDR R CAN 2.....DAS-75, DAS-160  
 U1506 SIDE RDR R CAN 1.....DAS-76, DAS-161  
 U1507 LOST COMM(SIDE RDR R) ..... DAS-77,  
 DAS-162  
 U1508 LOST COMM(SIDE RDR L)..... DAS-78,  
 DAS-163  
 U1601, U1603, U1609, U160B FRONT DOOR  
 SPEAKER/TWEETER ..... AV-360  
 U1627, U162F TWEETER..... AV-361

U162A CENTER SPEAKER .....AV-362  
 U1684, U168C REAR DOOR SPEAKER/TWEETER  
 AV-363  
 U175D WOOFER ..... AV-364  
 U176A, U1772 ROOF SPEAKER..... AV-365  
 UNBALANCE STEERING WHEEL TURNING  
 FORCE (TORQUE VARIATION) ..... STC-36  
 UNBALANCE STEERING WHEEL TURNING  
 FORCE AND RETURN BETWEEN RIGHT AND  
 LEFT ..... STC-35  
 UNEXPECTED BRAKE PEDAL REACTION.....  
 BRC-149, BRC-311  
 UNIT CHARACTERISTICS WRITING ..... DLN-44  
 UNLOCK SENSOR..... DLK-187  
 USB CONNECTOR ..... AV-179, AV-405  
 USB INTERFACE ..... AV-196, AV-445

## V

VACUUM LINES ..... BR-33  
 VALVE TIMING CONTROL..... EM-54  
 VANITY LAMP ..... INL-61  
 VARIABLE INDUCTION AIR SYSTEM..... EC-494,  
 EC-871  
 VDC OFF INDICATOR LAMP .. BRC-144, BRC-306  
 VDC OFF SWITCH BRC-140, BRC-163, BRC-301,  
 BRC-326  
 VDC/TCS/ABS ..... BRC-147, BRC-309  
 VEHICLE DOES NOT ENTER 4WD MODEDLN-66  
 VEHICLE JERKS DURING VDC/TCS/ABS  
 CONTROL ..... BRC-153, BRC-315  
 VEHICLE SECURITY SYSTEM ..... SEC-56  
 VENTILATION SYSTEM..... VTL-7  
 VERTICAL SYNCHRONIZING (VP) SIGNAL  
 CIRCUIT ..... AV-166  
 VIDEO DISTRIBUTOR ..... AV-247, AV-452  
 VIN REGISTRATION ..... EC-161, EC-646

## W

WARNING CHIME SYSTEM ..... WCS-17  
 WARNING CHIME SYSTEM SYMPTOMS WCS-33  
 WARNING SYSTEM SWITCH CIRCUIT ... DAS-82,  
 DAS-167  
 WARNING SYSTEMS SWITCH DAS-91, DAS-177  
 WASHER FLUID LEVEL SWITCH CIRCUITMWI-69  
 WASHER LEVEL SWITCH..... WW-57  
 WASHER MOTOR CIRCUIT ..... WW-42  
 WASHER PUMP..... WW-56  
 WASHER SWITCH ..... WW-43  
 WASHER TANK..... WW-54  
 WATER HOSE ..... TM-220, TM-437  
 WATER OUTLET AND WATER PIPING..... CO-26  
 WATER PUMP ..... CO-19  
 WHEEL ..... WT-58  
 WHEEL AND TIRE ASSEMBLY ..... WT-59  
 WHEEL HUB ..... RAX-5



---

WHEEL SENSOR .....BRC-155, BRC-317  
WIND DEFLECTOR..... RF-60  
WINDSHIELD GLASS..... GW-11  
WIPER AND WASHER FUSE..... WW-37  
WIPER AND WASHER SWITCH..... WW-66  
WIPER AND WASHER SYSTEM SYMPTOMS .....  
    WW-48

---

Y

---

YAW RATE/SIDE/DECEL G SENSOR.... BRC-162,  
    BRC-324

A  
B  
C  
D  
E  
F  
G  
H  
  
J  
K  
L  
M  
N  
O  
P