

ENGINE LUBRICATION & COOLING SYSTEMS

SECTION **LC**

GI

MA

EM

LC

EC

FE

AT

PD

FA

RA

BR

ST

RS

BT

HA


EL

IDX

CONTENTS

PRECAUTIONS AND PREPARATION	2	Water Pump.....	8
Liquid Gasket Application Procedure.....	2	Thermostat.....	10
Special Service Tools.....	2	Radiator.....	12
ENGINE LUBRICATION SYSTEM	3	Cooling Fan (Crankshaft driven).....	16
Lubrication Circuit.....	3	Cooling Fan (Motor driven).....	16
Oil Pressure Check.....	4	Overheating Cause Analysis.....	17
Oil Pump.....	5	SERVICE DATA AND SPECIFICATIONS (SDS)	18
ENGINE COOLING SYSTEM	7	Engine Lubrication System.....	18
Cooling Circuit.....	7	Engine Cooling System.....	18
System Check.....	7		

PRECAUTIONS AND PREPARATION

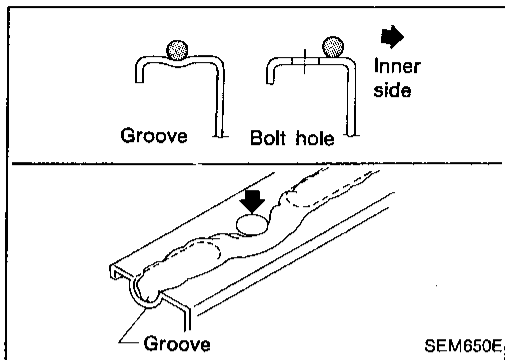

Liquid Gasket Application Procedure

- a. Use a scraper to remove all traces of old liquid gasket from mating surfaces and grooves. Also, completely clean any oil from these areas.
- b. Apply a continuous bead of liquid gasket to mating surfaces. (Use Genuine Liquid Gasket or equivalent.)
 - Be sure liquid gasket is 3.5 to 4.5 mm (0.138 to 0.177 in) wide (for oil pan).
 - Be sure liquid gasket is 2.0 to 3.0 mm (0.079 to 0.118 in) wide (in areas except oil pan).
- c. Apply liquid gasket to inner side as shown at the left.
- d. Assembly should be done within 5 minutes after coating.
- e. Wait 30 minutes before refilling engine oil and coolant.



Special Service Tools

The actual shapes of Kent-Moore tools may differ from those of special service tools illustrated here.

Tool number (Kent-Moore No.) Tool name	Description
ST25051001 (J25695-1) Oil pressure gauge	<p style="text-align: right;">Measuring oil pressure</p> <p style="text-align: right;">Maximum measuring range: 2,452 kPa (25 kg/cm², 356 psi)</p>
ST25052000 (J25695-2) Hose	<p style="text-align: right;">Adapting oil pressure gauge to cylinder block</p>
WS39930000 (—) Tube presser	<p style="text-align: right;">Pressing the tube of liquid gasket</p>
EG17650301 (J33984-A) Radiator cap tester adapter	<p style="text-align: right;">Adapting radiator cap tester to radiator filler neck</p> <p style="text-align: right;">Unit: mm (in) a: 28 (1.10) dia. b: 31.4 (1.236) dia. c: 41.3 (1.626) dia</p>
KV99103510 (—) Radiator plate pliers A	<p style="text-align: right;">Installing radiator upper and lower tanks</p>
KV99103520 (—) Radiator plate pliers B	<p style="text-align: right;">Removing radiator upper and lower tanks</p>

ENGINE LUBRICATION SYSTEM

Lubrication Circuit

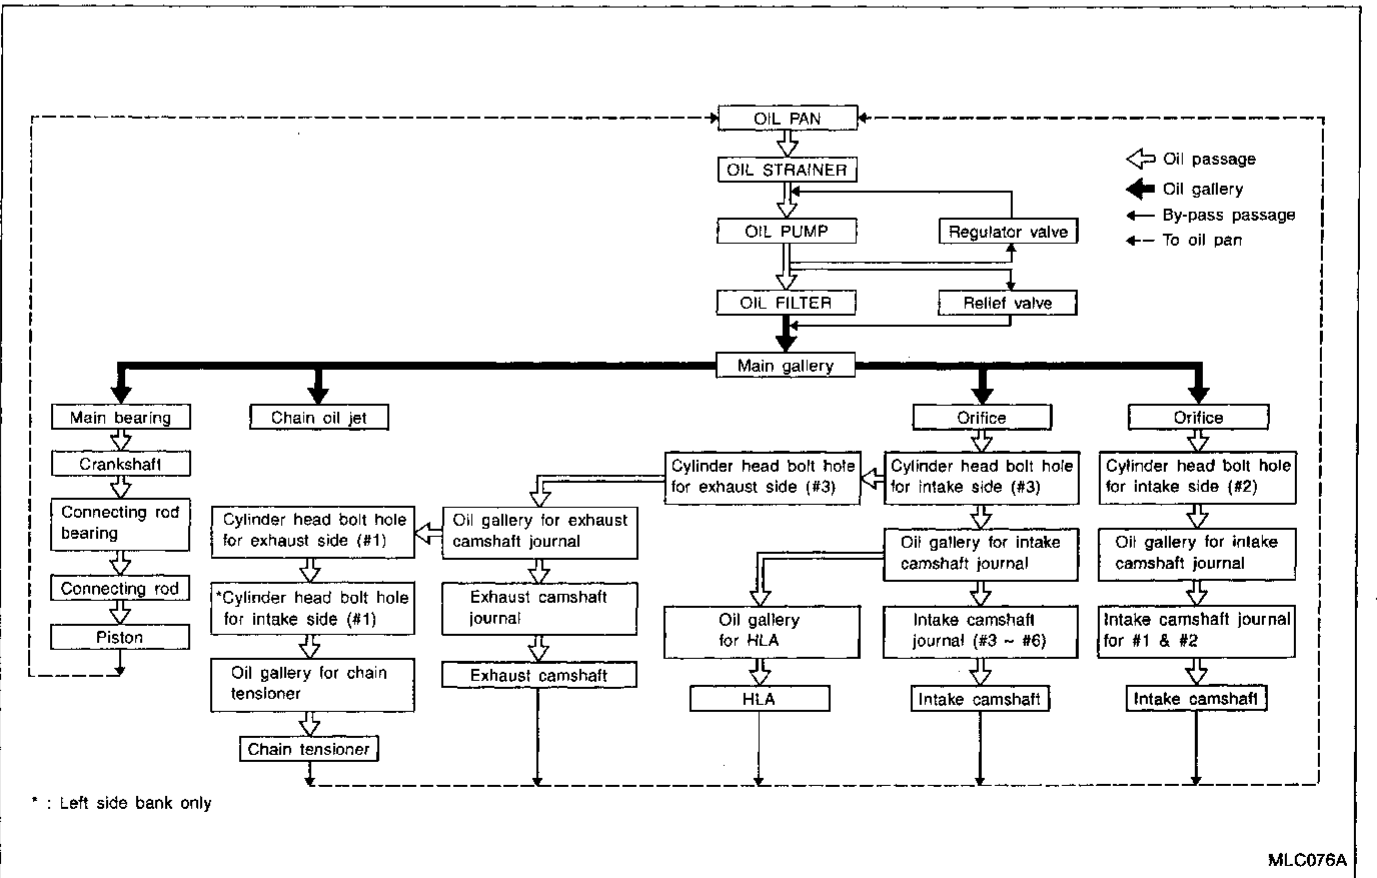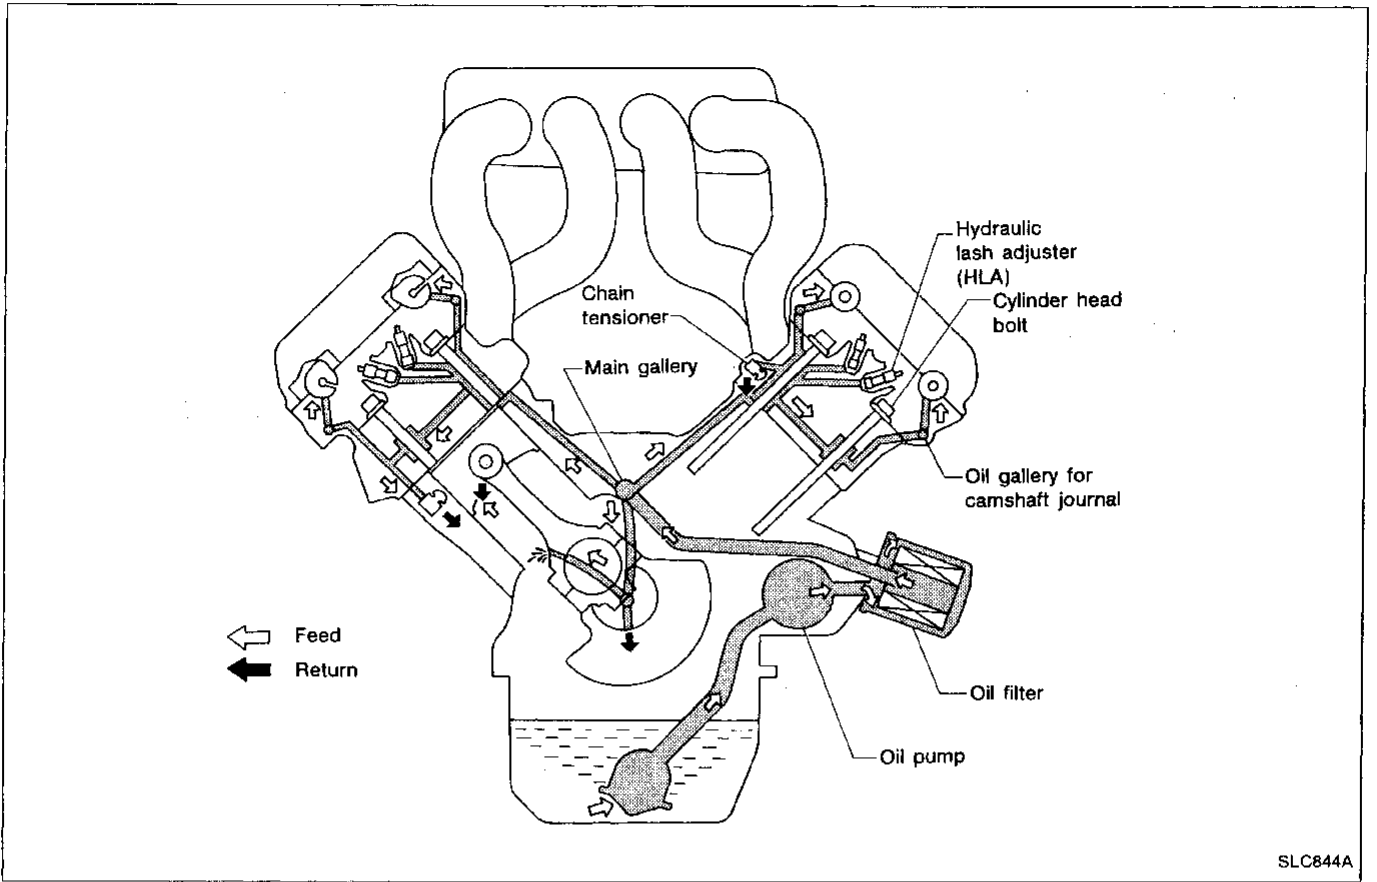


GI
 MA
 EM
LC
 EC
 FE
 AT
 PD
 FA
 RA
 BR
 ST
 RS
 BT
 HA
 EL
 IDX

ENGINE LUBRICATION SYSTEM


Oil Pressure Check

WARNING:

- Be careful not to burn yourself, as the engine and oil may hot.
- Oil pressure check should be done in "Neutral position".

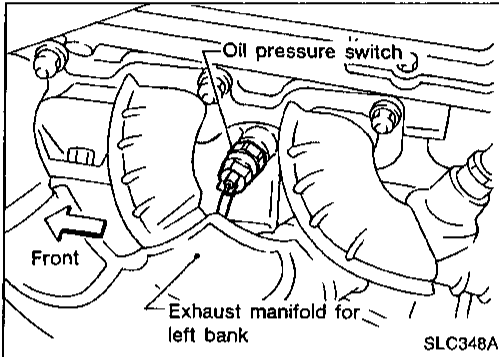

1. Check oil level.
2. Remove oil pressure switch.

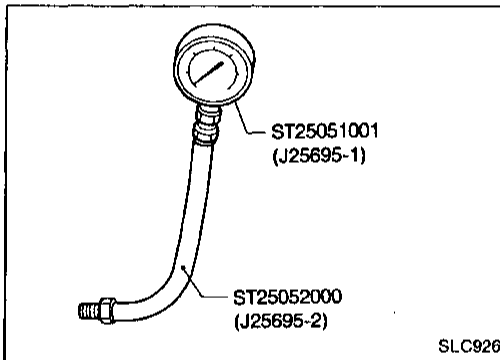

3. Install pressure gauge.
4. Start engine and warm it up to normal operating temperature.
5. Check oil pressure with engine running under no-load.


Engine speed rpm	Approximate discharge pressure kPa (kg/cm ² , psi)
Idle speed	More than 98 (1.0, 14)
3,000	461 - 559 (4.7 - 5.7, 67 - 81)

If difference is extreme, check oil passage and oil pump for oil leaks.

6. Install oil pressure switch with sealant.

ENGINE LUBRICATION SYSTEM

Oil Pump

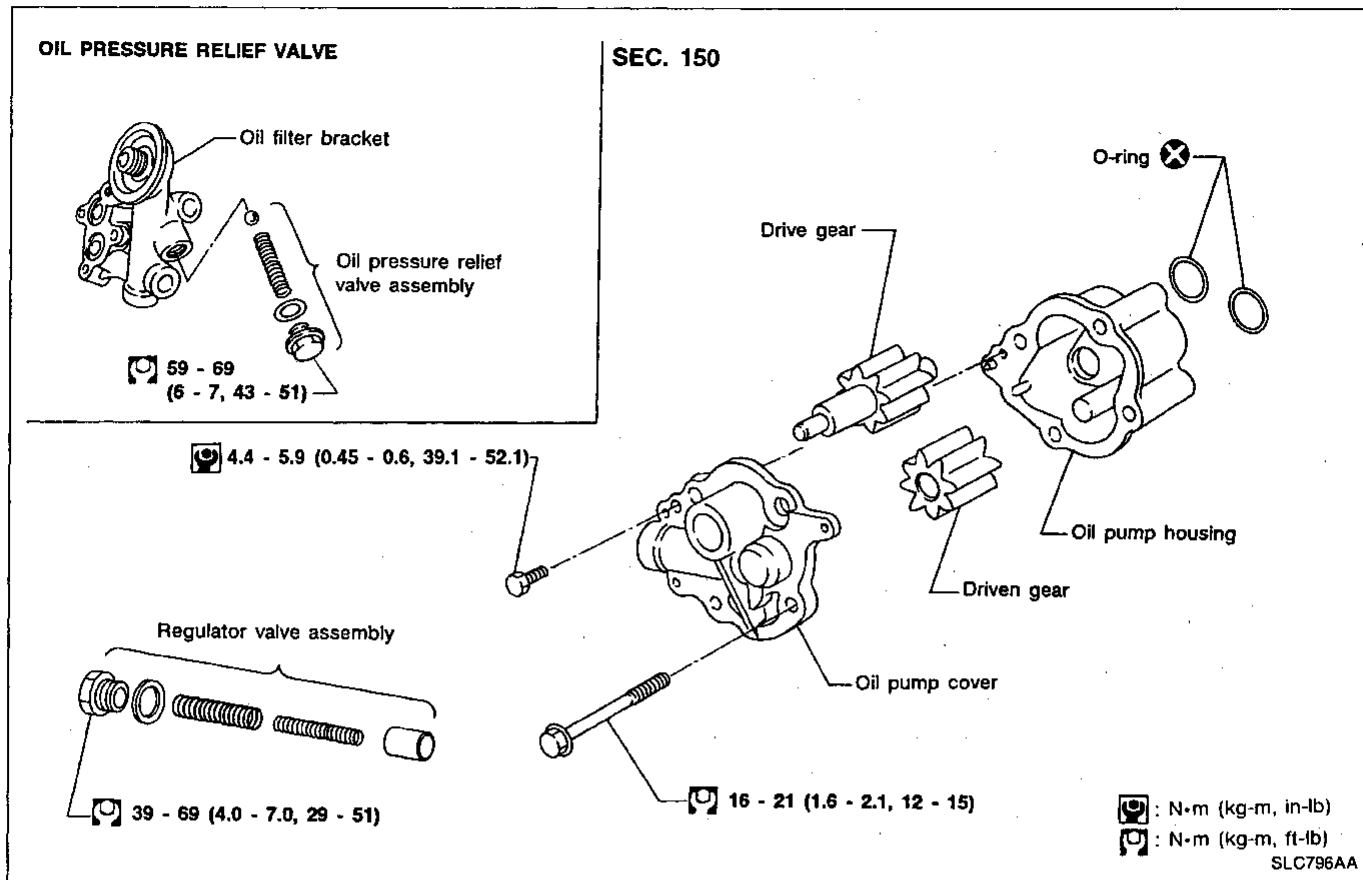


INSPECTION

If it exceeds the limit, replace gear set or entire oil pump assembly.

Standard clearance:





Unit: mm (in)

Drive shaft to cover and housing: (C)	0.024 - 0.069 (0.0009 - 0.0027)
Driven gear to driven shaft : (F)	0.025 - 0.064 (0.0010 - 0.0025)
Drive and driven gear to housing: (G)	0.08 - 0.130 (0.0031 - 0.0051)
Drive and driven gear to housing: (H)	0.125 - 0.245 (0.0049 - 0.0096)

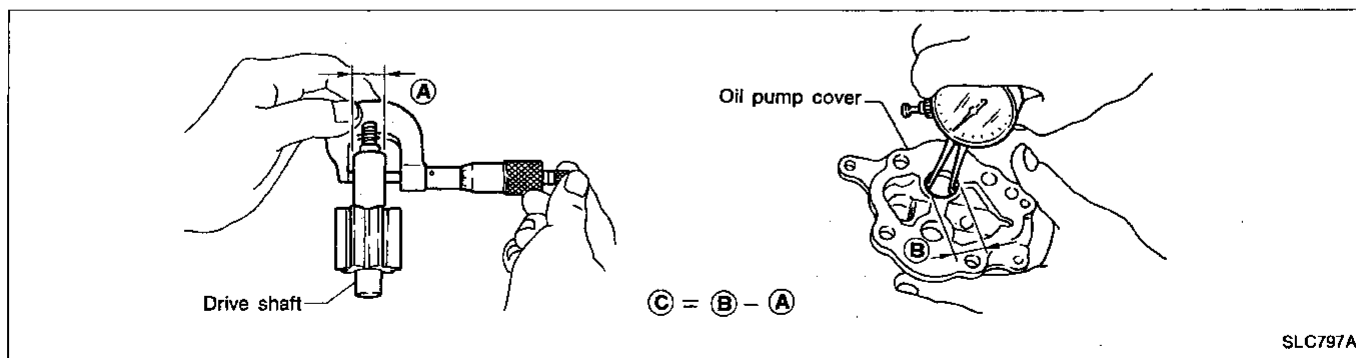

ENGINE LUBRICATION SYSTEM

Oil Pump (Cont'd)

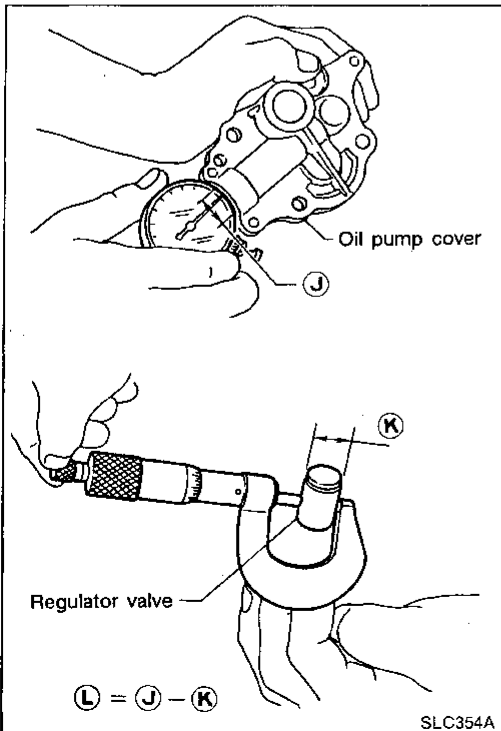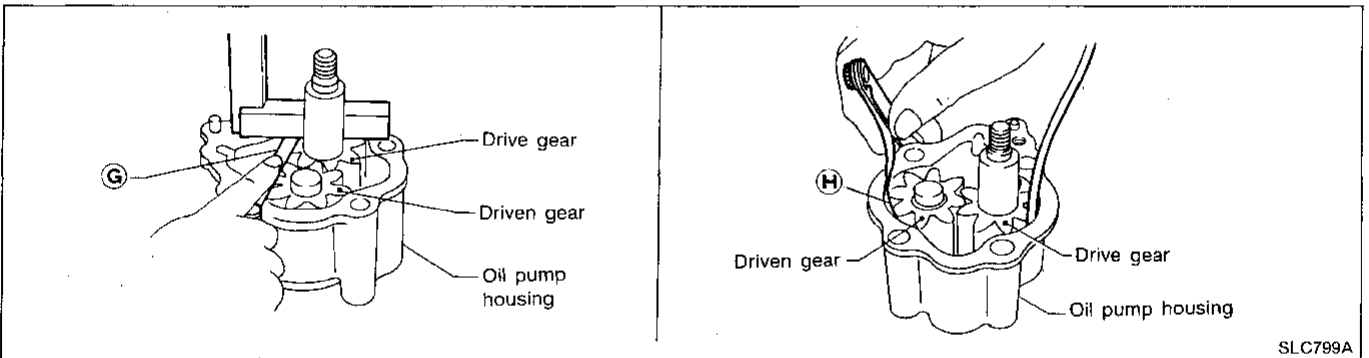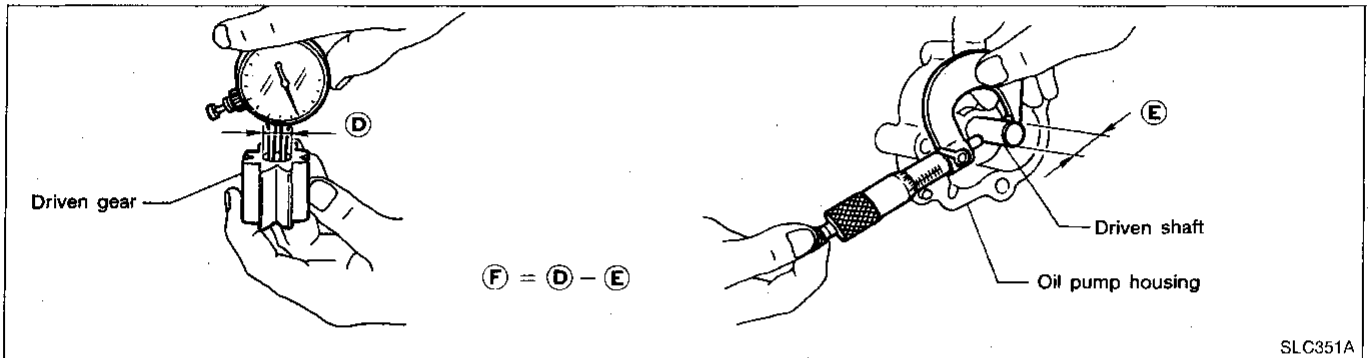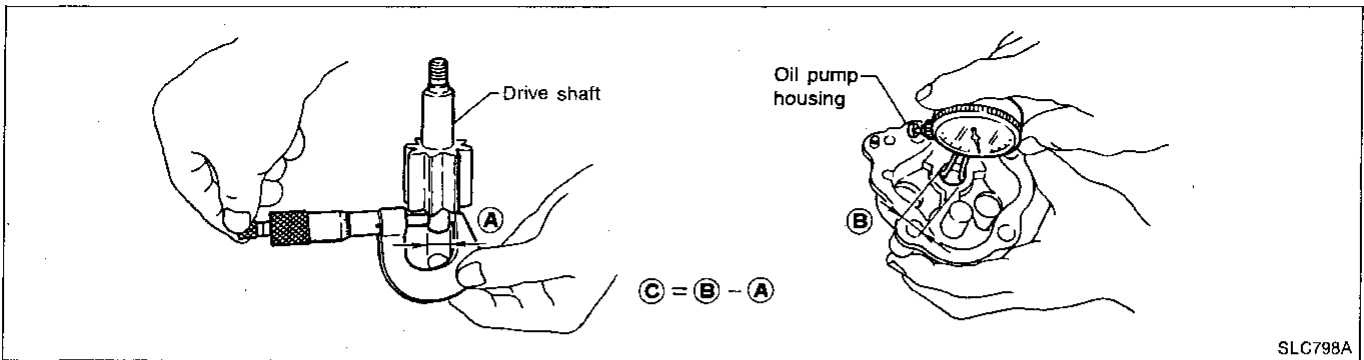

REGULATOR VALVE INSPECTION

1. Visually inspect components for wear and damage.
2. Check oil pressure regulator valve sliding surface and valve spring.
3. Coat regulator valve with engine oil. Check that it falls freely into the valve hole by its own weight.
4. Check regulator valve to oil pump cover clearance.



Standard clearance:

L : 0.040 - 0.097 mm (0.0016 - 0.0038 in)

If damaged, replace regulator valve set or oil pump assembly.

ENGINE COOLING SYSTEM

Cooling Circuit

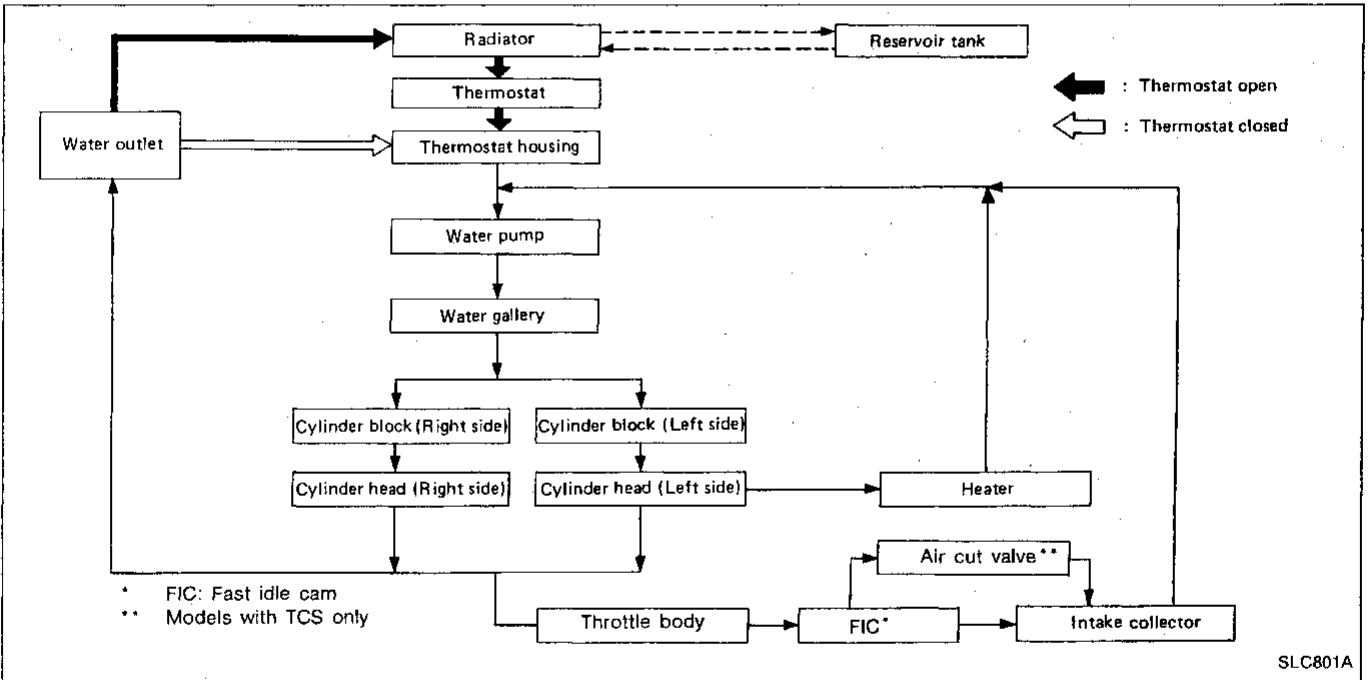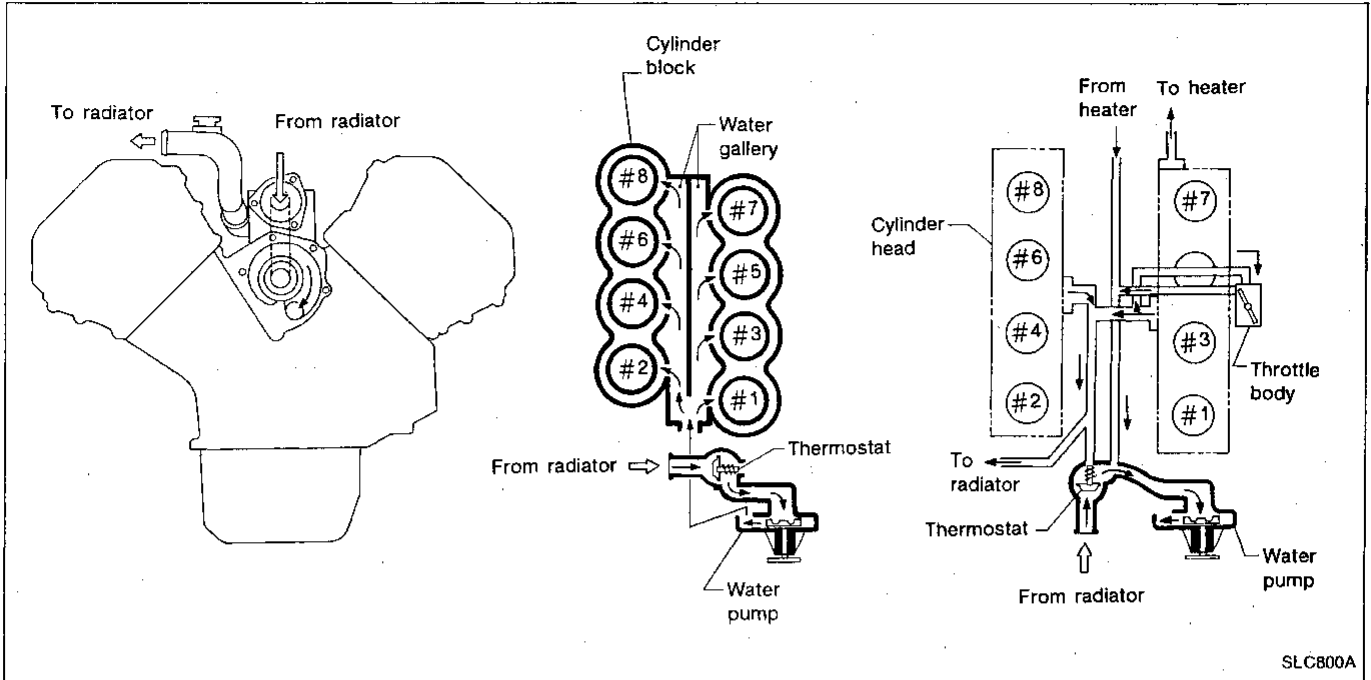

System Check

WARNING:

Never remove the filler cap nor radiator cap when the engine is hot. Serious burns could be caused by hot high pressure fluid escaping from the radiator.

Wrap a thick cloth around cap. Carefully remove the cap by first turning it a quarter turn to allow built-up pressure to escape. Then turn the cap all the way off.

ENGINE COOLING SYSTEM

System Check (Cont'd)

CHECKING COOLING SYSTEM HOSES

Check hoses for improper attachment, leaks, cracks, damage, loose connections, chafing and deterioration.

CHECKING COOLING SYSTEM FOR LEAKS

To check for leakage, apply pressure to the cooling system with a tester.

Testing pressure:

157 kPa (1.6 kg/cm², 23 psi)

CAUTION:

Higher than the specified pressure may damage radiator.

CHECKING RADIATOR CAP

To check radiator cap, apply pressure to cap with a tester.






Radiator cap relief pressure:

Standard

78 - 98 kPa (0.8 - 1.0 kg/cm², 11 - 14 psi)

Limit

59 - 98 kPa (0.6 - 1.0 kg/cm², 9 - 14 psi)

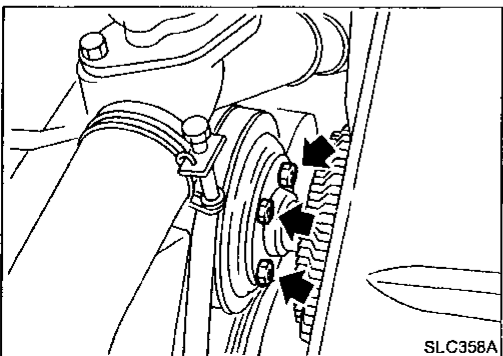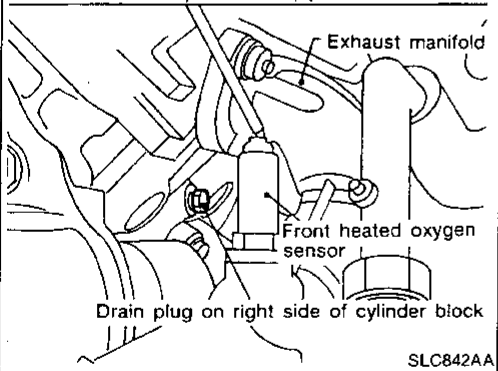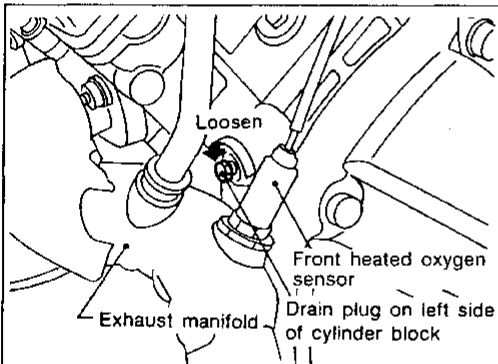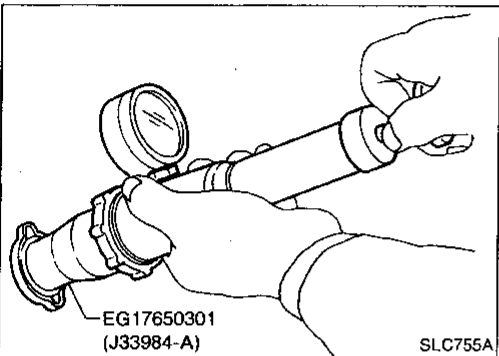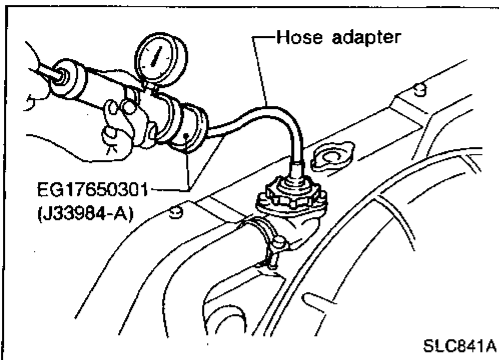

Water Pump

REMOVAL


1. Drain coolant from drain cocks on both sides of cylinder block and radiator.

2. Remove fan coupling with fan.
3. Loosen power steering pump drive belt.
4. Remove water pump.

ENGINE COOLING SYSTEM

Water Pump (Cont'd)

SEC. 210

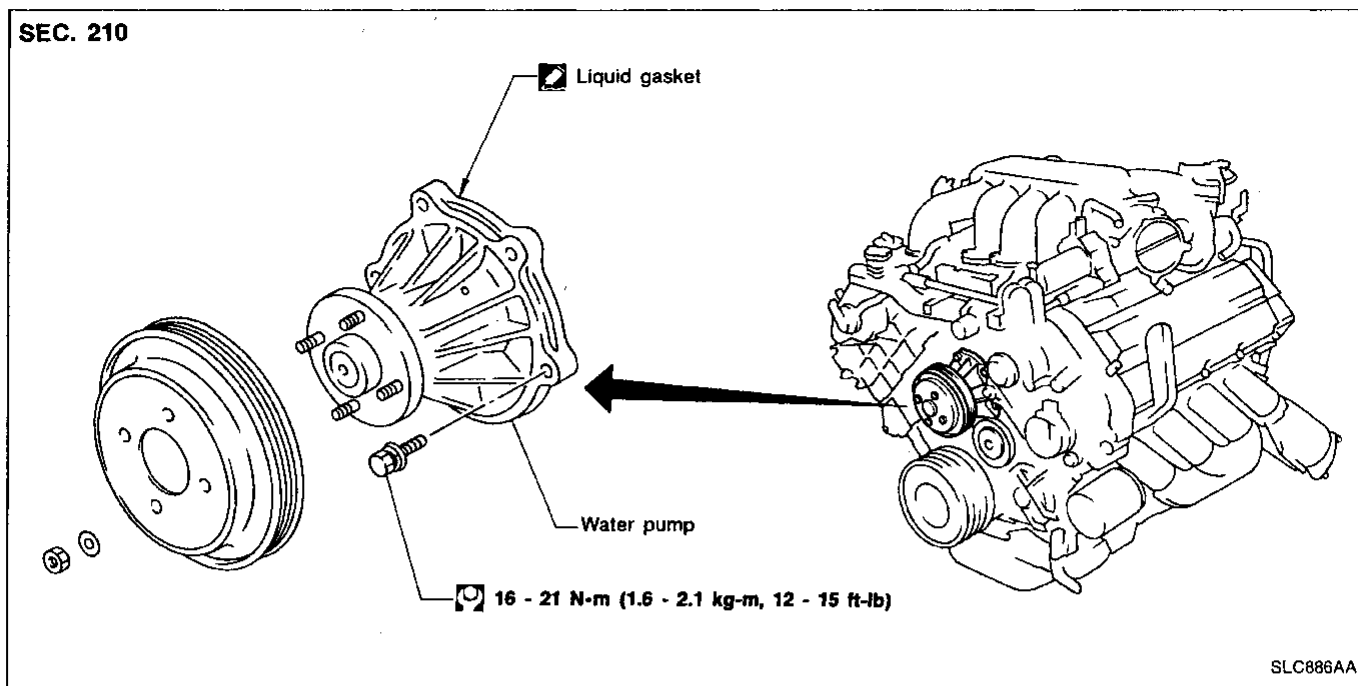

GI

MA

EM

LC

EC

FE

AT

PD

FA

RA

BR

ST

RS

BT


HA

EL

IDX


CAUTION:

- When removing water pump assembly, be careful not to get coolant on drive belt.
- Water pump cannot be disassembled and should be replaced as a unit.
- After installing water pump, connect hose and clamp securely, then check for leaks using radiator cap tester.

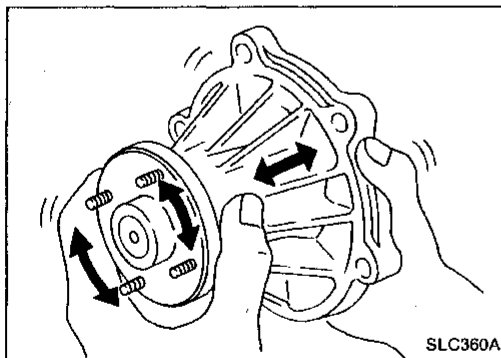

INSPECTION

1. Check for badly rusted or corroded vanes and body assembly.
2. Check for rough operation due to excessive end play.

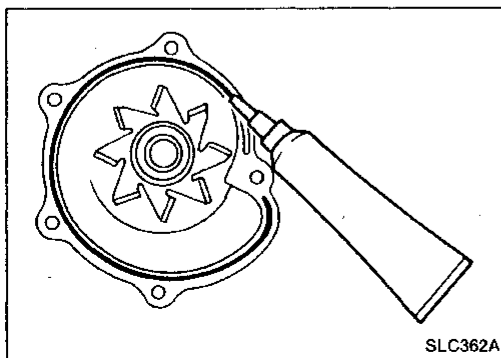






INSTALLATION

1. Use a scraper to remove old liquid gasket from water pump.
 - Also remove traces of liquid gasket from mating surface of cylinder block.
2. Apply a continuous bead of liquid gasket to mating surface of water pump.
 - Use Genuine Liquid Gasket or equivalent.

ENGINE COOLING SYSTEM

Thermostat

SEC. 210-211

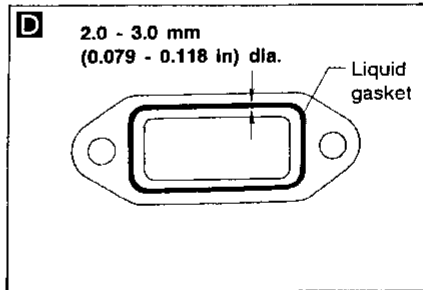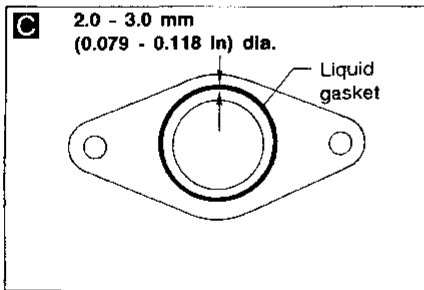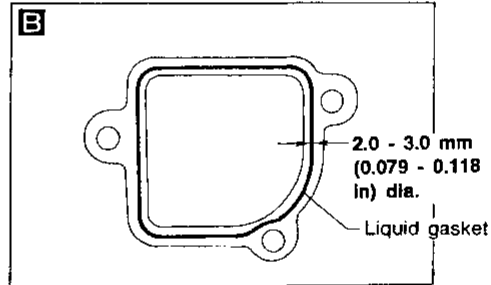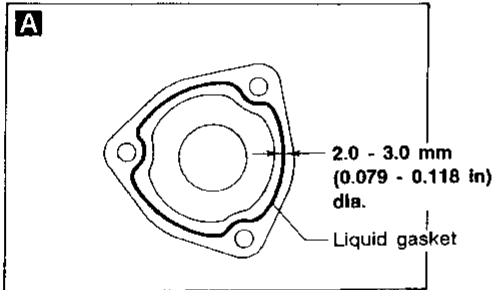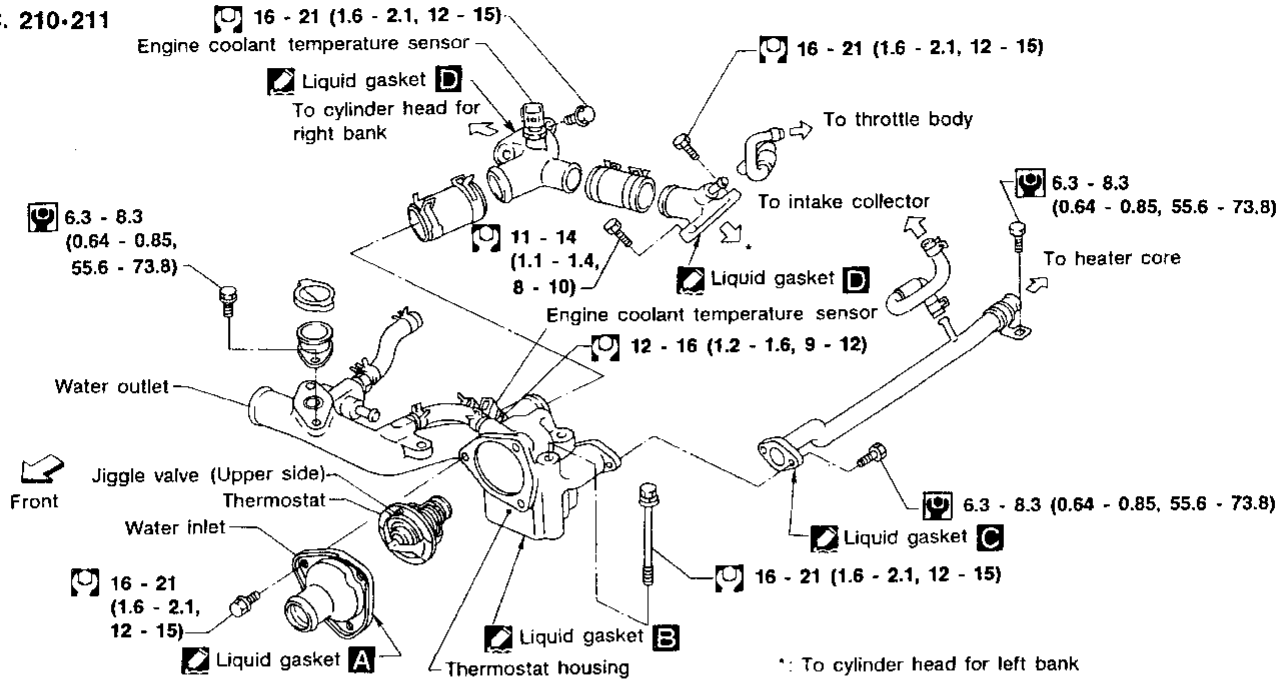

: N·m (kg-m, in-lb)
 : N·m (kg-m, ft-lb)

SLC687AA

REMOVAL AND INSTALLATION


Removal

1. Drain coolant from drain cocks on both sides of cylinder block and radiator.
2. Remove front ornament cover.
3. Remove water inlet and thermostat.

ENGINE COOLING SYSTEM

Thermostat (Cont'd)

Installation

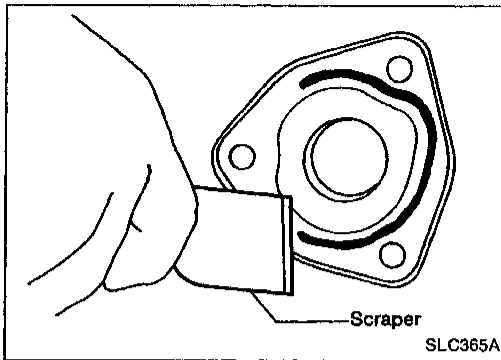

- Use a scraper to remove old liquid gasket from water inlet.
- Similarly, remove liquid gasket from mating surface.
- Clean all traces of liquid gasket using white gasoline.

GI

MA

EM

LC

EC

FE

AT

PD

FA

RA

BR

ST


RS

BT


HA

EL


DX

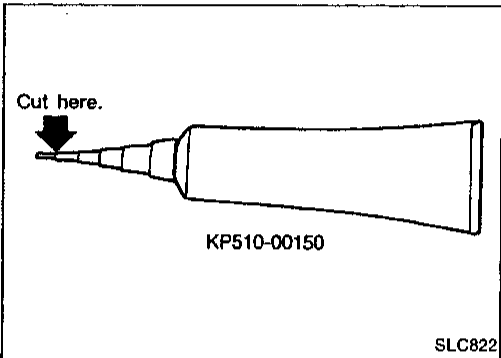

- Cut off tip of nozzle of liquid gasket tube at point shown in figure.
- Use Genuine Liquid Gasket or equivalent.

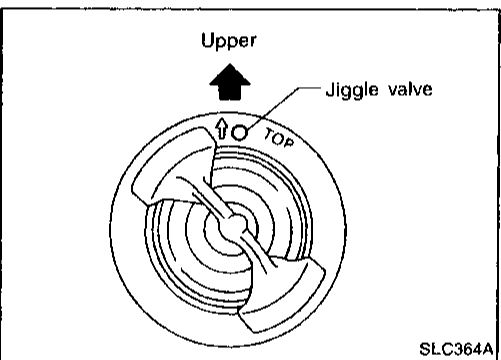

- Install thermostat with jiggle valve facing upward.
- **After installation, run engine for a few minutes, and check for leaks.**
- **Be careful not to spill coolant over engine compartment. Use a rag to absorb coolant.**

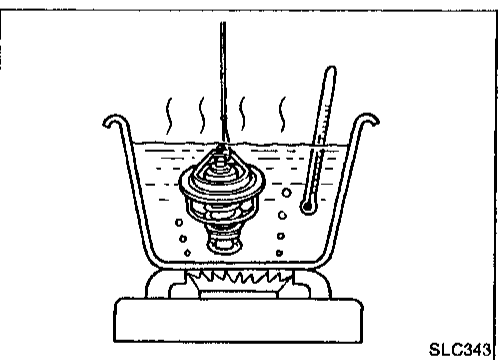

INSPECTION



1. Check for valve seating condition at ordinary temperatures. It should seat tightly.
2. Check valve opening temperature and maximum valve lift.

Valve opening temperature	°C (°F)	76.5 (170)
Valve lift	mm/°C (in/°F)	More than 10/90 (0.39/194)

3. Then check if valve closes at 5°C (9°F) below valve opening temperature.


ENGINE COOLING SYSTEM

Radiator

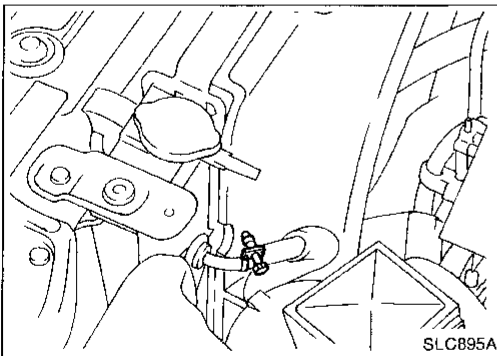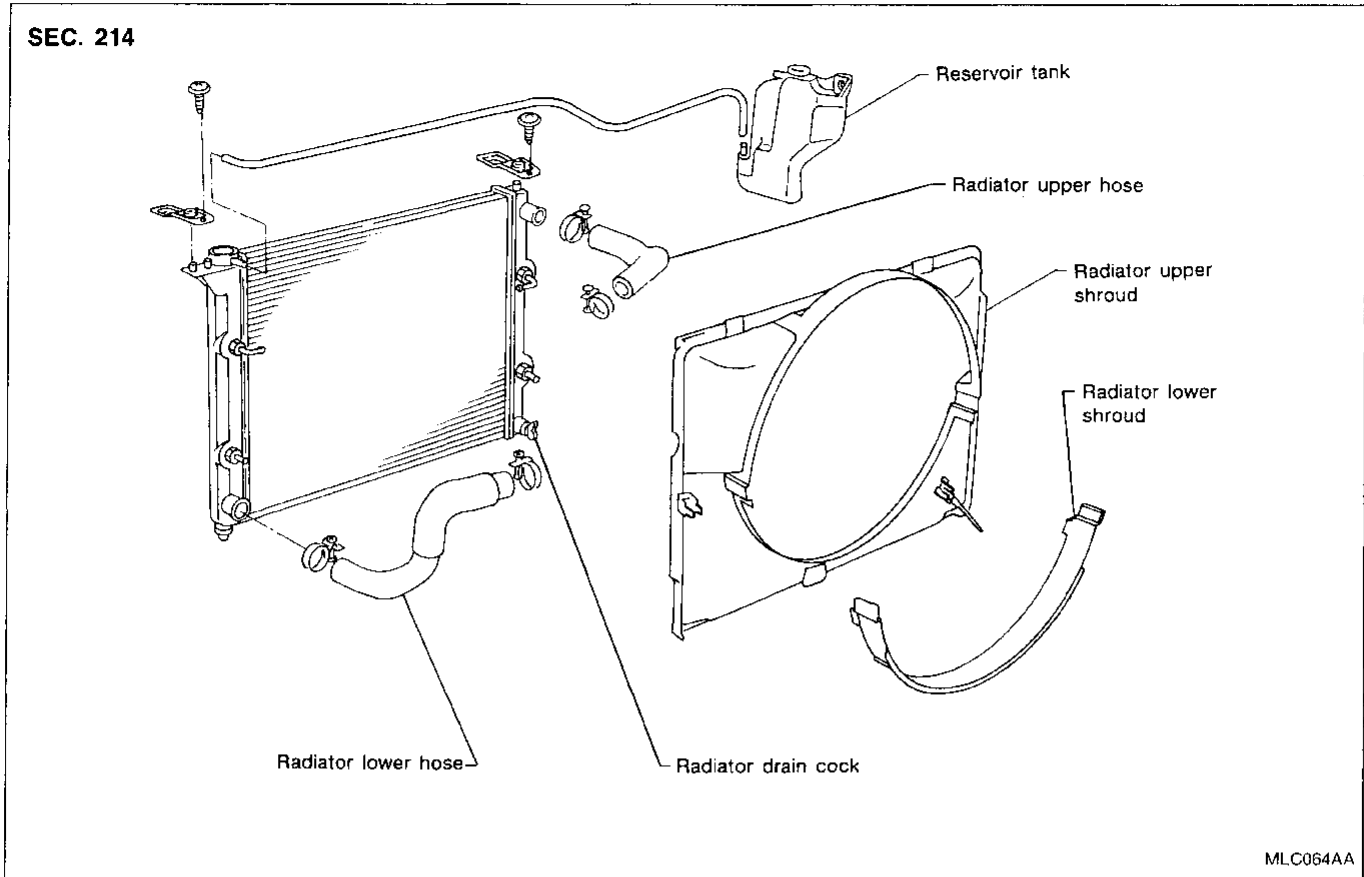

REMOVAL AND INSTALLATION


1. Remove air guide.
2. Remove radiator lower shroud.
3. Loosen both A/T upper oil cooler hose clamps and turn the clamps to make room.
4. Remove filler cap above radiator upper hose.
5. Remove undercover.
6. Drain coolant from radiator drain cock.
7. Detach A/T oil cooler hoses from clip of shroud.

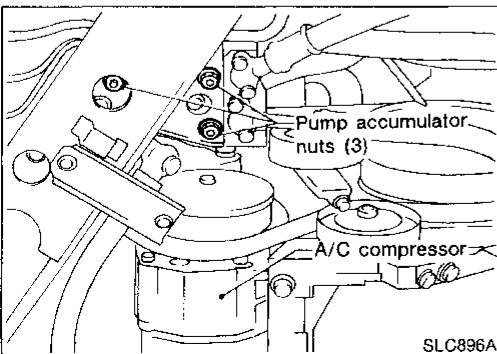

8. Remove pump accumulator nuts (3) and move the pump accumulator as shown on the left.
9. Loosen bolts of A/T oil cooler hose bracket and remove bracket from radiator shroud.
10. Remove upper shroud screws (4).
11. Remove upper shroud.
12. Disconnect A/T oil cooler hoses and radiator hoses.
13. Remove radiator mounting bracket.
14. Remove radiator.

ENGINE COOLING SYSTEM

Radiator (Cont'd)

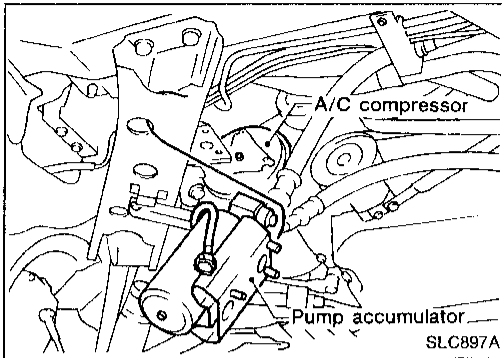


15. After repairing or replacing radiator, reinstall any part in reverse order of removal.

CAUTION:


- When disconnecting A/T oil cooler hoses and radiator hoses, check A/T fluid and engine coolant levels. Refill if necessary.
- Check level of A/T fluid. (Refer to "Checking A/T fluid" in MA section.)
- Check level of coolant. (Refer to "Checking Engine Coolant" in MA section.)

GI
MA
EM

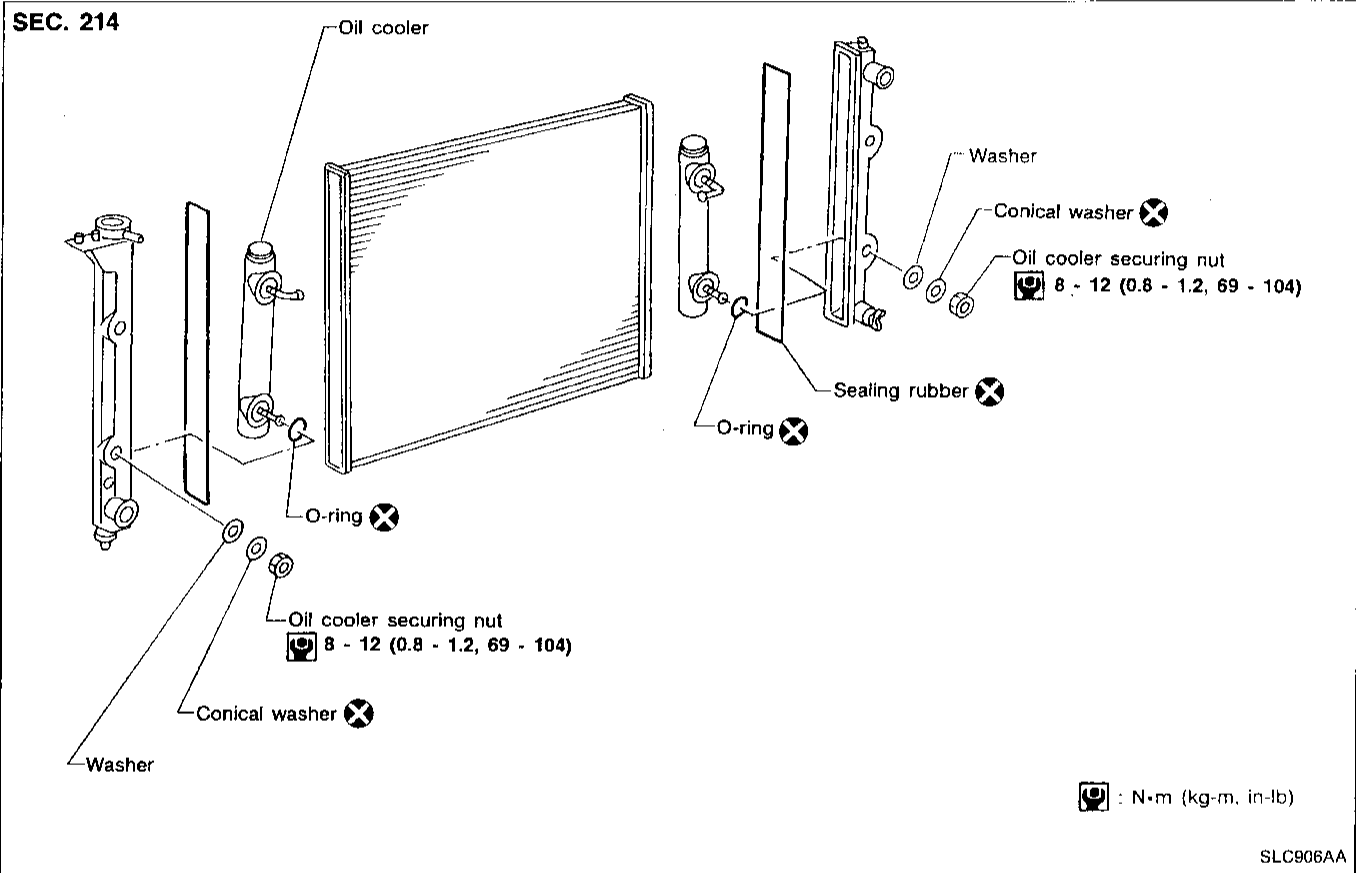

LC
EC
FE
AT
PD
FA
RA
BR
ST
RS

Aluminum radiator can be disassembled by using special procedures and special service tools.

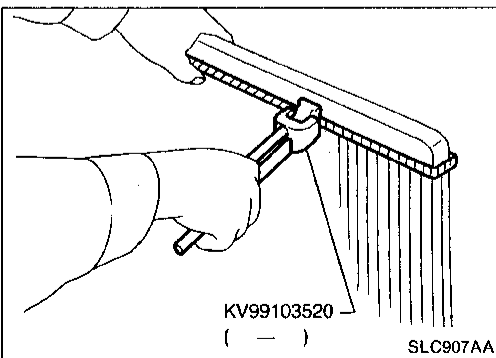


DISASSEMBLY

1. Remove tank with Tool.

BT
HA
EL
IDX


ENGINE COOLING SYSTEM

Radiator (Cont'd)

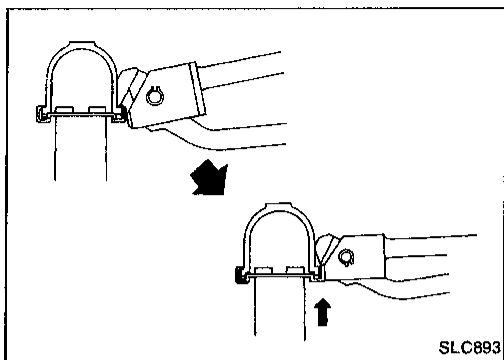


- Grip the crimped edge and bend it upwards so that Tool slips off.

Do not bend excessively.

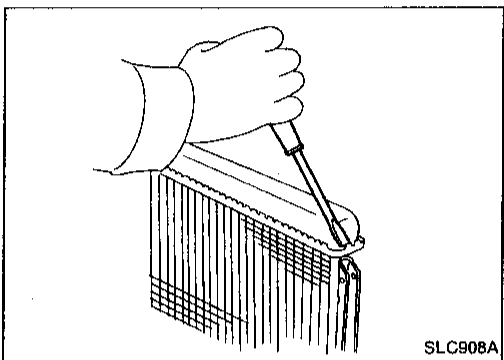


- In areas where Tool cannot be used, use a screwdriver to bend the edge up.

Be careful not to damage tank.

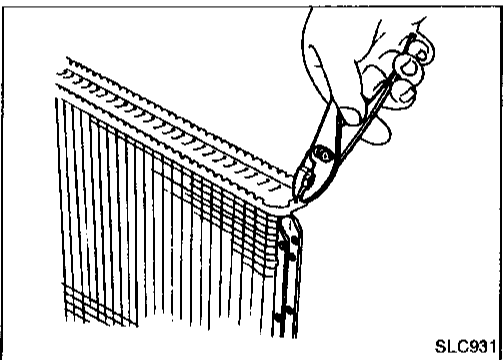


2. Make sure the edge stands straight up.
3. Remove oil cooler from tank.

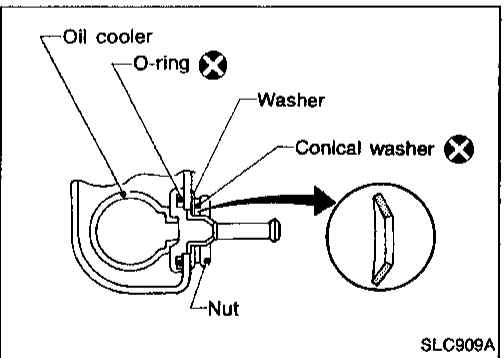

ASSEMBLY

1. Install oil cooler.


Pay attention to direction of conical washer.

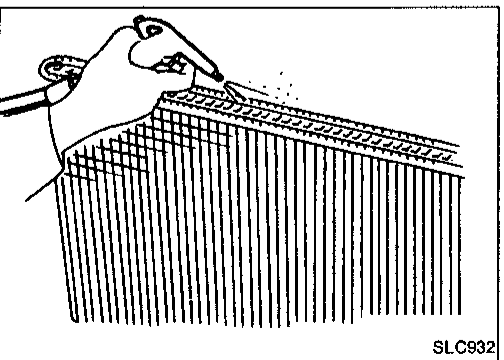

2. Clean contact portion of tank.

ENGINE COOLING SYSTEM


Radiator (Cont'd)

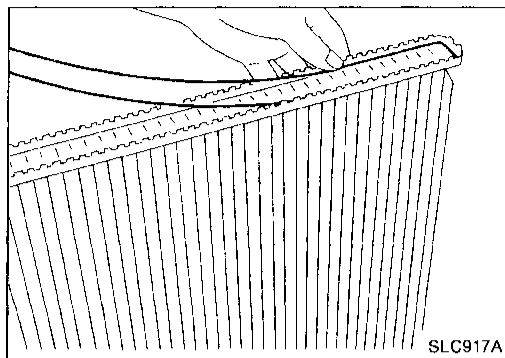



3. Install sealing rubber.

Push it in with fingers.


Be careful not to twist sealing rubber.

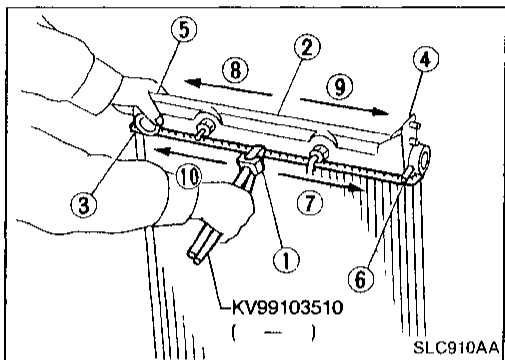

4. Caulk tank in specified sequence with Tool.

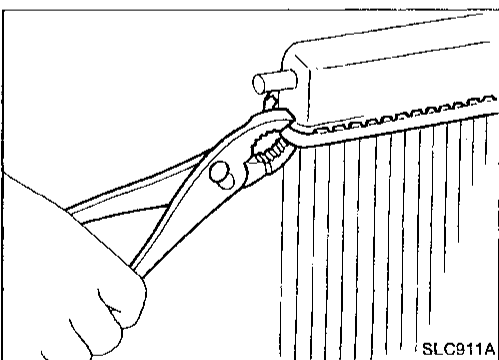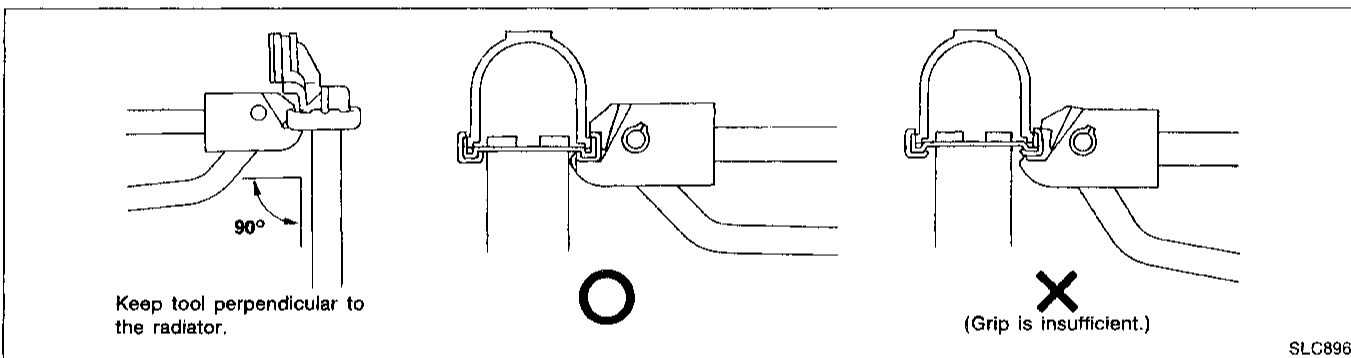

• Use pliers in the locations where Tool cannot be used.

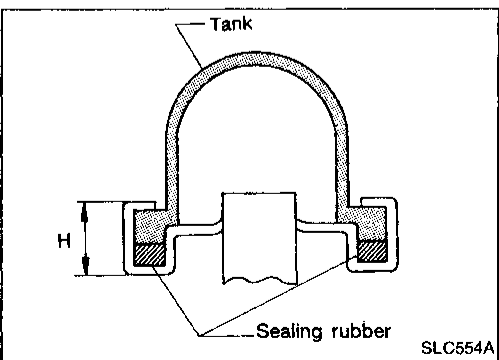

5. Make sure that the rim is completely crimped down.

Standard height "H":


9.5 - 9.9 mm (0.374 - 0.390 in)

6. Confirm that there is no leakage.

Refer to Inspection.

ENGINE COOLING SYSTEM

Radiator (Cont'd)

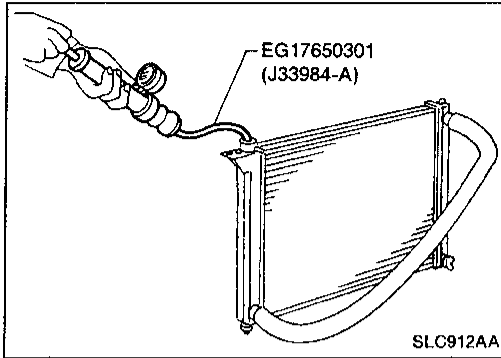

INSPECTION


Apply pressure with Tool.

Specified pressure value:

157 kPa (1.6 kg/cm², 23 psi)


WARNING:

To prevent the risk of the hose coming undone while under pressure, securely fasten it down with a hose clamp. Attach a hose to the oil cooler as well.

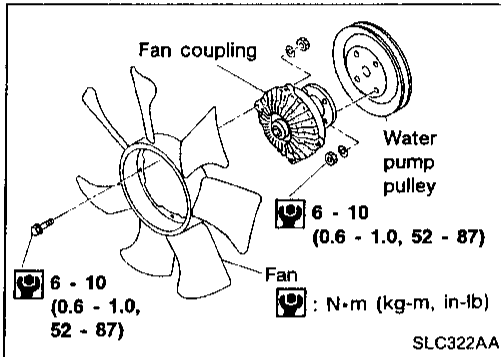

Cooling Fan (Crankshaft driven)

DISASSEMBLY AND ASSEMBLY

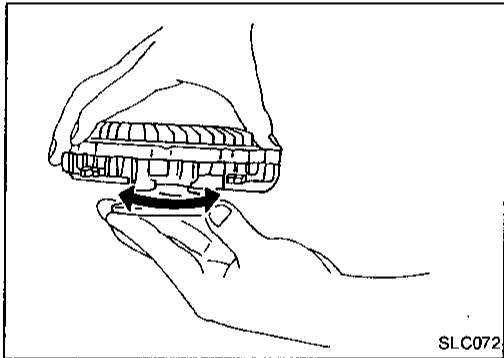

INSPECTION

Check fan coupling for rough operation, oil leakage or bent bimetal.

Cooling Fan (Motor driven)

Cooling fan is controlled by ECM. For details, refer to "Cooling Fan", "TROUBLE DIAGNOSIS FOR DTC P1900" in EC section.

ENGINE COOLING SYSTEM

Overheating Cause Analysis

		Symptom	Check items		
Cooling system parts malfunction	Poor heat transfer	Water pump malfunction	Worn or loose drive belt		—
		Thermostat stuck closed	—		
		Damaged fins	Dust contamination or paper clogging		
			Mechanical damage		
		Clogged radiator cooling tube	Excess foreign material (rust, dirt, sand, etc.)		
	Reduced air flow	Fan coupling does not operate.	—	—	—
		Cooling fan does not operate.			
		High resistance to fan rotation			
		Damaged fan blades			
		Damaged radiator shroud	—	—	—
		Improper coolant mixture ratio	—	—	—
		Poor coolant quality	—	—	—
	Insufficient coolant	Coolant leaks	Cooling hose	Loose clamp	—
				Cracked hose	
Water pump			Poor sealing		
Radiator cap			Loose		
			Poor sealing		
Radiator			O-ring for damage, deterioration or improper fitting		
		Cracked radiator tank			
		Cracked radiator core			
	Reservoir tank	Cracked reservoir tank			
	Overflowing reservoir tank	Exhaust gas leaks into cooling system	Cylinder head deterioration Cylinder head gasket deterioration		
Except cooling system parts malfunction	—	Overload on engine	Abusive driving	High engine rpm under no load	
				Driving in low gear for extended time	
				Driving at extremely high speed	
			Powertrain system malfunction	—	
			Installed improper size wheels and tires		
	Dragging brakes				
	Improper ignition timing.				
	Blocked or restricted air flow	Blocked bumper	—	—	
		Blocked radiator grille	Installed car brassiere		
			Mud contamination or paper clogging		
Blocked radiator		—			
Blocked condenser		—			
	Installed large fog lamp	—			

GI
 MA
 EM
LC
 EC
 FE
 AT
 PD
 FA
 RA
 BR
 ST
 RS
 BT
 HA
 EL
 IDX

SERVICE DATA AND SPECIFICATIONS (SDS)

Engine Lubrication System

Oil pressure check

Engine speed rpm	Approximate discharge pressure kPa (kg/cm ² , psi)
Idle speed	More than 98 (1.0, 14)
3,000	461 - 559 (4.7 - 5.7, 67 - 81)

Regulator valve inspection

Unit: mm (in)

Regulator valve to oil pump clearance (L)	0.040 - 0.097 (0.0016 - 0.0038)
--	---------------------------------

Oil pump

Unit: mm (in)

Drive shaft to oil pump cover and housing: (C)	0.024 - 0.069 (0.0009 - 0.0027)
Driven gear to driven shaft: (E)	0.025 - 0.064 (0.0010 - 0.0025)
Drive and driven gear to oil pump housing: (G)	0.08 - 0.130 (0.0031 - 0.0051)
Drive and driven gear to oil pump housing: (H)	0.125 - 0.245 (0.0049 - 0.0096)

Engine Cooling System

Thermostat

	Standard
Valve opening temperature °C (°F)	76.5 (170)
Valve lift mm/°C (in/°F)	More than 10/90 (0.39/194)

Radiator

Unit: kPa (kg/cm², psi)

Cap relief pressure	
Standard	78 - 98 (0.8 - 1.0, 11 - 14)
Limit	59 - 98 (0.6 - 1.0, 9 - 14)
Leakage test pressure	157 (1.6, 23)