

ALPHABETICAL INDEX

SECTION **IDX**

GI

MA

EM

LC

EC

FE

AT

PD

FA

RA

BR

ST

RS

BT

HA

EL

IDX

ALPHABETICAL INDEX

A

AAC/V - Wiring diagram..... EC-222
 ABS (anti-lock brake system) BR-30
 ABS - Wiring diagram BR-50
 ABS input/output signal inspection BR-127
 ABS sensor rotor FA-13
 ABS/TCS C/U signal EC-306
 A/C - Wiring diagram HA-50
 A/C air flow..... HA-19
 A/C component layout..... HA-15
 A/C compressor clutch removal and
 installation HA-113
 A/C compressor description HA-12
 A/C compressor mounting HA-111
 A/C compressor precaution HA-6
 A/C compressor special service tool HA-6
 A/C control linkage adjustment HA-102
 A/C control operation HA-17
 A/C diagnostic work flow..... HA-21
 A/C harness layout..... HA-47
 A/C HFC134a (R134a) system
 precaution HA-2
 A/C HFC134a (R134a) system service
 procedure..... HA-104
 A/C HFC134a (R134a) system service
 tools HA-7
 A/C HFC134a system service
 equipment precaution..... HA-9
 A/C lubricant (R134a) HA-106
 A/C operational check..... HA-22
 A/C performance test diagnoses HA-41
 A/C relay HA-98
 A/C self-diagnoses HA-26
 A/C service data specification..... HA-117
 A/C symptom chart HA-25, 43
 A/C system description HA-16
 A/C trouble diagnoses..... HA-21
 Accelerator control system FE-2
 Accelerator wire adjustment FE-3
 Air bag RS-6
 Air bag disposal RS-13
 Air bag precautions GI-2
 Air bleeding for brake system BR-5
 Air cleaner filter replacement..... MA-13
 Air conditioner - Wiring diagram HA-50
 Air conditioner cut control EC-19
 Air flow meter - See Mass air flow
 sensor EC-99
 Air mix door control linkage adjustment..... HA-102
 Air mix. door motor HA-90
 Air spoiler, rear BT-24
 Alternator EL-36
 Ambient sensor HA-67
 Angular tightening application EM-2
 Antenna - See Power antenna EL-169
 Anti-lock brake system - See ABS..... BR-30
 Anti-lock brake system - Wiring
 diagram..... BR-50

ASCD (automatic speed control device) EL-193
 ASCD - Wiring diagram EL-197
 AT control unit AT-51
 AT fluid temperature sensor AT-65
 A/T IND - Wiring diagram EL-119
 AT indicator lamp EL-118
 AT removal and installation AT-146
 AT self-diagnoses AT-22
 AT shift lock system AT-129
 A/T shift lock system - Wiring diagram AT-130
 A/T - Wiring diagram AT-8
 AT/C - Wiring diagram..... EC-228
 AUDIO - Wiring diagram..... EL-162
 Audio EL-160
 Audio and A/C control removal and
 installation - See Instrument panel BT-13
 AUT/DP - Wiring diagram EL-379
 Auto air conditioner - Wiring diagram HA-50
 Auto anti-dazzling inside mirror EL-185
 Autolamp EL-41
 Automatic drive positioner EL-373
 Automatic speed control system - See
 ASCD EL-193
 Automatic transmission fluid
 replacement..... MA-18
 Automatic transmission number GI-38

B

Back-up lamp EL-77
 BACK/L - Wiring diagram EL-77
 Battery EL-25
 Bi-level door control linkage adjustment HA-103
 Blower motor HA-95
 Board-on lift GI-39
 Body alignment BT-45
 BPT valve EC-214
 Brake booster BR-13
 Brake control valve (Proportioning
 valve) BR-7
 Brake fluid change BR-4
 Brake fluid level MA-19
 Brake fluid level and line check BR-4
 Brake hydraulic line BR-6
 Brake inspection MA-19
 Brake lines and cables inspection MA-19
 Brake master cylinder BR-10
 Brake pedal BR-8
 Bumper, front BT-5
 Bumper, rear BT-8

C

Camshaft inspection EM-34
 Camshaft position sensor (CMPS) EC-197
 Center bearing assembly (propeller
 shaft) PD-8

ALPHABETICAL INDEX

Center bearing disassembly (propeller shaft).....	PD-7
CHARGE - Wiring diagram.....	EL-34
Charging system.....	EL-33
Chassis and body maintenance.....	MA-17
CHIME - Wiring diagram.....	EL-124
Cigarette lighter.....	EL-147
Circuit breaker.....	EL-16
CKPS - Wiring diagram.....	EC-278
Clock.....	EL-147
Closed loop control.....	EC-131
CMPS - Wiring diagram.....	EC-197
Coil spring (front).....	FA-15
Coil spring (rear).....	RA-20
Collision diagnosis.....	RS-42
Combination lamp, rear, removal and installation.....	BT-24
Combination meter.....	EL-100
Combination meter removal and installation - See Instrument panel.....	BT-13
Combination switch.....	EL-38
COMM - Wiring diagram.....	EL-239
Compression pressure.....	EM-8
Compressor clutch removal and installation.....	HA-113
Compressor description.....	HA-12
Compressor mounting.....	HA-111
Compressor precaution.....	HA-6
Compressor special service tool.....	HA-6
Connecting rod.....	EM-46
Connecting rod bearing clearance.....	EM-50
Connecting rod bushing clearance.....	EM-51
Console box - See Instrument panel.....	BT-13
CONSULT for ECCS.....	EC-56
CONSULT for TCS.....	BR-63
CONSULT general information.....	GI-35
Control valve (AT).....	AT-169
Converter housing installation.....	AT-147
COOL/F - Wiring diagram.....	EC-293
Coolant mixture ratio.....	MA-9
Coolant replacement.....	MA-11
Cooling circuit (engine).....	LC-8
Cooling fan.....	LC-17
Cooling fan control.....	EC-293
Cooling fan motor.....	EC-305
Crankshaft.....	EM-48
Crankshaft position sensor (OBD).....	EC-192
Crankshaft position sensor (OBD) chipping.....	EC-278
Cruise control - See ASCD.....	EL-193
Cylinder block.....	EM-44
Cylinder head.....	EM-28

D

Daytime light system.....	EL-55
Daytime running light - See Daytime light system.....	EL-55
DEF - Wiring diagram.....	EL-151
Detonation sensor - See Knock sensor.....	EC-189

Diagnosis sensor unit.....	RS-9
Diagnostic trouble code (DTC) chart.....	EC-75
Differential carrier assembly.....	PD-25
Differential carrier disassembly.....	PD-12
Differential gear oil replacement.....	MA-18
Dimensions.....	GI-38
Direct ignition system.....	EC-25
D/LOCK - Wiring diagram.....	EL-265
Door glass.....	BT-11
Door lock.....	BT-11
Door mirror.....	BT-44
Door trim.....	BT-19
Door, front.....	BT-11
Door, rear.....	BT-12
Drive belt inspection.....	MA-10
Drive pinion height.....	PD-19
Drive plate runout.....	EM-51
Drive shaft (rear).....	RA-14
Dropping resistor (AT).....	AT-92
DTRL - Wiring diagram.....	EL-58

E

ECCS basic inspection.....	EC-73
ECCS circuit diagram.....	EC-8
ECCS component parts location.....	EC-11
ECCS on board diagnostic system.....	EC-35
ECCS system diagram and chart.....	EC-10
ECM input/output signal.....	EC-84
ECM-ABS/TCS COMM NG.....	EC-307
ECTS - Wiring diagram.....	EC-110
ECTS - Wiring diagram.....	EC-121
EGR control (EGRC) - BPT valve.....	EC-213
EGR control (EGRC) - solenoid valve.....	EC-283
EGR control valve.....	EC-212
EGR temperature sensor.....	EC-288
EGR valve & EVAP canister purge control solenoid valve.....	EC-287
EGR/TS - Wiring diagram.....	EC-288
EGRC/V - Wiring diagram.....	EC-283
EGRC1 - Wiring diagram.....	EC-203
Electric sun roof.....	EL-182
Electrical diagnoses.....	GI-21
Electrical unit.....	Foldout
Electrical units location.....	EL-442
Electronic controlled power steering system - Wiring diagram.....	ST-30
Electronic ignition system.....	EC-18
Engine compartment.....	BT-45
Engine control module (ECM).....	EC-231
Engine coolant temperature sensor (ECTS).....	EC-110
Engine oil filter replacement.....	MA-14
Engine oil precautions.....	GI-5
Engine oil replacement.....	MA-14
Engine outer component parts.....	EM-6
Engine removal.....	EM-42
Engine room - See Engine compartment.....	BT-45
Engine serial number.....	GI-38

ALPHABETICAL INDEX

EPS - Wiring diagram.....	ST-30
EVAP vapor lines inspection.....	MA-16
Evaporative emission (EVAP) system.....	EC-20
Exhaust system	FE-5
Exhaust system inspection	MA-17
Exterior.....	BT-24
Exterior lamp.....	EL-66

F

Fan control amp.	HA-93
Fast idle cam (FIC) inspection and adjustment	EC-25
F/FOG - Wiring diagram	EL-79
Final drive disassembly.....	PD-12
Final drive pre-inspection.....	PD-12
Final drive removal and installation	PD-10
Finisher, interior - See Trim	BT-17
Finisher, rear panel.....	BT-23
Finisher, trunk lid	BT-23
Floor trim.....	BT-17
Flow charts	GI-32
Fluid temperature sensor (AT)	AT-65
Fluids	MA-8
FO2H-L - Wiring diagram.....	EC-126
FO2H-R - Wiring diagram	EC-145
Fog lamp, front	EL-78
Fog lamp, front, removal and installation	BT-5
Foot lamp.....	EL-306
Forward clutch.....	AT-188
FPCM - Wiring diagram	EC-264
F/PUMP - Wiring diagram	EC-323
Freeze frame data.....	EC-37
FRO2LH - Wiring diagram	EC-132
FRO2RH - Wiring diagram.....	EC-150
Front axle.....	FA-10
Front bumper	BT-5
Front disc brake	BR-16
Front door.....	BT-11
Front fog lamp	EL-78
Front fog lamp removal and installation	BT-5
Front heated oxygen sensor (HO2S) (Left bank)	EC-126
Front heated oxygen sensor (HO2S) (Right bank)	EC-145
Front heated oxygen sensor (HO2S).....	EC-126
Front heated oxygen sensor (HO2S) monitor.....	EC-47
Front heated oxygen sensor heater (Left bank)	EC-132
Front heated oxygen sensor heater (Right bank)	EC-150
Front passenger air bag.....	RS-11
Front seat.....	BT-32
Front seat belt	RS-4
Front suspension	FA-14
Front tower bar	BT-24
Front washer.....	EL-132
Front wiper.....	EL-132

Fuel check valve	EC-21
Fuel cut control (at no load & high engine speed).....	EC-19
Fuel filter replacement	MA-13
Fuel gauge.....	EL-101
Fuel injection system (Left bank).....	EC-163, 169
Fuel injection system (Right bank)	EC-174, 180
Fuel lid opener, electric	EL-180
Fuel line inspection.....	MA-12
Fuel precautions.....	GI-6
Fuel pressure check.....	EC-23
Fuel pressure release	EC-23
Fuel pump control module	EC-264
Fuel system	FE-4
Fuel tank vacuum relief valve	EC-21
FUELLH - Wiring diagram	EC-163, 169
FUELRH - Wiring diagram.....	EC-174, 180
Fuse	EL-16
Fuse block	Foldout
Fusible link.....	EL-16

G

Garage jack and safety stand	GI-40
Gauges	EL-99
Generic scan tool (GST)	EC-67
Glass.....	BT-11
Grease	MA-8
Grille - See Exterior	BT-24
Ground distribution	EL-17

H

Harness connector.....	EL-3
Harness layout.....	EL-446
Hazard warning lamp.....	EL-81
Headlamp.....	EL-41
Headlining - See Roof trim	BT-21
Heated oxygen sensor (HO2S) (Front) (Left bank)	EC-126
Heated oxygen sensor (HO2S) (Front) (Right bank).....	EC-145
Heated oxygen sensor (HO2S) (front).....	EC-126
Heated oxygen sensor (rear).....	EC-136, 154
Heated oxygen sensor heater (Front)(Left bank).....	EC-132
Heated oxygen sensor heater (Front)(Right bank)	EC-150
Heated seat.....	BT-33, EL-191
Height (Dimensions).....	GI-38
HFC134a (R134a) system precaution	HA-2
HFC134a (R134a) system service procedure.....	HA-104
HFC134a (R134a) system service tools	HA-7
HFC134a system service equipment precaution.....	HA-9
High clutch.....	AT-186
H/LAMP - Wiring diagram.....	EL-44

ALPHABETICAL INDEX

Hood	BT-5
HORN - Wiring diagram	EL-147
Horn	EL-147
HSEAT - Wiring diagram	EL-191
Hydraulic lash adjuster inspection	EM-38

I

IATS - Wiring diagram	EC-105
Identification plate	GI-38
Idle mixture ratio	EC-28
Idle speed	EC-28
IGN/SG - Wiring diagram	EC-270
Ignition coil	EC-277
Ignition timing	EC-28
ILL - Wiring diagram	EL-91
Illumination	EL-89, 339
I/MIRR - Wiring diagram	EL-185
In vehicle sensor	HA-70
Inhibitor switch	AT-61
INJECT - Wiring diagram	EC-310
Injector	EC-315
Injector removal and installation	EC-24
Instrument panel	BT-13
INT/L - Wiring diagram	EL-98
Intake air temperature sensor	EC-105
Intake door motor	HA-87
Intake sensor	HA-72, 103
Intake valve timing control position sensor (left bank)	EC-251
Intake valve timing control position sensor (right bank)	EC-256
Integrated homelink transmitter	EL-440
Interior	BT-17
Interior lamp	EL-89, 306
IPPS (Infiniti personal protection system)	EL-422
IPPS (Infiniti personal protection system) precautions	GI-2
IVC-L - Wiring diagram	EC-238
IVC-R - Wiring diagram	EC-245
IVCS-L - Wiring diagram	EC-251
IVCS-R - Wiring diagram	EC-256
IVMS (In-Vehicle Multiplexing System)	EL-216
IVMS-System description	EL-216
IVMS-Trouble diagnoses system	EL-226

J

Jacking points	GI-40
Joint connector (J/C)	Foldout
Junction box (J/B)	Foldout

K

Key illumination	EL-306
------------------------	--------

Keyless entry system - See Multi- remote control system	EL-283
Knock sensor (KS)	EC-189
KS - Wiring diagram	EC-189

L

Length (Dimensions)	GI-38
License lamp	EL-66
Lifting points	GI-41
Line pressure solenoid valve	AT-81, 89, 92
Line pressure test (AT)	AT-127
Liquid gasket application	EM-2
LOAD - Wiring diagram	EC-332
Location of electrical units	EL-442
Lock, door	BT-11
Low and reverse brake	AT-192
Lower ball joint (rear susp.)	RA-21
Lubricant (R134a) A/C	HA-106
Lubricants	MA-8
Lubrication circuit (engine)	LC-3
Lubrication-locks, hinges and hood latches	MA-21

M

MAFS - Wiring diagram	EC-99
Magnet clutch	HA-113
MAIN - Wiring diagram	EC-94
Maintenance (engine)	MA-10
Maintenance	MA-1
Malfunction indicator lamp (MIL)	EC-47
Map lamp	EL-306
Mass air flow sensor (MAFS)	EC-99
Master cylinder (brake)	BR-10
METER - Wiring diagram	EL-101
Meter	EL-99
Middle throttle drum adjustment	FE-3
MIL & Data link connectors circuit	EC-335
MIL/DL - Wiring diagram	EC-335
MIRROR - Wiring diagram	EL-184
Mirror, door	BT-44
Mirror, out side	BT-44
Misfire	EC-185
Mode door control linkage adjustment	HA-102
Mode door motor	HA-83
Model variation	GI-36
Molding - See Exterior	BT-24
Mud guard - See Exterior	BT-24
MULTI - Wiring diagram	EL-287
Multi link/lower ball joint (rear)	RA-21
Multi-remote control system	EL-283
Multiport fuel injection (MFI) system	EC-15
Multiport fuel injection precautions	GI-5

GI
MA
EM
LC
EC
FE
AT
PD
FA
RA
BR
ST
RS
BT
HA
EL

IDX

ALPHABETICAL INDEX

N

NATS (Nissan anti-theft system) EL-422
 NATS (Nissan anti-theft system)
 precautions GI-2
 NATS - Wiring diagram..... EL-424

O

Oil change (capacity) MA-8
 Oil change (interval) MA-6, 7
 Oil pan (engine) EM-9
 Oil pressure (engine) LC-4
 Oil pump (AT) AT-165
 Oil pump (engine) LC-5
 Oil pump regulator valve (engine) LC-7
 Oil seal replacement (engine) EM-26
 Oil seal replacement (front of final
 drive) PD-9
 Oil seal replacement (side of final
 drive) PD-9
 Out side mirror BT-44
 Overdrive control switch AT-61
 Overrun clutch AT-188
 Overrun clutch solenoid valve AT-81, 89, 102

P

P/ANT - Wiring diagram EL-170
 Park/Neutral position switch EC-233
 Parking brake control BR-28
 Parking drum brake BR-24
 Parking lamp EL-66
 PCV (positive crankcase ventilation) EC-22
 Personal lamp EL-306
 PHONE - Wiring diagram EL-177
 Pinion bearing preload diff. PD-19
 Pinion gear height diff. PD-19
 Piston assembly EM-51
 Piston pin inspection EM-46
 Piston ring inspection EM-46
 Piston to bore clearance EM-47
 PNP/SW - Wiring diagram EC-233
 POWER - Wiring diagram EL-7
 Power antenna EL-169
 Power door lock EL-262
 Power door mirror EL-184
 Power seat EL-186, 373
 Power steering (twin orifice) trouble
 diagnoses ST-32
 Power steering fluid level MA-20, ST-6
 Power steering gear ST-14
 Power steering hydraulic pressure ST-8
 Power steering oil pressure switch EC-327
 Power steering oil pump ST-26
 Power steering system (twin orifice) ST-29
 Power steering system bleeding ST-7

Power supply routing EL-6
 Power transistor & ignition coil EC-270
 Power transistor EC-277
 Power window EL-247
 Precautions (General) GI-3
 Pressure test (AT) AT-127
 Propeller shaft PD-5
 Propeller shaft on vehicle service PD-5
 Propeller shaft vibration PD-5
 PST/SW - Wiring diagram EC-327

R

Rack retainer adjustment ST-6
 Radiator LC-13
 Radio - See Audio EL-160
 Rear air spoiler BT-24
 Rear axle RA-8
 Rear bumper BT-8
 Rear combination lamp removal and
 installation BT-24
 Rear disc brake BR-20
 Rear door BT-12
 Rear heated oxygen sensor (HO2S) .. EC-136, 154
 Rear panel finisher BT-23
 Rear seat BT-34
 Rear seat belt RS-5
 Rear suspension RA-18
 Rear tower bar BT-24
 Rear window BT-43
 Rear window defogger EL-149
 Refrigerant connection precaution HA-3
 Refrigerant discharging evacuating
 charging HA-105
 Refrigerant general precaution HA-2
 Refrigerant lines HA-108
 Refrigeration cycle HA-11
 Reverse clutch AT-182
 Revolution sensor (AT) AT-67
 RO2H-L - Wiring diagram EC-136
 Road wheel size GI-38
 Roof trim BT-21
 Room lamp EL-306
 ROOM/L - Wiring diagram EL-311
 RRO2LH - Wiring diagram EC-140
 RRO2RH - Wiring diagram EC-158

S

SAE J1930 terminology list GI-44
 Seal - See Exterior BT-24
 SEAT - Wiring diagram EL-187
 Seat belt inspection MA-21
 Seat belt pre-tensioner RS-6
 Seat belt pre-tensioner disposal RS-13
 Seat belt, front RS-4
 Seat belt, rear RS-5
 Seat, front BT-32

ALPHABETICAL INDEX

<p>Seat, rear BT-34</p> <p>Secondary throttle position sensor (TPS) for TCS EC-316</p> <p>Secondary throttle position sensor BR-33</p> <p>Self-diagnostic results EC-47</p> <p>SHIFT - Wiring diagram AT-130</p> <p>Shift lock system AT-129</p> <p>Shift schedule AT-45</p> <p>Shift solenoid valve (AT) AT-71, 74, 76, 81, 89, 94, 97</p> <p>Shock absorber (rear) RA-20</p> <p>Side bearing preload diff. PD-18</p> <p>Side flange installation diff. PD-10</p> <p>Side trim BT-17</p> <p>SMJ (super multiple junction) Foldout</p> <p>Spark plug replacement MA-15</p> <p>Speedometer EL-101</p> <p>Spiral cable RS-10</p> <p>Splice location EL-465</p> <p>Spot lamp EL-306</p> <p>Spring (Wheelarch) height FA-5</p> <p>SROOF - Wiring diagram EL-182</p> <p>SRS - See Supplemental Restraint System RS-6</p> <p>SRS - Wiring diagram RS-21</p> <p>SRS Trouble diagnoses RS-18</p> <p>S/SIG - Wiring diagram EC-321</p> <p>Stabilizer bar (front) FA-20</p> <p>Stabilizer bar (rear) RA-24</p> <p>Stall test (AT) AT-124</p> <p>Standardized relay EL-4</p> <p>START - Wiring diagram EL-30</p> <p>Starter EL-31</p> <p>Starting system EL-29</p> <p>Steering gear and linkage inspection MA-20</p> <p>Steering linkage ST-14</p> <p>Steering wheel and column ST-10</p> <p>Steering wheel play ST-5</p> <p>Steering wheel turning force ST-8</p> <p>Step lamp EL-328</p> <p>STEP/L - Wiring diagram EL-331</p> <p>Stop lamp EL-73</p> <p>STOP/L - Wiring diagram EL-74</p> <p>Strut (front) FA-15</p> <p>Sun roof, electric EL-182</p> <p>Sunload sensor HA-74</p> <p>Sunroof BT-35</p> <p>Supplemental restraint system - Wiring diagram RS-21</p> <p>Supplemental Restraint System RS-6</p> <p>SW/ILL - Wiring diagram EL-341</p> <p>Symbols and abbreviations GI-8</p> <p>System readiness test (SRT) code EC-37</p>	<p>Tachometer EL-101</p> <p>Tail lamp EL-66</p> <p>TAIL/L - Wiring diagram EL-68</p> <p>Tandem throttle position sensor EC-244</p> <p>TCS (traction control system) BR-30</p> <p>TCS - Wiring diagram BR-50</p> <p>TCS component parts and connector location BR-48</p> <p>TCS control unit BR-127</p> <p>TCS front wheel sensor removal and installation BR-36</p> <p>TCS rear wheel sensor removal and installation BR-36</p> <p>TCS self-diagnosis BR-60</p> <p>TCS symptom chart BR-44</p> <p>TCS system components BR-31</p> <p>TCS throttle valve control system BR-33</p> <p>TCS trouble diagnoses BR-39</p> <p>TCS wheel sensors BR-35</p> <p>Telephone EL-176</p> <p>Tension rod (front) FA-20</p> <p>THEFT - Wiring diagram EL-350</p> <p>Theft warning system EL-346</p> <p>Thermostat LC-11</p> <p>Three way catalyst EC-215</p> <p>Three way catalyst function (Left bank) EC-215</p> <p>Three way catalyst function (Right bank) EC-215</p> <p>Three way catalyst precautions GI-5</p> <p>Throttle actuator control module - See TAC module BR-36</p> <p>Throttle drum adjustment FE-3</p> <p>Throttle Motor BR-33</p> <p>Throttle position sensor (TPS) EC-115</p> <p>Throttle position sensor adjustment EC-73</p> <p>Throttle position switch AT-62</p> <p>Throttle valve control system for TCS BR-33</p> <p>Tie-rod ST-18</p> <p>Tie-rod ball joints ST-18</p> <p>Tightening torque of standard bolts GI-43</p> <p>Timing chain EM-11</p> <p>Tire rotation MA-19</p> <p>Tire size GI-38</p> <p>Tooth contact diff. PD-24</p> <p>Torque converter clutch solenoid valve AT-81, 84, 89</p> <p>Torque converter installation AT-147</p> <p>Tow truck towing GI-41</p> <p>Towing point GI-42</p> <p>TPS - Wiring diagram EC-115</p> <p>Traction control system - See TCS BR-30</p> <p>Traction control system - Wiring diagram BR-50</p> <p>Traction control system circuit (engine) EC-261</p> <p>Transmission serial number GI-38</p> <p>TRANSMT - Wiring diagram EL-440</p> <p>Transverse link (front) FA-21</p> <p>Tread-FR&RR (Dimensions) GI-38</p> <p>Trim BT-17</p> <p>Triple pressure switch HA-98</p> <p>Trunk lid BT-8</p>
--	---

T

2-pole lift GI-41	
T&FLID - Wiring diagram EL-180	
TAC (throttle actuator control) module BR-36	
TAC module removal and installation BR-36	

ALPHABETICAL INDEX

Trunk lid finisher BT-23
 Trunk lid opener - See Trunk lid..... BT-8
 Trunk lid opener, electric EL-180
 Trunk lid trim BT-23
 Trunk room lamp..... EL-97
 Trunk room trim BT-23
 Turbine revolution sensor..... AT-107
 TURN - Wiring diagram EL-84
 Turn signal lamp EL-81
 Two trip detection logic EC-35

U

Under body BT-47

V

Vacuum hose (brake system) BR-15
 Vacuum hose drawing (ECCS) EC-13
 Valve guide EM-35
 Valve seat EM-37
 Valve spring EM-38
 Vehicle identification number GI-37
 Vehicle speed sensor (VSS) EC-218
 Viscosity number (SAE)..... MA-8
 VSS - Wiring diagram EC-218

W

WARN - Wiring diagram EL-110

Warning chime EL-122
 Warning lamps EL-107
 Washer, front..... EL-132
 Water pump LC-9
 Water temperature gauge..... EL-101
 Weatherstrip - See Exterior BT-24
 Wheel alignment (front) FA-7
 Wheel alignment (rear) RA-6
 Wheel balance MA-18
 Wheel bearing (front axle) FA-6
 Wheel bearing (rear) RA-6
 Wheel sensors (ABS)..... BR-35
 Wheel sensors (TCS)..... BR-35
 Wheel size GI-38
 Wheelbase (Dimensions) GI-38
 Wide open & closed throttle position
 switch EC-115
 Width (Dimensions) GI-38
 WINDOW - Wiring diagram EL-249
 Window, door BT-11
 Window, rear BT-43
 Windshield BT-43
 WIPER - Wiring diagram EL-135
 Wiper, front EL-132
 Wiring diagrams GI-9