



## SUPER MULTIPLE JUNCTION (SMJ)

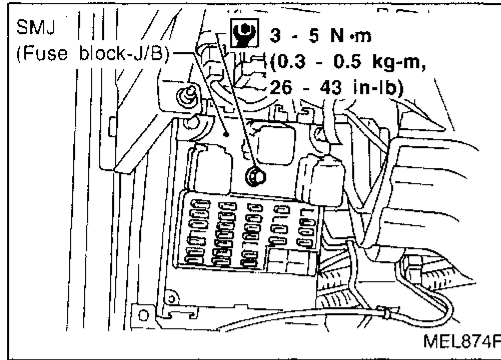


### INSTALLATION

To install SMJ, tighten bolts until orange “fulltight” mark appears and then retighten to specified torque as required.

 : 3 - 5 N·m  
(0.3 - 0.5 kg-m, 26 - 43 in-lb)

### CAUTION:

Do not overtighten bolts, otherwise, they may be damaged.

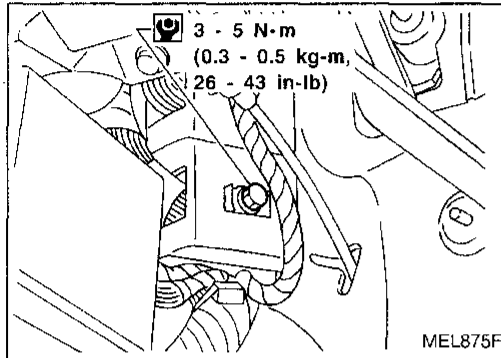


# SUPER MULTIPLE JUNCTION (SMJ)

## Terminal Arrangement


MAIN HARNESS




(M1)

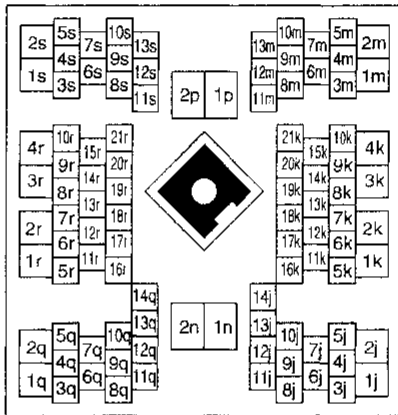


(M2)

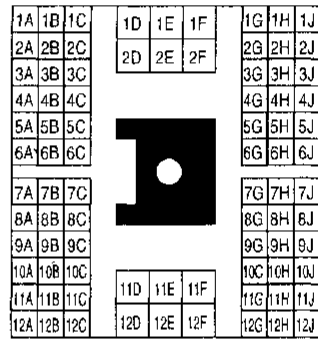

(E1)

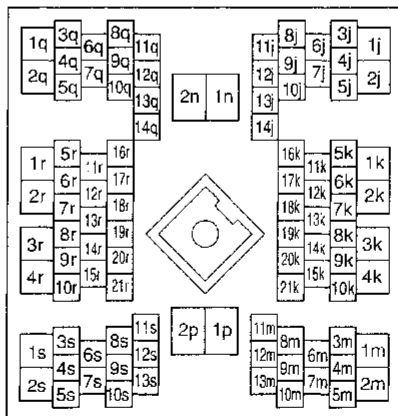

(B1)

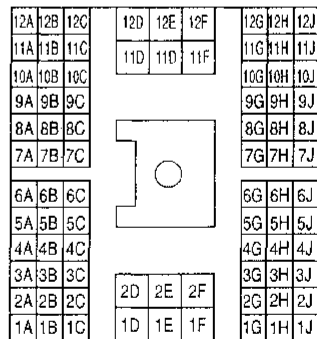


ENGINE ROOM HARNESS



BODY HARNESS

# FUSE BLOCK — Junction Box (J/B)

## Terminal Arrangement

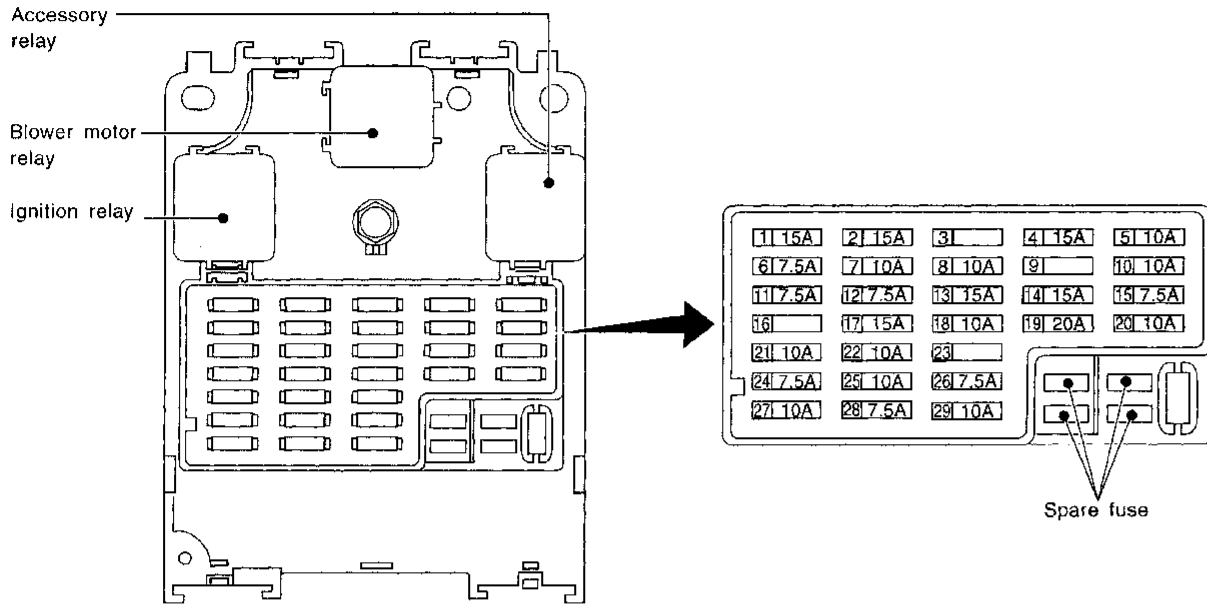


To main harness (M10)

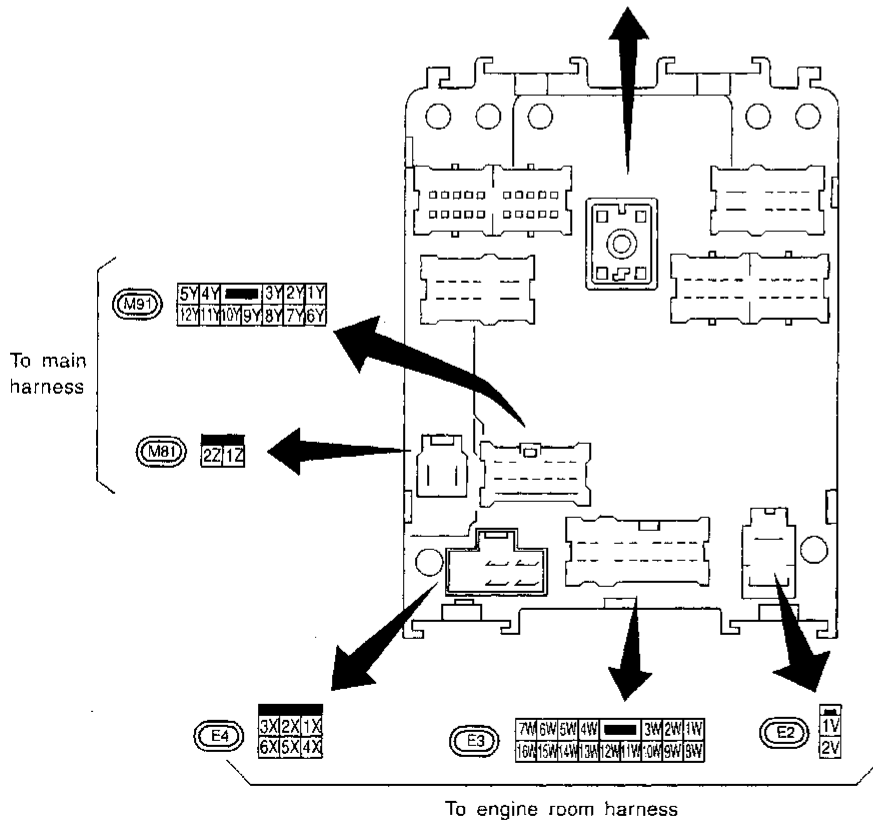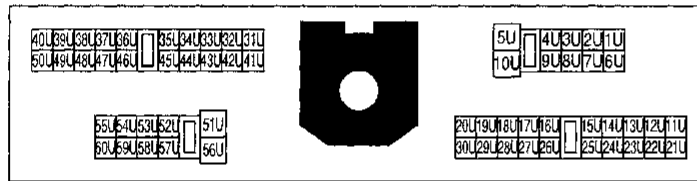

# FUSE AND FUSIBLE LINK BOX


## Terminal Arrangement

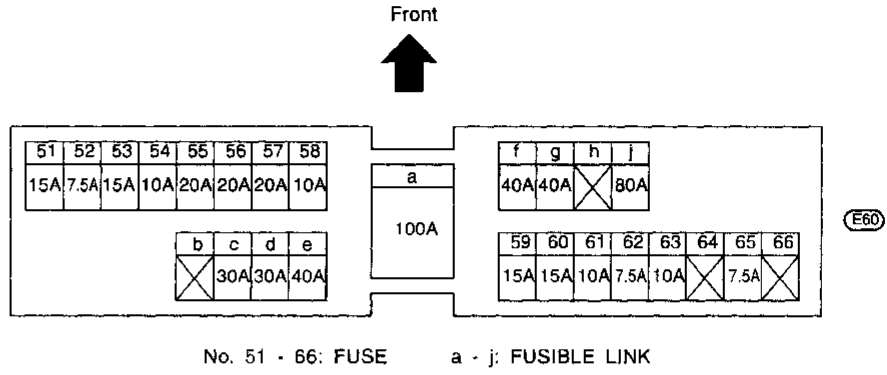


# ELECTRICAL UNITS

## Terminal Arrangement


ECM (ECCS CONTROL MODULE) (F24)

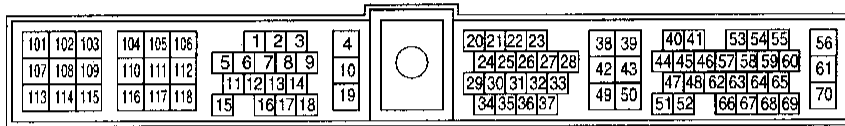

A/T CONTROL UNIT (M10)

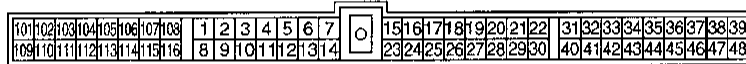

ABS CONTROL UNIT (M54)

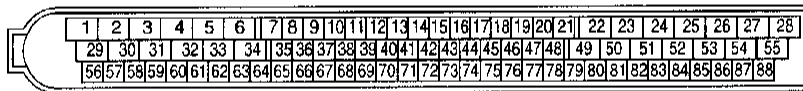

SMART ENTRANCE CONTROL UNIT

