

# ALPHABETICAL INDEX

# SECTION **IDX**

GI

MA

EM

LC

EC

FE

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

**IDX**

# ALPHABETICAL INDEX

## A

AAC/V - Wiring diagram.....EC-340  
 ABS - Wiring diagram .....BR-35  
 ABS sensor rotor.....AX-6, 18  
 Absolute pressure sensor .....EC-131  
 A/C air flow.....HA-26  
 A/C component layout.....HA-20  
 A/C compressor clutch removal and  
 installation.....HA-102  
 A/C compressor precaution.....HA-6  
 A/C compressor special service tool.....HA-9  
 A/C control operation .....HA-24  
 A/C diagnostic work flow.....HA-43  
 A/C HFC134a (R134a) system  
 precaution.....HA-2  
 A/C HFC134a (R134a) system service  
 procedure.....HA-97  
 A/C HFC134a (R134a) system service  
 tools.....HA-10  
 A/C HFC134a system service equip-  
 ment precaution.....HA-6  
 A/C lubricant (R134a).....HA-99  
 A/C operational check.....HA-44  
 A/C performance chart.....HA-77  
 A/C performance test diagnoses.....HA-75  
 A/C relay.....HA-72  
 A/C self-diagnoses.....HA-37  
 A/C service data specification.....HA-111  
 A/C system description.....HA-24  
 A/C trouble diagnoses.....HA-28  
 A/C, A - Wiring diagram.....HA-31  
 Accelerator control system.....FE-3  
 Accelerator wire adjustment.....FE-3  
 Actuator lever (Transfer).....TF-96  
 Air bag.....RS-9  
 Air bag disposal.....RS-22  
 Air bag precautions.....GI-2  
 Air bleeding for brake system.....BR-7  
 Air cleaner filter replacement.....MA-17  
 Air conditioner cut control.....EC-23  
 Air flow meter - See Mass air flow  
 sensor.....EC-122  
 Air mix door control linkage adjustment.....HA-56  
 Air mix. door motor.....HA-54, 96  
 Air spoiler, rear.....BT-23  
 All - mode 4WD system.....TF-9  
 Alternator.....SC-12  
 Ambient sensor.....HA-86  
 Angular tightening application.....EM-2  
 Antenna - See Power antenna.....EL-149  
 Anti-lock brake system - Wiring  
 diagram.....BR-35  
 AP/SEN - Wiring diagram.....EC-134  
 ASCD (automatic speed control device).....EL-162  
 ASCD - Wiring diagram.....EL-166  
 A/T - Wiring diagram - AT - FTS.....AT-94  
 A/T - Wiring diagram - AT - MAIN.....AT-85  
 A/T - Wiring diagram - AT - PNP/SW.....AT-89

A/T - Wiring diagram - AT - VSS A/T.....AT-99  
 A/T control.....EC-349  
 A/T diagnosis communication line.....EC-440  
 A/T fluid temperature sensor.....AT-96  
 A/T self-diagnoses.....AT-44  
 A/T shift lock system.....AT-220  
 A/T shift lock system - Wiring diagram.....AT-221  
 A/T trouble diagnoses.....AT-49  
 A/T Wiring diagram - AT - ENG SS.....AT-104  
 A/T Wiring diagram AT - 1ST.....AT-109  
 A/T Wiring diagram AT - 2ND.....AT-115  
 A/T Wiring diagram AT - 3RD.....AT-121  
 A/T Wiring diagram AT - 4TH.....AT-128  
 A/T Wiring diagram AT - BA/FTS.....AT-174  
 A/T Wiring diagram AT - LPSV.....AT-146  
 A/T Wiring diagram AT - NONDTC.....AT-185  
 A/T Wiring diagram AT - OVRCSV.....AT-169  
 A/T Wiring diagram AT - SSV/A.....AT-152  
 A/T Wiring diagram AT - SSV/B.....AT-157  
 A/T Wiring diagram AT - TCCSIG.....AT-140  
 A/T Wiring diagram AT - TCV.....AT-134  
 A/T Wiring diagram AT - TPS.....AT-163  
 A/T Wiring diagram AT - VSSMTR.....AT-179  
 AT/C - Wiring diagram.....EC-351  
 ATDIAG - Wiring diagram.....EC-441  
 ATP switch.....TF-88  
 ATP warning lamp.....TF-80  
 Audio.....EL-141  
 AUDIO - Wiring diagram.....EL-143  
 Audio and A/C control removal and  
 installation - See Instrument panel.....BT-13  
 Auto air conditioner - Wiring diagram.....HA-31  
 Automatic amplifier.....HA-35, 47  
 Automatic speed control system - See  
 ASCD.....EL-162  
 Automatic transmission fluid  
 replacement.....MA-21  
 Automatic transmission number.....GI-40  
 Auxiliary air control (AAC) valve.....EC-336  
 Axle housing (rear).....AX-18

## B

Back door.....BT-8  
 Back door opener - See Back door.....BT-8  
 Back door trim.....BT-22  
 Back-up lamp.....EL-53  
 BACK/L - Wiring diagram.....EL-53  
 Ball joint (front).....SU-12  
 Basic inspection.....EC-86  
 Battery.....SC-3  
 Block heater.....EM-45  
 Blower motor.....HA-63  
 Body alignment.....BT-46  
 BPT valve.....EC-297, 300  
 Brake booster.....BR-17  
 Brake fluid change.....BR-6  
 Brake fluid level.....MA-25  
 Brake fluid level and line check.....BR-6  
 Brake hydraulic line.....BR-8

# ALPHABETICAL INDEX

Brake inspection .....	MA-25
Brake lines and cables inspection .....	MA-25
Brake lining wear temporary checking .....	MA-26
Brake master cylinder .....	BR-14
Brake pedal .....	BR-12
Bulb specifications .....	EL-330
Bumper, front .....	BT-5
Bumper, rear .....	BT-8
BYPS/V - Wiring diagram .....	EC-430, 436

## C

Camshaft inspection .....	EM-30
Camshaft position sensor (CMPS).....	EC-282
Canister-See EVAP canister .....	EC-24
Center case (Transfer).....	TF-99
CHARGE - Wiring diagram .....	SC-10
Charging system .....	SC-9
Chassis and body maintenance .....	MA-21
CHIME - Wiring diagram.....	EL-106
CIGAR - Wiring diagram.....	EL-131
Cigarette lighter.....	EL-131
Circuit breaker.....	EL-14
CKPS - Wiring diagram.....	EC-279, 375
Closed loop control (Left bank).....	EC-365
Closed loop control (Right bank) .....	EC-365
Closed throttle position switch .....	EC-343
Clutch drum (Transfer).....	TF-101
Clutch force release limit adjustment .....	TF-38
Clutch pressure switch (Transfer).....	TF-87
CMPS - Wiring diagram .....	EC-285
Coil spring (front).....	SU-8
Coil spring (rear) .....	SU-17
Collision diagnosis.....	RS-59
Combination lamp, front, removal and installation .....	BT-5
Combination lamp, rear, removal and installation .....	BT-23
Combination meter.....	EL-78
Combination meter removal and instal- lation - See Instrument panel.....	BT-13
Combination switch.....	EL-20
COMPAS - Wiring diagram .....	EL-93
Compass .....	EL-92
Component Location .....	HA-28
Compression pressure.....	EM-12
Compressor clutch removal and installation .....	HA-102
Compressor precaution .....	HA-6
Compressor special service tool .....	HA-9
Connecting rod.....	EM-47
Connecting rod bearing clearance.....	EM-52
Connecting rod bushing clearance .....	EM-53
Connector inspection.....	GI-18
Console box - See Instrument panel.....	BT-13
CONSULT for ABS .....	BR-41
CONSULT for all-mode 4WD.....	TF-29
CONSULT for engine .....	EC-67
CONSULT general information.....	GI-35
Control valve (A/T) .....	AT-252

Control valve (Transfer) .....	TF-104
Converter housing installation.....	AT-231
Coolant mixture ratio.....	MA-12
Coolant replacement.....	MA-14
Cooling circuit (engine).....	LC-8
Crank angle sensor built into distributor - See Camshaft position sensor .....	EC-282
"Crankcase emission control system - See positive crankcase ventilation".....	EC-30
Crankshaft.....	EM-50
Crankshaft position sensor (OBD) .....	EC-277
Crankshaft position sensor (OBD) cog chipping .....	EC-373
Cruise control - See ASCD.....	EL-162
Cylinder block .....	EM-44
Cylinder block boring .....	EM-49
Cylinder head.....	EM-26
Cylinder head bolt tightening .....	EM-38

## D

Data link connector for Consult.....	EC-67
Daytime light system.....	EL-34
Daytime running light - See Daytime light system .....	EL-34
DEF - Wiring diagram .....	EL-135
Detonation sensor - See Knock sensor .....	EC-272
Diagnostic trouble code (DTC) for OBD system .....	EC-2, 45
Diagnostic trouble code (DTC) inspec- tion priority chart.....	EC-95
Differential carrier assembly.....	PD-25, 51
Differential carrier disassembly .....	PD-38
Differential gear oil replacement.....	MA-24
Dimensions .....	GI-40
Distributor .....	EC-22
Distributor ignition (DI) system.....	EC-22
D/LOCK - Wiring diagram.....	EL-193
Dome light - See Interior lamp .....	EL-71
Door glass .....	BT-11
Door lock .....	BT-11
Door mirror.....	BT-45
Door trim .....	BT-19
Door, front.....	BT-11
Door, rear .....	BT-12
Drive belt inspection .....	MA-13
Drive chain (Transfer) .....	TF-101
Drive pinion diff. inspection.....	PD-18, 41
Drive pinion height .....	PD-20, 47
Drive plate runout .....	EM-53
Drive shaft (front).....	AX-10
Dropping resistor (A/T).....	AT-149
DTC work support .....	EC-76
DTRL - Wiring diagram .....	EL-38
Dual pressure switch .....	HA-73

# ALPHABETICAL INDEX

## E

<p>ECM input/output signal .....EC-106</p> <p>ECTS - Wiring diagram .....EC-148, 164</p> <p>EGR control (EGRC) - BPT valve .....EC-297</p> <p>EGR control (EGRC) - solenoid valve .....EC-378</p> <p>EGR control valve .....EC-289, 296, 389, 394</p> <p>EGR temperature sensor .....EC-383</p> <p>EGR/TS - Wiring diagram .....EC-386</p> <p>EGRC/V - Wiring diagram .....EC-380</p> <p>EGRC1 - Wiring diagram .....EC-293, 392</p> <p>Electric sun roof .....EL-153</p> <p>Electrical diagnoses .....GI-21</p> <p>Electrical ignition system .....EC-22</p> <p>Electrical unit .....Foldout</p> <p>Electrical units location .....EL-310</p> <p>Engine compartment .....BT-47</p> <p>Engine control circuit diagram .....EC-16</p> <p>Engine control component parts location .....EC-14</p> <p>Engine control module (ECM) .....EC-353</p> <p>Engine control system diagram and chart .....EC-17</p> <p>Engine coolant temperature sensor (ECTS) .....EC-146, 162</p> <p>Engine fail-safe system .....EC-96</p> <p>Engine oil filter replacement .....MA-18</p> <p>Engine oil precautions .....GI-5</p> <p>Engine oil replacement .....MA-17</p> <p>Engine outer component parts .....EM-9</p> <p>Engine removal .....EM-41</p> <p>Engine room - See Engine compartment .....BT-47</p> <p>Engine serial number .....GI-40</p> <p>EVAP canister .....EC-25</p> <p>EVAP canister purge volume control solenoid valve .....EC-24, 311, 403</p> <p>EVAP canister vent control valve .....EC-317, 410, 421</p> <p>EVAP control system (small leak) diagnosis .....EC-304, 396</p> <p>EVAP control system pressure sensor .....EC-323</p> <p>EVAP control system purge flow monitoring diagnosis .....EC-415</p> <p>EVAP vapor lines inspection .....MA-20</p> <p>Evaporative emission (EVAP) system .....EC-24</p> <p>Exhaust gas recirculation (EGR) valve .....EC-289, 389</p> <p>Exhaust system .....FE-8</p> <p>Exhaust system inspection .....MA-21</p> <p>Exterior .....BT-23</p>	<p>4WD warning lamp .....TF-12</p> <p>Fan control amp. ....HA-65</p> <p>Fast idle cam (FIC) inspection and adjustment .....EC-33</p> <p>F/FOG - Wiring diagram .....EL-56</p> <p>FICD - Wiring diagram .....EC-468</p> <p>Final drive disassembly .....PD-37</p> <p>Final drive pre-inspection .....PD-37</p> <p>Final drive removal and installation .....PD-37</p> <p>Finisher, interior - See Trim .....BT-17</p> <p>F/LID - Wiring diagram .....EL-158</p> <p>Fluid temperature sensor (A/T) .....AT-96</p> <p>Fluids .....MA-11</p> <p>FO2H-L - Wiring diagram .....EC-207</p> <p>FO2H-R - Wiring diagram .....EC-206</p> <p>Fog lamp, front .....EL-54</p> <p>Fog lamp, front, removal and installation .....BT-5</p> <p>Forward clutch .....AT-271</p> <p>F/PUMP - Wiring diagram .....EC-459</p> <p>Freeze frame data .....EC-46</p> <p>FRO2LH - Wiring diagram .....EC-171, 191, 200</p> <p>FRO2RH - Wiring diagram .....EC-170, 190, 199</p> <p>Front axle .....AX-2</p> <p>Front bumper .....BT-5</p> <p>Front case (Transfer) .....TF-109</p> <p>Front combination lamp removal and installation .....BT-5</p> <p>Front disc brake .....BR-20</p> <p>Front door .....BT-11</p> <p>Front drive shaft (Transfer) .....TF-101</p> <p>Front final drive disassembly (4WD) .....PD-13</p> <p>Front final drive pre-inspection (4WD) .....PD-13</p> <p>Front final drive removal and installation (4WD) .....PD-13</p> <p>Front fog lamp .....EL-54</p> <p>Front fog lamp removal and installation .....BT-5</p> <p>Front heated oxygen sensor (HO2S) (Left bank) .....EC-167, 175, 181, 187, 196</p> <p>Front heated oxygen sensor (HO2S) (Right bank) .....EC-167, 175, 181, 187, 196</p> <p>Front heated oxygen sensor heater (Left bank) .....EC-204</p> <p>Front heated oxygen sensor heater (Right bank) .....EC-204</p> <p>Front oxygen sensor (O2S) monitor .....EC-58</p> <p>Front revolution sensor (Transfer) .....TF-88</p> <p>Front seat .....BT-30</p> <p>Front seat belt .....RS-3</p> <p>Front suspension .....SU-2</p> <p>Front washer .....EL-113</p> <p>Front wiper .....EL-113</p> <p>Fuel cut control (at no load &amp; high engine speed) .....EC-24</p> <p>Fuel filler lid .....BT-8</p> <p>Fuel filter replacement .....MA-16</p> <p>Fuel gauge .....EL-78</p> <p>Fuel injection system (Left bank) .....EC-249, 256</p> <p>Fuel injection system (Right bank) .....EC-249, 256</p> <p>Fuel lid opener, electric .....EL-158</p> <p>Fuel line inspection .....MA-16</p>
---	---

## F

4LO indicator lamp .....TF-82	
4WD shift indicator lamp .....TF-78	
4WD shift switch .....TF-87	
4WD solenoid valve .....TF-87	

# ALPHABETICAL INDEX

Fuel precautions .....	GI-6
Fuel pressure check .....	EC-31
Fuel pressure regulator .....	EC-32
Fuel pressure release .....	EC-31
Fuel pump .....	EC-458
Fuel system .....	FE-4
Fuel tank vacuum relief valve .....	EC-25
FUELLH - Wiring diagram .....	EC-252, 259
FUELRH - Wiring diagram .....	EC-251, 258
Fuse .....	EL-14
Fuse block .....	Foldout
Fusible link .....	EL-14

## G

Garage jack and safety stand .....	GI-43
Gauges .....	EL-78
Generator - See Alternator .....	SC-12
Generic scan tool (GST) .....	EC-80
Glass .....	BT-11
Glass hatch opener, electric .....	EL-157
Grease .....	MA-11
Ground distribution .....	EL-15

## H

Harness connector .....	EL-3
Harness connector inspection .....	GI-18
Harness layout .....	EL-313
Hazard warning lamp .....	EL-59
Headlamp .....	EL-23
Headlining - See Roof trim .....	BT-21
Heated seat .....	BT-32, EL-161
Height (Dimensions) .....	GI-40
HFC134a (R134a) system precaution .....	HA-2
HFC134a (R134a) system service procedure .....	HA-97
HFC134a (R134a) system service tools .....	HA-10
HFC134a system service equipment precaution .....	HA-6
High clutch .....	AT-269
H/LAMP - Wiring diagram .....	EL-27
Hood .....	BT-5
Horn .....	EL-130
HORN - Wiring diagram .....	EL-130
How to erase DTC for OBD system .....	EC-55
HSEAT - Wiring diagram .....	EL-161
Hydraulic lash adjuster inspection .....	EM-35

## I

IACV-AAC valve .....	EC-336
IACV-FICD solenoid valve .....	EC-467
IATS - Wiring diagram .....	EC-143
Identification plate .....	GI-39
Idle air control valve (IACV) .....	EC-336
Idle mixture ratio .....	EC-35

Idle speed .....	EC-35
IGN/SG - Wiring diagram .....	EC-369
Ignition timing .....	EC-35
Ignition wire inspection .....	EC-271
ILL - Wiring diagram .....	EL-67
Illumination .....	EL-64
In vehicle sensor .....	HA-89
INFINITI COMMUNICATOR .....	EL-273
Infiniti communicator (IVCS) .....	EL-273
INJECT - Wiring diagram .....	EC-449
Injector .....	EC-453
Injector removal and installation .....	EC-32
Instrument panel .....	BT-13
INT/L - Wiring diagram .....	EL-74
Intake air temperature sensor .....	EC-140
Intake door control linkage adjustment .....	HA-62
Intake door motor .....	HA-58
Intake sensor .....	HA-94
Integrated homelink transmitter .....	EL-255
Interior .....	BT-17
Interior lamp .....	EL-71
Interior lamp on-off control .....	EL-72
Internal gear (Transfer) .....	TF-110
IVCS - Wiring diagram .....	EL-284
IVIS (Infiniti vehicle immobiliser system) .....	EL-258
IVIS (Infiniti vehicle immobiliser system) precautions .....	GI-2

## J

Jacking points .....	GI-42
Journal bearing assembly (propeller shaft) .....	PD-6
Journal bearing disassembly (propeller shaft) .....	PD-6
Junction box (J/B) .....	Foldout

## K

Keyless entry system - See Multi-re-mote control system .....	EL-206
Knock sensor (KS) .....	EC-272
Knuckle spindle .....	AX-9
KS - Wiring diagram .....	EC-274

## L

Length (Dimensions) .....	GI-40
License lamp .....	EL-45
Lifting points .....	GI-44
Limited slip diff. adjustment .....	PD-44
Limited slip diff. assembly .....	PD-45
Limited slip diff. disassembly .....	PD-42
Limited slip diff. inspection .....	PD-43
Line pressure solenoid valve .....	AT-131, 143, 148
Line pressure switch (Transfer) .....	TF-87

# ALPHABETICAL INDEX

Line pressure test (A/T) .....	AT-58
Liquid gasket application .....	EM-2
Location of electrical units .....	EL-310
Lock, door.....	BT-11
Low and reverse brake .....	AT-275
LSV (Load sensing valve) .....	BR-10
Lubricant (R134a) A/C.....	HA-99
Lubricants .....	MA-11
Lubrication circuit (engine) .....	LC-3
Lubrication-locks, hinges and hood latches .....	MA-27
Luggage room lamp.....	EL-71

## M

MAFS - Wiring diagram.....	EC-127
Magnet clutch.....	HA-69, 102
MAIN - Wiring diagram.....	EC-116
Main oil pump (Transfer).....	TF-107
Mainshaft (Transfer).....	TF-101
Maintenance (engine) .....	MA-13
MAJOR OVERHALL.....	AT-233
Major overhaul (Transfer) .....	TF-96
Malfunction indicator lamp (MIL).....	EC-57
MAP/BARO switch solenoid valve .....	EC-355
Mass air flow sensor (MAFS).....	EC-122
Master cylinder (brake) .....	BR-14
Meter.....	EL-78
METER - Wiring diagram.....	EL-82
MIL & Data link connectors circuit .....	EC-472
MIL/DL - Wiring diagram .....	EC-472
MIRROR - Wiring diagram.....	EL-156
Mirror defogger .....	EL-133
Mirror, door.....	BT-45
Mirror, out side.....	BT-45
Misfire .....	EC-267
Mode door control linkage adjustment.....	HA-53
Mode door motor.....	HA-49
Model variation .....	GI-38
Molding - See Exterior.....	BT-23
MULTI - Wiring diagram.....	EL-210
Multi-remote control system.....	EL-206
Multiport fuel injection (MFI) system .....	EC-20
Multiport fuel injection precautions.....	GI-5

## N

NATS (Nissan anti-theft system) precautions .....	GI-2
NATS - Wiring diagram.....	EL-260
Neutral-4LO switch .....	TF-88
NVH troubleshooting (AX).....	AX-3, 17
NVH troubleshooting (BR).....	BR-5
NVH troubleshooting (PD).....	PD-2
NVH troubleshooting (ST).....	ST-5
NVH troubleshooting (SU) .....	SU-3, 13

## O

Oil change (capacity) .....	MA-11
Oil filter (Transfer).....	TF-94
Oil pan (engine) .....	EM-14
Oil pressure (engine) .....	LC-3
Oil pump (A/T).....	AT-248
Oil pump (engine) .....	LC-4
Oil pump regulator valve (engine) .....	LC-5
Oil seal replacement (engine).....	EM-24
Oil seal replacement (front final drive 4WD).....	PD-10
Oil seal replacement (front of final drive).....	PD-34
On board diagnostic system .....	EC-44
Out side mirror.....	BT-45
Overdrive control switch.....	AT-217
Overrun clutch.....	AT-271
Overrun clutch solenoid valve.....	AT-170
Oversize piston .....	EM-49

## P

P/ANT - Wiring diagram.....	EL-150
Park/Neutral position switch .....	EC-443
Park/neutral position switch (A/T) .....	AT-91, 218
Parking brake control .....	BR-28
Parking lamp.....	EL-45
PCV (positive crankcase ventilation) .....	EC-30
PGC/V - Wiring diagram .....	EC-314, 406
Pilot bushing replacement - See Pilot converter.....	EM-55
Pinion bearing preload diff. ....	PD-20
Pinion gear height diff. ....	PD-20, 47
Piston assembly.....	EM-53
Piston pin inspection.....	EM-46
Piston ring inspection.....	EM-47
Piston to bore clearance.....	EM-48
Planetary carrier (Transfer) .....	TF-110
PNP/SW - Wiring diagram .....	EC-446
POWER - Wiring diagram.....	EL-8
Power antenna.....	EL-149
Power door lock.....	EL-191
Power door mirror.....	EL-156
Power seat.....	EL-159
Power steering fluid level.....	MA-27, ST-7
Power steering gear.....	ST-16
Power steering hydraulic pressure .....	ST-9
Power steering oil pressure switch .....	EC-463
Power steering oil pump.....	ST-26
Power steering system bleeding.....	ST-8
Power supply routing .....	EL-7
Power transistor & ignition coil.....	EC-367
Power window.....	EL-183
PRE/SE - Wiring diagram .....	EC-326
Precautions (General) .....	GI-3
Pressure test (A/T).....	AT-58
Propeller shaft .....	PD-2

# ALPHABETICAL INDEX

Propeller shaft greasing.....	MA-23
Propeller shaft inspection .....	MA-23
Propeller shaft on vehicle service .....	PD-4
Propeller shaft vibration .....	PD-4
PST/SW - Wiring diagram.....	EC-464

R

Rack retainer adjustment.....	ST-7
Radiator .....	LC-12
Radio - See Audio.....	EL-141
Rear air spoiler .....	BT-23
Rear axle .....	AX-16
Rear bumper.....	BT-8
Rear case (Transfer).....	TF-99
Rear combination lamp removal and installation .....	BT-23
Rear cover packing replacement diff.....	PD-11
Rear door .....	BT-12
Rear drum brake .....	BR-24
Rear heated oxygen sensor (HO2S) .....	EC-210, 218, 226, 235
Rear heated oxygen sensor (HO2S) heater.....	EC-243
Rear seat .....	BT-33
Rear seat belt.....	RS-4
Rear side window .....	BT-44
Rear suspension .....	SU-13
Rear washer.....	EL-122
Rear window defogger.....	EL-133
Rear wiper.....	EL-122
Refrigerant connection precaution .....	HA-3
Refrigerant discharging evacuating charging .....	HA-97
Refrigerant general precaution.....	HA-3
Refrigerant lines .....	HA-106
Refrigeration cycle.....	HA-13
Removal and installation (A/T).....	AT-230
Removal and installation (Transfer).....	TF-95
Reverse clutch.....	AT-265
Revolution sensor (A/T) .....	AT-101
Ring gear diff. inspection .....	PD-18, 41
RO2H-L - Wiring diagram.....	EC-246
RO2H-R - Wiring diagram.....	EC-245
Road wheel size .....	GI-41
Roof trim .....	BT-21
Room lamp - See Interior lamp .....	EL-71
RRO2LH - Wiring diagram.....	EC-214, 222, 230, 238
RRO2RH - Wiring diagram.....	EC-213, 221, 229, 237

S

SAE J1930 terminology list .....	GI-47
Screw jack .....	GI-42
Seal - See Exterior .....	BT-23
SEAT - Wiring diagram .....	EL-159
Seat belt inspection .....	MA-28, RS-6
Seat belt pre-tensioner.....	RS-2

Seat belt pre-tensioner disposal .....	RS-22
Seat belt, front.....	RS-3
Seat belt, rear.....	RS-4
Seat, front .....	BT-30
Seat, rear .....	BT-33
Self-diagnosis (Transfer).....	TF-26
Self-diagnostic results .....	EC-58
SHIFT - Wiring diagram .....	AT-221
Shift lock system .....	AT-220
Shift schedule.....	AT-307
Shift solenoid valve A (A/T).....	AT-111, 122, 131, 153
Shift solenoid valve B (A/T).....	AT-111, 116, 131, 158
Shock absorber (rear) .....	SU-17
Side air bag .....	RS-20
Side bearing preload (front final drive 4WD).....	PD-19
Side trim .....	BT-17
Side window - See Rear side window.....	BT-44
Smart entrance control unit .....	EL-250
SMJ (super multiple junction).....	Foldout
Spare tire size .....	GI-41
Spark plug replacement.....	MA-19
Speedometer.....	EL-78
Spot lamp.....	EL-71
Spring (Wheelarch) height .....	SU-5
SROOF - Wiring diagram .....	EL-154
SRS - See Supplemental Restraint System.....	RS-9
SRS - Wiring diagram .....	RS-34
S/SIG - Wiring diagram .....	EC-455
Stabilizer bar (front).....	SU-10
Stabilizer bar (rear) .....	SU-19
Stall test (A/T) .....	AT-55
Standardized relay .....	EL-5
START - Wiring diagram .....	SC-7
Starter .....	SC-8
Starting system.....	SC-6
Starting torque offset adjustment.....	TF-39
Steering gear, linkage and transfer gear inspection .....	MA-26
Steering linkage .....	ST-16
Steering switch.....	EL-22
Steering transfer gear .....	ST-14
Steering wheel and column .....	ST-10
Steering wheel play .....	ST-6
Steering wheel turning force.....	ST-8
Stop lamp.....	EL-51
STOP/L - Wiring diagram.....	EL-51
Strut (front) .....	SU-8
Sub-oil pump (Transfer).....	TF-107
Sun gear (Transfer).....	TF-110
Sun roof, electric.....	EL-153
Sunload sensor .....	HA-91
Sunroof.....	BT-34
Supplemental Restraint System.....	RS-9
Supplemental restraint system - Wiring diagram.....	RS-34
SW/V - Wiring diagram .....	EC-359
Symbols and abbreviations .....	GI-8
Symptom matrix chart .....	EC-97

GI

MA

EM

LC

EC

FE

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

EL

IDX

# ALPHABETICAL INDEX

System readiness test (SRT) code .....EC-46

## T

2-4WD shift solenoid valve .....TF-87  
 Tachometer .....EL-78  
 Tail lamp .....EL-45  
 TAIL/L - Wiring diagram .....EL-47  
 Tank fuel temperature sensor .....EC-263  
 TCM circuit diagram .....AT-11  
 TCM inspection table .....AT-81  
 TFTS - Wiring diagram .....EC-265  
 THEFT - Wiring diagram .....EL-232  
 Theft warning system .....EL-226  
 Thermometer .....EL-92  
 Thermostat .....LC-10  
 Three way catalyst function (Left bank) .....EC-301  
 Three way catalyst function (Right bank) .....EC-301  
 Three way catalyst precautions .....GI-5  
 Throttle position sensor (TPS) .....EC-151  
 Throttle position sensor adjustment .....EC-86  
 Throttle position switch .....EC-343, AT-166, 218  
 Tie-rod .....ST-20  
 Tie-rod ball joints .....ST-20  
 Tightening torque of standard bolts .....GI-46  
 Timing belt .....EM-17  
 Tire rotation .....MA-24  
 Tire size .....GI-41  
 TLID - Wiring diagram .....EL-157  
 Tooth contact (front final drive 4WD) .....PD-24  
 Tooth contact diff. ....PD-50  
 Torque converter installation .....AT-231  
 Torque convertor clutch solenoid valve .....AT-135, 143  
 Tow truck towing .....GI-44  
 Towing point .....GI-45  
 TP/SW - Wiring diagram .....EC-345  
 TPS - Wiring diagram .....EC-157  
 Transfer control unit inspection table .....TF-50  
 Transfer dropping resistor .....TF-88  
 Transfer fluid replacement .....MA-22  
 Transfer fluid temperature sensor .....TF-87  
 Transfer motor .....TF-93  
 Transfer motor relay .....TF-89  
 Transfer serial number .....GI-40  
 TRANSMT - Wiring diagram .....EL-255  
 Tread-FR&RR (Dimensions) .....GI-40  
 Trim .....BT-17  
 Trouble diagnoses .....GI-31  
 Trunk lid opener, electric .....EL-157  
 TURN - Wiring diagram .....EL-61  
 Turn signal lamp .....EL-59  
 Two trip detection logic .....EC-44  
 Two-pole lift .....GI-44

## U

Under body .....BT-49

## V

Vacuum cut valve .....EC-24, 439  
 Vacuum cut valve bypass valve .....EC-24, 428, 433  
 Vacuum hose (brake system) .....BR-19  
 Vacuum hose drawing (Engine control) .....EC-18  
 Valve clearance .....EM-58  
 Valve guide .....EM-32  
 Valve seat .....EM-33  
 Valve spring .....EM-34  
 Vehicle identification number .....GI-39  
 Vehicle recovery (freeing a stuck vehicle) .....GI-45  
 Vehicle speed sensor (VSS) .....EC-331  
 VENT/V - Wiring diagram .....EC-319, 412, 424  
 Ventilation air filter .....HA-110  
 Viscosity number (SAE) .....MA-12  
 VSS - Wiring diagram .....EC-334

## W

Wait detection switch .....TF-88  
 WARN - Wiring diagram .....EL-97  
 Warning chime .....EL-104  
 Warning lamps .....EL-96  
 Washer, front .....EL-113  
 Washer, rear .....EL-122  
 Water pump .....LC-9  
 Water temperature gauge .....EL-78  
 Weatherstrip - See Exterior .....BT-23  
 Wheel balance .....MA-24  
 Wheel bearing (front) .....AX-4  
 Wheel bearing (rear) .....AX-17  
 Wheel hub (front) .....AX-6  
 Wheel sensors (ABS) .....BR-53, 71  
 Wheel size .....GI-41  
 Wheelarch height .....SU-5  
 Wheelbase (Dimensions) .....GI-40  
 Wide open & closed throttle position switch .....EC-151  
 Width (Dimensions) .....GI-40  
 WINDOW - Wiring diagram .....EL-186  
 Window, door .....BT-11  
 Window, rear side .....BT-44  
 Window, side - See Rear side window .....BT-44  
 Windshield .....BT-42  
 WIP/R - Wiring diagram .....EL-125  
 WIPER - Wiring diagram .....EL-115  
 Wiper, front .....EL-113  
 Wiper, rear .....EL-122  
 Wiring Diagram (Cell code) list .....EL-331  
 Wiring diagram (Transfer) .....TF-17  
 Wiring diagrams .....GI-9



# ALPHABETICAL INDEX

---

Wrist pin - See Piston pin inspection.....EM-46

GI

MA

EM

LC

EC

FE

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

**IDX**