

ALPHABETICAL INDEX

SECTION **IDX****A B C D E F G H I J K L M**

GI

MA

EM

LC

EC

FE

N O P Q R S T U V W X Y Z

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

A

AAC/V - Wiring diagram	EC-417
ABS - Wiring diagram	BR-36
ABS sensor rotor	AX-6, 19
Absolute pressure sensor	EC-156
A/C air flow	HA-26
A/C component layout	HA-20
A/C compressor clutch removal and installation	HA-116
A/C compressor precaution	HA-6
A/C compressor special service tool	HA-9
A/C control operation (auto A/C)	HA-24
A/C diagnostic work flow (auto A/C)	HA-47
A/C HFC134a (R134a) system precaution	HA-2
A/C HFC134a (R134a) system service procedure	HA-110
A/C HFC134a (R134a) system service tools	HA-10
A/C HFC134a system service equip- ment precaution	HA-6
A/C lubricant (R134a)	HA-112
A/C operational check	HA-48
A/C performance chart	HA-87
A/C performance test diagnoses	HA-85
A/C relay	HA-83
A/C self-diagnoses (auto A/C)	HA-37
A/C service data specification	HA-125
A/C system description (auto A/C)	HA-24
A/C trouble diagnoses (auto A/C)	HA-28
A/C, A - Wiring diagram	HA-31
Accelerator control system	FE-3
Accelerator wire adjustment	FE-3
Actuator lever (Transfer)	TF-118
Air bag	RS-11
Air bag disposal	RS-24
Air bag precautions	GI-3
Air bleeding for brake system	BR-8
Air cleaner filter replacement	MA-17
Air conditioner cut control	EC-29
Air flow meter - See Mass air flow sensor	EC-146
Air mix door control linkage adjustment	HA-61
Air mix. door motor	HA-59, 109
Air spoiler, rear	BT-31
All - mode 4WD system	TF-10
Alternator	SC-12
Ambient sensor	HA-96
Angular tightening application	EM-3
Antenna - See Power antenna	EL-157
Anti-lock brake system - Wiring diagram	BR-36
AP/SEN - Wiring diagram	EC-159
ASCD (automatic speed control device)	EL-170
ASCD - Wiring diagram	EL-174
A/T - Wiring diagram - AT - FTS	AT-107
A/T - Wiring diagram - AT - MAIN	AT-96
A/T - Wiring diagram - AT - PNP/SW	AT-101

A/T - Wiring diagram - AT - VSS A/T	AT-112
A/T control	EC-428
A/T diagnosis communication line	EC-537
A/T fluid temperature sensor	AT-109
A/T self-diagnoses	AT-46
A/T shift lock system	AT-252
A/T shift lock system - Wiring diagram	AT-253
A/T trouble diagnoses	AT-53
A/T Wiring diagram - AT - ENG SS	AT-116
A/T Wiring diagram AT - 1ST	AT-122
A/T Wiring diagram AT - 2ND	AT-128
A/T Wiring diagram AT - 3RD	AT-134
A/T Wiring diagram AT - 4TH	AT-141
A/T Wiring diagram AT - BA/FTS	AT-191
A/T Wiring diagram AT - LPSV	AT-163
A/T Wiring diagram AT - NONDTC	AT-203
A/T Wiring diagram AT - OVRCCSV	AT-186
A/T Wiring diagram AT - SSV/A	AT-168
A/T Wiring diagram AT - SSV/B	AT-172
A/T Wiring diagram AT - TCCSIG	AT-155
A/T Wiring diagram AT - TCV	AT-149
A/T Wiring diagram AT - TPS	AT-178
A/T Wiring diagram AT - VSSMTR	AT-197
AT/C - Wiring diagram	EC-430
ATDIAG - Wiring diagram	EC-539
ATP switch	TF-110
ATP warning lamp	TF-101
Audio	EL-149
AUDIO - Wiring diagram	EL-151
Audio and A/C control removal and installation - See Instrument panel	BT-20
Auto air conditioner - Wiring diagram	HA-31
Automatic amplifier	HA-35, 51
Automatic speed control system - See ASCD	EL-170
Automatic transmission fluid replacement	MA-21
Automatic transmission number	GI-42
Auxiliary air control (AAC) valve	EC-413
Axle housing (rear)	AX-19

B

Back door	BT-15
Back door opener - See Back door	BT-15
Back door trim	BT-30
Back-up lamp	EL-55
BACK/L - Wiring diagram	EL-55
Ball joint (front)	SU-12
Basic inspection	EC-99
Battery	SC-3
Block heater	EM-46
Blower motor	HA-70
Body alignment	BT-54
BPT valve	EC-355, 359
Brake booster	BR-18
Brake fluid change	BR-7
Brake fluid level	MA-25
Brake fluid level and line check	BR-7
Brake hydraulic line	BR-9

ALPHABETICAL INDEX



Brake inspection	MA-25
Brake lines and cables inspection	MA-25
Brake lining wear temporary checking	MA-26
Brake master cylinder	BR-15
Brake pedal	BR-13
Bulb specifications	EL-360
Bumper, front	BT-12
Bumper, rear	BT-15
BYPS/V - Wiring diagram	EC-524, 532

C

Camshaft inspection	EM-31
Camshaft position sensor (CMPS).....	EC-336
Canister-See EVAP canister	EC-30
Center case (Transfer).....	TF-121
CHARGE - Wiring diagram	SC-10
Charging system	SC-9
Chassis and body maintenance	MA-21
CHIME - Wiring diagram	EL-110
CIGAR - Wiring diagram	EL-138
Cigarette lighter.....	EL-138
Circuit breaker.....	EL-16
CKPS - Wiring diagram.....	EC-332, 460
Closed loop control (Left bank).....	EC-449
Closed loop control (Right bank)	EC-449
Closed throttle position switch	EC-421
Clutch drum (Transfer).....	TF-123
Clutch force release limit adjustment	TF-39
Clutch pressure switch (Transfer).....	TF-109
CMPS - Wiring diagram	EC-339
Coil spring (front).....	SU-8
Coil spring (rear)	SU-19
Collision diagnosis.....	RS-64
Combination lamp, front, removal and installation	BT-12
Combination lamp, rear, removal and installation	BT-31
Combination meter.....	EL-80
Combination meter removal and instal- lation - See Instrument panel.....	BT-20
Combination switch	EL-22
COMPAS - Wiring diagram	EL-97
Compass	EL-96
Component Location (auto A/C).....	HA-28
Compression pressure	EM-13
Compressor clutch removal and installation	HA-116
Compressor precaution	HA-6
Compressor special service tool	HA-9
Connecting rod.....	EM-48
Connecting rod bearing clearance	EM-53
Connecting rod bushing clearance	EM-54
Connector inspection	GI-20
Console box - See Instrument panel	BT-20
CONSULT for ABS	BR-42
CONSULT for all-mode 4WD	TF-30
CONSULT for engine	EC-80
CONSULT-II general information.....	GI-37
Control valve (A/T)	AT-284

Control valve (Transfer)	TF-126
Converter housing installation.....	AT-263
Coolant mixture ratio.....	MA-12
Coolant replacement.....	MA-14
Cooling circuit (engine).....	LC-8
Crank angle sensor built into distributor - See Camshaft position sensor	EC-336
"Crankcase emission control system - See positive crankcase ventilation".....	EC-36
Crankshaft	EM-51
Crankshaft position sensor (OBD)	EC-330
Crankshaft position sensor (OBD) cog chipping	EC-458
Cruise control - See ASCD	EL-170
Cylinder block	EM-45
Cylinder block boring	EM-51
Cylinder head	EM-27
Cylinder head bolt tightening	EM-39

D

Data link connector for Consult.....	EC-80
Daytime light system.....	EL-36
Daytime running light - See Daytime light system	EL-36
DEF - Wiring diagram	EL-142
Detonation sensor - See Knock sensor	EC-324
Diagnostic trouble code (DTC) for OBD system	EC-8, 55
Diagnostic trouble code (DTC) inspec- tion priority chart	EC-116
Differential carrier assembly.....	PD-27, 54
Differential carrier disassembly	PD-41
Differential gear oil replacement	MA-24
Dimensions	GI-42
Distributor	EC-28
Distributor ignition (DI) system	EC-28
D/LOCK - Wiring diagram	EL-204
Dome light - See Interior lamp	EL-73
Door glass	BT-18
Door lock	BT-18
Door mirror	BT-53
Door trim	BT-26
Door, front	BT-18
Door, rear	BT-19
Drive belt inspection	MA-13
Drive chain (Transfer)	TF-123
Drive pinion diff. inspection	PD-20, 44
Drive pinion height	PD-22, 50
Drive plate runout	EM-54
Drive shaft (front).....	AX-10
Dropping resistor (A/T)	AT-166
DTC work support	EC-89
DTRL - Wiring diagram	EL-40
Dual pressure switch	HA-83

E

ECM input/output signal	EC-127
ECTS - Wiring diagram	EC-177, 196
EGR control (EGRC) - BPT valve	EC-355
EGR control (EGRC) - solenoid valve	EC-464
EGR control valve	EC-344, 354, 475, 482
EGR temperature sensor	EC-469
EGR/TS - Wiring diagram	EC-472
EGRC/V - Wiring diagram	EC-466
EGRC1 - Wiring diagram	EC-348, 478
Electric sun roof	EL-161
Electrical diagnoses	GI-23
Electrical ignition system	EC-28
Electrical unit	Foldout
Electrical units location	EL-341
Engine compartment	BT-55
Engine control circuit diagram	EC-22
Engine control component parts location	EC-20
Engine control module (ECM)	EC-433
Engine control system diagram and chart	EC-23
Engine coolant temperature sensor (ECTS)	EC-175, 194
Engine fail-safe system	EC-117
Engine oil filter replacement	MA-18
Engine oil precautions	GI-7
Engine oil replacement	MA-17
Engine outer component parts	EM-10
Engine removal	EM-42
Engine room - See Engine compartment	BT-55
Engine serial number	GI-42
EVAP canister	EC-31
EVAP canister purge volume control solenoid valve	EC-30, 374, 493
EVAP canister vent control valve	EC-381, 501, 515
EVAP control system (small leak) diagnosis	EC-364, 398, 483
EVAP control system pressure sensor	EC-388
EVAP control system purge flow moni- toring diagnosis	EC-507
EVAP vapor lines inspection	MA-20
Evaporative emission (EVAP) system	EC-30
Exhaust gas recirculation (EGR) valve	EC-344, 475
Exhaust system	FE-8
Exhaust system inspection	MA-21
Exterior	BT-31

F

4LO indicator lamp	TF-103
4WD shift indicator lamp	TF-97
4WD shift switch	TF-109
4WD solenoid valve	TF-109

4WD warning lamp	TF-13
Fan control amp.	HA-72
Fast idle cam (FIC) inspection and adjustment	EC-39
F/FOG - Wiring diagram	EL-58
FICD - Wiring diagram	EC-577
Final drive disassembly	PD-40
Final drive pre-inspection	PD-40
Final drive removal and installation	PD-40
Finisher, interior - See Trim	BT-24
F/LID - Wiring diagram	EL-166
Fluid temperature sensor (A/T)	AT-109
Fluids	MA-11
FO2H-L - Wiring diagram	EC-247
FO2H-R - Wiring diagram	EC-246
Fog lamp, front	EL-56
Fog lamp, front, removal and installation	BT-12
Forward clutch	AT-303
F/PUMP - Wiring diagram	EC-565
Freeze frame data	EC-56
FRO2LH - Wiring diagram	EC-204, 228, 239
FRO2RH - Wiring diagram	EC-203, 227, 238
Front axle	AX-2
Front bumper	BT-12
Front case (Transfer)	TF-131
Front combination lamp removal and installation	BT-12
Front disc brake	BR-21
Front door	BT-18
Front drive shaft (Transfer)	TF-123
Front final drive disassembly (4WD)	PD-15
Front final drive pre-inspection (4WD)	PD-15
Front final drive removal and installa- tion (4WD)	PD-15
Front fog lamp	EL-56
Front fog lamp removal and installation	BT-12
Front heated oxygen sensor (HO2S) (Left bank)	EC-200, 209, 216, 224, 235
Front heated oxygen sensor (HO2S) (Right bank)	EC-200, 209, 216, 224, 235
Front heated oxygen sensor heater (Left bank)	EC-244
Front heated oxygen sensor heater (Right bank)	EC-244
Front oxygen sensor (O2S) monitor	EC-71
Front revolution sensor (Transfer)	TF-110
Front seat	BT-38
Front seat belt	RS-5
Front suspension	SU-2
Front washer	EL-119
Front wiper	EL-119
Fuel cut control (at no load & high engine speed)	EC-30
Fuel filler lid	BT-15
Fuel filter replacement	MA-16
Fuel gauge	EL-80
Fuel injection system (Left bank)	EC-294, 303
Fuel injection system (Right bank)	EC-294, 303
Fuel lid opener, electric	EL-166
Fuel line inspection	MA-16

ALPHABETICAL INDEX



Fuel precautions	GI-8
Fuel pressure check	EC-37
Fuel pressure regulator	EC-38
Fuel pressure release	EC-37
Fuel pump	EC-563
Fuel system	FE-4
Fuel tank temperature sensor	EC-311
Fuel tank vacuum relief valve	EC-31
FUELLH - Wiring diagram.....	EC-297, 306
FUELRH - Wiring diagram	EC-296, 305
Fuse	EL-16
Fuse block	Foldout
Fusible link	EL-16

G

Garage jack and safety stand	GI-45
Gauges.....	EL-80
Generator - See Alternator	SC-12
Generic scan tool (GST)	EC-93
Glass	BT-18
Glass hatch opener, electric	EL-165
Grease.....	MA-11
Ground distribution.....	EL-17

H

Harness connector	EL-5
Harness connector inspection	GI-20
Harness layout	EL-344
Hazard warning lamp	EL-61
Headlamp	EL-25
Headlining - See Roof trim	BT-28
Heated seat.....	BT-40, EL-169
Height (Dimensions)	GI-42
HFC134a (R134a) system precaution	HA-2
HFC134a (R134a) system service procedure	HA-110
HFC134a (R134a) system service tools	HA-10
HFC134a system service equipment precaution	HA-6
High clutch.....	AT-301
H/LAMP - Wiring diagram	EL-29
Hood.....	BT-12
Horn	EL-137
HORN - Wiring diagram.....	EL-137
How to erase DTC for OBD system.....	EC-68
HSEAT - Wiring diagram.....	EL-169
Hydraulic lash adjuster inspection	EM-36

I

IACV-AAC valve	EC-413
IACV-FICD solenoid valve.....	EC-576
IATS - Wiring diagram.....	EC-171
Identification plate.....	GI-41
Idle air control valve (IACV)	EC-413

Idle mixture ratio.....	EC-41
Idle speed.....	EC-41
IGN/SG - Wiring diagram	EC-453
Ignition timing	EC-41
Ignition wire inspection	EC-323
ILL - Wiring diagram	EL-69
Illumination	EL-66
In vehicle sensor	HA-100
INFINITI COMMUNICATOR.....	EL-304
Infiniti communicator (IVCS)	EL-304
INJECT - Wiring diagram	EC-550
Injector	EC-556
Injector removal and installation	EC-38
Instrument panel	BT-20
INT/L - Wiring diagram.....	EL-76
Intake air temparature sensor	EC-168
Intake door control linkage adjustment	HA-69
Intake door motor	HA-63
Intake sensor.....	HA-107
Integrated homelink transmitter	EL-281
Interior	BT-24
Interior lamp	EL-73
Interior lamp on-off control.....	EL-74
Internal gear (Transfer)	TF-132
IVCS - Wiring diagram.....	EL-315
IVIS (Infiniti vehicle immobilizer system)	EL-284
IVIS (Infiniti vehicle immobilizer sys- tem) precautions	GI-3

J

Jacking points	GI-44
Journal bearing assembly (propeller shaft)	PD-7
Journal bearing disassembly (propeller shaft)	PD-7
Junction box (J/B)	Foldout

K

Keyless entry system - See Multi-re- mote control system.....	EL-222
Knock sensor (KS)	EC-324
Knuckle spindle	AX-9
KS - Wiring diagram.....	EC-326

L

Length (Dimensions)	GI-42
License lamp	EL-47
Lifting points	GI-46
Limited slip diff. adjustment.....	PD-47
Limited slip diff. assembly	PD-48
Limited slip diff. disassembly.....	PD-45
Limited slip diff. inspection	PD-46
Line pressure solenoid valve.....	AT-146, 160, 165

ALPHABETICAL INDEX



Line pressure switch (Transfer)	TF-109
Line pressure test (A/T)	AT-62
Liquid gasket application	EM-3
Location of electrical units	EL-341
Lock, door	BT-18
Low and reverse brake	AT-307
LSV (Load sensing valve)	BR-11
Lubricant (R134a) A/C	HA-112
Lubricants	MA-11
Lubrication circuit (engine)	LC-3
Lubrication-locks, hinges and hood latches	MA-27
Luggage room lamp	EL-73

M

MAFS - Wiring diagram.....	EC-151
Magnet clutch	HA-78, 116
MAIN - Wiring diagram.....	EC-137
Main oil pump (Transfer).....	TF-129
Mainshaft (Transfer).....	TF-123
Maintenance (engine)	MA-13
MAJOR OVERHALL.....	AT-265
Major overhaul (Transfer).....	TF-118
Malfunction indicator lamp (MIL)	EC-70
MAP/BARO switch solenoid valve	EC-435
Mass air flow sensor (MAFS).....	EC-146
Master cylinder (brake)	BR-15
Meter	EL-80
METER - Wiring diagram.....	EL-84
MIL & Data link connectors circuit	EC-582
MIL/DL - Wiring diagram	EC-582
MIRROR - Wiring diagram.....	EL-164
Mirror defogger	EL-140
Mirror, door.....	BT-53
Mirror, out side	BT-53
Misfire	EC-317
Mode door control linkage adjustment.....	HA-58
Mode door motor	HA-53
Model variation	GI-40
Molding - See Exterior	BT-31
MULTI - Wiring diagram.....	EL-226
Multi-remote control system.....	EL-222
Multiport fuel injection (MFI) system	EC-26
Multiport fuel injection precautions.....	GI-6

N

NATS (Nissan anti-theft system) precautions	GI-3
NATS - Wiring diagram.....	EL-286
Neutral-4LO switch.....	TF-110
NVH troubleshooting (AX).....	AX-3, 18
NVH troubleshooting (BR).....	BR-6
NVH troubleshooting (PD).....	PD-3
NVH troubleshooting (ST).....	ST-5
NVH troubleshooting (SU)	SU-3, 15

O

Oil change (capacity)	MA-11
Oil filter (Transfer)	TF-116
Oil pan (engine)	EM-15
Oil pressure (engine)	LC-3
Oil pump (A/T)	AT-280
Oil pump (engine)	LC-4
Oil pump regulator valve (engine)	LC-5
Oil seal replacement (engine).....	EM-25
Oil seal replacement (front final drive 4WD).....	PD-12

Oil seal replacement (front of final drive)	PD-37
On board diagnostic system	EC-54
Out side mirror	BT-53
Overdrive control switch.....	AT-250
OVERRUN clutch	AT-303
OVERRUN clutch solenoid valve.....	AT-188
Oversize piston	EM-50

P

P/ANT - Wiring diagram.....	EL-158
Park/Neutral position switch	EC-542
Park/neutral position switch (A/T)	AT-104, 250
Parking brake control	BR-29
Parking lamp	EL-47
PCV (positive crankcase ventilation)	EC-36
PGC/V - Wiring diagram	EC-377, 496
Pilot bushing replacement - See Pilot converter.....	EM-57
Pinion bearing preload diff	PD-22
Pinion gear height diff.	PD-22, 50
Piston assembly	EM-55
Piston pin inspection	EM-47
Piston ring inspection	EM-48
Piston to bore clearance	EM-49
Planetary carrier (Transfer)	TF-132
PNP/SW - Wiring diagram	EC-545
POWER - Wiring diagram.....	EL-10
Power antenna	EL-157
Power door lock	EL-202
Power door mirror	EL-164
Power seat	EL-167
Power steering fluid level	MA-27, ST-7
Power steering gear	ST-16
Power steering hydraulic pressure	ST-9
Power steering oil pressure switch	EC-570
Power steering oil pump	ST-26
Power steering system bleeding	ST-8
Power supply routing	EL-9
Power transistor & ignition coil	EC-451
Power window	EL-194
PRE/SE - Wiring diagram	EC-391
Precautions (General)	GI-4
Pressure test (A/T)	AT-62
Propeller shaft	PD-3

ALPHABETICAL INDEX

Propeller shaft greasing	MA-23
Propeller shaft inspection	MA-23
Propeller shaft on vehicle service	PD-5
Propeller shaft vibration	PD-5
PST/SW - Wiring diagram.....	EC-571

R

Rack retainer adjustment.....	ST-7
Radiator	LC-12
Radio - See Audio.....	EL-149
Rear air spoiler	BT-31
Rear axle	AX-17
Rear bumper	BT-15
Rear case (Transfer).....	TF-121
Rear combination lamp removal and installation	BT-31
Rear cover packing replacement diff.	PD-13
Rear door	BT-19
Rear drum brake	BR-25
Rear heated oxygen sensor (HO2S)	EC-251, 260, 269, 278
Rear heated oxygen sensor (HO2S) heater.....	EC-287
Rear seat	BT-41
Rear seat belt.....	RS-6
Rear side window	BT-52
Rear suspension	SU-15
Rear washer.....	EL-129
Rear window defogger	EL-140
Rear wiper.....	EL-129
Refrigerant connection precaution	HA-3
Refrigerant discharging evacuating charging	HA-110
Refrigerant general precaution.....	HA-3
Refrigerant lines	HA-120
Refrigeration cycle.....	HA-13
Removal and installation (A/T).....	AT-262
Removal and installation (Transfer)	TF-117
Reverse clutch.....	AT-297
Revolution sensor (A/T).....	AT-114
Ring gear diff. inspection	PD-20, 44
RO2H-L - Wiring diagram.....	EC-290
RO2H-R - Wiring diagram.....	EC-289
Road wheel size	GI-43
Roof trim	BT-28
Room lamp - See Interior lamp	EL-73
RRO2LH - Wiring diagram...EC-255, 264, 273, 282	
RRO2RH - Wiring diagram..EC-254, 263, 272, 281	

S

SAE J1930 terminology list	GI-49
Screw jack	GI-44
Seal - See Exterior	BT-31
SEAT - Wiring diagram	EL-167
Seat belt inspection	MA-28, RS-8
Seat belt pre-tensioner	RS-3

Seat belt pre-tensioner disposal	RS-24
Seat belt, front	RS-5
Seat belt, rear.....	RS-6
Seat, front	BT-38
Seat, rear	BT-41
Self-diagnosis (Transfer)	TF-27
Self-diagnostic results	EC-71
SHIFT - Wiring diagram	AT-253
Shift lock system	AT-252
Shift schedule.....	AT-339
Shift solenoid valve A (A/T) ..	AT-124, 136, 146, 170
Shift solenoid valve B (A/T)..	AT-124, 130, 146, 174
Shock absorber (rear)	SU-19
Side air bag	RS-22
Side bearing preload (front final drive 4WD).....	PD-21
Side trim	BT-24
Side window - See Rear side window	BT-52
Smart entrance control unit	EL-276
SMJ (super multiple junction)	Foldout
Spare tire size	GI-43
Spark plug replacement	MA-19
Speedometer.....	EL-80
Spiral cable.....	RS-18
Spot lamp.....	EL-73
Spring (Wheelarch) height	SU-5
SROOF - Wiring diagram	EL-162
SRS - See Supplemental Restraint System	RS-11
SRS - Wiring diagram	RS-36
S/SIG - Wiring diagram	EC-558
Stabilizer bar (front).....	SU-10
Stabilizer bar (rear)	SU-21
Stall test (A/T)	AT-59
Standardized relay	EL-7
START - Wiring diagram	SC-7
Starter	SC-8
Starting system.....	SC-6
Starting torque offset adjustment	TF-40
Steering gear, linkage and transfer gear inspection.....	MA-26
Steering linkage	ST-16
Steering switch.....	EL-24
Steering transfer gear	ST-14
Steering wheel and column	ST-10
Steering wheel play	ST-6
Steering wheel turning force	ST-8
Stop lamp.....	EL-53
STOP/L - Wiring diagram.....	EL-53
Strut (front)	SU-8
Sub-oil pump (Transfer)	TF-129
Sun gear (Transfer).....	TF-132
Sun roof, electric.....	EL-161
Sunload sensor	HA-103
Sunroof.....	BT-42
Supplemental Restraint System	RS-11
Supplemental restraint system - Wiring diagram.....	RS-36
SW/V - Wiring diagram	EC-439
Symbols and abbreviations	GI-10
Symptom matrix chart.....	EC-118

ALPHABETICAL INDEX



System readiness test (SRT) codeEC-56

T

2-4WD shift solenoid valveTF-109
 TachometerEL-80
 Tail lampEL-47
 TAIL/L - Wiring diagramEL-49
 TCM circuit diagramAT-13
 TCM inspection tableAT-92
 TFTS - Wiring diagramEC-314
 THEFT - Wiring diagramEL-252
 Theft warning systemEL-245
 ThermometerEL-96
 ThermostatLC-10
 Three way catalyst function (Left bank)EC-360
 Three way catalyst function (Right bank)EC-360
 Three way catalyst precautionsGI-6
 Throttle position sensor (TPS)EC-181
 Throttle position sensor adjustmentEC-99
 Throttle position switchEC-421, AT-183, 251
 Tie-rodST-20
 Tie-rod ball jointsST-20
 Tightening torque of standard boltsGI-48
 Timing beltEM-18
 Tire rotationMA-24
 Tire sizeGI-43
 TLID - Wiring diagramEL-165
 Tooth contact (front final drive 4WD)PD-26
 Tooth contact diff.PD-53
 Torque converter installationAT-263
 Torque convertor clutch solenoid valveAT-151, 160
 Tow truck towingGI-46
 Towing pointGI-47
 TP/SW - Wiring diagramEC-423
 TPS - Wiring diagramEC-187
 Transfer control unit inspection tableTF-55
 Transfer dropping resistorTF-110
 Transfer fluid replacement (Part time 4WD model)MA-22
 Transfer fluid temperature sensorTF-109
 Transfer motorTF-115
 Transfer motor relayTF-111
 Transfer serial numberGI-42
 TRANSMT - Wiring diagramEL-281
 Tread-FR&RR (Dimensions)GI-42
 TrimBT-24
 Trouble diagnosesGI-33
 Trunk lid opener, electricEL-165
 TURN - Wiring diagramEL-63
 Turn signal lampEL-61
 Two trip detection logicEC-54
 Two-pole liftGI-46

U

Under bodyBT-57

V

Vacuum cut valveEC-30, 536
 Vacuum cut valve bypass valveEC-30, 522, 529
 Vacuum hose (brake system)BR-20
 Vacuum hose drawing (Engine control)EC-24
 Valve clearanceEM-59
 Valve guideEM-33
 Valve seatEM-34
 Valve springEM-35
 Vehicle identification numberGI-41
 Vehicle recovery (freeing a stuck vehicle)GI-47
 Vehicle speed sensor (VSS)EC-408
 VENT/V - Wiring diagramEC-383, 503, 518
 Ventilation air filterHA-124
 Viscosity number (SAE)MA-12
 VSS - Wiring diagramEC-411

W

Wait detection switchTF-110
 WARN - Wiring diagramEL-101
 Warning chimeEL-108
 Warning lampsEL-100
 Washer, frontEL-119
 Washer, rearEL-129
 Water pumpLC-9
 Water temperature gaugeEL-80
 Weatherstrip - See ExteriorBT-31
 Wheel balanceMA-24
 Wheel bearing (front)AX-4
 Wheel bearing (rear)AX-18
 Wheel hub (front)AX-6
 Wheel sensors (ABS)BR-55, 79
 Wheel sizeGI-43
 Wheelarch heightSU-5
 Wheelbase (Dimensions)GI-42
 Wide open & closed throttle position switchEC-181
 Width (Dimensions)GI-42
 WINDOW - Wiring diagramEL-197
 Window, doorBT-18
 Window, rear sideBT-52
 Window, side - See Rear side windowBT-52
 WindshieldBT-50
 WIP/R - Wiring diagramEL-132
 WIPER - Wiring diagramEL-121
 Wiper, frontEL-119
 Wiper, rearEL-129
 Wiring Diagram (Cell code) listEL-361
 Wiring diagram (Transfer)TF-18
 Wiring diagramsGI-11

ALPHABETICAL INDEX

Wrist pin - See Piston pin inspection.....EM-47

GI

MA

EM

LC

EC

FE

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX



NOTES