

ALPHABETICAL INDEX

SECTION **IDX**

GI

MA

EM

LC

EC

FE

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

ALPHABETICAL INDEX

A

AAC/V - Wiring diagram.....EC-417
ABS - Wiring diagramBR-42, 47
ABS sensor rotor.....AX-6, 18
Absolute pressure sensorEC-155
A/C air flow.....HA-25
A/C component layout.....HA-19
A/C compressor clutch removal and
installation.....HA-150
A/C compressor precaution.....HA-6
A/C compressor special service tool.....HA-10
A/C control operation (auto A/C).....HA-23
A/C diagnostic work flow (auto A/C).....HA-65
A/C HFC134a (R134a) system
precaution.....HA-2
A/C HFC134a (R134a) system service
procedure.....HA-144
A/C HFC134a (R134a) system service
tools.....HA-11
A/C HFC134a system service equip-
ment precaution.....HA-7
A/C lubricant (R134a).....HA-146
A/C operational check.....HA-66
A/C performance chart.....HA-116
A/C performance test diagnoses.....HA-114
A/C relay.....HA-110
A/C self-diagnoses (auto A/C).....HA-44
A/C service data specification.....HA-160
A/C system description (auto A/C).....HA-23
A/C trouble diagnoses (auto A/C).....HA-27
A/C, A - Wiring diagram.....HA-31, 36
Accelerator control system.....FE-3
Accelerator wire adjustment.....FE-3
Actuator lever (Transfer).....TF-120
Air bag.....RS-10
Air bag disposal.....RS-23
Air bag precautions.....GI-3
Air bleeding for brake system.....BR-9
Air cleaner filter replacement.....MA-17
Air conditioner cut control.....EC-32
Air flow meter - See Mass air flow
sensor.....EC-147
Air mix door control linkage adjustment.....HA-85
Air mix. door motor.....HA-82, 141
Air spoiler, rear.....BT-36
All - mode 4WD system.....TF-10
Alternator.....SC-28
Ambient sensor.....HA-129
Angular tightening application.....EM-3
Antenna - See Power antenna.....EL-172, 647
Anti-lock brake system - Wiring
diagram.....BR-42, 47
ASCD (automatic speed control
device).....EL-224, 700
ASCD - Wiring diagram.....EL-228, 704
A/T - Wiring diagram - AT - FTS.....AT-107
A/T - Wiring diagram - AT - MAIN.....AT-96
A/T - Wiring diagram - AT - PNP/SW.....AT-101

A/T - Wiring diagram - AT - VSS A/T.....AT-113
A/T control.....EC-431
A/T diagnosis communication line.....EC-592
A/T fluid temperature sensor.....AT-110
A/T IND - Wiring diagram.....EL-127, 596
AT indicator lamp.....EL-127, 596
A/T self-diagnoses.....AT-46
A/T shift lock system.....AT-265
A/T shift lock system - Wiring diagram.....AT-266
A/T trouble diagnoses.....AT-53
A/T Wiring diagram - AT - ENG SS.....AT-117
A/T Wiring diagram AT - 1ST.....AT-123
A/T Wiring diagram AT - 2ND.....AT-129
A/T Wiring diagram AT - 3RD.....AT-135
A/T Wiring diagram AT - 4TH.....AT-142
A/T Wiring diagram AT - BA/FTS.....AT-192
A/T Wiring diagram AT - LPSV.....AT-164
A/T Wiring diagram AT - NONDTC.....AT-215
A/T Wiring diagram AT - OVRCSV.....AT-187
A/T Wiring diagram AT - SSV/A.....AT-169
A/T Wiring diagram AT - SSV/B.....AT-173
A/T Wiring diagram AT - TCCSIG.....AT-156
A/T Wiring diagram AT - TCV.....AT-150
A/T Wiring diagram AT - TPS.....AT-179
A/T Wiring diagram AT - VSSMTR.....AT-199
AT/C - Wiring diagram.....EC-433
ATP switch.....TF-112
ATP warning lamp.....TF-102
Audio.....EL-163, 638
AUDIO - Wiring diagram.....EL-165, 640
Audio and A/C control removal and
installation - See Instrument panel.....BT-22
AUT/DP - Wiring diagram.....EL-194, 670
Auto air conditioner - Wiring diagram.....HA-31, 36
Automatic amplifier.....HA-40, 72
Automatic drive positioner.....EL-189, 665
Automatic speed control system - See
ASCD.....EL-224, 700
Automatic transmission fluid
replacement.....MA-21
Automatic transmission number.....GI-44
Auxiliary air control (AAC) valve.....EC-414
Axle housing (rear).....AX-18

B

Back door.....BT-16
Back door opener - See Back door.....BT-16
Back door trim.....BT-35
Back-up lamp.....EL-74, 525
BACK/L - Wiring diagram.....EL-74, 525
Ball joint (front).....SU-12
Base idle air volume initialiging.....EC-57
Basic inspection.....EC-101
Battery.....SC-4
Battery/Starting/Charging System
Tester.....SC-7, 12, 21
Blower motor.....HA-95
Body alignment.....BT-58
Brake booster.....BR-23

ALPHABETICAL INDEX

Brake control valve (Proportioning valve)BR-12
 Brake fluid changeBR-8
 Brake fluid levelMA-25
 Brake fluid level and line checkBR-8
 Brake hydraulic lineBR-10
 Brake inspectionMA-25
 Brake lines and cables inspectionMA-25
 Brake lining wear temporary checkingMA-26
 Brake master cylinderBR-17
 Brake pedalBR-15
 Bulb specificationsEL-460, 926
 Bumper, frontBT-13
 Bumper, rearBT-16
 BYPS/V - Wiring diagramEC-576, 583

C

Camshaft inspectionEM-42
 Camshaft position sensor (PHASE)EC-334
 Canister-See EVAP canisterEC-33
 Center bearing assembly (propeller shaft)PD-9
 Center bearing disassembly (propeller shaft)PD-7
 Center case (Transfer)TF-123
 CHARGE - Wiring diagramSC-20
 Charging systemSC-19
 Chassis and body maintenanceMA-21
 CHIME - Wiring diagramEL-131, 600
 CIGAR - Wiring diagramEL-152, 624
 Cigarette lighterEL-152, 624
 Circuit breakerEL-19, 470
 CKPS - Wiring diagramEC-326
 ClockEL-153, 625
 CLOCK - Wiring diagramEL-153, 625
 Closed loop control (Left bank)EC-481
 Closed loop control (Right bank)EC-481
 Closed throttle position switchEC-423
 Clutch drum (Transfer)TF-125
 Clutch force release limit adjustmentTF-39
 Clutch pressure switch (Transfer)TF-111
 Coil spring (front)SU-8
 Coil spring (rear)SU-18
 Collision diagnosisRS-60
 Combination lamp, front, removal and installationBT-13
 Combination lamp, rear, removal and installationBT-36
 Combination meterEL-99, 568
 Combination meter removal and installation - See Instrument panelBT-22
 Combination switchEL-31, 482
 COMPAS - Wiring diagramEL-115, 584
 CompassEL-114, 583
 Component Location (auto A/C)HA-27
 Compression pressureEM-14
 Compressor clutch removal and installationHA-150
 Compressor precautionHA-6

Compressor special service toolHA-10
 Connecting rodEM-65
 Connecting rod bearing clearanceEM-69 GI
 Connecting rod bushing clearanceEM-70
 Connector inspectionGI-21
 Console box - See Instrument panelBT-22 MA
 CONSULT for ABSBR-53
 CONSULT for all-mode 4WDTF-30
 CONSULT for engineEC-81 EM
 CONSULT-II general informationGI-39
 Control valve (A/T)AT-301
 Control valve (Transfer)TF-128 LC
 Converter housing installationAT-278
 Coolant mixture ratioMA-12
 Coolant replacementMA-14 EC
 Cooling circuit (engine)LC-10
 "Crankcase emission control system - See positive crankcase ventilation"EC-39 FE
 CrankshaftEM-67
 Crankshaft position sensor (POS)EC-326 AT
 Crankshaft position sensor (POS) chippingEC-507
 Crankshaft position sensor (REF)EC-500 TF
 Cruise control - See ASCDEL-224, 700
 Cylinder blockEM-61
 Cylinder headEM-38 PD
 Cylinder head bolt tighteningEM-49

D

Data link connector for ConsultEC-81 SU
 Daytime light systemEL-49, 499
 Daytime running light - See Daytime light systemEL-49, 499 BR
 DEF - Wiring diagramEL-156, 628
 Detonation sensor - See Knock sensorEC-320
 Diagnostic trouble code (DTC) for OBD systemEC-8, 60 ST
 Diagnostic trouble code (DTC) inspection priority chartEC-113 RS
 Differential carrier assemblyPD-30, 57
 Differential carrier disassemblyPD-44
 Differential gear oil replacementMA-24 BT
 DimensionsGI-44
 D/LOCK - Wiring diagramEL-263, 741
 Dome light - See Interior lampEL-93, 543 HA
 Door glassBT-19
 Door lockBT-19
 Door mirrorBT-57 SC
 Door trimBT-31
 Door, frontBT-19
 Door, rearBT-21 EL
 Drive belt inspectionMA-13
 Drive chain (Transfer)TF-125
 Drive pinion diff. inspectionPD-23, 47
 Drive pinion heightPD-25, 53
 Drive plate runoutEM-70
 Drive shaft (front)AX-10
 Dropping resistor (A/T)AT-167
 DTC work supportEC-93

ALPHABETICAL INDEX

DTRL - Wiring diagram.....EL-54, 503

E

ECM input/output signal.....EC-124
ECTS - Wiring diagram.....EC-164, 181
Electric sun roof.....EL-176, 651
Electrical diagnoses.....GI-24
Electrical ignition system.....EC-31
Electrical unit.....Foldout
Electrical units location.....EL-441, 906
Engine compartment.....BT-59
Engine control circuit diagram.....EC-24
Engine control component parts location.....EC-20
Engine control module (ECM).....EC-435
Engine control system diagram and chart.....EC-26
Engine coolant temperature sensor (ECTS).....EC-162, 179
Engine fail-safe system.....EC-114
Engine oil filter replacement.....MA-18
Engine oil precautions.....GI-8
Engine oil replacement.....MA-18
Engine outer component parts.....EM-10
Engine removal.....EM-57
Engine room - See Engine compartment.....BT-59
Engine serial number.....GI-44
EVAP canister.....EC-34
EVAP canister purge volume control solenoid valve.....EC-33, 359, 531
EVAP canister vent control valve.....EC-366, 543, 562
EVAP control system (small leak) diagnosis.....EC-344, 386, 516
EVAP control system pressure sensor.....EC-373
EVAP control system purge flow monitoring diagnosis.....EC-551
EVAP vapor lines inspection.....MA-20
Evaporative emission (EVAP) system.....EC-33
Exhaust system.....FE-8
Exhaust system inspection.....MA-21
Exterior.....BT-36

F

4LO indicator lamp.....TF-104
4WD shift indicator lamp.....TF-98
4WD shift switch.....TF-111
4WD solenoid valve.....TF-111
4WD warning lamp.....TF-13
Fan control amp.....HA-98
F/FOG - Wiring diagram.....EL-77, 527
Final drive disassembly.....PD-43
Final drive pre-inspection.....PD-43
Final drive removal and installation.....PD-43
Finisher, interior - See Trim.....BT-29

F/LID - Wiring diagram.....EL-183, 659
Fluid temperature sensor (A/T).....AT-110
Fluids.....MA-11
Flywheel runout.....EM-70
FO2H-L - Wiring diagram.....EC-235
FO2H-R - Wiring diagram.....EC-234
Fog lamp, front.....EL-75, 526
Fog lamp, front, removal and installation.....BT-13
Forward clutch.....AT-320
F/PUMP - Wiring diagram.....EC-616
Freeze frame data.....EC-60
FRO2LH - Wiring diagram.....EC-189, 215, 227
FRO2RH - Wiring diagram.....EC-188, 214, 226
Front axle.....AX-2
Front bumper.....BT-13
Front case (Transfer).....TF-133
Front combination lamp removal and installation.....BT-13
Front disc brake.....BR-26
Front door.....BT-19
Front drive shaft (Transfer).....TF-125
Front final drive disassembly (4WD).....PD-18
Front final drive pre-inspection (4WD).....PD-18
Front final drive removal and installation (4WD).....PD-18
Front fog lamp.....EL-75, 526
Front fog lamp removal and installation.....BT-13
Front heated oxygen sensor (HO2S) (Left bank).....EC-184, 194, 202, 210, 223
Front heated oxygen sensor (HO2S) (Right bank).....EC-184, 194, 202, 210, 223
Front heated oxygen sensor heater (Left bank).....EC-232
Front heated oxygen sensor heater (Right bank).....EC-232
Front revolution sensor (Transfer).....TF-112
Front seat.....BT-42
Front seat belt.....RS-4
Front suspension.....SU-2
Front washer.....EL-140, 612
Front wiper.....EL-140, 612
Fuel cut control (at no load & high engine speed).....EC-33
Fuel filler lid.....BT-16
Fuel filter replacement.....MA-16
Fuel gauge.....EL-99, 568
Fuel injection system (Left bank).....EC-286, 294
Fuel injection system (Right bank).....EC-286, 294
Fuel lid opener, electric.....EL-183, 659
Fuel line inspection.....MA-16
Fuel precautions.....GI-8
Fuel pressure check.....EC-40
Fuel pressure regulator.....EC-41
Fuel pressure release.....EC-40
Fuel pump.....EC-614
Fuel system.....FE-4
Fuel tank temperature sensor.....EC-301
Fuel tank vacuum relief valve.....EC-34
FUELLH - Wiring diagram.....EC-289, 297
FUELRH - Wiring diagram.....EC-288, 296

ALPHABETICAL INDEX

FuseEL-19, 470
 Fuse and fusible link boxFoldout
 Fuse blockFoldout
 Fusible link.....EL-19, 470

G

Garage jack and safety standGI-47
 GaugesEL-99, 568
 Generator - See Alternator.....SC-28
 Generic scan tool (GST)EC-95
 GlassBT-19
 Glass hatch opener, electricEL-181, 657
 Grease.....MA-11
 Ground distributionEL-20, 471

H

H/AIM - Wiring diagramEL-513
 Harness connector.....EL-8
 Harness connector inspectionGI-21
 Harness layout.....EL-444, 910
 Hazard warning lamp.....EL-80, 530
 Headlamp.....EL-34, 485
 Headlamp aiming control.....EL-64, 512
 Headlining - See Roof trimBT-33
 Heated seat.....BT-44, EL-186, 662
 Height (Dimensions)GI-44
 HFC134a (R134a) system precautionHA-2
 HFC134a (R134a) system service
 procedure.....HA-144
 HFC134a (R134a) system service toolsHA-11
 HFC134a system service equipment
 precautionHA-7
 High clutch.....AT-317
 H/LAMP - Wiring diagram.....EL-39, 490
 Hood.....BT-13
 HornEL-151, 623
 HORN - Wiring diagramEL-151, 623
 How to erase DTC for OBD system.....EC-72
 HSEAT - Wiring diagramEL-186, 662

I

IACV-AAC valveEC-414
 IATS - Wiring diagramEC-159
 IdentificationHA-4
 Identification plate.....GI-43
 Idle air control valve (IACV)EC-414
 Idle mixture ratio.....EC-44
 Idle speed.....EC-44
 IGN/SG - Wiring diagramEC-491
 Ignition control systemEC-489
 Ignition timingEC-44
 ILL - Wiring diagramEL-88, 538
 Illumination.....EL-85, 535
 In vehicle sensorHA-132

INFINITI COMMUNICATOR.....EL-356
 Infiniti communicator (IVCS)EL-356
 INJECT - Wiring diagramEC-606
 InjectorEC-605
 Injector removal and installationEC-42
 Instrument panelBT-22
 INT/L - Wiring diagramEL-96, 546
 Intake air temperature sensorEC-157
 Intake door control linkage adjustmentHA-94
 Intake door motorHA-87
 Intake manifold.....EM-12
 Intake sensorHA-139
 Integrated homelink transmitterEL-333, 831
 InteriorBT-29
 Interior lampEL-93, 543
 Interior lamp on-off control.....EL-94, 544
 Internal gear (Transfer)TF-134
 IVC-L - Wiring diagram.....EC-444
 IVC-R - Wiring diagramEC-444
 IVCS - Wiring diagramEL-366
 IVCS-L - Wiring diagramEC-475
 IVCS-R - Wiring diagramEC-475
 IVIS (Infiniti vehicle immobilizer
 system).....EL-336, 835
 IVIS (Infiniti vehicle immobilizer sys-
 tem) precautionsGI-3

J

Jacking pointsGI-46
 Journal bearing assembly (propeller
 shaft)PD-9
 Journal bearing disassembly (propeller
 shaft)PD-8
 Junction box (J/B).....Foldout

K

Keyless entry system - See Multi-re-
 mote control system.....EL-277, 761
 Knock sensor (KS)EC-320
 Knuckle spindleAX-9
 KS - Wiring diagramEC-322

L

Length (Dimensions)GI-44
 License lamp.....EL-66, 515
 Lifting pointsGI-48
 Limited slip diff. adjustment.....PD-50
 Limited slip diff. assemblyPD-51
 Limited slip diff. disassembly.....PD-48
 Limited slip diff. inspectionPD-49
 Line pressure solenoid valve.....AT-147, 161, 167
 Line pressure switch (Transfer).....TF-111
 Line pressure test (A/T)AT-62
 Liquid gasket applicationEM-3

GI
MA
EM
LC
EC
FE
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL

IDX

ALPHABETICAL INDEX

LOAD - Wiring diagramEC-632
 Location of electrical unitsEL-441, 906
 Lock, doorBT-19
 Low and reverse brakeAT-324
 LSV (Load sensing valve)BR-13
 Lubricant (R134a) A/CHA-146
 LubricantsMA-11
 Lubrication circuit (engine)LC-3
 Lubrication-locks, hinges and hood
 latchesMA-27
 Luggage room lampEL-93, 543

M

MAFS - Wiring diagramEC-151
 Magnet clutchHA-104, 150
 MAIN - Wiring diagramEC-139
 Main oil pump (Transfer)TF-131
 Mainshaft (Transfer)TF-125
 Maintenance (engine)MA-13
 MAJOR OVERHALLAT-281
 Major overhaul (Transfer)TF-120
 Malfunction indicator lamp (MIL)EC-74
 Mass air flow sensor (MAFS)EC-147
 Master cylinder (brake)BR-17
 MeterEL-99, 568
 METER - Wiring diagramEL-104, 573
 MIL & Data link connectors circuitEC-638
 MIL/DL - Wiring diagramEC-638
 MIRROR - Wiring diagramEL-180, 656
 Mirror defoggerEL-154, 626
 Mirror, doorBT-57
 Mirror, out sideBT-57
 MisfireEC-312
 Mode door control linkage adjustmentHA-81
 Mode door motorHA-75
 Model variationGI-42
 Molding - See ExteriorBT-36
 MULTI - Wiring diagramEL-281, 765
 Multi-remote control systemEL-277, 761
 Multiplex communicationHA-142
 Multiport fuel injection (MFI) systemEC-29
 Multiport fuel injection precautionsGI-6

N

NATS (Nissan anti-theft system)EL-336, 835
 NATS (Nissan anti-theft system)
 precautionsGI-3
 NATS - Wiring diagramEL-338, 837
 NAVI - wiring diagramEL-399, 864
 Navigation SystemEL-390, 855
 Neutral-4LO switchTF-112
 NVH troubleshooting (AX)AX-3, 17
 NVH troubleshooting (BR)BR-7
 NVH troubleshooting (PD)PD-3
 NVH troubleshooting (ST)ST-6

NVH troubleshooting (SU)SU-3, 15

O

Oil change (capacity)MA-11
 Oil filter (Transfer)TF-118
 Oil pan (engine)EM-15
 Oil pressure (engine)LC-4
 Oil pump (A/T)AT-297
 Oil pump (engine)LC-5
 Oil pump regulator valve (engine)LC-6
 Oil seal replacement (engine)EM-35
 Oil seal replacement (front final drive
 4WD)PD-15
 Oil seal replacement (front of final
 drive)PD-40
 On board diagnostic systemEC-59
 Out side mirrorBT-57
 Overdrive control switchAT-263
 Overrun clutchAT-320
 Overrun clutch solenoid valveAT-189

P

P/ANT - Wiring diagramEL-173, 648
 Park/Neutral position switchEC-593
 Park/neutral position switch (A/T)AT-103, 263
 Parking brake controlBR-34
 Parking lampEL-66, 515
 PCV (positive crankcase ventilation)EC-39
 PGC/V - Wiring diagramEC-362, 534
 PHASE - Wiring diagramEC-334
 Pinion bearing preload diff.PD-25
 Pinion gear height diff.PD-25, 53
 Piston assemblyEM-71
 Piston pin inspectionEM-63
 Piston ring inspectionEM-64
 Piston to bore clearanceEM-66
 Planetary carrier (Transfer)TF-134
 PNP/SW - Wiring diagramEC-596
 POS - Wiring diagramEC-507
 POWER - Wiring diagramEL-13, 464
 Power antennaEL-172, 647
 Power door lockEL-261, 739
 Power door mirrorEL-180, 656
 Power seatEL-184, 660
 Power steering fluid levelMA-27, ST-8
 Power steering gearST-17
 Power steering hydraulic pressureST-10
 Power steering oil pressure switchEC-623
 Power steering oil pumpST-27
 Power steering system bleedingST-9
 Power supply routingEL-12, 463
 Power transistor & ignition coilEC-489
 Power windowEL-244, 720
 PRE/SE - Wiring diagramEC-376
 Precautions for Leak detection dyeHA-3
 Precautions (General)GI-5

ALPHABETICAL INDEX

Pressure test (A/T)AT-62
 Propeller shaftPD-3
 Propeller shaft greasingMA-23
 Propeller shaft inspectionMA-23
 Propeller shaft on vehicle servicePD-6
 Propeller shaft vibrationPD-6
 PST/SW - Wiring diagramEC-624

R

Rack retainer adjustmentST-8
 RadiatorLC-19, 21
 Radio - See AudioEL-163, 638
 Rear air spoilerBT-36
 Rear axleAX-16
 Rear bumperBT-16
 Rear case (Transfer)TF-123
 Rear combination lamp removal and
 installationBT-36
 Rear cover packing replacement diff.PD-16
 Rear doorBT-21
 Rear drum brakeBR-30
 Rear heated oxygen sensor
 (HO2S)EC-239, 249, 259, 269
 Rear heated oxygen sensor (HO2S)
 heaterEC-278
 Rear seatBT-45
 Rear seat beltRS-5
 Rear side windowBT-56
 Rear suspensionSU-15
 Rear washerEL-145, 617
 Rear window defoggerEL-154, 626
 Rear wiperEL-145, 617
 REF - Wiring diagramEC-500
 Refrigerant pressure sensorHA-111
 Refrigerant connection precautionHA-4
 Refrigerant discharging evacuating
 chargingHA-144
 Refrigerant general precautionHA-3
 Refrigerant linesHA-154
 Refrigerant pressure sensorEC-628
 Refrigeration cycleHA-14
 REMOTE - Wiring diagramEL-171, 646
 Removal and installation (A/T)AT-277
 Removal and installation (Transfer)TF-119
 Reverse clutchAT-314
 Revolution sensor (A/T)AT-115
 Ring gear diff. inspectionPD-23, 47
 RO2H-L - Wiring diagramEC-282
 RO2H-R - Wiring diagramEC-281
 Road wheel sizeGI-45
 Roof trimBT-33
 Room lamp - See Interior lampEL-93, 543
 RRO2LH - Wiring diagramEC-243, 253, 263, 273
 RRO2RH - Wiring diagramEC-242, 252, 262, 272

S

SAE J1930 terminology listGI-52
 Screw jackGI-46
 Seal - See ExteriorBT-36
 SEAT - Wiring diagramEL-184, 660
 Seat belt inspectionMA-28, RS-7
 Seat belt pre-tensionerRS-3
 Seat belt pre-tensioner disposalRS-23
 Seat belt, frontRS-4
 Seat belt, rearRS-5
 Seat, frontBT-42
 Seat, rearBT-45
 Self-diagnosis (Transfer)TF-27
 SHIFT - Wiring diagramAT-266
 Shift lock systemAT-265
 Shift scheduleAT-356
 Shift solenoid valve A (A/T) ..AT-125, 137, 147, 171
 Shift solenoid valve B (A/T) ..AT-125, 131, 147, 175
 Shock absorber (rear)SU-18
 Side air bagRS-21
 Side bearing preload (front final drive
 4WD)PD-24
 Side trimBT-29
 Side window - See Rear side windowBT-56
 Smart entrance control unitEL-327, 821
 SMJ (super multiple junction)Foldout
 Spare tire sizeGI-45
 Spark plug replacementMA-19
 SpeedometerEL-99, 568
 Spiral cableRS-17
 Spot lampEL-93, 543
 Spring (Wheelarch) heightSU-5
 SROOF - Wiring diagramEL-177, 652
 SRS - See Supplemental Restraint
 SystemRS-10
 SRS - Wiring diagramRS-36
 S/SIG - Wiring diagramEC-611
 Stabilizer bar (front)SU-10
 Stabilizer bar (rear)SU-20
 Stall test (A/T)AT-59
 Standardized relayEL-10
 START - Wiring diagramSC-11
 Start signalEC-610
 StarterSC-18
 Starting systemSC-10
 Steering gear, linkage and transfer
 gear inspectionMA-26
 Steering linkageST-17
 Steering switchEL-33, 484
 Steering transfer gearST-15
 Steering wheel and columnST-11
 Steering wheel playST-7
 Steering wheel turning forceST-9
 Stop lampEL-72, 523
 STOP/L - Wiring diagramEL-72, 523
 Strut (front)SU-8
 Sub-oil pump (Transfer)TF-131
 Sun gear (Transfer)TF-134

GI

MA

EM

LC

EC

FE

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

ALPHABETICAL INDEX

Sun roof, electric.....EL-176, 651
 Sunload sensorHA-135
 Sunroof.....BT-46
 Supplemental Restraint System.....RS-10
 Supplemental restraint system - Wiring diagram.....RS-36
 S/VCSW - Wiring diagramEC-483
 Swirl control valve control solenoid valveEC-449
 Swirl control valve control vacuum check switchEC-483
 SWL/V - Wiring diagramEC-449
 Symbols and abbreviationsGI-10
 Symptom matrix chart.....EC-115
 System readiness test (SRT) codeEC-61

T

2-4WD shift solenoid valve.....TF-111
 TachometerEL-99, 568
 Tail lamp.....EL-66, 515
 TAIL/L - Wiring diagram.....EL-68, 517
 TCM circuit diagramAT-13
 TCM inspection tableAT-92
 TFTS - Wiring diagram.....EC-303
 THEFT - Wiring diagram.....EL-308, 796
 Theft warning systemEL-301, 789
 Thermometer.....EL-114, 583
 Thermostat.....LC-16
 Three way catalyst function (Left bank).....EC-339
 Three way catalyst function (Right bank).....EC-339
 Three way catalyst precautions.....GI-6
 Throttle bodiesEM-12
 Throttle position sensor (TPS)EC-167
 Throttle position sensor adjustment.....EC-101
 Throttle position switchEC-423, AT-184, 264
 Tie-rod.....ST-21
 Tie-rod ball joints.....ST-21
 Tightening torque of standard bolts.....GI-51
 Timing chain.....EM-20
 Tire rotationMA-24
 Tire sizeGI-45
 TLID - Wiring diagramEL-182, 658
 Tooth contact (front final drive 4WD)PD-29
 Tooth contact diff.PD-56
 Torque converter installationAT-278
 Torque convertor clutch solenoid valveAT-152, 161
 Tow truck towing.....GI-48
 Towing point.....GI-50
 TP/SW - Wiring diagramEC-426
 TPS - Wiring diagram.....EC-173
 Transfer control unit inspection table.....TF-55
 Transfer dropping resistorTF-112
 Transfer fluid replacement (Part time 4WD model)MA-22
 Transfer fluid temperature sensorTF-111
 Transfer motor.....TF-117
 Transfer motor relayTF-113

Transfer serial numberGI-44
 TRANSMT - Wiring diagram.....EL-333, 831
 Tread-FR&RR (Dimensions).....GI-44
 TrimBT-29
 Trouble diagnosesGI-34
 Trunk lid opener, electricEL-181, 657
 Turbine revolution sensor.....AT-202
 TURN - Wiring diagramEL-82, 532
 Turn signal lampEL-80, 530
 Two trip detection logicEC-59
 Two-pole liftGI-48

U

Under bodyBT-61

V

Vacuum cut valveEC-33
 Vacuum cut valve bypass valve.....EC-33, 574, 580
 Vacuum hose (brake system).....BR-25
 Vacuum hose drawing (Engine control)EC-27
 Valve clearance.....EM-52
 Valve guide.....EM-43
 Valve seat.....EM-45
 Valve spring.....EM-46
 Vanity mirror lamp.....EL-93, 543
 Vehicle identification number.....GI-43
 Vehicle recovery (freeing a stuck vehicle).....GI-50
 VEHICLE SECURITY (THEFT WARNING) SYSTEM.....EL-301, 789
 Vehicle speed sensor (VSS)EC-409
 VENT/V - Wiring diagramEC-368, 545, 565
 Ventilation air filterHA-159
 VIASEC-599
 VIAS - Wiring diagramEC-599
 Viscosity number (SAE)MA-12
 VSS - Wiring diagramEC-412

W

Wait detection switchTF-112
 WARN - Wiring diagramEL-119, 588
 Warning chimeEL-129, 598
 Warning lampsEL-118, 587
 Washer, front.....EL-140, 612
 Washer, rearEL-145, 617
 Water pumpLC-12
 Water temperature gauge.....EL-99, 568
 Weatherstrip - See ExteriorBT-36
 Wheel balanceMA-24
 Wheel bearing (front).....AX-4
 Wheel bearing (rear)AX-17
 Wheel hub (front).....AX-6
 Wheel sensors (ABS).....BR-72, 98
 Wheel sizeGI-45

ALPHABETICAL INDEX

Wheelarch height	SU-5	WIP/R - Wiring diagram.....	EL-147, 619
Wheelbase (Dimensions)	GI-44	WIPER - Wiring diagram	EL-142, 614
Wide open & closed throttle position		Wiper, front	EL-140, 612
switch	EC-167	Wiper, rear	EL-145, 617
Width (Dimensions)	GI-44	Wiring Diagram (Cell code) list.....	EL-461, 927
WINDOW - Wiring diagram	EL-248, 724	Wiring diagram (Transfer).....	TF-18
Window, door	BT-19	Wiring Diagram - VEHSEC -	EL-308, 796
Window, rear side	BT-56	Wiring diagrams	GI-11
Window, side - See Rear side window	BT-56	Wrist pin - See Piston pin inspection.....	EM-63
Windshield.....	BT-54		

GI

MA

EM

LC

EC

FE

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX