

ALPHABETICAL INDEX

SECTION **IDX**

GI

MA

EM

LC

EC

FE

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

ALPHABETICAL INDEX

A

AAC/V - Wiring diagram.....EC-425
 ABS - Wiring diagramBR-37
 ABS sensor rotor.....AX-6, 19
 Absolute pressure sensorEC-158
 A/C air flow.....HA-25
 A/C component layout.....HA-19
 A/C compressor clutch removal and
 installation.....HA-150
 A/C compressor precaution.....HA-6
 A/C compressor special service tool.....HA-10
 A/C control operation (auto A/C).....HA-23
 A/C diagnostic work flow (auto A/C)HA-65
 A/C HFC134a (R134a) system
 precaution.....HA-2
 A/C HFC134a (R134a) system service
 procedure.....HA-144
 A/C HFC134a (R134a) system service
 tools.....HA-11
 A/C HFC134a system service equip-
 ment precaution.....HA-7
 A/C lubricant (R134a).....HA-146
 A/C operational check.....HA-66
 A/C performance chart.....HA-116
 A/C performance test diagnoses.....HA-114
 A/C relay.....HA-110
 A/C self-diagnoses (auto A/C).....HA-44
 A/C service data specification.....HA-160
 A/C system description (auto A/C).....HA-23
 A/C trouble diagnoses (auto A/C).....HA-27
 A/C, A - Wiring diagram.....HA-31, 36
 Accelerator control system.....FE-3
 Accelerator wire adjustment.....FE-3
 Actuator lever (Transfer).....TF-120
 Air bag.....RS-10
 Air bag disposal.....RS-22
 Air bag precautions.....GI-3
 Air bleeding for brake system.....BR-8
 Air cleaner filter replacement.....MA-17
 Air conditioner cut control.....EC-31
 Air flow meter - See Mass air flow
 sensor.....EC-150
 Air mix door control linkage adjustment.....HA-85
 Air mix. door motor.....HA-82, 141
 Air spoiler, rear.....BT-35
 All - mode 4WD system.....TF-10
 Alternator.....SC-28
 Ambient sensor.....HA-129
 Angular tightening application.....EM-3
 Antenna - See Power antenna.....EL-169
 Anti-lock brake system - Wiring
 diagram.....BR-37
 AP/SEN - Wiring diagram.....EC-160
 ASCD (automatic speed control device).....EL-221
 ASCD - Wiring diagram.....EL-225
 A/T - Wiring diagram - AT - FTS.....AT-107
 A/T - Wiring diagram - AT - MAIN.....AT-96
 A/T - Wiring diagram - AT - PNP/SW.....AT-101

A/T - Wiring diagram - AT - VSS A/T.....AT-113
 A/T control.....EC-440
 A/T diagnosis communication line.....EC-603
 A/T fluid temperature sensor.....AT-110
 A/T self-diagnoses.....AT-46
 A/T shift lock system.....AT-265
 A/T shift lock system - Wiring diagram.....AT-266
 A/T trouble diagnoses.....AT-53
 A/T Wiring diagram - AT - ENG SS.....AT-117
 A/T Wiring diagram AT - 1ST.....AT-123
 A/T Wiring diagram AT - 2ND.....AT-129
 A/T Wiring diagram AT - 3RD.....AT-135
 A/T Wiring diagram AT - 4TH.....AT-142
 A/T Wiring diagram AT - BA/FTS.....AT-192
 A/T Wiring diagram AT - LPSV.....AT-164
 A/T Wiring diagram AT - NONDTC.....AT-215
 A/T Wiring diagram AT - OVRCSV.....AT-187
 A/T Wiring diagram AT - SSV/A.....AT-169
 A/T Wiring diagram AT - SSV/B.....AT-173
 A/T Wiring diagram AT - TCCSIG.....AT-156
 A/T Wiring diagram AT - TCV.....AT-150
 A/T Wiring diagram AT - TPS.....AT-179
 A/T Wiring diagram AT - VSSMTR.....AT-199
 AT/C - Wiring diagram.....EC-442
 ATP switch.....TF-112
 ATP warning lamp.....TF-102
 Audio.....EL-160
 AUDIO - Wiring diagram.....EL-162
 Audio and A/C control removal and
 installation - See Instrument panel.....BT-21
 AUT/DP - Wiring diagram.....EL-191
 Auto air conditioner - Wiring diagram.....HA-31, 36
 Automatic amplifier.....HA-40, 72
 Automatic drive positioner.....EL-186
 Automatic speed control system - See
 ASCD.....EL-221
 Automatic transmission fluid
 replacement.....MA-21
 Automatic transmission number.....GI-43
 Auxiliary air control (AAC) valve.....EC-422
 Axle housing (rear).....AX-19

B

Back door.....BT-15
 Back door opener - See Back door.....BT-15
 Back door trim.....BT-34
 Back-up lamp.....EL-69
 BACK/L - Wiring diagram.....EL-69
 Ball joint (front).....SU-12
 Base idle air volume initialiging.....EC-57
 Basic inspection.....EC-101
 Battery.....SC-4
 Battery/Starting/Charging System
 Tester.....SC-7, 12, 21
 Blower motor.....HA-95
 Body alignment.....BT-57
 Brake booster.....BR-19
 Brake control valve (Proportioning
 valve).....BR-11

ALPHABETICAL INDEX

Brake fluid changeBR-7
 Brake fluid levelMA-25
 Brake fluid level and line checkBR-7
 Brake hydraulic lineBR-9
 Brake inspectionMA-25
 Brake lines and cables inspectionMA-25
 Brake lining wear temporary checkingMA-26
 Brake master cylinderBR-16
 Brake pedalBR-14
 Bulb specificationsEL-456
 Bumper, frontBT-12
 Bumper, rearBT-15
 BYPS/V - Wiring diagramEC-587, 594

C

Camshaft inspectionEM-42
 Camshaft position sensor (PHASE)EC-342
 Canister-See EVAP canisterEC-32
 Center bearing assembly (propeller shaft)PD-9
 Center bearing disassembly (propeller shaft)PD-7
 Center case (Transfer)TF-123
 CHARGE - Wiring diagramSC-20
 Charging systemSC-19
 Chassis and body maintenanceMA-21
 CHIME - Wiring diagramEL-127
 CIGAR - Wiring diagramEL-148
 Cigarette lighterEL-148
 Circuit breakerEL-16
 CKPS - Wiring diagramEC-334
 Closed loop control (Left bank)EC-491
 Closed loop control (Right bank)EC-491
 Closed throttle position switchEC-431
 Clutch drum (Transfer)TF-125
 Clutch force release limit adjustmentTF-39
 Clutch pressure switch (Transfer)TF-111
 Coil spring (front)SU-8
 Coil spring (rear)SU-18
 Collision diagnosisRS-59
 Combination lamp, front, removal and installationBT-12
 Combination lamp, rear, removal and installationBT-35
 Combination meterEL-94
 Combination meter removal and installation - See Instrument panelBT-21
 Combination switchEL-28
 COMPAS - Wiring diagramEL-111
 CompassEL-110
 Component Location (auto A/C)HA-27
 Compression pressureEM-14
 Compressor clutch removal and installationHA-150
 Compressor precautionHA-6
 Compressor special service toolHA-10
 Connecting rodEM-65
 Connecting rod bearing clearanceEM-69
 Connecting rod bushing clearanceEM-70

Connector inspectionGI-21
 Console box - See Instrument panelBT-21
 CONSULT for ABSBR-43 GI
 CONSULT for all-mode 4WDTF-30
 CONSULT for engineEC-81
 CONSULT-II general informationGI-38 MA
 Control valve (A/T)AT-301
 Control valve (Transfer)TF-128
 Converter housing installationAT-278 EM
 Coolant mixture ratioMA-12
 Coolant replacementMA-14 LC
 Cooling circuit (engine)LC-10
 "Crankcase emission control system - See positive crankcase ventilation"EC-38 EC
 CrankshaftEM-67
 Crankshaft position sensor (POS)EC-334
 Crankshaft position sensor (POS) chippingEC-517 FE
 Crankshaft position sensor (REF)EC-510
 Cruise control - See ASCDEL-221 AT
 Cylinder blockEM-61
 Cylinder headEM-38 TF
 Cylinder head bolt tighteningEM-49

D

Data link connector for ConsultEC-81 AX
 Daytime light systemEL-46
 Daytime running light - See Daytime light systemEL-46 SU
 DEF - Wiring diagramEL-153
 Detonation sensor - See Knock sensorEC-328
 Diagnostic trouble code (DTC) for OBD systemEC-8, 60
 Diagnostic trouble code (DTC) inspection priority chartEC-116 ST
 Differential carrier assemblyPD-30, 57
 Differential carrier disassemblyPD-44 RS
 Differential gear oil replacementMA-24
 DimensionsGI-43
 D/LOCK - Wiring diagramEL-256 BT
 Dome light - See Interior lampEL-88
 Door glassBT-18
 Door lockBT-18 HA
 Door mirrorBT-56
 Door trimBT-30
 Door, frontBT-18 SC
 Door, rearBT-20
 Drive belt inspectionMA-13
 Drive chain (Transfer)TF-125 EL
 Drive pinion diff. inspectionPD-23, 47
 Drive pinion heightPD-25, 53
 Drive plate runoutEM-70
 Drive shaft (front)AX-10
 Dropping resistor (A/T)AT-167
 DTC work supportEC-93
 DTRL - Wiring diagramEL-51

ALPHABETICAL INDEX

E

ECM input/output signal	EC-127
ECTS - Wiring diagram	EC-171, 189
Electric sun roof	EL-173
Electrical diagnoses	GI-24
Electrical ignition system	EC-30
Electrical unit	Foldout
Electrical units location	EL-436
Engine compartment	BT-58
Engine control circuit diagram	EC-24
Engine control component parts location	EC-20
Engine control module (ECM)	EC-444
Engine control system diagram and chart	EC-25
Engine coolant temperature sensor (ECTS)	EC-169, 187
Engine fail-safe system	EC-117
Engine oil filter replacement	MA-18
Engine oil precautions	GI-8
Engine oil replacement	MA-18
Engine outer component parts	EM-10
Engine removal	EM-57
Engine room - See Engine compartment	BT-58
Engine serial number	GI-43
EVAP canister	EC-33
EVAP canister purge volume control solenoid valve	EC-32, 367, 541
EVAP canister vent control valve	EC-374, 553, 573
EVAP control system (small leak) diagnosis	EC-352, 394, 526
EVAP control system pressure sensor	EC-381
EVAP control system purge flow moni- toring diagnosis	EC-561
EVAP vapor lines inspection	MA-20
Evaporative emission (EVAP) system	EC-32
Exhaust system	FE-8
Exhaust system inspection	MA-21
Exterior	BT-35

F

4LO indicator lamp	TF-104
4WD shift indicator lamp	TF-98
4WD shift switch	TF-111
4WD solenoid valve	TF-111
4WD warning lamp	TF-13
Fan control amp.	HA-98
F/FOG - Wiring diagram	EL-72
Final drive disassembly	PD-43
Final drive pre-inspection	PD-43
Final drive removal and installation	PD-43
Finisher, interior - See Trim	BT-28
F/LID - Wiring diagram	EL-180
Fluid temperature sensor (A/T)	AT-110

Fluids	MA-11
Flywheel runout	EM-70
FO2H-L - Wiring diagram	EC-243
FO2H-R - Wiring diagram	EC-242
Fog lamp, front	EL-70
Fog lamp, front, removal and installation	BT-12
Forward clutch	AT-320
F/PUMP - Wiring diagram	EC-627
Freeze frame data	EC-60
FRO2LH - Wiring diagram	EC-197, 223, 235
FRO2RH - Wiring diagram	EC-196, 222, 234
Front axle	AX-2
Front bumper	BT-12
Front case (Transfer)	TF-133
Front combination lamp removal and installation	BT-12
Front disc brake	BR-22
Front door	BT-18
Front drive shaft (Transfer)	TF-125
Front final drive disassembly (4WD)	PD-18
Front final drive pre-inspection (4WD)	PD-18
Front final drive removal and installa- tion (4WD)	PD-18
Front fog lamp	EL-70
Front fog lamp removal and installation	BT-12
Front heated oxygen sensor (HO2S) (Left bank)	EC-192, 202, 210, 218, 231
Front heated oxygen sensor (HO2S) (Right bank)	EC-192, 202, 210, 218, 231
Front heated oxygen sensor heater (Left bank)	EC-240
Front heated oxygen sensor heater (Right bank)	EC-240
Front revolution sensor (Transfer)	TF-112
Front seat	BT-41
Front seat belt	RS-4
Front suspension	SU-2
Front washer	EL-136
Front wiper	EL-136
Fuel cut control (at no load & high engine speed)	EC-32
Fuel filler lid	BT-15
Fuel filter replacement	MA-16
Fuel gauge	EL-94
Fuel injection system (Left bank)	EC-294, 302
Fuel injection system (Right bank)	EC-294, 302
Fuel lid opener, electric	EL-180
Fuel line inspection	MA-16
Fuel precautions	GI-8
Fuel pressure check	EC-39
Fuel pressure regulator	EC-40
Fuel pressure release	EC-39
Fuel pump	EC-625
Fuel system	FE-4
Fuel tank temperature sensor	EC-309
Fuel tank vacuum relief valve	EC-33
FUELLH - Wiring diagram	EC-297, 305
FUELRH - Wiring diagram	EC-296, 304
Fuse	EL-16
Fuse block	Foldout

ALPHABETICAL INDEX

Fusible linkEL-16

G

Garage jack and safety standGI-46
 GaugesEL-94
 Generator - See AlternatorSC-28
 Generic scan tool (GST)EC-95
 GlassBT-18
 Glass hatch opener, electricEL-178
 GreaseMA-11
 Ground distributionEL-17

H

Harness connectorEL-5
 Harness connector inspectionGI-21
 Harness layoutEL-440
 Hazard warning lampEL-75
 HeadlampEL-31
 Headlamp aiming controlEL-59
 Headlining - See Roof trimBT-32
 Heated seatBT-43, EL-183
 Height (Dimensions)GI-43
 HFC134a (R134a) system precautionHA-2
 HFC134a (R134a) system service procedureHA-144
 HFC134a (R134a) system service toolsHA-11
 HFC134a system service equipment precautionHA-7
 High clutchAT-317
 H/LAMP - Wiring diagramEL-36
 HoodBT-12
 HornEL-147
 HORN - Wiring diagramEL-147
 How to erase DTC for OBD systemEC-72
 HSEAT - Wiring diagramEL-183

I

IACV-AAC valveEC-422
 IATS - Wiring diagramEC-166
 IdentificationHA-4
 Identification plateGI-42
 Idle air control valve (IACV)EC-422
 Idle mixture ratioEC-43
 Idle speedEC-43
 IGN/SG - Wiring diagramEC-501
 Ignition control systemEC-499
 Ignition timingEC-43
 ILL - Wiring diagramEL-83
 IlluminationEL-80
 In vehicle sensorHA-132
 INFINITI COMMUNICATOREL-348
 Infiniti communicator (IVCS)EL-348
 INJECT - Wiring diagramEC-617
 InjectorEC-616

Injector removal and installationEC-41
 Instrument panelBT-21
 INT/L - Wiring diagramEL-91
 Intake air temperature sensorEC-164
 Intake door control linkage adjustmentHA-94
 Intake door motorHA-87
 Intake manifoldEM-12
 Intake sensorHA-139
 Integrated homelink transmitterEL-325
 InteriorBT-28
 Interior lampEL-88
 Interior lamp on-off controlEL-89
 Internal gear (Transfer)TF-134
 IVC-L - Wiring diagramEC-453
 IVC-R - Wiring diagramEC-453
 IVCS - Wiring diagramEL-359
 IVCS-L - Wiring diagramEC-485
 IVCS-R - Wiring diagramEC-485
 IVIS (Infiniti vehicle immobilizer system)EL-328
 IVIS (Infiniti vehicle immobilizer system) precautionsGI-3

J

Jacking pointsGI-45
 Journal bearing assembly (propeller shaft)PD-9
 Journal bearing disassembly (propeller shaft)PD-8
 Junction box (J/B)Foldout

K

Keyless entry system - See Multi-remote control systemEL-270
 Knock sensor (KS)EC-328
 Knuckle spindleAX-9
 KS - Wiring diagramEC-330

L

Length (Dimensions)GI-43
 License lampEL-61
 Lifting pointsGI-47
 Limited slip diff. adjustmentPD-50
 Limited slip diff. assemblyPD-51
 Limited slip diff. disassemblyPD-48
 Limited slip diff. inspectionPD-49
 Line pressure solenoid valveAT-147, 161, 167
 Line pressure switch (Transfer)TF-111
 Line pressure test (A/T)AT-62
 Liquid gasket applicationEM-3
 LOAD - Wiring diagramEC-643
 Location of electrical unitsEL-436
 Lock, doorBT-18
 Low and reverse brakeAT-324

GI

MA

EM

LC

EC

FE

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

ALPHABETICAL INDEX

LSV (Load sensing valve)	BR-12
Lubricant (R134a) A/C	HA-146
Lubricants	MA-11
Lubrication circuit (engine)	LC-3
Lubrication-locks, hinges and hood latches	MA-27
Luggage room lamp	EL-88

M

MAFS - Wiring diagram	EC-154
Magnet clutch	HA-104, 150
MAIN - Wiring diagram	EC-142
Main oil pump (Transfer)	TF-131
Mainshaft (Transfer)	TF-125
Maintenance (engine)	MA-13
MAJOR OVERHALL	AT-281
Major overhaul (Transfer)	TF-120
Malfunction indicator lamp (MIL)	EC-74
Mass air flow sensor (MAFS)	EC-150
Master cylinder (brake)	BR-16
Meter	EL-94
METER - Wiring diagram	EL-99
MIL & Data link connectors circuit	EC-648
MIL/DL - Wiring diagram	EC-648
MIRROR - Wiring diagram	EL-177
Mirror defogger	EL-151
Mirror, door	BT-56
Mirror, out side	BT-56
Misfire	EC-320
Mode door control linkage adjustment	HA-81
Mode door motor	HA-75
Model variation	GI-41
Molding - See Exterior	BT-35
MULTI - Wiring diagram	EL-274
Multi-remote control system	EL-270
Multiplex communication	HA-142
Multiport fuel injection (MFI) system	EC-28
Multiport fuel injection precautions	GI-6

N

NATS (Nissan anti-theft system)	EL-328
NATS (Nissan anti-theft system) precautions	GI-3
NATS - Wiring diagram	EL-330
NAVI - wiring diagram	EL-394
Navigation System	EL-385
Neutral-4LO switch	TF-112
NVH troubleshooting (AX)	AX-3, 18
NVH troubleshooting (BR)	BR-6
NVH troubleshooting (PD)	PD-3
NVH troubleshooting (ST)	ST-6
NVH troubleshooting (SU)	SU-3, 15

O

Oil change (capacity)	MA-11
Oil filter (Transfer)	TF-118
Oil pan (engine)	EM-15
Oil pressure (engine)	LC-4
Oil pump (A/T)	AT-297
Oil pump (engine)	LC-5
Oil pump regulator valve (engine)	LC-6
Oil seal replacement (engine)	EM-35
Oil seal replacement (front final drive 4WD)	PD-15
Oil seal replacement (front of final drive)	PD-40
On board diagnostic system	EC-59
Out side mirror	BT-56
Overdrive control switch	AT-263
Overrun clutch	AT-320
Overrun clutch solenoid valve	AT-189

P

P/ANT - Wiring diagram	EL-170
Park/Neutral position switch	EC-604
Park/neutral position switch (A/T)	AT-103, 263
Parking brake control	BR-30
Parking lamp	EL-61
PCV (positive crankcase ventilation)	EC-38
PGC/V - Wiring diagram	EC-370, 544
PHASE - Wiring diagram	EC-342
Pinion bearing preload diff.	PD-25
Pinion gear height diff.	PD-25, 53
Piston assembly	EM-71
Piston pin inspection	EM-63
Piston ring inspection	EM-64
Piston to bore clearance	EM-66
Planetary carrier (Transfer)	TF-134
PNP/SW - Wiring diagram	EC-607
POS - Wiring diagram	EC-517
POWER - Wiring diagram	EL-10
Power antenna	EL-169
Power door lock	EL-254
Power door mirror	EL-177
Power seat	EL-181
Power steering fluid level	MA-27, ST-8
Power steering gear	ST-17
Power steering hydraulic pressure	ST-10
Power steering oil pressure switch	EC-634
Power steering oil pump	ST-27
Power steering system bleeding	ST-9
Power supply routing	EL-9
Power transistor & ignition coil	EC-499
Power window	EL-241
PRE/SE - Wiring diagram	EC-384
Precautions for Leak detection dye	HA-3
Precautions (General)	GI-5
Pressure test (A/T)	AT-62
Propeller shaft	PD-3

ALPHABETICAL INDEX

Propeller shaft greasing.....MA-23
 Propeller shaft inspectionMA-23
 Propeller shaft on vehicle servicePD-6
 Propeller shaft vibrationPD-6
 PST/SW - Wiring diagram.....EC-635

R

Rack retainer adjustment.....ST-8
 RadiatorLC-19, 21
 Radio - See Audio.....EL-160
 Rear air spoilerBT-35
 Rear axleAX-17
 Rear bumperBT-15
 Rear case (Transfer).....TF-123
 Rear combination lamp removal and
 installationBT-35
 Rear cover packing replacement diff.PD-16
 Rear doorBT-20
 Rear drum brakeBR-26
 Rear heated oxygen sensor
 (HO2S)EC-247, 257, 267, 277
 Rear heated oxygen sensor (HO2S)
 heater.....EC-286
 Rear seatBT-44
 Rear seat belt.....RS-5
 Rear side windowBT-55
 Rear suspensionSU-15
 Rear washer.....EL-141
 Rear window defogger.....EL-151
 Rear wiper.....EL-141
 REF - Wiring diagramEC-510
 Refrigerant pressure sensorHA-111
 Refrigerant connection precautionHA-4
 Refrigerant discharging evacuating
 chargingHA-144
 Refrigerant general precaution.....HA-3
 Refrigerant linesHA-154
 Refrigerant pressure sensor.....EC-639
 Refrigeration cycle.....HA-14
 REMOTE - Wiring diagram.....EL-168
 Removal and installation (A/T).....AT-277
 Removal and installation (Transfer)TF-119
 Reverse clutch.....AT-314
 Revolution sensor (A/T).....AT-115
 Ring gear diff. inspectionPD-23, 47
 RO2H-L - Wiring diagram.....EC-290
 RO2H-R - Wiring diagram.....EC-289
 Road wheel sizeGI-44
 Roof trimBT-32
 Room lamp - See Interior lampEL-88
 RRO2LH - Wiring diagram...EC-251, 261, 271, 281
 RRO2RH - Wiring diagram..EC-250, 260, 270, 280

S

SAE J1930 terminology listGI-51
 Screw jackGI-45

Seal - See ExteriorBT-35
 SEAT - Wiring diagramEL-181
 Seat belt inspectionMA-28, RS-7 GI
 Seat belt pre-tensioner.....RS-3
 Seat belt pre-tensioner disposalRS-22
 Seat belt, front.....RS-4 MA
 Seat belt, rear.....RS-5
 Seat, frontBT-41 EM
 Seat, rearBT-44
 Self-diagnosis (Transfer).....TF-27
 SHIFT - Wiring diagramAT-266 LC
 Shift lock systemAT-265
 Shift schedule.....AT-356
 Shift solenoid valve A (A/T) ..AT-125, 137, 147, 171 EC
 Shift solenoid valve B (A/T)..AT-125, 131, 147, 175
 Shock absorber (rear)SU-18
 Side air bagRS-21 FE
 Side bearing preload (front final drive
 4WD).....PD-24
 Side trim.....BT-28 AT
 Side window - See Rear side windowBT-55
 Smart entrance control unitEL-319
 SMJ (super multiple junction).....Foldout TF
 Spare tire sizeGI-44
 Spark plug replacement.....MA-19
 Speedometer.....EL-94 PD
 Spiral cable.....RS-17
 Spot lamp.....EL-88
 Spring (Wheelarch) heightSU-5 AX
 SROOF - Wiring diagramEL-174
 SRS - See Supplemental Restraint
 SystemRS-10 SU
 SRS - Wiring diagramRS-35
 S/SIG - Wiring diagramEC-622
 Stabilizer bar (front).....SU-10 BR
 Stabilizer bar (rear)SU-20
 Stall test (A/T)AT-59
 Standardized relayEL-7 ST
 START - Wiring diagram.....SC-11
 Start signalEC-621
 StarterSC-18 RS
 Starting system.....SC-10
 Steering gear, linkage and transfer
 gear inspectionMA-26 BT
 Steering linkageST-17
 Steering switch.....EL-30
 Steering transfer gearST-15 HA
 Steering wheel and column.....ST-11
 Steering wheel playST-7 SC
 Steering wheel turning forceST-9
 Stop lampEL-67
 STOP/L - Wiring diagram.....EL-67 EL
 Strut (front)SU-8
 Sub-oil pump (Transfer)TF-131
 Sun gear (Transfer).....TF-134
 Sun roof, electric.....EL-173
 Sunload sensorHA-135
 Sunroof.....BT-45
 Supplemental Restraint SystemRS-10
 Supplemental restraint system - Wiring
 diagramRS-35

ALPHABETICAL INDEX

S/VCSW - Wiring diagram	EC-493
Swirl control valve control solenoid valve	EC-458
Swirl control valve control vacuum check switch	EC-493
SWL/V - Wiring diagram	EC-458
Symbols and abbreviations	GI-10
Symptom matrix chart.....	EC-118
System readiness test (SRT) code	EC-61

T

2-4WD shift solenoid valve.....	TF-111
Tachometer	EL-94
Tail lamp.....	EL-61
TAIL/L - Wiring diagram	EL-63
TCM circuit diagram.....	AT-13
TCM inspection table	AT-92
TFTS - Wiring diagram	EC-311
THEFT - Wiring diagram.....	EL-300
Theft warning system.....	EL-294
Thermometer	EL-110
Thermostat.....	LC-16
Three way catalyst function (Left bank)	EC-347
Three way catalyst function (Right bank)	EC-347
Three way catalyst precautions.....	GI-6
Throttle bodies	EM-12
Throttle position sensor (TPS)	EC-174
Throttle position sensor adjustment.....	EC-101
Throttle position switch	EC-431, AT-184, 264
Tie-rod	ST-21
Tie-rod ball joints.....	ST-21
Tightening torque of standard bolts.....	GI-50
Timing chain.....	EM-20
Tire rotation	MA-24
Tire size	GI-44
TLID - Wiring diagram	EL-179
Tooth contact (front final drive 4WD)	PD-29
Tooth contact diff.	PD-56
Torque converter installation	AT-278
Torque convertor clutch solenoid valve	AT-152, 161
Tow truck towing.....	GI-47
Towing point.....	GI-49
TP/SW - Wiring diagram	EC-434
TPS - Wiring diagram.....	EC-180
Transfer control unit inspection table.....	TF-55
Transfer dropping resistor	TF-112
Transfer fluid replacement (Part time 4WD model)	MA-22
Transfer fluid temperature sensor	TF-111
Transfer motor.....	TF-117
Transfer motor relay.....	TF-113
Transfer serial number	GI-43
TRANSMT - Wiring diagram	EL-325
Tread-FR&RR (Dimensions).....	GI-43
Trim	BT-28
Trouble diagnoses	GI-34
Trunk lid opener, electric.....	EL-178

Turbine revolution sensor.....	AT-202
TURN - Wiring diagram	EL-77
Turn signal lamp	EL-75
Two trip detection logic	EC-59
Two-pole lift	GI-47

U

Under body	BT-60
------------------	-------

V

Vacuum cut valve	EC-32
Vacuum cut valve bypass valve.....	EC-32, 585, 591
Vacuum hose (brake system).....	BR-21
Vacuum hose drawing (Engine control)	EC-26
Valve clearance.....	EM-52
Valve guide.....	EM-43
Valve seat.....	EM-45
Valve spring.....	EM-46
Vehicle identification number.....	GI-42
Vehicle recovery (freeing a stuck vehicle).....	GI-49
Vehicle speed sensor (VSS)	EC-417
VENT/V - Wiring diagram	EC-376, 555, 576
Ventilation air filter.....	HA-159
VIAS	EC-610
VIAS - Wiring diagram	EC-610
Viscosity number (SAE).....	MA-12
VSS - Wiring diagram	EC-420

W

Wait detection switch	TF-112
WARN - Wiring diagram.....	EL-115
Warning chime	EL-125
Warning lamps	EL-114
Washer, front.....	EL-136
Washer, rear.....	EL-141
Water pump	LC-12
Water temperature gauge	EL-94
Weatherstrip - See Exterior	BT-35
Wheel balance	MA-24
Wheel bearing (front).....	AX-4
Wheel bearing (rear)	AX-18
Wheel hub (front).....	AX-6
Wheel sensors (ABS).....	BR-56, 80
Wheel size	GI-44
Wheelarch height	SU-5
Wheelbase (Dimensions)	GI-43
Wide open & closed throttle position switch	EC-174
Width (Dimensions)	GI-43
WINDOW - Wiring diagram	EL-245
Window, door	BT-18
Window, rear side	BT-55
Window, side - See Rear side window	BT-55

ALPHABETICAL INDEX

Windshield.....	BT-53	Wiring Diagram (Cell code) list.....	EL-457
WIP/R - Wiring diagram.....	EL-143	Wiring diagram (Transfer).....	TF-18
WIPER - Wiring diagram.....	EL-138	Wiring diagrams.....	GI-11
Wiper, front.....	EL-136	Wrist pin - See Piston pin inspection.....	EM-63
Wiper, rear.....	EL-141		

GI

MA

EM

LC

EC

FE

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

NOTES