

# ALPHABETICAL INDEX

# SECTION **IDX**

GI

MA

EM

LC

EC

FE

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

**IDX**

# ALPHABETICAL INDEX

## A

AAC/V - Wiring diagram .....EC-445, 452, 461  
 ABS - Wiring diagram .....BR-35  
 ABS sensor rotor .....AX-6, 20  
 Absolute pressure sensor .....EC-195  
 A/C air flow .....HA-26  
 A/C component layout .....HA-20  
 A/C compressor clutch removal and  
   installation .....HA-150  
 A/C compressor precaution .....HA-6  
 A/C compressor special service tool .....HA-10  
 A/C control operation (auto A/C) .....HA-24  
 A/C diagnostic work flow (auto A/C) .....HA-65  
 A/C HFC134a (R134a) system  
   precaution .....HA-2  
 A/C HFC134a (R134a) system service  
   procedure .....HA-144  
 A/C HFC134a (R134a) system service  
   tools .....HA-11  
 A/C HFC134a system service equip-  
   ment precaution .....HA-7  
 A/C lubricant (R134a) .....HA-146  
 A/C operational check .....HA-66  
 A/C performance chart .....HA-116  
 A/C performance test diagnoses .....HA-114  
 A/C relay .....HA-110  
 A/C self-diagnoses (auto A/C) .....HA-44  
 A/C service data specification .....HA-160  
 A/C system description (auto A/C) .....HA-24  
 A/C trouble diagnoses (auto A/C) .....HA-28  
 A/C, A - Wiring diagram .....HA-32, 37  
 Accelerator control system .....FE-3  
 Accelerator wire adjustment .....FE-3  
 Actuator lever (Transfer) .....TF-119  
 Air bag .....RS-10  
 Air bag disposal .....RS-22  
 Air bag precautions .....GI-3  
 Air bleeding for brake system .....BR-8  
 Air cleaner filter replacement .....MA-18  
 Air conditioner cut control .....EC-33  
 Air flow meter - See Mass air flow  
   sensor .....EC-182, 189, 480  
 Air mix door control linkage adjustment .....HA-85  
 Air mix. door motor .....HA-82, 141  
 Air spoiler, rear .....BT-36  
 All-mode 4WD system .....TF-10  
 Alternator .....SC-29  
 Ambient sensor .....HA-129  
 Angular tightening application .....EM-3  
 Antenna - See Power antenna .....EL-209  
 Anti-lock brake system - Wiring  
   diagram .....BR-35  
 ASCD (automatic speed control device) .....EL-261  
 ASCD - Wiring diagram .....EL-265  
 A/T - Wiring diagram - AT - FTS .....AT-108  
 A/T - Wiring diagram - AT - MAIN .....AT-97  
 A/T - Wiring diagram - AT - PNP/SW .....AT-102  
 A/T - Wiring diagram - AT - VSS A/T .....AT-114

A/T control .....EC-475  
 A/T diagnosis communication line .....EC-662  
 A/T fluid temperature sensor .....AT-111  
 A/T IND - Wiring diagram .....EL-157  
 AT indicator lamp .....EL-157  
 A/T self-diagnoses .....AT-46  
 A/T shift lock system .....AT-263  
 A/T shift lock system - Wiring diagram .....AT-264  
 A/T trouble diagnoses .....AT-53  
 A/T Wiring diagram - AT - ENG SS .....AT-118  
 A/T Wiring diagram AT - 1ST .....AT-124  
 A/T Wiring diagram AT - 2ND .....AT-130  
 A/T Wiring diagram AT - 3RD .....AT-136  
 A/T Wiring diagram AT - 4TH .....AT-143  
 A/T Wiring diagram AT - BA/FTS .....AT-192  
 A/T Wiring diagram AT - LPSV .....AT-164  
 A/T Wiring diagram AT - NONDTC .....AT-215  
 A/T Wiring diagram AT - OVRCSV .....AT-187  
 A/T Wiring diagram AT - SSV/A .....AT-169  
 A/T Wiring diagram AT - SSV/B .....AT-173  
 A/T Wiring diagram AT - TCCSIG .....AT-156  
 A/T Wiring diagram AT - TCV .....AT-151  
 A/T Wiring diagram AT - TPS .....AT-179  
 A/T Wiring diagram AT - VSSMTR .....AT-199  
 AT/C - Wiring diagram .....EC-476  
 ATP switch .....TF-111  
 ATP warning lamp .....TF-101  
 Audio .....EL-200  
 AUDIO - Wiring diagram .....EL-202  
 Audio and A/C control removal and  
   installation - See Instrument panel .....BT-22  
 AUT/DP - Wiring diagram .....EL-232  
 Auto air conditioner - Wiring diagram .....HA-32, 37  
 Automatic amplifier .....HA-41, 72  
 Automatic drive positioner .....EL-227  
 Automatic speed control system - See  
   ASCD .....EL-261  
 Automatic transmission fluid  
   replacement .....MA-22  
 Automatic transmission number .....GI-45  
 Auxiliary air control (AAC) valve .....EC-442, 449, 458  
 Axle .....MA-28  
 Axle housing (rear) .....AX-20

## B

Back door .....BT-16  
 Back door opener - See Back door .....BT-16  
 Back door trim .....BT-35  
 Back-up lamp .....EL-84  
 BACK/L - Wiring diagram .....EL-84  
 Ball joint (front) .....SU-14  
 Basic inspection .....EC-116  
 Battery .....SC-4  
 Battery/Starting/Charging System  
   Tester .....SC-7, 12, 22  
 Blower motor .....HA-94  
 Body alignment .....BT-60  
 Brake booster .....BR-17

# ALPHABETICAL INDEX

Brake control valve (Proportioning valve).....	BR-11
Brake fluid change .....	BR-7
Brake fluid level .....	MA-26
Brake fluid level and line check .....	BR-7
Brake hydraulic line .....	BR-9
Brake inspection .....	MA-26
Brake lines and cables inspection .....	MA-26
Brake master cylinder .....	BR-14
Brake pedal .....	BR-12
Bulb specifications .....	EL-590
Bumper, front .....	BT-13
Bumper, rear .....	BT-16
BYPSS/V - Wiring diagram .....	EC-646, 653

C

Camshaft inspection .....	EM-45
Camshaft position sensor (PHASE).....	EC-333
Canister - See EVAP canister .....	EC-34
Center bearing assembly (propeller shaft).....	PD-10
Center bearing disassembly (propeller shaft).....	PD-8
Center case (Transfer).....	TF-122
CHARGE - Wiring diagram .....	SC-21
Charging system .....	SC-20
Chassis and body maintenance .....	MA-22
CHIME - Wiring diagram.....	EL-161
CIGAR - Wiring diagram.....	EL-185
Cigarette lighter.....	EL-185
Circuit breaker.....	EL-17
Clock .....	EL-186
CLOCK - Wiring diagram.....	EL-186
Closed loop control (Bank 1) .....	EC-568
Closed loop control (Bank 2) .....	EC-568
Closed throttle position switch .....	EC-467
Clutch drum (Transfer).....	TF-124
Clutch force release limit adjustment .....	TF-39
Clutch pressure switch (Transfer).....	TF-110
Coil spring (front).....	SU-9
Coil spring (rear) .....	SU-20
Collision diagnosis.....	RS-59
Combination lamp, front, removal and installation .....	BT-13
Combination lamp, rear, removal and installation .....	BT-36
Combination meter.....	EL-129
Combination meter removal and installation - See Instrument panel.....	BT-22
Combination switch.....	EL-31
COMPAS - Wiring diagram .....	EL-145
Compass .....	EL-144
Component Location (auto A/C).....	HA-28
Compression pressure.....	EM-14
Compressor clutch removal and installation.....	HA-150
Compressor precaution .....	HA-6
Compressor special service tool.....	HA-10
Connecting rod.....	EM-67

Connecting rod bearing clearance.....	EM-71
Connecting rod bushing clearance .....	EM-72
Connector inspection.....	GI-22
Console box - See Instrument panel.....	BT-22
CONSULT for ABS .....	BR-41
CONSULT for all-mode 4WD.....	TF-30
CONSULT-II for engine .....	EC-96
CONSULT-II general information.....	GI-40
Control valve (A/T) .....	AT-299
Control valve (Transfer) .....	TF-127
Converter housing installation.....	AT-276
Coolant mixture ratio.....	MA-13
Coolant overtemperature enrichment protection .....	EC-305
Coolant replacement.....	MA-15
Cooling circuit (engine) .....	LC-11
Crankcase emission control system - See positive crankcase ventilation .....	EC-49
Crankshaft.....	EM-69
Crankshaft position sensor (POS) .....	EC-325
Crankshaft position sensor (POS) chipping .....	EC-587
Crankshaft position sensor (REF).....	EC-581
Cruise control - See ASCD.....	EL-261
Cylinder block .....	EM-63
Cylinder head.....	EM-41
Cylinder head bolt tightening .....	EM-52

D

Daytime light system.....	EL-52
Daytime running light - See Daytime light system .....	EL-52
DEF - Wiring diagram .....	EL-189
Detonation sensor - See Knock sensor.....	EC-290, 320
Diagnostic trouble code (DTC) for OBD system .....	EC-8, 72
Diagnostic trouble code (DTC) inspection priority chart.....	EC-128
Differential carrier assembly.....	PD-31, 58
Differential carrier disassembly .....	PD-45
Differential gear oil replacement.....	MA-25
Dimensions .....	GI-45
D/LOCK - Wiring diagram .....	EL-402
Dome light - See Interior lamp .....	EL-103
Door glass.....	BT-19
Door lock.....	BT-19
Door mirror.....	BT-59
Door trim .....	BT-31
Door, front .....	BT-19
Door, rear .....	BT-21
Drive belt inspection .....	MA-14
Drive chain (Transfer) .....	TF-124
Drive pinion diff. inspection .....	PD-24, 48
Drive pinion height .....	PD-26, 54
Drive plate runout .....	EM-73
Drive shaft.....	MA-29
Drive shaft (front).....	AX-12
Dropping resistor (A/T).....	AT-167

# ALPHABETICAL INDEX

DTC work support .....EC-107  
DTRL - Wiring diagram.....EL-57

## E

ECM input/output signal .....EC-139  
ECTS - Wiring diagram .....EC-203  
Electric sun roof .....EL-213  
Electrical diagnoses.....GI-25  
Electrical ignition system.....EC-32  
Electrical unit .....Foldout  
Electrical units location .....EL-571  
Engine compartment.....BT-61  
Engine control circuit diagram.....EC-26  
Engine control component parts  
location .....EC-22  
Engine control module (ECM).....EC-478  
Engine control system diagram and  
chart.....EC-27  
Engine coolant temperature sensor  
(ECTS).....EC-201, 225  
Engine fail-safe system .....EC-129  
Engine oil filter replacement .....MA-19  
Engine oil precautions .....GI-8  
Engine oil replacement .....MA-18  
Engine outer component parts .....EM-10  
Engine removal .....EM-59  
Engine room - See Engine  
compartment.....BT-61  
Engine serial number .....GI-45  
EVAP canister.....EC-35  
EVAP canister purge volume control  
solenoid valve.....EC-34, 370, 596  
EVAP canister vent control  
valve .....EC-377, 608, 616  
EVAP control system (small leak)  
diagnosis .....EC-354, 399, 412, 625  
EVAP control system pressure  
sensor .....EC-384, 390  
EVAP control system purge flow moni-  
toring diagnosis.....EC-343  
EVAP vapor lines inspection.....MA-21  
Evaporative emission (EVAP) system.....EC-34  
Exhaust system .....FE-9  
Exhaust system inspection .....MA-22  
Exterior.....BT-36

## F

4LO indicator lamp.....TF-103  
4WD shift indicator lamp.....TF-97  
4WD shift switch.....TF-110  
4WD solenoid valve .....TF-110  
4WD warning lamp .....TF-13  
Fan control amp. ....HA-97  
F/FOG - Wiring diagram .....EL-86  
Final drive disassembly .....PD-44  
Final drive pre-inspection .....PD-44

Final drive removal and installation .....PD-44  
Finisher, interior - See Trim .....BT-29  
F/LID - Wiring diagram .....EL-221  
FLS1 - Wiring diagram .....EC-429  
FLS2 - Wiring diagram .....EC-435  
FLS3 - Wiring diagram .....EC-642  
Fluid temperature sensor (A/T) .....AT-111  
Fluids.....MA-12  
Fog lamp, front.....EL-85  
Fog lamp, front, removal and  
installation .....BT-13  
Forward clutch.....AT-318  
F/PUMP - Wiring diagram .....EC-698  
Freeze frame data.....EC-73  
Front axle.....AX-2  
Front bumper .....BT-13  
Front case (Transfer) .....TF-132  
Front combination lamp removal and  
installation .....BT-13  
Front disc brake .....BR-20  
Front door .....BT-19  
Front drive shaft (Transfer).....TF-124  
Front final drive disassembly (4WD).....PD-19  
Front final drive pre-inspection (4WD).....PD-19  
Front final drive removal and installa-  
tion (4WD).....PD-19  
Front fog lamp.....EL-85  
Front fog lamp removal and installation .....BT-13  
Front passenger air bag.....RS-19  
Front revolution sensor (Transfer).....TF-111  
Front seat.....BT-42  
Front seat belt .....RS-4  
Front suspension.....SU-2  
Front washer .....EL-173  
Front wiper .....EL-173  
FTTS - Wiring diagram.....EC-302  
Fuel cut control (at no load & high  
engine speed).....EC-34  
Fuel filler lid.....BT-16  
Fuel filter replacement .....MA-17  
Fuel gauge .....EL-129  
Fuel injection system.....EC-282  
Fuel injection system (Bank 1) .....EC-282, 290  
Fuel injection system (Bank 2) .....EC-282, 290  
Fuel level sensor .....EC-428, 432, 434, 641  
Fuel lid opener, electric.....EL-221  
Fuel line inspection .....MA-17  
Fuel precautions .....GI-8  
Fuel pressure check.....EC-51  
Fuel pressure regulator .....EC-52  
Fuel pressure release .....EC-51  
Fuel pump .....EC-696  
Fuel system .....FE-4  
Fuel tank temperature sensor.....EC-297, 300  
Fuel tank vacuum relief valve .....EC-35  
FUELB1 - Wiring diagram .....EC-284, 292  
FUELB2 - Wiring diagram .....EC-285, 293  
Fuse .....EL-17  
Fuse and fusible link box .....Foldout  
Fuse block .....Foldout

# ALPHABETICAL INDEX

Fusible link .....EL-17

## G

Garage jack and safety stand .....GI-48  
 Gauges .....EL-129  
 Generator - See Alternator .....SC-29  
 Generic scan tool (GST) .....EC-110  
 Glass .....BT-19  
 Glass hatch opener, electric .....EL-220  
 Grease .....MA-12  
 Ground distribution .....EL-18

## H

H/AIM - Wiring diagram .....EL-70  
 Harness connector .....EL-6  
 Harness connector inspection .....GI-22  
 Harness layout .....EL-574  
 Hazard warning lamp .....EL-89  
 Headlamp .....EL-35  
 Headlamp aiming control .....EL-69  
 Headlining - See Roof trim .....BT-33  
 Heated oxygen sensor 1  
     (bank 1) .....EC-230, 239, 252, 530, 538  
 Heated oxygen sensor 1  
     (bank 2) .....EC-230, 239, 252, 530, 538  
 Heated oxygen sensor 2  
     (bank 1) .....EC-262, 271, 546, 557  
 Heated oxygen sensor 2  
     (bank 2) .....EC-262, 271, 546, 557  
 Heated oxygen sensor 2 heater  
     (bank 1) .....EC-166, 174  
 Heated oxygen sensor 2 heater  
     (bank 2) .....EC-166, 174  
 Heated oxygen sensor heater .....EC-166, 174  
 Heated seat .....BT-44, EL-224  
 Height (Dimensions) .....GI-45  
 HFC134a (R134a) system precaution .....HA-2  
 HFC134a (R134a) system service  
     procedure .....HA-144  
 HFC134a (R134a) system service tools .....HA-11  
 HFC134a system service equipment  
     precaution .....HA-7  
 High clutch .....AT-315  
 H/LAMP - Wiring diagram .....EL-40  
 Homelink universal transceiver .....EL-495  
 Hood .....BT-13  
 Horn .....EL-184  
 HORN - Wiring diagram .....EL-184  
 How to erase DTC for OBD system .....EC-85  
 HSEAT - Wiring diagram .....EL-224

## I

IACV-AAC valve .....EC-442, 449, 458  
 IATS - Wiring diagram .....EC-198

ICC - Wiring diagram .....EL-295  
 Identification .....HA-4  
 Identification plate .....GI-44  
 Idle air control valve (IACV) .....EC-442, 449, 458  
 Idle air volume learning .....EC-69  
 Idle mixture ratio .....EC-55  
 Idle speed .....EC-55  
 IGN/SG - Wiring diagram .....EC-678  
 Ignition control system .....EC-677  
 Ignition timing .....EC-55  
 ILL - Wiring diagram .....EL-97  
 Illumination .....EL-94  
 In vehicle sensor .....HA-132  
 In-cabin Microfilter .....HA-159  
 INJECT - Wiring diagram .....EC-688  
 Injector .....EC-687  
 Injector removal and installation .....EC-53  
 Instrument panel .....BT-22  
 INT/L - Wiring diagram .....EL-106  
 Intake air temperature sensor .....EC-197, 228  
 Intake door control linkage adjustment .....HA-93  
 Intake door motor .....HA-86  
 Intake manifold .....EM-12  
 Intake sensor .....HA-139  
 Intake valve timing control .....EC-162  
 Intake valve timing control (Bank 1) .....EC-162  
 Intake valve timing control (Bank 2) .....EC-162  
 Intake valve timing control position  
     sensor (Bank 1) .....EC-521  
 Intake valve timing control position  
     sensor (Bank 2) .....EC-521  
 Intake valve timing control solenoid  
     valve (Bank 1) .....EC-486  
 Intake valve timing control solenoid  
     valve (Bank 2) .....EC-486  
 Integrated homelink transmitter - See  
     Homelink universal transceiver .....EL-495  
 Intelligent cruise control (ICC) system .....EL-281  
 Interior .....BT-29  
 Interior lamp .....EL-103  
 Interior lamp on-off control .....EL-104  
 Internal gear (Transfer) .....TF-133  
 IVCB1 - Wiring diagram .....EC-488, 524  
 IVCB2 - Wiring diagram .....EC-489, 525  
 IVIS (Infiniti vehicle immobilizer  
     system) .....EL-499  
 IVIS (Infiniti vehicle immobilizer sys-  
     tem) precautions .....GI-3

## J

Jacking points .....GI-47  
 Joint connector (J/C) .....Foldout  
 Journal bearing assembly (propeller  
     shaft) .....PD-10  
 Journal bearing disassembly (propeller  
     shaft) .....PD-9  
 Junction box (J/B) .....Foldout

GI

MA

EM

LC

EC

FE

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

**IDX**

# ALPHABETICAL INDEX

## K

KEYLES - Wiring diagram .....	EL-428
Knock sensor (KS) .....	EC-320
Knuckle spindle .....	AX-10
KS - Wiring diagram .....	EC-321

## L

Laser beam aiming adjustment .....	EL-286
Length (Dimensions) .....	GI-45
License lamp .....	EL-72
Lifting points .....	GI-49
Limited slip diff. adjustment.....	PD-51
Limited slip diff. assembly.....	PD-52
Limited slip diff. disassembly.....	PD-49
Limited slip diff. inspection .....	PD-50
Line pressure solenoid valve.....	AT-148, 161, 167
Line pressure switch (Transfer) .....	TF-110
Line pressure test (A/T) .....	AT-62
Liquid gasket application .....	EM-3
LOAD - Wiring diagram .....	EC-716
Location of electrical units .....	EL-571
Lock, door .....	BT-19
Low and reverse brake .....	AT-322
Lubricant (R134a) A/C.....	HA-146
Lubricants.....	MA-12
Lubrication circuit (engine) .....	LC-3
Lubrication-locks, hinges and hood latches .....	MA-29
Luggage room lamp.....	EL-103

## M

MAFS - Wiring diagram .....	EC-185, 191, 482
Magnet clutch.....	HA-104, 150
MAIN - Wiring diagram.....	EC-154
Main oil pump (Transfer).....	TF-130
Mainshaft (Transfer).....	TF-124
Maintenance (engine) .....	MA-14
MAJOR OVERHALL.....	AT-279
Major overhaul (Transfer).....	TF-119
Malfunction indicator lamp (MIL).....	EC-87
Mass air flow sensor (MAFS) .....	EC-182, 189, 480
Master cylinder (brake) .....	BR-14
Meter .....	EL-129
METER - Wiring diagram.....	EL-134
MIL & Data link connectors circuit .....	EC-720
MIL/DL - Wiring diagram .....	EC-720
MIRROR - Wiring diagram.....	EL-219
Mirror defogger .....	EL-187
Mirror, door.....	BT-59
Mirror, out side .....	BT-59
Misfire .....	EC-311
Mode door control linkage adjustment.....	HA-81
Mode door motor.....	HA-75
Model variation .....	GI-43

Molding - See Exterior .....	BT-36
Multi-remote control system - See Remote keyless entry system.....	EL-423
Multiplex communication .....	HA-142
Multiport fuel injection (MFI) system .....	EC-30
Multiport fuel injection precautions.....	GI-6

## N

NATS (Nissan anti-theft system) - See IVMS.....	EL-499
NATS (Nissan anti-theft system) precautions .....	GI-3
NATS - Wiring diagram.....	EL-501
NAVI - wiring diagram.....	EL-528
Navigation System .....	EL-519
Neutral-4LO switch .....	TF-111
NVH troubleshooting (AX).....	AX-3, 19
NVH troubleshooting (BR).....	BR-6
NVH troubleshooting (PD).....	PD-4
NVH troubleshooting (ST).....	ST-6
NVH troubleshooting (SU) .....	SU-3, 17

## O

O2H1B1 - Wiring diagram.....	EC-169
O2H1B2 - Wiring diagram.....	EC-170
O2H2B1 - Wiring diagram.....	EC-177
O2H2B2 - Wiring diagram.....	EC-178
O2S1B1 - Wiring diagram.....	EC-233, 243, 256
O2S1B2 - Wiring diagram.....	EC-234, 244, 257
O2S2B1 - Wiring diagram .....	EC-264, 274, 549, 560
O2S2B2 - Wiring diagram .....	EC-265, 275, 550, 561
Oil change (capacity) .....	MA-12
Oil filter (Transfer) .....	TF-117
Oil pan (engine) .....	EM-16
Oil pressure (engine) .....	LC-5
Oil pump (A/T).....	AT-295
Oil pump (engine) .....	LC-6
Oil pump regulator valve (engine) .....	LC-7
Oil seal replacement (engine).....	EM-39
Oil seal replacement (front final drive 4WD).....	PD-16
Oil seal replacement (front of final drive).....	PD-41
On board diagnostic system .....	EC-71
ORVR (On-board Refueling Vapor Recovery).....	EC-40
Out side mirror .....	BT-59
Overdrive control switch.....	AT-261
Overheat.....	EC-576
Overrun clutch.....	AT-318
Overrun clutch solenoid valve.....	AT-189

## P

P/ANT - Wiring diagram.....	EL-210
-----------------------------	--------

# ALPHABETICAL INDEX

Park/Neutral position switch.....	EC-663
Park/neutral position switch (A/T).....	AT-104, 261
Parking brake control .....	BR-28
Parking lamp .....	EL-72
PCV (positive crankcase ventilation) .....	EC-49
Periodic maintenance .....	MA-7
PGC/V - Wiring diagram .....	EC-373, 599
PHASE - Wiring diagram .....	EC-335
Pinion bearing preload diff. ....	PD-26
Pinion gear height diff. ....	PD-26, 54
Piston assembly.....	EM-73
Piston pin inspection .....	EM-65
Piston ring inspection.....	EM-66
Piston to bore clearance.....	EM-68
Planetary carrier (Transfer).....	TF-133
PNP/SW - Wiring diagram .....	EC-666
POS - Wiring diagram.....	EC-328, 590
POWER - Wiring diagram.....	EL-11
Power antenna.....	EL-209
Power door lock.....	EL-399
Power door mirror.....	EL-219
Power seat.....	EL-222
Power steering fluid level.....	MA-27, ST-8
Power steering gear.....	ST-17
Power steering hydraulic pressure .....	ST-10
Power steering oil pressure switch .....	EC-705
Power steering oil pump.....	ST-27
Power steering system bleeding.....	ST-9
Power supply routing .....	EL-10
Power transistor & ignition coil.....	EC-677
Power window.....	EL-377
PRE/SE - Wiring diagram .....	EC-386, 392
Precautions for Leak detection dye .....	HA-3
Precautions (General) .....	GI-5
Pressure test (A/T).....	AT-62
Propeller shaft .....	PD-3
Propeller shaft greasing.....	MA-24
Propeller shaft inspection .....	MA-24
Propeller shaft on vehicle service .....	PD-7
Propeller shaft vibration .....	PD-7
PST/SW - Wiring diagram.....	EC-706

## R

Rack retainer adjustment.....	ST-8
Radiator .....	LC-21, 23
Radio - See Audio.....	EL-200
Rear air spoiler .....	BT-36
Rear axle .....	AX-18
Rear bumper .....	BT-16
Rear case (Transfer).....	TF-122
Rear combination lamp removal and installation .....	BT-36
Rear cover packing replacement diff. ....	PD-17
Rear door .....	BT-21
Rear drum brake .....	BR-24
Rear seat .....	BT-45
Rear seat belt.....	RS-5
Rear side window .....	BT-58
Rear suspension .....	SU-17

Rear washer.....	EL-178
Rear window defogger.....	EL-187
Rear wiper.....	EL-178
REF - Wiring diagram .....	EC-583
Refrigerant pressure sensor .....	HA-111
Refrigerant connection precaution .....	HA-4
Refrigerant discharging evacuating charging .....	HA-144
Refrigerant general precaution.....	HA-3
Refrigerant lines .....	HA-154
Refrigerant pressure sensor.....	EC-710
Refrigeration cycle.....	HA-15
REMOTE - Wiring diagram.....	EL-208
Remote keyless entry system.....	EL-423
Removal and installation (A/T).....	AT-275
Removal and installation (Transfer) .....	TF-118
Reverse clutch.....	AT-312
Revolution sensor (A/T).....	AT-116
Ring gear diff. inspection .....	PD-24, 48
Road wheel size .....	GI-46
Roof trim .....	BT-33
Room lamp - See Interior lamp .....	EL-103
RP/SEN - Wiring diagram.....	EC-711

## S

SAE J1930 terminology list .....	GI-54
Screw jack .....	GI-47
Seal - See Exterior .....	BT-36
SEAT - Wiring diagram .....	EL-222
Seat belt inspection .....	MA-30, RS-7
Seat belt pre-tensioner.....	RS-3
Seat belt pre-tensioner disposal .....	RS-22
Seat belt, front.....	RS-4
Seat belt, rear.....	RS-5
Seat, front .....	BT-42
Seat, rear .....	BT-45
Self-diagnosis (Transfer).....	TF-27
SHIFT - Wiring diagram .....	AT-264
Shift lock system .....	AT-263
Shift schedule.....	AT-354
Shift solenoid valve A (A/T) ..	AT-126, 138, 148, 171
Shift solenoid valve B (A/T) ..	AT-126, 132, 148, 175
Shock absorber (rear) .....	SU-20
Side air bag .....	RS-21
Side bearing preload (front final drive 4WD).....	PD-25
Side trim.....	BT-29
Side window - See Rear side window .....	BT-58
Smart entrance control unit .....	EL-485
SMJ (super multiple junction) .....	Foldout
Spare tire size .....	GI-46
Spark plug replacement.....	MA-20
Specification value .....	EC-148
Speedometer.....	EL-129
Spiral cable.....	RS-16
Spot lamp.....	EL-103
Spring (Wheelarch) height .....	SU-6
SROOF - Wiring diagram .....	EL-214

# ALPHABETICAL INDEX

SRS - See Supplemental Restraint System .....RS-10

SRS - Wiring diagram .....RS-35

S/SIG - Wiring diagram .....EC-693

Stabilizer bar (front).....SU-12

Stabilizer bar (rear) .....SU-22

Stall test (A/T) .....AT-59

Standardized relay .....EL-8

START - Wiring diagram.....SC-11

Start signal .....EC-692

Starter .....SC-18

Starting system.....SC-10

Steering gear, linkage and transfer gear inspection.....MA-27

Steering linkage .....ST-17

Steering switch.....EL-33

Steering transfer gear .....ST-15

Steering wheel and column.....ST-11

Steering wheel play .....ST-7

Steering wheel turning force.....ST-9

Stop lamp.....EL-82

STOP/L - Wiring diagram.....EL-82

Strut (front) .....SU-9

Sub-oil pump (Transfer) .....TF-130

Sun gear (Transfer).....TF-133

Sunload sensor .....HA-136

Sunroof.....BT-46

Sunroof, electric .....EL-213

Supplemental Restraint System.....RS-10

Supplemental restraint system - Wiring diagram.....RS-35

Suspension .....MA-28

S/VCSW - Wiring diagram .....EC-572

Swirl control valve control solenoid valve .....EC-492, 515

Swirl control valve control vacuum check switch .....EC-570

SWL/V - Wiring diagram .....EC-496, 517

Symbols and abbreviations.....GI-11

Symptom matrix chart .....EC-130

System readiness test (SRT) code .....EC-73

T

2-4WD shift solenoid valve .....TF-110

Tachometer .....EL-129

Tail lamp.....EL-72

TAIL/L - Wiring diagram .....EL-75

TCM circuit diagram.....AT-13

TCM inspection table .....AT-93

Theft warning system - See Vehicle security (Theft warning) system .....EL-452

Thermometer.....EL-144

Thermostat.....LC-18

Three way catalyst function (Bank 1) .....EC-338

Three way catalyst function (Bank 2) .....EC-338

Three way catalyst precautions.....GI-6

Throttle body .....EM-12

Throttle position sensor (TPS) .....EC-206, 217

Throttle position sensor adjustment .....EC-116

Throttle position switch .....EC-467, AT-184, 262

Tie-rod.....ST-21

Tie-rod ball joints.....ST-21

Tightening torque of standard bolts.....GI-52

Timing chain.....EM-21

Tire rotation .....MA-25

Tire size .....GI-46

TLID - Wiring diagram .....EL-220

Tooth contact (front final drive 4WD) .....PD-30

Tooth contact diff. ....PD-57

Torque converter clutch solenoid valve .....AT-153, 161

Torque converter installation .....AT-276

Tow truck towing .....GI-49

Towing point.....GI-51

TP/SW - Wiring diagram .....EC-470

TPS - Wiring diagram.....EC-211, 220

Transfer control unit inspection table.....TF-55

Transfer dropping resistor .....TF-111

Transfer fluid replacement (All-mode 4WD model) .....MA-23

Transfer fluid temperature sensor .....TF-110

Transfer motor.....TF-117

Transfer motor relay.....TF-112

Transfer serial number .....GI-45

Tread-FR&RR (Dimensions).....GI-45

Trim .....BT-29

TRNSCV - Wiring diagram .....EL-495

Trouble diagnoses .....GI-35

Turbine revolution sensor.....AT-202

TURN - Wiring diagram .....EL-91

Turn signal lamp .....EL-89

Two trip detection logic .....EC-71

Two-pole lift .....GI-49

U

Under body .....BT-63

V

Vacuum cut valve .....EC-34

Vacuum cut valve bypass valve.....EC-34, 644, 650

Vacuum hose (brake system).....BR-19

Vacuum hose drawing (Engine control) .....EC-28

Valve clearance.....EM-54

Valve guide.....EM-46

Valve seat.....EM-47

Valve spring.....EM-49

Vanity mirror lamp .....EL-103

Vehicle identification number.....GI-44

Vehicle recovery (freeing a stuck vehicle).....GI-51

Vehicle security (theft warning) system .....EL-452

Vehicle speed sensor (VSS) .....EC-438

VEHSEC - Wiring Diagram.....EL-460

VENT/V - Wiring diagram .....EC-379, 610, 619

VIAS .....EC-669



# ALPHABETICAL INDEX

VIAS/V - Wiring diagram .....EC-671  
 Viscosity number (SAE) .....MA-13  
 VSS - Wiring diagram .....EC-440

W
---

Wait detection switch.....TF-111  
 WARN - Wiring diagram .....EL-149  
 Warning chime .....EL-159  
 Warning lamps .....EL-148  
 Washer, front.....EL-173  
 Washer, rear.....EL-178  
 Water pump .....LC-13  
 Water temperature gauge .....EL-129  
 Weatherstrip - See Exterior .....BT-36  
 Wheel balance .....MA-25  
 Wheel bearing (front).....AX-4  
 Wheel bearing (rear) .....AX-19  
 Wheel hub (front).....AX-6  
 Wheel sensors (ABS).....BR-54, 78

Wheel size .....GI-46  
 Wheelarch height .....SU-6  
 Wheelbase (Dimensions) .....GI-45 **GI**  
 Wide open & closed throttle position  
     switch.....EC-206, 217  
 Width (Dimensions) .....GI-45 **MA**  
 WINDOW - Wiring diagram .....EL-381  
 Window, door .....BT-19 **EM**  
 Window, rear side .....BT-58  
 Window, side - See Rear side window .....BT-58  
 Windshield.....BT-56 **LC**  
 WIP/R - Wiring diagram .....EL-180  
 WIPER - Wiring diagram .....EL-175  
 Wiper, front.....EL-173 **EC**  
 Wiper, rear .....EL-178  
 Wiring Diagram (Cell code) list.....EL-591  
 Wiring diagram (Transfer) .....TF-18 **FE**  
 Wiring diagrams.....GI-12  
 Wrist pin - See Piston pin inspection.....EM-65 **AT**

**TF**

**PD**

**AX**

**SU**

**BR**

**ST**

**RS**

**BT**

**HA**

**SC**

**EL**

**IDX**

## NOTES