

---

## ALPHABETICAL INDEX

---

### Numerics

---

4WD BRANCH LINE CIRCUIT ..LAN-63, LAN-201,  
LAN-220, LAN-240, LAN-262, LAN-286

### A

---

A-BAG BRANCH LINE CIRCUIT .LAN-58, LAN-90,  
LAN-107, LAN-126, LAN-146, LAN-168,  
LAN-199, LAN-217, LAN-237, LAN-258,  
LAN-281

A/T CONTROL SYSTEM ..... TM-8

A/T FLUID ..... TM-174

A/T FLUID COOLER ..... TM-177

A/T POSITION ..... TM-181

A/T SHIFT SELECTOR ..... TM-182

ABBREVIATIONS ..... GI-14

ABS ..... BRC-20

ABS ACTUATOR AND ELECTRIC UNIT  
(CONTROL UNIT)BRC-129, BRC-159, DAS-328

ABS BRANCH LINE CIRCUIT ..... LAN-72, LAN-97,  
LAN-116, LAN-136, LAN-157, LAN-181,  
LAN-207, LAN-227, LAN-248, LAN-270,  
LAN-295

ABS FUNCTION DOES NOT OPERATE. BRC-148

ABS WARNING LAMP ..... BRC-125

ACC WARNING DOES NOT OPERATE... DLK-211

ACCELERATOR CONTROL SYSTEM ..... ACC-4

ACCELERATOR PEDAL ACTUATOR .....DAS-167

ACCELERATOR PEDAL ASSEMBLY.....DAS-203

ACCS (ADVANCE CLIMATE CONTROL SYSTEM)  
HAC-29

ACTION TEST .....DAS-259, DAS-392

ACTIVE ADAPTIVE FRONT-LIGHTING SYSTEM .  
EXL-21

ADDITIONAL SERVICE WHEN REPLACING BCM  
WT-21

ADP BRANCH LINE CIRCUIT ... LAN-70, LAN-115,  
LAN-135, LAN-156, LAN-179, LAN-226,  
LAN-247, LAN-269, LAN-293

AFS BRANCH LINE CIRCUIT ...LAN-59, LAN-108,  
LAN-147, LAN-169, LAN-218, LAN-259,  
LAN-282

AFS CONTROL UNIT ..... EXL-205, EXL-243

AIR BREATHER HOSE..... TM-204

AIR CLEANER AND AIR DUCT.....EM-27

AIR CLEANER FILTER .....EM-22

AIR CONDITIONER CONTROL .....HAC-116

AIR CONDITIONING CUT CONTROL..... EC-68

AIR DISTRIBUTION ..... VTL-6

AIR MIX DOOR CONTROL SYSTEM..... HAC-36

AIR MIX DOOR MOTOR..... HAC-54

ALTERNATOR..... CHG-31

AMBIENT SENSOR .....HAC-67, HAC-129

ANTENNA BASE ..... AV-132, AV-276, AV-504

ANTENNA FEEDER.....AV-142, AV-286, AV-519

ANTI-PINCH FUNCTION DOES NOT OPERATE ..  
SE-113

ANTI-PINCH FUNCTION DOES NOT OPERATE  
NORMALLY.....PWC-117

APA BRANCH LINE CIRCUIT ....LAN-75, LAN-184,  
LAN-298

APPLICATION NOTICE ..... SN-3

AROUND VIEW MONITOR CONTROL UNIT.....  
AV-340, AV-511

ASCD BRAKE SWITCH ..... EC-497

ASCD INDICATOR ..... EC-500

AUTO ANTI-DAZZLING INSIDE MIRROR SYSTEM  
MIR-26, MIR-142

AUTO DOOR LOCK OPERATION DOES NOT  
OPERATE ..... DLK-199

AUTO LIGHT SYSTEMEXL-15, EXL-100, EXL-258,  
EXL-314

AUTO OPERATION DOES NOT OPERATE. RF-74

AUTO OPERATION DOES NOT OPERATE BUT  
MANUAL OPERATES NORMALLY ...PWC-118

AUTOMATIC AIR CONDITIONER SYSTEMHAC-17

AUTOMATIC DRIVE POSITIONER CONTROL UNIT  
ADP-143, ADP-222, MIR-52

AUTOMATIC DRIVE POSITIONER SYSTEM.....  
ADP-13

AUTOMATIC SPEED CONTROL DEVICE (ASCD)  
CCS-181, EC-77

AV BRANCH LINE CIRCUIT .....LAN-60, LAN-91,  
LAN-109, LAN-127, LAN-148, LAN-170,  
LAN-200, LAN-219, LAN-238, LAN-260,  
LAN-283

AV CONTROL UNIT ..... AV-35, AV-126, AV-167,  
AV-266, AV-328, AV-495

AVM BRANCH LINE CIRCUIT ...LAN-67, LAN-132,  
LAN-153, LAN-176, LAN-244, LAN-266,  
LAN-290

AWD CONTROL UNIT ..... DLN-20, DLN-61

AWD SYSTEM .....DLN-23

AWD WARNING LAMP .....DLN-52

AWD WARNING LAMP BLINKS QUICKLY .DLN-57

AWD WARNING LAMP BLINKS SLOWLY..DLN-58

AWD WARNING LAMP DOES NOT TURN OFF ....  
DLN-54

AWD WARNING LAMP DOES NOT TURN ON.....  
DLN-53

### B

---

B TERMINAL CIRCUIT ..... CHG-14, STR-9

B0001 DRIVER AIR BAG MODULE ..... SRC-22

B0002 DRIVER AIR BAG MODULE ..... SRC-25

B0010 PASSENGER AIR BAG MODULE .. SRC-28

B0011 PASSENGER AIR BAG MODULE .. SRC-30

B0020 SIDE AIR BAG MODULE ..... SRC-32

B0021 CURTAIN AIR BAG MODULE.....	SRC-34	B2516 SHIFT SIGNAL [P, R] .....	EXL-54
B0028 SIDE AIR BAG MODULE .....	SRC-36	B2517 VEHICLE SPEED SIGNAL .....	EXL-55
B0029 CURTAIN AIR BAG MODULE.....	SRC-38	B2519 LEVELIZER CALIBRATION .....	EXL-56
B0091 SATELLITE SENSOR .....	SRC-40	B2521 ECU CIRCUIT .....	EXL-57
B0093 FRONT DOOR SATELLITE SENSOR LH....	SRC-42	B2553 IGNITION RELAY .....	PCS-52
B0094 CRASH ZONE SENSOR .....	SRC-44	B2555 STOP LAMP.....	SEC-47
B0096 SATELLITE SENSOR .....	SRC-46	B2556 PUSH-BUTTON IGNITION SWITCH.....	SEC-49
B0098 FRONT DOOR SATELLITE SENSOR RH...	SRC-48	B2557 VEHICLE SPEED .....	SEC-51
B0099 SATELLITE SENSOR .....	SRC-50	B2560 STARTER CONTROL RELAY .....	SEC-52
B00A0 OCCUPANT CLASSIFICATION SYSTEM		B2562 LOW VOLTAGE.....	BCS-44
CONTROL UNIT .....	SRC-52	B2601 SHIFT POSITION .....	SEC-53
B00D5 FRONT PASSENGER AIR BAG OFF		B2602 SHIFT POSITION .....	SEC-56
INDICATOR .....	SRC-54	B2603 SHIFT POSITION STATUS .....	SEC-59
B1400, B1401, B1402, B1403, B1404, B1405 AIR		B2604 PNP SWITCH.....	SEC-62
BAG DIAGNOSIS SENSOR UNIT .....	SRC-56	B2605 PNP SWITCH.....	SEC-64
B1406, B1407, B1408, B1409, B1410 AIR BAG		B2608 STARTER RELAY .....	SEC-66
DIAGNOSIS SENSOR UNIT .....	SRC-58	B260A IGNITION RELAY .....	PCS-54
B1411, B1412, B1413, B1414, B1415 AIR BAG		B260F ENGINE STATUS.....	SEC-68
DIAGNOSIS SENSOR UNIT .....	SRC-60	B2614 ACC RELAY .....	PCS-56
B1416, B1417, B1418, B1419, B1420 AIR BAG		B2615 BLOWER RELAY CIRCUIT .....	PCS-59
DIAGNOSIS SENSOR UNIT .....	SRC-62	B2616 IGNITION RELAY CIRCUIT .....	PCS-62
B1421 FRONTAL COLLISION DETECTION.....	SRC-64	B2617 STARTER RELAY CIRCUIT .....	SEC-71
B1422 SIDE COLLISION DETECTION .....	SRC-65	B2618 BCM .....	PCS-65
B1425 REAR COLLISION DETECTION ....	SRC-66	B261A PUSH-BUTTON IGNITION SWITCH.....	PCS-66,
B142A IGN VOLTAGE .....	SRC-67		SEC-73
B1430 SEAT BELT PRE-TENSIONER.....	SRC-69	B261E VEHICLE TYPE .....	SEC-76
B1431 SEAT BELT PRE-TENSIONER.....	SRC-71	B2621 INSIDE KEY ANTENNA 1 .....	DLK-58
B1500 DOOR SATELLITE SENSOR.....	SRC-73	B2622 INSIDE ANTENNA .....	DLK-60
B2098 IGNITION RELAY ON STUCK .....	PCS-15	B2623 INSIDE KEY ANTENNA 3 .....	DLK-62
B2099 IGNITION RELAY OFF STUCK .....	PCS-17	B26E1 NO RECEPTION OF ENGINE STATUS	
B210B STARTER CONTROL RELAY .....	SEC-77	SIGNAL .....	SEC-69
B210C STARTER CONTROL RELAY .....	SEC-78	B26EA KEY REGISTRATION.....	SEC-70
B210D STARTER RELAY .....	SEC-80	B2700 CORNER SENSOR [FL] .....	SN-36
B210E STARTER RELAY .....	SEC-82	B2701 SENSOR HARNESS OPEN [CR-FL].....	SN-37
B210F PNP/CLUTCH INTERLOCK SWITCH .....	SEC-84	B2702 CORNER SENSOR [FR].....	SN-38
B2110 PNP/CLUTCH INTERLOCK SWITCH.....	SEC-86	B2703 SENSOR HARNESS OPEN [CR-FR].....	SN-39
B2112 SLIDING MOTOR.....	ADP-48	B2704 CORNER SENSOR [RL] .....	SN-40
B2113 RECLINING MOTOR.....	ADP-50	B2705 SENSOR HARNESS OPEN [CR-RL].....	SN-41
B2116 TILT MOTOR .....	ADP-52	B2706 CORNER SENSOR [RR] .....	SN-42
B2128 UART COMMUNICATION LINE.....	ADP-54	B2707 SENSOR HARNESS OPEN [CR-RR].....	SN-43
B2130 EEPROM.....	ADP-55	B2708 CENTER SENSOR [BL] .....	SN-44
B2190 NATS ANTENNA AMP. ....	SEC-40	B2709 SENSOR HARNESS OPEN [CT-BL] .....	SN-45
B2191 DIFFERENCE OF KEY .....	SEC-43	B270A CENTER SENSOR [BR] .....	SN-46
B2192 ID DISCORD, IMMU-ECM .....	SEC-44	B270B SENSOR HARNESS OPEN [CT-BR].....	SN-47
B2193 CHAIN OF ECM-IMMU .....	SEC-45	B270C CENTER SENSOR [FL].....	SN-48
B2195 ANTI-SCANNING .....	SEC-46	B270D SENSOR HARNESS OPEN [CT-FL] .....	SN-49
B2201 COMMUNICATION ERROR 1 .....	MWI-45	B270E CENTER SENSOR [FR] .....	SN-50
B2202 COMMUNICATION ERROR 2 .....	MWI-47	B270F SENSOR HARNESS OPEN [CT-FR] .....	SN-51
B2205 VEHICLE SPEED.....	MWI-49	B2720 CORNER SENSOR [RL] .....	AV-396
B2267 ENGINE SPEED .....	MWI-50	B2723 CORNER SENSOR [RR] .....	AV-399
B2268 WATER TEMP.....	MWI-51	B2724 SONAR CONTROL UNIT .....	AV-402
B2503, B2504 SWIVEL ACTUATOR.....	EXL-45	B2729 CORNER SENSOR [FL] .....	AV-403
B2514 HEIGHT SENSOR UNUSUAL [RR] .....	EXL-51	B272C CORNER SENSOR [FR] .....	AV-406
		BACK DOOR .....	DLK-248
		BACK DOOR DOES NOT OPENED .....	DLK-193
		BACK DOOR FINISHER .....	EXT-50

BACK DOOR LOCK.....DLK-266  
 BACK DOOR OPENER ACTUATOR.....DLK-76  
 BACK DOOR OPENER SWITCH.....DLK-83  
 BACK DOOR OPENER SYSTEM.....DLK-45  
 BACK DOOR REQUEST SWITCH.....DLK-87  
 BACK DOOR TRIM.....INT-37  
 BACK DOOR WINDOW GLASS.....GW-15  
 BACK-UP LAMP .....EXL-145, EXL-249, EXL-359,  
 EXL-444  
 BASE AUDIO WITHOUT NAVIGATION.....AV-50  
 BATTERY.....PG-3, PG-117  
 BATTERY TERMINAL WITH FUSIBLE LINKPG-119  
 BCM.....WT-12  
 BCM (BODY CONTROL MODULE).....ADP-161,  
 BCS-50, BCS-97, DEF-28, DLK-141, EXL-149,  
 EXL-363, INL-59, MIR-70, PCS-82, PWC-36,  
 RF-16, SEC-133, WCS-75, WW-49  
 BCM BRANCH LINE CIRCUIT ...LAN-64, LAN-92,  
 LAN-110, LAN-129, LAN-150, LAN-173,  
 LAN-202, LAN-221, LAN-241, LAN-263,  
 LAN-287  
 BCU BRANCH LINE CIRCUIT ...LAN-76, LAN-185,  
 LAN-299  
 BLIND SPOT WARNING.....DAS-377  
 BLOWER MOTOR.....HAC-59  
 BLOWER MOTOR CONTROL SYSTEM...HAC-40  
 BLOWER UNIT.....VTL-19  
 BODY ALIGNMENT.....BRM-63  
 BODY COMPONENT PARTS.....BRM-11  
 BODY CONSTRUCTION.....BRM-29  
 BODY CONTROL SYSTEM.....BCS-8  
 BODY EXTERIOR PAINT COLOR.....BRM-2  
 BODY MAINTENANCE.....MA-35  
 BODY SIDE TRIM.....INT-21  
 BOSE AMP.....AV-178, AV-274, AV-337, AV-503  
 BOSE AUDIO WITH NAVIGATION.....AV-352  
 BOSE AUDIO WITHOUT NAVIGATION.....AV-185  
 BOTH SIDE FRONT FOG LAMPS ARE NOT  
 TURNED ON.....EXL-227, EXL-425  
 BOTH SIDE HEADLAMPS (HI) ARE NOT TURNED  
 ON.....EXL-224, EXL-422  
 BOTH SIDE HEADLAMPS (LO) ARE NOT TURNED  
 ON.....EXL-225, EXL-423  
 BRAKE BOOSTER.....BR-16, BR-32  
 BRAKE BOOSTER CONTROL UNIT ....CCS-158,  
 CCS-178, DAS-165, DAS-201  
 BRAKE BOOSTER PRESSURE SENSOR ..BR-35  
 BRAKE FLUID.....BR-13  
 BRAKE MASTER CYLINDER.....BR-15, BR-28  
 BRAKE PEDAL.....BR-10, BR-21  
 BRAKE PIPING.....BR-23  
 BRAKE WARNING LAMP.....BRC-126  
 BSW BRANCH LINE CIRCUIT ..LAN-71, LAN-180,  
 LAN-294  
 BSW COMMUNICATION CIRCUIT.....LAN-83,  
 LAN-192, LAN-306

BSW CONTROL MODULE .....DAS-370, DAS-436  
 BSW INDICATOR.....DAS-439  
 BSW SYSTEM SYMPTOMS.....DAS-434  
 BUZZER (BACKWARD).....SN-64  
 BUZZER (COMBINATION METER).....DLK-104  
 BUZZER CIRCUIT .....SN-55

## C

C0126 STEERING ANGLE SENSOR SIGNAL.....  
 EXL-60  
 C0428 STEERING ANGLE SENSOR  
 CALIBRATION .....EXL-61  
 C1101, C1102, C1103, C1104 WHEEL SENSOR...  
 BRC-36  
 C1105, C1106, C1107, C1108 WHEEL SENSOR...  
 BRC-41  
 C1109 POWER AND GROUND SYSTEM .BRC-48  
 C1110, C1153 ABS ACTUATOR AND ELECTRIC  
 UNIT (CONTROL UNIT) .....BRC-50  
 C1111 ABS MOTOR, MOTOR RELAY SYSTEM ....  
 BRC-52  
 C1115 WHEEL SENSOR .....BRC-55  
 C1116 STOP LAMP SWITCH.....BRC-62  
 C1120, C1122, C1124, C1126 IN ABS SOLBRC-67  
 C1121, C1123, C1125, C1127 OUT ABS SOL.....  
 BRC-69  
 C1130 ENGINE SIGNAL.....BRC-71  
 C1140 ACTUATOR RELAY SYSTEM .....BRC-73  
 C1142 PRESS SENSOR.....BRC-75  
 C1143 STEERING ANGLE SENSOR .....BRC-78  
 C1144 INCOMPLETE STEERING ANGLE SENSOR  
 ADJUSTMENT .....BRC-82  
 C1145, C1146 YAW RATE/SIDE G SENSOR .....  
 BRC-84  
 C1154 TRANSMISSION RANGE SWITCH BRC-87  
 C1155 BRAKE FLUID LEVEL SWITCH.....BRC-89  
 C1164, C1165 CV SYSTEM.....BRC-94  
 C1166, C1167 SV SYSTEM .....BRC-96  
 C1170 VARIANT CODING .....BRC-98  
 C1185 ICC UNIT .....BRC-99  
 C1197 VACUUM SENSOR.....BRC-101  
 C1198 VACUUM SENSOR.....BRC-104  
 C1199 VACUUM SENSOR.....BRC-107  
 C119A VACUUM SENSOR.....BRC-110  
 C1201 AWD CONTROL UNIT.....DLN-34  
 C1203 ABS ACTUATOR AND ELECTRIC UNIT  
 (CONTROL UNIT).....DLN-35  
 C1204 AWD SOLENOID.....DLN-36  
 C1205 AWD ACTUATOR RELAY.....DLN-39  
 C1210 ECM.....DLN-41  
 C1704, C1705, C1706, C1707 LOW TIRE  
 PRESSURE .....WT-25  
 C1708, C1709, C1710, C1711 TIRE PRESSURE  
 SENSOR.....WT-27  
 C1716, C1717, C1718, C1719 TIRE PRESSURE  
 SENSOR.....WT-30

C1729 VEHICLE SPEED SIGNAL .....	WT-32	C1B50 SIDE RADAR MALFUNCTION .....	DAS-397
C1734 BCM .....	WT-34	C1B51 BSW/BSI INDICATOR SHORT CIRCUIT ....	DAS-398
C1A00 CONTROL UNIT	CCS-47, DAS-33, DAS-394	C1B52 BSW/BSI INDICATOR OPEN CIRCUIT .....	DAS-399
C1A01 POWER SUPPLY CIRCUIT 1, C1A02		C1B53 SIDE RADAR RIGHT MALFUNCTION.....	DAS-401
POWER SUPPLY CIRCUIT 2	CCS-49, DAS-35,	C1B54 SIDE RADAR LEFT MALFUNCTION .....	DAS-402
DAS-395		C1B55 RADAR BLOCKAGE .....	DAS-403
C1A03 VEHICLE SPEED SENSOR .....	CCS-51,	C1F01 ACCELERATOR PEDAL ACTUATOR .....	DAS-108
DAS-37, DAS-396		C1F02 ACCELERATOR PEDAL ACTUATOR .....	DAS-110
C1A04 ABS/TCS/VDC SYSTEM.	CCS-53, DAS-39	C1F03 ACCELERATOR PEDAL ACTUATOR .....	DAS-111
C1A05 BRAKE SW/STOP LAMP SW .....	CCS-55,	C1F05 ACCELERATOR PEDAL ACTUATOR	
DAS-41		POWER SUPPLY CIRCUIT.....	DAS-113
C1A06 OPERATION SW .....	CCS-60, DAS-46	C1F06 CAN CIRCUIT2 .....	DAS-115
C1A08 PRESSURE SENSOR.....	CCS-63, DAS-49	C1F07 CAN CIRCUIT1 .....	DAS-117
C1A09 BOOSTER SOLENOID ...	CCS-65, DAS-51	CAMERA IMAGE SIGNAL CIRCUIT .....	AV-108,
C1A10 RELEASE SWITCH.....	CCS-68, DAS-54	AV-248, AV-471	
C1A11 PRESSURE CONTROL...	CCS-71, DAS-57	CAMSHAFT .....	EM-95
C1A12 LASER BEAM OFF CENTER.....	CCS-74,	CAMSHAFT VALVE CLEARANCE .....	EM-11
DAS-60		CAN COMMUNICATION .....	EC-87
C1A13 STOP LAMP RELAY .....	CCS-75, DAS-61	CAN COMMUNICATION CIRCUIT	LAN-79, LAN-99,
C1A14 ECM.....	CCS-82, DAS-68	LAN-118, LAN-138, LAN-159, LAN-188,	
C1A15 GEAR POSITION .....	CCS-84, DAS-70	LAN-209, LAN-229, LAN-250, LAN-272,	
C1A16 RADAR STAIN.....	CCS-87, DAS-73	LAN-302	
C1A18 LASER AIMING INCMP ..	CCS-89, DAS-75	CAN COMMUNICATION SYSTEM	HAC-33, LAN-9,
C1A21 UNIT HIGH TEMP .....	CCS-91, DAS-77	LAN-27, LAN-32	
C1A22 BCU CIRCUIT .....	CCS-93, DAS-79	CANNOT ADJUST HEATED SEAT TEMPERATURE	SE-117
C1A24 NP RANGE .....	CCS-97, DAS-83	CENTER CONSOLE ASSEMBLY .....	IP-23
C1A28 BCU POWER SUPPLY CIRCUIT, C1A29		CENTER MUD GUARD.....	EXT-29
BCU POWER SUPPLY CIRCUIT2.....	CCS-99,	CENTER SPEAKER .....	AV-272, AV-501
DAS-85		CHARGING SYSTEM..	CHG-10, CHG-19, CHG-24
C1A30 BCU CAN COMM CIRC	CCS-101, DAS-87	CHARGING SYSTEM PRELIMINARY INSPECTION	CHG-28
C1A31 BCU INTERNAL MALF..	CCS-102, DAS-88	CHASSIS MAINTENANCE .....	MA-22
C1A32 IBA FLAG STUCK .....	CCS-104, DAS-90	CHIME DOES NOT SOUND ...	CCS-166, DAS-190
C1A33 CAN TRANSMISSION ERROR...	CCS-106,	CIGARETTE LIGHTER ILLUMINATION.....	INL-107
DAS-92		CLOCK .....	MWI-36, MWI-67, MWI-140
C1A34 COMMAND ERROR.....	CCS-108, DAS-94	COLLISION DIAGNOSIS.....	SR-5
C1A35 ACCELERATOR PEDAL ACTUATOR.....	DAS-96	COMBINATION METERMWI-69, MWI-136, WCS-34	
C1A36 ACCELERATOR PEDAL ACTUATOR CAN		COMBINATION METER DISPLAY FUNCTION.....	DLK-103
COMM .....	DAS-97	COMBINATION SWITCH .....	BCS-98
C1A37 ACCELERATOR PEDAL ACTUATOR CAN 2		COMBINATION SWITCH INPUT CIRCUIT	BCS-46
DAS-99		COMBINATION SWITCH OUTPUT CIRCUIT .....	BCS-48
C1A38 ACCELERATOR PEDAL ACTUATOR CAN 1		COMBINATION SWITCH READING SYSTEM .....	BCS-10
DAS-101		COMBINATION SWITCH SYSTEM SYMPTOMS ...	BCS-93
C1A39 STEERING ANGLE SENSOR.....	CCS-110,		
DAS-103			
C1A40 SYSTEM SWITCH CIRCUIT .....	CCS-112,		
DAS-105			
C1B00 CAMERA UNIT MALF .....	DAS-289		
C1B00 LDP) CAMERA MALF .....	DAS-300		
C1B01 CAM AIMING INCMP .....	DAS-290		
C1B02 VHCL SPD DATA MALF .....	DAS-291		
C1B03 ABNRML TEMP DETECT .....	DAS-292		
C1B04 LDP) ICC STG SW MALF .....	DAS-301		
C1B05 LDP) APP SEN MALF .....	DAS-302		
C1B06 LDP) TCM MALF .....	DAS-303		
C1B07 ABS DIAGNOSIS .....	DAS-293		

COMMUNICATION SIGNAL CIRCUIT (CONT-SAT)  
[AV-110](#), [AV-250](#)  
 COMPOSITE IMAGE SIGNAL CIRCUIT ... [AV-102](#),  
[AV-241](#), [AV-466](#)  
 COMPRESSION PRESSURE .....[EM-16](#)  
 COMPRESSOR .....[HA-18](#), [HA-37](#)  
 COMPRESSOR CONTROL FUNCTION ... [HAC-13](#)  
 CONDENSER ..... [HA-48](#)  
 CONSULT/GST CHECKING SYSTEM ..... [GI-50](#)  
 CONTROL ROD.....[TM-185](#)  
 CONTROL VALVE & TCM ..... [TM-186](#)  
 CONVENTIONAL (FIXED SPEED) CRUISE  
 CONTROL MODE FUNCTION ..... [CCS-32](#)  
 COOLER PIPE AND HOSE ..... [HA-41](#)  
 COOLING FAN..... [CO-18](#), [EC-501](#)  
 COOLING FAN CONTROL ..... [EC-88](#)  
 CORROSION PROTECTION ..... [BRM-20](#)  
 COWL TOP ..... [EXT-22](#)  
 CRASH ZONE SENSOR ..... [SR-21](#)  
 CURTAIN AIR BAG MODULE.....[SR-19](#)  
 CYLINDER BLOCK.....[EM-122](#)  
 CYLINDER HEAD ..... [EM-112](#)

**D**

DAYTIME RUNNING LIGHT ..... [EXL-237](#), [EXL-435](#)  
 DAYTIME RUNNING LIGHT CIRCUIT..... [EXL-74](#),  
[EXL-288](#)  
 DAYTIME RUNNING LIGHT SYSTEM ..... [EXL-18](#),  
[EXL-108](#), [EXL-261](#), [EXL-322](#)  
 DCA SYSTEM NOT ACTIVATED (SWITCH IS ON)  
[DAS-188](#)  
 DCA SYSTEM SETTING CANNOT BE TURNED  
 ON/OFF FROM THE NAVIGATION SCREEN..  
[DAS-186](#)  
 DIAG ON CAN ..... [LAN-11](#)  
 DIAGNOSIS AND REPAIR WORK FLOW...[ADP-5](#),  
[AV-70](#), [AV-208](#), [AV-379](#), [BRC-5](#), [CCS-5](#), [CHG-3](#),  
[DAS-10](#), [DAS-205](#), [DAS-255](#), [DAS-389](#), [DEF-3](#),  
[DLK-7](#), [DLN-31](#), [EXL-7](#), [EXL-252](#), [HAC-4](#), [INL-3](#),  
[PCS-37](#), [PWC-4](#), [SE-5](#), [SEC-5](#), [SN-34](#), [SRC-3](#),  
[STC-2](#), [STR-2](#), [TM-5](#), [WT-19](#), [WW-3](#)  
 DIAGNOSIS SENSOR UNIT..... [SR-25](#), [SRC-75](#)  
 DIAGNOSIS SYSTEM (ACCELERATOR PEDAL  
 ACTUATOR) .....[DAS-31](#)  
 DIAGNOSIS SYSTEM (AFS)..... [EXL-43](#)  
 DIAGNOSIS SYSTEM (AIRBAG) ..... [SRC-14](#)  
 DIAGNOSIS SYSTEM (AROUND VIEW MONITOR  
 CONTROL UNIT)..... [AV-321](#)  
 DIAGNOSIS SYSTEM (AV CONTROL UNIT)[AV-20](#),  
[AV-152](#), [AV-307](#)  
 DIAGNOSIS SYSTEM (AWD CONTROL UNIT).....  
[DLN-18](#)  
 DIAGNOSIS SYSTEM (BCM)..... [BCS-18](#), [DEF-7](#),  
[DLK-48](#), [EXL-33](#), [EXL-272](#), [INL-15](#), [PCS-44](#),  
[PWC-11](#), [RF-7](#), [SEC-23](#), [WCS-17](#), [WT-9](#),  
[WW-14](#)

DIAGNOSIS SYSTEM (BSW CONTROL MODULE)  
[DAS-366](#)  
 DIAGNOSIS SYSTEM (DRIVER SEAT C/U) .....  
[ADP-43](#), [MIR-9](#)  
 DIAGNOSIS SYSTEM (ECM) ..... [EC-136](#)  
 DIAGNOSIS SYSTEM (ICC SENSOR  
 INTEGRATED UNIT)[CCS-38](#), [DAS-22](#), [DAS-210](#)  
 DIAGNOSIS SYSTEM (IPDM E/R) ..... [EXL-38](#),  
[EXL-277](#), [PCS-9](#), [WW-17](#)  
 DIAGNOSIS SYSTEM (LANE CAMERA UNIT).....  
[DAS-219](#), [DAS-280](#)  
 DIAGNOSIS SYSTEM (METER)..... [MWI-37](#)  
 DIAGNOSIS SYSTEM (SIDE RADAR LH)[DAS-368](#)  
 DIAGNOSIS SYSTEM (SIDE RADAR RH)[DAS-369](#)  
 DIAGNOSIS SYSTEM (SONAR CONTROL UNIT)  
[AV-325](#), [SN-14](#)  
 DIAGNOSIS SYSTEM (TCM) ..... [TM-63](#)  
 DIAGNOSIS SYSTEM (TEL ADAPTER UNIT) .....  
[AV-33](#), [AV-165](#)  
 DIAGNOSIS SYSTEM (UNIFIED METER & A/C  
 AMP.)..... [HAC-44](#)  
 DIAGNOSIS SYSTEM (UNIFIED METER AND A/C  
 AMP.).....[MWI-39](#), [WCS-13](#)  
 DIAGNOSIS SYSTEM [ABS ACTUATOR AND  
 ELECTRIC UNIT (CONTROL UNIT)].. [BRC-30](#),  
[DAS-283](#)  
 DIFFERENTIAL ASSEMBLY.... [DLN-132](#), [DLN-183](#)  
 DIRECT CLUTCH ..... [TM-300](#)  
 DISK EJECT SIGNAL CIRCUIT....[AV-105](#), [AV-244](#),  
[AV-467](#)  
 DISPLAY UNIT .... [AV-43](#), [AV-127](#), [AV-175](#), [AV-267](#),  
[AV-335](#), [AV-496](#)  
 DISTANCE CONTROL ASSIST SYSTEM . [DAS-14](#)  
 DISTANCE CONTROL ASSIST SYSTEM  
 SYMPTOMS..... [DAS-183](#)  
 DLC BRANCH LINE CIRCUIT .....[LAN-65](#), [LAN-93](#),  
[LAN-111](#), [LAN-130](#), [LAN-151](#), [LAN-174](#),  
[LAN-203](#), [LAN-222](#), [LAN-242](#), [LAN-264](#),  
[LAN-288](#)  
 DOES NOT RETURN BUT MALFUNCTION  
 DETECTION BUZZER SOUNDS..... [SE-112](#)  
 DOOR DOES NOT LOCK/UNLOCK WITH DOOR  
 KEY CYLINDER OPERATION .....[DLK-187](#)  
 DOOR DOES NOT LOCK/UNLOCK WITH DOOR  
 LOCK AND UNLOCK SWITCH.....[DLK-184](#)  
 DOOR DOES NOT LOCK/UNLOCK WITH DOOR  
 REQUEST SWITCH.....[DLK-188](#)  
 DOOR DOES NOT LOCK/UNLOCK WITH  
 INTELLIGENT KEY ..... [DLK-191](#)  
 DOOR LOCK ACTUATOR ..... [DLK-71](#)  
 DOOR LOCK AND UNLOCK SWITCH ..... [DLK-69](#)  
 DOOR LOCK OPERATION WARNING DOES NOT  
 OPERATE WITH DOOR REQUEST SWITCH..  
[DLK-217](#)  
 DOOR MIRROR DEFOGGER .....[DEF-15](#)

DOOR MIRROR DEFOGGER DOES NOT OPERATE..... DEF-73  
DOOR MIRROR DOES NOT OPERATE... MIR-113  
DOOR MIRROR MOTOR..... ADP-115  
DOOR MIRROR REMOTE CONTROL SWITCH.... ADP-74, MIR-12, MIR-134, MIR-164  
DOOR MIRROR REMOTE CONTROL SWITCH (MIRROR SWITCH/CHANGEOVER SWITCH). MIR-137  
DOOR MIRROR SYSTEMMIR-4, MIR-17, MIR-135, MIR-138  
DOOR MOTOR..... HAC-137  
DOOR OUTSIDE LOWER MOLDING.....EXT-46  
DOOR OUTSIDE MOLDING.....EXT-43  
DOOR PARTING SEAL.....EXT-48  
DOOR REQUEST SWITCH.....DLK-85  
DOOR SASH MOLDING.....EXT-41  
DOOR SWITCH..... DLK-65, DLK-268, RF-14  
DRIVE BELT..... EM-20  
DRIVE BELT AUTO TENSIONER AND IDLER PULLEY..... EM-26  
DRIVE PINION.....DLN-146, DLN-208  
DRIVER AIR BAG MODULE.....SR-11  
DRIVER SEAT CONTROL UNIT..... ADP-120, ADP-221, MIR-29  
DRIVER SIDE DOOR MIRROR DEFOGGER..... DEF-16  
DRIVER SIDE POWER WINDOW ALONE DOES NOT OPERATE..... PWC-113  
DRIVING FORCE IS HUNTING..... CCS-168  
DUCT AND GRILLE..... VTL-11  
DYNAMIC DRIVER ASSISTANCE SWITCH..... DAS-204, DAS-354

**E**

EBD..... BRC-25  
ECM BRANCH LINE CIRCUIT .... LAN-57, LAN-89, LAN-106, LAN-125, LAN-145, LAN-167, LAN-198, LAN-216, LAN-236, LAN-257, LAN-280  
ECV (ELECTRICAL CONTROL VALVE).... HAC-65  
ELECTRIC IGNITION SYSTEM.....EC-59  
ELECTRICAL LEAK DETECTOR.....HA-34  
ELECTRICAL LOAD SIGNAL.....EC-505  
ENCODER..... PWC-27  
ENGINE ASSEMBLY..... EM-70  
ENGINE CONTROL SYSTEM.....EC-38  
ENGINE CONTROL SYSTEM SYMPTOMSEC-625  
ENGINE COOLANT..... CO-8  
ENGINE COVER..... EM-25  
ENGINE DOES NOT START WHEN INTELLIGENT KEY IS INSERTED INTO KEY SLOT. SEC-190  
ENGINE DOES NOT START WITH INTELLIGENT KEY..... SEC-189  
ENGINE MAINTENANCE..... MA-12  
ENGINE OIL..... LU-7

ENGINE SPEED SIGNAL CIRCUIT..... STC-9  
ENGINE STAND SETTING.....EM-80  
ENGINE UNIT.....EM-82  
ENTRY/EXIT ASSIST FUNCTION DOES NOT OPERATE..... ADP-216  
EPS SYSTEM..... STC-3  
EVAP CANISTER..... FL-15  
EVAP LEAK CHECK..... EC-638  
EVAPORATIVE EMISSION SYSTEM..... EC-97  
EXCESSIVE ABS FUNCTION OPERATION FREQUENCY.....BRC-145  
EXHAUST GAS/OUTSIDE ODOR DETECTING SENSOR..... HAC-78, HAC-135  
EXHAUST MANIFOLD..... EM-34  
EXHAUST SYSTEM..... EX-4, EX-5  
EXTERIOR LAMP BATTERY SAVER SYSTEM..... EXL-31, EXL-270  
EXTERIOR LIGHTING SYSTEM SYMPTOMS..... EXL-220, EXL-419

**F**

FCW SYSTEM IS NOT ACTIVATED..... DAS-251  
FENDER PROTECTOR..... EXT-25  
FILAMENT..... DEF-79  
FILLET MOLDING..... EXT-33  
FLOOR SIDE FAIRING..... EXT-31  
FLOOR TRIM.....INT-27  
FLUID COOLER SYSTEM..... TM-206  
FLUORESCENT LEAK DETECTOR..... HA-33  
FOOT LAMP.....INL-109  
FORWARD COLLISION WARNING SYSTEM..... DAS-207  
FORWARD COLLISION WARNING SYSTEM SYMPTOMS..... DAS-250  
FREQUENTLY CANNOT DETECT THE VEHICLE AHEAD / DETECTION ZONE IS SHORT..... CCS-169, DAS-193  
FRONT BUMPER..... EXT-12  
FRONT CAMERA.....AV-512  
FRONT CAMERA COMMUNICATION SIGNAL CIRCUIT.....AV-472  
FRONT CARRIER, INPUT CLUTCH, REAR INTERNAL GEAR..... TM-288  
FRONT CASE AND REAR CASE..... DLN-68  
FRONT COIL SPRING AND SHOCK ABSORBER. FSU-10, FSU-30  
FRONT COMBINATION LAMP .EXL-234, EXL-432  
FRONT DIFFERENTIAL GEAR OIL..... DLN-123  
FRONT DISC BRAKE..... BR-7, BR-17, BR-38  
FRONT DOOR..... DLK-240  
FRONT DOOR FINISHER.....INT-12  
FRONT DOOR GLASS..... GW-18  
FRONT DOOR LOCK..... DLK-257  
FRONT DOOR SPEAKERAV-128, AV-268, AV-497  
FRONT DRIVE SHAFT.....FAX-17, FAX-25  
FRONT DRIVE SHAFT AND DRIVE CHAINDLN-83

FRONT DRIVE SHAFT BOOT .....	FAX-20
FRONT FENDER .....	DLK-238
FRONT FINAL DRIVE ASSEMBLY .....	DLN-116, DLN-127
FRONT FOG LAMP .....	EXL-238, EXL-436
FRONT FOG LAMP AIMING ADJUSTMENT .....	EXL-232, EXL-430
FRONT FOG LAMP CIRCUIT.....	EXL-77, EXL-291
FRONT FOG LAMP SYSTEM ...	EXL-25, EXL-117, EXL-264, EXL-331
FRONT GRILLE .....	EXT-20
FRONT LOWER LINK.....	RSU-15
FRONT OIL SEAL.....	DLN-62, DLN-165
FRONT PASSENGER SIDE POWER WINDOW DOES NOT OPERATE .....	PWC-114
FRONT POWER WINDOW SWITCH (PASSENGER SIDE) .....	PWC-91
FRONT PROPELLER SHAFT .....	DLN-91, DLN-92
FRONT REGULATOR.....	GW-20
FRONT SEAT.....	SE-129
FRONT SEAT BELT .....	SB-4
FRONT SQUAWKER .....	AV-130, AV-270, AV-499
FRONT STABILIZER .....	FSU-18, FSU-38
FRONT SUSPENSION ASSEMBLY.....	FSU-7, FSU-27
FRONT SUSPENSION MEMBER.....	FSU-19, FSU-39
FRONT WASHER NOZZLE AND TUBE ...	WW-117
FRONT WASHER PUMP.....	WW-115
FRONT WHEEL HUB AND KNUCKLE.....	FAX-7, FAX-8, FAX-16, FAX-18
FRONT WIPER AND WASHER SYSTEM ...	WW-6, WW-37
FRONT WIPER ARM .....	WW-119
FRONT WIPER DOES NOT OPERATE ...	WW-109
FRONT WIPER DRIVE ASSEMBLY .....	WW-123
FRONT WIPER MOTOR GROUND CIRCUIT .....	WW-31
FRONT WIPER MOTOR HI CIRCUIT.....	WW-27
FRONT WIPER MOTOR LO CIRCUIT .....	WW-25
FRONT WIPER STOP POSITION SIGNAL CIRCUIT .....	WW-29
FUEL FILLER CAP WARNING SYSTEM ...	EC-108
FUEL FILLER LID OPENER.....	DLK-267
FUEL INJECTOR .....	EC-507
FUEL INJECTOR AND FUEL TUBE.....	EM-38
FUEL LEVEL SENSOR SIGNAL CIRCUIT.....	MWI-55
FUEL LEVEL SENSOR UNIT, FUEL FILTER AND FUEL PUMP ASSEMBLY .....	FL-6
FUEL LID LOCK ACTUATOR .....	DLK-75
FUEL PRESSURE .....	EC-637
FUEL PUMP.....	EC-510
FUEL SYSTEM .....	FL-5
FUEL TANK.....	FL-12
FUSE BLOCK - JUNCTION BOX (J/B).....	PG-111
FUSE, FUSIBLE LINK AND RELAY BOX ...	PG-112

## G

GENERAL MAINTENANCE .....	MA-4
GLASS LID.....	RF-86
GLOVE BOX LAMP.....	INL-108
GPS ANTENNA.....	AV-509
GROUND DISTRIBUTION .....	PG-77

## H

HANDLING PRECAUTION .....	DAS-365
HARNESS CONNECTOR.....	PG-106
HARNESS LAYOUT .....	PG-92
HAZARD AND BUZZER REMINDER DOES NOT OPERATE .....	DLK-205
HAZARD AND HORN REMINDER DOES NOT OPERATE .....	DLK-204
HAZARD FUNCTION.....	DLK-106
HAZARD SWITCH .....	EXL-88, EXL-241, EXL-302, EXL-439
HEADLAMP.....	SEC-92
HEADLAMP (HI) CIRCUIT .....	EXL-67, EXL-284
HEADLAMP (LO) CIRCUIT .....	EXL-69, EXL-286
HEADLAMP AIMING ADJUSTMENT.....	EXL-230, EXL-428
HEADLAMP LEVELIZER CIRCUIT.....	EXL-72
HEADLAMP SYSTEM..	EXL-12, EXL-93, EXL-255, EXL-307
HEADLINING .....	INT-29
HEAT SENSOR.....	SE-53
HEATED SEAT .....	SE-8
HEATED SEAT CONTROL UNIT .....	SE-98, SE-149
HEATED SEAT DOES NOT OPERATE .....	SE-114
HEATED SEAT RELAY .....	SE-51
HEATED SEAT SWITCH.....	SE-47, SE-152
HEATED SEAT SWITCH INDICATOR .....	SE-64
HEATED SEAT SWITCH INDICATOR DOES NOT TURN ON.....	SE-118
HEATER & COOLING UNIT ASSEMBLY.....	HA-51
HEAVY TIGHT-CORNER BRAKING SYMPTOM OCCURS.....	DLN-55
HEIGHT SENSOR.....	EXL-245
HIGH AND LOW REVERSE CLUTCH.....	TM-298
HIGH-MOUNTED STOP LAMP .....	EXL-248, EXL-443
HOOD.....	DLK-230
HOOD LOCK.....	DLK-254
HOOD SWITCH .....	SEC-90
HORIZONTAL SYNCHRONIZING (HP) SIGNAL CIRCUIT .....	AV-103, AV-242
HORN .....	HRN-2, HRN-8
HORN FUNCTION .....	DLK-101
HOW TO ERASE PERMANENT DTC .....	EC-32
HOW TO FOLLOW TROUBLE DIAGNOSES ..	GI-6
HOW TO READ WIRING DIAGRAMS .....	GI-9
HOW TO SELECT PISTON AND BEARING.....	EM-141
HOW TO SET SRT CODE .....	EC-26
HOW TO USE THIS MANUAL .....	GI-3

HOW TO USE THIS SECTION .....LAN-23  
HYDRAULIC LINE ..... ST-52

---

I

---

IBA OFF SWITCH .....BRC-177  
ICC (FULL SPEED RANGE) ..... CCS-18  
ICC BRAKE SWITCH .....EC-513  
ICC BRANCH LINE CIRCUIT ... LAN-73, LAN-182,  
LAN-296  
ICC SENSOR INTEGRATED UNIT ..... CCS-138,  
CCS-177, DAS-145, DAS-200, DAS-222  
ICC STEERING SWITCH ..... CCS-180  
ICC STEERING SWITCH (OTHER THAN MAIN  
SWITCH) DOES NOT FUNCTION.... CCS-164  
ICC SYSTEM CANNOT BE SET (MAIN SWITCH  
TURNS ON/OFF) ..... CCS-162  
ICC SYSTEM DOES NOT CANCEL WHEN A/T  
SELECTOR LEVER SETS ON.....  
ICC WARNING CHIME ..... CCS-179, DAS-202  
ICC WARNING CHIME CIRCUIT ..... CCS-136,  
DAS-143  
ID REGISTRATION ..... WT-23  
ID REGISTRATION CANNOT BE COMPLETED ....  
WT-45  
IDENTIFICATION INFORMATION ..... GI-23  
IGN OFF INTERLOCK DOOR UNLOCK FUNCTION  
DOES NOT OPERATE .....DLK-197  
IGNITION COIL, SPARK PLUG AND ROCKER  
COVER ..... EM-48  
IGNITION SIGNAL .....EC-517  
ILLUMINATION ..... INL-42  
ILLUMINATION CONTROL SYSTEM ..... INL-13  
IN-CABIN MICROFILTER ..... VTL-10  
IN-VEHICLE SENSOR ..... HAC-70, HAC-130  
INFINITI VEHICLE IMMOBILIZER SYSTEM-NATS  
SEC-14, SEC-109  
INSIDE KEY ANTENNA .....DLK-269  
INSIDE MIRROR ..... MIR-124, MIR-154  
INSIDE MIRROR SYSTEM ..... MIR-8, MIR-136  
INSTRUMENT PANEL ASSEMBLY ..... IP-12  
INSUFFICIENT COOLING ..... HAC-117  
INSUFFICIENT HEATING ..... HAC-119  
INTAKE DOOR CONTROL SYSTEM ..... HAC-38  
INTAKE DOOR MOTOR ..... HAC-57  
INTAKE MANIFOLD ..... EM-32  
INTAKE MANIFOLD COLLECTOR ..... EM-29  
INTAKE SENSOR ..... HAC-76, HAC-132  
INTAKE VALVE TIMING CONTROL ..... EC-117  
INTEGRATED HOMELINK TRANSMITTERDLK-47,  
DLK-107  
INTEGRATED HOMELINK TRANSMITTER DOES  
NOT OPERATE .....DLK-220  
INTEGRATED HOMELINK TRANSMITTER  
SYSTEM .....DLK-138  
INTELLIGENT BRAKE ASSISTBRC-169, BRC-172

INTELLIGENT CRUISE CONTROL (FULL SPEED  
RANGE) SYSTEM SYMPTOMS ..... CCS-160  
INTELLIGENT KEY BATTERY ... DLK-96, DLK-275  
INTELLIGENT KEY INSERT INFORMATION DOES  
NOT OPERATE ..... SEC-197  
INTELLIGENT KEY INTERLOCK FUNCTION DOES  
NOT OPERATE .....ADP-217  
INTELLIGENT KEY LOW BATTERY WARNING  
DOES NOT OPERATE ..... DLK-216, DLK-219  
INTELLIGENT KEY SYSTEM..... DLK-15, DLK-121  
INTELLIGENT KEY SYSTEM/ENGINE START  
FUNCTION ..... SEC-9, SEC-95  
INTELLIGENT KEY WARNING BUZZER.. DLK-94,  
DLK-272  
INTERIOR LIGHTING SYSTEM SYMPTOMS .....  
INL-102  
INTERIOR ROOM LAMP BATTERY SAVER  
SYSTEM ..... INL-10  
INTERIOR ROOM LAMP CONTROL CIRCUIT .....  
INL-23  
INTERIOR ROOM LAMP CONTROL SYSTEM .....  
INL-6, INL-30  
INTERIOR ROOM LAMP POWER SUPPLY  
CIRCUIT ..... INL-21  
IONIZER ..... HAC-81, HAC-140  
IPDM E/R (INTELLIGENT POWER DISTRIBUTION  
MODULE ENGINE ROOM) EXL-192, EXL-406,  
MWI-110, PCS-20, PCS-35, PG-113, SEC-176,  
WW-92  
IPDM-E BRANCH LINE CIRCUIT LAN-74, LAN-98,  
LAN-117, LAN-137, LAN-158, LAN-183,  
LAN-208, LAN-228, LAN-249, LAN-271,  
LAN-297  
ITS COMMUNICATION CIRCUITLAN-81, LAN-190,  
LAN-304

---

K

---

KEY CYLINDER SWITCH ..... DLK-78  
KEY CYLINDER SWITCH DOES NOT OPERATE  
POWER WINDOWS ..... PWC-120  
KEY ID WARNING DOES NOT OPERATEDLK-218  
KEY REMINDER FUNCTION DOES NOT  
OPERATE ..... DLK-206  
KEY SLOT .....DLK-97, DLK-273, SEC-202  
KEY SLOT INDICATOR ..... DLK-99  
KEY WARNING DOES NOT OPERATE... DLK-207  
KEY WARNING LAMP ..... DLK-105, SEC-94  
KEYLESS POWER WINDOW DOWN DOES NOT  
OPERATE ..... PWC-121

---

L

---

L TERMINAL CIRCUIT (OPEN) ..... CHG-15  
L TERMINAL CIRCUIT (SHORT) ..... CHG-17  
LANE BRANCH LINE CIRCUIT. LAN-61, LAN-171,  
LAN-284



LANE CAMERA UNIT [DAS-238](#), [DAS-317](#), [DAS-351](#)  
LANE DEPARTURE PREVENTION (LDP) SYSTEM  
[DAS-273](#)  
LANE DEPARTURE WARNING (LDW) SYSTEM...  
[DAS-268](#)  
LANE DEPARTURE WARNING BUZZER [DAS-353](#)  
LANE DEPARTURE WARNING BUZZER CIRCUIT  
[DAS-315](#)  
LATCH SYSTEM FOR CHILDREN ..... [SB-17](#)  
LDW & LDP SYSTEM SYMPTOMS.....[DAS-344](#)  
LEAK DETECTION DYE ..... [HA-19](#)  
LICENSE PLATE LAMP ..... [EXL-250](#), [EXL-445](#)  
LICENSE PLATE LAMP CIRCUIT [EXL-92](#), [EXL-306](#)  
LIFTING MOTOR (FRONT) .....[ADP-107](#)  
LIFTING MOTOR (REAR).....[ADP-109](#)  
LIFTING POINT ..... [GI-33](#)  
LIFTING SENSOR (FRONT) .....[ADP-87](#)  
LIFTING SENSOR (REAR).....[ADP-90](#)  
LIFTING SWITCH (FRONT) .....[ADP-63](#)  
LIFTING SWITCH (REAR).....[ADP-65](#)  
LIGHTING AND TURN SIGNAL SWITCH [EXL-240](#),  
[EXL-438](#)  
LINE PRESSURE CONTROL ..... [TM-11](#)  
LOCATION OF PLASTIC PARTS ..... [BRM-79](#)  
LOCK-UP CONTROL ..... [TM-27](#)  
LOW TIRE PRESSURE WARNING LAMP .. [WT-38](#)  
LOW TIRE PRESSURE WARNING LAMP BLINKS  
[WT-44](#)  
LOW TIRE PRESSURE WARNING LAMP DOES  
NOT TURN OFF ..... [WT-43](#)  
LOW TIRE PRESSURE WARNING LAMP DOES  
NOT TURN ON ..... [WT-42](#)  
LOWER SHAFT ..... [ST-24](#)  
LUBRICANT ..... [HA-28](#)  
LUGGAGE FLOOR TRIM ..... [INT-33](#)  
LUGGAGE ROOM LAMP ..... [INL-115](#)  
LUMBAR SUPPORT ..... [SE-10](#), [SE-77](#)  
LUMBAR SUPPORT SWITCH..... [SE-151](#)

---

**M**

---

M&A BRANCH LINE CIRCUIT ..... [LAN-68](#), [LAN-95](#),  
[LAN-113](#), [LAN-133](#), [LAN-154](#), [LAN-177](#),  
[LAN-205](#), [LAN-224](#), [LAN-245](#), [LAN-267](#),  
[LAN-291](#)  
MAGNET CLUTCH ..... [HAC-63](#)  
MAGNET CLUTCH CONTROL SYSTEM.. [HAC-42](#)  
MAIN LINE BETWEEN ADP AND ABS CIRCUIT...  
[LAN-52](#), [LAN-104](#), [LAN-123](#), [LAN-143](#),  
[LAN-214](#), [LAN-234](#), [LAN-255](#)  
MAIN LINE BETWEEN ADP AND BSW CIRCUIT..  
[LAN-54](#), [LAN-164](#), [LAN-277](#)  
MAIN LINE BETWEEN AV AND DLC CIRCUIT.....  
[LAN-48](#), [LAN-86](#), [LAN-101](#), [LAN-120](#), [LAN-140](#),  
[LAN-161](#), [LAN-195](#), [LAN-211](#), [LAN-231](#),  
[LAN-252](#), [LAN-274](#)

MAIN LINE BETWEEN BSW AND ABS CIRCUIT ..  
[LAN-55](#), [LAN-165](#), [LAN-278](#)  
MAIN LINE BETWEEN DLC AND M&A CIRCUIT ..  
[LAN-49](#), [LAN-87](#), [LAN-102](#), [LAN-121](#), [LAN-141](#),  
[LAN-162](#), [LAN-196](#), [LAN-212](#), [LAN-232](#),  
[LAN-253](#), [LAN-275](#)  
MAIN LINE BETWEEN M&A AND ABS CIRCUIT ..  
[LAN-50](#), [LAN-88](#), [LAN-197](#)  
MAIN LINE BETWEEN M&A AND ADP CIRCUIT ..  
[LAN-51](#), [LAN-103](#), [LAN-122](#), [LAN-142](#),  
[LAN-163](#), [LAN-213](#), [LAN-233](#), [LAN-254](#),  
[LAN-276](#)  
MAIN POWER SUPPLY AND GROUND CIRCUIT..  
[TM-125](#)  
MAIN SHAFT ..... [DLN-78](#)  
MAIN SWITCH DOES NOT TURN ON, MAIN  
SWITCH DOES NOT TURN OFF ..... [CCS-161](#)  
MALFUNCTION AREA CHART ..... [LAN-46](#)  
MALFUNCTION DETECTION BUZZER SOUNDS  
DURING POWER RETURN MOTOR INVERSE  
ROTATION ..... [SE-110](#)  
MALFUNCTION INDICATOR LAMP ..... [EC-522](#)  
MANUAL FUNCTION DOES NOT OPERATE .....  
[ADP-204](#)  
MAP LAMP ..... [INL-105](#)  
MEMORY FUNCTION DOES NOT OPERATE .....  
[ADP-210](#), [HAC-124](#)  
MEMORY INDICATE DOES NOT OPERATE .....  
[ADP-214](#)  
METER BUZZER CIRCUIT ..... [WCS-23](#)  
METER CONTROL SWITCH ..... [MWI-138](#)  
METER CONTROL SWITCH SIGNAL CIRCUIT ....  
[MWI-59](#)  
METER SYSTEM ..... [MWI-6](#)  
MICROPHONE ..... [AV-136](#), [AV-280](#), [AV-508](#)  
MICROPHONE SIGNAL CIRCUIT [AV-106](#), [AV-246](#),  
[AV-469](#)  
MID SUN GEAR, REAR SUN GEAR, HIGH AND  
LOW REVERSE CLUTCH HUB ..... [TM-293](#)  
MIRROR SENSOR ..... [ADP-99](#)  
MODE CHANGE SIGNAL CIRCUIT [AV-245](#), [AV-468](#)  
MODE DOOR CONTROL SYSTEM ..... [HAC-34](#)  
MODE DOOR MOTOR ..... [HAC-52](#)  
MOTOR SENSOR ..... [SE-37](#)  
MULTI AV SYSTEM SYMPTOMS . [AV-119](#), [AV-259](#),  
[AV-482](#)  
MULTIFUNCTION SWITCH [AV-133](#), [AV-277](#), [AV-505](#)  
MULTIPOINT FUEL INJECTION SYSTEM .... [EC-48](#)

---

**N**

---

NO FORCE GENERATED FOR PUTTING BACK  
THE ACCELERATOR PEDAL ..... [DAS-192](#)  
NOISE ..... [HAC-121](#)

NOISE, VIBRATION AND HARSHNESS (NVH)  
TROUBLESHOOTING [BR-9](#), [DLN-59](#), [DLN-90](#),  
[DLN-98](#), [DLN-107](#), [DLN-117](#), [DLN-157](#), [EM-18](#),  
[FAX-3](#), [FAX-11](#), [FSU-3](#), [FSU-23](#), [RAX-2](#), [RSU-2](#),  
[ST-3](#), [WT-46](#)  
NORMAL OPERATING CONDITION ..... [ADP-218](#),  
[AV-123](#), [AV-263](#), [AV-488](#), [BCS-94](#), [BRC-151](#),  
[BRC-167](#), [BRC-175](#), [CCS-171](#), [DAS-195](#),  
[DAS-252](#), [DAS-346](#), [DAS-435](#), [EC-629](#),  
[EXL-223](#), [EXL-421](#), [MWI-132](#), [SN-60](#), [WW-108](#)

**O**

OCCUPANT CLASSIFICATION SYSTEM.. [SRC-10](#)  
OCCUPANT CLASSIFICATION SYSTEM  
CONTROL UNIT .....[SR-28](#)  
OFF POSITION WARNING DOES NOT OPERATE  
[DLK-208](#)  
OIL FILTER..... [LU-10](#)  
OIL FILTER BRACKET (AWD)..... [LU-12](#)  
OIL PAN (LOWER) ..... [EM-44](#)  
OIL PAN (UPPER) AND OIL STRAINER ..... [EM-83](#)  
OIL PRESSURE SWITCH SIGNAL CIRCUIT .....  
[MWI-63](#)  
OIL PUMP ..... [LU-14](#)  
OIL PUMP, 2346 BRAKE, FRONT BRAKE PISTON  
[TM-276](#)  
OIL SEAL..... [EM-68](#)  
ON BOARD DIAGNOSTIC (OBD) SYSTEM [EC-135](#),  
[TM-62](#)  
ON BOARD REFUELING VAPOR RECOVERY  
(ORVR).....[EC-523](#)  
ON IS NOT DISPLAYED WHEN PRESSING REAR  
WINDOW DEFOGGER SWITCH BUT IT IS  
OPERATED ..... [DEF-75](#)  
OPERATION..... [DAS-363](#)  
OPTICAL SENSOR ....[EXL-85](#), [EXL-239](#), [EXL-299](#),  
[EXL-437](#)  
OPTION HARNESS..... [PG-88](#)  
OUTPUT SPEED SENSOR ..... [TM-199](#)  
OUTSIDE KEY ANTENNA ..... [DLK-91](#), [DLK-271](#)  
OUTSIDE MIRROR ..... [MIR-126](#), [MIR-156](#)  
OVERHEATING CAUSE ANALYSIS ..... [CO-6](#)

**P**

P POSITION WARNING DOES NOT OPERATE ....  
[DLK-209](#)  
P RANGE INTERLOCK DOOR LOCK/UNLOCK  
FUNCTION DOES NOT OPERATE ....[DLK-198](#)  
P RANGE SIGNAL CIRCUIT.....[SN-53](#)  
P0011, P0021 IVT CONTROL.....[EC-175](#)  
P0031, P0032, P0051, P0052 A/F SENSOR 1  
HEATER .....[EC-179](#)  
P0037, P0038, P0057, P0058 HO2S2 HEATER.....  
[EC-182](#)

P0075, P0081 IVT CONTROL SOLENOID VALVE .  
[EC-186](#)  
P0101, P010B MAF SENSOR..... [EC-189](#)  
P0102, P0103, P010C, P010D MAF SENSOR .....  
[EC-195](#)  
P0111 IAT SENSOR ..... [EC-201](#)  
P0112, P0113 IAT SENSOR ..... [EC-204](#)  
P0116 ECT SENSOR ..... [EC-207](#)  
P0117, P0118 ECT SENSOR ..... [EC-210](#)  
P0122, P0123, P0227, P0228 TP SENSOREC-213  
P0125 ECT SENSOR ..... [EC-217](#)  
P0127 IAT SENSOR..... [EC-220](#)  
P0128 THERMOSTAT FUNCTION..... [EC-222](#)  
P0130, P0150 A/F SENSOR 1 ..... [EC-225](#)  
P0131, P0151 A/F SENSOR 1 ..... [EC-229](#)  
P0132, P0152 A/F SENSOR 1 ..... [EC-232](#)  
P0137, P0157 HO2S2 ..... [EC-235](#)  
P0138, P0158 HO2S2 ..... [EC-241](#)  
P0139, P0159 HO2S2 ..... [EC-250](#)  
P014C, P014D, P014E, P014F, P015A, P015B,  
P015C, P015D A/F SENSOR 1 ..... [EC-257](#)  
P0171, P0174 FUEL INJECTION SYSTEM  
FUNCTION ..... [EC-263](#)  
P0172, P0175 FUEL INJECTION SYSTEM  
FUNCTION ..... [EC-267](#)  
P0181 FTT SENSOR..... [EC-271](#)  
P0182, P0183 FTT SENSOR ..... [EC-275](#)  
P0196 EOT SENSOR..... [EC-278](#)  
P0197, P0198 EOT SENSOR ..... [EC-282](#)  
P0222, P0223, P2132, P2133 TP SENSOREC-285  
P0300, P0301, P0302, P0303, P0304, P0305,  
P0306 MISFIRE..... [EC-289](#)  
P0327, P0328, P0332, P0333 KS ..... [EC-295](#)  
P0335 CKP SENSOR (POS)..... [EC-298](#)  
P0340, P0345 CMP SENSOR (PHASE) .... [EC-302](#)  
P0420, P0430 THREE WAY CATALYST FUNCTION  
[EC-306](#)  
P0441 EVAP CONTROL SYSTEM.....[EC-311](#)  
P0443 EVAP CANISTER PURGE VOLUME  
CONTROL SOLENOID VALVE ..... [EC-316](#)  
P0444, P0445 EVAP CANISTER PURGE VOLUME  
CONTROL SOLENOID VALVE ..... [EC-321](#)  
P0447 EVAP CANISTER VENT CONTROL VALVE  
[EC-324](#)  
P0448 EVAP CANISTER VENT CONTROL VALVE  
[EC-328](#)  
P0451 EVAP CONTROL SYSTEM PRESSURE  
SENSOR ..... [EC-332](#)  
P0452 EVAP CONTROL SYSTEM PRESSURE  
SENSOR ..... [EC-336](#)  
P0453 EVAP CONTROL SYSTEM PRESSURE  
SENSOR ..... [EC-341](#)  
P0456 EVAP CONTROL SYSTEM..... [EC-347](#)  
P0460 FUEL LEVEL SENSOR..... [EC-353](#)  
P0461 FUEL LEVEL SENSOR..... [EC-355](#)  
P0462, P0463 FUEL LEVEL SENSOR ..... [EC-357](#)

P0500 VSS.....	EC-359	P1290, P2100, P2103 THROTTLE CONTROL MOTOR RELAY .....	EC-424
P0506 ISC SYSTEM .....	EC-361	P1550 BATTERY CURRENT SENSOR.....	EC-426
P0507 ISC SYSTEM .....	EC-363	P1551, P1552 BATTERY CURRENT SENSOR.....	EC-429
P050A, P050B, P050E COLD START CONTROL..	EC-365	P1553 BATTERY CURRENT SENSOR.....	EC-432
P0524 ENGINE OIL PRESSURE .....	EC-368	P1554 BATTERY CURRENT SENSOR.....	EC-435
P0550 PSP SENSOR .....	EC-371	P1564 ASCD STEERING SWITCH .....	EC-439
P0603 ECM POWER SUPPLY .....	EC-374	P1564 ICC STEERING SWITCH .....	EC-442
P0605 ECM.....	EC-376	P1568 ICC FUNCTION .....	EC-445
P0607 ECM.....	EC-378	P1572 ASCD BRAKE SWITCH.....	EC-446
P0615 STARTER RELAY .....	TM-72	P1572 ICC BRAKE SWITCH .....	EC-451
P0643 SENSOR POWER SUPPLY .....	EC-379	P1574 ASCD VEHICLE SPEED SENSOR .....	EC-458
P0705 TRANSMISSION RANGE SENSOR .....	ATM-74	P1574 ICC VEHICLE SPEED SENSOR.....	EC-460
P0710 TRANSMISSION FLUID TEMPERATURE SENSOR A .....	TM-76	P1606 VVEL CONTROL MODULE .....	EC-462
P0717 INPUT SPEED SENSOR A .....	TM-79	P1607 VVEL CONTROL MODULE .....	EC-464
P0720 OUTPUT SPEED SENSOR.....	TM-81	P1608 VVEL SENSOR POWER SUPPLY .....	EC-466
P0725 ENGINE SPEED.....	TM-83	P1610 LOCK MODE .....	SEC-33
P0729 6GR INCORRECT RATIO .....	TM-85	P1611 ID DISCORD, IMMU-ECM .....	SEC-34
P0730 INCORRECT GEAR RATIO .....	TM-87	P1612 CHAIN OF ECM-IMMU .....	SEC-35
P0731 1GR INCORRECT RATIO .....	TM-89	P1614 CHAIN OF IMMU-KEY .....	SEC-36
P0732 2GR INCORRECT RATIO .....	TM-91	P1615 DIFFERENCE OF KEY .....	SEC-39
P0733 3GR INCORRECT RATIO .....	TM-93	P1705 TP SENSOR .....	TM-109
P0734 4GR INCORRECT RATIO .....	TM-95	P1721 VEHICLE SPEED SIGNAL .....	TM-111
P0735 5GR INCORRECT RATIO .....	TM-97	P1730 INTERLOCK .....	TM-113
P0740 TORQUE CONVERTER.....	TM-99	P1734 7GR INCORRECT RATIO .....	TM-115
P0744 TORQUE CONVERTER.....	TM-101	P1804 TRANSFER CONTROL UNIT.....	DLN-42
P0745 PRESSURE CONTROL SOLENOID A .....	TM-103	P1805 BRAKE SWITCH.....	EC-469
P0750 SHIFT SOLENOID A .....	TM-104	P1809 TRANSFER CONTROL UNIT.....	DLN-43
P0775 PRESSURE CONTROL SOLENOID B .....	TM-105	P1815 M-MODE SWITCH.....	TM-117
P0780 SHIFT .....	TM-106	P1826 TRANSFER FLUID TEMPERATURE.....	DLN-44
P0795 PRESSURE CONTROL SOLENOID C .....	TM-108	P2096, P2097, P2098, P2099 A/F SENSOR 1 .....	EC-472
P0850 PNP SWITCH .....	EC-382	P2122, P2123 APP SENSOR .....	EC-477
P100A, P100B VVEL SYSTEM.....	EC-385	P2127, P2128 APP SENSOR .....	EC-481
P1087, P1088 VVEL SYSTEM .....	EC-389	P2138 APP SENSOR.....	EC-486
P1089, P1092 VVEL CONTROL SHAFT POSITION SENSOR.....	EC-390	P219A, P219B AIR FUEL RATIO .....	EC-491
P1090, P1093 VVEL ACTUATOR MOTOR .....	EC-394	P2713 PRESSURE CONTROL SOLENOID D .....	TM-120
P1091 VVEL ACTUATOR MOTOR RELAY .....	EC-398	P2722 PRESSURE CONTROL SOLENOID E.....	TM-121
P1148, P1168 CLOSED LOOP CONTROL.....	EC-401	P2731 PRESSURE CONTROL SOLENOID F.....	TM-122
P1211 TCS CONTROL UNIT .....	EC-402	P2807 PRESSURE CONTROL SOLENOID G .....	TM-123
P1212 TCS COMMUNICATION LINE.....	EC-403	PANIC ALARM FUNCTION DOES NOT OPERATE	DLK-203
P1217 ENGINE OVER TEMPERATURE.....	EC-404	PARKING BRAKE CONTROL.....	PB-6
P1225, P1234 TP SENSOR.....	EC-408	PARKING BRAKE SHOE .....	PB-5, PB-8
P1226, P1235 TP SENSOR.....	EC-410	PARKING BRAKE SWITCH .....	BRC-121
P1233, P2101 ELECTRIC THROTTLE CONTROL FUNCTION .....	EC-412	PARKING BRAKE SWITCH SIGNAL CIRCUIT .....	MWI-64
P1236, P2118 THROTTLE CONTROL MOTOR.....	EC-416	PARKING BRAKE SYSTEM .....	PB-4
P1238, P2119 ELECTRIC THROTTLE CONTROL ACTUATOR.....	EC-419	PARKING COMPONENTS.....	TM-191
P1239, P2135 TP SENSOR.....	EC-421	PARKING LAMP CIRCUIT .....	EXL-79, EXL-293

PARKING, LICENSE PLATE AND TAIL LAMPS ARE NOT TURNED ON .....EXL-226, EXL-424

PARKING, LICENSE PLATE AND TAIL LAMPS SYSTEM EXL-29, EXL-133, EXL-268, EXL-347

PASSENGER AIR BAG MODULE.....SR-17

PASSENGER SEAT BELT WARNING SYSTEM..... SRC-12, SRC-92

PASSENGER SIDE DOOR MIRROR DEFOGGER DEF-18

PEDAL VIBRATION OR ABS OPERATION SOUND OCCURS .....BRC-149

PERIODIC MAINTENANCE ..... MA-6

PERSONAL LAMP ..... INL-112

POSITIVE CRANKCASE VENTILATION ....EC-528

POWER CONSUMPTION CONTROL SYSTEM..... BCS-15, PCS-7

POWER CONTROL SYSTEM..... PCS-5

POWER DISTRIBUTION SYSTEM PCS-41, PCS-73

POWER DOOR LOCK SYSTEM.DLK-11, DLK-109

POWER GENERATION VOLTAGE VARIABLE CONTROL SYSTEM .....CHG-12

POWER GENERATION VOLTAGE VARIABLE CONTROL SYSTEM OPERATION INSPECTION .....CHG-29

POWER RETURN MOTOR.....SE-42

POWER RETURN SWITCH.....SE-21, SE-153

POWER SEAT .....SE-6, SE-67

POWER SEAT SWITCH.....ADP-224, SE-150

POWER SEAT SWITCH GROUND CIRCUIT ..... ADP-79

POWER SOCKET ..... PWO-2, PWO-6

POWER STEERING CONTROL UNIT ..... STC-13, STC-22

POWER STEERING FLUID ..... ST-11

POWER STEERING OIL PUMP .....ST-46

POWER STEERING SOLENOID VALVE .... STC-7

POWER SUPPLY AND GROUND CIRCUIT (VVEL CONTROL MODULE) .....EC-167

POWER SUPPLY AND GROUND CIRCUIT FOR AUTO AMP. .... HAC-50

POWER SUPPLY ROUTING CIRCUIT ..... PG-6

POWER WINDOW CONTROL SYSTEM PWC-103

POWER WINDOW DOWN FUNCTION DOES NOT OPERATE WITH KEY CYLINDER OPERATION DLK-200

POWER WINDOW DOWN FUNCTION DOES NOT WORK WHEN OPERATING WITH INTELLIGENT KEY .....DLK-201

POWER WINDOW LOCK SWITCH DOES NOT FUNCTION .....PWC-122

POWER WINDOW MAIN SWITCH ..... PWC-79, PWC-127

POWER WINDOW MOTOR..... PWC-20

POWER WINDOW RETAINED POWER FUNCTION DOES NOT OPERATE NORMALLY . PWC-119

POWER WINDOW RETAINED POWER OPERATION DOES NOT OPERATE PROPERLY .....RF-75

POWER WINDOW SERIAL LINK..... PWC-32

POWER WINDOW SWITCH ILLUMINATION DOES NOT ILLUMINATE ..... PWC-123

POWER WINDOW SYSTEM..... PWC-7

POWER WINDOWS DO NOT OPERATE WITH ANY POWER WINDOW SWITCHES ..... PWC-112

PRE-INSPECTION FOR DIAGNOSIS..... DAS-258, DAS-391

PRECAUTIONS . ACC-2, ADP-219, AV-11, AV-143, AV-287, BCS-95, BR-3, BRC-152, BRC-168, BRC-176, BRM-4, CCS-174, CHG-25, CO-2, DAS-198, DAS-253, DAS-348, DAS-355, DEF-77, DLK-227, DLN-6, DLN-88, DLN-96, DLN-106, DLN-118, DLN-159, EC-630, EM-3, EX-2, EXL-228, EXL-426, EXT-3, FAX-4, FAX-12, FL-2, FSU-4, FSU-24, GI-27, GW-8, HA-10, HAC-125, HRN-6, INL-103, INT-2, IP-2, LAN-8, LAN-24, LU-2, MIR-121, MIR-151, MWI-133, PB-2, PCS-33, PCS-125, PG-114, PWC-124, PWO-4, RAX-3, RF-83, RSU-3, SB-2, SE-125, SEC-199, SN-4, SR-2, SRC-93, ST-7, STC-20, STR-17, TM-169, VTL-7, WCS-121, WT-3, WW-111

PRESET SWITCH ..... AV-134, AV-278, AV-506, HAC-127

PREVIEW FUNCTION..... BRC-163, BRC-166

PRIMARY POSITION LIMIT SWITCH .....SE-29

PROCEDURE FOR TEMPORARILY DISABLING THE IGNITION BATTERY SAVER SYSTEM .... PCS-40

PUDDLE LAMP ..... INL-114

PUDDLE LAMP CIRCUIT .....INL-27

PUSH-BUTTON IGNITION SWITCH..... PCS-69, PCS-129, SEC-203

PUSH-BUTTON IGNITION SWITCH DOES NOT OPERATE ..... PCS-127

PUSH-BUTTON IGNITION SWITCH ILLUMINATION CIRCUIT ..... INL-28

PUSH-BUTTON IGNITION SWITCH POSITION INDICATOR .....PCS-71

PUSH-BUTTON IGNITION SWITCH POSITION INDICATOR DOES NOT ILLUMINATE PCS-128

## R

R RANGE SIGNAL CIRCUIT ..... SN-54

RADIATOR..... CO-12, CO-14

RADIATOR CORE SUPPORT ..... DLK-235

RADIUS ROD .....RSU-14

RDR-L BRANCH LINE CIRCUIT LAN-77, LAN-186, LAN-300

RDR-R BRANCH LINE CIRCUIT LAN-78, LAN-187, LAN-301

REAR BUMPER ..... EXT-16

REAR CAMERA.....	AV-513	REAR WINDOW DEFOGGER SWITCH.....	DEF-10
REAR CAMERA COMMUNICATION SIGNAL CIRCUIT .....	AV-473	REAR WINDOW DEFOGGER SYSTEM .....	DEF-4, DEF-20
REAR COMBINATION LAMP ...	EXL-246, EXL-441	REAR WIPER AND WASHER SYSTEM....	WW-11, WW-43
REAR DIFFERENTIAL GEAR OIL.....	DLN-164	REAR WIPER ARM.....	WW-126
REAR DISC BRAKE .....	BR-8, BR-19, BR-46	REAR WIPER MOTOR .....	WW-128
REAR DOOR .....	DLK-244	REAR WIPER MOTOR CIRCUIT.....	WW-33
REAR DOOR FINISHER.....	INT-18	REAR WIPER STOP POSITION SIGNAL CIRCUIT .....	WW-35
REAR DOOR GLASS .....	GW-22	RECLINING MOTOR .....	ADP-105
REAR DOOR LOCK.....	DLK-262	RECLINING SENSOR.....	ADP-84
REAR DOOR SPEAKER .	AV-129, AV-269, AV-498	RECLINING SWITCH.....	ADP-61
REAR DRIVE SHAFT .....	RAX-6, RAX-10	RECOMMENDED CHEMICAL PRODUCTS AND SEALANTS .....	GI-22
REAR FINAL DRIVE ASSEMBLY .....	DLN-155, DLN-179	RECOMMENDED FLUIDS AND LUBRICANTS .....	MA-10
REAR LH SIDE POWER WINDOW ALONE DOES NOT OPERATE.....	PWC-115	REFRIGERANT.....	HA-24
REAR LOWER LINK & COIL SPRING .....	RSU-8	REFRIGERANT PRESSURE SENSOR.....	EC-530, HAC-136
REAR OIL SEAL .....	DLN-63, TM-196	REFRIGERATION SYSTEM .....	HA-4, HA-31
REAR POWER WINDOW SWITCH.....	PWC-18	REFRIGERATION SYSTEM SYMPTOMS.....	HA-7
REAR PROPELLER SHAFT .....	DLN-99, DLN-100, DLN-109, DLN-110	RELAY CONTROL SYSTEM .....	PCS-3
REAR REGULATOR .....	GW-25	REMOTE KEYLESS ENTRY RECEIVER ..	DLK-80, DLK-274
REAR RH SIDE POWER WINDOW ALONE DOES NOT OPERATE.....	PWC-116	REPAIRING HIGH STRENGTH STEEL .....	BRM-5
REAR SEAT .....	SE-141	REPAIRING MATERIAL .....	BRM-9
REAR SEAT BACK POWER RETURN CONTROL UNIT.....	SE-86, SE-148	REPLACEMENT OPERATIONS .....	BRM-31
REAR SEAT BELT .....	SB-9	REQUEST SIGNAL CIRCUIT (SATÆCONT)AV-112, .....	AV-252
REAR SEATBACK POWER RETURN SYSTEM....	SE-12	RETURN COMPLETE LIMIT SWITCH .....	SE-33
REAR SEATBACK POWER RETURN SYSTEM DOES NOT OPERATE .....	SE-107	REVERSE INTERLOCK DOOR MIRROR DOES NOT OPERATE.....	MIR-114
REAR SEATBACK RELEASE CONTROL ...	SE-11, SE-81	RGB (B: BLUE) SIGNAL CIRCUIT...AV-99, AV-238	
REAR SEATBACK RELEASE SWITCH .....	SE-155	RGB (G: GREEN) SIGNAL CIRCUITAV-98, AV-237	
REAR SEATBACK SWITCH .....	SE-25, SE-154	RGB (R: RED) SIGNAL CIRCUIT ...AV-97, AV-236	
REAR SHOCK ABSORBER .....	RSU-10	RGB AREA (YS) SIGNAL CIRCUITAV-101, AV-240	
REAR SQUAWKER .....	AV-271, AV-500	RGB DIGITAL IMAGE SIGNAL CIRCUIT ...	AV-465
REAR STABILIZER.....	RSU-16	RGB SYNCHRONIZING SIGNAL CIRCUITAV-100, .....	AV-239
REAR SUSPENSION ASSEMBLY .....	RSU-5	ROAD WHEEL .....	WT-47
REAR SUSPENSION MEMBER.....	RSU-17	ROAD WHEEL TIRE ASSEMBLY .....	WT-49
REAR TIMING CHAIN CASE.....	EM-90	ROOF RAIL .....	EXT-36
REAR TURN SIGNAL LAMP ...	EXL-247, EXL-442	ROOF SIDE MOLDING.....	EXT-39
REAR VIEW CAMERA.....	AV-137, AV-281		
REAR WASHER NOZZLE AND TUBE .....	WW-129		
REAR WHEEL HUB AND HOUSINGRAX-5, RAX-7			
REAR WINDOW DEFOGGER.....	DEF-13		
REAR WINDOW DEFOGGER AND DOOR MIRROR DEFOGGERS DO NOT OPERATE... .....	DEF-71		
REAR WINDOW DEFOGGER DOES NOT OPERATE BUT BOTH DOOR MIRROR DEFOGGERS OPERATE .....	DEF-72		
REAR WINDOW DEFOGGER INDICATOR DOES NOT ILLUMINATE.....	DEF-76		
REAR WINDOW DEFOGGER RELAY .....	DEF-11		

---

**S**

---

S CONNECTOR CIRCUIT .....	STR-10
S TERMINAL CIRCUIT .....	CHG-18
SATELLITE RADIO TUNERAV-46, AV-131, AV-181, .....	AV-275
SATELLITE SENSOR .....	SR-23
SEAT BELT BUCKLE SWITCH SIGNAL CIRCUIT . .....	WCS-24
SEAT BELT PRE-TENSIONER .....	SR-27
SEAT CUSHION HEATER .....	SE-58
SEAT MEMORY INDICATOR.....	ADP-118

SEAT MEMORY SWITCH .....	ADP-71, ADP-223	SONAR CONTROL UNIT ...	AV-348, SN-17, SN-61
SEAT SYNCHRONIZATION FUNCTION DOES NOT OPERATE.....	ADP-215	SONAR CONTROL UNIT (WITH AROUND VIEW MONITOR) .....	AV-516
SEATBACK HEATER .....	SE-62	SONAR SENSOR.....	AV-517, SN-62
SEATBACK HEATER ONLY DOES NOT OPERATE SE-116		SONAR SYSTEM .....	SN-23
SECURITY INDICATOR LAMP .....	SEC-93	SONAR SYSTEM SYMPTOMS.....	SN-59
SECURITY INDICATOR LAMP DOES NOT TURN ON OR BLINK .....	SEC-191	SPARK PLUG .....	EM-23
SELECTIVE UNLOCK FUNCTION DOES NOT OPERATE WITH DOOR REQUEST SWITCH..	DLK-194	SPIRAL CABLE .....	SR-14
SELECTIVE UNLOCK FUNCTION DOES NOT OPERATE WITH INTELLIGENT KEY	DLK-195	SQUEAK AND RATTLE TROUBLE DIAGNOSES ..	DLK-221, EXT-6, GW-2, INT-6, IP-6, MIR-115, MIR-145, RF-77, SE-119
SELECTOR LEVER POSITION INDICATOR	TM-134	SRS AIR BAG SYSTEM .....	SRC-6
SELF-DIAGNOSIS CANNOT BE PERFORMED ....	HAC-123	SRS AIR BAG WARNING LAMP DOES NOT TURN OFF .....	SRC-90
SENSOR ROTOR.....	BRC-158	SRS AIR BAG WARNING LAMP DOES NOT TURN ON .....	SRC-91
SERVICE DATA AND SPECIFICATIONS (SDS).....	BR-53, CHG-37, CO-27, DLN-87, DLN-95, DLN-105, DLN-115, DLN-154, DLN-224, EC-640, EM-147, EXL-251, EXL-446, FAX-10, FAX-34, FL-18, FSU-21, FSU-41, HA-57, INL-117, LU-17, MA-36, PB-11, PG-120, RAX-16, RSU-19, ST-54, STR-23, TM-302, WT-54	STALL TEST .....	TM-180
SERVICE INFORMATION FOR ELECTRICAL INCIDENT .....	GI-38	STANDARDIZED RELAY.....	PG-109
SHIFT CHANGE CONTROL .....	TM-15	STARTER MOTOR .....	STR-20
SHIFT LOCK SYSTEM.....	TM-59, TM-128	STARTING SYSTEM .....	STR-7, STR-11, STR-16
SHIFT MECHANISM .....	TM-31	STEERING ANGLE SENSOR ..	BRC-162, EXL-244
SHIFT PATTERN CONTROL .....	TM-20	STEERING COLUMN.....	ST-18
SHIFT POSITION INDICATOR CIRCUIT ...	TM-127	STEERING GEAR AND LINKAGE .....	ST-26
SIDE CAMERA LH .....	AV-514	STEERING SWITCH GROUND CIRCUIT ..	AV-117, AV-257, AV-480
SIDE CAMERA LH COMMUNICATION SIGNAL CIRCUIT .....	AV-474	STEERING SWITCH SIGNAL A CIRCUIT .	AV-113, AV-253, AV-476
SIDE CAMERA RH.....	AV-515	STEERING SWITCH SIGNAL B CIRCUIT .	AV-115, AV-255, AV-478
SIDE CAMERA RH COMMUNICATION SIGNAL CIRCUIT .....	AV-475	STEERING WHEEL.....	ST-13, ST-16
SIDE OIL SEAL .....	DLN-124, DLN-175	STEP LAMP.....	INL-111
SIDE RADAR.....	DAS-437	STEP LAMP CIRCUIT .....	INL-25
SIDE RADAR LH .....	DAS-373	STOP LAMP .....	EXL-140, EXL-354
SIDE RADAR RH .....	DAS-375	STRG BRANCH LINE CIRCUIT ..	LAN-69, LAN-96, LAN-114, LAN-134, LAN-155, LAN-178, LAN-206, LAN-225, LAN-246, LAN-268, LAN-292
SIDE SHAFT .....	DLN-129	STRUCTURE AND OPERATION .....	DLN-13
SIDE TURN SIGNAL LAMP .....	EXL-242, EXL-440	SUNLOAD SENSOR .....	HAC-73, HAC-131
SIDE WINDOW GLASS .....	GW-13	SUNROOF DOES NOT OPERATE ANTI-PINCH FUNCTION .....	RF-76
SIGNAL BUFFER SYSTEM .....	BCS-14, PCS-6	SUNROOF DOES NOT OPERATE PROPERLY .....	RF-72
SLIDING MOTOR .....	ADP-103	SUNROOF MOTOR ASSEMBLY .....	RF-89
SLIDING SENSOR .....	ADP-81	SUNROOF SWITCH.....	RF-12, RF-97
SLIDING SWITCH .....	ADP-59	SUNROOF SYSTEM.....	RF-5, RF-59, RF-66
SNOW MODE SWITCH .....	EC-532	SUNROOF UNIT ASSEMBLY .....	RF-91
SONAR BRANCH LINE CIRCUIT	LAN-62, LAN-128, LAN-149, LAN-172, LAN-239, LAN-261, LAN-285	SUNSHADE.....	RF-94
SONAR CANCEL SWITCH .....	SN-65	SUSPENSION ARM .....	RSU-12
SONAR CANCEL SWITCH CIRCUIT .....	SN-57	SWITCH DOES NOT TURN ON / SWITCH DOES NOT TURN OFF .....	BRC-173, DAS-184
		SWITCHES AND THEIR CONTROL FUNCTION ...	VTL-3
		SYSTEM SYMPTOM.....	TM-159

---

**T**

---

TAIL LAMP CIRCUIT ..... [EXL-90](#), [EXL-304](#)  
TAKE AWAY WARNING DOES NOT OPERATE ....  
[DLK-212](#)  
TCM ..... [TM-139](#)  
TCM BRANCH LINE CIRCUIT ..... [LAN-66](#), [LAN-94](#),  
[LAN-112](#), [LAN-131](#), [LAN-152](#), [LAN-175](#),  
[LAN-204](#), [LAN-223](#), [LAN-243](#), [LAN-265](#),  
[LAN-289](#)  
TCS ..... [BRC-15](#)  
TEL ADAPTER UNIT ..... [AV-48](#), [AV-139](#), [AV-183](#),  
[AV-283](#)  
TEL ANTENNA ..... [AV-140](#), [AV-284](#)  
TELESCOPIC MOTOR ..... [ADP-113](#)  
TELESCOPIC SENSOR ..... [ADP-96](#)  
TELESCOPIC SWITCH ..... [ADP-69](#)  
THE AMBIENT TEMPERATURE DISPLAY IS  
INCORRECT ..... [MWI-131](#)  
THE BRAKING DISTANCE IS LONG ..... [BRC-147](#)  
THE DOOR OPEN WARNING CONTINUES  
DISPLAYING, OR DOES NOT DISPLAY .....  
[MWI-130](#)  
THE FUEL GAUGE POINTER DOES NOT MOVE  
[MWI-123](#)  
THE LIGHT REMINDER WARNING DOES NOT  
SOUND ..... [WCS-119](#)  
THE LOW WASHER FLUID WARNING  
CONTINUES DISPLAYING, or DOES NOT  
DISPLAY ..... [MWI-129](#)  
THE METER CONTROL SWITCH IS INOPERATIVE  
[MWI-124](#)  
THE OIL PRESSURE WARNING LAMP DOES NOT  
TURN OFF ..... [MWI-127](#)  
THE OIL PRESSURE WARNING LAMP DOES NOT  
TURN ON ..... [MWI-126](#)  
THE PARKING BRAKE RELEASE WARNING  
CONTINUES DISPLAYING, OR DOES NOT  
DISPLAY ..... [MWI-128](#)  
THE PARKING BRAKE RELEASE WARNING  
CONTINUES SOUNDING, OR DOES NOT  
SOUND ..... [WCS-118](#)  
THE SEAT BELT WARNING CONTINUES  
SOUNDING, OR DOES NOT SOUND [WCS-120](#)  
THE SYSTEM DOES NOT DETECT THE VEHICLE  
AHEAD AT ALL ..... [CCS-170](#), [DAS-194](#)  
THE TRIP A/B RESET SWITCH IS INOPERATIVE  
[MWI-125](#)  
TIGHTENING TORQUE OF STANDARD BOLTS...  
[GI-19](#)  
TILT & TELESCOPIC SWITCH GROUND CIRCUIT  
[ADP-80](#)  
TILT MOTOR ..... [ADP-111](#)  
TILT SENSOR ..... [ADP-93](#)  
TILT SWITCH ..... [ADP-67](#)  
TILT & TELESCOPIC SWITCH ..... [ADP-225](#)  
TIMING CHAIN ..... [EM-51](#)

TIRE PRESSURE MONITORING SYSTEM [WT-13](#)  
TIRE PRESSURE RECEIVER ..... [WT-36](#), [WT-53](#)  
TIRE PRESSURE SENSOR ..... [WT-51](#)  
TIRE PRESSURE SENSOR WAKE UP  
OPERATION ..... [WT-22](#)  
TOW TRUCK TOWING ..... [GI-35](#)  
TPMS ..... [WT-40](#)  
TRANSFER ASSEMBLY ..... [DLN-66](#)  
TRANSFER FLUID ..... [DLN-60](#)  
TRANSIT MODE CANCEL OPERATION ..... [BCS-7](#)  
TRANSMISSION ASSEMBLY ..... [TM-211](#), [TM-217](#)  
TRANSVERSE LINK ..... [FSU-14](#), [FSU-34](#)  
TRIP A/B RESET SWITCH ..... [MWI-139](#)  
TRIP A/B RESET SWITCH SIGNAL CIRCUIT .....  
[MWI-61](#)  
TROUBLE DIAGNOSIS ..... [LAN-12](#)  
TROUBLE DIAGNOSIS - SPECIFICATION VALUE  
[EC-156](#)  
TURN SIGNAL AND HAZARD WARNING LAMP  
SYSTEM [EXL-27](#), [EXL-123](#), [EXL-266](#), [EXL-337](#)  
TURN SIGNAL LAMP CIRCUIT .. [EXL-81](#), [EXL-295](#)

---

**U**

---

U0100 LDP) ECM CAN CIR2 ..... [DAS-304](#)  
U0100 LOST COMMUNICATION (ECM A)... [TM-69](#)  
U0101 CAN COMM CIRCUIT ..... [EC-169](#)  
U0101 LDP) TCM CAN CAN CIR2 ..... [DAS-305](#)  
U0104 ADAS CAN 1 ..... [DAS-409](#)  
U0104 LDP) ICC CAN CAN CIR2 ..... [DAS-306](#)  
U0121 VDC CAN 2... [CCS-115](#), [DAS-119](#), [DAS-410](#)  
U0122 VDC CAN CIR1 (LDP) ..... [DAS-296](#)  
U0126 STRG SEN CAN 1 ..... [CCS-117](#), [DAS-121](#)  
U0129 BCU CAN 2 ..... [CCS-119](#), [DAS-123](#)  
U0300 CAN COMMUNICATION DATA ..... [TM-70](#)  
U0401 ECM CAN 1 . [CCS-121](#), [DAS-125](#), [DAS-411](#)  
U0402 TCM CAN 1 . [CCS-123](#), [DAS-127](#), [DAS-412](#)  
U0405 ADAS CAN 2 ..... [DAS-413](#)  
U0405 LDP) ICC CAN CAN CIR1 ..... [DAS-307](#)  
U0415 VDC CAN 1.. [CCS-125](#), [DAS-129](#), [DAS-414](#)  
U0415 VEHICLE SPEED SIG ..... [BCS-43](#)  
U0416 VDC CAN CIR2 (LDP) ..... [DAS-298](#)  
U0418 BCU CAN 1 ..... [CCS-127](#), [DAS-131](#)  
U0428 STEERING ANGLE SENSOR ..... [AV-409](#)  
U0428 STRG SEN CAN 2 ..... [CCS-129](#), [DAS-133](#)  
U1000 CAN COMM ..... [PCS-50](#)  
U1000 CAN COMM CIRCUIT ..... [ADP-46](#), [AV-75](#),  
[AV-213](#), [AV-410](#), [BCS-41](#), [BRC-113](#), [CCS-131](#),  
[DAS-135](#), [DAS-294](#), [DAS-404](#), [DLK-56](#), [DLN-47](#),  
[EXL-62](#), [MWI-43](#), [PCS-14](#), [SEC-30](#), [SRC-20](#),  
[TM-71](#)  
U1001 CAN COMM CIRCUIT ..... [EC-170](#)  
U1002 SYSTEM COMM (CAN) ..... [BRC-114](#)  
U1003 CAN COMM CIRCUIT ..... [EC-171](#)

U1010 CONTROL UNIT (CAN) .....	ADP-47, AV-76, AV-214, AV-412, BCS-42, CCS-133, DAS-138, DAS-295, DAS-407, DLK-57, DLN-48, EXL-63, MWI-44, PCS-51, SEC-32, SRC-21
U1024 CAN COMM CIRCUIT .....	EC-173
U1100 CAN COMM CIRCUIT (ICC UNIT)	BRC-116
U111A REAR CAMERA IMAGE SIGNAL CIRCUIT	AV-413
U111B SIDE CAMERA RH IMAGE SIGNAL CIRCUIT .....	AV-415
U111C FRONT CAMERA IMAGE SIGNAL CIRCUIT	AV-417
U111D SIDE CAMERA LH IMAGE SIGNAL CIRCUIT .....	AV-419
U1200 AV CONTROL UNIT	AV-77, AV-215, AV-421
U1201 AV CONTROL UNIT .....	AV-422
U1202 AV CONTROL UNIT .....	AV-423
U1204 AV CONTROL UNIT .....	AV-424
U1205 AV CONTROL UNIT .....	AV-425
U1206 AV CONTROL UNIT .....	AV-426
U1207 AV CONTROL UNIT .....	AV-427
U1216 AV CONTROL UNIT	AV-78, AV-216, AV-428
U1217 AV CONTROL UNIT .....	AV-429
U1218 AV CONTROL UNIT .....	AV-430
U1219 AV CONTROL UNIT .....	AV-431
U121A AV CONTROL UNIT .....	AV-432
U121B AV CONTROL UNIT .....	AV-433
U121C AV CONTROL UNIT .....	AV-434
U121D AV CONTROL UNIT	AV-79, AV-217, AV-435
U121E AV CONTROL UNIT	AV-80, AV-218, AV-436
U1225 AV CONTROL UNIT	AV-81, AV-219, AV-437
U1227 AV CONTROL UNIT .....	AV-438
U1228 AV CONTROL UNIT	AV-82, AV-220, AV-439
U1229 AV CONTROL UNIT	AV-83, AV-221, AV-440
U122A AV CONTROL UNIT	AV-84, AV-222, AV-441
U122E AV CONTROL UNIT	AV-85, AV-223, AV-442
U1232 STEERING ANGLE SENSOR .....	AV-86, AV-224, AV-443
U1243 DISPLAY UNIT .....	AV-87, AV-225, AV-444
U1244 GPS ANTENNA .....	AV-446
U1255 SATELLITE RADIO TUNER.	AV-89, AV-227
U1258 SATELLITE RADIO ANTENNA .....	AV-447
U1263 USB .....	AV-91, AV-229, AV-448
U1264 ANTENNA AMP .....	AV-449
U1265 BOSE AMP .....	AV-450
U1300 AV COMM CIRCUIT	AV-92, AV-230, AV-451
U1302 CAMERA POWER VOLT .....	AV-452
U1303 LED POWER SUPPLY VOLT .....	AV-456
U1304 CAMERA IMAGE CALIBRATION ....	AV-457
U1305 CONFIG UNFINISH .....	AV-458
U1310 AV CONTROL UNIT	AV-93, AV-231, AV-459
U1500 LDP) CAM CAN CIR1 .....	DAS-308
U1501 LDP) CAM CAN CIR2 .....	DAS-309
U1503 SIDE RDR L CAN 2 .....	DAS-419
U1504 SIDE RDR L CAN 1 .....	DAS-420
U1505 SIDE RDR R CAN 2 .....	DAS-421

U1506 SIDE RDR R CAN 1 .....	DAS-422
U1507 LOST COMM(SIDE RDR R) .....	DAS-423
U1508 LOST COMM(SIDE RDR L) .....	DAS-424
U150B ECM CAN 3 .....	DAS-415
U150C VDC CAN 3 .....	DAS-416
U150D TCM CAN 3 .....	DAS-417
U150E BCM CAN 3 .....	DAS-418
U1518 SIDE RDR L CAN 3 .....	DAS-425
U1519 SIDE RDR R CAN 3 .....	DAS-426
UNBALANCE STEERING WHEEL TURNING FORCE (TORQUE VARIATION) .....	STC-19
UNDER DRIVE CARRIER, FRONT BRAKE HUB...	TM-285
UNEXPECTED PEDAL REACTION .....	BRC-146
UNIFIED METER AND A/C AMP.	HAC-83, HAC-128, MWI-87, MWI-137, WCS-52
UNLOCK SENSOR .....	DLK-89
UPPER LINK .....	FSU-16, FSU-36
USB CONNECTOR .....	AV-135, AV-279, AV-507

**V**

VACUUM LINES .....	BR-36
VANITY MIRROR LAMP .....	INL-106
VDC .....	BRC-10
VDC OFF INDICATOR LAMP .....	BRC-127
VDC OFF SWITCH .....	BRC-123
VDC WARNING LAMP .....	BRC-128
VEHICLE DOES NOT ENTER AWD MODE	DLN-56
VEHICLE JERKS DURING VDC/TCS/ABS CONTROL .....	BRC-150
VEHICLE SECURITY ALARM DOES NOT ACTIVATE .....	SEC-194
VEHICLE SECURITY SYSTEM	SEC-18, SEC-122
VEHICLE SECURITY SYSTEM CAN NOT BE SET	SEC-192
VEHICLE SECURITY SYSTEM CAN NOT CANCELED .....	SEC-195
VEHICLE SPEED SENSING AUTO LOCK OPERATION DOES NOT OPERATE .	DLK-196
VEHICLE SPEED SIGNAL CIRCUIT	SE-45, STC-11
VEHICLE-TO-VEHICLE DISTANCE CONTROL MODE FUNCTION .....	CCS-23
VERTICAL SYNCHRONIZING (VP) SIGNAL CIRCUIT .....	AV-104, AV-243
VVEL CONTROL MODULE .....	EC-595
VVEL SYSTEM .....	EC-126

**W**

WARNING CHIME SYSTEM .....	WCS-5, WCS-26
WARNING SYSTEMS ON INDICATOR CIRCUIT ...	DAS-313, DAS-432
WARNING SYSTEMS SWITCH	DAS-254, DAS-352, DAS-440
WARNING SYSTEMS SWITCH CIRCUIT	DAS-311, DAS-430



WASHER LEVEL SWITCH .....	WW-116	
WASHER LEVEL SWITCH SIGNAL CIRCUIT .....	MWI-66	A
WASHER SWITCH .....	WW-32	
WASHER TANK .....	WW-114	B
WATER INLET AND THERMOSTAT ASSEMBLY ..	CO-23	
WATER OUTLET AND WATER PIPING .....	CO-25	C
WATER PUMP .....	CO-20	
WELCOME LIGHT FUNCTION DOES NOT OPERATE .....	DLK-202	D
WHEEL ALIGNMENT .....	FSU-8, FSU-28, RSU-6	
WHEEL SENSOR .....	BRC-156	E
WIND DEFLECTOR .....	RF-96	
WINDSHIELD GLASS .....	GW-11	E
WIPER AND WASHER FUSE .....	WW-22	
WIPER AND WASHER SWITCH .....	WW-125	F
WIPER AND WASHER SYSTEM SYMPTOMS .....	WW-105	
WIPER BLADE .....	WW-121	
WOOFER .....	AV-273, AV-502	G
<b>X</b>		
<hr/>		
XENON HEADLAMP .....	EXL-71	H
<b>Y</b>		
<hr/>		
YAW RATE/SIDE G SENSOR .....	BRC-161	

A  
B  
C  
D  
E  
F  
G  
H  
J  
K  
L  
M  
N  
O  
P