

SECTION **IDX**

ALPHABETICAL INDEX

A

B

C

D

E

F

G

H

I

J

K

L

IDX

ALPHABETICAL INDEX

Numerics	
2-4WD shift solenoid valve	TF-94 , TF-154 , TF-167
4WD - Wiring diagram	TF-24
4WD shift switch	TF-66
4WD solenoid valve	TF-90 , TF-154 , TF-167
4WD system description	TF-15
4WD system diagram	TF-19
A	
A/C air flow	ATC-30
A/C compressor clutch removal and installation ..	ATC-176
A/C compressor mounting	ATC-175
A/C compressor precaution	ATC-11
A/C compressor special service tool	ATC-14
A/C control operation (auto A/C)	ATC-27
A/C diagnostic work flow (auto A/C)	ATC-130
A/C evaporator	ATC-184
A/C HFC134a (R134a) system identification	ATC-6
A/C HFC134a (R134a) system precaution	ATC-5
A/C HFC134a (R134a) system service procedure	ATC-171
A/C HFC134a (R134a) system service tools ...	ATC-14
A/C HFC134a system service equipment precaution ...	ATC-11
A/C lubricant (R134a)	ATC-22
A/C lubrication oil	ATC-22
A/C operational check	ATC-58 , ATC-60
A/C self-diagnoses (auto A/C)	ATC-56 , ATC-130
A/C service data specification	ATC-191
A/C trouble diagnoses (auto A/C)	ATC-34
A/C, A - Wiring diagram	ATC-44
A/T fluid checking	AT-12 , AT-51 , MA-22
A/T fluid cooler cleaning	AT-14
A/T fluid replacement	AT-12 , MA-24
A/T fluid temperature sensor	AT-127
A/T IND - Wiring diagram	DI-41
A/T indicator	DI-41
A/T shift lock system	AT-221
A/T trouble diagnoses	AT-42
ABS - Wiring diagram	BRC-16
ABS (anti-lock brake system)	BRC-7
Accelerator control system	ACC-3
Accelerator pedal position (APP) sensor	EC-547 , EC-553 , EC-567
Accelerator pedal released position learning	EC-78
AF1B1-Wiring diagram	EC-216 , EC-225 , EC-234 , EC-244 , EC-577
AF1B2-Wiring diagram	EC-218 , EC-227 , EC-236 , EC-246 , EC-579
AF1HB1-Wiring diagram	EC-157
AF1HB2-Wiring diagram	EC-159
Aiming adjustment	LT-29 , LT-78
Air bag	SRS-3
Air bag precautions	AV-4
Air cleaner and air duct	EM-15
Air cleaner filter replacement	EM-16 , MA-16
Air conditioner cut control	EC-28
Air flow meter - See Mass air flow sensor	EC-171 , EC-180
Air fuel ratio sensor 1 ..	EC-213 , EC-223 , EC-232 , EC-241 , EC-575
Air fuel ratio sensor 1 heater	EC-156
Air mix. door motor	ATC-70
Ambient sensor	ATC-134 , ATC-145
Angular tightening application	EM-4
Antenna	AV-60
APPS1 - Wiring diagram	EC-549
APPS2 - Wiring diagram	EC-555
APPS3 - Wiring diagram	EC-569
ASC/BS - Wiring diagram	EC-513
ASC/SW - Wiring diagram	EC-496
ASCBOF - Wiring diagram	EC-587
ASCD	EC-29
ASCD (automatic speed control device)	ACS-3
ASCD brake switch	EC-511 , EC-586
ASCD indicator lamp	EC-593
ASCD steering switch	EC-494
ASCIND - Wiring diagram	EC-594
ATP switch	TF-107 , TF-110 , TF-115
Audio	AV-6
AUDIO - Wiring diagram	AV-11
AUT/DP - Wiring diagram	SE-16
Auto air conditioner - Wiring diagram	ATC-44
Auto anti-dazzling inside mirror	GW-72 , GW-73
Autolamp	LT-47
Automatic amplifier	ATC-61
Automatic drive positioner	SE-11
Automatic transmission number	GI-49
B	
Back door	BL-99
Back door trim	EI-32
Back sonar	DI-60
BACK/L - Wiring diagram	LT-109
Back-up lamp	LT-109
Ball joint (front)	FSU-15
Basic inspection	EC-71
Battery	SC-4
Battery/Starting/Charging System Tester	SC-6 , SC-12 , SC-19
BCM (Body control module)	BCS-3 , AV-109
Block heater	EM-78
Blower motor	ATC-93 , ATC-149
Body alignment	BL-172
Body component parts	BL-161
Body construction	BL-171
Body exterior paint color	BL-160
Body mounting	BL-159
Body repair	BL-160
Body sealing	BL-168
Bose speaker amp.	AV-8
Brake booster	BR-17
Brake fluid level	MA-28
Brake hydraulic line	BR-12

ALPHABETICAL INDEX

Brake inspection	MA-28	Control units (terminal arrangement)	PG-71		
Brake lines and cables inspection	MA-28	Control valve (A/T)	AT-36		
Brake master cylinder	BR-15	Control valve (Transfer)	TF-154, TF-167		
Brake switch	EC-511, EC-523	Converter housing installation	AT-245, AT-249		
BRK/SW - Wiring diagram	EC-524	COOL/F - Wiring diagram	EC-476		
Bulb specifications	LT-175	Coolant mixture ratio	MA-12		
Bumper, front	EI-13	Coolant replacement	CO-10, MA-13		
Bumper, rear	EI-15	Cooling circuit (engine)	CO-8		
C					
Cabin air filter	MA-21	Cooling fan	CO-17		
Camshaft	EM-46	Cooling fan control	EC-473		
Camshaft inspection	EM-50	Cooling fan motor	EC-482		
Camshaft position sensor (PHASE)	EC-347	Cooling unit (A/C evaporator)	ATC-153, ATC-184		
CAN - Wiring diagram	EC-152, AT-96, AT-97, LAN-28, LAN-39, LAN-57, LAN-79, LAN-98	Corrosion protection	BL-165		
CAN communication	EC-31, EC-151, EC-154, TF-113, RSU-6	Crankcase ventilation system - See Positive crankcase ventilation	EC-45		
Canister-See EVAP canister	EC-35	Crankshaft	EM-79		
Center case (Transfer)	TF-154, TF-167	Crankshaft position sensor (POS)	EC-340		
CHARGE - Wiring diagram	SC-18	Crash zone sensor	SRS-55		
Charging system	SC-17	Cylinder block	EM-78		
Chassis and body maintenance	MA-21	Cylinder block boring	EM-99		
Chassis and body maintenance Schedule 1	MA-8	D			
Chassis and body maintenance Schedule 2	MA-10	D/LOCK - Wiring diagram	BL-19		
CHIME - Wiring diagram	DI-46	Data link connector for Consult	EC-116, EC-128		
Circuit breaker	PG-17	Daytime light system	LT-33		
Clock	DI-71	Daytime running light - See Daytime light system ..	LT-33		
CLOCK - Wiring diagram	DI-71	DEF - Wiring diagram	GW-77		
Closed loop control	EC-25, EC-470	Diagnosis sensor unit	SRS-58		
Closed loop control (Bank 1)	EC-470	Diagnostic trouble code (DTC) for OBD system ..	EC-8, EC-52		
Closed loop control (Bank 2)	EC-470	Diagnostic trouble code (DTC) inspection priority chart	EC-89		
Clutch drum (Transfer)	TF-154, TF-167	Differential carrier assembly	RFD-15		
Clutch pressure switch (Transfer)	TF-154, TF-167	Differential gear oil replacement	MA-26		
Coil spring (front)	FSU-10	Dimensions	GI-50		
Collision diagnosis	SRS-60	Direct clutch solenoid valve	AT-147, AT-149		
Combination lamp, front, removal and installation ..	LT-31	Display and amp.assembly	ATC-61		
Combination lamp, rear, removal and installation ..	LT-125	Display Control Unit	AV-86		
Combination meter	DI-5	Display Unit	AV-86		
Combination switch	LT-100	Dome light - See Interior lamp	LT-134		
COMBSW - Wiring diagram	LT-100	Door glass	GW-65, GW-68		
COMM - Wiring diagram	AV-97	Door lock	BL-131		
COMPAS - Wiring diagram	DI-27	Door mirror lamp	LT-134		
Compass	DI-26	Door trim	EI-32		
Component Location (auto A/C)	ATC-40	Door, front	BL-128, GW-65		
Compressor clutch removal and installation ..	ATC-176	Door, rear	BL-128, GW-68		
Compressor mounting	ATC-175	Drive belt	EM-13		
Compressor precaution	ATC-11	Drive chain (Transfer)	TF-149, TF-176		
Compressor special service tool	ATC-14	Drive pinion diff. inspection	RFD-18		
Condenser	ATC-182	Drive shaft (rear)	RAX-7		
Connecting rod	EM-96	Driver air bag	SRS-46		
Connecting rod bearing clearance	EM-96	DTC work support	EC-124		
Connecting rod bushing clearance	EM-96	DTRL - Wiring diagram	LT-37		
Console box - See Instrument panel	IP-10	Duct and grilles	ATC-166		
CONSULT for VDC	BRC-28	DVD - Wiring Diagram	AV-78		
CONSULT-II for engine	EC-114	DVD Entertainment System	AV-75		
		DVD Player	AV-76		

A
B
C
D
E
F
G
H
I
J
K
L

IDX

ALPHABETICAL INDEX

E

ECM input/output signal	EC-105 , EC-129
ECM power supply	EC-145 , EC-453
ECM relay	EC-145
ECM/PW - Wiring diagram	EC-454
ECTS - Wiring diagram	EC-194
Electric sunroof	RF-10
Electric throttle control actuator	EC-534 , EC-545
Electrical load signal circuit	EC-596
Electrical units location	PG-65
Electronic ignition (EI) system	EC-26
Engine control circuit diagram	EC-103
Engine control component parts location	EC-96
Engine control module (ECM)	EC-457
Engine control system diagram	EC-23
Engine coolant	CO-10
Engine coolant temperature sensor (ECTS) ...	EC-192 , EC-205
Engine fail-safe system	EC-91
Engine oil	LU-7
Engine oil filter replacement	MA-17
Engine oil precautions	GI-7
Engine oil replacement	MA-17
Engine removal	EM-74
Engine room cover	EM-12
Engine serial number	GI-49
ETC1 - Wiring diagram	EC-535
ETC2 - Wiring diagram	EC-530
ETC3 - Wiring diagram	EC-541
EVAP canister	EC-35
EVAP canister purge volume control solenoid valve	EC-373 , EC-381
EVAP canister vent control valve	EC-388 , EC-395
EVAP control system (small leak) diagnosis ..	EC-365 , EC-419 , EC-427
EVAP control system pressure sensor	EC-402 , EC-405 , EC-411
EVAP control system purge flow monitoring diagnosis	EC-360
EVAP vapor lines inspection	MA-20
Evaporative emission (EVAP) system	EC-32
Evaporator	ATC-184
Exhaust manifold	EM-21
Exhaust system	EX-3
Exhaust system inspection	EX-3
Expansion valve	ATC-186

F

F/FOG - Wiring diagram	LT-71
F/PUMP - Wiring diagram	EC-605
Final drive pre-inspection	FFD-15
Final drive removal and installation ..	FFD-12 , RFD-13
Flow charts	GI-28
Fluid temperature sensor (A/T)	AT-127
Fluids	MA-11
Fluorescent leak detector	ATC-187
Fog lamp, front	LT-69

Fog lamp, front, removal and installation	LT-79
Foot lamp	LT-135
Freeze frame data	EC-53 , EC-118
Front brake solenoid valve	AT-143 , AT-145
Front bumper	EI-13
Front case (Transfer)	TF-149 , TF-176
Front combination lamp removal and installation	LT-31
Front door	BL-128 , BL-131 , GW-65
Front Door Trim	EI-32
Front drive shaft (Transfer)	TF-149 , TF-176
Front fog lamp	LT-69
Front fog lamp removal and installation	LT-79
Front passenger air bag	SRS-50
Front seat	SE-91
Front seat belt	SB-3
Front seat belt pre-tensioner	SRS-3 , SRS-57
Front washer	WW-4
Front wiper	WW-4
FTS - Wiring diagram	AT-128
FTTS - Wiring diagram	EC-311 , EC-316
Fuel cut control (at no load high engine speed) ..	EC-27
Fuel filter replacement	FL-6
Fuel gauge	DI-5
Fuel injection system (Bank 1)	EC-288 , EC-299
Fuel injection system (Bank 2)	EC-288 , EC-299
Fuel injector	EC-598
Fuel injector and fuel tube	EM-31
Fuel level sensor	EC-436 , EC-438 , EC-440
Fuel line inspection	FL-4
Fuel precautions	GI-5
Fuel pressure check	EC-80
Fuel pressure release	EC-80
Fuel pump	EC-604
Fuel pump and gauge	FL-6
Fuel system	FL-4
Fuel tank	FL-10
Fuel tank temperature sensor	EC-309 , EC-315
Fuel tank vacuum relief valve	EC-35
FUELB1 - Wiring diagram	EC-290 , EC-301
FUELB2 - Wiring diagram	EC-292 , EC-303
Fuse	PG-17 , PG-77
Fuse and fusible link box	PG-77
Fuse block	PG-76
Fusible link	PG-17 , PG-77

G

Garage jack and safety stand	GI-41
Gauges	DI-5
Generator	SC-17
Generic scan tool (GST)	EC-127
Glass	GW-11 , GW-65 , GW-68
Glove box lamp	LT-158
GPS antenna	AV-85
Grease	MA-11
Ground distribution	PG-31

ALPHABETICAL INDEX

H	I
H/AIM - Wiring diagram LT-66	Injector EC-598
H/LAMP - Wiring diagram LT-9	Input clutch solenoid valve AT-139, AT-141
Handling precautions for plastics BL-187	Instrument panel IP-10
Harness connector PG-68	Intake air temperature sensor EC-188, EC-208
Harness layout PG-41	Intake door control linkage adjustment . ATC-85, ATC-88
Hazard warning lamp LT-80	Intake door motor ATC-83, ATC-160
Headlamp LT-5	Intake manifold EM-17
Headlamp aiming control LT-66	Intake sensor ATC-142, ATC-148
Headlamp leveler - See Headlamp aiming control . LT-66	Integrated homelink transmitter - See Homelink universal transceiver BL-156
Headlamp removal and installation LT-31	Intelligent cruise control (ICC) system ACS-6
Heated oxygen sensor 2 (bank 1) EC-253, EC-264, EC-277	Interior EI-35
Heated oxygen sensor 2 (bank 2) EC-253, EC-264, EC-277	Interior lamp LT-134
Heated oxygen sensor 2 heater (bank 1) EC-163	Interior lamp on-off control LT-135
Heated oxygen sensor 2 heater (bank 2) EC-163	Internal gear (Transfer) TF-149, TF-176
Heated seat SE-84	IPDM (Intelligent power distribution module engine room) PG-18
Heater and cooling unit (Heater core) . ATC-153, ATC-156	IVIS (Infiniti vehicle immobilizer system) BL-137
Heater unit (heater core) ATC-153, ATC-156	IVIS (Infiniti vehicle immobilizer system) precautions ... GI-3
Height (Dimensions) GI-50	
HFC134a (R134a) system identification ATC-6	J
HFC134a (R134a) system precaution ATC-5	Jacking points GI-41
HFC134a (R134a) system service procedure ATC-171	Junction box (J/B) PG-76
HFC134a (R134a) system service tools ATC-14	
HFC134a system service equipment precaution ATC-11	K
High and low reverse clutch solenoid valve AT-151, AT-153	Key illumination LT-135
Homelink universal transceiver BL-156	KEYLES - Wiring diagram BL-49
Horn WW-55	Knock sensor (KS) EC-335
HORN - Wiring diagram WW-55	KS - Wiring diagram EC-336
How to erase DTC for OBD system EC-61	
HSEAT - Wiring diagram SE-86	L
	Laser beam aiming adjustment ACS-12
I	Length (Dimensions) GI-50
IATS - Wiring diagram EC-189	License lamp LT-111
ICC - Wiring diagram ACS-20	Lifting points GI-42
ICC/BS - Wiring diagram EC-504	Line pressure solenoid valve AT-122
ICC/SW - Wiring diagram EC-489	Line pressure switch (Transfer) TF-154, TF-167
ICCBOF - Wiring diagram EC-611	Line pressure test (A/T) AT-52
Identification plate GI-48	Location of electrical units PG-65
Idle air volume learning EC-78	Low coast brake solenoid valve AT-155, AT-157
Idle speed EC-71, EC-76	Low tire pressure warning system WT-8
Idle speed control (ISC) EC-444, EC-446	Low tire pressure warning system - trouble diagnoses WT-11
Ignition coil EM-28, EC-618	Low tire pressure warning system - Wiring diagram WT-11
Ignition control system EC-618	Lubricant (R134a) A/C ATC-22
Ignition key hole illumination LT-134	Lubricants MA-11
Ignition timing EC-71, EC-76	Lubrication circuit (engine) LU-5
IGNSYS - Wiring diagram EC-619	Lubrication oil A/C ATC-22
ILL - Wiring diagram LT-163	Lubrication-locks, hinges and hood latches MA-31
Illumination LT-157	
In vehicle sensor ATC-137, ATC-146	M
In-cabin Microfilter MA-21	MAFS - Wiring diagram EC-174, EC-182
INJECT - Wiring diagram EC-599	

A
B
C
D
E
F
G

H
I
J

K
L

IDX

ALPHABETICAL INDEX

Magnet clutch	ATC-115 , ATC-176
MAIN - Wiring diagram	EC-145 , AT-167
Main oil pump (Transfer)	TF-154 , TF-167
Mainshaft (Transfer)	TF-154 , TF-167
Maintenance (engine)Schedule 1	MA-7
Maintenance (engine)Schedule 2	MA-9
Major overhaul (Final drive)	FFD-14
Major overhaul (Transfer)	TF-146
Malfunction indicator lamp (MIL)	EC-63
Map lamp	LT-135
Mass air flow sensor (MAFS)	EC-171 , EC-180
Meter	DI-5
METER - Wiring diagram	DI-10
MIL data link connectors circuit	EC-635
MIL/DL - Wiring diagram	EC-635
MIRROR - Wiring diagram	GW-93
Misfire	EC-327
Mode door control linkage adjustment	ATC-66
Mode door motor	ATC-64 , ATC-161
Model variation	GI-47
Multiport fuel injection (MFI) system	EC-24
Multiport fuel injection precautions	GI-6
Multi-remote control system - See Remote keyless entry system	BL-44

N

NATS - Wiring diagram	BL-140
NAVI - Wiring diagram	AV-89
NAVI Control Unit	AV-86
Navigation system	AV-84
Neutral-4LO switch	TF-62
NONDTC - Wiring diagram	AT-176
NVH troubleshooting (AX)	FAX-4
NVH troubleshooting (EM)	EM-10
NVH troubleshooting (Final drive)	RFD-7
NVH troubleshooting (Propeller shaft)	PR-3
NVH troubleshooting (RAX)	RAX-4
NVH troubleshooting (RSU)	RSU-5
NVH troubleshooting (ST)	PS-5
NVH troubleshooting (Transfer)	TF-10
NVH troubleshooting (WT)NVH troubleshooting (WT)	WT-4
NVIS (Nissan vehicle immobilizer system) precautions	GI-3

O

O2H2B1 - Wiring diagram	EC-165
O2H2B2 - Wiring diagram	EC-167
O2S2B1 - Wiring diagram ...	EC-256 , EC-267 , EC-280
O2S2B2 - Wiring diagram ...	EC-258 , EC-269 , EC-282
Oil cooler (engine)	LU-11
Oil filter	LU-10
Oil filter (Transfer)	TF-143
Oil pan (engine)	EM-24
Oil pressure (engine)	LU-7
Oil pressure relief valve (engine)	LU-5
Oil pump (engine)	LU-13

Oil seal replacement (engine)	EM-60
Oil seal replacement (front of final drive)	FFD-8 , RFD-9
Oil seal replacement (side of final drive)	RFD-11
On board diagnostic system	EC-48
ORVR (On-board Refueling Vapor Recovery) ..	EC-39
Overheat	EC-473

P

P/SCKT - Wiring diagram	WW-53
Pantograph jack	GI-41
Park/Neutral position switch	EC-465
Parking brake control	PB-4
PCV (positive crankcase ventilation)	EC-45
Periodic maintenance	MA-7
Personal lamp	LT-135
PGC/V - Wiring diagram	EC-375 , EC-383
PHASE - Wiring diagram	EC-349
PHONE - Wiring diagram	AV-67
Pinion bearing preload diff.	RFD-26
Piston pin inspection	EM-94
Piston ring inspection	EM-95
Piston to bore clearance	EM-99
Planetary carrier (Transfer)	TF-149 , TF-176
PNP/SW - Wiring diagram ...	EC-467 , AT-105 , AT-106
POS - Wiring diagram	EC-342
POWER - Wiring diagram	PG-6
Power door lock	BL-16
Power seat	SE-83
Power steering fluid level	MA-29
Power steering gear	PS-15
Power steering oil pump	PS-21
Power steering pressure (PSP) sensor	EC-448
Power steering system bleeding	PS-6
Power supply routing	PG-4
Power window	GW-15
PRE/SE - Wiring diagram	EC-407 , EC-413
Precautions (General)	GI-4
Precautions in repairing high strength steel	BL-190
Pressure switch 1	AT-145 , AT-159
Pressure switch 2	AT-157
Pressure switch 3	AT-141 , AT-161
Pressure switch 5	AT-149 , AT-163
Pressure switch 6	AT-153 , AT-165
Pressure test (A/T)	AT-52
Propeller shaft	PR-4 , PR-8
Propeller shaft inspection	MA-25
Propeller shaft on vehicle service	PR-8
Propeller shaft vibration	PR-4 , PR-8
PS/SEN - Wiring diagram	EC-449

R

R/VIEW - Wiring diagram	DI-76
Radiator	CO-14
Rear Audio Remote Control Unit	AV-8
Rear axle	RAX-5
Rear bumper	EI-15
Rear case (Transfer)	TF-148 , TF-181

ALPHABETICAL INDEX

Rear combination lamp removal and installation ...	LT-125	
Rear cover packing replacement diff.	RFD-28	A
Rear door	BL-128, GW-68	
Rear seat belt	SB-6	B
Rear suspension	RSU-26	
Rear view monitor	DI-73	
Rear washer	WW-32	C
Rear window defogger	GW-74	
Rear wiper	WW-32	
Refrigerant connection precaution	ATC-7	D
Refrigerant discharging evacuating charging	ATC-171	
Refrigerant general precaution	ATC-6	E
Refrigerant lines	ATC-171, ATC-179, ATC-180	
Refrigerant pressure sensor	EC-630, ATC-182	
Relay box	PG-78	F
Remote keyless entry system	BL-44	
Removal and installation (A/T)	AT-243, AT-246	G
Removal and installation (Transfer)	TF-145	H
Ring gear diff. inspection	RFD-18	I
Road wheel size	GI-50	J
Rocker cover	EM-35	K
Room lamp	LT-134	L
Room lamp - See Interior lamp	LT-134	
ROOM/L - Wiring diagram	LT-140	
RP/SEN - Wiring diagram	EC-631	
Stabilizer bar (rear)	RSU-42	
Stall test (A/T)	AT-51	
Standardized relay	PG-72	
START - Wiring diagram	SC-11	
Starting system	SC-10	
Steering gear, linkage and transfer gear inspection	MA-29	
Steering linkage	PS-15	
Steering wheel and column	PS-7	
Step lamp	LT-135	
Stop lamp	LT-106	
Stop lamp switch	EC-511, EC-523, EC-586	
STOP/L - Wiring diagram	LT-107	
Strut (front)	FSU-10	
STSIG - Wiring diagram	AT-101	
Sub-oil pump (Transfer)	TF-154, TF-167	
Sun gear (Transfer)	TF-149, TF-176	
Sun roof, electric	RF-10	
Sunload sensor	ATC-140	
Sunroof	RF-24	
Supplemental Restraint System	SRS-5	
Supplemental restraint system - Wiring diagram	SRS-12	
Symbols and abbreviations	GI-10, GI-23	
Symptom matrix chart	EC-92	
System readiness test (SRT) code	EC-54	

S

SAE J1979 - Service \$01 - 09	EC-48
SEAT - Wiring diagram	SE-83
Seat belt inspection	SB-11, MA-32
Seat belt pre-tensioner	SRS-57
Seat belt, front	SB-3
Seat belt, rear	SB-6
Seat, front	SE-91
Self-diagnosis (Transfer)	TF-50
SEN/PW - Wiring diagram	EC-461
SHIFT - Wiring diagram	AT-222
Shift control (Transfer)	TF-149, TF-176
Shift lock system	AT-221
Shock absorber (front)	FSU-11
Shock absorber (rear)	RSU-35
Side air bag (satellite) sensor	SRS-56
Side curtain air bag	SRS-53
Side trim	EI-35
SMJ (super multiple junction)	PG-74
SONAR - Wiring diagram	DI-63
Spare tire size	GI-50
Spark plug	EM-29
Spark plug replacement	MA-18
Specification value	EC-134
Speedometer	DI-5
Spiral cable	SRS-48
SROOF - Wiring diagram	RF-13
SRS - See Supplemental Restraint System	SRS-5
SRS - Wiring diagram	SRS-12
SRS Trouble diagnoses	SRS-8
Stabilizer bar (front)	FSU-12

T

Tachometer	DI-5
Tail lamp	LT-111
TAIL/L - Wiring diagram	LT-113
TCM circuit diagram	AT-50
TCM inspection table	AT-83
TCS - Wiring diagram	BRC-16
TCS (traction control system)	BRC-7
TCS component parts and connector location	BRC-14
TCS wheel sensors	BRC-14
Telephone	AV-64
Theft warning system - See Vehicle security (Theft warning) system	BL-75
Thermometer	DI-26
Three way catalyst	EM-21
Three way catalyst function (Bank 1)	EC-354
Three way catalyst function (Bank 2)	EC-354
Three way catalyst precautions	GI-5
Throttle control motor	EC-540
Throttle control motor relay	EC-528
Throttle position sensor (TPS)	EC-198, EC-320, EC-483, EC-485, EC-560
Throttle valve closed position learning	EC-78
Tie-rod	PS-15
Timing chain	EM-37
Tire rotation	MA-28
Tire size	GI-50
Torque converter installation	AT-244, AT-245, AT-248, AT-249
Torque convertor clutch solenoid valve	AT-118, AT-120

IDX

ALPHABETICAL INDEX

Tow truck towing	GI-43	Wheel bearing (rear)	RAX-5
Towing point	GI-44	Wheel hub (rear)	RAX-5
TPS1 - Wiring diagram	EC-322	Wheel size	GI-50
TPS2 - Wiring diagram	EC-200	Wheelbase (Dimensions)	GI-50
TPS3 - Wiring diagram	EC-562	Width (Dimensions)	GI-50
Traction control system - Wiring diagram	BRC-16	WINDOW - Wiring diagram	GW-22
Transfer control device	TF-76, TF-80, TF-138	Window, door	GW-65, GW-68
Transfer control unit inspection table	TF-35	Windshield	GW-11
Transfer dropping resistor	TF-90	WIP/R - Wiring diagram	WW-36
Transfer fluid temperature sensor	TF-104, TF-154, TF-167	WIPER - Wiring diagram	WW-8
Transfer motor	TF-102, TF-142	Wiper, front	WW-4
Transfer motor relay	TF-102	Wiper, rear	WW-32
Transfer oil replacement	MA-24	Wiring Diagram (Cell code) list	PG-62
Transfer serial number	GI-49	Wiring diagrams	GI-16
Transmission serial number	GI-49	WT-T/WARN - Wiring diagram	WT-11
Tread-FR&RR (Dimensions)	GI-50		
Trim	EI-35		
TRNSCV - Wiring diagram	BL-140, BL-156		
Trouble diagnoses	GI-10		
Turbine revolution sensor	AT-109		
TURN - Wiring diagram	LT-84		
Turn signal lamp	LT-80		
Two trip detection logic	EC-48		
Two-pole lift	GI-42		

V

Vacuum hose (brake system)	BR-20
Vacuum hose drawing (Engine control)	EC-102
Valve clearance	EM-55
Valve guide	EM-69
Vanity mirror lamp	LT-134
VDC (vehicle dynamics control)	BRC-7
VDC -Wiring diagram	BRC-16
Vehicle identification number	GI-48
Vehicle recovery (freeing a stuck vehicle)	GI-44
Vehicle security (theft warning) system	BL-75
Vehicle speed sensor (VSS)	EC-442
VEHSEC - Wiring diagram	BL-79
VENT/V - Wiring diagram	EC-390, EC-397
VIN registration	EC-77
Viscosity number (SAE)	MA-12
VSS A/T - Wiring diagram	AT-111, AT-113

W

W/ANT - Wiring diagram	AV-61
Wait detection switch	TF-69
WARN - Wiring diagram	DI-32
Warning chime	DI-43
Warning lamps	DI-31
Washer, front	WW-4
Washer, rear	WW-32
Water pump	CO-19
Water temperature gauge	DI-5
Wheel alignment (front)	FSU-6
Wheel alignment (rear)	RSU-28
Wheel bearing (front)	FAX-5