

SECTION **IDX**
ALPHABETICAL INDEX

A
B
C
D
E
F
G
H
I
J
K
L

IDX

ALPHABETICAL INDEX

Numerics

2-4WD shift solenoid valve [TF-93](#), [TF-154](#), [TF-167](#)
4WD - Wiring diagram [TF-24](#)
4WD shift switch [TF-65](#)
4WD solenoid valve [TF-89](#), [TF-154](#), [TF-167](#)
4WD system description [TF-15](#)
4WD system diagram [TF-19](#)

A

A/C air flow [ATC-30](#)
A/C compressor clutch removal and installation .. [ATC-180](#)
A/C compressor mounting [ATC-179](#)
A/C compressor precaution [ATC-11](#)
A/C compressor special service tool [ATC-14](#)
A/C control operation (auto A/C) [ATC-27](#)
A/C diagnostic work flow (auto A/C) [ATC-133](#)
A/C evaporator [ATC-186](#)
A/C HFC134a (R134a) system identification [ATC-6](#)
A/C HFC134a (R134a) system precaution [ATC-5](#)
A/C HFC134a (R134a) system service procedure [ATC-175](#)
A/C HFC134a (R134a) system service tools ... [ATC-14](#)
A/C HFC134a system service equipment precaution ... [ATC-11](#)
A/C lubricant (R134a) [ATC-22](#)
A/C lubrication oil [ATC-22](#)
A/C operational check [ATC-56](#), [ATC-58](#)
A/C self-diagnoses (auto A/C) [ATC-54](#), [ATC-133](#)
A/C service data specification [ATC-193](#)
A/C trouble diagnoses (auto A/C) [ATC-34](#)
A/C, A - Wiring diagram [ATC-42](#)
A/T fluid checking [AT-12](#), [AT-51](#), [MA-22](#)
A/T fluid cooler cleaning [AT-14](#)
A/T fluid replacement [AT-12](#), [MA-24](#)
A/T fluid temperature sensor [AT-123](#)
A/T IND - Wiring diagram [DI-36](#)
A/T indicator [DI-36](#)
A/T shift lock system [AT-216](#)
A/T trouble diagnoses [AT-42](#)
ABS - Wiring diagram [BRC-16](#)
ABS (anti-lock brake system) [BRC-7](#)
Accelerator control system [ACC-3](#)
Accelerator pedal position (APP) sensor . [EC-608](#), [EC-614](#), [EC-628](#)
Accelerator pedal released position learning [EC-80](#)
AF1B1-Wiring diagram [EC-242](#), [EC-250](#), [EC-258](#), [EC-267](#), [EC-638](#)
AF1B2-Wiring diagram [EC-244](#), [EC-252](#), [EC-260](#), [EC-269](#), [EC-640](#)
AF1HB1-Wiring diagram [EC-175](#)
AF1HB2-Wiring diagram [EC-177](#)
Aiming adjustment [LT-23](#), [LT-61](#)
Air bag [SRS-3](#)
Air bag precautions [AV-4](#)
Air cleaner and air duct [EM-15](#)
Air cleaner filter replacement [EM-16](#), [MA-16](#)

Air conditioner cut control [EC-29](#)
Air flow meter - See Mass air flow sensor [EC-197](#), [EC-206](#)
Air fuel ratio sensor 1 .. [EC-239](#), [EC-248](#), [EC-256](#), [EC-264](#), [EC-636](#)
Air fuel ratio sensor 1 heater [EC-174](#)
Air mix. door motor [ATC-69](#)
Ambient sensor [ATC-138](#), [ATC-149](#)
Angular tightening application [EM-4](#)
Antenna [AV-58](#)
APPS1 - Wiring diagram [EC-610](#)
APPS2 - Wiring diagram [EC-616](#)
APPS3 - Wiring diagram [EC-630](#)
ASC/BS - Wiring diagram [EC-574](#)
ASC/SW - Wiring diagram [EC-557](#)
ASCBOF - Wiring diagram [EC-648](#)
ASCD [EC-30](#)
ASCD (automatic speed control device) [ACS-3](#)
ASCD brake switch [EC-572](#), [EC-647](#)
ASCD indicator lamp [EC-654](#)
ASCD steering switch [EC-555](#)
ASCIND - Wiring diagram [EC-655](#)
ATP switch [TF-106](#), [TF-109](#), [TF-114](#)
Audio [AV-6](#)
AUDIO - Wiring diagram [AV-11](#)
AUT/DP - Wiring diagram [SE-16](#)
Auto air conditioner - Wiring diagram [ATC-42](#)
Auto anti-dazzling inside mirror [GW-69](#), [GW-70](#)
Autolamp [LT-38](#)
Automatic amplifier [ATC-59](#)
Automatic drive positioner [SE-11](#)
Automatic transmission number [GI-50](#)

B

Back door [BL-88](#)
Back door trim [EI-32](#)
Back sonar [DI-50](#)
BACK/L - Wiring diagram [LT-87](#)
Back-up lamp [LT-87](#)
Ball joint (front) [FSU-15](#)
Basic inspection [EC-73](#)
Battery [SC-4](#)
Battery current sensor . [EC-520](#), [EC-527](#), [EC-534](#), [EC-541](#)
Battery/Starting/Charging System Tester [SC-6](#), [SC-12](#), [SC-20](#)
BCM (Body control module) [BCS-3](#), [AV-106](#)
Block heater [EM-78](#)
Blower motor [ATC-93](#), [ATC-153](#)
Body alignment [BL-164](#)
Body component parts [BL-151](#)
Body construction [BL-163](#)
Body exterior paint color [BL-150](#)
Body mounting [BL-149](#)
Body repair [BL-150](#)
Body sealing [BL-160](#)
Bose speaker amp. [AV-8](#)
Brake booster [BR-17](#)

ALPHABETICAL INDEX

Brake fluid level	MA-28
Brake hydraulic line	BR-12
Brake inspection	MA-28
Brake lines and cables inspection	MA-28
Brake master cylinder	BR-15
Brake switch	EC-572 , EC-584
BRK/SW - Wiring diagram	EC-585
Bulb specifications	LT-148
Bumper, front	EI-13
Bumper, rear	EI-15

C

Cabin air filter	MA-21
Camshaft	EM-46
Camshaft inspection	EM-49
Camshaft position sensor (PHASE)	EC-369
CAN - Wiring diagram	EC-157 , AT-93 , AT-94
CAN communication	EC-32 , EC-156 , EC-159 , TF-112 , RSU-6
Canister-See EVAP canister	EC-36
Center case (Transfer)	TF-154 , TF-167
CHARGE - Wiring diagram	SC-19
Charging system	SC-17
Chassis and body maintenance	MA-21
Chassis and body maintenanceSchedule 1	MA-8
Chassis and body maintenanceSchedule 2	MA-10
CHIME - Wiring diagram	DI-41
Circuit breaker	PG-17
Clock	DI-61
CLOCK - Wiring diagram	DI-61
Closed loop control	EC-26 , EC-501
Closed loop control (Bank 1)	EC-501
Closed loop control (Bank 2)	EC-501
Clutch drum (Transfer)	TF-154 , TF-167
Clutch pressure switch (Transfer)	TF-154 , TF-167
Coil spring (front)	FSU-10
Collision diagnosis	SRS-53
Combination lamp, front, removal and installation ..	LT-25
Combination lamp, rear, removal and installation ..	LT-101
Combination meter	DI-5
Combination switch	LT-79
COMBSW - Wiring diagram	LT-79
COMM - Wiring diagram	AV-94
COMPAS - Wiring diagram	DI-24
Compass	DI-23
Component Location (auto A/C)	ATC-38
Compressor clutch removal and installation ..	ATC-180
Compressor mounting	ATC-179
Compressor precaution	ATC-11
Compressor special service tool	ATC-14
Condenser	ATC-184
Connecting rod	EM-96
Connecting rod bearing clearance	EM-96
Connecting rod bushing clearance	EM-96
Console box - See Instrument panel	IP-10
CONSULT for VDC	BRC-27

CONSULT general information	GI-37
CONSULT-II for engine	EC-118
Control units (terminal arrangement)	PG-71
Control valve (A/T)	AT-36
Control valve (Transfer)	TF-154 , TF-167
Converter housing installation	AT-240 , AT-244
COOL/F - Wiring diagram	EC-507
Coolant mixture ratio	MA-12
Coolant replacement	CO-10 , MA-13
Cooling circuit (engine)	CO-8
Cooling fan	CO-17
Cooling fan control	EC-504
Cooling fan motor	EC-513
Cooling unit (A/C evaporator)	ATC-157 , ATC-186
Corrosion protection	BL-157
Crankcase ventilation system - See Positive crankcase ventilation	EC-46
Crankshaft	EM-79
Crankshaft position sensor (POS)	EC-362
Crash zone sensor	SRS-48
CUR/SE - Wiring diagram	EC-522 , EC-529 , EC-536 , EC-543
Cylinder block	EM-78
Cylinder block boring	EM-99

D

D/LOCK - Wiring diagram	BL-19
Data link connector for Consult	EC-120 , EC-132
Daytime light system	LT-27
Daytime running light - See Daytime light system ..	LT-27
DEF - Wiring diagram	GW-74
Diagnosis sensor unit	SRS-51
Diagnostic trouble code (DTC) for OBD system ..	EC-9 , EC-54
Diagnostic trouble code (DTC) inspection priority chart	EC-91
Differential carrier assembly	RFD-15
Differential gear oil replacement	MA-26
Dimensions	GI-51
Direct clutch solenoid valve	AT-143 , AT-145
Display and amp.assembly	ATC-59
Display Control Unit	AV-83
Display Unit	AV-83
Dome light - See Interior lamp	LT-110
Door glass	GW-62 , GW-65
Door lock	BL-121
Door mirror lamp	LT-110
Door trim	EI-32
Door, front	BL-117 , GW-62
Door, rear	BL-117 , GW-65
Drive belt	EM-13
Drive chain (Transfer)	TF-149 , TF-176
Drive pinion diff. inspection	RFD-18
Drive shaft (rear)	RAX-7
Driver air bag	SRS-39
DTC work support	EC-128
DTRL - Wiring diagram	LT-31

A
B
C
D
E
F
G
H
I
J
K
L

IDX

ALPHABETICAL INDEX

Duct and grilles [ATC-170](#)
DVD - Wiring Diagram [AV-75](#)
DVD Entertainment System [AV-72](#)
DVD Player [AV-73](#)

E

ECM input/output signal [EC-109](#), [EC-133](#)
ECM power supply [EC-150](#), [EC-475](#)
ECM relay [EC-150](#)
ECM/PW - Wiring diagram [EC-476](#)
ECTS - Wiring diagram [EC-220](#)
Electric sunroof [RF-10](#)
Electric throttle control actuator [EC-595](#), [EC-606](#)
Electrical load signal circuit [EC-657](#)
Electrical units location [PG-65](#)
Electronic ignition (EI) system [EC-27](#)
Engine control circuit diagram [EC-107](#)
Engine control component parts location [EC-98](#)
Engine control module (ECM) [EC-479](#)
Engine control system diagram [EC-24](#)
Engine coolant [CO-10](#)
Engine coolant temperature sensor (ECTS) ... [EC-218](#),
[EC-231](#)
Engine fail-safe system [EC-93](#)
Engine oil [LU-8](#)
Engine oil filter replacement [MA-17](#)
Engine oil precautions [GI-7](#)
Engine oil replacement [MA-17](#)
Engine removal [EM-74](#)
Engine room cover [EM-12](#)
Engine serial number [GI-50](#)
ETC1 - Wiring diagram [EC-596](#)
ETC2 - Wiring diagram [EC-591](#)
ETC3 - Wiring diagram [EC-602](#)
EVAP canister [EC-36](#)
EVAP canister purge volume control solenoid valve ...
[EC-395](#), [EC-403](#)
EVAP canister vent control valve [EC-410](#), [EC-417](#)
EVAP control system (small leak) diagnosis .. [EC-387](#),
[EC-441](#), [EC-449](#)
EVAP control system pressure sensor [EC-424](#), [EC-427](#), [EC-433](#)
EVAP control system purge flow monitoring diagnosis
[EC-382](#)
EVAP vapor lines inspection [MA-20](#)
Evaporative emission (EVAP) system [EC-33](#)
Evaporator [ATC-186](#)
Exhaust manifold [EM-21](#)
Exhaust system [EX-3](#)
Exhaust system inspection [EX-3](#)
Expansion valve [ATC-188](#)

F

F/FOG - Wiring diagram [LT-56](#)
F/PUMP - Wiring diagram [EC-666](#)
Final drive pre-inspection [FFD-15](#)
Final drive removal and installation .. [FFD-12](#), [RFD-13](#)

Flow charts [GI-27](#)
Fluid temperature sensor (A/T) [AT-123](#)
Fluids [MA-11](#)
Fluorescent leak detector [ATC-189](#)
Fog lamp, front [LT-54](#)
Fog lamp, front, removal and installation [LT-62](#)
Foot lamp [LT-111](#)
Freeze frame data [EC-55](#), [EC-121](#)
Front brake solenoid valve [AT-139](#), [AT-141](#)
Front bumper [EI-13](#)
Front case (Transfer) [TF-149](#), [TF-176](#)
Front combination lamp removal and installation [LT-25](#)
Front door [BL-117](#), [BL-121](#), [GW-62](#)
Front Door Trim [EI-32](#)
Front drive shaft (Transfer) [TF-149](#), [TF-176](#)
Front fog lamp [LT-54](#)
Front fog lamp removal and installation [LT-62](#)
Front passenger air bag [SRS-43](#)
Front seat [SE-89](#)
Front seat belt [SB-3](#)
Front seat belt pre-tensioner [SRS-3](#), [SRS-50](#)
Front washer [WW-4](#)
Front wiper [WW-4](#)
FTS - Wiring diagram [AT-124](#)
FTTS - Wiring diagram [EC-334](#), [EC-339](#)
Fuel cut control (at no load high engine speed) [EC-28](#)
Fuel filter replacement [FL-5](#)
Fuel gauge [DI-5](#)
Fuel injection system (Bank 1) [EC-311](#), [EC-322](#)
Fuel injection system (Bank 2) [EC-311](#), [EC-322](#)
Fuel injector [EC-659](#)
Fuel injector and fuel tube [EM-31](#)
Fuel level sensor [EC-458](#), [EC-460](#), [EC-462](#)
Fuel line inspection [FL-4](#)
Fuel precautions [GI-5](#)
Fuel pressure check [EC-82](#)
Fuel pressure release [EC-82](#)
Fuel pump [EC-665](#)
Fuel pump and gauge [FL-5](#)
Fuel system [FL-4](#)
Fuel tank [FL-10](#)
Fuel tank temperature sensor [EC-332](#), [EC-338](#)
Fuel tank vacuum relief valve [EC-36](#)
FUELB1 - Wiring diagram [EC-313](#), [EC-324](#)
FUELB2 - Wiring diagram [EC-315](#), [EC-326](#)
Fuse [PG-17](#), [PG-77](#)
Fuse and fusible link box [PG-77](#)
Fuse block [PG-76](#)
Fusible link [PG-17](#), [PG-77](#)

G

Garage jack and safety stand [GI-42](#)
Gauges [DI-5](#)
Generator [SC-17](#)
Generic scan tool (GST) [EC-131](#)
Glass [GW-11](#), [GW-62](#), [GW-65](#)
Glove box lamp [LT-131](#)
GPS antenna [AV-82](#)

ALPHABETICAL INDEX

Grease	MA-11	In vehicle sensor	ATC-141 , ATC-150	
Ground distribution	PG-31	In-cabin Microfilter	MA-21	A
H				
H/AIM - Wiring diagram	LT-51	INJECT - Wiring diagram	EC-660	B
H/LAMP - Wiring diagram	LT-9	Injector	EC-659	
Handling precautions for plastics	BL-179	Input clutch solenoid valve	AT-135 , AT-137	
Harness connector	PG-68	Instrument panel	IP-10	
Harness layout	PG-41	Intake air temperature sensor	EC-214 , EC-234	C
Hazard warning lamp	LT-63	Intake door control linkage adjustment .	ATC-85 , ATC-88	
Headlamp	LT-5	Intake door motor	ATC-83 , ATC-164	D
Headlamp aiming control	LT-51	Intake manifold	EM-17	
Headlamp leveler - See Headlamp aiming control .	LT-51	Intake sensor	ATC-146 , ATC-152	D
Headlamp removal and installation	LT-25	Intake valve timing control (Bank 1)	EC-161	
Heated oxygen sensor 2 (bank 1)	EC-276 , EC-287 , EC-300	Intake valve timing control (Bank 2)	EC-161	E
Heated oxygen sensor 2 (bank 2)	EC-276 , EC-287 , EC-300	Intake valve timing control position sensor (Bank 1) ...	EC-492	
Heated oxygen sensor 2 heater (bank 1)	EC-181	Intake valve timing control position sensor (Bank 2)	EC-492	F
Heated oxygen sensor 2 heater (bank 2)	EC-181	Intake valve timing control solenoid valve (Bank 1) EC-189		F
Heated seat	SE-82	Intake valve timing control solenoid valve (Bank 2) EC-189		G
Heater and cooling unit (Heater core) .	ATC-157 , ATC-160	Integrated homelink transmitter - See Homelink universal transceiver	BL-146	H
Heater unit (heater core)	ATC-157 , ATC-160	Intelligent cruise control (ICC) system	ACS-6	
Height (Dimensions)	GI-51	Interior	EI-35	H
HFC134a (R134a) system identification	ATC-6	Interior lamp	LT-110	
HFC134a (R134a) system precaution	ATC-5	Interior lamp on-off control	LT-111	I
HFC134a (R134a) system service procedure	ATC-175	Internal gear (Transfer)	TF-149 , TF-176	
HFC134a (R134a) system service tools	ATC-14	IPDM (Intelligent power distribution module engine room)	PG-18	J
HFC134a system service equipment precaution	ATC-11	IVCB1 - Wiring diagram	EC-190	
High and low reverse clutch solenoid valve	AT-147 , AT-149	IVCB2 - Wiring diagram	EC-192	J
Homelink universal transceiver	BL-146	IVCSB1 - Wiring diagram	EC-493	
Horn	WW-48	IVCSB2 - Wiring diagram	EC-495	K
HORN - Wiring diagram	WW-48	IVIS (Infiniti vehicle immobilizer system)	BL-127	
How to erase DTC for OBD system	EC-63	IVIS (Infiniti vehicle immobilizer system) precautions ...	GI-3	L
HSEAT - Wiring diagram	SE-84	IVTB1 - Wiring diagram	EC-164	
I				
IATS - Wiring diagram	EC-215	IVTB2 - Wiring diagram	EC-166	
ICC - Wiring diagram	ACS-20	J		
ICC/BS - Wiring diagram	EC-565	Jacking points	GI-42	
ICC/SW - Wiring diagram	EC-550	Junction box (J/B)	PG-76	
ICCBOF - Wiring diagram	EC-672	K		
Identification plate	GI-49	Key illumination	LT-111	
Idle air volume learning	EC-80	KEYLES - Wiring diagram	BL-45	
Idle speed	EC-73 , EC-78	Knock sensor (KS)	EC-357	
Idle speed control (ISC)	EC-466 , EC-468	KS - Wiring diagram	EC-358	
Ignition coil	EM-28 , EC-679	L		
Ignition control system	EC-679	Laser beam aiming adjustment	ACS-12	
Ignition key hole illumination	LT-110	Length (Dimensions)	GI-51	
Ignition timing	EC-73 , EC-78	License lamp	LT-89	
IGNSYS - Wiring diagram	EC-680	Lifting points	GI-43	
ILL - Wiring diagram	LT-136	INDEX		
Illumination	LT-130			

ALPHABETICAL INDEX

Line pressure solenoid valve [AT-118](#)
Line pressure switch (Transfer) [TF-154](#), [TF-167](#)
Line pressure test (A/T) [AT-52](#)
Location of electrical units [PG-65](#)
Low coast brake solenoid valve [AT-151](#), [AT-153](#)
Low tire pressure warning system [WT-8](#)
Low tire pressure warning system - trouble diagnoses .
[WT-11](#)
Low tire pressure warning system - Wiring diagram
[WT-11](#)
Lubricant (R134a) A/C [ATC-22](#)
Lubricants [MA-11](#)
Lubrication circuit (engine) [LU-6](#)
Lubrication oil A/C [ATC-22](#)
Lubrication-locks, hinges and hood latches [MA-31](#)

M

MAFS - Wiring diagram [EC-200](#), [EC-208](#)
Magnet clutch [ATC-115](#), [ATC-180](#)
MAIN - Wiring diagram [EC-150](#), [AT-163](#)
Main oil pump (Transfer) [TF-154](#), [TF-167](#)
Mainshaft (Transfer) [TF-154](#), [TF-167](#)
Maintenance (engine)Schedule 1 [MA-7](#)
Maintenance (engine)Schedule 2 [MA-9](#)
Major overhaul (Final drive) [FFD-14](#)
Major overhaul (Transfer) [TF-146](#)
Malfunction indicator lamp (MIL) [EC-65](#)
Map lamp [LT-111](#)
Mass air flow sensor (MAFS) [EC-197](#), [EC-206](#)
Meter [DI-5](#)
METER - Wiring diagram [DI-9](#)
MIL data link connectors circuit [EC-697](#)
MIL/DL - Wiring diagram [EC-697](#)
MIRROR - Wiring diagram [GW-87](#)
Misfire [EC-350](#)
Mode door control linkage adjustment [ATC-65](#)
Mode door motor [ATC-62](#), [ATC-165](#)
Model variation [GI-48](#)
Multiport fuel injection (MFI) system [EC-25](#)
Multiport fuel injection precautions [GI-6](#)
Multi-remote control system - See Remote keyless entry
system [BL-40](#)

N

NATS - Wiring diagram [BL-130](#)
NAVI - Wiring diagram [AV-86](#)
NAVI Control Unit [AV-83](#)
Navigation system [AV-81](#)
Neutral-4LO switch [TF-61](#)
NONDTC - Wiring diagram [AT-172](#)
NVH troubleshooting (AX) [FAX-4](#)
NVH troubleshooting (EM) [EM-10](#)
NVH troubleshooting (Final drive) [RFD-7](#)
NVH troubleshooting (Propeller shaft) [PR-3](#)
NVH troubleshooting (RAX) [RAX-4](#)
NVH troubleshooting (RSU) [RSU-5](#)
NVH troubleshooting (ST) [PS-5](#)

NVH troubleshooting (Transfer) [TF-10](#)
NVH troubleshooting (WT)NVH troubleshooting (WT) ..
[WT-4](#)
NVIS (Nissan vehicle immobilizer system) precautions
[GI-3](#)

O

O2H2B1 - Wiring diagram [EC-183](#)
O2H2B2 - Wiring diagram [EC-185](#)
O2S2B1 - Wiring diagram ... [EC-279](#), [EC-290](#), [EC-303](#)
O2S2B2 - Wiring diagram ... [EC-281](#), [EC-292](#), [EC-305](#)
Oil cooler (engine) [LU-12](#)
Oil filter [LU-11](#)
Oil filter (Transfer) [TF-143](#)
Oil pan (engine) [EM-24](#)
Oil pressure (engine) [LU-8](#)
Oil pressure relief valve (engine) [LU-6](#)
Oil pump (engine) [LU-14](#)
Oil seal replacement (engine) [EM-60](#)
Oil seal replacement (front of final drive) [FFD-8](#), [RFD-9](#)
Oil seal replacement (side of final drive) [RFD-11](#)
On board diagnostic system [EC-49](#)
ORVR (On-board Refueling Vapor Recovery) .. [EC-40](#)
Overheat [EC-504](#)

P

P/SCKT - Wiring diagram [WW-46](#)
Pantograph jack [GI-42](#)
Park/Neutral position switch [EC-487](#)
Parking brake control [PB-4](#)
PCV (positive crankcase ventilation) [EC-46](#)
Periodic maintenance [MA-7](#)
Personal lamp [LT-111](#)
PGC/V - Wiring diagram [EC-397](#), [EC-405](#)
PHASE - Wiring diagram [EC-371](#)
PHONE - Wiring diagram [AV-65](#)
Pinion bearing preload diff. [RFD-26](#)
Piston pin inspection [EM-94](#)
Piston ring inspection [EM-95](#)
Piston to bore clearance [EM-99](#)
Planetary carrier (Transfer) [TF-149](#), [TF-176](#)
PNP/SW - Wiring diagram ... [EC-489](#), [AT-101](#), [AT-102](#)
POS - Wiring diagram [EC-364](#)
POWER - Wiring diagram [PG-6](#)
Power door lock [BL-16](#)
Power seat [SE-81](#)
Power steering fluid level [MA-29](#)
Power steering gear [PS-15](#)
Power steering oil pump [PS-22](#)
Power steering pressure (PSP) sensor [EC-470](#)
Power steering system bleeding [PS-6](#)
Power supply routing [PG-4](#)
Power window [GW-15](#)
PRE/SE - Wiring diagram [EC-429](#), [EC-435](#)
Precautions (General) [GI-4](#)
Precautions in repairing high strength steel [BL-182](#)
Pressure switch 1 [AT-141](#), [AT-155](#)

ALPHABETICAL INDEX

Pressure switch 2 [AT-153](#)
Pressure switch 3 [AT-137](#), [AT-157](#)
Pressure switch 5 [AT-145](#), [AT-159](#)
Pressure switch 6 [AT-149](#), [AT-161](#)
Pressure test (A/T) [AT-52](#)
Propeller shaft [PR-4](#), [PR-8](#)
Propeller shaft inspection [MA-25](#)
Propeller shaft on vehicle service [PR-8](#)
Propeller shaft vibration [PR-4](#), [PR-8](#)
PS/SEN - Wiring diagram [EC-471](#)

R

R/VIEW - Wiring diagram [DI-66](#)
Radiator [CO-14](#)
Rear Audio Remote Control Unit [AV-8](#)
Rear axle [RAX-5](#)
Rear bumper [EI-15](#)
Rear case (Transfer) [TF-148](#), [TF-181](#)
Rear combination lamp removal and installation ... [LT-101](#)
Rear cover packing replacement diff. [RFD-28](#)
Rear door [BL-117](#), [GW-65](#)
Rear seat belt [SB-7](#)
Rear suspension [RSU-23](#)
Rear view monitor [DI-63](#)
Rear washer [WW-29](#)
Rear window defogger [GW-71](#)
Rear wiper [WW-29](#)
Refrigerant connection precaution [ATC-6](#)
Refrigerant discharging evacuating charging [ATC-175](#)
Refrigerant general precaution [ATC-6](#)
Refrigerant lines [ATC-175](#), [ATC-183](#), [ATC-184](#)
Refrigerant pressure sensor [EC-692](#), [ATC-184](#)
Relay box [PG-78](#)
Remote keyless entry system [BL-40](#)
Removal and installation (A/T) [AT-238](#), [AT-241](#)
Removal and installation (Transfer) [TF-145](#)
Ring gear diff. inspection [RFD-18](#)
Road wheel size [GI-51](#)
Rocker cover [EM-35](#)
Room lamp [LT-110](#)
Room lamp - See Interior lamp [LT-110](#)
ROOM/L - Wiring diagram [LT-116](#)
RP/SEN - Wiring diagram [EC-693](#)

S

SAE J1979 - Service \$01 - 09 [EC-49](#)
SEAT - Wiring diagram [SE-81](#)
Seat belt inspection [SB-12](#), [MA-32](#)
Seat belt pre-tensioner [SRS-50](#)
Seat belt, front [SB-3](#)
Seat belt, rear [SB-7](#)
Seat, front [SE-89](#)
Self-diagnosis (Transfer) [TF-49](#)
SEN/PW - Wiring diagram [EC-483](#)
SHIFT - Wiring diagram [AT-217](#)
Shift control (Transfer) [TF-149](#), [TF-176](#)

Shift lock system [AT-216](#)
Shock absorber (front) [FSU-11](#)
Shock absorber (rear) [RSU-32](#)
Side air bag (satellite) sensor [SRS-49](#)
Side curtain air bag [SRS-46](#)
Side trim [EI-35](#)
SMJ (super multiple junction) [PG-74](#)
SONAR - Wiring diagram [DI-53](#)
Spare tire size [GI-51](#)
Spark plug [EM-29](#)
Specification value [EC-139](#)
Speedometer [DI-5](#)
Spiral cable [SRS-41](#)
SROOF - Wiring diagram [RF-13](#)
SRS - See Supplemental Restraint System [SRS-5](#)
SRS - Wiring diagram [SRS-13](#)
SRS Trouble diagnoses [SRS-9](#)
Stabilizer bar (front) [FSU-12](#)
Stabilizer bar (rear) [RSU-39](#)
Stall test (A/T) [AT-51](#)
Standardized relay [PG-72](#)
START - Wiring diagram [SC-11](#)
Starting system [SC-10](#)
Steering gear, linkage and transfer gear inspection [MA-29](#)
Steering linkage [PS-15](#)
Steering wheel and column [PS-7](#)
Step lamp [LT-111](#)
Stop lamp [LT-84](#)
Stop lamp switch [EC-572](#), [EC-584](#), [EC-647](#)
STOP/L - Wiring diagram [LT-85](#)
Strut (front) [FSU-10](#)
STSIG - Wiring diagram [AT-97](#)
Sub-oil pump (Transfer) [TF-154](#), [TF-167](#)
Sun gear (Transfer) [TF-149](#), [TF-176](#)
Sun roof, electric [RF-10](#)
Sunload sensor [ATC-144](#)
Sunroof [RF-22](#)
Supplemental Restraint System [SRS-5](#)
Supplemental restraint system - Wiring diagram . [SRS-13](#)
Symbols and abbreviations [GI-10](#), [GI-23](#)
Symptom matrix chart [EC-94](#)
System readiness test (SRT) code [EC-55](#)

T

Tachometer [DI-5](#)
Tail lamp [LT-89](#)
TAIL/L - Wiring diagram [LT-91](#)
TCM circuit diagram [AT-50](#)
TCS - Wiring diagram [BRC-16](#)
TCS (traction control system) [BRC-7](#)
TCS component parts and connector location [BRC-14](#)
TCS wheel sensors [BRC-14](#)
Telephone [AV-62](#)
Theft warning system - See Vehicle security (Theft warning) system [BL-67](#)
Thermometer [DI-23](#)

A
B
C
D
E
F
G
H
I
J
K
L

IDX

ALPHABETICAL INDEX

Three way catalyst [EM-21](#)
Three way catalyst function (Bank 1) [EC-376](#)
Three way catalyst function (Bank 2) [EC-376](#)
Three way catalyst precautions [GI-5](#)
Throttle control motor [EC-601](#)
Throttle control motor relay [EC-589](#)
Throttle position sensor (TPS) .. [EC-224](#), [EC-343](#), [EC-514](#), [EC-516](#), [EC-621](#)
Throttle valve closed position learning [EC-80](#)
Tie-rod [PS-15](#)
Timing chain [EM-37](#)
Tire rotation [MA-28](#)
Tire size [GI-51](#)
Torque converter installation [AT-239](#), [AT-240](#), [AT-243](#), [AT-244](#)
Torque convertor clutch solenoid valve ... [AT-114](#), [AT-116](#)
Tow truck towing [GI-44](#)
Towing point [GI-45](#)
TPS1 - Wiring diagram [EC-345](#)
TPS2 - Wiring diagram [EC-226](#)
TPS3 - Wiring diagram [EC-623](#)
Traction control system - Wiring diagram [BRC-16](#)
Transfer control device [TF-75](#), [TF-79](#), [TF-138](#)
Transfer control unit inspection table [TF-35](#)
Transfer dropping resistor [TF-89](#)
Transfer fluid temperature sensor [TF-103](#), [TF-154](#), [TF-167](#)
Transfer motor [TF-101](#), [TF-142](#)
Transfer motor relay [TF-101](#)
Transfer oil replacement [MA-24](#)
Transfer serial number [GI-50](#)
Transmission serial number [GI-50](#)
Tread-FR&RR (Dimensions) [GI-51](#)
Trim [EI-35](#)
TRNSCV - Wiring diagram [BL-130](#), [BL-146](#)
Trouble diagnoses [GI-11](#)
Turbine revolution sensor [AT-105](#)
TURN - Wiring diagram [LT-67](#)
Turn signal lamp [LT-63](#)
Two trip detection logic [EC-49](#)
Two-pole lift [GI-43](#)

V

Vacuum hose (brake system) [BR-20](#)
Vacuum hose drawing (Engine control) [EC-106](#)
Valve clearance [EM-55](#)
Valve guide [EM-69](#)
Vanity mirror lamp [LT-110](#)
VDC (vehicle dynamics control) [BRC-7](#)
VDC -Wiring diagram [BRC-16](#)
Vehicle identification number [GI-49](#)
Vehicle recovery (freeing a stuck vehicle) [GI-45](#)
Vehicle security (theft warning) system [BL-67](#)
Vehicle speed sensor (VSS) [EC-464](#)
VEHSEC - Wiring diagram [BL-71](#)
VENT/V - Wiring diagram [EC-412](#), [EC-419](#)
VIN registration [EC-79](#)

Viscosity number (SAE) [MA-12](#)
VSS A/T - Wiring diagram [AT-107](#), [AT-109](#)

W

W/ANT - Wiring diagram [AV-59](#)
Wait detection switch [TF-68](#)
WARN - Wiring diagram [DI-29](#)
Warning chime [DI-38](#)
Warning lamps [DI-28](#)
Washer, front [WW-4](#)
Washer, rear [WW-29](#)
Water pump [CO-19](#)
Water temperature gauge [DI-5](#)
Wheel alignment (front) [FSU-6](#)
Wheel alignment (rear) [RSU-25](#)
Wheel bearing (front) [FAX-5](#)
Wheel bearing (rear) [RAX-5](#)
Wheel hub (rear) [RAX-5](#)
Wheel size [GI-51](#)
Wheelbase (Dimensions) [GI-51](#)
Width (Dimensions) [GI-51](#)
WINDOW - Wiring diagram [GW-22](#)
Window, door [GW-62](#), [GW-65](#)
Windshield [GW-11](#)
WIP/R - Wiring diagram [WW-33](#)
WIPER - Wiring diagram [WW-8](#)
Wiper, front [WW-4](#)
Wiper, rear [WW-29](#)
Wiring Diagram (Cell code) list [PG-62](#)
Wiring diagrams [GI-15](#)
WT-T/WARN - Wiring diagram [WT-11](#)