

SECTION **INL**

INTERIOR LIGHTING SYSTEM

CONTENTS

PRECAUTION	3	BATTERY SAVER	12
PRECAUTIONS	3	BATTERY SAVER : CONSULT Function (BCM - BATTERY SAVER)	12
Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	3		
Precaution for Work	3		
PREPARATION	4	ECU DIAGNOSIS INFORMATION	13
PREPARATION	4	BCM	13
Special Service Tool	4	List of ECU Reference	13
SYSTEM DESCRIPTION	5	WIRING DIAGRAM	14
COMPONENT PARTS	5	INTERIOR ROOM LAMP CONTROL SYSTEM	14
Component Parts Location	5	Wiring Diagram	14
Component Description	5	ILLUMINATION	29
SYSTEM	7	Wiring Diagram	29
INTERIOR ROOM LAMP CONTROL SYSTEM	7	BASIC INSPECTION	46
INTERIOR ROOM LAMP CONTROL SYSTEM : System Diagram	7	DIAGNOSIS AND REPAIR WORKFLOW	46
INTERIOR ROOM LAMP CONTROL SYSTEM : System Description	7	Work Flow	46
ILLUMINATION CONTROL SYSTEM	8	DTC/CIRCUIT DIAGNOSIS	49
ILLUMINATION CONTROL SYSTEM : System Diagram	8	POWER SUPPLY AND GROUND CIRCUIT	49
ILLUMINATION CONTROL SYSTEM : System Description	8	Diagnosis Procedure	49
DIAGNOSIS SYSTEM (BCM)	10	BATTERY SAVER OUTPUT/POWER SUPPLY CIRCUIT	50
COMMON ITEM	10	Description	50
COMMON ITEM : CONSULT Function (BCM - COMMON ITEM)	10	Component Function Check	50
INT LAMP	11	Diagnosis Procedure	50
INT LAMP : CONSULT Function (BCM - INT LAMP)	11	INTERIOR ROOM LAMP CONTROL CIRCUIT	52
		Description	52
		Component Function Check	52
		Diagnosis Procedure	52
		STEP LAMP CIRCUIT	54
		Description	54
		Component Function Check	54

Diagnosis Procedure	54	DRIVER SIDE	65
OUTSIDE HANDLE LAMP CIRCUIT	56	DRIVER SIDE : Exploded View	65
Description	56	DRIVER SIDE : Removal and Installation	65
Component Function Check	56	DRIVER SIDE : Bulb Replacement	65
Diagnosis Procedure	56		
PUSH-BUTTON IGNITION SWITCH ILLUMINATION CIRCUIT	58	PASSENGER SIDE	65
Description	58	PASSENGER SIDE : Exploded View	66
Component Function Check	58	PASSENGER SIDE : Bulb Replacement	66
Diagnosis Procedure	58		
SYMPTOM DIAGNOSIS	60	STEP LAMP	67
INTERIOR LIGHTING SYSTEM SYMPTOMS...	60	Exploded View	67
Symptom Table	60	Removal and Installation	67
REMOVAL AND INSTALLATION	61	Bulb or Lens Replacement	67
FRONT ROOM/MAP LAMP	61		
Exploded View	61	PERSONAL LAMP	68
Removal and Installation	61	Exploded View	68
Bulb or Lens Replacement	62	Removal and Installation	68
VANITY LAMP	63	Bulb or Lens Replacement	68
Exploded View	63		
Removal and Installation	63	CARGO LAMP	69
Bulb or Lens Replacement	63	Exploded View	69
GLOVE BOX LAMP	64	Removal and Installation	69
Exploded View	64	Bulb or Lens Replacement	69
Bulb Replacement	64		
FOOT LAMP	65	ILLUMINATION CONTROL SWITCH	70
		Removal and Installation	70
		SERVICE DATA AND SPECIFICATIONS (SDS)	71
		Exploded View	71
		Removal and Installation	71
		Bulb Specifications	71

PRECAUTIONS

< PRECAUTION >

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:0000000011134722

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes dual stage front air bag modules. The SRS system may only deploy one front air bag, depending on the severity of a collision and whether the front passenger seat is occupied. Information necessary to service the system safely is included in the SR and SB section of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SR section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

- When working near the Airbag Diagnosis Sensor Unit or other Airbag System sensors with the Ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the Ignition OFF, disconnect the battery and wait at least three minutes before performing any service.

Precaution for Work

INFOID:0000000011134723

- When removing or disassembling each component, be careful not to damage or deform it. If a component may be subject to interference, be sure to protect it with a shop cloth.
- When removing (disengaging) components with a screwdriver or similar tool, be sure to wrap the component with a shop cloth or vinyl tape to protect it.
- Protect the removed parts with a shop cloth and prevent them from being dropped.
- Replace a deformed or damaged clip.
- If a part is specified as a non-reusable part, always replace it with a new one.
- Be sure to tighten bolts and nuts securely to the specified torque.
- After installation is complete, be sure to check that each part works properly.
- Follow the steps below to clean components:
 - Water soluble dirt:
 - Dip a soft cloth into lukewarm water, wring the water out of the cloth and wipe the dirty area.
 - Then rub with a soft, dry cloth.
 - Oily dirt:
 - Dip a soft cloth into lukewarm water with mild detergent (concentration: within 2 to 3%) and wipe the dirty area.
 - Then dip a cloth into fresh water, wring the water out of the cloth and wipe the detergent off.
 - Then rub with a soft, dry cloth.
 - Do not use organic solvent such as thinner, benzene, alcohol or gasoline.
 - For genuine leather seats, use a genuine leather seat cleaner.

PREPARATION

< PREPARATION >

PREPARATION


PREPARATION

Special Service Tool

INFOID:000000011134724

The actual shape of the tools may differ from those illustrated here.

Tool number (TechMate No.)	Description
— (J-46534) Trim Tool Set	Removing trim components

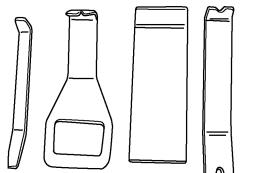

COMPONENT PARTS


< SYSTEM DESCRIPTION >

SYSTEM DESCRIPTION

COMPONENT PARTS

Component Parts Location

INFOID:0000000011134725

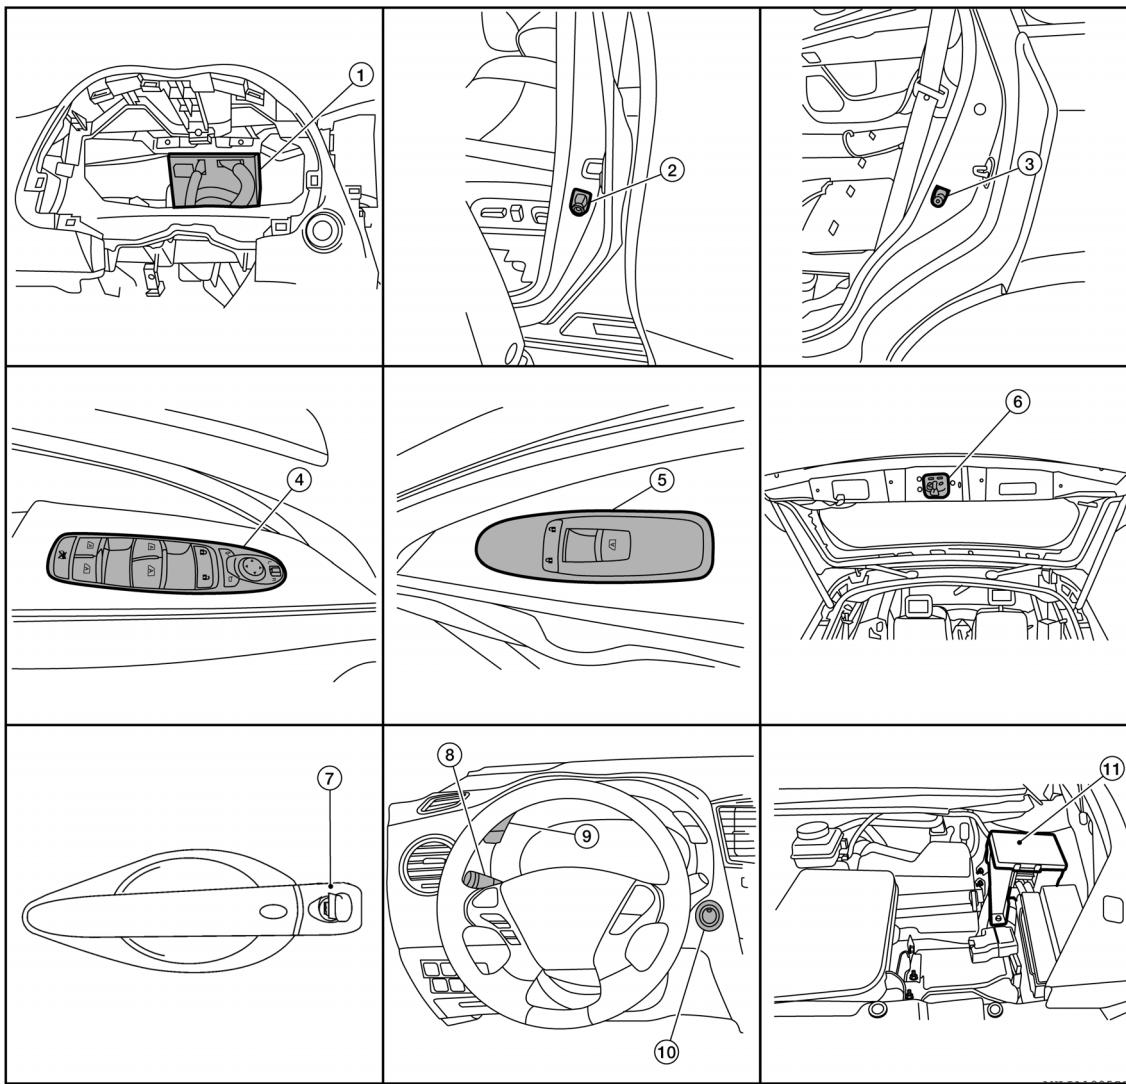

1. BCM (view with combination meter removed)
2. Front door switch LH (RH similar)
3. Rear door switch LH (RH similar)
4. Main power window and door lock/unlock switch
5. Power window and door lock/unlock switch RH
6. Back door lock assembly (back door switch)
7. Front door lock assembly LH
8. Combination switch (lighting and turn signal switch)
9. Meter control switch (illumination control switch)
10. Push-button ignition switch
11. IPDM E/R

Component Description

INFOID:0000000011134726

Part name	Description
BCM	The BCM monitors the combination switch (lighting and turn signal switch) position. The BCM requests via CAN communication that the IPDM E/R activate the tail lamp relay.

COMPONENT PARTS

< SYSTEM DESCRIPTION >

IPDM E/R	The IPDM E/R activates the tail lamp relay based on inputs received from the BCM via the CAN communication.
Push button ignition switch	Provides ignition status to the BCM.
Door switches	Provides door OPEN/CLOSED status to the BCM.
Combination switch (lighting and turn signal switch)	The combination switch (lighting and turn signal switch) provides input to the BCM about the combination switch (lighting and turn signal switch) position.
Back door lock assembly (door ajar switch)	Provides back door OPEN/CLOSED status to the BCM.
Power window and door lock/unlock switch RH	Provides door lock/unlock position switch RH status to the BCM.
Main power window and door lock/unlock switch [front door lock assembly LH (key cylinder switch)].	Provides door lock/unlock position switch LH status to the BCM.
Meter control switch (illumination control switch)	Adjusts the illumination system and combination meter illumination brightness.

SYSTEM


< SYSTEM DESCRIPTION >

SYSTEM

INTERIOR ROOM LAMP CONTROL SYSTEM

INTERIOR ROOM LAMP CONTROL SYSTEM : System Diagram

INFOID:0000000011134727

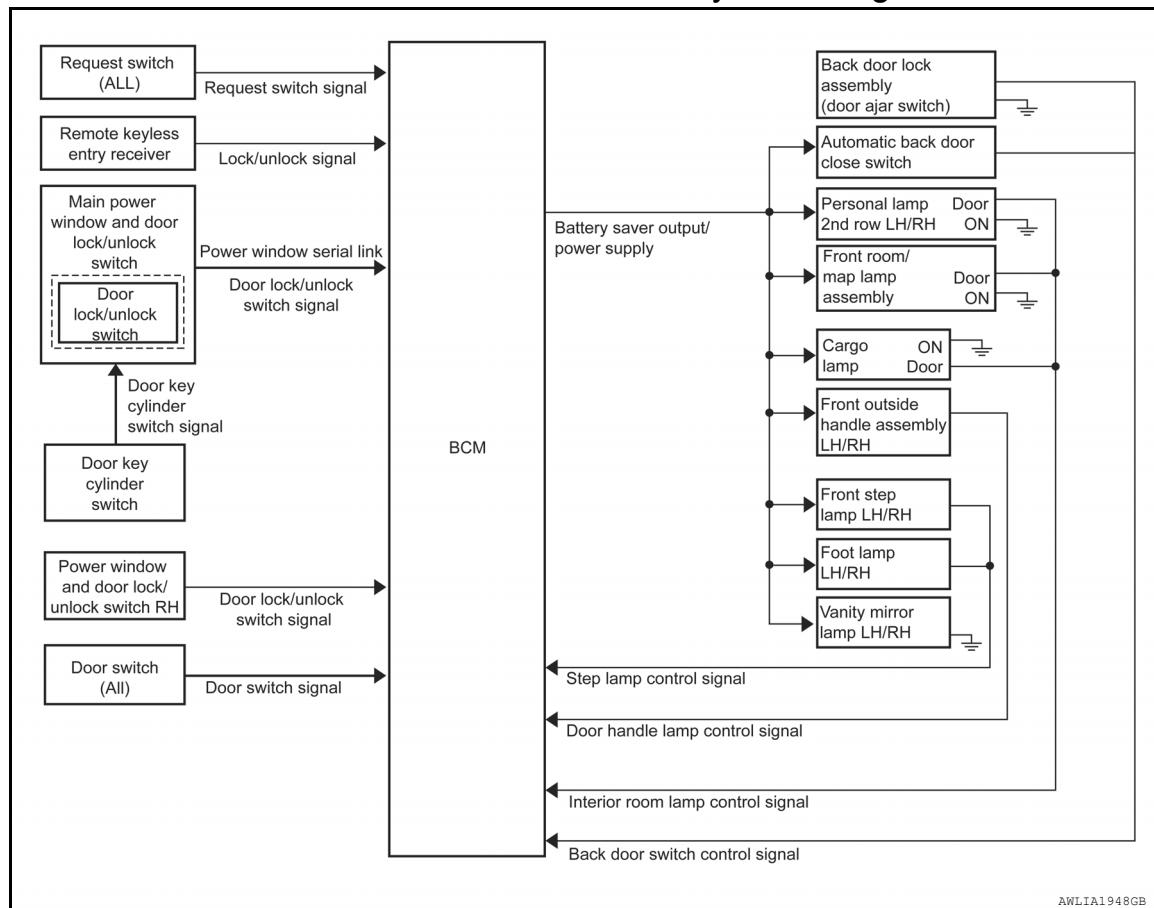

INTERIOR ROOM LAMP CONTROL SYSTEM : System Description

INFOID:0000000011134728

OUTLINE

- Front room/map lamp, personal lamp 2nd row and cargo lamp are controlled by the interior room lamp timer control function of the BCM when the lamp switch is in the DOOR position.
- Front outside handle assembly lamps are controlled by door handle lamp control function of BCM.
- Step lamp and foot lamp are controlled by the step lamp control function of the BCM.
- Push-button ignition switch illumination is controlled by the push-button ignition switch illumination control function of BCM.
- Interior room lamps and outside handle lamp are illuminated by welcome light function of Intelligent Key system. Refer to [DLK-34, "WELCOME LIGHT FUNCTION : System Description"](#).

INL

ROOM LAMP TIMER OPERATION

When the interior room lamp switch is in the DOOR position and when all conditions below are met, the BCM begins timer control (maximum 30 seconds) for interior room lamp ON/OFF.

- When the front door LH is unlocked [with Intelligent Key, main power window and door lock/unlock switch or front door lock assembly LH (key cylinder switch)].
- When a door opens → closes.

M

N

Timer control is cancelled under the following conditions:

- When the front door LH is locked [with Intelligent Key, main power window and door lock/unlock switch or front door lock assembly LH (key cylinder switch)].
- A door is opened (door switch turns ON).
- Ignition switch is turned ON.

O

P

INTERIOR LAMP BATTERY SAVER CONTROL

SYSTEM

< SYSTEM DESCRIPTION >

If an interior lamp is left ON and does not turn OFF even when the doors are closed, the BCM turns off power to the interior lamps automatically to save the battery 15 minutes after the ignition switch is turned OFF. The BCM controls power and ground to all interior lamps.

After the battery saver system turns the lamps OFF, the lamps will illuminate again when:

- A signal is received from an Intelligent Key or main power window and door lock/unlock switch or when the front door lock assembly LH (key cylinder switch) is locked or unlocked.
- A door is opened or closed.

OUTSIDE HANDLE LAMP TIMER CONTROL

Outside Handle Lamp Timer Basic Operation

- BCM controls the ground to turn the outside handle lamp ON.
- The outside handle lamp turns ON and OFF by the outside handle lamp timer.
- BCM judges the vehicle condition with the following items: It activates the outside handle lamp timer.
 - Ignition switch status
 - Door switch signal
 - Door lock/unlock signal (remote keyless entry receiver, each door request switch)
 - Driver side door lock status

Outside Handle Lamp ON Operation

BCM activates the outside handle lamp timer in any of the following conditions to turn the outside handle lamp ON for a period of time

- Any door opens
- Any door opens before all doors close
- Ignition switch is turned ON → OFF
- Door unlock signal by remote keyless entry receiver or each door request switch is detected
- Driver side door is locked

NOTE:

The timer is restarted if new condition is input during the timer operating time.

Front Outside Handle Lamp OFF Operation


BCM stops the timer in any of the following conditions to turn the front outside handle assembly lamp OFF.

- The front outside handle assembly lamp timer operating time is expired
- The interior room lamp OFF conditions
- The interior room lamp timer operating time is expired

ILLUMINATION CONTROL SYSTEM

ILLUMINATION CONTROL SYSTEM : System Diagram

INFOID:0000000011134729

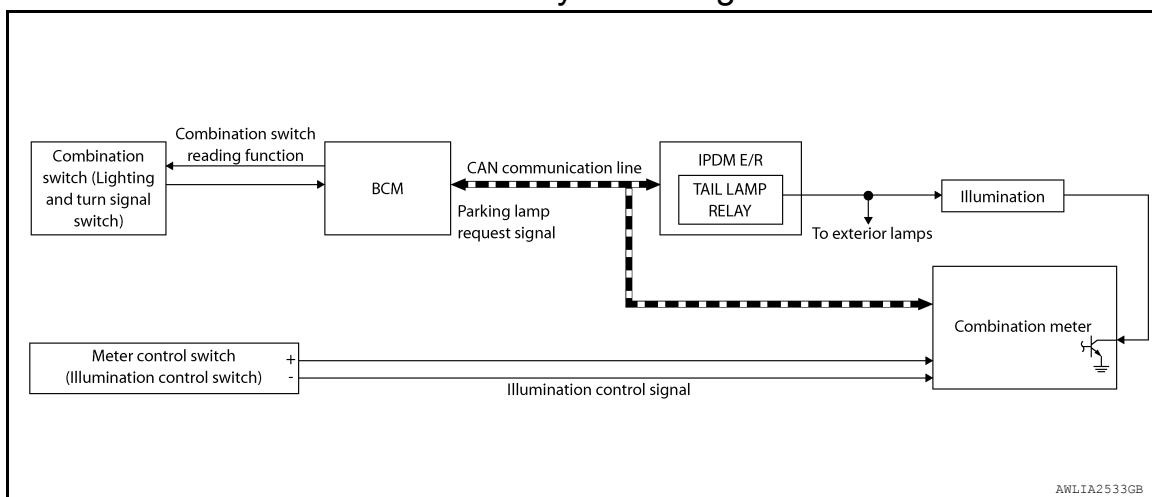

ILLUMINATION CONTROL SYSTEM : System Description

INFOID:0000000011134730

The illumination lamps operation is dependent upon the position of the combination switch (lighting and turn signal switch). When the combination switch (lighting and turn signal switch) is placed in the 1st or 2nd position (or if the auto light system is activated) the BCM (body control module) receives input requesting the parking lamps to illuminate. This input is communicated to the IPDM E/R (intelligent power distribution module engine room) via the CAN communication lines. The CPU (central processing unit) of the IPDM E/R controls

SYSTEM

< SYSTEM DESCRIPTION >

the tail lamp relay coil. When energized, this relay directs power to the parking and illumination lamps, which then illuminate. The illumination brightness can be controlled by the illumination control switch.

BATTERY SAVER CONTROL

When the combination switch (lighting and turn signal switch) is in the 1st or 2nd position and the ignition switch is turned from ON or ACC to OFF, the battery saver control feature is activated. Under this condition, the illumination lamps remain illuminated for 15 minutes unless the combination switch (lighting and turn signal switch) position is changed. If the combination switch (lighting and turn signal switch) position is changed, then the illumination lamps are turned off after a 30 second delay. When the combination switch (lighting and turn signal switch) is turned from OFF to 1st or 2nd position (or if auto light system is activated) after illumination lamps have been turned off by the battery saver control, the illumination lamps illuminate again.

A

B

C

D

E

F

G

H

I

J

K

INL

M

N

O

P

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

DIAGNOSIS SYSTEM (BCM)

COMMON ITEM

COMMON ITEM : CONSULT Function (BCM - COMMON ITEM)

INFOID:000000011544385

CAUTION:

After disconnecting the CONSULT vehicle interface (VI) from the data link connector, the ignition must be cycled OFF → ON (for at least 5 seconds) → OFF. If this step is not performed, the BCM may not go to "sleep mode", potentially causing a discharged battery and a no-start condition.

APPLICATION ITEM

CONSULT performs the following functions via CAN communication with BCM.

Direct Diagnostic Mode	Description
Ecu Identification	The BCM part number is displayed.
Self Diagnostic Result	The BCM self diagnostic results are displayed.
Data Monitor	The BCM input/output data is displayed in real time.
Active Test	The BCM activates outputs to test components.
Work support	The settings for BCM functions can be changed.
Configuration	<ul style="list-style-type: none"> • The vehicle specification can be read and saved. • The vehicle specification can be written when replacing BCM.
CAN Diag Support Mntr	The result of transmit/receive diagnosis of CAN communication is displayed.

SYSTEM APPLICATION

BCM can perform the following functions.

System	Sub System	Direct Diagnostic Mode						
		Ecu Identification	Self Diagnostic Result	Data Monitor	Active Test	Work support	Configuration	CAN Diag Support Mntr
Door lock	DOOR LOCK		x	x	x	x		
Rear window defogger	REAR DEFOGGER			x	x	x		
Warning chime	BUZZER			x	x			
Interior room lamp timer	INT LAMP			x	x	x		
Exterior lamp	HEADLAMP			x	x	x		
Wiper and washer	WIPER			x	x	x		
Turn signal and hazard warning lamps	FLASHER			x	x			
Air conditioner	AIR CONDITIONER			x				
Intelligent Key system	INTELLIGENT KEY		x	x	x	x		
Combination switch	COMB SW			x				
BCM	BCM	x	x			x	x	x
Immobilizer	IMMU		x	x	x			
Interior room lamp battery saver	BATTERY SAVER			x	x			
Back door open	TRUNK			x				
Vehicle security system	THEFT ALM			x	x	x		
RAP system	RETAINED PWR			x				

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

System	Sub System	Direct Diagnostic Mode					
		Ecu Identification	Self Diagnostic Result	Data Monitor	Active Test	Work support	Configuration
Signal buffer system	SIGNAL BUFFER			x			
TPMS	AIR PRESSURE MONITOR		x	x	x	x	

INT LAMP

INT LAMP : CONSULT Function (BCM - INT LAMP)

INFOID:0000000011544386

CAUTION:

After disconnecting the CONSULT vehicle interface (VI) from the data link connector, the ignition must be cycled OFF → ON (for at least 5 seconds) → OFF. If this step is not performed, the BCM may not go to "sleep mode", potentially causing a discharged battery and a no-start condition.

DATA MONITOR

Monitor Item [Unit]	Description
REQ SW -DR [On/Off]	Indicates condition of door request switch LH.
REQ SW -AS [On/Off]	Indicates condition of door request switch RH.
PUSH SW [On/Off]	Indicates condition of push-button ignition switch.
UNLK SEN -DR [On/Off]	Indicates condition of door unlock sensor.
DOOR SW-DR [On/Off]	Indicates condition of front door switch LH.
DOOR SW-AS [On/Off]	Indicates condition of front door switch RH.
DOOR SW-RR [On/Off]	Indicates condition of rear door switch RH.
DOOR SW-RL [On/Off]	Indicates condition of rear door switch LH.
DOOR SW-BK [On/Off]	Indicates condition of back door switch.
CDL LOCK SW [On/Off]	Indicates condition of lock signal from door lock and unlock switch.
CDL UNLOCK SW [On/Off]	Indicates condition of unlock signal from door lock and unlock switch.
KEY CYL LK-SW [On/Off]	Indicates condition of lock signal from door key cylinder switch.
KEY CYL UN-SW [On/Off]	Indicates condition of unlock signal from door key cylinder switch.
TRNK/HAT MNTR [On/Off]	Indicates condition of trunk room lamp switch.
RKE-LOCK [On/Off]	Indicates condition of lock signal from Intelligent Key.
RKE-UNLOCK [On/Off]	Indicates condition of unlock signal from Intelligent Key.

ACTIVE TEST

Test Item	Description
INT LAMP	This test is able to check interior room lamp operation [On/Off].
STEP LAMP TEST	This test is able to check step lamp operation [On/Off].

WORK SUPPORT

NOTE:

The items listed below are the only applicable Work Support items for this vehicle. If other items are displayed on CONSULT, do not use or change the setting for these other items.

A
B
C
D

E

F

G

H

I

J

K

INL

M

N

O

P

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

Support Item	Setting	Description
SCENARIO LIGHTING SETTING	On	NOTE: Do not use this function since interior room lamp control is changed.
	Off*	
SET I/L D-UNLCK INTCON	On	Interior room lamp timer function ON.
	Off*	Interior room lamp timer function OFF.
Fog Lamp Override	On*	Fog lamp override function ON.
	Off	Fog lamp override function OFF.

* : Initial setting

BATTERY SAVER

BATTERY SAVER : CONSULT Function (BCM - BATTERY SAVER)

INFOID:0000000011544387

CAUTION:

After disconnecting the CONSULT vehicle interface (VI) from the data link connector, the ignition must be cycled OFF → ON (for at least 5 seconds) → OFF. If this step is not performed, the BCM may not go to "sleep mode", potentially causing a discharged battery and a no-start condition.

DATA MONITOR

Monitor Item [Unit]	Description
REQ SW -DR [On/Off]	Indicates condition of door request switch LH.
REQ SW -AS [On/Off]	Indicates condition of door request switch RH.
PUSH SW [On/Off]	Indicates condition push-button ignition switch.
UNLK SEN -DR [On/Off]	Indicates condition of door unlock sensor.
DOOR SW-DR [On/Off]	Indicates condition of front door switch LH.
DOOR SW-AS [On/Off]	Indicates condition of front door switch RH.
DOOR SW-RR [On/Off]	Indicates condition of rear door switch RH.
DOOR SW-RL [On/Off]	Indicates condition of rear door switch LH.
DOOR SW-BK [On/Off]	Indicates condition of back door switch.
CDL LOCK SW [On/Off]	Indicates condition of lock signal from door lock and unlock switch.
CDL UNLOCK SW [On/Off]	Indicates condition of unlock signal from door lock and unlock switch.
KEY CYL LK-SW [On/Off]	Indicates condition of lock signal from door key cylinder switch.
KEY CYL UN-SW [On/Off]	Indicates condition of unlock signal from door key cylinder switch.
TRNK/HAT MNTR [On/Off]	Indicates condition of trunk room lamp switch.
RKE-LOCK [On/Off]	Indicates condition of lock signal from Intelligent Key.
RKE-UNLOCK [On/Off]	Indicates condition of unlock signal from Intelligent Key.

ACTIVE TEST

Test item	Description
BATTERY SAVER	This test is able to check battery saver operation [On/Off].

< ECU DIAGNOSIS INFORMATION >

ECU DIAGNOSIS INFORMATION

BCM

List of ECU Reference

INFOID:000000011134734

ECU	Reference
BCM	<u>BCS-29, "Reference Value"</u>
	<u>BCS-49, "Fail_Safe"</u>
	<u>BCS-49, "DTC Inspection Priority Chart"</u>
	<u>BCS-51, "DTC Index"</u>

A

B

C

D

E

F

G

H

I

J

K

INL

M

N

O

P

INTERIOR ROOM LAMP CONTROL SYSTEM

< WIRING DIAGRAM >


WIRING DIAGRAM

INTERIOR ROOM LAMP CONTROL SYSTEM

Wiring Diagram

INFOID:0000000011134735


INTERIOR ROOM LAMP

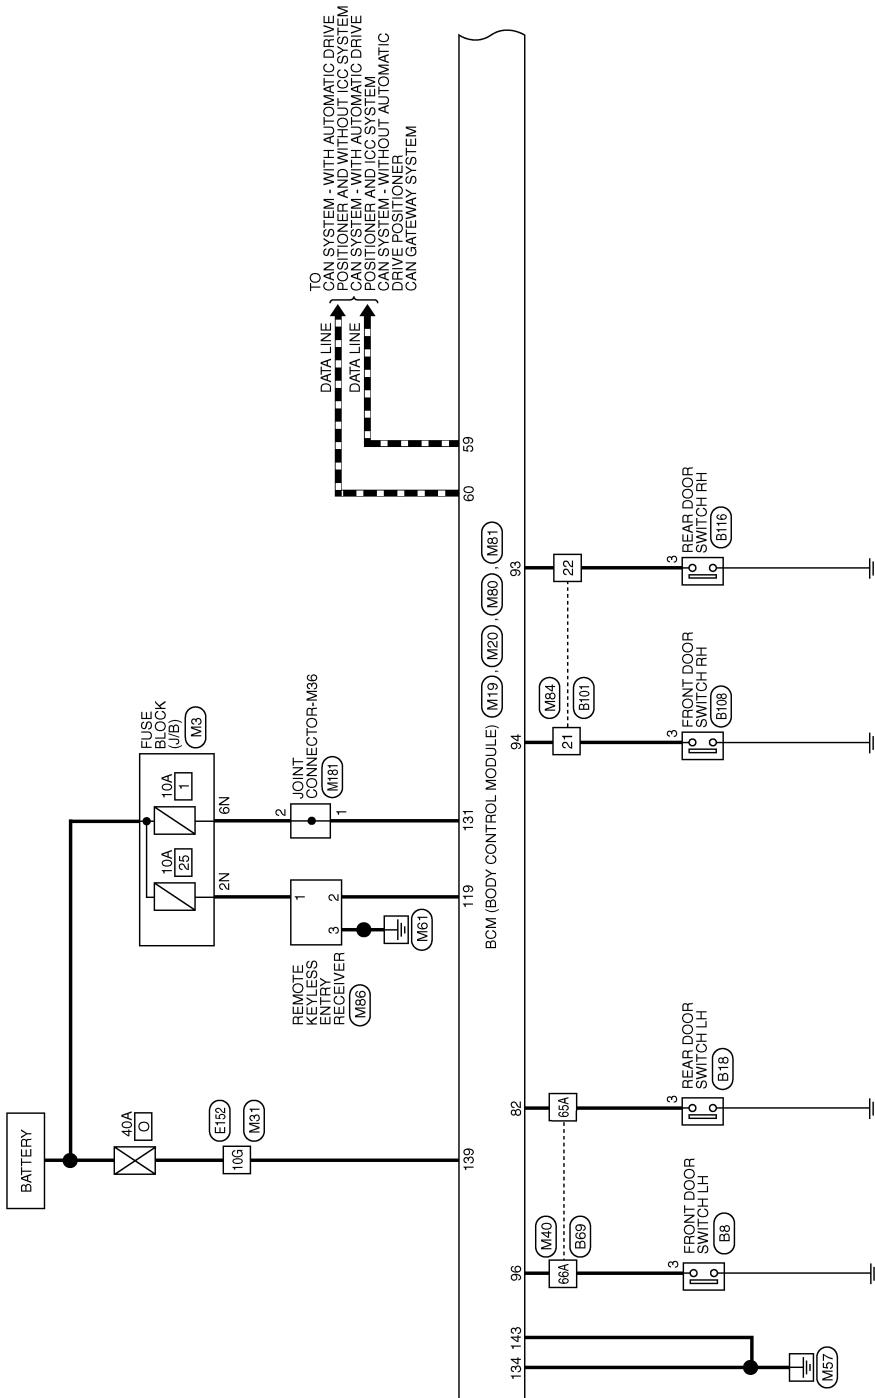

ABLWA2910GB


INTERIOR ROOM LAMP CONTROL SYSTEM

< WIRING DIAGRAM >

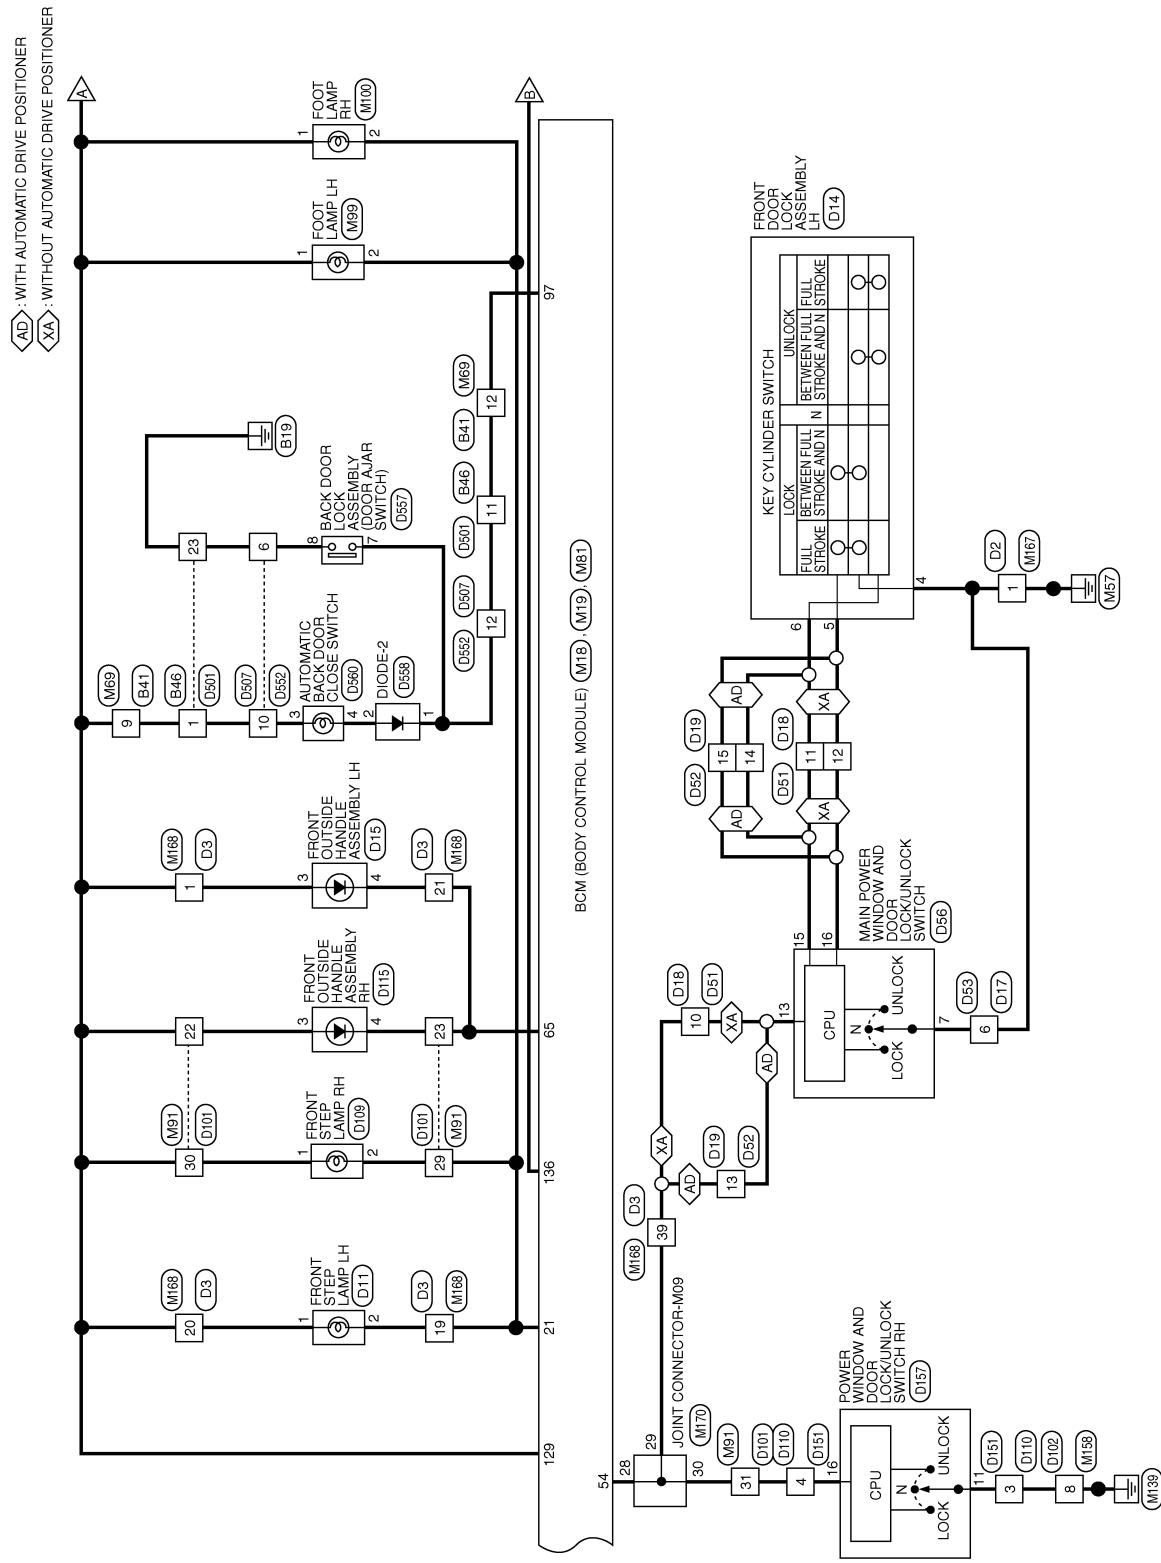

INTERIOR ROOM LAMP CONTROL SYSTEM

< WIRING DIAGRAM >

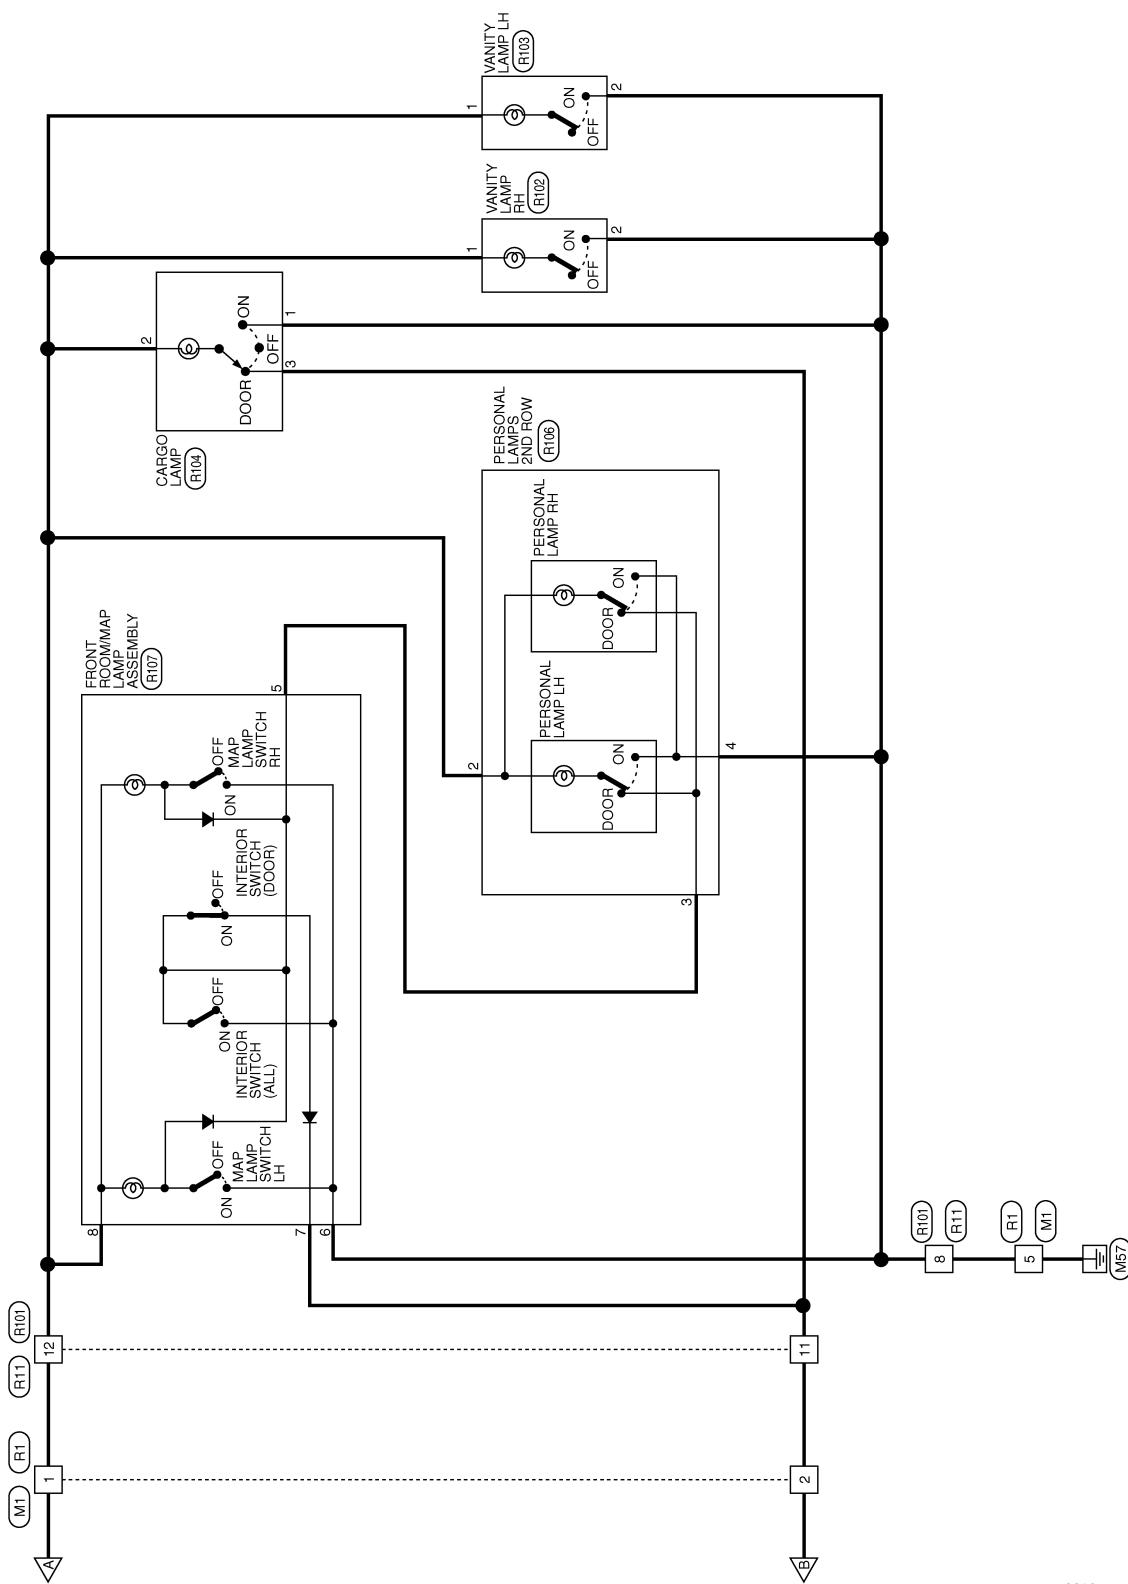


ABLWA2918GB

INTERIOR ROOM LAMP CONTROL SYSTEM

< WIRING DIAGRAM >


INTERIOR ROOM LAMP CONNECTORS

Connector No.	M1
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
1	SB	-
2	LG	-
5	GR	-

Connector No.	M3
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE

 


Terminal No.	Wire	Signal Name
2N	BG	-
6N	W	-


Connector No.	M18
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	GREEN



Connector No.	M20
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	GRAY

 


Terminal No.	Color of Wire	Signal Name
82	W	RL DOOR SW
93	R	RR DOOR SW
94	G	AS DOOR SW
96	BG	DR DOOR SW
97	W	BACK DOOR SW

 

ABLIA7070GE

INTERIOR ROOM LAMP CONTROL SYSTEM

< WIRING DIAGRAM >


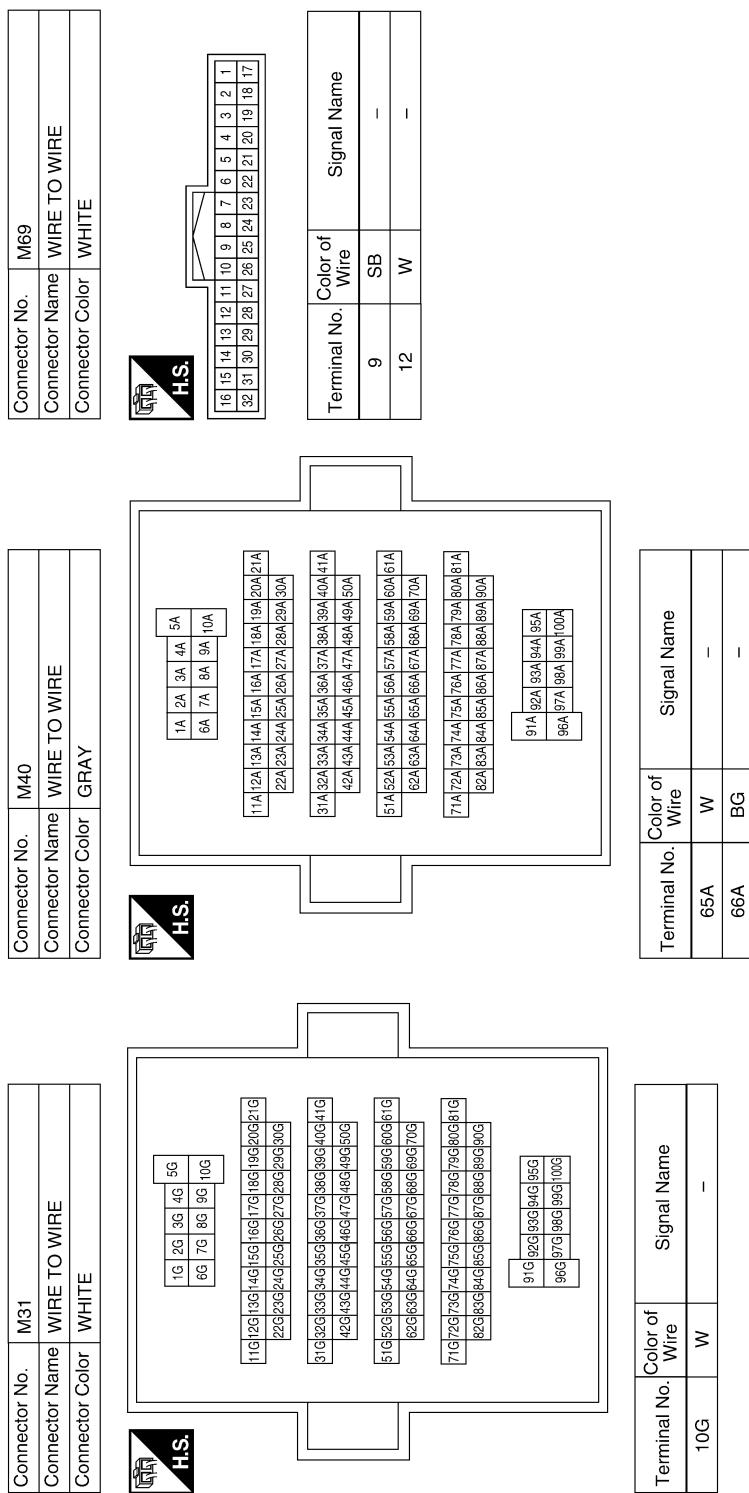


ABLIA4932GB


INTERIOR ROOM LAMP CONTROL SYSTEM

< WIRING DIAGRAM >

Connector No.	M80
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BLACK

  

Connector No.	M81
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
119	R	RF NI/MOCO
129	SB	BATTERY SAVER OUT
131	W	BAT BCM FUSE
134	B	GND 2
136	LG	ROOM LAMP CONT
139	W	BAT POWER F/L
143	B	GND 1

Terminal No.	Color of Wire	Signal Name
21	G	-
22	R	-


Terminal No.	Color of Wire	Signal Name
1	SB	-
2	W	-



Terminal No.	Color of Wire	Signal Name
1	SB	-
2	W	-



Terminal No.	Color of Wire	Signal Name
1	SB	-
2	W	-
3	SB	-
4	W	-

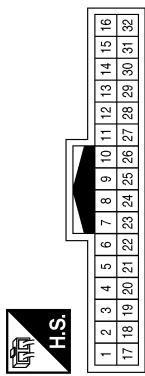

Terminal No.	Color of Wire	Signal Name
22	SB	-
23	P	-
29	W	-
30	SB	-
31	W	-




Terminal No.	Color of Wire	Signal Name
1	BG	-
2	R	-
3	GR	-

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P
Q
R
S
T
U
V
W
X
Y
Z
INL


INTERIOR ROOM LAMP CONTROL SYSTEM

< WIRING DIAGRAM >

Connector No.	M158
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 

Connector No.	M100
Connector Name	FOOT LAMP RH
Connector Color	BLACK

 

Connector No.	M168
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1	SB	-
2	W	-

Terminal No.	Color of Wire	Signal Name
8	GR	-

Terminal No.	Color of Wire	Signal Name
1	B	-

Terminal No.	Color of Wire	Signal Name
8	GR	-

 

Terminal No.	Color of Wire	Signal Name
1	B	-

Terminal No.	Color of Wire	Signal Name
8	GR	-



Terminal No.	Color of Wire	Signal Name
1	W	-
2	W	-

Terminal No.	Color of Wire	Signal Name
1	W	-
2	W	-

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40




11	10	9	8	7	6	5	4	3	2	1
22	21	20	19	18	17	16	15	14	13	12
33	32	31	30	29	28	27	26	25	24	23
44	43	42	41	40	39	38	37	36	35	34
55	54	53	52	51	50	49	48	47	46	45



Terminal No.	Color of Wire	Signal Name
1	SB	-
19	W	-
20	SB	-
21	P	-
39	W	-

INTERIOR ROOM LAMP CONTROL SYSTEM

< WIRING DIAGRAM >

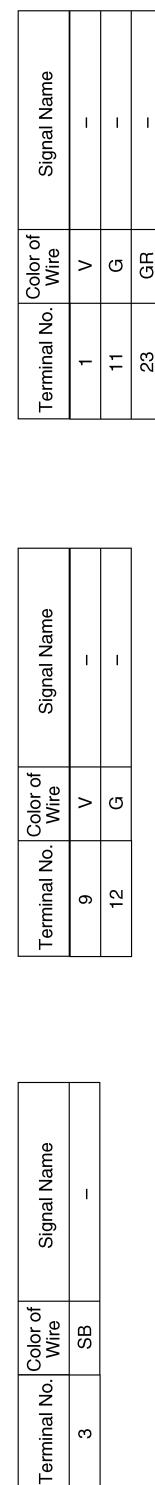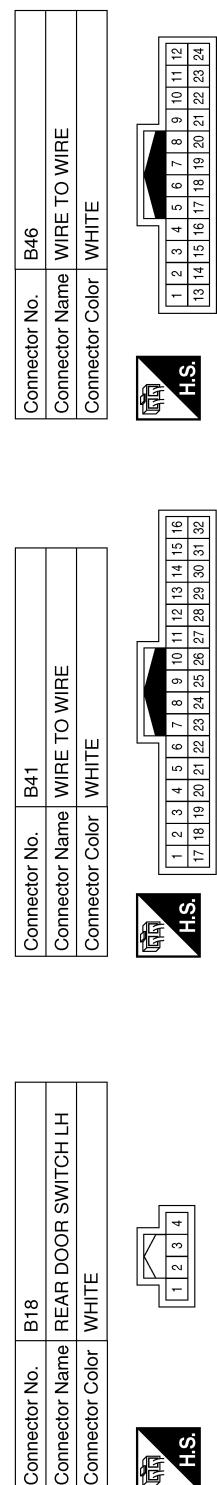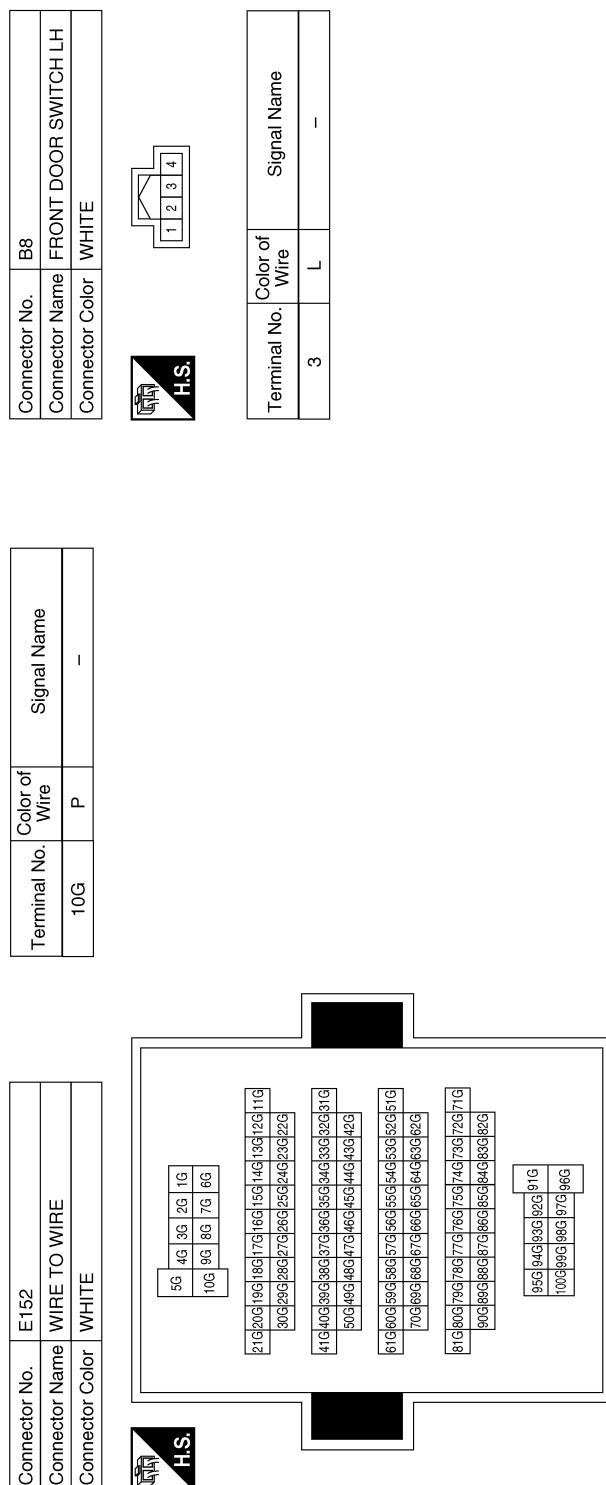

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P
INL
Z
M
O
P

INTERIOR ROOM LAMP CONTROL SYSTEM

< WIRING DIAGRAM >

<table border="1"> <tr><td>Connector No.</td><td>B69</td></tr> <tr><td>Connector Name</td><td>WIRE TO WIRE</td></tr> <tr><td>Connector Color</td><td>GRAY</td></tr> </table> 	Connector No.	B69	Connector Name	WIRE TO WIRE	Connector Color	GRAY	<table border="1"> <tr><td>Terminal No.</td><td>Color of Wire</td><td>Signal Name</td></tr> <tr><td>65A</td><td>SB</td><td>-</td></tr> <tr><td>66A</td><td>L</td><td>-</td></tr> </table>	Terminal No.	Color of Wire	Signal Name	65A	SB	-	66A	L	-	<table border="1"> <tr><td>1</td><td>2</td><td>3</td><td>4</td><td>5</td><td>6</td><td>7</td><td>8</td><td>9</td><td>10</td><td>11</td><td>12</td><td>13</td><td>14</td><td>15</td><td>16</td></tr> <tr><td>17</td><td>18</td><td>19</td><td>20</td><td>21</td><td>22</td><td>23</td><td>24</td><td>25</td><td>26</td><td>27</td><td>28</td><td>29</td><td>30</td><td>31</td><td>32</td></tr> </table>	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32
Connector No.	B69																																																
Connector Name	WIRE TO WIRE																																																
Connector Color	GRAY																																																
Terminal No.	Color of Wire	Signal Name																																															
65A	SB	-																																															
66A	L	-																																															
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16																																		
17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32																																		
<table border="1"> <tr><td>Connector No.</td><td>B108</td></tr> <tr><td>Connector Name</td><td>FRONT DOOR SWITCH RH</td></tr> <tr><td>Connector Color</td><td>WHITE</td></tr> </table> 	Connector No.	B108	Connector Name	FRONT DOOR SWITCH RH	Connector Color	WHITE	<table border="1"> <tr><td>Terminal No.</td><td>Color of Wire</td><td>Signal Name</td></tr> <tr><td>3</td><td>LG</td><td>-</td></tr> </table>	Terminal No.	Color of Wire	Signal Name	3	LG	-	<table border="1"> <tr><td>1</td><td>2</td><td>3</td><td>4</td></tr> <tr><td>9</td><td>8</td><td>7</td><td>6</td></tr> <tr><td>5</td><td>4</td><td>3</td><td>2</td></tr> <tr><td>1</td><td>2</td><td>1</td><td>0</td></tr> </table>	1	2	3	4	9	8	7	6	5	4	3	2	1	2	1	0																			
Connector No.	B108																																																
Connector Name	FRONT DOOR SWITCH RH																																																
Connector Color	WHITE																																																
Terminal No.	Color of Wire	Signal Name																																															
3	LG	-																																															
1	2	3	4																																														
9	8	7	6																																														
5	4	3	2																																														
1	2	1	0																																														
<table border="1"> <tr><td>Connector No.</td><td>B116</td></tr> <tr><td>Connector Name</td><td>REAR DOOR SWITCH RH</td></tr> <tr><td>Connector Color</td><td>WHITE</td></tr> </table> 	Connector No.	B116	Connector Name	REAR DOOR SWITCH RH	Connector Color	WHITE	<table border="1"> <tr><td>Terminal No.</td><td>Color of Wire</td><td>Signal Name</td></tr> <tr><td>21</td><td>LG</td><td>-</td></tr> <tr><td>22</td><td>LG</td><td>-</td></tr> </table>	Terminal No.	Color of Wire	Signal Name	21	LG	-	22	LG	-	<table border="1"> <tr><td>12</td><td>11</td><td>10</td><td>9</td><td>8</td><td>7</td><td>6</td><td>5</td><td>4</td><td>3</td><td>2</td><td>1</td></tr> <tr><td>24</td><td>23</td><td>22</td><td>21</td><td>20</td><td>19</td><td>18</td><td>17</td><td>16</td><td>15</td><td>14</td><td>13</td></tr> </table>	12	11	10	9	8	7	6	5	4	3	2	1	24	23	22	21	20	19	18	17	16	15	14	13								
Connector No.	B116																																																
Connector Name	REAR DOOR SWITCH RH																																																
Connector Color	WHITE																																																
Terminal No.	Color of Wire	Signal Name																																															
21	LG	-																																															
22	LG	-																																															
12	11	10	9	8	7	6	5	4	3	2	1																																						
24	23	22	21	20	19	18	17	16	15	14	13																																						

ABLIA7074GB


INTERIOR ROOM LAMP CONTROL SYSTEM

< WIRING DIAGRAM >

Connector No.	R101
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Connector No.	R11
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 


Terminal No.	Color of Wire	Signal Name
8	B	-
11	R	-
12	G	-

Terminal No.	Color of Wire	Signal Name
12	G	-
11	R	-
8	B	-

Terminal No.	Color of Wire	Signal Name
1	G	-
2	B	-

Terminal No.	Color of Wire	Signal Name
1	G	-
2	B	-
3	R	-

 

Terminal No.	Color of Wire	Signal Name
1	G	-
2	L	-
3	B	-



Terminal No.	Color of Wire	Signal Name
1	B	-
2	G	-
3	R	-



Connector No.	R102
Connector Name	VANITY LAMP RH
Connector Color	WHITE




A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P
Q
R
S
T
U
V
W
X
Y
Z
INL

INTERIOR ROOM LAMP CONTROL SYSTEM

< WIRING DIAGRAM >


Connector No.	R107
Connector Name	FRONT ROOM/MAP LAMP ASSEMBLY
Connector Color	GRAY

 

Terminal No.	Color of Wire	Signal Name
5	L	-
6	B	-
7	R	-
8	G	-

Terminal No.	Color of Wire	Signal Name
1	B	-

Connector No.	D2
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
1	Y	-
19	Y	-
20	LG	-
21	LG	-
39	Y	-

Terminal No.	Color of Wire	Signal Name
1	Y	-
13	Y	-
14	Y	-
15	Y	-
16	Y	-
17	Y	-
18	Y	-
19	Y	-
20	LG	-
21	LG	-
22	LG	-
23	LG	-
24	LG	-
25	LG	-
26	LG	-
27	LG	-
28	LG	-
29	LG	-
30	LG	-
31	LG	-
32	LG	-
33	LG	-
34	LG	-
35	LG	-
36	LG	-
37	LG	-
38	LG	-
39	LG	-
40	LG	-

Terminal No.	Color of Wire	Signal Name
1	Y	-
2	LG	-
3	LG	-

Terminal No.	Color of Wire	Signal Name
1	Y	-
2	LG	-
3	LG	-
4	LG	-

Terminal No.	Color of Wire	Signal Name
1	Y	-
2	LG	-
3	LG	-


Terminal No.	Color of Wire	Signal Name
1	LG	-
2	Y	-

Terminal No.	Color of Wire	Signal Name
4	B	-
5	SB	-
6	BR	-


INTERIOR ROOM LAMP CONTROL SYSTEM

< WIRING DIAGRAM >


Connector No.	D17
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 

Connector No.	D18
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 

Connector No.	D19
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 


Terminal No.	Color of Wire	Signal Name
10	Y	-
11	BR	-
12	SB	-

Terminal No.	Color of Wire	Signal Name
10	Y	-
11	BR	-
12	SB	-


Connector No.	D53
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Connector No.	D52
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 

Connector No.	D51
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 

Connector No.	D53
Connector Name	WIRE TO WIRE
Connector Color	WHITE

Terminal No.	Color of Wire	Signal Name
13	Y	-
14	W	-
15	SB	-


Terminal No.	Color of Wire	Signal Name
10	Y	-
11	BR	-
12	SB	-

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P
Q
R
S
T
U
V
W
X
Y
Z
INL


INTERIOR ROOM LAMP CONTROL SYSTEM

< WIRING DIAGRAM >

Connector No.	D102
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 


Connector No.	D101
Connector Name	WIRE TO WIRE
Connector Color	WHITE

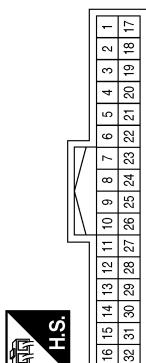


Terminal No.	Color of Wire	Signal Name	Terminal No.	Color of Wire	Signal Name
22	Y	-	8	B	-
23	LG	-			
29	Y	-			
30	LG	-			
31	BR	-			

Terminal No.	Color of Wire	Signal Name
7	B	GND
13	Y	COM
15	BR	LOCK SW (WITHOUT AUTOMATIC DRIVE POSITIONER)
15	W	LOCK SW (WITH AUTOMATIC DRIVE POSITIONER)
16	SB	UNLOCK SW


Connector No.	D56
Connector Name	MAIN POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
8	B	-

 

Connector No.	D110
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 


Connector No.	D109
Connector Name	FRONT STEP LAMP RH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
3	Y	-
4	LG	-

Connector No.	D115
Connector Name	FRONT OUTSIDE HANDLE ASSEMBLY RH
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
3	B	-
4	BR	-


ABLIA7078GB

INTERIOR ROOM LAMP CONTROL SYSTEM


< WIRING DIAGRAM >

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P
Q
R
S
T
U
V
W
X
Y
Z
INL

Connector No.	D151
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 


Connector No.	D157
Connector Name	POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH RH
Connector Color	WHITE

 


Terminal No.	Color of Wire	Signal Name
11	B	GND
16	BR	COM

Terminal No.	Color of Wire	Signal Name
3	B	-
4	BR	-

Connector No.	D507
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 


Terminal No.	Color of Wire	Signal Name
1	BR	-
11	P	-
23	Y	-

 


Terminal No.	Color of Wire	Signal Name
11	BR	-
16	BR	-




Terminal No.	Color of Wire	Signal Name
6	Y	-
10	BR	-
12	P	-

 

Terminal No.	Color of Wire	Signal Name
7	G	-
8	B	-

 


Terminal No.	Color of Wire	Signal Name
6	BR	-
10	P	-

 

INTERIOR ROOM LAMP CONTROL SYSTEM

< WIRING DIAGRAM >


Connector No.	D558
Connector Name	DIODE-2
Connector Color	BLACK

 


Connector No.	D560
Connector Name	AUTOMATIC BACK DOOR CLOSE SWITCH
Connector Color	BLACK



Connector No.	D558
Connector Name	DIODE-2
Connector Color	BLACK

 

Terminal No.	Color of Wire	Signal Name
1	G	-
2	BR	-

 

ABLIA7080GB


ILLUMINATION

< WIRING DIAGRAM >

ILLUMINATION

Wiring Diagram


INFOID:0000000011134736

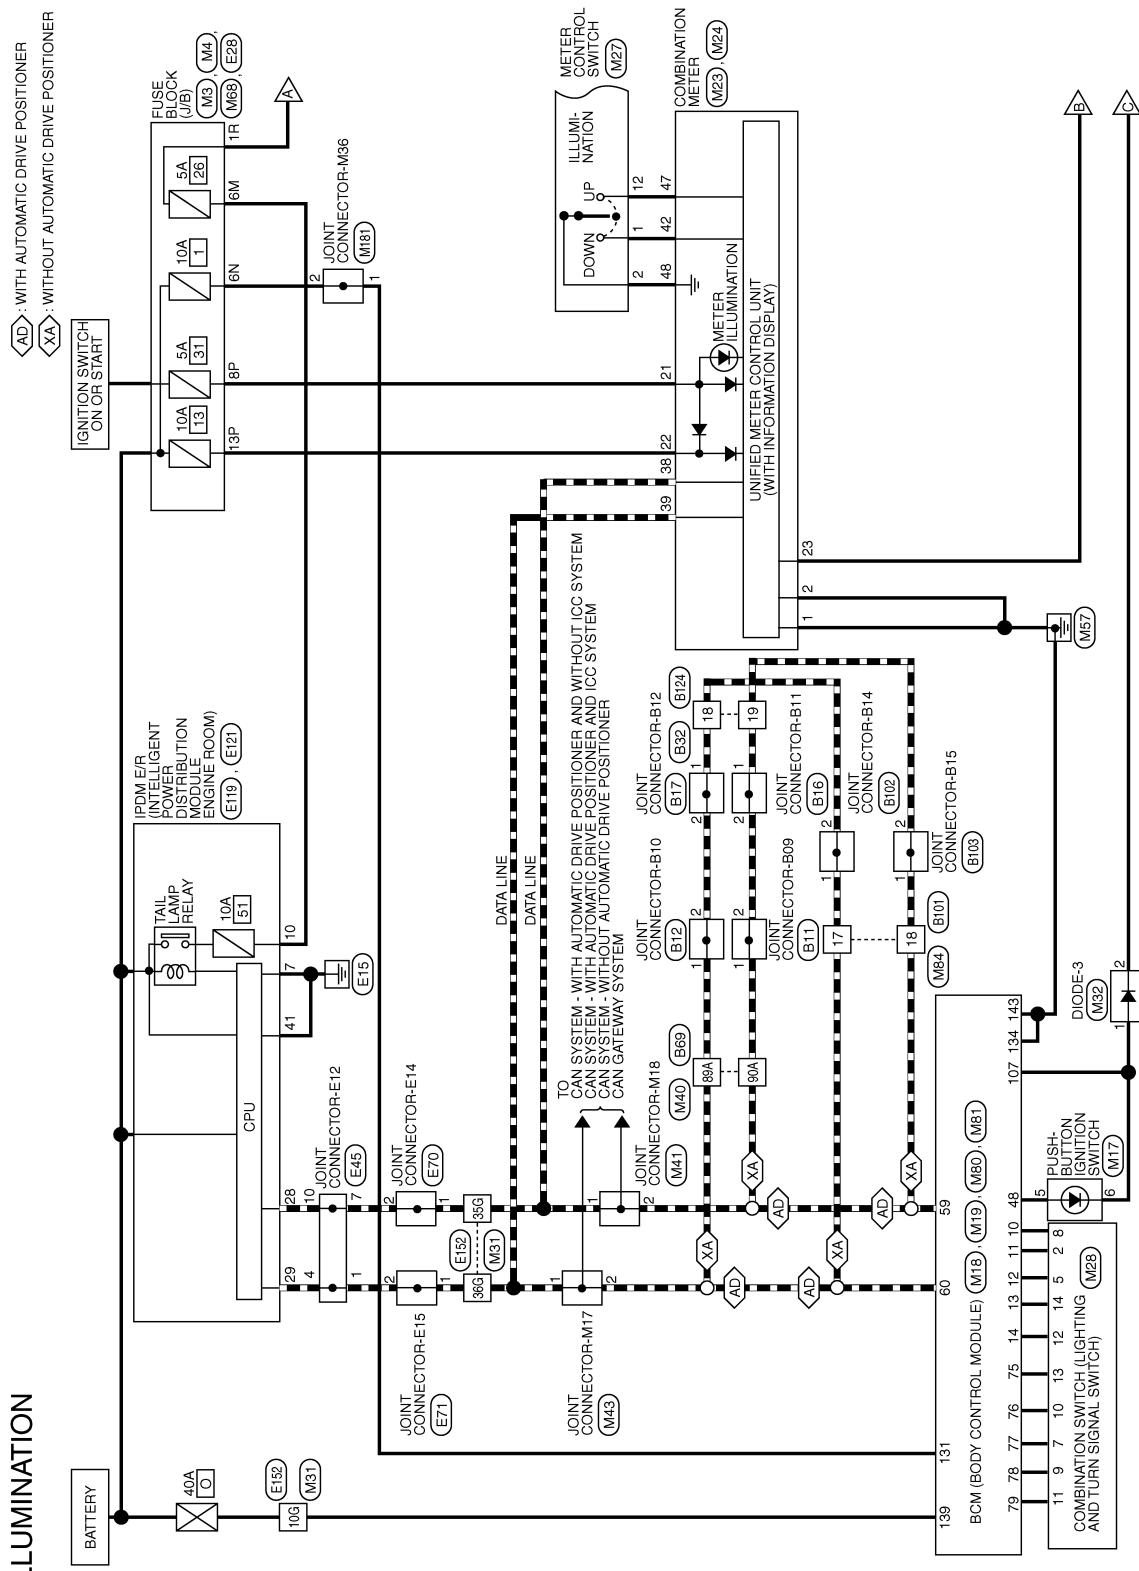

ABLWA2912GB

ILLUMINATION

< WIRING DIAGRAM >

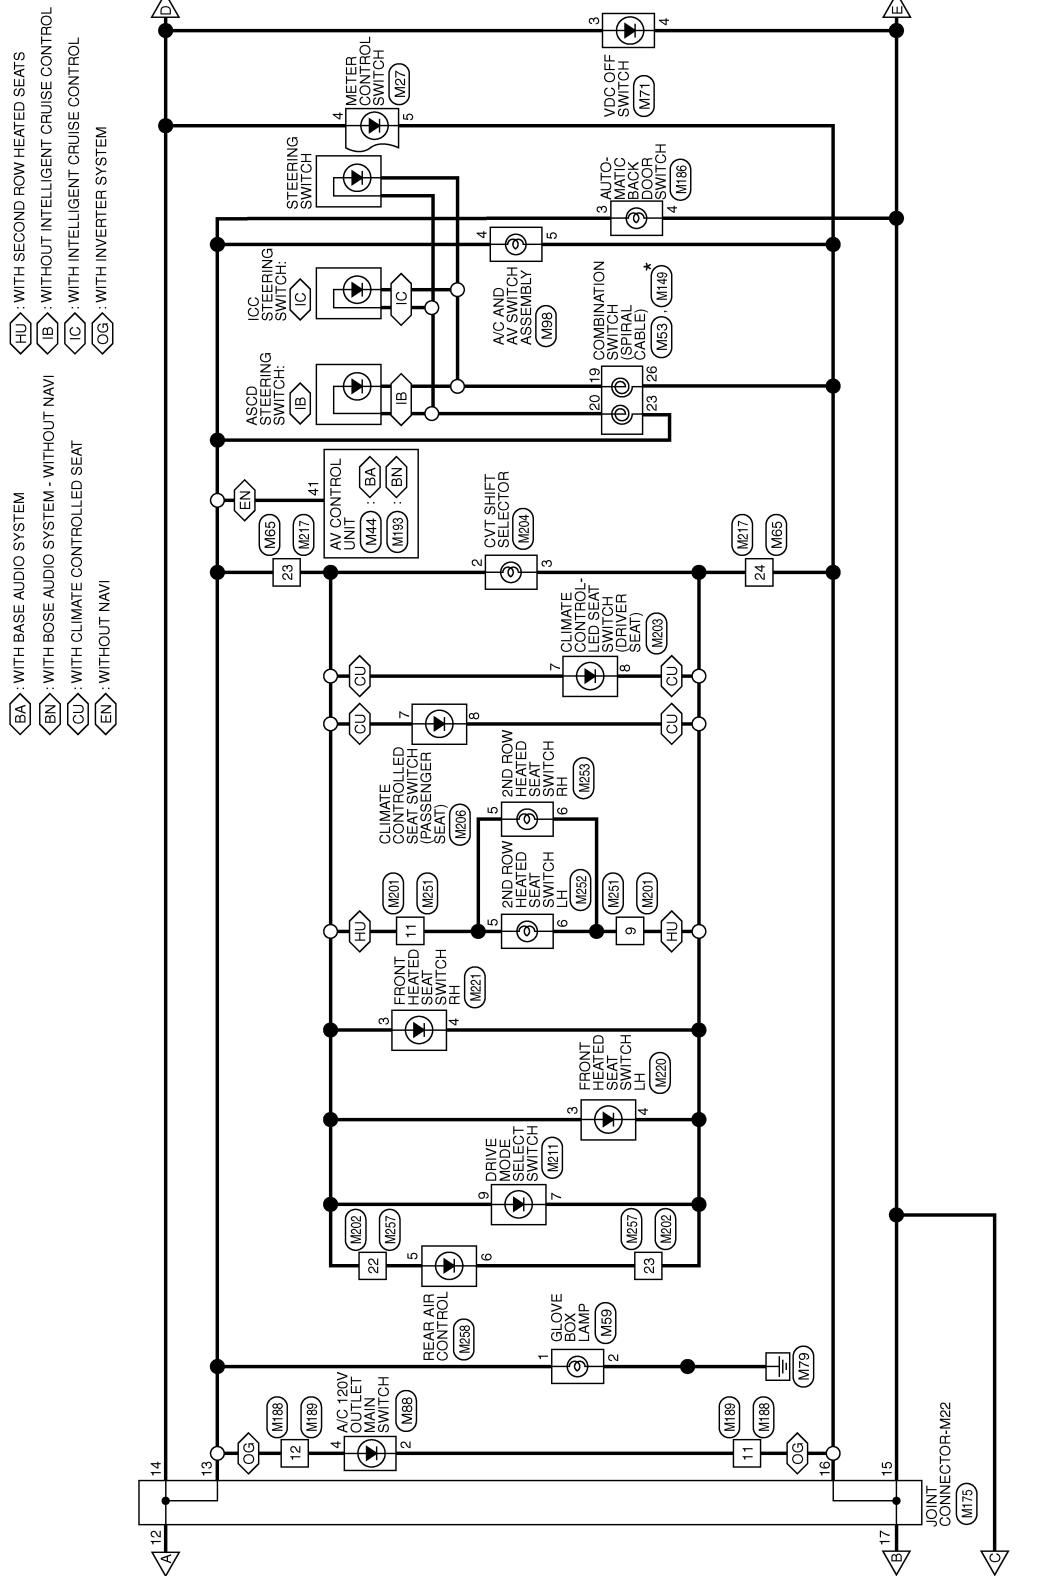


* : THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT" OF PG SECTION.

ABLWA2913GB

ILLUMINATION

< WIRING DIAGRAM >

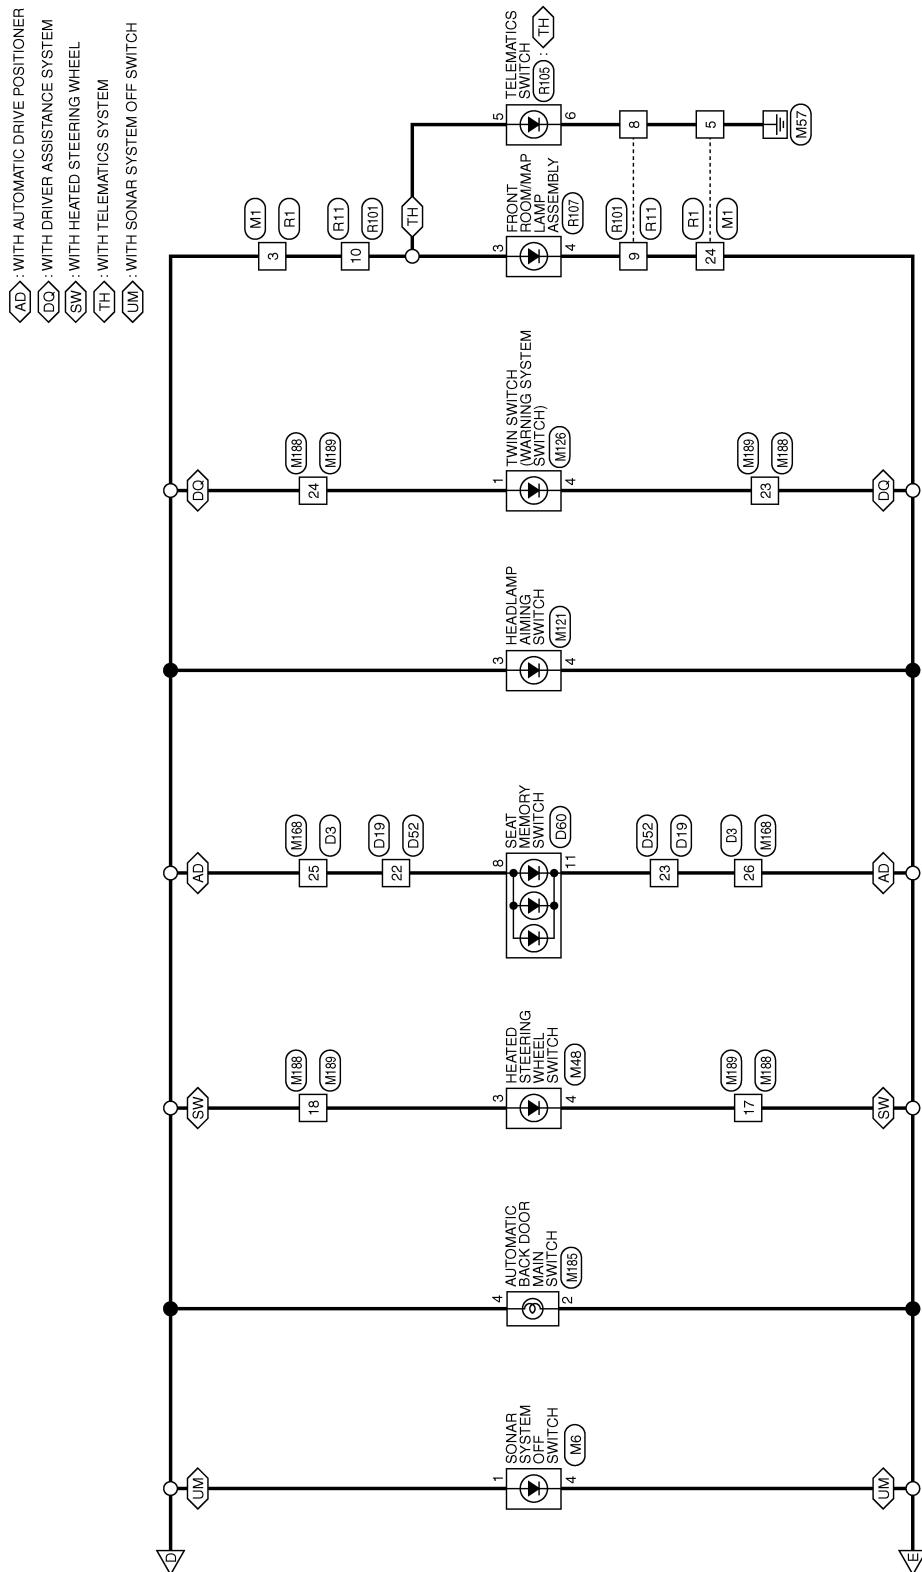


ABLWA2914GB

ILLUMINATION


< WIRING DIAGRAM >

ILLUMINATION CONNECTORS

Connector No.	M1
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 


Connector No.	M3
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE

 

Connector No.	M4
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
3	R	-
5	GR	-
24	B	-

 


Terminal No.	Color of Wire	Signal Name
6N	W	-
13P		
14P		

Terminal No.	Color of Wire	Signal Name
8P	BG	-
13P	W	-

Connector No.	M6
Connector Name	SONAR SYSTEM OFF SWITCH
Connector Color	GRAY

 

Connector No.	M18
Connector Name	PUSH-BUTTON IGNITION SWITCH
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
1	R	-
4	B	-


Terminal No.	Color of Wire	Signal Name
5	R	-
6	W	-
10	P	COMBI SW IN 5
11	P	COMBI SW IN 4
12	V	COMBI SW IN 3
13	W	COMBI SW IN 2
14	P	COMBI SW IN 1

ABLIA6922GB


ILLUMINATION

< WIRING DIAGRAM >


Connector No.	M19
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BLACK

 

Terminal No.	Color of Wire	Signal Name
48	R	HIGH SIDE
59	P	START SW LED
60	L	CAN-L
75	BG	COMBI SW OUT 5
76	P	COMBI SW OUT 4
77	P	COMBI SW OUT 3
78	W	COMBI SW OUT 2
79	W	COMBI SW OUT 1

 


Connector No.	M23
Connector Name	COMBINATION METER
Connector Color	WHITE

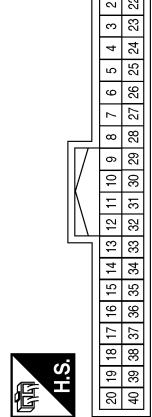


Terminal No.	Color of Wire	Signal Name
1	B	GND 1
2	B	GND 2
21	BG	IGN
22	W	BAT
23	B	ILLUMI CONT OUT
38	P	CAN-L
39	L	CAN-H

Terminal No.	Color of Wire	Signal Name
10	P	-
11	W	-
12	P	-
13	BG	-
14	W	-

Connector No.	M27
Connector Name	METER CONTROL SWITCH
Connector Color	WHITE

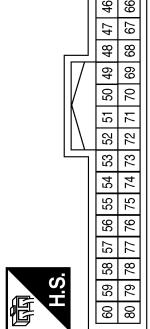

Connector No.	M28
Connector Name	COMBINATION SWITCH
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
2	P	-
5	V	-
7	P	-
8	P	-
9	W	-

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P
Q
R
S
T
U
V
W
X
Y
Z
[]


ILLUMINATION

< WIRING DIAGRAM >

Connector No.	M31
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1	W	-
2	B	-

 


Connector No.	M40
Connector Name	WIRE TO WIRE
Connector Color	GRAY




Terminal No.	Color of Wire	Signal Name
1	2A	3A 4A 5A 6A 7A 8A 9A 10A
2	3A	1A 12A 13A 14A 15A 16A 17A 18A 19A 20A 21A 22A 23A 24A 25A 26A 27A 28A 29A 30A

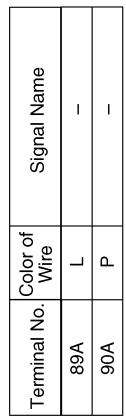

Terminal No.	Color of Wire	Signal Name
89A	L	-
90A	P	-

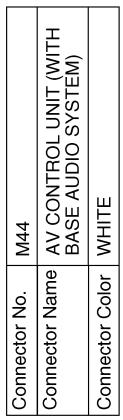


Terminal No.	Color of Wire	Signal Name
91A	92A 93A 94A 95A 96A 97A 98A 99A 100A	-
71A 72A 73A 74A 75A 76A 77A 78A 79A 80A 81A 82A 83A 84A 85A 86A 87A 88A 89A 90A	-	-

 

Terminal No.	Color of Wire	Signal Name
10G	W	-
35G	P	-
36G	L	-


Connector No.	M43
Connector Name	JOINT CONNECTOR-M17
Connector Color	WHITE

 


1	L	-
2	L	-



1	2A	3A 4A 5A 6A 7A 8A 9A 10A
2	3A	1A 12A 13A 14A 15A 16A 17A 18A 19A 20A 21A 22A 23A 24A 25A 26A 27A 28A 29A 30A

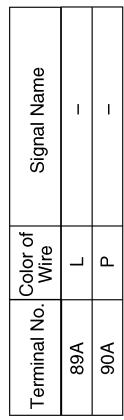

1	P	-
2	P	-

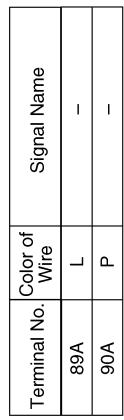

ILLUMINATION

< WIRING DIAGRAM >

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P
Q
R
S
T
U
V
W
X
Y
Z
[]

Connector No.	M48
Connector Name	HEATED STEERING WHEEL SWITCH
Connector Color	BLUE



Connector No.	M53
Connector Name	COMBINATION SWITCH (SPIRAL CABLE)
Connector Color	YELLOW



Terminal No.	Color of Wire	Signal Name
3	R	-
4	B	-


Terminal No.	Color of Wire	Signal Name
23	R	-
26	B	-

Connector No.	M59
Connector Name	GLOVE BOX LAMP
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	R	-
2	GR	-

Terminal No.	Color of Wire	Signal Name
1	R	-
2	GR	-

 

Terminal No.	Color of Wire	Signal Name
3	R	-
4	B	-

Terminal No.	Color of Wire	Signal Name
1	R	-
2	GR	-

Terminal No.	Color of Wire	Signal Name
23	R	-
26	B	-

Terminal No.	Color of Wire	Signal Name
23	R	-
26	B	-

Terminal No.	Color of Wire	Signal Name
1	R	-
2	GR	-

Terminal No.	Color of Wire	Signal Name
1	R	-
2	GR	-

ILLUMINATION

< WIRING DIAGRAM >

Connector No.	M80
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BLACK



Connector No.	M84
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
131	W	BAT BCM FUSE
134	B	GND 2
139	W	BAT POWER F/L
143	B	GND 1

Terminal No.	Color of Wire	Signal Name
107	W	LOW SIDE START SW LED
131	W	BAT BCM FUSE
134	B	GND 2
139	W	BAT POWER F/L
143	B	GND 1

Connector No.	M88
Connector Name	A/C 120V OUTLET MAIN SWITCH
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
2	B	-
4	R	-

Terminal No.	Color of Wire	Signal Name
17	L	-
18	P	-



Terminal No.	Color of Wire	Signal Name
131	W	BAT BCM FUSE
134	B	GND 2
139	W	BAT POWER F/L
143	B	GND 1



Terminal No.	Color of Wire	Signal Name
17	L	-
18	P	-



Terminal No.	Color of Wire	Signal Name
131	W	BAT BCM FUSE
134	B	GND 2
139	W	BAT POWER F/L
143	B	GND 1



Terminal No.	Color of Wire	Signal Name
17	L	-
18	P	-



Terminal No.	Color of Wire	Signal Name
131	W	BAT BCM FUSE
134	B	GND 2
139	W	BAT POWER F/L
143	B	GND 1



Terminal No.	Color of Wire	Signal Name
17	L	-
18	P	-



Terminal No.	Color of Wire	Signal Name
131	W	BAT BCM FUSE
134	B	GND 2
139	W	BAT POWER F/L
143	B	GND 1



Terminal No.	Color of Wire	Signal Name
17	L	-
18	P	-



Terminal No.	Color of Wire	Signal Name
131	W	BAT BCM FUSE
134	B	GND 2
139	W	BAT POWER F/L
143	B	GND 1



Terminal No.	Color of Wire	Signal Name
17	L	-
18	P	-



Terminal No.	Color of Wire	Signal Name
131	W	BAT BCM FUSE
134	B	GND 2
139	W	BAT POWER F/L
143	B	GND 1



Terminal No.	Color of Wire	Signal Name
17	L	-
18	P	-



Terminal No.	Color of Wire	Signal Name
131	W	BAT BCM FUSE
134	B	GND 2
139	W	BAT POWER F/L
143	B	GND 1



Terminal No.	Color of Wire	Signal Name
17	L	-
18	P	-



Terminal No.	Color of Wire	Signal Name
131	W	BAT BCM FUSE
134	B	GND 2
139	W	BAT POWER F/L
143	B	GND 1



Terminal No.	Color of Wire	Signal Name
17	L	-
18	P	-



Terminal No.	Color of Wire	Signal Name
131	W	BAT BCM FUSE
134	B	GND 2
139	W	BAT POWER F/L
143	B	GND 1



Terminal No.	Color of Wire	Signal Name
17	L	-
18	P	-



Terminal No.	Color of Wire	Signal Name
131	W	BAT BCM FUSE
134	B	GND 2
139	W	BAT POWER F/L
143	B	GND 1



Terminal No.	Color of Wire	Signal Name
17	L	-
18	P	-



Terminal No.	Color of Wire	Signal Name
131	W	BAT BCM FUSE
134	B	GND 2
139	W	BAT POWER F/L
143	B	GND 1



Terminal No.	Color of Wire	Signal Name
17	L	-
18	P	-



Terminal No.	Color of Wire	Signal Name
131	W	BAT BCM FUSE
134	B	GND 2
139	W	BAT POWER F/L
143	B	GND 1



Terminal No.	Color of Wire	Signal Name
17	L	-
18	P	-



Terminal No.	Color of Wire	Signal Name
131	W	BAT BCM FUSE
134	B	GND 2
139	W	BAT POWER F/L
143	B	GND 1



ILLUMINATION

< WIRING DIAGRAM >

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P
Q
R
S
T
U
V
W
X
Y
Z
INL

Connector No.	M126
Connector Name	TWIN SWITCH (WARNING SYSTEM SWITCH)
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
1	R	-
4	B	-

Connector No.	M149
Connector Name	COMBINATION SWITCH (SPIRAL CABLE)
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
19	Y	-
20	W	-


Connector No.	M168
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 

ILLUMINATION


< WIRING DIAGRAM >

Connector No.	M189
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 


Terminal No.	Color of Wire	Signal Name
11	B	-
12	R	-
17	B	-
18	R	-
23	B	-
24	R	-

Connector No.	M188
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
11	B	-
12	R	-
17	B	-
18	R	-
23	B	-
24	R	-

Connector No.	M186
Connector Name	AUTOMATIC BACK DOOR SWITCH

 


Connector No.	M202
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
22	R	-
23	B	-

Connector No.	M201
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
9	B	-
11	R	-

Connector No.	M193
Connector Name	AV CONTROL UNIT (WITH BOSE AUDIO SYSTEM WITHOUT NAVI)
Connector Color	WHITE

 


Terminal No.	Color of Wire	Signal Name
41	R	ILL

ABLIA4947GB

ILLUMINATION

< WIRING DIAGRAM >

Connector No.	M203
Connector Name	CLIMATE CONTROLLED SEAT SWITCH (DRIVER SEAT)
Connector Color	WHITE

 


Terminal No.	Color of Wire	Signal Name
7	R	-
8	B	-

Connector No.	M204
Connector Name	CVT SHIFT SELECTOR
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
2	R	-
3	B	-


Connector No.	M206
Connector Name	CLIMATE CONTROLLED SEAT SWITCH (PASSENGER SEAT)
Connector Color	BROWN

 


Connector No.	M211
Connector Name	DRIVE MODE SELECT SWITCH
Connector Color	BLACK

 

Terminal No.	Color of Wire	Signal Name
7	R	-
8	B	-

 

Connector No.	M220
Connector Name	FRONT HEATED SEAT SWITCH LH
Connector Color	WHITE

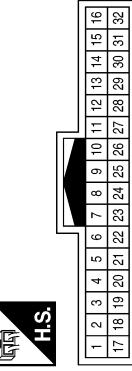

Terminal No.	Color of Wire	Signal Name
7	R	-
8	B	-


A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P
Q
R
S
T
U
V
W
X
Y
Z
INL
NL
M
Z
O
P

ABLIA4948GB

ILLUMINATION

< WIRING DIAGRAM >


Connector No.	M221
Connector Name	FRONT HEATED SEAT SWITCH RH
Connector Color	BROWN

 


Terminal No.	Color of Wire	Signal Name
9	R	-
11	B	-

Terminal No.	Color of Wire	Signal Name
3	R	-
4	B	-

Connector No.	M251
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 

Connector No.	M253
Connector Name	2ND ROW HEATED SEAT SWITCH RH
Connector Color	BROWN

 

ILLUMINATION

Connector No.	M252
Connector Name	2ND ROW HEATED SEAT SWITCH LH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
5	R	ILL(+)
6	B	ILL(-)

Terminal No.	Color of Wire	Signal Name
9	B	-
11	R	-

Terminal No.	Color of Wire	Signal Name
22	R	-
23	B	-


Terminal No.	Color of Wire	Signal Name
5	R	-
6	B	-

ILLUMINATION

< WIRING DIAGRAM >

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P
Q
R
S
T
U
V
W
X
Y
Z
INL

Connector No.	E28
Connector Name	FUSE BLOCK (JB)
Connector Color	WHITE

 


Terminal No.	Color of Wire	Signal Name
6M	L	-
1	L	-
4	L	-
7	P	-
10	P	-

Connector No.	E45
Connector Name	JOINT CONNECTOR-E12
Connector Color	BLUE



Terminal No.	Color of Wire	Signal Name
1	L	-
4	L	-
7	P	-
10	P	-

Terminal No.	Color of Wire	Signal Name
1	P	-
2	P	-

 

Connector No.	E119
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
7	L	GND (POWER)
10	L	TAIL LH
41	B	GND (SIGNAL)

Terminal No.	Color of Wire	Signal Name
7	P	CAN-L
29	L	CAN-H

ILLUMINATION


< WIRING DIAGRAM >

Connector No.	B11
Connector Name	JOINT CONNECTOR-B09
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
10G	P	-
35G	P	-
36G	L	-


Terminal No.	Color of Wire	Signal Name
5G	4G	3G
4G	3G	2G
10G	9G	8G
7G	6G	-

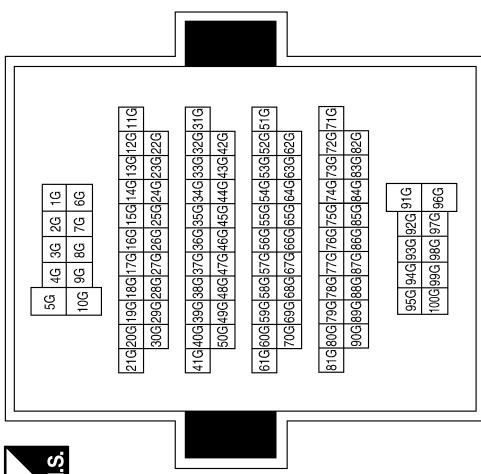

Connector No.	E152
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	P	-
2	P	-

 


Terminal No.	Color of Wire	Signal Name
1	P	-
2	P	-


Terminal No.	Color of Wire	Signal Name
1	L	-
2	L	-

Terminal No.	Color of Wire	Signal Name
1	P	-
2	P	-


Terminal No.	Color of Wire	Signal Name
1	P	-
2	P	-

 

Terminal No.	Color of Wire	Signal Name
1	P	-
2	P	-

 


Terminal No.	Color of Wire	Signal Name
1	P	-
2	P	-

 

ILLUMINATION


< WIRING DIAGRAM >

Connector No.	B32
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
18	L	-
19	P	-

Connector No.	B69
Connector Name	WIRE TO WIRE
Connector Color	GRAY

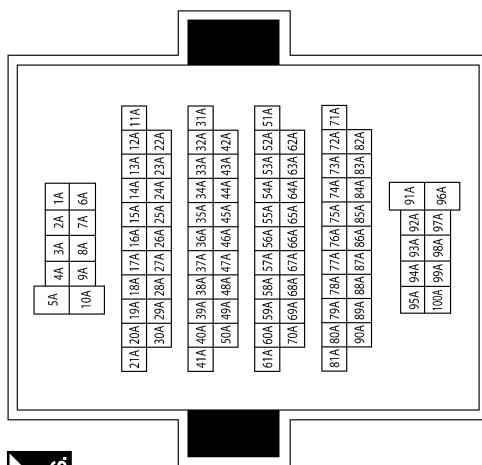

Terminal No.	Color of Wire	Signal Name
89A	L	-
90A	P	-



Connector No.	B103
Connector Name	JOINT CONNECTOR-B15
Connector Color	WHITE



Connector No.	B102
Connector Name	JOINT CONNECTOR-B14
Connector Color	WHITE






Terminal No.	Color of Wire	Signal Name
1	P	-
2	P	-

Terminal No.	Color of Wire	Signal Name
4	3	2
5	1	6

ABLIA4952GB

ILLUMINATION

< WIRING DIAGRAM >

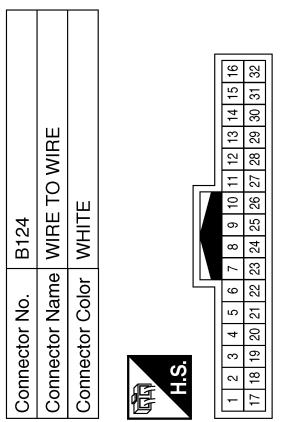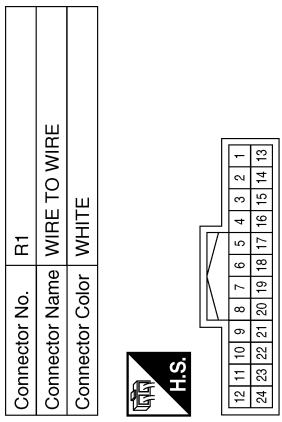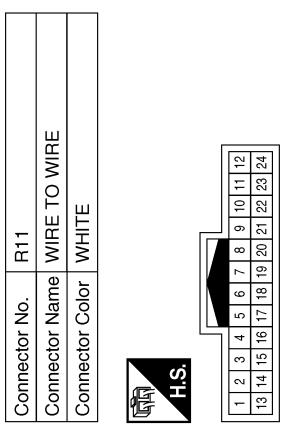

Terminal No.	Color of Wire	Signal Name
1	2	3
2	3	4
3	4	5
4	5	6
5	6	7
6	7	8
7	8	9
8	9	10
9	10	11
10	11	12
11	12	13
12	13	14
13	14	15
14	15	16
15	16	17
16	17	18
17	18	19
18	19	20
19	20	21
20	21	22
21	22	23
22	23	24
23	24	25
24	25	26
25	26	27
26	27	28
27	28	29
28	29	30
29	30	31
30	31	32

Terminal No.	Color of Wire	Signal Name
3	W	-
5	B	-
24	B	-

Terminal No.	Color of Wire	Signal Name
8	B	-
9	B	-
10	W	-

Terminal No.	Color of Wire	Signal Name
3	W	-
4	B	-

Terminal No.	Color of Wire	Signal Name
1	2	3
2	3	4
3	4	5
4	5	6
5	6	7
6	7	8
7	8	9
8	9	10
9	10	11
10	11	12
11	12	13
12	13	14
13	14	15
14	15	16
15	16	17
16	17	18
17	18	19
18	19	20
19	20	21
20	21	22
21	22	23
22	23	24
23	24	25
24	25	26
25	26	27
26	27	28
27	28	29
28	29	30
29	30	31
30	31	32

Terminal No.	Color of Wire	Signal Name
3	W	-
4	B	-


Terminal No.	Color of Wire	Signal Name
1	2	3
2	3	4
3	4	5
4	5	6
5	6	7
6	7	8

ILLUMINATION


< WIRING DIAGRAM >

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P
Q
R
S
T
U
V
W
X
Y
Z
INL


Connector No.	D3
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 

Connector No.	D19
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 


Connector No.	D3
Connector Name	WIRE TO WIRE
Connector Color	WHITE

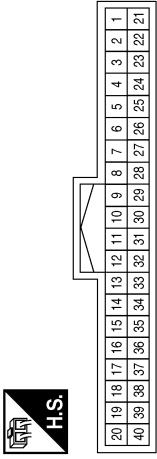

Connector No.	D52
Connector Name	WIRE TO WIRE
Connector Color	WHITE

Terminal No.	Color of Wire	Signal Name
22	BR	-
23	B	-

Connector No.	D60
Connector Name	SEAT MEMORY SWITCH
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
8	BR	-
9	B	-

ABLIA7084GB

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >


BASIC INSPECTION

DIAGNOSIS AND REPAIR WORKFLOW

Work Flow

INFOID:000000011134737

OVERALL SEQUENCE

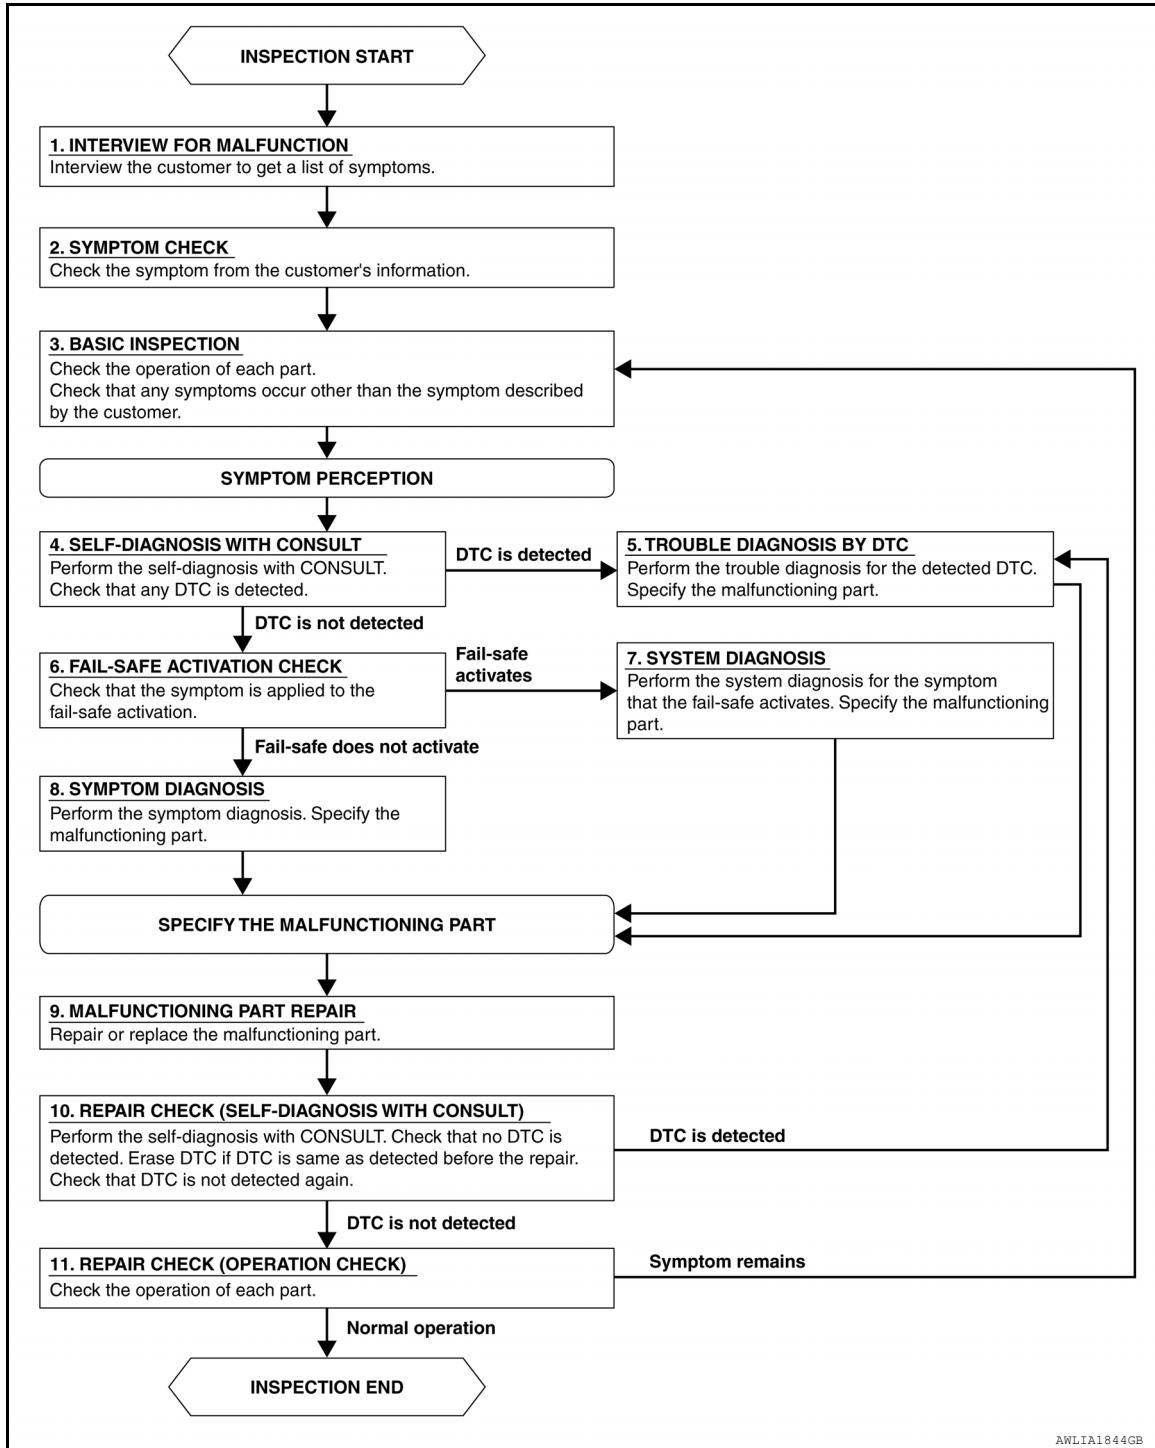

ANLIA1844GB

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

DETAILED FLOW

1. INTERVIEW FOR MALFUNCTION

Find out what the customer's concerns are.

>> GO TO 2.

2. SYMPTOM CHECK

Verify the symptom from the customer's information.

>> GO TO 3.

3. BASIC INSPECTION

Check the operation of each part. Check that any concerns occur other than those mentioned in the customer interview.

>> GO TO 4.

4. SELF-DIAGNOSIS WITH CONSULT

Perform the self-diagnosis with CONSULT. Check that any DTC is detected.

Is any DTC detected?

YES >> GO TO 5.

NO >> GO TO 6.

5. TROUBLE DIAGNOSIS BY DTC

Perform the trouble diagnosis for the detected DTC. Specify the malfunctioning part.

>> GO TO 9.

6. FAIL-SAFE ACTIVATION CHECK

Determine if the customer's concern is related to fail-safe activation.

Does the fail-safe activate?

YES >> GO TO 7.

NO >> GO TO 8.

7. SYSTEM DIAGNOSIS

Perform the system diagnosis for the system in which the fail-safe activates. Specify the malfunctioning part.

INL

>> GO TO 9.

8. SYMPTOM DIAGNOSIS

Perform the symptom diagnosis, refer to [INL-60, "Symptom Table"](#). Specify the malfunctioning part.

M

N

>> GO TO 9.

9. MALFUNCTION PART REPAIR

Repair or replace the malfunctioning part.

O

P

>> GO TO 10.

10. REPAIR CHECK (SELF-DIAGNOSIS WITH CONSULT)

Perform the self-diagnosis with CONSULT. Verify that no DTCs are detected. Erase all DTCs detected prior to the repair. Verify that DTC is not detected again.

Is any DTC detected?

YES >> GO TO 5.

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

NO >> GO TO 11.

11. REPAIR CHECK (OPERATION CHECK)

Check the operation of each part.

Does it operate normally?

YES >> Inspection End.

NO >> GO TO 3.

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

DTC/CIRCUIT DIAGNOSIS

POWER SUPPLY AND GROUND CIRCUIT

Diagnosis Procedure

INFOID:0000000011544390

Regarding Wiring Diagram information, refer to [BCS-54, "Wiring Diagram"](#).

1. CHECK FUSE AND FUSIBLE LINK

Check that the following fuse and fusible link are not blown.

Terminal No.	Signal name	Fuse and fusible link No.
139	Fusible link battery power	O (40A)
131	BCM battery fuse	1 (10A)

Is the fuse or fusible link blown?

YES >> Replace the blown fuse or fusible link after repairing the affected circuit.

NO >> GO TO 2

2. CHECK POWER SUPPLY CIRCUIT

1. Disconnect BCM connector M81.

2. Check voltage between BCM connector M81 terminals 131, 139 and ground.

BCM		Ground	Voltage (Approx.)
Connector	Terminal		
M81	131	—	Battery voltage
	139		

Is the inspection result normal?

YES >> GO TO 3

NO >> Repair or replace harness or connectors.

3. CHECK GROUND CIRCUIT

Check continuity between BCM connector M81 terminals 134, 143 and ground.

BCM		Ground	Continuity
Connector	Terminal		
M81	134	—	Yes
	143		

Is the inspection result normal?

YES >> Inspection End.

NO >> Repair or replace harness or connectors.

BATTERY SAVER OUTPUT/POWER SUPPLY CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

BATTERY SAVER OUTPUT/POWER SUPPLY CIRCUIT

Description

INFOID:0000000011134739

Provides the battery saver output/power supply. Also cuts the power supply when the interior room lamp battery saver is activating.

Component Function Check

INFOID:0000000011134740

1. CHECK BATTERY SAVER OUTPUT/POWER SUPPLY FUNCTION

(CONSULT

1. Turn ignition switch ON.
2. Turn each interior room lamp ON:
 - Front room/map lamp assembly
 - Vanity lamps
 - Personal lamp 2nd row
 - Cargo lamp
3. Open the driver door to turn ON the following lamps:
 - Front step lamps
 - Foot lamps
 - Front outside handle assembly lamps
4. Select BATTERY SAVER of BCM (BATTERY SAVER) active test item.
5. While operating the test item, check that each interior room lamp turns ON/OFF.

OFF : Interior room lamp OFF

ON : Interior room lamp ON

Is the inspection result normal?

YES >> Battery saver output/power supply circuit is normal.

NO >> Refer to [INL-50, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:0000000011134741

Regarding Wiring Diagram information, refer to [INL-14, "Wiring Diagram"](#).

1. CHECK BATTERY SAVER OUTPUT/POWER SUPPLY OUTPUT

(CONSULT

1. Turn ignition switch ON.
2. Select BATTERY SAVER of BCM (BATTERY SAVER) active test item.
3. While operating the test item, check voltage between BCM connector M81 terminal 129 and ground.

Connector	Terminal	(-)	Test item	Voltage (Approx.)
			BATTERY SAVER	
M81	129	Ground	OFF	0V
			ON	Battery voltage

Is the inspection result normal?

YES >> GO TO 2

NO >> Replace BCM after making sure battery saver output/power supply circuit is not shorted to voltage. Refer to [BCS-79, "Removal and Installation"](#).

2. CHECK BATTERY SAVER OUTPUT/POWER SUPPLY OPEN CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect the following connectors:
 - BCM M81
 - Front step lamp LH D11

BATTERY SAVER OUTPUT/POWER SUPPLY CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

- Front step lamp RH D109
 - Front outside handle assembly LH D15
 - Front outside handle assembly RH D115
 - Foot lamp LH M99
 - Foot lamp RH M100
 - Front room/map lamp assembly R107
 - Vanity lamp LH R103
 - Vanity lamp RH R102
 - Cargo lamp R104
 - Personal lamp 2nd row R106
3. Check continuity between BCM connector M81 terminal 129 and interior room lamp connector terminal in question.

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

BCM		Each interior room lamp		Continuity
Connector	Terminal	Connector	Terminal	
M81	129	Front step lamp LH	D11	1
		Front step lamp RH	D109	1
		Front outside handle assembly LH	D15	3
		Front outside handle assembly RH	D115	3
		Foot lamp LH	M99	1
		Foot lamp RH	M100	1
		Front room/map lamp assembly	R107	8
		Vanity lamp LH	R103	1
		Vanity lamp RH	R102	1
		Cargo lamp	R104	2
		Personal lamp 2nd row	R106	2

Is the inspection result normal?

YES >> GO TO 3

NO >> Repair or replace harness or connectors.

3.CHECK BATTERY SAVER OUTPUT/POWER SUPPLY SHORT CIRCUIT

Check continuity between BCM connector M81 terminal 129 and ground.

K

Connector	Terminal	—	Continuity
M81	129	Ground	No

INL

Is the inspection result normal?

YES >> Check that each interior room lamp has no internal short circuit.

NO >> Repair or replace harness or connectors.

M

N

O

P

INTERIOR ROOM LAMP CONTROL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

INTERIOR ROOM LAMP CONTROL CIRCUIT

Description

INFOID:0000000011134742

Controls the room lamp control circuit (ground side) to turn the room lamps ON and OFF.

Component Function Check

INFOID:0000000011134743

CAUTION:

Before performing the diagnosis, check that the following are normal.

- Battery saver output/power supply
- Front room/map lamp bulb
- Personal lamp bulb
- Cargo lamp bulb

1.CHECK INTERIOR ROOM LAMP CONTROL FUNCTION

CONSULT

1. Set the front room/map lamp switch, personal lamp switch and cargo lamp switch to DOOR.
2. Turn ignition switch ON.
3. Select INT LAMP of BCM (INT LAMP) active test item.
4. While operating the test item, check that each interior room lamp turn ON/OFF.

On : Interior room lamp On

Off : Interior room lamp Off

Does the interior room lamp turn ON/OFF?

YES >> Interior room lamp control circuit is normal.

NO >> Refer to [INL-52, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:0000000011134744

Regarding Wiring Diagram information, refer to [INL-14, "Wiring Diagram"](#).

1.CHECK INTERIOR ROOM LAMP CONTROL OUTPUT

CONSULT

1. Turn ignition switch ON.
2. Select INT LAMP of BCM (INT LAMP) active test item.
3. While operating the test item, check voltage between BCM harness connector M81 terminal 136 and ground.

BCM		Ground	Test item		Voltage (Approx.)
Connector	Terminal		INT LAMP	On	
M81	136			Off	
					Battery voltage

Is the inspection result normal?

YES >> Interior room lamp control circuit is operating normally.

Fixed ON>>GO TO 3.

Fixed OFF>>GO TO 2.

2.CHECK INTERIOR ROOM LAMP CONTROL OPEN CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM harness connector M81, front room/map lamp harness connector R107 and cargo lamp harness connector R104.
3. Check continuity between BCM harness connector M81 terminal 136 and front room/map lamp assembly harness connector R107 terminal 7 and cargo lamp harness connector R104 terminal 3.

INTERIOR ROOM LAMP CONTROL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

BCM		Foot lamp			Continuity
Connector	Terminal	Connector		Terminal	
M81	136	Front room/map lamp	R107	7	Yes
		Cargo lamp	R104	3	

4. Reconnect the front room/map lamp assembly harness connector.
5. Check continuity between BCM harness connector M81 terminal 136 and personal lamps 2nd row harness connector R106 terminal 3.

BCM		Personal lamp		Continuity
Connector	Terminal	Connector	Terminal	
M81	136	R106	3	Yes

Is the inspection result normal?

YES >> Check interior room lamps for an open. If NG, replace lamp in question. Refer to [INL-61, "Removal and Installation"](#) or [INL-69, "Removal and Installation"](#) or [INL-68, "Removal and Installation"](#). If OK, replace BCM. Refer to [BCS-79, "Removal and Installation"](#).

NO >> Repair or replace harness or connectors.

3.CHECK INTERIOR ROOM LAMP CONTROL SHORT CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM harness connector M81 and front room/map lamp harness connector R107 and cargo lamp harness connector R104.
3. Check continuity between BCM harness connector M81 terminal 136 and ground.

BCM		Ground	Continuity
Connector	Terminal		
M81	136		No

Is the inspection result normal?

YES >> Check interior room lamps for a short circuit. If NG, replace lamp in question. Refer to [INL-61, "Removal and Installation"](#) or [INL-69, "Removal and Installation"](#) or [INL-68, "Removal and Installation"](#). If OK, replace BCM. Refer to [BCS-79, "Removal and Installation"](#).

NO >> Repair or replace harness or connectors.

A

B

C

D

E

F

G

H

I

J

K

INL

M

N

O

P

STEP LAMP CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

STEP LAMP CIRCUIT

Description

INFOID:0000000011134745

Controls the step lamp control circuit (ground side) to turn the step lamps and foot lamps ON and OFF.

Component Function Check

INFOID:0000000011134746

CAUTION:

Before performing the diagnosis, check that the following is normal.

- Battery saver output/power supply
- Front step lamp bulb
- Foot lamp bulb

1.CHECK STEP LAMP OPERATION

(H)CONSULT

1. Turn ignition switch ON.
2. Select STEP LAMP TEST of BCM (INT LAMP) active test item.
3. While operating the test items, check that front step lamp and foot lamp turns ON/OFF.

On : Step lamp and foot lamp ON

Off : Step lamp and foot lamp OFF

Is the inspection result normal?

YES >> Step lamp circuit is normal.

NO >> Refer to [INL-54, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:0000000011134747

Regarding Wiring Diagram information, refer to [INL-14, "Wiring Diagram"](#).

1.CHECK STEP LAMP OUTPUT

(H)CONSULT

1. Turn ignition switch ON.
2. Select STEP LAMP TEST of BCM (INT LAMP) active test item.
3. While operating the test item, check voltage between BCM harness connector M18 terminal 21 and ground.

BCM		Ground	STEP LAMP TEST	Voltage (Approx.)
Connector	Terminal			
M18	21		On	0V
			Off	Battery voltage

Is the inspection result normal?

YES >> Step lamp control circuit is operating normally.

Fixed ON>>GO TO 3

Fixed OFF>>GO TO 2

2.CHECK STEP LAMP OPEN CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect the following harness connectors:
 - BCM M18
 - Front step lamp LH D11
 - Front step lamp RH D109
 - Foot lamp LH M99
 - Foot lamp RH M100
3. Check continuity between BCM harness connector M18 terminal 21 and the following lamp harness connector terminal.

STEP LAMP CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

BCM		Step lamp			Continuity
Connector	Terminal	Connector		Terminal	
M18	21	Front step lamp LH	D11	2	Yes
		Front step lamp RH	D109		
		Foot lamp LH	M99		
		Foot lamp RH	M100		

Is the inspection result normal?

YES >> Check front step lamp or foot lamp for an open. If NG, replace lamp in question. Refer to [INL-65, "DRIVER SIDE : Removal and Installation"](#) or [INL-66, "PASSENGER SIDE : Bulb Replacement"](#) or [INL-67, "Removal and Installation"](#). If OK, replace BCM. Refer to [BCS-79, "Removal and Installation"](#).

NO >> Repair or replace harness or connectors.

3.CHECK STEP LAMP SHORT CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect the following harness connectors:
 - BCM M18
 - Front step lamp LH D11
 - Front step lamp RH D109
 - Foot lamp LH M99
 - Foot lamp RH M100
3. Check continuity between BCM harness connector M18 terminal 21 and ground.

BCM		Ground	Continuity
Connector	Terminal		
M18	21		No

Is the inspection result normal?

YES >> Replace BCM. Refer to [BCS-79, "Removal and Installation"](#).

NO >> Repair or replace harness or connectors.

A

B

C

D

E

F

G

H

I

J

K

INL

M

N

O

P

OUTSIDE HANDLE LAMP CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

OUTSIDE HANDLE LAMP CIRCUIT

Description

INFOID:0000000011134748

Controls the outside door handle lamp circuit (ground side) to turn the outside door handle lamps ON and OFF.

Component Function Check

INFOID:0000000011134749

1.CHECK OUTSIDE DOOR HANDLE LAMP OPERATION

(B)CONSULT

1. Turn the ignition switch ON.
2. Select DOOR HANDLE LAMP TEST of BCM (INTELLIGENT KEY) active test item.
3. While operating the test item, check that the outside door handle lamp turn ON/OFF.

On : Outside door handle lamp ON

Off : Outside door handle lamp OFF

Is the inspection results normal?

YES >> Outside door handle lamp circuit is normal.

NO >> Refer to [INL-56, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:0000000011134750

Regarding Wiring Diagram information, refer to [INL-14, "Wiring Diagram"](#).

CAUTION:

Before performing the diagnosis, check that the following is normal:

- Battery saver output/power supply

1.CHECK OUTSIDE HANDLE LAMP OUTPUT

1. Turn ignition switch OFF.
2. Open driver's door.
3. Check voltage between BCM harness connector M19 terminal 65 and ground.

BCM		Ground	Condition		Voltage (Approx.)
Connector	Terminal		Any door	Open	
M19	65			Closed	
					Battery voltage

Is the inspection result normal?

YES >> Front outside handle assembly control circuit is operating normally.

Fixed ON>>GO TO 3

Fixed OFF>>GO TO 2

2.CHECK OUTSIDE HANDLE LAMP OPEN CIRCUIT

1. Disconnect BCM harness connector and front outside handle assembly LH/RH harness connectors.
2. Check continuity between BCM harness connector and front outside handle assembly harness connector.

BCM		Front Outside Handle Assembly			Continuity
Connector	Terminal	Connector		Terminal	
M19	65	LH	D15	4	
		RH	D115	Yes	

Is the inspection result normal?

YES >> Replace front outside handle lamp. Refer to [DLK-297, "OUTSIDE HANDLE : Removal and Installation"](#).

NO >> Repair or replace harness or connector.

OUTSIDE HANDLE LAMP CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

3.CHECK OUTSIDE HANDLE LAMP SHORT CIRCUIT

1. Disconnect BCM harness connector and front outside handle assembly LH/RH harness connectors.
2. Check continuity between BCM harness connector and ground.

BCM		Ground	Continuity
Connector	Terminal		
M19	65		No

Is the inspection result normal?

- YES >> Replace BCM. Refer to [BCS-79, "Removal and Installation"](#).
NO >> Repair or replace harness or connector.

A

B

C

D

E

F

G

H

I

J

K

INL

M

N

O

P

PUSH-BUTTON IGNITION SWITCH ILLUMINATION CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

PUSH-BUTTON IGNITION SWITCH ILLUMINATION CIRCUIT

Description

INFOID:0000000011134751

Provides the power supply and the ground to control the push-button ignition switch illumination.

Component Function Check

INFOID:0000000011134752

1.CHECK PUSH-BUTTON IGNITION SWITCH ILLUMINATION OPERATION

(B)CONSULT

1. Turn the ignition switch ON.
2. Select ENGINE SW ILLUMI of BCM (INTELLIGENT KEY) active test item.
3. With operating the test items, check that the push-button ignition switch illumination turns ON/OFF.

On : Push-button ignition switch illumination ON

Off : Push-button ignition switch illumination OFF

Does the push-button ignition switch illumination turn ON/OFF?

YES >> Push-button ignition switch illumination circuit is normal.

NO >> Refer to [INL-58, "Diagnosis Procedure"](#) .

Diagnosis Procedure

INFOID:0000000011134753

Regarding Wiring Diagram information, refer to [INL-29, "Wiring Diagram"](#).

1.CHECK PUSH-BUTTON IGNITION SWITCH ILLUMINATION OPERATION

(B)CONSULT

1. Turn the ignition switch ON.
2. Select ENGINE SW ILLUMI of BCM (INTELLIGENT KEY) active test item.
3. While operating the test item, check voltage between push-button ignition switch connector M17 terminal 5 and ground.

Terminals		Test item	Voltage (Approx.)
(+)	(-)		
Push-button ignition switch	Ground	ENGINE SW ILLUMI	5 V
Connector			
M17			0 V

Is the inspection result normal?

YES >> GO TO 4

NO >> GO TO 2

2.CHECK PUSH-BUTTON IGNITION SWITCH ILLUMINATION POWER SUPPLY OPEN CIRCUIT

1. Turn the ignition switch OFF.
2. Disconnect BCM harness connector M19 and the push-button ignition switch harness connector M17.
3. Check continuity between BCM harness connector M19 terminal 48 and the push-button ignition switch harness connector M17 terminal 5.

BCM		Push-button ignition switch		Continuity
Connector	Terminal	Connector	Terminal	
M19	48	M17	5	Yes

Is the inspection result normal?

YES >> GO TO 3

PUSH-BUTTON IGNITION SWITCH ILLUMINATION CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

NO >> Repair or replace harness or connectors.

3.CHECK PUSH-BUTTON IGNITION SWITCH ILLUMINATION POWER SUPPLY SHORT CIRCUIT

Check continuity between BCM harness connector M19 terminal 48 and ground.

BCM		Ground	Continuity
Connector	Terminal		
M19	48		No

Is the inspection result normal?

YES >> Replace BCM. Refer to [BCS-79, "Removal and Installation"](#).

NO >> Repair or replace harness or connectors.

4.CHECK PUSH-BUTTON IGNITION SWITCH ILLUMINATION GROUND CIRCUIT

1. Turn the ignition switch OFF.
2. Disconnect push-button ignition switch harness connector M17.
3. Check continuity between push-button ignition switch harness connector M17 terminal 6 and ground.

Push-button ignition switch		Ground	Continuity
Connector	Terminal		
M17	6		Yes

Is the inspection result normal?

YES >> Replace push-button ignition switch. Refer to [SEC-156, "Removal and Installation"](#).

NO >> GO TO 5

5.CHECK PUSH-BUTTON IGNITION SWITCH ILLUMINATION GROUND OPEN CIRCUIT

1. Disconnect BCM harness connector M80 and push-button ignition switch harness connector M17.
2. Check continuity between BCM harness connector M80 terminal 107 and push-button ignition switch harness connector M17 terminal 6.

Push-button ignition switch		BCM		Continuity
Connector	Terminal	Connector	Terminal	
M17	6	M80	107	Yes

Is the inspection result normal?

YES >> Replace BCM. Refer to [BCS-79, "Removal and Installation"](#).

NO >> Repair or replace harness or connectors.

A

B

C

D

E

F

G

H

J

K

INL

M

N

O

P

INTERIOR LIGHTING SYSTEM SYMPTOMS

< SYMPTOM DIAGNOSIS >

SYMPTOM DIAGNOSIS

INTERIOR LIGHTING SYSTEM SYMPTOMS

Symptom Table

INFOID:0000000011134754

CAUTION:

Perform the self-diagnosis with CONSULT before the symptom diagnosis. Perform the trouble diagnosis if any DTC is detected.

Symptom	Possible cause	Inspection item
All the following lamps do not turn ON: <ul style="list-style-type: none">• Front room/map lamp• Personal lamp 2nd row• Foot lamp LH/RH• Step lamp LH/RH• Cargo lamp• Vanity lamp LH/RH• Front outside handle assembly LH/RH	<ul style="list-style-type: none">• Harness between BCM and each interior room lamp• BCM	Battery saver output/power supply circuit Refer to INL-50 .
<ul style="list-style-type: none">• Interior room lamp does not turn ON even though the door is open. (It turns ON when turning the interior room lamp ON.)• Interior room lamp does not turn OFF even though the door is closed.	<ul style="list-style-type: none">• Harness between BCM and each door switch• Harness between BCM and each interior room lamp• BCM	Door switch circuit Refer to DLK-171 . Interior room lamp control circuit Refer to INL-52 .
Interior room lamp timer does not activate. (It turns ON/ OFF when the door opens/closes.)	—	Check the interior room lamp setting. Refer to INL-11 .
<ul style="list-style-type: none">• Front outside handle assembly lamp does not turn ON even though the door is open.• Front outside handle assembly lamp does not turn OFF even though the door is closed.	<ul style="list-style-type: none">• Harness between BCM and each door switch• Harness between BCM and Front outside handle assembly lamp.• BCM	Door switch circuit Refer to DLK-171 . Front outside handle assembly lamp circuit Refer to INL-56 .
<ul style="list-style-type: none">• Step lamps (ALL) do not turn ON.• Step lamps (ALL) do not turn OFF.	<ul style="list-style-type: none">• Harness between BCM and each step lamp• BCM	Door switch circuit Refer to DLK-171 . Step lamp circuit Refer to INL-54 .
Push-button ignition switch illumination does not illuminate.	<ul style="list-style-type: none">• Harness between BCM and push-button ignition switch• BCM	Push-button ignition switch illumination circuit Refer to INL-58 .
Interior room lamp battery saver does not activate.	BCM	Replace BCM. Refer to BCS-79 .


FRONT ROOM/MAP LAMP

< REMOVAL AND INSTALLATION >

REMOVAL AND INSTALLATION FRONT ROOM/MAP LAMP

Exploded View

INFOID:0000000011134755

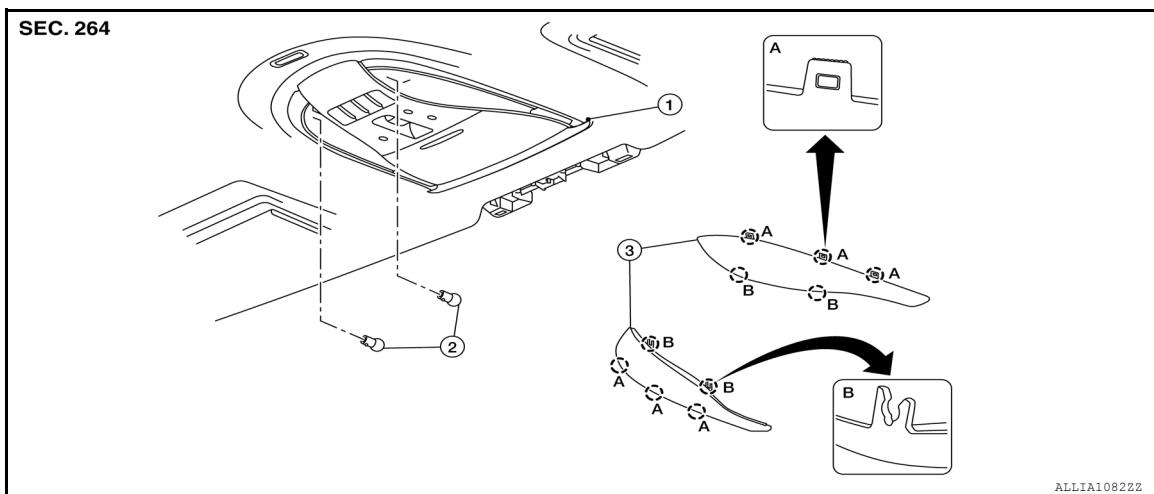

1. Front room/map lamp assembly

2. Bulb

3. Lens

◎ Pawl

Removal and Installation


INFOID:0000000011134756

CAUTION:

Do not attempt to separate the front room/map lamp assembly from the headlining prior to removing headlining, or damage to the components may occur.

REMOVAL

1. Remove the headlining. Refer to [INT-27, "Removal and Installation"](#).
2. Remove the two bracket screws, then remove the front room/map lamp assembly bracket (1) from front room/map assembly (3) and position aside.
3. Disconnect the harness connectors from front room/map lamp assembly (3).
4. Release the nine back plate pawls (A) using a suitable tool and remove the front room/map lamp assembly (3).
◎ Pawl
5. Remove the front room/map lamp back plate (2) from the headlining.

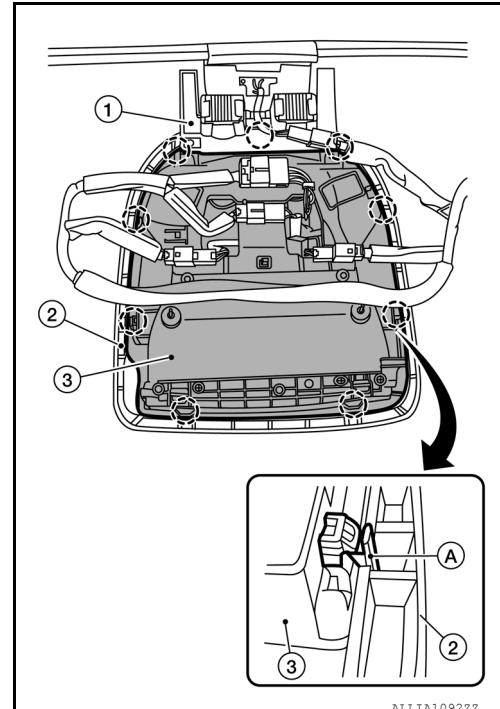

INSTALLATION

FRONT ROOM/MAP LAMP

< REMOVAL AND INSTALLATION >

Installation is in the reverse order of removal.

Bulb or Lens Replacement

INFOID:000000011134757

WARNING:

Do not touch the glass surface of a bulb while it is lit or right after being turned OFF to prevent burns.

CAUTION:

- Do not touch the glass of bulb directly by hand. Keep grease and other oily substances away from bulb surface.
- Do not leave bulb out of lamp reflector for a long time because dust, moisture, smoke, etc. may affect the performance of lamp.

1. Insert a suitable tool into the gap between the lens and the front room/map lamp assembly, then gently release the lens pawls and remove the lens.
2. Push the bulb inward slightly and twist it counterclockwise to remove from the front room/map lamp assembly.
3. Push the bulb in and twist clockwise to install.
4. Install the front room/map lamp lens.


VANITY LAMP

< REMOVAL AND INSTALLATION >

VANITY LAMP

Exploded View

INFOID:0000000011134758

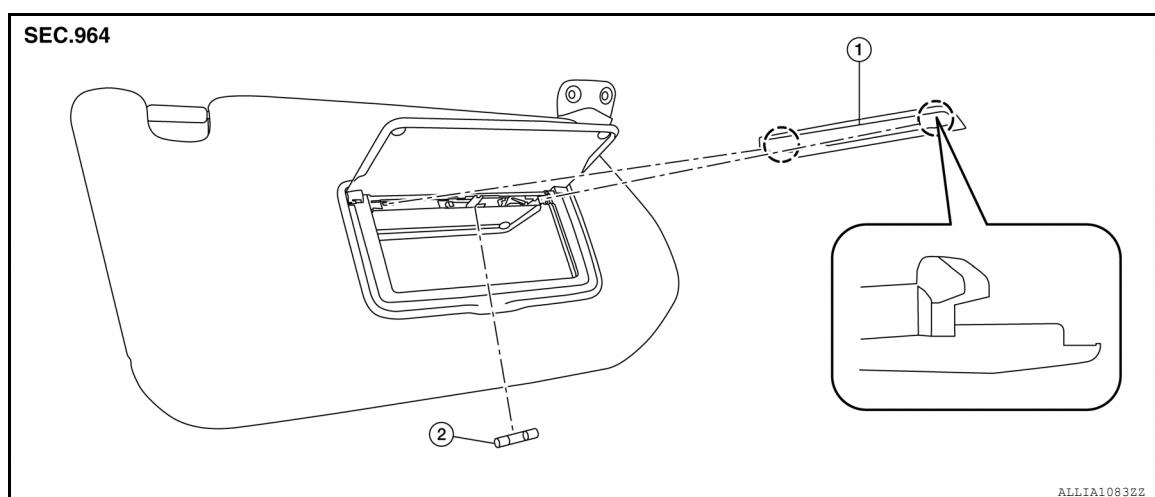

1. Lens

2. Bulb

Pawl

Removal and Installation

INFOID:0000000011134759

CAUTION:

Do not attempt to separate the vanity lamp from the sun visor or damage to the components may occur.

The vanity lamp is replaced as part of the sun visor. Refer to [INT-27, "Removal and Installation"](#).

Bulb or Lens Replacement

INFOID:0000000011134760

WARNING:

Do not touch the glass surface of a bulb while it is lit or right after being turned OFF to prevent burns.

CAUTION:

- Do not touch the glass of bulb directly by hand. Keep grease and other oily substances away from bulb surface.
- Do not leave bulb out of lamp reflector for a long time because dust, moisture, smoke, etc. may affect the performance of lamp.
- Do not attempt to separate the vanity lamp from the sun visor or damage to the components may occur.

1. Insert a suitable tool into the gap between the lens and vanity lamp, then gently release the lens pawls and remove the lens.
2. Grasp the bulb and pull straight out of the vanity lamp to remove.
3. Install vanity lamp bulb to vanity lamp.
4. Install the vanity lamp lens.

A

B

C

D

E

F

G

H

I

J

K

INL

M

N

O

P


GLOVE BOX LAMP

< REMOVAL AND INSTALLATION >

GLOVE BOX LAMP

Exploded View

INFOID:0000000011134761

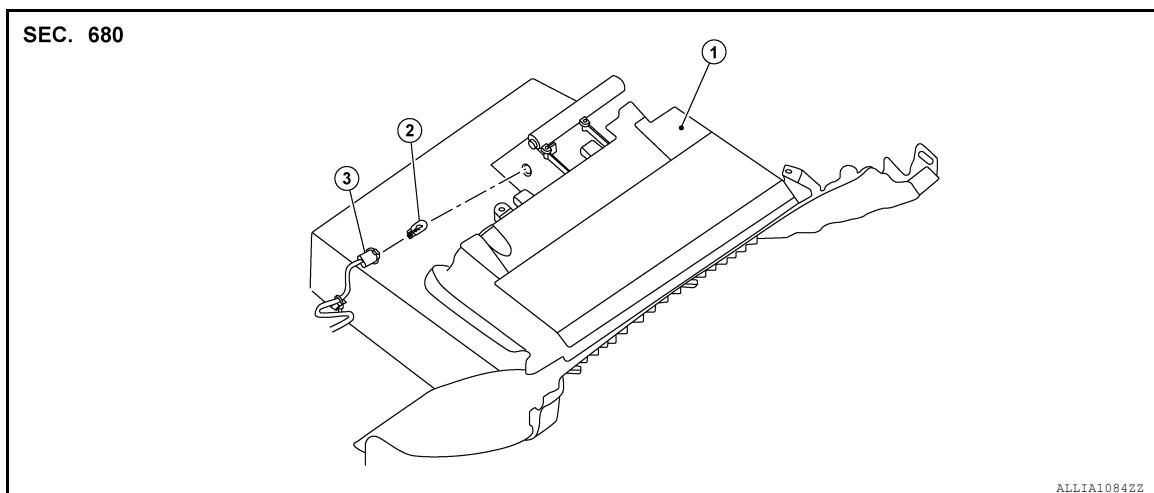

1. Glove box assembly

2. Bulb

3. Bulb socket

Bulb Replacement

INFOID:0000000011134762

WARNING:

Do not touch the glass surface of a bulb while it is lit or right after being turned OFF to prevent burns.

CAUTION:

- Do not touch the glass of bulb directly by hand. Keep grease and other oily substances away from bulb surface.
- Do not leave bulb out of lamp reflector for a long time because dust, moisture, smoke, etc. may affect the performance of lamp.

1. Remove glove box assembly. Refer to [IP-26, "Removal and Installation"](#).
2. Rotate the bulb socket counterclockwise and remove from glove box assembly.
3. Grasp the bulb and pull straight out of the bulb socket to remove.
4. Install glove box lamp bulb to bulb socket.
5. Insert bulb socket into glove box assembly and rotate clockwise to lock in position.
6. Install glove box assembly. Refer to [IP-26, "Removal and Installation"](#).


FOOT LAMP

< REMOVAL AND INSTALLATION >

FOOT LAMP DRIVER SIDE

DRIVER SIDE : Exploded View

INFOID:0000000011134763

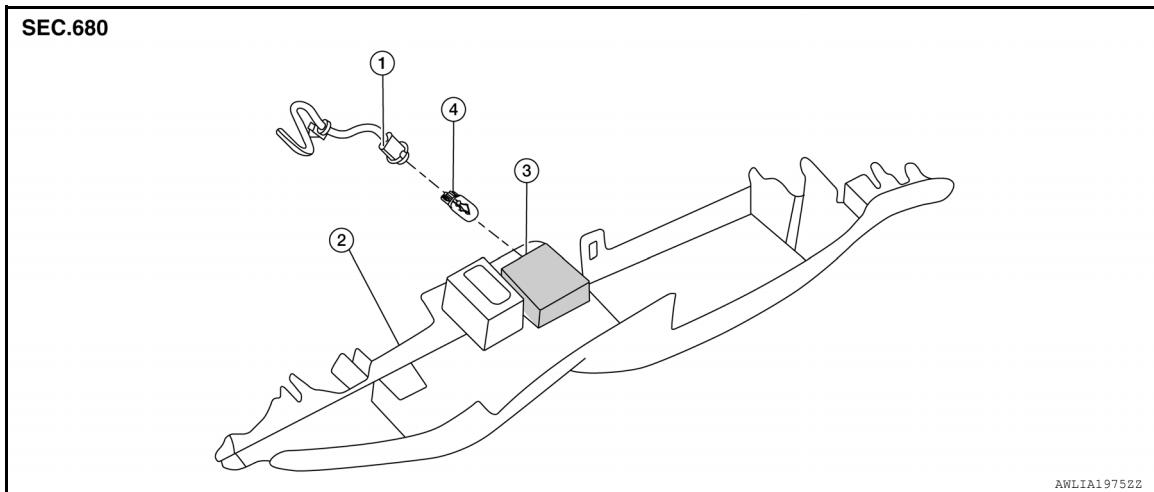

- 1. Bulb socket
- 2. Instrument lower panel LH
- 3. Foot lamp housing
- 4. Bulb

DRIVER SIDE : Removal and Installation

INFOID:0000000011134764

The foot lamp housing is replaced as part of the instrument lower panel LH. Refer to [IP-25, "Removal and Installation"](#).

DRIVER SIDE : Bulb Replacement

INFOID:0000000011134765

WARNING:

Do not touch the glass surface of a bulb while it is lit or right after being turned OFF to prevent burns.

CAUTION:

- Do not touch the glass of bulb directly by hand. Keep grease and other oily substances away from bulb surface.
- Do not leave bulb out of lamp reflector for a long time because dust, moisture, smoke, etc. may affect the performance of lamp.

1. Remove instrument lower panel LH. Refer to [IP-25, "Removal and Installation"](#).
2. Rotate the bulb socket counterclockwise and remove from foot lamp housing.
3. Grasp the bulb and pull straight out of the bulb socket to remove.
4. Install foot lamp bulb to bulb socket.
5. Insert bulb socket into foot lamp housing and rotate clockwise to lock in position.
6. Install the instrument lower panel LH. Refer to [IP-25, "Removal and Installation"](#).

PASSENGER SIDE

A

B

C

D

E

F

G

H

I

J

K

INL

M

N

O


P

FOOT LAMP

< REMOVAL AND INSTALLATION >

PASSENGER SIDE : Exploded View

INFOID:000000011134766

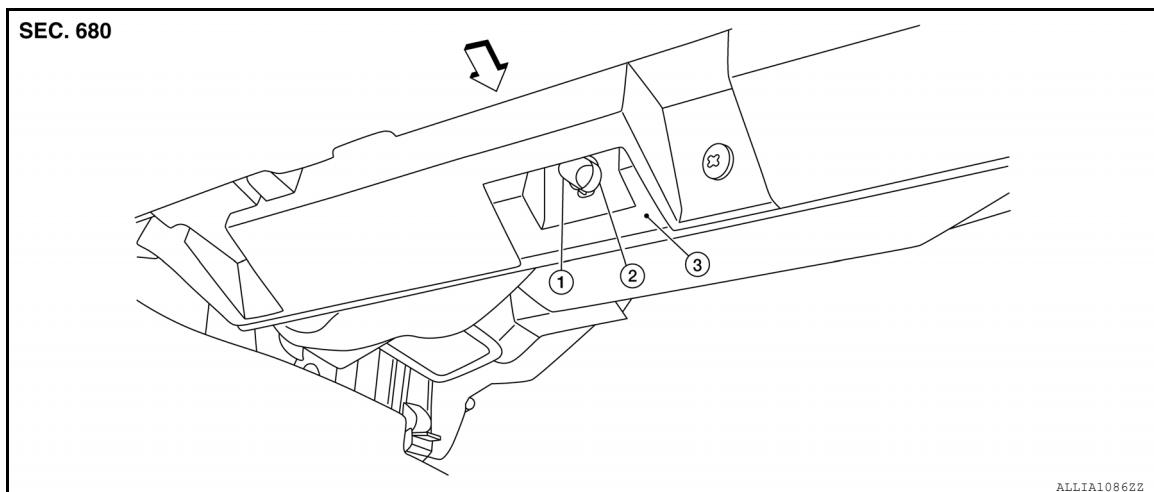

1. Bulb

2. Bulb socket

3. Instrument panel substrate

Front

PASSENGER SIDE : Bulb Replacement

INFOID:000000011134767

WARNING:

Do not touch the glass surface of a bulb while it is lit or right after being turned OFF to prevent burns.

CAUTION:

- Do not touch the glass of bulb directly by hand. Keep grease and other oily substances away from bulb surface.
- Do not leave bulb out of lamp reflector for a long time because dust, moisture, smoke, etc. may affect the performance of lamp.

1. Reach under instrument panel on RH side, locate foot lamp socket, rotate the bulb socket and remove from instrument panel substrate.
2. Grasp the bulb and pull straight out of the bulb socket to remove.
3. Install foot lamp bulb to bulb socket.
4. Insert bulb socket into instrument panel substrate and rotate to lock in position.


STEP LAMP

< REMOVAL AND INSTALLATION >

STEP LAMP

Exploded View

INFOID:0000000011134768

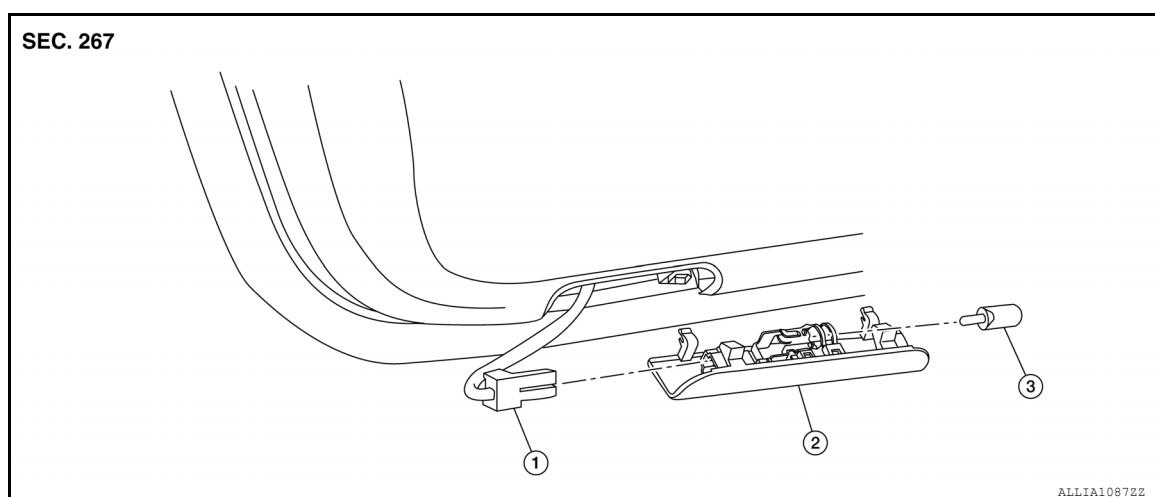

1. Step lamp harness connector

2. Step lamp

3. Bulb

Removal and Installation

INFOID:0000000011134769

REMOVAL

1. Insert a suitable tool into the gap between the step lamp and front door finisher and gently release the pawls and step lamp.
2. Disconnect the harness connector from the step lamp and remove.

INSTALLATION

Installation is in the reverse order of removal.

Bulb or Lens Replacement

INFOID:0000000011134770

WARNING:

Do not touch the glass surface of a bulb while it is lit or right after being turned OFF to prevent burns.

CAUTION:

- Do not touch the glass of bulb directly by hand. Keep grease and other oily substances away from bulb surface.
- Do not leave bulb out of lamp reflector for a long time because dust, moisture, smoke, etc. may affect the performance of lamp.

INL

1. Remove the step lamp. Refer to [INL-67, "Removal and Installation"](#).
2. Grasp the bulb and pull straight out from the step lamp to remove.
3. Install the step lamp bulb to step lamp.
4. Install the step lamp. Refer to [INL-67, "Removal and Installation"](#)

M

N

O

P


PERSONAL LAMP

< REMOVAL AND INSTALLATION >

PERSONAL LAMP

Exploded View

INFOID:0000000011134771

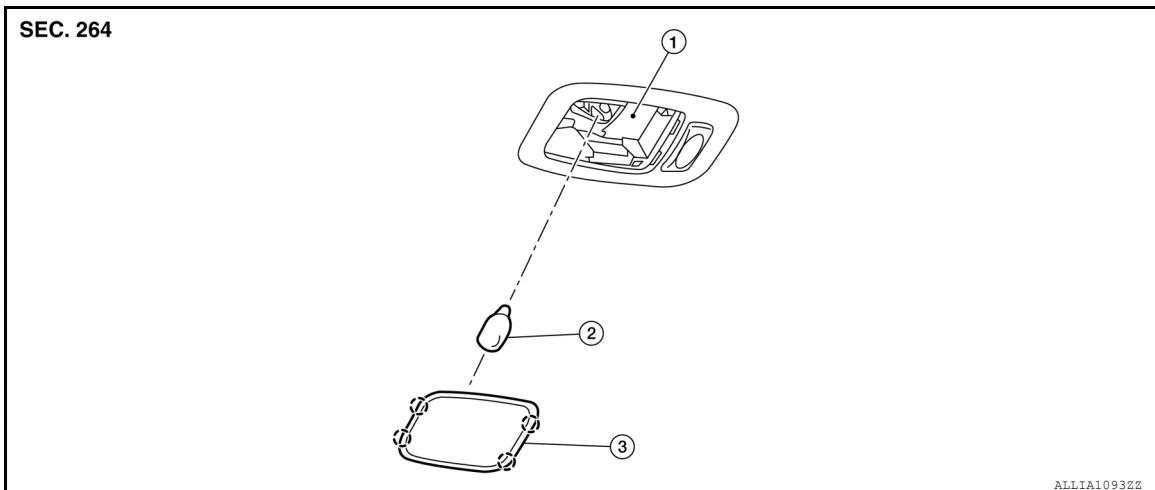

1. Personal lamp

2. Bulb

3. Lens


(○) Pawl

Removal and Installation

INFOID:0000000011134772

REMOVAL

1. Remove the headlining. Refer to [INT-27, "Removal and Installation"](#).
2. Insert a suitable tool into the gap between the headlining and personal lamp (1), release personal lamp pawls and remove.
(○) Pawl

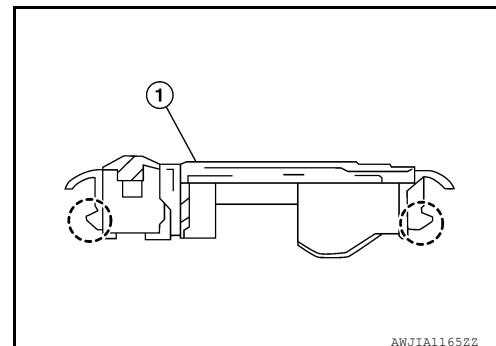

INSTALLATION

Installation is in the reverse order of removal.

Bulb or Lens Replacement

INFOID:0000000011134773

WARNING:

Do not touch the glass surface of a bulb while it is lit or right after being turned OFF to prevent burns.

CAUTION:

- Do not touch the glass of bulb directly by hand. Keep grease and other oily substances away from bulb surface.
- Do not leave bulb out of lamp reflector for a long time because dust, moisture, smoke, etc. may affect the performance of lamp.
- Do not attempt to separate the personal lamp from the headlining or damage may occur.

1. Insert a suitable tool into the gap between the lens and personal lamp, then gently release the lens pawls and remove the lens.
2. Grasp the bulb and pull straight out from its socket to remove.
3. Install personal lamp bulb to personal lamp.
4. Install the personal lamp lens.


CARGO LAMP

< REMOVAL AND INSTALLATION >

CARGO LAMP

Exploded View

INFOID:0000000011134774

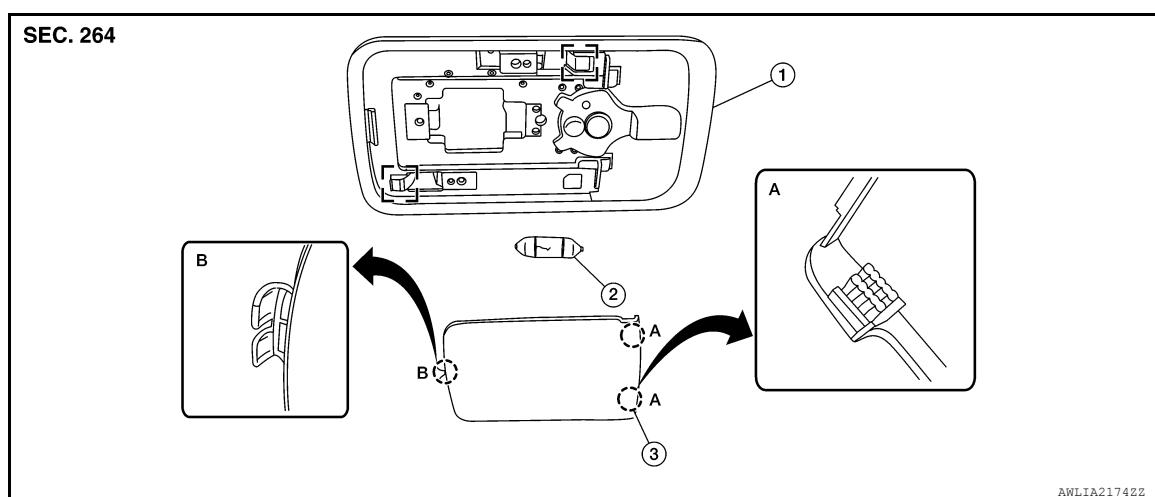

- | | | |
|---|---|---------|
| 1. Cargo lamp | 2. Bulb | 3. Lens |
| A. Pawls to release first for lens re-
moval | B. Pawl to install first for lens in-
stallation | Pawl |
| [] Metal clip | | |

Removal and Installation

INFOID:0000000011134775

REMOVAL

1. Insert a suitable tool into the gap between the headlining and cargo lamp and gently release the metal clips and the cargo lamp.
2. Disconnect the harness connector from cargo lamp and remove.

INSTALLATION

Installation is in the reverse order of removal.

Bulb or Lens Replacement

INFOID:0000000011134776

INL

WARNING:

Do not touch the glass surface of a bulb while it is lit or right after being turned OFF to prevent burns.

CAUTION:

- Do not touch the glass of bulb directly by hand. Keep grease and other oily substances away from bulb surface.
- Do not leave bulb out of lamp reflector for a long time because dust, moisture, smoke, etc. may affect the performance of lamp.
- Release and insert pawl as indicated in exploded view or damage may occur.

1. Beginning at the switch end, insert a suitable tool into the gap between the lens and cargo lamp, then gently release the lens pawls and remove the lens.
2. Push the tab to release one bulb end, then grasp the bulb and pull out the second end from its socket to remove.
3. Install cargo lamp bulb to cargo lamp.
4. Insert pawl at the end opposite the switch first, then insert the remaining two pawls to lock the lens in position.

ILLUMINATION CONTROL SWITCH

< REMOVAL AND INSTALLATION >

ILLUMINATION CONTROL SWITCH

Removal and Installation

INFOID:000000011134777

The illumination control switch is serviced as part of the meter control switch. Refer to [MWI-97, "Removal and Installation".](#)

SERVICE DATA AND SPECIFICATIONS (SDS)

< SERVICE DATA AND SPECIFICATIONS (SDS)

SERVICE DATA AND SPECIFICATIONS (SDS)

SERVICE DATA AND SPECIFICATIONS (SDS)

Bulb Specifications

INFOID:0000000011134778

Item	Wattage (W)*
Front room/map lamp	8
Push-button ignition switch illumination	—
Vanity lamp	2
Glove box lamp	8
Foot lamp	3.4
Step lamp	3.4
Personal lamp	8
Cargo lamp	8

*: Always check with the Parts Department for the latest parts information.

A

B

C

D

E

F

G

H

I

J

K

INL

M

N

O

P