

SECTION **PG**

POWER SUPPLY, GROUND & CIRCUIT ELEMENTS

CONTENTS

PRECAUTION	3	FUSE, FUSIBLE LINK AND RELAY BOX	85
PRECAUTIONS	3	Terminal Arrangement	85
Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	3	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)	89
Precaution for Power Generation Voltage Variable Control System	3	IPDM E/R Terminal Arrangement	89
PREPARATION	4	BASIC INSPECTION	90
PREPARATION	4	BATTERY	90
Special Service Tools	4	How to Handle Battery	90
Commercial Service Tool	4	Work Flow	90
SYSTEM DESCRIPTION	5	INSPECTION AND ADJUSTMENT	93
ELECTRICAL UNITS LOCATION	5	ADDITIONAL SERVICE WHEN REMOVING BATTERY NEGATIVE TERMINAL	93
Electrical Units Location	5	ADDITIONAL SERVICE WHEN REMOVING BATTERY NEGATIVE TERMINAL : Special Repair Requirement	93
COMPONENT PARTS	11	FUSE INSPECTION	94
Circuit Breaker (Built Into BCM)	11	How To Check	94
Circuit Breaker (External to BCM)	11	FUSIBLE LINK INSPECTION	98
Harness Connector	11	Fusible Link	98
Standardized Relay	14	REMOVAL AND INSTALLATION	99
WIRING DIAGRAM	17	BATTERY	99
POWER SUPPLY ROUTING CIRCUIT	17	Exploded View	99
Wiring Diagram - BATTERY POWER SUPPLY -	17	Removal and Installation	99
Wiring Diagram - ACCESSORY POWER SUPPLY -	26	BATTERY TRAY	101
Wiring Diagram - IGNITION POWER SUPPLY -	30	Removal and Installation	101
GROUND	42	BATTERY TERMINAL WITH FUSIBLE LINK .	102
Ground Distribution	42	Exploded View	102
HARNESS	57	Removal and Installation	102
Harness Layout	57	BATTERY CURRENT SENSOR	103
FUSE BLOCK - JUNCTION BOX (J/B)	84	Exploded View	103
Terminal Arrangement	84	Removal and Installation	103

A
B
C
D
E
F
G
H
I
J
K
L
PG
N
O
P

SERVICE DATA AND SPECIFICATIONS
(SDS)104

SERVICE DATA AND SPECIFICATIONS
(SDS)104
Battery 104

PRECAUTIONS

< PRECAUTION >

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000011134559

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes dual stage front air bag modules. The SRS system may only deploy one front air bag, depending on the severity of a collision and whether the front passenger seat is occupied. Information necessary to service the system safely is included in the SR and SB section of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SR section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

- When working near the Airbag Diagnosis Sensor Unit or other Airbag System sensors with the Ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the Ignition OFF, disconnect the battery and wait at least three minutes before performing any service.

Precaution for Power Generation Voltage Variable Control System

INFOID:000000011134560

CAUTION:

For this model, the battery current sensor that is installed to the battery cable at the negative terminal measures the charging/discharging current of the battery, and performs various controls. If the electrical component or the ground wire is connected directly to the battery terminal, the current other than that being measured with the battery current sensor is charging to or discharging from the battery. This condition causes the malfunction of the control, and then the battery discharge may occur. Do not connect the electrical component or the ground wire directly to the battery terminal.

A
B
C
D
E
F
G
H
I
J
K
L
PG
N
O
P

PREPARATION

< PREPARATION >


PREPARATION

PREPARATION

Special Service Tools

INFOID:000000011134561

The actual shape of the tools may differ from those illustrated here.

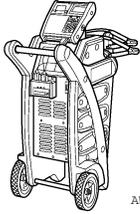Tool number (TechMate No.) Tool name	Description
<p>— (—) Model GR8-1200 NI Multitasking battery and electrical diagnostic station</p>  <p style="text-align: right; font-size: small;">AWIIA12392Z</p>	<p>Tests batteries, starting and charging systems and charges batteries. For operating instructions, refer to diagnostic station instruction manual.</p>
<p>— (—) Model EXP-800 NI Battery and electrical diagnostic analyzer</p>  <p style="text-align: right; font-size: small;">JSMIA08062Z</p>	<p>Tests batteries and charging systems. For operating instructions, refer to diagnostic analyzer instruction manual.</p>

Commercial Service Tool

INFOID:000000011134562

Tool name	Description
<p>Power tool</p>  <p style="text-align: right; font-size: small;">PIIB1407E</p>	<p>Loosening nuts, screws and bolts</p>

ELECTRICAL UNITS LOCATION

< SYSTEM DESCRIPTION >




SYSTEM DESCRIPTION

ELECTRICAL UNITS LOCATION

Electrical Units Location

INFOID:000000011134574

ENGINE COMPARTMENT

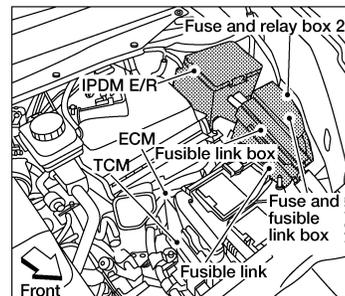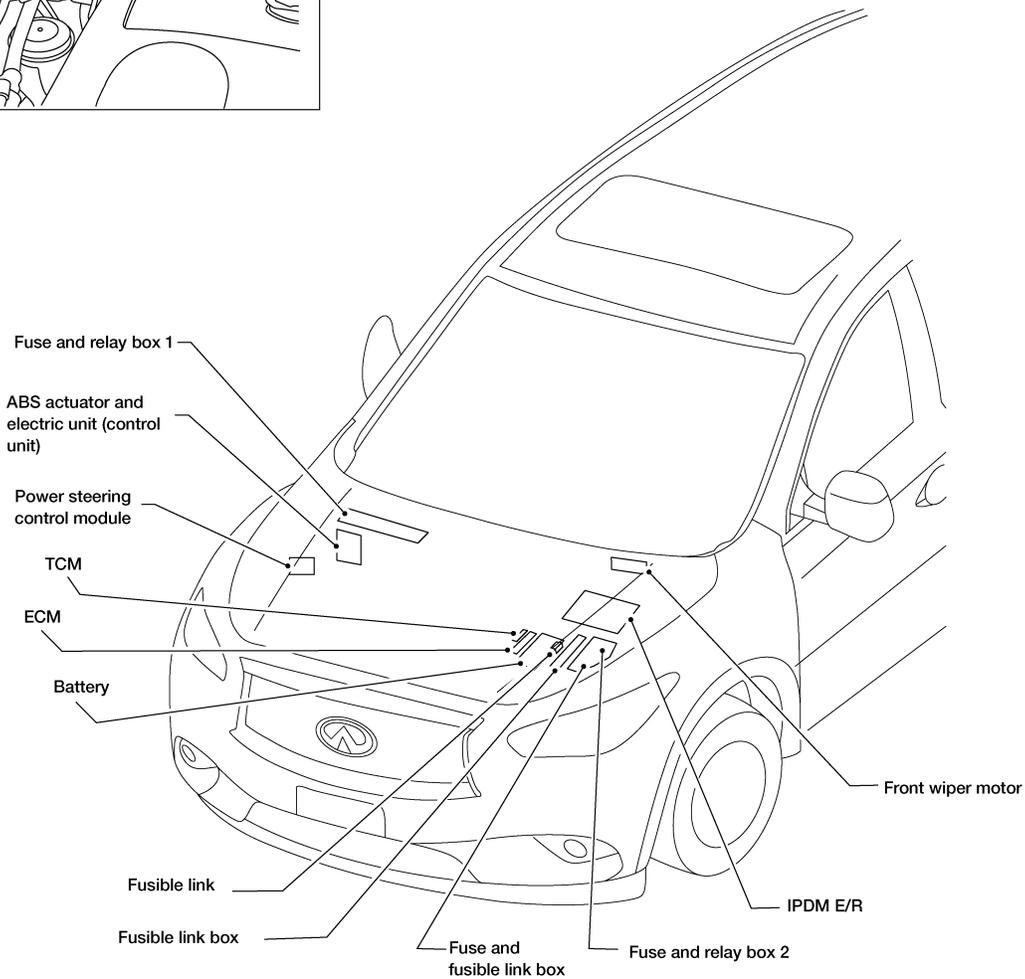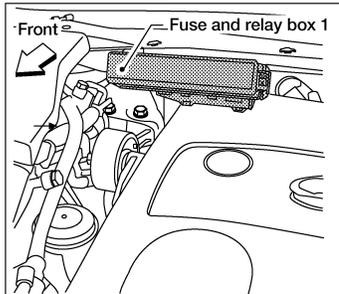


ABMIA6858GB

A
B
C
D
E
F
G
H
I
J
K
L
PG
N
O
P


ELECTRICAL UNITS LOCATION

< SYSTEM DESCRIPTION >




PASSENGER COMPARTMENT

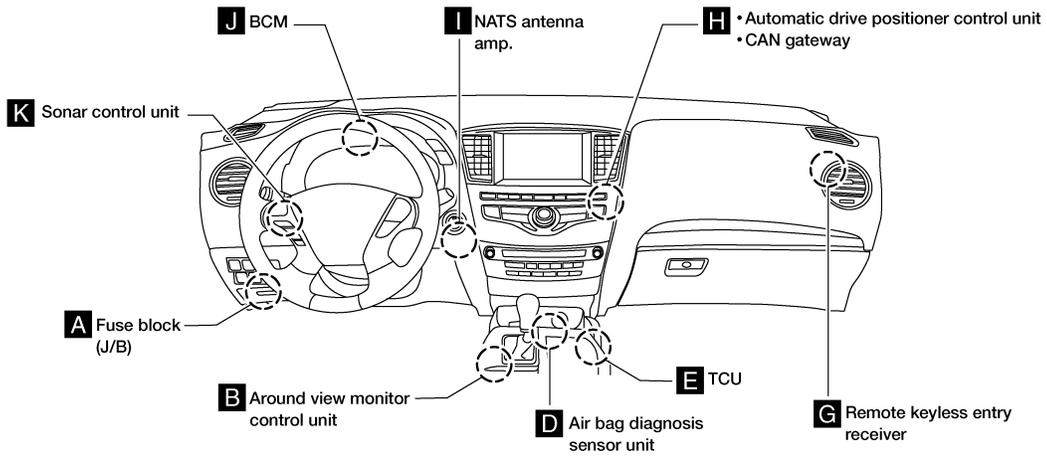

C • Driver seat control unit
• Climate controlled seat control unit (driver seat)

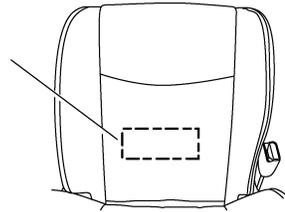









F • Climate controlled seat control unit (passenger seat)
• Occupant classification system control unit

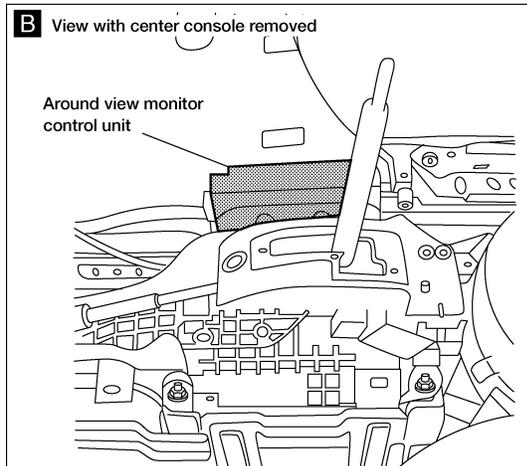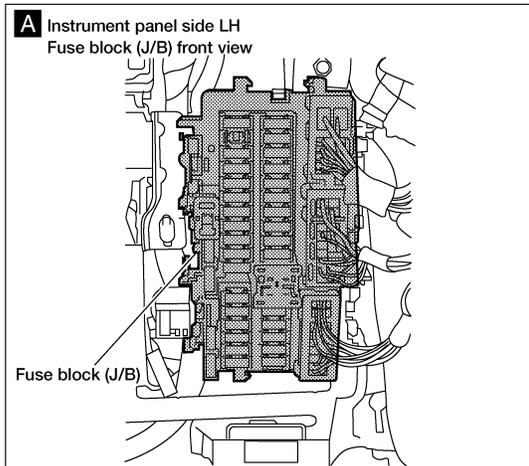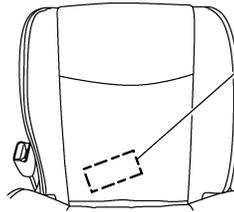

ABMIA6859GB

ELECTRICAL UNITS LOCATION

< SYSTEM DESCRIPTION >

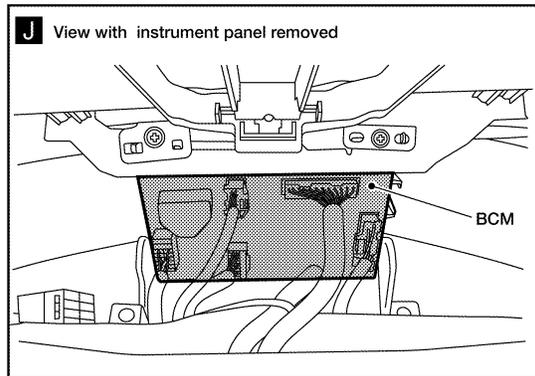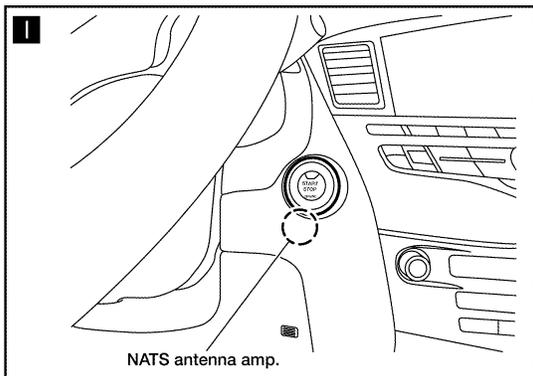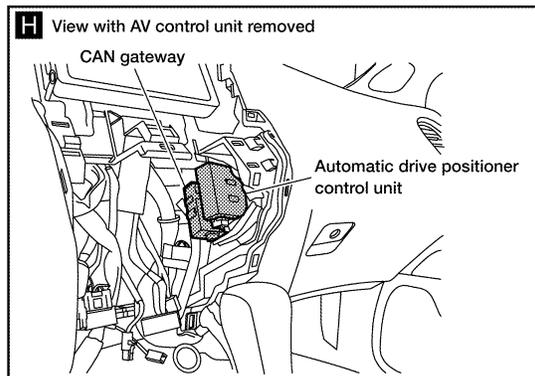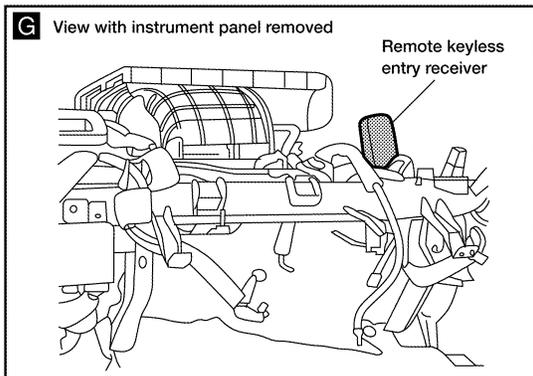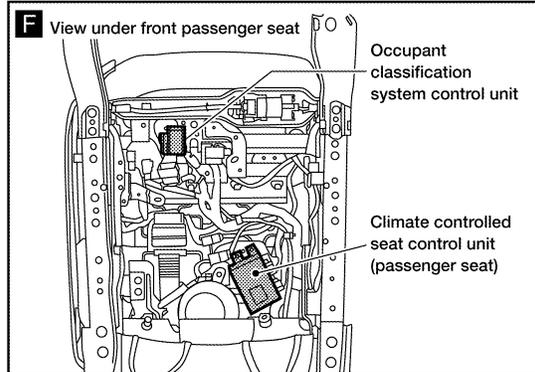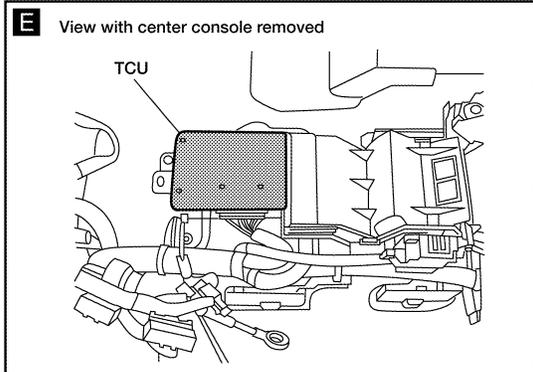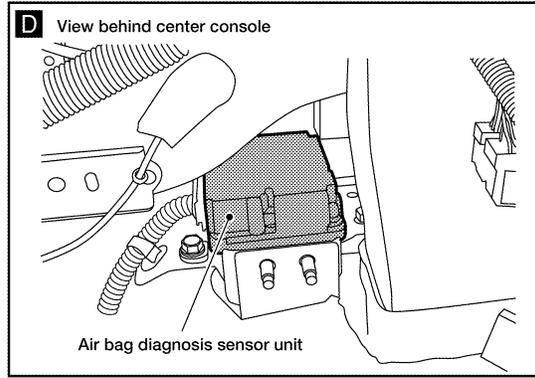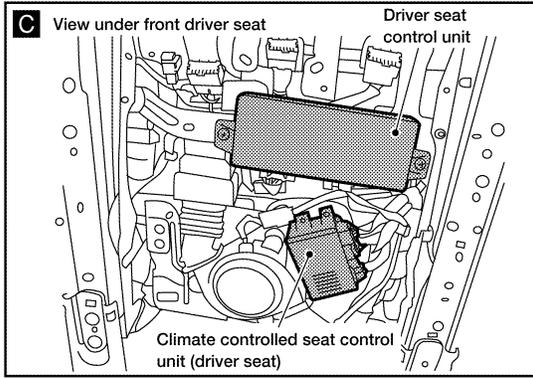


AAMIA3075GB

A
B
C
D
E
F
G
H
I
J
K
L
PG
N
O
P

ELECTRICAL UNITS LOCATION




< SYSTEM DESCRIPTION >

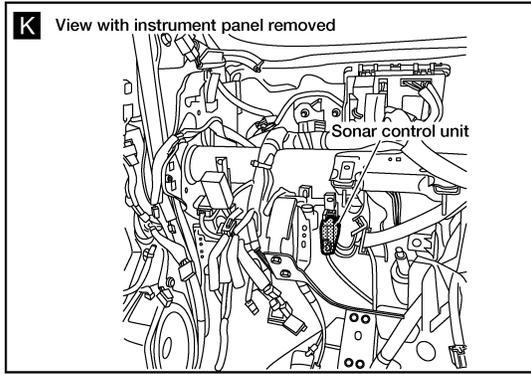

ABMIA6413GB

ELECTRICAL UNITS LOCATION

< SYSTEM DESCRIPTION >
LUGGAGE COMPARTMENT

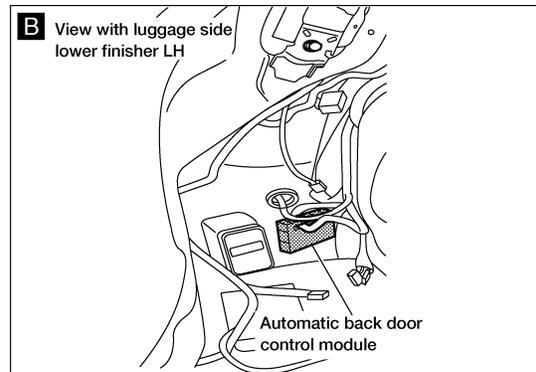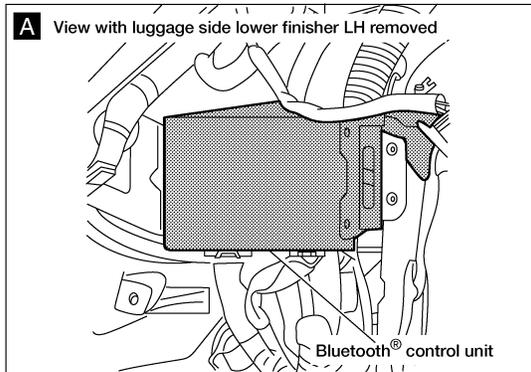
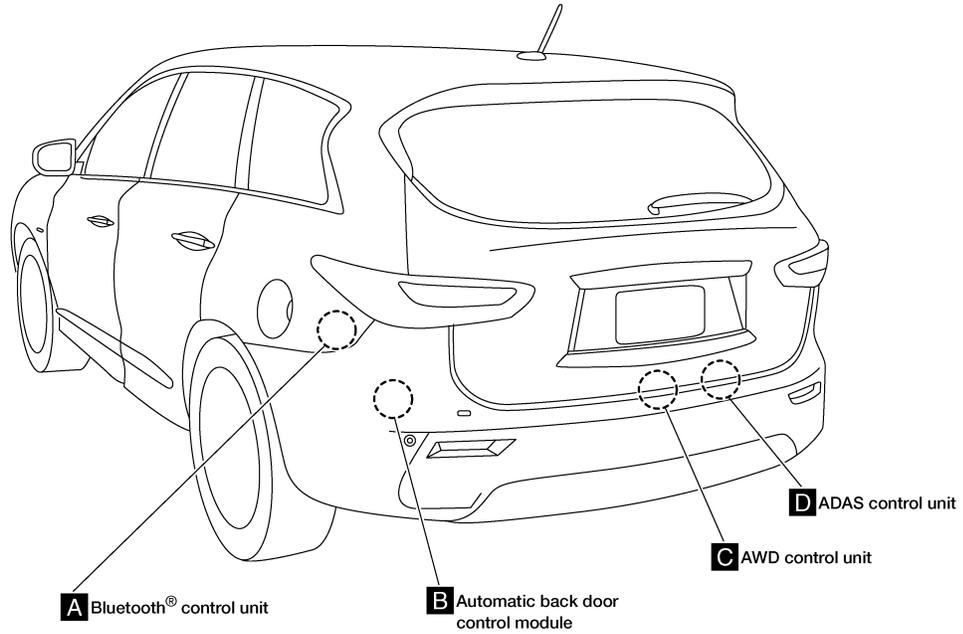


ABMIA6405GB

A
B
C
D
E
F
G
H
I
J
K
L
PG
N
O
P

ELECTRICAL UNITS LOCATION

< SYSTEM DESCRIPTION >

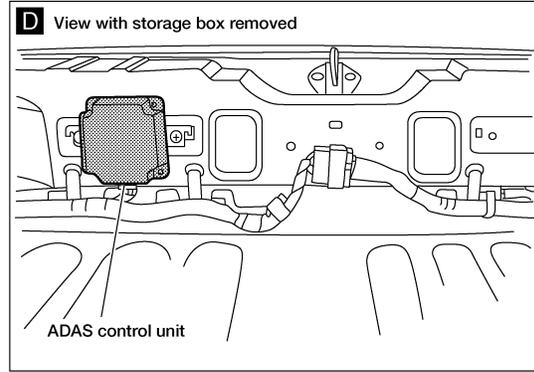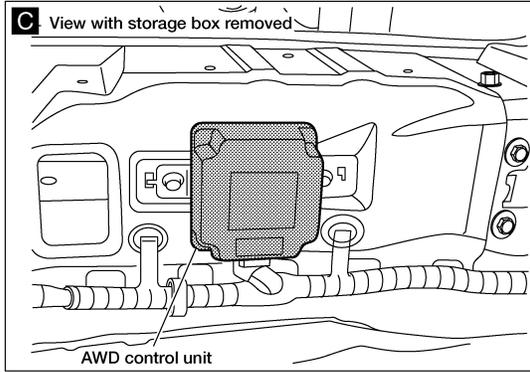

ABMIA6406GB

COMPONENT PARTS

< SYSTEM DESCRIPTION >

COMPONENT PARTS


Circuit Breaker (Built Into BCM)

INFOID:0000000011376633

For example, when current is 30A, the circuit is broken within 8 to 20 seconds.

This circuit breaker is used for the following systems:

- Power windows
- Power moonroof
- Power seat

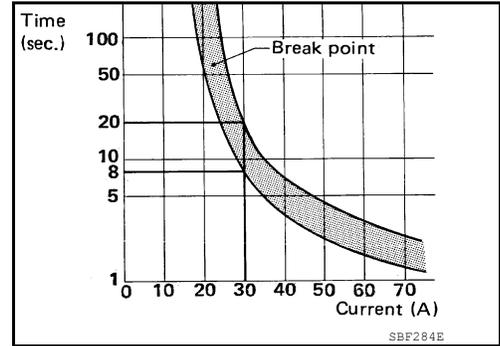


Circuit Breaker (External to BCM)

INFOID:0000000011376634

The PTC thermistor generates heat in response to current flow. The temperature (and resistance) of the thermistor element varies with current flow. Excessive current flow will cause the element's temperature to rise. When the temperature reaches a specified level, the electrical resistance will rise sharply to control the circuit current. Reduced current flow will cause the element to cool. Resistance falls accordingly and normal circuit current flow is allowed to resume.

This circuit breaker is used for the following systems:

- Power tilt-telescopic steering
- Power lumbar

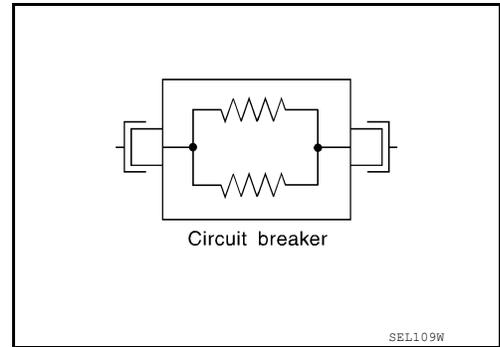

SEL109W

Harness Connector

INFOID:0000000011134565

HARNESS CONNECTOR (TAB-LOCKING TYPE)

- The tab-locking type connectors help prevent accidental looseness or disconnection.
- The tab-locking type connectors are disconnected by pushing or lifting the locking tab(s). Refer to the figure below.

CAUTION:

Never pull the harness or wires when disconnecting the connector.


A
B
C
D
E
F
G
H
I
J
K
L

PG

COMPONENT PARTS

< SYSTEM DESCRIPTION >

[Example]

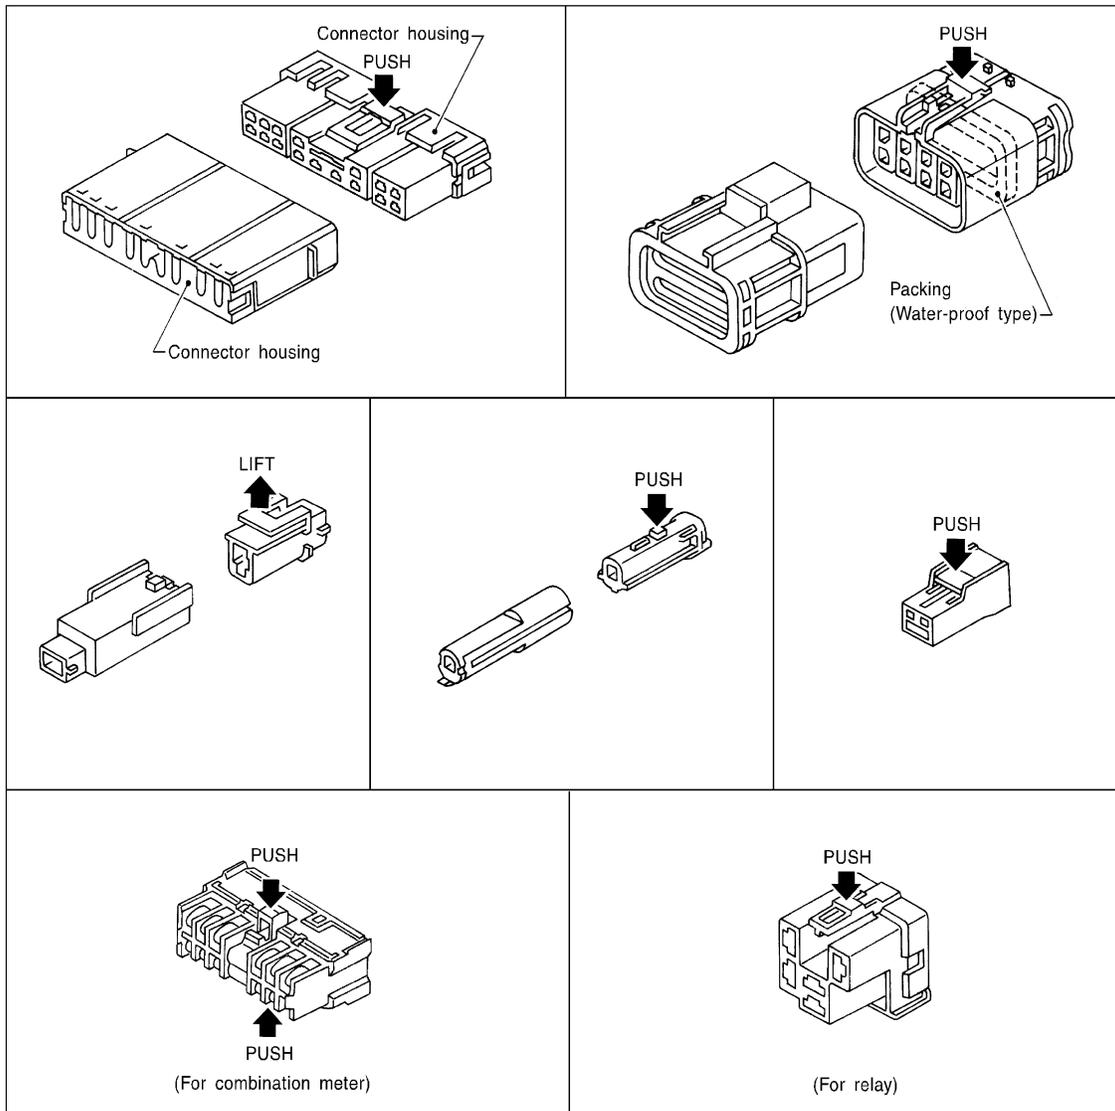

SEL769DA

HARNESS CONNECTOR (SLIDE-LOCKING TYPE)

- A new style slide-locking type connector is used on certain systems and components, especially those related to OBD.
- The slide-locking type connectors help prevent incomplete locking and accidental looseness or disconnection.
- The slide-locking type connectors are disconnected by pushing or pulling the slider. Refer to the figure below.


CAUTION:

- **Never pull the harness or wires when disconnecting the connector.**
- **Be careful not to damage the connector support bracket when disconnecting the connector.**

COMPONENT PARTS

< SYSTEM DESCRIPTION >

[Example]

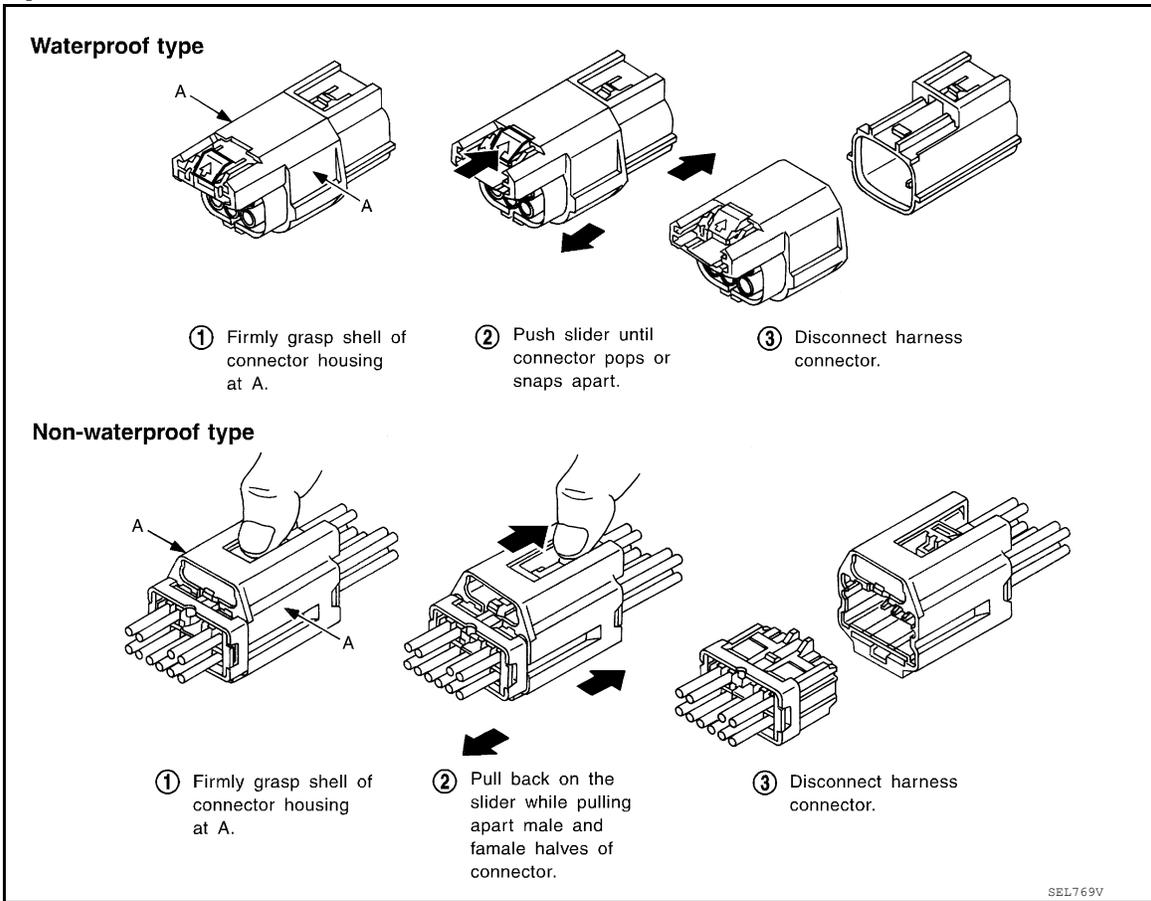

HARNESS CONNECTOR (LEVER LOCKING TYPE)

- Lever locking type harness connectors are used on certain control units and control modules such as ECM, ABS actuator and electric unit (control unit), etc.
- Lever locking type harness connectors are also used on super multiple junction (SMJ) connectors.
- Always confirm the lever is fully locked in place by moving the lever as far as it will go to ensure full connection.


CAUTION:

A
B
C
D
E
F
G
H
I
J
K
L
PG
N
O
P

COMPONENT PARTS

< SYSTEM DESCRIPTION >

Always confirm the lever is fully released (loosened) before attempting to disconnect or connect these connectors to avoid damage to the connector housing or terminals.

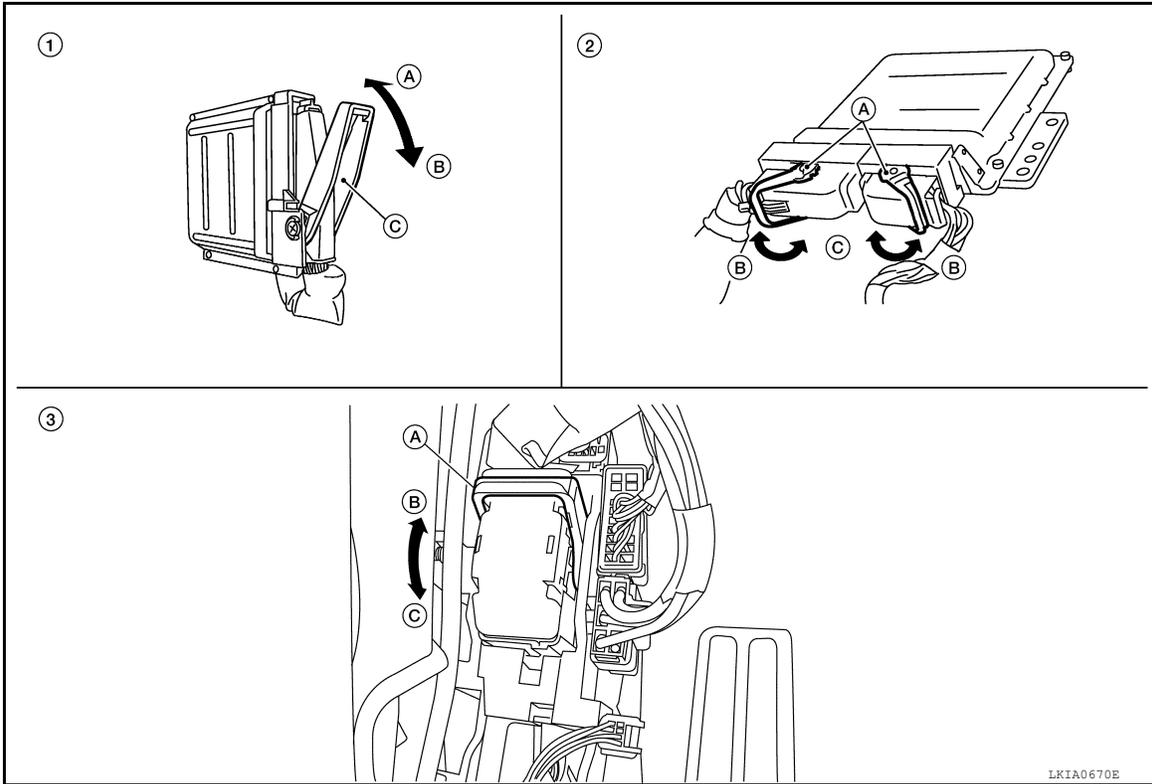


- | | | |
|--|--|---|
| <p>1. Control unit with single lever</p> <p>A. Fasten
B. Loosen
C. Lever</p> | <p>2. Control unit with dual levers</p> <p>A. Levers
B. Fasten
C. Loosen</p> | <p>3. SMJ connector</p> <p>A. Lever
B. Fasten
C. Loosen</p> |
|--|--|---|

Standardized Relay

INFOID:000000011134566

NORMAL OPEN, NORMAL CLOSED AND MIXED TYPE RELAYS

Relays can mainly be divided into three types: normal open, normal closed and mixed type relays.

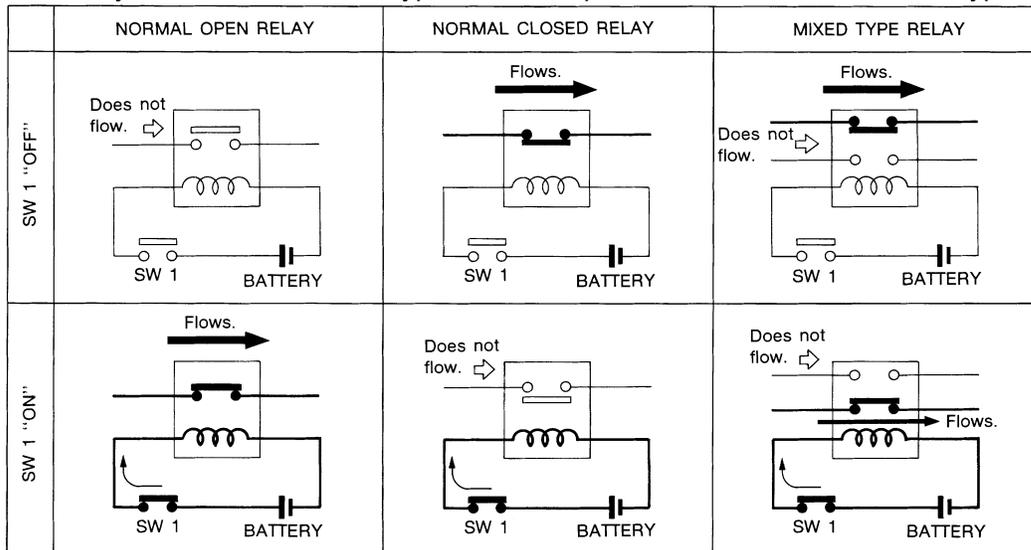

SEL881H


TYPE OF STANDARDIZED RELAYS

COMPONENT PARTS

< SYSTEM DESCRIPTION >

1M 1 Make
 1T 1 Transfer

2M 2 Make
 1M-1B 1 Make 1 Break














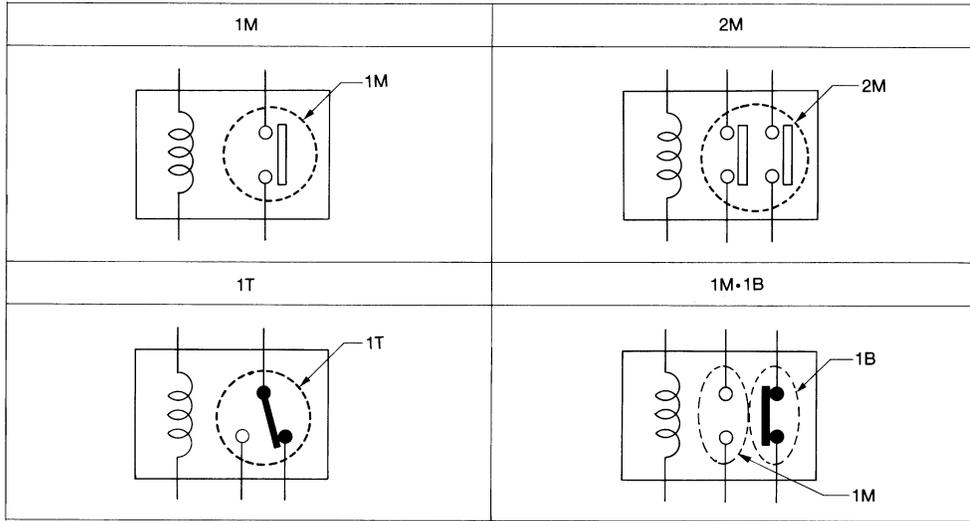


SEL882H

A
B
C
D
E
F
G
H
I
J
K
L
PG
N
O
P

COMPONENT PARTS

< SYSTEM DESCRIPTION >

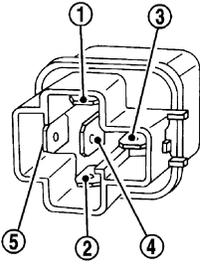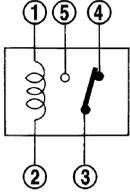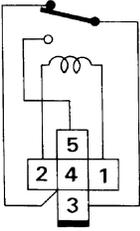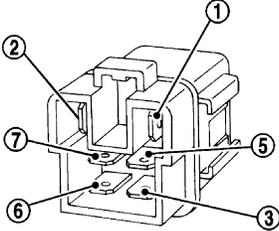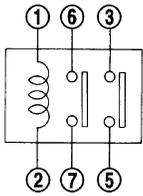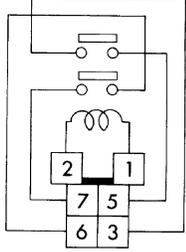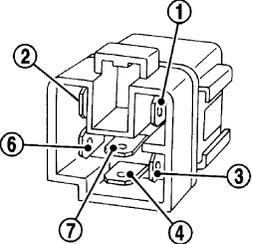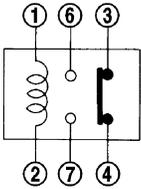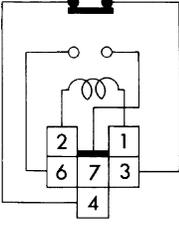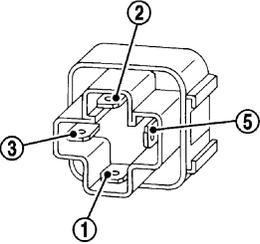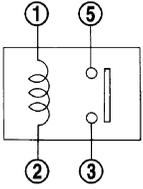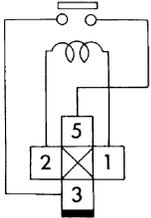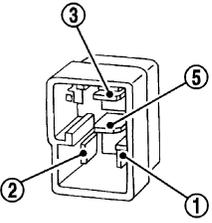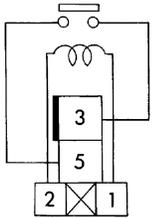
Type	Outer view	Circuit	Connector symbol and connection	Case color
1T				BLACK
2M				BROWN
1M*1B				GRAY
1M				BLUE
				

The arrangement of terminal numbers on the actual relays may differ from those shown above.

SEL188W

POWER SUPPLY ROUTING CIRCUIT


< WIRING DIAGRAM >

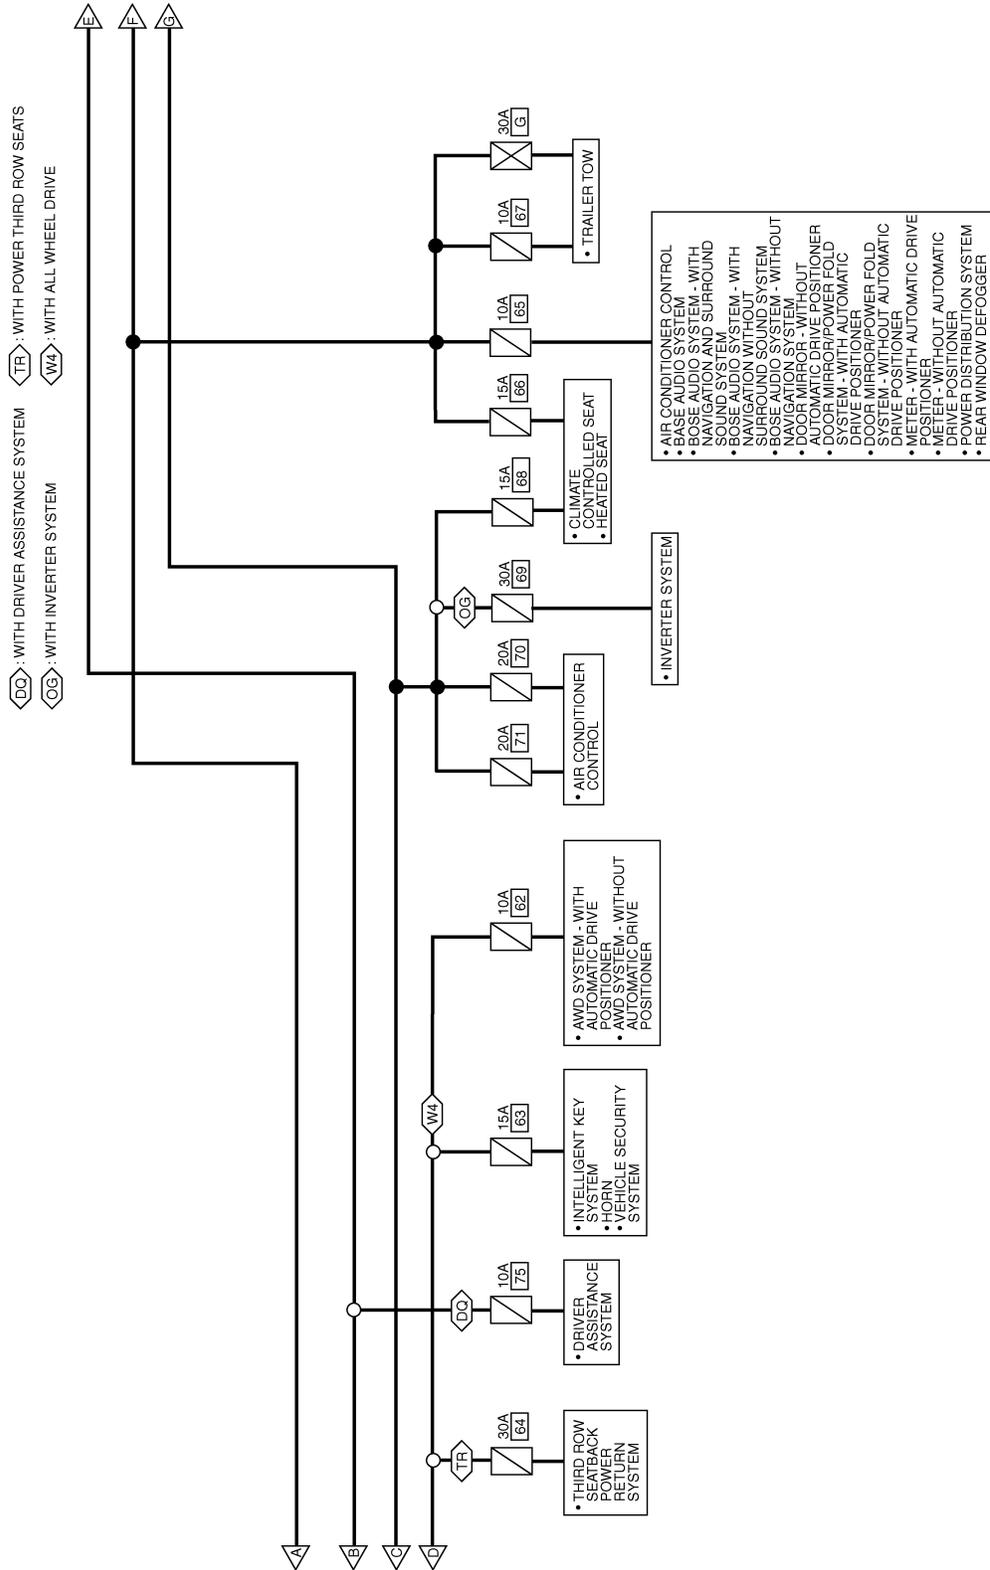

ABMWA2962GB

POWER SUPPLY ROUTING CIRCUIT

< WIRING DIAGRAM >

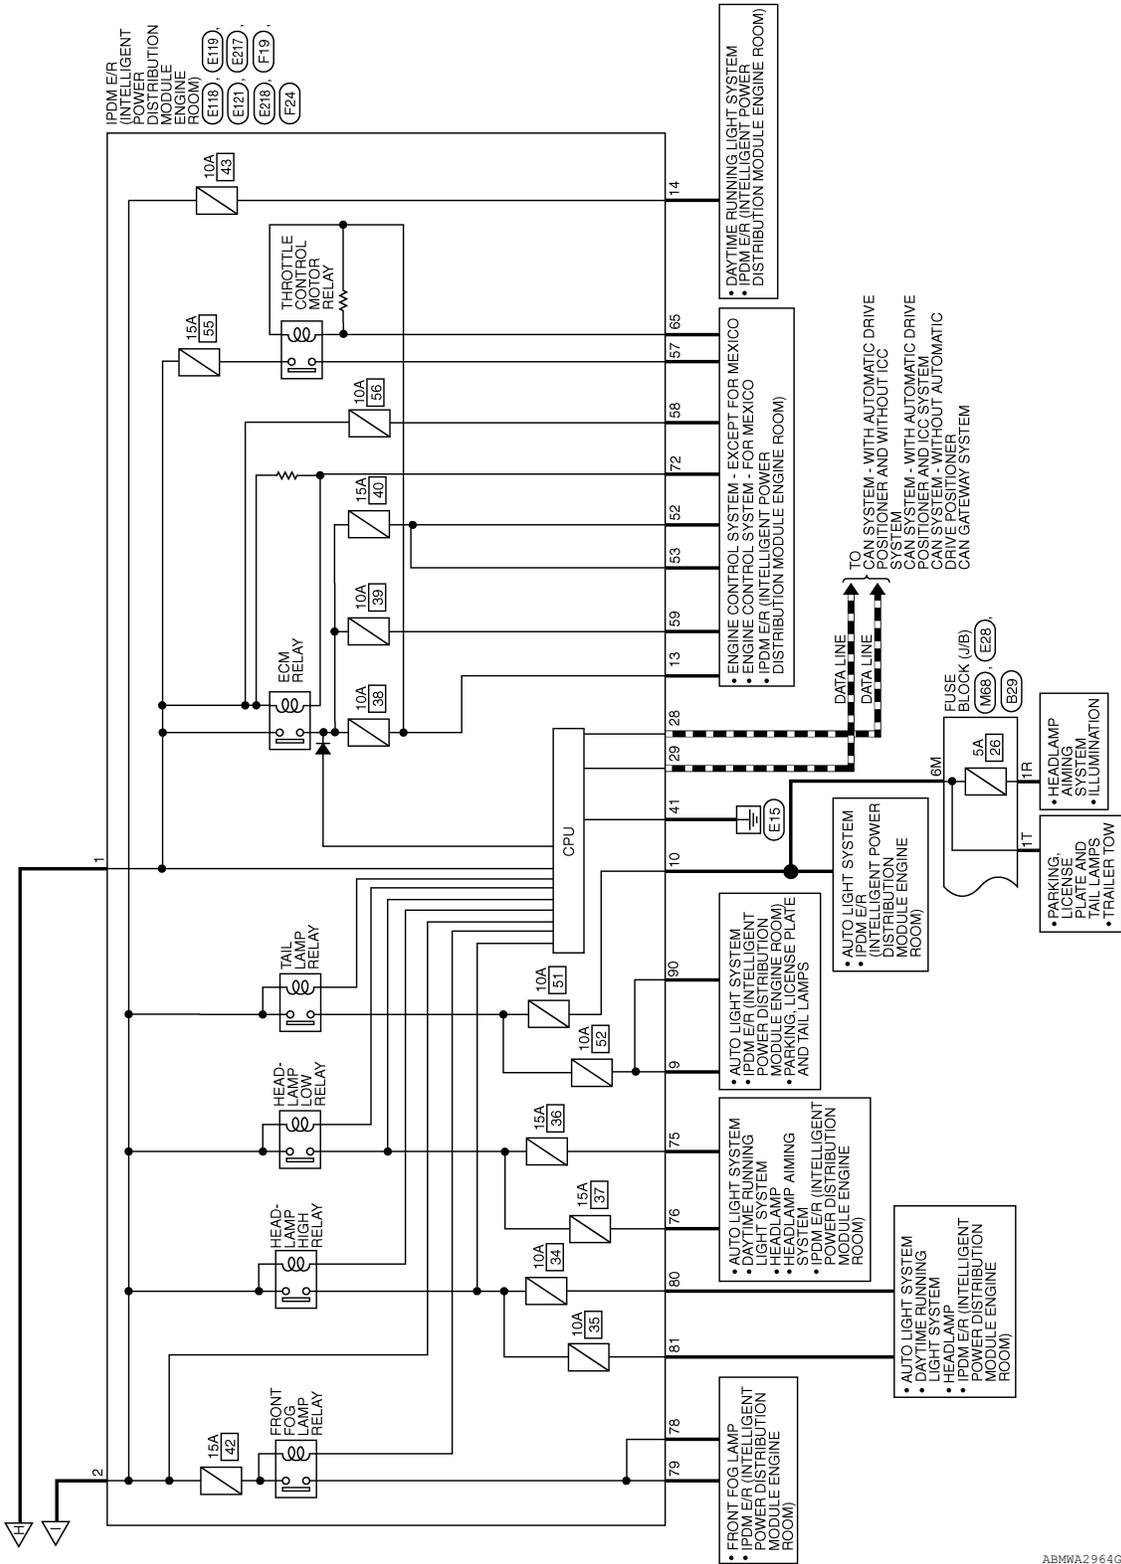


ABMWA2964GB

POWER SUPPLY ROUTING CIRCUIT

< WIRING DIAGRAM >

BATTERY POWER SUPPLY CONNECTORS

Connector No.	M3
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE

 


Terminal No.	Color of Wire	Signal Name
2N	BG	-
4N	V	-
5N	Y	-
6N	W	-

Connector No.	M4
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
9P	L	-
13P	W	-
14P	Y	-
15P	L	-

Connector No.	M31
Connector Name	WIRE TO WIRE
Connector Color	WHITE

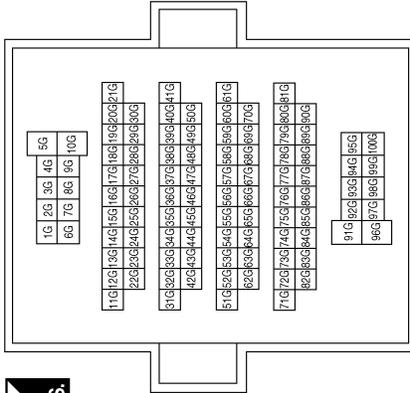

Terminal No.	10G	Color of Wire	W	Signal Name	-
--------------	-----	---------------	---	-------------	---

Connector No.	M68
Connector Name	FUSE BLOCK (J/B)
Connector Color	BROWN



Terminal No.	Color of Wire	Signal Name
1R	R	-
3R	G	-
5R	Y	-
10R	W	-

Connector No.	M82
Connector Name	CIRCUIT BREAKER-2
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	W	-
2	L	-

Connector No.	E7
Connector Name	FUSIBLE LINK BOX (BATTERY)
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
3	W	-
4	R	-


ABMIA6395GB

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

POWER SUPPLY ROUTING CIRCUIT

< WIRING DIAGRAM >

Connector No.	E28
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
5M	Y	-
6M	L	-

Connector No.	E27
Connector Name	FUSIBLE LINK BOX (BATTERY)
Connector Color	BROWN



Terminal No.	Color of Wire	Signal Name
1	W	-
2	L	-

Connector No.	E13
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1S	W	-

Connector No.	E118
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	R	F/L MAIN
2	L	F/L USM

Connector No.	E63
Connector Name	POWER STEERING CONTROL MODULE
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	W	+B

Connector No.	E30
Connector Name	FUSIBLE LINK BOX (BATTERY)
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
5	W	-

ABMIA6396GB

POWER SUPPLY ROUTING CIRCUIT

< WIRING DIAGRAM >

Connector No.	E121
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
9	G	TAIL RH
10	L	TAIL LH
13	L	ECM VB
14	V	DTRL

Connector No.	E119
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
28	P	CAN-L
29	L	CAN-H
41	B	GND (SIGNAL)

Connector No.	E217
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
75	R	HEADLAMP LO RH
76	L	HEADLAMP LO LH
78	W	FR FOG LAMP RH
79	L	FR FOG LAMP LH
80	W	HEADLAMP HI RH
81	G	HEADLAMP HI LH

Connector No.	E152
Connector Name	WIRE TO WIRE
Connector Color	WHITE

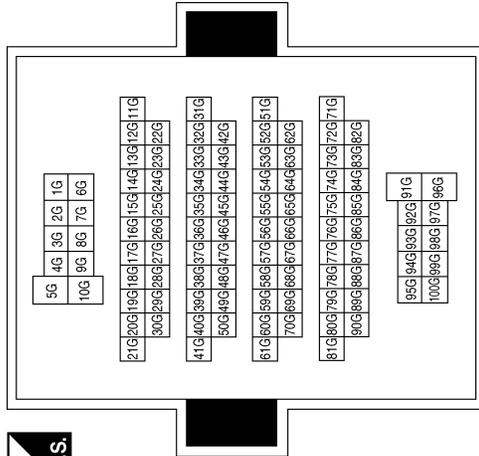

ABMIA6864GB


A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

PG

POWER SUPPLY ROUTING CIRCUIT

< WIRING DIAGRAM >

Connector No.	F19
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE

 


Terminal No.	Color of Wire	Signal Name
52	W	O2SENS #2
53	W	O2SENS #1
57	R	ETC
58	GR	ECM BAT
59	L	ENG SOL (FOR MEXICO)
59	LG	ENG SOL (EXCEPT FOR MEXICO)

Connector No.	F6
Connector Name	GENERATOR
Connector Color	-



Terminal No.	Color of Wire	Signal Name
1	B/R	-

Connector No.	E218
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
90	LG	CLEARANCE

Connector No.	F39
Connector Name	FUSIBLE LINK BOX (BATTERY)
Connector Color	-



Terminal No.	Color of Wire	Signal Name
6	B/R	-

Connector No.	F27
Connector Name	STARTER MOTOR
Connector Color	-



Terminal No.	Color of Wire	Signal Name
B	B/R	-

Connector No.	F24
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
65	G	MOTRLY
72	V	SOFF

ABMIA6865GB

POWER SUPPLY ROUTING CIRCUIT


< WIRING DIAGRAM >

Connector No.	B30
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE



Terminal No.	6Q	Color of Wire	P	Signal Name	-
--------------	----	---------------	---	-------------	---

Connector No.	B29
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE

 

Terminal No.	1T	Color of Wire	W	Signal Name	-
Terminal No.	6T	Color of Wire	L	Signal Name	-

Connector No.	F69
Connector Name	FUSIBLE LINK BOX (BATTERY)
Connector Color	-



Terminal No.	7	Color of Wire	R	Signal Name	-
--------------	---	---------------	---	-------------	---

A
B
C
D
E
F
G
H
I
J
K
L
PG
N
O
P

ABMIA6866GB


POWER SUPPLY ROUTING CIRCUIT

< WIRING DIAGRAM >

Wiring Diagram - ACCESSORY POWER SUPPLY -

INFOID:000000011134568

ACCESSORY POWER SUPPLY

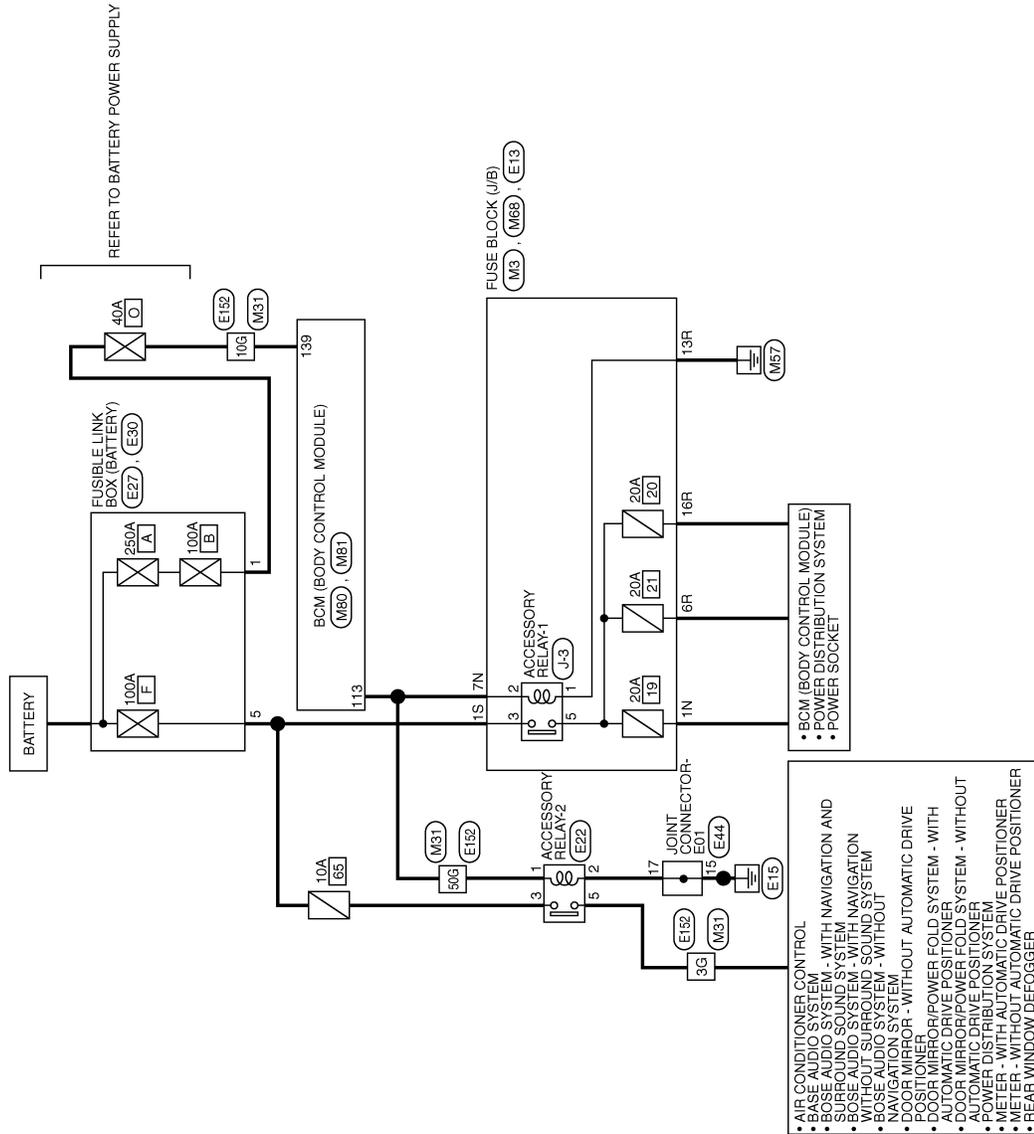


ABMWA2965GB

POWER SUPPLY ROUTING CIRCUIT

< WIRING DIAGRAM >


ACCESSORY POWER SUPPLY CONNECTORS

Connector No.	M3
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
1N	LG	-
7N	L	-

Connector No.	M31
Connector Name	WIRE TO WIRE
Connector Color	WHITE

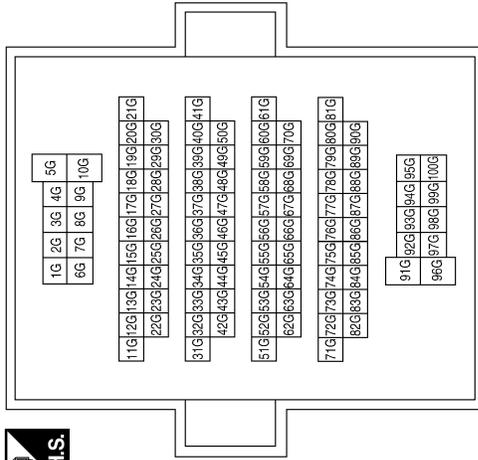


Terminal No.	Color of Wire	Signal Name
3G	P	-
10G	W	-
50G	L	-

Connector No.	M68
Connector Name	FUSE BLOCK (J/B)
Connector Color	BROWN




Terminal No.	Color of Wire	Signal Name
6R	Y	-
13R	GR	-
16R	BG	-

Connector No.	M80
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BLACK

 

Terminal No.	Color of Wire	Signal Name
113	L	ACC RELAY OUT

Connector No.	M81
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
139	W	BAT POWER F/L

ABMIA3738GB

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

PG

POWER SUPPLY ROUTING CIRCUIT

< WIRING DIAGRAM >

Connector No.	E27
Connector Name	FUSIBLE LINK BOX (BATTERY)
Connector Color	BROWN



Terminal No.	Color of Wire	Signal Name
1	W	-

Connector No.	E22
Connector Name	ACCESSORY RELAY-2
Connector Color	BLUE




Terminal No.	Color of Wire	Signal Name
1	G	-
2	B	-
3	R	-
5	P	-

Connector No.	E13
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1S	W	-

Connector No.	E44
Connector Name	JOINT CONNECTOR-E01
Connector Color	WHITE

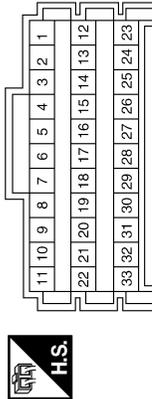

Terminal No.	Color of Wire	Signal Name
15	GR	-
17	B	-

Connector No.	E30
Connector Name	FUSIBLE LINK BOX (BATTERY)
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
5	W	-

ABMIA4825GB

POWER SUPPLY ROUTING CIRCUIT

< WIRING DIAGRAM >

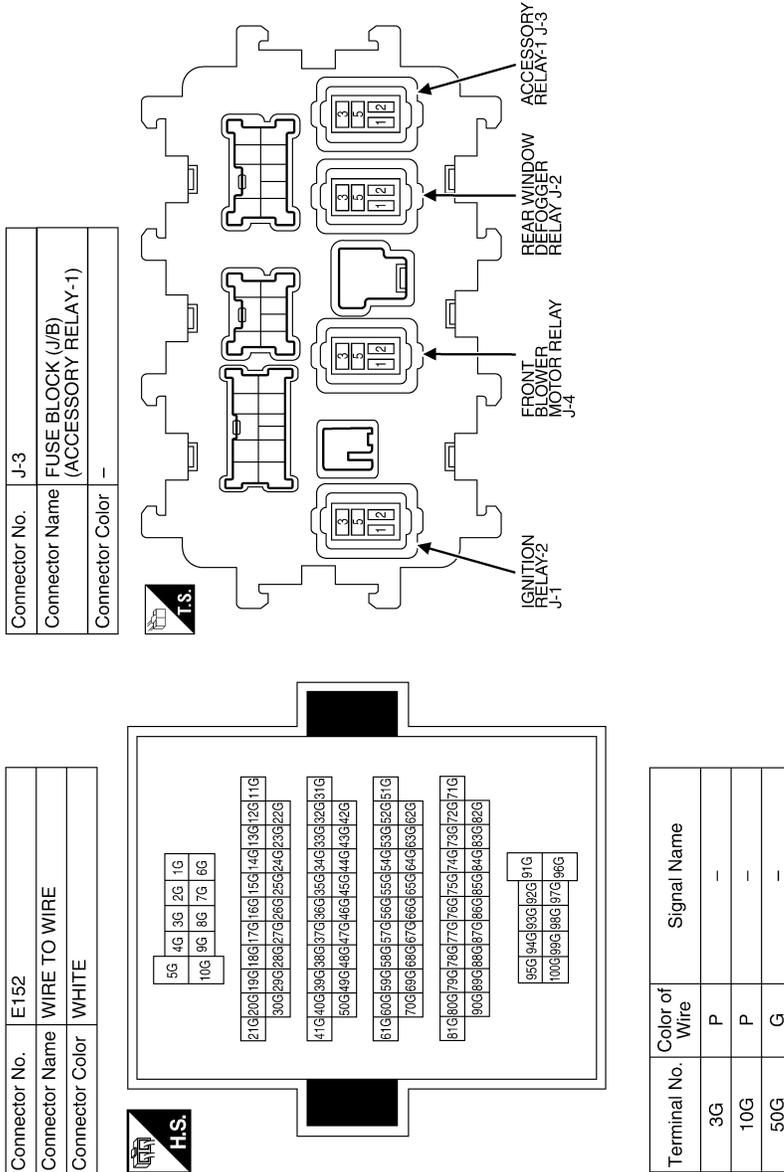

Connector No.	J-3
Connector Name	FUSE BLOCK (J/B) (ACCESSORY RELAY-1)
Connector Color	-


Connector No.	E152
Connector Name	WIRE TO WIRE
Connector Color	WHITE



A
B
C
D
E
F
G
H
I
J
K
L
PG
N
O
P

POWER SUPPLY ROUTING CIRCUIT

< WIRING DIAGRAM >

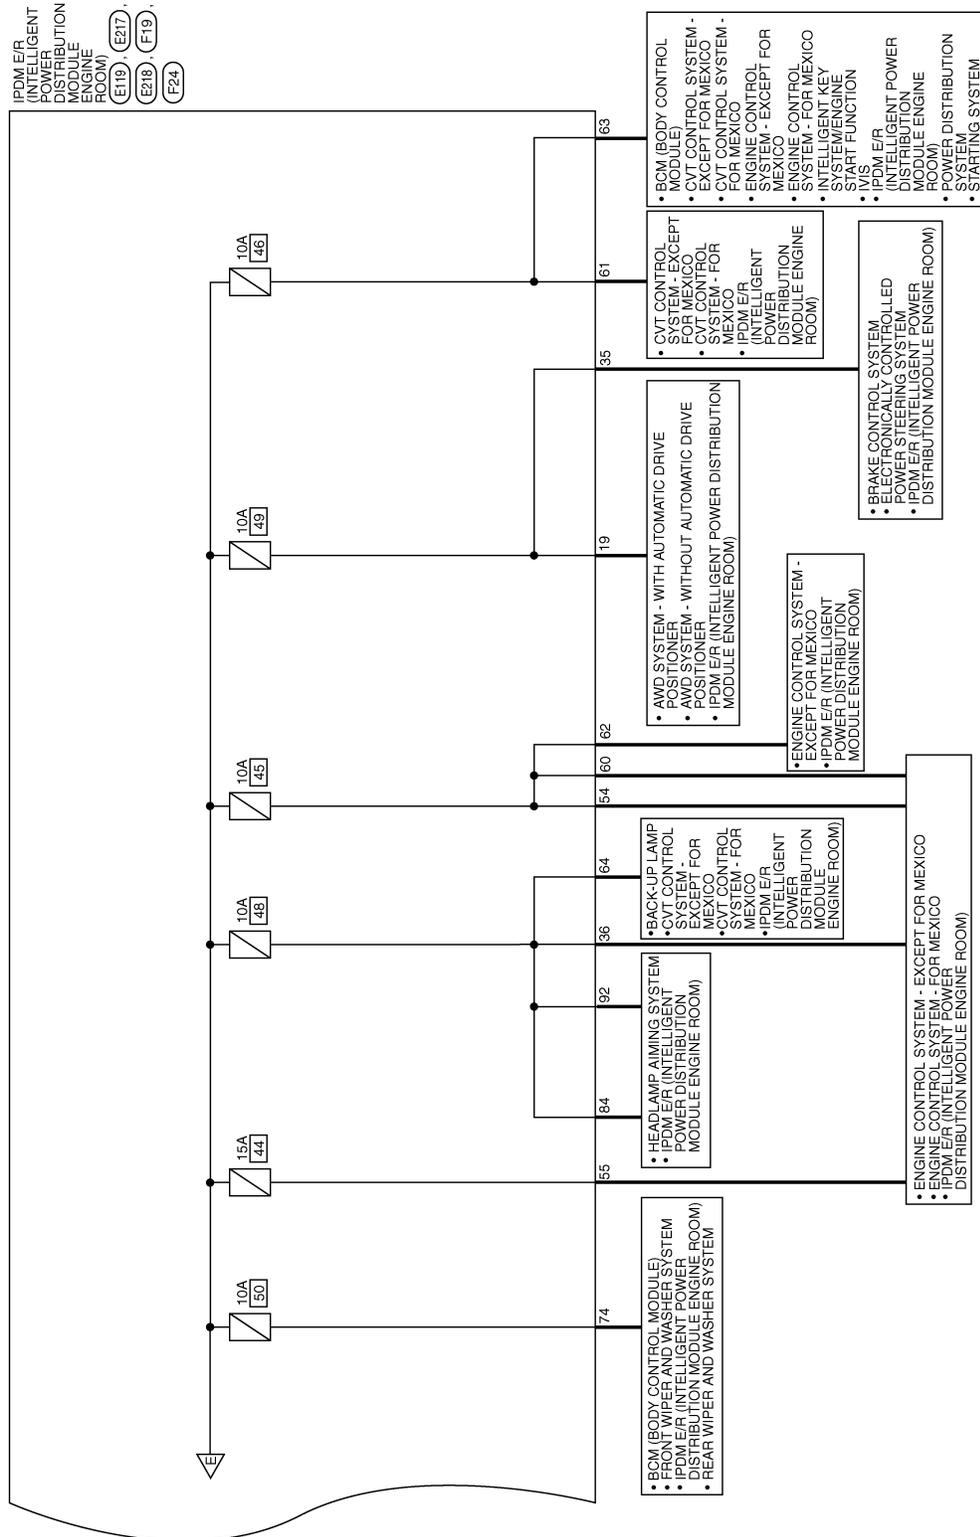


ABMWA2968GB

POWER SUPPLY ROUTING CIRCUIT

< WIRING DIAGRAM >

IGNITION POWER SUPPLY CONNECTORS

Connector No.	M3
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE

 


Terminal No.	Color of Wire	Signal Name
3N	L	-
8N	L	-

Connector No.	M4
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1P	R	-
2P	LG	-
3P	G	-
5P	P	-
6P	BG	-
7P	LG	-
8P	BG	-
16P	W	-

Connector No.	M19
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BLACK

 


Terminal No.	Color of Wire	Signal Name
59	P	CAN-L
60	L	CAN-H
61	BG	REAR DEFOGGER RELAY OUT
66	W	BLOWER FAN RELAY OUT
67	G	IGN ELEC RELAY OUT 2

A
B
C
D
E
F
G
H
I
J
K
L
PG
N
O
P

POWER SUPPLY ROUTING CIRCUIT


< WIRING DIAGRAM >

Connector No.	M41
Connector Name	JOINT CONNECTOR-M18
Connector Color	WHITE

 


Terminal No.	Color of Wire	Signal Name
1	P	-
2	P	-

Connector No.	M40
Connector Name	WIRE TO WIRE
Connector Color	GRAY

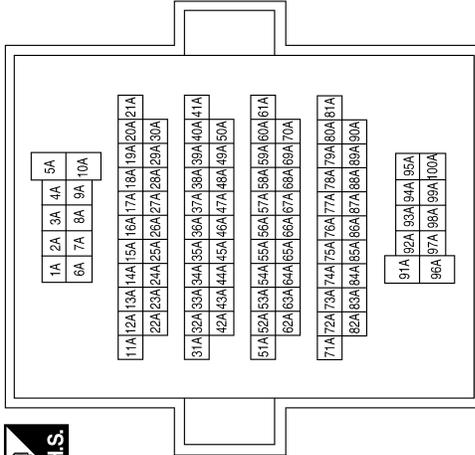

Terminal No.	Color of Wire	Signal Name
89A	L	-
90A	P	-

Connector No.	M31
Connector Name	WIRE TO WIRE
Connector Color	WHITE

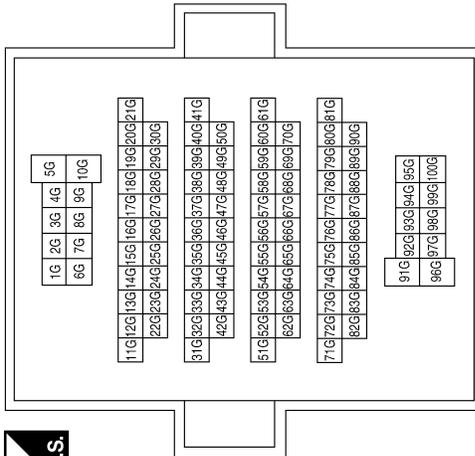

Terminal No.	Color of Wire	Signal Name
10G	W	-
35G	P	-
36G	L	-

ABMIA4827GB

POWER SUPPLY ROUTING CIRCUIT

< WIRING DIAGRAM >

Connector No.	M81
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE



137	136	135	134	133	132	131	130	129
143	142	141	140	139	138			

Terminal No.	Color of Wire	Signal Name
134	B	GND 2
139	W	BAT POWER F/L
143	B	GND 1

Connector No.	M68
Connector Name	FUSE BLOCK (J/B)
Connector Color	BROWN



7R	6R	5R	4R	3R	2R	1R		
16R	15R	14R	13R	12R	11R	10R	9R	8R

Terminal No.	Color of Wire	Signal Name
2R	LG	-
13R	GR	-

Connector No.	M43
Connector Name	JOINT CONNECTOR-M17
Connector Color	WHITE



4	3	2	1
---	---	---	---

Terminal No.	Color of Wire	Signal Name
1	L	-
2	L	-

Connector No.	E13
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE



1S

Connector No.	E7
Connector Name	FUSIBLE LINK BOX (BATTERY)
Connector Color	GRAY



4	3
---	---

Terminal No.	Color of Wire	Signal Name
1S	W	-

Connector No.	M84
Connector Name	WIRES TO WIRE
Connector Color	WHITE



16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1
52	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17

Terminal No.	Color of Wire	Signal Name
17	L	-
18	P	-

ABMIA3728GB

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

PG

POWER SUPPLY ROUTING CIRCUIT

< WIRING DIAGRAM >

Connector No.	E28
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE



Terminal No.	1M	Color of Wire	R	Signal Name	-
--------------	----	---------------	---	-------------	---

Connector No.	E27
Connector Name	FUSIBLE LINK BOX (BATTERY)
Connector Color	BROWN




Terminal No.	1	Color of Wire	W	Signal Name	-
2	L	L	L	-	-

Connector No.	E17
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE




Terminal No.	1L	Color of Wire	G	Signal Name	-
--------------	----	---------------	---	-------------	---

Connector No.	E70
Connector Name	JOINT CONNECTOR-E14
Connector Color	BLACK

 

Terminal No.	1	Color of Wire	P	Signal Name	-
2	P	P	-	-	-

Connector No.	E45
Connector Name	JOINT CONNECTOR-E12
Connector Color	BLUE

 

Terminal No.	1	Color of Wire	L	Signal Name	-
4	L	L	-	-	-
7	P	P	-	-	-
10	P	P	-	-	-

Connector No.	E30
Connector Name	FUSIBLE LINK BOX (BATTERY)
Connector Color	BLACK



Terminal No.	5	Color of Wire	W	Signal Name	-
--------------	---	---------------	---	-------------	---

ABMIA3729GB

POWER SUPPLY ROUTING CIRCUIT

< WIRING DIAGRAM >

Connector No.	E119
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE



19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34
35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50

Terminal No.	Color of Wire	Signal Name
19	SB	SUB ECU
28	P	CAN-L
29	L	CAN-H
33	R	START CONT
35	BR	ABS ECU
36	W	START IG-E/R
37	W	CLUTCH I/L SW
41	B	GND (SIGNAL)

Connector No.	E118
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BLACK



1	2
---	---

Terminal No.	Color of Wire	Signal Name
1	R	F/L MAIN
2	L	F/L USM

Connector No.	E171
Connector Name	JOINT CONNECTOR-E15
Connector Color	BLACK



6	5	4	3	2	1
---	---	---	---	---	---

Terminal No.	Color of Wire	Signal Name
1	L	-
2	L	-

Connector No.	E121
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE



7	8	9	10	11		
12	13	14	15	16	17	18

Terminal No.	Color of Wire	Signal Name
7	B	GND (POWER)
11	Y	FR WIPER LO
15	R	FUEL PUMP
18	L	FR WIPER HI

Connector No.	E120
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE



3	4	5	6
---	---	---	---

Terminal No.	Color of Wire	Signal Name
3	G	F/L IGNSW

ABMIA6867GB

A B C D E F G H I J K L N O P


PG

POWER SUPPLY ROUTING CIRCUIT

< WIRING DIAGRAM >


Connector No.	E217
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE

Terminal No.	74	R	Signal Name
			WASH MTR

 


Terminal No.	Color of Wire	Signal Name
10G	P	-
35G	P	-
36G	L	-

Connector No.	E152
Connector Name	WIRE TO WIRE
Connector Color	WHITE

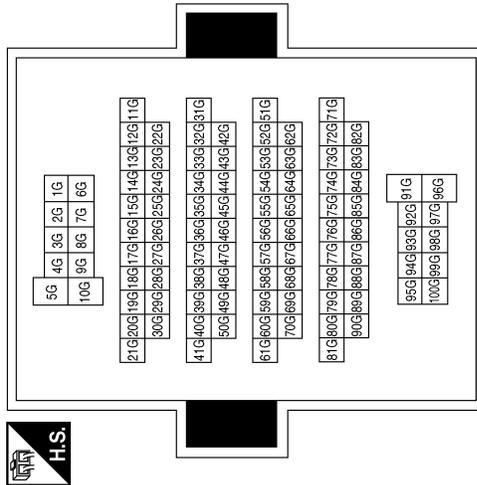

Connector No.	F19
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE

Terminal No.	Color of Wire	Signal Name
54	L	INJECTOR #1
55	W	IGN COIL
56	SB	A/C COMP
60	LG	INJECTOR #2
61	Y	AT ECU

 


Connector No.	F17
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BLACK

Terminal No.	Color of Wire	Signal Name
51	W	STARTER MOTOR



Connector No.	E218
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE

Terminal No.	Color of Wire	Signal Name
84	SB	H/L LEVELIZER RH
92	L	H/L LEVELIZER LH

 

ABMIA6868GB

POWER SUPPLY ROUTING CIRCUIT


< WIRING DIAGRAM >

Connector No.	B12
Connector Name	JOINT CONNECTOR-B10
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	L	-
2	L	-

Connector No.	B11
Connector Name	JOINT CONNECTOR-B09
Connector Color	WHITE

 


Terminal No.	Color of Wire	Signal Name
1	P	-
2	P	-

Connector No.	F24
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
62	W	ECM IGN SW
63	L	INHIBIT SW
64	LG	START IG EGI
66	G	NP SW
69	W	FPR

Connector No.	B29
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE

 


Terminal No.	Color of Wire	Signal Name
3T	W	-
5T	G	-

Connector No.	B17
Connector Name	JOINT CONNECTOR-B12
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
1	L	-
2	L	-

Connector No.	B16
Connector Name	JOINT CONNECTOR-B11
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
1	P	-
2	P	-

ABMIA6869GB

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P


PG

POWER SUPPLY ROUTING CIRCUIT


< WIRING DIAGRAM >

Terminal No.	Color of Wire	Signal Name
89A	L	-
90A	P	-

Connector No.	B69
Connector Name	WIRE TO WIRE
Connector Color	GRAY

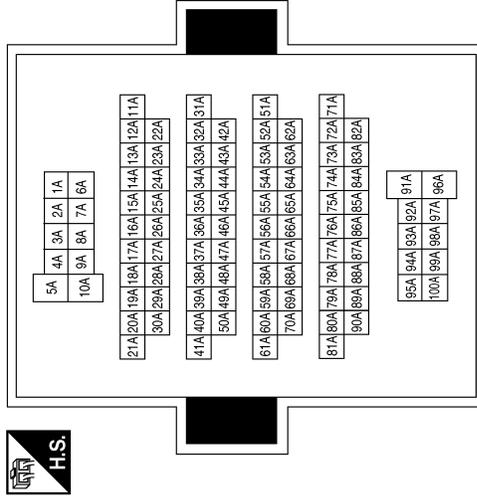

Connector No.	B32
Connector Name	WIRE TO WIRE
Connector Color	WHITE

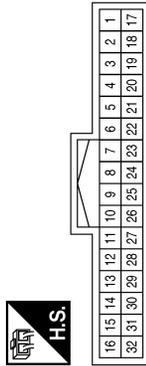

Terminal No.	Color of Wire	Signal Name
18	L	-
19	P	-


Connector No.	B103
Connector Name	JOINT CONNECTOR-B15
Connector Color	WHITE



Connector No.	B102
Connector Name	JOINT CONNECTOR-B14
Connector Color	WHITE



Connector No.	B101
Connector Name	WIRE TO WIRE
Connector Color	WHITE

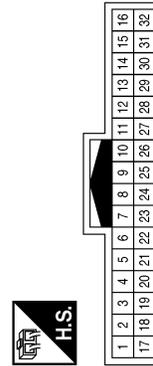

Terminal No.	Color of Wire	Signal Name
1	P	-
2	P	-





Terminal No.	Color of Wire	Signal Name
1	L	-
2	L	-

Terminal No.	Color of Wire	Signal Name
17	L	-
18	P	-

ABMIA6870GB

POWER SUPPLY ROUTING CIRCUIT

< WIRING DIAGRAM >

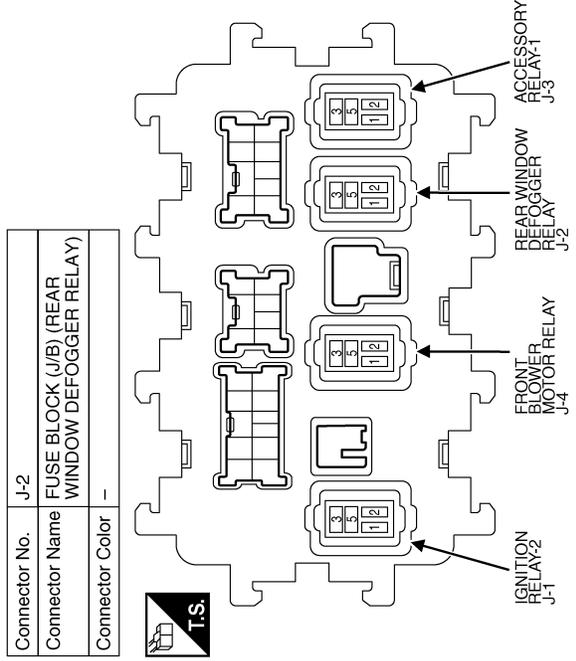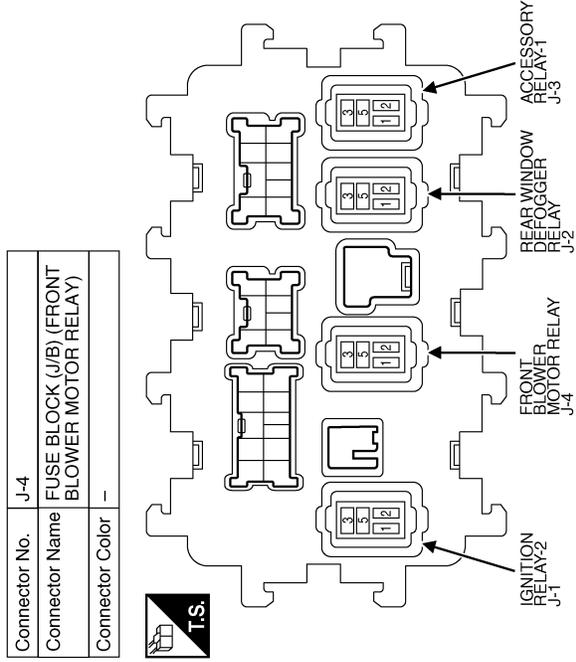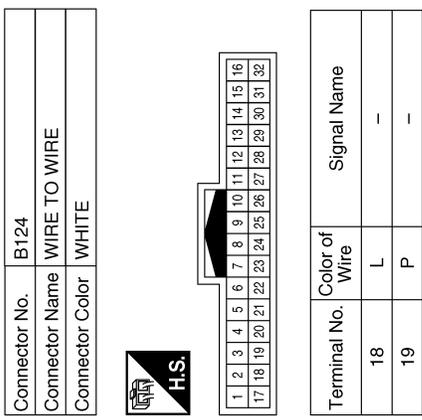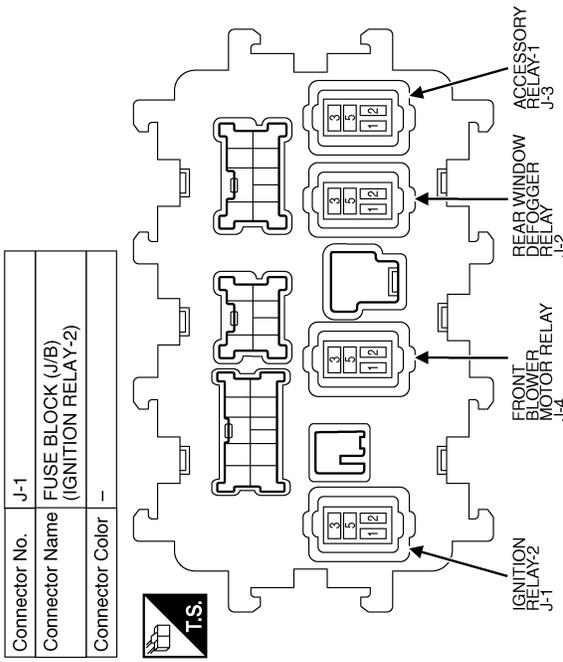

ABMIA6871GB

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

PG

GROUND



< WIRING DIAGRAM >

GROUND

Ground Distribution

INFOID:000000011134572

MAIN HARNESS

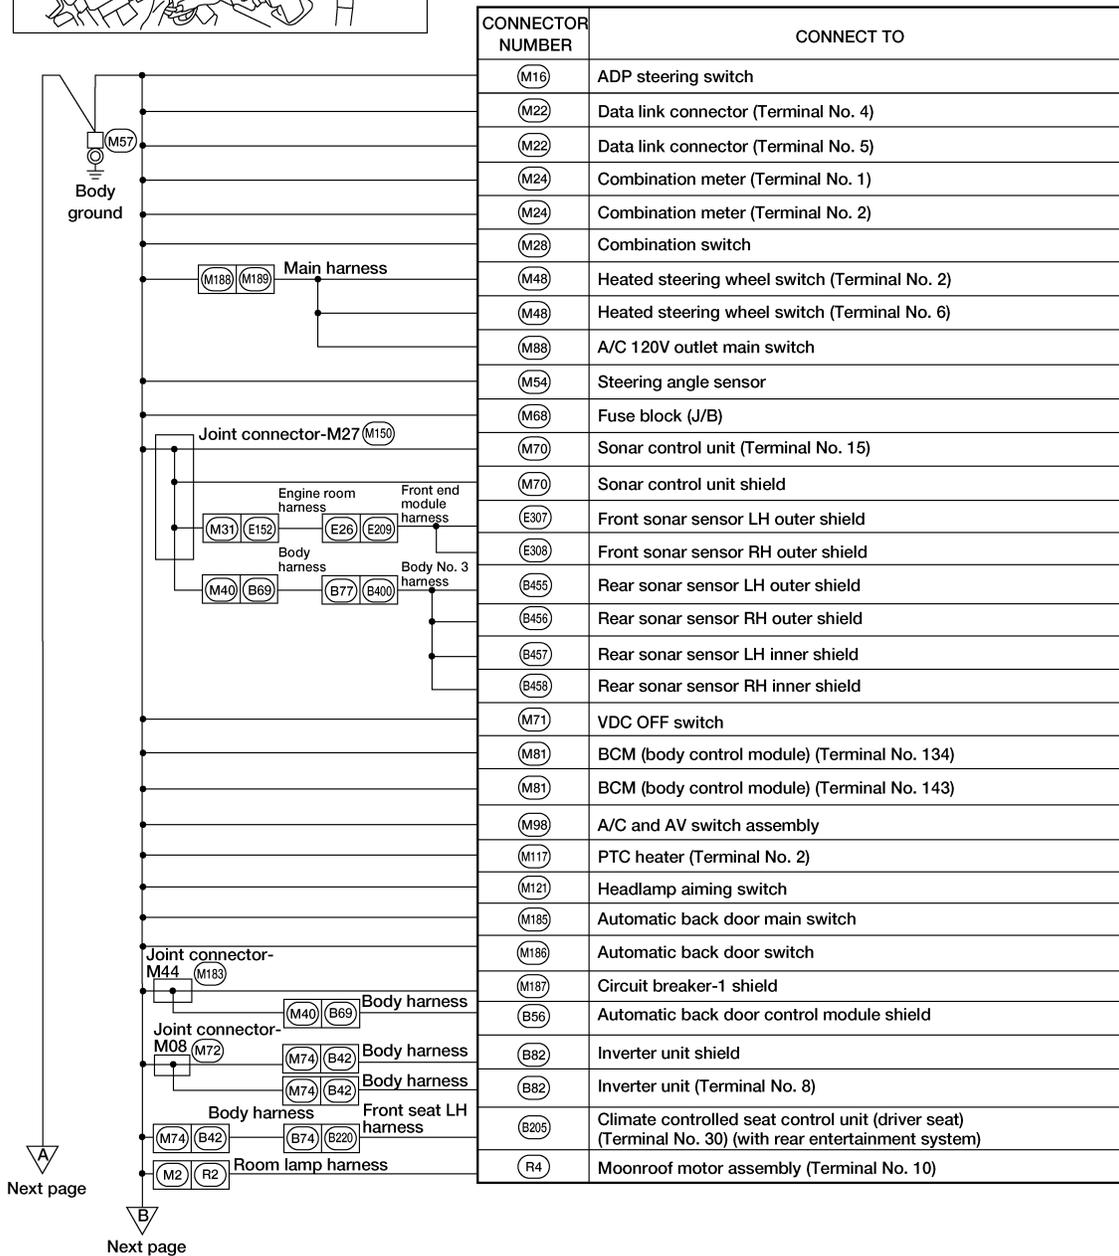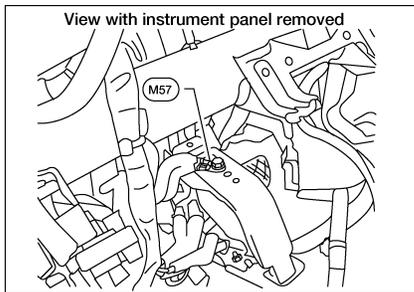



Next page

Next page


ABMIA6872GB

GROUND

< WIRING DIAGRAM >

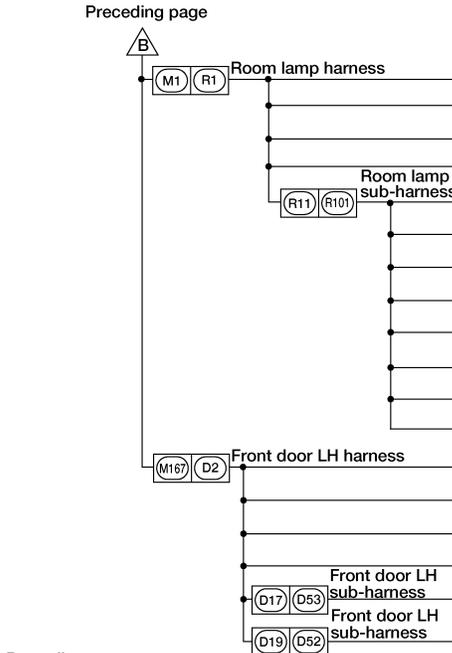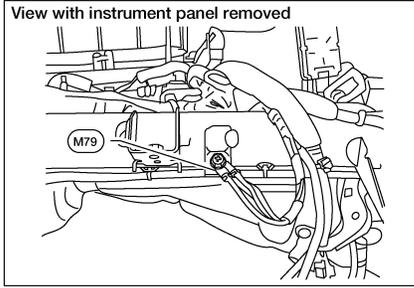

CONNECTOR NUMBER	CONNECT TO
(R5)	Lane camera unit (Terminal No. 1)
(R5)	Lane camera unit (Terminal No. 5)
(R10)	Auto anti-dazzling inside mirror
(R12)	Rain sensor
(R102)	Vanity lamp RH
(R103)	Vanity lamp LH
(R104)	Cargo lamp
(R105)	Telematics switch
(R106)	Personal lamps 2nd row
(R107)	Front room/map lamp assembly
(R108)	Moonroof switch
(R110)	Sunshade switch
(D4)	Door mirror LH (without around view monitor)
(D6)	Door mirror LH (with around view monitor)
(D14)	Front door lock assembly LH
(D15)	Front outside handle assembly LH
(D56)	Main power window and door lock/unlock switch (Terminal No. 7)
(D60)	Seat memory switch

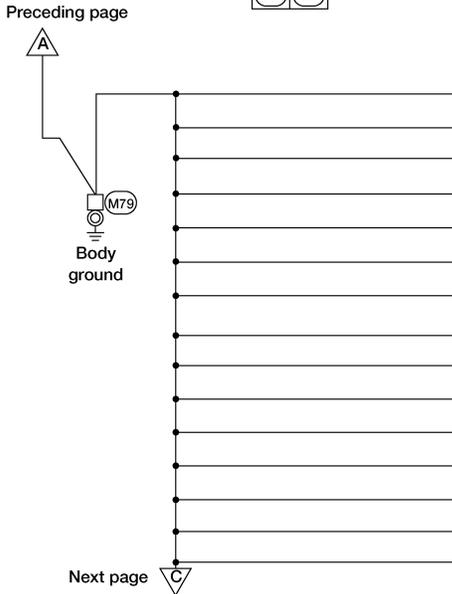

CONNECTOR NUMBER	CONNECT TO
(M6)	Sonar system OFF switch (Terminal No. 3)
(M6)	Sonar system OFF switch (Terminal No. 8)
(M17)	Push-button ignition switch
(M35)	Air bag diagnosis sensor unit (Terminal No. 2)
(M44)	AV control unit (Terminal No. 52) (with base audio system)
(M47)	TCU (Terminal No. 2)
(M47)	TCU (Terminal No. 7)
(M50)	A/C auto amp. (Terminal No. 2)
(M50)	A/C auto amp. (Terminal No. 22)
(M52)	Combination switch (spiral cable)
(M59)	Glove box lamp
(M60)	Warning buzzer
(M76)	Electric brake (pre-wiring)
(M78)	CVT shift selector
(M92)	Display unit (Terminal No. 12) (with NAVI)


ABMIA6400GB

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

PG

GROUND




< WIRING DIAGRAM >

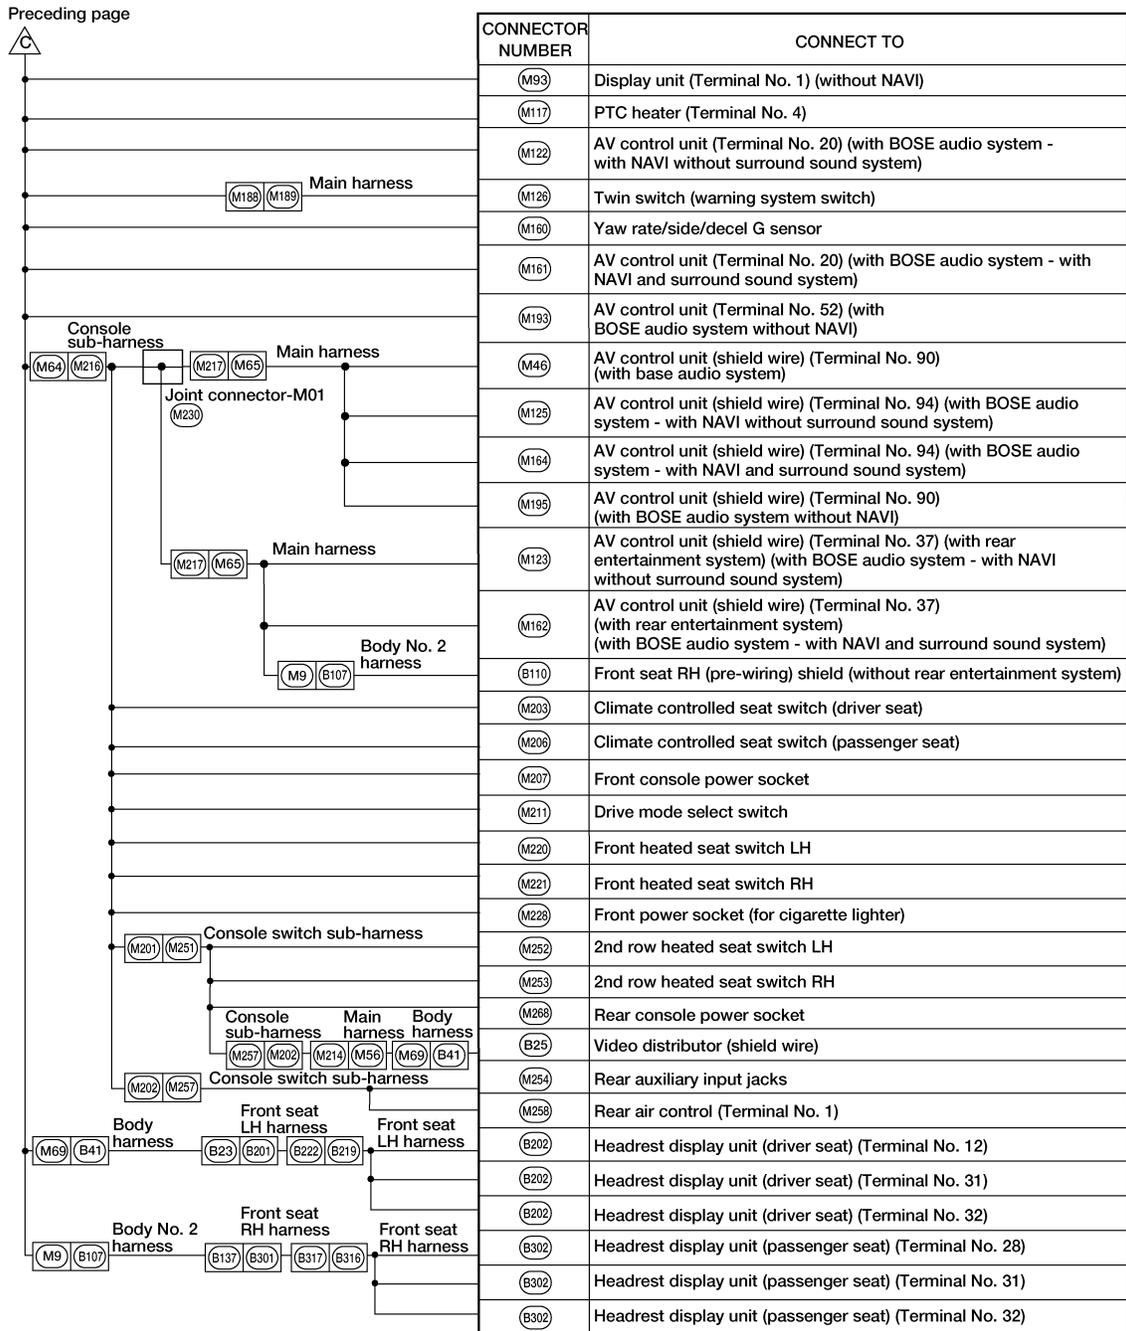

ABMIA6873GB

GROUND

< WIRING DIAGRAM >

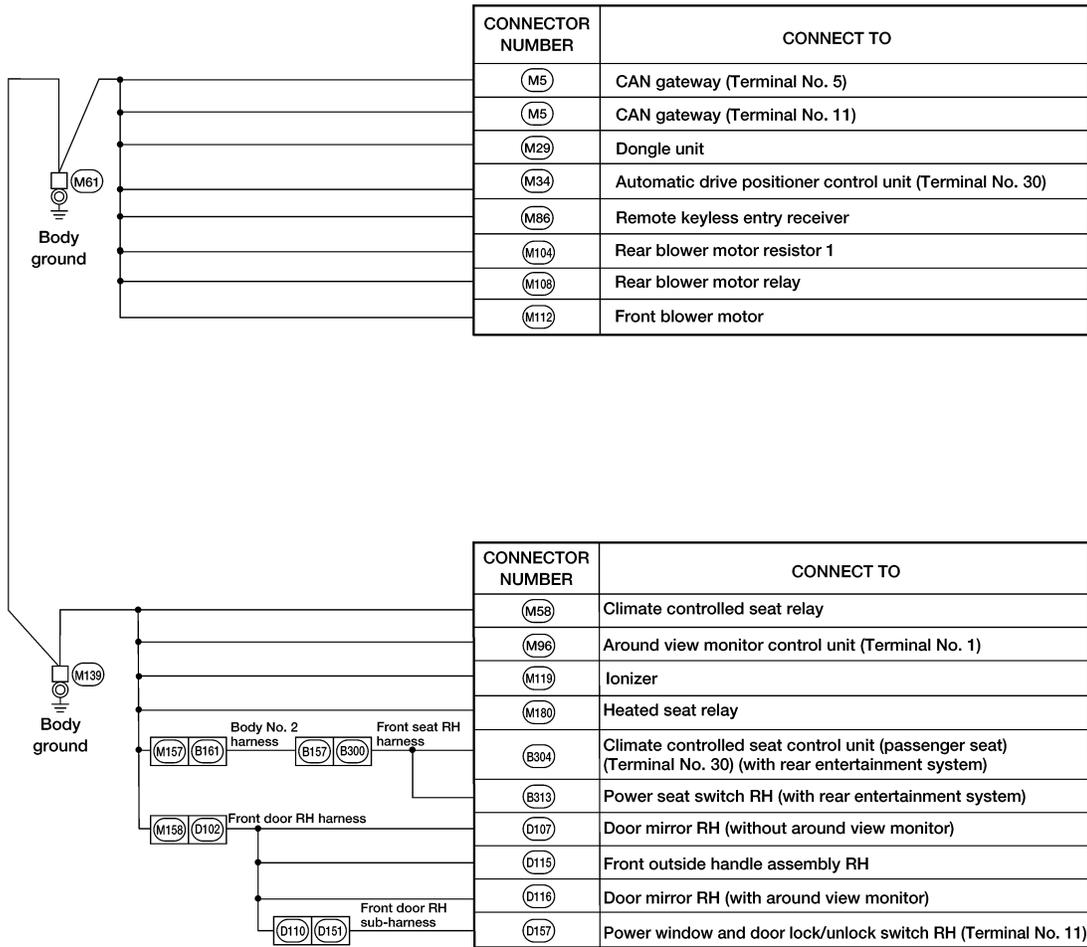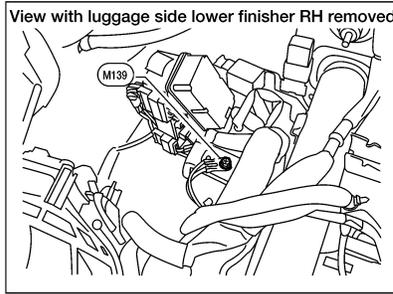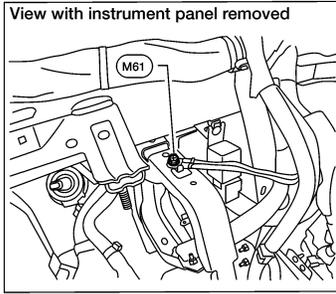



ABMIA6874GB

A
B
C
D
E
F
G
H
I
J
K
L
PG
N
O
P

GROUND

< WIRING DIAGRAM >

ENGINE ROOM HARNESS

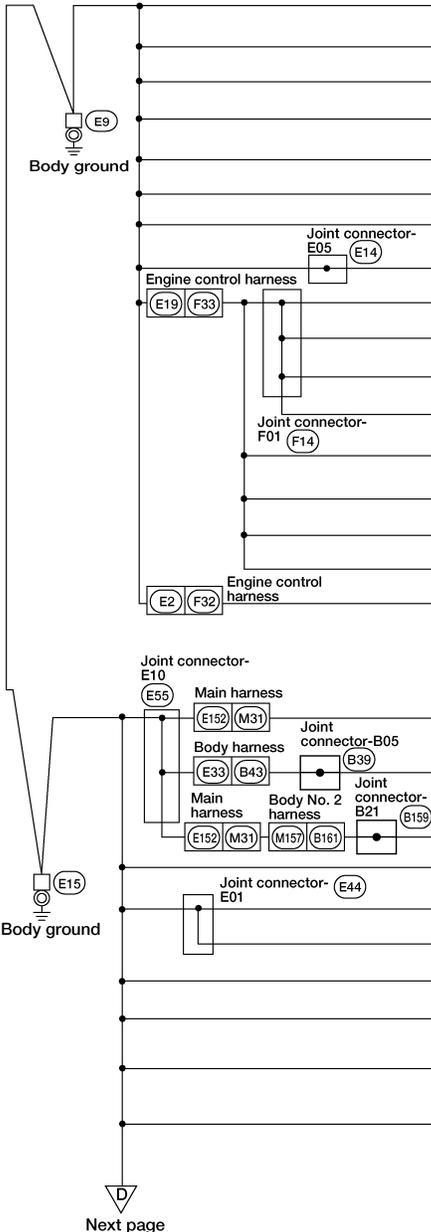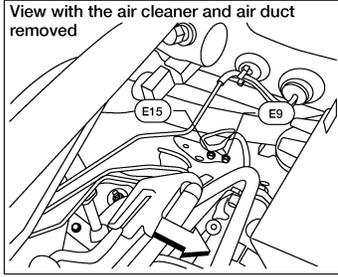



CONNECTOR NUMBER	CONNECT TO
(E16)	ECM (Terminal No. 123) (for Mexico)
(E16)	ECM (Terminal No. 124) (for Mexico)
(E16)	ECM (Terminal No. 127) (for Mexico)
(E16)	ECM (Terminal No. 128) (for Mexico)
(E32)	ECM (Terminal No. 147) (except for Mexico)
(E32)	ECM (Terminal No. 149) (except for Mexico)
(E32)	ECM (Terminal No. 152) (except for Mexico)
(E74)	Accelerator pedal actuator shield (with intelligent cruise control)
(F5)	Air fuel ratio (A/F) sensor 1 (bank 2) shield
(F50)	Electric throttle control actuator shield
(F51)	ECM (Terminal No. 12) (for Mexico)
(F65)	Air fuel ratio (A/F) sensor 1 (bank 1) shield
(F51)	ECM (Terminal No. 16) (for Mexico)
(F78)	ECM (Terminal No. 10) (except for Mexico)
(F78)	ECM (Terminal No. 55) (except for Mexico)
(F79)	ECM (Terminal No. 105) (except for Mexico)
(F79)	ECM (Terminal No. 110) (except for Mexico)

CONNECTOR NUMBER	CONNECT TO
(M187)	Circuit breaker-1 shield
(B58)	Pre-crash seat belt control unit (driver side) (shield wire) (Terminal No. 18)
(B160)	Pre-crash seat belt control unit (passenger side) (shield wire) (Terminal No. 18)
(E21)	Brake fluid level switch
(E22)	Accessory relay-2
(E23)	Front wiper motor
(E56)	VDC resistor
(E74)	Accelerator pedal actuator (with intelligent cruise control)
(E119)	IPDM E/R (intelligent power distribution module engine room) (Terminal No. 41)
(E121)	IPDM E/R (intelligent power distribution module engine room) (Terminal No. 7)



ABMIA6875GB

GROUND

< WIRING DIAGRAM >

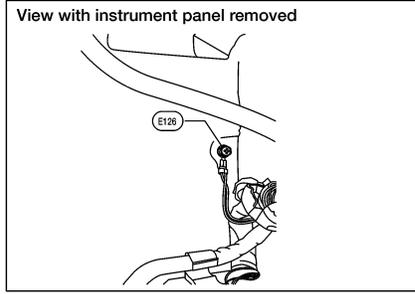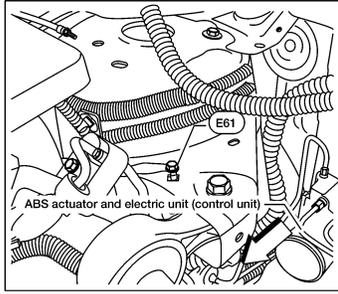

Preceding page

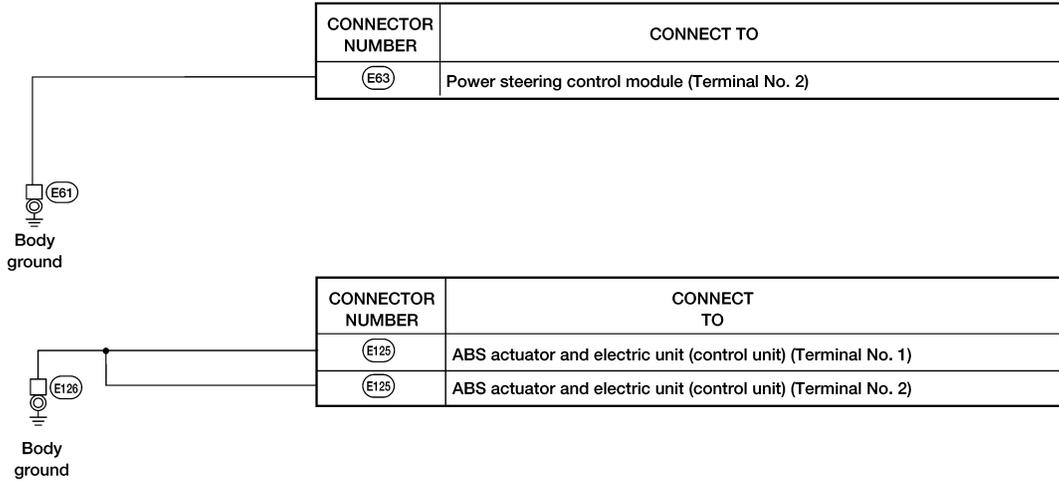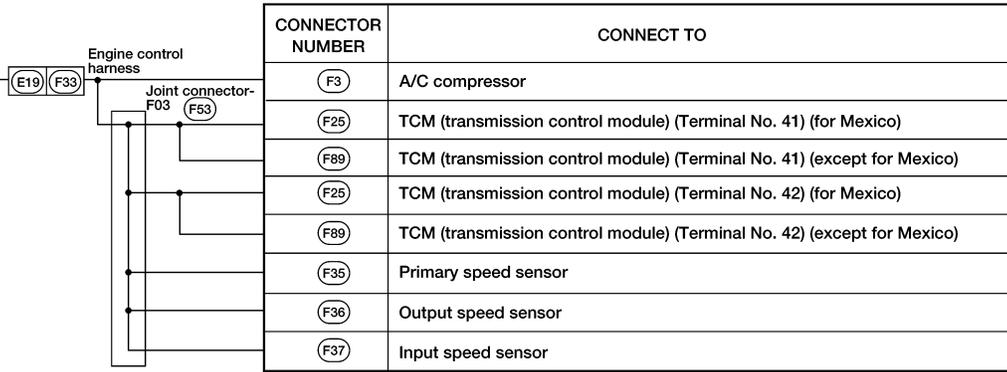





ABMIA6899GB

A
B
C
D
E
F
G
H
I
J
K
L
PG
N
O
P

GROUND

< WIRING DIAGRAM >




FRONT END MODULE HARNESS

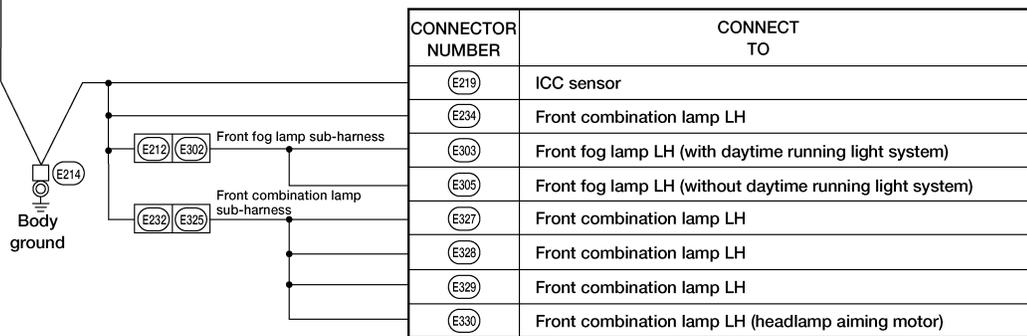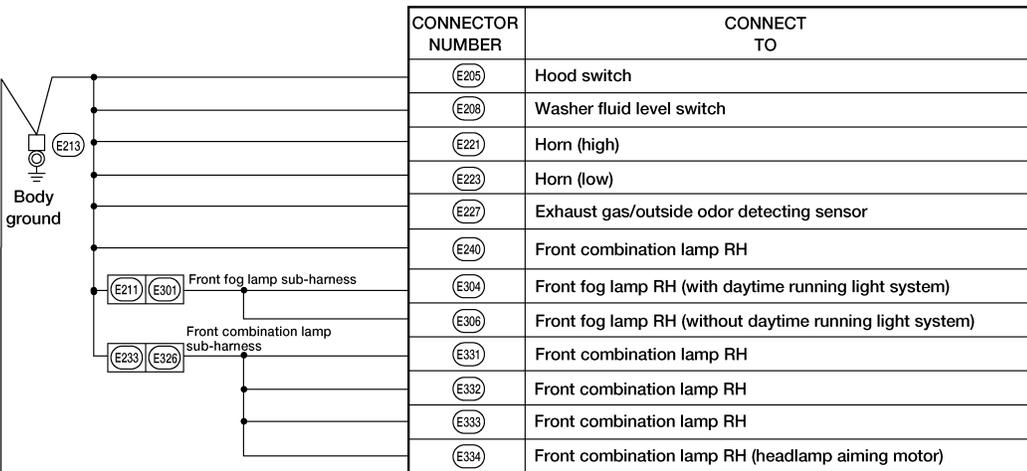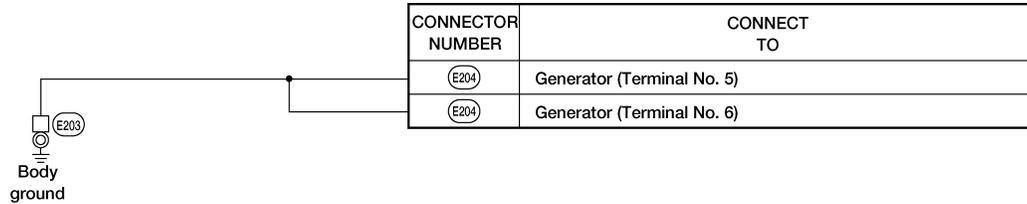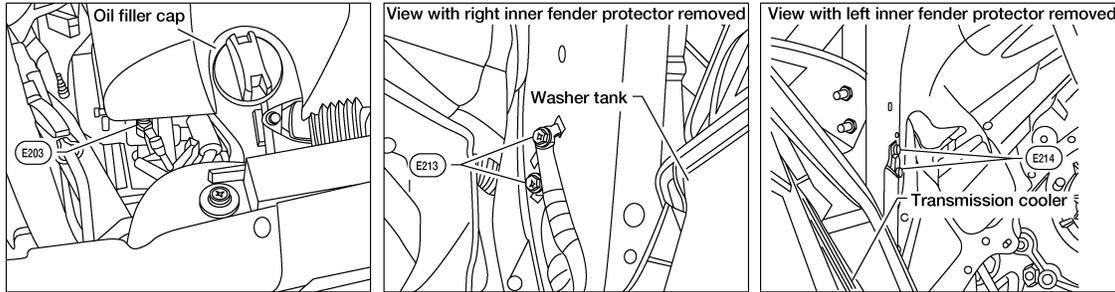



ABMIA6876GB

GROUND

< WIRING DIAGRAM >

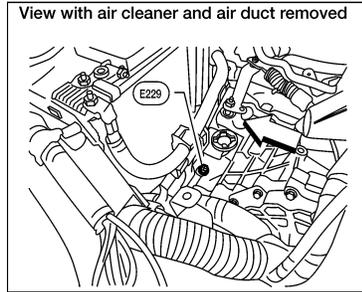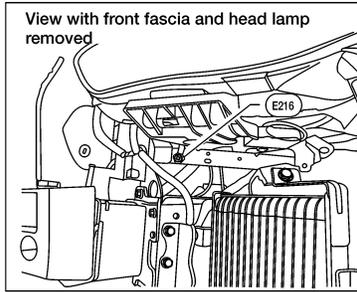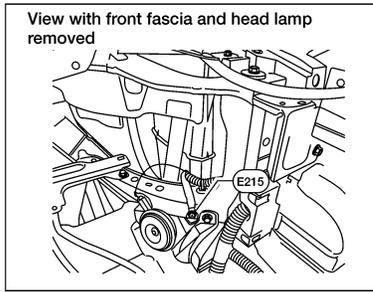

NX : EXCEPT FOR MEXICO
XX : FOR MEXICO

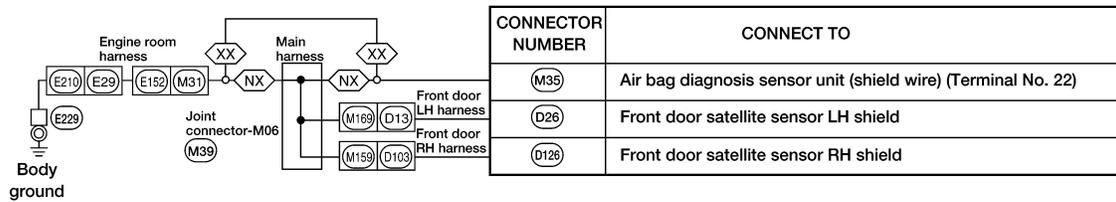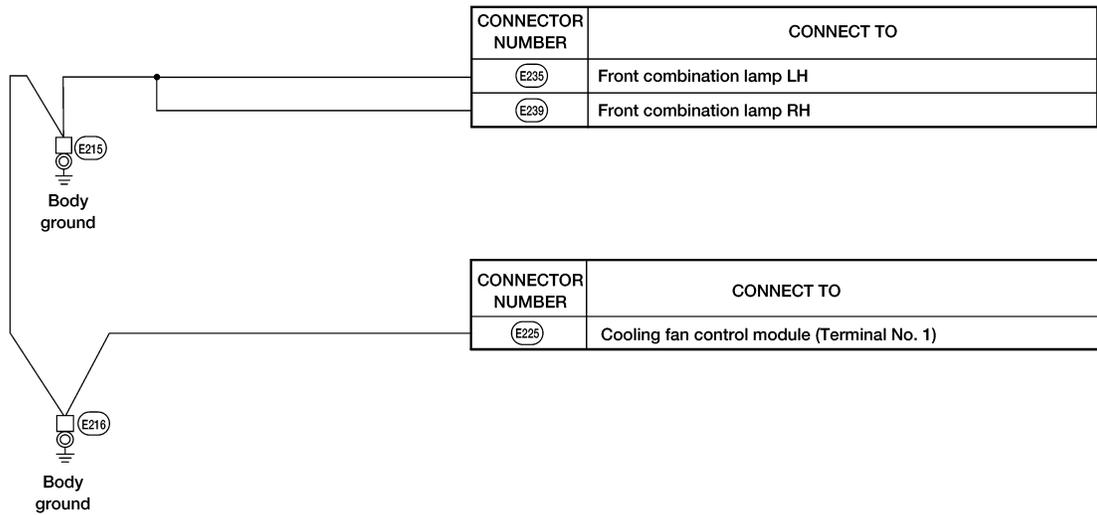



ABMIA6877GB

A
B
C
D
E
F
G
H
I
J
K
L
PG
N
O
P

GROUND

< WIRING DIAGRAM >

ENGINE CONTROL HARNESS

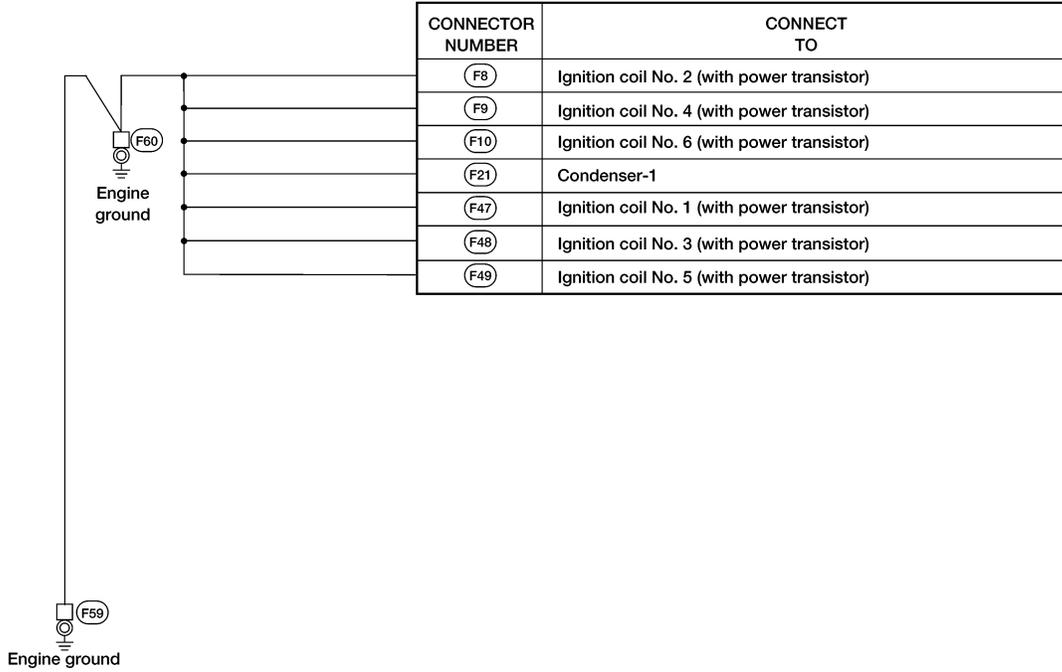
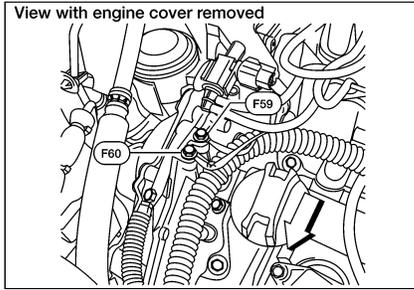


ABMIA6878GB

GROUND

< WIRING DIAGRAM >


BODY HARNESS

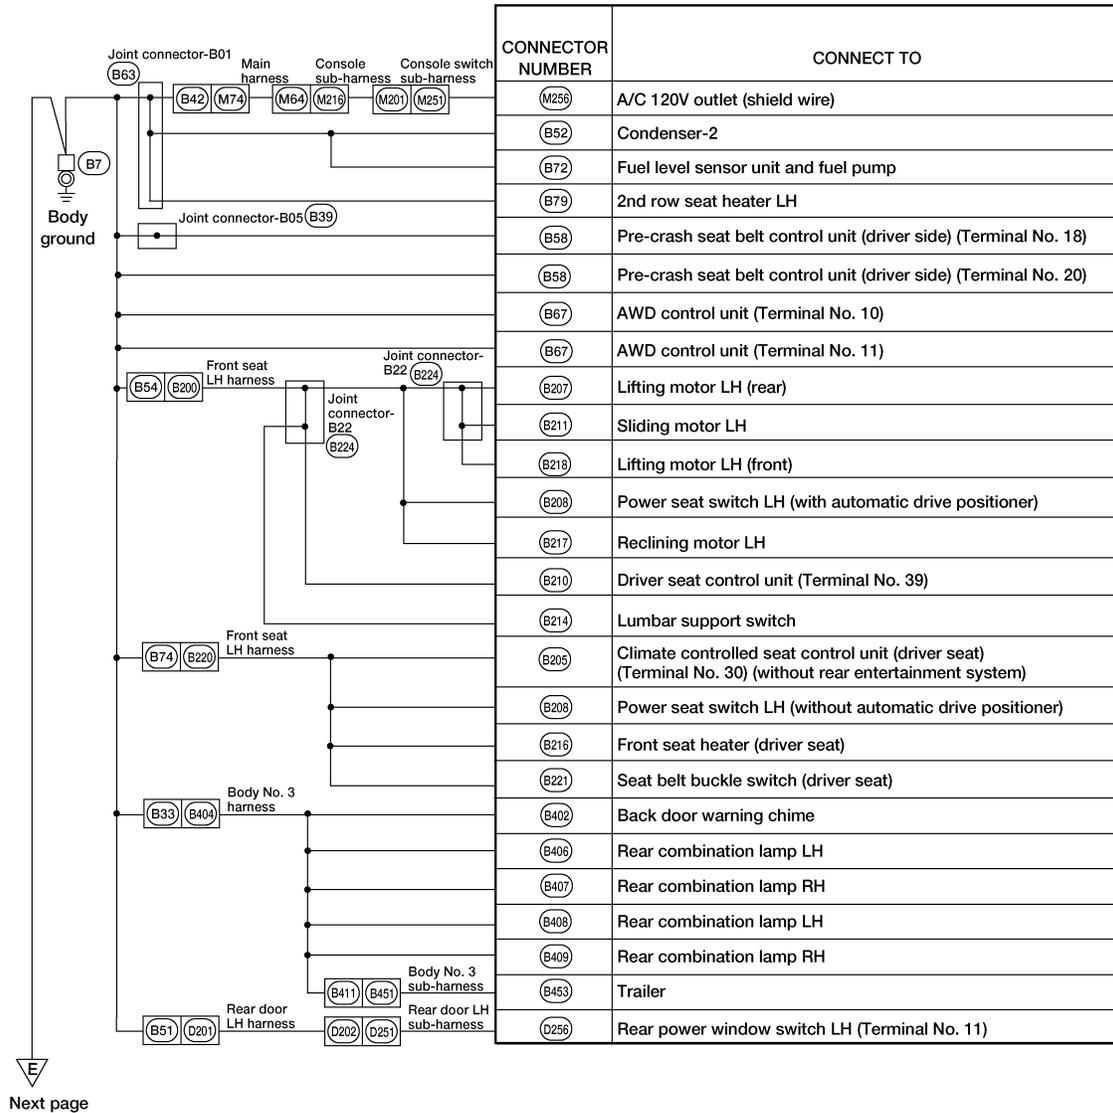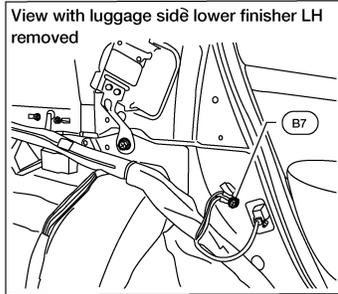


A
B
C
D
E
F
G
H
I
J
K
L
PG
N
O
P

GROUND

< WIRING DIAGRAM >

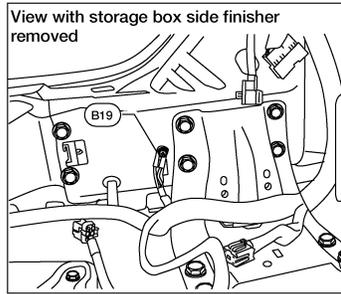

Preceding page


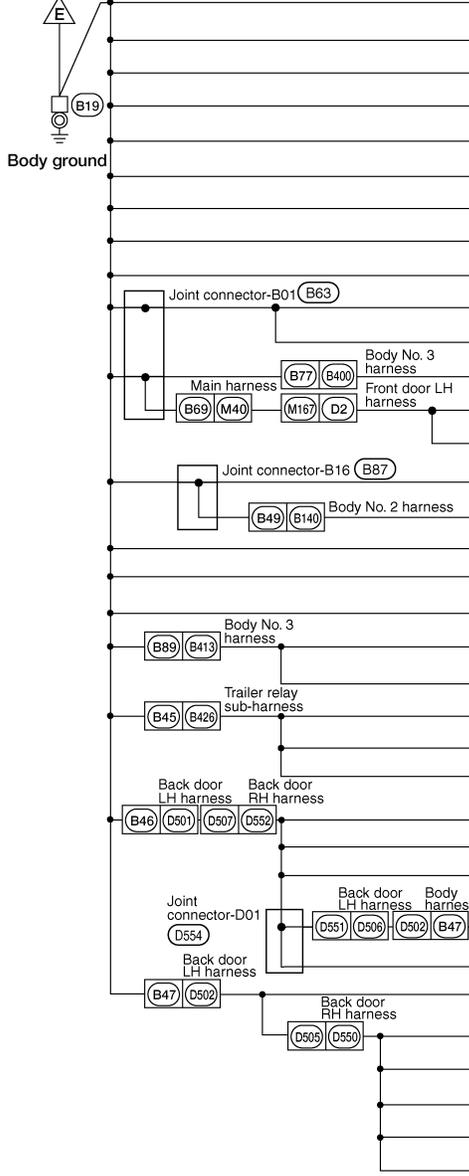


CONNECTOR NUMBER	CONNECT TO
B2	Satellite radio tuner (Terminal No. 35)
B3	Bluetooth® control unit (Terminal No. 4)
B3	Bluetooth® control unit (Terminal No. 20)
B3	Bluetooth® control unit (Terminal No. 23)
B3	Bluetooth® control unit (Terminal No. 24)
B3	Bluetooth® control unit (Terminal No. 27)
B24	Video distributor (Terminal No. 1)
B24	Video distributor (Terminal No. 3)
B55	Automatic back door control module (Terminal No. 4)
B56	Automatic back door control module shield
B56	Automatic back door control module (Terminal No. 32)
B416	Side radar LH
D21	Blind spot warning/blind spot intervention indicator LH
D21	Blind spot warning/blind spot intervention indicator LH shield
B70	Spindle unit LH (shield wire)
B162	Spindle unit RH (shield wire)
B81	Rear cargo power socket
B85	Sunshade motor assembly
B90	Rear seatback switch driver side
B412	Seatback power return control unit (Terminal No. 12)
B412	Seatback power return control unit (Terminal No. 25)
B427	Trailer tow relay 1
B428	Trailer tow relay 2
B431	Trailer back-up relay
D557	Back door lock assembly
D559	Back door opener switch (Terminal No. 2)
D559	Back door opener switch (Terminal No. 3)
B56	Automatic back door control module (shield wire) (Terminal No. 28)
D560	Automatic back door close switch
D503	High-mounted stop lamp
D553	Rear wiper motor
D561	License plate lamp LH
D562	License plate lamp RH
D563	Back-up lamp RH
D564	Back-up lamp LH

ABMIA6880GB

GROUND

< WIRING DIAGRAM >

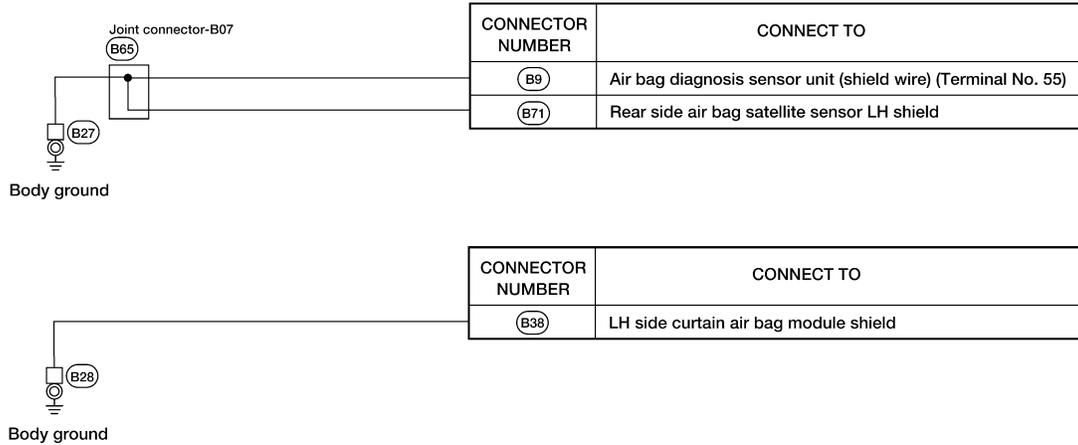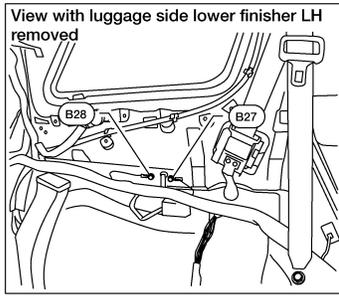




A
B
C
D
E
F
G
H
I
J
K
L
PG
N
O
P

ABMIA4847GB

GROUND

< WIRING DIAGRAM >



BODY NO. 2 HARNESS

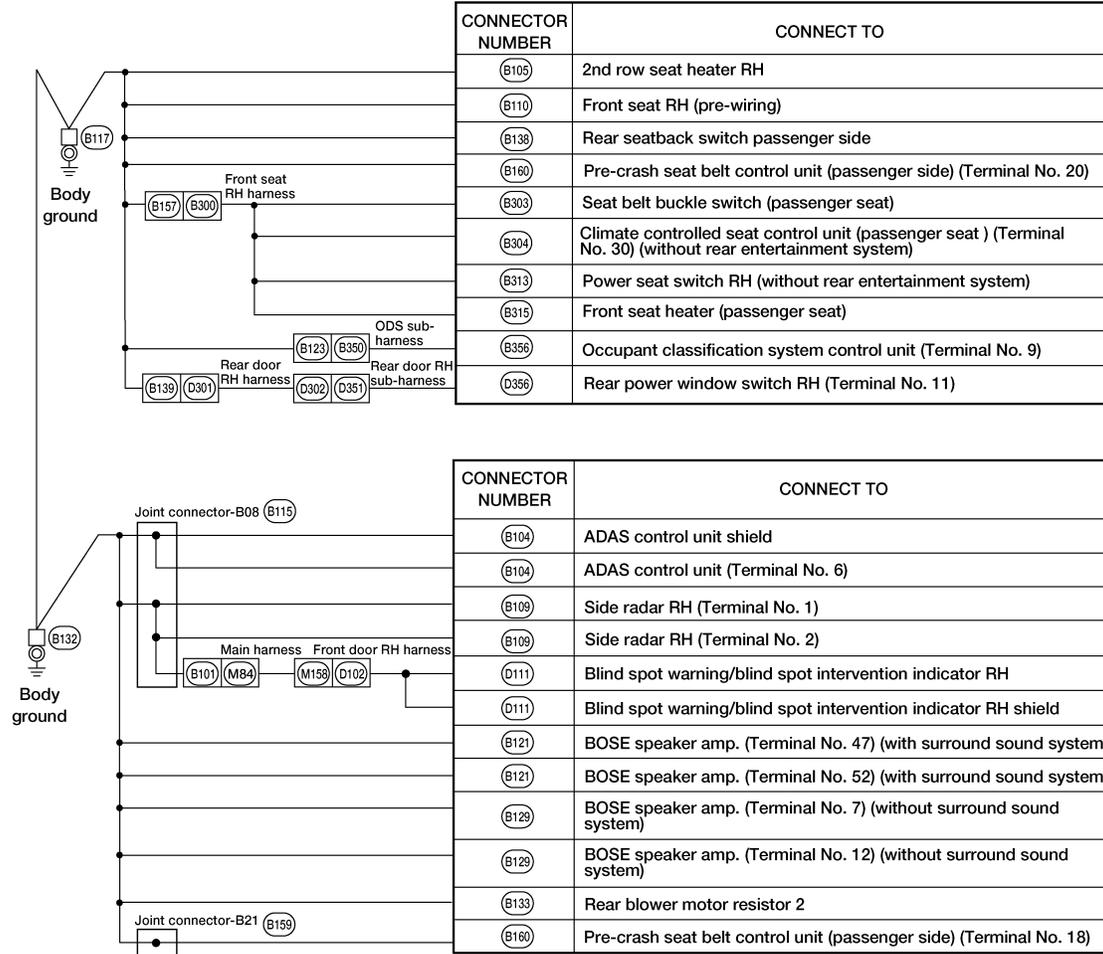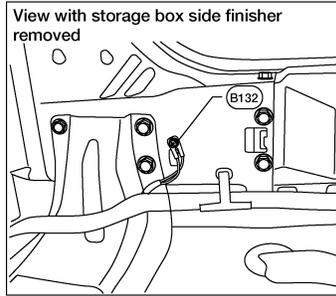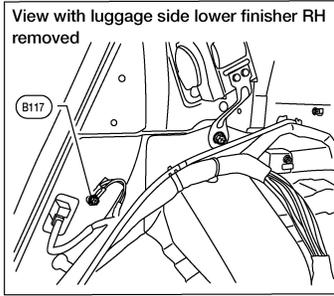

ABMIA6881GB

GROUND

< WIRING DIAGRAM >

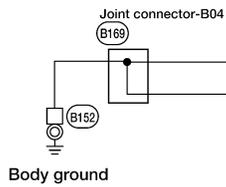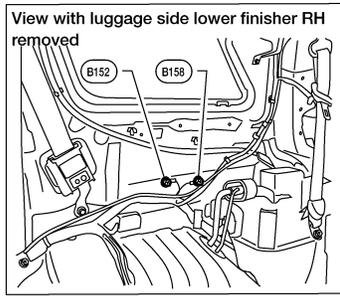

CONNECTOR NUMBER	CONNECT TO
B113	Air bag diagnosis sensor unit (shield wire) (Terminal No. 56)
B170	Rear side air bag satellite sensor RH shield



CONNECTOR NUMBER	CONNECT TO
B128	RH side curtain air bag module shield




A
B
C
D
E
F
G
H
I
J
K
L
PG
N
O
P

ABMIA4849GB

GROUND

< WIRING DIAGRAM >

BACK DOOR HARNESS

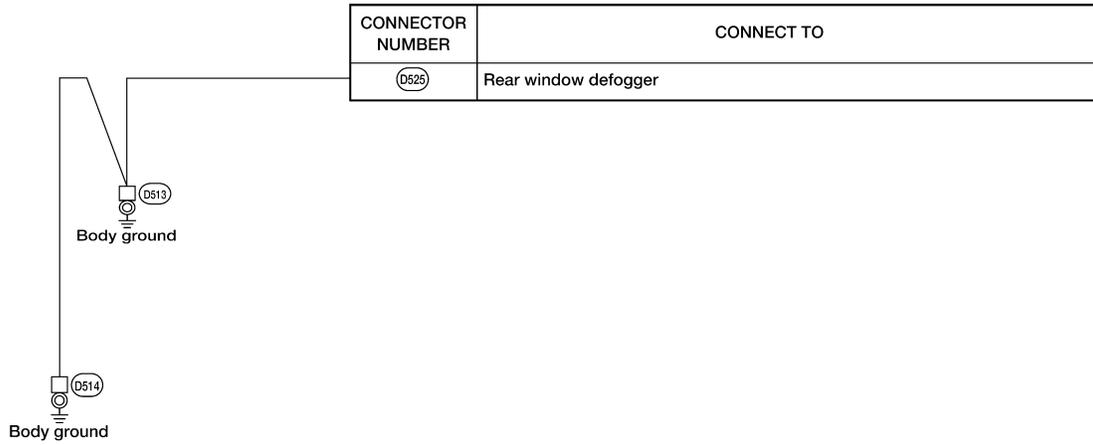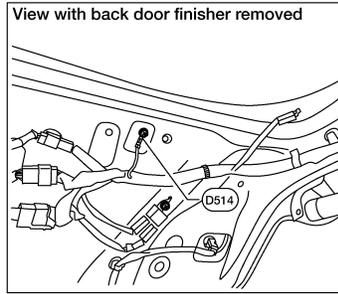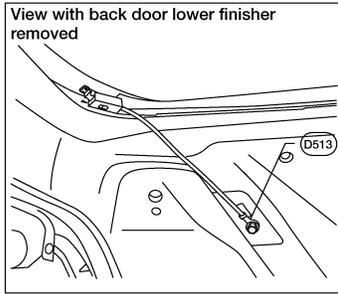

ABMIA3784GB

HARNESS

< WIRING DIAGRAM >

HARNESS

Harness Layout

INFOID:000000011134573


BOSEHOW TO READ HARNESS LAYOUT

The following Harness Layouts use a map style grid to help locate connectors on the drawings:


- Main Harness 1, Main Harness 2, Console Sub-harness and Console Switch Sub-harness
- Engine Room Harness
- Engine Room Harness (Passenger Compartment)
- Front End Module Harness, Front Fog Lamp Sub-harness and Front Combination Lamp Sub-harness
- Engine Control Harness and Knock Sensor Sub-harness
- Body Harness, Front Seat LH Harness, Body No. 3 Harness, Body No. 3 Sub-harness, Trailer Relay Sub-harness and Chassis Harness
- Body No. 2 Harness, Front Seat RH Harness and ODS Sub-harness
- Room Lamp Harness and Room Lamp Sub-harness
- Back Door LH Harness and Back Door RH Harness

To use the grid reference

1. Find the desired connector number on the connector list.
2. Find the grid reference.
3. On the drawing, find the crossing of the grid reference letter column and number row.
4. Find the connector number in the crossing zone.
5. Follow the line (if used) to the connector.

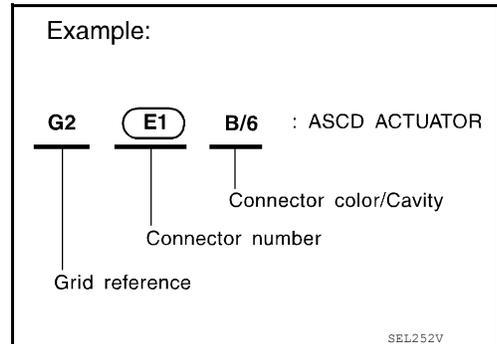


OUTLINE

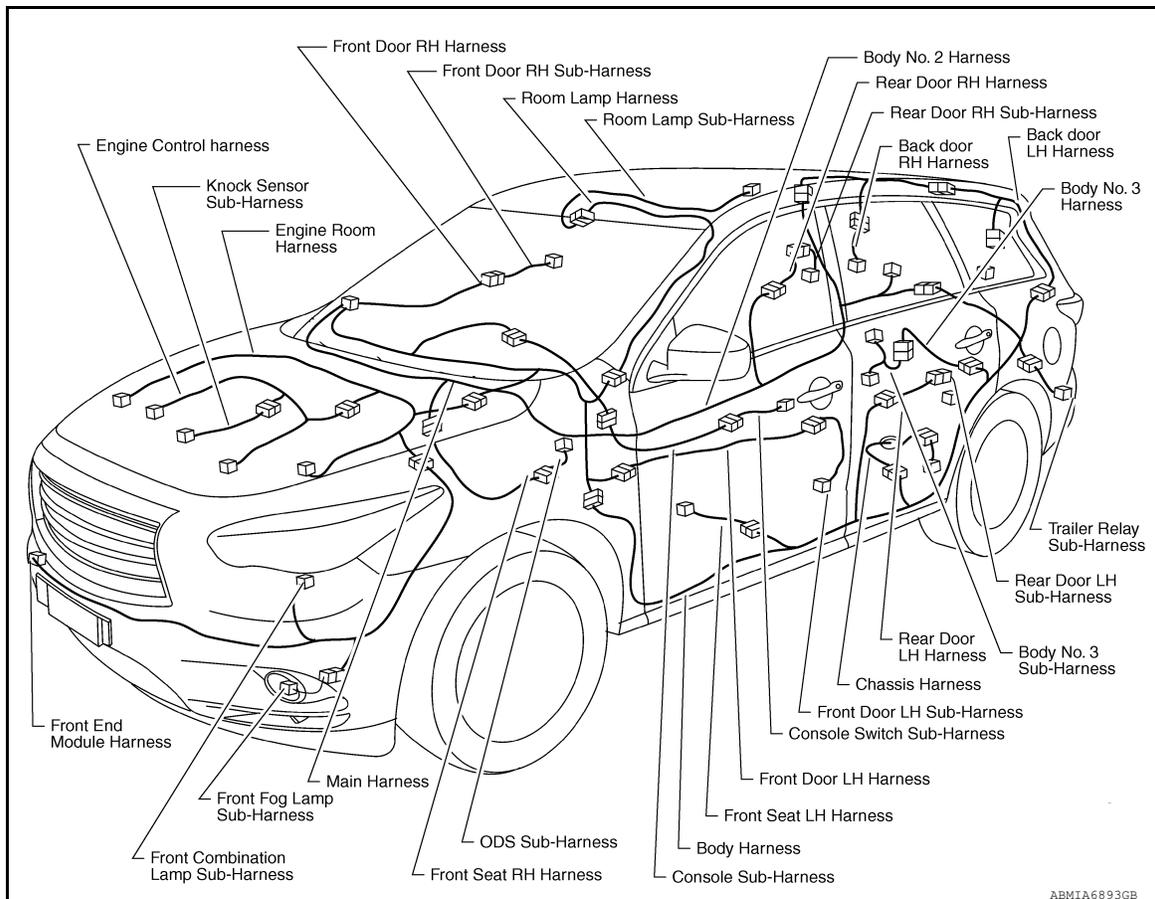

HARNESS

< WIRING DIAGRAM >

MAIN HARNESS 1

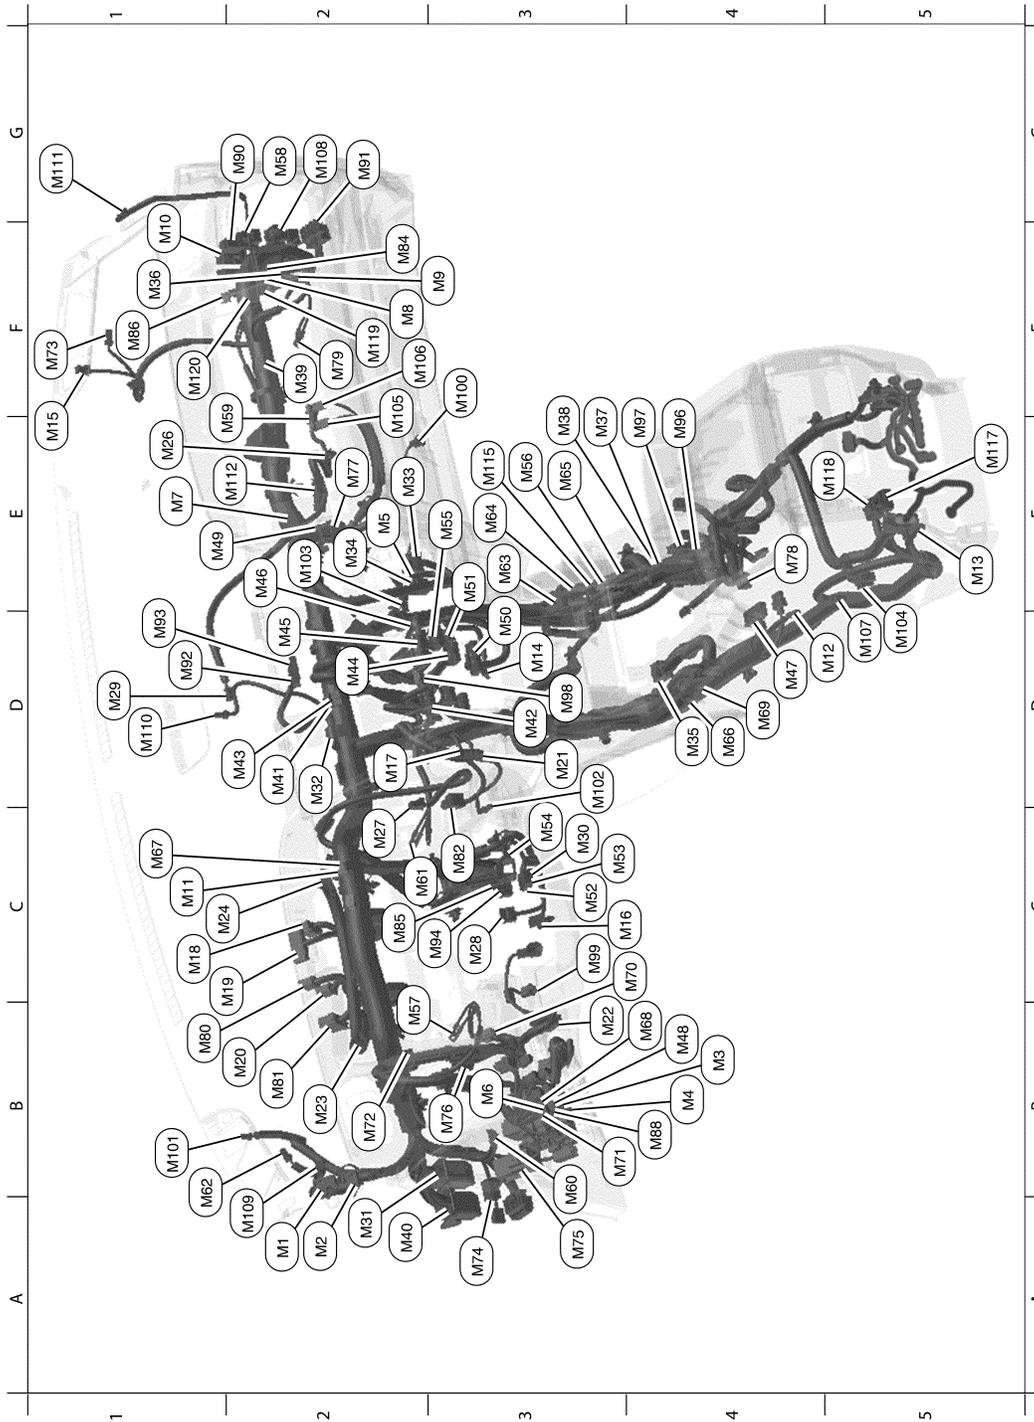

ABMIA6894ZZ

A2	M1	W/24	: To R1	G2	M58	BR/6	: Climate controlled seat relay
A2	M2	W/6	: To R2	E1	M59	B/2	: Glove box lamp
B4	M3	W/8	: Fuse block (J/B)	B3	M60	BR/4	: Warning buzzer
B4	M4	W/16	: Fuse block (J/B)	C2	M61	—	: Body ground
E2	M5	W/12	: CAN gateway	B1	M62	BR/2	: Instrument panel tweeter LH

HARNESS

< WIRING DIAGRAM >


B3	M6	GR/8	: Sonar system OFF switch	E3	M63	W/24	: To M215	A
E1	M7	W/3	: To M127	E3	M64	W/16	: To M216	
F2	M8	GR/1	: To B106	E3	M65	W/32	: To M217	B
F3	M9	W/24	: To B107	D4	M66	W/24	: To B6	
F1	M10	BR/16	: To B111	C1	M67	W/4	: Joint connector-M04	B
C1	M11	W/4	: Joint connector-M03	B4	M68	BR/16	: Fuse block (J/B)	
D5	M12	W/3	: Rear shut-off door motor	D4	M69	W/32	: To B41	C
E5	M13	W/3	: Mode door motor (Rear)	C4	M70	W/24	: Sonar control unit	
D3	M14	GR/2	: Inside key antenna (Instrument center)	B3	M71	G/8	: VDC OFF switch	D
E1	M15	W/3	: Optical sensor	B2	M72	W/6	: Joint connector-M08	
C4	M16	GR/6	: ADP steering switch	F1	M73	BR/2	: Instrument panel tweeter RH	E
D2	M17	W/8	: Push-button ignition switch	A3	M74	BR/12	: To B42	
C1	M18	G/40	: BCM (Body control module)	A3	M75	W/3	: To E36	F
C2	M19	B/40	: BCM (Body control module)	B3	M76	W/6	: Electric brake (Pre-wiring)	
B2	M20	GR/24	: BCM (Body control module)	E2	M77	Y/4	: Front passenger air bag module (Service replacement)	G
D3	M21	W/3	: NATS antenna amp.	E4	M78	W/12	: CVT shift selector	
B3	M22	W/16	: Data link connector	F2	M79	—	: Body ground	H
B2	M23	W/12	: Combination meter	B1	M80	B/24	: BCM (Body control module)	
C1	M24	W/40	: Combination meter	B2	M81	W/15	: BCM (Body control module)	I
E1	M26	Y/2	: Front passenger air bag module	C3	M82	W/2	: Circuit breaker-2	
C2	M27	W/12	: Meter control switch	F2	M84	W/32	: To B101	J
C3	M28	W/14	: Combination switch	C2	M85	W/6	: Tilt motor	
D1	M29	W/4	: Dongle unit	F1	M86	B/4	: Remote keyless entry receiver	K
C3	M30	GR/8	: Combination switch (Spiral cable)	B4	M88	B/10	: A/C 120V outlet main switch	
A2	M31	SMJ	: To E152	G2	M90	L/4	: Heated steering relay	L
D2	M32	B/2	: Diode-3	G2	M91	W/32	: To D101	
E2	M33	W/24	: Automatic drive positioner control unit	D1	M92	W/24	: Display unit (With NAVI)	PG
E2	M34	W/6	: Automatic drive positioner control unit	D1	M93	W/24	: Display unit (Without NAVI)	
D4	M35	Y/28	: Air bag diagnosis sensor unit	C3	M94	BR/6	: Telescopic motor	N
F1	M36	W/40	: To B136	E4	M96	W/40	: Around view monitor control unit	
E3	M37	W/4	: Joint connector-M28	E4	M97	W/32	: Around view monitor control unit	O
E3	M38	W/4	: Joint connector-M29	D3	M98	W/16	: A/C and AV switch assembly	
F2	M39	W/4	: Joint connector-M06	C3	M99	B/2	: Foot lamp LH	P
A2	M40	SMJ	: To B69	F3	M100	B/2	: Foot lamp RH	
D2	M41	W/4	: Joint connector-M18	B1	M101	B/2	: Sunload sensor	
D3	M42	W/32	: AV control unit (With base audio system)	D3	M102	W/2	: In-vehicle sensor	
D2	M43	W/4	: Joint connector-M17	E2	M103	W/2	: Intake sensor	
D2	M44	W/20	: AV control unit (With base audio system)	D5	M104	W/4	: Rear blower motor resistor 1	
D2	M45	W/24	: AV control unit (With base audio system)	F2	M105	Y/2	: Front passenger air bag module	
E2	M46	W/16	: AV control unit (With base audio system)	F2	M106	O/2	: Front passenger air bag module	
D4	M47	W/40	: TCU	D5	M107	W/2	: Rear blower motor 1	
B4	M48	L/8	: Heated steering wheel switch	G2	M108	BR/6	: Rear blower motor relay	
E1	M49	B/12	: Joint connector-M15	A2	M109	BR/2	: Front tweeter LH	
D3	M50	W/40	: A/C auto amp.	D1	M110	BR/2	: Center speaker	
E3	M51	W/12	: AV control unit (With base audio system)	G1	M111	BR/2	: Front tweeter RH	

HARNESS

< WIRING DIAGRAM >

C3	M52	W/2	: Combination switch (Spiral cable)	E2	M112	W/6	: Front blower motor
C3	M53	Y/6	: Combination switch (Spiral cable)	E3	M115	GR/7	: To M210
C3	M54	W/8	: Steering angle sensor	E5	M117	W/2	: PTC heater
E3	M55	L/5	: AV control unit	E5	M118	W/3	: PTC heater
E3	M56	W/16	: To M214	F2	M119	W/4	: Ionizer
B2	M57	—	: Body ground	F1	M120	W/4	: Joint connector-M21

MAIN HARNESS 2

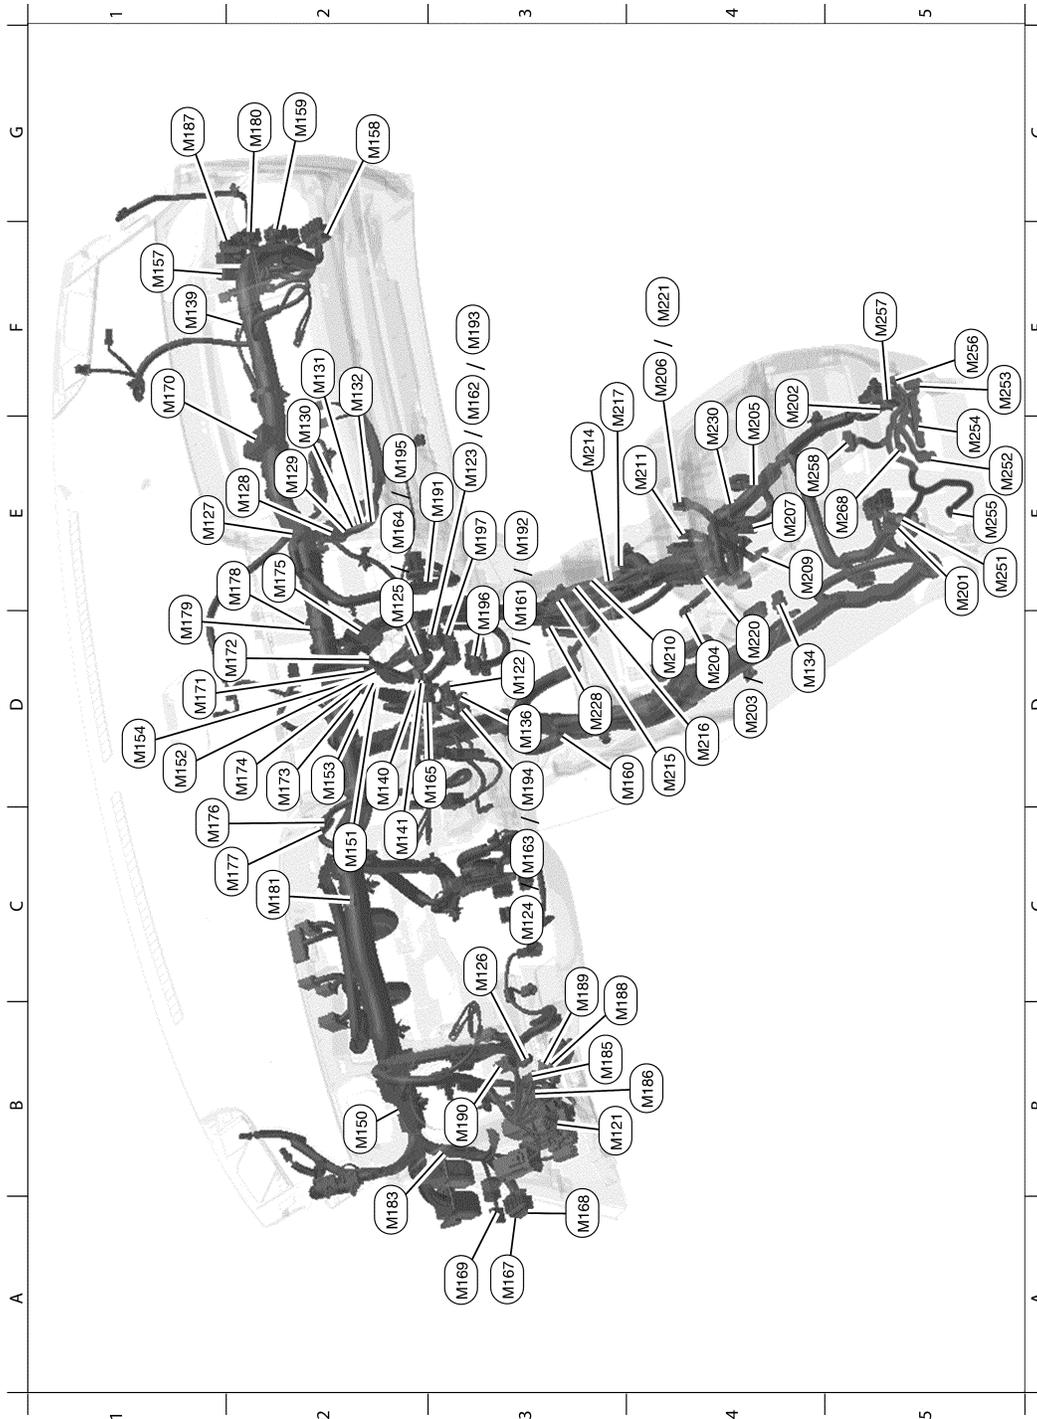

ABMIA68952Z

HARNESS

< WIRING DIAGRAM >

B3	M121	W/4	: Headlamp aiming switch	C2	M181	W/4	: Joint connector-M36	A	
D3	M122	W/20	: AV control unit (With BOSE audio system - With NAVI without surround sound system)	A2	M183	W/4	: Joint connector-M44	B	
E3	M123	W/28	: AV control unit (With BOSE audio system - with NAVI without surround sound system)	B3	M185	W/10	: Automatic back door main switch	C	
C3	M124	W/32	: AV control unit (With BOSE audio system - With NAVI without surround sound system)	B4	M186	B/8	: Automatic back door switch	D	
E2	M125	W/40	: AV control unit (With BOSE audio system - With NAVI without surround sound system)	G1	M187	W/2	: Circuit breaker-1	E	
C3	M126	B/8	: Twin switch (Warning systems switch)	C3	M188	W/24	: To M189	F	
E1	M127	W/3	: To M7	C3	M189	W/24	: To M188	G	
E2	M128	W/3	: Intake door motor	B3	M190	W/12	: Accessory prewire LH	H	
E2	M129	W/3	: Mode door motor (Front)	E3	M191	W/12	: Accessory prewire RH	I	
E2	M130	W/3	: Air mix door motor driver side	E3	M192	W/32	: AV control unit (With BOSE audio system without NAVI)	J	
F2	M131	W/3	: Air mix door motor passenger side	F3	M193	W/20	: AV control unit (With BOSE audio system without NAVI)	K	
F2	M132	W/3	: Air mix door motor (Rear)	D3	M194	W/24	: AV control unit (With BOSE audio system without NAVI)	L	
D4	M134	GR/17	: TCU	E2	M195	W/16	: AV control unit (With BOSE audio system without NAVI)	PG	
D3	M136	GR/17	: AV control unit (With telematics system)	E3	M196	W/12	: AV control unit (With BOSE audio system without NAVI)	N	
F1	M139	—	: Body ground	E3	M197	W/12	: AV control unit (With BOSE audio system without NAVI)	O	
D2	M140	L/4	: AV control unit (With NAVI)	Console sub-harness					P
D2	M141	BR/4	: Display unit	E5	M201	W/16	: To M251		
B2	M150	W/33	: Joint connector-M27	F4	M202	W/40	: To M257		
C2	M151	W/4	: Joint connector-M14	D4	M203	W/10	: Climate controlled seat switch (Driver seat)		
D1	M152	W/4	: Joint connector-M19	D4	M204	W/4	: CVT shift selector		
D2	M153	W/4	: Joint connector-M16	E4	M205	W/8	: Front auxiliary input jacks		
D1	M154	W/4	: Joint connector-M20	F4	M206	BR/8	: Climate controlled seat switch (Passenger seat)		
F1	M157	W/16	: To B161	E4	M207	GR/3	: Front console power socket		
G2	M158	W/10	: To D102	E4	M209	G/5	: USB interface		
G2	M159	Y/4	: To D103	D4	M210	GR/7	: To M115		
D4	M160	B/6	: Yaw rate/side/decel G sensor	E4	M211	B/10	: Drive mode select switch		
E3	M161	W/20	: AV control unit (With BOSE audio system - with NAVI and surround sound system)	E3	M214	W/16	: To M56		
F3	M162	W/28	: AV control unit (With BOSE audio system - with NAVI and surround sound system)	D4	M215	W/24	: To M63		
C3	M163	W/32	: AV control unit (With BOSE audio system - with NAVI and surround sound system)	D4	M216	W/16	: To M64		
E2	M164	W/40	: AV control unit (With BOSE audio system - with NAVI and surround sound system)	F3	M217	W/32	: To M65		
D3	M165	W/16	: AV control unit (With BOSE audio system - with surround sound system)	D4	M220	W/10	: Front heated seat switch LH		

HARNES


< WIRING DIAGRAM >

A3	M167	W/16	: To D2	F4	M221	BR/8	: Front heated seat switch RH
B3	M168	W/40	: To D3	D3	M228	GR/3	: Front power socket (For cigarette lighter)
A3	M169	Y/4	: To D13	E4	M230	GR/6	: Joint connector-M01
F1	M170	W/33	: Joint connector-M09	Console switch sub-harness			
D1	M171	W/4	: Joint connector-M10	E5	M251	W/16	: To M201
D2	M172	W/4	: Joint connector-M11	E5	M252	W/6	: 2nd row heated seat switch LH
D2	M173	W/4	: Joint connector-M12	F5	M253	BR/6	: 2nd row heated seat switch RH
D2	M174	W/4	: Joint connector-M13	E5	M254	W/40	: Rear auxiliary input jacks
E2	M175	W/33	: Joint connector-M22	E5	M255	GR/2	: Inside key antenna (Console)
C1	M176	W/4	: Joint connector-M56	F5	M256	W/4	: A/C 120V outlet
C2	M177	W/4	: Joint connector-M57	F5	M257	W/40	: To M202
E2	M178	W/4	: Joint connector-M58	E4	M258	W/12	: Rear air control
D1	M179	W/4	: Joint connector-M59	E5	M268	GR/3	: Rear console power socket
G2	M180	BR/6	: Heated seat relay				

HARNESS

< WIRING DIAGRAM >

ENGINE ROOM HARNESS

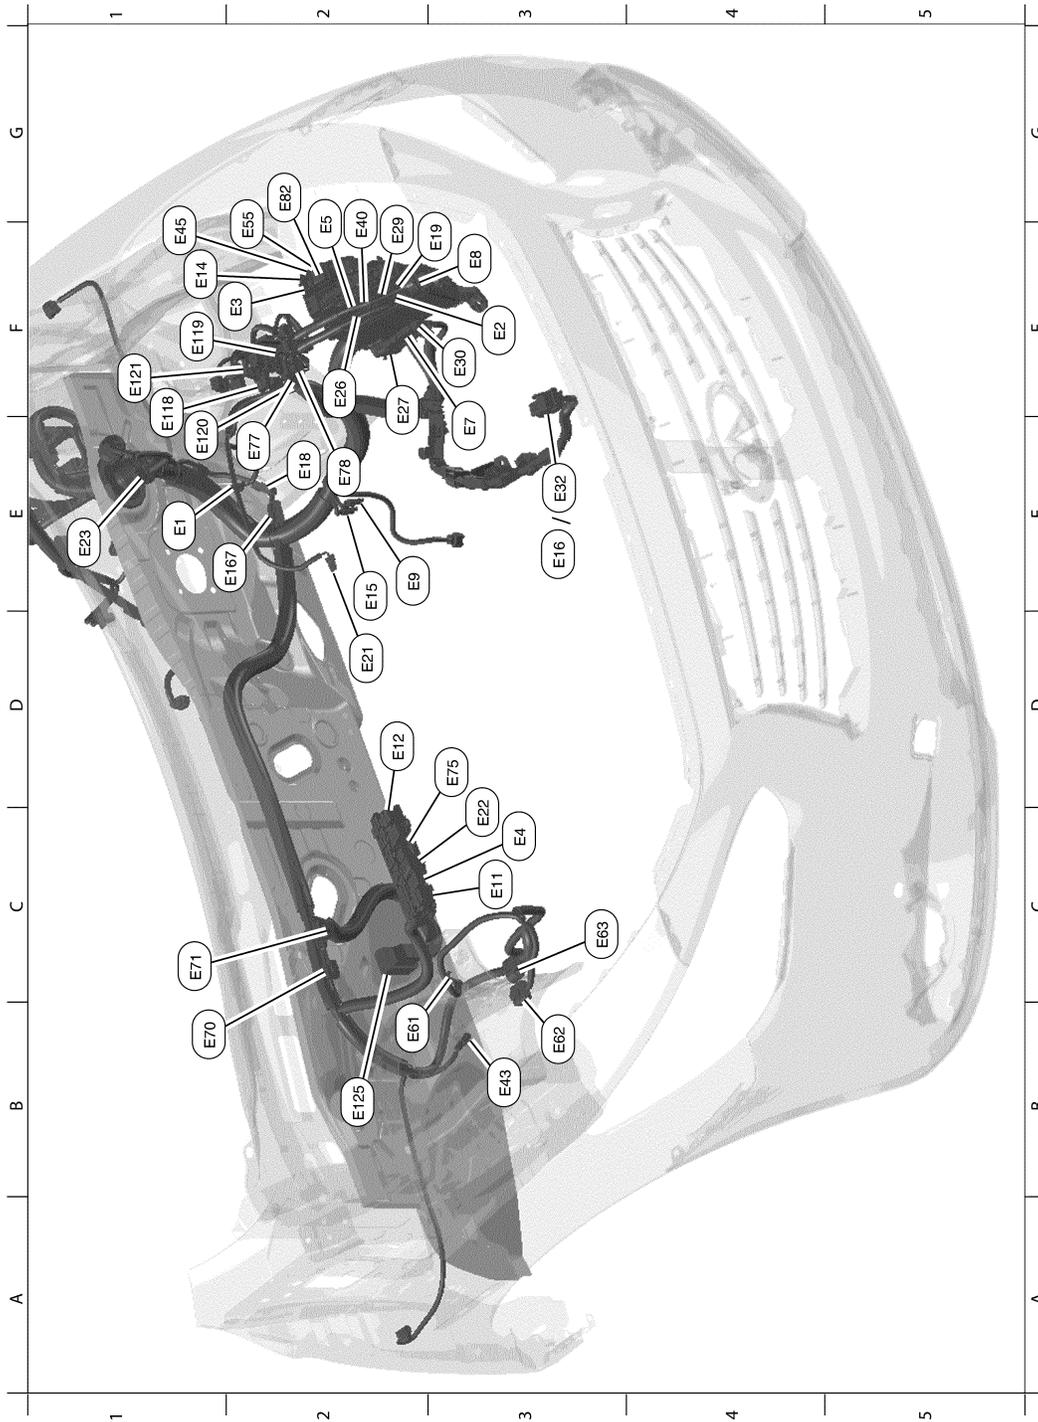

ABMIA68962Z

E1	E1	BR/3	: Intelligent Key warning buzzer	F3	E30	B/1	: Fusible link box (Battery)
F3	E2	W/16	: To F32	E3	E32	B/32	: ECM (Except for Mexico)
F2	E3	B/2	: Anti theft diode	G2	E40	B/2	: To E201
C3	E4	BR/6	: Daytime running light relay	B3	E43	B/2	: Front wheel sensor RH
G2	E5	W/16	: To E207	F1	E45	L/12	: Joint connector-E12

HARNES


< WIRING DIAGRAM >

E3	E7	GR/2	: Fusible link box (Battery)	G2	E55	W/4	: Joint connector-E10
F3	E8	W/3	: Anti theft horn relay	B2	E61	—	: Body ground
E2	E9	—	: Body ground	B3	E62	B/6	: Power steering control module
C3	E11	L/5	: PTC relay-1	C3	E63	B/2	: Power steering control module
D2	E12	L/5	: PTC relay-2	B1	E70	B/6	: Joint connector-E14
F1	E14	B/12	: Joint connector-E05	C1	E71	B/6	: Joint connector-E15
E2	E15	—	: Body ground	D3	E75	L/4	: ICC brake hold relay
E3	E16	GR/32	: ECM (For Mexico)	E2	E77	L/4	: Trailer turn relay LH
E2	E18	B/2	: Front wheel sensor LH	E2	E78	L/4	: Trailer turn relay RH
F3	E19	W/10	: To F33	G2	E82	BR/4	: Cooling fan relay
D2	E21	GR/2	: Brake fluid level switch	F1	E118	B/2	: IPDM E/R (Intelligent power distribution module engine room)
C3	E22	L/4	: Accessory relay-2	F1	E119	W/32	: IPDM E/R (Intelligent power distribution module engine room)
E1	E23	GR/5	: Front wiper motor	E1	E120	W/4	: IPDM E/R (Intelligent power distribution module engine room)
F2	E26	W/24	: To E209	F1	E121	W/12	: IPDM E/R (Intelligent power distribution module engine room)
F2	E27	BR/2	: Fusible link box (Battery)	B2	E125	B/34	: ABS actuator and electric unit (Control unit)
F2	E29	Y/4	: To E210	E2	E167	B/3	: Vacuum sensor

HARNESS

< WIRING DIAGRAM >

ENGINE ROOM HARNESS (PASSENGER VIEW)

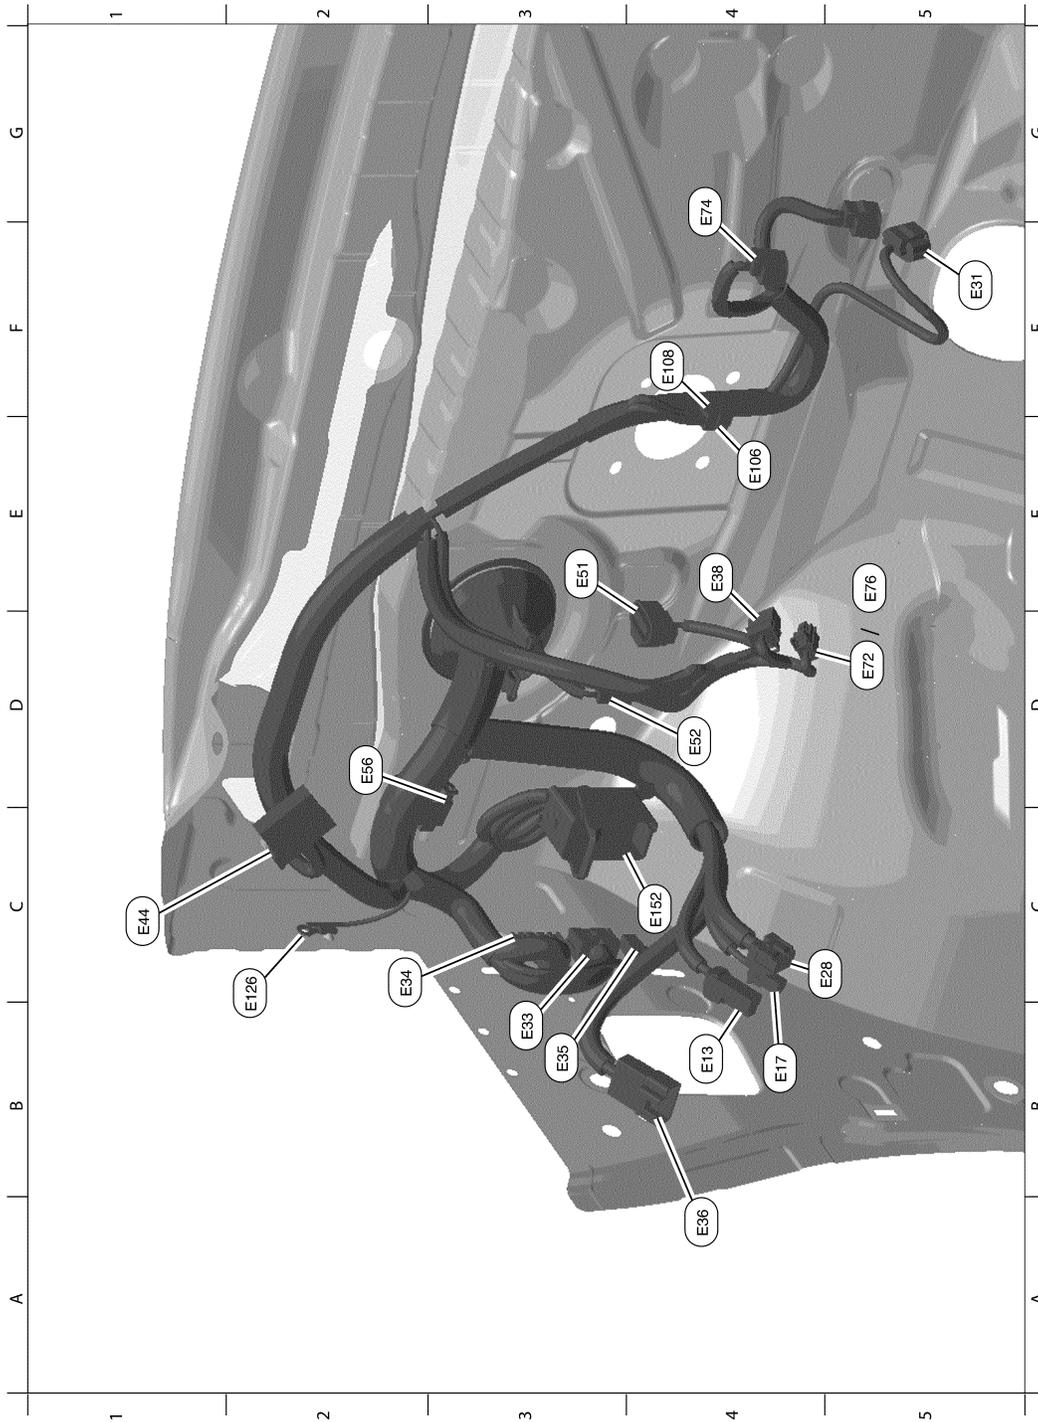

ABMIA68972Z

B4	E13	W/1	: Fuse block (J/B)	E3	E51	B/4	: Brake pedal stroke sensor
B4	E17	W/1	: Fuse block (J/B)	D4	E52	B/1	: Parking brake switch
C5	E28	W/10	: Fuse block (J/B)	D2	E56	BR/2	: VDC resistor
F5	E31	B/6	: Accelerator pedal position sensor (Without intelligent cruise control)	D5	E72	BR/2	: Brake pedal position switch (With intelligent cruise control)

HARNESS


< WIRING DIAGRAM >

B3	E33	W/12	: To B43	G4	E74	B/12	: Accelerator pedal actuator (With intelligent cruise control)
C2	E34	W/24	: To B40	E5	E76	BR/2	: Brake pedal position switch (Without intelligent cruise control)
B3	E35	GR/1	: To B48	E4	E106	W/4	: Joint connector-E06
A4	E36	W/3	: To M75	F4	E108	W/4	: Joint connector-E07
E4	E38	W/4	: Stop lamp switch	C2	E126	—	: Body ground
C1	E44	W/33	: Joint connector-E01	C4	E152	SMJ	: To M31

HARNESS

< WIRING DIAGRAM >

FRONT END MODULE HARNESS

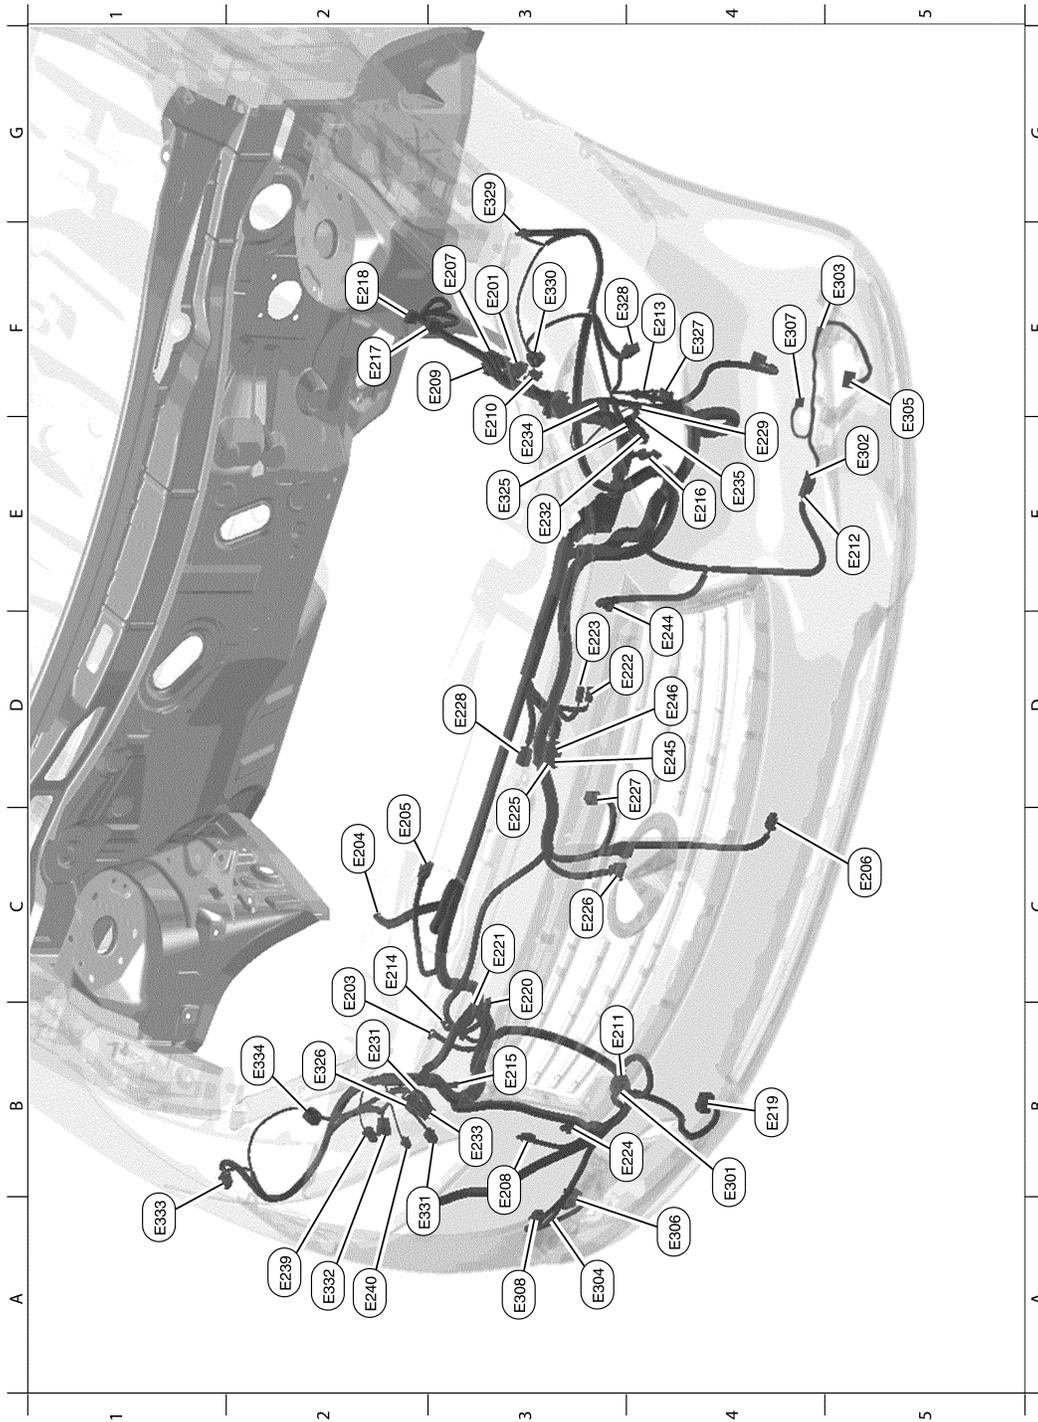

AAMIA01292Z

F3	E201	B/2	: To E40	E3	E232	B/8	: To E325
C2	E203	—	: Body ground	B3	E233	GR/8	: To E326
C2	E204	-/1	: Generator	E3	E234	GR/2	: Front combination lamp LH
C2	E205	BR/3	: Hood switch	E4	E235	GR/2	: Front combination lamp LH
C5	E206	B/2	: Ambient sensor	A2	E239	GR/2	: Front combination lamp RH

HARNES

< WIRING DIAGRAM >

F3	E207	W/16	: To E5	A2	E240	GR/2	: Front combination lamp RH
B3	E208	B/2	: Washer fluid level switch	D4	E244	B/3	: Refrigerant pressure sensor
F3	E209	W/24	: To E26	D4	E245	BR/2	: Cooling fan control module (cooling fan motor-1)
E3	E210	Y/4	: To E29	D4	E246	GR/2	: Cooling fan control module (cooling fan motor-2)
B3	E211	GR/8	: To E301	Front fog lamp sub-harness			
E5	E212	GR/8	: To E302	B4	E301	GR/8	: To E211
F4	E213	—	: Body ground	E5	E302	GR/8	: To E212
C2	E214	—	: Body ground	F5	E303	GR/2	: Front fog lamp LH
B3	E215	—	: Body ground	A3	E304	GR/2	: Front fog lamp RH
E4	E216	—	: Body ground	F5	E305	B/2	: Front fog lamp LH
F2	E217	W/8	: IPDM E/R (intelligent power distribution module engine room)	A4	E306	B/2	: Front fog lamp RH
F2	E218	W/16	: IPDM E/R (intelligent power distribution module engine room)	F4	E307	B/3	: Front sonar sensor LH outer
B4	E219	B/8	: ICC sensor	A3	E308	B/3	: Front sonar sensor RH outer
C3	E220	B/1	: Horn (high)	Front combination lamp sub-harness			
C3	E221	B/1	: Horn (high)	E3	E325	B/8	: To E232
D4	E222	B/1	: Horn (low)	B2	E326	GR/8	: To E233
D3	E223	B/1	: Horn (low)	F4	E327	B/2	: Front combination lamp LH
B4	E224	B/2	: Front and rear washer motor	F3	E328	GR/2	: Front combination lamp LH
C3	E225	GR/3	: Cooling fan control module	G3	E329	GR/2	: Front combination lamp LH
C3	E226	B/6	: Front camera	F3	E330	GR/3	: Front combination lamp LH (headlamp aiming motor)
D4	E227	B/3	: Exhaust gas/outside odor detecting sensor	A2	E331	B/2	: Front combination lamp RH
D3	E228	Y/2	: Crash zone sensor	A2	E332	GR/2	: Front combination lamp RH
E4	E229	—	: Body ground	A1	E333	GR/2	: Front combination lamp RH
B2	E231	B/1	: Anti theft horn	B2	E334	GR/3	: Front combination lamp RH (headlamp aiming motor)

HARNESS

< WIRING DIAGRAM >

ENGINE CONTROL HARNESS



ABMIA66982Z

B5	F3	B/2	: A/C compressor	E2	F50	B/6	: Electric throttle control actuator
C5	F5	BR/4	: Air fuel ratio (A/F) sensor 1 (Bank 2) (For Mexico)	E5	F51	B/48	: ECM (For Mexico)
C5	F6	-/1	: Generator	F4	F52	BR/48	: ECM (For Mexico)
C4	F7	B/3	: Generator	E5	F53	B/10	: Joint connector-F03

HARNESS

< WIRING DIAGRAM >

C4	F8	GR/3	: Ignition coil No. 2 (With power transistor)	B3	F54	B/3	: Engine oil pressure sensor
C4	F9	GR/3	: Ignition coil No. 4 (With power transistor)	F5	F55	B/10	: Joint connector-F04
D4	F10	GR/3	: Ignition coil No. 6 (With power transistor)	G4	F56	W/4	: Joint connector-F07
D5	F11	B/3	: Crankshaft position sensor (POS)	G4	F57	W/4	: Joint connector-F08
E3	F12	B/4	: Heated oxygen sensor 2 (Bank 2) (For Mexico)	C2	F58	G/6	: Joint connector-F09
B2	F13	B/4	: Heated oxygen sensor 2 (Bank 1) (For Mexico)	B4	F59	—	: Engine ground
F5	F14	B/10	: Joint connector-F01	B3	F60	—	: Engine ground
D4	F16	L/2	: Evap canister purge volume control solenoid valve	E3	F61	GR/2	: Engine coolant temperature sensor
F3	F17	B/1	: IPDM E/R (Intelligent power distribution module engine room)	B2	F62	GR/2	: Intake valve timing control solenoid valve (Bank 1) (For Mexico)
C3	F18	GR/2	: Fuel injector No. 2	A4	F63	GR/2	: Intake valve timing control solenoid valve (Bank 2) (For Mexico)
G3	F19	W/10	: IPDM E/R (Intelligent power distribution module engine room)	B3	F64	BR/2	: Electronic controlled engine mount control solenoid valve
C3	F20	GR/2	: Fuel injector No. 4	D2	F65	BR/4	: Air fuel ratio (A/F) sensor 1 (Bank 1) (For Mexico)
D3	F21	W/2	: Condenser-1	C3	F66	B/2	: VIAS control solenoid valve 1
D3	F22	GR/2	: Fuel injector No. 6	C3	F67	B/2	: VIAS control solenoid valve 2
G2	F24	W/12	: IPDM E/R (Intelligent power distribution module engine room)	C2	F68	GR/2	: Engine oil temperature sensor
E5	F25	B/48	: TCM (Transmission control module) (For Mexico)	D2	F72	GR/4	: Air fuel ratio (A/F) sensor 1 (Bank 1) (Except for Mexico)
D3	F26	L/4	: To F201	D5	F73	GR/4	: Air fuel ratio (A/F) sensor 1 (Bank 2) (Except for Mexico)
F4	F27	-/1	: Starter motor	F3	F74	B/4	: Mass air flow sensor (Except for Mexico)
E4	F28	GR/1	: Starter motor	B2	F75	GR/4	: Heated oxygen sensor 2 (Bank 1) (Except for Mexico)
E5	F29	B/10	: Transmission range switch	E3	F76	GR/4	: Heated oxygen sensor 2 (Bank 2) (Except for Mexico)
B3	F30	GR/2	: Fuel injector No. 1	B2	F77	GR/2	: Intake valve timing control solenoid valve (Bank 1) (Except for Mexico)
E3	F31	B/6	: Mass air flow sensor (For Mexico)	E5	F78	B/55	: ECM (Except for Mexico)
G3	F32	W/16	: To E2	F4	F79	B/65	: ECM (Except for Mexico)
F4	F33	W/10	: To E19	B4	F80	GR/2	: Intake valve timing control solenoid valve (Bank 2) (Except for Mexico)
F5	F34	GR/4	: Battery current sensor	C2	F81	GR/2	: Intake valve timing intermediate lock control solenoid valve (Bank 1)
F4	F35	B/3	: Primary speed sensor	B5	F82	GR/2	: Intake valve timing intermediate lock control solenoid valve (Bank 2)
F4	F36	B/3	: Output speed sensor	D2	F83	B/3	: Exhaust valve timing control position sensor (PHASE) (Bank 1) (Except for Mexico)
E5	F37	B/3	: Input speed sensor	D5	F84	B/3	: Exhaust valve timing control position sensor (PHASE) (Bank 2) (Except for Mexico)
F5	F38	B/10	: Joint connector-F02	B4	F85	GR/2	: Exhaust valve timing control solenoid valve (Bank 2) (Except for Mexico)

HARNES

< WIRING DIAGRAM >

F3	F39	-/1	: Fusible link box (Battery)	B2	F86	GR/2	: Exhaust valve timing control solenoid valve (Bank 1) (Except for Mexico)	A
C3	F41	GR/2	: Fuel injector No. 3	D2	F87	B/3	: Camshaft position sensor (PHASE) (Bank 1) (Except for Mexico)	B
D3	F42	GR/2	: Fuel injector No. 5	D4	F88	B/3	: Camshaft position sensor (PHASE) (Bank 2) (Except for Mexico)	B
F4	F43	GR/22	: CVT unit	E5	F89	B/48	: TCM (Transmission control module) (Except for Mexico)	C
D2	F44	B/3	: Camshaft position sensor (PHASE) (Bank 1) (For Mexico)	Knock sensor sub-harness				D
D4	F45	B/3	: Camshaft position sensor (PHASE) (Bank 2) (For Mexico)	D3	F201	L/4	: To F26	D
C2	F47	GR/3	: Ignition coil No. 1 (With power transistor)	D3	F202	GR/2	: Knock sensor (Bank 1)	E
C2	F48	GR/3	: Ignition coil No. 3 (With power transistor)	C3	F204	GR/2	: Knock sensor (Bank 2)	E
D2	F49	GR/3	: Ignition coil No. 5 (With power transistor)					F

G

H

I

J

K

L

PG

N


O

P

HARNESS

< WIRING DIAGRAM >

BODY HARNESS

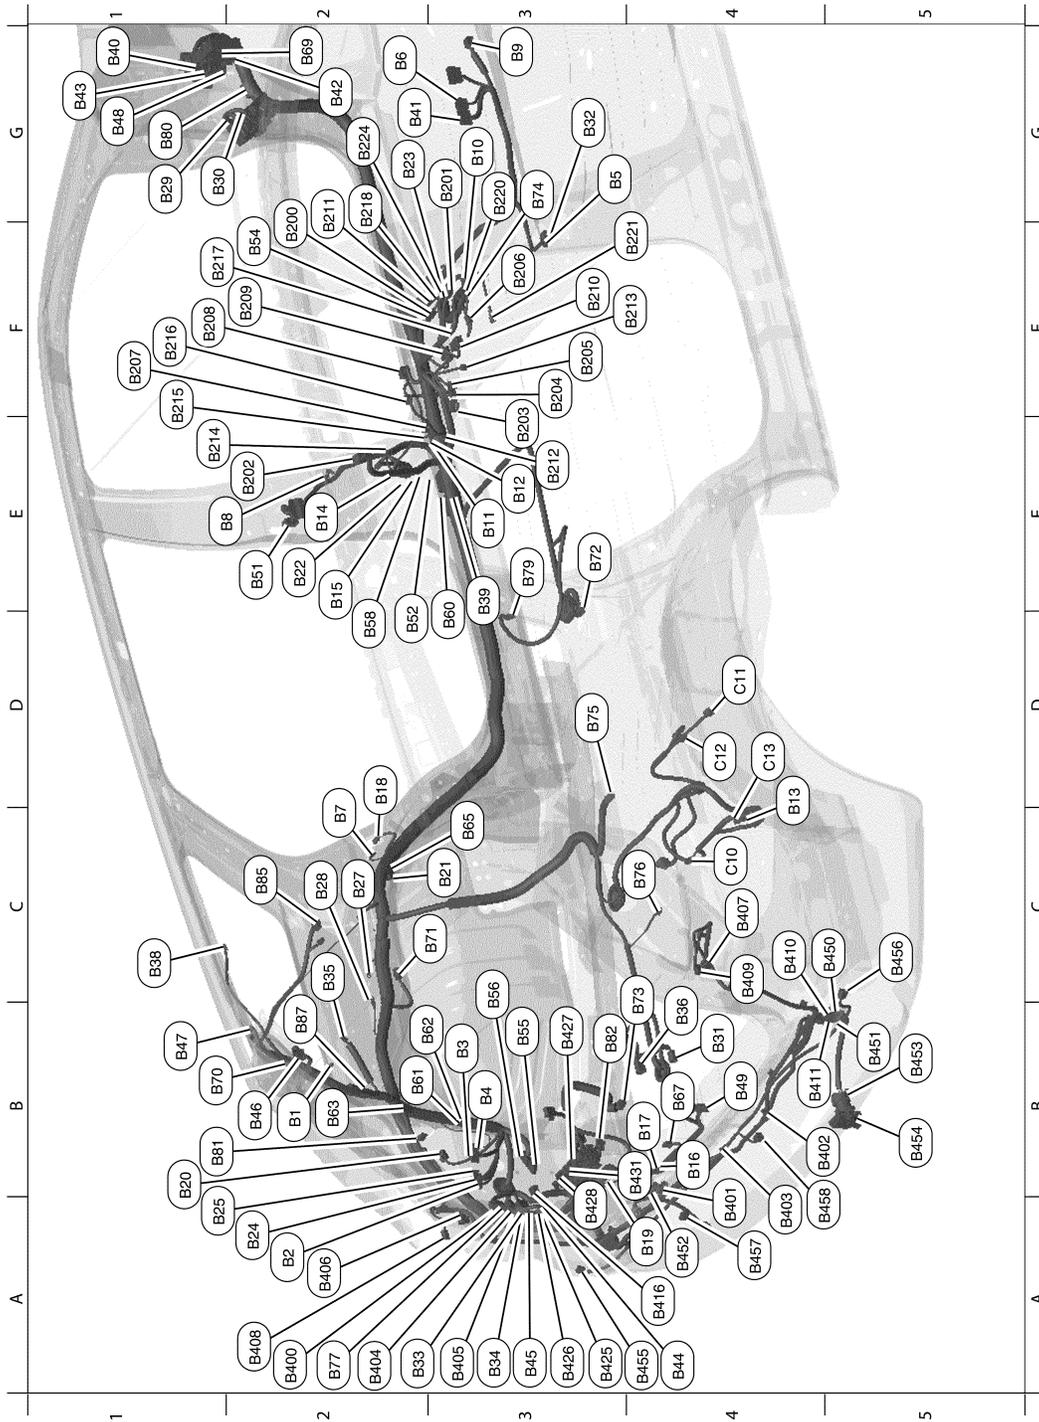

ABMIA48332Z

B2	B1	BR/2	: Rear side speaker LH	C4	B76	GR/2	: Inside key antenna (Luggage room)
A2	B2	W/16	: Satellite radio tuner	A2	B77	W/32	: To B400
B3	B3	W/32	: Bluetooth® control unit	E3	B79	W/6	: 2nd row seat heater LH
B3	B4	W/8	: Bluetooth® control unit	G1	B80	W/4	: Joint connector-B17
G3	B5	W/16	: Front seat LH (Pre-wiring)	B1	B81	GR/3	: Rear cargo power socket

HARNESSES

< WIRING DIAGRAM >

G2	B6	W/24	: To M66	B3	B82	B/8	: Inverter unit	A	
C2	B7	—	: Body ground	C2	B85	W/10	: Sunshade motor assembly		
E1	B8	W/4	: Front door switch LH	B2	B87	W/4	: Joint connector-B16		
G3	B9	Y/22	: Air bag diagnosis sensor unit	Front seat LH harness				B	
G3	B10	Y/2	: Front LH side air bag module	G2	B200	BR/12	: To B54		
E3	B11	W/4	: Joint connector-B09	G3	B201	W/24	: To B23		
E3	B12	W/4	: Joint connector-B10	E2	B202	W/32	: Headrest display unit (Driver seat)	C	
D4	B13	B/14	: To C13	E3	B203	B/16	: Climate controlled seat control unit (Driver seat)	D	
E2	B14	Y/2	: Front LH seat belt pre-tensioner	F3	B204	B/8	: Climate controlled seat control unit (Driver seat)	E	
E2	B15	Y/2	: Front side air bag satellite sensor LH	F3	B205	B/6	: Climate controlled seat control unit (Driver seat)		
B4	B16	W/4	: Joint connector-B11	F3	B206	W/4	: Seat cushion thermal electric device (Driver seat)	F	
B4	B17	W/4	: Joint connector-B12	F1	B207	W/6	: Lifting motor LH (Rear)		
D2	B18	W/4	: Rear door switch LH	F1	B208	W/10	: Power seat switch LH	G	
A4	B19	—	: Body ground	F2	B209	W/32	: Driver seat control unit		
B1	B20	W/4	: Fuel lid door lock actuator	F3	B210	W/12	: Driver seat control unit	H	
C3	B21	W/4	: Joint connector-B20	G2	B211	GR/5	: Sliding motor LH		
E2	B22	O/2	: Front LH seat belt pre-tensioner	E3	B212	W/4	: Seat back thermal electric device (Driver seat)	I	
G2	B23	W/24	: To B201	F4	B213	W/5	: Climate controlled seat blower motor (Driver seat)		
A2	B24	W/32	: Video distributor	E1	B214	BR/4	: Lumbar support switch	J	
A1	B25	W/24	: Video distributor	F1	B215	B/2	: Lumbar support motor		
C2	B27	—	: Body ground	F1	B216	W/3	: Front seat heater (Driver seat)	K	
C2	B28	—	: Body ground	F1	B217	W/6	: Reclining motor LH		
G1	B29	W/6	: Fuse block (J/B)	G2	B218	W/6	: Lifting motor LH (Front)	L	
G1	B30	W/8	: Fuse block (J/B)	G3	B220	W/12	: To B74		
B4	B31	B/2	: Evap canister vent control valve	F4	B221	W/4	: Seat belt buckle switch (Driver seat)	PG	
G3	B32	W/32	: To B124	G2	B224	P/20	: Joint connector-B22		
A2	B33	B/2	: To B404	Body No. 3 harness					
A3	B34	W/8	: To B405	A2	B400	W/32	: To B77		
C2	B35	W/4	: Sonar buzzer	A4	B401	B/12	: To B452		
B4	B36	GR/3	: Evap control system pressure sensor	B4	B402	BR/2	: Back door warning chime	N	
C1	B38	Y/2	: LH side curtain air bag module	A4	B403	GR/2	: Outside key antenna (Rear bumper)		
E3	B39	W/4	: Joint connector-B05	A2	B404	B/2	: To B33	O	
G1	B40	W/24	: To E34	A3	B405	W/8	: To B34		
G2	B41	W/32	: To M69	A2	B406	GR/3	: Rear combination lamp LH	P	
G2	B42	BR/12	: To M74	C4	B407	GR/3	: Rear combination lamp RH		
G1	B43	W/12	: To E33	A2	B408	GR/2	: Rear combination lamp LH		
A4	B44	B/2	: To B425	C4	B409	GR/2	: Rear combination lamp RH		
A3	B45	W/16	: To B426	C4	B410	GR/6	: To B450		
B2	B46	W/24	: To D501	B4	B411	B/2	: To B451		
B1	B47	GR/8	: To D502	A4	B416	B/6	: Side radar LH		
G1	B48	W/1	: To E35	Trailer relay sub-harness					


HARNES

< WIRING DIAGRAM >

B4	B49	W/16	: To B140	A3	B425	B/2	: To B44
E2	B51	W/12	: To D201	A3	B426	W/16	: To B45
D2	B52	W/2	: Condenser-2	B3	B427	L/4	: Trailer tow relay 1
F2	B54	BR/12	: To B200	A3	B428	BR/6	: Trailer tow relay 2
B3	B55	B/24	: Automatic back door control module	B4	B431	L/4	: Trailer back-up relay
C3	B56	GR/14	: Automatic back door control module	Body No. 3 sub harness			
D2	B58	W/20	: Pre-crash seat belt control unit (Driver side)	C5	B450	GR/6	: To B410
D3	B60	W/4	: Joint connector-B06	B5	B451	B/2	: To B411
B2	B61	W/4	: Joint connector-B18	A4	B452	B/12	: To B401
B2	B62	W/4	: Joint connector-B19	B5	B453	B/7	: Trailer
B2	B63	W/33	: Joint connector-B01	B5	B454	B/7	: Trailer receptacle
C3	B65	W/4	: Joint connector-B07	A4	B455	B/3	: Rear sonar sensor LH outer
B4	B67	W/16	: AWD control unit	C5	B456	B/3	: Rear sonar sensor RH outer
G2	B69	SMJ	: To M40	A4	B457	B/3	: Rear sonar sensor LH inner
B1	B70	B/10	: Spindle unit LH	A5	B458	B/3	: Rear sonar sensor RH inner
C3	B71	Y/2	: Rear side air bag satellite sensor LH	Chassis harness			
E3	B72	GR/6	: Fuel level sensor and fuel pump	C4	C10	B/2	: Rear wheel sensor LH
C4	B73	GR/4	: Subwoofer	D4	C11	GR/2	: Rear wheel sensor RH
G3	B74	W/12	: To B220	D4	C12	GR/2	: AWD solenoid
D3	B75	W/16	: To B145	D4	C13	B/14	: To B13

HARNESS

< WIRING DIAGRAM >
 BODY NO. 2 HARNESS

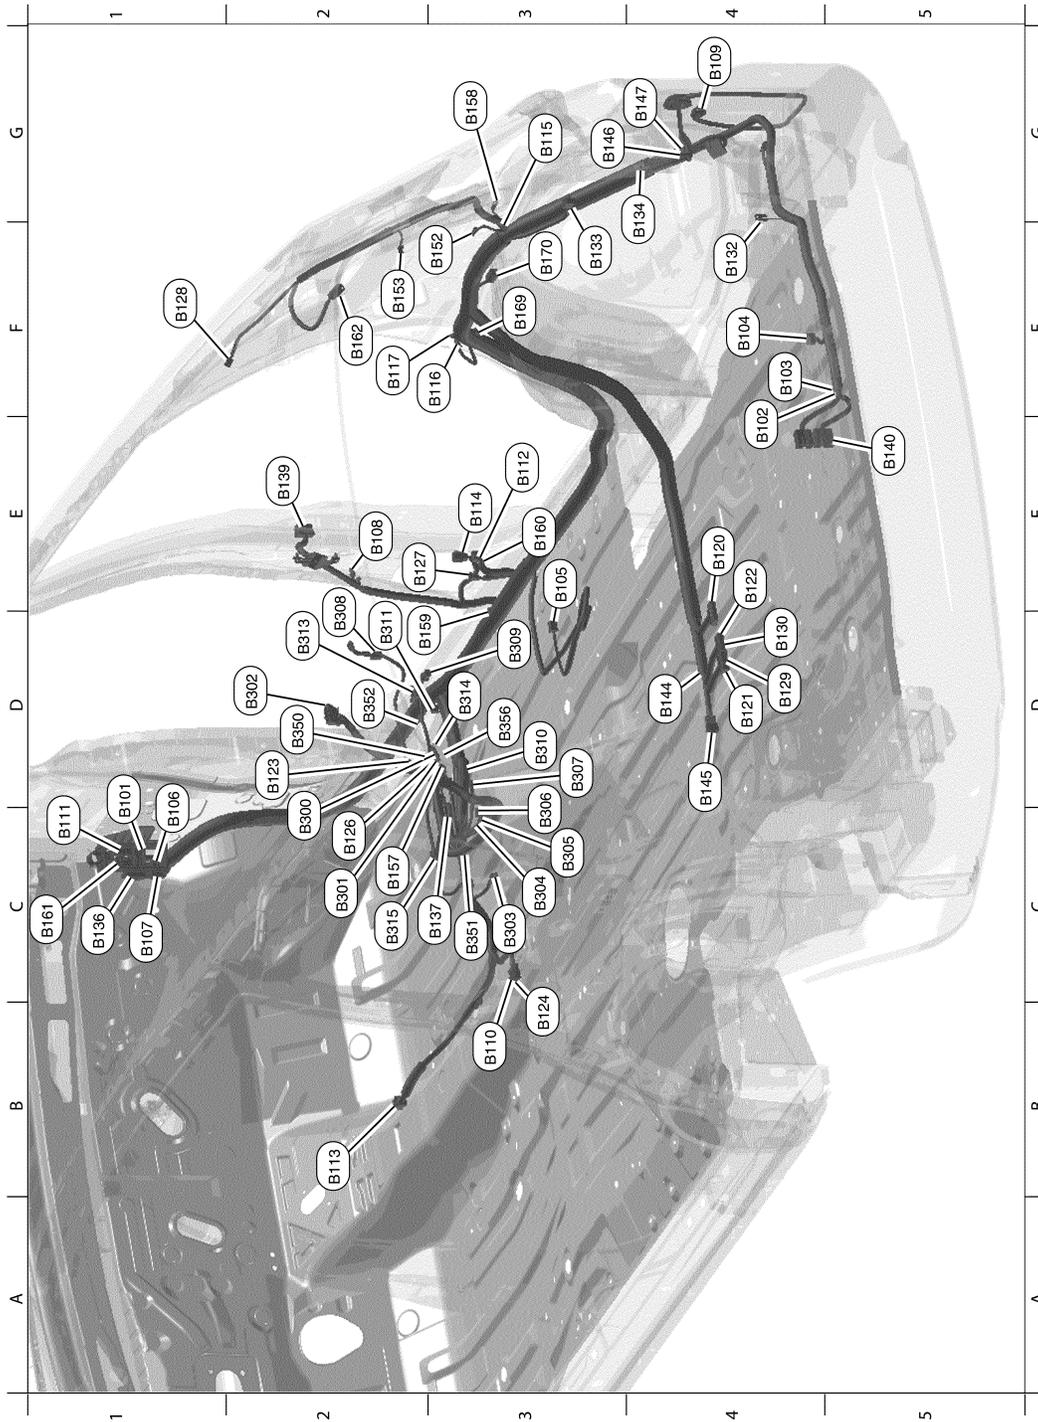

ABMIA48342Z

D1	B101	W/32	: To M84	D4	B145	W/16	: To B75
E4	B102	W/4	: Joint connector-B14	G3	B146	W/4	: Joint connector-B12
F4	B103	W/4	: Joint connector-B15	G4	B147	W/4	: Joint connector-B13
F4	B104	W/16	: ADAS control unit	F3	B152	—	: Body ground
E3	B105	W/6	: 2nd row seat heater RH	F2	B153	BR/2	: Rear side speaker RH

HARNES


< WIRING DIAGRAM >

D1	B106	GR/1	: To M8	C2	B157	W/12	: To B300	
C1	B107	W/24	: To M9	G3	B158	—	: Body ground	
E2	B108	W/4	: Front door switch RH	D2	B159	W/4	: Joint connector-B21	
G4	B109	B/6	: Side radar RH	E3	B160	W/20	: Pre-crash seat belt control unit (Passenger side)	
B3	B110	W/24	: Front seat RH (Pre-wiring)	C1	B161	W/16	: To M157	
C1	B111	BR/16	: To M10	F2	B162	B/10	: Spindle unit RH	
E3	B112	O/2	: Front RH seat belt pre-tensioner	F3	B169	W/4	: Joint connector-B04	
B2	B113	Y/22	: Air bag diagnosis sensor unit	F3	B170	Y/2	: Rear side air bag satellite sensor RH	
E3	B114	Y/2	: Front side air bag satellite sensor RH	Front seat RH harness				
G3	B115	W/33	: Joint connector-B08	C2	B300	W/12	: To B157	
F3	B116	W/4	: Rear door switch RH	C2	B301	W/24	: To B137	
F2	B117	—	: Body ground	D2	B302	W/32	: Headrest display unit (Passenger seat)	
E4	B120	W/40	: BOSE speaker amp. (With surround sound system)	C3	B303	W/4	: Seat belt buckle switch (Passenger seat)	
D4	B121	BR/14	: BOSE speaker amp. (With surround sound system)	C3	B304	B/6	: Climate controlled seat control unit (Passenger seat)	
E4	B122	BR/23	: BOSE speaker amp. (With surround sound system)	C3	B305	B/8	: Climate controlled seat control unit (Passenger seat)	
D2	B123	W/4	: To B350	D3	B306	B/16	: Climate controlled seat control unit (Passenger seat)	
B3	B124	W/32	: To B32	D3	B307	W/5	: Climate controlled seat blower moter (Passenger seat)	
C2	B126	Y/2	: Front RH side air bag module	E2	B308	W/4	: Seat cushion thermal electric device (Passenger seat)	
E2	B127	Y/2	: Front RH seat belt pre-tensioner	D3	B309	W/4	: Seat back thermal electric device (Passenger seat)	
F1	B128	Y/2	: RH side curtain air bag module	D3	B310	W/6	: Lifting motor RH (Rear)	
D4	B129	BR/14	: BOSE speaker amp. (Without surround sound system)	D2	B311	W/6	: Reclining motor RH	
D4	B130	BR/23	: BOSE speaker amp. (Without surround sound system)	D2	B313	W/10	: Power seat switch RH	
F4	B132	—	: Body ground	D3	B314	W/5	: Sliding motor RH	
F3	B133	W/4	: Rear blower motor resistor 2	C2	B315	W/3	: Front seat heater (Passenger seat)	
G4	B134	W/2	: Rear blower motor 2	ODS sub-harness				
C1	B136	W/40	: To M36	D2	B350	W/4	: To B123	
C3	B137	W/24	: To B301	C3	B351	P/3	: Occupant classification system sensor FI	
E2	B139	W/12	: To D301	D2	B352	P/3	: Occupant classification system sensor RI	
E5	B140	W/16	: To B49	D3	B356	B/20	: Occupant classification system control unit	
D4	B144	W/4	: Joint connector-B11					

HARNESS

< WIRING DIAGRAM >

ROOM LAMP HARNESS

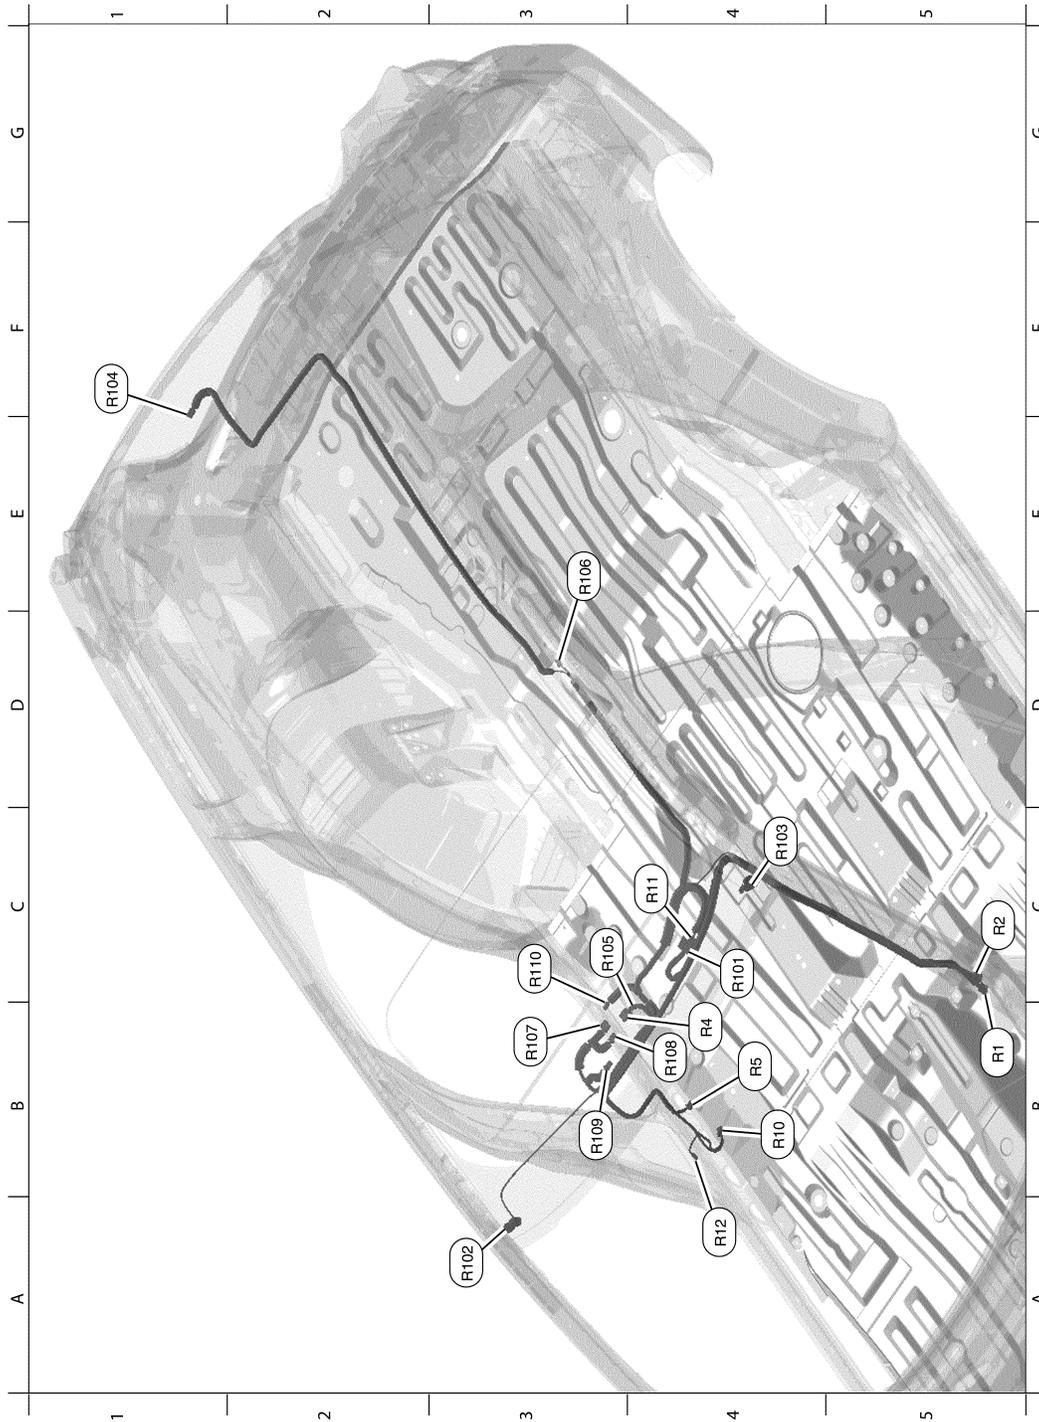

AAMIA01302Z


B5	R1	W/24	: To M1	A3	R102	W/2	: Vanity lamp RH
C5	R2	W/6	: To M2	C4	R103	W/2	: Vanity lamp LH
B4	R4	GR/10	: Moonroof motor assembly	F1	R104	W/3	: Cargo lamp
B4	R5	W/8	: Lane camera unit	C3	R105	W/8	: Telematics switch
B4	R10	B/10	: Auto anti-dazzling inside mirror	E3	R106	W/4	: Personal lamps 2nd row

HARNESS

< WIRING DIAGRAM >

C4	R11	W/24	: To R101	B3	R107	GR/8	: Front room/map lamp assembly
A4	R12	B/3	: Rain sensor	B4	R108	W/8	: Moonroof switch
Room lamp sub-harness				B3	R109	W/4	: Microphone
C4	R101	W/24	: To R11	C3	R110	W/4	: Sunshade switch

FRONT DOOR LH HARNESS

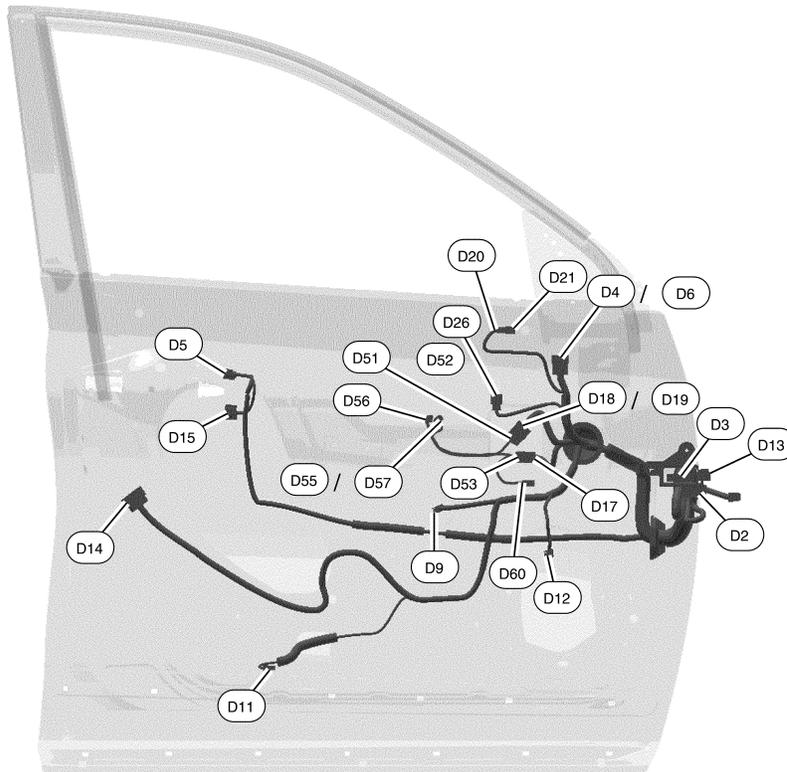


ABMIA48352Z

D2	W/16	: To M167	D19	W/24	: To D52
D3	W/40	: To M168	D20	W/24	: Door mirror LH (Side camera)
D4	W/12	: Door mirror LH (Without around view monitor)	D21	W/4	: Blind spot warning/blind spot intervention indicator LH
D5	GR/2	: Outside key antenna (Driver side)	D26	Y/2	: Front door satellite sensor LH
D6	W/24	: Door mirror LH (With around view monitor)	Front door LH sub-harness		
D9	W/6	: Front power window motor LH	D51	W/16	: To D18
D11	W/2	: Front step lamp LH	D52	W/24	: To D19
D12	W/2	: Front door speaker LH	D53	W/8	: To D17
D13	Y/4	: To M169	D55	W/12	: Main power window and door lock/unlock switch (Power mirror remote control switch) (Without automatic drive positioner)
D14	GR/6	: Front door lock assembly LH	D56	W/16	: Main power window and door lock/unlock switch
D15	W/6	: Front outside handle assembly LH	D57	W/12	: Main power window and door lock/unlock switch (Power mirror remote control switch) (With automatic drive positioner)
D17	W/8	: To D53	D60	W/16	: Seat memory switch
D18	W/16	: To D51			

HARNESS

< WIRING DIAGRAM >

FRONT DOOR RH HARNESS

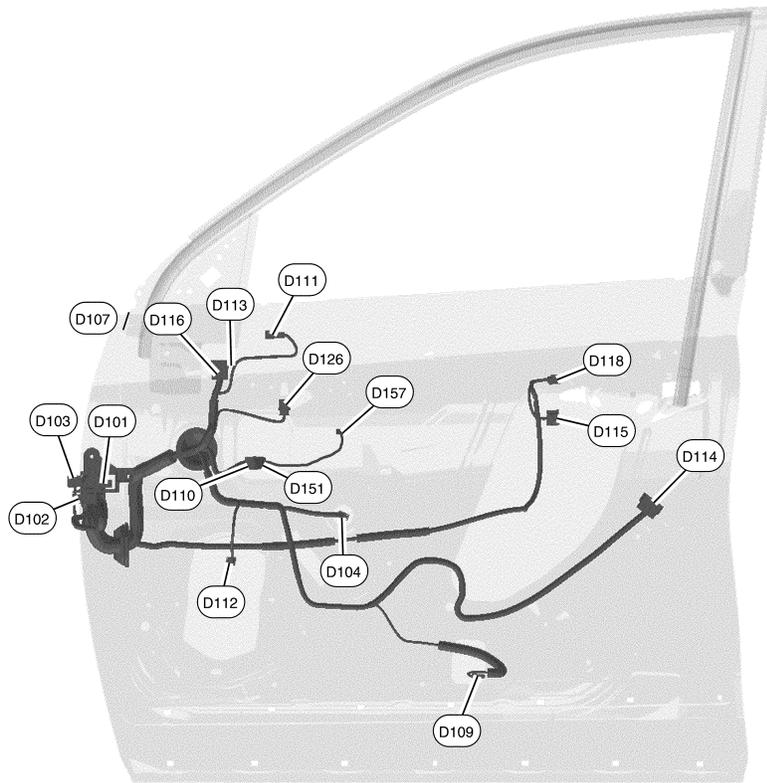

ABMIA4852ZZ


D101	W/32	: To M91	D113	W/24	: Door mirror RH (Side camera)
D102	W/10	: To M158	D114	GR/6	: Front door lock actuator RH
D103	Y/4	: To M159	D115	W/6	: Front outside handle assembly RH
D104	W/6	: Front power window motor RH	D116	W/24	: Door mirror RH (With around view monitor)
D107	W/12	: Door mirror RH (Without around view monitor)	D118	GR/2	: Outside key antenna (Passenger side)
D109	W/2	: Front step lamp RH	D126	Y/2	: Front door satellite sensor RH
D110	W/10	: To D151	Front door RH sub-harness		
D111	W/4	: Blind spot warning/blind spot intervention indicator RH	D151	W/10	: To D110
D112	W/2	: Front door speaker RH	D157	W/16	: Power window and door lock/unlock switch RH

A
B
C
D
E
F
G
H
I
J
K
L
PG
N
O
P

HARNESS

< WIRING DIAGRAM >

REAR DOOR LH HARNESS

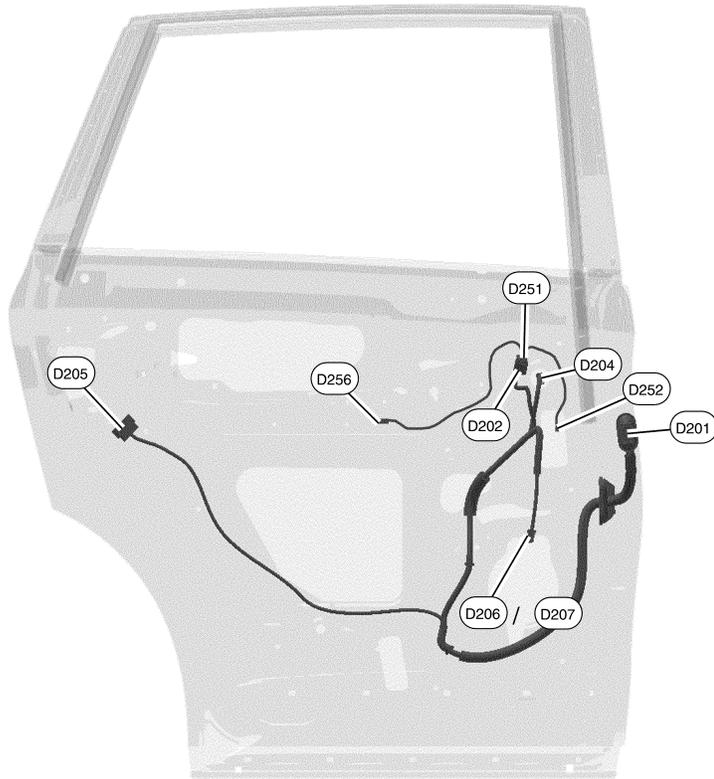


AAMIA01332Z

D201	W/12	: To B51	D207	BR/2	: Rear door speaker LH (With BOSE audio system)
D202	W/12	: To D251	Rear door LH sub-harness		
D204	W/6	: Rear power window motor LH	D251	W/12	: To D202
D205	GR/6	: Rear door lock actuator LH	D252	BR/2	: Rear door tweeter LH
D206	W/2	: Rear door speaker LH (With base audio system)	D256	W/16	: Rear power window switch LH

HARNESS

< WIRING DIAGRAM >

REAR DOOR RH HARNESS

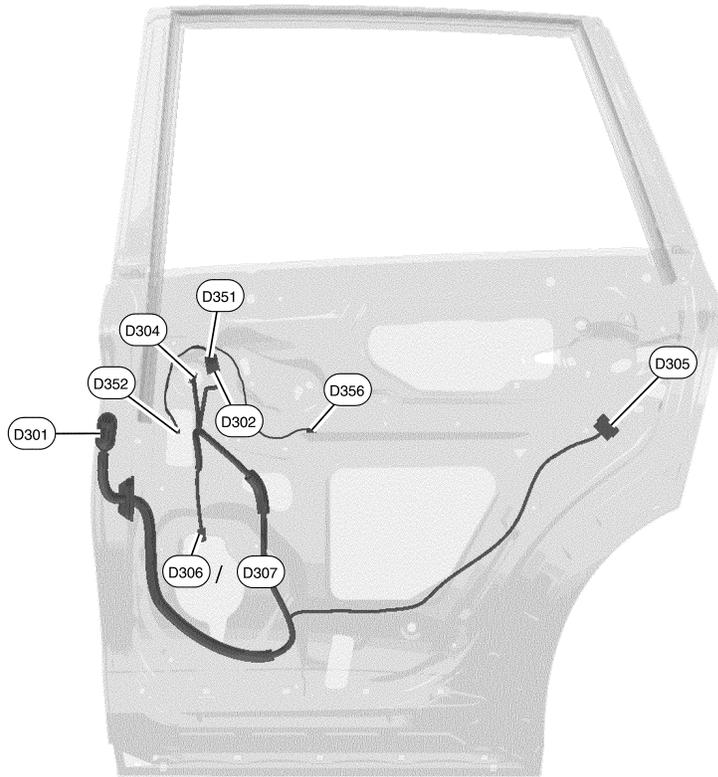

AAMIA01342Z


D301	W/12	: To B139	D307	BR/2	: Rear door speaker RH (With BOSE audio system)
D302	W/12	: To D351	Rear door RH sub-harness		
D304	W/6	: Rear power window motor RH	D351	W/12	: To D302
D305	GR/6	: Rear door lock actuator RH	D352	BR/2	: Rear door tweeter RH
D306	W/2	: Rear door speaker RH (With base audio system)	D356	W/16	: Rear power window switch RH

A
B
C
D
E
F
G
H
I
J
K
L
PG
N
O
P

HARNESS

< WIRING DIAGRAM >

BACK DOOR

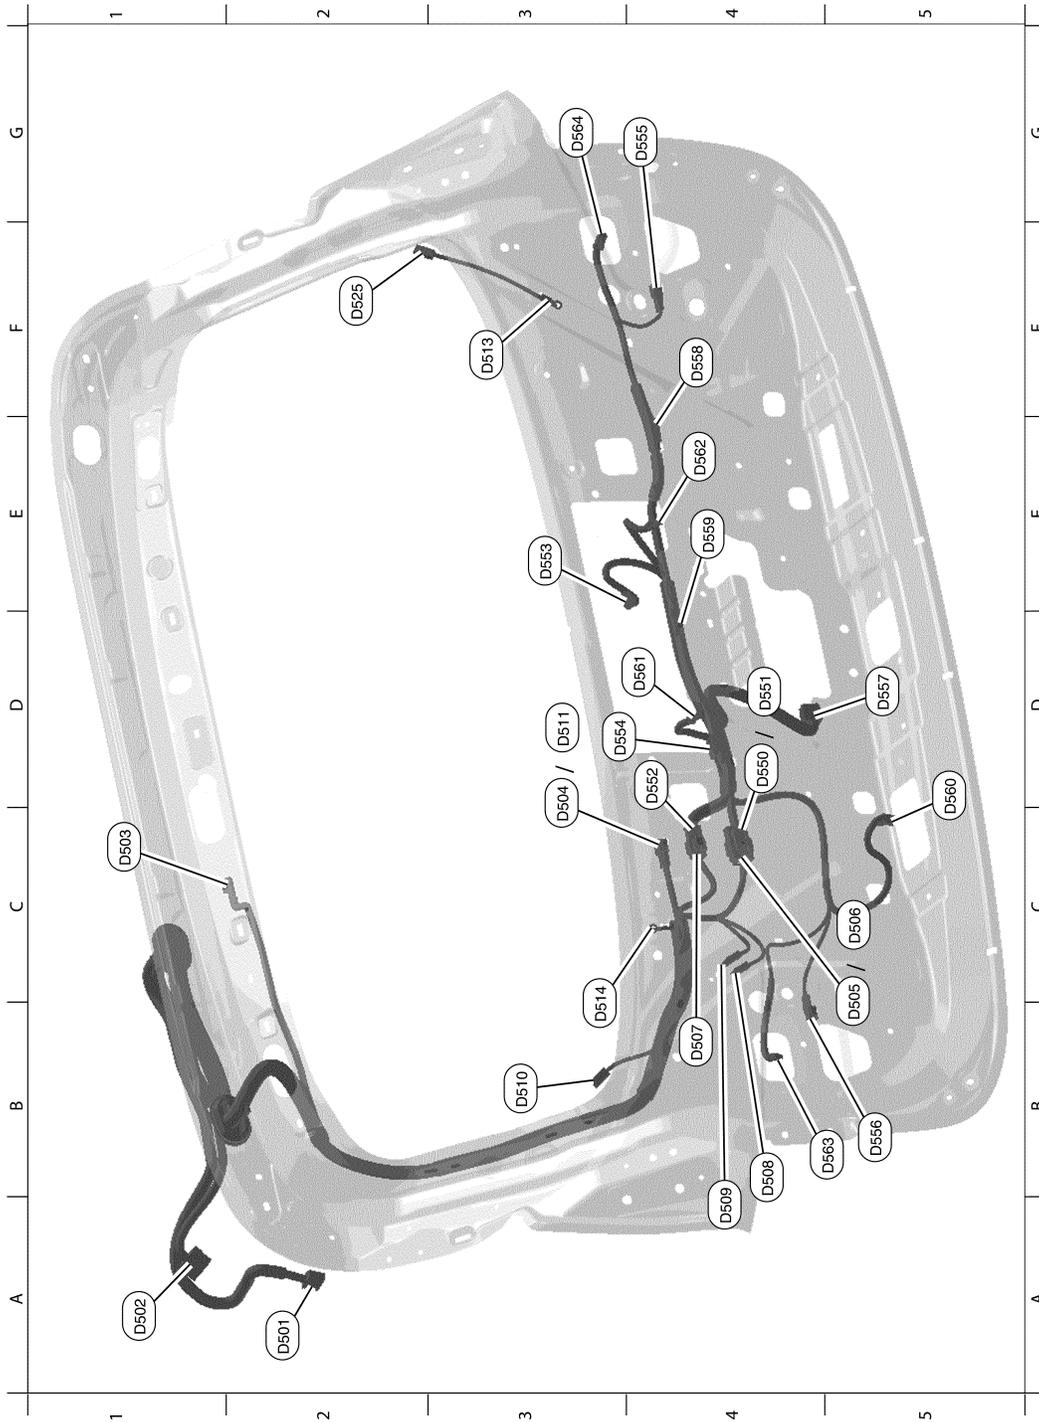

AAMIA01352Z

A2	D501	W/24	: To B46	D4	D550	W/6	: To D505
A1	D502	GR/8	: To B47	D4	D551	W/6	: To D506
C1	D503	BR/2	: High-mounted stop lamp	D4	D552	W/16	: To D507
D3	D504	W/4	: Rear view camera (Without NAVI)	E3	D553	W/3	: Rear wiper motor
C5	D505	W/6	: To D550	D3	D554	W/4	: Joint connector-D01

HARNESS

< WIRING DIAGRAM >

C5	D506	W/6	: To D551	G4	D555	GR/2	: Touch sensor RH
B4	D507	W/16	: To D552	B5	D556	W/2	: Touch sensor LH
B4	D508	B/1	: Rear window defogger condenser	D5	D557	W/8	: Back door lock assembly
A4	D509	B/1	: Rear window defogger condenser	F4	D558	B/2	: Diode-2
B3	D510	B/1	: Rear window defogger	E4	D559	W/4	: Back door opener switch
D3	D511	W/8	: Rear view camera (With NAVI)	D5	D560	B/8	: Automatic back door close switch
F3	D513	—	: Body ground	D4	D561	BR/2	: License plate lamp LH
C3	D514	—	: Body ground	E4	D562	BR/2	: License plate lamp RH
F2	D525	B/1	: Rear window defogger	B5	D563	W/2	: Back-up lamp RH
Back door RH harness				G3	D564	W/2	: Back-up lamp LH

A
B
C
D
E
F
G
H
I
J
K
L

PG

N
O
P


FUSE BLOCK - JUNCTION BOX (J/B)

< WIRING DIAGRAM >

FUSE BLOCK - JUNCTION BOX (J/B)

Terminal Arrangement

INFOID:000000011134577

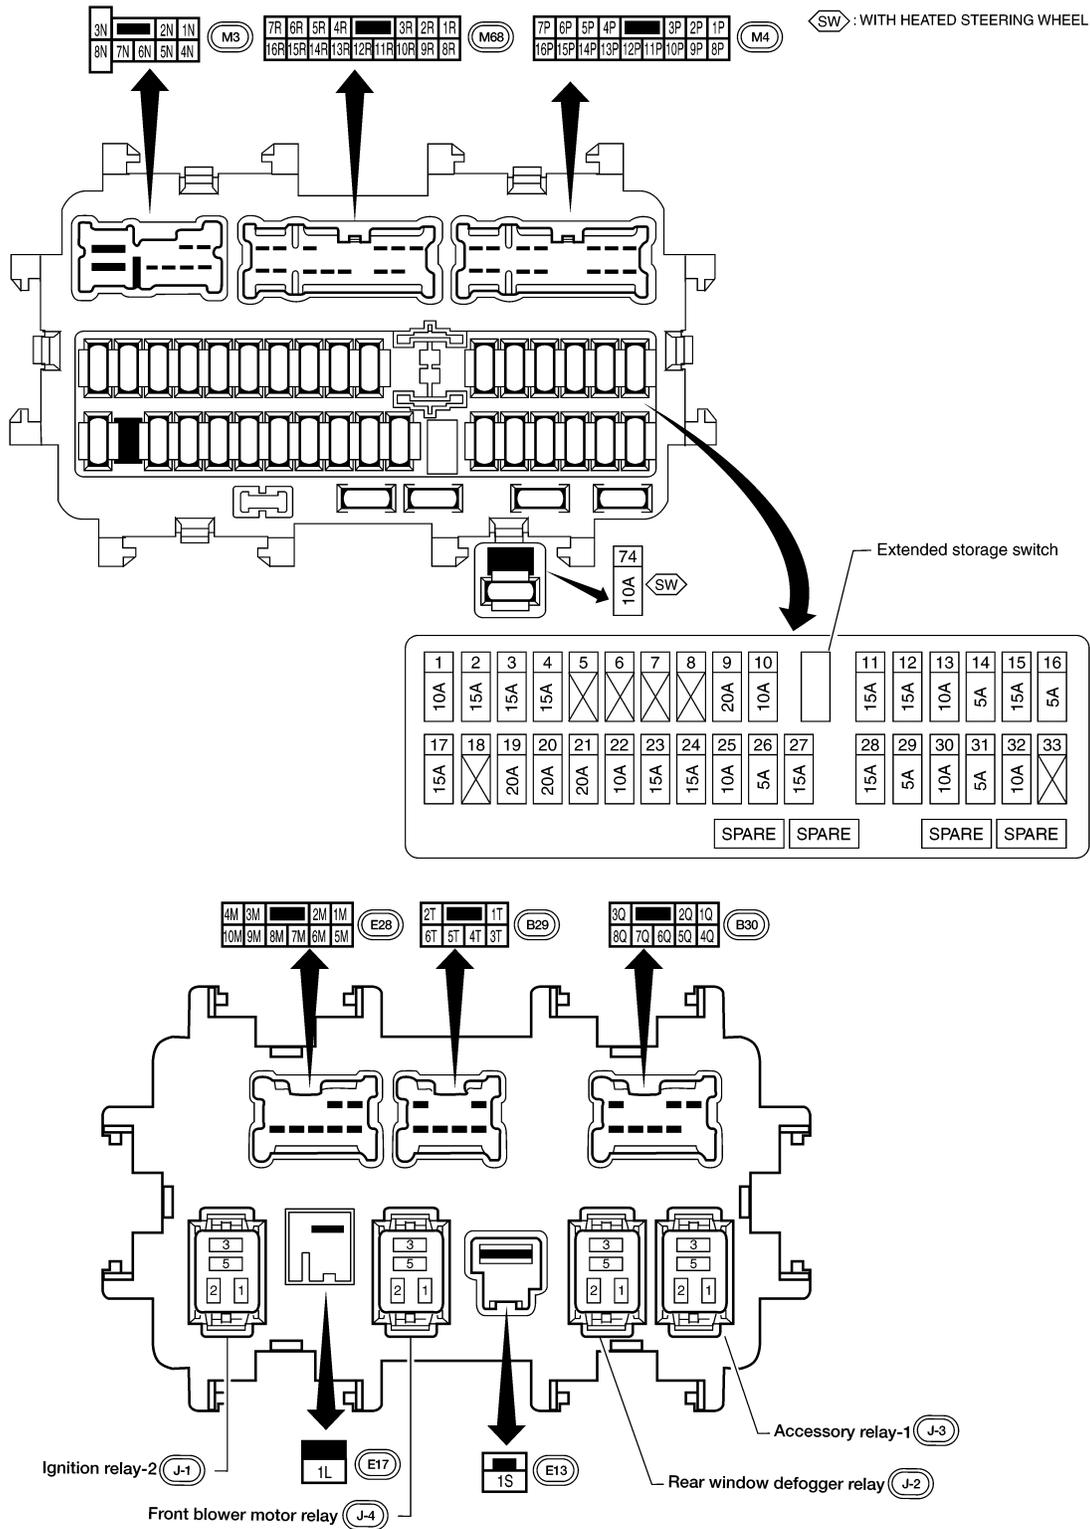

ABMIA6986GB

FUSE, FUSIBLE LINK AND RELAY BOX


< WIRING DIAGRAM >

FUSE, FUSIBLE LINK AND RELAY BOX


Terminal Arrangement

INFOID:000000011134578

FUSE, FUSIBLE LINK AND RELAY BOX

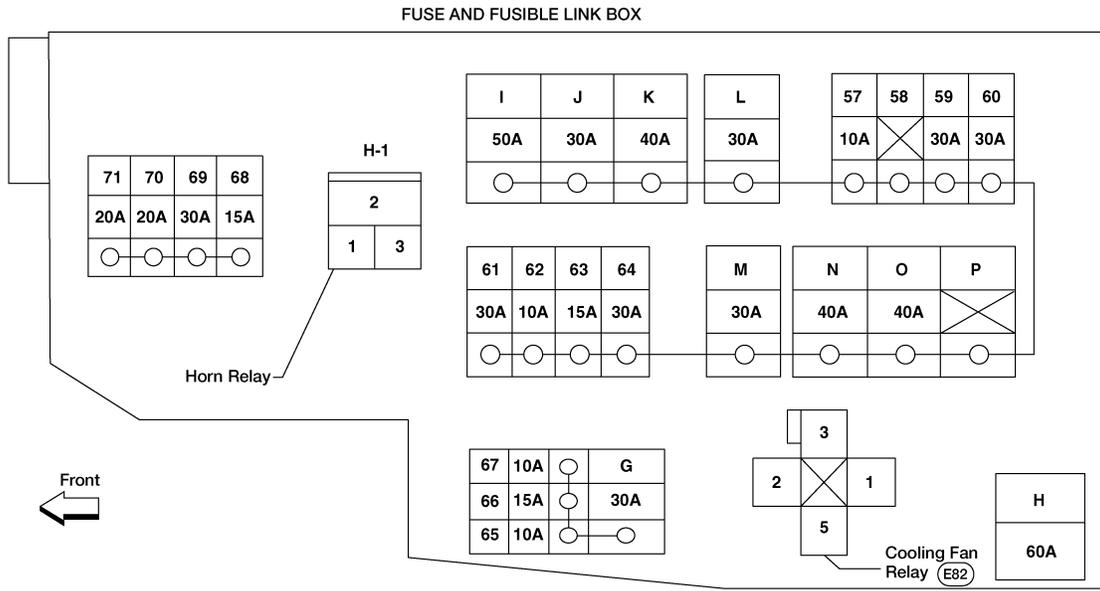

NO. 57 - 71 : FUSE G - P : FUSIBLE LINK

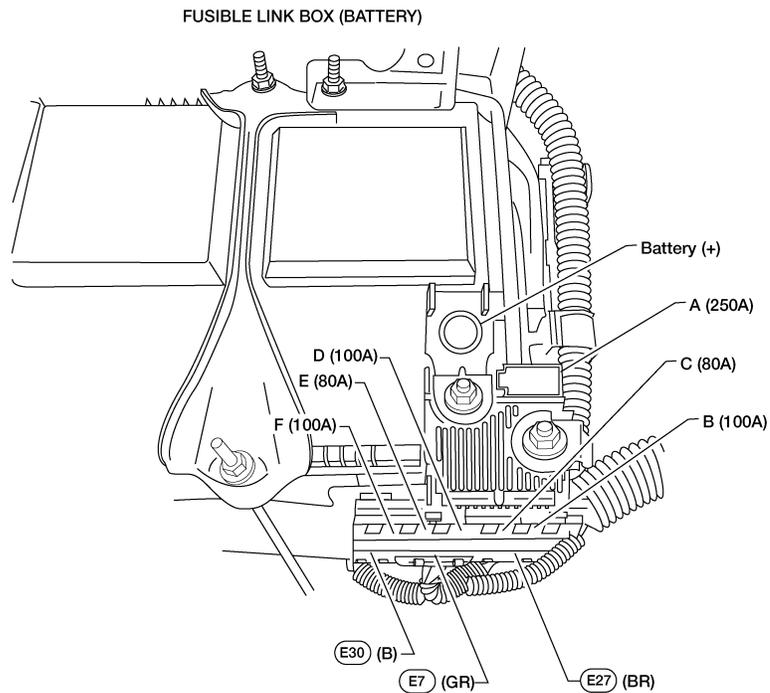


ABMIA6862GB

A
B
C
D
E
F
G
H
I
J
K
L
PG
N
O
P

FUSE, FUSIBLE LINK AND RELAY BOX

< WIRING DIAGRAM >

FUSE AND RELAY BOX 1

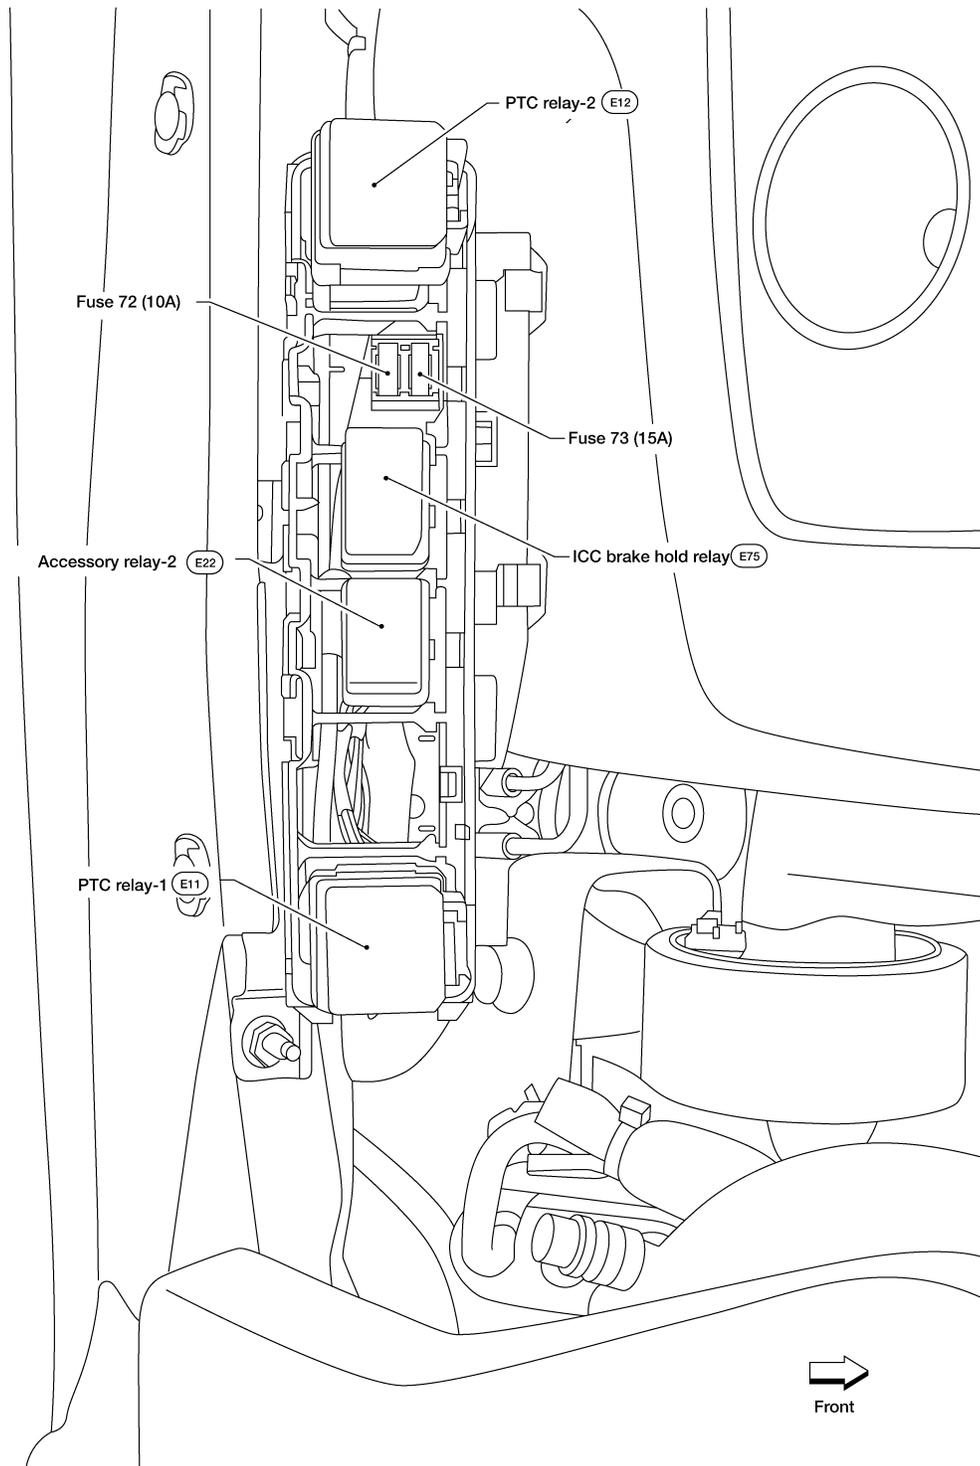


ABMIA4817GB

FUSE, FUSIBLE LINK AND RELAY BOX

< WIRING DIAGRAM >

FUSE AND RELAY BOX 2

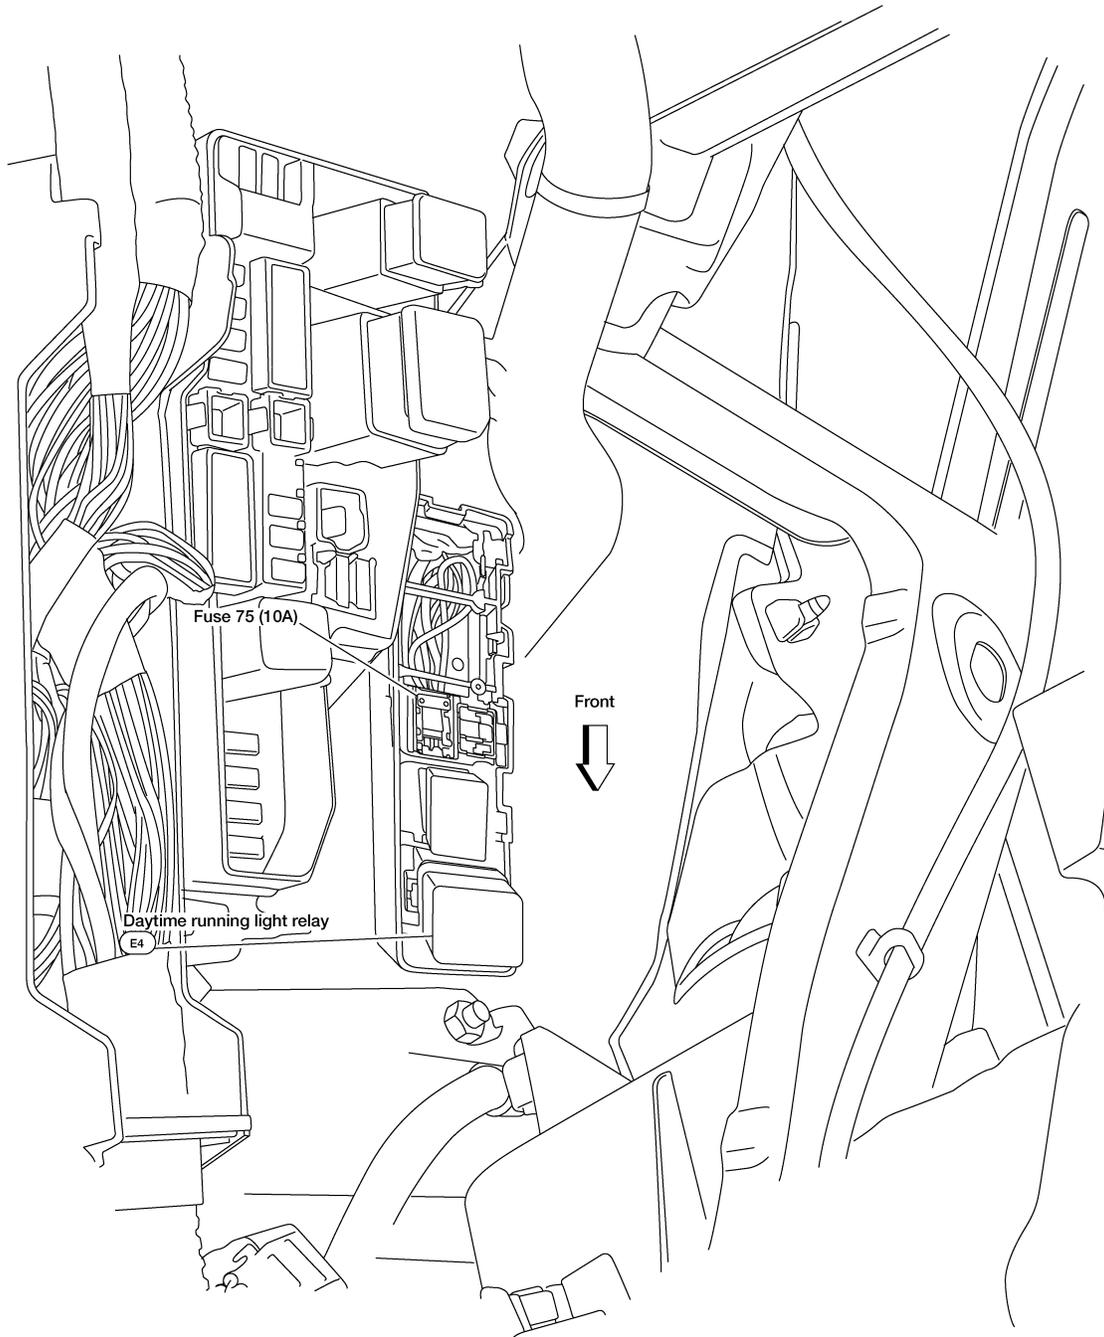

A
B
C
D
E
F
G
H
I
J
K
L
PG
N
O
P


ABMIA6863GB

FUSE, FUSIBLE LINK AND RELAY BOX

< WIRING DIAGRAM >

RELAY BOX

View with luggage side lower finisher LH removed

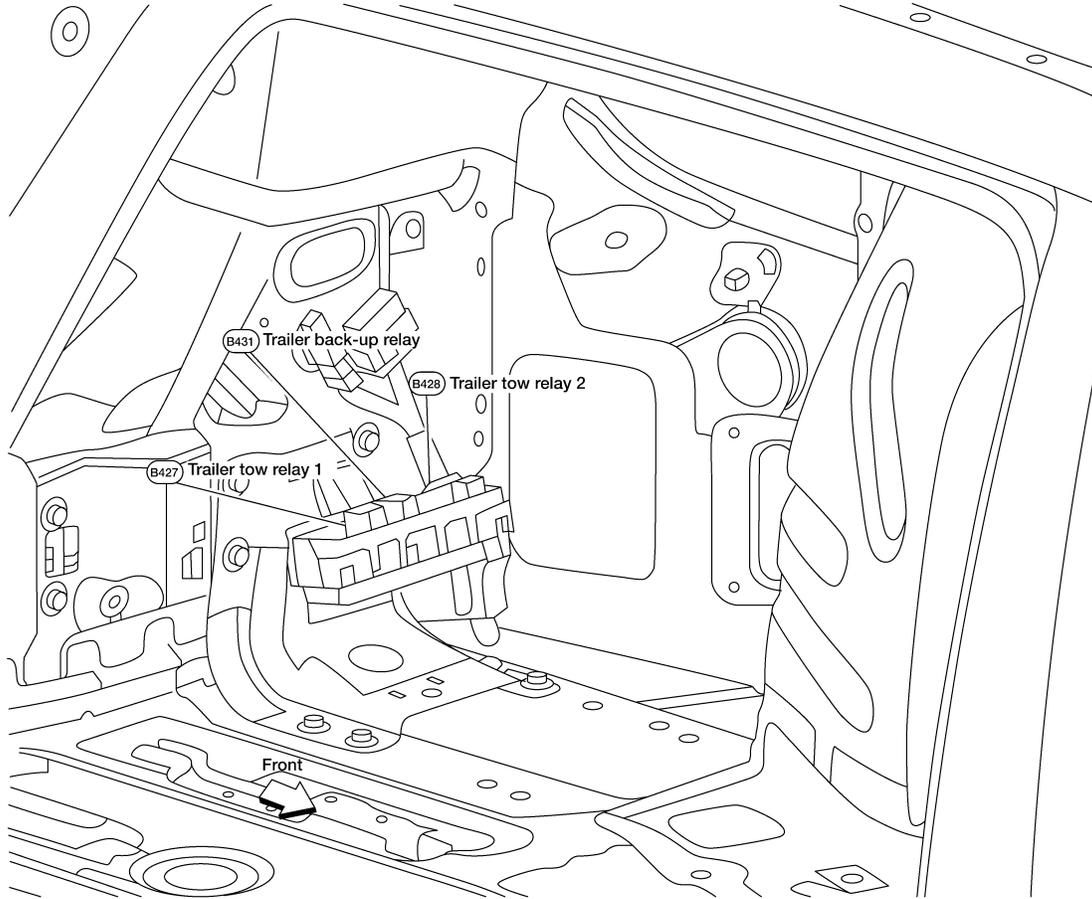

ABMIA4819GB


IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< WIRING DIAGRAM >

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

IPDM E/R Terminal Arrangement

INFOID:000000011134579

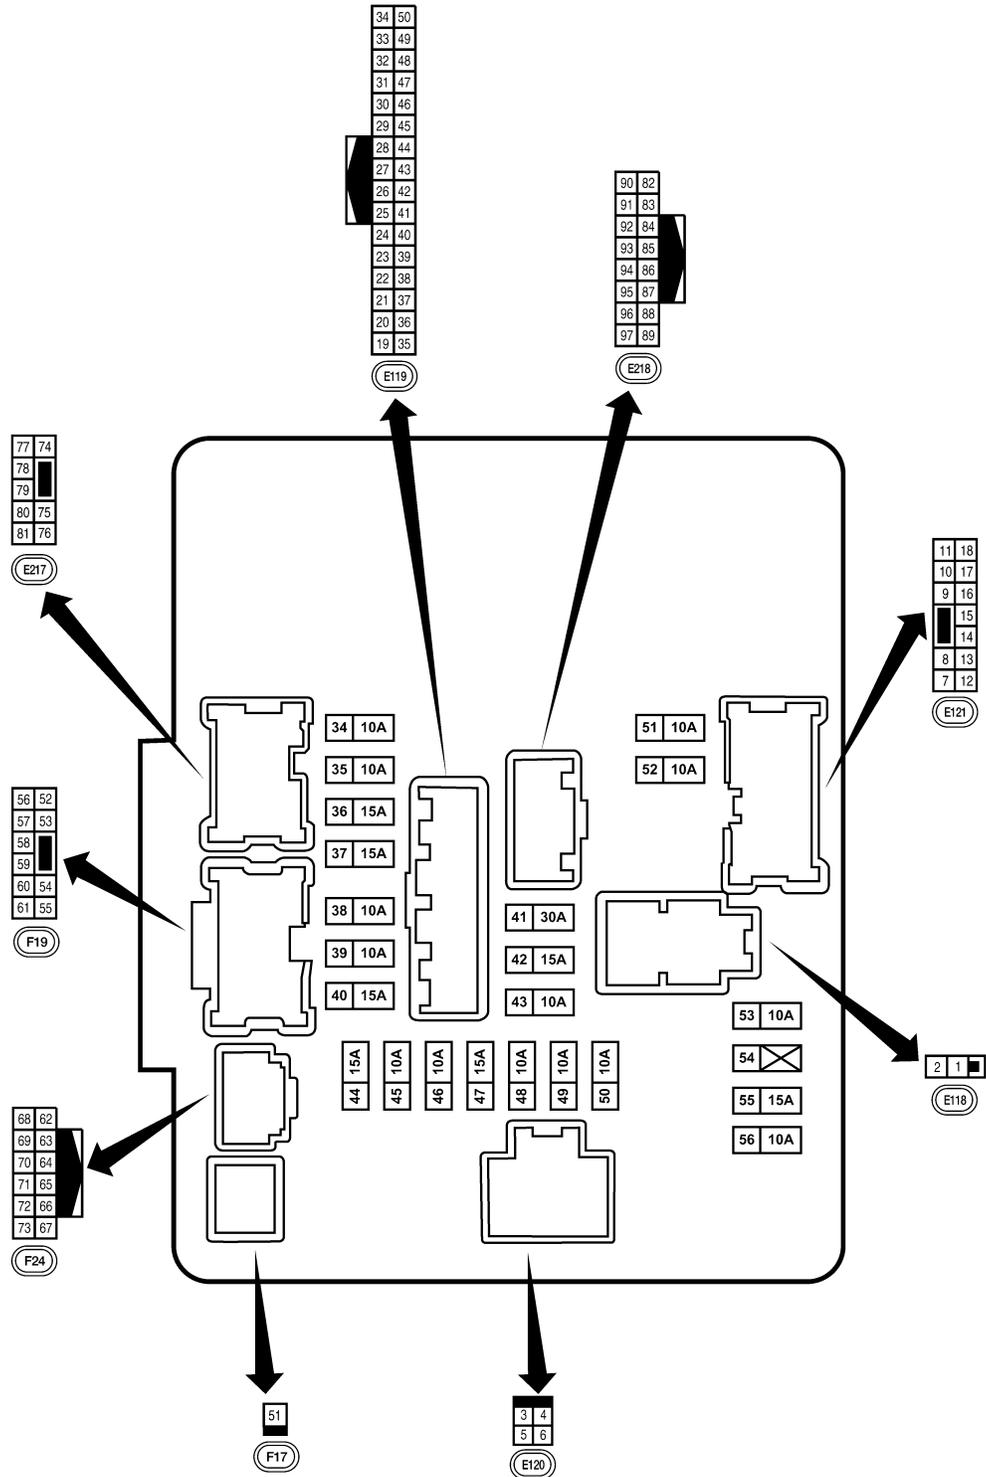

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

PG

ABMIA48202Z

BATTERY

< BASIC INSPECTION >

BASIC INSPECTION

BATTERY

How to Handle Battery

INFOID:000000011134580

CAUTION:

- If it becomes necessary to start the engine with a booster battery and jumper cables, use a 12-volt booster battery.
- After connecting battery cables, ensure that they are tightly clamped to battery terminals for good contact.
- Never add distilled water through the hole used to check specific gravity.


METHODS OF PREVENTING OVER-DISCHARGE

The following precautions must be taken to prevent over-discharging a battery.

- The battery surface (particularly its top) should always be kept clean and dry.
- The terminal connections should be clean and tight.
- At every routine maintenance, check the electrolyte level.
This also applies to batteries designated as "low maintenance" and "maintenance-free".



- When the vehicle is not going to be used over a long period of time, disconnect the battery cable from the negative terminal. (If the vehicle has an extended storage switch, turn it off.)

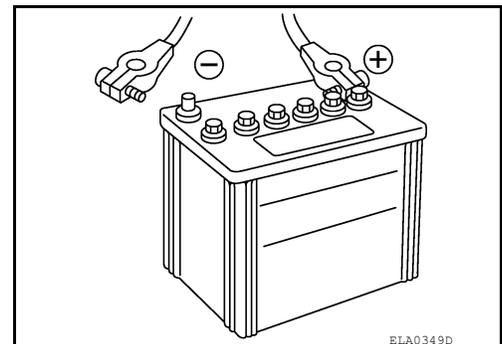

Work Flow

INFOID:000000011134581

BATTERY DIAGNOSIS WITH EXP-800 NI OR GR8-1200 NI

To diagnose and confirm the condition of the battery, use the following special service tools:

- EXP-800 NI Battery and electrical diagnostic analyzer
- GR8-1200 NI Multitasking battery and electrical diagnostic station

NOTE:

Refer to the applicable Instruction Manual for proper battery diagnosis procedures.

BATTERY DIAGNOSIS WITHOUT EXP-800 NI OR GR8-1200 NI

Checking Electrolyte Level


WARNING:

Never allow battery fluid to come in contact with skin, eyes, fabrics, or painted surfaces. After touching a battery, never touch or rub your eyes until you have thoroughly washed your hands. If acid contacts eyes, skin or clothing, immediately flush with water for 15 minutes and seek medical attention. Failure to do this may cause personal injury or damage to clothing or the painted surfaces.

BATTERY


< BASIC INSPECTION >

- Remove the cell plug using a suitable tool.
- Add distilled water up to the MAX level.

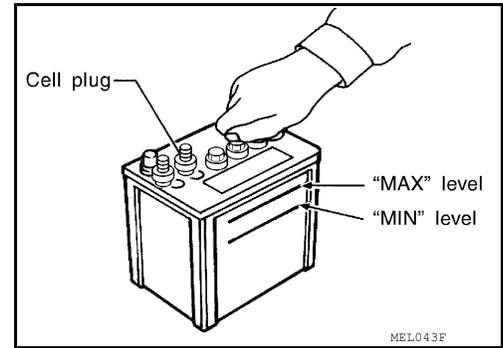

SULFATION

- **A battery will be completely discharged if it is left unattended for a long time and the specific gravity will become less than 1.100. This may result in sulfation on the cell plates.**
- **To determine if a battery has been “sulfated”, note its voltage and current when charging it. As shown in the figure, less current and higher voltage are observed in the initial stage of charging sulfated batteries.**
- **A sulfated battery may sometimes be brought back into service by means of a long, slow charge, 12 hours or more, followed by a battery capacity test.**

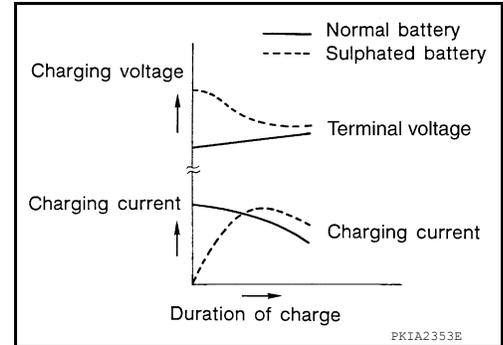


Specific Gravity Check

NOTE:

Check the charge condition of the battery.

Periodically check the specific gravity of the electrolyte. Keep a close check on charge condition to prevent over-discharge.

1. Read hydrometer and thermometer indications at eye level.
2. Use the chart below to correct your hydrometer reading according to electrolyte temperature.

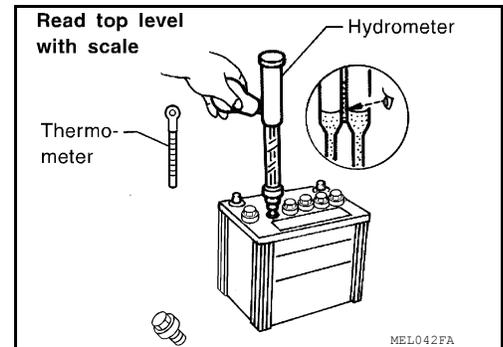

Hydrometer Temperature Correction

Battery electrolyte temperature [°C (°F)]	Add to specific gravity reading
71 (160)	0.032
66 (150)	0.028
60 (140)	0.024
54 (130)	0.020
49 (120)	0.016
43 (110)	0.012
38 (100)	0.008
32 (90)	0.004
27 (80)	0
21 (70)	-0.004
16 (60)	-0.008
10 (50)	-0.012

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

BATTERY

< BASIC INSPECTION >

Battery electrolyte temperature [°C (°F)]	Add to specific gravity reading
4 (40)	-0.016
-1 (30)	-0.020
-7 (20)	-0.024
-12 (10)	-0.028
-18 (0)	-0.032

Corrected specific gravity	Approximate charge condition
1.260 - 1.280	Fully charged
1.230 - 1.250	3/4 charged
1.200 - 1.220	1/2 charged
1.170 - 1.190	1/4 charged
1.140 - 1.160	Almost discharged
1.110 - 1.130	Completely discharged

Charging The Battery

CAUTION:

- **Never “quick charge” a fully discharged battery.**
- **Keep the battery away from open flame while it is being charged.**
- **When connecting the charger, connect the leads first, then turn on the charger. Never turn on the charger first, as this may cause a spark.**
- **If battery electrolyte temperature rises above 55 °C (131 °F), stop charging. Always charge battery at a temperature below 55 °C (131 °F).**

Charging Rates (Standard Charge)

Approximate charge condition	Charge current (A)	Charge time (h)
Fully charged	7	2
3/4 charged		2.5
1/2 charged		5
1/4 charged		7.5
Almost discharged		9
Completely discharged		10

Charging Rates (Quick Charge)

Approximate charge condition	Charge current (A)	Charge time (h)
Fully charged	—	—
3/4 charged	16	0.5
1/2 charged	33	
1/4 charged		
Almost discharged	—	—
Completely discharged	—	

NOTE:

The ammeter reading on your battery charger will automatically decrease as the battery charges. This indicates that the voltage of the battery is increasing normally as the state of charge improves. The charging amps indicated above refer to initial charge rate.

- If, after charging, the specific gravity of any two cells varies more than 0.050, the battery should be replaced.

INSPECTION AND ADJUSTMENT

< BASIC INSPECTION >

INSPECTION AND ADJUSTMENT

ADDITIONAL SERVICE WHEN REMOVING BATTERY NEGATIVE TERMINAL

ADDITIONAL SERVICE WHEN REMOVING BATTERY NEGATIVE TERMINAL : Special Repair Requirement

INFOID:000000011134582

Required Procedure After Battery Disconnection

System	Item	Reference
Engine Control System	Idle Air Volume Learning	EC-689 (except for Mexico) or EC-689 Mexico)
Brake Control System	Steering Angle Sensor Neutral Position	BRC-60
Power Window Control System	Power Window System Initialization	PWC-35
Roof	Moonroof Memory Reset/Initialization Sunshade Memory Reset/Initialization	RF-23
Automatic Drive Positioner	Automatic Drive Positioner System Initialization	Refer to Owner's Manual.
Heater & Air Conditioning Control System	Temperature Setting Trimmer (front)	HAC-82
	Temperature Setting Trimmer (rear)	HAC-83
	Foot Position Setting Trimmer	HAC-82
	Inlet Port Memory Function (FRE)	HAC-83
	Inlet Port Memory Function (REC)	HAC-83
	Exhaust Gas/Outside Odor Detecting Sensor Sensitivity Adjustment Function	HAC-84
	Auto Intake Switch Interlocking Movement Change Function	HAC-84
Audio, Visual & Navigation System	Audio (Radio Preset)	Refer to Owner's Manual.
	Navigation System	Refer to Owner's Manual.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

PG

FUSE INSPECTION


< BASIC INSPECTION >

FUSE INSPECTION

How To Check


INFOID:000000011376635

- If fuse is blown, be sure to eliminate cause of malfunction before installing new fuse.
- Use fuse of specified rating. Never use fuse of more than specified rating.
- Do not partially install fuse; always insert it into fuse holder properly.
- Remove fuse for "ELECTRICAL PARTS (BAT)" if vehicle is not used for a long period of time.

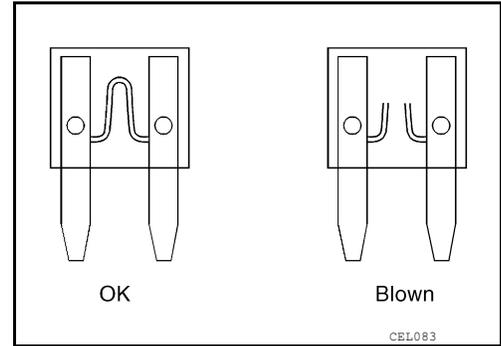

EXTENDED STORAGE SWITCH (IF EQUIPPED)

The following switch may be mounted on the fuse block (Junction Box) for transportation and storage.

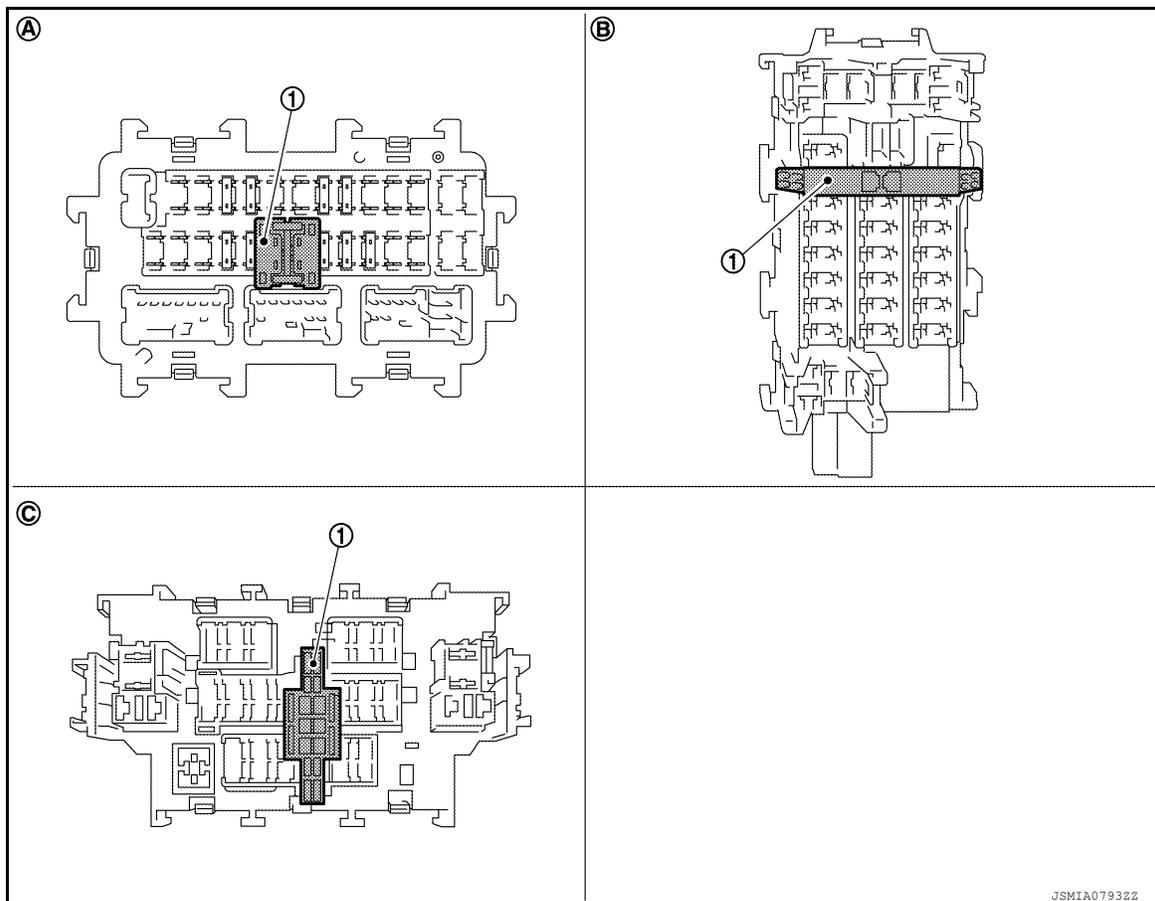

① Extended storage switch

Ⓐ Type A

Ⓑ Type B

Ⓒ Type C

Remove the extended storage switch if it causes the interference when checking fuses.

How To Extended Storage Switch ON/OFF


CAUTION:

- Turn the ignition switch OFF when operating the extended storage switch.
- Under normal conditions, keep the extended storage switch in ON state. Never operate the extended storage switch except when necessary.

FUSE INSPECTION


< BASIC INSPECTION >

• Type A

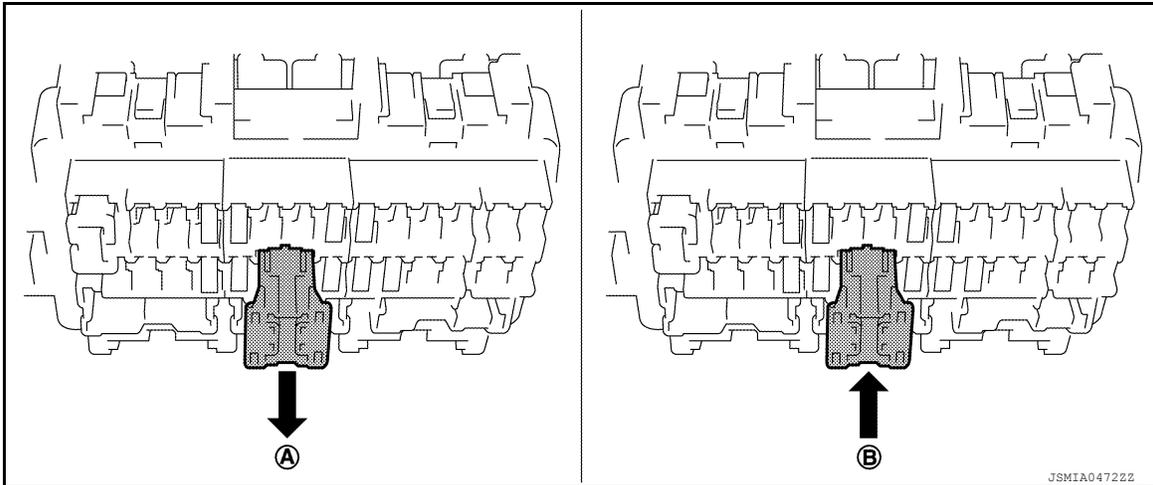


- To turn the extended storage switch OFF, pull it up in ① direction as shown in the figure.
- To turn the extended storage switch ON, press it in ② direction as shown in the figure.

• Type B

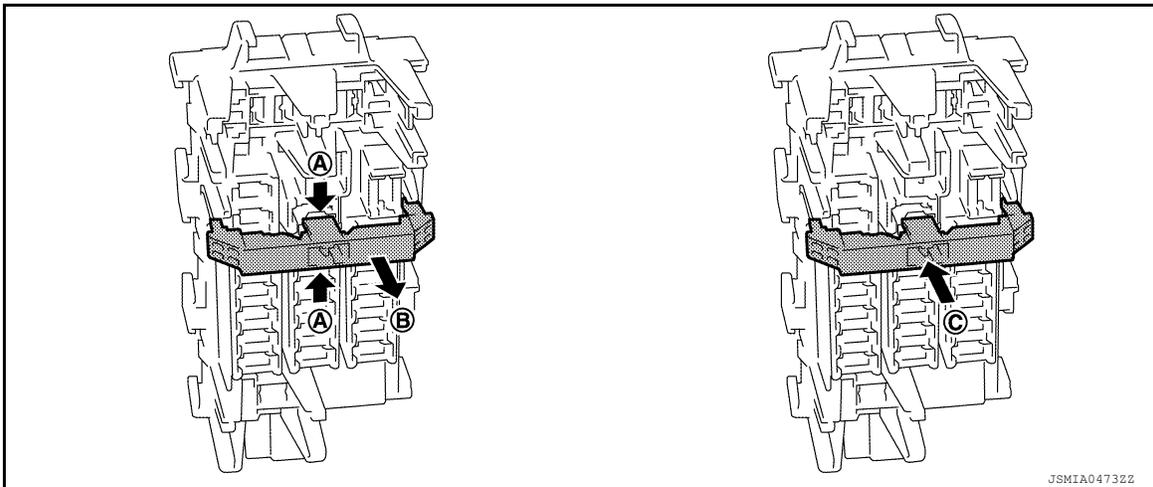

- To turn the extended storage switch OFF, hold ① of the switch and pull up in ② direction as shown in the figure.
- To turn the extended storage switch ON, press it in ③ direction as shown in the figure.

• Type C

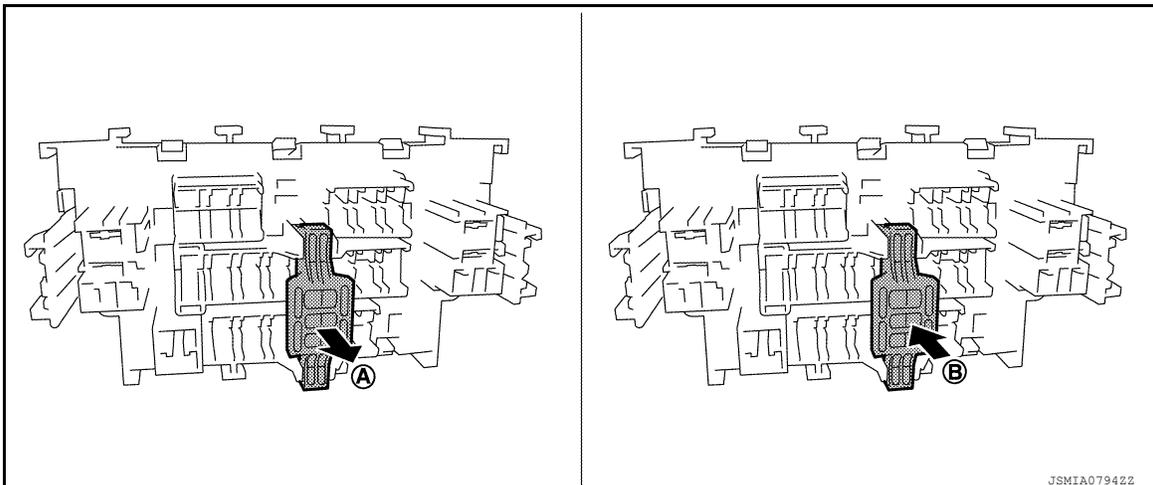

- To turn the extended storage switch OFF, pull it up in ① direction as shown in the figure.
- To turn the extended storage switch ON, press it in ② direction as shown in the figure.

How To Remove Extended Storage Switch


Type A

A
B
C
D
E
F
G
H
I
J
K
L
PG
N
O
P

FUSE INSPECTION

< BASIC INSPECTION >

1. Turn the ignition switch OFF.
2. Turn the extended storage switch OFF.
3. Press pawl (A) and tilt to disengage the extended storage switch. Press pawl (B) and tilt to remove the extended storage switch.

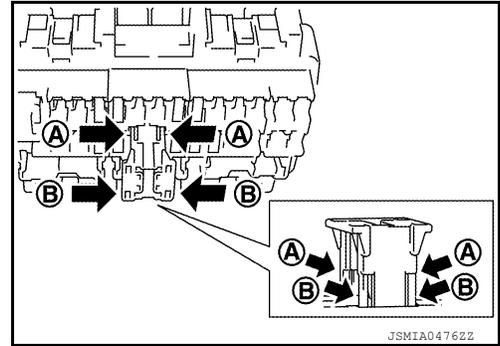

CAUTION:


Never use fuse for bus bar.

NOTE:

- Extended storage switch and bus bar are removed together. Remove bus bar from extended storage switch, if necessary.
- Install removed bus bar to fuse block.
- Extended storage switch is for transportation and storage. Reinstallation is not required after the removal.

Type B

1. Turn the ignition switch OFF.
2. Turn the extended storage switch OFF.
3. Hold (A) and pull up the extended storage switch hard in (B) direction.

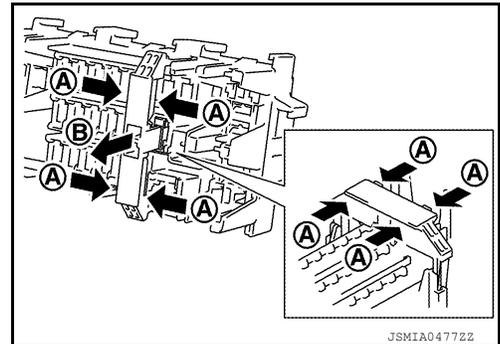

CAUTION:

Never use fuse for bus bar.

NOTE:

- Extended storage switch and bus bar may be removed together. Remove bus bar from extended storage switch, if necessary.
- Install removed bus bar to fuse block.
- Extended storage switch is for transportation and storage. Reinstallation is not required after the removal.


Type C

1. Turn the ignition switch OFF.
2. Turn the extended storage switch OFF.

FUSE INSPECTION

< BASIC INSPECTION >

3. Hold (A) and pull up the extended storage switch hard in (B) direction.

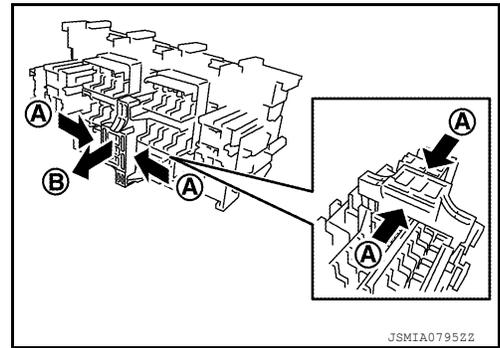

CAUTION:

Never use fuse for bus bar.

NOTE:

- Extended storage switch and bus bar are removed together. Remove bus bar from extended storage switch, if necessary.
- Install removed bus bar to fuse block.
- Extended storage switch is for transportation and storage. Reinstallation is not required after the removal.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

PG

FUSIBLE LINK INSPECTION

< BASIC INSPECTION >

FUSIBLE LINK INSPECTION

Fusible Link

INFOID:000000011376636


A melted fusible link can be detected either by visual inspection or by feeling with finger tip. If its condition is questionable, use circuit tester or test lamp.

1 : Fusible link

←: Vehicle front

CAUTION:

- If fusible link should melt, it is possible that critical circuit (power supply or large current carrying circuit) is shorted. In such a case, carefully check and eliminate cause of malfunction.
- Never wrap outside of fusible link with vinyl tape. Important: Never let fusible link touch any other wiring harness, vinyl or rubber parts.

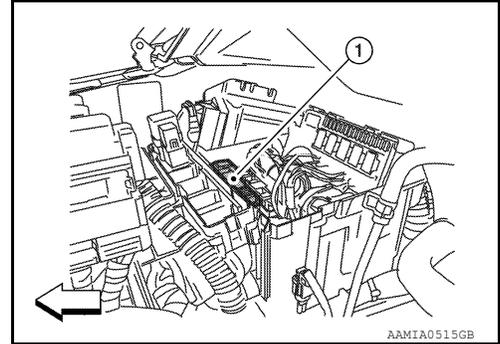

AAMIA0515GB

BATTERY


< REMOVAL AND INSTALLATION >

REMOVAL AND INSTALLATION

BATTERY

Exploded View

INFOID:000000011134583

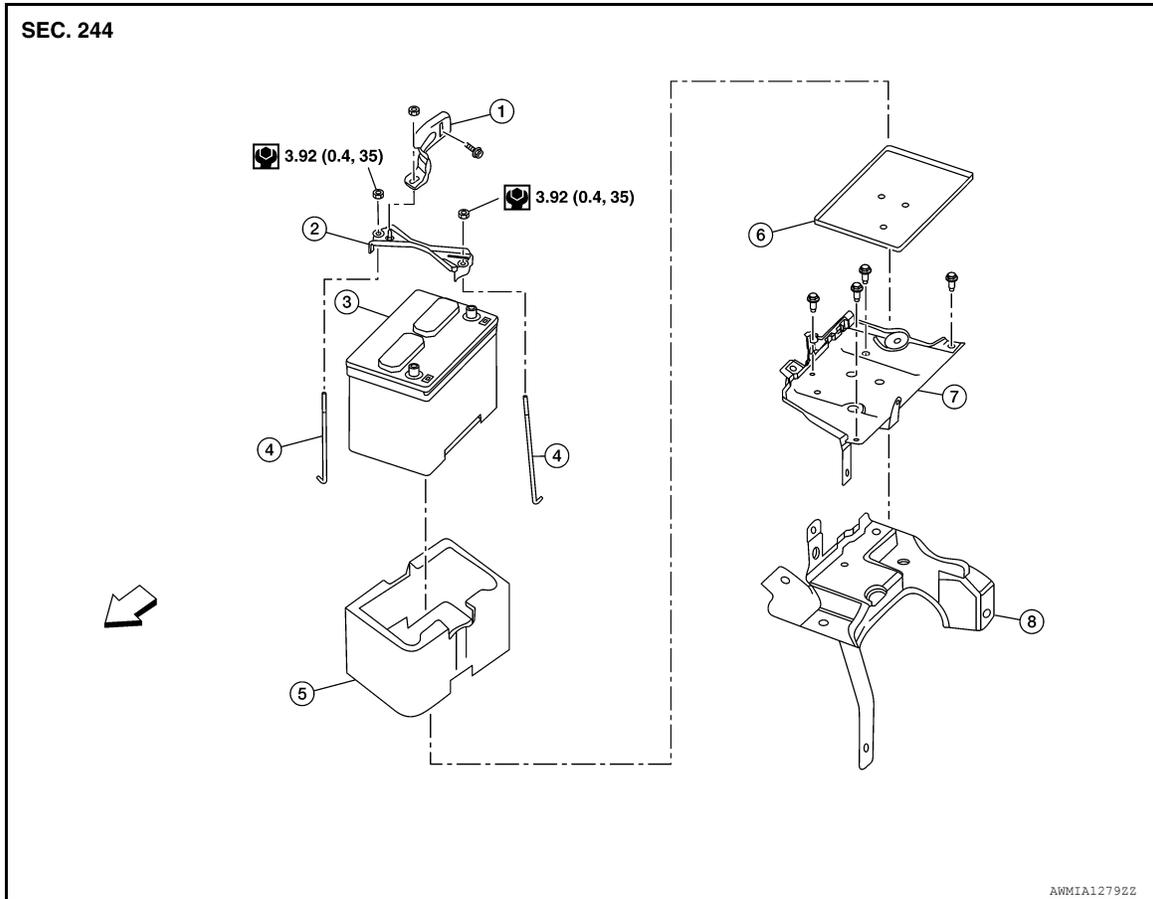

- | | | |
|----------------------|-------------------------|-----------------------|
| 1. Upper ECM bracket | 2. Battery frame | 3. Battery |
| 4. Battery rods | 5. Battery cover | 6. Battery tray liner |
| 7. Battery tray | 8. Battery tray support | ← Front |

Removal and Installation

INFOID:000000011134584

REMOVAL

1. Remove cover of battery positive terminal.
2. Loosen battery terminal nuts and disconnect both negative and positive terminals from the battery.
CAUTION:
To prevent damage to the parts, disconnect the battery negative terminal first.
3. Remove battery frame nuts, battery frame and battery rods.
4. Remove battery cover.
5. Remove battery.

INSTALLATION

Installation is in the reverse order of removal.

CAUTION:

Replace the battery if it has been dropped or sustained an impact.

To install the battery, carefully read the following instructions:

- **To prevent damage to the parts, connect the battery cable to the positive terminal first.**

BATTERY

< REMOVAL AND INSTALLATION >

- **After connecting battery cables, to securely supply battery voltage, ensure that they are tightly clamped to battery terminals for good contact.**
- **To securely supply battery voltage, check battery terminal for poor connection caused by corrosion. Reset electronic systems as necessary. Refer to [PG-93, "ADDITIONAL SERVICE WHEN REMOVING BATTERY NEGATIVE TERMINAL : Special Repair Requirement"](#).**

BATTERY TRAY

< REMOVAL AND INSTALLATION >

BATTERY TRAY

Removal and Installation

INFOID:000000011134585

REMOVAL

1. Remove battery and battery tray liner. Refer to [PG-99, "Removal and Installation"](#). A
2. Remove air cleaner assembly. Refer to [EM-24, "Removal and Installation"](#). B
3. Disconnect harness connector and then remove ECM. C
4. Disconnect the harness connector from the transmission control module (TCM). Refer to [TM-195, "Exploded View"](#). D
5. Remove the ECM bracket. E
6. Remove the battery tray bolts and battery tray. E
7. Remove the battery tray support bolts and battery tray support. E

INSTALLATION

Installation is in the reverse order of removal.

Reset electronic systems as necessary. Refer to [PG-93, "ADDITIONAL SERVICE WHEN REMOVING BATTERY NEGATIVE TERMINAL : Special Repair Requirement"](#). F

G

H

I

J

K

L

PG

N

O

P


BATTERY TERMINAL WITH FUSIBLE LINK

< REMOVAL AND INSTALLATION >

BATTERY TERMINAL WITH FUSIBLE LINK

Exploded View

INFOID:000000011134586

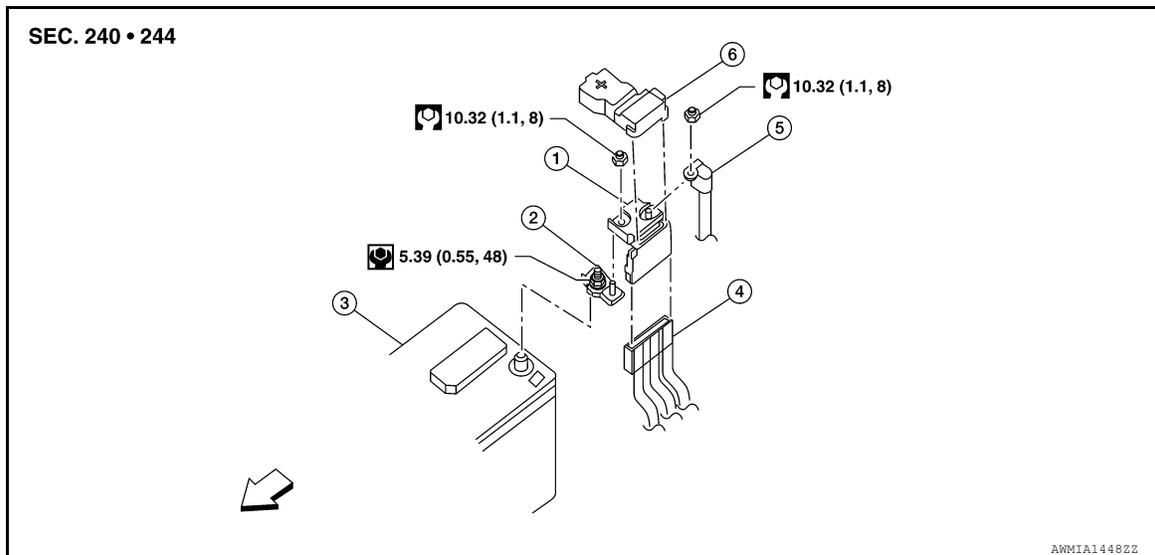

- | | | |
|-------------------------------|----------------------|------------|
| 1. Fusible link box (battery) | 2. Positive Terminal | 3. Battery |
| 4. Harness connectors | 5. Positive cable | 6. Cover |
- ⇐ Front

Removal and Installation

INFOID:000000011134587

REMOVAL

- Loosen battery terminal nuts and disconnect both negative and positive terminals from the battery.
CAUTION:
To prevent damage to the parts, disconnect the battery negative terminal first.
- Disconnect positive cable from fusible link box (battery).
- Disconnect harness connectors and separate positive terminal from fusible link box (battery).

INSTALLATION

Installation is in the reverse order of removal.

CAUTION:

Replace the fusible link box battery if it has been dropped or sustained and impact.

To install the battery, carefully read the following instructions:

- To prevent damage to the parts, connect the battery cable to the positive terminal first.**
- After connecting battery cables, to securely supply battery voltage, ensure that they are tightly clamped to battery terminals for good contact.**
- To securely supply battery voltage, check battery terminal for poor connection caused by corrosion.**

Reset electronic systems as necessary. Refer to [PG-93, "ADDITIONAL SERVICE WHEN REMOVING BATTERY NEGATIVE TERMINAL : Special Repair Requirement"](#).


BATTERY CURRENT SENSOR

< REMOVAL AND INSTALLATION >

BATTERY CURRENT SENSOR

Exploded View

INFOID:000000011134588

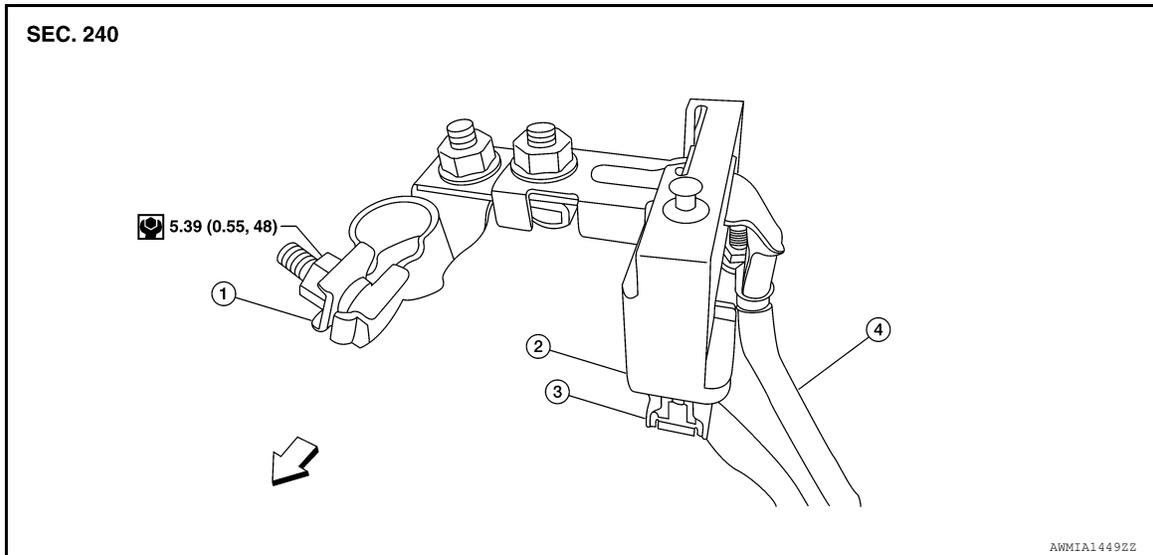

1. Negative terminal
 2. Current sensor
 3. Harness connector
 4. Negative cable
- ⇐ Front

Removal and Installation

INFOID:000000011134589

REMOVAL

1. Disconnect negative terminal from the battery.
2. Disconnect harness connector from current sensor.
3. Remove nut and separate current sensor from the negative terminal.
4. Remove nut and separate negative cable from the current sensor and remove the current sensor.

INSTALLATION

Installation is in the reverse order of removal.

CAUTION:

Replace the battery current sensor if it has been dropped or sustained and impact.

To install the battery, carefully read the following instructions:

- To prevent damage to the parts, connect the battery cable to the positive terminal first.
 - After connecting battery cables, to securely supply battery voltage, ensure that they are tightly clamped to battery terminals for good contact.
 - To securely supply battery voltage, check battery terminal for poor connection caused by corrosion.
- Reset electronic systems as necessary. Refer to [PG-93, "ADDITIONAL SERVICE WHEN REMOVING BATTERY NEGATIVE TERMINAL : Special Repair Requirement"](#).

PG

N

O

P

SERVICE DATA AND SPECIFICATIONS (SDS)

< SERVICE DATA AND SPECIFICATIONS (SDS)

SERVICE DATA AND SPECIFICATIONS (SDS)

SERVICE DATA AND SPECIFICATIONS (SDS)

Battery

INFOID:000000011134590

Type*	GR35
Capacity (20HR) minimum V-AH	12 - 60
Cold cranking current A @ -18°C (0°F)	550

*: Always check with the Parts Department for the latest parts information.