

A  
B  
C

# SECTION INL

## INTERIOR LIGHTING SYSTEM

### CONTENTS

<p><b>PRECAUTION</b> ..... 3</p> <p><b>PRECAUTIONS</b> ..... 3</p> <p style="padding-left: 20px;">Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER" .....3</p> <p style="padding-left: 20px;">Precautions for Removing of Battery Terminal .....3</p> <p><b>SYSTEM DESCRIPTION</b> ..... 4</p> <p><b>COMPONENT PARTS</b> ..... 4</p> <p style="padding-left: 20px;">Component Parts Location .....4</p> <p style="padding-left: 20px;">Component Description .....4</p> <p><b>SYSTEM</b> ..... 6</p> <p><b>INTERIOR ROOM LAMP CONTROL SYSTEM</b> .....6</p> <p style="padding-left: 20px;">INTERIOR ROOM LAMP CONTROL SYSTEM : System Diagram .....6</p> <p style="padding-left: 20px;">INTERIOR ROOM LAMP CONTROL SYSTEM : System Description .....6</p> <p><b>INTERIOR ROOM LAMP BATTERY SAVER SYSTEM</b> .....8</p> <p style="padding-left: 20px;">INTERIOR ROOM LAMP BATTERY SAVER SYSTEM : System Diagram .....9</p> <p style="padding-left: 20px;">INTERIOR ROOM LAMP BATTERY SAVER SYSTEM : System Description .....9</p> <p><b>ILLUMINATION CONTROL SYSTEM</b> .....10</p> <p style="padding-left: 20px;">ILLUMINATION CONTROL SYSTEM : System Diagram ..... 10</p> <p style="padding-left: 20px;">ILLUMINATION CONTROL SYSTEM : System Description ..... 10</p> <p><b>AUTO LIGHT ADJUSTMENT SYSTEM</b> .....10</p> <p style="padding-left: 20px;">AUTO LIGHT ADJUSTMENT SYSTEM : System Diagram ..... 11</p> <p style="padding-left: 20px;">AUTO LIGHT ADJUSTMENT SYSTEM : System Description ..... 11</p> <p><b>DIAGNOSIS SYSTEM (BCM)</b> .....12</p>	<p style="text-align: right;">D E F G H I J K L M N O P</p> <p><b>COMMON ITEM</b> .....12</p> <p style="padding-left: 20px;">COMMON ITEM : CONSULT Function (BCM - COMMON ITEM) .....12</p> <p><b>INT LAMP</b> .....13</p> <p style="padding-left: 20px;">INT LAMP : CONSULT Function (BCM - INT LAMP) .....14</p> <p><b>BATTERY SAVER</b> .....15</p> <p style="padding-left: 20px;">BATTERY SAVER : CONSULT Function (BCM - BATTERY SAVER) .....15</p> <p><b>ECU DIAGNOSIS INFORMATION</b> .....17</p> <p><b>BCM</b> .....17</p> <p style="padding-left: 20px;">List of ECU Reference .....17</p> <p><b>WIRING DIAGRAM</b> .....18</p> <p><b>INTERIOR ROOM LAMP CONTROL SYSTEM</b> .....18</p> <p style="padding-left: 20px;">Wiring Diagram .....18</p> <p><b>ILLUMINATION</b> .....34</p> <p style="padding-left: 20px;">Wiring Diagram .....34</p> <p><b>BASIC INSPECTION</b> .....53</p> <p><b>DIAGNOSIS AND REPAIR WORK FLOW</b> .....53</p> <p style="padding-left: 20px;">Work Flow .....53</p> <p><b>DTC/CIRCUIT DIAGNOSIS</b> .....56</p> <p><b>INTERIOR ROOM LAMP POWER SUPPLY CIRCUIT</b> .....56</p> <p style="padding-left: 20px;">Description .....56</p> <p style="padding-left: 20px;">Component Function Check .....56</p> <p style="padding-left: 20px;">Diagnosis Procedure .....56</p> <p><b>INTERIOR ROOM LAMP CONTROL CIRCUIT</b> .....59</p> <p style="padding-left: 20px;">Description .....59</p> <p style="padding-left: 20px;">Component Function Check .....59</p>
---	--

Diagnosis Procedure .....	59	<b>PASSENGER SIDE .....</b>	<b>72</b>
<b>LUGGAGE ROOM LAMP CIRCUIT .....</b>	<b>61</b>	PASSENGER SIDE : Exploded View .....	72
Description .....	61	PASSENGER SIDE : Replacement .....	73
Diagnosis Procedure .....	61	<b>REAR FOOT LAMP .....</b>	<b>73</b>
<b>STEP LAMP CIRCUIT .....</b>	<b>63</b>	REAR FOOT LAMP : Exploded View .....	73
Description .....	63	REAR FOOT LAMP : Removal and Installation .....	73
Component Function Check .....	63	<b>STEP LAMP .....</b>	<b>75</b>
Diagnosis Procedure .....	63	Exploded View .....	75
<b>PUDDLE LAMP CIRCUIT .....</b>	<b>65</b>	Removal and Installation .....	75
Description .....	65	Replacement .....	75
Diagnosis Procedure .....	65	<b>MOOD LAMP .....</b>	<b>76</b>
<b>PUSH-BUTTON IGNITION SWITCH ILLUMINATION CIRCUIT .....</b>	<b>66</b>	<b>FRONT DOOR ARMREST .....</b>	<b>76</b>
Component Function Check .....	66	FRONT DOOR ARMREST : Exploded View .....	76
Diagnosis Procedure .....	66	FRONT DOOR ARMREST : Replacement .....	76
<b>SYMPTOM DIAGNOSIS .....</b>	<b>68</b>	<b>REAR DOOR ARMREST .....</b>	<b>76</b>
<b>INTERIOR LIGHTING SYSTEM SYMPTOMS...</b>	<b>68</b>	REAR DOOR ARMREST : Exploded View .....	76
Symptom Table .....	68	REAR DOOR ARMREST : Replacement .....	77
<b>REMOVAL AND INSTALLATION .....</b>	<b>69</b>	<b>PERSONAL LAMP .....</b>	<b>78</b>
<b>MAP LAMP .....</b>	<b>69</b>	Exploded View .....	78
Exploded View .....	69	Removal and Installation .....	78
Removal and Installation .....	69	Replacement .....	79
Replacement .....	69	<b>PUDDLE LAMP .....</b>	<b>80</b>
<b>VANITY MIRROR LAMP .....</b>	<b>70</b>	Exploded View .....	80
Exploded View .....	70	Removal and Installation .....	80
Replacement .....	70	<b>LUGGAGE ROOM LAMP .....</b>	<b>82</b>
<b>GLOVE BOX LAMP .....</b>	<b>71</b>	Exploded View .....	82
Exploded View .....	71	Removal and Installation .....	82
Replacement .....	71	Replacement .....	82
<b>FOOT LAMP .....</b>	<b>72</b>	<b>SERVICE DATA AND SPECIFICATIONS (SDS) .....</b>	<b>83</b>
<b>DRIVER SIDE .....</b>	<b>72</b>	<b>SERVICE DATA AND SPECIFICATIONS (SDS) .....</b>	<b>83</b>
DRIVER SIDE : Exploded View .....	72	Bulb Specifications .....	83
DRIVER SIDE : Replacement .....	72		

# PRECAUTIONS

< PRECAUTION >

## PRECAUTION

### PRECAUTIONS

#### Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000009010352

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

#### **WARNING:**

Always observe the following items for preventing accidental activation.

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision that would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see "SRS AIR BAG".
- Never use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

#### PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

#### **WARNING:**

Always observe the following items for preventing accidental activation.

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, never use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

#### Precautions for Removing of Battery Terminal

INFOID:000000009888154

- When removing the 12V battery terminal, turn OFF the ignition switch and wait at least 30 seconds.

#### **NOTE:**

ECU may be active for several tens of seconds after the ignition switch is turned OFF. If the battery terminal is removed before ECU stops, then a DTC detection error or ECU data corruption may occur.

- For vehicles with the 2-batteries, be sure to connect the main battery and the sub battery before turning ON the ignition switch.


#### **NOTE:**

If the ignition switch is turned ON with any one of the terminals of main battery and sub battery disconnected, then DTC may be detected.

- After installing the 12V battery, always check "Self Diagnosis Result" of all ECUs and erase DTC.

#### **NOTE:**

The removal of 12V battery may cause a DTC detection error.

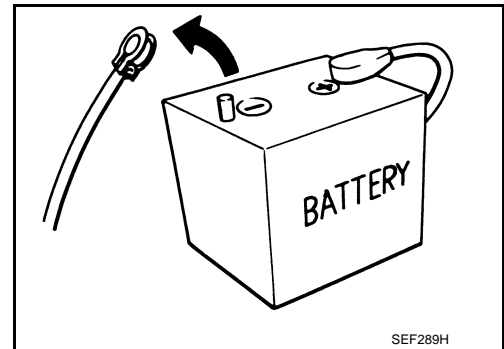

# COMPONENT PARTS


< SYSTEM DESCRIPTION >

## SYSTEM DESCRIPTION

### COMPONENT PARTS

#### Component Parts Location

INFOID:000000009010353

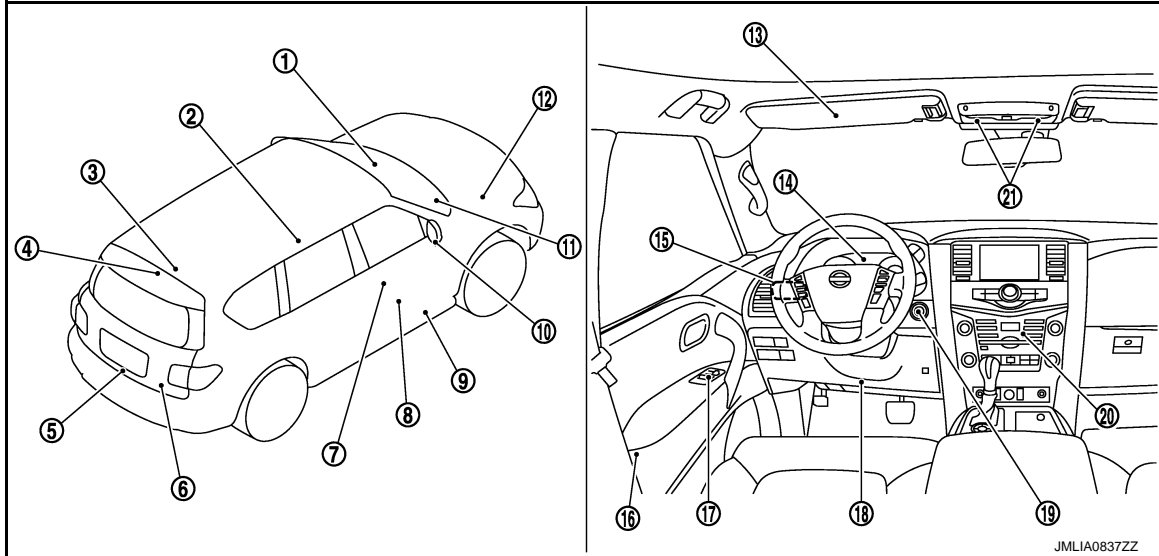

- |  |   |  |
|--|---|--|
| 1. BCM<br>Refer to <a href="#">BCS-4, "BODY CONTROL SYSTEM : Component Parts Location"</a>                         | 2. Personal lamp  | 3. Luggage room lamp   |
| 4. Remote keyless entry receiver<br>Refer to <a href="#">DLK-11, "DOOR LOCK SYSTEM : Component Parts Location"</a> | 5. Back door lock assembly (back door switch)                                     | 6. Automatic back door close switch  |
| 7. Door request switch   | 8. Door switch  | 9. Step lamp   |
| 10. Paddle lamp  | 11. Optical sensor  | 12. IPDM E/R<br>Refer to <a href="#">PCS-4, "Component Parts Location"</a> |
| 13. Vanity mirror lamp   | 14. Combination meter   | 15. Combination switch   |
| 16. Front door lock assembly (driver side) (door key cylinder switch, unlock sensor)                               | 17. Door lock and unlock switch   | 18. Foot lamp  |
| 19. Push-button ignition switch  | 20. AV control unit<br>Refer to <a href="#">AV-12, "Component Parts Location"</a> | 21. Map lamp   |

#### Component Description

INFOID:000000009010354

Part	Description
BCM	Controls the interior lighting system.
IPDM E/R	Controls the integrated relay according to the request signal from BCM (via CAN communication).
Remote keyless entry receiver	Refer to <a href="#">DLK-12, "DOOR LOCK SYSTEM : Component Description"</a> .
AV control unit	Receives the dimmer signal from BCM via CAN communication.
Optical sensor	Refer to <a href="#">EXL-7, "EXTERIOR LIGHTING SYSTEM : Component Description"</a> .
Unlock sensor	Detects door lock condition of driver side door.

# COMPONENT PARTS

## < SYSTEM DESCRIPTION >

Part	Description
Combination switch (Lighting & turn signal switch)	Refer to <a href="#">BCS-8, "COMBINATION SWITCH READING SYSTEM : System Description"</a> .
<ul style="list-style-type: none"><li>• Door lock and unlock switch</li><li>• Door request switch</li><li>• Door key cylinder switch</li></ul>	Inputs the lock/unlock signal to BCM.
<ul style="list-style-type: none"><li>• Door switch</li><li>• Back door switch</li></ul>	Inputs the door switch signal to BCM.

A

B

C

D

E

F

G

H

I

J

K

INL

M

N

O

P

# SYSTEM


< SYSTEM DESCRIPTION >

## SYSTEM

### INTERIOR ROOM LAMP CONTROL SYSTEM

#### INTERIOR ROOM LAMP CONTROL SYSTEM : System Diagram

INFOID:000000009010355

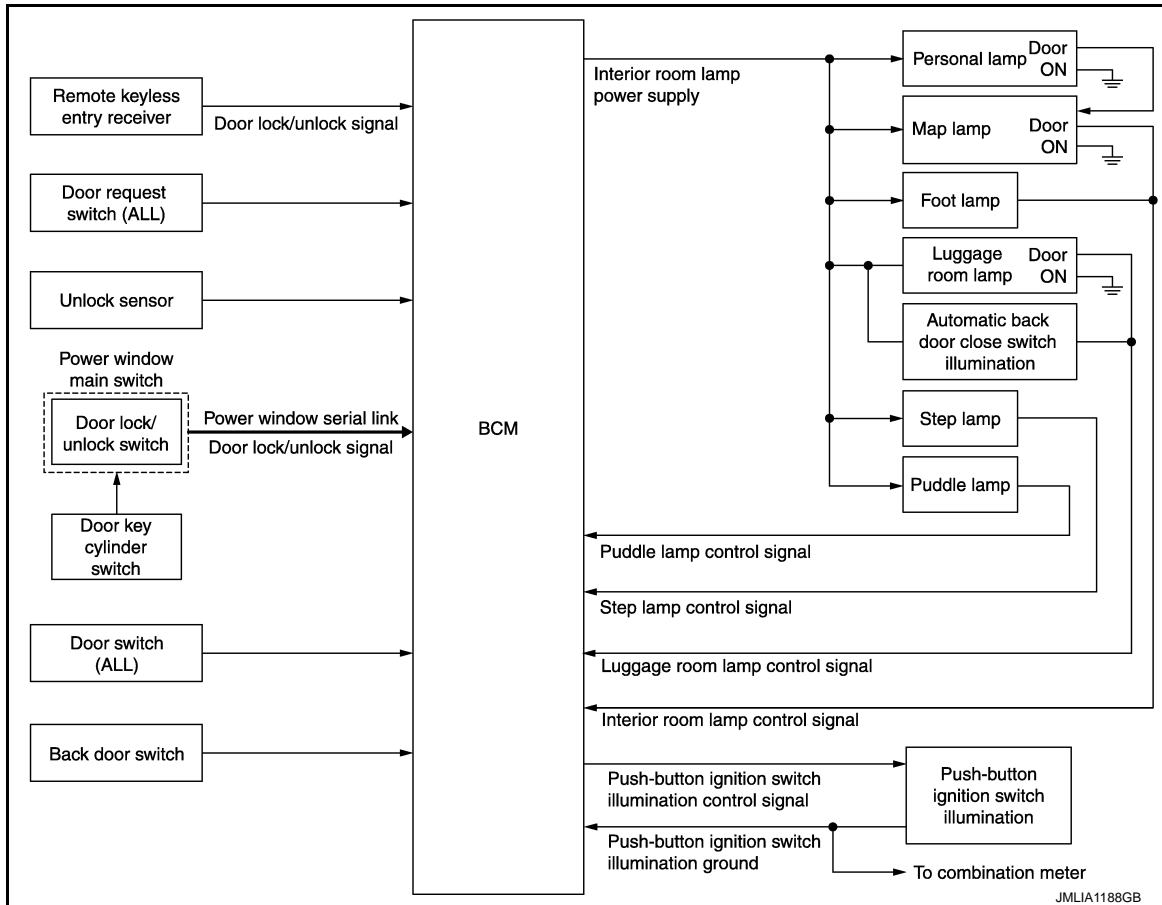

#### INTERIOR ROOM LAMP CONTROL SYSTEM : System Description

INFOID:000000009010356

##### OUTLINE


- Interior room lamps\* are controlled by interior room lamp timer control function of BCM.  
\*: Map lamp, foot lamp and personal lamp (when map lamp switch and personal lamp switch are in DOOR position).
- Step lamp is controlled by step lamp control function of BCM.
- Luggage room lamp and automatic back door close switch illumination are controlled by luggage room lamp control function of BCM.
- Puddle lamp is controlled by puddle lamp timer control function of BCM.
- Push-button ignition switch illumination is controlled by the push-button ignition switch illumination control function of BCM and combination meter.
- Interior room lamps and puddle lamp are illuminated by welcome light function of Intelligent Key system. Refer to [DLK-27. "WELCOME LIGHT FUNCTION : System Description"](#).

##### INTERIOR ROOM LAMP TIMER CONTROL

# SYSTEM

## < SYSTEM DESCRIPTION >

### Interior Room Lamp Timer Basic Operation

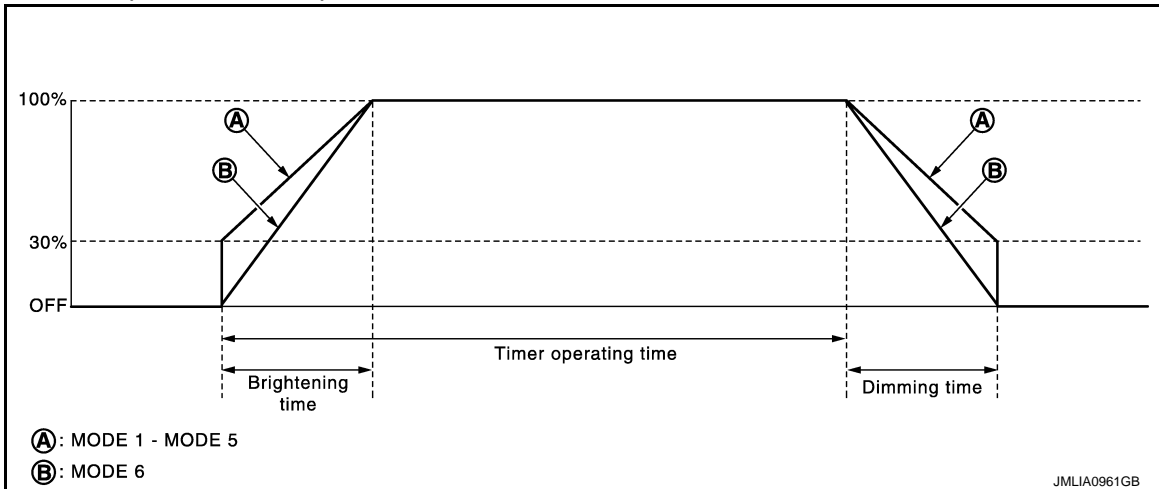

#### NOTE:

A: Sets the interior room lamp gradual brightening and dimming time.

B: Gradually brightens from 0% to 100% and gradually dims from 100% to 0% in 1 second.

- The interior room lamp turns ON and OFF (gradual brightening and dimming) by the interior room lamp timer.
- BCM judges the vehicle condition with the following items. It activates the interior room timer.
  - Ignition switch status
  - Door switch signal (except back door)
  - Door lock/unlock signal (remote keyless entry receiver, each door request switch, door key cylinder switch, door lock/unlock switch)

#### NOTE:

Each function of interior room lamp timer can be set by CONSULT. Refer to [INL-14, "INT LAMP : CONSULT Function \(BCM - INT LAMP\)"](#).

#### Interior Room Lamp ON Operation

- BCM always turns the interior room lamp ON when any door opens excepting back door.
- When all doors are closed, and any all door unlock operation is performed or ignition switch is turned OFF, BCM brightens interior room lamp to 30% brightness and maintains 30% brightness until any door opens.
- BCM activates the interior room timer in any of the following conditions to turn the interior room lamp ON for a period of time.
  - Any door opens before all doors close excepting back door.
  - Ignition switch is turned ON → OFF.
  - Any door unlock signal is detected when all doors close excepting back door with ignition switch OFF.

#### NOTE:

The timer restarts if new condition is input during the timer operating time.

#### Interior Room Lamp OFF Operation

BCM stops the timer and turns interior room lamp OFF, when any of the following conditions is satisfied.

- The interior room lamp timer operating time is expired with all doors closed excepting back door.
- Ignition switch position is other than OFF with all doors close excepting back door.
- Any door lock signal is detected with all doors close excepting back door.

#### LUGGAGE ROOM LAMP CONTROL

BCM controls the luggage room lamp and automatic back door close switch illumination (ground-side) to turn ON with back door switch ON.

- When luggage room lamp switch is turned to the ON position, luggage room lamp turns ON.
- When luggage room lamp switch is in the DOOR position and back door is opened, luggage room lamp turns ON.
- When back door is opened, automatic back door close switch illumination turn ON.

#### STEP LAMP CONTROL

BCM controls the step lamp (ground-side) to turn ON with any door switch ON excepting back door.

#### PUDDLE LAMP TIMER CONTROL

##### Puddle Lamp Timer Basic Operation

- BCM controls the ground to turn the puddle lamp ON.

# SYSTEM

## < SYSTEM DESCRIPTION >

---

- The puddle lamp turns ON and OFF by the puddle lamp timer.
- BCM judges the vehicle condition with the following items. It activates the puddle lamp timer.
  - Ignition switch status
  - Door switch signal (except back door)
  - Door lock/unlock signal (remote keyless entry receiver, each door request switch)
  - Driver side door lock status

### Puddle Lamp ON Operation

BCM activates the puddle lamp timer in any of the following conditions to turn the puddle lamp ON for a period of time.

- Any door opens excepting back door.
- Any door opens before all doors close excepting back door.
- Ignition switch is turned ON → OFF.
- Door unlock signal by remote keyless entry receiver or each door request switch is detected.
- Driver side door is locked\*.

### NOTE:

The timer restarts if new condition is input during the timer operating time.

### Puddle Lamp OFF Operation

BCM stops the timer and turns puddle lamp OFF, when any of the following conditions are satisfied.

- The puddle lamp timer operating time is expired.
- The interior room lamp OFF conditions.
- The interior room lamp timer operating time is expired.

## PUSH-BUTTON IGNITION SWITCH ILLUMINATION CONTROL

### Push-button Ignition Switch Illumination Basic Operation

- BCM controls the ON/OFF status of push-button ignition switch illumination according to vehicle status.
- BCM provides the push-button ignition switch illumination control signal and the ground to turn the push-button ignition switch illumination ON.
- BCM cuts the ground supply while each illumination (tail lamp) is ON. BCM switches to the ground control according to the meter illumination control function. Refer to [MWI-17. "METER ILLUMINATION CONTROL : System Description"](#).

### Heart Beat Operation

BCM repeats brightening and dimming operation of push-button ignition switch illumination when any of the following conditions are satisfied.

- Welcome light function operates.
- When ignition switch is OFF and any of the following conditions are satisfied.
  - Driver side door changes from closed to open
  - Driver side door changes from locked to unlocked
  - Intelligent Key ID comparison is OK and driver side door changes from open to closed
  - ID comparison by Intelligent Key transponder is OK

### Illumination ON Operation

When ignition switch is not OFF or tail lamp turns ON, push-button ignition switch illumination turns ON.

### Dimming Operation

When tail lamp turns OFF and ignition switch is turned OFF, push-button ignition switch illumination dims to 50% brightness.

### Illumination OFF Operation

Push-button ignition switch illumination turns OFF when ignition switch turns OFF and tail lamp turns from ON to OFF, while push-button ignition switch illumination is in ON status.

When push-button ignition switch illumination is at 50% brightness or in heartbeat status, and any of the following conditions are satisfied, push-button ignition switch illumination turns OFF.

- 15 seconds after start of heartbeat operation.
- When welcome light function is not operating and any on the following conditions is satisfied.
  - Driver side door is closed
  - Driver side door is locked
  - Intelligent Key ID comparison is NG
  - Comparison of Intelligent Key ID by transponder is NG

## INTERIOR ROOM LAMP BATTERY SAVER SYSTEM




# SYSTEM

< SYSTEM DESCRIPTION >

## INTERIOR ROOM LAMP BATTERY SAVER SYSTEM : System Diagram

INFOID:000000009010357

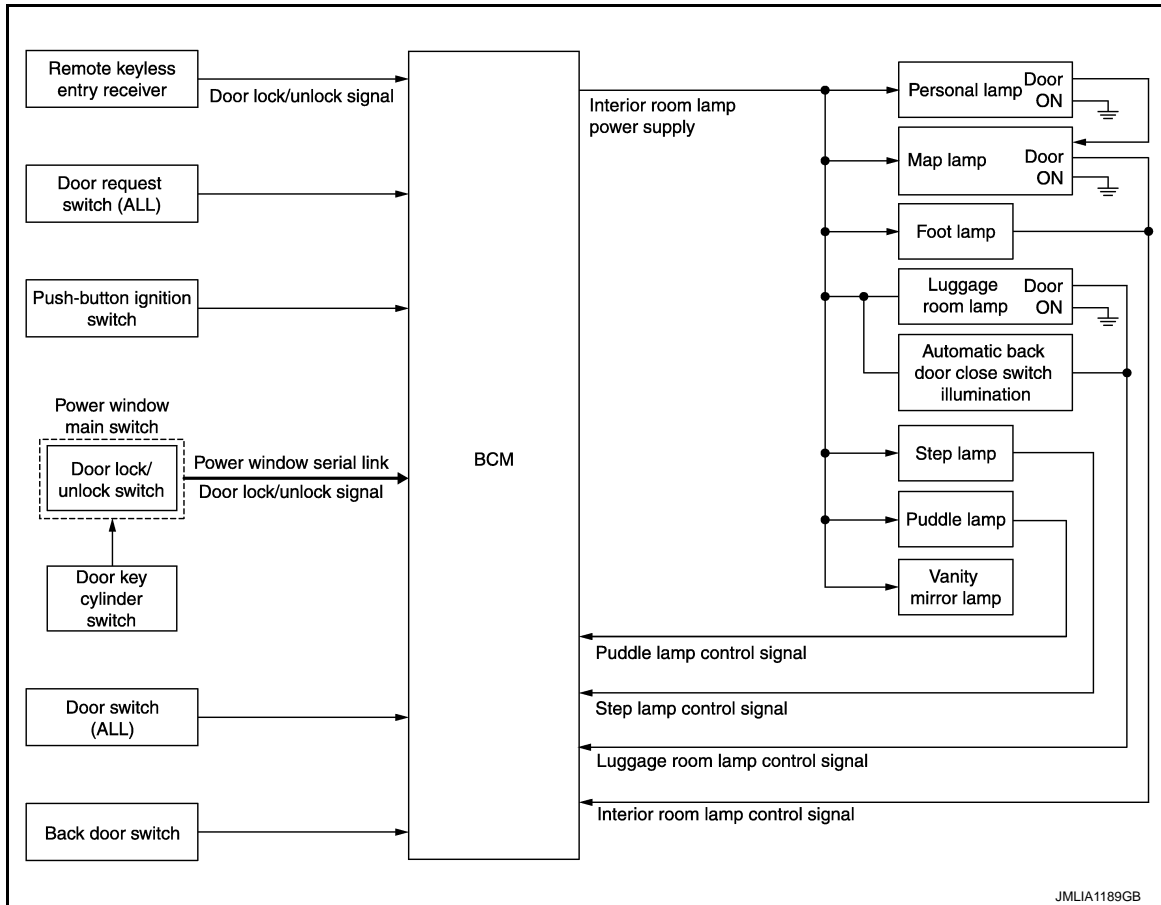

## INTERIOR ROOM LAMP BATTERY SAVER SYSTEM : System Description

INFOID:000000009010358

### OUTLINE

- Interior room lamp battery saver is controlled by BCM.
- BCM turns applicable lamps OFF depending on the vehicle condition. This function prevents the battery from over-discharging if the driver neglects turning OFF the any lamps.

### Applicable lamps

- Map lamp
- Personal lamp
- Foot lamp
- Luggage room lamp
- Automatic back door close switch illumination
- Step lamp
- Puddle lamp
- Vanity mirror lamp

### INTERIOR ROOM LAMP BATTERY SAVER FUNCTION

- When the ignition switch is turned to a position other than ON, BCM operates the timer for a period of time to cut the interior room lamp power supply.
- BCM restart the timer when any of the following signals changes while operating the timer.
  - Push-button ignition switch status
  - Door switch signal (ALL)
  - Door lock/unlock signal (remote keyless entry receiver, each door request switch, door lock and unlock switch, door key cylinder switch)
- BCM provides the interior room lamp power supply continuously when the ignition switch position is ON.
- When welcome light function operates.

### NOTE:


# SYSTEM

## < SYSTEM DESCRIPTION >

Each function of interior room lamp battery saver can be set by CONSULT. Refer to [INL-15. "BATTERY SAVER : CONSULT Function \(BCM - BATTERY SAVER\)".](#)

## ILLUMINATION CONTROL SYSTEM

### ILLUMINATION CONTROL SYSTEM : System Diagram

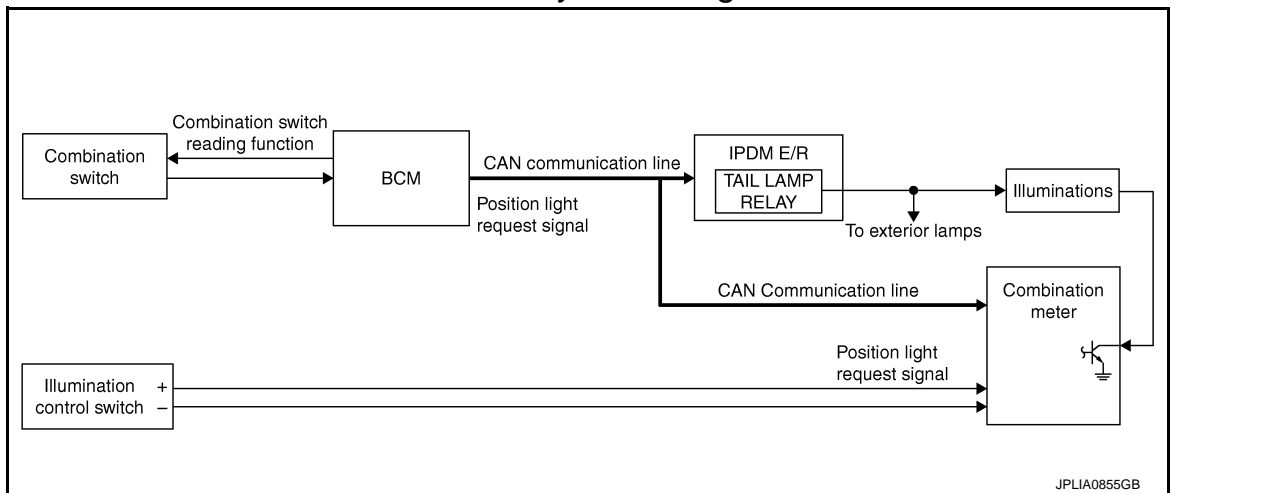

### ILLUMINATION CONTROL SYSTEM : System Description

INFOID:000000009010360

#### OUTLINE

Each illumination lamp is controlled by each function of BCM, IPDM E/R and combination meter.

##### Control by BCM

- Combination switch reading function
- Headlamp control function

##### Control by IPDM E/R

- Relay control function

##### Control by combination meter

- Meter illumination control function (Refer to [MWI-17. "METER ILLUMINATION CONTROL : System Description".](#))

#### ILLUMINATION CONTROL

- BCM detects the combination switch condition by the combination switch reading function.
- BCM transmits position light request signal to IPDM E/R and combination meter according to tail lamp ON condition.

##### Tail lamp ON condition

- Lighting switch 1ST
- Lighting switch 2ND
- Lighting switch AUTO, and the auto light function ON judgment
- Lighting switch AUTO, with the front fog lamp switch ON and the ignition switch ON
- IPDM E/R turns the integrated tail lamp relay ON according to position light request signal. It provides the power supply to each illumination lamp.
- Combination meter enters in the nighttime mode according to position light request signal. Under the nighttime mode the combination meter controls the illuminance by controlling each illumination lamp (ground side).


#### AUTO LIGHT ADJUSTMENT SYSTEM

# SYSTEM

< SYSTEM DESCRIPTION >

## AUTO LIGHT ADJUSTMENT SYSTEM : System Diagram

INFOID:000000009010361

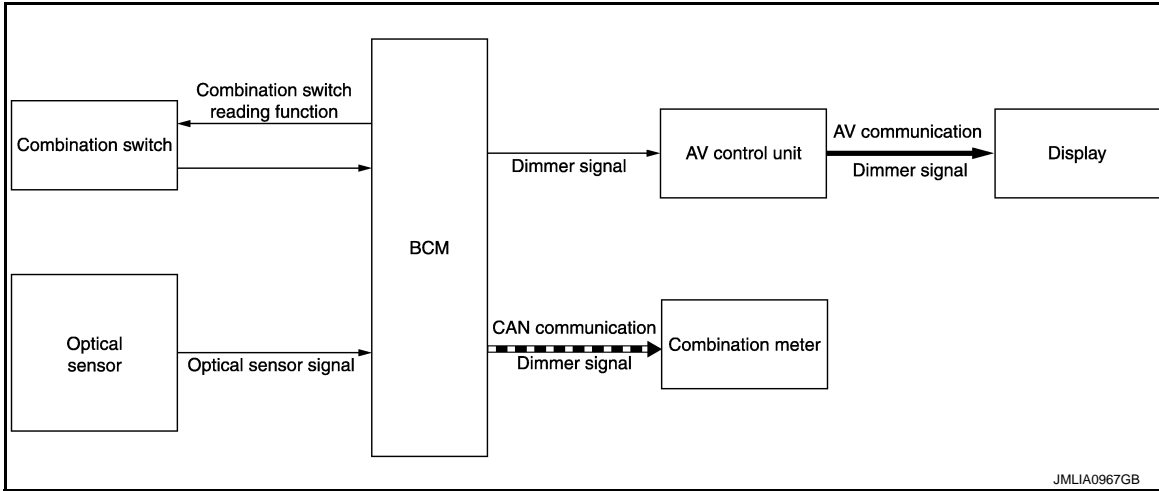

## AUTO LIGHT ADJUSTMENT SYSTEM : System Description

INFOID:000000009010362

### OUTLINE

Auto light adjustment system is controlled by each function of BCM, combination meter and AV control unit

Control by BCM

- Auto light system
- Auto light adjustment system

### AUTO LIGHT ADJUSTMENT SYSTEM

Description

- BCM supplies voltage to the optical sensor when the ignition switch is turned ON or ACC.
- Optical sensor converts outside brightness (lux) to voltage and transmits the optical sensor signal to BCM.
- BCM judges dimming/brightening of combination meter and display according to brightness outside the vehicle, when ignition switch is ON.
- BCM transmits dimmer signal to combination meter via CAN communication, according to auto light adjustment conditions. Dimmer signal is also transmitted to AV control unit.

#### NOTE:

As to dimming/brightening timing, the sensitivity depends on settings. The settings can be changed with CONSULT. Refer to [EXL-22. "HEADLAMP : CONSULT Function \(BCM - HEAD LAMP\)"](#).

Auto Light Adjustment Timing Table

When the ignition switch is ON, the illumination of combination meter and display switches dimming/brightening in the following condition.

Combination meter and display	Dimming/brightening timing
Dimming	Outside brightness is 1250 lx or less for 3 seconds or more.
Brightening	Outside brightness is 2500 lx or more for 5 seconds or more.

BCM switches the illumination of combination meter and display to dimming when outside brightening obtained from the optical sensor signal is 1250 lx or less for 3 seconds or more. And BCM switches the illumination of combination meter and display to brightening when outside brightening from the optical sensor signal is 2500 lx or more for 5 seconds or more.

# DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

## DIAGNOSIS SYSTEM (BCM)

### COMMON ITEM

#### COMMON ITEM : CONSULT Function (BCM - COMMON ITEM)

INFOID:000000009336391

#### APPLICATION ITEM

CONSULT performs the following functions via CAN communication with BCM.

Diagnosis mode	Function Description
Work Support	Changes the setting for each system function.
Self Diagnostic Result	Displays the diagnosis results judged by BCM. Refer to <a href="#">BCS-57, "DTC Index"</a> .
CAN Diag Support Monitor	Monitors the reception status of CAN communication viewed from BCM.
Data Monitor	The BCM input/output signals are displayed.
Active Test	The signals used to activate each device are forcibly supplied from BCM.
Ecu Identification	The BCM part number is displayed.
Configuration	<ul style="list-style-type: none"> <li>Read and save the vehicle specification.</li> <li>Write the vehicle specification when replacing BCM.</li> </ul>

#### SYSTEM APPLICATION

BCM can perform the following functions for each system.

#### NOTE:

It can perform the diagnosis modes except the following for all sub system selection items.

×: Applicable item

System	Sub system selection item	Diagnosis mode		
		Work Support	Data Monitor	Active Test
Door lock	DOOR LOCK	×	×	×
Rear window defogger	REAR DEFOGGER		×	×
Warning chime	BUZZER		×	×
Interior room lamp timer	INT LAMP	×	×	×
Exterior lamp	HEAD LAMP	×	×	×
Wiper and washer	WIPER	×	×	×
Turn signal and hazard warning lamps	FLASHER	×	×	×
—	AIR CONDITONER*		×	×
<ul style="list-style-type: none"> <li>Intelligent Key system</li> <li>Engine start system</li> </ul>	INTELLIGENT KEY	×	×	×
Combination switch	COMB SW		×	
Body control system	BCM	×		
IVIS	IMMU	×	×	×
Interior room lamp battery saver	BATTERY SAVER	×	×	×
Back door	TRUNK		×	
Vehicle security system	THEFT ALM	×	×	×
RAP system	RETAINED PWR		×	
Signal buffer system	SIGNAL BUFFER		×	×
—	AIR PRESSURE MONITOR*	×	×	×

\*: This item is indicated, but not used.

#### FREEZE FRAME DATA (FFD)

The BCM records the following vehicle condition at the time a particular DTC is detected, and displays on CONSULT.

# DIAGNOSIS SYSTEM (BCM)

## < SYSTEM DESCRIPTION >

CONSULT screen item	Indication/Unit	Description		
Vehicle Speed	km/h	Vehicle speed of the moment a particular DTC is detected		A
Odo/Trip Meter	km	Total mileage (Odometer value) of the moment a particular DTC is detected		
Vehicle Condition	SLEEP>LOCK	Power position status of the moment a particular DTC is detected	While turning BCM status from low power consumption mode to normal mode (Power supply position is "LOCK")	B
	SLEEP>OFF		While turning BCM status from low power consumption mode to normal mode (Power supply position is "OFF".)	C
	LOCK>ACC		While turning power supply position from "LOCK" to "ACC"	
	ACC>ON		While turning power supply position from "ACC" to "IGN"	D
	RUN>ACC		While turning power supply position from "RUN" to "ACC" (Vehicle is stopping and selector lever is except P position.)	
	CRANK>RUN		While turning power supply position from "CRANKING" to "RUN" (From cranking up the engine to run it)	E
	RUN>URGENT		While turning power supply position from "RUN" to "ACC" (Emergency stop operation)	
	ACC>OFF		While turning power supply position from "ACC" to "OFF"	F
	OFF>LOCK		While turning power supply position from "OFF" to "LOCK"	
	OFF>ACC		While turning power supply position from "OFF" to "ACC"	G
	ON>CRANK		While turning power supply position from "IGN" to "CRANKING"	
	OFF>SLEEP		While turning BCM status from normal mode (Power supply position is "OFF".) to low power consumption mode	H
	LOCK>SLEEP		While turning BCM status from normal mode (Power supply position is "LOCK".) to low power consumption mode	
	LOCK		Power supply position is "LOCK" (Ignition switch OFF with steering is locked.)	I
	OFF		Power supply position is "OFF" (Ignition switch OFF with steering is unlocked.)	J
	ACC		Power supply position is "ACC" (Ignition switch ACC)	
	ON		Power supply position is "IGN" (Ignition switch ON with engine stopped)	K
	ENGINE RUN		Power supply position is "RUN" (Ignition switch ON with engine running)	
CRANKING	Power supply position is "CRANKING" (At engine cranking)	INL		
IGN Counter	0 - 39	<p>The number of times that ignition switch is turned ON after DTC is detected</p> <ul style="list-style-type: none"> <li>• The number is 0 when a malfunction is detected now.</li> <li>• The number increases like 1 → 2 → 3...38 → 39 after returning to the normal condition whenever ignition switch OFF → ON.</li> <li>• The number is fixed to 39 until the self-diagnosis results are erased if it is over 39.</li> </ul>		M

## INT LAMP

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
INL  
M  
N  
O  
P


# DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

## INT LAMP : CONSULT Function (BCM - INT LAMP)

INFOID:000000009010364

### WORK SUPPORT

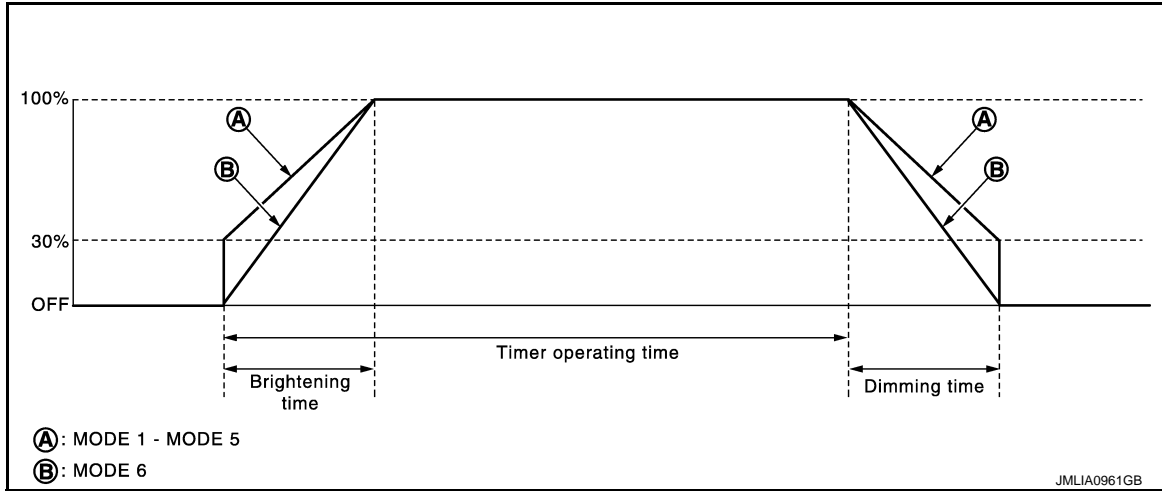

Service item	Setting item	Setting
SET I/L D-UNLCK INTCON	On*	With the interior room lamp timer function
	Off	Without the interior room lamp timer function
ROOM LAMP TIMER SET	MODE 2	7.5 sec.
	MODE 3*	15 sec.
	MODE 4	30 sec.
ROOM LAMP ON TIME SET	MODE 1	0.5 sec.
	MODE 2	1 sec.
	MODE 3	2 sec.
	MODE 4	3 sec.
	MODE 5	0 sec.
	MODE 6*	Gradually brightens from 0% to 100% brightness in 1 second.
ROOM LAMP OFF TIME SET	MODE 1	0.5 sec.
	MODE 2	1 sec.
	MODE 3	2 sec.
	MODE 4	3 sec.
	MODE 5	0 sec.
	MODE 6*	Gradually dims from 100% to 0% in 1 second.
R LAMP TIMER LOGIC SET	MODE 1*	Interior room lamp timer activates with synchronizing all doors.
	MODE 2	Interior room lamp timer activates with synchronizing the driver door only.

### DATA MONITOR

#### NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

Monitor item [Unit]	Description
REQ SW-DR [On/Off]	Indicated [On/Off] condition of door request switch (driver side)
REQ SW-AS [On/Off]	Indicated [On/Off] condition of door request switch (passenger side)

# DIAGNOSIS SYSTEM (BCM)

## < SYSTEM DESCRIPTION >

Monitor item [Unit]	Description
REQ SW-RR [On/Off]	<b>NOTE:</b> This item is displayed, but cannot be monitored
REQ SW-RL [On/Off]	<b>NOTE:</b> This item is displayed, but cannot be monitored
PUSH SW [On/Off]	Indicates [On/Off] condition of push-button ignition switch
UNLK SEN -DR [On/Off]	Indicates [On/Off] condition of driver door UNLOCK status
DOOR SW-DR [On/Off]	Indicated [On/Off] condition of front door switch (driver side)
DOOR SW-AS [On/Off]	Indicated [On/Off] condition of front door switch (passenger side)
DOOR SW-RR [On/Off]	Indicated [On/Off] condition of rear door switch RH
DOOR SW- RL [On/Off]	Indicated [On/Off] condition of rear door switch LH
DOOR SW- BK [On/Off]	Indicated [On/Off] condition of back door switch
CDL LOCK SW [On/Off]	Indicated [On/Off] condition of lock signal from door lock unlock switch
CDL UNLOCK SW [On/Off]	Indicated [On/Off] condition of unlock signal from door lock unlock switch
KEY CYL LK-SW [On/Off]	Indicated [On/Off] condition of lock signal from door key cylinder switch
KEY CYL UN-SW [On/Off]	Indicated [On/Off] condition of unlock signal from door key cylinder switch
TRNK/HAT MNTR [On/Off]	<b>NOTE:</b> This item is displayed, but cannot be monitored
RKE-LOCK [On/Off]	Indicates [On/Off] condition of LOCK signal from Intelligent Key
RKE-UNLOCK [On/Off]	Indicates [On/Off] condition of UNLOCK signal from Intelligent Key

## ACTIVE TEST

Test item	Operation	Description
INT LAMP	On	Outputs the interior room lamp control signal.
	Off	Stops the interior room lamp control signal.
STEP LAMP TEST	On	Outputs the step lamp control signal.
	Off	Stops the step lamp control signal.

## BATTERY SAVER

### BATTERY SAVER : CONSULT Function (BCM - BATTERY SAVER)

INFOID:000000009010365

## WORK SUPPORT

Service item	Setting item	Setting
ROOM LAMP TIMER SET	MODE 1	30 min.
	MODE 2	60 min.
	MODE 3*	15 min.
		Sets the interior room lamp battery saver timer operating time.

# DIAGNOSIS SYSTEM (BCM)

## < SYSTEM DESCRIPTION >

Service item	Setting item	Setting
BATTERY SAVER SET	On*	With the exterior lamp battery saver function
	Off	Without the exterior lamp battery saver function

\*:Factory setting

## DATA MONITOR

### NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

Monitor item [Unit]	Description
REQ SW-DR [On/Off]	Indicated [On/Off] condition of door request switch (driver side)
REQ SW-AS [On/Off]	Indicated [On/Off] condition of door request switch (passenger side)
REQ SW-RR [On/Off]	<b>NOTE:</b> This item is displayed, but cannot be monitored
REQ SW-RL [On/Off]	<b>NOTE:</b> This item is displayed, but cannot be monitored
PUSH SW [On/Off]	Indicates [On/Off] condition of push-button ignition switch
UNLK SEN -DR [On/Off]	Indicates [On/Off] condition of driver door UNLOCK status
DOOR SW-DR [On/Off]	Indicated [On/Off] condition of front door switch (driver side)
DOOR SW-AS [On/Off]	Indicated [On/Off] condition of front door switch (passenger side)
DOOR SW-RR [On/Off]	Indicated [On/Off] condition of rear door switch RH
DOOR SW- RL [On/Off]	Indicated [On/Off] condition of rear door switch LH
DOOR SW- BK [On/Off]	Indicated [On/Off] condition of back door switch
CDL LOCK SW [On/Off]	Indicated [On/Off] condition of lock signal from door lock unlock switch
CDL UNLOCK SW [On/Off]	Indicated [On/Off] condition of unlock signal from door lock unlock switch
KEY CYL LK-SW [On/Off]	Indicated [On/Off] condition of lock signal from door key cylinder switch
KEY CYL UN-SW [On/Off]	Indicated [On/Off] condition of unlock signal from door key cylinder switch
TRNK/HAT MNTR [On/Off]	<b>NOTE:</b> This item is displayed, but cannot be monitored
RKE-LOCK [On/Off]	Indicates [On/Off] condition of LOCK signal from Intelligent Key
RKE-UNLOCK [On/Off]	Indicates [On/Off] condition of UNLOCK signal from Intelligent Key

## ACTIVE TEST

Test item	Operation	Description
BATTERY SAVER	Off	Cuts the interior room lamp power supply.
	On	Outputs the interior room lamp power supply.



# BCM

< ECU DIAGNOSIS INFORMATION >

## ECU DIAGNOSIS INFORMATION

BCM

List of ECU Reference

INFOID:000000009010366

ECU	Reference
	<a href="#">BCS-35, "Reference Value"</a>
BCM	<a href="#">BCS-56, "Fail-safe"</a>
	<a href="#">BCS-57, "DTC Inspection Priority Chart"</a>
	<a href="#">BCS-57, "DTC Index"</a>

A

B

C

D

E

F

G

H

I

J

K

INL

M

N

O

P

# INTERIOR ROOM LAMP CONTROL SYSTEM


< WIRING DIAGRAM >

## WIRING DIAGRAM

### INTERIOR ROOM LAMP CONTROL SYSTEM

#### Wiring Diagram

INFOID:000000009010367

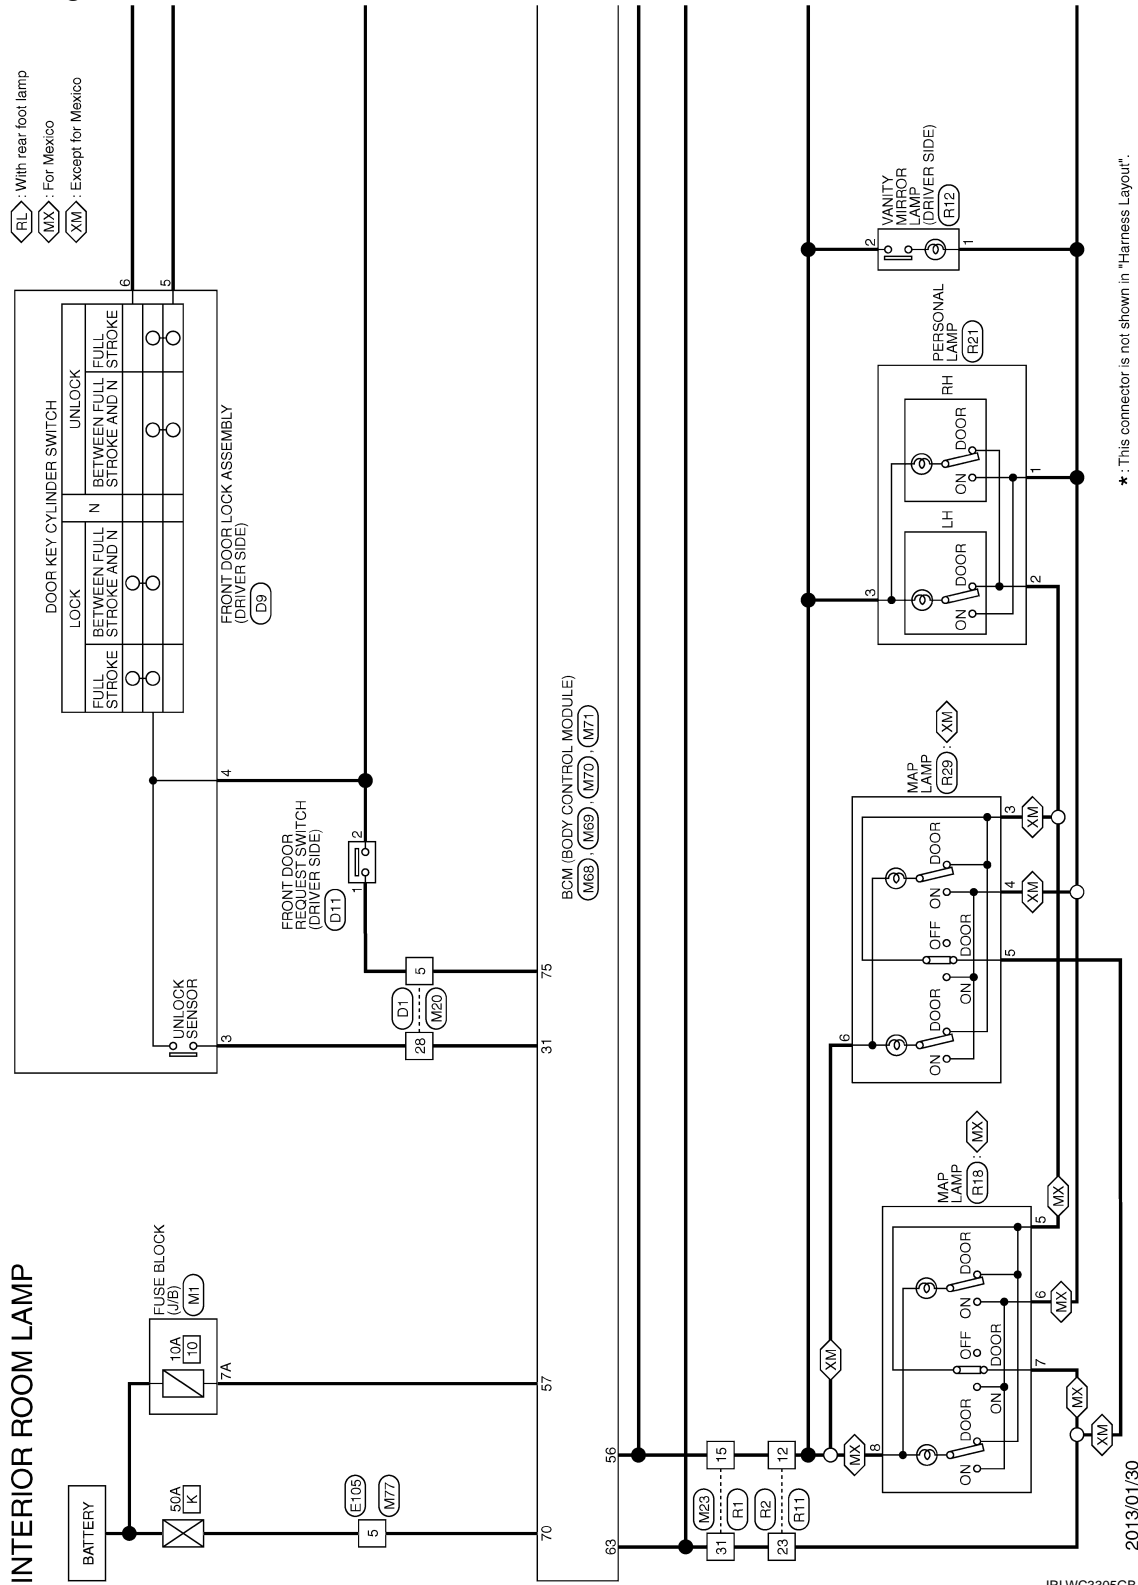


\*: This connector is not shown in "Harness Layout".

2013/01/30

JRLWC3305GB

# INTERIOR ROOM LAMP CONTROL SYSTEM

< WIRING DIAGRAM >

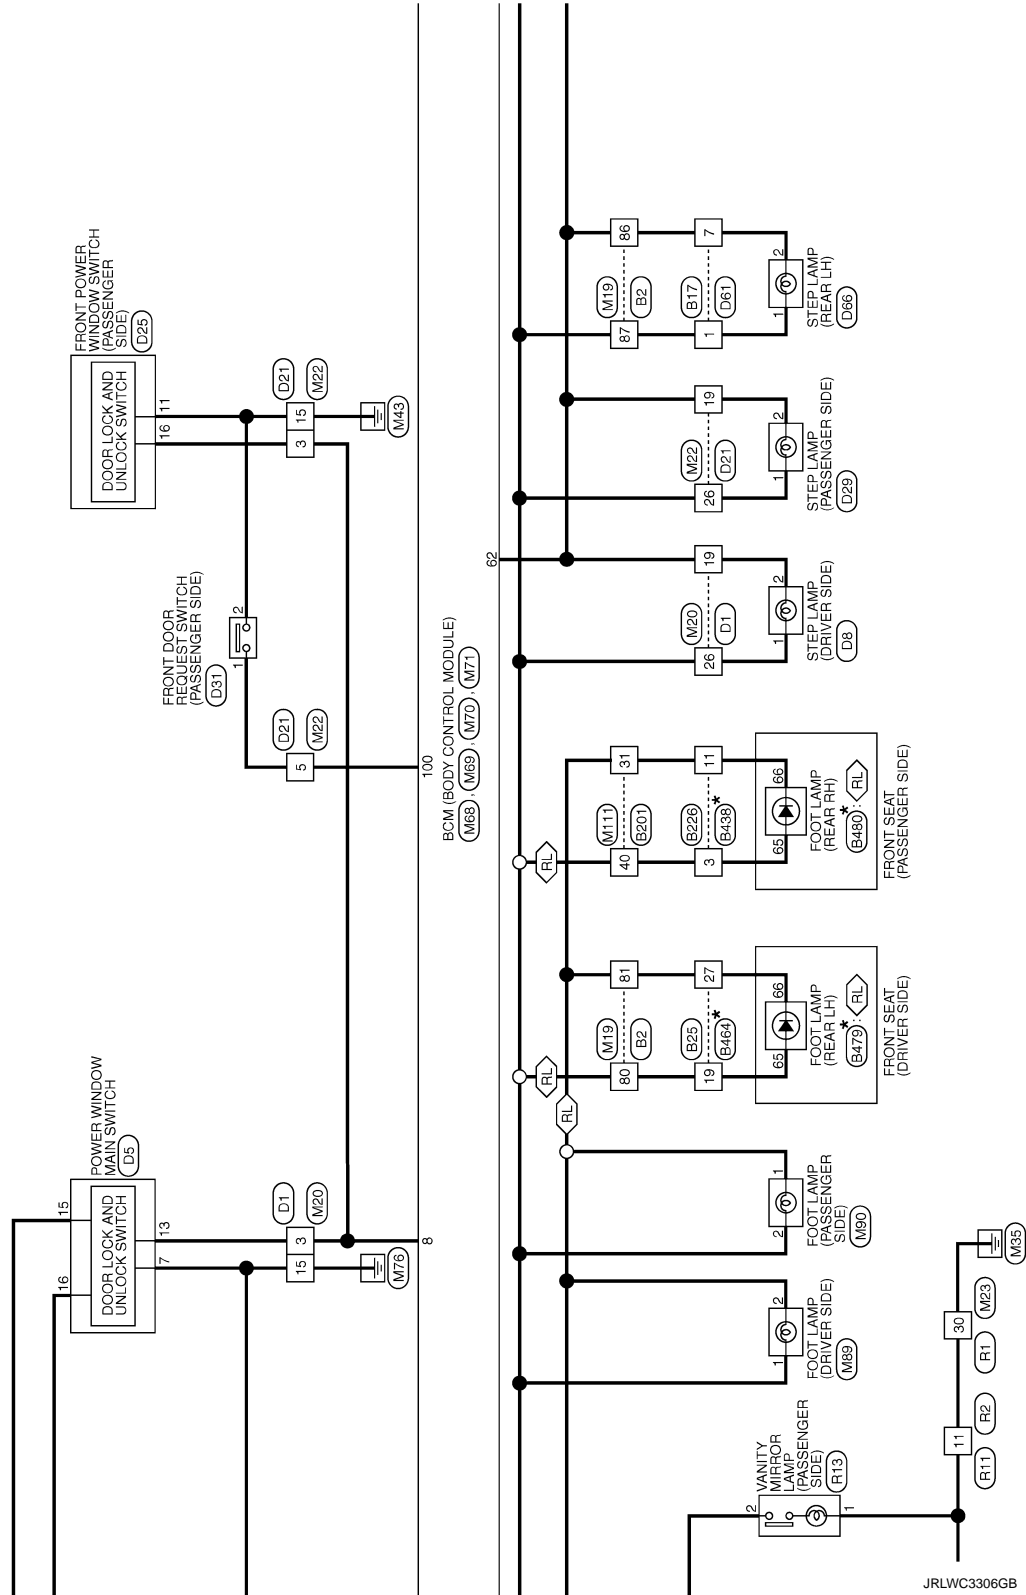


A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

INL

# INTERIOR ROOM LAMP CONTROL SYSTEM


< WIRING DIAGRAM >

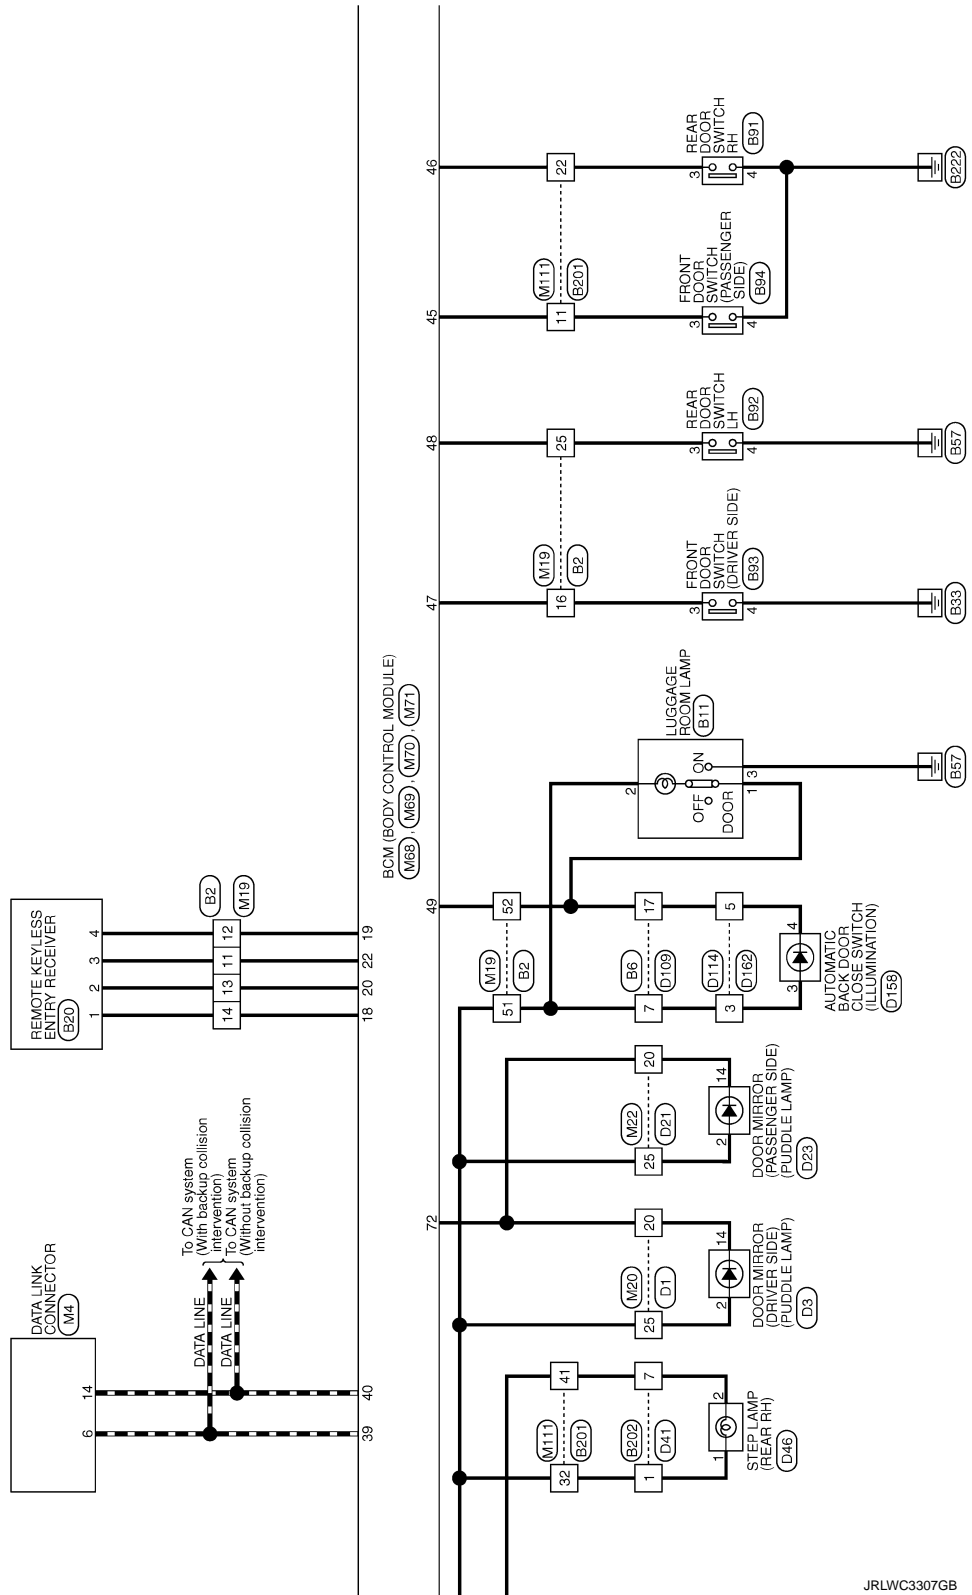

JRLWC3307GB

# INTERIOR ROOM LAMP CONTROL SYSTEM

< WIRING DIAGRAM >

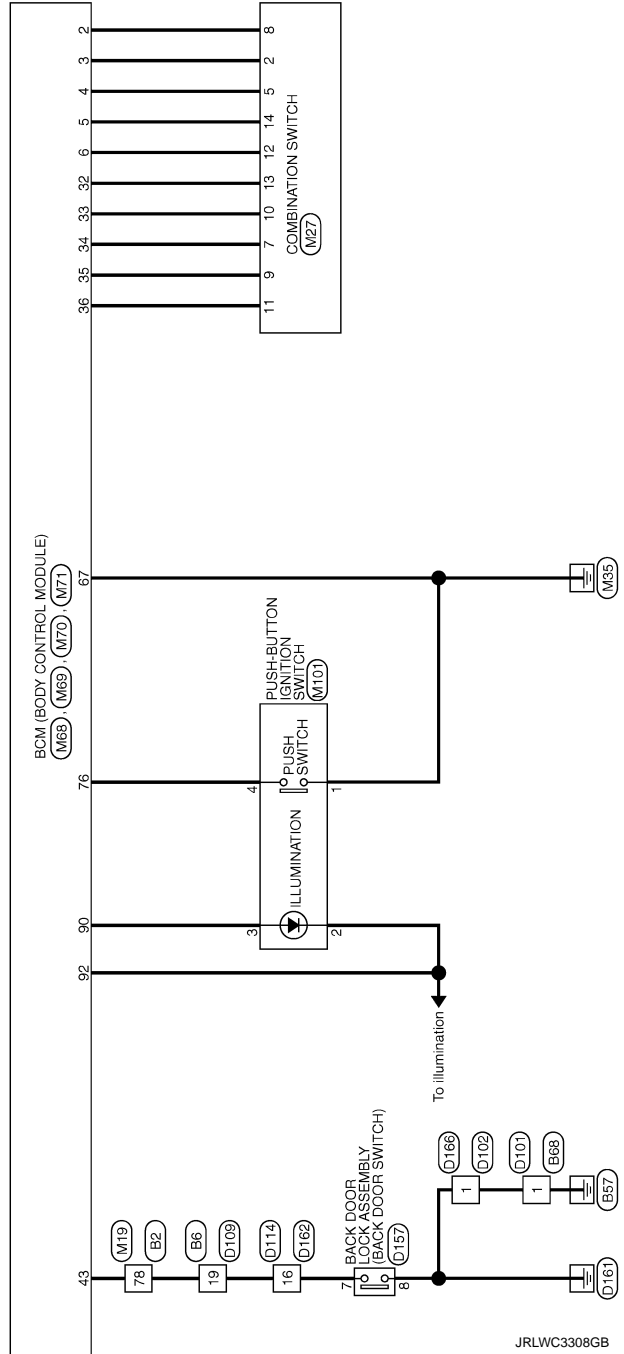

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
INL  
M  
N  
O  
P

# INTERIOR ROOM LAMP CONTROL SYSTEM

< WIRING DIAGRAM >

## INTERIOR ROOM LAMP

 
Connector No.	B2
Connector Name	WIRE TO WIRE
Connector Type	TH80MW-CS16-TM4



Terminal No.	Color Of Wire	Signal Name [Specification]
2	L	-
3	BR	-
5	RY	-
6	V	-
7	G	-
9	W/B	-
12	BR	-
13	G/R	-
14	B/Y	-
15	W/R	-
16	G/R	-
18	GW	-
19	V	-
20	W/G	-
21	B/W	-
22	V	-
24	G	-
25	O	-
26	Y	-
27	L/O	-
28	Y/R	-
29	L	-
30	R	-
31	G/Y	-
32	B/SB	-
33	L/G/R	-
34	BR/W	-
35	G/R	-
36	SB	-
37	LG	-
38	L	-
39	P	-
40	W/G	-
41	O	-

42	G/R	-
43	V/W	-
44	L/G/B	-
45	RY	-
46	B	-
47	BR	-
49	GR	-
50	R/B	-
51	W/R	-
52	BRY	-
53	O/B	-
54	G/O	-
55	R/B	-
56	L/G/R	-
57	G/R	-
58	Y/G	-
59	V/W	-
60	R	-
63	B	-
64	R	-
65	W	-
66	G	-
67	SHIELD	-
69	L/G/B	-
70	P/L	-
71	L	-
72	R	-
77	Y/B	-
78	Y/L	-
79	Y	-
80	W/R	-
81	Y/L	-
84	L/O	-
86	O	-
87	W/R	-
88	O	-
89	W/L	-
90	GR/L	-
91	W	-
92	G	-
94	W/R	-
96	L/W	-
97	R	-
98	V	-
99	L/W	-
100	P/B	-

Connector No.	B6
Connector Name	WIRE TO WIRE
Connector Type	TH24MW-AH




Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	-
2	R	-
3	B	-
5	LG	-
6	GR	-
7	L/O	-
8	Y	-
10	B/W	-
11	W/G	-
12	W/R	-
13	SHIELD	-
14	G	-
17	BRY	-
18	W/L	-
19	Y/L	-
20	G/Y	-
21	L/Y	-
22	L/W	-
23	GW	-
24	L/R	-

Connector No.	B11
Connector Name	LUGGAGE ROOM LAMP
Connector Type	TK03FW



Terminal No.	Color Of Wire	Signal Name [Specification]
1	BRY	-
2	W/R	-
3	B	-

Connector No.	B17
Connector Name	WIRE TO WIRE
Connector Type	NS16FM-CS

 
 



 



 

 



 


Terminal No.	Color Of Wire	Signal Name [Specification]
1	W/R	-
3	G	-
5	R	-
6	L/O	-
7	O	-
8	B	-
9	L	-
10	RY	-
15	V	-
16	W	-

# INTERIOR ROOM LAMP CONTROL SYSTEM

< WIRING DIAGRAM >

## INTERIOR ROOM LAMP

<table border="1"> <tr><td>Connector No.</td><td>B20</td></tr> <tr><td>Connector Name</td><td>REMOTE KEYLESS ENTRY RECEIVER</td></tr> <tr><td>Connector Type</td><td>TK04FW</td></tr> </table>	Connector No.	B20	Connector Name	REMOTE KEYLESS ENTRY RECEIVER	Connector Type	TK04FW	 	<table border="1"> <tr><td>Terminal No.</td><td>Wire</td><td>Signal Name [Specification]</td></tr> <tr><td>1</td><td>BR</td><td>-</td></tr> <tr><td>2</td><td>W/B</td><td>-</td></tr> <tr><td>3</td><td>G/R</td><td>-</td></tr> <tr><td>4</td><td>BY</td><td>-</td></tr> </table>	Terminal No.	Wire	Signal Name [Specification]	1	BR	-	2	W/B	-	3	G/R	-	4	BY	-	<table border="1"> <tr><td>Connector No.</td><td>B20</td></tr> <tr><td>Connector Name</td><td>WIRE TO WIRE</td></tr> <tr><td>Connector Type</td><td>NS12FW-CS</td></tr> </table>	Connector No.	B20	Connector Name	WIRE TO WIRE	Connector Type	NS12FW-CS	 	<table border="1"> <tr><td>Terminal No.</td><td>Wire</td><td>Signal Name [Specification]</td></tr> <tr><td>17</td><td>LG/R</td><td>-</td></tr> <tr><td>18</td><td>B/SB</td><td>-</td></tr> <tr><td>19</td><td>W/R</td><td>-</td></tr> <tr><td>20</td><td>G/Y</td><td>-</td></tr> <tr><td>23</td><td>BR/W</td><td>-</td></tr> <tr><td>24</td><td>GR/R</td><td>-</td></tr> <tr><td>27</td><td>Y/L</td><td>-</td></tr> <tr><td>28</td><td>G</td><td>-</td></tr> </table>	Terminal No.	Wire	Signal Name [Specification]	17	LG/R	-	18	B/SB	-	19	W/R	-	20	G/Y	-	23	BR/W	-	24	GR/R	-	27	Y/L	-	28	G	-																								
Connector No.	B20																																																																																		
Connector Name	REMOTE KEYLESS ENTRY RECEIVER																																																																																		
Connector Type	TK04FW																																																																																		
Terminal No.	Wire	Signal Name [Specification]																																																																																	
1	BR	-																																																																																	
2	W/B	-																																																																																	
3	G/R	-																																																																																	
4	BY	-																																																																																	
Connector No.	B20																																																																																		
Connector Name	WIRE TO WIRE																																																																																		
Connector Type	NS12FW-CS																																																																																		
Terminal No.	Wire	Signal Name [Specification]																																																																																	
17	LG/R	-																																																																																	
18	B/SB	-																																																																																	
19	W/R	-																																																																																	
20	G/Y	-																																																																																	
23	BR/W	-																																																																																	
24	GR/R	-																																																																																	
27	Y/L	-																																																																																	
28	G	-																																																																																	
<table border="1"> <tr><td>Connector No.</td><td>B68</td></tr> <tr><td>Connector Name</td><td>WIRE TO WIRE</td></tr> <tr><td>Connector Type</td><td>MD2MW-LC</td></tr> </table>	Connector No.	B68	Connector Name	WIRE TO WIRE	Connector Type	MD2MW-LC	 	<table border="1"> <tr><td>Terminal No.</td><td>Wire</td><td>Signal Name [Specification]</td></tr> <tr><td>1</td><td>B</td><td>-</td></tr> <tr><td>2</td><td>R</td><td>-</td></tr> </table>	Terminal No.	Wire	Signal Name [Specification]	1	B	-	2	R	-	<table border="1"> <tr><td>Connector No.</td><td>B81</td></tr> <tr><td>Connector Name</td><td>REAR DOOR SWITCH RH</td></tr> <tr><td>Connector Type</td><td>TH04FM-NH</td></tr> </table>	Connector No.	B81	Connector Name	REAR DOOR SWITCH RH	Connector Type	TH04FM-NH	 	<table border="1"> <tr><td>Terminal No.</td><td>Wire</td><td>Signal Name [Specification]</td></tr> <tr><td>3</td><td>GR</td><td>DOOR_SW_RR</td></tr> <tr><td>4</td><td>B</td><td>GND</td></tr> </table>	Terminal No.	Wire	Signal Name [Specification]	3	GR	DOOR_SW_RR	4	B	GND																																																
Connector No.	B68																																																																																		
Connector Name	WIRE TO WIRE																																																																																		
Connector Type	MD2MW-LC																																																																																		
Terminal No.	Wire	Signal Name [Specification]																																																																																	
1	B	-																																																																																	
2	R	-																																																																																	
Connector No.	B81																																																																																		
Connector Name	REAR DOOR SWITCH RH																																																																																		
Connector Type	TH04FM-NH																																																																																		
Terminal No.	Wire	Signal Name [Specification]																																																																																	
3	GR	DOOR_SW_RR																																																																																	
4	B	GND																																																																																	
<table border="1"> <tr><td>Connector No.</td><td>B92</td></tr> <tr><td>Connector Name</td><td>REAR DOOR SWITCH LH</td></tr> <tr><td>Connector Type</td><td>TH04FM-NH</td></tr> </table>	Connector No.	B92	Connector Name	REAR DOOR SWITCH LH	Connector Type	TH04FM-NH	 	<table border="1"> <tr><td>Terminal No.</td><td>Wire</td><td>Signal Name [Specification]</td></tr> <tr><td>3</td><td>O</td><td>DOOR_SW_RL</td></tr> <tr><td>4</td><td>B</td><td>GND</td></tr> </table>	Terminal No.	Wire	Signal Name [Specification]	3	O	DOOR_SW_RL	4	B	GND	<table border="1"> <tr><td>Connector No.</td><td>B93</td></tr> <tr><td>Connector Name</td><td>FRONT DOOR SWITCH (DRIVER SIDE)</td></tr> <tr><td>Connector Type</td><td>TH04FM-NH</td></tr> </table>	Connector No.	B93	Connector Name	FRONT DOOR SWITCH (DRIVER SIDE)	Connector Type	TH04FM-NH	 	<table border="1"> <tr><td>Terminal No.</td><td>Wire</td><td>Signal Name [Specification]</td></tr> <tr><td>3</td><td>GR/R</td><td>DOOR_SW_DR</td></tr> <tr><td>4</td><td>B</td><td>GND</td></tr> </table>	Terminal No.	Wire	Signal Name [Specification]	3	GR/R	DOOR_SW_DR	4	B	GND																																																
Connector No.	B92																																																																																		
Connector Name	REAR DOOR SWITCH LH																																																																																		
Connector Type	TH04FM-NH																																																																																		
Terminal No.	Wire	Signal Name [Specification]																																																																																	
3	O	DOOR_SW_RL																																																																																	
4	B	GND																																																																																	
Connector No.	B93																																																																																		
Connector Name	FRONT DOOR SWITCH (DRIVER SIDE)																																																																																		
Connector Type	TH04FM-NH																																																																																		
Terminal No.	Wire	Signal Name [Specification]																																																																																	
3	GR/R	DOOR_SW_DR																																																																																	
4	B	GND																																																																																	
<table border="1"> <tr><td>Connector No.</td><td>B94</td></tr> <tr><td>Connector Name</td><td>FRONT DOOR SWITCH (PASSENGER SIDE)</td></tr> <tr><td>Connector Type</td><td>TH04FM-NH</td></tr> </table>	Connector No.	B94	Connector Name	FRONT DOOR SWITCH (PASSENGER SIDE)	Connector Type	TH04FM-NH	 	<table border="1"> <tr><td>Terminal No.</td><td>Wire</td><td>Signal Name [Specification]</td></tr> <tr><td>3</td><td>W</td><td>DOOR_SW_AS</td></tr> <tr><td>4</td><td>B</td><td>GND</td></tr> </table>	Terminal No.	Wire	Signal Name [Specification]	3	W	DOOR_SW_AS	4	B	GND	<table border="1"> <tr><td>Connector No.</td><td>B201</td></tr> <tr><td>Connector Name</td><td>WIRE TO WIRE</td></tr> <tr><td>Connector Type</td><td>TH80MW-CS16-TM4</td></tr> </table>	Connector No.	B201	Connector Name	WIRE TO WIRE	Connector Type	TH80MW-CS16-TM4	 	<table border="1"> <tr><td>Terminal No.</td><td>Wire</td><td>Signal Name [Specification]</td></tr> <tr><td>1</td><td>R/B</td><td>-</td></tr> <tr><td>2</td><td>G</td><td>-</td></tr> <tr><td>3</td><td>W</td><td>-</td></tr> <tr><td>5</td><td>W/B</td><td>-</td></tr> <tr><td>6</td><td>L/Y</td><td>-</td></tr> <tr><td>7</td><td>R</td><td>-</td></tr> <tr><td>8</td><td>G/R</td><td>-</td></tr> <tr><td>9</td><td>GR/R</td><td>-</td></tr> <tr><td>11</td><td>W</td><td>-</td></tr> <tr><td>12</td><td>V</td><td>-</td></tr> <tr><td>13</td><td>Y</td><td>-</td></tr> <tr><td>16</td><td>L/O</td><td>-</td></tr> <tr><td>17</td><td>GR/L</td><td>-</td></tr> <tr><td>18</td><td>R/G</td><td>-</td></tr> <tr><td>19</td><td>L/Y</td><td>-</td></tr> <tr><td>20</td><td>G/Y</td><td>-</td></tr> <tr><td>21</td><td>R</td><td>-</td></tr> <tr><td>22</td><td>GR</td><td>-</td></tr> </table>	Terminal No.	Wire	Signal Name [Specification]	1	R/B	-	2	G	-	3	W	-	5	W/B	-	6	L/Y	-	7	R	-	8	G/R	-	9	GR/R	-	11	W	-	12	V	-	13	Y	-	16	L/O	-	17	GR/L	-	18	R/G	-	19	L/Y	-	20	G/Y	-	21	R	-	22	GR	-
Connector No.	B94																																																																																		
Connector Name	FRONT DOOR SWITCH (PASSENGER SIDE)																																																																																		
Connector Type	TH04FM-NH																																																																																		
Terminal No.	Wire	Signal Name [Specification]																																																																																	
3	W	DOOR_SW_AS																																																																																	
4	B	GND																																																																																	
Connector No.	B201																																																																																		
Connector Name	WIRE TO WIRE																																																																																		
Connector Type	TH80MW-CS16-TM4																																																																																		
Terminal No.	Wire	Signal Name [Specification]																																																																																	
1	R/B	-																																																																																	
2	G	-																																																																																	
3	W	-																																																																																	
5	W/B	-																																																																																	
6	L/Y	-																																																																																	
7	R	-																																																																																	
8	G/R	-																																																																																	
9	GR/R	-																																																																																	
11	W	-																																																																																	
12	V	-																																																																																	
13	Y	-																																																																																	
16	L/O	-																																																																																	
17	GR/L	-																																																																																	
18	R/G	-																																																																																	
19	L/Y	-																																																																																	
20	G/Y	-																																																																																	
21	R	-																																																																																	
22	GR	-																																																																																	

JRLWC6515GB

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

INL

 
# INTERIOR ROOM LAMP CONTROL SYSTEM

< WIRING DIAGRAM >

**INTERIOR ROOM LAMP**

27	L/W	-	-
29	W	-	-
30	R/L	-	-
31	Y/L	-	-
32	W/R	-	-
33	W/G	-	-
34	L/R	-	-
36	G	-	-
37	V	-	-
38	SHIELD	-	-
39	P/B	-	-
40	W/R	-	-
41	R	-	-
42	L	-	-
43	B/W	-	-
44	L	-	-
45	P	-	-
46	SHIELD	-	-
47	R	-	-
48	W	-	-
49	SHIELD	-	-
50	V	-	-
51	L/B	-	-
52	L/R	-	-
53	S/B	-	-
54	V/W	-	-
59	L	-	-
60	GR	-	-
61	P/L	-	-
62	B/SB	-	-
63	R/Y	-	-
64	BR	-	-
70	O	-	-
71	W	-	-
72	SHIELD	-	-
73	B	-	-
74	R	-	-
75	G	-	-
76	Y	-	-
77	S/B	-	-
78	L/G	-	-
79	R/B	-	-
90	W/B	-	-
93	Y	-	-
94	L	-	-
95	L/R	-	-
96	R	-	-
97	W	-	-
98	V	-	-
99	L/W	-	-

100	W	-	-
<b>Connector No.</b> B202			
<b>Connector Name</b> WIRE TO WIRE			
<b>Connector Type</b> NS18FMV-CS			



**H.S.**

8	BR	-	-
9	R/B	-	-
10	L/Y	-	-
11	Y/L	-	-
12	L	-	-

 
<b>Connector No.</b> B438			
<b>Connector Name</b> WIRE TO WIRE			
<b>Connector Type</b> NS12MW-CS			



**H.S.**

Terminal No.	Color Of Wire	Signal Name [Specification]
1	W/R	-
2	R	-
3	G	-
6	L	-
7	R	-
8	B	-
9	V	-
10	L	-
15	V	-
16	W	-


<b>Connector No.</b> B226			
<b>Connector Name</b> WIRE TO WIRE			
<b>Connector Type</b> NS12FMV-CS			



**H.S.**

Terminal No.	Color Of Wire	Signal Name [Specification]
1	-	-
2	-	-
3	-	-
4	-	-
5	R	-
6	L/G	-
7	P/B	-
8	-	-
9	-	-
10	-	-
11	-	-
12	-	-
 
<b>Connector No.</b> B464			
<b>Connector Name</b> WIRE TO WIRE			
<b>Connector Type</b> NS12MW-CS			



**H.S.**

Terminal No.	Color Of Wire	Signal Name [Specification]
17	-	-
18	-	-
19	-	-
20	-	-
23	P/B	-
24	-	-
27	-	-
28	-	-

<b>Connector No.</b> B479			
<b>Connector Name</b> FOOT LAMP (REAR LH)			
<b>Connector Type</b> A02FW			



**H.S.**

Terminal No.	Color Of Wire	Signal Name [Specification]
65	-	-
66	-	-

<b>Connector No.</b> B480			
<b>Connector Name</b> FOOT LAMP (REAR RH)			
<b>Connector Type</b> A02FW			



**H.S.**

Terminal No.	Color Of Wire	Signal Name [Specification]
65	-	-
66	-	-

JRLWC6516GB

 


# INTERIOR ROOM LAMP CONTROL SYSTEM

< WIRING DIAGRAM >

## INTERIOR ROOM LAMP

Connector No.	D1
Connector Name	WIRES TO WIRE
Connector Type	TH40FW-CS15




**H.S.**

Terminal No.	Color Of Wire	Signal Name [Specification]
1	V	-
2	W	-
3	V	-
4	V	-
5	LG/R	-
6	BR/W	-
8	V	-
9	G	-
10	L	-
12	B/Y	-
13	Y	-
14	R	-
15	B	-
16	GR/R	-
17	R/W	-
18	B	-
19	R	-
20	P	-
22	V	-
23	P/B	-
24	L/O	-
25	BR/W	-
26	W/R	-
27	V	-
28	W/G	-
29	Y/G	-
30	O/L	-
31	GR/B	-
32	BR	-
33	V/W	-
36	G/O	-
37	BR/Y	-
38	SB	-
39	W/L	-
40	L/W	-
41	Y/G	-

42	P/L	-
43	LG	-
44	GR/L	-
45	SHIELD	-
46	W	-
47	LG	-
48	G/W	-
49	Y	-
50	L/Y	-
51	GR/R	-
52	LG/B	-
53	G	-
54	B	-
55	R	-

 Connector No.	D3
Connector Name	DOOR MIRROR (DRIVER SIDE)
Connector Type	TH24MW-NH




**H.S.**

Terminal No.	Color Of Wire	Signal Name [Specification]
2	BR/W	-
3	W	SIDE CAMERA LH COMM
5	G	-
6	R	SIDE CAMERA LH POWER SUPPLY
7	L	-
8	O	-
9	W/B	-
10	SB	-
11	BR/Y	-
12	L/W	-
14	P	-
15	B/Y	-
16	GR/L	-
17	SHIELD	-
18	B	SIDE CAMERA LH GND
19	B	-
20	G	-
21	L/Y	-
22	G/W	-
23	W/L	-

24	Y	-
----	---	---

 Connector No.	D5
Connector Name	POWER WINDOW MAIN SWITCH
Connector Type	NS16FM-CS



**H.S.**

Terminal No.	Color Of Wire	Signal Name [Specification]
3	GR/R	-
4	W	-
5	G	-
6	L	-
7	B	-
9	Y	-
10	W/B	-
11	GR/Y	-
12	G/W	-
13	V	-
15	R	-
16	W	-

 
Connector No.	D8
Connector Name	STEP LAMP (DRIVER SIDE)
Connector Type	TB02FW



**H.S.**

Terminal No.	Color Of Wire	Signal Name [Specification]
1	W/R	-
2	R	-

Connector No.	D9
Connector Name	FRONT DOOR LOCK ASSEMBLY (DRIVER SIDE)
Connector Type	ED0FGY-RS



**H.S.**

Terminal No.	Color Of Wire	Signal Name [Specification]
1	R	-
2	V	-
3	W/G	-
4	B	-
5	W	-
6	R	-

Connector No.	ID11
Connector Name	FRONT DOOR REQUEST SWITCH (DRIVER SIDE)
Connector Type	RK02FL



**H.S.**

Terminal No.	Color Of Wire	Signal Name [Specification]
1	LG/R	-
2	B	-

JRLWC6517GB

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

 
INL

# INTERIOR ROOM LAMP CONTROL SYSTEM

< WIRING DIAGRAM >

## INTERIOR ROOM LAMP

Connector No.	D21
Connector Name	WIRE TO WIRE
Connector Type	TH40FW-CS15




Terminal No.	Color Of Wire	Signal Name [Specification]
1	G	-
2	W	-
3	V	-
4	P/L	-
5	L/R	-
6	L/W	-
7	G/Y	-
8	L	-
9	B/Y	-
10	L	-
11	B/Y	-
12	L	-
13	R	-
14	B	-
15	B/W	-
16	R	-
17	P	-
18	Y/R	-
19	L/G/B	-
20	L/O	-
21	R/W	-
22	W/R	-
23	G/O	-
24	Y/B	-
25	V	-
26	W/L	-
27	L/O	-
28	G	-
29	W	-
30	LG	-
31	L/R	-
32	Y	-
33	R/B	-
34	SHIELD	-
35	B	-
36	R	-

Connector No.	D23
Connector Name	DOOR MIRROR (PASSENGER SIDE)
Connector Type	TH24MW-AH



Terminal No.	Color Of Wire	Signal Name [Specification]
1	R/W	-
2	W	-
3	G	-
4	R	-
5	L	-
6	LG	-
7	G/O	-
8	Y/B	-
9	L/O	-
10	P	-
11	B/Y	-
12	GR/L	-
13	SHIELD	-
14	B	-
15	B	-
16	G/Y	-
17	R/B	-
18	L/R	-
19	W/L	-
20	Y	-

Connector No.	D25
Connector Name	FRONT POWER WINDOW SWITCH (PASSENGER SIDE)
Connector Type	NS16FM-CS

 

Terminal No.	Color Of Wire	Signal Name [Specification]
1	W/B	-
2	G/R	-
3	G	-
4	W	-
5	B	-
6	G/Y	-
7	W	-
8	G/Y	-
9	W	-
10	V	-
11	G/W	-
12	V	-

Connector No.	D29
Connector Name	STEP LAMP (PASSENGER SIDE)
Connector Type	TB02FW




Terminal No.	Color Of Wire	Signal Name [Specification]
1	W/R	-
2	R	-

Connector No.	D31
Connector Name	FRONT DOOR REQUEST SWITCH (PASSENGER SIDE)
Connector Type	RK02FL



Terminal No.	Color Of Wire	Signal Name [Specification]
1	P/L	-
2	B	-

Connector No.	D41
Connector Name	WIRE TO WIRE
Connector Type	NS16MW-CS

 

Terminal No.	Color Of Wire	Signal Name [Specification]
1	W/R	-
2	R	-
3	G	-
4	L	-
5	B	-
6	V	-
7	L	-
8	V	-
9	L	-
10	V	-
11	V	-
12	W	-

JRLWC6518GB

# INTERIOR ROOM LAMP CONTROL SYSTEM

< WIRING DIAGRAM >

 
## INTERIOR ROOM LAMP

Connector No.	D616
Connector Name	STEP LAMP (REAR RH)
Connector Type	TB02FW



Terminal No.	Color Of Wire	Signal Name [Specification]
1	W/R	-
2	R	-

Connector No.	D61
Connector Name	WIRE TO WIRE
Connector Type	NS6MW-CS



Terminal No.	Color Of Wire	Signal Name [Specification]
1	W/R	-
3	G	-
5	R	-
6	L/O	-
7	O	-
8	B	-
9	L	-
10	R/Y	-
15	V	-
16	W	-

Connector No.	D66
Connector Name	STEP LAMP (REAR LH)
Connector Type	TB02FW



Terminal No.	Color Of Wire	Signal Name [Specification]
1	W/R	-
2	O	-

Connector No.	D101
Connector Name	WIRE TO WIRE
Connector Type	M02FW-LC




Terminal No.	Color Of Wire	Signal Name [Specification]
1	B	-
2	L	-

Connector No.	D102
Connector Name	WIRE TO WIRE
Connector Type	M01FBR-S-LC



Terminal No.	Color Of Wire	Signal Name [Specification]
1	B	-


Connector No.	D109
Connector Name	WIRE TO WIRE
Connector Type	TH24FW-NH

 

Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	-
2	R	-
3	B	-
5	LG	-
6	GR	-
7	L/O	-
8	Y	-
9	L	-
10	B/W	-
11	W/G	-
12	W/R	-
13	SHIELD	-
14	G	-
17	BR/Y	-
18	W/L	-
19	Y/L	-
20	G/Y	-
21	L/Y	-
22	L/W	-

23	G/W
24	L/R

Connector No.	D114
Connector Name	WIRE TO WIRE
Connector Type	TH24FW-NH

 

Terminal No.	Color Of Wire	Signal Name [Specification]
1	W/L	-
2	W/R	-
3	L/O	-
4	GR	-
5	BR/Y	-
6	B/W	-
7	W/G	-
10	B	-
11	R	-
12	W	-
13	L/W	-
14	L/Y	-
15	G/Y	-
16	Y/L	-
17	Y	-
18	L	-
23	G	-
24	SHIELD	-

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
M  
N  
O  
P


INL

# INTERIOR ROOM LAMP CONTROL SYSTEM
 
< WIRING DIAGRAM >


## INTERIOR ROOM LAMP

Connector No.	D157
Connector Name	BACK DOOR LOCK ASSEMBLY
Connector Type	NS08FW-CS




Terminal No.	Color Of Wire	Signal Name [Specification]
1	R	-
2	V	-
4	GY	-
5	LY	-
6	LW	-
7	YL	-
8	B	-

Connector No.	D158
Connector Name	AUTOMATIC BACK DOOR CLOSE SWITCH
Connector Type	TK08FGY

 

Terminal No.	Color Of Wire	Signal Name [Specification]
1	GR	-
2	B	-
3	LJB	-
4	BRV	-

Connector No.	D162
Connector Name	WIRE TO WIRE
Connector Type	TH24MW-AH

 


Terminal No.	Color Of Wire	Signal Name [Specification]
1	W/L	-
2	W/R	-
3	LJB	-
4	GR	-
5	BRV	-
6	BM	-
7	W/G	-
10	B	-
11	R	-
12	W	-
13	LW	-
14	LY	-
15	GY	-
16	YL	-
17	Y	-
18	L	-
23	G	-
24	SHIELD	-

Connector No.	D166
Connector Name	WIRE TO WIRE
Connector Type	M01MR-PS-LC



Terminal No.	Color Of Wire	Signal Name [Specification]
1	B	-

Connector No.	IE105
Connector Name	WIRE TO WIRE
Connector Type	TH80MW-CS16-TM4

 

Terminal No.	Color Of Wire	Signal Name [Specification]
1	L	-
2	LW	-
3	R/B	-
4	L	-
5	Y	-
7	W/G	-
8	P/B	-
9	W/B	-
10	G	-
11	L	-
12	P	-
13	P/B	-
14	BR	-
15	LJB	-
16	SB	-
18	BR	-
19	Y/G	-
20	BRV	-
21	Y/V	-
22	L	-
23	Y	-
24	LW	-
28	O	-
29	RAW	-
30	LJB	-
31	Y	-
32	GR/R	-
34	Y	-
35	B	-
36	BR	-
37	GY	-

38	G	-
40	SB	-
41	W/R	-
42	R	-
43	V	-
51	L/O	-
52	BR/W	-
53	BRV	-
54	GR/L	-
60	W	-
61	B	-
62	R	-
63	G	-
64	SHIELD	-
91	BR	-
92	LW	-
94	Y/B	-
95	G/R	-
97	R	-
98	G/B	-
100	W/R	-

Connector No.	M1
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS08FW-M2




Terminal No.	Color Of Wire	Signal Name [Specification]
1A	Y	-
2A	GR	-
3A	W	-
4A	Y/G	-
5A	V	-
6A	LW	-
7A	LG	-
8A	W	-

# INTERIOR ROOM LAMP CONTROL SYSTEM
 
< WIRING DIAGRAM >


## INTERIOR ROOM LAMP

Connector No.	M4
Connector Name	DATA LINK CONNECTOR
Connector Type	BD16FW



Terminal No.	Wire	Signal Name [Specification]
3	LG	-
4	B	-
5	B	-
6	L	-
7	SB	-
8	GR	-
11	SB	-
12	R	-
13	L	-
14	P	-
16	Y	-

Connector No.	M19
Connector Name	WIRE TO WIRE
Connector Type	TH88FW-CS16-TM4

 


Terminal No.	Wire	Signal Name [Specification]
2	L	-
3	BR	-
5	R/W	-
6	R/W	-
7	V	-
9	G	-
11	W/B	-
12	BR	-
13	G/R	-

14	BY	-
15	WR	-
16	GR/R	-
18	GW	-
19	V	-
20	W/G	-
21	B/W	-
22	V	-
24	G	-
25	O	-
26	Y	-
27	L/O	-
28	Y/R	-
29	L	-
30	R	-
31	G/Y	-
32	B/SB	-
33	LG/R	-
34	BR/W	-
35	GR/R	-
36	SB	-
37	LG	-
38	L	-
39	P	-
40	W/G	-
41	O	-
42	G/R	-
43	V/W	-
44	LG/B	-
45	R/Y	-
46	B	-
47	BR/W	-
49	GR	-
50	R/B	-
51	W/R	-
52	BR/Y	-
53	O/B	-
54	G/O	-
55	R/B	-
56	LG/R	-
57	GR/R	-
58	V/G	-
59	V/W	-
60	R	-
63	B	-
64	W	-
65	R	-
66	G	-
67	SHIELD	-
69	LG/B	-

70	P/L	-
71	L	-
72	R	-
77	Y/B	-
78	Y/L	-
79	Y	-
80	W/R	-
81	Y/L	-
84	L/O	-
86	O	-
87	W/R	-
88	O	-
89	W/L	-
90	GR/L	-
91	W	-
92	G	-
84	W/R	-
86	L/W	-
87	R	-
88	V	-
89	L/W	-
99	L/W	-
100	P/B	-

Connector No.	M20
Connector Name	WIRE TO WIRE
Connector Type	TH40MW-CS15

 

Terminal No.	Wire	Signal Name [Specification]
1	V	-
2	W	-
3	V	-
4	Y	-
5	LG/R	-
6	BR/W	-
8	V	-
9	G	-
10	L	-
12	BY	-
13	Y	-
14	R	-

15	B	-
16	GR/R	-
17	V/W	-
18	B	-
19	R	-
20	P	-
22	V	-
23	P/B	-
24	L/O	-
25	BR/W	-
26	W/R	-
27	V	-
28	W/G	-
29	Y/G	-
30	O/L	-
31	GF/B	-
32	BR	-
33	V/W	-
36	G/O	-
37	BR/Y	-
38	SB	-
39	W/L	-
40	L/W	-
41	Y/G	-
42	P/L	-
43	LG	-
44	GR	-
45	SHIELD	-
46	W	-
47	LG	-
48	GW	-
49	Y	-
50	L/Y	-
51	GR/R	-
52	LG/B	-
53	G	-
54	B	-
55	R	-

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P


INL

# INTERIOR ROOM LAMP CONTROL SYSTEM
 
< WIRING DIAGRAM >


## INTERIOR ROOM LAMP

Connector No.	M22
Connector Name	WIRE TO WIRE
Connector Type	TH40MW-CS15




Terminal No.	Color Of Wire	Signal Name [Specification]
1	G	-
2	W	-
3	V	-
4	P/L	-
5	L/R	-
6	L/W	-
7	G/Y	-
8	L	-
9	B/Y	-
10	L	-
11	R	-
12	B	-
13	B/W	-
14	R	-
15	B	-
16	P	-
17	Y/R	-
18	L/G/B	-
19	L/W	-
20	W/R	-
21	O	-
22	S/B	-
23	Y/R	-
24	SHIELD	-
25	Y/G	-
26	L/O	-
27	W/G	-
28	Y	-
29	L	-
30	B/S/B	-
31	BR	-
32	GR/L	-
33	Y	-
34	R/B	-
35	SHIELD	-
36	B	-
37	R	-

Connector No.	M23
Connector Name	WIRE TO WIRE
Connector Type	TH32MW-NH

 

Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	-
2	V	-
3	B	-
4	Y	-
5	GR	-
6	B/Y	-
7	B	-
8	Y/L	-
9	G	-
10	B	-
11	R	-
12	Y	-
13	Y	-
14	Y	-
15	W/R	-
16	L/O	-
17	Y	-
18	L/O	-
19	W	-
20	O	-
21	S/B	-
22	Y/R	-
23	SHIELD	-
24	Y/G	-
25	L/O	-
26	W/G	-
27	Y	-
28	L	-
29	B/S/B	-
30	BR	-
31	GR/L	-
32	GR/L	-


Connector No.	M27
Connector Name	COMBINATION SWITCH
Connector Type	TH18FW-NH

 

Terminal No.	Color Of Wire	Signal Name [Specification]
1	W/B	-
2	GR	OUTPUT 4
3	L/R	IGN
4	W	OUTPUT 3
5	L	IGN
6	B	IGN
7	W	INPUT 3
8	B/Y	OUTPUT 5
9	R/W	INPUT 2
10	Y	INPUT 4
11	S/B	INPUT 1
12	V	OUTPUT 1
13	LG	INPUT 5
14	G	OUTPUT 2

9	R	STOP LAMP SW 1
11	R	RAIN SENSOR SERIAL LINK
14	P/B	OPTICAL SENSOR
16	L/O	DIMMER SIGNAL
17	Y/G	SENSOR PWR SPLY
18	B/Y	RECEIVER/SENSOR GND
19	BR	RECEIVER PWR SPLY
20	GR	KYLS ENT RECEIVER COMM
21	P	NATS ANT AMP.
22	W/B	KYLS ENT RECEIVER RSSI
23	GR/R	SECURITY IND CONT
24	S/B	DONGLE LINK
25	LG/R	NATS ANT AMP.
26	O	INTELLIGENT KEY IDENTIFICATION
29	W	HAZARD SW
30	W/L	BK DOOR OPNR SW
31	W/G	DR DOOR LOCK SENSOR
32	LG	COMBI SW OUTPUT 5
33	Y	COMBI SW OUTPUT 2
34	W	COMBI SW OUTPUT 3
35	R/W	COMBI SW OUTPUT 1
36	S/B	COMBI SW OUTPUT 2
37	G/Y	SHIFT P
39	L	CANH
40	P	CANLL


Connector No.	M69
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	FEA09FB-FH46-SA

 

Terminal No.	Color Of Wire	Signal Name [Specification]
43	Y/L	BK DOOR SW
44	G/W	REAR WIPER STOP POSITION
45	W	PASSENGER DOOR SW
46	GR	REAR RH DOOR SW
47	GR/R	DRIVER DOOR SW
48	O	REAR LH DOOR SW
49	B/Y	LUGGAGE FOOTLAMP CONT
50	B/Y	REMOTE ENGINE START
51	W/R	BACK DOOR REQ SW

## INTERIOR ROOM LAMP

 Connector No.	M22
Connector Name	WIRE TO WIRE
Connector Type	TH40MW-CS15



Terminal No.	Color Of Wire	Signal Name [Specification]
1	G	-
2	W	-
3	V	-
4	P/L	-
5	L/R	-
6	L/W	-
7	G/Y	-
8	L	-
9	B/Y	-
10	L	-
11	R	-
12	B	-
13	B/W	-
14	R	-
15	B	-
16	P	-
17	Y/R	-
18	L/G/B	-
19	L/W	-
20	W/R	-
21	O	-
22	S/B	-
23	Y/R	-
24	SHIELD	-
25	Y/G	-
26	L/O	-
27	W/G	-
28	Y	-
29	L	-
30	B/S/B	-
31	BR	-
32	GR/L	-
33	Y	-
34	R/B	-
35	SHIELD	-
36	B	-
37	R	-

JRLWC6522GB

# INTERIOR ROOM LAMP CONTROL SYSTEM

< WIRING DIAGRAM >

## INTERIOR ROOM LAMP

54	L	REAR WIPER OUTPUT
55	G	REAR DOOR UNLK OUTPUT

Connector No.	M70
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	FEA09FW-FHAG-SA

56	57	58	59	60	61	62	63	64
65	66	67	68	69	70			



Terminal No.	Color Of Wire	Signal Name [Specification]
56	W/R	INT ROOM LAMP PWR SPLY
57	LG	BAT (FUSE)
58	R/W	SHOCK DETECT SENS
59	G	PASSENGER DOOR UNLK OUTPUT
60	G	TURN SIGNAL LH OUTPUT
61	G/Y	TURN SIGNAL RH OUTPUT
62	R	STEP LAMP CONT
63	BR	ROOM LAMP TIMER CONT
64	GR/R	CRANKING REQUEST
65	R	ALL DOOR LOCK OUTPUT
66	V	DR DOOR FUEL LID UNLK OUTPUT
67	B	GND
68	Y	PW PWR SPLY (IGN)
69	W	PW PWR SPLY (BAT)
70	Y	BAT (F/L)

Connector No.	M71
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FW-NH

61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80	81	82	83	84	85	86	87	88	89	90	91	92	93	94	95	96	97	98	99	100	101	102	103	104	105	106	107	108	109
----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----



Terminal No.	Color Of Wire	Signal Name [Specification]
--------------	---------------	-----------------------------

72	P	PIDDLE LAMP CONT
73	W	ON IND
74	Y/B	TRAILER TURN SIG RH CONT
75	LG/R	DRIVER DOOR REQUEST SW
76	SB	PUSH SW
77	O/L	TRAILER TURN SIG LH CONT
78	P/B	DRIVER DOOR ANT+
79	V	DRIVER DOOR ANT-
80	LG/B	PASSENGER DOOR ANT+
81	Y/R	PASSENGER DOOR ANT-
82	W/G	BACK DOOR ANT+
83	BR/W	BACK DOOR ANT-
84	BR	ROOM ANT+
85	Y	ROOM ANT-
86	W	ROOM ANT2+
87	B	ROOM ANT2-
88	V	LAGGAGE ROOM ANT+
89	G	LAGGAGE ROOM ANT-
90	Y	PUSHBTN IGN SW ILL PWR
91	O	LOCK IND
92	L	LOW SIDE PUSH LED
93	GR/R	HKEY WARN BUZZER
94	BR	ACC RELAY CONT
96	R/W	STARTER RELAY CONT
97	R/W	IGN RELAY (IPDM E/R) CONT
98	O	IGN RELAY (F/B) CONT
99	R	PASSENGER DOOR REQUEST SW
100	P/L	IGN PWR SPLY 2
101	W/B	SHIFT N/P
102	BR	AT SHIFT SELECT PWR SPLY
104	R/B	STOP LAMP SW 2
105	O/L	BLWR FAN MTR RELAY CONT
106	Y/G	ACC IND
109	L/W	

Connector No.	M77
Connector Name	WIRE TO WIRE
Connector Type	TH80FW-CS16-TM4

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42
---	---	---	---	---	---	---	---	---	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----



Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	
2	L/W	
3	R/B	
4	L	
5	Y	
6	SB	
7	W/G	
8	P/B	
9	W/B	
10	G	
11	L	
12	P	
13	P/B	
14	BR	
15	O/L	
16	SB	
18	BR	
19	Y/G	
20	BR/Y	
21	V	
22	L	
23	Y	
24	L/W	
28	O	
29	R/W	
30	O/L	
31	Y	
32	GR/R	
34	Y	
35	R	
36	B/O	
37	G/Y	
38	G	
40	SB	
41	W/R	
42	R	

43	V	
51	L/O	
52	BR/W	
53	BR/Y	
54	GR/L	
60	W	
61	B	
62	G	
63	R	
64	SHIELD	
91	BR	
92	L/W	
94	Y/B	
95	L/R	
97	R	
98	O/L	
100	W/B	

Connector No.	M69
Connector Name	FOOT LAMP (DRIVER SIDE)
Connector Type	A02F-W



Terminal No.	Color Of Wire	Signal Name [Specification]
1	W/R	
2	Y/L	

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

INL

# INTERIOR ROOM LAMP CONTROL SYSTEM

< WIRING DIAGRAM >

## INTERIOR ROOM LAMP

Connector No.	M160
Connector Name	FOOT LAMP (PASSENGER SIDE)
Connector Type	A02FW



 
Terminal Color Of No.	Wire	Signal Name [Specification]
1	Y/L	-
2	W/R	-

Connector No.	M101
Connector Name	PUSH-BUTTON IGNITION SWITCH
Connector Type	TK08FBR



Terminal Color Of No.	Wire	Signal Name [Specification]
1	B	-
2	L	-
3	Y	-
4	SB	-
5	O	-
6	L/W	-
7	W	-
8	LG	-

Connector No.	M111
Connector Name	WIRE TO WIRE
Connector Type	TH80FM-CS16-TM4



Terminal Color Of No.	Wire	Signal Name [Specification]
1	R/B	-
2	G	-
3	W/R	-
4	W/B	-
5	L/Y	-
6	B	-
7	R	-
8	G/R	-
9	G/R/R	-
11	W	-
12	V	-
13	Y	-
16	L/O	-
17	GR/L	-
18	R/G	-
19	L/Y	-
20	G/Y	-
21	R	-
22	GR	-
27	L/O	-
29	SB	-
30	R/L	-
31	Y/L	-
32	W/R	-
33	W/G	-
34	L/R	-
36	G	-
37	V	-
38	SHIELD	-
39	P/B	-
40	W/R	-
41	R	-
42	L/W	-
43	B/W	-
44	B	-
45	B	-
46	SHIELD	-

Terminal Color Of No.	Wire	Signal Name [Specification]
47	R	-
48	W	-
49	SHIELD	-
50	V	-
51	O/L	-
52	L/R	-
53	SB	-
54	V/W	-
59	L	-
60	GR	-
61	P/L	-
62	B/SB	-
63	R/Y	-
64	BR	-
70	O	-
71	W	-
72	SHIELD	-
73	B	-
74	R	-
75	G	-
76	Y	-
77	SB	-
78	LG	-
79	R/B	-
90	W/B	-
93	Y	-
94	L	-
95	L/R	-
96	R	-
97	W	-
98	V	-
99	L/W	-
100	W	-

Connector No.	R1
Connector Name	WIRE TO WIRE
Connector Type	TH32FM-NH



Terminal Color Of No.	Wire	Signal Name [Specification]
1	W	-
2	V	-
3	B	-
4	Y	-
5	B/R	-
6	B/Y	-
7	B	-
8	Y/L	-
9	G	-
10	B	-
11	R	-
12	Y	-
14	B/Y	-
15	W/R	-
16	L/O	-
17	Y	-
18	L/O	-
20	W	-
21	O	-
22	SB	-
23	Y	-
24	SHIELD	-
25	Y/G	-
26	L	-
27	W/G	-
28	Y	-
29	L	-
30	B/SB	-
31	BR	-
32	B/R	-

Connector No.	R2
Connector Name	WIRE TO WIRE
Connector Type	TH24FM-NH



JRLWC6524GB



# INTERIOR ROOM LAMP CONTROL SYSTEM

< WIRING DIAGRAM >

## INTERIOR ROOM LAMP

Terminal Color Of No.	Wire	Signal Name [Specification]
1	P	-
2	GR	-
3	V	-
4	L/O	-
5	B	-
6	G	-
7	O	-
8	SHIELD	-
9	Y/L	-
10	Y/G	-
11	B/BS	-
12	W/R	-
17	L/O	-
23	BR	-
24	BY	-

Connector No.	R11
Connector Name	WIRE TO WIRE
Connector Type	TH24MW-NH



Terminal Color Of No.	Wire	Signal Name [Specification]
1	P	-
2	GR	-
3	V	-
4	L/O	-
5	B	-
6	G	-
7	O	-
8	SHIELD	-
9	Y/L	-
10	Y/G	-
11	B/BS	-
12	W/R	-
17	L/O	-
23	BR	-
24	BY	-

Connector No.	R12
Connector Name	VANITY MIRROR LAMP (DRIVER SIDE)
Connector Type	MCAU2FW



 
Terminal Color Of No.	Wire	Signal Name [Specification]
1	B	-
2	V	-

Connector No.	R13
Connector Name	VANITY MIRROR LAMP (PASSENGER SIDE)
Connector Type	MCAU2FW




Terminal Color Of No.	Wire	Signal Name [Specification]
1	B	-
2	V	-

Connector No.	R18
Connector Name	MAP LAMP
Connector Type	TK08FGY



Terminal Color Of No.	Wire	Signal Name [Specification]
3	P	LED+
4	B	LED-
5	V	DOOR SIG BYPASS
6	B	S/O
7	BR	DOOR SIG
8	V	BAT

Connector No.	R21
Connector Name	PERSONAL LAMP
Connector Type	TH04FW-NH

 

Terminal Color Of No.	Wire	Signal Name [Specification]
1	B	-
2	V	-
3	V	-

Connector No.	R23
Connector Name	MAP LAMP
Connector Type	TK08FGY



Terminal Color Of No.	Wire	Signal Name [Specification]
1	P	LED+
2	B	LED-
3	V	DOOR SIG BYPASS
4	B	S/O
5	BR	DOOR SIG
6	V	BAT

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

INL


# ILLUMINATION

< WIRING DIAGRAM >

## ILLUMINATION


### Wiring Diagram

INFOID:000000009010368

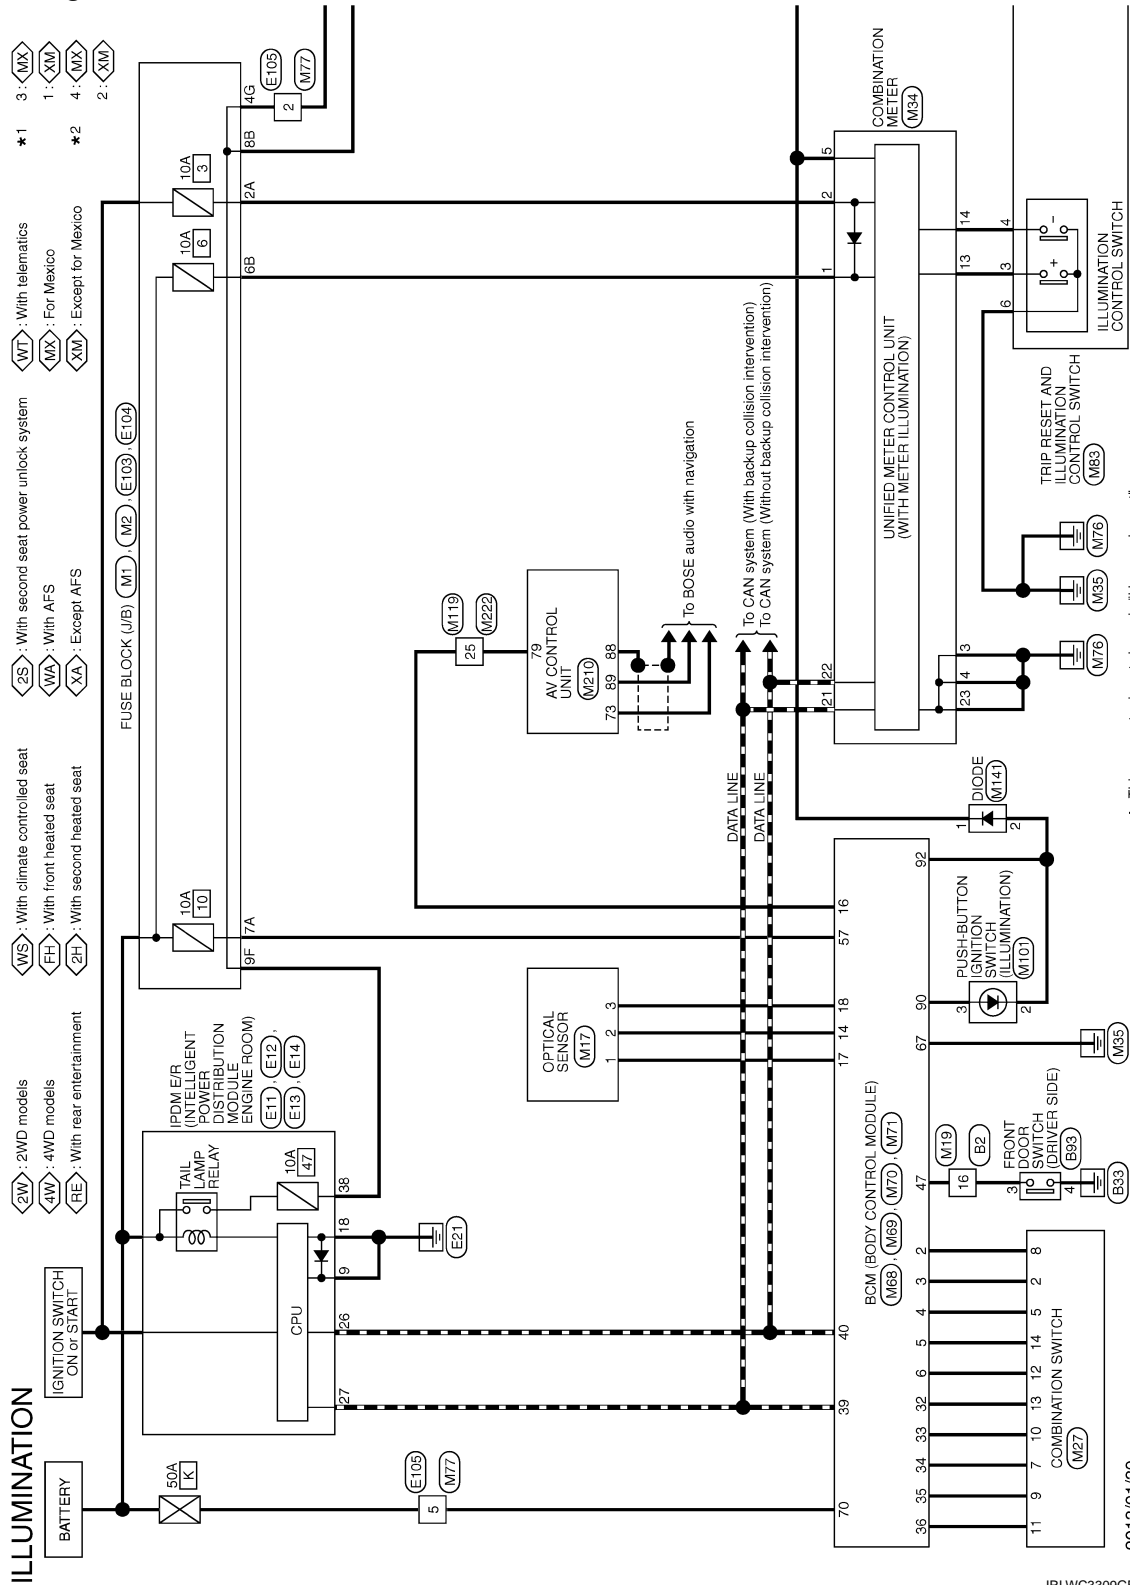

# ILLUMINATION

< WIRING DIAGRAM >

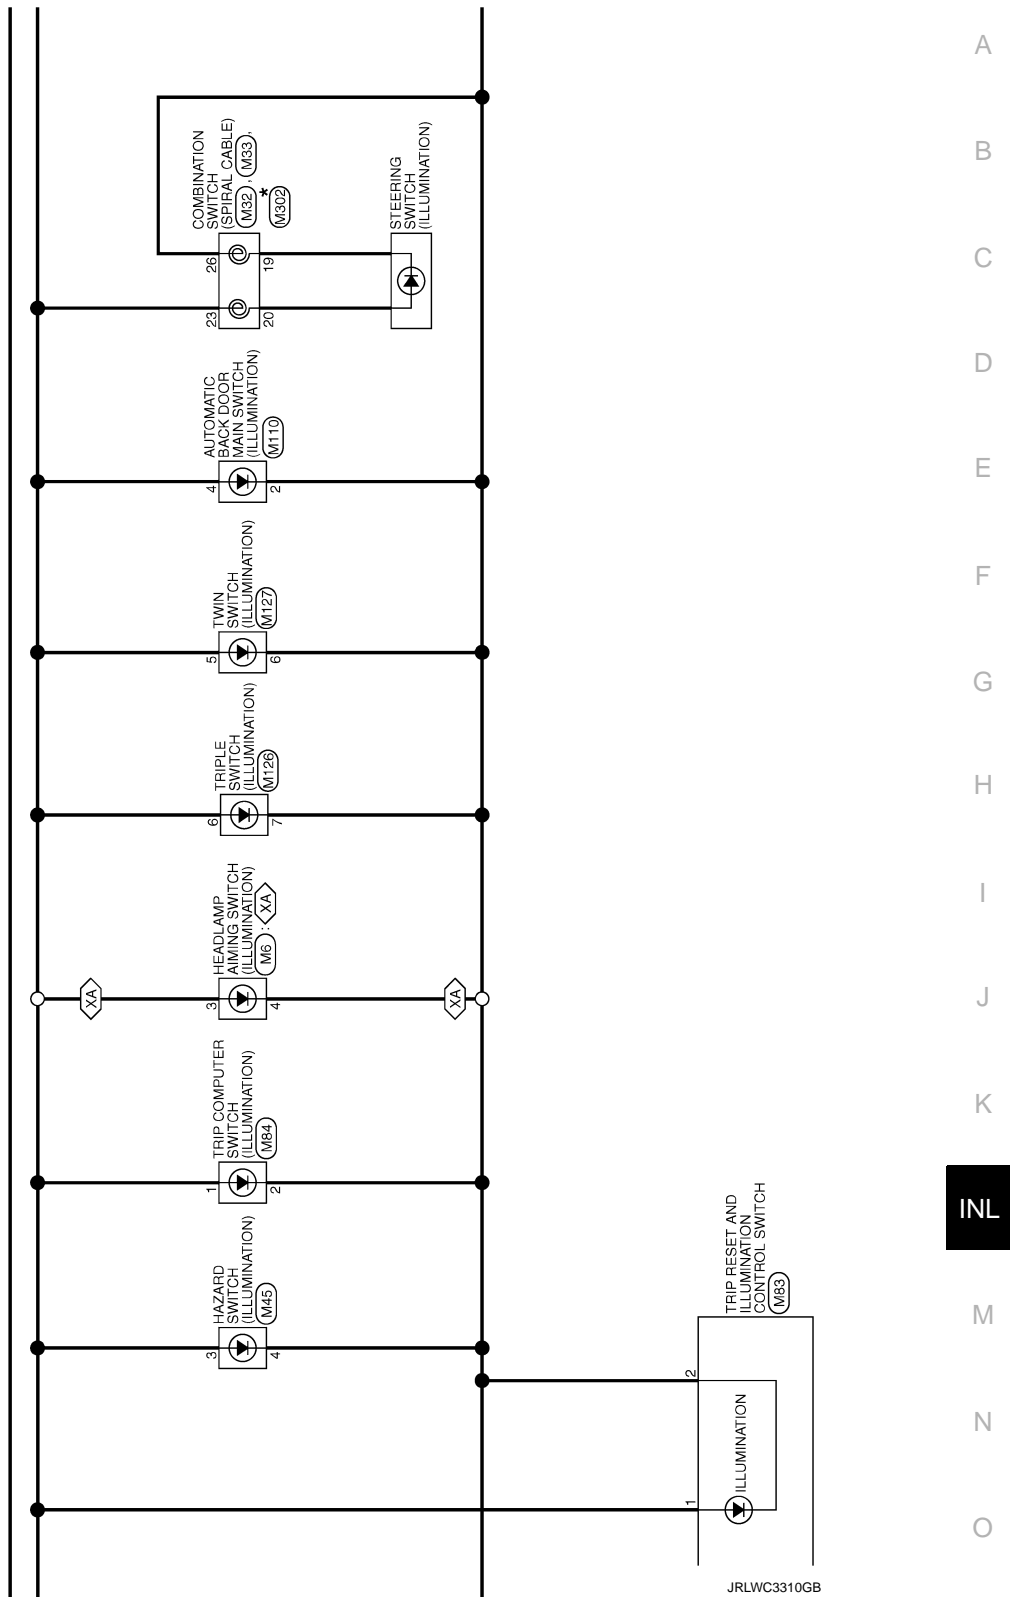


JRLWC3310GB

INL

# ILLUMINATION


< WIRING DIAGRAM >

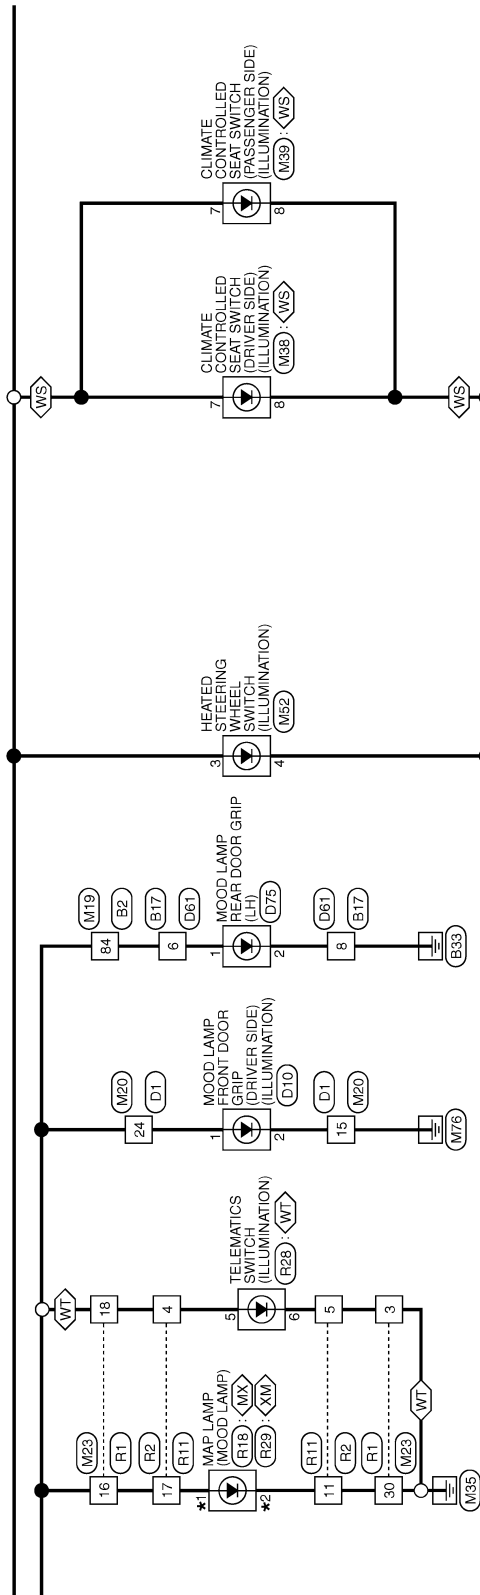

JRLWC3311GB

# ILLUMINATION

< WIRING DIAGRAM >

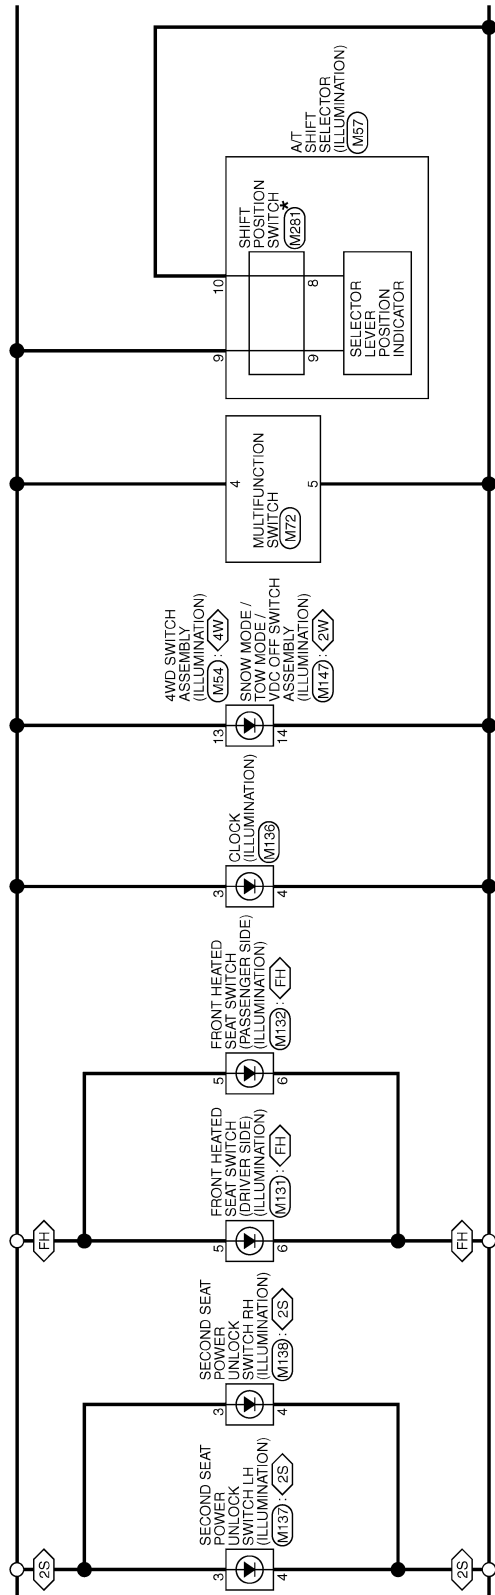


JRLWC3312GB

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
INL  
M  
N  
O  
P

# ILLUMINATION

< WIRING DIAGRAM >

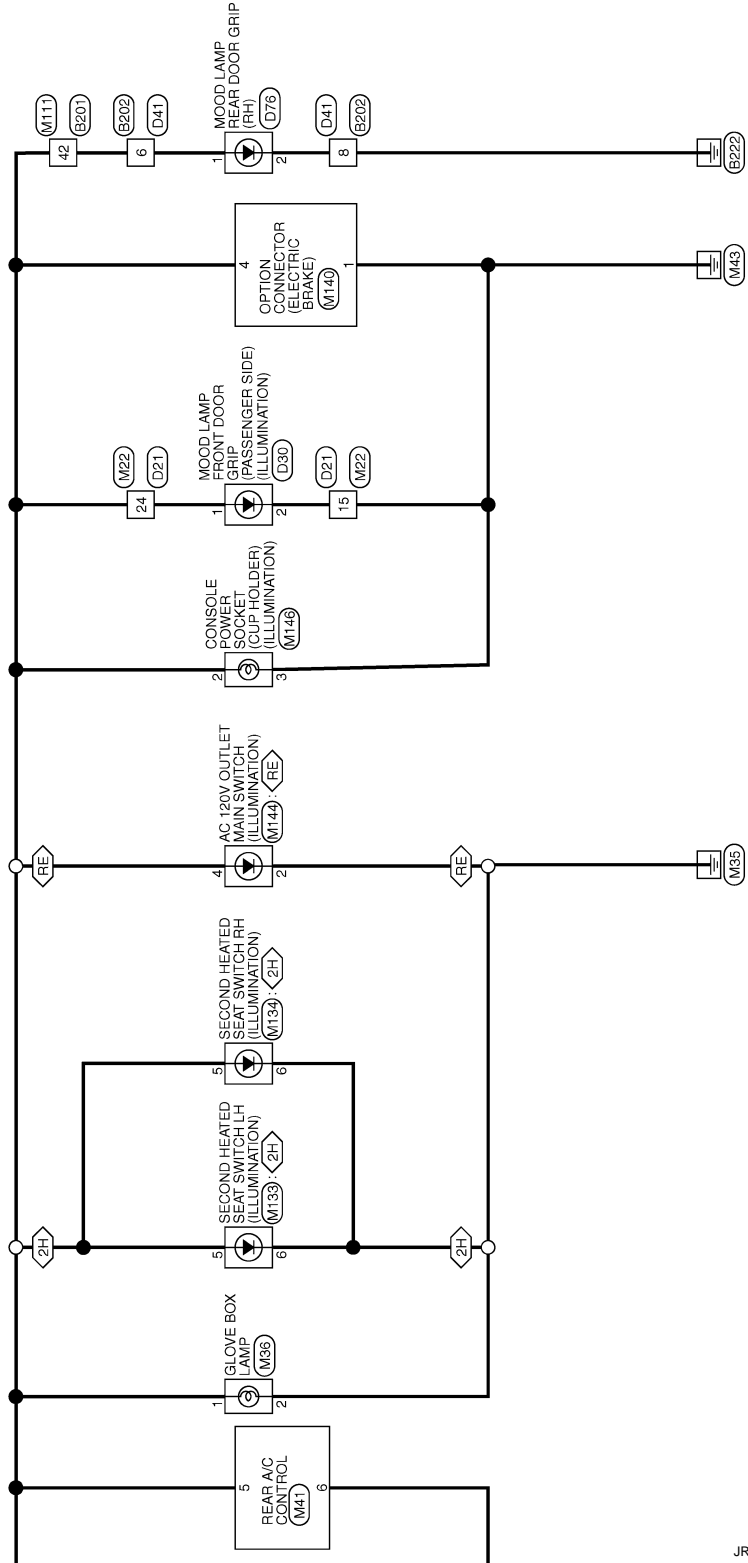

JRLWC3313GB

# ILLUMINATION

< WIRING DIAGRAM >

## ILLUMINATION

 
Connector No.	B2
Connector Name	WIRE TO WIRE
Connector Type	TH80MW-CS16-TM4



Terminal No.	Color Of Wire	Signal Name [Specification]
1	L	-
2	BR	-
3	R/W	-
4	L	-
5	V	-
6	G	-
7	W/B	-
8	R	-
9	GR	-
10	W	-
11	GR	-
12	GR	-
13	GR	-
14	BY	-
15	WR	-
16	GR	-
17	GR	-
18	GR	-
19	V	-
20	W/G	-
21	B/W	-
22	V	-
23	V	-
24	G	-
25	O	-
26	Y	-
27	L/O	-
28	Y/R	-
29	L	-
30	R	-
31	G/Y	-
32	B/SB	-
33	LG/R	-
34	BR/W	-
35	GR/R	-
36	SB	-
37	LG	-
38	L	-
39	P	-
40	W/G	-
41	O	-

42	G/R	-
43	V/W	-
44	LG/B	-
45	R/Y	-
46	B	-
47	BR	-
48	GR	-
49	R/B	-
50	W/R	-
51	BR/Y	-
52	O/B	-
53	O/B	-
54	G/O	-
55	R/B	-
56	LG/R	-
57	GR/R	-
58	Y/G	-
59	V/W	-
60	R	-
61	L	-
62	B	-
63	R	-
64	R	-
65	W	-
66	G	-
67	SHIELD	-
68	LG/B	-
69	LG/B	-
70	P/L	-
71	L	-
72	R	-
73	Y/B	-
74	Y/L	-
75	Y	-
76	Y	-
77	Y	-
78	Y/L	-
79	Y	-
80	W/R	-
81	Y/L	-
82	L/O	-
83	O	-
84	W/R	-
85	O	-
86	O	-
87	W/R	-
88	O	-
89	W/L	-
90	GR/L	-
91	W	-
92	G	-
93	W/R	-
94	W/R	-
95	L/W	-
96	L/W	-
97	R	-
98	V	-
99	L/W	-
100	P/B	-

Connector No.	B17
Connector Name	WIRE TO WIRE
Connector Type	NS16FM-CS



Terminal No.	Color Of Wire	Signal Name [Specification]
1	W/R	-
2	G	-
3	B	-
4	LO	-
5	O	-
6	B	-
7	L	-
8	R	-
9	L	-
10	R/Y	-
11	V	-
12	W	-
13	W	-
14	W	-
15	V	-
16	W	-

Connector No.	B53
Connector Name	FRONT DOOR SWITCH (DRIVER SIDE)
Connector Type	TH94FM-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
3	GR/R	DOOR_SW_DR
4	B	GND

Connector No.	B201
Connector Name	WIRE TO WIRE
Connector Type	TH80MW-CS16-TM4



Terminal No.	Color Of Wire	Signal Name [Specification]
1	R/B	-
2	G	-
3	W	-
4	W	-
5	W/B	-
6	W/B	-
7	P/Y	-
8	R	-
9	GR	-
10	GR	-
11	W	-
12	V	-
13	Y	-
14	Y	-
15	Y	-
16	L/O	-
17	GR/L	-
18	R/G	-
19	L/Y	-
20	G/Y	-
21	R	-
22	GR	-
23	GR	-
24	L/W	-
25	W	-
26	W	-
27	R/L	-
28	Y/L	-
29	Y/L	-
30	W/R	-
31	W/G	-
32	W/R	-
33	W/G	-
34	L/R	-
35	G	-
36	G	-
37	V	-
38	SHIELD	-
39	P/B	-
40	W/R	-
41	R	-
42	L	-
43	B/W	-
44	L	-
45	P	-

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

INL

JRLWC6486GB


# ILLUMINATION
 
< WIRING DIAGRAM >

## ILLUMINATION


46	SHIELD	-	-	-	-
47	R	-	-	-	-
48	W	-	-	-	-
49	SHIELD	-	-	-	-
50	V	-	-	-	-
51	L/B	-	-	-	-
52	L/R	-	-	-	-
53	SB	-	-	-	-
54	V/W	-	-	-	-
59	L	-	-	-	-
60	GR	-	-	-	-
61	P/L	-	-	-	-
62	B/SB	-	-	-	-
63	R/Y	-	-	-	-
64	BR	-	-	-	-
70	O	-	-	-	-
71	W	-	-	-	-
72	SHIELD	-	-	-	-
73	B	-	-	-	-
74	R	-	-	-	-
75	G	-	-	-	-
76	Y	-	-	-	-
77	SB	-	-	-	-
78	LG	-	-	-	-
79	R/B	-	-	-	-
90	W/B	-	-	-	-
93	Y	-	-	-	-
94	L	-	-	-	-
95	L/R	-	-	-	-
96	R	-	-	-	-
97	W	-	-	-	-
98	V	-	-	-	-
99	L/W	-	-	-	-
100	W	-	-	-	-

Connector No.	B202
Connector Name	WIRE TO WIRE
Connector Type	NS18FW-CS



Terminal No.	Color Of Wire	Signal Name [Specification]
1	W/R	-
3	R	-
5	G	-
6	L	-
7	R	-
8	B	-
9	V	-
10	L	-
15	V	-
16	W	-

Connector No.	D1
Connector Name	WIRE TO WIRE
Connector Type	TH40FW-CS15

 

Terminal No.	Color Of Wire	Signal Name [Specification]
1	V	-
2	W	-
3	V	-
4	Y	-
5	LG/R	-
6	BR/W	-
8	V	-
9	G	-
10	L	-
12	BY	-

13	Y	-	-
14	R	-	-
15	B	-	-
16	GR/R	-	-
17	R/W	-	-
18	B	-	-
19	R	-	-
20	P	-	-
22	V	-	-
23	P/B	-	-
24	L/O	-	-
25	BR/W	-	-
26	W/R	-	-
27	V	-	-
28	W/G	-	-
29	Y/G	-	-
30	O/L	-	-
31	GF/B	-	-
32	BR	-	-
33	V/W	-	-
36	GO	-	-
37	BR/Y	-	-
38	SB	-	-
39	W/L	-	-
40	L/W	-	-
41	Y/G	-	-
42	P/L	-	-
44	LG	-	-
44	GR/L	-	-
45	SHIELD	-	-
46	W	-	-
47	LG	-	-
48	GW	-	-
49	Y	-	-
50	L/Y	-	-
51	GR/R	-	-
52	LG/B	-	-
53	G	-	-
54	B	-	-
55	R	-	-

Connector No.	D10
Connector Name	WOOD LAMP FRONT DOOR GRP (DRIVER SIDE)
Connector Type	TK02FGY



Terminal No.	Color Of Wire	Signal Name [Specification]
1	L/O	-
2	B	-

Connector No.	D21
Connector Name	WIRE TO WIRE
Connector Type	TH40FW-CS15



Terminal No.	Color Of Wire	Signal Name [Specification]
1	G	-
2	W	-
3	V	-
5	P/L	-
6	L/R	-
8	L/W	-
9	G/Y	-
10	L	-
12	BY	-
13	L	-
14	R	-
15	B	-
18	B/W	-
19	R	-
20	B	-
22	Y/R	-
23	LG/B	-
24	L/O	-

JRLWC6487GB



# ILLUMINATION

< WIRING DIAGRAM >

## ILLUMINATION

 
25	RAW	-
26	WR	-
36	GO	-
37	Y/B	-
38	V	-
39	W/L	-
40	L/O	-
44	GR/L	-
45	G	-
46	W	-
47	LG	-
48	L/R	-
49	Y	-
50	R/B	-
53	SHIELD	-
54	B	-
55	R	-

Connector No.	D30
Connector Name	MOOD LAMP FRONT DOOR GRIP (PASSENGER SIDE)
Connector Type	TK02FGY




Terminal Color Of No.	Wire	Signal Name [Specification]
1	L/O	-
2	B	-

Connector No.	D41
Connector Name	WIRE TO WIRE
Connector Type	NS16MW-CS



Terminal Color Of No.	Wire	Signal Name [Specification]
1	W/R	-
3	R	-
6	O	-
7	L	-
8	R	-
9	V	-
10	L	-
15	V	-
16	W	-

Connector No.	D61
Connector Name	WIRE TO WIRE
Connector Type	NS16MW-CS

 

Terminal Color Of No.	Wire	Signal Name [Specification]
1	W/R	-
3	G	-
5	R	-
6	L/O	-
7	O	-
8	B	-
9	L	-
10	R/Y	-
15	V	-
16	W	-

Connector No.	D75
Connector Name	MOOD LAMP REAR DOOR GRIP (LH)
Connector Type	TK02FGY



Terminal Color Of No.	Wire	Signal Name [Specification]
1	L/O	-
2	B	-

Connector No.	D76
Connector Name	MOOD LAMP REAR DOOR GRIP (RH)
Connector Type	TK02FGY




Terminal Color Of No.	Wire	Signal Name [Specification]
1	L	-
2	B	-

Connector No.	E11
Connector Name	POWER INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)
Connector Type	MS08FBL-C



Terminal Color Of No.	Wire	Signal Name [Specification]
9	B	-
14	L	-

Connector No.	E12
Connector Name	POWER INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)
Connector Type	MS08FBL-C

 

Terminal Color Of No.	Wire	Signal Name [Specification]
18	B	-
19	V	-
20	W	-
21	L	-

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P


INL

# ILLUMINATION
 
< WIRING DIAGRAM >


## ILLUMINATION

Connector No.	E13
Connector Name	FROM INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)
Connector Type	TH12FW-NH




Terminal No.	Color Of Wire	Signal Name [Specification]
23	GR/R	-
24	W/G	-
25	L/Y	-
26	P	-
27	L	-
30	R/W	-
32	L/G	-
33	R	-
34	G	-

Connector No.	E14
Connector Name	FROM INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)
Connector Type	NS12FBR-CS

 


Terminal No.	Color Of Wire	Signal Name [Specification]
35	W	-
36	V	-
37	L	-
38	Y	-
39	L/B	-
41	L/G	-
42	L	-
43	L/G	-
44	L/W	-
45	Y/R	-

Connector No.	E103
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS16FW-CS

 

Terminal No.	Color Of Wire	Signal Name [Specification]
10F	G	-
14F	Y	-
15F	G	-
1F	W/B	-
2F	R	-
4F	G	-
6F	Y/G	-
8F	L/B	-
9F	Y	-

Connector No.	E104
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS12FBR-CS

 

Terminal No.	Color Of Wire	Signal Name [Specification]
10G	G/R	-
11G	G/R	-
2G	GR	-
4G	L/W	-


Connector No.	E105
Connector Name	WIRE TO WIRE
Connector Type	TH80MW-CS16-TM4



Terminal No.	Color Of Wire	Signal Name [Specification]
1	L	-
2	L/W	-
3	R/B	-
4	Y	-
5	Y	-
7	W/G	-
8	P/B	-
9	W/B	-
10	G	-
11	L	-
12	P	-
13	P/B	-
14	BR	-
15	L/B	-
16	SB	-
18	BR	-
19	Y/G	-
20	BR/Y	-
21	Y/V	-
22	L	-
23	Y	-
24	L/W	-
28	O	-
29	R/W	-
30	L/B	-
31	Y	-
32	GR/R	-
34	Y	-
35	R	-
36	BR	-
37	G/Y	-
38	G	-
40	SB	-
41	W/R	-
42	R	-
43	V	-

51	L/O	-
52	BR/W	-
53	BR/Y	-
54	GR/L	-
60	W	-
61	B	-
62	R	-
63	G	-
64	SHIELD	-
91	BR	-
92	L/W	-
94	Y/B	-
95	G/R	-
97	R	-
98	G/B	-
100	W/R	-

Connector No.	M1
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS66FM-M2

 


Terminal No.	Color Of Wire	Signal Name [Specification]
1A	Y	-
2A	GR	-
3A	W	-
4A	Y/G	-
5A	V	-
6A	L/W	-
7A	L/G	-
8A	W	-

# ILLUMINATION
 
< WIRING DIAGRAM >


## ILLUMINATION

Connector No.	M2
Connector Name	FUSE BLOCK (UB)
Connector Type	NS10FW-CS



Terminal No.	Color Of Wire	Signal Name [Specification]
1B	R	-
3B	R	-
4B	B	-
5B	BR	-
8B	Y	-
10B	WB	-

Connector No.	M6
Connector Name	HEADLAMP AIMING SWITCH
Connector Type	A04FW

 

Terminal No.	Color Of Wire	Signal Name [Specification]
1	SB	-
2	B	-
3	L/O	-
4	B	-

Connector No.	M17
Connector Name	OPTICAL SENSOR
Connector Type	TK03FW



Terminal No.	Color Of Wire	Signal Name [Specification]
1	Y/G	POWER
2	P/B	OUTPUT
3	B/Y	GND

Connector No.	M19
Connector Name	WIRE TO WIRE
Connector Type	TH80FW-CS16-TM4




Terminal No.	Color Of Wire	Signal Name [Specification]
2	L	-
3	BR	-
5	R/W	-
6	L	-
7	V	-
9	G	-
11	W/B	-
12	BR	-
13	GR	-
14	B/Y	-
15	W/R	-
16	GR/R	-
18	GW	-
19	V	-
20	W/G	-
21	B/W	-
22	V	-

24	G	-
25	O	-
26	Y	-
27	L/O	-
28	Y/R	-
29	L	-
30	R	-
31	G/Y	-
32	B/SB	-
33	LG/R	-
34	BR/W	-
35	GR/R	-
36	SB	-
37	LG	-
38	L	-
39	P	-
40	W/G	-
41	O	-
42	GR	-
43	V/W	-
44	LG/B	-
45	R/Y	-
46	B	-
47	BR/W	-
49	GR	-
50	R/B	-
51	W/R	-
52	BR/Y	-
53	O/B	-
54	G/O	-
55	R/B	-
56	LG/R	-
57	GR/R	-
58	Y/G	-
59	V/W	-
60	R	-
63	B	-
64	R	-
65	W	-
66	G	-
67	SHIELD	-
69	LG/R	-
70	P/L	-
71	L	-
72	R	-
77	Y/B	-
78	Y/L	-
79	Y	-
80	W/R	-
81	Y/L	-

84	L/O	-
86	O	-
87	W/R	-
88	O	-
89	W/L	-
90	GR/L	-
91	W	-
92	G	-
94	W/R	-
96	L/W	-
97	R	-
98	V	-
99	L/W	-
100	P/B	-

Connector No.	M20
Connector Name	WIRE TO WIRE
Connector Type	TH40MW-CS15

 

Terminal No.	Color Of Wire	Signal Name [Specification]
1	V	-
2	W	-
3	V	-
4	Y	-
5	LG/R	-
6	BR/W	-
8	V	-
9	G	-
10	L	-
12	B/Y	-
13	Y	-
14	R	-
15	B	-
16	GR/R	-
17	V/W	-
18	B	-
19	R	-
20	P	-
22	V	-
23	P/B	-

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

INL

JRLWC6490GB


# ILLUMINATION
 
< WIRING DIAGRAM >

**ILLUMINATION**

24	L/O	-	-	-	-	8	BRY	OUTPUT 5
25	BRW	-	-	-	-	9	R/W	INPUT 2
26	W/R	-	-	-	-	10	Y	INPUT 4
27	V	-	-	-	-	11	SB	INPUT 1
28	W/G	-	-	-	-	12	V	OUTPUT 1
29	Y/G	-	-	-	-	13	LG	INPUT 5
30	O/L	-	-	-	-	14	G	OUTPUT 2
31	GR/B	-	-	-	-			
32	BR	-	-	-	-			
33	V/W	-	-	-	-			
36	G/O	-	-	-	-			
37	BRY	-	-	-	-			
38	SB	-	-	-	-			
39	W/L	-	-	-	-			
40	L/W	-	-	-	-			
41	Y/G	-	-	-	-			
42	P/L	-	-	-	-			
43	L/G	-	-	-	-			
44	GR	-	-	-	-			
45	SHIELD	-	-	-	-			
46	W	-	-	-	-			
47	LG	-	-	-	-			
48	G/W	-	-	-	-			
49	Y	-	-	-	-			
50	L/Y	-	-	-	-			
51	GR/R	-	-	-	-			
52	LG/B	-	-	-	-			
53	G	-	-	-	-			
54	B	-	-	-	-			
55	R	-	-	-	-			

Connector No. M22  
Connector Name WIRE TO WIRE  
Connector Type TH40MW-CS15




**H.S.**

Terminal No.	Color Of Wire	Signal Name [Specification]
1	G	-
2	W	-
3	V	-
5	P/L	-

6	L/R	-	-	-	-	4	Y	-
8	L/W	-	-	-	-	5	GR	-
9	G/Y	-	-	-	-	6	B/Y	-
10	L	-	-	-	-	7	B	-
12	B/Y	-	-	-	-	8	Y/L	-
13	L	-	-	-	-	9	G	-
14	R	-	-	-	-	10	B	-
15	B	-	-	-	-	11	R	-
18	B/W	-	-	-	-	12	Y	-
19	R	-	-	-	-	14	Y	-
20	P	-	-	-	-	15	W/R	-
22	Y/R	-	-	-	-	16	L/O	-
23	LG/B	-	-	-	-	17	Y	-
24	L/W	-	-	-	-	18	L/O	-
25	W/R	-	-	-	-	20	W	-
26	W/R	-	-	-	-	21	O	-
36	G/O	-	-	-	-	22	SB	-
37	Y/B	-	-	-	-	23	Y/R	-
38	V	-	-	-	-	24	SHIELD	-
39	W/L	-	-	-	-	25	Y/G	-
40	L/O	-	-	-	-	26	Y/G	-
44	GR	-	-	-	-	27	W/G	-
45	G	-	-	-	-	28	Y	-
46	W	-	-	-	-	29	L	-
47	LG	-	-	-	-	30	B/SB	-
48	L/R	-	-	-	-	31	BR	-
49	Y	-	-	-	-	32	GR/L	-
50	R/B	-	-	-	-			
53	SHIELD	-	-	-	-			
54	B	-	-	-	-			
55	R	-	-	-	-			

 Connector No. M27  
Connector Name COMBINATION SWITCH  
Connector Type TH18FV-NH




**H.S.**

Terminal No.	Color Of Wire	Signal Name [Specification]
1	W/B	-
2	GR	OUTPUT 4
3	L/R	-
4	W	IGN
6	L	OUTPUT 3
8	B	IGN
7	W	INPUT 3

6	L/R	-	-	-	-	24	Y/G	-
8	L/W	-	-	-	-	25	Y	-
9	G/Y	-	-	-	-	26	B	-
10	L	-	-	-	-	31	Y/L	-
12	B/Y	-	-	-	-	32	R	-
13	L	-	-	-	-	33	B	-
14	R	-	-	-	-	34	P/B	-
15	B	-	-	-	-			

 Connector No. M32  
Connector Name COMBINATION SWITCH (SPIRAL CABLE)  
Connector Type TK08FY-EX-1V




**H.S.**

Terminal No.	Color Of Wire	Signal Name [Specification]
24	Y/G	-
25	Y	-
26	B	-
31	Y/L	-
32	R	-
33	B	-
34	P/B	-

6	L/R	-	-	-	-	24	Y/G	-
8	L/W	-	-	-	-	25	Y	-
9	G/Y	-	-	-	-	26	B	-
10	L	-	-	-	-	31	Y/L	-
12	B/Y	-	-	-	-	32	R	-
13	L	-	-	-	-	33	B	-
14	R	-	-	-	-	34	P/B	-
15	B	-	-	-	-			

 Connector No. M33  
Connector Name COMBINATION SWITCH (SPIRAL CABLE)  
Connector Type TK08FGY-1V



**H.S.**

Terminal No.	Color Of Wire	Signal Name [Specification]
24	Y/G	-
25	Y	-
26	B	-
31	Y/L	-
32	R	-
33	B	-
34	P/B	-

 
JRLWC6491GB

# ILLUMINATION

< WIRING DIAGRAM >

## ILLUMINATION

Connector No.	M34
Connector Name	COMBINATION METER
Connector Type	TH40FW-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
1	Y	BATTERY POWER SUPPLY
2	GR	IGNITION SIGNAL
3	B	GROUND
4	B	ILL GND
5	B	ILL CONTROL OUTPUT
7	R	TOW MODE SIGNAL
8	P/L	TRIP RESET SWITCH SIGNAL
11	G	ENTER SWITCH SIGNAL
12	O	SELECT SWITCH SIGNAL
13	W/R	ILLUMINATION CONTROL SWITCH SIGNAL (*)
14	R	ILLUMINATION CONTROL SWITCH SIGNAL (-)
15	R/W	AIR BAG SIGNAL
18	W/R	AMBIENT SENSOR SIGNAL
19	V/W	AC AUTO AMP CONNECTION/RECOGNITION SIGNAL
20	B	AMBIENT SENSOR GROUND
21	L	CAN-H
22	P	CAN-L
23	B	GROUND
24	V	FUEL LEVEL SENSOR GROUND
25	O/L	ALTERNATOR SIGNAL
26	W	PARKING BRAKE SWITCH SIGNAL
28	GR/R	SECURITY SIGNAL
29	BR	WASHER LEVEL SWITCH SIGNAL
30	SB	VEHICLE SPEED SIGNAL (2-PULSE)
31	BR/W	VEHICLE SPEED SIGNAL (8-PULSE)
33	W	SNOW MODE SIGNAL
34	B/R/Y	FUEL LEVEL SENSOR SIGNAL
35	O/B	SEAT BELT BUCKLE SWITCH SIGNAL (DRIVER SEAT)
36	G/Y	PASSENGER SEAT BELT WARNING SIGNAL
37	R/Y	NON-MANUAL MODE SIGNAL
38	L/W	MANUAL MODE SHIFT DOWN SIGNAL
39	Y/B	MANUAL MODE SHIFT UP SIGNAL
40	G/W	MANUAL MODE SIGNAL

Connector No.	M36
Connector Name	GLOVE BOX LAMP
Connector Type	A02FW




Terminal No.	Color Of Wire	Signal Name [Specification]
1	L/W	-
2	B	-

Connector No.	M38
Connector Name	CLIMATE CONTROLLED SEAT SWITCH (DRIVER SEAT)
Connector Type	TK10FW



Terminal No.	Color Of Wire	Signal Name [Specification]
1	LG/R	-
2	G/Y	-
3	B/SB	-
4	BR/W	-
5	GR/R	-
6	B	-
7	L/W	-
8	B/O	-

Connector No.	M39
Connector Name	CLIMATE CONTROLLED SEAT SWITCH (PASSENGER SEAT)
Connector Type	TK08FBR

 

Terminal No.	Color Of Wire	Signal Name [Specification]
1	B/SB	-
2	GR	-
3	P/L	-
4	R/Y	-
5	BR	-
6	B	-
7	L/W	-
8	B/O	-

Connector No.	M41
Connector Name	REAR A/C CONTROL
Connector Type	TH12FW-NH




Terminal No.	Color Of Wire	Signal Name [Specification]
1	B	GND
5	L/W	ILL+
6	B/O	ILL-
9	W	RR CONT RX
10	O/L	RR CONT TX
12	GR/L	IGN

Connector No.	M45
Connector Name	HAZARD SWITCH
Connector Type	TK04FW



Terminal No.	Color Of Wire	Signal Name [Specification]
1	B	-
2	W	-
3	L/O	-
4	B	-

Connector No.	M52
Connector Name	HEATED STEERING WHEEL SWITCH
Connector Type	NS09FW-GS

 

Terminal No.	Color Of Wire	Signal Name [Specification]
1	GR	-
2	B/O	-
3	L/W	-
4	B	-
5	BR	-
6	B	-

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P




# ILLUMINATION
 
< WIRING DIAGRAM >

## ILLUMINATION

Connector No.	M54
Connector Name	4WD SWITCH ASSEMBLY
Connector Type	TH24FW-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
1	L/W	VDC OFF SW
9	W/B	AUTO SW
10	R	4L SW
11	V	4H SW
12	GR	IGN
13	L/W	LIGHT SW
14	B/O	L/L CONT
20	B	GND
22	W	SNOW SW
23	R	TOW


Connector No.	M57
Connector Name	AT SHIFT SELECTOR
Connector Type	TH16FW-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
1	G/W	-
2	L/W	-
3	Y/B	-
4	B/SB	-
5	R/Y	-
9	L/W	-
10	B	-
11	L/R	-
12	B	-
13	R/B	-


Terminal No.	14	Color Of Wire	G/Y
--------------	----	---------------	-----

Connector No.	M68
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FB-NH

 


Terminal No.	Color Of Wire	Signal Name [Specification]
1	BR/Y	COMBI SW INPUT 5
2	BR/Y	COMBI SW INPUT 4
3	GR	COMBI SW INPUT 3
4	L	COMBI SW INPUT 2
5	G	COMBI SW INPUT 1
6	V	POWER WINDOW SW COMM
8	V	STOP LAMP SW 1
9	R	RAIN SENSOR SERIAL LINK
11	R	OPTICAL SENSOR
14	P/B	DIMMER SIGNAL
16	L/O	RECEIVER PWR SPLY
17	Y/G	RECEIVER PWR SPLY
18	B/Y	RECEIVER PWR SPLY
19	BR	RECEIVER PWR SPLY
20	G/R	KYLS ENT RECEIVER COMM
21	P	NATS ANT AMP
22	W/B	KYLS ENT RECEIVER RSSI
23	GR/R	SECURITY IND CONT
24	S/B	DONGLE LINK
25	LG/R	NATS ANT AMP
26	O	INTELLIGENT KEY IDENTIFICATION
29	W	HAZARD SW
30	W/L	BK DOOR OPNR SW
31	W/G	DR DOOR UNLOCK SENSOR
32	LG	COMBI SW OUTPUT 5
33	Y	COMBI SW OUTPUT 4
34	W	COMBI SW OUTPUT 3
35	R/W	COMBI SW OUTPUT 2
36	S/B	COMBI SW OUTPUT 1
37	G/Y	SHIFT P
39	L	CAN-H
40	P	CAN-L

Connector No.	M69
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	FEA09FB-FHAG-SA

 

Terminal No.	Color Of Wire	Signal Name [Specification]
43	Y/L	BK DOOR SW
44	G/W	REAR WIPER STOP POSITION
45	W	PASSENGER DOOR SW
46	GR	REAR RH DOOR SW
47	GR/R	DRIVER DOOR SW
48	GR/R	REAR LH DOOR SW
49	BR/Y	LUGGAGE ROOM LAMP CONT
50	B/Y	REMOTE ENGINE START
51	W/R	BACK DOOR RED SW
54	L	REAR WIPER OUTPUT
55	G	REAR DOOR UNLK OUTPUT


Connector No.	M70
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	FEA09FW-FHAG-SA

 

Terminal No.	Color Of Wire	Signal Name [Specification]
56	W/R	INT ROOM LAMP PWR SPLY
57	LG	BAT (FUSE)
58	R/W	SHOCK DETECT SENS
59	G	PASSENGER DOOR UNLK OUTPUT
60	G	TURN SIGNAL LH OUTPUT
61	G/Y	TURN SIGNAL RH OUTPUT
62	R	STEEL LAMP CONT
63	BR	ROOM LAMP TIMER CONT
64	GR/R	CRANKING REQUEST

Terminal No.	65	Color Of Wire	R
Terminal No.	66	Color Of Wire	V
Terminal No.	67	Color Of Wire	B
Terminal No.	68	Color Of Wire	Y
Terminal No.	69	Color Of Wire	W
Terminal No.	70	Color Of Wire	Y

Connector No.	M71
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FW-NH

 

Terminal No.	Color Of Wire	Signal Name [Specification]
72	P	PUDDLE LAMP CONT
73	W	ON IND
74	Y/B	TRAILER TURN SIG RH CONT
75	LG/R	DRIVER DOOR REQUEST SW
76	S/B	PUSH SW
77	O/L	TRAILER TURN SIG LH CONT
78	P/B	DRIVER DOOR ANT+
79	V	DRIVER DOOR ANT-
80	LG/B	PASSENGER DOOR ANT+
81	Y/R	PASSENGER DOOR ANT-
82	W/G	BACK DOOR ANT+
83	B/W	BACK DOOR ANT-
84	BR	ROOM ANT1+
85	Y	ROOM ANT1-
86	W	ROOM ANT2+
87	B	ROOM ANT2-
88	V	LAGGAGE ROOM ANT+
89	G	LAGGAGE ROOM ANT-
90	Y	PUSH BTN IGN SW L/PWR
91	O	LOCK IND
92	L	LOW SIDE PUSH LED
93	GR/R	I-KEY WARM BUZZER
96	BR	ACC RELAY CONT
97	R/W	STARTER RELAY CONT
98	O	IGN RELAY (PWR) CONT
99	R	IGN RELAY (FUEL) CONT
100	R/L	PASSENGER DOOR REQUEST SW
101	W/B	IGN PWR SPLY 2


# ILLUMINATION
 
< WIRING DIAGRAM >

## ILLUMINATION


102	BR	SHIFT N/P
104	R/B	AT SHIFT SELECT PWR SPLY
105	O/L	STOP LAMP SW 2
106	Y/G	BLWR FAN MTR RELAY CONT
109	L/W	ACC IND

Connector No.	M72
Connector Name	MULTIFUNCTION SWITCH
Connector Type	TH80FW-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
1	B	GND
3	V	ACC
4	L/W	ILL
5	B/O	ILL CONT
6	SB	AV COMM (H)
8	LG	AV COMM (L)
9	R/W	SW GND
14	W/B	DISK EJECT SIGNAL

Connector No.	M77
Connector Name	WIRE TO WIRE
Connector Type	TH80FW-GS16-TM4

 

Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	-
2	L/W	-
3	R/B	-
4	L	-
5	Y	-

6	SB	-
7	W/G	-
8	P/B	-
9	W/B	-
10	G	-
11	L	-
12	P	-
13	P/B	-
14	BR	-
15	O/L	-
16	SB	-
18	BR	-
19	Y/G	-
20	BR/Y	-
21	V	-
22	L	-
23	Y	-
24	L/W	-
28	O	-
29	R/W	-
30	O/L	-
31	Y	-
32	GR/R	-
34	Y	-
35	R	-
36	B/O	-
37	G/Y	-
38	G	-
40	SB	-
41	W/R	-
42	R	-
43	V	-
51	L/O	-
52	BR/W	-
53	BR/Y	-
54	GR/L	-
60	W	-
61	B	-
62	G	-
63	R	-
64	SHIELD	-
91	BR	-
92	L/W	-
94	Y/B	-
95	L/R	-
97	R	-
98	O/L	-
100	W/B	-

Connector No.	M83
Connector Name	TRIP RESET AND ILLUMINATION CONTROL SWITCH
Connector Type	TH80FW-NH




Terminal No.	Color Of Wire	Signal Name [Specification]
1	L/O	ILLUMINATION +
2	B/O	ILLUMINATION GROUND
3	W/R	ILLUMINATION CONTROL +
4	R	ILLUMINATION CONTROL -
5	P/L	TRIP RESET SWITCH
6	B	GROUND

Connector No.	M84
Connector Name	TRIP COMPUTER SWITCH
Connector Type	TH80FW-NH




Terminal No.	Color Of Wire	Signal Name [Specification]
1	L/O	ILLUMINATION +
2	B	ILLUMINATION GROUND
3	G	ENTER SWITCH
4	O	SELECT SWITCH
6	B	GROUND

Connector No.	M101
Connector Name	PUSH-BUTTON IGNITION SWITCH
Connector Type	TK08FBR

 

Terminal No.	Color Of Wire	Signal Name [Specification]
1	B	-
2	L	-
3	Y	-
4	SB	-
5	O	-
6	L/W	-
7	W	-
8	LG	-

Connector No.	M110
Connector Name	AUTOMATIC BACK DOOR MAIN SWITCH
Connector Type	TK08FVW

 

Terminal No.	Color Of Wire	Signal Name [Specification]
1	O	-
2	B	-
3	B	-
4	L/O	-

JRLWC6494GB

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P


INL

# ILLUMINATION
 
< WIRING DIAGRAM >

## ILLUMINATION

Connector No.	M111
Connector Name	WIRES TO WIRE
Connector Type	TH80FW-CS16-TM4



Terminal No.	Color Of Wire	Signal Name [Specification]
1	R/B	-
2	G	-
3	W/B	-
5	W/B	-
6	L/Y	-
7	B	-
8	G/R	-
9	GR/R	-
11	W	-
12	V	-
13	Y	-
16	L/O	-
17	GR/L	-
18	R/G	-
19	L/Y	-
20	G/Y	-
21	R	-
22	GR	-
27	L/O	-
29	SB	-
30	R/L	-
31	Y/L	-
32	W/R	-
33	W/G	-
34	L/R	-
36	G	-
37	V	-
38	SHIELD	-
39	P/B	-
40	W/R	-
41	R	-
42	L/W	-
43	B/W	-
44	B	-
45	B	-
46	SHIELD	-


47	R	-
48	W	-
49	SHIELD	-
50	V	-
51	O/L	-
52	L/R	-
53	SB	-
54	V/W	-
59	L	-
60	GR	-
61	P/L	-
62	B/SB	-
63	R/Y	-
64	BR	-
70	O	-
71	W	-
72	SHIELD	-
73	B	-
74	R	-
75	G	-
76	Y	-
77	SB	-
78	LG	-
79	R/B	-
90	W/B	-
93	Y	-
94	L	-
95	L/R	-
96	R	-
97	W	-
98	V	-
99	L/W	-
100	W	-

Connector No.	M119
Connector Name	WIRES TO WIRE
Connector Type	TH40MW-NH




Terminal No.	Color Of Wire	Signal Name [Specification]
1	SB	-
2	SB	-
3	L	-
4	W/B	-
5	SHIELD	-
6	LG	-
7	V	-
8	W	-
9	O	-
10	SHIELD	-
11	W/L	-
12	L	-
13	P	-
14	SHIELD	-
15	G	-
16	V	-
17	W	-
18	GR	-
19	Y	-
20	BR	-
21	LG	-
22	LG	-
23	P	-
24	R/W	-
25	L/O	-
26	GR/L	-
27	W	-
28	BR	-
28	V	- [Without DCM]
28	V	- [With DCM]
29	BR/W	-
30	Y/G	-
31	Y/L	-
32	B	-
33	R	-
34	W	-
35	SHIELD	-
36	SHIELD	-
37	SHIELD	-
38	GR/R	-
39	BR	-
40	SHIELD	-

Connector No.	M126
Connector Name	TRIPLE SWITCH
Connector Type	TH12FL-NH

 

Terminal No.	Color Of Wire	Signal Name [Specification]
3	Y/B	-
4	B	-
5	B	-
6	L/O	-
7	B/O	-

Connector No.	M127
Connector Name	TWIN SWITCH
Connector Type	TH12FSY-NH

 

Terminal No.	Color Of Wire	Signal Name [Specification]
1	O	-
2	V/W	-
3	B	-
5	L/O	-
6	B/O	-
8	W/G	-
9	LG/B	-



# ILLUMINATION

< WIRING DIAGRAM >

## ILLUMINATION

Connector No.	M131
Connector Name	FRONT HEATED SEAT SWITCH (DRIVER SIDE)
Connector Type	NS06FW-CS



Terminal No.	Color Of Wire	Signal Name [Specification]
1	G/R	-
2	B	-
3	R/B	-
4	B	-
5	L/W	-
6	B/O	-

Connector No.	M132
Connector Name	FRONT HEATED SEAT SWITCH (PASSENGER SIDE)
Connector Type	NS06FBR-CS



Terminal No.	Color Of Wire	Signal Name [Specification]
1	G/R	-
2	L/Y	-
3	R/B	-
4	B	-
5	L/W	-
6	B/O	-

Connector No.	M133
Connector Name	SECOND HEATED SEAT SWITCH LH
Connector Type	NS06FW-CS



Terminal No.	Color Of Wire	Signal Name [Specification]
1	G/R	-
2	V	-
3	L/W	-
4	B	-
5	L/W	-
6	B/O	-

Connector No.	M134
Connector Name	SECOND HEATED SEAT SWITCH RH
Connector Type	NS06FBR-CS



Terminal No.	Color Of Wire	Signal Name [Specification]
1	G/R	-
2	W	-
3	L/R	-
4	B	-
5	L/W	-
6	B/O	-

Connector No.	M135
Connector Name	CLOCK
Connector Type	TH04FM-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
1	Y	BAT
2	B	GND
3	L/W	ILLUMINATION (+)
4	B/O	ILLUMINATION (-)

Connector No.	M137
Connector Name	SECOND SEAT POWER/UNLOCK SWITCH LH
Connector Type	TK04FW



Terminal No.	Color Of Wire	Signal Name [Specification]
1	Y	-
2	P/B	-
3	L/W	-
4	B	-

Connector No.	M138
Connector Name	SECOND SEAT POWER/UNLOCK SWITCH RH
Connector Type	TK04FW



Terminal No.	Color Of Wire	Signal Name [Specification]
1	Y	-
2	P/B	-
3	L/W	-
4	B	-

Connector No.	M140
Connector Name	OPTION CONNECTOR (ELECTRIC BRAKE)
Connector Type	NS06FW-CS



Terminal No.	Color Of Wire	Signal Name [Specification]
1	B	-
2	R	-
3	L/W	-
4	L/W	-
5	R	-

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

INL

# ILLUMINATION

< WIRING DIAGRAM >

## ILLUMINATION

Connector No.	M141
Connector Name	DIODE
Connector Type	24335-C9800



Terminal Color Of No.	Wire	Signal Name [Specification]
1	B	-
2	L	-

Connector No.	M144
Connector Name	AC 120V OUTLET MAIN SWITCH
Connector Type	T606FM-1V



Terminal Color Of No.	Wire	Signal Name [Specification]
1	GR	-
2	B	-
3	W	-
4	L/W	-
5	O	-
6	B	-

Connector No.	M146
Connector Name	CONSOLE POWER SOCKET (CUP HOLDER)
Connector Type	NS03FM-CS



 
Terminal Color Of No.	Wire	Signal Name [Specification]
1	G	-
2	L/W	-
3	B	-

Connector No.	M147
Connector Name	SNOW MODE / TOW MODE / VDC OFF SWITCH ASSEMBLY
Connector Type	T624FM-NH



Terminal Color Of No.	Wire	Signal Name [Specification]
1	L/W	VDC OFF SW
12	GR	IGN
13	L/W	LIGHT SW
14	B/O	ILL CONT
20	B	GND
22	W	SNOW SW
23	R	TOW

Connector No.	M210
Connector Name	AV CONTROL UNIT
Connector Type	TR32FM-NH



Terminal Color Of No.	Wire	Signal Name [Specification]
65	W	PARKING BRAKE SIGNAL
67	W	COMPOSITE IMAGE SIGNAL GND
68	R	COMPOSITE IMAGE SIGNAL
69	O	INTELLIGENT KEY IDENTIFICATION SIGNAL
70	BR	REVERSE 12
71	SHIELD	MICROPHONE SHIELD
72	Y	MICROPHONE VCC (WITH DCM)
73	Y/G	MICROPHONE VCC (WITHOUT DCM)
74	P	AV COMM (L)
75	LG	AV COMM (L)
76	LG	AV COMM (L)
79	L/O	DIMMER SIGNAL
80	GR/L	IGNITION SIGNAL
81	R/Y	REVERSE SIGNAL
82	BR/W	VEHICLE SPEED SIGNAL (8-PULSE)
83	SHIELD	SHIELD
84	W/B	COMPOSITE IMAGE SYNC SIGNAL
87	BR	MICROPHONE SIGNAL (WITH DCM)
88	Y/L	MICROPHONE SIGNAL (WITHOUT DCM)
89	SHIELD	SHIELD
90	L	COMM (DISP-CONT)
91	SB	AV COMM (H)
92	SB	AV COMM (H)

Connector No.	M222
Connector Name	WIRE TO WIRE
Connector Type	TH40FM-NH



Terminal Color Of No.	Wire	Signal Name [Specification]
1	SB	-
2	SB	-
3	L	-
4	W/B	-
5	SHIELD	-
6	G	-
7	V	-
8	W	-
9	O	-
10	SHIELD	-
11	W/L	-
12	L	-
13	P	-
14	SHIELD	-
15	G	-
16	V	-
17	W	-
18	G/R	-
19	Y	-
20	BR	-
21	LG	-
22	LG	-
23	P	-
24	R/W	-
25	L/O	-
26	GR/L	-
27	W	-
28	V	-
29	BR/W	-
30	Y/G	-
31	Y/L	-
32	B	-
33	B	-
34	W	-
35	SHIELD	-
36	SHIELD	-

JRLWC6497GB


# ILLUMINATION
 
< WIRING DIAGRAM >

## ILLUMINATION

37	SHIELD	-
38	GR/R	-
39	BR	-
40	SHIELD	-


Connector No.	M281
Connector Name	SHIFT POSITION SWITCH
Connector Type	TH12FW



**H.S.**

Terminal No.	Color Of Wire	Signal Name [Specification]
1	G	M
2	BR	P
3	WB	R
4	O	D
5	WB	N
8	GR	GND
9	Y	ILL
10	B	MT
12	W	AT

 Connector No.	M302
Connector Name	COMBINATION SWITCH (SPRAL CABLE)
Connector Type	TK08FGY




**H.S.**

Terminal No.	Color Of Wire	Signal Name [Specification]
13	-	-
14	-	-
15	-	-
16	-	-
17	-	-

18	-	-
19	-	-
20	-	-

 
Connector No.	R1
Connector Name	WIRE TO WIRE
Connector Type	TH32FM-NH



**H.S.**

Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	-
2	V	-
3	B	-
4	Y	-
5	BR	-
6	BY	-
7	B	-
8	Y/L	-
9	G	-
10	B	-
11	R	-
12	Y	-
14	BY	-
15	W/R	-
16	L/O	-
17	Y	-
18	L/O	-
20	W	-
21	O	-
22	SB	-
23	Y	-
24	SHIELD	-
25	Y/G	-
26	L	-
27	W/G	-
28	Y	-
29	I	-
30	B/SB	-
31	BR	-
32	BR	-

 
Connector No.	R2
Connector Name	WIRE TO WIRE
Connector Type	TH24FM-NH



**H.S.**

Terminal No.	Color Of Wire	Signal Name [Specification]
1	P	-
2	GR	-
3	V	-
4	L/O	-
5	B	-
6	G	-
7	O	-
8	SHIELD	-
9	Y/L	-
10	Y/G	-
11	B/SB	-
12	W/R	-
17	L/O	-
23	BR	-
24	BY	-

 Connector No.	R11
Connector Name	WIRE TO WIRE
Connector Type	TH24MW-NH




**H.S.**

Terminal No.	Color Of Wire	Signal Name [Specification]
1	P	-
2	GR	-
3	V	-
4	L/O	-
5	B	-

6	G	-
7	O	-
8	SHIELD	-
9	Y/L	-
10	Y/G	-
11	B/SB	-
12	W/R	-
17	L/O	-
23	BR	-
24	BY	-

 
Connector No.	R18
Connector Name	MAP LAMP
Connector Type	TK08FGY



**H.S.**

Terminal No.	Color Of Wire	Signal Name [Specification]
3	P	LED+
4	B	LED-
5	Y	DOOR SIG BYPASS
6	B	GND
7	BR	DOOR SIG
8	V	BAT

 Connector No.	R28
Connector Name	TELEMATICS SWITCH
Connector Type	TH08FM-NH



**H.S.**

JRLWC6498GB

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

INL

# ILLUMINATION

< WIRING DIAGRAM >

## ILLUMINATION

Terminal No.	Color Of Wire	Signal Name (Specification)
1	V	ACC
2	BR	LDE_A
3	G	E-CALL_SW
5	SB	ILL
6	B	ILL_CONT(GND)
7	B	SW_GND

Connector No.	R29
Connector Name	MAP LAMP
Connector Type	TK08FY



Terminal No.	Color Of Wire	Signal Name (Specification)
1	P	LED+
2	B	LED-
3	Y	DOOR_SIG_BYPASS
4	B	GND
5	BR	DOOR_SIG
6	V	BAT

JRLWC6499GB

# DIAGNOSIS AND REPAIR WORK FLOW

< BASIC INSPECTION >


## BASIC INSPECTION

### DIAGNOSIS AND REPAIR WORK FLOW

Work Flow

INFOID:000000009010369

OVERALL SEQUENCE

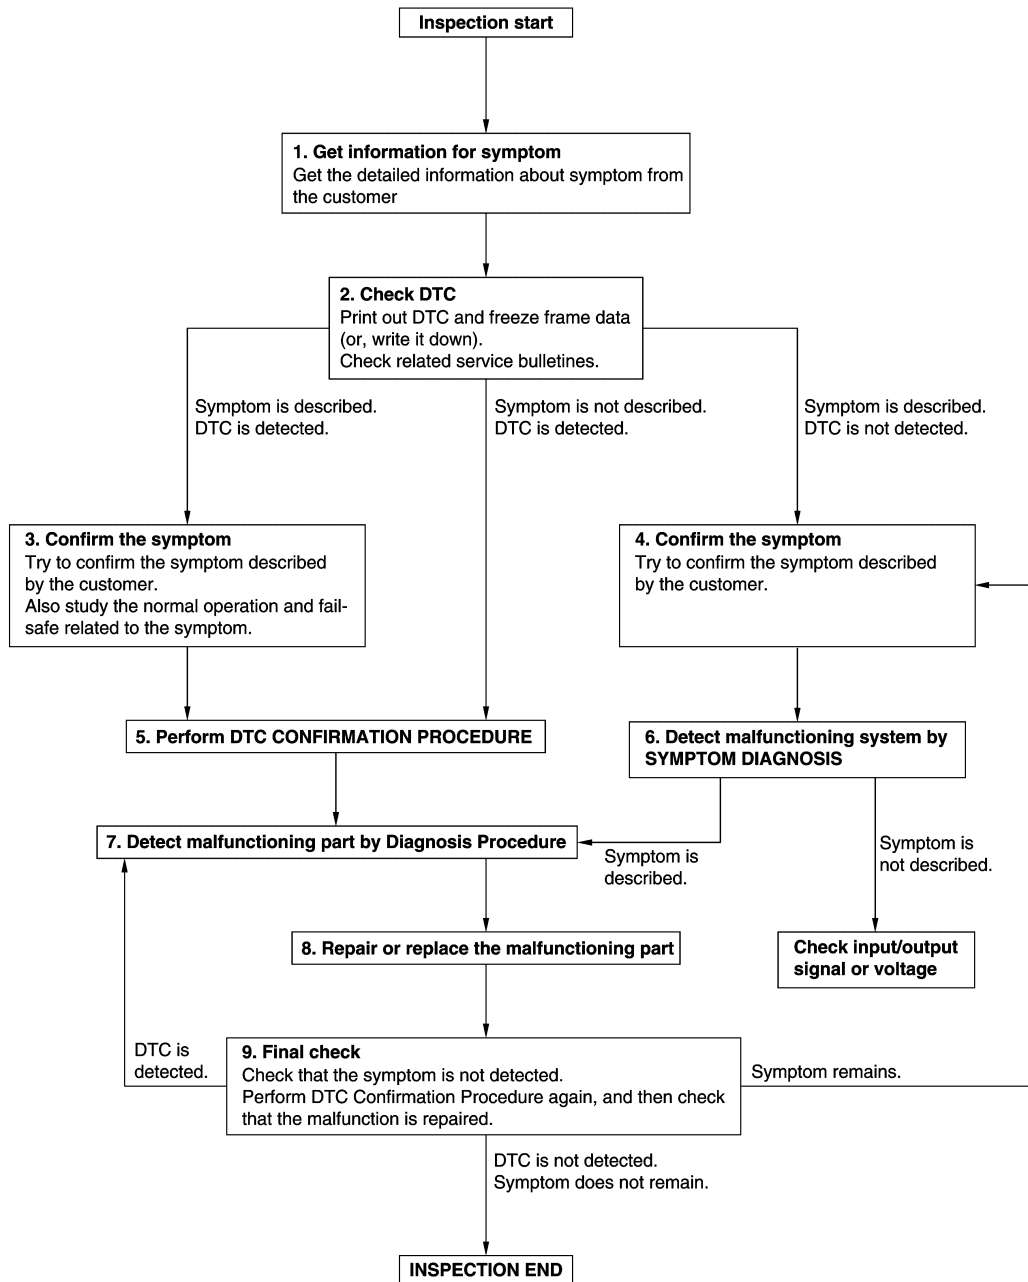

DETAILED FLOW

JMKIA8652GB

# DIAGNOSIS AND REPAIR WORK FLOW

## < BASIC INSPECTION >

---

### 1. GET INFORMATION FOR SYMPTOM

---

1. Get detailed information from the customer about the symptom (the condition and the environment when the incident/malfunction occurs).
2. Check operation condition of the function that is malfunctioning.

>> GO TO 2.

### 2. CHECK DTC

---

1. Check DTC.
2. Perform the following procedure if DTC is detected.
  - Record DTC and freeze frame data (Print them out using CONSULT.)
  - Erase DTC.
  - Study the relationship between the cause detected by DTC and the symptom described by the customer.
3. Check related service bulletins for information.

#### Are any symptoms described and any DTC detected?

Symptom is described, DTC is detected>>GO TO 3.

Symptom is described, DTC is not detected>>GO TO 4.

Symptom is not described, DTC is detected>>GO TO 5.

### 3. CONFIRM THE SYMPTOM

---

Try to confirm the symptom described by the customer.

Also study the normal operation and fail-safe related to the symptom.

Verify relation between the symptom and the condition when the symptom is detected.

>> GO TO 5.

### 4. CONFIRM THE SYMPTOM

---

Try to confirm the symptom described by the customer.

Verify relation between the symptom and the condition when the symptom is detected.

>> GO TO 6.

### 5. PERFORM DTC CONFIRMATION PROCEDURE

---

Perform DTC CONFIRMATION PROCEDURE for the detected DTC, and then check that DTC is detected again. At this time, always connect CONSULT to the vehicle, and check self diagnostic results in real time. If two or more DTCs are detected, refer to DTC INSPECTION PRIORITY CHART, and determine trouble diagnosis order.

#### **NOTE:**

- Freeze frame data is useful if the DTC is not detected.
- Perform Component Function Check if DTC CONFIRMATION PROCEDURE is not included on Service Manual. This simplified check procedure is an effective alternative though DTC cannot be detected during this check.  
If the result of Component Function Check is NG, it is the same as the detection of DTC by DTC CONFIRMATION PROCEDURE.

#### Is DTC detected?

YES >> GO TO 7.

NO >> Check according to [GI-43. "Intermittent Incident"](#).

### 6. DETECT MALFUNCTIONING SYSTEM BY SYMPTOM DIAGNOSIS

---

Detect malfunctioning system according to SYMPTOM DIAGNOSIS based on the confirmed symptom in step 4, and determine the trouble diagnosis order based on possible causes and symptom.

#### Is the symptom described?

YES >> GO TO 7.

NO >> Monitor input data from related sensors or check voltage of related module terminals using CONSULT.

### 7. DETECT MALFUNCTIONING PART BY DIAGNOSIS PROCEDURE

---

# DIAGNOSIS AND REPAIR WORK FLOW

## < BASIC INSPECTION >

---

Inspect according to Diagnosis Procedure of the system.

Is malfunctioning part detected?

YES >> GO TO 8.

NO >> Check according to [GI-43. "Intermittent Incident"](#).

## 8. REPAIR OR REPLACE THE MALFUNCTIONING PART

---

1. Repair or replace the malfunctioning part.
2. Reconnect parts or connectors disconnected during Diagnosis Procedure again after repair and replacement.
3. Check DTC. If DTC is detected, erase it.

>> GO TO 9.

## 9. FINAL CHECK

---

When DTC is detected in step 2, perform DTC CONFIRMATION PROCEDURE again, and then check that the malfunction is repaired securely.

When symptom is described by the customer, refer to confirmed symptom in step 3 or 4, and check that the symptom is not detected.

Is DTC detected and does symptom remain?

YES-1 >> DTC is detected: GO TO 7.

YES-2 >> Symptom remains: GO TO 4.

NO >> Before returning the vehicle to the customer, always erase DTC.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
M  
N  
O  
P

INL

# INTERIOR ROOM LAMP POWER SUPPLY CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

## DTC/CIRCUIT DIAGNOSIS

### INTERIOR ROOM LAMP POWER SUPPLY CIRCUIT

#### Description

INFOID:000000009010370

Provides the interior room lamp power supply. Also cuts the power supply when the interior room lamp battery saver activating.

#### Component Function Check

INFOID:000000009010371

#### 1. CHECK INTERIOR ROOM LAMP POWER SUPPLY FUNCTION

##### ⓅCONSULT ACTIVE TEST

1. Turn ignition switch ON.
2. Turn each interior room lamp ON.
  - Personal lamp
  - Map lamp
  - Foot lamp
  - Luggage room lamp
  - Automatic back door close switch illumination
  - Step lamp
  - Puddle lamp
  - Vanity mirror lamp
3. Select "BATTERY SAVER" of BCM (BATTERY SAVER) active test item.
4. With operating the test items, check that each interior room lamp turns ON/OFF.

**Off** : Interior room lamp OFF

**On** : Interior room lamp ON

##### Does the interior room lamp turn ON/OFF?

- YES >> Interior room lamp power supply circuit is normal.  
NO >> Refer to [INL-56, "Diagnosis Procedure"](#).

#### Diagnosis Procedure

INFOID:000000009010372

#### 1. CHECK INTERIOR ROOM LAMP POWER SUPPLY OUTPUT

##### ⓅCONSULT ACTIVE TEST

1. Turn ignition switch OFF.
2. Disconnect the following connectors.
  - Personal lamp
  - Map lamp
  - Foot lamp (both sides)
  - Luggage room lamp
  - Automatic back door close switch illumination
  - Step lamp (ALL)
  - Puddle lamp (both sides)
  - Vanity mirror lamp (both sides)
3. Turn ignition switch ON.
4. Select "BATTERY SAVER" of BCM (BATTERY SAVER) active test item.
5. With operating the test item, check voltage between BCM harness connector and ground.

BCM		(-)	Test item	Voltage (Approx.)	
(+) Connector Terminal					
M70	56	Ground	BATTERY SAVER	Off	0 V
				On	12 V

##### Is the inspection result normal?



# INTERIOR ROOM LAMP POWER SUPPLY CIRCUIT

## < DTC/CIRCUIT DIAGNOSIS >

- YES >> GO TO 2.  
 NO >> GO TO 3.

## 2. CHECK INTERIOR ROOM LAMP POWER SUPPLY OPEN CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect the BCM connector.
3. Check continuity between BCM harness connector and each interior room lamp harness connector.

For Mexico

BCM		Each interior room lamp		Continuity	
Connector	Terminal	Connector	Terminal		
M70	56	Personal lamp	R21	3	Existed
		Map lamp	R18	8	
		Foot lamp (driver side)	M89	1	
		Foot lamp (passenger side)	M90	2	
		Luggage room lamp	B11	2	
		Automatic back door close switch	D158	3	
		Step lamp (driver side)	D8	1	
		Step lamp (passenger side)	D29	1	
		Step lamp (Rear LH)	D66	1	
		Step lamp (Rear RH)	D46	1	
		Puddle lamp (driver side)	D3	2	
		Puddle lamp (passenger side)	D23	2	
		Vanity mirror lamp (driver side)	R12	2	
		Vanity mirror lamp (passenger side)	R13	2	
		Foot lamp (Rear LH)	B479	65	
Foot lamp (Rear RH)	B480	65			

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

INL

# INTERIOR ROOM LAMP POWER SUPPLY CIRCUIT

## < DTC/CIRCUIT DIAGNOSIS >

Except for Mexico

BCM		Each interior room lamp			Continuity
Connector	Terminal	Connector	Terminal	Terminal	
M70	56	Personal lamp	R21	3	Existed
		Map lamp	R29	6	
		Foot lamp (driver side)	M89	1	
		Foot lamp (passenger side)	M90	2	
		Luggage room lamp	B11	2	
		Automatic back door close switch	D158	3	
		Step lamp (driver side)	D8	1	
		Step lamp (passenger side)	D29	1	
		Step lamp (Rear LH)	D66	1	
		Step lamp (Rear RH)	D46	1	
		Puddle lamp (driver side)	D3	2	
		Puddle lamp (passenger side)	D23	2	
		Vanity mirror lamp (driver side)	R12	2	
		Vanity mirror lamp (passenger side)	R13	2	
		Foot lamp (Rear LH)	B479	65	
Foot lamp (Rear RH)	B480	65			

Is the inspection result normal?

YES >> Check for internal short circuit of each interior room lamp.

NO >> Repair or replace harnesses.

### 3. CHECK INTERIOR ROOM LAMP POWER SUPPLY SHORT CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect the BCM connector.
3. Check continuity between BCM harness connector and ground.

BCM		Ground	Continuity
Connector	Terminal		
M70	56		Not existed

Is the inspection result normal?

YES >> Replace BCM. Refer to [BCS-95, "Removal and Installation"](#).

NO >> Repair or replace harnesses.

# INTERIOR ROOM LAMP CONTROL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

## INTERIOR ROOM LAMP CONTROL CIRCUIT

### Description

INFOID:000000009010373

Controls each interior room lamp (ground side) by PWM signal.

#### NOTE:

PWM signal control period is approximately 250 Hz (in the gradual brightening/dimming).

### Component Function Check

INFOID:000000009010374

#### NOTE:

Before performing the diagnosis, check that the following are normal.

- Interior room lamp power supply
- Map lamp bulb
- Personal lamp bulb
- Foot lamp bulb

### 1. CHECK INTERIOR ROOM LAMP CONTROL FUNCTION

#### ⓂCONSULT ACTIVE TEST

1. Switch the map lamp switch and personal lamp switch to DOOR.
2. Turn ignition switch ON.
3. Select "INT LAMP" of BCM (INT LAMP) active test item.
4. With operating the test items, check that each interior room lamp turns ON/OFF (gradual brightening/dimming).

**On** : Interior room lamp gradual brightening

**Off** : Interior room lamp gradual dimming

Does the interior room lamp turns ON/OFF (gradual brightening/dimming)?

YES >> Interior room lamp control circuit is normal.

NO >> Refer to [INL-59, "Diagnosis Procedure"](#).

### Diagnosis Procedure

INFOID:000000009010375

### 1. CHECK INTERIOR ROOM LAMP CONTROL OUTPUT

#### ⓂCONSULT ACTIVE TEST

1. Switch the map lamp switch and personal lamp switch to DOOR.
2. Turn ignition switch OFF.
3. Remove all the bulbs of map lamp, foot lamp and personal lamp.
4. Turn ignition switch ON.
5. Select "INT LAMP" of BCM (INT LAMP) active test item.
6. With operating the test item, check continuity between BCM harness connector and ground.

BCM		Ground	Test item		Continuity
Connector	Terminal		INT LAMP	On	Existed
M70	63			On	Existed
			Off	Not existed	

Is the inspection result normal?

YES >> GO TO 2.

NO-1 >> Continuity exists and remains unchanged: GO TO 3.

NO-2 >> Continuity does not exist and remains unchanged: Replace BCM. Refer to [BCS-95, "Removal and Installation"](#).

### 2. CHECK INTERIOR ROOM LAMP CONTROL OPEN CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connector, map lamp connector, personal lamp connector and foot lamp connector.
3. Check continuity between BCM harness connector and foot lamp harness connector.

# INTERIOR ROOM LAMP CONTROL CIRCUIT

## < DTC/CIRCUIT DIAGNOSIS >

BCM		Foot lamp			Continuity
Connector	Terminal	Connector		Terminal	
M70	63	Driver side	M89	2	Existed
		Passenger side	M90	1	
		Rear LH	B479	66	
		Rear RH	B480		

4. Check continuity between BCM harness connector and map lamp harness connector.

For Mexico

BCM		Map lamp		Continuity
Connector	Terminal	Connector	Terminal	
M70	63	R18	7	Existed

Except for Mexico

BCM		Map lamp		Continuity
Connector	Terminal	Connector	Terminal	
M70	63	R29	5	Existed

5. Check continuity between personal lamp harness connector and map lamp harness connector.

For Mexico

Personal lamp		Map lamp		Continuity
Connector	Terminal	Connector	Terminal	
R21	2	R18	5	Existed

Except for Mexico

Personal lamp		Map lamp		Continuity
Connector	Terminal	Connector	Terminal	
R21	2	R29	3	Existed

Is the inspection result normal?

YES >> Replace map lamp, personal lamp or foot lamp.

NO >> Repair or replace harnesses.

### 3. CHECK INTERIOR ROOM LAMP CONTROL SHORT CIRCUIT

- Turn ignition switch OFF.
- Disconnect BCM connector, map lamp connector, personal lamp connector and foot lamp connector.
- Check continuity between BCM harness connector and ground.

BCM		Ground	Continuity
Connector	Terminal		
M70	63		Not existed

4. Check continuity between personal lamp harness connector and ground.

Personal lamp		Ground	Continuity
Connector	Terminal		
R21	2		Not existed

Is the inspection result normal?

YES >> Replace BCM. Refer to [BCS-95. "Removal and Installation"](#).

NO >> Repair or replace harnesses.

# LUGGAGE ROOM LAMP CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

## LUGGAGE ROOM LAMP CIRCUIT

### Description

INFOID:000000009010376

Controls the luggage room lamp and automatic back door close switch illumination (ground side) to turn the luggage room lamp and automatic back door close switch illumination ON and OFF.

### Diagnosis Procedure

INFOID:000000009010377

#### NOTE:

Before performing the diagnosis, check that the following are normal.

- Interior room lamp power supply
- Luggage room lamp bulb

#### 1.CHECK LUGGAGE ROOM LAMP OUTPUT

1. Turn ignition switch OFF.
2. Remove the luggage room bulb.
3. Disconnect automatic back door close switch connector.
4. Check continuity between BCM harness connector and ground.

BCM		Ground	Condition		Continuity
Connector	Terminal		Back door	Open	Existed
M69	49			Closed	Not existed

Is the inspection result normal?

YES >> GO TO 2.

NO-1 >> Continuity exists and remains unchanged: GO TO 3.

NO-2 >> Continuity does not exist and remains unchanged: Replace BCM. Refer to [BCS-95, "Removal and Installation"](#).

#### 2.CHECK LUGGAGE ROOM LAMP OPEN CIRCUIT

1. Disconnect BCM connector.
2. Check continuity between BCM harness connector and luggage room lamp harness connector.

BCM		Luggage room lamp		Continuity
Connector	Terminal	Connector	Terminal	
M69	49	B11	1	Existed

3. Check continuity between BCM harness connector and automatic back door close switch harness connector.

BCM		Automatic back door close switch		Continuity
Connector	Terminal	Connector	Terminal	
M69	49	D158	4	Existed

Is the inspection result normal?

YES >> Replace luggage room lamp or automatic back door close switch.

NO >> Repair or replace harnesses.

#### 3.CHECK LUGGAGE ROOM LAMP SHORT CIRCUIT

1. Disconnect BCM connector.
2. Check continuity between BCM harness connector and ground.

BCM		Ground	Continuity
Connector	Terminal		Not existed
M69	49		

Is the inspection result normal?

## LUGGAGE ROOM LAMP CIRCUIT

### < DTC/CIRCUIT DIAGNOSIS >

---

- YES >> Replace BCM. Refer to [BCS-95. "Removal and Installation"](#).
- NO >> Repair or replace harnesses.

# STEP LAMP CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

## STEP LAMP CIRCUIT

### Description

INFOID:000000009010378

Controls the step lamp (ground side) to turn the step lamp ON and OFF.

### Component Function Check

INFOID:000000009010379

#### NOTE:

Before performing the diagnosis, check that the following is normal.

- Interior room lamp power supply
- Step lamp bulb

### 1.CHECK STEP LAMP OPERATION

#### CONSULT ACTIVE TEST

1. Turn ignition switch ON.
2. Select "STEP LAMP TEST" of BCM (INT LAMP) active test item.
3. With operating the test items, check that step lamp turns ON/OFF.

**On** : Step lamp ON

**Off** : Step lamp OFF

#### Does the step lamp turn ON/OFF?

- YES >> Step lamp circuit is normal.  
NO >> Refer to [INL-63, "Diagnosis Procedure"](#).

### Diagnosis Procedure

INFOID:000000009010380

### 1.CHECK STEP LAMP OUTPUT

#### CONSULT ACTIVE TEST

1. Turn ignition switch OFF.
2. Remove the step lamp bulbs (ALL).
3. Turn ignition switch ON.
4. Select "STEP LAMP TEST" of BCM (INT LAMP) active test item.
5. With operating the test item, check continuity between BCM harness connector and ground.

BCM		Ground	Test item		Continuity
Connector	Terminal		STEP LAMP TEST	On	Existed
M70	62			Off	Not existed

#### Is the inspection result normal?

- YES >> GO TO 2.  
NO-1 >> Continuity exists and remains unchanged: GO TO 3.  
NO-2 >> Continuity does not exist and remains unchanged: Replace BCM. Refer to [BCS-95, "Removal and Installation"](#).

### 2.CHECK STEP LAMP OPEN CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connector, and step lamp connector.
3. Check continuity between BCM harness connector and step lamp harness connector.

BCM		Step lamp		Continuity
Connector	Terminal	Connector	Terminal	
M70	62	Driver side	D8	Existed
		Passenger side	D29	
		Rear LH	D66	
		Rear RH	D46	

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

INL

## STEP LAMP CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

Is the inspection result normal?

YES >> Replace step lamp.

NO >> Repair or replace harnesses.

### 3. CHECK STEP LAMP SHORT CIRCUIT

1. Turn ignition switch OFF.
2. Check continuity between BCM harness connector and ground.

BCM		Ground	Continuity
Connector	Terminal		
M70	62		Not existed

Is the inspection result normal?

YES >> Repair or replace harnesses.

NO >> Replace BCM. Refer to [BCS-95. "Removal and Installation"](#).



# PUDDLE LAMP CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

## PUDDLE LAMP CIRCUIT

### Description

INFOID:000000009010381

Controls the puddle lamp (ground side) to turn the puddle lamp ON and OFF.

### Diagnosis Procedure

INFOID:000000009010382

#### NOTE:

Before performing the diagnosis, check that the interior room lamp power supply is normal.

#### 1. CHECK PUDDLE LAMP OUTPUT

1. Turn ignition switch OFF.
2. Disconnect puddle lamp connector.
3. Check continuity between BCM harness connector and ground.

BCM		Ground	Condition		Continuity
Connector	Terminal		Any door (except back door)	Open	Existed
M71	72			Closed	Not existed

Is the inspection result normal?

YES >> GO TO 2.

NO-1 >> Continuity exists and remains unchanged: GO TO 3.

NO-2 >> Continuity does not exist and remains unchanged: Replace BCM. Refer to [BCS-95. "Removal and Installation"](#).

#### 2. CHECK PUDDLE LAMP OPEN CIRCUIT

1. Disconnect BCM connector.
2. Check continuity between BCM harness connector and puddle lamp harness connector.

BCM		Puddle lamp		Continuity
Connector	Terminal	Connector	Terminal	
M71	72	Driver side	D3	Existed
		Passenger side	D23	

Is the inspection result normal?

YES >> Replace puddle lamp.

NO >> Repair or replace harnesses.

#### 3. CHECK PUDDLE LAMP SHORT CIRCUIT

1. Disconnect BCM connector.
2. Check continuity between BCM harness connector and ground.

BCM		Ground	Continuity
Connector	Terminal		
M71	72		Not existed

Is the inspection result normal?

YES >> Replace BCM. Refer to [BCS-95. "Removal and Installation"](#).

NO >> Repair or replace harnesses.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
M  
N  
O  
P

INL

# PUSH-BUTTON IGNITION SWITCH ILLUMINATION CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

## PUSH-BUTTON IGNITION SWITCH ILLUMINATION CIRCUIT

### Component Function Check

INFOID:000000009010383

#### 1. CHECK PUSH-BUTTON IGNITION SWITCH ILLUMINATION OPERATION

##### CONSULT ACTIVE TEST

1. Turn the ignition switch ON.
2. Select "ENGINE SW ILLUMI" of BCM (INTELLIGENT KEY) active test item.
3. With operating the test items, check that the push-button ignition switch illumination turns ON/OFF.

**On** : Push-button ignition switch illumination ON

**Off** : Push-button ignition switch illumination OFF

##### Does the push-button ignition switch illumination turn ON/OFF?

YES >> Push-button ignition switch illumination circuit is normal.

NO >> Refer to [INL-66, "Diagnosis Procedure"](#).

### Diagnosis Procedure

INFOID:000000009010384

#### 1. CHECK PUSH-BUTTON IGNITION SWITCH ILLUMINATION POWER SUPPLY OUTPUT

1. Turn ignition switch OFF.
2. Lighting switch OFF.
3. Disconnect push-button ignition switch connector.
4. Check voltage between push-button ignition switch harness connector and ground.

(+)		(-)	Condition	Voltage (Approx.)	
Connector	Terminal				
M101	3	Ground	Push-button ignition switch illumination	ON Condition	12 V
			OFF Condition	0 V	

##### Is the inspection result normal?

YES >> GO TO 4.

NO >> GO TO 2.

#### 2. CHECK PUSH-BUTTON IGNITION SWITCH ILLUMINATION POWER SUPPLY OPEN CIRCUIT

1. Turn the ignition switch OFF.
2. Disconnect BCM connector.
3. Check continuity between BCM harness connector and the push-button ignition switch harness connector.

BCM		Push-button ignition switch		Continuity
Connector	Terminal	Connector	Terminal	
M71	90	M101	3	Existed

##### Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace harnesses.

#### 3. CHECK PUSH-BUTTON IGNITION SWITCH ILLUMINATION POWER SUPPLY SHORT CIRCUIT

Check continuity between BCM harness connector and ground.

BCM		Ground	Continuity
Connector	Terminal		
M71	90		Not existed

##### Is the inspection result normal?

YES >> Replace BCM. Refer to [BCS-95, "Removal and Installation"](#).

# PUSH-BUTTON IGNITION SWITCH ILLUMINATION CIRCUIT

## < DTC/CIRCUIT DIAGNOSIS >

NO >> Repair or replace harnesses.

### 4. CHECK PUSH-BUTTON IGNITION SWITCH ILLUMINATION GROUND CIRCUIT-1

1. Connect push-button ignition switch connector.
2. Check voltage between BCM harness connector and ground.

(+)		(-)	Condition		Voltage (Approx.)
BCM					
Connector	Terminal				
M71	92	Ground	Push-button ignition switch illumination	ON Condition	0 V

Is the inspection result normal?

YES >> GO TO 5.

NO >> Replace BCM. Refer to [BCS-95, "Removal and Installation"](#).

### 5. CHECK PUSH-BUTTON IGNITION SWITCH ILLUMINATION GROUND CIRCUIT-2

1. Check continuity between push-button ignition switch harness connector and BCM harness connector.

Push-button ignition switch		BCM		Continuity
Connector	Terminal	Connector	Terminal	
M101	2	M71	92	Existed

2. Check continuity between push-button ignition switch harness connector and ground.

Push-button ignition switch		Ground	Continuity
Connector	Terminal		
M101	2		Not existed

Is the inspection result normal?

YES >> Replace push-button ignition switch.

NO >> Repair or replace harnesses.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

INL

# INTERIOR LIGHTING SYSTEM SYMPTOMS

< SYMPTOM DIAGNOSIS >

## SYMPTOM DIAGNOSIS

### INTERIOR LIGHTING SYSTEM SYMPTOMS

#### Symptom Table

INFOID:000000009010385

**NOTE:**

Perform the self-diagnosis with CONSULT before the symptom diagnosis. Perform the trouble diagnosis if any DTC is detected.

Symptom	Possible cause	Inspection item
<p>All the following lamps do not turn ON.</p> <ul style="list-style-type: none"> <li>• Map lamp</li> <li>• Personal lamp</li> <li>• Vanity mirror lamp</li> <li>• Foot lamp</li> <li>• Step lamp</li> <li>• Puddle lamp</li> <li>• Luggage room lamp</li> <li>• Automatic back door close switch illumination</li> </ul>	<ul style="list-style-type: none"> <li>• Harness between BCM and each interior room lamp</li> <li>• BCM</li> </ul>	<p>Interior room lamp power supply circuit Refer to <a href="#">INL-56, "Component Function Check"</a>.</p>
<ul style="list-style-type: none"> <li>• Interior room lamp does not turn ON even though the door is open. (It turns ON when turning the interior room lamp ON.)</li> <li>• Interior room lamp does not turn OFF even though the door is closed.</li> </ul>	<ul style="list-style-type: none"> <li>• Harness between BCM and each door switch</li> <li>• Harness between BCM and each interior room lamp</li> <li>• BCM</li> </ul>	<p>Door switch circuit Refer to <a href="#">DLK-119, "Component Function Check"</a>.</p> <p>Interior room lamp control circuit Refer to <a href="#">INL-59, "Component Function Check"</a>.</p>
<p>Interior room lamp timer does not activate. (It turns ON/ OFF when the door opens/closes.)</p>	—	<p>Check the interior room lamp setting. Refer to <a href="#">INL-14</a>.</p>
<ul style="list-style-type: none"> <li>• Puddle lamp does not turn ON even though the door is open.</li> <li>• Puddle lamp does not turn OFF even though the door is closed.</li> </ul>	<ul style="list-style-type: none"> <li>• Harness between BCM and each door switch</li> <li>• Harness between BCM and puddle lamp</li> <li>• BCM</li> </ul>	<p>Door switch circuit Refer to <a href="#">DLK-119, "Component Function Check"</a>.</p> <p>Puddle lamp circuit Refer to <a href="#">INL-65, "Diagnosis Procedure"</a>.</p>
<ul style="list-style-type: none"> <li>• Luggage room lamp or automatic back door close switch illumination does not turn ON even though the back door is open. (It turns ON when turning the luggage room lamp ON.)</li> <li>• Luggage room lamp or automatic back door close switch illumination does not turn OFF even though the back door is closed.</li> </ul>	<ul style="list-style-type: none"> <li>• Harness between BCM and back door switch</li> <li>• Harness between BCM and luggage room lamp</li> <li>• Harness between BCM and automatic back door close switch</li> <li>• BCM</li> </ul>	<p>Back door switch circuit Refer to <a href="#">DLK-122, "Component Function Check"</a>.</p> <p>Luggage room lamp circuit Refer to <a href="#">INL-61, "Diagnosis Procedure"</a>.</p>
<ul style="list-style-type: none"> <li>• Step lamps (ALL) do not turn ON.</li> <li>• Step lamps (ALL) do not turn OFF.</li> </ul>	<ul style="list-style-type: none"> <li>• Harness between BCM and each step lamp</li> <li>• BCM</li> </ul>	<p>Door switch circuit Refer to <a href="#">DLK-119, "Component Function Check"</a>.</p> <p>Step lamp circuit Refer to <a href="#">INL-63</a>.</p>
<p>Push-button ignition switch illumination does not illuminate.</p>	<ul style="list-style-type: none"> <li>• Harness between BCM and push-button ignition switch</li> <li>• BCM</li> </ul>	<p>Push-button ignition switch illumination circuit Refer to <a href="#">INL-66, "Component Function Check"</a>.</p>
<p>Interior room lamp battery saver does not activate.</p>	<p>BCM</p>	<p>Replace BCM. Refer to <a href="#">BCS-95, "Removal and Installation"</a>.</p>

# MAP LAMP


< REMOVAL AND INSTALLATION >

## REMOVAL AND INSTALLATION

### MAP LAMP

Exploded View


INFOID:000000009010386

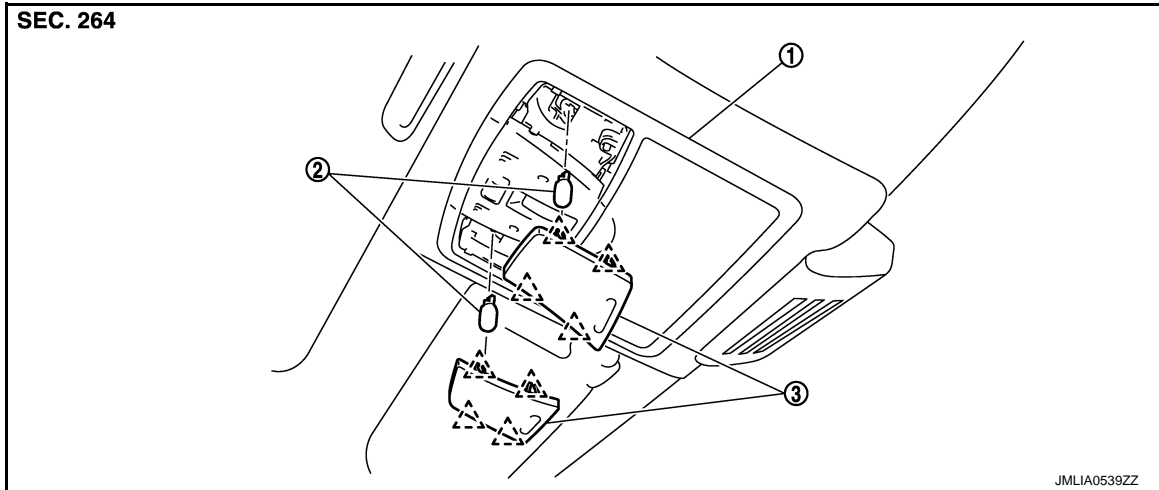

1. Map lamp assembly

2. Bulb

 3. Lens

 : Pawl

### Removal and Installation

INFOID:000000009010387

Refer to [INT-29. "Removal and Installation"](#) for the map lamp assembly removal and installation.

### Replacement

INFOID:000000009010388

#### **CAUTION:**

- Disconnect the battery cable from negative terminal or remove the fuse.
- Never touch the glass of bulb directly by hand. Keep grease and other oily substances away from it. Never touch bulb by hand while it is lit or right after it is off.
- Never leave bulb out of lamp reflector for a long time because dust, moisture smoke, etc. may affect the performance of lamp. When replacing bulb, be sure to replace it with a new one.

### MAP LAMP BULB

1. Insert any appropriate tool into the gap between the lens, and then remove the lens.
2. Remove the bulb.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
INL  
M  
N  
O  
P


# VANITY MIRROR LAMP

< REMOVAL AND INSTALLATION >

## VANITY MIRROR LAMP


Exploded View

INFOID:000000009010389

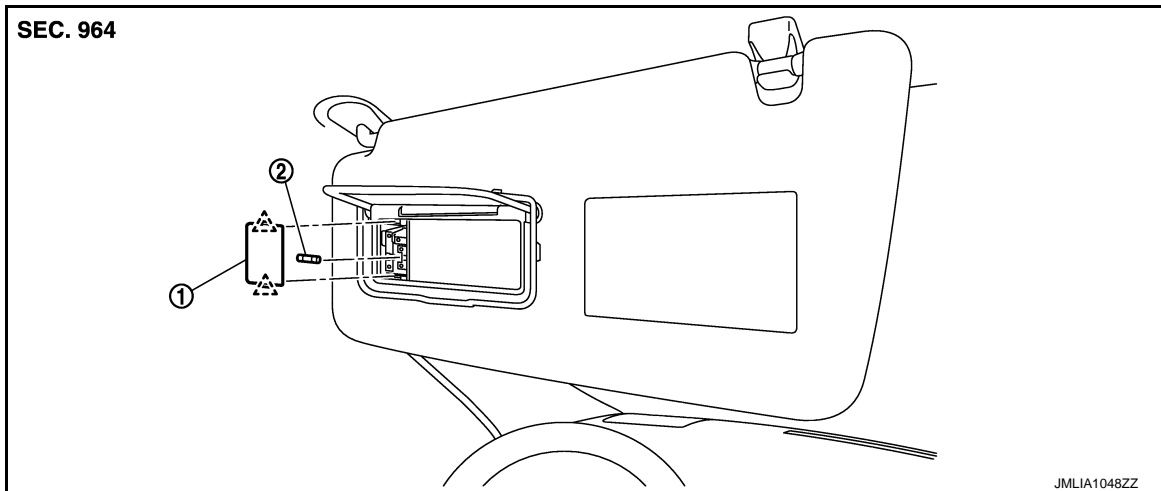

1. Lens

 2. Bulb

 : Pawl

## Replacement

INFOID:000000009010390

### CAUTION:

- Disconnect the battery cable from negative terminal or remove the fuse.
- Never touch the glass of bulb directly by hand. Keep grease and other oily substances away from it. Never touch bulb by hand while it is lit or right after it is off.
- Never leave bulb out of lamp reflector for a long time because dust, moisture smoke, etc. may affect the performance of lamp. When replacing bulb, be sure to replace it with a new one.

### VANITY MIRROR LAMP BULB

1. Insert any appropriate tool into the gap between the lens, and then remove the lens.
2. Remove the bulb.


# GLOVE BOX LAMP

< REMOVAL AND INSTALLATION >

## GLOVE BOX LAMP

Exploded View

INFOID:000000009010391

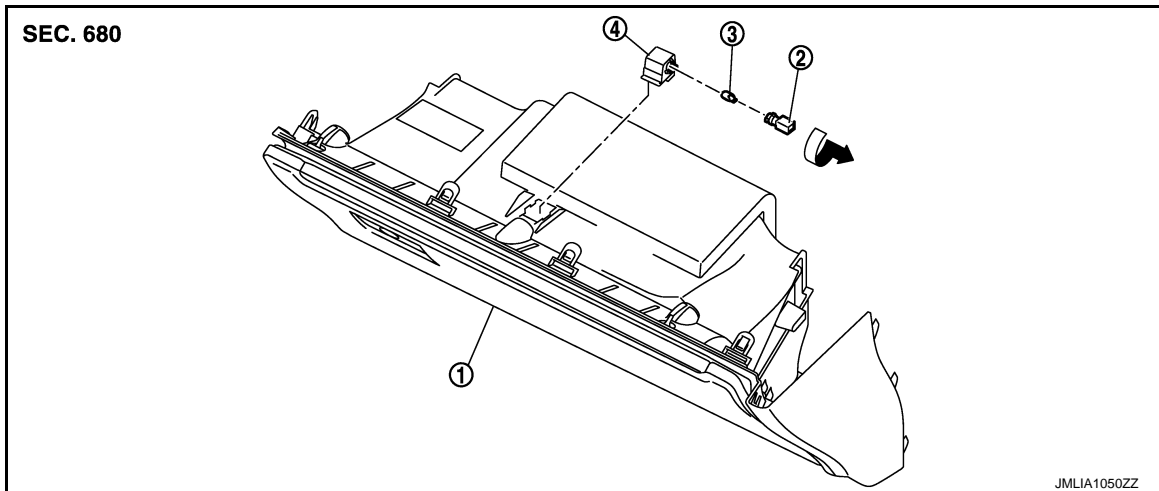

1. Glove box assembly
2. Bulb socket
3. Bulb
4. Lamp housing

## Replacement

INFOID:000000009010392

### CAUTION:

- Disconnect the battery cable from negative terminal or remove the fuse.
- Never touch the glass of bulb directly by hand. Keep grease and other oily substances away from it. Never touch bulb by hand while it is lit or right after it is off.
- Never leave bulb out of lamp reflector for a long time because dust, moisture smoke, etc. may affect the performance of lamp. When replacing bulb, be sure to replace it with a new one.

## GLOVE BOX LAMP BULB

1. Remove glove box assembly. Refer to [IP-14, "Removal and Installation"](#).
2. Rotate the bulb socket counterclockwise and unlock it.
3. Remove the bulb.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
INL  
M  
N  
O  
P


# FOOT LAMP

< REMOVAL AND INSTALLATION >

## FOOT LAMP DRIVER SIDE

DRIVER SIDE : Exploded View

INFOID:000000009010393

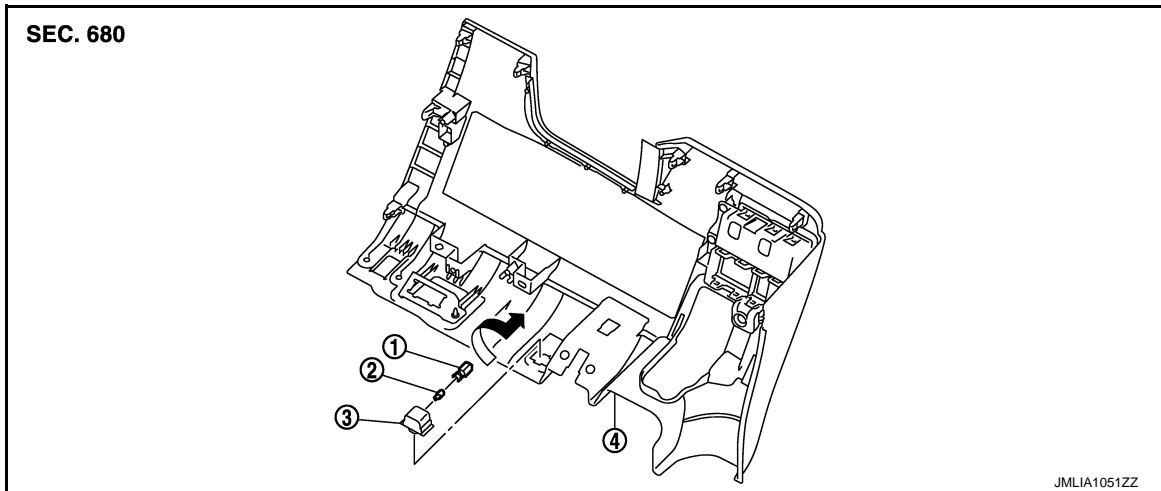

1. Bulb socket
2. Bulb
3. Lamp housing
4. Instrument lower panel LH

DRIVER SIDE : Replacement

INFOID:000000009010394

### CAUTION:

- Disconnect the battery cable from negative terminal or remove the fuse.
- Never touch the glass of bulb directly by hand. Keep grease and other oily substances away from it. Never touch bulb by hand while it is lit or right after it is off.
- Never leave bulb out of lamp reflector for a long time because dust, moisture, smoke, etc. may affect the performance of lamp. When replacing bulb, be sure to replace it with a new one.


### FOOT LAMP BULB (DRIVER SIDE)

1. Remove instrument lower panel LH. Refer to [IP-14, "Removal and Installation"](#).
2. Rotate the bulb socket counterclockwise and unlock it.
3. Remove the bulb.

## PASSENGER SIDE

PASSENGER SIDE : Exploded View

INFOID:000000009010395

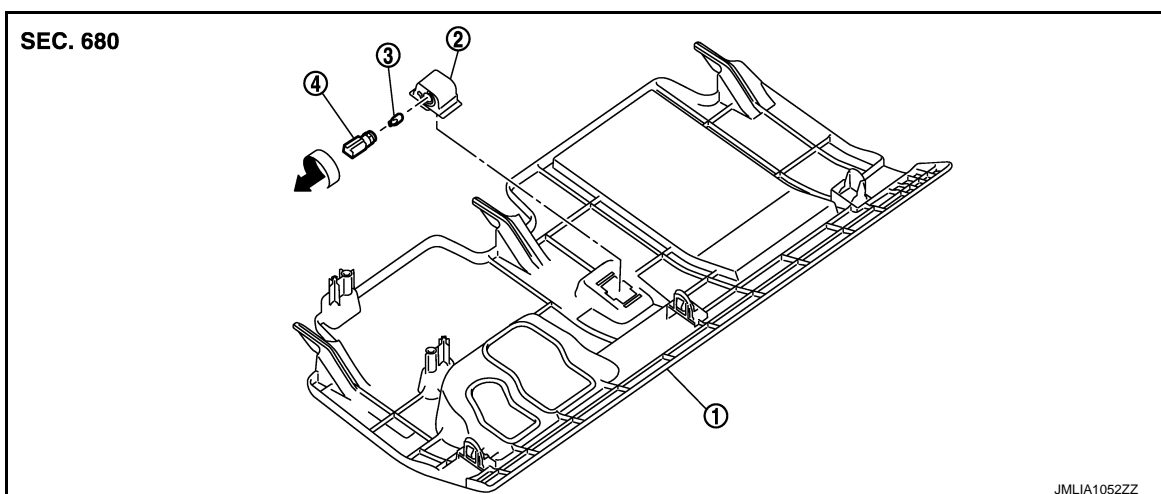



# FOOT LAMP

## < REMOVAL AND INSTALLATION >

1. Instrument lower cover
2. Lamp housing
3. Bulb
4. Bulb socket

### PASSENGER SIDE : Replacement

INFOID:000000009010396

#### CAUTION:

- Disconnect the battery cable from negative terminal or remove the fuse.
- Never touch the glass of bulb directly by hand. Keep grease and other oily substances away from it. Never touch bulb by hand while it is lit or right after it is off.
- Never leave bulb out of lamp reflector for a long time because dust, moisture smoke, etc. may affect the performance of lamp. When replacing bulb, be sure to replace it with a new one.


### FOOT LAMP BULB (PASSENGER SIDE)

1. Remove instrument lower cover. Refer to [IP-14, "Removal and Installation"](#).
2. Rotate the bulb socket counterclockwise and unlock it.
3. Remove the bulb.

### REAR FOOT LAMP

### REAR FOOT LAMP : Exploded View

INFOID:000000009010397

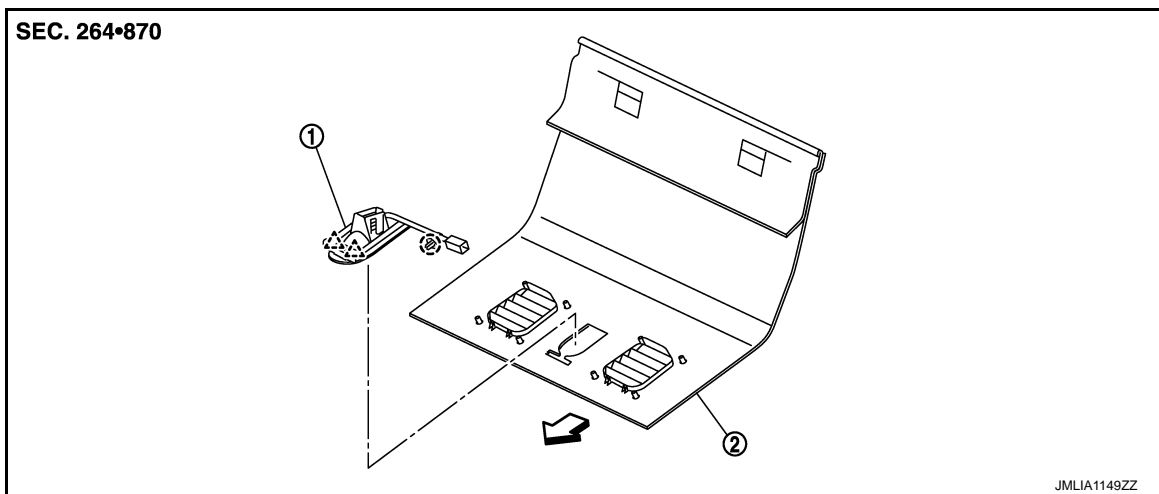

1. Rear foot lamp assembly
2. Seatback lower carpet

○ : Clip

△ : Pawl

← Vehicle front

### REAR FOOT LAMP : Removal and Installation

INFOID:000000009010398

#### CAUTION:

- Disconnect the battery cable from negative terminal or remove the fuse.
- Never touch rear foot lamp assembly directly by hand. Keep grease and other oily substances away from it.
- Never touch rear foot lamp assembly by hand while it is lit or right after it is off.

 
 
### REMOVAL


1. Remove seat cushion front finisher. Refer to [SE-113, "Removal and Installation"](#).
2. Release seatback lower carpet band from the back of seat cushion frame.
3. Pull seatback lower carpet toward vehicle rear from underside.

## FOOT LAMP

### < REMOVAL AND INSTALLATION >

4. Disengage rear foot lamp assembly fixing pawls using a small flat-bladed screwdriver (A) as shown by the arrow in the figure.

 :Pawl  
 :Vehicle front

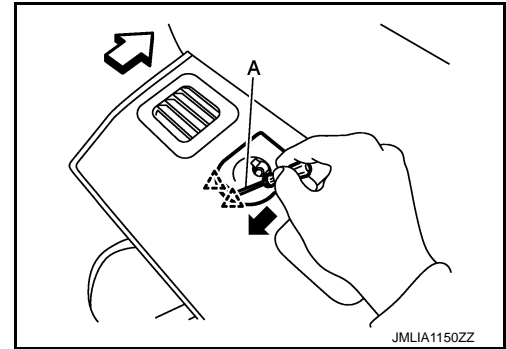

5. Remove rear foot lamp assembly from seatback lower carpet.

### INSTALLATION

Note the following items, and install in the reverse order of removal.

#### **CAUTION:**

- Rear foot lamp cannot be disassembled.
- Always replace rear foot lamp as an assembly, when replacing.


# STEP LAMP

< REMOVAL AND INSTALLATION >

## STEP LAMP

### Exploded View


INFOID:000000009010399

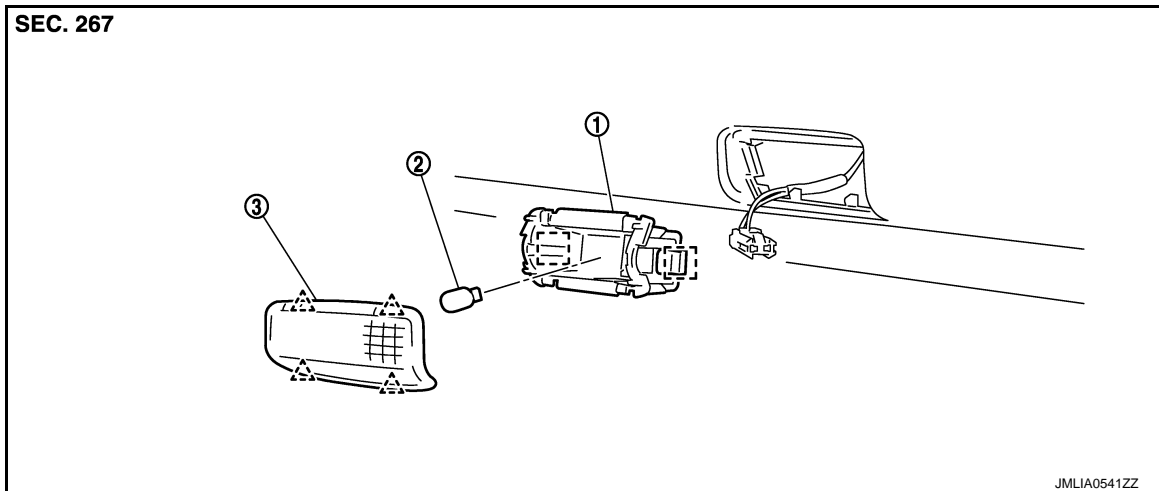

1. Step lamp housing

2. Bulb

 3. Lens

 : Pawl

 : Metal clip

### Removal and Installation

INFOID:000000009010400

#### CAUTION:

- Disconnect the battery cable from negative terminal or remove the fuse.
- Never touch the glass of bulb directly by hand. Keep grease and other oily substances away from it. Never touch bulb by hand while it is lit or right after it is off.
- Never leave bulb out of lamp reflector for a long time because dust, moisture smoke, etc. may affect the performance of lamp. When replacing bulb, be sure to replace it with a new one.

#### REMOVAL

1. Insert any appropriate tool into the gap between the step lamp and door finisher.
2. Disconnect the step lamp harness connector, and then remove the step lamp.

#### INSTALLATION

Install in the reverse order of removal.

#### Replacement

INFOID:000000009010401

#### STEP LAMP BULB

1. Remove the step lamp.
2. Remove the lens.
3. Remove the bulb.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
INL  
M  
N  
O  
P

# MOOD LAMP


< REMOVAL AND INSTALLATION >

## MOOD LAMP

### FRONT DOOR ARMREST

#### FRONT DOOR ARMREST : Exploded View

INFOID:000000009010402

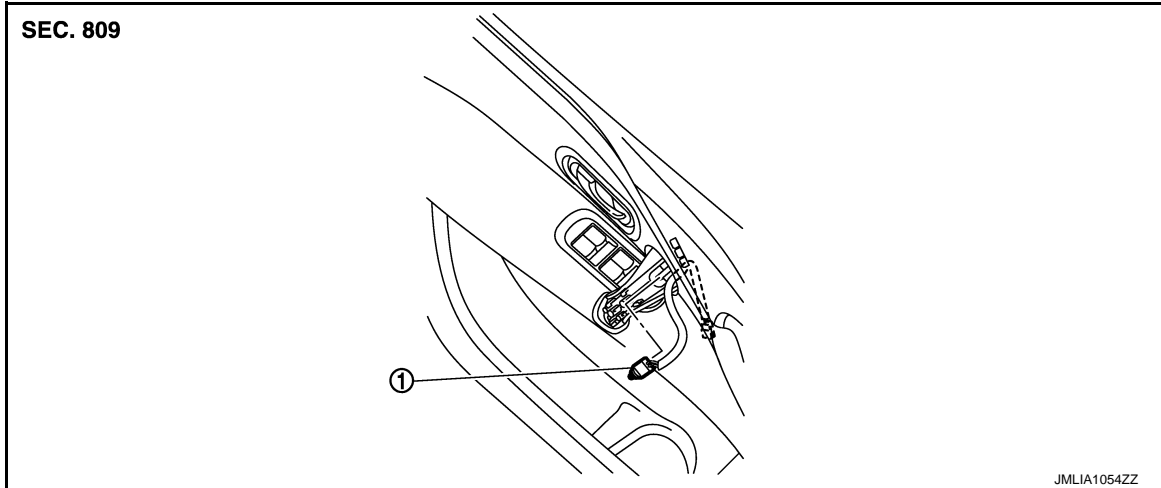

1. Mood lamp

#### FRONT DOOR ARMREST : Replacement

INFOID:000000009010403

#### **CAUTION:**

- Disconnect the battery cable from negative terminal or remove the fuse.
- Never touch the glass of bulb directly by hand. Keep grease and other oily substances away from it. Never touch bulb by hand while it is lit or right after it is off.
- Never leave bulb out of lamp reflector for a long time because dust, moisture smoke, etc. may affect the performance of lamp. When replacing bulb, be sure to replace it with a new one.


#### MOOD LAMP

1. Remove front door finisher. Refer to [INT-14, "Removal and Installation"](#).
2. Remove the mood lamp from front door finisher.

### REAR DOOR ARMREST

#### REAR DOOR ARMREST : Exploded View

INFOID:000000009010404

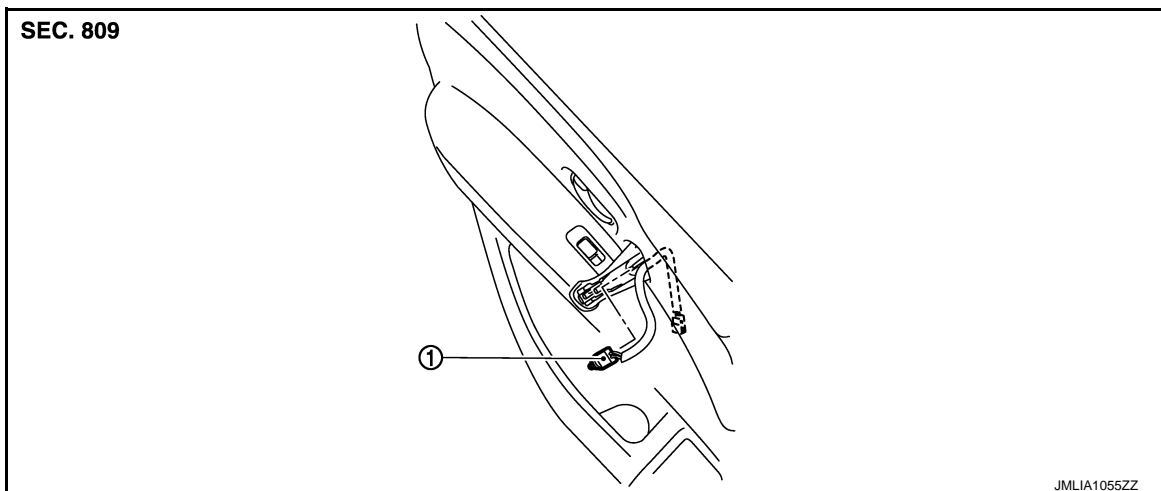

1. Mood lamp

# MOOD LAMP

< REMOVAL AND INSTALLATION >

## REAR DOOR ARMREST : Replacement

INFOID:000000009010405

### CAUTION:

- Disconnect the battery cable from negative terminal or remove the fuse.
- Never touch the glass of bulb directly by hand. Keep grease and other oily substances away from it. Never touch bulb by hand while it is lit or right after it is off.
- Never leave bulb out of lamp reflector for a long time because dust, moisture smoke, etc. may affect the performance of lamp. When replacing bulb, be sure to replace it with a new one.

### MOOD LAMP

1. Remove rear door finisher. Refer to [INT-14, "Removal and Installation"](#).
2. Remove the mood lamp from rear door finisher.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
INL  
M  
N  
O  
P


# PERSONAL LAMP

< REMOVAL AND INSTALLATION >

## PERSONAL LAMP

Exploded View

INFOID:000000009010406

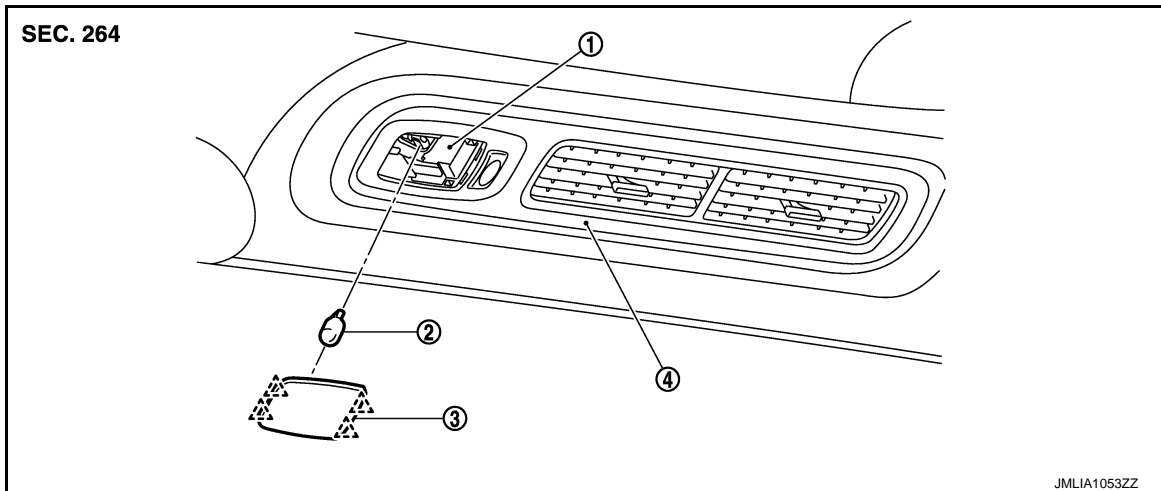

1. Personal lamp case
2. Bulb
3. Lens
4. Personal lamp finisher

△ : Pawl

## Removal and Installation

INFOID:000000009010407

### CAUTION:

- Disconnect the battery cable from negative terminal or remove the fuse.
- Never touch the glass of bulb directly by hand. Keep grease and other oily substances away from it. Never touch bulb by hand while it is lit or right after it is off.
- Never leave bulb out of lamp reflector for a long time because dust, moisture smoke, etc. may affect the performance of lamp. When replacing bulb, be sure to replace it with a new one.
- Replace the personal lamp case as a set (LH and RH). After removing the headlining assembly, remove the personal lamp case.


### REMOVAL

1. Remove headlining assembly. Refer to [INT-29, "Removal and Installation"](#).

# PERSONAL LAMP

## < REMOVAL AND INSTALLATION >

2. Press the pawls (B) on both sides as shown in the figure using a small flat-bladed screwdriver (A), and then pull out personal lamp case (2) from personal lamp finisher (1).

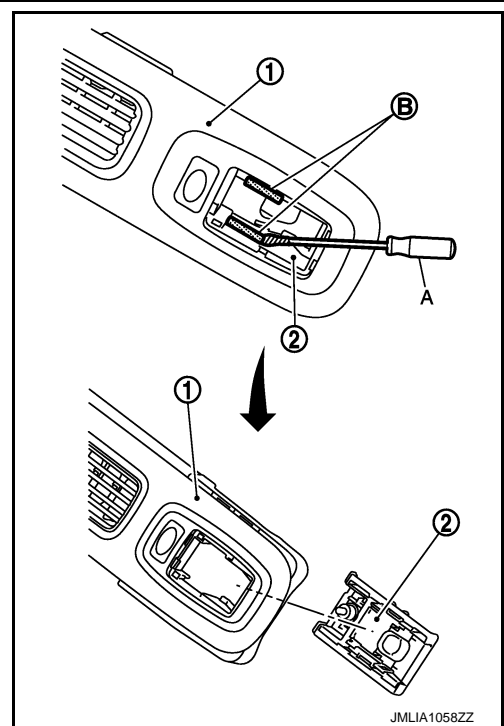

## INSTALLATION

Install in the reverse order of removal.

## Replacement

INFOID:000000009010408

### **CAUTION:**

- Disconnect the battery negative terminal or remove the fuse.
- Never touch the glass of bulb directly by hand. Keep grease and other oily matters away from it. Never touch bulb by hand while it is lit or right after being turned off.
- Never leave bulb out of lamp reflector for a long time because dust, moisture smoke, etc. may affect the performance of lamp. When replacing bulb, be sure to replace it with new one.

## PERSONAL LAMP BULB

1. Insert any appropriate tool into the gap between the lens, and then remove the lens.
2. Remove the bulb.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
INL  
M  
N  
O  
P


# PUDDLE LAMP

< REMOVAL AND INSTALLATION >

## PUDDLE LAMP

Exploded View

INFOID:000000009010409

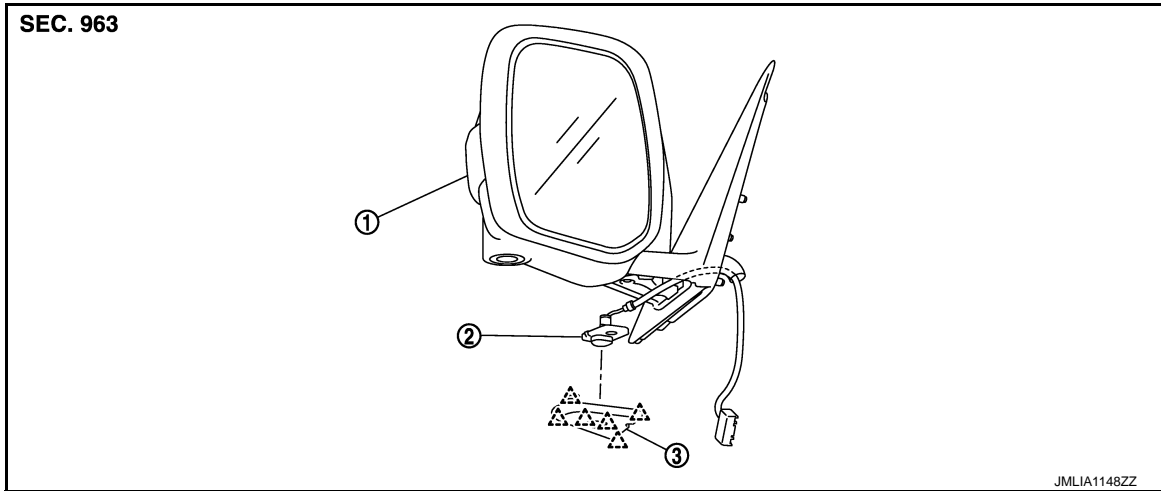

1. Door mirror assembly

2. Puddle lamp

3. Base cover

△ : Pawl

## Removal and Installation

INFOID:000000009010410

### CAUTION:

- Disconnect the battery cable from negative terminal or remove the fuse.
- Never touch puddle lamp directly by hand. Keep grease and other oily substances away from it.
- Never touch puddle lamp by hand while it is lit or right after it is off.
- It is prohibited to disassemble puddle lamp.
- Always replace puddle lamp as an assembly, when replacing.


### REMOVAL

1. Remove door mirror assembly. Refer to [MIR-32, "DOOR MIRROR ASSEMBLY : Removal and Installation"](#).
2. Disconnect puddle lamp harness connector terminal from door mirror harness connector.
3. Disengage base cover fixing pawls using a small flat-bladed screwdriver (A), and then remove base cover.

### CAUTION:

- Apply protective tape (B) around the base to protect the surface from damage.
- Apply protective tape to small flat-bladed screwdriver.

△ : Pawl

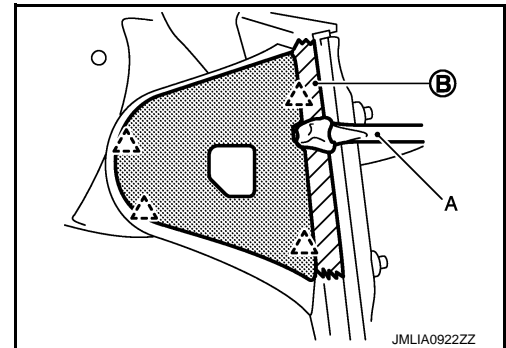


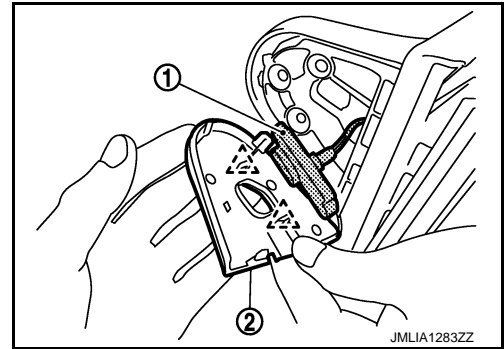


# PUDDLE LAMP

## < REMOVAL AND INSTALLATION >

4. Disengage puddle lamp fixing pawls, and then remove puddle lamp (1) from base cover (2).

 : Pawl



## INSTALLATION

Install in the reverse order of removal.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

INL


# LUGGAGE ROOM LAMP

< REMOVAL AND INSTALLATION >

## LUGGAGE ROOM LAMP

### Exploded View

INFOID:000000009010411

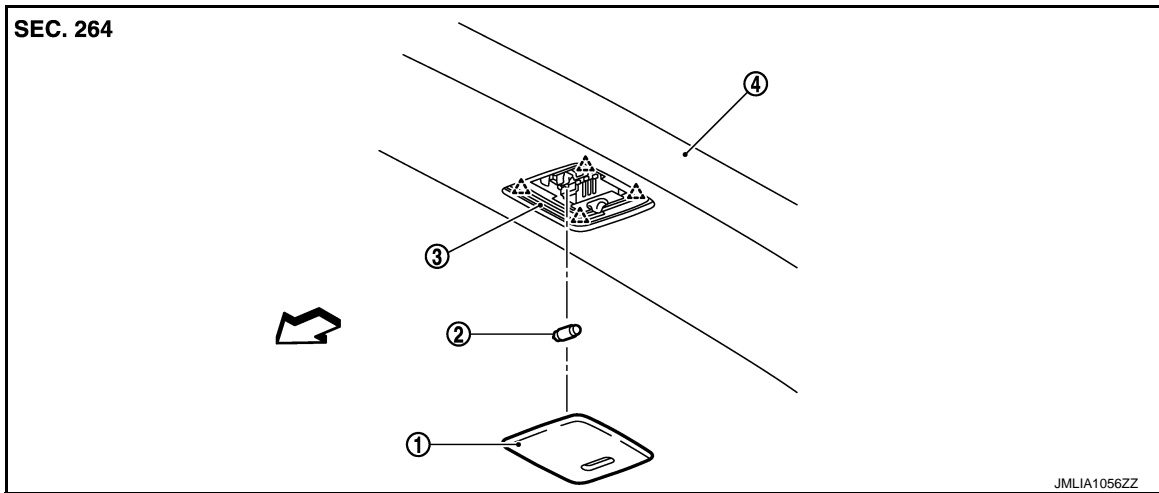


1. Lens

2. Bulb

3. Luggage room lamp housing

4. Roof garnish

 : Pawl

 : Vehicle front

### Removal and Installation

INFOID:000000009010412

#### CAUTION:

- Disconnect the battery cable from negative terminal or remove the fuse.
- Never touch the glass of bulb directly by hand. Keep grease and other oily substances away from it. Never touch bulb by hand while it is lit or right after it is off.
- Never leave bulb out of lamp reflector for a long time because dust, moisture smoke, etc. may affect the performance of lamp. When replacing bulb, be sure to replace it with a new one.

#### REMOVAL

1. Insert any appropriate tool into the gap between lens and roof garnish, and then remove lens.
2. Disengage luggage room lamp housing fixing metal clips, and then disconnect luggage room lamp harness connector.
3. Remove luggage room lamp housing.

#### INSTALLATION

Install in the reverse order of removal.

#### Replacement

INFOID:000000009010413

#### CAUTION:

- Disconnect the battery cable from negative terminal or remove the fuse.
- Never touch the glass of bulb directly by hand. Keep grease and other oily substances away from it. Never touch bulb by hand while it is lit or right after it is off.
- Never leave bulb out of lamp reflector for a long time because dust, moisture smoke, etc. may affect the performance of lamp. When replacing bulb, be sure to replace it with a new one.

#### LUGGAGE ROOM LAMP BULB

1. Insert any appropriate tool into the gap between lens and roof garnish, and then remove the lens.
2. Remove bulb.

# SERVICE DATA AND SPECIFICATIONS (SDS)

< SERVICE DATA AND SPECIFICATIONS (SDS)

## SERVICE DATA AND SPECIFICATIONS (SDS)

### SERVICE DATA AND SPECIFICATIONS (SDS)

#### Bulb Specifications

INFOID:000000009010414

Item	Type	Wattage (W)
Push-button ignition switch illumination	LED	—
Map lamp	Wedge	8
Console lamp (integrated into the map lamp assembly)	LED	—
Puddle lamp	LED	—
Vanity mirror lamp	—	2
Glove box lamp	Wedge	1.4
Foot lamp (driver and passenger)	Wedge	1.4
Rear foot lamp	LED	—
Mood lamp (front and rear door armrest)	LED	—
Step lamp	Wedge	8
Personal lamp	Wedge	8
Luggage room lamp	—	8

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
M  
N  
O  
P

INL