


SUPER MULTIPLE JUNCTION (SMJ)

Installation

Behind fuse block


SMJ (Main harness-Engine room harness)

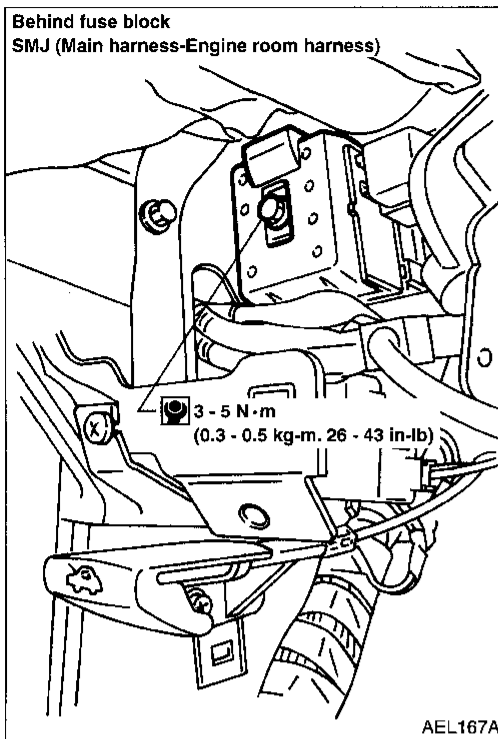

Installation

To install SMJ, tighten bolts until orange "fultight" mark appears and then retighten to specified torque as required.

NDELD143

 : 3 - 5 N·m (0.3 - 0.5 kg-m, 26 - 43 in-lb)

CAUTION:

Do not overtighten bolts, otherwise, they may be damaged.


SUPER MULTIPLE JUNCTION (SMJ)

Terminal Arrangement




Terminal Arrangement

NDEL0144

MAIN HARNESS

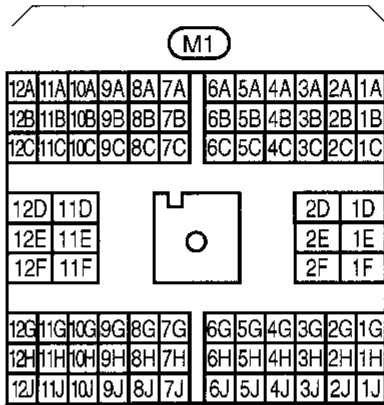

ENGINE CONTROL HARNESS

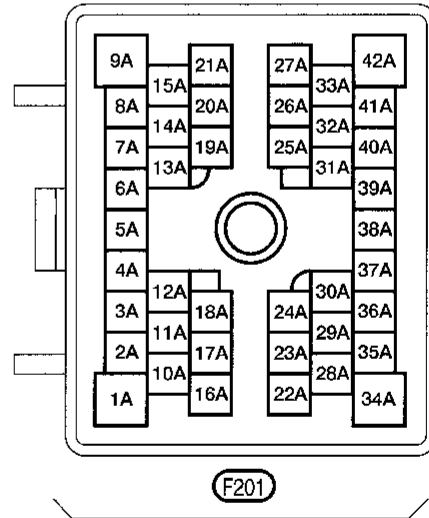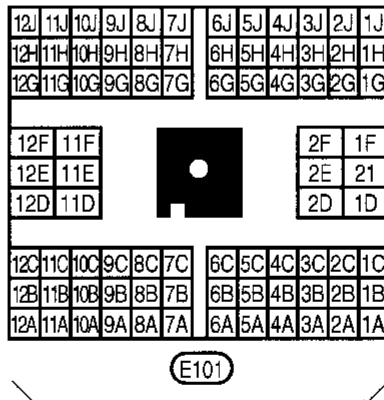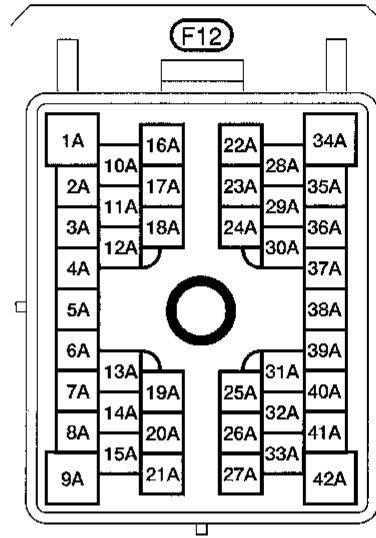

ENGINE ROOM HARNESS

ENGINE CONTROL SUB-HARNESS



FUSE BLOCK

NDEL0152

Terminal Arrangement

Terminal Arrangement

NDEL0152S01

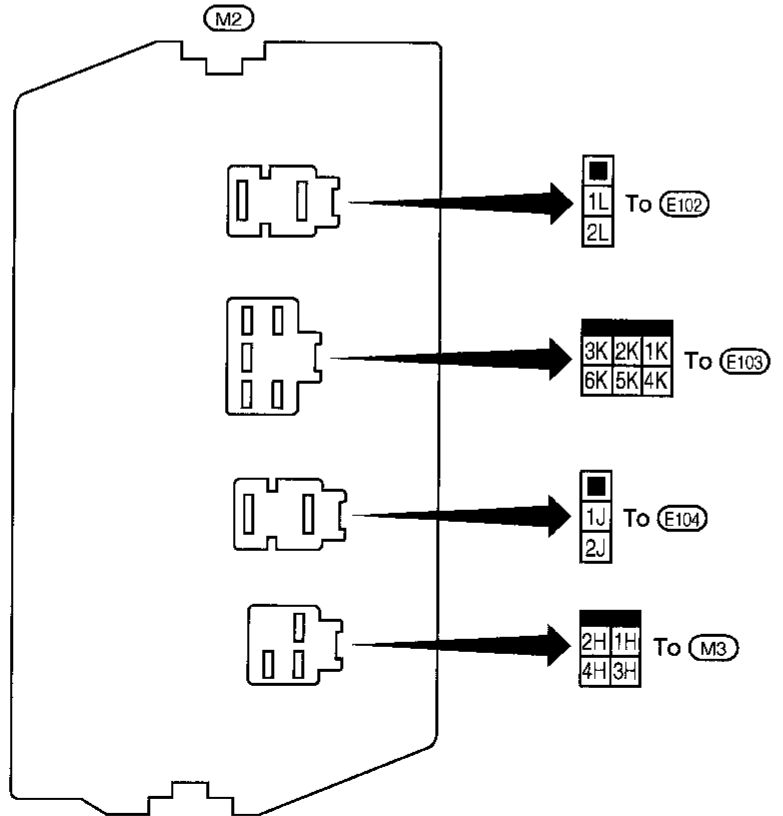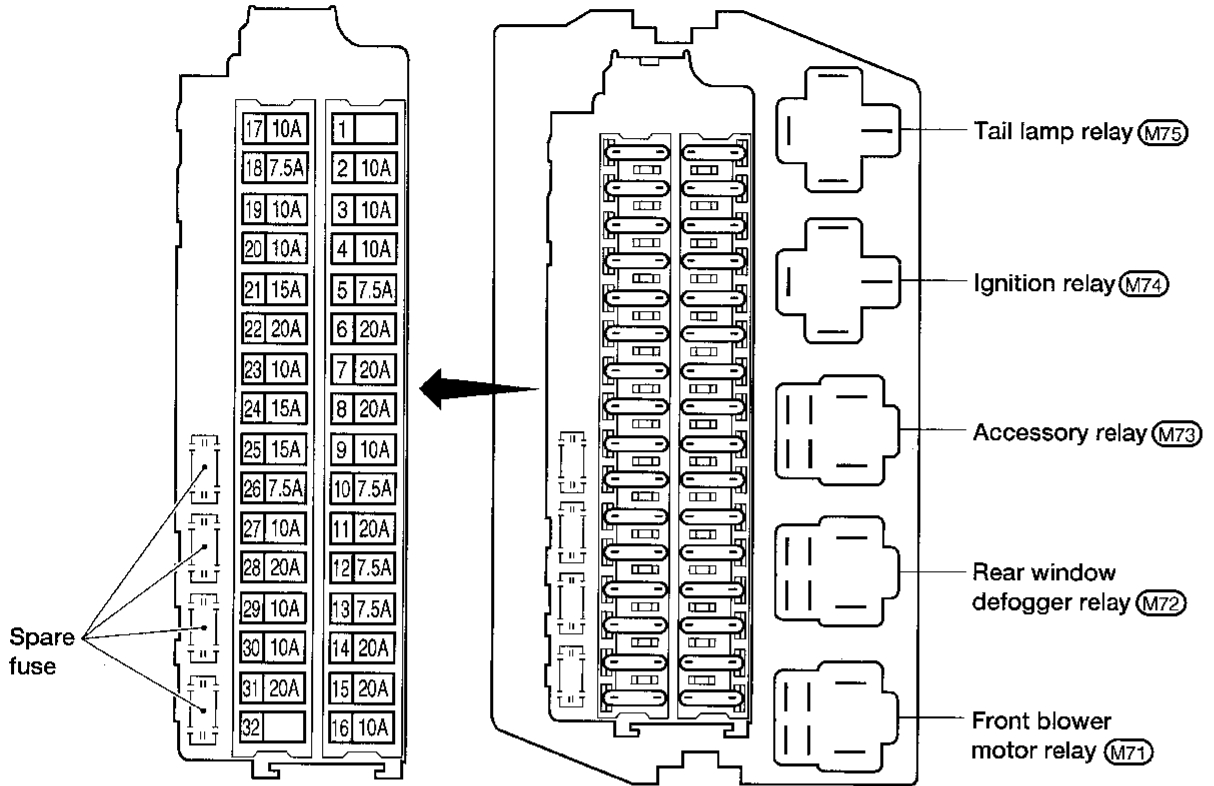


FUSE AND FUSIBLE LINK BOX

Terminal Arrangement

Terminal Arrangement

NDEL0146

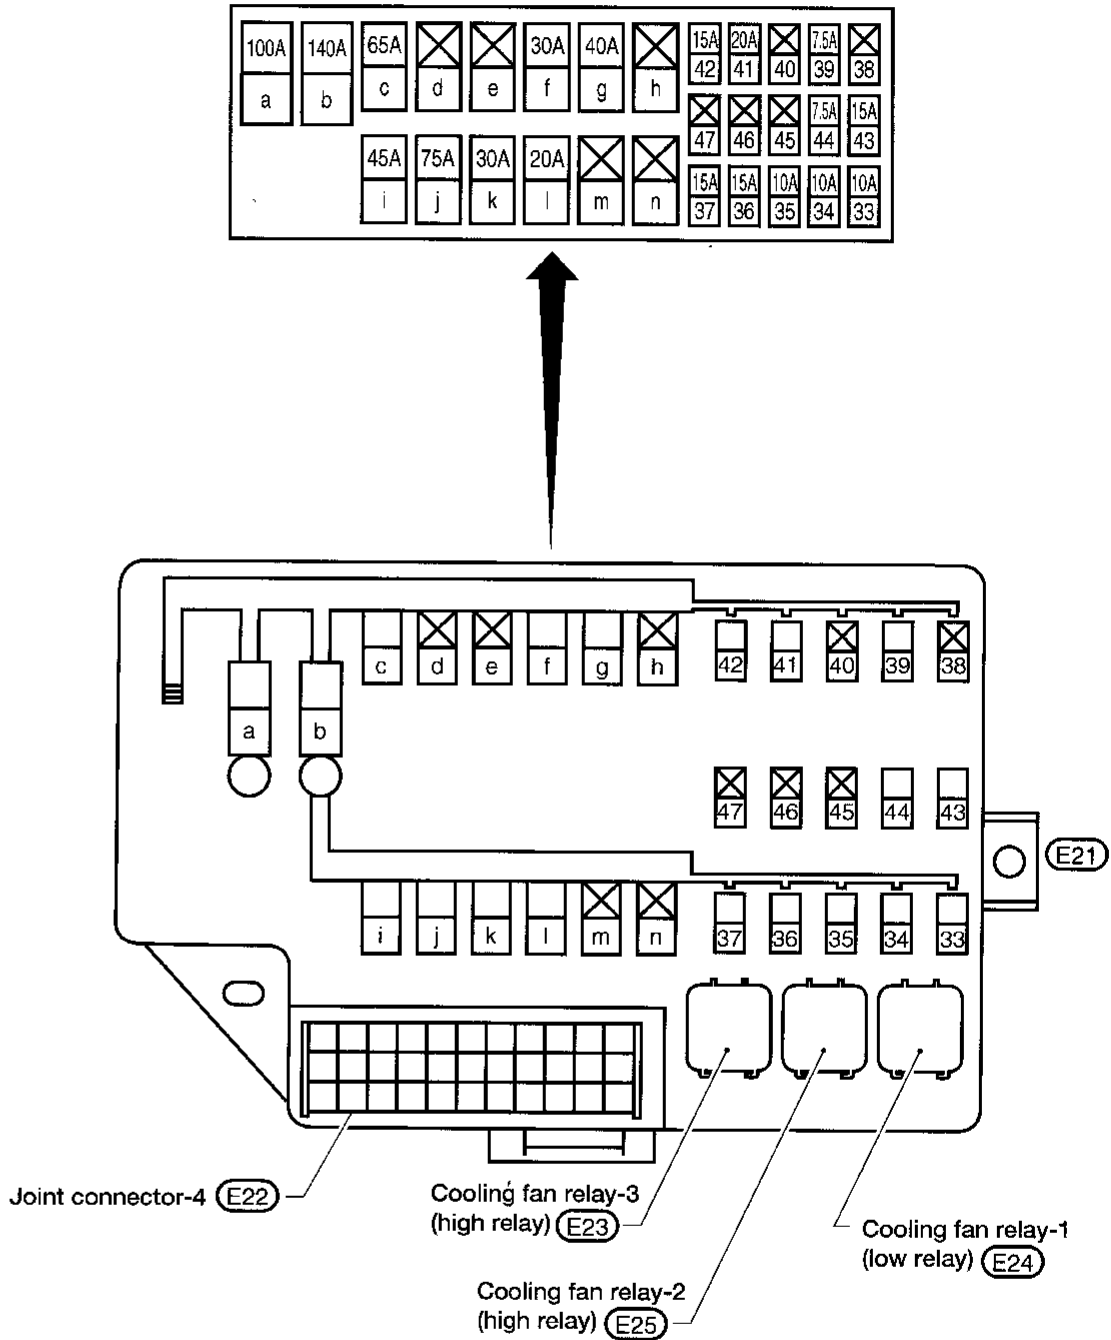



JOINT CONNECTOR

Terminal Arrangement



Terminal Arrangement

NDEL0147

 
 
J/C-1 (M14)





J/C-2 (M9)

  

J/C-3 (M20)

  

J/C-4 (E22)

  


ELECTRICAL UNITS

Terminal Arrangement

Terminal Arrangement

NDEL0148


ECM

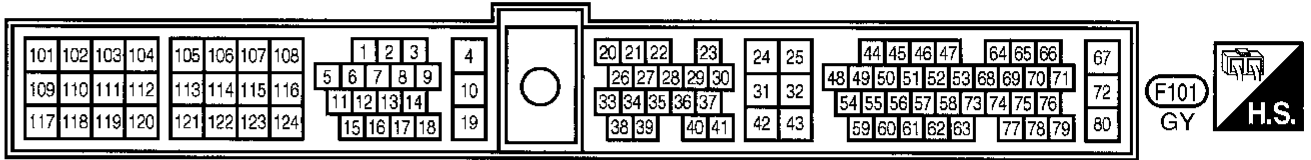

TCM (TRANSMISSION CONTROL MODULE)



ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

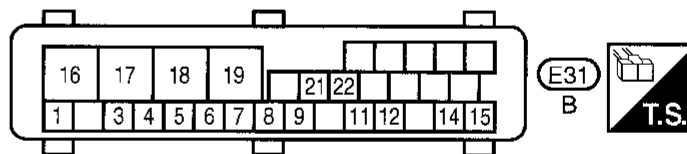

SMART ENTRANCE CONTROL UNIT

