Edition: August 2001 Revision: August 2001

Publication No. SM2E-1V41U0

NISSAN QUEST MODEL V41 SERIES

QUICK REFERENCE INDEX

GENERAL INFORMATION ————	GI
MAINTENANCE ————	MA
ENGINE MECHANICAL ————	EM
ENGINE LUBRICATION &COOLING SYSTEMS	LC
ENGINE CONTROL SYSTEM	EC
ACCELERATOR CONTROL, FUEL &EXHAUST SYSTEMS	FE
AUTOMATIC TRANSAXLE	AT
FRONT & REAR AXLE	AX
FRONT & REAR SUSPENSION ————	SU
BRAKE SYSTEM —	BR
STEERING SYSTEM	ST
RESTRAINT SYSTEM —————	RS
BODY & TRIM —	ВТ
HEATER & AIR CONDITIONER ————	на
STARTING & CHARGING SYSTEM———	SC
ELECTRICAL SYSTEM —————	EL
ALPHABETICAL INDEX ————	IDX

© 2001 NISSAN NORTH AMERICA, INC.

All rights reserved. No part of this Service Manual may be reproduced or stored in a retrieval system, or transmitted in any form, or by any means, electronic, mechanical, photocopying, recording or otherwise, without the prior written permission of Nissan North America, Inc., Gardena, California.

FOREWORD

This manual contains maintenance and repair procedures for the 2002 NISSAN QUEST.

In order to assure your safety and the efficient functioning of the vehicle, this manual should be read thoroughly. It is especially important that the PRECAUTIONS in the GI section be completely understood before starting any repair task.

All information in this manual is based on the latest product information at the time of publication. The right is reserved to make changes in specifications and methods at any time without notice.

IMPORTANT SAFETY NOTICE

The proper performance of service is essential for both the safety of the technician and the efficient functioning of the vehicle. The service methods in this Service Manual are described in such a manner that the service may be performed safely and accurately. Service varies with the procedures used, the skills of the technician and the tools and parts available. Accordingly, anyone using service procedures, tools or parts which are not specifically recommended by NISSAN must first be completely satisfied that neither personal safety nor the vehicle's safety will be jeopardized by the service method selected.





NISSAN PLEASE HELP MAKE THIS SERVICE MANUAL BETTER!

Your comments are important to NISSAN and will help us to improve our Service Manuals. Use this form to report any issues or comments you may have regarding our Service Manuals. Please print this form and type or write your comments below. Mail or fax to:

Nissan North America, Inc. Technical Service Information 39001 Sunrise Drive, P.O. Box 9200 Farmington Hills, MI USA 48331 FAX: (248) 488-3910

SERVICE MANUA	L: Model:	Year:					
PUBLICATION NO. (Please photocopy back cover):							
VEHICLE INFORM	MATION VIN:	Production Date:					
Please describe ar	ny issues or problems in detail:						
Page number(s)	Note: Please inc	clude a copy of each page, marked with your comments.					
If no, what page nu	mber(s)?Note: Please i	asy to use? (circle your answer) YES NO nclude a copy of each page, marked with your comments.					
_	n of the manual clear and easy to	, ,					
What information repairing custome		ervice Manuals to better support you in servicing or					
DATE:	YOUR NAME:	POSITION:					
DEALER:	DEALER NO.:	ADDRESS:					
CITY:	STATE/PROV./COUN	TRY: ZIP/POSTAL CODE:					

NOTES

TEST VALUE AND TEST LIMIT (GST ONLY — NOT APPLICABLE TO CONSULT-II)

The following is the information specified in Mode 6 of SAE J1979.

The test value is a parameter used to determine whether a system/circuit diagnostic test is "OK" or "NG" while being monitored by the ECM during self-diagnosis. The test limit is a reference value which is specified as the maximum or minimum value and is compared with the test value being monitored.

Items for which these data (test value and test limit) are displayed are the same as SRT code items.

These data (test value and test limit) are specified by Test ID (TID) and Component ID (CID) and can be displayed on the GST screen.

SRT item	Self-diagnostic test item	DTC	Test value (GST display)		Test limit	Conversion
		D0 400	TID 01H	CID 01H	Max.	1/128
CATALYST	Three way catalyst function	P0420 P0420	01H 02H	81H	Min.	1/120
EVAP SYSTEM	EVAP control system (Small leak)	P0420	05H	03H	Max.	1/128mm ²
		P1440	05H	03H	Max.	1/128mm ²
	EVAP control system purge flow monitoring	P1447	06H	83H	Min.	20mV
HO2S	Heated oxygen sensor 1	P0133	09H	04H	Max.	16ms
		P0131	0AH	84H	Min.	10mV
		P0130	0BH	04H	Max.	10mV
		P0132	0CH	04H	Max.	10mV
		P0134	0DH	04H	Max.	1s
	Heated oxygen sensor 2	P0139	19H	86H	Min.	10mV/500ms
		P0137	1AH	86H	Min.	10mV
		P0140	1BH	06H	Max.	10mV
		P0138	1CH	06H	Max.	10mV
HO2S HTR	Heated oxygen sensor 1 heater	P0135	29H	08H	Max.	20mV
		P0135	2AH	88H	Min.	20mV
	Heated oxygen sensor 2 heater	P0141	2DH	0AH	Max.	20mV
		P0141	2EH	8AH	Min.	20mV