

**H1**

**ALPHABETICAL INDEX**

## H2

## ALPHABETICAL INDEX

PART NAME	GROUP NO.	PART NAME	GROUP NO.
<b>A</b>			
ABSORBER, shock	39	Blank KEY	62
AB VALVE	2B	BLOCK, cylinder (1.6L)	1
Accelerator LINKAGE (L drive)	13	BLOCK, cylinder (2L)	1A
Accelerator LINKAGE (R drive)	12	Body outside VIEW	54
Accelerator WIRE (L drive)	13	Bottom COVER, transmission (1.6L)	31
Accelerator WIRE (R drive)	12	BRACKET KIT, fuel connector (1.6L)	8
ACCESSORIES	62	BRACKET KIT, fuel connector (2L)	8A
Air CLEANER (1.6L)	9	Brake DRUM	42
Air CLEANER (2L for "solex")	9A	BRAKE, front	40
Air CLEANER (2L "SU")	9B	Brake master CYLINDER (Single)	44
Air PUMP with pulley	2B	Brake master CYLINDER (Tandem)	44A
ALTERNATOR (Mitsubishi) (Emission control)	19A	Brake PEDAL	48
AMMETER	23	Brake PIPING (Single cylinder)	47
ANTENNA, radio	28B	BRAKE, rear	43
APRON, front	54	Bridge TUBE, brake	40
ARMATURE ass'y (1.6L)	20	BUMPER, front	54
ARMATURE ass'y (2L)	20A	BUMPER, rear	57A
ARM, idler	50	BUSHING, camshaft (1.3L)	1
ARM, knuckle	38	<b>C</b>	
ARM, steering gear	49, 49A	CABLE, hand brake	35
ARM, steering gear (R.B. type)	49B	CABLE, ventilator control	56A
Ash TRAY	56A	CAMSHAFT (1.6L)	4
AXLE, rear	42	CAMSHAFT (2L)	4A
<b>B</b>			
Back-up LAMP	28	CAP, distributor	18
BACK MIRROR, inside	56A	CARBURETOR (1.6L "SU")	8
BACK MIRROR, outside	55	CARBURETOR (2L "solex")	8A
Ball JOINT	38	CARBURETOR (2L "SU")	8B
BAR torsion, stabilizer	39	Carburetor REPAIR KIT (1.6L)	8
BATTERY	22B	CASE, rear AXLE	42
BEARING, crankshaft (1.6L)	3	CASE, transmission (1.6L)	31
BEARING, crankshaft (2L)	3A	CASE, transmission (2L)	31A
BEARING, front wheel	41	CHAIN, camshaft (1.6L)	4
BELT, air pump	2B	CHAIN, camshaft (2L)	4A
BELT, fan (1.6L)	15	Chain TENSIONER (1.6L)	4
BELT, fan (2L)	15A	Chain TENSIONER (2L)	4A
BELT, safety	60C	Chassis HARNES	22
		Check VALVE	2B
		Choke control WIRE (R drive)	12, 13
		Cigarette LIGHTER	22A
		CLAMP, spare tire	58

# H3

PART NAME	GROUP NO.	PART NAME	GROUP NO.
CLEANER air (2L "SU")	9B	DIODE SET (2L)	19A
CLOCK (Option)	28B	DISC, brake rear	43
CLUTCH	29	DISTRIBUTOR (Hitachi)	18
Clutch DISC	29	Door LOCK	61A
Clutch master CYLINDER	45	Door PANEL	61
Clutch operating CYLINDER	46		
Clutch PEDAL	48	<b>E</b>	
Clutch release BEARING	29	Electrical parts MOUNTING	21
Clutch SWITCH	2B	Electrical UNIT & SWITCH parts	22A
Companion FLANGE	37	EMBLEM, body side	55
CONDENSER, distributor	18	EMBLEM, hood	55
Connecting Rod (1.6L)	3	EMBLEM, radiator grille	54
Connecting Rod (2L)	3A	EMBLEM, rear panel	58
Console FITTING	56A	ENGINE (1.6L)	0
Console PANEL	56	ENGINE (2L)	0A
CONTACT SET	18	Engine GASKET kit (1.6L)	0
CONTROL, hood lock	55A	Engine GASKET kit (2L)	0A
Control LEVER, transmission	33	ENGINE MOUNTING	17
CONTROL, throttle	13A	Engine room HARNESS	22
CONTROL, transmission	33	Evaporative CONTROL	23
COVER, road wheel	41	Evaporative emission control DEVICE	10A
Cowl PANELS	55B	Exhaust emission CONTROL	2B
Cowl VENTILATOR	55B	Exhaust emission control DEVICE	
CRANKSHAFT (1.6L)	3	(U.S.A. & CANADA)	2B
CRANKSHAFT (2L)	3A	Exhaust MANIFOLD (1.6L)	5
CROSS MEMBER	52	Exhaust MANIFOLD (2L)	5A
Cross ROD hand brake	35	Exhaust TUBE	14, 14A
Cross ROD steering	50	Exhaust VALVE (1.6L)	4
Cylinder BLOCK (1.6L)	1	Exhaust VALVE (2L)	4A
Cylinder BLOCK (2L)	1A		
CYLINDER, brake master (Single)	44	<b>F</b>	
CYLINDER, brake master (Tandem)	44A	FAN (1.6L)	15
CYLINDER, brake rear wheel	43	FAN (2L)	15A
CYLINDER, clutch master	45	Fan BELT (1.6L)	15
CYLINDER, clutch operating	46	Fan BELT (2L)	15A
CYLINDER, front brake	40	FENDER, front	55
CYLINDER, lock set	61B	FENDER, rear	57A
		Flasher UNIT	22A
<b>D</b>		FIELD COIL (1.6L)	20
Differential gear CASE	37	FIELD COIL (2L)	20A
DIODE SET (1.6L)	19		

PART NAME	GROUP NO.	PART NAME	GROUP NO.
FITTING, console	56A	GAUGE, fuel tank (Exc. EVAPO)	11
Flexible SHAFT, speedometer	23	GAUGE, oil level (1.6L)	1
FLOAT, carburetor (1.6L)	8	GAUGE, oil level (2L)	1A
FLOAT, carburetor (2L "solex")	8A	GAUGES, combined	23
FLOAT, carburetor (2L "SU")	8B	Gear CARRIER	37
Floor TRIMMING	57	GEAR hypoid	37
Flow guide VALVE	2B	GEAR, steering	49, 49A
FLYWHEEL (1.6L)	3	GEAR, steering (R.B. type)	49B
FLYWHEEL (2L)	3A	GEAR, transmission (1.6L) (Warner)	32A
FITTING, console	56A	GEAR, transmission (1.6L)	
Fog LAMP	28	(Servo synchromesh)	32
Fog & Reverse LAMP	28	GEAR, transmission (2L)	
Fork ROD, transmission control	33	(Servo synchromesh)	32B
FRAME	52	GEAR, transmission (2L) (Warner)	32C
FRAME, windshield	56B	GLASS, back window	59
Front APRON	54	GLASS, door ventilator	61
Front BRAKE	40	GLASS, door window	61
Front BUMPER	54	GLASS, windshield	56B
Front FENDER	55	GLOVE BOX, floor	56A
Front HUB	41	GLOVE BOX instrument	56
Front parking & Turn signal LAMP	26	GRILLE, cowl top	55B
Front STABILIZER	39	GRILLE, radiator	54
Front suspension LINK	38		
Fuel connector BRACKET KIT		<b>H</b>	
(1.6L)	8	Hand brake CONTROL	34
FUEL connector BRACKET KIT		Hand brake LINKAGE	35
(2L "SU")	8B	Hard TOP	59
Fuel PIPING	11A	HEATER (Option)	28A
Fuel PUMP	10	Head LAMP	25
Fuel pump REPAIR KIT	10	Head REST	60C
Fuel STRAINER	10	HEAD, rotor	18
Fuel TANK (Exc. evapo)	11	Heater control CABLE	28A
Fuel TANK (Evapo)	10A	Heater MOTOR	28A
FUSE	22A	High tension CABLE	21
Fuse BLOCK	22A	HINGE, pillar	55
		HOOD	55
<b>G</b>		Hood LEDGE	55
GASKET kit, engine (1.6L)	0	Hood LOCK	55A
GASKET kit, engine (2L)	0A	HORN	22A
GASKET kit, valve regrind (1.6L)	0	Horn BUTTON	51
GASKET kit, valve regrind (2L)	0A	HOSE, radiator	16, 16A
GAUGE, fuel tank (EVAPO)	10A	HUB, front	41

# H4

PART NAME	GROUP NO.	PART NAME	GROUP NO.
Hypoid GEAR SET	37	<b>M</b>	
<b>I</b>		Magnetic SWITCH (1.6L)	20
IDLER, steering	50	Magnetic SWITCH (2L)	20A
Ignition COIL	21	MANIFOLD (1.6L)	5
Instrument HARNESS	22	MANIFOLD (2L)	5A
Instrument PANEL	56	Map LAMP	26B
INSULATOR, carburetor (1.6L)	5	MASK, radio aperture	28B
INSULATOR, carburetor (2L)	5A	MASTER CYLINDER brake (Single)	44
Intake MANIFOLD (1.6L)	5	MASTER CYLINDER, brake (Tandem)	44A
Intake MANIFOLD (2L)	5A	MASTER CYLINDER, clutch	45
Intake VALVE (1.6L)	4	METER, tube & oil pressure GAUGE	23
Intake VALVE (2L)	4A	Model NO. PLATE	62
<b>J</b>		MODULATOR, thermal	2B
JACK set	61C	MOUNTING, electrical parts	21
JOURNAL KIT	36	MOUNTING, engine	17
<b>K</b>		MOTOR, starter (1.6L)	20
Kit TOOL	61C	MOTOR, starter (2L)	20A
Knuckle ARM	38	MUFFLER	14, 14A
Knuckle SPINDLE	38	<b>N</b>	
<b>L</b>		Neutral SWITCH	2B
LAMP, rear	27, 27A	<b>O</b>	
Leaf SPRING, rear	53	Oil FILLER (1.6L)	2
License LAMP	28	Oil FILTER (1.6L)	7
LID trunk	58	Oil FILTER (2L)	7A
LINK, front suspension	38	Oil level GAUGE (1.6L)	1
LINKAGE, accelerator (L drive)	13	Oil level GAUGE (2L)	1A
LINKAGE, accelerator (R drive)	12	Oil PAN (1.6L)	1
LINKAGE, hand brake	35	Oil PAN (2L)	1A
LINKAGE, steering	50	Oil PUMP (1.6L)	6
LOCK, door	61A	Oil PUMP (2L)	6A
LOCK, glove box lid	56	Oil STRAINER (1.6L)	6
LOCK, steering	61B	Operating CYLINDER, clutch	46
LOCK, trunk lid	58	OUTSIDE, rear	57A
		Over flow TUBE (1.6L)	5
		OVERRIDER	54

PART NAME	GROUP NO.	PART NAME	GROUP NO.
<b>P</b>		Rear SUSPENSION	53
PAD, disc brake	40	REFLECTOR	27
PAD, instrument	56A	REGULATOR	58
PAINT	62	REGULATOR, door window	61A
PANEL, cowl	55B	Remote CONTROL, door	61
PANEL, door	61	REPAIR KIT, brake master cylinder (Single)	44
Parking & turn signal LAMP, front	26	REPAIR KIT, brake master cylinder (Tandem)	44A
Parts SWITCH	22A	REPAIR KIT, carburetor (1.6L)	8
Pillar HINGE	55	REPAIR KIT, clutch master cylinder	45
PINION & CLUTCH, starter motor (1.6L)	20	REPAIR KIT, clutch operating cylinder	46
PINION & CLUTCH, starter motor (2L)	20A	REPAIR KIT, fuel pump	10
PIPE, air gallery	2B	Reservoir TANK, radiator	16, 16A
PIPE, air injection	2B	REPAIR KIT, wheel cylinder	43
PIPING, brake (Single cylinder)	47	Reverse LAMP	28
PIPING, fuel	11A	Ring GEAR, flywheel (1.6L)	3
PISTON, engine (1.6L)	3	Ring GEAR, flywheel (2L)	3A
PISTON, engine (2L)	3A	RIM, head lamp	54
Piston RING (1.6L)	3	Road WHEEL	41
Piston RING (2L)	3A	ROD, hood support	55A
Propeller SHAFT	36	Rocker COVER (1.6L)	2
PULLEY, alternator (1.6L)	19	Rocker COVER (2L)	2A
PULLEY, alternator (2L)	19A	Rocker SHAFT (1.6L)	4
PULLEY, crankshaft (1.6L)	3	Room BACKSIDE view	59
PULLEY, crankshaft (2L)	3A	ROTOR ass'y (1.6L)	19
Push ROD (1.6L)	4	ROTOR ass'y (2L)	19A
<b>R</b>		Rotor HEAD	18
RADIO (Option)	28B	<b>S</b>	
RADIATOR	16, 16A	Safety BAR	60C
Radiator GRILLE	54	Safety BELT	60C
Rear AXLE	42	Sealed beam UNIT	25
Rear BRAKE	43	SEAT	60, 60A, 60B
Rear EXTENSION (1.6L)	31	SET CYLINDER (Waco type)	61B
Rear EXTENSION (2L)	31A	SET CYLINDER (Voss type)	61C
Rear FENDER	57A	SHAFT, crank (1.6L)	6
Rear LAMPS	27, 27A	SHAFT, crank (2L)	3A
Rear PANEL	58	SHAFT, flexible speedometer	23
REAR, outside	56	SHAFT, propeller	36

# H5

PART NAME	GROUP NO.	PART NAME	GROUP NO.
SHAFT, rear axle	42		
SHAFT, tachometer	23		
SHAFT, transmission (1.6L)	32		
SHAFT, transmission (2L)	32A		
SHAFT, trip reset	23		
SHELL, steering column	51		
Shock ABSORBER, front	39		
Shock ABSORBER, rear	53		
SHOE, rear brake	43		
Side marker LAMP (U.S.A. & CANADA)	26, 26A		
Side ROD	50		
SILL, body	57A		
SMOG DEVICE	2B		
Soft TOP	59		
Spark PLUG	21		
SPEEDOMETER	23		
Speedometer PINION (1.6L)	31		
Speedometer PINION (2L)	31A		
SPINDLE, driving oil pump (1.6L)	6		
SPINDLE, driving oil pump (2L)	6A		
SPINDLE, knuckle	38		
STABILIZER, front	39		
STATOR ass'y (1.6L)	19		
STATOR ass'y (2L)	19A		
Starter MOTOR (1.6L)	20		
Starter MOTOR (2L)	20A		
Steering GEAR	49, 49A		
Steering GEAR (R.B. type)	49B		
Steering LOCK	61B		
Steering WHEEL	51		
Stop & tail LAMP, rear	27		
STRAINER (1.6L)	6		
SUSPENSION, front (1)	38		
SUSPENSION, front (2)	39		
SUSPENSION, rear	53		
SUNVISOR	56B		
SWITCH	22A		
SWITCH, heater	28A		
SWITCH parts	22A		
SWITCH, reverse lamp (1.6L)	31		
SWITCH, reverse lamp (2L)	31A		

T	
TACHOMETER	23
TANK, fuel (Exc. evapo)	11
Tail & stop LAMP, rear	27
TANK, fuel	11
THERMOSTAT (1.6L)	2
THERMOSTAT (2L)	2A
Throttle CONTROL	13A
Throttle SHAFT (1.6L)	8
Throttle SHAFT (2L "solex")	8A
Throttle SHAFT (2L "SU")	8B
Tonneau COVER	59
TOOL KIT	61D
Torque ROD	53
Torsion BAR, stabilizer	39
Trunk LID	58
Transmission CASE (1.6L)	31
Transmission CASE (2L)	31A
Transmission CONTROL	33
TRANSMISSION & GASKET Kit	30
Transmission SHAFT & GEAR (1.6L) (Servo synchromesh)	32
Transmission SHAFT & GEAR (1.6L) (Warner)	32A
Transmission SHAFT & GEAR (2L) (Servo synchromesh)	32B
Transmission SHAFT & GEAR (2L) (Warner)	32C
TRIM, lock pillar	57
TRIM, wheel house	57
TRIMMING, cowl side	57
TRIMMING, console side	56A
TRIMMING, door	61
TRIMMING, floor	57
TRIMMING, parcel shelf	57
TRIMMING, sill panel	57
TRIMMING, trunk floor	58
TUBE, exhaust	14
TUBE, evapo control	2B
TUBE, evaporative emission control (Evapo)	10A

PART NAME	GROUP NO.	PART NAME	GROUP NO.
Turn signal LAMP, rear	27		
Turn signal & parking LAMP, front	26		
V			
Vacuum CONTROL	18		
Valve LIFTER (1.6L)	4		
Valve regrind GASKET kit (1.6L)	0		
Valve regrind GASKET kit (2L)	0A		
Valve rocker COVER (2L)	2A		
VENTILATOR	55B		
VENTILATOR, door window	61		
Voltage REGULATOR	21		
W			
Waist PANEL	57A, 58		
WASHER, windshield	24A		
Water PUMP (1.6L)	15		
Water PUMP (2L)	15A		
WEIGHT, governor	18		
WHEEL, road	41		
WHEEL steering	51		
Windshield GLASS	56B		
Windshield WASHER	24A		
Windshield WIPER	24		
Wiper ARM	24		
Wiper BLADE	24		
Wiper MOTOR	24		
WIPER, windshield	24		
WIRE, accelerator (D drive)	13		
WIRE, accelerator (R drive)	12		
WIRE, choke control (L drive)	13		
WIRE, choke control (R drive)	12		
WIRE, throttle control	13A		
WIRING	22		
Withdrawal LEVER	29		

*Install the best!*  
**GENUINE DATSUN PARTS**



Engineering Department Parts Division



**NISSAN MOTOR CO., LTD.**



Tokyo, Japan