

WT

SECTION

ROAD WHEELS & TIRES

A
B
C
D

WT

CONTENTS

REGULAR GRADE		
BASIC INSPECTION	3	
DIAGNOSIS AND REPAIR WORKFLOW	3	
Work Flow	3	
INSPECTION AND ADJUSTMENT	5	
TRANSMITTER WAKE UP OPERATION	5	
TRANSMITTER WAKE UP OPERATION : De- scription	5	
TRANSMITTER WAKE UP OPERATION : Spe- cial Repair Requirement	5	
ID REGISTRATION PROCEDURE	5	
ID REGISTRATION PROCEDURE : Description.....	5	
ID REGISTRATION PROCEDURE : Special Re- pair Requirement	5	
SYSTEM DESCRIPTION	8	
TPMS	8	
System Diagram	8	
System Description	8	
Component Parts Location	10	
Component Description	10	
DIAGNOSIS SYSTEM (BCM)	11	
COMMON ITEM	11	
COMMON ITEM : CONSULT-III Function (BCM - COMMON ITEM)	11	
AIR PRESSURE MONITOR	11	
AIR PRESSURE MONITOR : Diagnosis Descrip- tion	12	
AIR PRESSURE MONITOR : CONSULT-III Func- tion (BCM - AIR PRESSURE MONITOR)	13	
DTC/CIRCUIT DIAGNOSIS	15	
	C1704, C1705, C1706, C1707 LOW TIRE PRESSURE	15
	Description	15
	DTC Logic	15
	Diagnosis Procedure	15
	Special Repair Requirement	16
	C1708, C1709, C1710, C1711 TRANSMITTER	17
	DTC Logic	17
	Diagnosis Procedure	17
	Special Repair Requirement	19
	C1716, C1717, C1718, C1719 TRANSMITTER	20
	Description	20
	DTC Logic	20
	Diagnosis Procedure	20
	Special Repair Requirement	21
	C1729 VEHICLE SPEED SIGNAL	22
	Description	22
	DTC Logic	22
	Diagnosis Procedure	22
	Special Repair Requirement	22
	C1735 IGNITION SIGNAL	24
	Description	24
	DTC Logic	24
	Diagnosis Procedure	24
	Special Repair Requirement	24
	REMOTE KEYLESS ENTRY RECEIVER	26
	Description	26
	Component Function Check	26
	Diagnosis Procedure	26
	TIRE PRESSURE WARNING CHECK SWITCH	28
	Description	28
	Component Function Check	28

F
G
H
I
J
K
L
M
N
O
P

BASIC INSPECTION

DIAGNOSIS AND REPAIR WORKFLOW

Work Flow

INFOID:000000005569960

DETAILED FLOW

1. COLLECT THE INFORMATION FROM THE CUSTOMER

It is also important to clarify customer concerns before starting the inspection. Reproduce the symptom, and understand it fully. Interview the customer about the concerns carefully. In some cases, it is necessary to check the symptoms by driving the vehicle with the customer.

CAUTION:

Customers are not professionals. Never assume “maybe the customer means...” or “maybe the customer mentioned this symptom.

>> GO TO 2.

2. BASIC INSPECTION

1. Turn the ignition switch ON.

CAUTION:

Never start the engine.

2. Check the tire pressure for all wheels and adjust to the specified value. Refer to [WT-59, "Tire"](#).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Inspect or repair the tires or wheels.

3. CHECK LOW TIRE PRESSURE WARNING LAMP

Check low tire pressure warning lamp display.

Does not low tire pressure warning lamp turn OFF?

YES >> GO TO 4.

NO >> INSPECTION END

4. CRUISE TEST

Start the engine and drive the vehicle.

>> GO TO 5.

5. PERFORM SELF-DIAGNOSIS

 **With CONSULT-III**

Perform “SELF-DIAG RESULTS” in “AIR PRESSURE MONITOR” of “BCM”.

Is any DTC detected?

YES >> GO TO 7.

NO >> GO TO 6.

6. CHECK SYMPTOM

Perform trouble diagnosis for the applicable symptom. Refer to [WT-37, "Symptom Table"](#).

Is the cause of the malfunction detected?

YES >> GO TO 8.

NO >> GO TO 10.

7. CIRCUIT DIAGNOSIS

Inspect the malfunctioning system indicated by the DTC code that is detected during self-diagnosis. Refer to [BCS-62, "DTC Index"](#).

>> GO TO 8.

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[REGULAR GRADE]

8. REPAIR WORK

Repair or replace the malfunctioning part.

>> GO TO 9.

9. PERFORM SELF-DIAGNOSIS

1. Select "SELF-DIAG RESULTS" in "AIR PRESSURE MONITOR" of "BCM".
2. Touch "ERASE" on CONSULT-III screen to erase memory of the low tire pressure warning control unit.
3. Drive the vehicle.
4. Perform "SELF-DIAG RESULTS" in "AIR PRESSURE MONITOR" of "BCM".

Is any DTC detected?

- YES >> GO TO 7.
NO >> GO TO 10.

10. FINAL CHECK

1. Perform a cruise test.
2. Check that the low tire pressure warning lamp turn OFF.

Does the tire pressure warning lamp turn OFF?

- YES >> INSPECTION END
NO >> GO TO 2.

INSPECTION AND ADJUSTMENT
TRANSMITTER WAKE UP OPERATION

TRANSMITTER WAKE UP OPERATION : Description

INFOID:000000005253901

This procedure must be done after replacement of a transmitter, BCM, or rotation of wheels.

TRANSMITTER WAKE UP OPERATION : Special Repair Requirement


INFOID:000000005253902

1. TRANSMITTER WAKE-UP PROCEDURE

1. Turn the ignition switch ON.
2. Contact the transmitter activation tool (J-45295) (1) to the side of the tire at the location to the transmitter.
3. Press and hold the activation tool button while pushing the tool to the tire surface. (approximately for 5 seconds)

CAUTION:

Perform the wake-up procedure starting from the vehicle front left wheel, then repeat the procedure in the order of the front right wheel, rear right wheel, and rear left wheel.

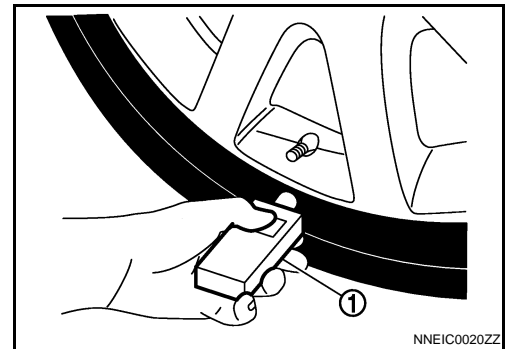

4. Check that the low tire pressure warning lamp blinks in the pattern shown as per the following. The pattern indicates that the transmitter wake-up procedure for the wheel is completed.

Low tire pressure warning lamp blinking timing		Activation tire position
ON OFF		a : 0.3 sec. b : 1.3 sec. Front LH
ON OFF		a : 0.3 sec. b : 1.3 sec. Front RH
ON OFF		a : 0.3 sec. b : 1.3 sec. Rear RH
ON OFF		a : 0.3 sec. b : 1.3 sec. Rear LH
ON OFF		a : 2 sec. b : 0.2 sec. All tires

5. Check that the turn signal lamps blink twice when the transmitter wake-up procedure for all wheels is completed.
6. Check that the low tire pressure warning lamp turns OFF, after the transmitter wake-up procedure is completed for all wheels and turns OFF.

Is the transmitter wake-up procedure completed?

YES >> Perform the transmitter ID registration procedure. Refer to [WT-5, "ID REGISTRATION PROCEDURE : Special Repair Requirement"](#).

NO >> Perform trouble diagnosis for the transmitter. Refer to [WT-17, "Diagnosis Procedure"](#).

ID REGISTRATION PROCEDURE

ID REGISTRATION PROCEDURE : Description

INFOID:000000005253903

This procedure must be done after replacing or rotating wheels, replacing transmitter or BCM.

ID REGISTRATION PROCEDURE : Special Repair Requirement

INFOID:000000005253904

1. TRANSMITTER ID REGISTRATION PROCEDURE

With CONSULT-III.

INSPECTION AND ADJUSTMENT

< BASIC INSPECTION >

[REGULAR GRADE]

1. Display the "WORK SUPPORT" screen and select "ID REGIST".

Is the transmitter activation tool (J-45295) used for the transmitter ID registration procedure?


- YES >> GO TO 2.
- NO >> GO TO 3.

2. TRANSMITTER ID REGISTRATION PROCEDURE (WITH THE TRANSMITTER ACTIVATION TOOL)

1. Turn the ignition switch ON.
2. Select the start button on the "ID REGIST" screen.
3. Contact the transmitter activation tool (J-45295) (1) to the side of the tire at the location to the transmitter.
4. Press and hold the activation tool button while pushing the tool to the tire surface. (approximately for 5 seconds)

CAUTION:

Perform the ID registration procedure starting from the vehicle front left wheel, then repeat the procedure in the order of the front right wheel, rear right wheel, and rear left wheel.

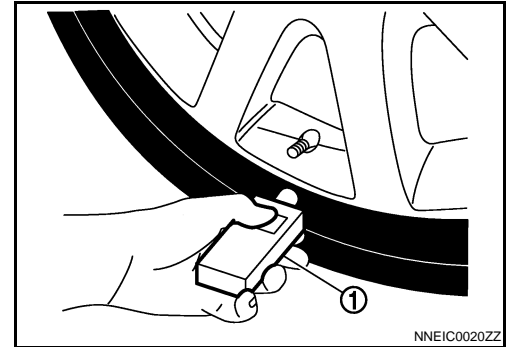

5. When ID registration is completed, check the following pattern at each wheel.

Se-quence	ID registration position	Turn signal lamp	CONSULT-III
1	Front left wheel	2 blinks	"Red" ↓ "Green"
2	Front right wheel		
3	Rear right wheel		
4	Rear left wheel		

6. After the ID registration procedure for all wheels is completed, press "END" to end ID registration, and check that ID registration for all wheels is completed.

Is the check result normal?

- YES >> ID registration END.
- NO >> Performs trouble-diagnosis of the Tire Pressure Monitoring System (TPMS). Refer to [WT-12. "AIR PRESSURE MONITOR : Diagnosis Description"](#).

3. TRANSMITTER ID REGISTRATION PROCEDURE (WITHOUT THE TRANSMITTER ACTIVATION TOOL)

1. Adjust the tire pressure for all wheels to match the list below.

Tire position	Tire pressure kPa (kg/cm ² , psi)
Front LH	240 (2.4, 35)
Front RH	220 (2.2, 31)
Rear RH	200 (2.0, 29)
Rear LH	180 (1.8, 26)

2. Drive the vehicle at a speed at more than 40 km/h (25 MPH) for 3 minutes or more, then perform the transmitter ID registration procedure.
3. After ID registration for all wheels is completed, press "END" to end ID registration.

ID registration position	CONSULT-III
Front LH	"Red" ↓ "Green"
Front RH	
Rear RH	
Rear LH	

4. Adjust the tire pressures for all wheels to the specified value. Refer to [WT-59. "Tire"](#).

INSPECTION AND ADJUSTMENT

< BASIC INSPECTION >

[REGULAR GRADE]

Is ID registrations for all wheels completed?

YES >> ID registration END.

NO >> Performs trouble-diagnosis of the Tire Pressure Monitoring System (TPMS). Refer to [WT-12. "AIR PRESSURE MONITOR : Diagnosis Description"](#).

A

B

C

D

WT

F

G

H

I

J

K

L

M

N

O

P


< SYSTEM DESCRIPTION >

SYSTEM DESCRIPTION

TPMS

System Diagram

INFOID:000000005253905

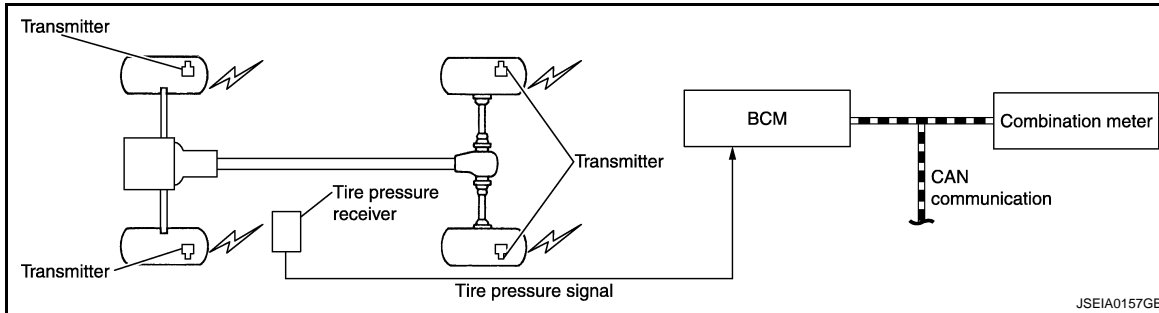

System Description

INFOID:000000005253906


DISCRIPTION

During driving, the TPMS (Tire Pressure Monitoring System) receives the signal transmitted from transmitter installed in each wheel, when the tire pressure becomes low. The BCM (Body Control Module) of this system has pressure judgment and trouble diagnosis functions. When the tire pressure monitoring system detects low inflation pressure or another unusual symptom, the low tire pressure warning lamps in the combination meter comes on.

TRANSMITTER


A sensor-transmitter (1) integrated with a valve is installed on a wheel (2), and transmits a detected air pressure signal by radio wave.

↔ : Outside

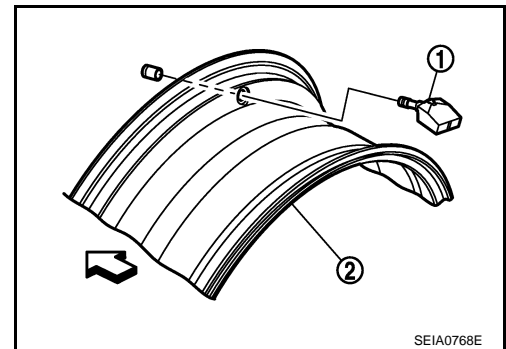

REMOTE KEYLESS ENTRY RECEIVER

The remote keyless entry receiver (tire pressure receiver) (1) receives the air pressure signal transmitted by the transmitter in each wheel.

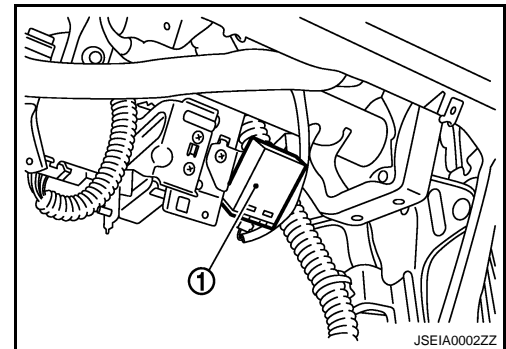


BCM (BODY CONTROL MODULE)

TPMS

[REGULAR GRADE]


< SYSTEM DESCRIPTION >

The BCM (1) reads the air pressure signal received by the remote keyless entry receiver (tire pressure receiver), and controls the low tire pressure warning lamp and the buzzer operations. It also has a judgment function to detect a system malfunction.

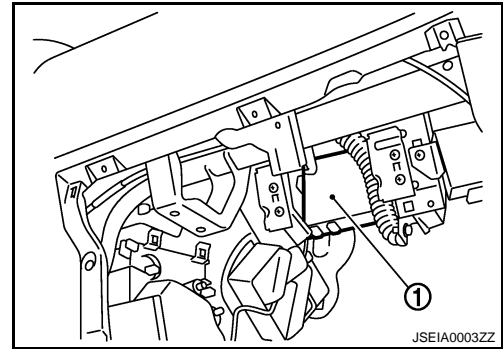

LOW TIRE PRESSURE WARNING LAMP

The combination meter receives tire pressure status from the BCM using CAN communication. When BCM judges from a transmitter signal that tire pressure is insufficient, BCM transmits a signal to combination meter through CAN communication. combination meter turns on the low tire pressure warning lamp mounted on the combination meter.

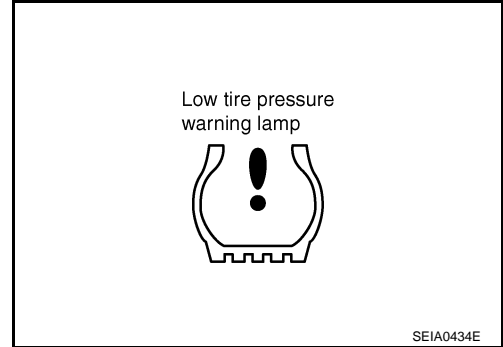

Low tire pressure warning lamp indication


Condition	Low tire pressure warning lamp
Less than 182.7 kPa (1.9 kg/cm ² , 26 psi) [NOTE]	ON
Low tire pressure warning system malfunction [Other diagnostic item]	Warning lamp blinks 1 min, then turns ON.

NOTE: Standard air pressure is for 230 kPa (2.3 kg/cm², 33 psi) vehicles.

TIRE PRESSURE WARNING CHECK SWITCH

The following item can be checked by grounding the tire pressure warning check switch (1) harness connector terminal.

- The low tire pressure warning lamp in the combination meter will blink according to the self-diagnostic results.

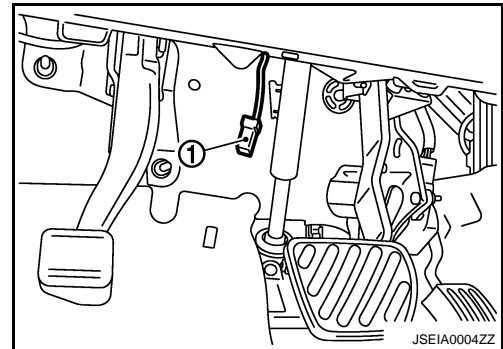

A
B
C
D
WT
F
G
H
I
J
K
L
M
N
O
P


TPMS

< SYSTEM DESCRIPTION >

[REGULAR GRADE]

Component Parts Location

INFOID:000000005253907

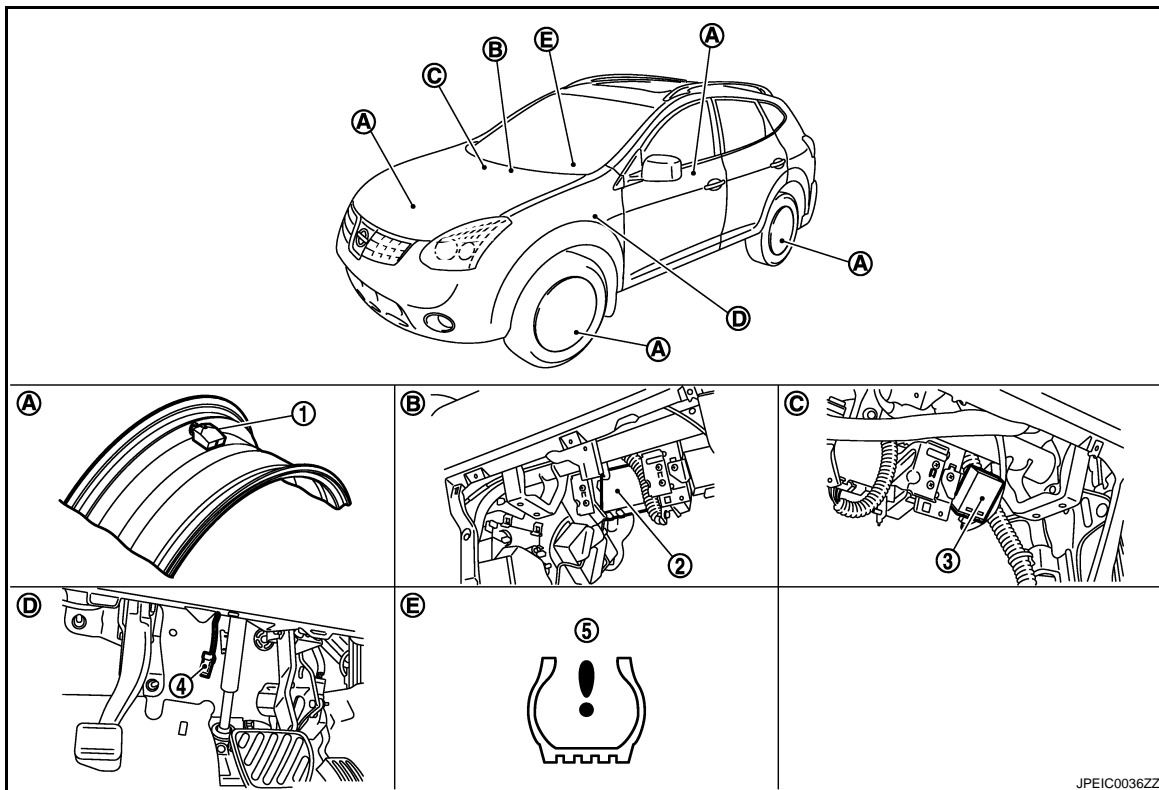

JPEIC0036ZZ

- | | | |
|-----------------------------------------|------------------------------------|--------------------------------------------------------------|
| 1. Transmitter | 2. BCM | 3. Remote keyless entry receiver
(Tire pressure receiver) |
| 4. Tire pressure warning check switch | 5. Low tire pressure warning lamp | |
| A. Wheel | B. Behind glove box cover assembly | C. Behind glove box cover assembly |
| D. Behind instrument driver lower cover | E. Inside combination meter | |

Component Description

INFOID:000000005253908

Component parts	Function
BCM (Body Control Module)	BCS-7, "System Description" .
Transmitter	WT-20, "Description" .
Remote keyless entry receiver (Tire pressure receiver)	WT-26, "Description" .
Tire pressure warning check switch	WT-28, "Description" .
Turn signal lamp	ID registration of each wheel has been completed, turn signal lamp flashes.
Combination meter	Controls a low tire pressure warning lamp, turn signal lamp, and buzzer by signals from the BCM.
Low tire pressure warning lamp	WT-30, "Description" !

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

[REGULAR GRADE]

DIAGNOSIS SYSTEM (BCM)

COMMON ITEM

COMMON ITEM : CONSULT-III Function (BCM - COMMON ITEM)

INFOID:000000005253909

APPLICATION ITEM

CONSULT-III can display each diagnostic item using the diagnostic test modes shown following.

Diagnosis mode	Function description
ECU Identification	BCM part number is displayed.
Self-Diagnostic Result	Displays the diagnosis results judged by BCM. Refer to BCS-62, "DTC Index" .
Data Monitor	BCM input/output signals are displayed.
Active Test	The signals used to activate each device are forcibly supplied from BCM.
Work Support	Changes the setting for each system function.
Configuration	<ul style="list-style-type: none"> Read and save the vehicle specification. Write the vehicle specification when replacing BCM.
CAN Diag Support Monitor	Monitors the reception status of CAN communication viewed from BCM.

SYSTEM APPLICATION

BCM can perform the following functions for each system.

NOTE:

It can perform the diagnosis modes except the following for all sub system selection items.

x: Applicable item

System	CONSULT-III sub system selection item	Diagnosis mode		
		Work Support	Data Monitor	Active Test
Door lock	DOOR LOCK	x	x	x
Rear window defogger	REAR DEFOGGER		x	x
Warning chime	BUZZER		x	x
Interior room lamp control	INT LAMP	x	x	x
Remote keyless entry system	MULTI REMOTE ENT	x	x	x
Exterior lamp	HEAD LAMP	x	x	x
Wiper and washer	WIPER	x	x	x
Turn signal and hazard warning lamps	FLASHER		x	x
Air conditioner	AIR CONDITONER		x	
Intelligent Key system	INTELLIGENT KEY		x	
Combination switch	COMB SW		x	
—	BCM	x		
Immobilizer	IMMU		x	x
Interior room lamp battery saver	BATTERY SAVER	x	x	x
Back door open	TRUNK		x	x
Vehicle security system	THEFT ALM	x	x	x
RAP system	RETAINED PWR	x	x	x
Signal buffer system	SIGNAL BUFFER		x	x
—	FUEL LID*			
TPMS	TPMS (AIR PRESSURE MONITOR)	x	x	x
Panic alarm system	PANIC ALARM			x

*: This item is displayed, but is not function.

AIR PRESSURE MONITOR

AIR PRESSURE MONITOR : Diagnosis Description

INFOID:000000005253910

DESCRIPTION

During driving, the TPMS receives the signal transmitted from the transmitter installed in each wheel, when the tire pressure becomes low. The control unit (BCM) of this system has pressure judgment and trouble diagnosis functions.

When the TPMS detects low inflation pressure or another unusual symptom, the low tire pressure warning lamps in the combination meter comes on.

SELF DIAGNOSTIC PROCEDURE (WITH CONSULT-III)


④ With CONSULT-III

Touch "SELF-DIAG RESULT" display shows malfunction experienced since the last erasing operation. Refer to [BCS-62, "DTC Index"](#).

SELF DIAGNOSTIC PROCEDURE (WITHOUT CONSULT-III)

⊗ Without CONSULT-III

To start the self-diagnostic results mode, ground terminal of the tire pressure warning check connector. The malfunction location is indicated by the low tire pressure warning lamp blinking.

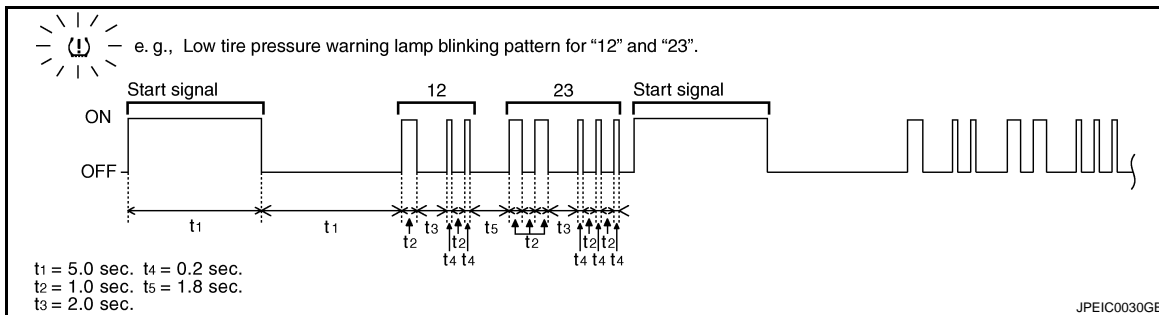

NOTE:

When the low tire pressure warning lamp blinks 5 Hz and continues repeating it, the system is normal.

Blinking pattern	Items	Diagnostic items detected when...	Check item
15	Tire pressure value (Front LH)	Front LH tire pressure drops to 182.7 kPa (1.9 kg/cm ² , 26 psi) or less. [NOTE]	-
16	Tire pressure value (Front RH)	Front RH tire pressure drops to 182.7 kPa (1.9 kg/cm ² , 26 psi) or less. [NOTE]	
17	Tire pressure value (Rear RH)	Rear RH tire pressure drops to 182.7 kPa (1.9 kg/cm ² , 26 psi) or less. [NOTE]	
18	Tire pressure value (Rear LH)	Rear LH tire pressure drops to 182.7 kPa (1.9 kg/cm ² , 26 psi) or less. [NOTE]	
21	Transmitter no data (Front LH)	Data from front LH transmitter can not be receive.	WT-17
22	Transmitter no data (Front RH)	Data from front RH transmitter can not be receive.	
23	Transmitter no data (Rear RH)	Data from Rear RH transmitter can not be receive.	
24	Transmitter no data (Rear LH)	Data from Rear LH transmitter can not be receive.	
35	Transmitter pressure data error (Front LH)	Air pressure data from front LH transmitter is malfunction.	WT-20
36	Transmitter pressure data error (Front RH)	Air pressure data from front RH transmitter is malfunction.	
37	Transmitter pressure data error (Rear RH)	Air pressure data from rear RH transmitter is malfunction.	
38	Transmitter pressure data error (Rear LH)	Air pressure data from rear LH transmitter is malfunction.	
52	Vehicle speed signal error	Speed signal is not detected.	WT-22
54	Ignition line	BCM ignition line is malfunction.	WT-24
No blinking	Tire pressure warning check switch	Tire pressure warning switch circuit is open.	-

NOTE: Standard air pressure is for 230 kPa (2.3 kg/cm², 33 psi) vehicles

< SYSTEM DESCRIPTION >

ERASE SELF-DIAGNOSIS

☐ With CONSULT-III

1. Perform applicable inspection of malfunctioning item and then repair or replace.
2. Turn ignition switch "ON" and select "SELF-DIAG RESULTS" mode for "AIR PRESSURE MONITOR" with CONSULT-III.
3. Touch "ERASE" on CONSULT-III screen to erase memory.

⊗ Without CONSULT-III

- In order to make it easier to find the cause of hard-to-duplicate malfunctions, malfunction information is stored into the control unit as necessary during use by the user. This memory is not erased no matter how many times the ignition switch is turned "ON" and "OFF".
- However, this information is erased by turning ignition switch "OFF" after performing self-diagnostic or by erasing the memory using the CONSULT-III.

AIR PRESSURE MONITOR : CONSULT-III Function (BCM - AIR PRESSURE MONITOR)

INFOID:000000005253911

WORK SUPPORT MODE

ID Read

The registered ID number is displayed.

ID Regist

Refer to [WT-5, "ID REGISTRATION PROCEDURE : Special Repair Requirement"](#).

SELF-DIAG RESULTS MODE

Operation Procedure

Refer to [BCS-62, "DTC Index"](#).

DATA MONITOR MODE

Screen of data monitor mode is displayed.

NOTE:

When malfunction is detected, CONSULT-III perform REAL-TIME DIAGNOSIS. Also, any malfunction detected while in this mode will be displayed at real time.

Display item list

Monitor	Condition	Specification
VEHICLE SPEED	Drive vehicle	Vehicle speed (km/h or MPH)
AIR PRESS FL AIR PRESS FR AIR PRESS RR AIR PRESS RL	<ul style="list-style-type: none"> • Drive vehicle for a few minutes. <li style="text-align: center;">or • Ignition switch ON and transmitter activation tool is transmitting activation signals. 	Tire pressure (kPa or Psi)
ID REGST FL ID REGST FR ID REGST RR ID REGST RL	Ignition switch ON	Registration ID: Done No registration: Yet
WARNING LAMP		Low tire pressure warning lamp ON: On Low tire pressure warning lamp OFF: Off
BUZZER		Buzzer in combination meter ON: On Buzzer in combination meter OFF: Off

NOTE:

Before performing the self-diagnosis, be sure to register the ID, or erase the actual malfunction location may be different from that displayed on CONSULT-III.

ACTIVE TEST MODE

NOTE:

Before performing the self-diagnosis, be sure to register the ID, or erase the actual malfunction may be different from that displayed on CONSULT-III.

TEST ITEM LIST

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

[REGULAR GRADE]

Test item	Content
WARNING LAMP	This test is able to check to check that the low tire pressure warning lamp turns on.
ID REGIST WARNING	This test is able to check to check that the buzzer sounds or the low tire pressure warning lamp turns on.
FLAT TIRE WARNING	This test is able to check to check that the buzzer sounds.
HORN	This test is able to check to check that the horn sounds.
FLASHER	This test is able to check to check that each turn signal lamp turns on.
RUNFLAT TIRE W/L	NOTE: This item is displayed, but cannot be use this item.

C1704, C1705, C1706, C1707 LOW TIRE PRESSURE

< DTC/CIRCUIT DIAGNOSIS >

[REGULAR GRADE]

DTC/CIRCUIT DIAGNOSIS

C1704, C1705, C1706, C1707 LOW TIRE PRESSURE

Description

INFOID:000000005527671

When the tire pressure monitoring system detects low inflation pressure, the low tire pressure warning lamps in the combination meter comes on.

DTC Logic

INFOID:000000005527672

DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
C1704	LOW PRESSURE FL	Front LH tire pressure drops to 182.7 kPa (1.9 kg/cm ² , 26 psi) or less. [NOTE]	Low tire pressure
C1705	LOW PRESSURE FR	Front RH tire pressure drops to 182.7 kPa (1.9 kg/cm ² , 26 psi) or less. [NOTE]	
C1706	LOW PRESSURE RR	Rear RH tire pressure drops to 182.7 kPa (1.9 kg/cm ² , 26 psi) or less. [NOTE]	
C1707	LOW PRESSURE RL	Rear LH tire pressure drops to 182.7 kPa (1.9 kg/cm ² , 26 psi) or less. [NOTE]	

NOTE:

Standard air pressure is for 230 kPa (2.3 kg/cm², 33 psi) vehicles.

DTC CONFIRMATION PROCEDURE

1. DTC REPRODUCTION PROCEDURE

Ⓜ With CONSULT-III

1. Turn the ignition switch ON.

CAUTION:

Never start the engine.

2. Check the tire pressure for all wheels and adjust to the specified value. Refer to [WT-59, "Tire"](#).
3. Perform "SELF-DIAG RESULTS" in "AIR PRESSURE MONITOR" of "BCM".

Is DTC "C1704", "C1705", "C1706", "C1707" detected?

- YES >> Perform trouble diagnosis. Refer to [WT-15, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000005527673

1. CHECK TIRE PRESSURE

Check the internal pressure of all wheels. Refer to [WT-59, "Tire"](#).

Is the inspection result normal?

- YES >> Replace the DTC-detected malfunctioning transmitter. Refer to [WT-56, "Exploded View"](#).
NO >> After adjusting the air pressure, GO TO 2.

2. CHECK TIRE PRESSURE SIGNAL

Ⓜ With CONSULT-III

1. Drive for 3 minutes at a speed of 40 km/h (25 MPH) or more, then drive normally for 10 minutes.
2. Perform "DATA MONITOR" in "AIR PRESSURE MONITOR" of "BCM".
3. Select "BCM" in "DATA MONITOR", and check that the tire pressures match the standard value.

C1704, C1705, C1706, C1707 LOW TIRE PRESSURE

< DTC/CIRCUIT DIAGNOSIS >

[REGULAR GRADE]

Monitor item	Condition	Displayed value
AIR PRESS FL	Drive for 3 minutes at a speed of 40 km/h (25 MPH) or more, then drive normally for 10 minutes.	Internal pressure of tires
AIR PRESS FR		
AIR PRESS RR		
AIR PRESS RL		

CAUTION:

Stop the vehicle and within 5 minutes, use “DATA MONITOR” in “AIR PRESSURE MONITOR” of “BCM” to display the tire pressure for all wheels.

Is the inspection result normal?

YES >> Inspect or repair the tires or wheels and adjust the tire pressure to the specification.

NO >> GO TO 1.

Special Repair Requirement

INFOID:000000005527674

1.CHECK TIRE PRESSURE

Check all tires for tire pressures. Refer to [WT-59, "Tire"](#).

Does all tire pressure data meet the specification?

YES >> GO TO 2.

NO >> Inspect or repair the tires or wheels and adjust the tire pressure to the specification.

2.PERFORM ID REGISTRATION

Perform ID registration. Refer to [WT-5, "ID REGISTRATION PROCEDURE : Special Repair Requirement"](#).

>> END

C1708, C1709, C1710, C1711 TRANSMITTER

< DTC/CIRCUIT DIAGNOSIS >

[REGULAR GRADE]

C1708, C1709, C1710, C1711 TRANSMITTER

DTC Logic

INFOID:00000000527675

DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
C1708	[NO DATA] FL	Tire pressure data signal from the front left wheel transmitter cannot be detected.	<ul style="list-style-type: none">• Harness or connector (Tire pressure receiver, BCM)• ID registration is not finished• Transmitter malfunction• BCM malfunction
C1709	[NO DATA] FR	Tire pressure data signal from the front right wheel transmitter cannot be detected.	
C1710	[NO DATA] RR	Tire pressure data signal from the rear right wheel transmitter cannot be detected.	
C1711	[NO DATA] RL	Tire pressure data signal from the rear left wheel transmitter cannot be detected.	

DTC CONFIRMATION PROCEDURE

1. DTC REPRODUCTION PROCEDURE

Ⓜ With CONSULT-III

1. Drive for 3 minutes at a speed of 40 km/h (25 MPH) or more, then drive normally for 10 minutes.
2. Perform "SELF-DIAG RESULTS" in "AIR PRESSURE MONITOR" of "BCM".

Is DTC "C1708", "C1709", "C1710", "C1711" detected?

- YES >> Perform trouble diagnosis. Refer to [WT-17, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:00000000527676

1. CHECK TIRE PRESSURE SIGNAL

Ⓜ With CONSULT-III

1. Drive for 3 minutes at a speed of 40 km/h (25 MPH) or more, then drive normally for 10 minutes.
2. Perform "DATA MONITOR" in "AIR PRESSURE MONITOR" of "BCM".
3. Select "BCM" in "DATA MONITOR", and check that the tire pressures match the standard value.

Monitor item	Condition	Displayed value
AIR PRESS FL	Drive for 3 minutes at a speed of 40 km/h (25 MPH) or more, then drive normally for 10 minutes.	Internal pressure of tires
AIR PRESS FR		
AIR PRESS RR		
AIR PRESS RL		

CAUTION:

Stop the vehicle and within 5 minutes, use "DATA MONITOR" in "AIR PRESSURE MONITOR" of "BCM" to display the tire pressure for all wheels.

Is a tire pressure of 0 kPa (0 Psi) displayed for all wheels?

- YES >> GO TO 2.
NO >> GO TO 5.

2. CHECK HARNESS BETWEEN BCM AND REMOTE KEYLESS ENTRY RECEIVER (TIRE PRESSURE RECEIVER)

1. Turn the ignition switch OFF.
2. Disconnect BCM harness connector and remote keyless entry receiver (tire pressure receiver) harness connector.
3. Check the continuity between BCM harness connector and remote keyless entry receiver (tire pressure receiver) harness connector.

C1708, C1709, C1710, C1711 TRANSMITTER

< DTC/CIRCUIT DIAGNOSIS >

[REGULAR GRADE]

BCM		Remote keyless entry receiver (Tire pressure receiver)		Continuity
Connector	Terminal	Connector	Terminal	
M65	18	M91	1	Existed
	19		4	
	20		2	

4. Check the continuity between BCM harness connector and ground.

BCM		—	Continuity
Connector	Terminal		
M65	18	Ground	Not existed
	19		
	20		

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace damaged parts.

3. CHECK REMOTE KEYLESS ENTRY RECEIVER (TIRE PRESSURE RECEIVER) POWER SUPPLY CIRCUIT

1. Connect the BCM harness connector.

2. Turn the ignition switch ON.

CAUTION:

Never start the engine.

3. Check the voltage between the BCM harness connector and ground.

BCM		—	Voltage
Connector	Terminal		
M65	18	Ground	5 V

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace damaged parts.

4. CHECK REMOTE KEYLESS ENTRY RECEIVER (TIRE PRESSURE RECEIVER)

Check remote keyless entry receiver (tire pressure receiver). Refer to [WT-26. "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 5.

NO >> Replace remote keyless entry receiver (tire pressure receiver). Refer to [WT-58. "Removal and Installation"](#).

5. CHECK ID REGISTRATION

Perform ID registration of all transmitters. Refer to [WT-5. "ID REGISTRATION PROCEDURE : Special Repair Requirement"](#).

Can ID registration of all transmitters be completed?

YES >> GO TO 6.

NO >> Replace transmitter. Refer to [WT-56. "Exploded View"](#).

6. CHECK TIRE PRESSURE MONITORING SYSTEM

Ⓟ With CONSULT-III

1. Drive at a speed of 40 km/h (25 MPH) or more for several minutes without stopping.

2. Perform "DATA MONITOR" in "AIR PRESSURE MONITOR" of "BCM".

3. Select "BCM" in "DATA MONITOR", and check that the tire pressures match the standard value.

C1708, C1709, C1710, C1711 TRANSMITTER

< DTC/CIRCUIT DIAGNOSIS >

[REGULAR GRADE]

Monitor item	Condition	Displayed value
AIR PRESS FL	Drive at a speed of 40 km/h (25 MPH) or more, for several minutes without stopping.	Internal pressure of tires
AIR PRESS FR		
AIR PRESS RR		
AIR PRESS RL		

CAUTION:

Stop the vehicle and within 15 minutes, use "DATA MONITOR" in "AIR PRESSURE MONITOR" of "BCM" to read the tire pressure for all wheels.

Is the inspection result normal?

YES >> Replace the DTC-detected malfunctioning transmitter. Refer to [WT-56, "Exploded View"](#).

NO >> Replace BCM. Refer to [BCS-67, "Exploded View"](#).

Special Repair Requirement

INFOID:000000005529529

WT

1. CHECK TIRE PRESSURE

Check all tires for tire pressures. Refer to [WT-59, "Tire"](#).

Does all tire pressure data meet the specification?

YES >> GO TO 2.

NO >> Inspect or repair the tires or wheels and adjust the tire pressure to the specification.

2. PERFORM ID REGISTRATION

Perform ID registration. Refer to [WT-5, "ID REGISTRATION PROCEDURE : Special Repair Requirement"](#).

>> END

C1716, C1717, C1718, C1719 TRANSMITTER

< DTC/CIRCUIT DIAGNOSIS >

[REGULAR GRADE]

C1716, C1717, C1718, C1719 TRANSMITTER

Description

INFOID:00000000525304

The transmitter integrated with a valve is installed on a wheel, and transmits a detected tire pressure signal by radio wave.

DTC Logic

INFOID:00000000525305

DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible case
C1716	[PRESSDATA ERR] FL	Malfunction in the tire pressure data from the front left wheel transmitter.	<ul style="list-style-type: none">• ID registration is not finished• Transmitter malfunction
C1717	[PRESSDATA ERR] FR	Malfunction in the tire pressure data from the front right wheel transmitter.	
C1718	[PRESSDATA ERR] RR	Malfunction in the tire pressure data from the rear right wheel transmitter.	
C1719	[PRESSDATA ERR] RL	Malfunction in the tire pressure data from the rear left wheel transmitter.	

DTC CONFIRMATION PROCEDURE

1. DTC REPRODUCTION PROCEDURE

Ⓟ With CONSULT-III

1. Turn the ignition switch ON.

CAUTION:

Never start the engine.

2. Check the tire pressure for all wheels and adjust to the specified value. Refer to [WT-59, "Tire"](#).
3. Perform "SELF-DIAG RESULTS" in "AIR PRESSURE MONITOR" of "BCM".

Is DTC "C1716", "C1717", "C1718", "C1719" detected?

- YES >> Perform trouble diagnosis. Refer to [WT-20, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:00000000525306

1. CHECK TIRE PRESSURE

Check the internal pressure of all wheels. Refer to [WT-59, "Tire"](#).

Is the inspection result normal?

- YES >> Replace the DTC-detected malfunctioning transmitter. Refer to [WT-56, "Exploded View"](#).
NO >> After adjusting the tire pressure, GO TO 2.

2. CHECK TIRE PRESSURE SIGNAL

Ⓟ With CONSULT-III

1. Check and adjust the tire pressure for all wheels. Refer to [WT-59, "Tire"](#).
2. Perform transmitter ID registration for all wheels. Refer to [WT-5, "ID REGISTRATION PROCEDURE : Special Repair Requirement"](#).
3. Drive for 3 minutes at a speed of 40 km/h (25 MPH) or more, then drive normally for 10 minutes.
4. Perform "DATA MONITOR" in "AIR PRESSURE MONITOR" of "BCM".
5. Select "BCM" in "DATA MONITOR", and check that the tire pressures match the standard value.

CAUTION:

Stop the vehicle and within 15 minutes, use "DATA MONITOR" in "AIR PRESSURE MONITOR" of "BCM" to read the tire pressure for all wheels.

6. Check that "DATA MONITOR" displays tire pressure of 438.60 kPa (4.47 kg/cm², 63.60 Psi).

Is the inspection 438.60 kPa (4.47 kg/cm², 63.60 Psi)?

- YES >> Replace transmitter the tire pressure 438.60 kPa (4.47 kg/cm², 63.60 Psi) displayed. Refer to [WT-56, "Exploded View"](#).

C1716, C1717, C1718, C1719 TRANSMITTER

< DTC/CIRCUIT DIAGNOSIS >

[REGULAR GRADE]

NO >> GO TO 1.

Special Repair Requirement

INFOID:00000000529530

1.CHECK TIRE PRESSURE

Check all tires for tire pressures. Refer to [WT-59, "Tire"](#).

Does all tire pressure data meet the specification?

YES >> GO TO 2.

NO >> Inspect or repair the tires or wheels and adjust the tire pressure to the specification.

2.PERFORM ID REGISTRATION

Perform ID registration. Refer to [WT-5, "ID REGISTRATION PROCEDURE : Special Repair Requirement"](#).

>> END

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

WT

C1729 VEHICLE SPEED SIGNAL

[REGULAR GRADE]

< DTC/CIRCUIT DIAGNOSIS >

C1729 VEHICLE SPEED SIGNAL

Description

INFOID:00000000527681

BCM detects no vehicle speed signal.

DTC Logic

INFOID:00000000527682

DTC DETECTION LOGIC

DTC number	Trouble diagnosis name	DTC detecting condition	Possible case
C1729	VHCL SPEED SIG ERR	Vehicle speed signal not detected.	<ul style="list-style-type: none">CAN communication errorCombination meter malfunction

DTC CONFIRMATION PROCEDURE

1. DTC REPRODUCTION PROCEDURE

Ⓟ With CONSULT-III

- Drive for several minutes at a speed of 40 km/h (25 MPH) or more, then stop the vehicle.
- Perform "SELF-DIAG RESULTS" in "AIR PRESSURE MONITOR" of "BCM".

Is DTC "C1729" detected?

- YES >> Perform trouble diagnosis. Refer to [WT-22, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:00000000527683

1. PERFORM COMBINATION METER SELF-DIAGNOSIS

Ⓟ With CONSULT-III

Perform "SELF-DIAG RESULTS" of "METER/M&A".

Is any DTC detected?

- YES >> Check the DTC. Refer to [MWI-67, "DTC Index"](#).
NO >> GO TO 2.

2. PERFORM SELF-DIAGNOSIS

Ⓟ With CONSULT-III

Perform "SELF-DIAG RESULTS" in "AIR PRESSURE MONITOR" of "BCM".

Is DTC "C1729" detected?

- YES >> Replace BCM. Refer to [WT-11, "COMMON ITEM : CONSULT-III Function \(BCM - COMMON ITEM\)"](#).
NO >> GO TO 3.

3. CHECK INFORMATION

Ⓟ With CONSULT-III

- Perform "DATA MONITOR" in "AIR PRESSURE MONITOR" of "BCM".
- Select "BCM" in "DATA MONITOR", and check the input/output values. Refer to [BCS-42, "Reference Value"](#).

Is the inspection result normal?

- YES >> Check pin terminal and connection of each harness connector for malfunctioning conditions.
NO >> Replace BCM. Refer to [BCS-67, "Exploded View"](#).

Special Repair Requirement

INFOID:00000000529531

1. CHECK TIRE PRESSURE

Check all tires for tire pressures. Refer to [WT-59, "Tire"](#).

Does all tire pressure data meet the specification?

- YES >> GO TO 2.

C1729 VEHICLE SPEED SIGNAL

< DTC/CIRCUIT DIAGNOSIS >

[REGULAR GRADE]

NO >> Inspect or repair the tires or wheels and adjust the tire pressure to the specification.

2.PERFORM ID REGISTRATION

Perform ID registration. Refer to [WT-5, "ID REGISTRATION PROCEDURE : Special Repair Requirement"](#).

>> END

A
B
C
D
WT
F
G
H
I
J
K
L
M
N
O
P

C1735 IGNITION SIGNAL

< DTC/CIRCUIT DIAGNOSIS >

[REGULAR GRADE]

C1735 IGNITION SIGNAL

Description

INFOID:000000005525288

The BCM monitors the IGN ON signal on the CAN line and compares it to its direct IGN ON signal. When these two signals do not match, the BCM sets C1735.

DTC Logic

INFOID:000000005525289

DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible case
C1735	IGNITION SIGNAL LINE - BCM/TPMS	BCM has detected a mismatch between IGN ON signals.	<ul style="list-style-type: none">CAN communication errorBCM malfunction

DTC CONFIRMATION PROCEDURE

1.CHECK SELF-DIAGNOSTIC RESULTS

Perform "SELF-DIAG RESULTS" in "AIR PRESSURE MONITOR" of "BCM".

Is DTC "C1735" detected?

- YES >> Perform trouble diagnosis. Refer to [WT-24, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000005525290

1.CHECK IGNITION SIGNAL

ⓂWith CONSULT-III

- Perform "DATA MONITOR" of "BCM".
- Select "BCM" in "DATA MONITOR", and check the "IGN SW CAN". Refer to [BCS-42, "Reference Value"](#).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Perform CAN diagnosis. Refer to [LAN-26, "CAN System Specification Chart"](#).

2.CHECK POWER SUPPLY CIRCUIT

Check BCM power supply circuit. Refer to [WT-32, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Repair or replace damaged parts.

3.CHECK SELF-DIAGNOSTIC RESULTS

ⓂWith CONSULT-III

- Drive for 3 minutes at a speed of 40 km/h (25 MPH) or more, then drive normally for 10 minutes.
- Perform "SELF-DIAG RESULTS" in "AIR PRESSURE MONITOR" of "BCM".

Is DTC "C1735" detected?

- YES >> Replace BCM. Refer to [BCS-67, "Exploded View"](#).
NO >> INSPECTION END

Special Repair Requirement

INFOID:000000005529532

1.CHECK TIRE PRESSURE

Check all tires for tire pressures. Refer to [WT-59, "Tire"](#).

Does all tire pressure data meet the specification?

- YES >> GO TO 2.
NO >> Inspect or repair the tires or wheels and adjust the tire pressure to the specification.

2.PERFORM ID REGISTRATION

Perform ID registration. Refer to [WT-5, "ID REGISTRATION PROCEDURE : Special Repair Requirement"](#).

C1735 IGNITION SIGNAL

< DTC/CIRCUIT DIAGNOSIS >

[REGULAR GRADE]

>> END

A

B

C

D

WT

F

G

H

I

J

K

L

M

N

O

P

REMOTE KEYLESS ENTRY RECEIVER

< DTC/CIRCUIT DIAGNOSIS >

[REGULAR GRADE]

REMOTE KEYLESS ENTRY RECEIVER

Description

INFOID:000000005529548

The remote keyless entry receiver (tire pressure receiver) receives the air pressure signal transmitted by the transmitter in each wheel.

Component Function Check

INFOID:000000005529538

1. TIRE PRESSURE MONITORING SYSTEM OPERATION

Ⓟ With CONSULT-III

1. Drive for 3 minutes at a speed of 40 km/h (25 MPH) or more, then drive normally for 10 minutes.
2. Perform "DATA MONITOR" in "AIR PRESSURE MONITOR" of "BCM".
3. Select "BCM" in "DATA MONITOR", and check that the tire pressures match the standard value.

Monitor item	Condition	Displayed value
AIR PRESS FL	Drive for 3 minutes at a speed of 40 km/h (25 MPH) or more, then drive normally for 10 minutes.	Internal pressure of tires
AIR PRESS FR		
AIR PRESS RR		
AIR PRESS RL		

CAUTION:

Stop the vehicle and within 5 minutes, use "DATA MONITOR" in "AIR PRESSURE MONITOR" of "BCM" to display the tire pressure for all wheels.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Perform trouble diagnosis. Refer to [WT-26, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000005529539



1. CHECK REMOTE KEYLESS ENTRY RECEIVER (TIRE PRESSURE RECEIVER) SIGNAL

1. Turn the ignition switch ON.

CAUTION:

Never start the engine.

2. Check remote keyless entry receiver (tire pressure receiver) connector and ground signal with oscilloscope.

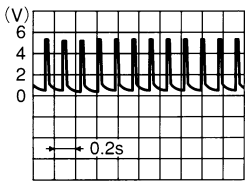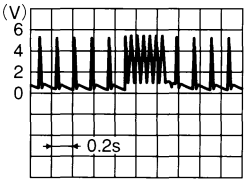Remote keyless entry receiver (Tire pressure receiver)		—	Condition	Voltage (Approx.)
Connector	Terminal			
M91	2	Ground	Stand by state	 <p>OCC3881D</p>
			When receiving the signal from the transmitter	 <p>OCC3880D</p>

Is the inspection result normal?

REMOTE KEYLESS ENTRY RECEIVER

[REGULAR GRADE]

< DTC/CIRCUIT DIAGNOSIS >

- YES >> INSPECTION END
- NO >> GO TO 2.

2. CHECK REMOTE KEYLESS ENTRY RECEIVER (TIRE PRESSURE RECEIVER) INPUT VOLTAGE

1. Disconnect remote keyless entry receiver (tire pressure receiver) connector.
2. Check voltage between remote keyless entry receiver (tire pressure receiver) connector and ground.

Remote keyless entry receiver (Tire pressure receiver)		—	Voltage (Approx.)
Connector	Terminal		
M91	4	Ground	5.0 V

Is the inspection result normal?

- YES >> GO TO 3.
- NO >> Repair or replace damaged parts.

3. CHECK REMOTE KEYLESS ENTRY RECEIVER (TIRE PRESSURE RECEIVER) GROUND CIRCUIT

1. Disconnect BCM harness connector.
2. Check continuity between BCM harness connector and remote keyless entry receiver (tire pressure receiver) connector.

BCM		Remote keyless entry receiver (Tire pressure receiver)		Continuity
Connector	Terminal	Connector	Terminal	
M65	18	M91	1	Existed

3. Check continuity between BCM harness connector and ground.

BCM		—	Continuity
Connector	Terminal		
M65	18	Ground	Not existed

Is the inspection result normal?

- YES >> GO TO 4.
- NO >> Repair or replace damaged parts.

4. CHECK BCM CIRCUIT

Inspect the BCM circuit. Refer to [WT-32. "Diagnosis Procedure"](#).

Is the BCM circuit normal?

- YES >> Replace remote keyless entry receiver (tire pressure receiver). Refer to [WT-58. "Removal and Installation"](#).
- NO >> Replace BCM. Refer to [BCS-67. "Exploded View"](#).

TIRE PRESSURE WARNING CHECK SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[REGULAR GRADE]

TIRE PRESSURE WARNING CHECK SWITCH

Description

INFOID:000000005529549


The following item can be checked by grounding the tire pressure warning check switch harness connector terminal.

- The low tire pressure warning lamp in the combination meter blink according to the self-diagnostic results.

NOTE:

If low tire pressure warning lamp blinks below, the system is normal.

- This mode shows transmitter status is in OFF-mode.
Perform transmitter wake up operation. Refer to [WT-5, "TRANSMITTER WAKE UP OPERATION : Special Repair Requirement"](#).

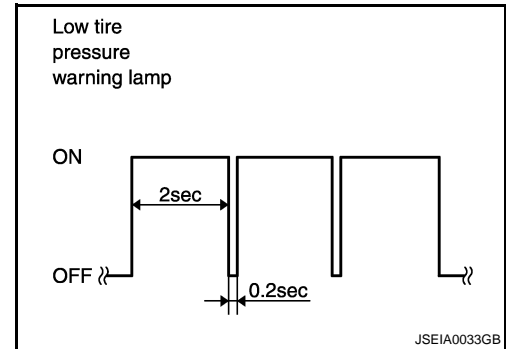

Component Function Check

INFOID:000000005529540

1. CHECK THE ILLUMINATION OF THE LOW TIRE PRESSURE WARNING LAMP

1. Turn the ignition switch ON.
CAUTION:
Never start the engine.
2. Short-circuit the tire pressure warning check switch connector terminal to the ground.
3. Check that the low tire pressure warning lamp blinking.

Is inspection result normal?

- YES >> INSPECTION END
- NO >> Perform diagnosis. Refer to [WT-28, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000005529541

1. CHECK TIRE PRESSURE WARNING CHECK SWITCH SIGNAL

1. Turn the ignition switch ON.
CAUTION:
Never start the engine.
2. Check the voltage between tire pressure warning check switch connector and ground.

Tire pressure warning check switch		—	Condition	Voltage (Approx.)
Connector	Terminal			
M92	1	Ground	Ignition switch OFF	

Is the inspection result normal?

- YES >> Replace BCM. Refer to [BCS-67, "Exploded View"](#).
- NO >> GO TO 2.

2. CHECK TIRE PRESSURE WARNING CHECK SWITCH CIRCUIT

1. Turn the ignition switch OFF.

TIRE PRESSURE WARNING CHECK SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[REGULAR GRADE]

2. Disconnect BCM harness connector
3. Check the continuity between BCM harness connector and tire pressure warning check switch connector.

BCM		Tire pressure warning check switch		Continuity
Connector	Terminal	Connector	Terminal	Existed
M65	15	M92	1	

4. Check the continuity between BCM harness connector and ground.

BCM		—	Continuity
Connector	Terminal		
M65	15	Ground	Not existed

Is the inspection result normal?

- YES >> Check BCM pin terminals for damage or loose connection with harness connector. If any items are damaged, repair or replace damaged parts. Replace BCM. Refer to [BCS-67, "Exploded View"](#).
- NO >> Repair or replace damaged parts.

A
B
C
D
WT
F
G
H
I
J
K
L
M
N
O
P

LOW TIRE PRESSURE WARNING LAMP

< DTC/CIRCUIT DIAGNOSIS >


[REGULAR GRADE]

LOW TIRE PRESSURE WARNING LAMP

Description

INFOID:000000005529550

The combination meter receives tire pressure status from the BCM using CAN communication. When BCM judges from a transmitter signal that tire pressure is insufficient, BCM transmits a signal to combination meter through CAN communication. combination meter turns on the low tire pressure warning lamp mounted on the combination meter.

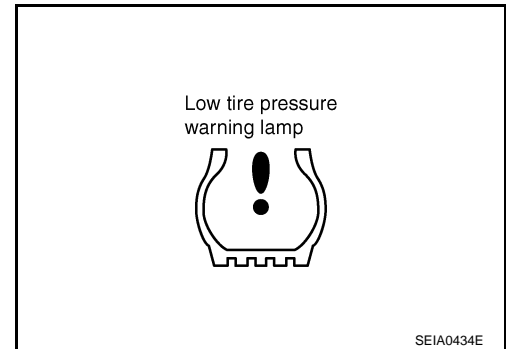

Low tire pressure warning lamp indication

Condition	Low tire pressure warning lamp
Less than 182.7 kPa (1.9 kg/cm ² , 26 psi) [NOTE]	ON
Low tire pressure warning system malfunction [Other diagnostic item]	Warning lamp blinks 1 min, then turns ON.

NOTE: Standard air pressure is for 230 kPa (2.3 kg/cm², 33 psi) vehicles.

Component Function Check

INFOID:000000005529542

1. CHECK THE ILLUMINATION OF THE LOW TIRE PRESSURE WARNING LAMP

Check that the low tire pressure warning lamp is turned OFF after illuminating for approximately 1 second, when the ignition switch is turned ON.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Perform trouble diagnosis. Refer to [WT-30, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000005529543

1. POWER SUPPLY AND GROUND CIRCUIT

Check power supply and ground circuit. Refer to [WT-32, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace damaged parts.

2. PERFORM SELF-DIAGNOSIS

Ⓟ With CONSULT-III

Perform "SELF-DIAG RESULTS" in "AIR PRESSURE MONITOR" of "BCM".

Is any DTC detected?

YES >> Check the DTC. Refer to [BCS-62, "DTC Index"](#).

NO >> GO TO 3.

3. CHECK LOW TIRE PRESSURE WARNING LAMP SIGNAL

Ⓟ With CONSULT-III

1. Turn the ignition switch ON.

CAUTION:

Never start the engine.

2. Perform "DATA MONITOR" in "AIR PRESSURE MONITOR" of "BCM".

3. Select "BCM" in "DATA MONITOR", and check that the low tire pressure warning lamp is turned OFF after illuminating for approximately 1 second, when the ignition switch is turned ON.

Is the inspection result normal?

YES >> Check the combination meter. Refer to [MWI-6, "METER SYSTEM : System Description"](#).

LOW TIRE PRESSURE WARNING LAMP

< DTC/CIRCUIT DIAGNOSIS >

[REGULAR GRADE]

NO >> Replace the BCM. Refer to [BCS-67. "Exploded View"](#).

A

B

C

D

WT

F

G

H

I

J

K

L

M

N

O

P

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[REGULAR GRADE]

POWER SUPPLY AND GROUND CIRCUIT

Diagnosis Procedure

INFOID:000000005529544

1. POWER SUPPLY SYSTEM CHECK

1. Turn the ignition switch OFF.
2. Disconnect the BCM harness connector.
3. Turn the ignition switch ON.
CAUTION:
Never start the engine.
4. Check the voltage between the BCM harness connector and the ground.

BCM		—	Voltage
Connector	Terminal		
M67	57	Ground	Battery voltage
	70		

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair or replace damaged parts.

2. GROUND SYSTEM INSPECTION

1. Turn the ignition switch OFF.
2. Check the continuity between the BCM harness connector and the ground.

BCM		—	Continuity
Connector	Terminal		
M67	67	Ground	Existed

Is the inspection result normal?

- YES >> • Check the 10 A fuse [No. 10 in fuse block (J/B)].
• Check the 50 A fusible link [No. J in fuse block].
NO >> Repair or replace damaged parts.

TPMS

Description

INFOID:000000005253945

During driving, the TPMS receives the signal transmitted from the transmitter installed in each wheel, when the tire pressure becomes low. The control unit (BCM) of this system has pressure judgment and trouble diagnosis functions.

When the TPMS detects low inflation pressure or another unusual symptom, the low tire pressure warning lamps in the combination meter comes on.

- A
- B
- C
- D
- WT**
- F
- G
- H
- I
- J
- K
- L
- M
- N
- O
- P

TPMS


< DTC/CIRCUIT DIAGNOSIS >

[REGULAR GRADE]

Wiring Diagram - TIRE PRESSURE MONITORING SYSTEM -

INFOID:000000005253946

TIRE PRESSURE MONITORING SYSTEM

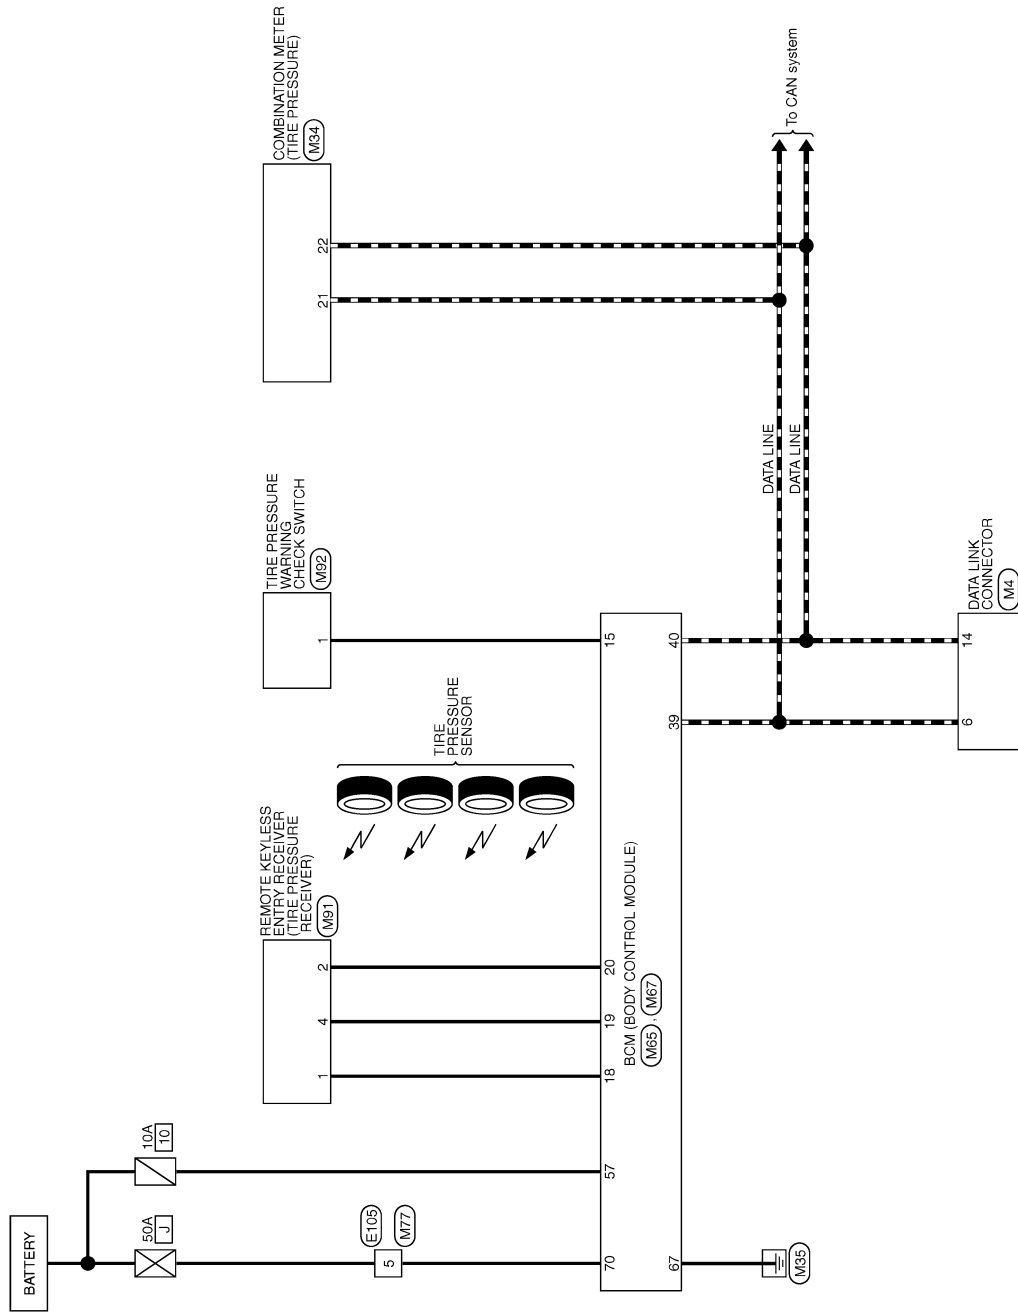


2008/07/15

JCEWM0069Gf


TIRE PRESSURE MONITORING SYSTEM

Connector No.	E105
Connector Name	WIRE TO WIRE
Connector Type	TH80FW-CS16-TM4

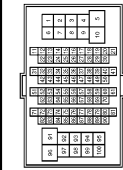


Terminal No.	Color of Wire	Signal Name [Specification]
5	Y	-

Connector No.	M4
Connector Name	DATA LINK CONNECTOR
Connector Type	BD16FW

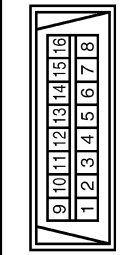


Terminal No.	Color of Wire	Signal Name [Specification]
6	L	-
14	P	-

Connector No.	M34
Connector Name	COMBINATION METER
Connector Type	SAB40FW

 

Terminal No.	Color of Wire	Signal Name [Specification]
21	L	CAN-H
22	P	CAN-L

Connector No.	M65
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FW-NH

 


Terminal No.	Color of Wire	Signal Name [Specification]
15	O	TPMS MODE TRIGGER SW
18	O	KEYLESS TUNER SENS GND
19	V	KEYLESS TUNER POWER
20	GR	KEYLESS TUNER SIGNAL
39	L	CAN-H
40	P	CAN-L

Connector No.	M67
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	FEA09FB-FHA6-SA




Terminal No.	Color of Wire	Signal Name [Specification]
57	G	BAT FUSE
67	B	GND
70	Y	BAT FL

Connector No.	M77
Connector Name	WIRE TO WIRE
Connector Type	TH80MW-CS16-TM4

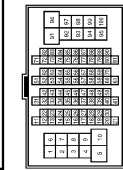

Terminal No.	Color of Wire	Signal Name [Specification]
5	Y	-

Connector No.	M91
Connector Name	REMOTE KEYLESS ENTRY RECEIVER
Connector Type	TK03FW

 

Terminal No.	Color of Wire	Signal Name [Specification]
1	O	GND
2	GR	SIGNAL
4	V	POWER

Connector No.	M92
Connector Name	TIRE PRESSURE WARNING CHECK SWITCH
Connector Type	TK02FW



Terminal No.	Color of Wire	Signal Name [Specification]
1	O	-

A
B
C
D
WT
F
G
H
I
J
K
L
M
N
O
P

ECU DIAGNOSIS INFORMATION

BCM

List of ECU Reference

INFOID:000000005525329

ECU	Reference
BCM	BCS-42, "Reference Value"
	BCS-61, "Fail-safe"
	BCS-62, "DTC Inspection Priority Chart"
	BCS-62, "DTC Index"

SYMPTOM DIAGNOSIS

TPMS

Symptom Table

INFOID:00000000529585

LOW TIRE PRESSURE WARNING LAMP SYMPTOM CHART

A

B

C

D

WT

F

G

H

I

J

K

L

M

N
















O

P

TPMS

< SYMPTOM DIAGNOSIS >


[REGULAR GRADE]

Diagnosis items	Symptom (Ignition switch ON)	Low tire pressure warning lamp	Cause	Action
Low tire pressure warning lamp	The low tire pressure warning lamp illuminates for 1 second, then turns OFF.	  ON 1 sec > stays OFF <small>SEIA0592E</small>	Wake-up operation for all transmitters at wheels is completed.	No system malfunctions
	The low tire pressure warning lamp repeats blinking ON for 2 seconds and OFF for 0.2 seconds.	 Blinks:  ON 2 sec > OFF 0.2 sec <small>SEIA0593E</small>	Wake-up operation for all transmitters at wheels is not completed.	Perform the wake-up operation for all transmitters at wheels. Refer to WT-5, "TRANSMITTER WAKE UP OPERATION : Special Repair Requirement" .
	The low tire pressure warning lamp blinks once.	 Blinks 1 time ON 0.3 sec > OFF 1.3 sec <small>SEIA0594E</small>	The front left transmitter is not activated.	Perform the wake-up operation for the transmitter at front left wheel. Refer to WT-5, "TRANSMITTER WAKE UP OPERATION : Special Repair Requirement" .
	The low tire pressure warning lamp repeats blinking twice.	  Blinks 2 times ON 0.3 sec > OFF 0.3 sec <small>SEIA0595E</small>	The front right transmitter is not activated.	Perform the wake-up operation for the transmitter at front right wheel. Refer to WT-5, "TRANSMITTER WAKE UP OPERATION : Special Repair Requirement" .
	The low tire pressure warning lamp repeats blinking for 3 times.	   Blinks 3 times ON 0.3 sec > OFF 0.3 sec <small>SEIA0596E</small>	The rear right transmitter is not activated.	Perform the wake-up operation for the transmitter at rear right wheel. Refer to WT-5, "TRANSMITTER WAKE UP OPERATION : Special Repair Requirement" .
	The low tire pressure warning lamp repeats blinking for 4 times.	    Blinks 4 times ON 0.3 sec > OFF 0.3 sec <small>SEIA0597E</small>	The rear left transmitter is not activated.	Perform the wake-up operation for the transmitter at rear left wheel. Refer to WT-5, "TRANSMITTER WAKE UP OPERATION : Special Repair Requirement" .
	The low tire pressure warning lamp turns ON and stays illuminated.	 Comes ON and stays ON <small>SEIA0598E</small>	Low tire pressure	Check the tire pressure for all wheels and adjust to the specified value. Refer to WT-59, "Tire" .

TPMS

< SYMPTOM DIAGNOSIS >

[REGULAR GRADE]

Diagnosis items	Symptom (Ignition switch ON)	Low tire pressure warning lamp	Cause	Action
Low tire pressure warning lamp	The low tire pressure warning lamp repeats blinking at 0.5-second intervals for 1 minute, and then stays illuminated.	 <p style="text-align: center;">Blinks 1 min</p> <p style="text-align: center;">ON 0.5 sec > OFF 0.5 sec and stays ON</p> <p style="text-align: right; font-size: small;">SEIA0788E</p>	The combination meter fuse is open or removed (or pulled out).	Check and install the combination meter fuse. If necessary, replace the fuse.
			The low tire pressure warning control unit harness connector is removed.	Check the connection conditions of the low tire pressure warning control unit harness connector, and repair if necessary.
			Tire Pressure Monitoring System (TPMS) malfunction.	<ul style="list-style-type: none"> • Perform CONSULT-III self-diagnosis. Refer to WT-11, "COMMON ITEM : CONSULT-III Function (BCM - COMMON ITEM)". • If necessary, perform transmitter ID registration. Refer to WT-5, "ID REGISTRATION PROCEDURE : Special Repair Requirement".
Turn signal lamp	The turn signal lamps do not blink twice when the transmitter is activated. Or the buzzer does not sound.	—	<ol style="list-style-type: none"> 1. The transmitter activation tool (J-45295) does not activate. 2. The ignition switch is OFF when the transmitter wake-up operation is performed. 3. The transmitter activation tool (J-45295) is not used in the correct position. 4. The transmitter is already waked up. 	<ol style="list-style-type: none"> 1. Replace the battery in the transmitter activation tool (J-45295). 2. Turn the ignition switch ON when performing the transmitter wake-up operation. 3. Operate the transmitter activation tool (J-45295) in the correct position when performing the wake-up operation. 4. No procedure.

NOTE:

If transmitter wake-up operation is not completed for two or more transmitters, the applicable low tire pressure warning lamp blinking patterns are displayed continuously.

(Example: Blinks once/OFF/blinks 3 times = Wake-up operation is not completed at the front left wheel and rear right wheel transmitters.)

A
B
C
D
WT
F
G
H
I
J
K
L
M
N
O
P

LOW TIRE PRESSURE WARNING LAMP DOES NOT TURN ON

< SYMPTOM DIAGNOSIS >

[REGULAR GRADE]

LOW TIRE PRESSURE WARNING LAMP DOES NOT TURN ON

Description

INFOID:000000005253953

DESCRIPTION

The low tire pressure warning lamp illuminates for approximately 1 second and then turns OFF when the ignition switch is turned ON. This is to check that no abnormal condition is present in the tire pressure monitoring system.

The lamp bulb may be burnt out or the tire pressure monitoring system may be malfunctioning if the low tire pressure warning lamp does not illuminate when the ignition switch is turned ON.

Diagnosis Procedure

INFOID:000000005253954

1. CHECK SELF-DIAGNOSIS RESULTS

Ⓜ With CONSULT-III

Perform "SELF-DIAG RESULTS" in "AIR PRESSURE MONITOR" of "BCM".

Is "CAN COMM CIRCUIT" displayed in the self-diagnosis display items?

YES >> Perform trouble diagnosis for CAN communication system. Refer to [LAN-26, "CAN System Specification Chart"](#).

NO >> GO TO 2.

2. CHECK COMBINATION METER

Check combination meter function. Refer to [MWI-33, "CONSULT-III Function \(METER/M&A\)"](#).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace damaged parts.

3. CHECK LOW TIRE PRESSURE WARNING LAMP

1. Turn the ignition switch "OFF".
2. Disconnect BCM harness connectors.
3. Turn ignition switch "ON". (Never start engine.)

Does low tire pressure warning lamp turn on?

YES >> GO TO 4.

NO >> Check combination meter and repair or replace. Refer to [MWI-32, "Diagnosis Description"](#).

4. CHECK SYMPTOM

Check again.

Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 5.

5. CHECK BCM

Check BCM input/output signal. Refer to [BCS-42, "Reference Value"](#).

Is the inspection result normal?

YES >> GO TO 4.

NO >> GO TO 6.

6. CHECK BCM HARNESS CONNECTOR

Check BCM pin terminals for damage or loose connection with harness connector.

Is the inspection result normal?

YES >> Replace BCM. Refer to [BCS-67, "Exploded View"](#).

NO >> Repair or replace damaged parts.

LOW TIRE PRESSURE WARNING LAMP STAYS ON

< SYMPTOM DIAGNOSIS >

[REGULAR GRADE]

LOW TIRE PRESSURE WARNING LAMP STAYS ON

Description

INFOID:000000005253955

DESCRIPTION

The tire pressure monitoring system is checked and the warning lamp is illuminated for approximately 1 second when the ignition switch is turned ON. The low tire pressure warning lamp turns OFF after the system check finishes.

The system may be malfunctioning if the low tire pressure warning lamp does not turn off approximately 1 second after the ignition switch is turned ON.

Diagnosis Procedure

INFOID:000000005253956

1. CHECK TIRE PRESSURE

1. Turn the ignition switch ON.

CAUTION:

Never start the engine.

2. Check the tire pressure for all wheels and adjust to the specified value. Refer to [WT-59, "Tire"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Inspect or repair the tires or wheels.

2. CHECK LOW TIRE PRESSURE WARNING LAMP

Check low tire pressure warning lamp display.

Does not low tire pressure warning lamp turn OFF?

YES >> GO TO 3.

NO >> INSPECTION END

3. CHECK SYSTEM FOR BCM

Ⓜ With CONSULT-III

Perform "SELF-DIAG RESULTS" in "AIR PRESSURE MONITOR" of "BCM".

Is any DTC detected?

YES >> Perform trouble diagnosis. Refer to [BCS-62, "DTC Index"](#).

NO >> GO TO 4.

4. CHECK ID REGISTRATION

Perform ID registration all transmitters. Refer to [WT-5, "ID REGISTRATION PROCEDURE : Special Repair Requirement"](#).

Does low tire pressure warning lamp turn OFF?

YES >> INSPECTION END

NO >> GO TO 5.

5. CHECK POWER SUPPLY CIRCUIT

1. Turn the ignition switch "OFF".
2. Disconnect BCM harness connector.
3. Check voltage between BCM and harness connector terminals and ground.

BCM		—	Voltage (Approx.)
Connector	Terminal		
M67	57	Ground	Battery voltage
	70		

Is the power supply normal?

YES >> GO TO 6.

NO >> Check the following. If any items are damaged, repair or replace damage parts.

- 50 A fusible link [No. J located in the fuse block]. Refer to [PG-90, "Fuse and Fusible Link Arrangement"](#).

LOW TIRE PRESSURE WARNING LAMP STAYS ON

< SYMPTOM DIAGNOSIS >

[REGULAR GRADE]

- 10 A fuse [No. 10 located in the fuse block (J/B)]. Refer to [PG-88. "Fuse, Connector and Terminal Arrangement"](#).
- Harness for short or open between battery and BCM harness connector M67 terminal 57.
- Harness for short or open between battery and BCM harness connector M67 terminal 70.
- Check battery voltage.

6. CHECK GROUND CIRCUIT

1. Turn the ignition switch "OFF".
2. Disconnect BCM harness connector.
3. Check continuity between BCM harness connector M67 terminal 67 and ground.

BCM		—	Continuity
Connector	Terminal		
M67	67	Ground	Existed

Also check harness for short to power.

Is the inspection result normal?

YES >> GO TO 7.

NO >> Repair open circuit or short to power in harness or connectors.

7. CHECK SYMPTOM

Check again.

Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 8.

8. CHECK BCM

Check BCM input/output signal. Refer to [BCS-42. "Reference Value"](#).

Is the inspection result normal?

YES >> GO TO 7.

NO >> GO TO 9.

9. CHECK BCM HARNESS CONNECTOR

Check BCM pin terminals for damage or loose connection with harness connector.

Is the inspection result normal?

YES >> Replace BCM. Refer to [BCS-67. "Exploded View"](#).

NO >> Repair or replace damaged parts.

LOW TIRE PRESSURE WARNING LAMP BLINKS

< SYMPTOM DIAGNOSIS >

[REGULAR GRADE]

LOW TIRE PRESSURE WARNING LAMP BLINKS

Description

INFOID:00000000529589

The low tire pressure warning lamp illuminates or blinks.


However, a check is necessary because the symptom may not be caused by a system malfunction. For example, the transmitter may not be initialized.

NOTE:

If low tire pressure warning lamp blinks as shown in the figure, the system is normal.

Blink Mode A

- This mode shows transmitter status is in OFF- mode.
Perform transmitter wake up operation. Refer to [WT-5. "TRANSMITTER WAKE UP OPERATION : Special Repair Requirement"](#).

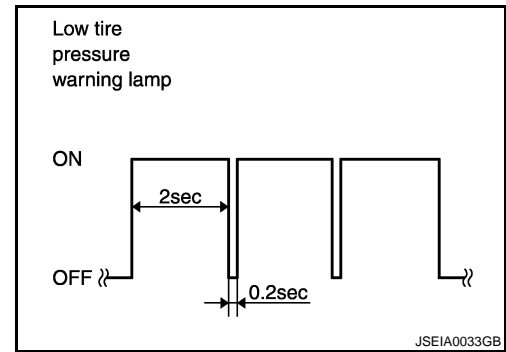

Diagnosis Procedure

INFOID:00000000529590

1. CHECK TIRE PRESSURE WARNING CHECK SWITCH POWER SUPPLY

1. Turn the ignition switch ON.
CAUTION:
Never start the engine.
2. Check voltage between tire pressure warning check switch connector and ground.

Tire pressure warning check switch		—	Condition	Voltage (Approx.)
Connector	Terminal			
M92	1	Ground	Ignition switch OFF	

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Ripper or replace error-detected damaged parts.

2. CHECK TIRE PRESSURE WARNING CHECK SWITCH CIRCUIT

1. Turn the ignition switch OFF.
2. Disconnect BCM harness connector.
3. Check the continuity between BCM harness connector and tire pressure warning check switch connector.

BCM		Tire pressure warning check switch		Continuity
Connector	Terminal	Connector	Terminal	
M65	15	M92	1	Existed

4. Check the continuity between BCM harness connector and ground.

LOW TIRE PRESSURE WARNING LAMP BLINKS

< SYMPTOM DIAGNOSIS >

[REGULAR GRADE]

BCM		—	Continuity
Connector	Terminal		
M65	15	Ground	Not existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Riper or replace error-detected damaged parts.

3.CHECK BCM

Check the BCM input/output signal. Refer to [BCS-42. "Reference Value"](#).

Is the inspection result normal?

YES >> Check the tire pressure warning check switch. Refer to [WT-28. "Diagnosis Procedure"](#).

NO >> Repair or replace the BCM.

TURN SIGNAL LAMP BLINKS

< SYMPTOM DIAGNOSIS >

[REGULAR GRADE]

TURN SIGNAL LAMP BLINKS

Description

INFOID:00000000529592

DESCRIPTION


The turn signal lamp blinks when the ignition switch is turned ON.
The BCM connector or circuit may have a malfunction.

Diagnosis Procedure

INFOID:00000000529593

1. CHECK TIRE PRESSURE WARNING CHECK SWITCH POWER SUPPLY CIRCUIT

1. Turn the ignition switch ON.
CAUTION:
Never start the engine.
2. Check voltage between tire pressure warning check switch connector and ground.

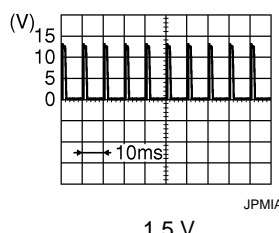Tire pressure warning check switch		—	Condition	Voltage (Approx.)
Connector	Terminal			
M92	1	Ground	Ignition switch OFF	

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair or replace damaged parts.

2. CHECK TIRE PRESSURE WARNING CHECK SWITCH CIRCUIT

1. Turn the ignition switch OFF.
2. Disconnect BCM harness connector.
3. Check the continuity between BCM harness connector and tire pressure warning check switch connector.

BCM		Tire pressure warning check switch		Continuity
Connector	Terminal	Connector	Terminal	
M65	15	M92	1	Existed

4. Check the continuity between BCM harness connector and ground.

BCM		—	Continuity
Connector	Terminal		
M65	15	Ground	Not existed

Is the inspection result normal?

- YES >> Check the turn signal lamp operation. Refer to [BCS-31, "SIGNAL BUFFER : CONSULT-III Function \(BCM - SIGNAL BUFFER\)"](#).
NO >> Repair or replace damaged parts.

ID REGISTRATION CANNOT BE COMPLETED

< SYMPTOM DIAGNOSIS >

[REGULAR GRADE]

ID REGISTRATION CANNOT BE COMPLETED

Description

INFOID:000000005253961

DESCRIPTION

The ID of the transmitter installed in each wheel cannot be registered in the tire pressure monitoring system. Inspect the transmitter or the tire pressure monitoring system circuit.

Diagnosis Procedure

INFOID:00000000529817

1. CHECK TRANSMITTER ID REGISTRATION

1. Perform transmitter ID registration for all wheels. Refer to [WT-5, "ID REGISTRATION PROCEDURE : Special Repair Requirement"](#).
2. Drive for 3 minutes at a speed of 40 km/h (25 MPH) or more, then drive normally for 10 minutes.
3. Perform "DATA MONITOR" in "AIR PRESSURE MONITOR" of "BCM".
4. Select "BCM" in "DATA MONITOR", and check that the tire pressures match the standard value.

Monitor item	Measuring condition	Displayed value
AIR PRESS FL	Drive for 3 minutes at a speed of 40 km/h (25 MPH) or more, then drive normally for 10 minutes.	Internal pressure of tires
AIR PRESS FR		
AIR PRESS RR		
AIR PRESS RL		

CAUTION:

Stop the vehicle and within 5 minutes, use "DATA MONITOR" in "AIR PRESSURE MONITOR" of "BCM" to display the tire pressure for all wheels.

Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 2.

2. CHECK TRANSMITTERS

1. Perform trouble diagnosis for the transmitter. Refer to [WT-20, "Diagnosis Procedure"](#).
2. Perform transmitter ID registration for all wheels. Refer to [WT-5, "ID REGISTRATION PROCEDURE : Special Repair Requirement"](#).
3. Check that transmitter ID registration is completed for all wheels.

Is transmitter ID registration for all wheels been completed?

YES >> INSPECTION END

NO >> Replace the transmitter. Refer to [WT-56, "Exploded View"](#).

NORMAL OPERATING CONDITION

< SYMPTOM DIAGNOSIS >

[REGULAR GRADE]


NORMAL OPERATING CONDITION

Description

INFOID:00000000529594

LOW TIRE PRESSURE WARNING LAMP BLINKS

If the low tire pressure warning lamp blinks as shown in the figure after the ignition switch is turned ON, the transmitter is not waked up. Perform the transmitter wake-up operation. Refer to [WT-5. "TRANSMITTER WAKE UP OPERATION : Special Repair Requirement"](#).

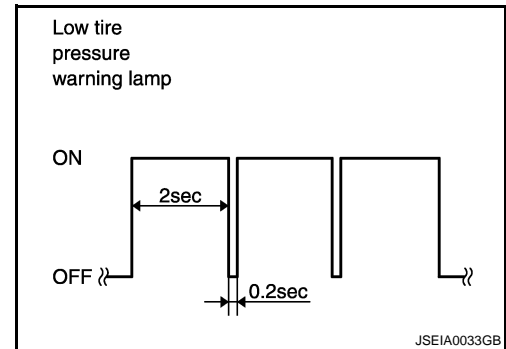

A
B
C
D
WT
F
G
H
I
J
K
L
M
N
O
P

NOISE, VIBRATION AND HARSHNESS (NVH) TROUBLESHOOTING

< SYMPTOM DIAGNOSIS >

[REGULAR GRADE]

NOISE, VIBRATION AND HARSHNESS (NVH) TROUBLESHOOTING

NVH Troubleshooting Chart

INFOID:000000005253964

Use chart below to find the cause of the symptom. If necessary, repair or replace these parts.

Symptom		Possible cause and SUSPECTED PARTS	Reference page																	
			Improper installation, looseness	Out-of-round	unbalance	Incorrect tire pressure	Uneven tire wear	Deformation or damage	Non-uniformity	Incorrect tire size	PROPELLER SHAFT	DIFFERENTIAL	FRONT AXLE AND FRONT SUSPENSION	REAR AXLE AND REAR SUSPENSION	TIRES	ROAD WHEELS	DRIVE SHAFT	BRAKE	STEERING	
Symptom	TIRES	Noise	x	x	x	x	x	x	x		x	x	x	x		x	x	x	x	
		Shake	x	x	x	x	x	x		x	x		x	x		x	x	x	x	
		Vibration				x				x	x		x	x			x			x
		Shimmy	x	x	x	x	x	x	x	x			x	x		x		x	x	x
		Judder	x	x	x	x	x	x		x			x	x		x		x	x	x
		Poor quality ride or handling	x	x	x	x	x	x		x			x		x	x				
	ROAD WHEEL	Noise	x	x	x				x			x	x	x	x			x	x	x
		Shake	x	x	x				x			x		x	x	x			x	x
		Shimmy, Judder	x	x	x				x				x	x	x				x	x
		Poor quality ride or handling	x	x	x				x					x	x	x				

x: Applicable

PRECAUTION

PRECAUTIONS
FOR USA AND CANADA

FOR USA AND CANADA : Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000005588383

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the "SRS AIR BAG".
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

FOR USA AND CANADA : Service Notice or Precautions

INFOID:000000005253965

- Low tire pressure warning lamp blinks 1min, then turns ON when occurring any malfunction except low tire pressure. Delete the memory with CONSULT-III, or register the ID to turn low tire pressure warning lamp OFF. Refer to [WT-12. "AIR PRESSURE MONITOR : Diagnosis Description"](#), [WT-5. "ID REGISTRATION PROCEDURE : Special Repair Requirement"](#).
- ID registration is required when replacing or rotating wheels, replacing transmitter or BCM. Refer to
- Replace grommet seal, valve core and cap of transmitter in TPMS every tire replacement by reaching wear limit of tire. Refer to [WT-56. "Exploded View"](#).

FOR MEXICO

FOR MEXICO : Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000005588388

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.

A
B
C
D
WT
F
G
H
I
J
K
L
M
N
O
P

PRECAUTIONS

< PRECAUTION >

[REGULAR GRADE]

- **Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the “SRS AIR BAG”.**
- **Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.**

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

- **When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.**
- **When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.**

FOR MEXICO : Service Notice or Precautions

INFOID:000000005588397

- Low tire pressure warning lamp blinks 1min, then turns ON when occurring any malfunction except low tire pressure. Delete the memory with CONSULT-III, or register the ID to turn low tire pressure warning lamp OFF. Refer to [WT-12, "AIR PRESSURE MONITOR : Diagnosis Description"](#), [WT-5, "ID REGISTRATION PROCEDURE : Special Repair Requirement"](#).
- ID registration is required when replacing or rotating wheels, replacing transmitter or BCM. Refer to
- Replace grommet seal, valve core and cap of transmitter in TPMS every tire replacement by reaching wear limit of tire. Refer to [WT-56, "Exploded View"](#).

PREPARATION

< PREPARATION >

[REGULAR GRADE]


PREPARATION

PREPARATION

Special Service Tools


INFOID:000000005253966

The actual shapes of Kent-Moore tools may differ from those of special service tools illustrated here.

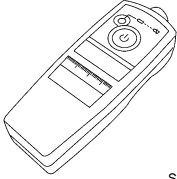Tool number (Kent-Moore No.) Tool name	Description
- (J-45295) Transmitter activation tool  SEIA0462E	ID registration

Commercial Service Tools

INFOID:000000005253967

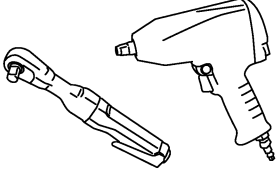Tool name	Description
Power tool  PBIC0190E	Loosening bolts and nuts

A
B
C
D
WT
F
G
H
I
J
K
L
M
N
O
P

PERIODIC MAINTENANCE

ROAD WHEEL


Inspection

INFOID:000000005253968

ALUMINUM WHEEL

1. Check tires for wear and improper inflation.
2. Check wheels for deformation, cracks and other damage. If deformed, remove wheel and check wheel runout.
 - a. Remove tire from aluminum wheel and mount on a tire balance machine.
 - b. Set dial indicator as shown in the figure.
 - c. If the total runout value exceeds the limit, replace aluminum wheel.

Lateral runout limit (A) Refer to [WT-59, "Road Wheel"](#).
 Vertical runout limit (B) Refer to [WT-59, "Road Wheel"](#).

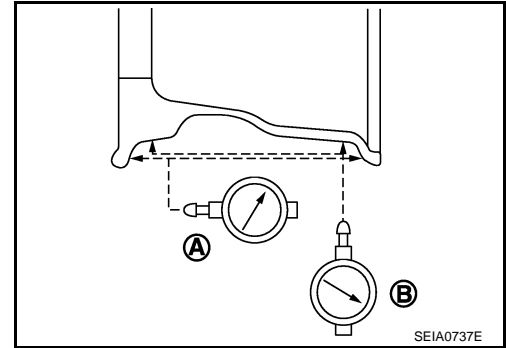

STEEL WHEEL

1. Check tires for were and improper inflation.
2. Check wheels for deformation, clacks and other damage. If deformed, remove wheel and check wheel runout.
 - a. Remove tire from steel wheel and mount wheel on a tire balance machine.
 - b. Set two dial indicators as shown in the illustration.
 - c. Set each dial indicator to "0".
 - d. Rotate wheel and check dial indicators at several points around the circumference of the wheel.
 - e. Calculate runout at each point as shown below.


Lateral runout limit (A): $(1+2)/2$
 Radial runout limit (B): $(3+4)/2$

- f. Select maximum positive runout value and the maximum negative value. Add the two values to determine total runout.

CAUTION:
 In case a positive or negative value is not available, use the maximum value (negative or positive) for total runout.

Limit
 A: Refer to [WT-59, "Road Wheel"](#).
 B: Refer to [WT-59, "Road Wheel"](#).

- g. If the total runout value exceeds limit, replace steel wheel.

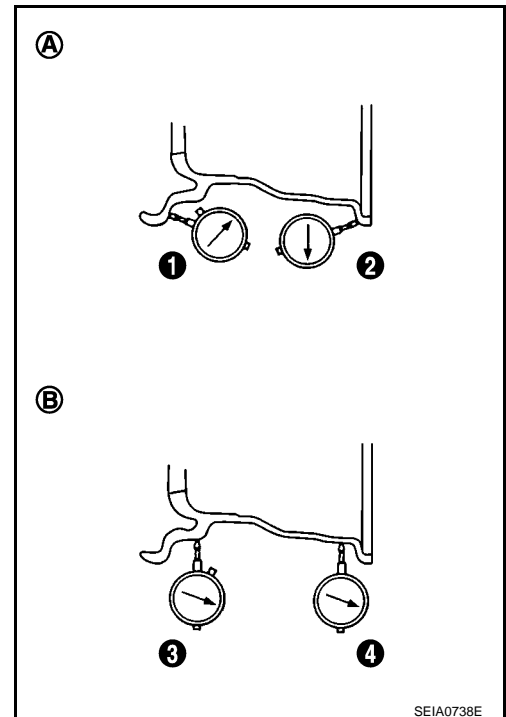


REMOVAL AND INSTALLATION

ROAD WHEEL TIRE ASSEMBLY

Exploded View

INFOID:000000005529832

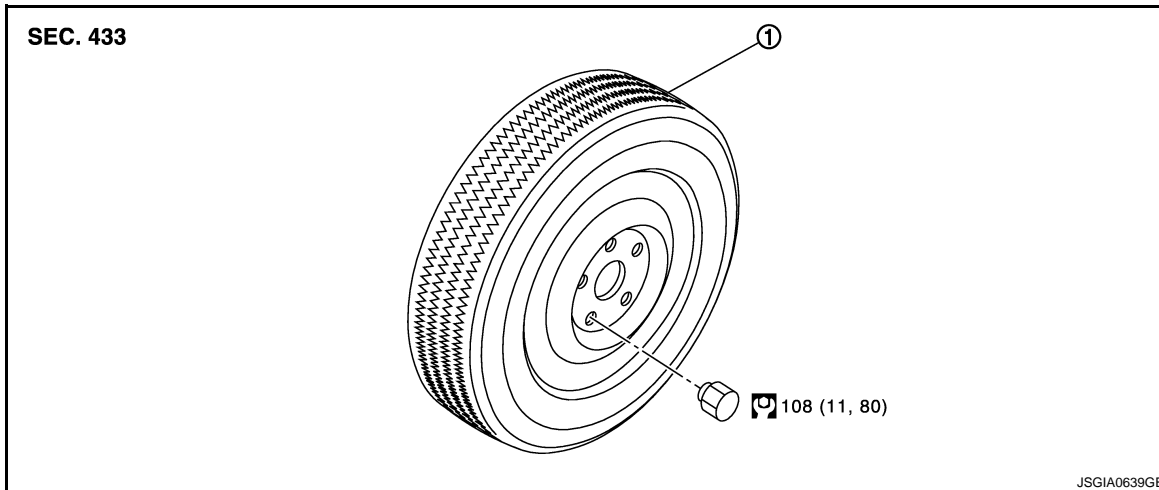

1. Tire assembly

Refer to [GI-4, "Components"](#) for symbols in the figure.

Removal and Installation

INFOID:000000005529833

REMOVAL

1. Remove wheel nuts.
2. Remove tire assembly.

INSTALLATION

Install in the reverse order of removal.

Adjustment

INFOID:0000000055253969

BARANCING WHEELS (BONDING WEIGHT TYPE)

Preparation Before Adjustment

Using releasing agent, remove double-faced adhesive tape from the road wheel.

CAUTION:

- **Be careful not scratch the road wheel during removal.**
- **After removing double-faced adhesive tape, wipe clean traces of releasing agent from the road wheel.**

Wheel Balance Adjustment

- If a tire balance machine has adhesion balance weight mode settings and drive-in weight mode setting, select and adjust a drive-in weight mode suitable for road wheels.

1. Set road wheel on tire balance machine using the center hole as a guide. Start the tire balance machine.
2. When inner and outer unbalance values are shown on the tire balance machine indicator, multiply outer unbalance value by $5/3$ to determine balance weight that should be used. Select the outer balance weight with a value closest to the calculated value above and install in to the designated outer position of, or at the designated angle in relation to the road wheel.

CAUTION:

- **Do not install the inner balance weight before installing the outer balance weight.**
- **Before installing the balance weight, be sure to clean the mating surface of the road wheel.**

ROAD WHEEL TIRE ASSEMBLY

< REMOVAL AND INSTALLATION >

[REGULAR GRADE]

- a. Indicated unbalance value $\times 5/3 =$ balance weight to be installed

Calculation example:

23 g (0.81 oz) $\times 5/3 = 38.33$ g (1.35 oz) \Rightarrow 40 g (1.41 oz) balance weight (closer to calculated balance weight value)


NOTE:

Note that balance weight value must be closer to the calculated balance weight value.

Example:

37.4 \Rightarrow 35 g (1.23 oz)


37.5 \Rightarrow 40 g (1.41 oz)

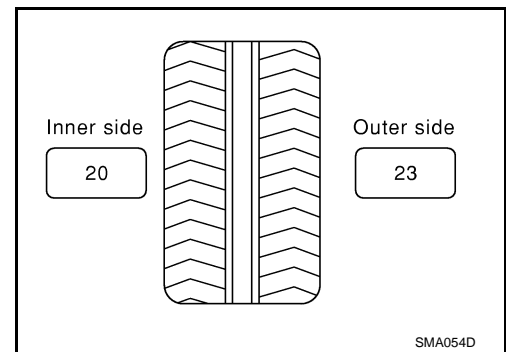

- b. Installed balance weight in the position.
- When installing balance weight (1) to road wheels, set it into the grooved area (A) on the inner wall of the road wheel as shown in the figure so that the balance weight center (B) is aligned with the tire balance machine indication position (angle) (C).

CAUTION:

- Always use genuine NISSAN adhesion balance weights.
- Balance weights are non-reusable; always replace with new ones.
- Do not install more than three sheets of balance weight.

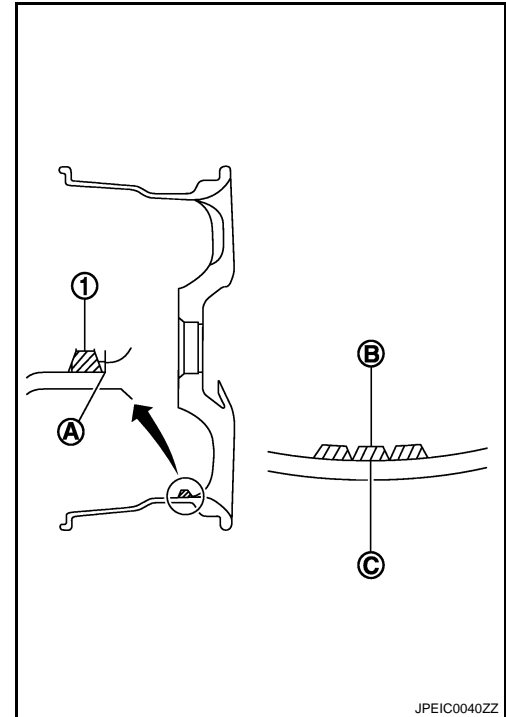

- c. If calculated balance weight value exceeds 50 g (1.76 oz), install two balance weight sheets in line with each other as shown in the figure.

CAUTION:


Do not install one balance weight sheet on top another.

- Start tire balance machine again.
- Install drive-in balance weight on inner side of road wheel in the tire balance machine indication position (angle).

CAUTION:

Do not install more than two balance weight.

- Start tire balance machine. Make sure that inner and outer residual unbalance values are 5 g (0.17 oz) each or below.
- If either residual unbalance value exceeds 5 g (0.17 oz), repeat installation procedures.

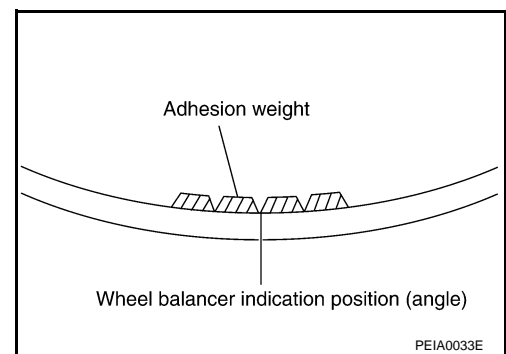

Wheel balance	Dynamic (At flange)	Static (At flange)
Maximum allowable unbalance	Refer to WT-59, "Road Wheel" .	

TIRE ROTATION

ROAD WHEEL TIRE ASSEMBLY


< REMOVAL AND INSTALLATION >

[REGULAR GRADE]

- Follow the maintenance schedule for tire rotation service intervals. Refer to [MA-8, "FOR NORTH AMERICA : Schedule 1"](#).
- When installing the wheel, tighten wheel nuts to the specified torque.

CAUTION:

- Do not include the T-type spare tire when rotating the tires.
- When installing wheels, tighten them diagonally by dividing the work two to three times in order to prevent the wheels from developing any distortion.
- Be careful not to tighten wheel nut at torque exceeding the criteria for preventing strain of disc rotor.
- Use NISSAN genuine wheel nuts for aluminum wheels.

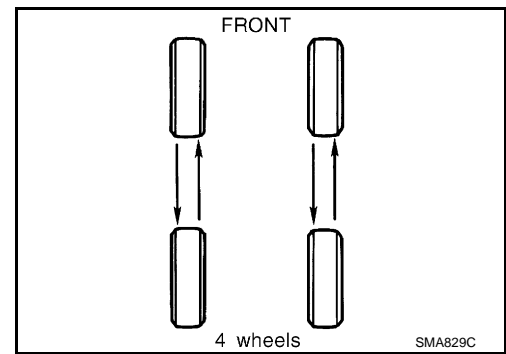

Wheel nuts tightening torque : Refer to [WT-59, "Road Wheel"](#).

- Perform the ID registration, after tire rotation. Refer to [WT-5, "ID REGISTRATION PROCEDURE : Special Repair Requirement"](#).

A
B
C
D
WT
F
G
H
I
J
K
L
M
N
O
P

TRANSMITTER


< REMOVAL AND INSTALLATION >

[REGULAR GRADE]

TRANSMITTER

Exploded View

INFOID:000000005253970

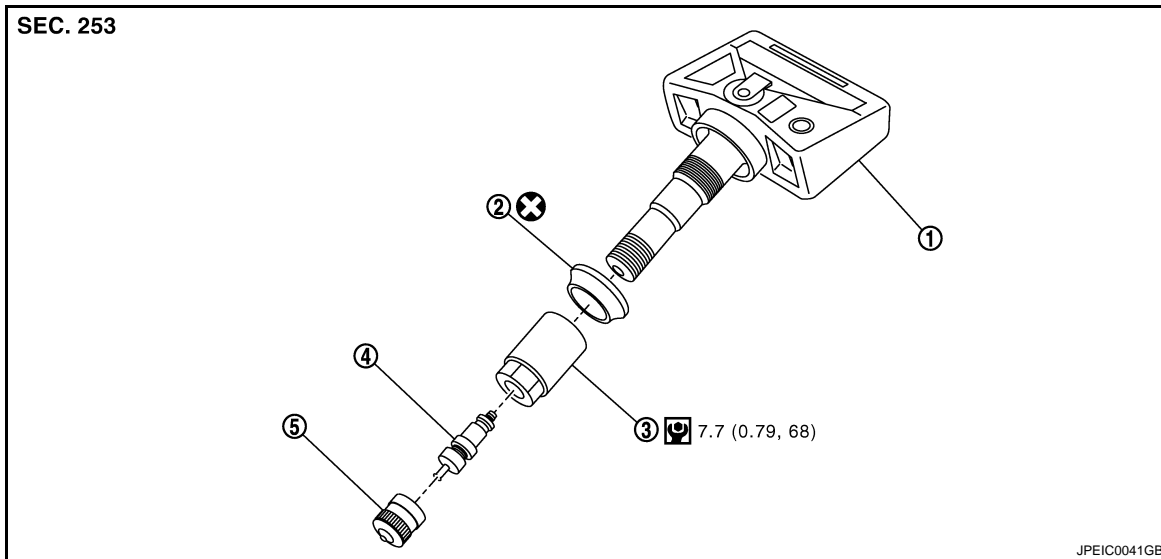

- | | | |
|----------------|-----------------|--------------|
| 1. Transmitter | 2. Grommet seal | 3. Valve nut |
| 4. Valve core | 5. Cap | |


Refer to [GI-4, "Components"](#) for symbols in figure.

Removal and Installation


INFOID:000000005253971

REMOVAL

1. Deflate tire. Unscrew transmitter retaining nut and allow transmitter to fall into tire.
2. Gently bounce tire so that transmitter falls to bottom of tire. Place on tire changing machine and break both tire beads ensuring that the transmitter remains at the bottom of the tire.

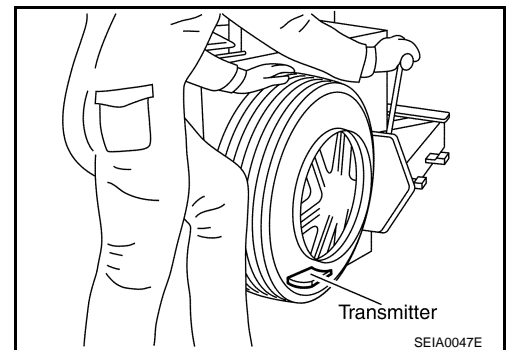

3. Turn tire so that valve hole is at bottom and bounce so that transmitter (1) is near valve hole. Carefully lift tire onto turntable and position valve hole (and transmitter) 270 degree from mounting/dismounting head (2).
4. Lubricate tire well and remove first side of the tire. Reach inside the tire and remove the transmitter.

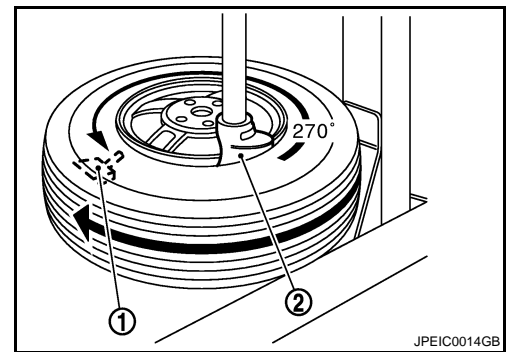


INSTALLATION

TRANSMITTER

< REMOVAL AND INSTALLATION >

[REGULAR GRADE]

1. Put first side of tire onto rim.

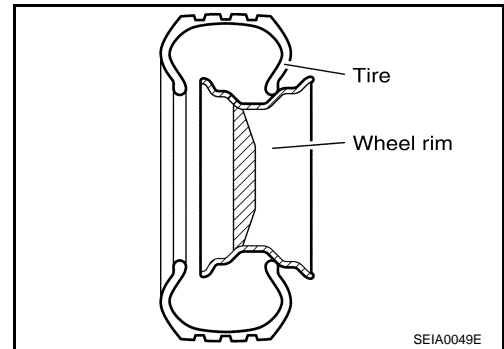

2. Mount transmitter on rim and tighten nut.

CAUTION:


Speed for tightening nut should be less than 10 rpm.

3. Place wheel on turntable of tire machine. Ensure that transmitter (1) is 270 degree from mounting head (2) when second side of tire is fitted.

NOTE:

Do not touch transmitter at mounting head.

4. Lubricate tire well and fit second side of tire as normal. Ensure that tire does not rotate relative to rim.
5. Inflate tire and fit to appropriate wheel position.

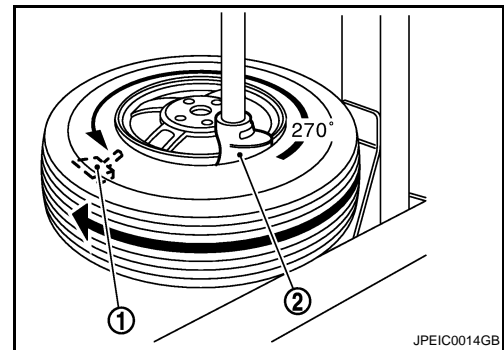

A
B
C
D

WT

F
G
H
I

J

K

L

M

N

O

P

TIRE PRESSURE RECEIVER

< REMOVAL AND INSTALLATION >

[REGULAR GRADE]

TIRE PRESSURE RECEIVER

Removal and Installation

INFOID:00000000527814

REMOVAL

1. Remove the instrument side finisher RH. Refer to [IP-12, "Exploded View"](#).
2. Remove the glove box cover assembly. Refer to [IP-12, "Exploded View"](#).
3. Disconnect tire pressure receiver harness connector.
4. Remove tire pressure receiver.

INSTALLATION

Install is the reverse order of removal.

SERVICE DATA AND SPECIFICATIONS (SDS)

< SERVICE DATA AND SPECIFICATIONS (SDS)

[REGULAR GRADE]

SERVICE DATA AND SPECIFICATIONS (SDS)

SERVICE DATA AND SPECIFICATIONS (SDS)

Road Wheel

INFOID:0000000005253972

Kind of wheel		Aluminum	Steel
Maximum radial runout limit	Lateral deflection	Less than 0.3 mm (0.012 in)	Less than 0.8 mm (0.031)
	Vertical deflection	Less than 0.3 mm (0.012 in)	Less than 0.5 mm (0.020)
Maximum allowable unbalance limit	Dynamic (At flange)	Less than 5 g (0.17 oz) (one side)	
	Static (At flange)	Less than 10 g (0.35 oz)	

Tire

INFOID:0000000005253973

Unit: kPa (kg/cm², psi)

Tire size	Air pressure	
	Front	Rear
P215/70R16 99H	230 (2.3, 33)	230 (2.3, 33)
P225/60R17 98H	230 (2.3, 33)	230 (2.3, 33)
T155/90R16 110M	420 (4.2, 60)	420 (4.2, 60)

A
B
C
D
WT
F
G
H
I
J
K
L
M
N
O
P

COMPONENT PARTS

< SYSTEM DESCRIPTION >

[Krom]

SYSTEM DESCRIPTION


COMPONENT PARTS

Road Wheel Tire Assembly

INFOID:000000005775474

The wheels are made of specifically-designed bright aluminum with their surface treated with sputtering coating.

Krom	Item	Data
Aluminum road wheels	Size	17 × 7J
	Offset	+40 mm (+1.57 in)
	P.C.D	114.3 mm (4.5 in)
Tires	Tire size	P225/60R17 98H

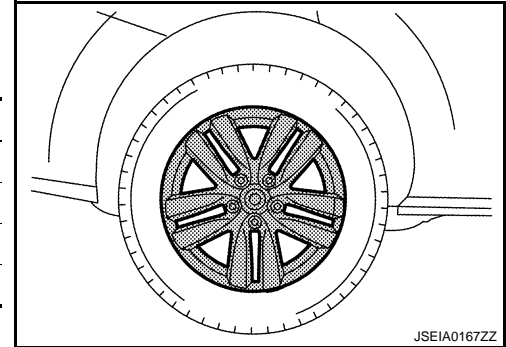

CAUTION:

- Wheels with sputtering coating are not plated wheels. Never use a cleaner for plating, abrasive cleanser, and brush. (Since sputtering is one of the methods of metallic coating, the surface treatment may be subject to damage, peel, or corrosion.)
- Wash regularly with a sponge dampened in a mild soap solution, especially during winter months in areas where road salt is used. Salt could discolor the wheels if not removed.