

JACKING & HOISTING

1993 Nissan Sentra

1993 WHEEL ALIGNMENT
Nissan Jacking & Hoisting

NX, Sentra

* PLEASE READ THIS FIRST *


NOTE: Prior to performing wheel alignment, perform preliminary visual and mechanical inspection of wheels, tires and suspension components. See PRE-ALIGNMENT INSTRUCTIONS in WHEEL ALIGNMENT THEORY/OPERATION article in the GENERAL INFORMATION section.

JACKING & HOISTING

NOTE: Illustration given is not intended to represent exact structure of vehicle frames, underbody or body outline. Illustrations are provided only to give a point of reference when lifting or hoisting.

FLOOR JACK & HOIST

Using a floor jack or hoist, lift vehicle at points indicated by shaded areas on frame. See Fig. 1.

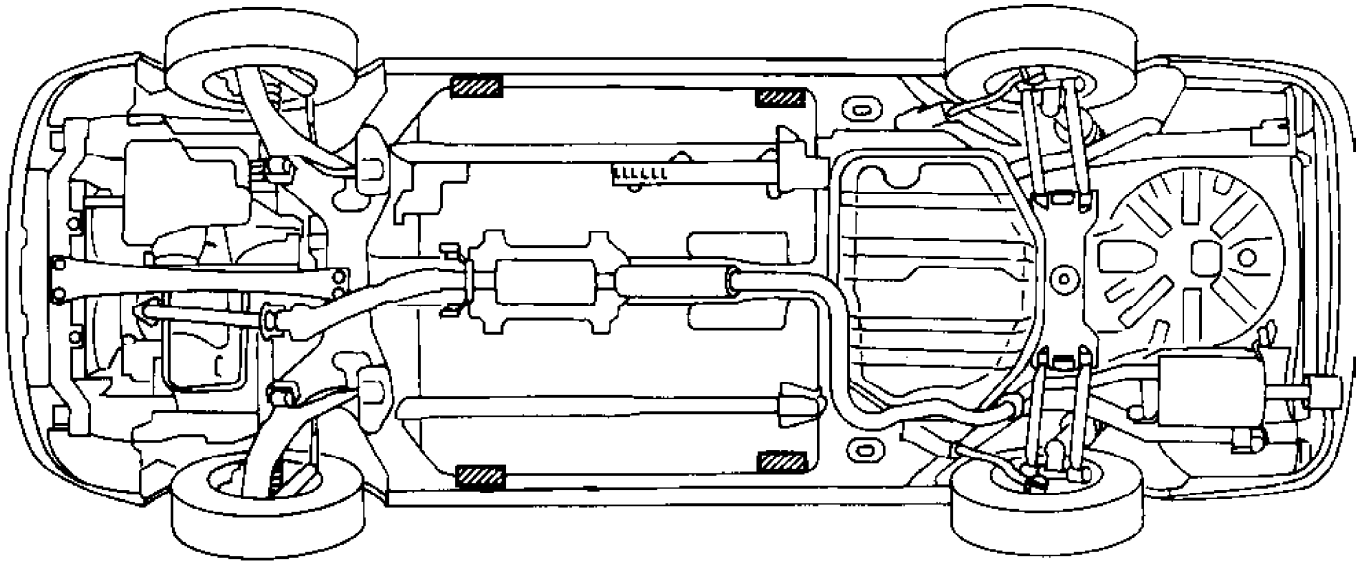

92H00940

Fig. 1: Frame, Underbody & Outerbody Points For Jacking & Hoisting
Courtesy of Nissan Motor Co., U.S.A.

EMERGENCY JACKING

Those points designated on the outline of the body were specifically designed to facilitate use of manufacturer's supplied jack. These jacking points are indicated by circular dots. See Fig. 1.