



## SUPER MULTIPLE JUNCTION (SMJ)

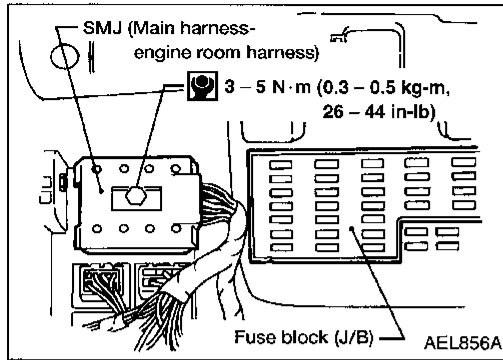

### INSTALLATION

To install SMJ, tighten bolts until orange “fulltight” mark appears and then retighten to specified torque as required.

 : 3 - 5 N·m  
(0.3 - 0.5 kg-m, 26 - 44 in-lb)



### CAUTION:

Do not overtighten bolts, otherwise, they may be damaged.

# SUPER MULTIPLE JUNCTION (SMJ)

## Terminal Arrangement


### MAIN ROOM HARNESS

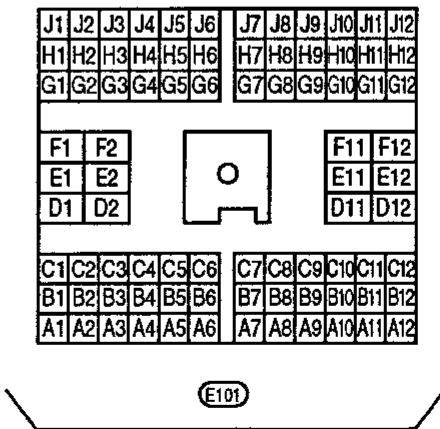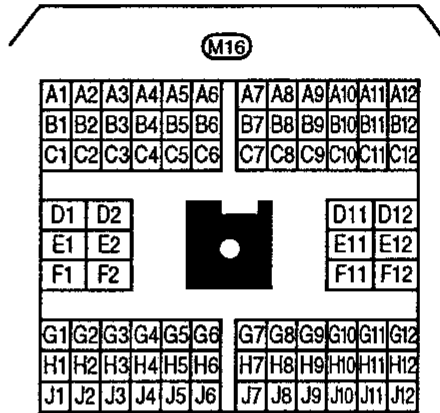


### ENGINE HARNESS

# FUSE BLOCK - JUNCTION BOX (J/B)

## Terminal Arrangement

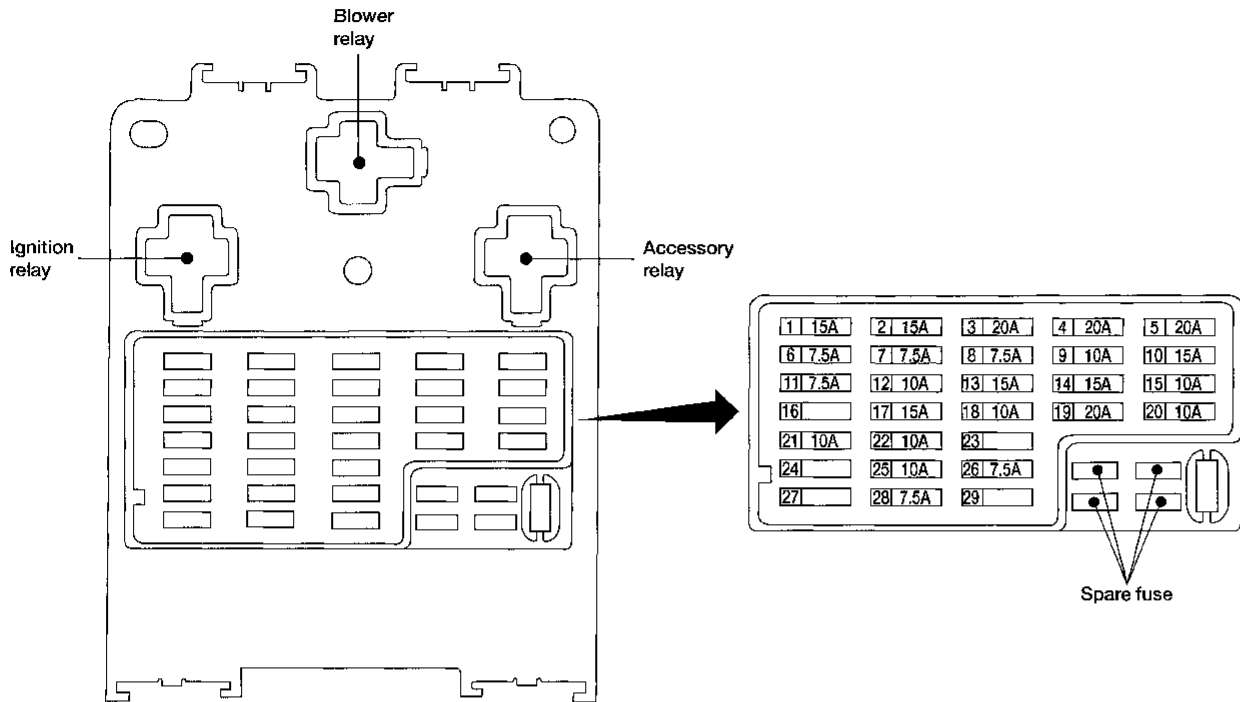

To main harness

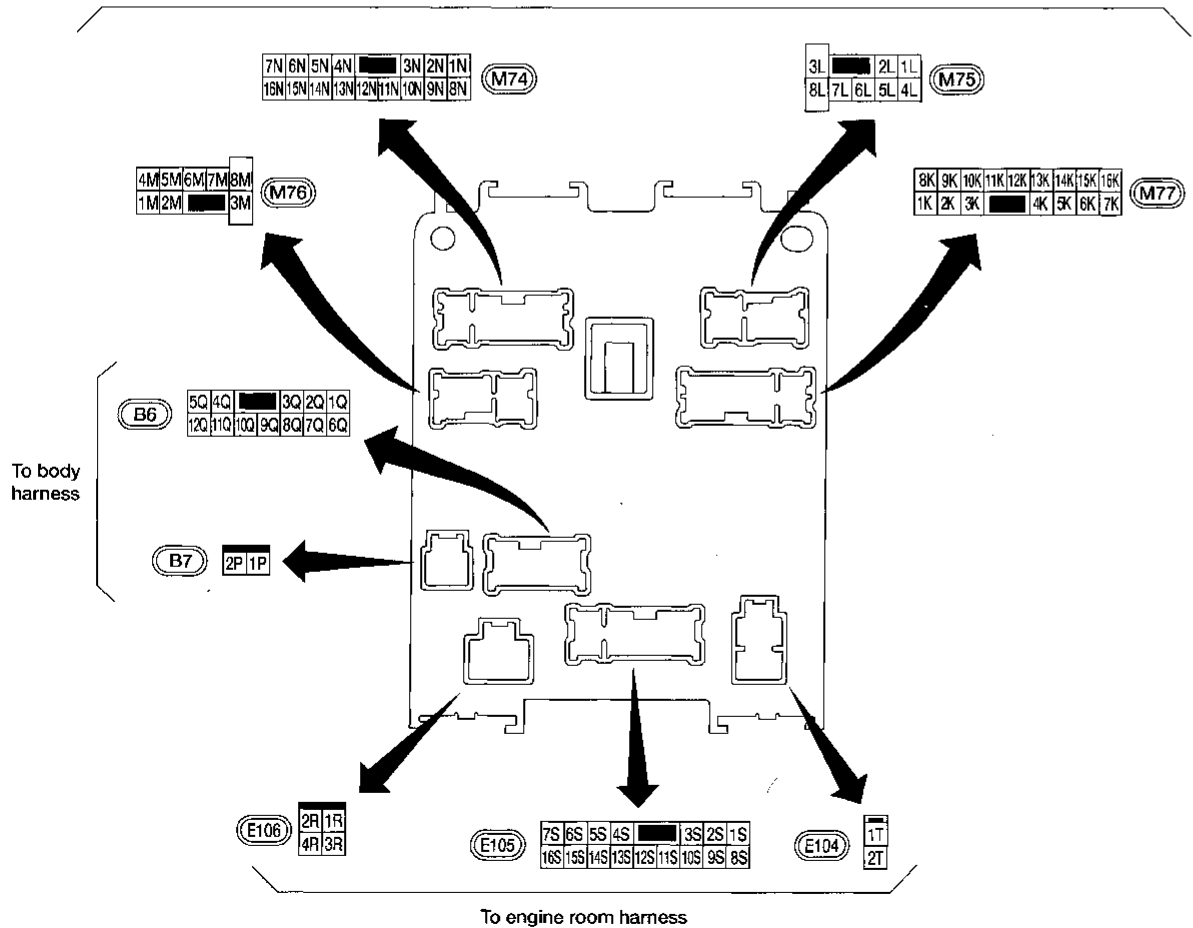





# ELECTRICAL UNITS

## Terminal Arrangement
 
### SMART ENTRANCE CONTROL UNIT




### AIR BAG DIAGNOSIS SENSOR UNIT

 


View from harness side

### ABS CONTROL UNIT

 


### TCM (TRANSMISSION CONTROL MODULE)

 

View from harness side

### ECM (ECCS CONTROL MODULE)

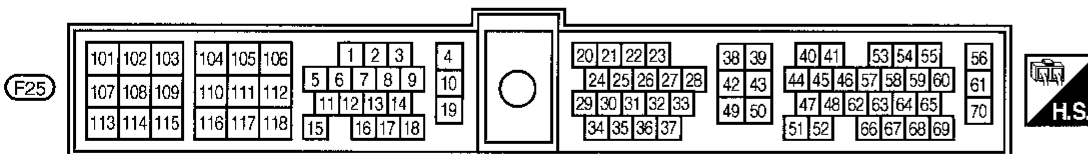

View from harness side

# JOINT CONNECTOR (J/C)

## Terminal Arrangement

