



SUPER MULTIPLE JUNCTION (SMJ)

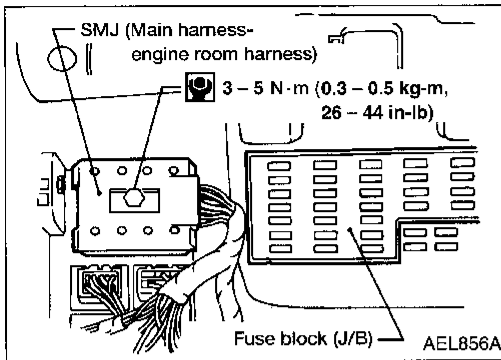

INSTALLATION

To install SMJ, tighten bolts until orange "fulltight" mark appears and then retighten to specified torque as required.

 : 3 - 5 N·m
(0.3 - 0.5 kg·m, 26 - 44 in-lb)



CAUTION:

Do not overtighten bolts, otherwise, they may be damaged.

SUPER MULTIPLE JUNCTION (SMJ)

Terminal Arrangement


MAIN ROOM HARNESS

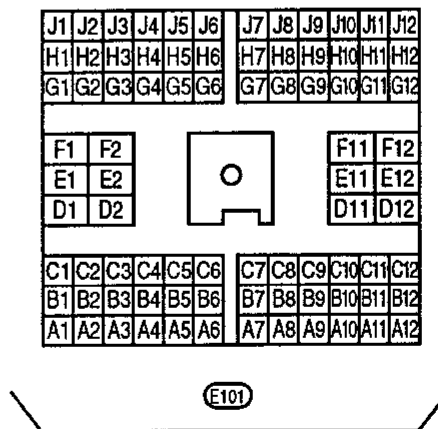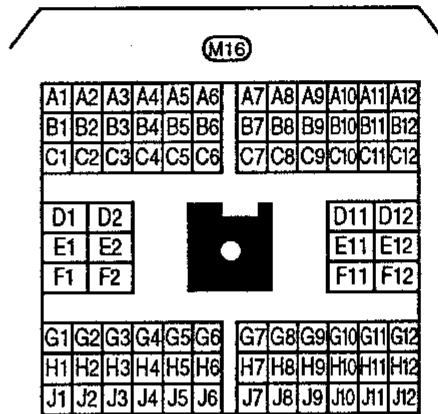


ENGINE HARNESS

FUSE BLOCK - JUNCTION BOX (J/B)

Terminal Arrangement

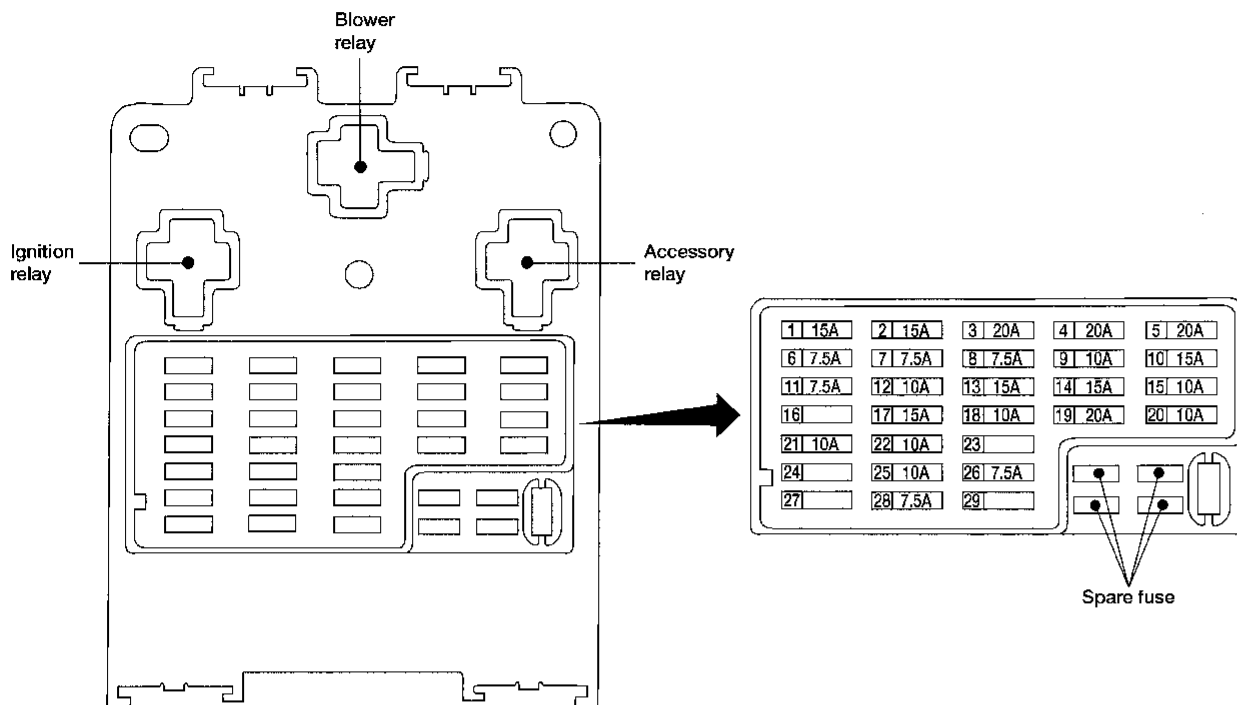


To main harness

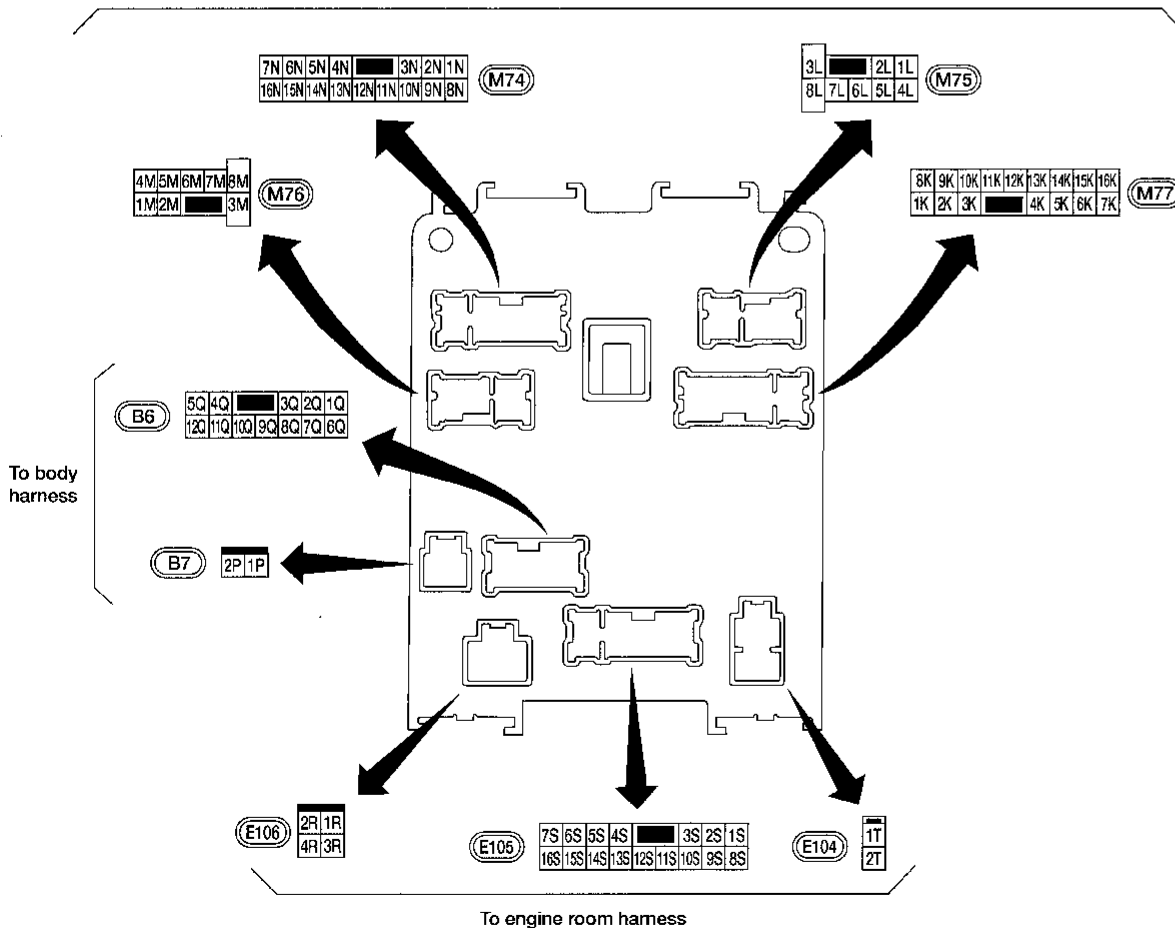


FUSE AND FUSIBLE LINK BOX

Terminal Arrangement

Fusible link box (E15)

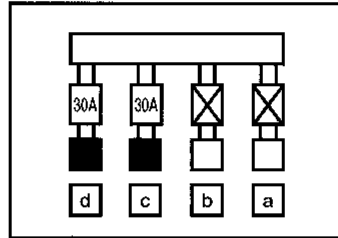


Fusible link box (E17)

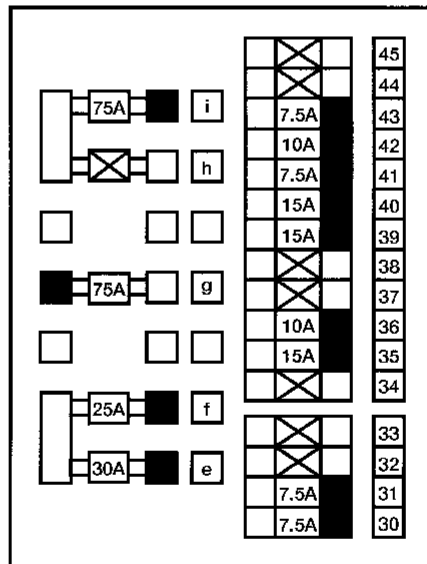


ELECTRICAL UNITS

Terminal Arrangement

 SMART ENTRANCE CONTROL UNIT




AIR BAG DIAGNOSIS SENSOR UNIT

 


View from harness side

 ABS CONTROL UNIT




TCM (TRANSMISSION CONTROL MODULE)

 

View from harness side

ECM (ECCS CONTROL MODULE)

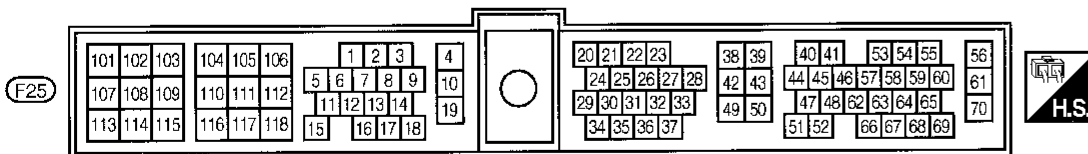

View from harness side

JOINT CONNECTOR (J/C)

Terminal Arrangement

