
ALPHABETICAL INDEX

A

A-BAG BRANCH LINE CIRCUIT .LAN-54, LAN-76,
LAN-90, LAN-105, LAN-125, LAN-146,
LAN-168, LAN-191

A/B WARNING LAMP IS OFF, PASS A/B INDCTR
LAMP TURNS ON INTERMIT SRC-126

A/C ASSEMBLY SWITCH..... HAC-189

A/C AUTO AMP. HAC-34, HAC-105, HAC-141,
HAC-190

A/C AUTO AMP. CONNECTION RECOGNITION
SIGNAL CIRCUIT MWI-62, MWI-138

A/C ON SIGNAL.....HAC-86, HAC-169

A/C SWITCH ASSEMBLY..... HAC-104

A/C SWITCH ASSEMBLY SIGNAL CIRCUIT
HAC-85, HAC-168

ABBREVIATIONS GI-14

ABS ACTUATOR AND ELECTRIC UNIT
(CONTROL UNIT)BRC-43, BRC-160, BRC-211,
BRC-350

ABS BRANCH LINE CIRCUITLAN-51, LAN-74,
LAN-87, LAN-102, LAN-122, LAN-143,
LAN-165, LAN-188

ABS WARNING LAMPBRC-143, BRC-328

ACCELERATOR CONTROL SYSTEM ACC-3

ACCELERATOR PEDAL RELEASED POSITION
LEARNING..... EC-142

ACTION TEST BRC-256, CCS-66, DAS-124

ADAS CONTROL UNITBRC-219, CCS-33, DAS-16,
DAS-67, DAS-94

ADDITIONAL SERVICE WHEN REMOVING
BATTERY NEGATIVE TERMINAL.....PWC-27

ADDITIONAL SERVICE WHEN REPLACING ABS
ACTUATOR AND ELECTRIC UNIT (CONTROL
UNIT)BRC-65, BRC-239

ADDITIONAL SERVICE WHEN REPLACING ADAS
CONTROL UNITDAS-33

ADDITIONAL SERVICE WHEN REPLACING
CONTROL UNIT SEC-61, SEC-178

ADDITIONAL SERVICE WHEN REPLACING
CONTROL VALVE OR TRANSAXLE
ASSEMBLY TM-148

ADDITIONAL SERVICE WHEN REPLACING ECM
EC-139

ADDITIONAL SERVICE WHEN REPLACING ICC
SENSOR..... BRC-240, CCS-56, DAS-123

ADDITIONAL SERVICE WHEN REPLACING
POWER WINDOW MAIN SWITCHPWC-28

ADDITIONAL SERVICE WHEN REPLACING TCM
TM-143

ADDITIONAL SERVICE WHEN REPLACING
TRANSAXLE ASSEMBLY..... TM-145

ADJUSTMENT OF STEERING ANGLE SENSOR
NEUTRAL POSITIONBRC-66, BRC-241

AIR BREATHER HOSE..... TM-27, TM-270

AIR CLEANER AND AIR DUCT EM-25

AIR CLEANER FILTER EM-18

AIR MIX DOOR MOTOR..... HAC-164

ALL DOORS DO NOT LOCK/UNLOCK OR TRUNK/
BACK DOOR DO NOT OPEN WITH REQUEST
SWITCHDLK-127

AMBIENT SENSOR HAC-106

AMBIENT SENSOR SIGNAL CIRCUIT MWI-60,
MWI-136

AMP ON SIGNAL CIRCUIT AV-299

ANTENNA AMP. ... AV-64, AV-124, AV-218, AV-330

ANTENNA FEEDERAV-61, AV-121, AV-215, AV-327

ANTI-PINCH INSPECTION..... PWC-30

ANTI-PINCH SYSTEM DOES NOT OPERATE
NORMALLY (DRIVER SIDE) PWC-67

APPLICATION NOTICE MWI-5, MWI-78

ASCD INDICATOR EC-465

AUDIO SYSTEM AV-52, AV-111

AUDIO UNIT.....AV-20, AV-57

AUTO LIGHT SYSTEM EXL-49, EXL-180

AUTO OPERATION DOES NOT OPERATE. RF-30

AUTO OPERATION DOES NOT OPERATE BUT
MANUAL OPERATE NORMALLY (DRIVER
SIDE)..... PWC-66

AUTOMATIC AIR CONDITIONING SYSTEM
HAC-41

AUTOMATIC SPEED CONTROL DEVICE (ASCD)
CCS-137

AUXILIARY INPUT JACK...AV-51, AV-196, AV-307

AV BRANCH LINE CIRCUITLAN-60, LAN-130,
LAN-151, LAN-174, LAN-197

AV CONTROL UNIT AV-81, AV-116, AV-141,
AV-210, AV-236, AV-321, AV-389

B

B TERMINAL CIRCUIT CHG-23, STR-26

B0001 DRIVER AIR BAG MODULE SRC-45

B0002 DRIVER AIR BAG MODULE SRC-49

B0010 PASSENGER AIR BAG MODULE .. SRC-53

B0011 PASSENGER AIR BAG MODULE .. SRC-56

B0020 SIDE AIRBAG MODULE LH SRC-59

B0021 SIDE CURTAIN AIR BAG MODULE LH
SRC-62

B0028 SIDE AIRBAG MODULE RH SRC-65

B0029 SIDE CURTAIN AIR BAG MODULE RH.....
SRC-68

B0091 FRONT SIDE AIR BAG SATELLITE
SENSOR LH SRC-71

B0092 REAR SIDE AIR BAG SATELLITE SENSOR
LH..... SRC-74

B0093 FRONT DOOR SATELLITE SENSOR LH ...
SRC-77

B0094 CRASH ZONE SENSOR SRC-80

B0096 FRONT SIDE AIR BAG SATELLITE SENSOR RH	SRC-83	B2581, B2582 INTAKE SENSOR	HAC-66
B0097 REAR SIDE AIR BAG SATELLITE SENSOR RH	SRC-86	B2601 SHIFT POSITION	SEC-80
B0098 FRONT DOOR SATELLITE SENSOR RH... SRC-89		B2602 SHIFT POSITION	SEC-82
B00A0 OCCUPANT CLASSIFICATION SYSTEM CONTROL UNIT	SRC-92	B2603 SHIFT POSITION	SEC-85
B00D5 FRONT PASSENGER AIR BAG OFF INDICATOR	SRC-99	B2604 SHIFT POSITION	SEC-90
B130D TCU	AV-365	B2605 SHIFT POSITION	SEC-93
B1310 TCU	AV-366	B2608 STARTER RELAY	SEC-95
B13D9 TCU	AV-367	B260F ENGINE STATUS	SEC-97
B13E1 TCU	AV-368	B2614 ACC RELAY CIRCUIT	PCS-86
B1428 SEAT BELT BUCKLE SWITCH LH	SRC-102	B2615 BLOWER RELAY CIRCUIT	PCS-88
B1429 SEAT BELT BUCKLE SWITCH RH	SRC-105	B2616 IGNITION RELAY CIRCUIT	PCS-90
B142A IGN VOLTAGE	SRC-116	B2618 BCM	PCS-92
B142X COLLISION DETECTION	SRC-118	B261A PUSH-BUTTON IGNITION SWITCH	PCS-94
B1430, B1432 SEAT BELT PRE-TENSIONER LH.. SRC-108		B261F ASCD CLUTCH SWITCH	SEC-98
B1431, B1433 SEAT BELT PRE-TENSIONER RH . SRC-112		B2620 PARK/NEUTRAL POSITION SWITCH..... SEC-101	
B14XX AIR BAG DIAGNOSIS SENSOR UNIT	SRC-120	B2621 INSIDE ANTENNA	DLK-74
B2098 IGNITION RELAY ON STUCK	PCS-28, PCS-57	B2622 INSIDE ANTENNA	DLK-77
B2099 IGNITION RELAY OFF STUCK	PCS-29, PCS-58	B2623 INSIDE ANTENNA	DLK-80
B209F CRANKING REQUEST CIRCUIT .	SEC-118	B2626 OUTSIDE ANTENNA	DLK-83
B20A0 CRANKING REQUEST CIRCUIT .	SEC-120	B2627 OUTSIDE ANTENNA	DLK-86
B210B STARTER CONTROL RELAY	SEC-122	B2628 OUTSIDE ANTENNA	DLK-89
B210C STARTER CONTROL RELAY	SEC-123	B2630, B2631 SUNLOAD SENSOR	HAC-69
B210D STARTER RELAY	SEC-125	B26E8 CLUTCH INTERLOCK SWITCH... SEC-104	
B210E STARTER RELAY	SEC-127	B26F1 IGNITION RELAY	PCS-96
B210F SHIFT POSITION/CLUTCH INTERLOCK SWITCH	SEC-129	B26F2 IGNITION RELAY	PCS-98
B2110 SHIFT POSITION/CLUTCH INTERLOCK SWITCH	SEC-131	B26F3 STARTER CONTROL RELAY	SEC-108
B2190, P1614 NATS ANTENNA AMP.	SEC-183	B26F4 STARTER CONTROL RELAY	SEC-109
B2191, P1615 DIFFERENCE OF KEY	SEC-186	B26F6 BCM	PCS-100
B2192 ID DISCORD, IMMU-ECM	SEC-66	B26F7 BCM	SEC-110
B2192, P1611 ID DISCORD, IMMU-ECM	SEC-187	B26F8 BCM	SEC-111
B2193 CHAIN OF ECM-IMMU	SEC-67	B26F9 CRANKING REQUEST CIRCUIT .	SEC-112
B2193, P1612 CHAIN OF ECM-IMMU	SEC-189	B26FA CRANKING REQUEST CIRCUIT .	SEC-114
B2195 ANTI-SCANNING	SEC-68, SEC-190	B26FB CLUTCH SWITCH	SEC-116
B2196 DONGLE UNIT	SEC-69, SEC-191	B26FC KEY REGISTRATION	SEC-117
B2198 NATS ANTENNA AMP.	SEC-71	B27A0, B27A1 INTAKE DOOR MOTOR	HAC-79
B2205 VEHICLE SPEED	MWI-48, MWI-123	B27A2, B27A3, B27A4, B27A5 AIR MIX DOOR MOTOR (DRIVER SIDE)	HAC-72
B2267 ENGINE SPEED	MWI-49, MWI-124	B27A6, B27A7, B27A8, B27A9 MODE DOOR MOTOR	HAC-77
B2268 WATER TEMP	MWI-50, MWI-125	B27AA, B27AB, B27AC, B27AD AIR MIX DOOR MOTOR (PASSENGER SIDE)	HAC-74
B2555 STOP LAMP	SEC-74	B2E33 TELEMATICS SWITCH	AV-369
B2556 PUSH-BUTTON IGNITION SWITCH	SEC-77	BACK-UP LAMP	EXL-83, EXL-213
B2557 VEHICLE SPEED	SEC-79	BASE AUDIO	AV-25
B2562 LOW VOLTAGE	BCS-70	BASIC INSPECTION	EC-135
B2578, B2579 IN-VEHICLE SENSOR	HAC-60	BATTERY	PG-65, PG-74
B257B, B257C AMBIENT SENSOR	HAC-63	BATTERY CURRENT SENSOR	PG-77
		BATTERY SAVER OUTPUT/POWER SUPPLY CIRCUIT	INL-52
		BATTERY TERMINAL WITH FUSIBLE LINK	PG-76
		BCM	BCS-30, BCS-53, BCS-78, BCS-103, BCS-117, DLK-40, DLK-217, INL-16, WT-14
		BCM (BODY CONTROL MODULE)	BCS-135, MWI-28, MWI-102, PWC-15, RF-11

BCM BRANCH LINE CIRCUIT LAN-63, LAN-81, LAN-95, LAN-112, LAN-132, LAN-154, LAN-176, LAN-200

BCM, COMBINATION METER WCS-22

BCM, IPDM E/R DEF-19, EXL-34, EXL-166, PCS-71, WW-23

BLIND SPOT WARNING INDICATOR DAS-158

BLOWER FAN ON SIGNAL HAC-88, HAC-173

BLOWER MOTOR HAC-90, HAC-175, VTL-10

BLOWER MOTOR RESISTOR HAC-195

BLUETOOTH CONTROL UNIT AV-67

BLUETOOTH® CONTROL SIGNAL CIRCUIT AV-45

BLUETOOTH® CONTROL UNIT AV-23

BLUETOOTH® VOICE SIGNAL CIRCUIT AV-43

BODY ALIGNMENT BRM-46

BODY COMPONENT PARTS BRM-12

BODY EXTERIOR PAINT COLOR BRM-2

BODY SEALING BRM-19

BODY SIDE TRIM INT-23

BOSE SPEAKER AMP AV-241, AV-332

BOTH DOORS MIRROR DEFOGGER DON'T OPERATE BUT REAR WINDOW DEFOGGER OPERATES DEF-43

BOTH SIDE FRONT FOG LAMPS ARE NOT TURNED ON EXL-122, EXL-252

BOTH SIDE HEADLAMPS (HI) ARE NOT TURNED ON EXL-249

BOTH SIDE HEADLAMPS (LO) ARE NOT TURNED ON EXL-120, EXL-250

BOTH SIDE HEADLAMPS DO NOT SWITCH TO HIGH BEAM EXL-118

BRAKE BOOSTER BR-11, BR-34

BRAKE CONTROL SYSTEM BRC-51, BRC-225

BRAKE FLUID BR-9, BR-16

BRAKE MASTER CYLINDER BR-10, BR-32

BRAKE PEDAL BR-8, BR-15, BR-23

BRAKE PEDAL POSITION SWITCH EC-462

BRAKE PEDAL VIBRATION OR OPERATION SOUND OCCURS BRC-153, BRC-343

BRAKE PIPING BR-25

BRAKE WARNING LAMP BRC-144, BRC-329

C

C10B7 YAW RATE SENSOR CCS-101

C1101, C1102, C1103, C1104 WHEEL SENSOR ... BRC-72, BRC-257

C1105, C1106, C1107, C1108 WHEEL SENSOR ... BRC-77, BRC-262

C1109 POWER AND GROUND SYSTEM BRC-84, BRC-269

C1110 ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) BRC-86

C1110, C1153 ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) BRC-271

C1111 ABS MOTOR, MOTOR RELAY SYSTEM BRC-87, BRC-273

C1113, C1145, C1146 YAW RATE/SIDE/DECEL G SENSOR BRC-90, BRC-276

C1115 WHEEL SENSOR BRC-92, BRC-278

C1116 STOP LAMP SWITCH BRC-99, BRC-285

C1120, C1122, C1124, C1126 ABS IN VALVE SYSTEM BRC-105, BRC-291

C1121, C1123, C1125, C1127 ABS OUT VALVE SYSTEM BRC-107, BRC-293

C1130 ENGINE SIGNAL BRC-109, BRC-295

C1140 ACTUATOR RELAY SYSTEM BRC-111, BRC-297

C1142 PRESS SENSOR BRC-113, BRC-299

C1143 STEERING ANGLE SENSOR BRC-116, BRC-302

C1144 INCOMPLETE STEERING ANGLE SENSOR ADJUSTMENT BRC-120, BRC-306

C1154 TRANSMISSION RANGE SWITCH BRC-122, BRC-308

C1155 BRAKE FLUID LEVEL SWITCH .. BRC-124, BRC-310

C1160 INCOMPLETE DECEL G SENSOR CALIBRATION BRC-128, BRC-314

C1164, C1165 CV SYSTEM BRC-130, BRC-316

C1166, C1167 SV SYSTEM BRC-132, BRC-318

C1170 VARIANT CODING BRC-134, BRC-320

C1601 BATTERY POWER SUPPLY STC-23

C1604 TORQUE SENSOR STC-26

C1606 EPS MOTOR STC-28

C1607, C1608 EPS CONTROL UNIT STC-29

C1609 VEHICLE SPEED SIGNAL STC-30

C1704, C1705, C1706, C1707 LOW TIRE PRESSURE WT-25

C1708, C1709, C1710, C1711 TRANSMITTER (NO DATA) WT-27

C1716, C1717, C1718, C1719 TRANSMITTER (PRESSURE DATA) WT-30

C1729 VEHICLE SPEED SIGNAL WT-32

C1A00 CONTROL UNIT CCS-70, DAS-36

C1A01 POWER SUPPLY CIRCUIT 1, C1A02 POWER SUPPLY CIRCUIT 2 CCS-71, DAS-37

C1A03 VEHICLE SPEED SENSOR CCS-72, DAS-38

C1A04 ABS/TCS/VDC SYSTEM CCS-74

C1A05 BRAKE SW/STOP LAMP SW CCS-75

C1A06 OPERATION SW CCS-79

C1A07 CVT CCS-111

C1A0C ADAS MESSAGE COUNTER FAILURE CCS-114

C1A0D MRR CAN FAILURE CCS-115

C1A12 LASER BEAM OFF CENTER CCS-82

C1A13 STOP LAMP RELAY DAS-40

C1A14 ECM CCS-83, DAS-45

C1A15 GEAR POSITION CCS-85

C1A16 RADAR BLOCKED OR STAINED .. CCS-87

C1A17 ICC SENSOR CCS-89, DAS-47

C1A18 RADAR AIMING INCMP CCS-90

C1A21 UNIT HIGH TEMP	CCS-91
C1A24 NP RANGE	CCS-92
C1A26 ECD MODE MALFUNCTION	CCS-94
C1A27 ECD POWER SUPPLY CIRCUIT ...	CCS-96
C1A34 COMMAND ERROR.....	DAS-48
C1A39 STEERING ANGLE SENSOR.....	CCS-98
C1A50 ADAS CONTROL UNIT	CCS-100
C1B50 SIDE RADAR MALFUNCTION.....	DAS-126
C1B51 BLIND SPOT WARNING INDICATOR SHORT CIRCUIT	DAS-127
C1B52 BLIND SPOT WARNING INDICATOR OPEN CIRCUIT	DAS-129
C1B53 SIDE RADAR RIGHT MALFUNCTION	DAS-49
C1B54 SIDE RADAR LEFT MALFUNCTION	DAS-50
C1B55 RADAR BLOCKAGE	DAS-131
C1B5D FEB OPE COUNT LIMIT	CCS-99
CALIBRATION OF DECEL G SENSOR....	BRC-68, BRC-243
CALIBRATION OF G SENSOR	TM-151
CAMSHAFT	EM-60
CAMSHAFT VALVE CLEARANCE.....	EM-20
CAN COMMUNICATION CIRCUIT	LAN-67, LAN-82, LAN-96, LAN-114, LAN-135, LAN-157, LAN-180, LAN-204
CAN SYSTEM	LAN-35
CENTER CONSOLE ASSEMBLY	IP-17, IP-23
CHARGING SYSTEM	CHG-7, CHG-9, CHG-28
CHARGING SYSTEM PRELIMINARY INSPECTION	CHG-20
CHASSIS AND BODY MAINTENANCE	MA-24
CHIME DOES NOT SOUND ...	CCS-123, DAS-149
CLUSTER LID A	IP-19
CLUSTER LID C	IP-20
CLUTCH DISC AND CLUTCH COVER	CL-17
CLUTCH FLUID	CL-7
CLUTCH MASTER CYLINDER.....	CL-12
CLUTCH PEDAL	CL-5, CL-10
CLUTCH PIPING	CL-14
COIL SPRING	RSU-11
COLLISION DIAGNOSIS	SR-5
COMBINATION METERMWI-21, MWI-74, MWI-95, MWI-150	
COMBINATION METER BUZZER.....	DLK-93
COMBINATION SWITCH	BCS-80, BCS-137, EXL-137, EXL-267
COMBINATION SWITCH INPUT CIRCUIT	BCS-72, BCS-129
COMBINATION SWITCH OUTPUT CIRCUIT	BCS-74, BCS-131
COMBINATION SWITCH SYSTEM SYMPTOMS ...	BCS-76, BCS-133
COMPRESSION PRESSURE.....	EM-23
COMPRESSOR.....	HA-30
COMPRESSOR DOES NOT OPERATE .	HAC-102, HAC-187

CONDENSER.....	DEF-49, HA-39
CONFIGURATION (ADAS CONTROL UNIT)	DAS-34
CONFIGURATION [ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)]..	BRC-70, BRC-245
CONTROL CABLE	TM-259
CONTROL LINKAGE.....	TM-22
COOLER PIPE AND HOSE.....	HA-35
COOLING FAN	CO-17, EC-479
CORROSION PROTECTION	BRM-16
COWL TOP.....	EXT-25
CRASH ZONE SENSOR.....	SR-27
CSC (CONCENTRIC SLAVE CYLINDER)	CL-16
CVT CONTROL SYSTEM	TM-129, TM-248
CVT FLUID	TM-253
CVT FLUID FILTER.....	TM-288
CVT OIL WARMER.....	TM-287
CVT POSITION	TM-154
CVT SHIFT LOCK SYSTEM.....	TM-137
CVT SHIFT SELECTOR.....	TM-256
CYLINDER BLOCK	EM-94
CYLINDER HEAD.....	EM-72

D

DAYTIME LIGHT SYSTEM INOPERATIVE	EXL-119
DAYTIME RUNNING LIGHT RELAY CIRCUIT.....	EXL-99, EXL-226
DAYTIME RUNNING LIGHT SYSTEM.....	EXL-41, EXL-173
DEFOGGER SYSTEM SYMPTOMS	DEF-40
DIAGNOSIS AND REPAIR WORK FLOW .	AV-359, BRC-62, BRC-236, CCS-54, DAS-120, DEF-27, DLK-69, DLK-238, DMS-13, DMS-33, DMS-50, DMS-70, EXL-88, EXL-218, PCS-80, SEC-58, SEC-175, SRC-38, TM-140, WT-21
DIAGNOSIS SENSOR UNIT	SR-30, SRC-19
DIAGNOSIS SYSTEM (A/C AUTO AMP.) ..	HAC-24
DIAGNOSIS SYSTEM (ADAS CONTROL UNIT)....	CCS-24, DAS-11, DAS-83
DIAGNOSIS SYSTEM (AIR BAG)	SRC-15
DIAGNOSIS SYSTEM (AUDIO UNIT).....	AV-16
DIAGNOSIS SYSTEM (AV CONTROL UNIT)	AV-76, AV-139, AV-234
DIAGNOSIS SYSTEM (BCM).....	BCS-16, BCS-92, DLK-35, DLK-214, EXL-157, HAC-28, PCS-67, RF-9, SEC-19, SEC-150
DIAGNOSIS SYSTEM (BCM) (WITH INTELLIGENT KEY SYSTEM)	DEF-7, EXL-20, HAC-129, INL-10, PWC-11, WCS-18, WT-10, WW-11
DIAGNOSIS SYSTEM (BCM) (WITHOUT INTELLIGENT KEY SYSTEM) DEF-9, EXL-23, HAC-131, INL-13, PWC-13, WCS-20, WT-12, WW-13	
DIAGNOSIS SYSTEM (BLUETOOTH® CONTROL UNIT)	AV-19

DIAGNOSIS SYSTEM (COMBINATION METER) .. MWI-17, MWI-90, WCS-9	DOOR MIRROR REMOTE CONTROL SWITCH.... MIR-22
DIAGNOSIS SYSTEM (ECM)..... EC-56	DOOR MIRROR REMOTE CONTROL SWITCH (MIRROR SWITCH/CHANGEOVER SWITCH) MIR-10
DIAGNOSIS SYSTEM (EPS CONTROL UNIT)..... STC-10	DOOR MIRROR TURN SIGNAL LAMP ... EXL-131, EXL-261
DIAGNOSIS SYSTEM (ICC SENSOR)... BRC-207, CCS-29, DAS-88	DOOR MOTOR HAC-111, HAC-193
DIAGNOSIS SYSTEM (IPDM E/R)..... EXL-162, HAC-30, PCS-9, PCS-38, SEC-152	DOOR MOTOR STARTING POSITION RESET HAC-57
DIAGNOSIS SYSTEM (IPDM E/R) (WITH INTELLIGENT KEY SYSTEM)DEF-11, EXL-26, HAC-133, WW-15	DOOR OUTSIDE MOLDING EXT-40
DIAGNOSIS SYSTEM (IPDM E/R) (WITHOUT INTELLIGENT KEY SYSTEM)DEF-15, EXL-30, HAC-137, WW-19	DOOR PARTING SEAL..... EXT-43
DIAGNOSIS SYSTEM (SIDE RADAR LH) .DAS-92	DOOR REQUEST SWITCHDLK-106, DLK-191
DIAGNOSIS SYSTEM (SIDE RADAR RH).DAS-93	DOOR SASH TAPE..... EXT-35
DIAGNOSIS SYSTEM (TCM) TM-107	DOOR SWITCH DLK-108, DLK-188, DLK-246, DLK-333, PWC-53, RF-27
DIAGNOSIS SYSTEM (TCU)..... AV-347	DRIP MOLDING EXT-34
DIAGNOSIS SYSTEM [ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)] . BRC-38, BRC-202	DRIVE BELT EM-15
DIFFERENTIAL SIDE OIL SEAL TM-279	DRIVE PLATE EM-92
DISPLAY AUDIO WITHOUT BOSE AV-84	DRIVER AIR BAG MODULESR-12
DLC BRANCH LINE CIRCUIT LAN-55, LAN-77, LAN-91, LAN-106, LAN-126, LAN-147, LAN-169, LAN-192	DRIVER ASSISTANCE SYSTEM SYMPTOMS..... BRC-334, DAS-147
DOES NOT OPERATEBRC-152, BRC-342	DRIVER ASSISTANCE SYSTEMS DAS-22, DAS-109
DOES NOT STOP FULLY-OPEN OR FULLY- CLOSED POSITION RF-32	DRIVER SIDE DOOR MIRROR DEFOGGER DEF-35
DOOR DOES NOT LOCK/UNLOCK AND ENGINE DOES NOT START (ALL I-KEY/REQ SW/PUSH SW) DLK-131	DRIVER SIDE DOOR MIRROR DEFOGGER DOES NOT OPERATE.....DEF-44
DOOR DOES NOT LOCK/UNLOCK AND ENGINE DOES NOT START (ONE I-KEY/REQ SW/ PUSH SW)DLK-139	DRIVER SIDE POWER WINDOW DOES NOT OPERATE PWC-59
DOOR DOES NOT LOCK/UNLOCK AND ENGINE DOES NOT START (REQ SW/PUSH SW) (ALL KEYS)DLK-129	DRIVING FORCE IS HUNTING CCS-125
DOOR DOES NOT LOCK/UNLOCK AND ENGINE DOES NOT START (REQ SW/PUSH SW) (ONE KEY).....SEC-138	DUCTS AND GRILLES VTL-6
DOOR DOES NOT LOCK/UNLOCK WITH DOOR REQUEST SWITCH AND INTELLIGENT KEY DLK-135	
DOOR DOES NOT LOCK/UNLOCK WITH INTELLIGENT KEY DLK-134	E
DOOR DOES NOT LOCK/UNLOCK WITH INTELLIGENT KEY (ONE KEY) DLK-138	EASY FILL TIRE ALERT DOES NOT ACTIVATE ... WT-43
DOOR HANDLEDLK-168, DLK-313	ECM BRANCH LINE CIRCUIT.....LAN-50, LAN-73, LAN-86, LAN-101, LAN-121, LAN-142, LAN-164, LAN-187
DOOR LOCK.....DLK-174, DLK-319	ECM, IPDM E/R, BCMHAC-40, HAC-144, SEC-24, SEC-156
DOOR LOCK ACTUATORDLK-94, DLK-256	ECO MODE.....DMS-20, DMS-27
DOOR LOCK AND UNLOCK SWITCH..... DLK-99, DLK-249	ECV (ELECTRICAL CONTROL VALVE)... HAC-95, HAC-180
DOOR MIRROR.....MIR-4, MIR-19	ELECTRIC OIL PUMP TM-290

ENGINE DOES NOT START WHEN INTELLIGENT KEY IS INSIDE OF VEHICLE (ONE KEY)
[SEC-137](#)
ENGINE MAINTENANCE [MA-14](#)
ENGINE OIL [LU-7](#)
ENGINE ROOM COVER [EM-24](#)
EPS BRANCH LINE CIRCUIT [LAN-56](#), [LAN-78](#),
[LAN-92](#), [LAN-107](#), [LAN-127](#), [LAN-148](#),
[LAN-170](#), [LAN-193](#)
EPS CONTROL UNIT [STC-12](#), [STC-40](#)
EPS WARNING LAMP [STC-32](#)
EPS WARNING LAMP DOES NOT TURN OFF
[STC-34](#)
EPS WARNING LAMP DOES NOT TURN ON
[STC-33](#)
EVAP CANISTER [FL-16](#)
EVAP LEAK CHECK [EC-498](#)
EVAPORATIVE EMISSION SYSTEM [EC-497](#)
EXCESSIVE OPERATION FREQUENCY [BRC-148](#),
[BRC-338](#)
EXHAUST MANIFOLD [EM-30](#)
EXHAUST SYSTEM [EX-4](#), [EX-5](#)
EXTERIOR LIGHTING SYSTEM SYMPTOMS
[EXL-115](#), [EXL-245](#)

F

FENDER PROTECTOR [EXT-27](#)
FILAMENT [DEF-47](#)
FINAL DRIVE [TM-62](#)
FLOOR TRIM [INT-35](#)
FLYWHEEL [EM-90](#)
FORWARD EMERGENCY BRAKING [BRC-333](#)
FREQUENTLY CANNOT DETECT THE VEHICLE
AHEAD / DETECTION ZONE IS SHORT
[CCS-126](#), [DAS-150](#)
FRONT BUMPER [EXT-16](#)
FRONT COIL SPRING AND STRUT [FSU-8](#), [FSU-19](#)
FRONT COMBINATION LAMP [EXL-127](#), [EXL-140](#),
[EXL-257](#), [EXL-270](#)
FRONT DISC BRAKE [BR-12](#), [BR-18](#), [BR-38](#), [BR-49](#)
FRONT DOOR [DLK-157](#), [DLK-302](#)
FRONT DOOR FINISHER [INT-15](#)
FRONT DOOR GLASS [GW-14](#)
FRONT DOOR SPEAKER .. [AV-39](#), [AV-58](#), [AV-100](#),
[AV-118](#), [AV-183](#), [AV-212](#), [AV-287](#), [AV-323](#)
FRONT DRIVE SHAFT [FAX-7](#), [FAX-18](#), [FAX-30](#)
FRONT DRIVE SHAFT BOOT [FAX-12](#)
FRONT FENDER [DLK-154](#), [DLK-299](#)
FRONT FOG LAMP [EXL-56](#), [EXL-125](#), [EXL-129](#),
[EXL-187](#), [EXL-255](#), [EXL-259](#)
FRONT FOG LAMP CIRCUIT ... [EXL-102](#), [EXL-235](#)
FRONT GRILLE [EXT-23](#)
FRONT PASSENGER AIR BAG MODULE ... [SR-21](#)
FRONT PASSENGER SIDE POWER WINDOW
DOES NOT OPERATE [PWC-60](#)
FRONT POWER WINDOW MOTOR [GW-19](#)

FRONT REGULATOR [GW-16](#)
FRONT SEAT [SE-28](#), [SE-40](#)
FRONT SEAT BELT [SB-8](#)
FRONT SEAT BELT BUCKLE SWITCH [SR-38](#)
FRONT STABILIZER [FSU-12](#)
FRONT SUSPENSION ASSEMBLY [FSU-5](#)
FRONT SUSPENSION MEMBER [FSU-16](#)
FRONT TWEETER [AV-102](#), [AV-117](#), [AV-185](#),
[AV-211](#), [AV-290](#), [AV-322](#)
FRONT WHEEL HUB [FAX-8](#)
FRONT WHEEL HUB AND KNUCKLE [FAX-6](#)
FRONT WIPER AND WASHER SYSTEM [WW-6](#)
FRONT WIPER ARM [WW-59](#)
FRONT WIPER AUTO STOP SIGNAL CIRCUIT ...
[WW-42](#)
FRONT WIPER DOES NOT OPERATE [WW-50](#)
FRONT WIPER DRIVE ASSEMBLY [WW-64](#)
FRONT WIPER MOTOR GROUND CIRCUIT
[WW-43](#)
FRONT WIPER MOTOR HI CIRCUIT [WW-40](#)
FRONT WIPER MOTOR LO CIRCUIT [WW-38](#)
FUEL FILLER LID OPENER [DLK-184](#), [DLK-329](#)
FUEL INJECTOR [EC-466](#)
FUEL INJECTOR AND FUEL TUBE [EM-40](#)
FUEL LEVEL SENSOR SIGNAL CIRCUIT [MWI-56](#),
[MWI-132](#)
FUEL LEVEL SENSOR UNIT [FL-19](#)
FUEL LEVEL SENSOR UNIT, FUEL FILTER AND
FUEL PUMP ASSEMBLY [FL-6](#)
FUEL PRESSURE [EC-147](#)
FUEL PUMP [EC-469](#)
FUEL SYSTEM [FL-5](#)
FUEL TANK [FL-11](#)
FUSE BLOCK - JUNCTION BOX (J/B) [PG-62](#)
FUSE INSPECTION [PG-69](#)
FUSE, FUSIBLE LINK AND RELAY BOX [PG-63](#)
FUSIBLE LINK INSPECTION [PG-73](#)

G

G SENSOR [TM-271](#)
GENERAL MAINTENANCE [MA-6](#)
GENERATOR [CHG-29](#)
GLASS LID [RF-40](#)
GLOVE BOX ASSEMBLY [IP-22](#)
GPS ANTENNA [AV-222](#), [AV-335](#), [AV-392](#)
GROUND [PG-35](#)

H

HANDLING PRECAUTION [BRC-201](#), [CCS-21](#),
[DAS-81](#)
HANDLING PRECAUTIONS FOR PLASTICS
[BRM-7](#)
HARNES [PG-44](#)
HAZARD FUNCTION [DLK-111](#), [DLK-276](#)

HAZARD SWITCH ... [EXL-113](#), [EXL-138](#), [EXL-243](#),
[EXL-268](#)
HEADLAMP [EXL-35](#), [EXL-123](#), [EXL-167](#)
HEADLAMP (HI) CIRCUIT [EXL-95](#), [EXL-222](#)
HEADLAMP (LO) CIRCUIT..... [EXL-97](#), [EXL-224](#)
HEADLAMP AIMING ADJUSTMENT [EXL-253](#)
HEADLINING [INT-38](#)
HEATED SEAT [SE-15](#)
HEATER AND AIR CONDITIONING SYSTEM
CONTROL SYMPTOMS.....[HAC-97](#), [HAC-182](#)
HEATER AND AIR CONDITIONING SYSTEM
SYMPTOMS.....[HA-17](#)
HEATING AND COOLING UNIT ASSEMBLY[HA-42](#)
HIGH-MOUNTED STOP LAMP [EXL-132](#), [EXL-262](#)
HOMELINK UNIVERSAL TRANSCEIVER . [DLK-67](#)
HOOD[DLK-144](#), [DLK-289](#)
HORN..... [HRN-3](#), [HRN-6](#)
HORN FUNCTION [DLK-266](#)
HOW TO ERASE PERMANENT DTC [EC-155](#),
[TM-155](#)
HOW TO FOLLOW TROUBLE DIAGNOSES .. [GI-6](#)
HOW TO READ WIRING DIAGRAMS [GI-9](#)
HOW TO SELECT PISTON AND BEARINGEM-112
HOW TO SET SRT CODE [EC-149](#)
HOW TO USE THIS MANUAL [GI-3](#)
HOW TO USE THIS SECTION.....[LAN-6](#), [LAN-22](#)
HVAC BRANCH LINE CIRCUIT .[LAN-61](#), [LAN-152](#),
[LAN-198](#)

I

ICC BRANCH LINE CIRCUIT[LAN-57](#), [LAN-108](#),
[LAN-128](#), [LAN-149](#), [LAN-171](#), [LAN-194](#)
ICC SENSOR[CCS-39](#), [CCS-133](#), [DAS-99](#), [DAS-154](#)
ICC SENSOR ALIGNMENT[BRC-249](#), [CCS-59](#)
ICC SENSOR INITIAL VERTICAL ALIGNMENT
[BRC-247](#), [CCS-57](#)
ICC STEERING SWITCH[CCS-135](#), [DAS-155](#)
ICC STEERING SWITCH (OTHER THAN MAIN
SWITCH) DOES NOT FUNCTION [CCS-121](#)
ICC SYSTEM CANNOT BE SET (MAIN SWITCH
TURNS ON/OFF).....[CCS-119](#)
ICC SYSTEM DOES NOT CANCEL WHEN CVT
SELECTOR LEVER SETS ON
ID REGISTRATION CANNOT BE COMPLETED....
[WT-44](#)
ID REGISTRATION PROCEDURE [WT-22](#)
IDENTIFICATION INFORMATION [GI-23](#)
IDLE AIR VOLUME LEARNING.....[EC-144](#)
IDLE SPEED[EC-495](#)
IGNITION COIL[EM-45](#)
IGNITION SIGNAL[EC-472](#)
IGNITION TIMING.....[EC-496](#)
ILLUMINATION [INL-27](#)
ILLUMINATION CONTROL SWITCH [INL-65](#),
[MWI-77](#), [MWI-153](#)

ILLUMINATION CONTROL SWITCH SIGNAL
CIRCUIT[MWI-54](#), [MWI-130](#)
IN-CABIN MICROFILTER [VTL-4](#), [VTL-5](#)
IN-VEHICLE SENSOR [HAC-107](#)
INPUT SHAFT AND GEAR.....[TM-47](#)
INSIDE KEY ANTENNA[DLK-189](#)
INSIDE MIRROR.....[MIR-7](#), [MIR-17](#)
INSTRUMENT LOWER PANEL LH [IP-21](#)
INSTRUMENT PANEL ASSEMBLY [IP-14](#)
INSUFFICIENT COOLING [HAC-99](#), [HAC-183](#)
INSUFFICIENT HEATING [HAC-101](#), [HAC-185](#)
INTAKE DOOR MOTOR..... [HAC-166](#)
INTAKE MANIFOLD [EM-27](#)
INTAKE SENSOR ...[HAC-109](#), [HAC-171](#), [HAC-191](#)
INTELLIGENT CRUISE CONTROL [CCS-45](#)
INTELLIGENT CRUISE CONTROL SYSTEM
SYMPTOMS.....[CCS-116](#)
INTELLIGENT KEY [DLK-114](#)
INTELLIGENT KEY BATTERY[DLK-194](#)
INTELLIGENT KEY BUTTON OPERATION HAS
POOR RANGE (ALL KEYS)[DLK-136](#)
INTELLIGENT KEY BUTTON OPERATION HAS
POOR RANGE (ONE KEY)[DLK-143](#)
INTELLIGENT KEY SYSTEM[DLK-49](#)
INTELLIGENT KEY SYSTEM ALL FUNCTIONS
CANNOT OPERATE (ALL KEYS).....[DLK-132](#)
INTELLIGENT KEY SYSTEM ALL FUNCTIONS
CANNOT OPERATE (ONE KEY).....[DLK-141](#)
INTELLIGENT KEY SYSTEM SYMPTOMS.....
[DLK-126](#), [SEC-133](#)
INTELLIGENT KEY SYSTEM/ENGINE START
FUNCTION.....[SEC-25](#)
INTELLIGENT KEY WARNING BUZZER [DLK-112](#),
[DLK-192](#)
INTERIOR LIGHTING SYSTEM SYMPTOMSINL-60
INTERIOR ROOM LAMP [INL-63](#)
INTERIOR ROOM LAMP CONTROL CIRCUIT
[INL-54](#)
INTERIOR ROOM LAMP CONTROL SYSTEM.....
[INL-17](#)
INTERMITTENT INCIDENT [SRC-42](#)
IPDM E/R[PCS-31](#), [PCS-60](#)
IPDM E/R (INTELLIGENT POWER DISTRIBUTION
MODULE ENGINE ROOM)...[PCS-13](#), [PCS-21](#),
[PCS-42](#), [PCS-50](#), [PG-64](#)
IPDM-E BRANCH LINE CIRCUIT [LAN-52](#), [LAN-75](#),
[LAN-88](#), [LAN-103](#), [LAN-123](#), [LAN-144](#),
[LAN-166](#), [LAN-189](#)
ITS COMMUNICATION CIRCUITLAN-69, [LAN-116](#),
[LAN-137](#), [LAN-159](#), [LAN-182](#), [LAN-206](#)

K

KEY CYLINDER SWITCH.....[DLK-104](#), [DLK-253](#)
KEY INTERLOCK CABLE[TM-263](#)
KEY SWITCH (BCM INPUT).....[DLK-255](#)
KEY WARNING LAMP [DLK-115](#)

KEYFOB BATTERYDLK-335
KEYFOB BATTERY AND FUNCTION.....DLK-264
KEYFOB ID REGISTRATION.....DLK-241
KEYFOB ID SET UP WITH CONSULTDLK-277
KEYFOB ID SET UP WITHOUT CONSULTDLK-278

L

L TERMINAL CIRCUIT (OPEN)CHG-24
L TERMINAL CIRCUIT (SHORT).....CHG-26
LASER BRANCH LINE CIRCUITLAN-66, LAN-113,
LAN-179, LAN-203
LATCH SYSTEM FOR CHILDRENSB-14
LED HEADLAMPEXL-228
LED HEADLAMP OPERATION INSPECTION
EXL-221
LICENSE LAMP FINISHER.....EXT-44
LICENSE PLATE LAMPEXL-133, EXL-263
LICENSE PLATE LAMP CIRCUITEXL-233
LIFTING POINTGI-33
LINE PRESSURE TEST..... TM-153
LOW TIRE PRESSURE WARNING LAMP . WT-33,
WT-37
LOW TIRE PRESSURE WARNING LAMP BLINKS
WT-42
LOW TIRE PRESSURE WARNING LAMP DOES
NOT TURN OFF.....WT-41
LOW TIRE PRESSURE WARNING LAMP DOES
NOT TURN ONWT-40
LUMBAR SUPPORT SYSTEM.....SE-12

M

M&A BRANCH LINE CIRCUIT LAN-62, LAN-80,
LAN-94, LAN-111, LAN-131, LAN-153, LAN-175,
LAN-199
M/T OIL..... TM-19
MAGNET CLUTCH..... HAC-94, HAC-179
MAIN LINE BETWEEN DLC AND M&A CIRCUIT ...
LAN-48, LAN-72, LAN-85, LAN-99, LAN-119,
LAN-140, LAN-162, LAN-185
MAIN LINE BETWEEN IPDM-E AND DLC CIRCUIT
LAN-47, LAN-71, LAN-84, LAN-98, LAN-118,
LAN-139, LAN-161, LAN-184
MAIN LINE BETWEEN RDR-L AND LASER
CIRCUITLAN-49, LAN-100, LAN-120, LAN-141,
LAN-163, LAN-186
MAIN POWER SUPPLY AND GROUND CIRCUIT .
TM-238
MAIN POWER WINDOW AND DOOR LOCK/
UNLOCK SWITCH PWC-69
MAIN SWITCH DOES NOT TURN ON, MAIN
SWITCH DOES NOT TURN OFF CCS-117
MAINSHAFT AND GEAR TM-53
MALFUNCTION AREA CHART.....LAN-45
MALFUNCTION INDICATOR LAMPEC-483
MANUAL AIR CONDITIONING SYSTEM HAC-145

MANUAL HEATER SYSTEM..... HAC-153
MAP LAMP INL-61
METER BUZZER CIRCUIT WCS-35
METER SYSTEM MWI-29, MWI-103
MICROPHONEAV-68, AV-128, AV-223, AV-336,
AV-394
MICROPHONE SIGNAL CIRCUIT . AV-46, AV-106,
AV-191, AV-302
MIXTURE RATIO SELF-LEARNING VALUE CLEAR
EC-146
MODE DOOR MOTOR.....HAC-162
MOONROOF DOES NOT OPERATE ANTI-PINCH
FUNCTIONRF-31
MOONROOF DOES NOT OPERATE PROPERLY .
RF-29
MOONROOF MOTOR ASSEMBLY ...RF-12, RF-42
MOONROOF SWITCHRF-25, RF-51
MOONROOF SYSTEMRF-13
MOONROOF UNIT ASSEMBLY.....RF-44, RF-52
MULTI AV SYSTEM..... AV-197, AV-308

N

NATS ANTENNA AMP. SEC-140, SEC-197
NAVIGATION WITH BOSEAV-244
NAVIGATION WITHOUT BOSEAV-145
NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS
SEC-39
NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS
SYMPTOMS SEC-196
NOISE..... HA-20
NOISE, VIBRATION AND HARSHNESS (NVH)
TROUBLESHOOTING BR-7, CL-4, EM-10,
FAX-5, FSU-4, RAX-4, RSU-4, ST-9, TM-18,
WT-45
NORMAL OPERATING CONDITIONAV-55, AV-114,
AV-201, AV-312, AV-388, BCS-77, BCS-134,
BRC-155, BRC-345, CCS-130, DAS-153,
EC-494, EXL-117, EXL-248, WW-52
NVIS (NISSAN VEHICLE IMMOBILIZER SYSTEM-
NATS) SEC-157

O

OCCUPANT CLASSIFICATION SYSTEM.... SR-32
OD OFF INDICATOR LAMP TM-243
OIL HA-25
OIL COOLER.....LU-12
OIL FILTER.....LU-10
OIL PANEM-33
OIL PAN, CONTROL VALVE TM-272
OIL PUMP.....LU-15
OIL SEAL.....EM-69
ON BOARD DIAGNOSTIC (OBD) SYSTEM EC-55,
TM-106
ON BOARD REFUELING VAPOR RECOVERY
(ORVR)..... EC-484

OPERATION ..BRC-199, CCS-17, DAS-80, EC-54,
HAC-21, HAC-127
OPERATION INSPECTIONHAC-53, HAC-158
OPTICAL SENSOR...EXL-111, EXL-139, EXL-240,
EXL-269
OUTPUT SPEED SENSOR TM-278
OUTSIDE KEY ANTENNA.....DLK-190
OVERDRIVE CONTROL SWITCH TM-240
OVERHEATING CAUSE ANALYSIS.....CO-9

P

P0011 IVT CONTROL.....EC-174
P0014 EVT CONTROLEC-177
P0030, P0031, P0032 A/F SENSOR 1 HEATER....
EC-180
P0037, P0038 HO2S2 HEATER EC-182
P0075 IVT CONTROL SOLENOID VALVE EC-184
P0078 EVT CONTROL SOLENOID VALVE EC-187
P0101, P0102, P0103 MAF SENSOR EC-190
P0111 IAT SENSOR.....EC-195
P0112, P0113 IAT SENSOR EC-197
P0116 ECT SENSOR.....EC-199
P0117, P0118 ECT SENSOR.....EC-201
P0122, P0123 TP SENSOR.....EC-203
P0125 ECT SENSOREC-206
P0127 IAT SENSOREC-208
P0128 THERMOSTAT FUNCTION EC-210
P0130 A/F SENSOR 1EC-213
P0131 A/F SENSOR 1EC-217
P0132 A/F SENSOR 1EC-220
P0137 HO2S2EC-223
P0138 HO2S2EC-228
P0139 HO2S2EC-235
P014C, P014D, P015A, P015B A/F SENSOR 1.....
EC-241
P0171 FUEL INJECTION SYSTEM FUNCTION
EC-248
P0172 FUEL INJECTION SYSTEM FUNCTION
EC-252
P0181 FTT SENSOREC-256
P0182, P0183 FTT SENSOR.....EC-260
P0196 EOT SENSOREC-263
P0197, P0198 EOT SENSOR.....EC-266
P0222, P0223 TP SENSOR.....EC-268
P0300, P0301, P0302, P0303, P0304 MISFIRE.....
EC-271
P0327, P0328 KS.....EC-277
P0335 CKP SENSOR (POS)EC-279
P0340 CMP SENSOR (PHASE).....EC-282
P0420 THREE WAY CATALYST FUNCTIONEC-285
P0441 EVAP CONTROL SYSTEMEC-290
P0443 EVAP CANISTER PURGE VOLUME
CONTROL SOLENOID VALVE EC-295
P0444, P0445 EVAP CANISTER PURGE VOLUME
CONTROL SOLENOID VALVE EC-300

P0447 EVAP CANISTER VENT CONTROL VALVE
EC-303
P0448 EVAP CANISTER VENT CONTROL VALVE
EC-307
P0451 EVAP CONTROL SYSTEM PRESSURE
SENSOR EC-311
P0452 EVAP CONTROL SYSTEM PRESSURE
SENSOREC-315
P0453 EVAP CONTROL SYSTEM PRESSURE
SENSOR EC-318
P0456 EVAP CONTROL SYSTEM EC-322
P0460 FUEL LEVEL SENSOR EC-328
P0461 FUEL LEVEL SENSOR EC-329
P0462, P0463 FUEL LEVEL SENSOR EC-331
P0500 VSS EC-332
P0506 ISC SYSTEM EC-336
P0507 ISC SYSTEM EC-338
P050A, P050B, P050E COLD START CONTROL ..
EC-340
P0520 EOP SENSOR EC-342
P0524 ENGINE OIL PRESSURE..... EC-345
P0603 ECM EC-348
P0604 ECM EC-349
P0605 ECM EC-350
P0606 ECM EC-351
P0607 ECM EC-352
P060A ECM..... EC-353
P060B ECM..... EC-354
P062F EEPROM TM-164
P0643 SENSOR POWER SUPPLY EC-355
P0705 TRANSMISSION RANGE SENSOR A
TM-165
P0706 TRANSMISSION RANGE SENSOR A
TM-171
P0711 TRANSMISSION FLUID TEMPERATURE
SENSOR A..... TM-174
P0712 TRANSMISSION FLUID TEMPERATURE
SENSOR A..... TM-178
P0713 TRANSMISSION FLUID TEMPERATURE
SENSOR A..... TM-180
P0715 INPUT SPEED SENSOR A TM-182
P0720 OUTPUT SPEED SENSOR TM-185
P0740 TORQUE CONVERTER TM-188
P0743 TORQUE CONVERTER TM-190
P0744 TORQUE CONVERTER TM-192
P0746 PRESSURE CONTROL SOLENOID A.....
TM-194
P0846 TRANSMISSION FLUID PRESSURE SEN/
SW B TM-196
P0847 TRANSMISSION FLUID PRESSURE SEN/
SW B TM-198
P0848 TRANSMISSION FLUID PRESSURE SEN/
SW B TM-200
P0850 PNP SWITCH EC-357
P0863 TCM COMMUNICATION TM-202
P0890 TCM TM-203

P0962 PRESSURE CONTROL SOLENOID A..... TM-205	P2119 ELECTRIC THROTTLE CONTROL ACTUATOR EC-439
P0963 PRESSURE CONTROL SOLENOID A..... TM-207	P2122, P2123 APP SENSOR..... EC-441
P0965 PRESSURE CONTROL SOLENOID B..... TM-209	P2127, P2128 APP SENSOR..... EC-444
P0966 PRESSURE CONTROL SOLENOID B..... TM-210	P2135 TP SENSOR..... EC-447
P0967 PRESSURE CONTROL SOLENOID B..... TM-212	P2138 APP SENSOR EC-450
P0998 SHIFT SOLENOID F TM-214	P219A AIR FUEL RATIO EC-453
P0999 SHIFT SOLENOID F TM-216	P2610 ECM INTERNAL TIMER EC-458
P099B SHIFT SOLENOID G TM-218	P2765 INPUT SPEED SENSOR B TM-227
P099C SHIFT SOLENOID G TM-220	P2857 CLUTCH A PRESSURE..... TM-230
P1078 EVT CONTROL POSITION SENSOREC-361	P2858 CLUTCH B PRESSURE..... TM-232
P1148 CLOSED LOOP CONTROLEC-364	P2859 CLUTCH A PRESSURE..... TM-234
P1212 TCS COMMUNICATION LINEEC-365	P285A CLUTCH B PRESSURE TM-236
P1217 ENGINE OVER TEMPERATURE ...EC-366	PARKING BRAKE CONTROLPB-7
P1225 TP SENSOREC-369	PARKING BRAKE SHOEPB-6, PB-9
P1226 TP SENSOREC-370	PARKING BRAKE SWITCH BRC-139, BRC-324
P1550 BATTERY CURRENT SENSOREC-371	PARKING BRAKE SWITCH SIGNAL CIRCUIT MWI-58, MWI-134
P1551, P1552 BATTERY CURRENT SENSOR..... EC-374	PARKING BRAKE SYSTEM.....PB-4
P1553 BATTERY CURRENT SENSOREC-377	PARKING LAMP CIRCUITEXL-104, EXL-229
P1554 BATTERY CURRENT SENSOREC-380	PARKING, LICENSE PLATE AND TAIL LAMPS..... EXL-71, EXL-202
P1556, P1557 BATTERY TEMPERATURE SENSOREC-383	PARKING, LICENSE PLATE AND TAIL LAMPS ARE NOT TURNED ON.....EXL-121, EXL-251
P1564 ASCD STEERING SWITCH.....EC-385	PASSENGER AIR BAG INDICATOR..... SR-39
P1564 ICC STEERING SWITCHEC-388	PASSENGER SIDE DOOR MIRROR DEFOGGER DEF-37
P1568 ICC FUNCTIONEC-391	PASSENGER SIDE DOOR MIRROR DEFOGGER DOES NOT OPERATE..... DEF-45
P1572 ASCD BRAKE SWITCH.....EC-392	PERFORMANCE TEST..... HA-28
P1572 ICC BRAKE SWITCH.....EC-398	PERIODIC MAINTENANCE MA-8
P1574 ASCD VEHICLE SPEED SENSOR .EC-404	PLUG TM-285
P1574 ICC VEHICLE SPEED SENSOREC-406	POSITION SWITCH TM-17, TM-21
P1586 G SENSOR TM-222	POSITIVE CRANKCASE VENTILATION ... EC-500
P1588 G SENSOR TM-225	POWER DISTRIBUTION SYSTEMPCS-72
P1610 LOCK MODE.....SEC-63, SEC-182	POWER DOOR LOCK SYSTEM DLK-41, DLK-226
P1611 ID DISCORD, IMMU-ECM..... SEC-64	POWER DOOR LOCK SYSTEM SYMPTOMS DLK-280
P1612 CHAIN OF ECM-IMMU SEC-65	POWER GENERATION VOLTAGE VARIABLE CONTROL SYSTEM CHG-8
P1650 STARTER MOTOR RELAY 2EC-408	POWER GENERATION VOLTAGE VARIABLE CONTROL SYSTEM OPERATION INSPECTION..... CHG-21
P1651 STARTER MOTOR RELAY EC-411	POWER SEAT FOR DRIVER SIDESE-8
P1652 STARTER MOTOR SYSTEM COMMEC-413	POWER SOCKET PWO-3, PWO-5
P1715 INPUT SPEED SENSOR.....EC-415	POWER STEERING CONTROL SYSTEM STC-15
P1800 INTAKE MANIFOLD TUNING VALVEEC-417	POWER SUPPLY ROUTING CIRCUIT PG-15
P1805 BRAKE SWITCH.....EC-419	POWER TRANSISTOR HAC-113
P2004 INTAKE MANIFOLD RUNNER CONTROL VALVEEC-422	POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH RH PWC-70
P2014, P2016, P2017, P2018 INTAKE MANIFOLD RUNNER CONTROL VALVE POSITION SENSOREC-425	POWER WINDOW LOCK SWITCH PWC-57
P2096, P2097 A/F SENSOR 1EC-428	POWER WINDOW LOCK SWITCH DOES NOT FUNCTION PWC-68
P2100, P2103 THROTTLE CONTROL MOTOR RELAYEC-432	POWER WINDOW MAIN SWITCH PWC-16
P2101 ELECTRIC THROTTLE CONTROL FUNCTION.....EC-434	POWER WINDOW MOTOR PWC-43
P2118 THROTTLE CONTROL MOTOR.....EC-437	POWER WINDOW SYSTEM..... PWC-18

POWER WINDOWS DO NOT OPERATE WITH
 POWER WINDOW MAIN SWITCHPWC-58
 PRECAUTIONS ACC-2, AV-9, AV-69, AV-130,
 AV-225, AV-338, BCS-5, BCS-81, BR-3, BRC-7,
 BRC-164, BRM-3, CCS-4, CCS-136, CHG-3,
 CL-2, CO-2, DAS-5, DAS-68, DEF-3, DLK-8,
 DLK-196, DMS-3, DMS-22, DMS-40, DMS-59,
 EC-9, EM-3, EX-2, EXL-6, EXL-145, EXT-3,
 FAX-2, FL-2, FSU-2, GI-28, GW-2, HA-3,
 HAC-5, HAC-114, HRN-2, INL-3, INT-3, IP-2,
 LAN-7, LAN-23, LU-2, MA-3, MIR-2, MWI-6,
 MWI-79, PB-2, PCS-4, PCS-33, PCS-62, PG-3,
 PWC-4, PWO-2, RAX-2, RF-3, RSU-2, SB-2,
 SE-2, SEC-5, SEC-142, SR-2, SRC-4, ST-2,
 STC-3, STR-3, TM-7, TM-66, VTL-2, WCS-3,
 WT-3, WW-3
 PRECAUTIONS IN REPAIRING HIGH STRENGTH
 STEEL.....BRM-4
 PRIMARY SPEED SENSORTM-276
 PROCEDURE FOR TEMPORARILY DISABLING
 THE IGNITION BATTERY SAVER SYSTEM....
 PCS-83
 PUSH-BUTTON IGNITION SWITCHPCS-102,
 PCS-108, SEC-141
 PUSH-BUTTON IGNITION SWITCH DOES NOT
 OPERATEPCS-107
 PUSH-BUTTON IGNITION SWITCH
 ILLUMINATION CIRCUIT..... INL-58

R

RADIATOR.....CO-15
 RADIATOR CORE SUPPORT ..DLK-152, DLK-297
 RDR-L BRANCH LINE CIRCUITLAN-64, LAN-133,
 LAN-155, LAN-177, LAN-201
 RDR-R BRANCH LINE CIRCUITLAN-65, LAN-134,
 LAN-156, LAN-178, LAN-202
 REAR AIR SPOILER.....EXT-46
 REAR BUMPER.....EXT-20
 REAR COMBINATION LAMP ..EXL-134, EXL-142,
 EXL-264, EXL-272
 REAR DISC BRAKE BR-14, BR-21, BR-45, BR-52
 REAR DOORDLK-163, DLK-308
 REAR DOOR FINISHER.....INT-19
 REAR DOOR GLASSGW-20
 REAR DOOR SPEAKERAV-293, AV-324
 REAR DRUM BRAKEBR-13, BR-20, BR-42, BR-51
 REAR LH SIDE POWER WINDOW DOES NOT
 OPERATEPWC-62
 REAR PARCEL SHELF FINISHER.....INT-32
 REAR POWER WINDOW MOTORGW-23
 REAR POWER WINDOW SWITCH.....PWC-71
 REAR REGULATORGW-21
 REAR RH SIDE POWER WINDOW DOES NOT
 OPERATEPWC-64
 REAR SEATSE-35, SE-61
 REAR SEAT BELTSB-11

REAR SHOCK ABSORBER.....RSU-8
 REAR SPEAKER ..AV-41, AV-59, AV-104, AV-119,
 AV-187, AV-213
 REAR SUSPENSION ASSEMBLY.....RSU-5
 REAR SUSPENSION BEAM.....RSU-13
 REAR VIEW CAMERA.....AV-129, AV-224, AV-337
 REAR VIEW CAMERA IMAGE SIGNAL CIRCUIT .
 AV-189, AV-300
 REAR WHEEL HUBRAX-5, RAX-6
 REAR WINDOW DEFOGGER AND DOOR
 MIRROR DEFOGGERS DO NOT OPERATE...
 DEF-41
 REAR WINDOW DEFOGGER DOES NOT
 OPERATE BUT BOTH DOOR MIRROR
 DEFOGGERS OPERATEDEF-42
 REAR WINDOW DEFOGGER FEEDBACK SIGNAL
 DEF-39
 REAR WINDOW DEFOGGER POWER SUPPLY
 AND GROUND CIRCUITDEF-33
 REAR WINDOW DEFOGGER RELAYDEF-32
 REAR WINDOW DEFOGGER SWITCH.....DEF-30
 REAR WINDOW DEFOGGER SWITCH DOES NOT
 LIGHT, BUT REAR WINDOW DEFOGGER
 OPERATESDEF-46
 REAR WINDOW DEFOGGER SYSTEMDEF-20
 REAR WINDOW GLASS.....GW-26
 REAR WOOFERAV-296, AV-325
 RECOMMENDED CHEMICAL PRODUCTS AND
 SEALANTSGI-22
 RECOMMENDED FLUIDS AND LUBRICANTS
 MA-12
 REFRIGERANT.....HA-21
 REFRIGERANT PRESSURE SENSOR.....EC-481,
 HAC-110, HAC-192
 REFRIGERATION SYSTEMHA-13
 REFRIGERATION SYSTEM SYMPTOMS....HA-18
 REMOTE KEYLESS ENTRY RECEIVER DLK-116,
 DLK-193, DLK-261, DLK-334
 REMOTE KEYLESS ENTRY SYSTEM.....DLK-218
 REMOTE KEYLESS ENTRY SYSTEM SYMPTOMS
 DLK-281
 REPAIRING MATERIALBRM-10
 REPLACEMENT OPERATIONSBRM-22
 RETAINED POWER OPERATION DOES NOT
 OPERATE PROPERLYRF-33
 REVERSE IDLER SHAFT AND GEARTM-59
 RIGHT/LEFT SWITCHING SIGNAL CIRCUIT
 DAS-145
 ROAD WHEELWT-46
 ROAD WHEEL TIRE ASSEMBLYWT-47
 ROCKER COVEREM-46
 ROOF SIDE MOLDING.....EXT-32

S

S CONNECTOR CIRCUITSTR-28
 S TERMINAL CIRCUITCHG-27

SATELLITE RADIO ANTENNA [AV-127](#), [AV-221](#),
[AV-334](#)
SEAT BELT BUCKLE SWITCH SIGNAL CIRCUIT .
[WCS-36](#)
SEAT BELT INDCTR LAMP IS ON, PASS AIR BAG
INDCTR IS ON OR OFF [SRC-127](#)
SEAT BELT PRE-TENSIONER[SR-37](#)
SEAT BELT WARNING SYSTEM..... [SRC-125](#)
SECONDARY SPEED SENSOR..... [TM-277](#)
SENSOR POWER SUPPLY 2 CIRCUIT[EC-460](#)
SENSOR ROTOR..... [BRC-159](#), [BRC-349](#)
SERVICE DATA AND SPECIFICATIONS (SDS).....
[ACC-5](#), [BR-54](#), [CHG-31](#), [CL-20](#), [CO-27](#), [EC-502](#),
[EM-118](#), [EXL-144](#), [EXL-274](#), [FAX-49](#), [FL-21](#),
[FSU-23](#), [HA-46](#), [INL-66](#), [LU-17](#), [PB-13](#), [PG-78](#),
[PWO-6](#), [RAX-9](#), [RSU-15](#), [ST-20](#), [STR-32](#),
[TM-65](#), [TM-297](#), [WT-55](#), [WW-66](#)
SERVICE INFORMATION FOR ELECTRICAL
INCIDENT [GI-37](#)
SHIFT LOCK SYSTEM..... [TM-245](#)
SHIFT P WARNING LAMP[DLK-118](#)
SHIFT POSITION INDICATOR CIRCUIT ... [TM-244](#)
SHIPPING MODE CANCEL OPERATION [BCS-65](#),
[BCS-124](#)
SIDE AIR BAG (SATELLITE) SENSOR[SR-28](#)
SIDE AIR BAG MODULE[SR-26](#)
SIDE CURTAIN AIR BAG MODULE.....[SR-24](#)
SIDE OIL SEAL [TM-20](#)
SIDE RADAR..... [DAS-157](#)
SIDE RADAR LH [DAS-105](#)
SIDE RADAR RH [DAS-107](#)
SIDE WINDOW GLASS [GW-24](#)
SPARK PLUG [EM-12](#)
SPIRAL CABLE [SR-18](#)
SPORT MODE..... [DMS-57](#), [DMS-64](#)
SPORT MODE SWITCH [DMS-53](#), [DMS-58](#),
[DMS-71](#), [DMS-76](#)
SPORT MODE SYSTEM..... [DMS-45](#), [DMS-65](#)
SQUEAK AND RATTLE TROUBLE DIAGNOSES ..
[DLK-283](#), [EXT-10](#), [GW-5](#), [INT-9](#), [IP-8](#), [MIR-11](#),
[RF-34](#), [SE-22](#)
SRS AIR BAG SYSTEM..... [SRC-26](#)
SRS AIR BAG WARNING LAMP DOES NOT TURN
OFF[SRC-123](#)
SRS AIR BAG WARNING LAMP DOES NOT TURN
ON[SRC-124](#)
STALL TEST..... [TM-152](#)
STARTER MOTOR..... [STR-30](#)
STARTING SYSTEM [STR-29](#)
STARTING SYSTEM (WITH INTELLIGENT KEY)..
[STR-10](#)
STARTING SYSTEM (WITHOUT INTELLIGENT
KEY) [STR-15](#)
STEERING ANGLE SENSOR. [BRC-163](#), [BRC-353](#)
STEERING COLUMN..... [ST-7](#), [ST-13](#)
STEERING COLUMN COVERS [IP-16](#)

STEERING GEAR AND LINKAGE [ST-8](#), [ST-16](#),
[ST-18](#)
STEERING KNUCKLE [FSU-14](#)
STEERING LOCK UNIT [DLK-337](#)
STEERING SWITCH.....[AV-48](#), [AV-60](#), [AV-108](#), [AV-120](#),
[AV-193](#), [AV-214](#), [AV-304](#), [AV-326](#), [MWI-76](#),
[MWI-128](#), [MWI-152](#)
STEERING SWITCH SIGNAL CIRCUIT [MWI-53](#)
STEERING WHEEL..... [ST-5](#), [ST-10](#)
STEERING WHEEL TURNING FORCE IS HEAVY
OR LIGHT [STC-35](#)
STOP LAMP[EXL-79](#), [EXL-209](#)
STRG BRANCH LINE CIRCUIT .. [LAN-58](#), [LAN-79](#),
[LAN-93](#), [LAN-109](#), [LAN-129](#), [LAN-150](#),
[LAN-172](#), [LAN-195](#)
STRUCTURE AND OPERATION [EC-30](#), [TM-15](#),
[TM-85](#)
SUNLOAD SENSOR [HAC-108](#)
SUNSHADE[RF-48](#)
SYSTEM (INTEGRATED HOMELINK
TRANSMITTER)..... [DLK-34](#)
SYSTEM (INTELLIGENT KEY SYSTEM) .. [DLK-23](#)
SYSTEM INITIALIZATION [PWC-29](#)
SYSTEM SETTING [HAC-55](#)
SYSTEM SETTINGS CANNOT BE TURNED ON/
OFF ON THE INTEGRAL SWITCH...[BRC-335](#),
[DAS-148](#)

T

TAIL LAMP CIRCUIT[EXL-231](#)
TCM [TM-115](#), [TM-266](#)
TCM BRANCH LINE CIRCUIT [LAN-53](#), [LAN-89](#),
[LAN-104](#), [LAN-124](#), [LAN-145](#), [LAN-167](#),
[LAN-190](#)
TCU [AV-349](#), [AV-390](#)
TCU BRANCH LINE CIRCUIT... [LAN-59](#), [LAN-110](#),
[LAN-173](#), [LAN-196](#)
TEL ANTENNA [AV-393](#)
TELEMATICS SWITCH [AV-391](#)
TELEMATICS SYSTEM... [AV-344](#), [AV-354](#), [AV-387](#)
THE AMBIENT TEMPERATURE DISPLAY IS
INCORRECT [MWI-72](#), [MWI-148](#)
THE BRAKING DISTANCE IS LONG [BRC-151](#),
[BRC-341](#)
THE DOOR OPEN WARNING CONTINUES
DISPLAYING, OR DOES NOT DISPLAY
[MWI-70](#), [MWI-146](#)
THE ECO MODE INDICATOR LAMP DOES NOT
TURN ON [DMS-38](#)
THE FUEL GAUGE INDICATOR DOES NOT
OPERATE..... [MWI-65](#), [MWI-141](#)
THE ILLUMINATION CONTROL SWITCH IS
INOPERATIVE..... [MWI-67](#), [MWI-143](#)
THE KEY WARNING DOES NOT SOUND
(WITHOUT INTELLIGENT KEY) [WCS-44](#)

THE LIGHT REMINDER WARNING DOES NOT SOUNDWCS-43

THE LOW WASHER FLUID WARNING LAMP DOES NOT TURN ON OR OFFMWI-73, MWI-149

THE OIL PRESSURE WARNING LAMP DOES NOT TURN OFF MWI-69, MWI-145

THE OIL PRESSURE WARNING LAMP DOES NOT TURN ON MWI-68, MWI-144

THE PARKING BRAKE RELEASE WARNING CONTINUES DISPLAYING, OR DOES NOT DISPLAY MWI-71, MWI-147

THE PARKING BRAKE RELEASE WARNING CONTINUES SOUNDING, OR DOES NOT SOUNDWCS-41

THE SEAT BELT REMINDER WARNING CONTINUES SOUNDING, OR DOES NOT SOUNDWCS-42

THE SPORT MODE INDICATOR LAMP DOES NOT TURN ON DMS-75

THE STEERING SWITCHES ARE INOPERATIVE MWI-66, MWI-142

THE SYSTEM DOES NOT DETECT THE VEHICLE AHEAD AT ALL CCS-128, DAS-152

THERMOSTAT AND THERMOSTAT HOUSING CO-21

THROTTLE VALVE CLOSED POSITION LEARNING EC-143

TIGHTENING TORQUE OF STANDARD BOLTS... GI-19

TIMING CHAINEM-48

TIRE PRESSURE MONITORING SYSTEM WT-15

TIRE PRESSURE RECEIVER WT-54

TOP TETHER STRAP CHILD RESTRAINT . SB-15

TORQUE CONVERTER AND CONVERTER HOUSING OIL SEAL TM-295

TOW TRUCK TOWING GI-35

TPMS SYMPTOMS WT-36

TRANSAXLE ASSEMBLY TM-28, TM-30

TRANSIT MODE CANCEL OPERATION ..BCS-66, BCS-125

TRANSMISSION ASSEMBLY TM-292

TRANSMISSION RANGE SWITCH TM-267

TRANSMITTER WT-50

TRANSVERSE LINK FSU-10

TROUBLE DIAGNOSIS LAN-10

TROUBLE DIAGNOSIS - SPECIFICATION VALUE EC-161

TRUNK LAMP SWITCH DLK-123, DLK-272

TRUNK LID DLK-178, DLK-323

TRUNK LID OPENER DLK-63, DLK-234

TRUNK LID OPENER ACTUATOR DLK-119, DLK-268

TRUNK LID OPENER SWITCH DLK-121, DLK-195, DLK-270, DLK-336

TRUNK LID TRIM INT-45

TRUNK ROOM LAMP INL-64

TRUNK ROOM LAMP CIRCUIT INL-56

TRUNK ROOM TRIM INT-42

TURN SIGNAL AND HAZARD WARNING LAMPS EXL-62, EXL-193

TURN SIGNAL LAMP CIRCUIT EXL-107, EXL-237

U

U0073 COMMUNICATION BUS A OFF TM-156

U0100 LOST COMMUNICATION (ECM A) .TM-157

U0101 CAN COMM CIRCUIT EC-172

U0104 ADAS CAN 1 DAS-133

U0121 VDC CAN 2 CCS-102, DAS-51

U0126 STRG SEN CAN 1 CCS-104

U0140 LOST COMMUNICATION (BCM)TM-158

U0141 LOST COMMUNICATION (BCM A) .TM-159

U0155 LOST COMMUNICATION (IPC) TM-160

U0235 ICC SENSOR CAN 1 DAS-52

U0300 CAN COMMUNICATION DATA TM-161

U0401 ECM CAN 1 CCS-105, DAS-53

U0402 TCM CAN 1 DAS-54

U0405 ADAS CAN 2 DAS-135

U0415 VDC CAN 1 CCS-106, DAS-55

U0415 VEHICLE SPEED BCS-69

U0428 STRG SEN CAN 2 CCS-107

U0433 DIST SEN CAN CIRC 2 DAS-56

U1000 CAN COMM .BCS-126, DLK-243, SEC-180

U1000 CAN COMM CIRCUIT AV-165, AV-267, AV-370, BCS-67, BRC-136, BRC-322, CCS-108, DAS-57, DAS-137, DLK-72, HAC-58, MWI-46, MWI-121, PCS-27, PCS-56, PCS-84, SRC-43, STC-31, TM-162

U1001 CAN COMM CIRCUIT EC-173

U1010 CONTROL UNIT (CAN) AV-166, AV-268, AV-371, BCS-68, BCS-127, CCS-109, DAS-140, DLK-73, DLK-244, HAC-59, MWI-47, MWI-122, PCS-85, SEC-181, SRC-44

U1117 LOST COMMUNICATION (ABS) TM-163

U1217 AV CONTROL UNIT AV-167, AV-269

U1229 AV CONTROL UNIT AV-168, AV-270

U122F AV CONTROL UNIT AV-169, AV-271

U1244 GPS ANTENNA AV-170, AV-272

U1258 SATELLITE RADIO ANTENNA AV-171, AV-273

U1263 USB AV-172, AV-274

U1264 ANTENNA AMP. AV-173, AV-275

U1265 BOSE AMP. AV-276

U12AA CONFIGURATION ERROR AV-174, AV-277

U12AC AV CONTROL UNIT AV-175, AV-278

U12AD AV CONTROL UNIT AV-176, AV-279

U12AE AV CONTROL UNIT AV-177, AV-280

U12AF AV CONTROL UNIT AV-178, AV-281

U12B0 POWER SUPPLY VOLTAGE AV-179, AV-282

U12B1 POWER SUPPLY VOLTAGE AV-180, AV-283

U1310 AV CONTROL UNIT AV-181, AV-284

U1321 CONFIGURATION DAS-59

U1503 SIDE RDR L CAN 2	DAS-60	WASHER MOTOR CIRCUIT	WW-44
U1504 SIDE RDR L CAN 1	DAS-61	WASHER NOZZLE & TUBE	WW-56
U1505 SIDE RDR R CAN 2	DAS-62	WASHER PUMP	WW-54
U1506 SIDE RDR R CAN 1	DAS-63	WASHER SWITCH	WW-46
U1507 LOST COMM(SIDE RDR R)	DAS-64	WASHER TANK	WW-53
U1508 LOST COMM(SIDE RDR L)	DAS-65	WATER HOSE	TM-282
U153A CVT MESSAGE COUNTER FAILURE		WATER OUTLET	CO-24
CCS-112		WATER PUMP	CO-19
U153B CVT CHECK SUM FAILURE	CCS-113	WHEEL ALIGNMENT	FSU-6, RSU-6
U1A00 TCU	AV-372	WHEEL SENSOR	BRC-156, BRC-346
U1A01 TCU	AV-373	WIND DEFLECTOR	RF-50
U1A03 TCU	AV-374	WINDOW ANTENNA	AV-66, AV-125, AV-220,
U1A04 TCU	AV-375	AV-333	
U1A06 TEL ANTENNA	AV-376	WINDSHIELD GLASS	GW-11
U1A09 GPS ANTENNA	AV-377	WIPER AND WASHER FUSE	WW-37
U1A0A TCU	AV-380	WIPER AND WASHER SWITCH	WW-65
U1A0B MICROPHONE	AV-381	WIPER AND WASHER SYSTEM	WW-24
U1A0C MICROPHONE	AV-383	WIPER AND WASHER SYSTEM SYMPTOMS	WW-47
U1A0E TELEMATICS SWITCH	AV-385	WIPER BLADE	WW-60
U1A10 TCU	AV-378		
U1A11 TCU	AV-379		
UNBALANCE STEERING WHEEL TURNING FORCE (TORQUE VARIATION)	STC-38		
UNBALANCE STEERING WHEEL TURNING FORCE AND RETURN BETWEEN RIGHT AND LEFT	STC-37		
UNDER COVER	EXT-30		
UNEXPECTED BRAKE PEDAL REACTION			
BRC-150, BRC-340			
UNLOCK SENSOR	DLK-102		
USB CONNECTOR	AV-50, AV-110, AV-195, AV-306		
USB CONNECTOR AND AUX JACK	AV-65, AV-126,		
AV-219, AV-331			

V

VACUUM LINES	BR-36
VANITY MIRROR LAMP	INL-62
VDC OFF INDICATOR LAMP	BRC-147, BRC-332
VDC OFF SWITCH	BRC-141, BRC-162, BRC-326,
BRC-352	
VDC WARNING LAMP	BRC-146, BRC-331
VEHICLE JERKS DURING	BRC-154, BRC-344
VEHICLE SECURITY INDICATOR	SEC-194
VEHICLE SECURITY SYSTEM	SEC-48, SEC-165
VIN REGISTRATION	EC-141

W

WARNING BUZZER	DAS-156
WARNING BUZZER CIRCUIT	DAS-146
WARNING CHIME FUNCTION	DLK-275
WARNING CHIME SYSTEM	WCS-23
WARNING CHIME SYSTEM SYMPTOMS	WCS-40
WASHER FLUID LEVEL SWITCH CIRCUIT	MWI-63,
MWI-139	
WASHER LEVEL SWITCH	WW-55