

SECTION **IDX**
ALPHABETICAL INDEX

A
B
C
D
E
F
G
H
I
J
K
L

IDX

ALPHABETICAL INDEX

Numerics

4LO switch	TF-48
4WD - Wiring diagram	TF-24
4WD shift switch	TF-52
4WD system description	TF-15
4WD system diagram	TF-18

A

A/C air flow	ATC-27 , MTC-26
A/C compressor clutch removal and installation ..	ATC-188 , MTC-115
A/C compressor mounting	ATC-187 , MTC-114
A/C compressor precaution	ATC-9 , MTC-9
A/C compressor special service tool .	ATC-12 , MTC-12
A/C control operation (auto A/C)	ATC-25
A/C control operation (manual A/C)	MTC-25
A/C diagnostic work flow (auto A/C)	ATC-141
A/C evaporator	ATC-194 , MTC-121
A/C HFC134a (R134a) system identification	ATC-5 , MTC-5
A/C HFC134a (R134a) system precaution	ATC-4 , MTC-4
A/C HFC134a (R134a) system service procedure	ATC-184 , MTC-111
A/C HFC134a (R134a) system service tools ..	ATC-12 , MTC-12
A/C HFC134a system service equipment precaution ...	ATC-9 , MTC-9
A/C lubricant (R134a)	ATC-20 , MTC-20
A/C lubrication oil	ATC-20 , MTC-20
A/C operational check	ATC-60 , MTC-43
A/C self-diagnoses (auto A/C)	ATC-58 , ATC-141
A/C service data specification	ATC-199 , MTC-126
A/C trouble diagnoses (auto A/C)	ATC-30
A/C trouble diagnoses (manual A/C)	MTC-29
A/C, A - Wiring diagram	ATC-38
A/C, M - Wiring diagram	MTC-35
A/T fluid checking	AT-12 , AT-54 , MA-22
A/T fluid replacement	AT-12 , MA-24
A/T fluid temperature sensor	AT-125
A/T IND - Wiring diagram	DI-35
A/T indicator	DI-35
A/T self-diagnoses	AT-89
A/T shift lock system	AT-234
A/T trouble diagnoses	AT-45
ABS - Wiring diagram	BRC-15 , BRC-51 , BRC-95
ABS (anti-lock brake system)	BRC-7 , BRC-42 , BRC-86
Accelerator control system	ACC-3
Accelerator pedal position (APP) sensor .	EC-595 , EC-601 , EC-615
Accelerator pedal released position learning	EC-77
AF1B1-Wiring diagram	EC-241 , EC-249 , EC-257 , EC-266 , EC-625
AF1B2-Wiring diagram	EC-243 , EC-251 , EC-259 , EC-268 , EC-627
AF1HB1-Wiring diagram	EC-174
AF1HB2-Wiring diagram	EC-176

Aiming adjustment	LT-23 , LT-57
Air bag	SRS-3
Air cleaner and air duct	EM-15
Air cleaner filter replacement	EM-16 , MA-16
Air conditioner cut control	EC-21
Air flow meter - See Mass air flow sensor	EC-196 , EC-205
Air fuel ratio sensor 1 ..	EC-238 , EC-247 , EC-255 , EC-263 , EC-623
Air fuel ratio sensor 1 heater	EC-173
Air mix. door motor	ATC-76 , MTC-52
Ambient sensor	ATC-147 , ATC-164
Angular tightening application	EM-4
Antenna	AV-79
APPS1 - Wiring diagram	EC-597
APPS2 - Wiring diagram	EC-603
APPS3 - Wiring diagram	EC-617
ASC/BS - Wiring diagram	EC-563
ASC/SW - Wiring diagram	EC-556
ASCBOF - Wiring diagram	EC-635
ASCD	EC-22
ASCD (automatic speed control device)	ACS-2
ASCD brake switch	EC-561 , EC-634
ASCD indicator lamp	EC-641
ASCD steering switch	EC-554
ASCIND - Wiring diagram	EC-642
Audio	AV-6
AUDIO - Wiring diagram	AV-16
AUT/DP - Wiring diagram	SE-15
Auto air conditioner - Wiring diagram	ATC-38
Auto anti-dazzling inside mirror	GW-91
Autolamp	LT-37
Automatic amplifier	ATC-62
Automatic drive positioner	SE-11
Automatic transmission number	GI-51

B

Back door trim	EI-32
Back sonar	DI-50
BACK/L - Wiring diagram	LT-84
Back-up lamp	LT-84
Ball joint (front)	FSU-15
Basic inspection	EC-65
Battery	SC-4
Battery current sensor .	EC-526 , EC-533 , EC-540 , EC-547
Battery/Starting/Charging System Tester	SC-6 , SC-12 , SC-20
BCM (Body control module)	BCS-3
Block heater	EM-78
Blower motor ...	ATC-108 , ATC-168 , MTC-66 , MTC-96
Body alignment	BL-173
Body component parts	BL-155
Body construction	BL-171
Body exterior paint color	BL-154
Body mounting	BL-150 , BL-151
Body repair	BL-154
Body sealing	BL-167

ALPHABETICAL INDEX

Brake booster	BR-19	Control valve (A/T)	AT-39	
Brake fluid level	MA-28	Converter housing installation	AT-262 , AT-266	A
Brake hydraulic line	BR-13	COOL/F - Wiring diagram	EC-505	
Brake inspection	MA-28	Coolant mixture ratio	MA-12	
Brake lines and cables inspection	MA-28	Coolant replacement	CO-10 , MA-13	B
Brake master cylinder	BR-16	Cooling circuit (engine)	CO-8	
Brake switch	EC-561 , EC-571 , EC-634	Cooling fan	CO-17	
BRK/SW - Wiring diagram	EC-572	Cooling fan control	EC-502	C
Bulb specifications	LT-145	Cooling fan motor	EC-511	
Bumper, front	EI-14	Cooling unit (A/C evaporator)	ATC-171 , ATC-194 , MTC-99 , MTC-121	
Bumper, rear	EI-18	Corrosion protection	BL-164	D
C				
Cabin air filter	ATC-169	Crankcase ventilation system - See Positive crankcase ventilation	EC-38	
Camshaft	EM-46	Crankshaft	EM-79	E
Camshaft inspection	EM-49	Crankshaft position sensor (POS)	EC-361	
Camshaft position sensor (PHASE)	EC-368	Crash zone sensor	SRS-46	
CAN - Wiring diagram	EC-156 , AT-96	CUR/SE - Wiring diagram ...	EC-528 , EC-535 , EC-542 , EC-549	F
CAN communication	EC-24 , EC-155 , EC-158 , TF-70 , RFD-69	Cylinder block	EM-78	
Canister-See EVAP canister	EC-28	Cylinder block boring	EM-99	G
CHARGE - Wiring diagram	SC-19	D		
Charging system	SC-17	D/LOCK - Wiring diagram	BL-20	H
Chassis and body maintenance	MA-21	Data link connector for Consult	EC-119 , EC-131	
Chassis and body maintenanceSchedule 1	MA-8	Daytime light system	LT-27	I
Chassis and body maintenanceSchedule 2	MA-10	Daytime running light - See Daytime light system ..	LT-27	
CHIME - Wiring diagram	DI-40	DEF - Wiring diagram	GW-96	J
Circuit breaker	PG-17	Diagnosis sensor unit	SRS-49	
Closed loop control	EC-18 , EC-499	Diagnostic trouble code (DTC) for OBD system .	EC-1 , EC-46	K
Closed loop control (Bank 1)	EC-499	Diagnostic trouble code (DTC) inspection priority chart	EC-90	
Closed loop control (Bank 2)	EC-499	Differential gear oil replacement	MA-26	L
Coil spring (front)	FSU-10	DIFLOC - Wiring diagram	RFD-47	
Collision diagnosis	SRS-51	Dimensions	GI-52	
Combination lamp, front, removal and installation .	LT-25	Direct clutch solenoid valve	AT-145 , AT-147	
Combination lamp, rear, removal and installation	LT-98	Display and amp.assembly	ATC-62	
Combination meter	DI-5	Display Control Unit-Description	AV-91	
Combination switch	LT-75	Display Unit-Description	AV-91	IDX
COMBSW - Wiring diagram	LT-75	Dome light - See Interior lamp	LT-107	
COMM - Wiring diagram	AV-102	Door glass	GW-83 , GW-86	
COMPAS - Wiring diagram	DI-24	Door lock	BL-119	
Compass	DI-23	Door mirror lamp	LT-107	
Component Location (auto A/C)	ATC-34	Door trim	EI-32	
Component Location (manual A/C)	MTC-32	Door, front	BL-115 , GW-83	
Compressor clutch removal and installation	ATC-188 , MTC-115	Door, rear	BL-115 , GW-86	
Compressor mounting	ATC-187 , MTC-114	Drive belt	EM-13	
Compressor precaution	ATC-9 , MTC-9	Drive chain (Transfer)	TF-96	
Compressor special service tool	ATC-12 , MTC-12	Driver air bag	SRS-37	
Condenser	ATC-193 , MTC-120	DTC work support	EC-127	
Connecting rod	EM-96	DTRL - Wiring diagram	LT-30	
Connecting rod bearing clearance	EM-96	Duct and grilles	ATC-181 , MTC-108	
Connecting rod bushing clearance	EM-96	DVD - Wiring Diagram	AV-83	
Console box - See Instrument panel	IP-10	DVD Entertainment System	AV-80	
CONSULT for VDC	BRC-22 , BRC-58 , BRC-106	DVD Player	AV-81	
CONSULT general information	GI-37			
CONSULT-II for engine	EC-117			
Control units (terminal arrangement)	PG-74			

ALPHABETICAL INDEX

E

ECM input/output signal [EC-108](#), [EC-132](#)
 ECM power supply [EC-149](#), [EC-473](#)
 ECM relay [EC-149](#)
 ECM/PW - Wiring diagram [EC-474](#)
 ECTS - Wiring diagram [EC-219](#)
 Electric sunroof [RF-10](#)
 Electric throttle control actuator [EC-582](#), [EC-593](#)
 Electrical load signal circuit [EC-644](#)
 Electronic ignition (EI) system [EC-19](#)
 Engine control circuit diagram [EC-106](#)
 Engine control component parts location [EC-97](#)
 Engine control module (ECM) [EC-477](#)
 Engine control system diagram [EC-16](#)
 Engine coolant [CO-10](#)
 Engine coolant temperature sensor (ECTS) ... [EC-217](#),
[EC-230](#)
 Engine fail-safe system [EC-92](#)
 Engine oil [LU-8](#)
 Engine oil filter replacement [MA-17](#)
 Engine oil precautions [GI-7](#)
 Engine oil replacement [MA-17](#)
 Engine removal [EM-74](#)
 Engine room cover [EM-12](#)
 Engine serial number [GI-51](#)
 ETC1 - Wiring diagram [EC-583](#)
 ETC2 - Wiring diagram [EC-578](#)
 ETC3 - Wiring diagram [EC-589](#)
 EVAP canister [EC-28](#)
 EVAP canister purge volume control solenoid valve
[EC-393](#), [EC-401](#)
 EVAP canister vent control valve [EC-408](#), [EC-415](#)
 EVAP control system (small leak) diagnosis .. [EC-385](#),
[EC-439](#), [EC-447](#)
 EVAP control system pressure sensor [EC-422](#), [EC-425](#),
[EC-431](#)
 EVAP control system purge flow monitoring diagnosis
[EC-380](#)
 EVAP vapor lines inspection [MA-20](#)
 Evaporative emission (EVAP) system [EC-25](#)
 Evaporator [ATC-194](#), [MTC-121](#)
 Exhaust manifold [EM-21](#)
 Exhaust system [EX-3](#)
 Exhaust system inspection [EX-3](#)
 Expansion valve [ATC-195](#), [MTC-122](#)

F

F/FOG - Wiring diagram [LT-52](#)
 F/PUMP - Wiring diagram [EC-653](#)
 Final drive pre-inspection [FFD-15](#)
 Final drive removal and installation . [FFD-12](#), [RFD-14](#),
[RFD-84](#)
 Flow charts [GI-27](#)
 Fluid temperature sensor (A/T) [AT-125](#)
 Fluids [MA-11](#)
 Fluorescent leak detector [ATC-195](#), [MTC-122](#)
 Fog lamp, front [LT-50](#)

Foot lamp [LT-108](#)
 FPCM - Wiring diagram [EC-514](#)
 Freeze frame data [EC-47](#), [EC-120](#)
 Front brake solenoid valve [AT-141](#), [AT-143](#)
 Front bumper [EI-14](#)
 Front case (Transfer) [TF-96](#)
 Front combination lamp removal and installation [LT-25](#)
 Front door [BL-115](#), [BL-119](#), [GW-83](#)
 Front Door Trim [EI-32](#)
 Front drive shaft (Transfer) [TF-96](#), [TF-117](#)
 Front fog lamp [LT-50](#)
 Front passenger air bag [SRS-41](#)
 Front seat [SE-85](#)
 Front seat belt [SB-3](#)
 Front seat belt pre-tensioner [SRS-3](#), [SRS-48](#)
 Front washer [WW-3](#)
 Front wiper [WW-3](#)
 FTS - Wiring diagram [AT-126](#)
 FTTS - Wiring diagram [EC-333](#), [EC-338](#)
 Fuel cut control (at no load high engine speed) [EC-20](#)
 Fuel filter replacement [FL-5](#)
 Fuel gauge [DI-5](#)
 Fuel injection system (Bank 1) [EC-310](#), [EC-321](#)
 Fuel injection system (Bank 2) [EC-310](#), [EC-321](#)
 Fuel injector [EC-646](#)
 Fuel injector and fuel tube [EM-31](#)
 Fuel level sensor [EC-456](#), [EC-458](#), [EC-460](#)
 Fuel line inspection [FL-4](#)
 Fuel pressure check [EC-81](#)
 Fuel pressure release [EC-81](#)
 Fuel pump [EC-652](#)
 Fuel pump and gauge [FL-5](#)
 Fuel pump control module [EC-512](#)
 Fuel pump dropping resistor [EC-512](#)
 Fuel system [FL-4](#)
 Fuel tank [FL-11](#)
 Fuel tank temperature sensor [EC-331](#), [EC-337](#)
 Fuel tank vacuum relief valve [EC-28](#)
 FUEL B1 - Wiring diagram [EC-312](#), [EC-323](#)
 FUEL B2 - Wiring diagram [EC-314](#), [EC-325](#)
 Fuse [PG-17](#), [PG-80](#)
 Fuse block [PG-79](#)
 Fusible link [PG-17](#), [PG-80](#)

G

Garage jack and safety stand [GI-42](#)
 Gauges [DI-5](#)
 Generator [SC-17](#)
 Generic scan tool (GST) [EC-130](#)
 Glass [GW-11](#), [GW-14](#), [GW-83](#), [GW-86](#)
 Glove box lamp [LT-130](#)
 GPS antenna [AV-90](#)
 Grease [MA-11](#)
 Ground distribution [PG-31](#)

H

H/LAMP - Wiring diagram [LT-8](#)

ALPHABETICAL INDEX

H/MIRROR - Wiring diagram [GW-116](#)
Handling precautions for plastics [BL-192](#)
Harness connector [PG-71](#)
Harness layout [PG-40](#)
Hazard warning lamp [LT-59](#)
Headlamp removal and installation [LT-25](#)
Heated oxygen sensor 2 (bank 1) [EC-275](#), [EC-286](#),
[EC-299](#)
Heated oxygen sensor 2 (bank 2) [EC-275](#), [EC-286](#),
[EC-299](#)
Heated oxygen sensor 2 heater (bank 1) [EC-180](#)
Heated oxygen sensor 2 heater (bank 2) [EC-180](#)
Heated seat [SE-82](#)
Heater and cooling unit (Heater core) . [ATC-171](#), [ATC-173](#), [MTC-99](#),
[MTC-101](#)
Heater unit (heater core) [ATC-171](#), [ATC-173](#), [MTC-99](#),
[MTC-101](#)
Height (Dimensions) [GI-52](#)
HFC134a (R134a) system identification [ATC-5](#), [MTC-5](#)
HFC134a (R134a) system precaution .. [ATC-4](#), [MTC-4](#)
HFC134a (R134a) system service procedure [ATC-184](#),
[MTC-111](#)
HFC134a (R134a) system service tools [ATC-12](#), [MTC-12](#)
HFC134a system service equipment precaution [ATC-9](#), [MTC-9](#)
High and low reverse clutch solenoid valve [AT-149](#),
[AT-151](#)
Homelink universal transceiver [BL-147](#)
Horn [WW-30](#)
HORN - Wiring diagram [WW-30](#)
How to erase DTC for OBD system [EC-55](#)
HSEAT - Wiring diagram [SE-83](#)

I

I/MIRR - Wiring diagram [GW-91](#)
IATS - Wiring diagram [EC-214](#)
Identification plate [GI-50](#)
Idle air volume learning [EC-79](#)
Idle speed [EC-65](#), [EC-75](#)
Idle speed control (ISC) [EC-464](#), [EC-466](#)
Ignition coil [EM-28](#), [EC-665](#)
Ignition control system [EC-665](#)
Ignition key hole illumination [LT-107](#)
Ignition timing [EC-65](#), [EC-75](#)
IGNSYS - Wiring diagram [EC-666](#)
ILL - Wiring diagram [LT-135](#)
Illumination [LT-129](#)
In vehicle sensor [ATC-151](#), [ATC-165](#)
In-cabin Microfilter [ATC-169](#)
INJECT - Wiring diagram [EC-647](#)
Injector [EC-646](#)
Input clutch solenoid valve [AT-137](#), [AT-139](#)
Instrument panel [IP-10](#)
INT/L - Wiring diagram [LT-115](#)
Intake air temperature sensor [EC-213](#), [EC-233](#)
Intake door control linkage adjustment . [ATC-96](#), [ATC-100](#), [MTC-58](#), [MTC-62](#)

Intake door motor . [ATC-94](#), [ATC-176](#), [MTC-57](#), [MTC-104](#)
Intake manifold [EM-17](#)
Intake sensor .. [ATC-159](#), [ATC-167](#), [MTC-92](#), [MTC-95](#)
Intake valve timing control (Bank 1) [EC-160](#)
Intake valve timing control (Bank 2) [EC-160](#)
Intake valve timing control position sensor (Bank 1)
[EC-490](#)
Intake valve timing control position sensor (Bank 2)
[EC-490](#)
Intake valve timing control solenoid valve (Bank 1) [EC-188](#)
Intake valve timing control solenoid valve (Bank 2) [EC-188](#)
Integrated homelink transmitter - See Homelink universal transceiver [BL-147](#)
Interior [EI-36](#)
Interior lamp [LT-107](#)
Interior lamp on-off control [LT-108](#)
Internal gear (Transfer) [TF-96](#)
IPDM (Intelligent power distribution module engine room) [PG-18](#)
IVCB1 - Wiring diagram [EC-189](#)
IVCB2 - Wiring diagram [EC-191](#)
IVCSB1 - Wiring diagram [EC-491](#)
IVCSB2 - Wiring diagram [EC-493](#)
IVIS (Infiniti vehicle immobilizer system) precautions ...
[GI-3](#)
IVTB1 - Wiring diagram [EC-163](#)
IVTB2 - Wiring diagram [EC-165](#)

J

Jacking points [GI-42](#)
Junction box (J/B) [PG-79](#)

K

Key illumination [LT-108](#)
KEYLES - Wiring diagram [BL-57](#), [BL-58](#), [BL-63](#)
Knock sensor (KS) [EC-356](#)
KS - Wiring diagram [EC-357](#)

L

Leaf spring (rear) [RSU-8](#)
Length (Dimensions) [GI-52](#)
License lamp [LT-86](#)
Lifting points [GI-43](#)
Line pressure solenoid valve [AT-120](#)
Line pressure test (A/T) [AT-55](#)
Location of electrical units [PG-68](#)
Low coast brake solenoid valve [AT-153](#), [AT-155](#)
Low tire pressure warning system [WT-8](#)
Low tire pressure warning system - trouble diagnoses
[WT-11](#)
Low tire pressure warning system - Wiring diagram
[WT-11](#)
Lubricant (R134a) A/C [ATC-20](#), [MTC-20](#)

A
B
C
D
E
F
G
H
I
J
K
L
IDX

ALPHABETICAL INDEX

Lubricants [MA-11](#)
Lubrication circuit (engine) [LU-6](#)
Lubrication oil A/C [ATC-20](#), [MTC-20](#)
Lubrication-locks, hinges and hood latches [MA-31](#)

M

MAFS - Wiring diagram [EC-199](#), [EC-207](#)
Magnet clutch [ATC-120](#), [ATC-188](#), [MTC-73](#), [MTC-115](#)
MAIN - Wiring diagram [EC-149](#), [AT-169](#)
Mainshaft (Transfer) [TF-96](#)
Maintenance (engine)Schedule 1 [MA-7](#)
Maintenance (engine)Schedule 2 [MA-9](#)
Major overhaul (Final drive) [FFD-14](#), [RFD-15](#), [RFD-85](#)
Major overhaul (Transfer) [TF-96](#)
Malfunction indicator lamp (MIL) [EC-57](#)
Map lamp [LT-108](#)
Mass air flow sensor (MAFS) [EC-196](#), [EC-205](#)
Meter [DI-5](#)
METER - Wiring diagram [DI-9](#)
MIL data link connectors circuit [EC-683](#)
MIL/DL - Wiring diagram [EC-683](#)
MIRROR - Wiring diagram [GW-114](#)
Misfire [EC-349](#)
MMSW - Wiring diagram [AT-158](#)
Mode door control linkage adjustment .. [ATC-69](#), [MTC-48](#)
Mode door motor .. [ATC-66](#), [ATC-177](#), [MTC-47](#), [MTC-105](#)
Model variation [GI-48](#)
Multiport fuel injection (MFI) system [EC-17](#)
Multiport fuel injection precautions [GI-6](#)
Multi-remote control system - See Remote keyless entry system [BL-52](#)

N

NATS - Wiring diagram [BL-131](#)
NAVI - Wiring diagram [AV-94](#)
NAVI Control Unit [AV-91](#)
Navigation system [AV-89](#)
NONDTC - Wiring diagram [AT-178](#)
NVH troubleshooting (AX) [FAX-4](#)
NVH troubleshooting (EM) [EM-10](#)
NVH troubleshooting (Final drive) [RFD-8](#), [RFD-40](#)
NVH troubleshooting (Propeller shaft) [PR-3](#)
NVH troubleshooting (ST) [PS-5](#)
NVH troubleshooting (Transfer) [TF-11](#)
NVH troubleshooting (WT)NVH troubleshooting (WT) . [WT-4](#)
NVIS (Nissan vehicle immobilizer system) [BL-128](#)
NVIS (Nissan vehicle immobilizer system) precautions [GI-3](#)

O

O2H2B1 - Wiring diagram [EC-182](#)
O2H2B2 - Wiring diagram [EC-184](#)
O2S2B1 - Wiring diagram ... [EC-278](#), [EC-289](#), [EC-302](#)

O2S2B2 - Wiring diagram ... [EC-280](#), [EC-291](#), [EC-304](#)
Oil cooler (engine) [LU-12](#)
Oil filter [LU-11](#)
Oil pan (engine) [EM-24](#)
Oil pressure (engine) [LU-8](#)
Oil pressure relief valve (engine) [LU-6](#)
Oil pump (engine) [LU-14](#)
Oil seal replacement (engine) [EM-60](#)
Oil seal replacement (front of final drive) [FFD-8](#)
On board diagnostic system [EC-41](#)
ORVR (On-board Refueling Vapor Recovery) .. [EC-32](#)
Overheat [EC-502](#)

P

P/SCKT - Wiring diagram [WW-28](#)
Pantograph jack [GI-42](#)
Park/Neutral position switch [EC-485](#)
Park/neutral position switch (A/T) [AT-103](#)
Parking brake control [PB-4](#)
PCV (positive crankcase ventilation) [EC-38](#)
Personal lamp [LT-108](#)
PGC/V - Wiring diagram [EC-395](#), [EC-403](#)
PHASE - Wiring diagram [EC-370](#)
Piston pin inspection [EM-94](#)
Piston ring inspection [EM-95](#)
Piston to bore clearance [EM-99](#)
Planetary carrier (Transfer) [TF-96](#), [TF-113](#)
PNP/SW - Wiring diagram [EC-487](#), [AT-104](#)
POS - Wiring diagram [EC-363](#)
POWER - Wiring diagram [PG-6](#)
Power door lock [BL-16](#)
Power seat [SE-78](#)
Power steering fluid level [MA-29](#)
Power steering gear [PS-16](#)
Power steering oil pump [PS-23](#)
Power steering pressure (PSP) sensor [EC-468](#)
Power steering system bleeding [PS-6](#)
Power supply routing [PG-4](#)
Power window [GW-20](#)
PRE/SE - Wiring diagram [EC-427](#), [EC-433](#)
Precautions (General) [GI-4](#)
Precautions in repairing high strength steel [BL-195](#)
Pressure switch 1 [AT-143](#), [AT-161](#)
Pressure switch 2 [AT-155](#)
Pressure switch 3 [AT-139](#), [AT-163](#)
Pressure switch 5 [AT-147](#), [AT-165](#)
Pressure switch 6 [AT-151](#), [AT-167](#)
Pressure test (A/T) [AT-55](#)
Propeller shaft [PR-4](#), [PR-8](#)
Propeller shaft inspection [MA-25](#)
Propeller shaft on vehicle service [PR-8](#)
Propeller shaft vibration [PR-4](#), [PR-8](#)
PS/SEN - Wiring diagram [EC-469](#)

R

Radiator [CO-14](#)
Rear Audio Remote Control Unit-Midline System [AV-8](#)

ALPHABETICAL INDEX

Rear Audio Remote Control Unit-Premium System AV-10	SRS - Wiring diagram SRS-13	
Rear bumper EI-18	SRS Trouble diagnoses SRS-9	A
Rear case (Transfer) TF-96	Stabilizer bar (front) FSU-12	
Rear combination lamp removal and installation LT-98	Stall test (A/T) AT-54	
Rear door BL-115 , GW-86	Standardized relay PG-75	B
Rear seat SE-94	START - Wiring diagram SC-11	
Rear seat belt SB-8	Starter SC-10	
Rear window GW-14	Starting system SC-10	C
Rear window defogger GW-93	Steering gear, linkage and transfer gear inspection MA-29	
Refrigerant connection precaution ATC-6 , MTC-6	Steering linkage PS-16	
Refrigerant discharging evacuating charging ATC-184 , MTC-111	Steering wheel and column PS-7	D
Refrigerant general precaution ATC-5 , MTC-5	Step lamp LT-108	
Refrigerant lines ATC-184 , ATC-191 , ATC-192 , MTC-111 , MTC-118 , MTC-119	Stop lamp LT-80	
Refrigerant pressure sensor . EC-678 , ATC-192 , MTC-119	Stop lamp switch EC-561 , EC-571 , EC-634	E
REMOTE - Wiring diagram BL-57	STOP/L - Wiring diagram LT-81	
Remote keyless entry system BL-52	Strut (front) FSU-10	
Removal and installation (A/T) AT-260 , AT-263	STSIG - Wiring diagram AT-99	F
Removal and installation (Transfer) TF-95	Sun gear (Transfer) TF-96	
Revolution sensor (A/T) AT-109	Sun roof, electric RF-10	
Road wheel size GI-52	Sunload sensor ATC-156	G
Rocker cover EM-35	Sunroof RF-24	
Room lamp LT-107	Supplemental Restraint System SRS-5	
Room lamp - See Interior lamp LT-107	Supplemental restraint system - Wiring diagram . SRS-13	H
RP/SEN - Wiring diagram EC-679	Symbols and abbreviations GI-10 , GI-22	
	Symptom matrix chart EC-93	I
	System readiness test (SRT) code EC-47	
S	T	
SAE J1979 - Service \$01 - 09 EC-41	Tachometer DI-5	J
SEAT - Wiring diagram SE-78 , SE-79	Tail lamp LT-86	
Seat belt inspection SB-10 , MA-32	TAIL/L - Wiring diagram LT-88	
Seat belt pre-tensioner SRS-48	TCM circuit diagram AT-53	K
Seat belt, front SB-3	TCM inspection table AT-86	
Seat belt, rear SB-8	TCS - Wiring diagram BRC-14 , BRC-15 , BRC-51 , BRC-95	L
Seat, front SE-85	TCS (traction control system) BRC-7 , BRC-42 , BRC-86	
Seat, rear SE-94	TCS component parts and connector location BRC-13 , BRC-49 , BRC-93	
Self-diagnosis (Transfer) TF-35	TCS wheel sensors BRC-13 , BRC-49 , BRC-93	IDX
SEN/PW - Wiring diagram EC-481	Theft warning system - See Vehicle security (Theft warning) system BL-84	
SHIFT - Wiring diagram AT-236	Thermometer DI-23	
Shift control (Transfer) TF-96 , TF-119	Three way catalyst EM-21	
Shift lock system AT-234	Three way catalyst function (Bank 1) EC-375	
Shock absorber (front) FSU-11	Three way catalyst function (Bank 2) EC-375	
Shock absorber (rear) RSU-7	Three way catalyst precautions GI-5	
Side air bag (satellite) sensor SRS-47	Throttle control motor EC-588	
Side curtain air bag SRS-44	Throttle control motor relay EC-576	
Side trim EI-36	Throttle position sensor (TPS) ... EC-223 , EC-342 , EC-520 , EC-522 , EC-608	
SMJ (super multiple junction) PG-77	Throttle valve closed position learning EC-78	
SONAR - Wiring diagram DI-53	Tie-rod PS-16	
Spare tire size GI-52	Timing chain EM-37	
Spark plug EM-29	Tire rotation MA-28	
Spark plug replacement MA-19	Tire size GI-52	
Specification value EC-138	Torque converter installation AT-261 , AT-262 , AT-265 ,	
Speedometer DI-5		
Spiral cable SRS-39		
SROOF - Wiring diagram RF-13		
SRS - See Supplemental Restraint System SRS-5		

ALPHABETICAL INDEX

AT-266		Width (Dimensions)	GI-52
Torque convertor clutch solenoid valve ...	AT-116 , AT-118	WINDOW - Wiring diagram	GW-27 , GW-36
Tow truck towing	GI-44	Window, door	GW-83 , GW-86
Towing point	GI-45	Window, rear	GW-14
TPS1 - Wiring diagram	EC-344	Windshield	GW-11
TPS2 - Wiring diagram	EC-225	WIPER - Wiring diagram	WW-7
TPS3 - Wiring diagram	EC-610	Wiper, front	WW-3
Traction control system - Wiring diagram	BRC-14 , BRC-51 , BRC-95	Wiring Diagram (Cell code) list	PG-65
Transfer case	TF-96	Wiring diagrams	GI-15
Transfer control device	TF-62	WT-T/WARN - Wiring diagram	WT-11
Transfer control unit inspection table	TF-29		
Transfer oil replacement	MA-24		
Transfer serial number	GI-51		
Transmission serial number	GI-51		
Tread-FR&RR (Dimensions)	GI-52		
Trim	EI-36		
TRNSCV - Wiring diagram	BL-147		
Trouble diagnoses	GI-11		
Turbine revolution sensor	AT-107		
TURN - Wiring diagram	LT-63		
Turn signal lamp	LT-59		
Two trip detection logic	EC-41		
Two-pole lift	GI-43		

V

Vacuum hose (brake system)	BR-23
Vacuum hose drawing (Engine control)	EC-105
Valve clearance	EM-55
Valve guide	EM-69
Vanity mirror lamp	LT-107
VDC (vehicle dynamics control)	BRC-7 , BRC-42 , BRC-86
VDC -Wiring diagram	BRC-15 , BRC-51 , BRC-95
Vehicle identification number	GI-50
Vehicle recovery (freeing a stuck vehicle)	GI-45
Vehicle security (theft warning) system	BL-84
Vehicle speed sensor (VSS)	EC-462
VEHSEC - Wiring diagram	BL-88 , BL-95
VENT/V - Wiring diagram	EC-410 , EC-417
VIN registration	EC-77
Viscosity number (SAE)	MA-12
VSS A/T - Wiring diagram	AT-111

W

Wait detection switch	TF-55
WARN - Wiring diagram	DI-28
Warning chime	DI-37
Warning lamps	DI-27
Washer, front	WW-3
Water pump	CO-19
Water temperature gauge	DI-5
Wheel alignment (front)	FSU-6
Wheel bearing (front)	FAX-5
Wheel size	GI-52
Wheelbase (Dimensions)	GI-52