

SECTION **RF**  
ROOF

A  
B  
C

CONTENTS

|   |    |  |    |    |
|---|----|--|----|----|
| <b>BASIC INSPECTION</b> .....   | 3  | SUNROOF MOTOR ASSEMBLY : Special Repair Requirement .....      | 11 | F  |
| <b>DIAGNOSIS AND REPAIR WORKFLOW</b> .....  | 3  | <b>SUNROOF SWITCH CIRCUIT</b> .....                            | 12 | G  |
| Work Flow .....   | 3  | Description .....  | 12 |    |
| <b>INSPECTION AND ADJUSTMENT</b> .....  | 5  | Component Function Check .....                                 | 12 |    |
| <b>ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT</b> .....                       | 5  | Diagnosis Procedure .....                                      | 12 | H  |
| ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Description .....                | 5  | <b>DOOR SWITCH</b> .....                                       | 14 |    |
| ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Special Repair Requirement ..... | 5  | Description .....  | 14 |    |
| <b>BASIC INSPECTION</b> .....   | 5  | Component Function Check .....                                 | 14 | I  |
| BASIC INSPECTION : Special Repair Requirement .....                               | 5  | Diagnosis Procedure .....                                      | 14 |    |
| <b>SYSTEM DESCRIPTION</b> .....   | 6  | <b>ECU DIAGNOSIS INFORMATION</b> .....                         | 16 | J  |
| <b>SUNROOF SYSTEM</b> .....   | 6  | <b>BCM (BODY CONTROL MODULE)</b> .....                         | 16 |    |
| System Diagram .....  | 6  | Reference Value .....  | 16 |    |
| System Description .....  | 6  | Terminal Layout .....  | 19 |    |
| Component Parts Location .....  | 7  | Physical Values .....  | 19 | RF |
| Component Description .....   | 7  | Fail Safe .....  | 24 |    |
| <b>DIAGNOSIS SYSTEM (BCM)</b> .....   | 8  | DTC Inspection Priority Chart .....                            | 24 | L  |
| <b>COMMON ITEM</b> .....  | 8  | DTC Index .....  | 25 |    |
| COMMON ITEM : CONSULT Function (BCM - COMMON ITEM) .....                          | 8  | <b>SUNROOF MOTOR ASSEMBLY</b> .....                            | 27 |    |
| <b>RETAINED PWR</b> .....   | 8  | Reference Value .....  | 27 | M  |
| RETAINED PWR : CONSULT Function (BCM - RETAINED PWR) .....                        | 9  | <b>WIRING DIAGRAM</b> .....                                    | 28 |    |
| <b>DTC/CIRCUIT DIAGNOSIS</b> .....  | 10 | <b>SUNROOF</b> .....   | 28 | N  |
| <b>POWER SUPPLY AND GROUND CIRCUIT</b> .....                                      | 10 | Wiring Diagram .....   | 28 |    |
| <b>SUNROOF MOTOR ASSEMBLY</b> .....   | 10 | <b>SYMPTOM DIAGNOSIS</b> .....                                 | 33 | O  |
| SUNROOF MOTOR ASSEMBLY : Diagnosis Procedure .....                                | 10 | <b>SUNROOF DOES NOT OPERATE PROPERLY</b> .....                 | 33 |    |
|   |    | Diagnosis Procedure .....                                      | 33 | P  |
|   |    | <b>AUTO OPERATION DOES NOT OPERATE</b> .....                   | 34 |    |
|   |    | Diagnosis Procedure .....                                      | 34 |    |
|   |    | <b>DOES NOT STOP FULLY-OPEN OR FULLY-CLOSED POSITION</b> ..... | 35 |    |
|   |    | Diagnosis Procedure .....                                      | 35 |    |

|   |           |  |           |
|---|-----------|--|-----------|
| <b>RETAINED POWER OPERATION DOES NOT OPERATE PROPERLY</b> ..... | <b>36</b> | Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER" ..... | 44        |
| Diagnosis Procedure .....                                       | 36        | Precaution for Work .....  | 44        |
| <b>SUNROOF DOES NOT OPERATE ANTI-PINCH FUNCTION</b> .....       | <b>37</b> | <b>PREPARATION</b> .....   | <b>45</b> |
| Diagnosis Procedure .....                                       | 37        | <b>PREPARATION</b> .....   | <b>45</b> |
| <b>SQUEAK AND RATTLE TROUBLE DIAGNOSES</b> .....                | <b>38</b> | Special Service Tool .....   | 45        |
| Work Flow .....   | 38        | Commercial Service Tool .....  | 45        |
| Generic Squeak and Rattle Troubleshooting .....                 | 40        | <b>REMOVAL AND INSTALLATION</b> .....  | <b>46</b> |
| Diagnostic Worksheet .....                                      | 42        | <b>SUNROOF SYSTEM</b> .....  | <b>46</b> |
| <b>PRECAUTION</b> .....   | <b>44</b> | Inspection .....   | 46        |
| <b>PRECAUTIONS</b> .....  | <b>44</b> | Exploded View .....  | 50        |
|   |           | Removal and Installation .....   | 51        |

# DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >


## BASIC INSPECTION

### DIAGNOSIS AND REPAIR WORKFLOW

Work Flow

INFOID:000000007305972

OVERALL SEQUENCE

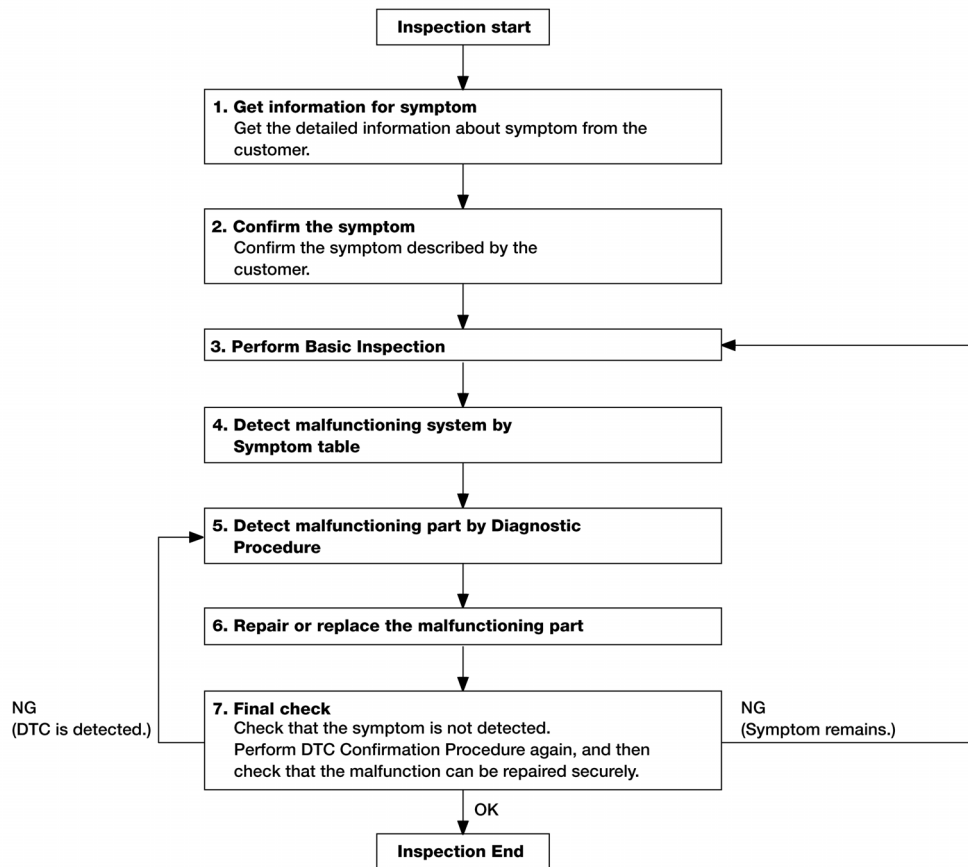

ABKIA2887GB

DETAILED FLOW

### 1. GET INFORMATION FOR SYMPTOM

Get the detailed information from the customer about the symptom (the condition and the environment when the incident/malfunction occurred).

>> GO TO 2

### 2. CONFIRM THE SYMPTOM

Confirm the symptom described by the customer.  
Verify relation between the symptom and the condition when the symptom is detected.

>> GO TO 3

### 3. PERFORM BASIC INSPECTION

Perform [RF-5. "BASIC INSPECTION : Special Repair Requirement"](#).

# DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

---

Inspection End>>GO TO 4

## 4. DETECT MALFUNCTIONING SYSTEM BY SYMPTOM DIAGNOSIS

---

Detect malfunctioning system according to symptom diagnosis based on the confirmed symptom in step 2, and determine the trouble diagnosis order based on possible causes and symptom.

>> GO TO 5

## 5. DETECT MALFUNCTIONING PART BY DIAGNOSTIC PROCEDURE

---

Inspect according to Diagnostic Procedure of the system.

### NOTE:

The Diagnostic Procedure described based on open circuit inspection. A short circuit inspection is also required for the circuit check in the Diagnostic Procedure.

Is malfunctioning part detected?

YES >> GO TO 6

NO >> Check voltage of related BCM terminals using CONSULT.

## 6. REPAIR OR REPLACE THE MALFUNCTIONING PART

---

1. Repair or replace the malfunctioning part.
2. Reconnect parts or connectors disconnected during Diagnostic Procedure.

>> GO TO 7

## 7. FINAL CHECK

---

When symptom was described from the customer, refer to confirmed symptom in step 2, and check that the symptom is not detected.

Does the symptom reappear?

YES (DTC is detected)>>GO TO 5

YES (Symptom remains)>>GO TO 3

NO >> Inspection End.

# INSPECTION AND ADJUSTMENT

< BASIC INSPECTION >

## INSPECTION AND ADJUSTMENT

### ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT

#### ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Description

INFOID:000000007305973

#### MEMORY RESET PROCEDURE

1. Please observe the following instructions at confirming the sunroof operation.

**NOTE:**

Do not disconnect the electronic power while the sunroof is operating or within 5 seconds after the sunroof stops. (to wipe-out the memory of lid position and operating friction.)

2. Initialization of system should be conducted after the following conditions.
  - When the sunroof motor is changed.
  - When the sunroof does not operate normally. (Incomplete initialization conditions)

#### ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Special Repair Requirement

INFOID:000000007305974

#### INITIALIZATION PROCEDURE

If the sunroof does not close or open automatically, use the following procedure to return sunroof operation to normal.

1. Turn ignition switch ON.
2. Push and hold the sunroof tilt switch in the forward (DOWN) position until the sunroof is fully closed.
3. After the sunroof has closed all the way, push and hold the tilt switch forward (DOWN) again for more than 2 seconds to re-learn motor position.
4. Initialization is complete if the sunroof operates normally.

#### BASIC INSPECTION

#### BASIC INSPECTION : Special Repair Requirement

INFOID:000000007305975

#### BASIC INSPECTION

##### 1.INSPECTION START

1. Check the service history.
2. Check the following parts.
  - Fuse/circuit breaker blown.
  - Poor connection, open or short circuit of harness connector.
  - Battery voltage.

#### Is the inspection result normal?

- YES >> Inspection End.  
NO >> Repair or replace the malfunctioning parts.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
RF  
L  
M  
N  
O  
P

# SUNROOF SYSTEM

< SYSTEM DESCRIPTION >


## SYSTEM DESCRIPTION

### SUNROOF SYSTEM

#### System Diagram

INFOID:000000007305976

#### SUNROOF

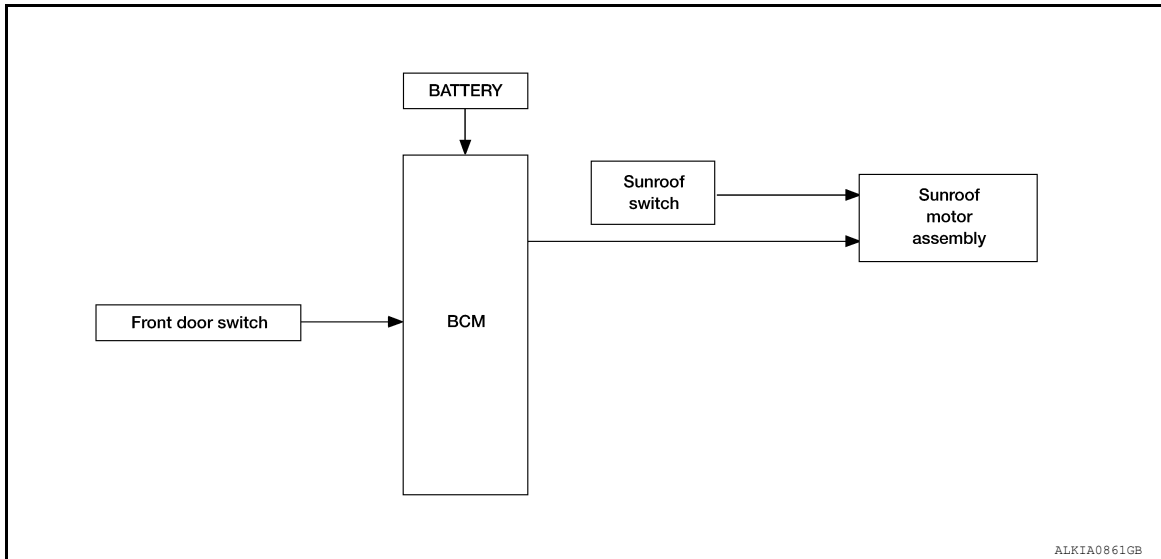

ALKIA0861GB

#### System Description

INFOID:000000007305977

### SUNROOF SYSTEM

#### INPUT/OUTPUT SIGNAL CHART

| Item           | Input signal to sunroof motor assembly          | Sunroof motor function | Actuator      |
|----------------|---|------------------------|---------------|
| Sunroof switch | Sunroof switch signal (tilt down or slide open) | Sunroof control        | Sunroof motor |
|                | Sunroof switch signal (tilt up or slide close)  |                        |               |
| BCM            | RAP signal                                      |                        |               |

#### SUNROOF OPERATION

- The sunroof motor assembly operates with a power supply that is output from the BCM while the ignition switch is ON or retained power is operating.
- The tilt up/down & slide open/close signals from the sunroof switch enable the sunroof motor to move arbitrarily.

#### AUTO OPERATION

The sunroof AUTO feature makes it possible to slide open and slide close or tilt up and tilt down the sunroof without holding the sunroof switch in the slide open/tilt down or slide close/tilt up position.

#### RETAINED POWER OPERATION

Retained power operation is an additional power supply function that enables the sunroof system to operate up to 45 seconds after the ignition switch is turned OFF.

#### Retained power function cancel conditions


- When a front door is opened (door switch ON)
- When ignition switch is turned ON again.
- When 45 seconds elapse on the timer.

# SUNROOF SYSTEM

< SYSTEM DESCRIPTION >

## Component Parts Location

INFOID:000000007305978

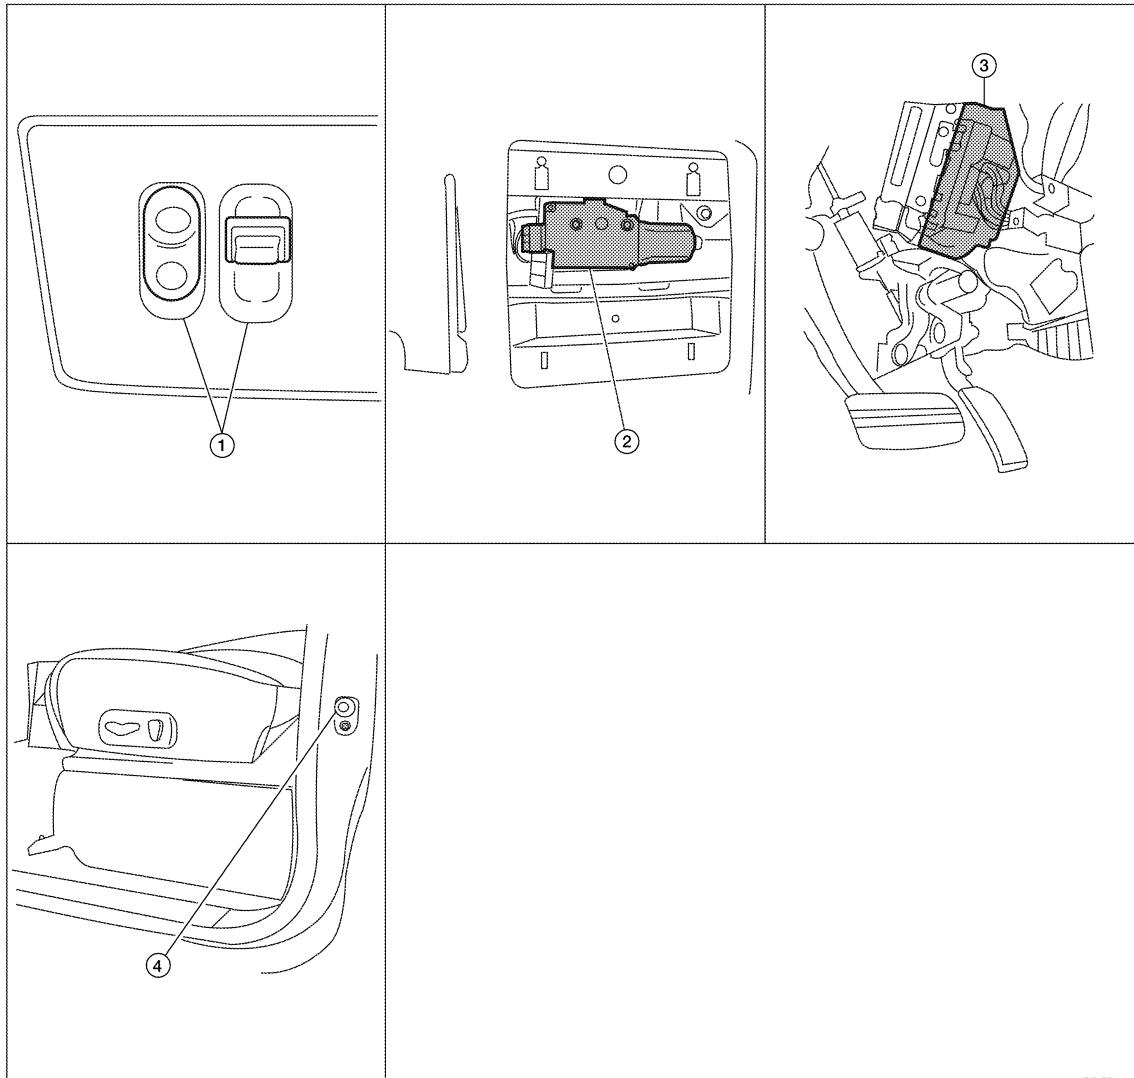

A  
B  
C  
D  
E  
F  
G  
H  
I  
J

RF

ALKIA08672Z

L  
M

- 1. Sunroof switch R104
- 2. Sunroof motor assembly R4
- 3. BCM M18, M19, M20  
(View with instrument panel removed)
- 4. Front door switch LH B8, RH B108

## Component Description

INFOID:000000007305979

N  
O  
P

| Component              | Function   |
|------------------------|--|
| BCM                    | Supplies power to the sunroof motor assembly.  |
| Sunroof switch         | Transmits tilt up/down & slide open/close operation signal to sunroof motor assembly.                            |
| Sunroof motor assembly | The sunroof motor and integrated CPU enables tilt up/down & slide open/close as requested by the sunroof switch. |
| Front door switch      | Detects door open/close condition and transmits to BCM.  |

# DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

## DIAGNOSIS SYSTEM (BCM)

### COMMON ITEM

COMMON ITEM : CONSULT Function (BCM - COMMON ITEM)

INFOID:000000007799335

### APPLICATION ITEM

CONSULT performs the following functions via CAN communication with BCM.

| Direct Diagnostic Mode | Description  |
|------------------------|--|
| Ecu Identification     | The BCM part number is displayed.  |
| Self Diagnostic Result | The BCM self diagnostic results are displayed.   |
| Data Monitor           | The BCM input/output data is displayed in real time.   |
| Active Test            | The BCM activates outputs to test components.  |
| Work support           | The settings for BCM functions can be changed.   |
| Configuration          | <ul style="list-style-type: none"> <li>The vehicle specification can be read and saved.</li> <li>The vehicle specification can be written when replacing BCM.</li> </ul> |
| CAN Diag Support Mntr  | The result of transmit/receive diagnosis of CAN communication is displayed.  |

### SYSTEM APPLICATION

BCM can perform the following functions.

| System                               | Sub System           | Direct Diagnostic Mode |                        |              |             |              |               |                       |
|--------------------------------------|----------------------|------------------------|------------------------|--------------|-------------|--------------|---------------|-----------------------|
|                                      |                      | Ecu Identification     | Self Diagnostic Result | Data Monitor | Active Test | Work support | Configuration | CAN Diag Support Mntr |
| Door lock                            | DOOR LOCK            |                        |                        | x            | x           | x            |               |                       |
| Rear window defogger                 | REAR DEFOGGER        |                        |                        | x            | x           |              |               |                       |
| Warning chime                        | BUZZER               |                        |                        | x            | x           |              |               |                       |
| Interior room lamp timer             | INT LAMP             |                        |                        | x            | x           | x            |               |                       |
| Remote keyless entry system          | MULTI REMOTE ENT     |                        |                        | x            | x           | x            |               |                       |
| Exterior lamp                        | HEADLAMP             |                        |                        | x            | x           | x            |               |                       |
| Wiper and washer                     | WIPER                |                        |                        | x            | x           | x            |               |                       |
| Turn signal and hazard warning lamps | FLASHER              |                        |                        | x            | x           |              |               |                       |
| Air conditioner                      | AIR CONDITIONER      |                        |                        | x            |             |              |               |                       |
| Combination switch                   | COMB SW              |                        |                        | x            |             |              |               |                       |
| BCM                                  | BCM                  | x                      | x                      |              |             | x            | x             | x                     |
| Immobilizer                          | IMMU                 |                        | x                      | x            | x           |              |               |                       |
| Interior room lamp battery saver     | BATTERY SAVER        |                        |                        | x            | x           | x            |               |                       |
| Vehicle security system              | THEFT ALM            |                        |                        | x            | x           | x            |               |                       |
| RAP system                           | RETAINED PWR         |                        |                        | x            | x           | x            |               |                       |
| Signal buffer system                 | SIGNAL BUFFER        |                        |                        | x            | x           |              |               |                       |
| TPMS                                 | AIR PRESSURE MONITOR |                        | x                      | x            | x           | x            |               |                       |
| Panic alarm system                   | PANIC ALARM          |                        |                        |              | x           |              |               |                       |

### RETAINED PWR



# DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

## RETAINED PWR : CONSULT Function (BCM - RETAINED PWR)

INFOID:000000007799336

### DATA MONITOR

| Monitor Item [Unit] | Description   |
|---------------------|---|
| IGN ON SW [On/Off]  | Indicates condition of ignition switch ON position. |
| DOOR SW-DR [On/Off] | Indicates condition of front door switch LH.        |
| DOOR SW-AS [On/Off] | Indicates condition of front door switch RH.        |

### ACTIVE TEST

| Test Item    | Description   |
|--------------|---|
| RETAINED PWR | This test is able to check retained power operation [Off/On]. |

### WORK SUPPORT

| Support Item     | Setting | Description |
|------------------|---------|-------------|
| RETAINED PWR SET | MODE3   | 2 min       |
|                  | MODE2   | OFF         |
|                  | MODE1*  | 45 sec      |

\*: Initial setting

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
RF  
L  
M  
N  
O  
P

# POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

## DTC/CIRCUIT DIAGNOSIS

### POWER SUPPLY AND GROUND CIRCUIT SUNROOF MOTOR ASSEMBLY

#### SUNROOF MOTOR ASSEMBLY : Diagnosis Procedure


INFOID:000000007305982

Regarding Wiring Diagram information, refer to [RF-28, "Wiring Diagram"](#).

#### 1. SUNROOF MOTOR ASSEMBLY

1. Turn ignition switch OFF.
2. Disconnect sunroof motor assembly connector R4.
3. Turn ignition switch ON.
4. Check voltage between sunroof motor assembly connector R4 terminals 1 and 5 and ground.

| (+)       |          | (-)    | Voltage         |
|-----------|----------|--------|-----------------|
| Connector | Terminal |        |                 |
| R4        | 1        | Ground | Battery voltage |
|           | 5        |        |                 |

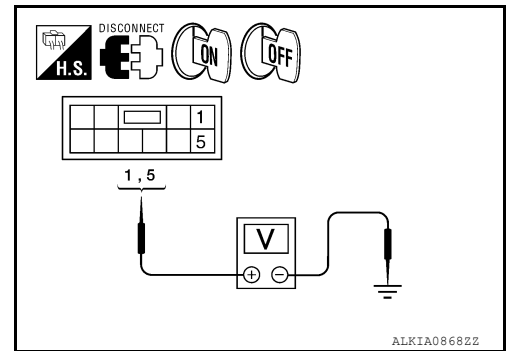

Is the voltage as specified?


YES >> GO TO 4

NO >> GO TO 2

#### 2. CHECK SUNROOF MOTOR POWER SUPPLY

1. Turn ignition switch OFF.
2. Disconnect BCM connector M20.
3. Check continuity between BCM connector M20 (A) and sunroof motor assembly connector R4 (B).

| A         |          | B         |          | Continuity |
|-----------|----------|-----------|----------|------------|
| Connector | Terminal | Connector | Terminal |            |
| M20       | 68       | R4        | 5        | Yes        |
|           | 69       |           | 1        |            |

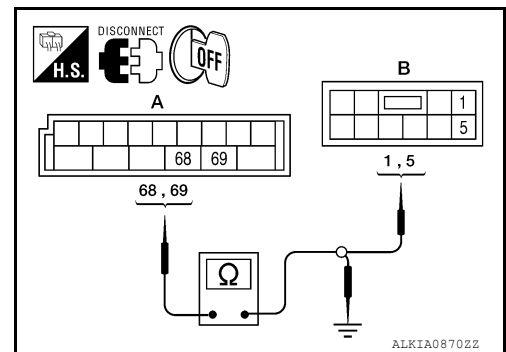

4. Check continuity between BCM connector M20 (A) and ground.

| A         |          | —      | Continuity |
|-----------|----------|--------|------------|
| Connector | Terminal |        |            |
| M20       | 68       | Ground | No         |
|           | 69       |        |            |

Are the continuity test results as specified?

YES >> GO TO 3

NO >> Repair or replace harness.

#### 3. CHECK BCM OUTPUT SIGNAL

# POWER SUPPLY AND GROUND CIRCUIT

## < DTC/CIRCUIT DIAGNOSIS >

1. Connect BCM connector M20.
2. Turn ignition switch ON.
3. Check voltage between BCM connector M20 and ground.

| (+)       |          | (-)    | Voltage         |
|-----------|----------|--------|-----------------|
| Connector | Terminal |        |                 |
| M20       | 68       | Ground | Battery voltage |
|           | 69       |        |                 |

Is the voltage reading as specified?

- YES >> Check condition of harness and connector.  
 NO >> Replace BCM. Refer to [BCS-51, "Removal and Installation"](#).



## 4. CHECK GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Check continuity between sunroof motor assembly connector R4 terminal 7 and ground.

| Connector | Terminal | —      | Continuity |
|-----------|----------|--------|------------|
| R4        | 7        | Ground | Yes        |

Is the continuity test result as specified?

- YES >> Power supply and ground circuits are OK.  
 NO >> Repair or replace harness.

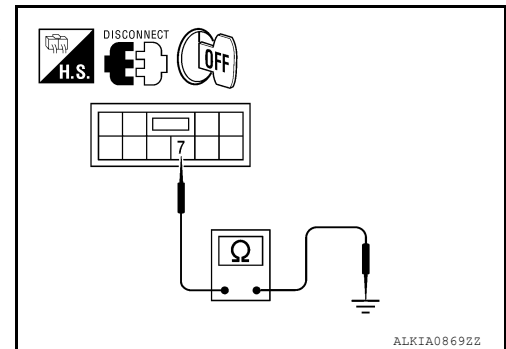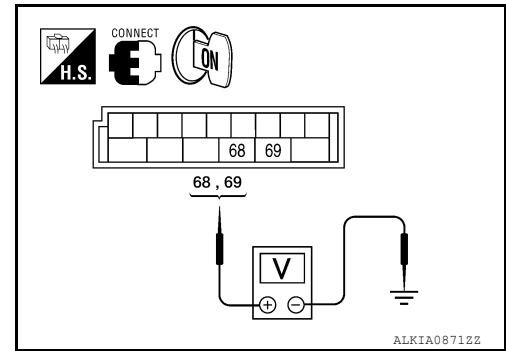

## SUNROOF MOTOR ASSEMBLY : Special Repair Requirement

INFOID:000000007305983

### 1. PERFORM INITIALIZATION PROCEDURE

Perform initialization procedure.

Refer to [RF-5, "ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Special Repair Requirement"](#).

Does the sunroof motor assembly operate properly?

- YES >> Repair is complete.  
 NO >> Check fitting adjustment.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M  
N  
O  
P

RF

# SUNROOF SWITCH CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

## SUNROOF SWITCH CIRCUIT

### Description

INFOID:000000007305984

The BCM supplies power to the integrated CPU of the sunroof motor assembly. The tilt and slide functions of the sunroof motor assembly is controlled by the sunroof switch.

### Component Function Check

INFOID:000000007305985

#### 1. CHECK SUNROOF MOTOR FUNCTION

Do tilt up/down & slide open/close functions operate normally with sunroof switch?

Is the inspection result normal?

YES >> Sunroof motor assembly is OK.

NO >> Refer to [RF-10, "SUNROOF MOTOR ASSEMBLY : Diagnosis Procedure"](#).

### Diagnosis Procedure


INFOID:000000007305986

Regarding Wiring Diagram information, refer to [RF-28, "Wiring Diagram"](#).

#### 1. CHECK SUNROOF SWITCH INPUT SIGNAL

1. Turn ignition switch ON.
2. Check voltage between sunroof switch connector and ground.

| Connector | Terminals |     | Sunroof switch position | Voltage (V)<br>(Approx.) |
|-----------|-----------|-----|-------------------------|--------------------------|
|           | (+)       | (-) |                         |                          |
| R104      | 1         | 2   | SLIDE CLOSE             | 0V                       |
|           |           |     | Other than above        | Battery voltage          |
|           | 3         |     | SLIDE OPEN              | 0V                       |
|           |           |     | Other than above        | Battery voltage          |
|           | 4         |     | TILT UP                 | 0V                       |
|           |           |     | Other than above        | Battery voltage          |
|           | 6         |     | TILT DOWN               | 0V                       |
|           |           |     | Other than above        | Battery voltage          |

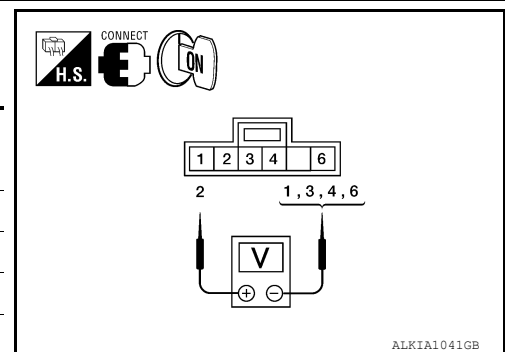


Are the voltage measurements as specified?

YES >> Sunroof switch is operating normally.

NO >> GO TO 2

#### 2. CHECK SUNROOF SWITCH CIRCUITS

1. Turn ignition switch OFF.
2. Disconnect sunroof motor assembly connector R4 and sunroof switch connector R104.
3. Check continuity between sunroof switch connector R104 (A) and sunroof motor assembly connector R4 (B).

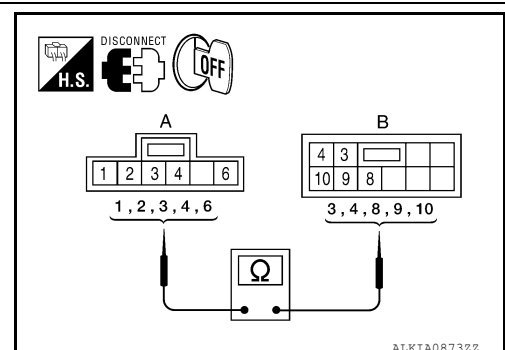

# SUNROOF SWITCH CIRCUIT

## < DTC/CIRCUIT DIAGNOSIS >

| A         |          | B         |          | Continuity |
|-----------|----------|-----------|----------|------------|
| Connector | Terminal | Connector | Terminal |            |
| R104      | 1        | R4        | 3        | Yes        |
|           | 2        |           | 8        |            |
|           | 3        |           | 9        |            |
|           | 4        |           | 4        |            |
|           | 6        |           | 10       |            |

4. Check continuity between sunroof switch connector R104 (A) and ground.

| A         |          | —      | Continuity |
|-----------|----------|--------|------------|
| Connector | Terminal |        |            |
| R104      | 1        | Ground | No         |
|           | 2        |        |            |
|           | 3        |        |            |
|           | 4        |        |            |
|           | 6        |        |            |

Are the continuity test results as specified?


YES >> GO TO 3

NO >> Repair harness or connector.

### 3. CHECK SUNROOF SWITCH

1. Check continuity between sunroof switch terminals.

| Terminals | Sunroof switch position | Continuity |
|-----------|-------------------------|------------|
| 1         | SLIDE CLOSE             | Yes        |
|           | Other than above        | No         |
| 3         | SLIDE OPEN              | Yes        |
|           | Other than above        | No         |
| 4         | TILT UP                 | Yes        |
|           | Other than above        | No         |
| 6         | TILT DOWN               | Yes        |
|           | Other than above        | No         |

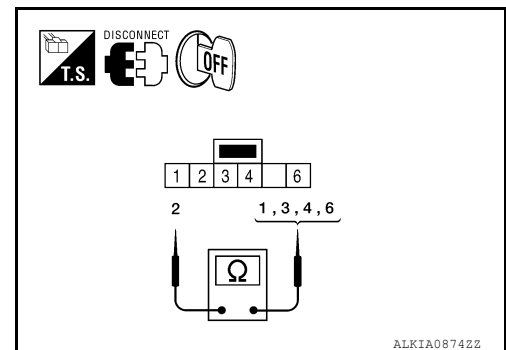

Are the continuity test results as specified?

YES >> Sunroof switch is operating normally.

NO >> Replace sunroof switch (map lamp assembly). Refer to [INL-72. "Removal and Installation"](#).

# DOOR SWITCH

< DTC/CIRCUIT DIAGNOSIS >

## DOOR SWITCH

### Description

INFOID:000000007305987

Detects door open/close condition.

### Component Function Check

INFOID:000000007305988

## 1.CHECK FUNCTION

### With CONSULT

Check door switches in data monitor mode with CONSULT.

| Monitor item | Condition              |
|--------------|------------------------|
| DOOR SW-DR   | CLOSE → OPEN: OFF → ON |
| DOOR SW-AS   |                        |

### Is the inspection result normal?

YES >> Door switch is OK.

NO >> Refer to [RF-14, "Diagnosis Procedure"](#).

## Diagnosis Procedure

INFOID:000000007305989

Regarding Wiring Diagram information, refer to [RF-28, "Wiring Diagram"](#).

## 1.CHECK DOOR SWITCHES INPUT SIGNAL

### With CONSULT

Check door switches ("DOOR SW-DR" and "DOOR SW-AS") in DATA MONITOR mode with CONSULT. Refer to [BCS-16, "DOOR LOCK : CONSULT Function \(BCM - DOOR LOCK\)"](#).

- When doors are open:

**DOOR SW-DR :ON**

**DOOR SW-AS :ON**

- When doors are closed:

**DOOR SW-DR :OFF**

**DOOR SW-AS :OFF**

### Without CONSULT

Check voltage between BCM connector M18 or M19 terminals 12, 47 and ground.

| Connector | Item                 | Terminals |        | Condition | Voltage (V)<br>(Approx.) |
|-----------|----------------------|-----------|--------|-----------|--------------------------|
|           |                      | (+)       | (-)    |           |                          |
| M19       | Front door switch LH | 47        | Ground | Open      | 0                        |
| M18       | Front door switch RH | 12        |        | Closed    | Battery voltage          |

### Is the inspection result normal?

YES >> Door switch circuit is OK.

NO >> GO TO 2

## 2.CHECK DOOR SWITCH CIRCUIT

1. Turn ignition switch OFF.

# DOOR SWITCH

## < DTC/CIRCUIT DIAGNOSIS >

2. Disconnect door switch and BCM.
3. Check continuity between door switch connector B8 (Front LH), B108 (Front RH) terminal 2 and BCM connector M18, M19 terminals 12, 47.

**2 - 47 :Continuity should exist**

**2 - 12 :Continuity should exist**

4. Check continuity between door switch connector B8 (Front LH), B108 (Front RH) terminal 2 and ground.

**2 - Ground :Continuity should not exist**

Is the inspection result normal?

YES >> GO TO 3

NO >> Repair or replace harness.

### 3.CHECK DOOR SWITCHES


Check continuity between door switch terminal 2 and exposed metal of switch while pressing and releasing switch.

|                     | Terminals  | Condition | Continuity |
|---------------------|------------|-----------|------------|
| Door switch (front) | 2 – Ground | Released  | Yes        |
|                     |            | Pressed   | No         |

Is the inspection result normal?

YES >> Replace BCM. Refer to [BCS-51, "Removal and Installation"](#).

NO >> Replace front door switch.

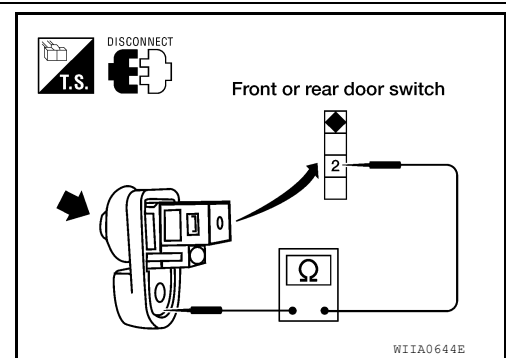

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
RF  
L  
M  
N  
O  
P

## BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

# ECU DIAGNOSIS INFORMATION

## BCM (BODY CONTROL MODULE)

### Reference Value

INFOID:000000007799337

**NOTE:**

The Signal Tech II Tool (J-50190) can be used to perform the following functions. Refer to the Signal Tech II User Guide for additional information.

- Activate and display TPMS transmitter IDs
- Display tire pressure reported by the TPMS transmitter
- Read TPMS DTCs
- Register TPMS transmitter IDs
- Test remote keyless entry keyfob relative signal strength

### VALUES ON THE DIAGNOSIS TOOL

| Monitor Item  | Condition  | Value/Status                  |
|---------------|--|-------------------------------|
| ACC ON SW     | Ignition switch OFF or ON                        | Off                           |
|               | Ignition switch ACC                              | On                            |
| AIR COND SW   | A/C switch OFF                                   | Off                           |
|               | A/C switch ON                                    | On                            |
| AIR PRESS FL  | Front left tire air pressure value               | kPa, kg/cm <sup>2</sup> , psi |
| AIR PRESS FR  | Front right tire air pressure value              | kPa, kg/cm <sup>2</sup> , psi |
| AIR PRESS RL  | Rear left tire air pressure value                | kPa, kg/cm <sup>2</sup> , psi |
| AIR PRESS RR  | Rear right tire air pressure value               | kPa, kg/cm <sup>2</sup> , psi |
| AUTO LIGHT SW | Lighting switch OFF                              | Off                           |
|               | Lighting switch AUTO                             | On                            |
| BRAKE SW      | Brake pedal released                             | Off                           |
|               | Brake pedal applied                              | On                            |
| BUCKLE SW     | Seat belt buckle unfastened                      | Off                           |
|               | Seat belt buckle fastened                        | On                            |
| BUZZER        | Buzzer in combination meter OFF                  | Off                           |
|               | Buzzer in combination meter ON                   | On                            |
| CARGO LAMP SW | Cargo lamp switch OFF                            | Off                           |
|               | Cargo lamp switch ON                             | On                            |
| CDL LOCK SW   | Door lock/unlock switch does not operate         | Off                           |
|               | Press door lock/unlock switch to the LOCK side   | On                            |
| CDL UNLOCK SW | Door lock/unlock switch does not operate         | Off                           |
|               | Press door lock/unlock switch to the UNLOCK side | On                            |
| DOOR SW-AS    | Front door RH closed                             | Off                           |
|               | Front door RH opened                             | On                            |
| DOOR SW-DR    | Front door LH closed                             | Off                           |
|               | Front door LH opened                             | On                            |
| DOOR SW-RL    | Rear door LH closed                              | Off                           |
|               | Rear door LH opened                              | On                            |
| DOOR SW-RR    | Rear door RH closed                              | Off                           |
|               | Rear door RH opened                              | On                            |



## BCM (BODY CONTROL MODULE)

### < ECU DIAGNOSIS INFORMATION >

| Monitor Item  | Condition   | Value/Status |    |
|---------------|---|--------------|----|
| FAN ON SIG    | Blower motor fan switch OFF                         | Off          | A  |
|               | Blower motor fan switch ON                          | On           |    |
| FR FOG SW     | Front fog lamp switch OFF                           | Off          | B  |
|               | Front fog lamp switch ON                            | On           |    |
| FR WASHER SW  | Front washer switch OFF                             | Off          | C  |
|               | Front washer switch ON                              | On           |    |
| FR WIPER LOW  | Front wiper switch OFF                              | Off          |    |
|               | Front wiper switch LO                               | On           | D  |
| FR WIPER HI   | Front wiper switch OFF                              | Off          |    |
|               | Front wiper switch HI                               | On           |    |
| FR WIPER INT  | Front wiper switch OFF                              | Off          | E  |
|               | Front wiper switch INT                              | On           |    |
| FR WIPER STOP | Any position other than front wiper stop position   | Off          | F  |
|               | Front wiper stop position                           | On           |    |
| HAZARD SW     | When hazard switch is not pressed                   | Off          |    |
|               | When hazard switch is pressed                       | On           | G  |
| HEAD LAMP SW1 | Headlamp switch OFF                                 | Off          |    |
|               | Headlamp switch 1st                                 | On           | H  |
| HEAD LAMP SW2 | Headlamp switch OFF                                 | Off          |    |
|               | Headlamp switch 1st                                 | On           |    |
| HI BEAM SW    | High beam switch OFF                                | Off          | I  |
|               | High beam switch HI                                 | On           |    |
| ID REGST FL1  | ID registration of front left tire incomplete       | YET          | J  |
|               | ID registration of front left tire complete         | DONE         |    |
| ID REGST FR1  | ID registration of front right tire incomplete      | YET          |    |
|               | ID registration of front right tire complete        | DONE         | RF |
| ID REGST RL1  | ID registration of rear left tire incomplete        | YET          |    |
|               | ID registration of rear left tire complete          | DONE         |    |
| ID REGST RR1  | ID registration of rear right tire incomplete       | YET          | L  |
|               | ID registration of rear right tire complete         | DONE         |    |
| IGN ON SW     | Ignition switch OFF or ACC                          | Off          | M  |
|               | Ignition switch ON                                  | On           |    |
| IGN SW CAN    | Ignition switch OFF or ACC                          | Off          |    |
|               | Ignition switch ON                                  | On           | N  |
| INT VOLUME    | Wiper intermittent dial is in a dial position 1 - 7 | 1 - 7        |    |
| KEY CYL LK-SW | Door key cylinder LOCK position                     | Off          | O  |
|               | Door key cylinder other than LOCK position          | On           |    |
| KEY CYL UN-SW | Door key cylinder UNLOCK position                   | Off          |    |
|               | Door key cylinder other than UNLOCK position        | On           | P  |
| KEY ON SW     | Mechanical key is removed from key cylinder         | Off          |    |
|               | Mechanical key is inserted to key cylinder          | On           |    |
| KEYLESS LOCK  | LOCK button of key fob is not pressed               | Off          |    |
|               | LOCK button of key fob is pressed                   | On           |    |

## BCM (BODY CONTROL MODULE)

### < ECU DIAGNOSIS INFORMATION >


| Monitor Item   | Condition   | Value/Status                      |
|----------------|---|-----------------------------------|
| KEYLESS PANIC  | PANIC button of key fob is not pressed                  | Off                               |
|                | PANIC button of key fob is pressed                      | On                                |
| KEYLESS UNLOCK | UNLOCK button of key fob is not pressed                 | Off                               |
|                | UNLOCK button of key fob is pressed                     | On                                |
| LIGHT SW 1ST   | Lighting switch OFF                                     | Off                               |
|                | Lighting switch 1st                                     | On                                |
| OIL PRESS SW   | • Ignition switch OFF or ACC<br>• Engine running        | Off                               |
|                | Ignition switch ON                                      | On                                |
| OPTICAL SENSOR | Bright outside of the vehicle                           | Close to 5V                       |
|                | Dark outside of the vehicle                             | Close to 0V                       |
| PASSING SW     | Other than lighting switch PASS                         | Off                               |
|                | Lighting switch PASS                                    | On                                |
| REAR DEF SW    | Rear window defogger switch OFF                         | Off                               |
|                | Rear window defogger switch ON                          | On                                |
| TURN SIGNAL L  | Turn signal switch OFF                                  | Off                               |
|                | Turn signal switch LH                                   | On                                |
| TURN SIGNAL R  | Turn signal switch OFF                                  | Off                               |
|                | Turn signal switch RH                                   | On                                |
| VEHICLE SPEED  | While driving   | Equivalent to speedometer reading |
| WARNING LAMP   | Low tire pressure warning lamp in combination meter OFF | Off                               |
|                | Low tire pressure warning lamp in combination meter ON  | On                                |

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

## Terminal Layout

INFOID:000000007799338

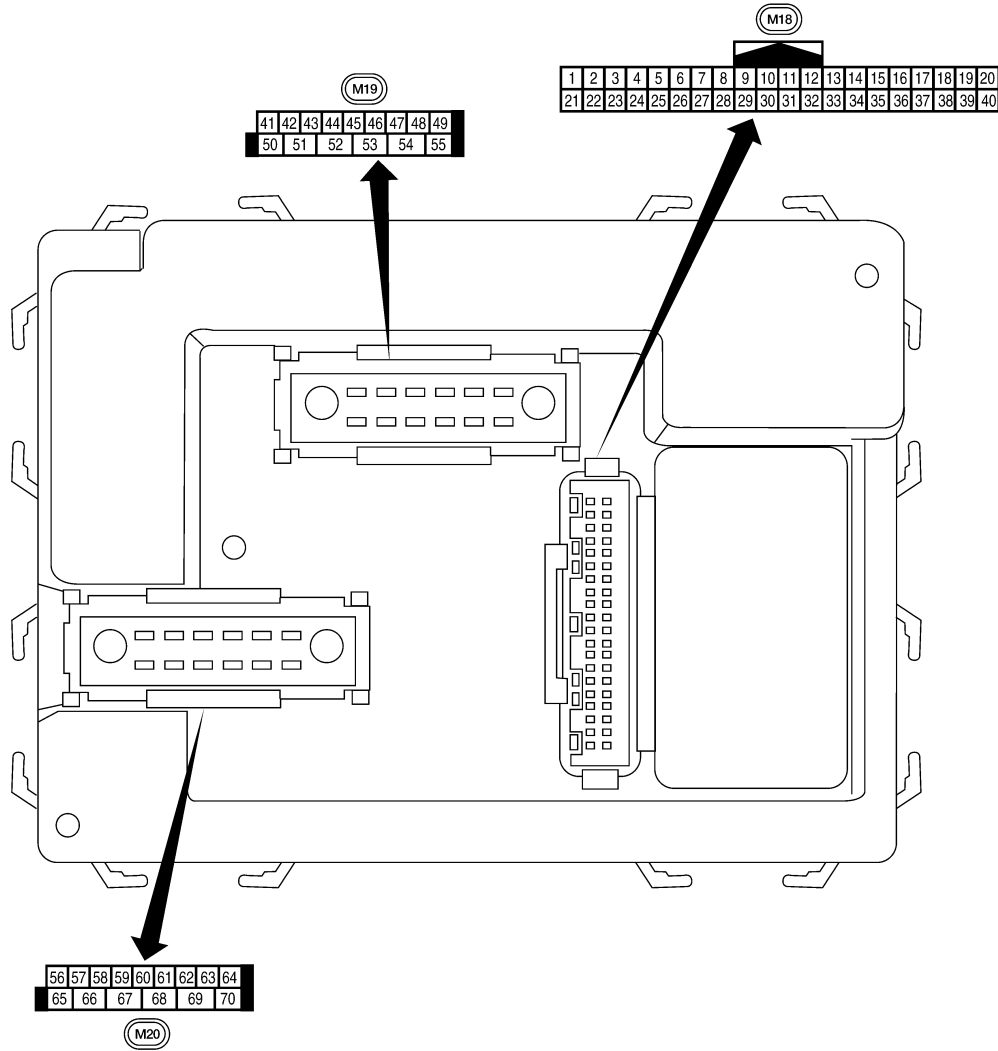

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
RF  
L  
M  
N  
O  
P





## Physical Values

LIIA2443E

INFOID:000000007799339





# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS INFORMATION >
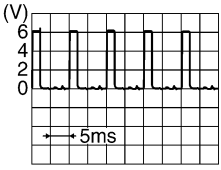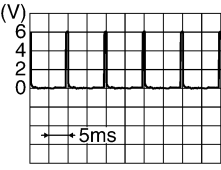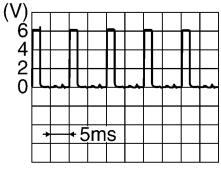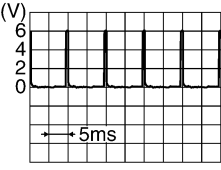
| Terminal | Wire color | Signal name                            | Signal input/output | Measuring condition |  | Reference value or waveform (Approx.)   |
|----------|------------|--|---------------------|---------------------|--|---|
|          |            |  |                     | Ignition switch     | Operation or condition                             |   |
| 1        | BR/W       | Key ring output                        | Output              | OFF                 | ON (driver door open)                              | 0V  |
|          |            |  |                     |                     | OFF (driver door closed)                           | Battery voltage   |
| 2        | SB         | Combination switch input 5             | Input               | ON                  | Lighting, turn, wiper OFF<br>Wiper dial position 4 |  <p style="text-align: right; font-size: small;">SKIA5291E</p>   |
| 3        | G/Y        | Combination switch input 4             | Input               | ON                  | Lighting, turn, wiper OFF<br>Wiper dial position 4 |  <p style="text-align: right; font-size: small;">SKIA5292E</p>   |
| 4        | Y          | Combination switch input 3             | Input               | ON                  | Lighting, turn, wiper OFF<br>Wiper dial position 4 |  <p style="text-align: right; font-size: small;">SKIA5291E</p>  |
| 5        | G/B        | Combination switch input 2             | Input               | ON                  | Lighting, turn, wiper OFF<br>Wiper dial position 4 |  <p style="text-align: right; font-size: small;">SKIA5292E</p> |
| 6        | V          | Combination switch input 1             |                     |                     |  |   |
| 9        | Y/B        | Rear window defogger switch (Crew Cab) | Input               | ON                  | Rear window defogger switch ON                     | 0V  |
|          |            |  |                     |                     | Rear window defogger switch OFF                    | 5V  |
| 11       | O          | Ignition switch (ACC or ON)            | Input               | ACC or ON           | Ignition switch ACC or ON                          | Battery voltage   |
| 12       | R/L        | Front door switch RH (All)             | Input               | OFF                 | ON (open)  | 0V  |
|          |            | Rear door switch lower RH (King Cab)   |                     |                     | OFF (closed)                                       | Battery voltage   |
|          |            | Rear door switch upper RH (King Cab)   |                     |                     |  |   |
| 13       | GR         | Rear door switch RH (Crew Cab)         | Input               | OFF                 | ON (open)  | 0V  |
|          |            |  |                     |                     | OFF (closed)                                       | Battery voltage   |
| 15       | L/W        | Tire pressure warning check connector  | Input               | OFF                 | —  | 5V  |





# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS INFORMATION >
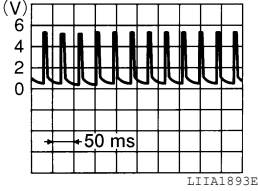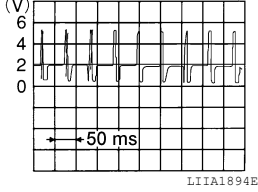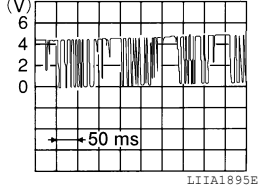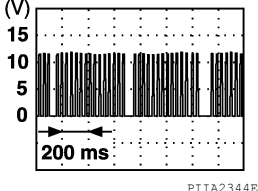
| Terminal | Wire color | Signal name   | Signal input/output | Measuring condition |   | Reference value or waveform (Approx.)  |
|----------|------------|---|---------------------|---------------------|---|--|
|          |            |   |                     | Ignition switch     | Operation or condition  |  |
| 18       | P          | Remote keyless entry receiver and optical sensor (ground) | Output              | OFF                 | —   | 0V   |
| 19       | V/W        | Remote keyless entry receiver (power supply)              | Output              | OFF                 | Ignition switch OFF   |   |
| 20       | G/W        | Remote keyless entry receiver (signal)                    | Input               | OFF                 | Stand-by (keyfob buttons released)  |   |
|          |            |   |                     |                     | When remote keyless entry receiver receives signal from keyfob (keyfob buttons pressed) |                                        |
| 21       | G          | NATS antenna amp.   | Input               | OFF → ON            | Ignition switch (OFF → ON)  | Just after turning ignition switch ON: Pointer of tester should move for approx. 1 second, then return to battery voltage. |
| 22       | G          | BUS   | —                   | —                   | Ignition switch ON or power window timer operates                                       |                                       |
| 23       | G/O        | Security indicator lamp                                   | Output              | OFF                 | Goes OFF → illuminates (Every 2.4 seconds)  | Battery voltage → 0V   |
| 25       | BR         | NATS antenna amp.   | Input               | OFF → ON            | Ignition switch (OFF → ON)  | Just after turning ignition switch ON: Pointer of tester should move for approx. 1 second, then return to battery voltage. |
| 27       | W/R        | Compressor ON signal                                      | Input               | ON                  | A/C switch OFF  | 5V   |
|          |            |   |                     |                     | A/C switch ON   | 0V   |
| 28       | L/R        | Front blower monitor                                      | Input               | ON                  | Front blower motor OFF  | Battery voltage  |
|          |            |   |                     |                     | Front blower motor ON   | 0V   |
| 29       | W/B        | Hazard switch   | Input               | OFF                 | ON  | 0V   |
|          |            |   |                     |                     | OFF   | 5V   |
| 31       | P/L        | Cargo lamp switch   | Input               | OFF                 | Cargo lamp switch ON  | 0  |
|          |            |   |                     |                     | Cargo lamp switch OFF   | Battery voltage  |





# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS INFORMATION >
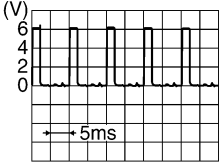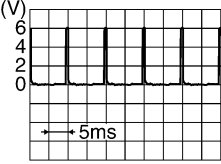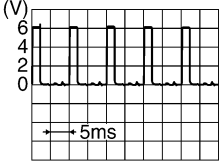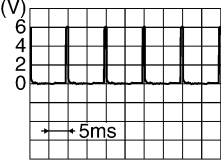
| Terminal | Wire color | Signal name                          | Signal input/output | Measuring condition |  | Reference value or waveform (Approx.)   |
|----------|------------|--------------------------------------|---------------------|---------------------|--|---|
|          |            |                                      |                     | Ignition switch     | Operation or condition                             |   |
| 32       | R/G        | Combination switch output 5          | Output              | ON                  | Lighting, turn, wiper OFF<br>Wiper dial position 4 |  <p style="text-align: right; font-size: small;">SKIA5291E</p>   |
| 33       | R/Y        | Combination switch output 4          | Output              | ON                  | Lighting, turn, wiper OFF<br>Wiper dial position 4 |  <p style="text-align: right; font-size: small;">SKIA5292E</p>   |
| 34       | L          | Combination switch output 3          | Output              | ON                  | Lighting, turn, wiper OFF<br>Wiper dial position 4 |  <p style="text-align: right; font-size: small;">SKIA5291E</p>   |
| 35       | O/B        | Combination switch output 2          | Output              | ON                  | Lighting, turn, wiper OFF<br>Wiper dial position 4 |  <p style="text-align: right; font-size: small;">SKIA5292E</p> |
| 36       | R/W        | Combination switch output 1          |                     |                     |  |   |
| 37       | B/R        | Key switch and key lock solenoid     | Input               | OFF                 | Key inserted                                       | Battery voltage   |
|          |            |                                      |                     |                     | Key removed  | 0V  |
| 38       | W/L        | Ignition switch (ON)                 | Input               | ON                  | —  | Battery voltage   |
| 39       | L          | CAN-H                                | —                   | —                   | —  | —   |
| 40       | P          | CAN-L                                | —                   | —                   | —  | —   |
| 47       | SB         | Front door switch LH (All)           | Input               | OFF                 | ON (open)  | 0V  |
|          |            | Rear door switch lower LH (King Cab) |                     |                     | OFF (closed)                                       | Battery voltage   |
| 48       | R/Y        | Rear door switch LH (Crew Cab)       | Input               | OFF                 | ON (open)  | 0V  |
|          |            |                                      |                     |                     | OFF (closed)                                       | Battery voltage   |
| 50       | R/Y        | Cargo bed lamp control               | Output              | OFF                 | Cargo lamp switch (ON)                             | 0V  |
|          |            |                                      |                     |                     | Cargo lamp switch (OFF)                            | Battery voltage   |

# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS INFORMATION >
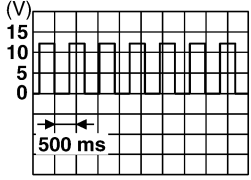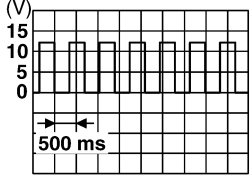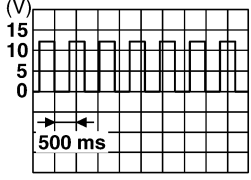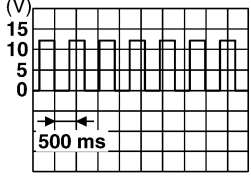
| Terminal | Wire color | Signal name                                   | Signal input/output | Measuring condition |   | Reference value or waveform (Approx.)   |    |
|----------|------------|---|---------------------|---------------------|---|---|----|
|          |            |   |                     | Ignition switch     | Operation or condition  |   |    |
| 51       | G/Y        | Trailer turn signal (right)                   | Output              | ON                  | Turn right ON   |  <p style="text-align: right; font-size: small;">SKIA3009J</p>   |    |
| 52       | G/B        | Trailer turn signal (left)                    | Output              | ON                  | Turn left ON  |  <p style="text-align: right; font-size: small;">SKIA3009J</p>   |    |
| 56       | R/G        | Battery saver output                          | Output              | OFF                 | 15 minutes (early production) or 10 minutes (late production) after ignition switch is turned OFF | 0V  |    |
|          |            |   |                     | ON                  | —   | Battery voltage   |    |
| 57       | Y/R        | Battery power supply                          | Input               | OFF                 | —   | Battery voltage   |    |
| 58       | W/R        | Optical sensor                                | Input               | ON                  | When optical sensor is illuminated  | 3.1V or more  |    |
|          |            |   |                     |                     | When optical sensor is not illuminated  | 0.6V or less  |    |
| 59       | G          | Front door lock assembly LH actuator (unlock) | Output              | OFF                 | OFF (neutral)   | 0V  |    |
|          |            |   |                     | ON (unlock)         | Battery voltage   |   |    |
| 60       | G/B        | Turn signal (left)                            | Output              | ON                  | Turn left ON  |  <p style="text-align: right; font-size: small;">SKIA3009J</p> |    |
| 61       | G/Y        | Turn signal (right)                           | Output              | ON                  | Turn right ON   |  <p style="text-align: right; font-size: small;">SKIA3009J</p> |    |
| 62       | R/W        | Step lamp LH and RH                           | Output              | OFF                 | ON (any door open)  | 0V  |    |
|          |            |   |                     |                     | OFF (all doors closed)  | Battery voltage   |    |
| 63       | L          | Interior room/map lamp                        | Output              | OFF                 | Any door switch   | ON (open)   | 0V |
|          |            |   |                     |                     | OFF (closed)  | Battery voltage   |    |
| 65       | V          | All door lock actuators (lock)                | Output              | OFF                 | OFF (neutral)   | 0V  |    |
|          |            |   |                     |                     | ON (lock)   | Battery voltage   |    |

# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS INFORMATION >

| Terminal | Wire color | Signal name   | Signal input/output | Measuring condition |   | Reference value or waveform (Approx.) |
|----------|------------|---|---------------------|---------------------|---|---------------------------------------|
|          |            |   |                     | Ignition switch     | Operation or condition  |                                       |
| 66       | G/Y        | Front door lock actuator RH and rear door lock actuators LH/RH (unlock) | Output              | OFF                 | OFF (neutral)   | 0V                                    |
|          |            |   |                     |                     | ON (unlock)   | Battery voltage                       |
| 67       | B          | Ground  | Input               | ON                  | —   | 0V                                    |
| 68       | W/L        | Power window power supply (RAP)   | Output              | —                   | Ignition switch ON  | Battery voltage                       |
|          |            |   |                     |                     | Within 45 seconds after ignition switch OFF                     | Battery voltage                       |
|          |            |   |                     |                     | More than 45 seconds after ignition switch OFF                  | 0V                                    |
|          |            |   |                     |                     | When front door LH or RH is open or power window timer operates | 0V                                    |
| 69       | W/R        | Power window power supply   | Output              | —                   | —   | Battery voltage                       |
| 70       | W/B        | Battery power supply  | Input               | OFF                 | —   | Battery voltage                       |

### Fail Safe

INFOID:000000007799340

#### Fail-safe index

BCM performs fail-safe control when any DTC listed below is detected.

| Display contents of CONSULT | Fail-safe               | Cancellation  |
|-----------------------------|-------------------------|---|
| U1000: CAN COMM CIRCUIT     | Inhibit engine cranking | When the BCM re-establishes communication with the other modules. |

### DTC Inspection Priority Chart

INFOID:000000007799341

If some DTCs are displayed at the same time, perform inspections one by one based on the following priority chart.

| Priority | DTC   |
|----------|---|
| 1        | <ul style="list-style-type: none"> <li>U1000: CAN COMM CIRCUIT</li> </ul>   |
| 2        | <ul style="list-style-type: none"> <li>B2190: NATS ANTENNA AMP</li> <li>B2191: DIFFERENCE OF KEY</li> <li>B2192: ID DISCORD BCM-ECM</li> <li>B2193: CHAIN OF BCM-ECM</li> </ul> |



# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS INFORMATION >

| Priority | DTC  |                                 |
|----------|--|---------------------------------|
| 3        | <ul style="list-style-type: none"> <li>• C1729: VHCL SPEED SIG ERR</li> <li>• C1735: IGNITION SIGNAL</li> </ul>  | A                               |
| 4        | <ul style="list-style-type: none"> <li>• C1704: LOW PRESSURE FL</li> <li>• C1705: LOW PRESSURE FR</li> <li>• C1706: LOW PRESSURE RR</li> <li>• C1707: LOW PRESSURE RL</li> <li>• C1708: [NO DATA] FL</li> <li>• C1709: [NO DATA] FR</li> <li>• C1710: [NO DATA] RR</li> <li>• C1711: [NO DATA] RL</li> <li>• C1712: [CHECKSUM ERR] FL</li> <li>• C1713: [CHECKSUM ERR] FR</li> <li>• C1714: [CHECKSUM ERR] RR</li> <li>• C1715: [CHECKSUM ERR] RL</li> <li>• C1716: [PRESSDATA ERR] FL</li> <li>• C1717: [PRESSDATA ERR] FR</li> <li>• C1718: [PRESSDATA ERR] RR</li> <li>• C1719: [PRESSDATA ERR] RL</li> <li>• C1720: [CODE ERR] FL</li> <li>• C1721: [CODE ERR] FR</li> <li>• C1722: [CODE ERR] RR</li> <li>• C1723: [CODE ERR] RL</li> <li>• C1724: [BATT VOLT LOW] FL</li> <li>• C1725: [BATT VOLT LOW] FR</li> <li>• C1726: [BATT VOLT LOW] RR</li> <li>• C1727: [BATT VOLT LOW] RL</li> </ul> | B<br>C<br>D<br>E<br>F<br>G<br>H |

## DTC Index

INFOID:000000007799342

### NOTE:

- Details of time display
- CRNT: Displays when there is a malfunction now or after returning to the normal condition until turning ignition switch OFF → ON again.
- 1 - 39: Displayed if any previous malfunction is present when current condition is normal. It increases like 1 → 2 → 3...38 → 39 after returning to the normal condition whenever ignition switch OFF → ON. The counter remains at 39 even if the number of cycles exceeds it. It is counted from 1 again when turning ignition switch OFF → ON after returning to the normal condition if the malfunction is detected again.

| CONSULT display                                      | Fail-safe | Tire pressure monitor warning lamp ON | Reference page         |
|--|-----------|---------------------------------------|------------------------|
| No DTC is detected. further testing may be required. | —         | —                                     | —                      |
| U1000: CAN COMM CIRCUIT                              | —         | —                                     | <a href="#">BCS-27</a> |
| B2190: NATS ANTENA AMP                               | —         | —                                     | <a href="#">SEC-18</a> |
| B2191: DIFFERENCE OF KEY                             | —         | —                                     | <a href="#">SEC-21</a> |
| B2192: ID DISCORD BCM-ECM                            | —         | —                                     | <a href="#">SEC-22</a> |
| B2193: CHAIN OF BCM-ECM                              | —         | —                                     | <a href="#">SEC-24</a> |
| C1708: [NO DATA] FL                                  | —         | —                                     | <a href="#">WT-14</a>  |
| C1709: [NO DATA] FR                                  | —         | —                                     | <a href="#">WT-14</a>  |
| C1710: [NO DATA] RR                                  | —         | —                                     | <a href="#">WT-14</a>  |
| C1711: [NO DATA] RL                                  | —         | —                                     | <a href="#">WT-14</a>  |
| C1712: [CHECKSUM ERR] FL                             | —         | —                                     | <a href="#">WT-16</a>  |
| C1713: [CHECKSUM ERR] FR                             | —         | —                                     | <a href="#">WT-16</a>  |
| C1714: [CHECKSUM ERR] RR                             | —         | —                                     | <a href="#">WT-16</a>  |
| C1715: [CHECKSUM ERR] RL                             | —         | —                                     | <a href="#">WT-16</a>  |

## BCM (BODY CONTROL MODULE)

### < ECU DIAGNOSIS INFORMATION >

| CONSULT display           | Fail-safe | Tire pressure monitor warning lamp ON | Reference page        |
|---------------------------|-----------|---------------------------------------|-----------------------|
| C1716: [PRESSDATA ERR] FL | —         | —                                     | <a href="#">WT-18</a> |
| C1717: [PRESSDATA ERR] FR | —         | —                                     | <a href="#">WT-18</a> |
| C1718: [PRESSDATA ERR] RR | —         | —                                     | <a href="#">WT-18</a> |
| C1719: [PRESSDATA ERR] RL | —         | —                                     | <a href="#">WT-18</a> |
| C1720: [CODE ERR] FL      | —         | —                                     | <a href="#">WT-16</a> |
| C1721: [CODE ERR] FR      | —         | —                                     | <a href="#">WT-16</a> |
| C1722: [CODE ERR] RR      | —         | —                                     | <a href="#">WT-16</a> |
| C1723: [CODE ERR] RL      | —         | —                                     | <a href="#">WT-16</a> |
| C1724: [BATT VOLT LOW] FL | —         | —                                     | <a href="#">WT-16</a> |
| C1725: [BATT VOLT LOW] FR | —         | —                                     | <a href="#">WT-16</a> |
| C1726: [BATT VOLT LOW] RR | —         | —                                     | <a href="#">WT-16</a> |
| C1727: [BATT VOLT LOW] RL | —         | —                                     | <a href="#">WT-16</a> |
| C1729: VHCL SPEED SIG ERR | —         | —                                     | <a href="#">WT-20</a> |
| C1735: IGNITION SIGNAL    | —         | —                                     | <a href="#">WT-21</a> |

# SUNROOF MOTOR ASSEMBLY


< ECU DIAGNOSIS INFORMATION >

## SUNROOF MOTOR ASSEMBLY

Reference Value

INFOID:000000007305996

### TERMINAL LAYOUT

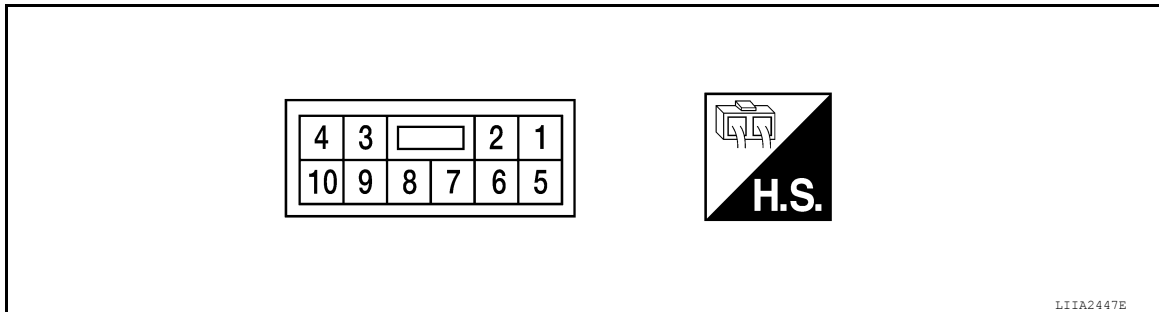

### PHYSICAL VALUES

| Terminal No.<br>(Wire color) |        | Description                     |                  | Condition  | Voltage (V)<br>(Approx.) |
|------------------------------|--------|---------------------------------|------------------|--|--------------------------|
| +                            | -      | Signal name                     | Input/<br>Output |  |                          |
| 1<br>(W/L)                   | Ground | RAP signal                      | Input            | Ignition switch ON   | Battery voltage          |
|                              |        |                                 |                  | Within 45 seconds after ignition switch is turned OFF              | Battery voltage          |
|                              |        |                                 |                  | When front door LH or RH is open while retained power is operating | 0V                       |
| 3<br>(P/W)                   | Ground | Sunroof switch CLOSE signal     | Input            | Ignition switch is ON and sunroof switch in CLOSE position         | 0V                       |
|                              |        |                                 |                  | Other than above   | Battery voltage          |
| 4<br>(O)                     | Ground | Sunroof switch TILT UP signal   | Input            | Ignition switch is ON and sunroof switch in TILT UP position       | 0V                       |
|                              |        |                                 |                  | Other than above   | Battery voltage          |
| 5<br>(W/R)                   | Ground | BAT power supply                | Input            | —  | Battery voltage          |
| 7<br>(B)                     | Ground | Ground                          | Input            | —  | Less than 0.2V           |
| 8<br>(Y)                     | Ground | Sunroof switch ground           | Output           | —  | Less than 0.2V           |
| 9<br>(P)                     | Ground | Sunroof switch OPEN signal      | Input            | Ignition switch ON and sunroof switch in OPEN position             | 0V                       |
|                              |        |                                 |                  | Other than above   | Battery voltage          |
| 10<br>(L/R)                  | Ground | Sunroof switch TILT DOWN signal | Input            | Ignition switch ON and sunroof switch in TILT DOWN position        | 0                        |
|                              |        |                                 |                  | Other than above   | Battery voltage          |

# SUNROOF

< WIRING DIAGRAM >


## WIRING DIAGRAM

### SUNROOF

#### Wiring Diagram

INFOID:000000007305997


### SUNROOF

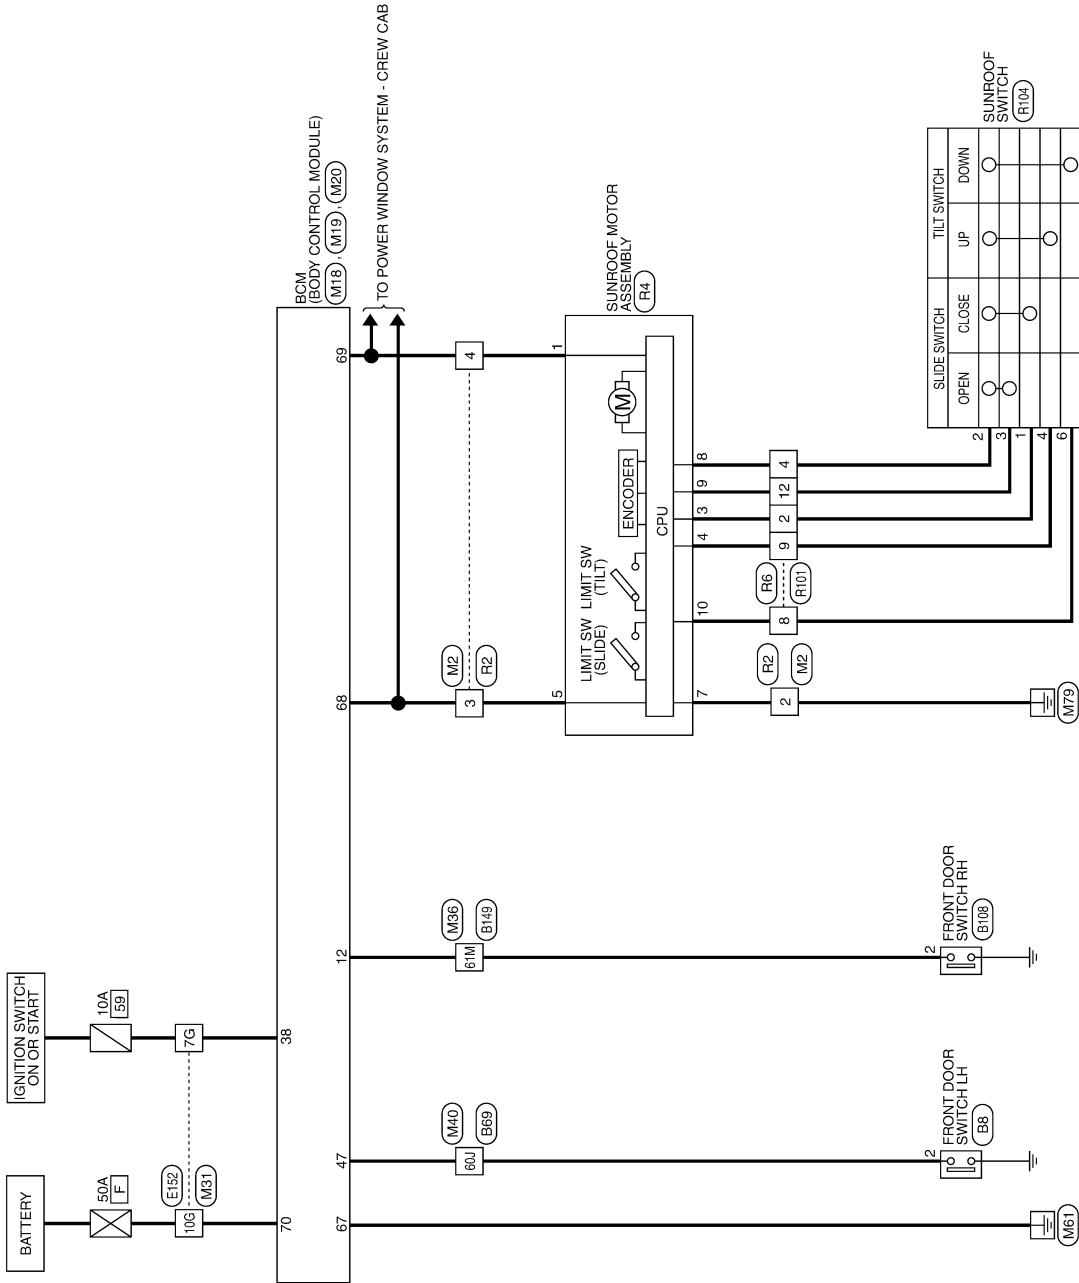

ABKWA1542GB


## SUNROOF CONNECTORS
 
|                 |              |
|-----------------|--------------|
| Connector No.   | M2           |
| Connector Name  | WIRE TO WIRE |
| Connector Color | WHITE        |




| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 2            | B             | -           |
| 3            | W/R           | -           |
| 4            | W/L           | -           |

|                 |                           |
|-----------------|---------------------------|
| Connector No.   | M18                       |
| Connector Name  | BCM (BODY CONTROL MODULE) |
| Connector Color | WHITE                     |

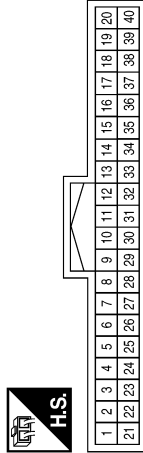


| Terminal No. | Color of Wire | Signal Name  |
|--------------|---------------|--------------|
| 12           | R/L           | DOOR SW (AS) |
| 38           | W/L           | IGN SW       |

|                 |                           |
|-----------------|---------------------------|
| Connector No.   | M19                       |
| Connector Name  | BCM (BODY CONTROL MODULE) |
| Connector Color | WHITE                     |

 


| Terminal No. | Color of Wire | Signal Name  |
|--------------|---------------|--------------|
| 47           | SB            | DOOR SW (DR) |

|                 |                           |
|-----------------|---------------------------|
| Connector No.   | M20                       |
| Connector Name  | BCM (BODY CONTROL MODULE) |
| Connector Color | BLACK                     |

 

| Terminal No. | Color of Wire | Signal Name                               |
|--------------|---------------|---|
| 67           | B             | GND (POWER)                               |
| 68           | W/L           | POWER WINDOW POWER SUPPLY (LINKED TO RAP) |
| 69           | W/R           | POWER WINDOW POWER SUPPLY (BAT)           |
| 70           | W/B           | BAT (F/L)                                 |

|                 |              |
|-----------------|--------------|
| Connector No.   | M31          |
| Connector Name  | WIRE TO WIRE |
| Connector Color | WHITE        |

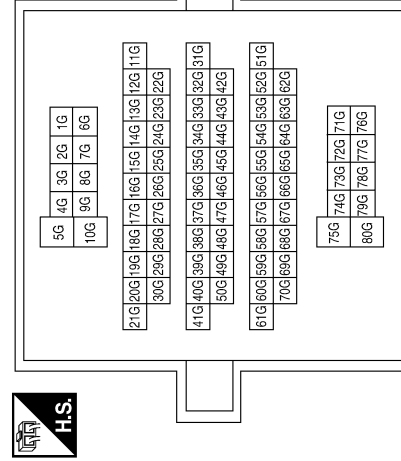


| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 7G           | W/L           | -           |
| 10G          | W/B           | -           |

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
RF  
L  
M  
N  
O  
P


# SUNROOF

## < WIRING DIAGRAM >

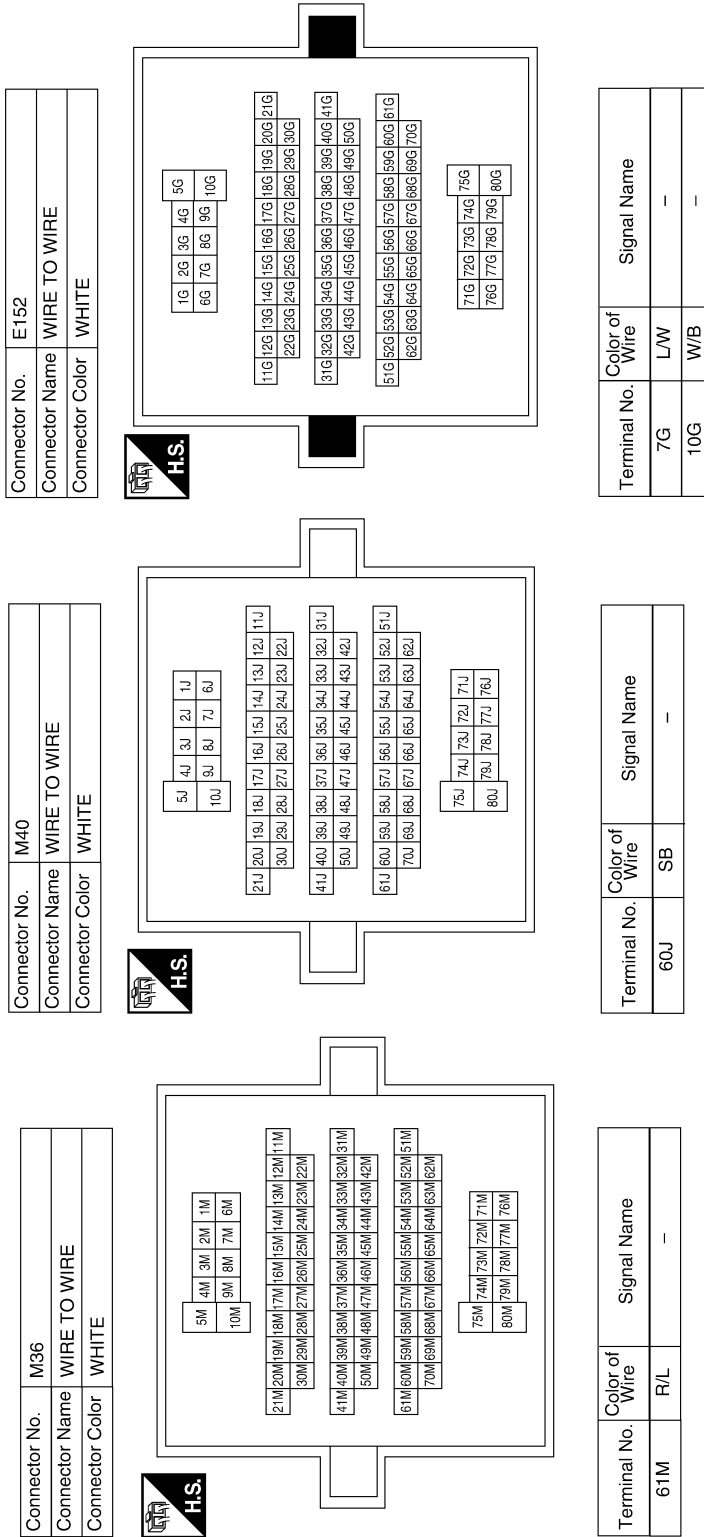


|              |               |             |
|--------------|---------------|-------------|
| Terminal No. | Color of Wire | Signal Name |
| 60J          | SB            | -           |

|                 |              |
|-----------------|--------------|
| Connector No.   | B69          |
| Connector Name  | WIRE TO WIRE |
| Connector Color | WHITE        |

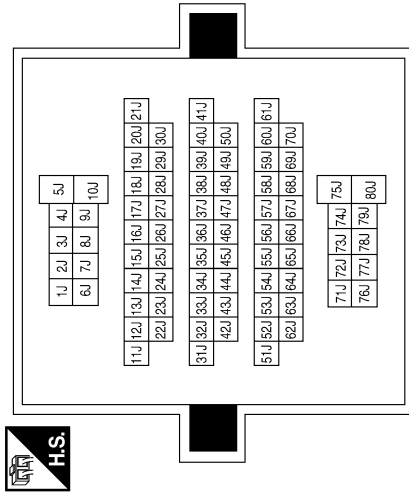


|                 |                      |
|-----------------|----------------------|
| Connector No.   | B8                   |
| Connector Name  | FRONT DOOR SWITCH LH |
| Connector Color | WHITE                |

 

|              |               |             |
|--------------|---------------|-------------|
| Terminal No. | Color of Wire | Signal Name |
| 2            | SB            | -           |

|                 |                      |
|-----------------|----------------------|
| Connector No.   | B108                 |
| Connector Name  | FRONT DOOR SWITCH RH |
| Connector Color | WHITE                |

 


|              |               |             |
|--------------|---------------|-------------|
| Terminal No. | Color of Wire | Signal Name |
| 2            | R/L           | -           |

ABKIA0008GB


A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
RF  
L  
M  
N  
O  
P

|                 |                        |
|-----------------|------------------------|
| Connector No.   | R4                     |
| Connector Name  | SUNROOF MOTOR ASSEMBLY |
| Connector Color | WHITE                  |

 


| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 1            | W/L           | IGN         |
| 3            | P/W           | SLIDE_CLOSE |
| 4            | O             | TILT_UP     |
| 5            | W/R           | B+          |
| 7            | B             | GND         |
| 8            | Y             | SW_GND      |
| 9            | P             | SLIDE_OPEN  |
| 10           | L/R           | TILT_DOWN   |

|                 |              |
|-----------------|--------------|
| Connector No.   | R2           |
| Connector Name  | WIRE TO WIRE |
| Connector Color | WHITE        |

 


| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 2            | B             | -           |
| 3            | W/R           | -           |
| 4            | W/L           | -           |

|                 |              |
|-----------------|--------------|
| Connector No.   | B149         |
| Connector Name  | WIRE TO WIRE |
| Connector Color | WHITE        |

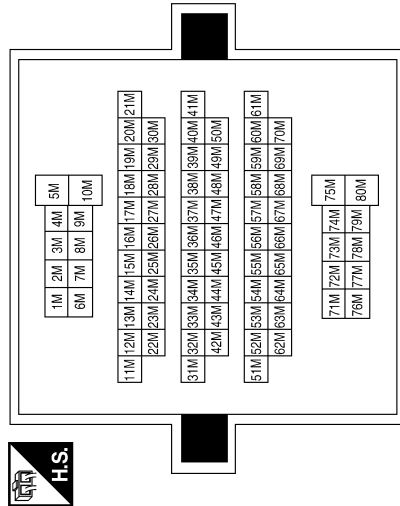


| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 61M          | R/L           | -           |

|                 |                |
|-----------------|----------------|
| Connector No.   | R104           |
| Connector Name  | SUNROOF SWITCH |
| Connector Color | GRAY           |

 


| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 1            | P/W           | -           |
| 2            | Y             | -           |
| 3            | P             | -           |
| 4            | O             | -           |
| 6            | L/R           | -           |

|                 |              |
|-----------------|--------------|
| Connector No.   | R101         |
| Connector Name  | WIRE TO WIRE |
| Connector Color | WHITE        |

 

| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 2            | P/W           | -           |
| 4            | Y             | -           |
| 8            | L/R           | -           |
| 9            | O             | -           |
| 12           | P             | -           |

|                 |              |
|-----------------|--------------|
| Connector No.   | R6           |
| Connector Name  | WIRE TO WIRE |
| Connector Color | WHITE        |

 

| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 2            | P/W           | -           |
| 4            | Y             | -           |
| 8            | L/R           | -           |
| 9            | O             | -           |
| 12           | P             | -           |

ABKIA2863GB



# SUNROOF DOES NOT OPERATE PROPERLY

< SYMPTOM DIAGNOSIS >

## SYMPTOM DIAGNOSIS

### SUNROOF DOES NOT OPERATE PROPERLY

#### Diagnosis Procedure

INFOID:000000007305998

#### 1. CHECK BCM POWER SUPPLY AND GROUND CIRCUIT

Check BCM power supply and ground circuit.  
Refer to [BCS-28. "Diagnosis Procedure"](#).

>> GO TO 2

#### 2. CHECK SUNROOF MOTOR ASSEMBLY POWER SUPPLY AND GROUND CIRCUIT

Check sunroof motor assembly power supply and ground circuit.  
Refer to [RF-12. "Component Function Check"](#).

>> GO TO 3

#### 3. CHECK SUNROOF SWITCH CIRCUIT

Check sunroof switch circuit.  
Refer to [RF-12. "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES >> Check intermittent incident. Refer to [GI-39. "Intermittent Incident"](#).
- NO >> Repair or replace malfunctioning parts.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M  
N  
O  
P

RF

## AUTO OPERATION DOES NOT OPERATE

< SYMPTOM DIAGNOSIS >

---

### AUTO OPERATION DOES NOT OPERATE

#### Diagnosis Procedure

INFOID:000000007305999

#### 1. PERFORM INITIALIZATION PROCEDURE

---

Perform initialization procedure.

Refer to [RF-5, "ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Special Repair Requirement"](#).

Is the inspection result normal?

YES >> Inspection End.

NO >> Perform basic inspection. Refer to [RF-3, "Work Flow"](#).

# DOES NOT STOP FULLY-OPEN OR FULLY-CLOSED POSITION

< SYMPTOM DIAGNOSIS >

---

## DOES NOT STOP FULLY-OPEN OR FULLY-CLOSED POSITION

### Diagnosis Procedure

INFOID:000000007306000

#### 1. PERFORM INITIALIZATION PROCEDURE

---

Perform initialization procedure.

Refer to [RF-5. "ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Special Repair Requirement"](#).

Is the inspection result normal?

YES >> Inspection End.

NO >> Perform basic inspection. Refer to [RF-3. "Work Flow"](#).

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
RF  
L  
M  
N  
O  
P

# RETAINED POWER OPERATION DOES NOT OPERATE PROPERLY

< SYMPTOM DIAGNOSIS >

---

## RETAINED POWER OPERATION DOES NOT OPERATE PROPERLY

### Diagnosis Procedure

INFOID:000000007306001

#### 1. CHECK FRONT DOOR SWITCH

---

Check front door switch.

Refer to [DLK-27, "KING CAB : Component Function Check"](#) (king cab) or [RF-14, "Component Function Check"](#) (crew cab).

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-39, "Intermittent Incident"](#).

NO >> Repair or replace malfunctioning parts.

# SUNROOF DOES NOT OPERATE ANTI-PINCH FUNCTION

< SYMPTOM DIAGNOSIS >

---

## SUNROOF DOES NOT OPERATE ANTI-PINCH FUNCTION

### Diagnosis Procedure

INFOID:000000007306002

#### 1. PERFORM INITIALIZATION PROCEDURE

---

Perform initialization procedure.

Refer to [RF-5. "ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Special Repair Requirement"](#).

Is the inspection result normal?

YES >> Inspection End.

NO >> Perform basic inspection. Refer to [RF-3. "Work Flow"](#).

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
RF  
L  
M  
N  
O  
P


# SQUEAK AND RATTLE TROUBLE DIAGNOSES

< SYMPTOM DIAGNOSIS >

## SQUEAK AND RATTLE TROUBLE DIAGNOSES

### Work Flow

INFOID:000000007808233

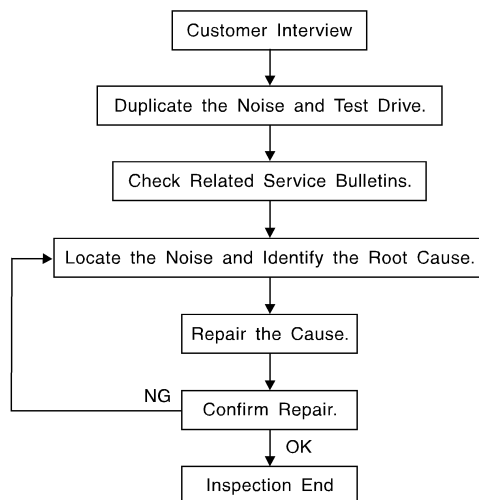

SBT842

### CUSTOMER INTERVIEW

Interview the customer if possible, to determine the conditions that exist when the noise occurs. Use the Diagnostic Worksheet during the interview to document the facts and conditions when the noise occurs and any customer's comments; refer to [RF-42, "Diagnostic Worksheet"](#). This information is necessary to duplicate the conditions that exist when the noise occurs.

- The customer may not be able to provide a detailed description or the location of the noise. Attempt to obtain all the facts and conditions that exist when the noise occurs (or does not occur).
- If there is more than one noise in the vehicle, be sure to diagnose and repair the noise that the customer is concerned about. This can be accomplished by test driving the vehicle with the customer.
- After identifying the type of noise, isolate the noise in terms of its characteristics. The noise characteristics are provided so the customer, service adviser and technician are all speaking the same language when defining the noise.
- Squeak —(Like tennis shoes on a clean floor)  
Squeak characteristics include the light contact/fast movement/brought on by road conditions/hard surfaces = higher pitch noise/softer surfaces = lower pitch noises/edge to surface = chirping.
- Creak—(Like walking on an old wooden floor)  
Creak characteristics include firm contact/slow movement/twisting with a rotational movement/pitch dependent on materials/often brought on by activity.
- Rattle—(Like shaking a baby rattle)  
Rattle characteristics include the fast repeated contact/vibration or similar movement/loose parts/missing clip or fastener/incorrect clearance.
- Knock —(Like a knock on a door)  
Knock characteristics include hollow sounding/sometimes repeating/often brought on by driver action.
- Tick—(Like a clock second hand)  
Tick characteristics include gentle contacting of light materials/loose components/can be caused by driver action or road conditions.
- Thump—(Heavy, muffled knock noise)  
Thump characteristics include softer knock/dead sound often brought on by activity.
- Buzz—(Like a bumble bee)  
Buzz characteristics include high frequency rattle/firm contact.
- Often the degree of acceptable noise level will vary depending upon the person. A noise that you may judge as acceptable may be very irritating to the customer.
- Weather conditions, especially humidity and temperature, may have a great effect on noise level.

### DUPLICATE THE NOISE AND TEST DRIVE

If possible, drive the vehicle with the customer until the noise is duplicated. Note any additional information on the Diagnostic Worksheet regarding the conditions or location of the noise. This information can be used to duplicate the same conditions when you confirm the repair.

# SQUEAK AND RATTLE TROUBLE DIAGNOSES

## < SYMPTOM DIAGNOSIS >

If the noise can be duplicated easily during the test drive, to help identify the source of the noise, try to duplicate the noise with the vehicle stopped by doing one or all of the following:

- 1) Close a door.
  - 2) Tap or push/pull around the area where the noise appears to be coming from.
  - 3) Rev the engine.
  - 4) Use a floor jack to recreate vehicle "twist".
  - 5) At idle, apply engine load (electrical load, half clutch on M/T model, drive position on A/T models).
  - 6) Raise the vehicle on a hoist and hit a tire with a rubber hammer.
- Drive the vehicle and attempt to duplicate the conditions the customer states exist when the noise occurs.
  - If it is difficult to duplicate the noise, drive the vehicle slowly on an undulating or rough road to stress the vehicle body.

## CHECK RELATED SERVICE BULLETINS

After verifying the customer concern or symptom, check ASIST for Technical Service Bulletins (TSBs) related to that concern or symptom.

If a TSB relates to the symptom, follow the procedure to repair the noise.

## LOCATE THE NOISE AND IDENTIFY THE ROOT CAUSE

1. Narrow down the noise to a general area. To help pinpoint the source of the noise, use a listening tool (Chassis Ear: J-39570, Engine Ear: J-39565 and mechanic's stethoscope).
2. Narrow down the noise to a more specific area and identify the cause of the noise by:
  - removing the components in the area that you suspect the noise is coming from.  
Do not use too much force when removing clips and fasteners, otherwise clips and fasteners can be broken or lost during the repair, resulting in the creation of new noise.
  - tapping or pushing/pulling the component that you suspect is causing the noise.  
Do not tap or push/pull the component with excessive force, otherwise the noise will be eliminated only temporarily.
  - feeling for a vibration with your hand by touching the component(s) that you suspect is (are) causing the noise.
  - placing a piece of paper between components that you suspect are causing the noise.
  - looking for loose components and contact marks.Refer to [RF-40. "Generic Squeak and Rattle Troubleshooting"](#).

## REPAIR THE CAUSE

- If the cause is a loose component, tighten the component securely.
- If the cause is insufficient clearance between components:
  - separate components by repositioning or loosening and retightening the component, if possible.
  - insulate components with a suitable insulator such as urethane pads, foam blocks, felt cloth tape or urethane tape. A NISSAN Squeak and Rattle Kit (J-43980) is available through your authorized NISSAN Parts Department.

### **CAUTION:**

**Do not use excessive force as many components are constructed of plastic and may be damaged.**

**Always check with the Parts Department for the latest parts information.**

**The following materials are contained in the NISSAN Squeak and Rattle Kit (J-43980). Each item can be ordered separately as needed.**

### **URETHANE PADS [1.5 mm (0.059 in) thick]**

**Insulates connectors, harness, etc.**

**76268-9E005: 100×135 mm (3.94×5.31 in)/76884-71L01: 60×85 mm (2.36×3.35 in)/76884-71L02: 15×25 mm (0.59×0.98 in)**

### **INSULATOR (Foam blocks)**

**Insulates components from contact. Can be used to fill space behind a panel.**

**73982-9E000: 45 mm (1.77 in) thick, 50×50 mm (1.97×1.97 in)/73982-50Y00: 10 mm (0.39 in) thick, 50×50 mm (1.97×1.97 in)**

### **INSULATOR (Light foam block)**

**80845-71L00: 30 mm (1.18 in) thick, 30×50 mm (1.18×1.97 in)**

### **FELT CLOTH TAPE**

**Used to insulate where movement does not occur. Ideal for instrument panel applications.**

**68370-4B000: 15×25 mm (0.59×0.98 in) pad/68239-13E00: 5 mm (0.20 in) wide tape roll. The following materials not found in the kit can also be used to repair squeaks and rattles.**

### **UHMW (TEFLON) TAPE**

**Insulates where slight movement is present. Ideal for instrument panel applications.**

### **SILICONE GREASE**

# SQUEAK AND RATTLE TROUBLE DIAGNOSES

## < SYMPTOM DIAGNOSIS >

---

**Used instead of UHMW tape that will be visible or not fit.**

**Note: Will only last a few months.**

### **SILICONE SPRAY**

**Use when grease cannot be applied.**

### **DUCT TAPE**

**Use to eliminate movement.**

### **CONFIRM THE REPAIR**

Confirm that the cause of a noise is repaired by test driving the vehicle. Operate the vehicle under the same conditions as when the noise originally occurred. Refer to the notes on the Diagnostic Worksheet.

## Generic Squeak and Rattle Troubleshooting

INFOID:000000007808232

Refer to Table of Contents for specific component removal and installation information.

### **INSTRUMENT PANEL**

Most incidents are caused by contact and movement between:

1. The cluster lid A and instrument panel
2. Acrylic lens and combination meter housing
3. Instrument panel to front pillar garnish
4. Instrument panel to windshield
5. Instrument panel pins
6. Wiring harnesses behind the combination meter
7. A/C defroster duct and duct joint

These incidents can usually be located by tapping or moving the components to duplicate the noise or by pressing on the components while driving to stop the noise. Most of these incidents can be repaired by applying felt cloth tape or silicone spray (in hard to reach areas). Urethane pads can be used to insulate wiring harness.

### **CAUTION:**

**Do not use silicone spray to isolate a squeak or rattle. If you saturate the area with silicone, you will not be able to recheck the repair.**

### **CENTER CONSOLE**

Components to pay attention to include:

1. Shift selector assembly cover to finisher
2. A/C control unit and cluster lid C
3. Wiring harnesses behind audio and A/C control unit

The instrument panel repair and isolation procedures also apply to the center console.

### **DOORS**

Pay attention to the:

1. Finisher and inner panel making a slapping noise
2. Inside handle escutcheon to door finisher
3. Wiring harnesses tapping
4. Door striker out of alignment causing a popping noise on starts and stops

Tapping or moving the components or pressing on them while driving to duplicate the conditions can isolate many of these incidents. You can usually insulate the areas with felt cloth tape or insulator foam blocks from the NISSAN Squeak and Rattle Kit (J-43980) to repair the noise.

### **TRUNK**

Trunk noises are often caused by a loose jack or loose items put into the trunk by the owner.

In addition look for:

1. Trunk lid bumpers out of adjustment
2. Trunk lid striker out of adjustment
3. The trunk lid torsion bars knocking together
4. A loose license plate or bracket



# SQUEAK AND RATTLE TROUBLE DIAGNOSES

## < SYMPTOM DIAGNOSIS >

Most of these incidents can be repaired by adjusting, securing or insulating the item(s) or component(s) causing the noise.

### SUNROOF/HEADLINING

Noises in the sunroof/headlining area can often be traced to one of the following:

1. Sunroof lid, rail, linkage or seals making a rattle or light knocking noise
2. Sun visor shaft shaking in the holder
3. Front or rear windshield touching headliner and squeaking

Again, pressing on the components to stop the noise while duplicating the conditions can isolate most of these incidents. Repairs usually consist of insulating with felt cloth tape.

### OVERHEAD CONSOLE (FRONT AND REAR)

Overhead console noises are often caused by the console panel clips not being engaged correctly. Most of these incidents are repaired by pushing up on the console at the clip locations until the clips engage.

In addition look for:

1. Loose harness or harness connectors.
2. Front console map/reading lamp lens loose.
3. Loose screws at console attachment points.

### SEATS

When isolating seat noise it's important to note the position the seat is in and the load placed on the seat when the noise is present. These conditions should be duplicated when verifying and isolating the cause of the noise.

Cause of seat noise include:

1. Headrest rods and holder
2. A squeak between the seat pad cushion and frame
3. The rear seatback lock and bracket

These noises can be isolated by moving or pressing on the suspected components while duplicating the conditions under which the noise occurs. Most of these incidents can be repaired by repositioning the component or applying urethane tape to the contact area.

### UNDERHOOD

Some interior noise may be caused by components under the hood or on the engine wall. The noise is then transmitted into the passenger compartment.

Causes of transmitted underhood noise include:

1. Any component installed to the engine wall
2. Components that pass through the engine wall
3. Engine wall mounts and connectors
4. Loose radiator installation pins
5. Hood bumpers out of adjustment
6. Hood striker out of adjustment

These noises can be difficult to isolate since they cannot be reached from the interior of the vehicle. The best method is to secure, move or insulate one component at a time and test drive the vehicle. Also, engine rpm or load can be changed to isolate the noise. Repairs can usually be made by moving, adjusting, securing, or insulating the component causing the noise.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
RF  
L  
M  
N  
O  
P

# SQUEAK AND RATTLE TROUBLE DIAGNOSES

< SYMPTOM DIAGNOSIS >

## Diagnostic Worksheet

INFOID:000000007306005





Dear Customer:

We are concerned about your satisfaction with your vehicle. Repairing a squeak or rattle sometimes can be very difficult. To help us fix your vehicle right the first time, please take a moment to note the area of the vehicle where the squeak or rattle occurs and under what conditions. You may be asked to take a test drive with a service advisor or technician to ensure we confirm the noise you are hearing.

### SQUEAK & RATTLE DIAGNOSTIC WORKSHEET

#### I. WHERE DOES THE NOISE COME FROM? (circle the area of the vehicle)

The illustrations are for reference only, and may not reflect the actual configuration of your vehicle.

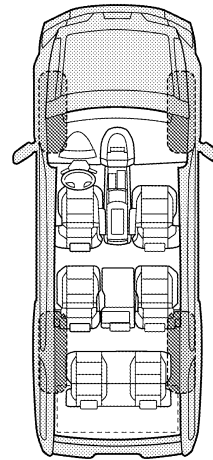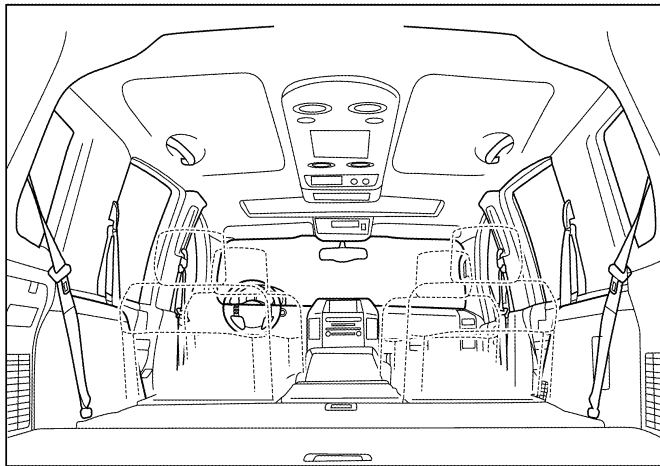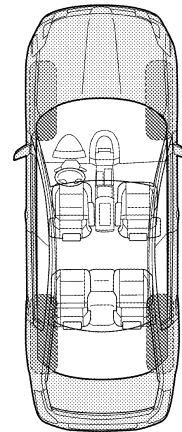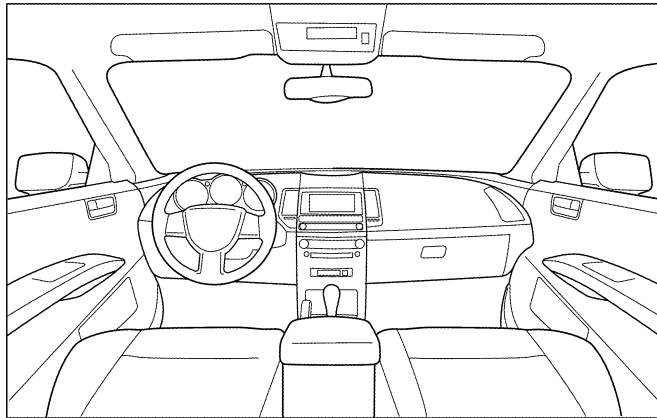

Continue to page 2 of the worksheet and briefly describe the location of the noise or rattle. In addition, please indicate the conditions which are present when the noise occurs.

# SQUEAK AND RATTLE TROUBLE DIAGNOSES

< SYMPTOM DIAGNOSIS >

## SQUEAK & RATTLE DIAGNOSTIC WORKSHEET - page 2

Briefly describe the location where the noise occurs:

\_\_\_\_\_

\_\_\_\_\_

### II. WHEN DOES IT OCCUR? (please check the boxes that apply)

- |   |  |
|---|--|
| <input type="checkbox"/> Anytime                      | <input type="checkbox"/> After sitting out in the rain |
| <input type="checkbox"/> 1st time in the morning      | <input type="checkbox"/> When it is raining or wet     |
| <input type="checkbox"/> Only when it is cold outside | <input type="checkbox"/> Dry or dusty conditions       |
| <input type="checkbox"/> Only when it is hot outside  | <input type="checkbox"/> Other:                        |

### III. WHEN DRIVING:

- Through driveways
- Over rough roads
- Over speed bumps
- Only about \_\_\_\_ mph
- On acceleration
- Coming to a stop
- On turns: left, right or either (circle)
- With passengers or cargo
- Other: \_\_\_\_\_
- After driving \_\_\_\_ miles or \_\_\_\_ minutes

### IV. WHAT TYPE OF NOISE

- Squeak (like tennis shoes on a clean floor)
- Creak (like walking on an old wooden floor)
- Rattle (like shaking a baby rattle)
- Knock (like a knock at the door)
- Tick (like a clock second hand)
- Thump (heavy muffled knock noise)
- Buzz (like a bumble bee)

### TO BE COMPLETED BY DEALERSHIP PERSONNEL

Test Drive Notes:

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

|  | YES                      | NO                       | Initials of person performing |
|--|--------------------------|--------------------------|-------------------------------|
| Vehicle test driven with customer                  | <input type="checkbox"/> | <input type="checkbox"/> | _____                         |
| - Noise verified on test drive                     | <input type="checkbox"/> | <input type="checkbox"/> | _____                         |
| - Noise source located and repaired                | <input type="checkbox"/> | <input type="checkbox"/> | _____                         |
| - Follow up test drive performed to confirm repair | <input type="checkbox"/> | <input type="checkbox"/> | _____                         |

VIN: \_\_\_\_\_ Customer Name \_\_\_\_\_

W.O.# \_\_\_\_\_ Date: \_\_\_\_\_

This form must be attached to Work Order

LATA0071E

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
RF  
L  
M  
N  
O  
P

# PRECAUTIONS

< PRECAUTION >

## PRECAUTION

### PRECAUTIONS

#### Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000007306006

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SR and SB section of this Service Manual.

#### **WARNING:**

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SR section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

#### PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

#### **WARNING:**

- When working near the Airbag Diagnosis Sensor Unit or other Airbag System sensors with the Ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the Ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

#### Precaution for Work

INFOID:000000007306007

- When removing or disassembling each component, be careful not to damage or deform it. If a component may be subject to interference, be sure to protect it with a shop cloth.
- When removing (disengaging) components with a screwdriver or similar tool, be sure to wrap the component with a shop cloth or vinyl tape to protect it.
- Protect the removed parts with a shop cloth and prevent them from being dropped.
- Replace a deformed or damaged clip.
- If a part is specified as a non-reusable part, always replace it with new one.
- Be sure to tighten bolts and nuts securely to the specified torque.
- After installation is complete, be sure to check that each part works properly.
- Follow the steps below to clean components.
  - Water soluble dirt: Dip a soft cloth into lukewarm water, and wring the water out of the cloth to wipe the dirty area.  
Then rub with a soft and dry cloth.
  - Oily dirt: Dip a soft cloth into lukewarm water with mild detergent (concentration: within 2 to 3%), and wipe the dirty area.  
Then dip a cloth into fresh water, and wring the water out of the cloth to wipe the detergent off. Then rub with a soft and dry cloth.
- Do not use organic solvent such as thinner, benzene, alcohol, or gasoline.
- For genuine leather seats, use a genuine leather seat cleaner.

# PREPARATION

< PREPARATION >



## PREPARATION

### PREPARATION

#### Special Service Tool


INFOID:000000007306008

The actual shapes of Kent-Moore tools may differ from those of special service tools illustrated here.
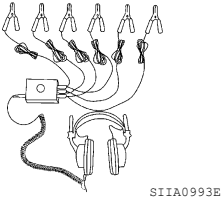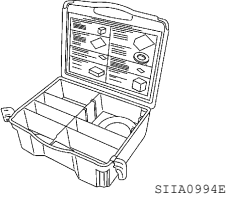
| Tool number<br>(Kent-Moore No.)<br>Tool name  | Description                         |
|---|-------------------------------------|
| <p>—<br/>(J-39570)<br/>Chassis ear</p>  <p style="text-align: center;">SIIA0993E</p>                       | <p>Locating the noise</p>           |
| <p>—<br/>(J-43980)<br/>NISSAN Squeak and<br/>Rattle Kit</p>  <p style="text-align: center;">SIIA0994E</p> | <p>Repairing the cause of noise</p> |

#### Commercial Service Tool

INFOID:000000007306009
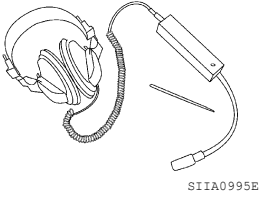
| (Kent-Moore No.)<br>Tool name  | Description               |
|--|---------------------------|
| <p>(J-39565)<br/>Engine ear</p>  <p style="text-align: center;">SIIA0995E</p> | <p>Locating the noise</p> |

# SUNROOF SYSTEM

< REMOVAL AND INSTALLATION >

## REMOVAL AND INSTALLATION

### SUNROOF SYSTEM


#### Inspection

INFOID:000000007306010

#### WIND DEFLECTOR


1. Open glass lid fully.
2. Visually check for proper installation, damaged/deteriorated components, or foreign objects within mechanism. Correct as required for smooth operation.
3. Check for grease at the wind deflector arm (1) and pivot areas. If necessary, apply a sufficient amount of grease for non-binding operation.

↵: Vehicle front

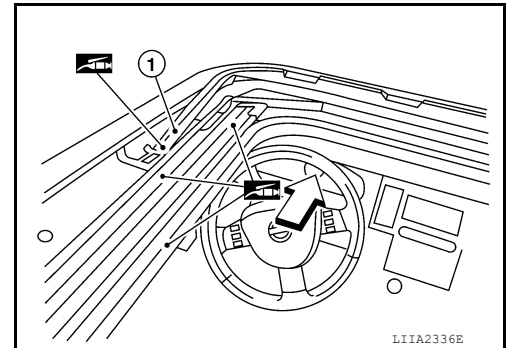

4. Check that the wind deflector (1) moves freely within the sunroof unit while manually pressing down and releasing. If a malfunction is detected, remove the sunroof unit and visually inspect. If damage is found, replace either wind deflector (1) or sunroof unit as required.

↵: Vehicle front

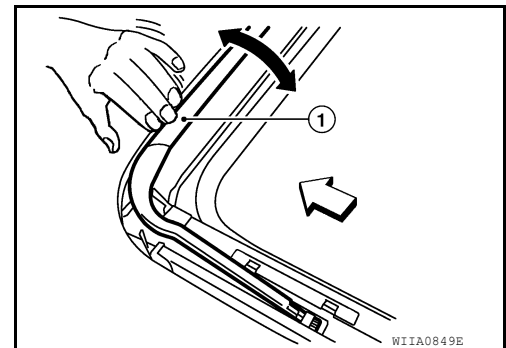

#### WEATHERSTRIP

Visually check weatherstrip for any damage, deterioration, or flattening.

- In the case of leakage around glass lid, close glass lid and pour water around it to find the damaged or gaped portion, remove glass lid.
- If any damage is found, replace glass lid.

#### **CAUTION:**

**Do not remove the weatherstrip.**

#### LINK AND WIRE ASSEMBLY

##### **NOTE:**


Before replacing any suspect part, carefully ensure it is the source of the noise being experienced.

1. Visually check to determine if a sufficient amount of petroleum jelly has been applied to the wire or rail groove. If not, add petroleum jelly as required.
2. Check wire for any damage or deterioration. If any damage is found, remove rear guide, then replace wire.

#### DRAIN HOSES

# SUNROOF SYSTEM


## < REMOVAL AND INSTALLATION >

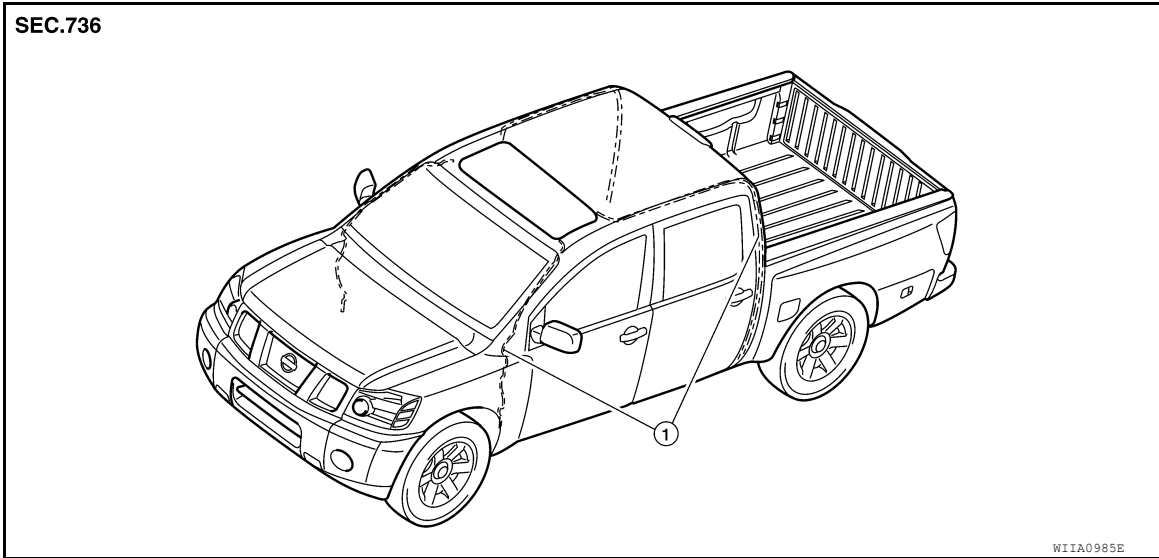

1. Drain hoses

### Removal

1. Remove the headlining. Refer to [INT-21, "Removal and Installation"](#).
2. Visually check the drain hoses for proper connections, damage or deterioration.

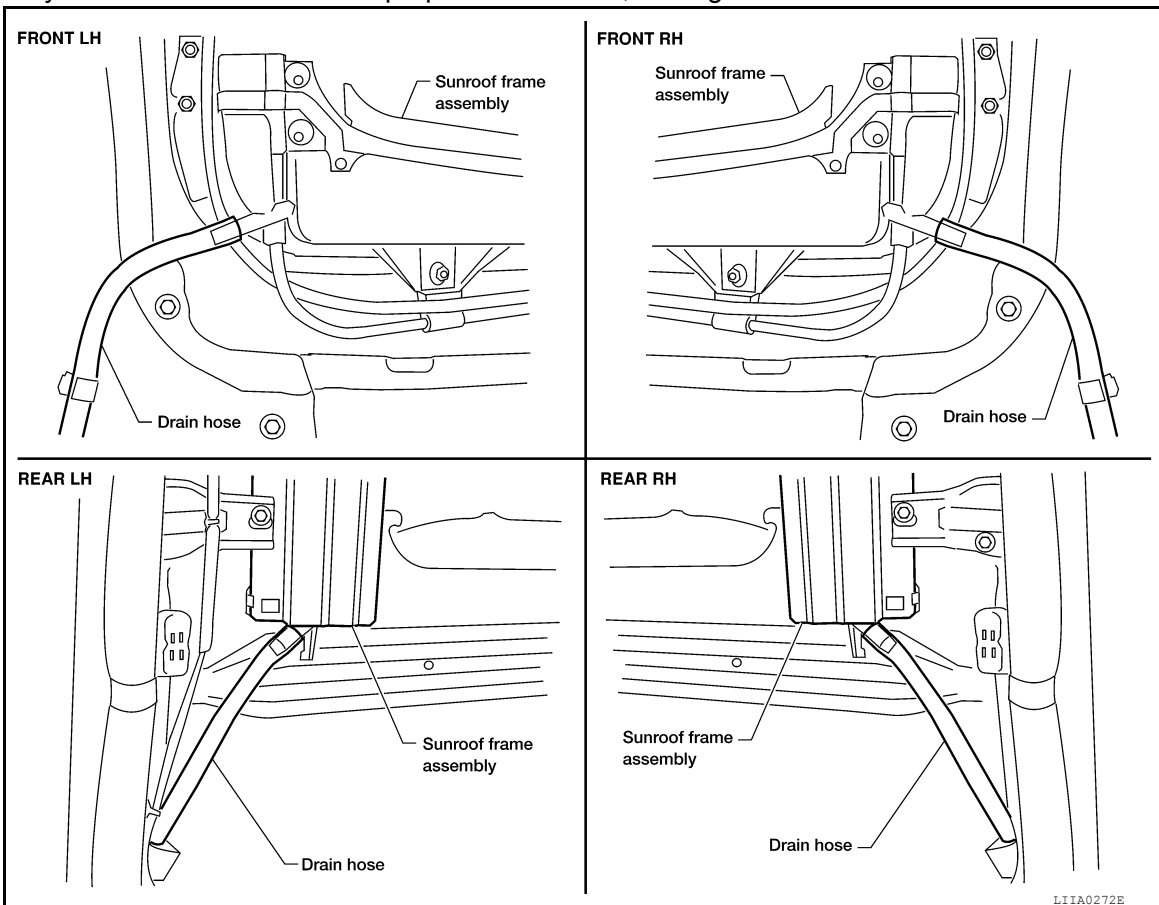

3. Remove each drain hose and check visually for damage, cracks or deterioration.
  - Pour water through the drain hose to check for damage.
  - If any damage is found, replace the drain hose.

### Installation


Installation is in the reverse order of removal.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
RF  
L  
M  
N  
O  
P

# SUNROOF SYSTEM

< REMOVAL AND INSTALLATION >

## ADJUSTMENT

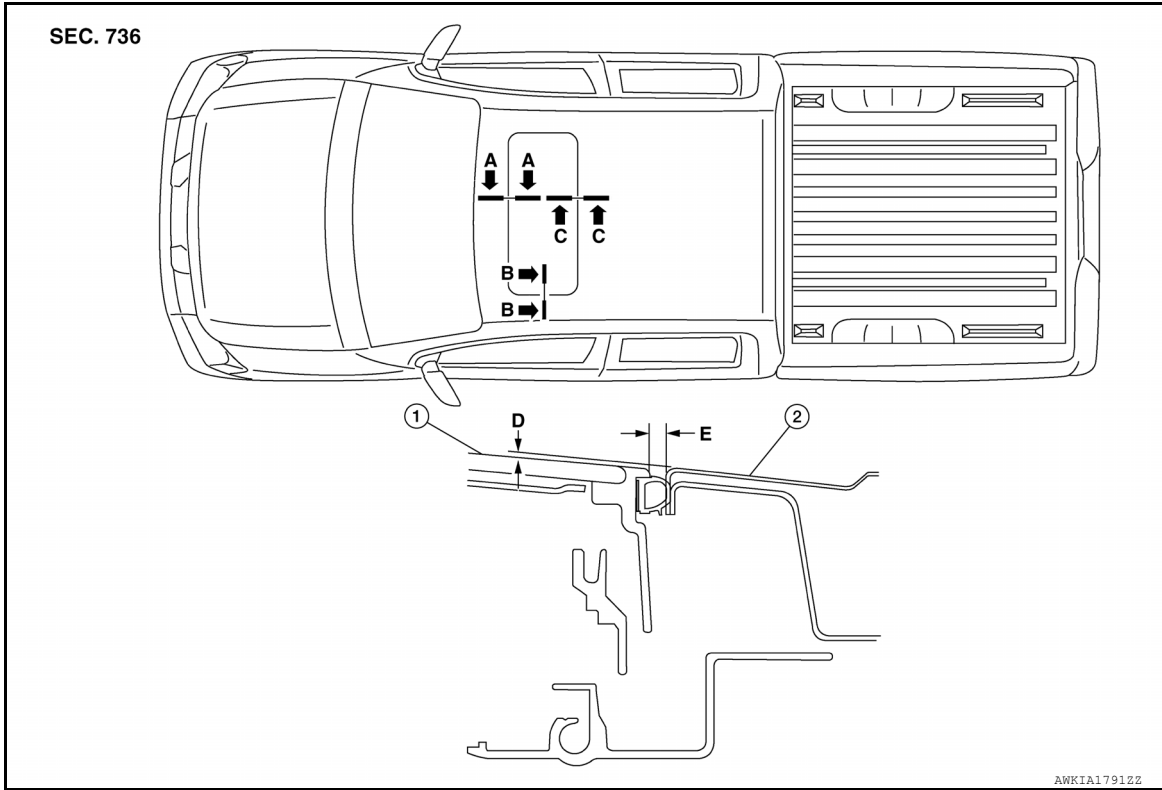

1. Glass lid

2. Roof panel

Units: mm (in)

| Portion | Measurement      | Standard     | Difference (MAX) |
|---------|------------------|--------------|------------------|
| A-A     | D Surface height | 0 (0.000)    | ±1.5 (0.059)     |
| A-A     | E Clearance      | 16.2 (0.638) | ±0.7 (0.028)     |
| B-B     | D Surface height | 0 (0.000)    | ±1.5 (0.059)     |
| B-B     | E Clearance      | 16.7 (0.657) | ±0.7 (0.028)     |
| C-C     | D Surface height | 0 (0.000)    | ±1.5 (0.059)     |
| C-C     | E Clearance      | 17.3 (0.681) | ±0.7 (0.028)     |

### NOTE:

If any gap or height difference between glass lid and roof panel is found, check glass lid fit and adjust as follows:

### CLEARANCE ADJUSTMENT

1. Open sunshade.
2. Loosen glass lid securing screws (two each on left and right sides), then tilt glass lid down.
3. Manually adjust glass lid from outside of vehicle to achieve clearance specifications.
4. After adjusting glass lid, tilt glass lid up and tighten screws.

### NOTE:

First tighten left front then right rear glass lid screws to prevent uneven torque while tightening remaining screws.

5. Tilt glass lid up and down several times to check that it moves smoothly.

### HEIGHT DIFFERENCE ADJUSTMENT

If an excessive height difference between glass lid and roof panel is found, adjust in the following manner:

1. Remove headlining. Refer to [INT-21, "Removal and Installation"](#).



## SUNROOF SYSTEM

### < REMOVAL AND INSTALLATION >

---

2. Loosen sunroof unit nuts and sunroof bracket bolts. A
3. Add shims until surface height is within specification. B  
**NOTE:**  
Temporarily snug nuts and bolts to prevent movement between each adjustment.
4. Tilt glass lid up and down several times to check that it moves and seals properly. C
5. Tighten sunroof unit nuts and sunroof bracket bolts. D  
**NOTE:**  
First tighten left front then right rear sunroof unit to prevent uneven torque while tightening remaining sunroof bracket bolts. E
6. Install headlining. Refer to [INT-21, "Removal and Installation"](#). F
- G
- H
- I
- J
- RF
- L
- M
- N
- O
- P


# SUNROOF SYSTEM


< REMOVAL AND INSTALLATION >

Exploded View

INFOID:000000007306011

SEC.736

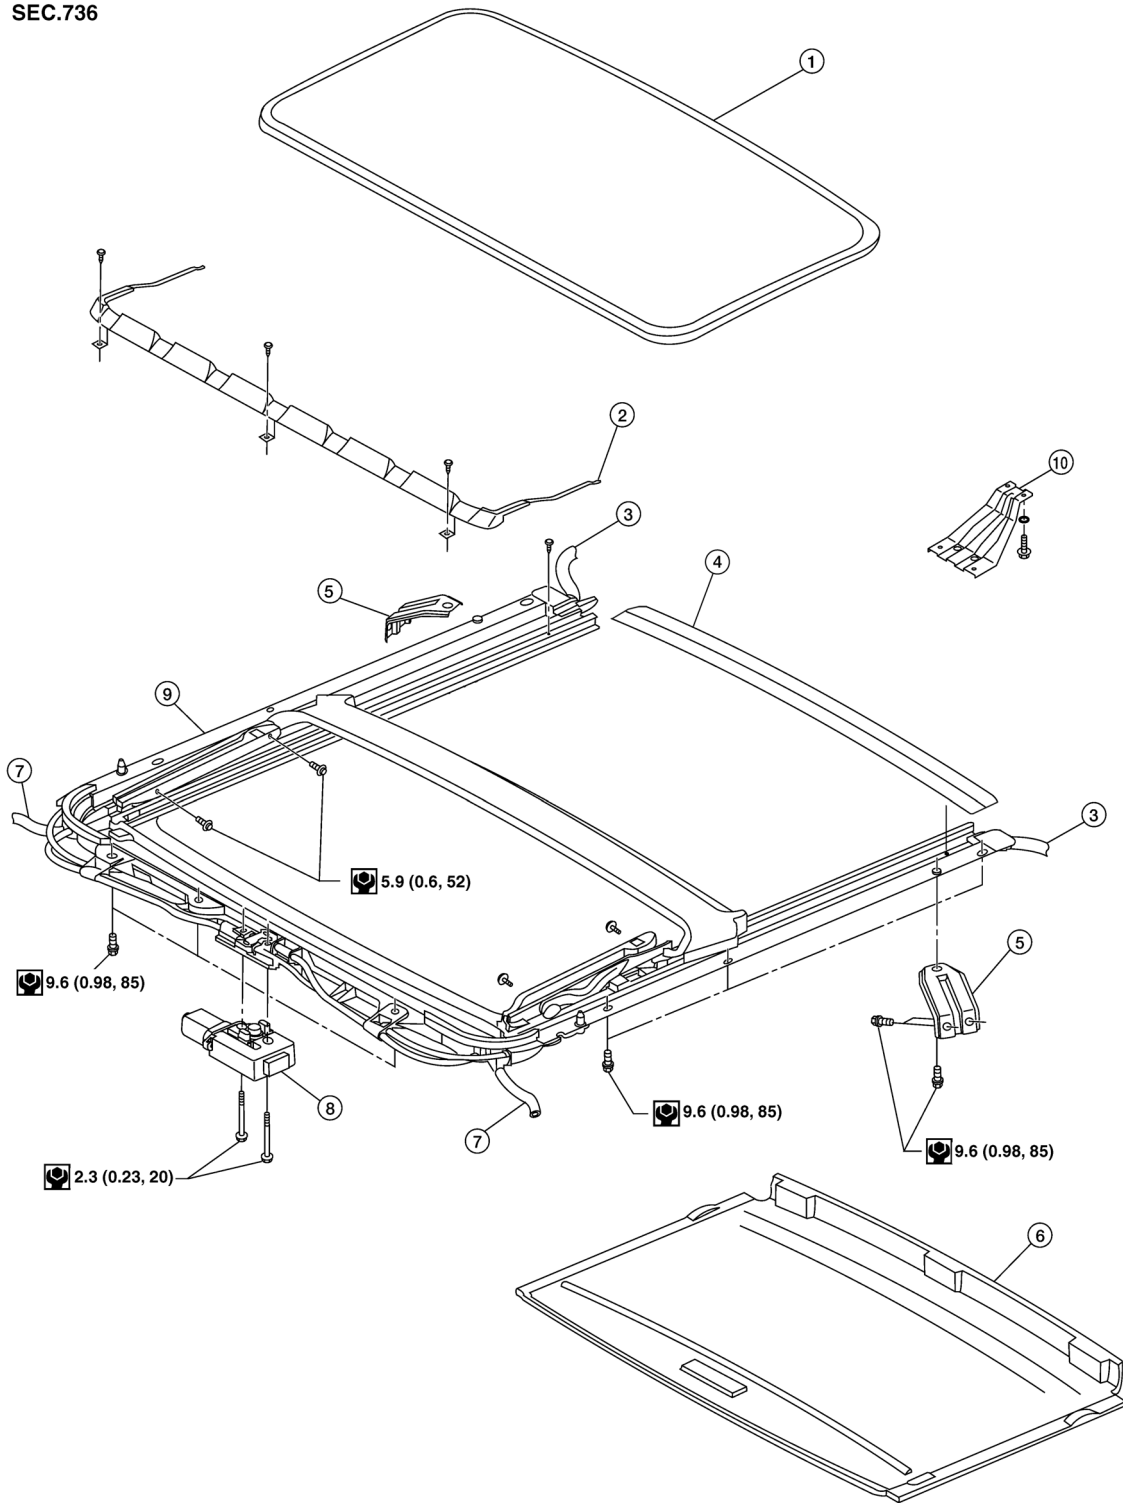

 : N·m (kg·m, in·lb)

AWKIA1712GB

- |                              |                           |                     |
|------------------------------|---------------------------|---------------------|
| 1. Glass lid                 | 2. Wind deflector         | 3. Rear drain hoses |
| 4. Rear drain frame assembly | 5. Sunroof bracket        | 6. Sunshade         |
| 7. Front drain hoses         | 8. Sunroof motor assembly | 9. Sunroof unit     |
| 10. Overhead console bracket |                           |                     |

# SUNROOF SYSTEM

## < REMOVAL AND INSTALLATION >

### CAUTION:

- Always work with a helper.
- Before removal, fully close the glass lid. Then, after removal, do not move the sunroof motor assembly.
- After installing the sunroof and glass lid, check gap adjustment to ensure there is no malfunction.

### NOTE:

- After any adjustment, check sunroof operation and glass lid alignment.
- Handle glass lid with care so not to cause damage.
- For easier installation, mark each point before removal.

## Removal and Installation

INFOID:000000007306012

### SUNROOF UNIT

#### CAUTION:

- Always work with a helper.
- When taking sunroof unit out, use shop cloths to protect the seats and trim from damage.
- After installing the sunroof unit and glass lid, be sure to check gap adjustment to ensure there is no malfunction.

#### Removal

1. Remove headlining. Refer to [INT-21, "Removal and Installation"](#).
2. Remove the glass lid. Refer to GLASS LID REMOVAL & INSTALLATION procedure in this section.
3. Remove overhead console bracket.
4. Disconnect the drain hoses.
5. Remove front sunroof bolts.
6. Remove rear sunroof bracket bolts.
7. Remove the side bolts and the sunroof unit.

#### Installation

1. Position the sunroof unit and install the side bolts.
2. Install the rear brackets.
3. Install the front sunroof unit bolts.
4. Connect drain hoses.
5. Install the overhead console bracket.
6. Install the glass lid. Refer to GLASS LID REMOVAL & INSTALLATION procedure in this section.
7. Install headlining. Refer to [INT-21, "Removal and Installation"](#).


### GLASS LID

#### Removal

1. Open sunshade.
2. Ensure glass lid is closed.
3. Remove the screws securing glass lid to the sunroof unit.
4. Remove the glass lid.

#### NOTE:

- After any adjustment, check sunroof operation and glass lid alignment.
- Handle glass lid with care so not to cause damage.
- For easier installation, mark each point before removal.

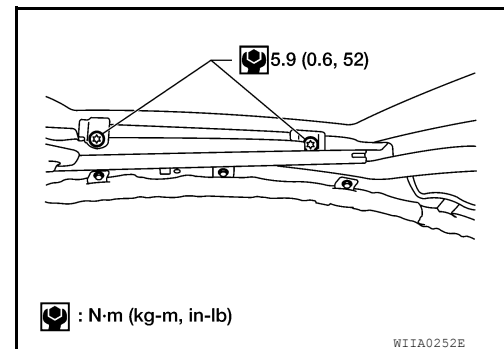

#### Installation

1. Position glass lid to sunroof unit.
2. Install the glass lid screws. (First tighten left front bolt, then tighten right rear bolt on glass lid to prevent lid from moving while tightening other bolts.)

# SUNROOF SYSTEM


## < REMOVAL AND INSTALLATION >

3. Adjust the glass lid. Refer to [RF-46, "Inspection"](#).

### WIND DEFLECTOR

#### Removal

1. Open the sunroof.
2. Remove screws from the left, center, and right side wind deflector holders.
3. Remove the wind deflector from the sunroof unit.

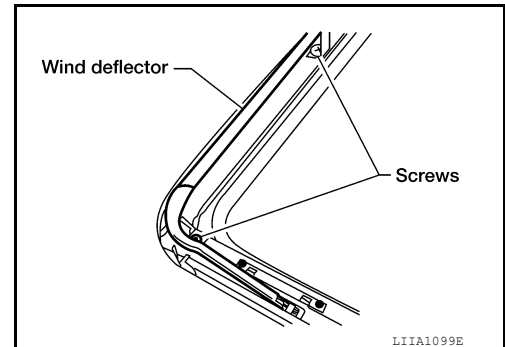

#### Installation

Installation is in the reverse order of removal.

### SUNSHADE

#### Removal

1. Remove the headlining. Refer to [INT-21, "Removal and Installation"](#).
2. Loosen sunroof unit bolts and remove rear sunroof unit brackets.
3. Lower rear edge of sunroof unit enough for clearance from roof panel.
4. Remove the sunshade from the rear end of the sunroof unit.

#### Installation

Installation is in the reverse order of removal.


### SUNROOF MOTOR ASSEMBLY

#### Removal

#### CAUTION:

- When removing the sunroof motor, be sure to place the link and wire assembly in the symmetrical and fully closed position.
- Never run the removed motor as a single unit.

1. Position the sunroof unit in the fully closed position.
2. Remove the front roof console. Refer to [INT-21, "Removal and Installation"](#).
3. Disconnect the sunroof motor assembly harness connector (2).  
⇐: Vehicle front
4. Remove the sunroof motor assembly screws (3), then remove the sunroof motor assembly (1).

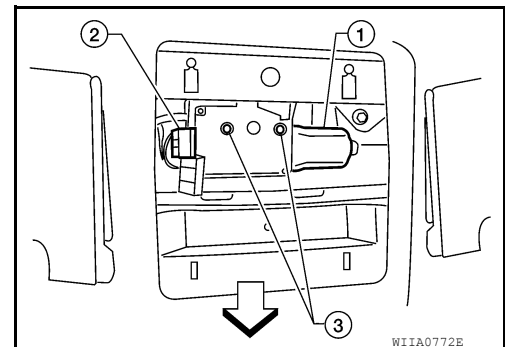

#### Installation


#### CAUTION:

Before installing the sunroof motor assembly, be sure to place the link and wire assembly in the symmetrical and fully closed position.

# SUNROOF SYSTEM

## < REMOVAL AND INSTALLATION >

1. Move the sunroof motor assembly (1) laterally little by little so that the gear is completely engaged into the wire on the sunroof unit and the installation surface becomes parallel. Then, secure the motor with the screws (3).  
⇐: Vehicle front
2. Connect the wire harness connector (2) to the sunroof motor assembly (1).
3. Install the front roof console. Refer to [RF-51, "Removal and Installation"](#).
4. Reset the sunroof motor assembly memory. Refer to [RF-5, "ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Special Repair Requirement"](#).

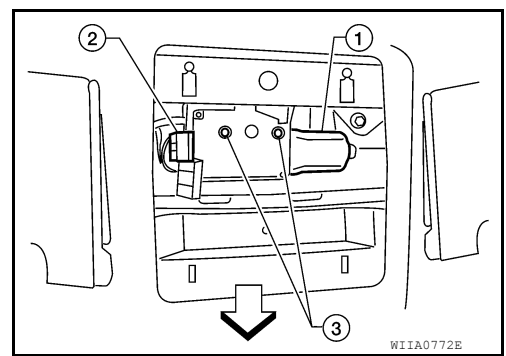

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
RF  
L  
M  
N  
O  
P