

LT
SECTION
LIGHTING SYSTEM

A
 B
 C
 D
 E
 F
 G
 H
 I
 J
 LT
 L
 M
 N
 O
 P

CONTENTS

<p>SERVICE INFORMATION 3</p> <p>PRECAUTIONS 3</p> <p style="padding-left: 20px;">Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"3</p> <p style="padding-left: 20px;">Precaution Necessary for Steering Wheel Rotation After Battery Disconnect3</p> <p>HEADLAMP (FOR USA) 5</p> <p style="padding-left: 20px;">Component Parts and Harness Connector Location5</p> <p style="padding-left: 20px;">System Description5</p> <p style="padding-left: 20px;">CAN COMMUNICATION SYSTEM DESCRIPTION6</p> <p style="padding-left: 20px;">Schematic7</p> <p style="padding-left: 20px;">Wiring Diagram8</p> <p style="padding-left: 20px;">Terminal and Reference Value for BCM 11</p> <p style="padding-left: 20px;">Terminal and Reference Value for IPDM E/R 11</p> <p style="padding-left: 20px;">How to Perform Trouble Diagnosis 12</p> <p style="padding-left: 20px;">Preliminary Check 12</p> <p style="padding-left: 20px;">CONSULT-III Function (BCM) 12</p> <p style="padding-left: 20px;">CONSULT-III Function (IPDM E/R) 13</p> <p style="padding-left: 20px;">Headlamp High Beam Does Not Illuminate (Both Sides) 15</p> <p style="padding-left: 20px;">Headlamp High Beam Does Not Illuminate (One Side) 17</p> <p style="padding-left: 20px;">High Beam Indicator Lamp Does Not Illuminate 18</p> <p style="padding-left: 20px;">Headlamp Low Beam Does Not Illuminate (Both Sides) 19</p> <p style="padding-left: 20px;">Headlamp Low Beam Does Not Illuminate (One Side) 21</p> <p style="padding-left: 20px;">Headlamps Do Not Turn OFF 22</p> <p style="padding-left: 20px;">Aiming Adjustment 23</p> <p style="padding-left: 20px;">Bulb Replacement 24</p> <p style="padding-left: 20px;">Removal and Installation 25</p> <p style="padding-left: 20px;">Disassembly and Assembly 25</p> <p>HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -27</p>	<p style="padding-left: 20px;">Component Parts and Harness Connector Location27</p> <p style="padding-left: 20px;">System Description27</p> <p style="padding-left: 20px;">CAN Communication System Description29</p> <p style="padding-left: 20px;">Schematic30</p> <p style="padding-left: 20px;">Wiring Diagram - DTRL -31</p> <p style="padding-left: 20px;">Terminal and Reference Value for BCM34</p> <p style="padding-left: 20px;">Terminal and Reference Value for IPDM E/R34</p> <p style="padding-left: 20px;">How to Perform Trouble Diagnosis35</p> <p style="padding-left: 20px;">Preliminary Check35</p> <p style="padding-left: 20px;">CONSULT-III Function (BCM)35</p> <p style="padding-left: 20px;">CONSULT-III Function (IPDM E/R)35</p> <p style="padding-left: 20px;">Daytime Light Control Does Not Operate Properly (High Beam Headlamps Operate Properly)35</p> <p style="padding-left: 20px;">Aiming Adjustment37</p> <p style="padding-left: 20px;">Bulb Replacement38</p> <p style="padding-left: 20px;">Removal and Installation39</p> <p style="padding-left: 20px;">Disassembly and Assembly39</p> <p>FRONT FOG LAMP41</p> <p style="padding-left: 20px;">Component Parts and Harness Connector Location 41</p> <p style="padding-left: 20px;">System Description41</p> <p style="padding-left: 20px;">CAN Communication System Description42</p> <p style="padding-left: 20px;">Wiring Diagram - F/FOG -43</p> <p style="padding-left: 20px;">Terminal and Reference Value for BCM44</p> <p style="padding-left: 20px;">Terminal and Reference Value for IPDM E/R44</p> <p style="padding-left: 20px;">How to Proceed with Trouble Diagnosis45</p> <p style="padding-left: 20px;">Preliminary Check45</p> <p style="padding-left: 20px;">CONSULT-III Function (BCM)45</p> <p style="padding-left: 20px;">CONSULT-III Function (IPDM E/R)45</p> <p style="padding-left: 20px;">Front Fog lamps Do Not Illuminate (Both Sides)45</p> <p style="padding-left: 20px;">Front Fog Lamp Does Not Illuminate (One Side)47</p> <p style="padding-left: 20px;">Aiming Adjustment48</p> <p style="padding-left: 20px;">Bulb Replacement49</p> <p style="padding-left: 20px;">Removal and Installation49</p> <p>TURN SIGNAL AND HAZARD WARNING LAMPS50</p> <p style="padding-left: 20px;">Component Parts and Harness Connector Location50</p>
--	--

System Description	50	CAN Communication System Description	75
CAN Communication System Description	52	Schematic	76
Schematic	53	Wiring Diagram - TAIL/L -	77
Wiring Diagram - TURN -	54	Terminal and Reference Value for BCM	80
Terminal and Reference Value for BCM	57	Terminal and Reference Value for IPDM E/R	80
How to Proceed with Trouble Diagnosis	57	How to Proceed with Trouble Diagnosis	81
Preliminary Check	58	Preliminary Check	81
CONSULT-III Function (BCM)	58	CONSULT-III Function (BCM)	81
Turn Signals Do Not Operate	58	CONSULT-III Function (IPDM E/R)	81
Front Turn Signal Lamp Does Not Operate	58	Parking, License Plate and Tail Lamps Do Not Il- luminare	81
Rear Turn Signal Lamp Does Not Operate	59	Parking, License Plate and Tail Lamps Do Not Turn OFF (After Approx. 10 Minutes)	84
Hazard Warning Lamp Does Not Operate But Turn Signal Lamp Operates	60	Bulb Replacement	84
Turn Signal Indicator Lamp Does Not Operate	61	Removal and Installation	85
Bulb Replacement for Front Turn Signal Lamp	61	REAR COMBINATION LAMP	87
Bulb Replacement for Rear Turn Signal Lamp	61	Component	87
Removal and Installation of Front Turn Signal Lamp	61	Bulb Replacement	87
Removal and Installation of Rear Turn Signal Lamp	61	Removal and Installation	88
LIGHTING AND TURN SIGNAL SWITCH	62	Disassembly and Assembly	88
Removal and Installation	62	INTERIOR LAMP	90
HAZARD SWITCH	63	Map Lamp	90
Removal and Installation	63	Luggage Room Lamp, Hatch Back	90
COMBINATION SWITCH	64	Trunk Room Lamp, Sedan	91
Wiring Diagram - COMBSW -	64	Vanity Mirror Lamp	91
Combination Switch Reading Function	64	INTERIOR ROOM LAMP	93
Terminal and Reference Value for BCM	65	Component Parts and Harness Connector Loca- tion	93
CONSULT-III Function (BCM)	65	System Description	93
Combination Switch Inspection	65	Schematic	97
Removal and Installation	67	Wiring Diagram - INT/L -	98
STOP LAMP	68	Terminal and Reference Value for BCM	102
Wiring Diagram - STOP/L	68	How to Proceed with Trouble Diagnosis	102
Wiring Diagram - STOP/L	69	Preliminary Check	103
Bulb Replacement (High-Mounted Stop Lamp)	69	CONSULT-III Function (BCM)	103
Bulb Replacement (Rear Combination Lamp)	70	Interior Room Lamp Control Does Not Operate (With Map Lamp)	104
Removal and Installation (High-Mounted Stop Lamp)	70	Interior Room Lamp Control Does Not Operate (Without Map Lamp)	106
Removal and Installation (Rear Combination Lamp)	71	Bulb Replacement	107
BACK-UP LAMP	72	Removal and Installation	108
Wiring Diagram - BACK/L -	72	ILLUMINATION	109
Bulb Replacement	72	System Description	109
Removal and Installation	73	CAN Communication System Description	110
PARKING, LICENSE PLATE AND TAIL LAMPS	74	Schematic	111
Component Parts and Harness Connector Loca- tion	74	Wiring Diagram - ILL -	112
System Description	74	BULB SPECIFICATIONS	116
		Headlamp	116
		Exterior Lamp	116
		Interior Lamp/Illumination	

PRECAUTIONS

< SERVICE INFORMATION >

SERVICE INFORMATION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000005929026

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SRS and SB section of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SRS section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

- When working near the Airbag Diagnosis Sensor Unit or other Airbag System sensors with the Ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the Ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

Precaution Necessary for Steering Wheel Rotation After Battery Disconnect

INFOID:000000005929027

NOTE:

- This Procedure is applied only to models with Intelligent Key system and NATS (NISSAN ANTI-THEFT SYSTEM).
- Remove and install all control units after disconnecting both battery cables with the ignition knob in the "LOCK" position.
- Always use CONSULT-III to perform self-diagnosis as a part of each function inspection after finishing work. If DTC is detected, perform trouble diagnosis according to self-diagnostic results.

For models equipped with the Intelligent Key system and NATS, an electrically controlled steering lock mechanism is adopted on the key cylinder.

For this reason, if the battery is disconnected or if the battery is discharged, the steering wheel will lock and steering wheel rotation will become impossible.

If steering wheel rotation is required when battery power is interrupted, follow the procedure below before starting the repair operation.

OPERATION PROCEDURE

1. Connect both battery cables.

NOTE:

Supply power using jumper cables if battery is discharged.

2. Use the Intelligent Key or mechanical key to turn the ignition switch to the "ACC" position. At this time, the steering lock will be released.
3. Disconnect both battery cables. The steering lock will remain released and the steering wheel can be rotated.
4. Perform the necessary repair operation.

A
B
C
D
E
F
G
H
I
J
LT
L
M
N
O
P

PRECAUTIONS

< SERVICE INFORMATION >

5. When the repair work is completed, return the ignition switch to the "LOCK" position before connecting the battery cables. (At this time, the steering lock mechanism will engage.)
6. Perform a self-diagnosis check of all control units using CONSULT-III.


HEADLAMP (FOR USA)

< SERVICE INFORMATION >

HEADLAMP (FOR USA)

Component Parts and Harness Connector Location

INFOID:000000005929028

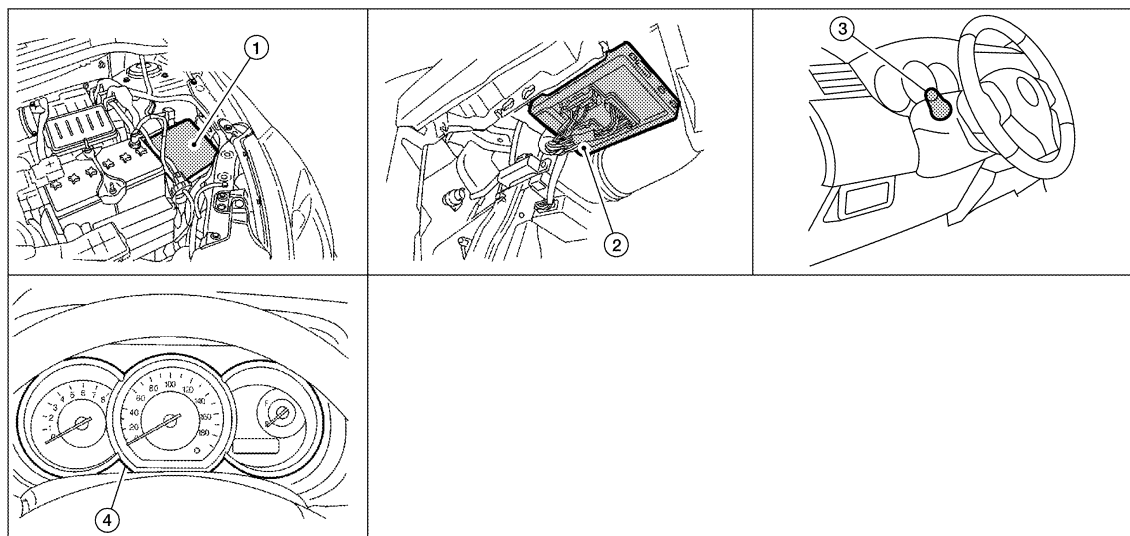

1. IPDM E/R E46, E47 and E48
2. BCM M18 and M20 (view with glove box removed)
3. Combination switch (lighting and turn signal switch) M28
4. Combination meter M24

WKIA5469E

System Description

INFOID:000000005929029

Headlamp operation is controlled by the BCM (body control module) based on inputs from the combination switch (lighting and turn signal switch). When the lighting switch is placed in the 2ND position, the BCM receives an input signal requesting the headlamps (and tail lamps) illuminate. The BCM sends a signal, via the CAN communication lines, to the IPDM E/R (intelligent power distribution module engine room) requesting the headlamps be turned ON. The CPU (central processing unit) located in the IPDM E/R controls ground for the headlamp high and headlamp low relay coils. These relays direct power to the respective headlamps, which then illuminate.

OUTLINE

Power is supplied at all times

- to headlamp high relay RH and LH (located in IPDM E/R),
- to headlamp low relay (located in IPDM E/R),
- to ignition relay (located in IPDM E/R),
- through 15A fuse (No. 52, located in IPDM E/R) and
- through 20A fuse (No. 53, located in IPDM E/R)
- to CPU located in IPDM E/R,
- through 40A fusible link (letter **g**, located in fuse and fusible link block)
- to BCM terminal 70,
- through 10A fuse [No. 8, located in fuse block (J/B)]
- to BCM terminal 57, and
- through 10A fuse [No. 13, located in fuse block (J/B)]
- to combination meter terminal 27.

With the ignition switch in the ON or START position, power is supplied

- to the ignition relay (located in IPDM E/R),
- through 10A fuse [No. 6, located in fuse block (J/B)]
- to BCM terminal 38,
- through 10A fuse [No. 3, located in fuse block (J/B)]
- to combination meter terminal 28.

With the ignition switch in the ACC or ON position, power is supplied

- through 10A fuse [No. 20, located in fuse block (J/B)]
- to BCM terminal 11.

HEADLAMP (FOR USA)

< SERVICE INFORMATION >

Ground is supplied

- to BCM terminal 67
- to combination meter terminals 21, 22 and 23
- through grounds M57 and M61, and
- to IPDM E/R terminals 39 and 59
- through grounds E15 and E24.

HEADLAMP OPERATION

Low Beam Operation

With the lighting switch in 2ND position, the BCM receives an input signal requesting the headlamps to illuminate. The BCM then sends a signal, via the CAN communication lines, to the IPDM E/R requesting the low beam headlamps be turned ON. The CPU located in the IPDM E/R controls ground to the headlamp low relay coil, which when energized, directs power

- through 15A fuse (No. 41, located in IPDM E/R)
- through IPDM E/R terminal 54
- to headlamp RH terminal 3, and
- through 15A fuse (No. 40, located in IPDM E/R)
- through IPDM E/R terminal 52
- to headlamp LH terminal 3.

Ground is supplied

- to headlamp RH and LH terminals 2
- through grounds E15 and E24.

With power and ground supplied, low beam headlamps illuminate.

High Beam Operation/Flash-to-Pass Operation

With the lighting switch in 2ND position and high beam switch in the HIGH position, the BCM receives an input signal requesting the headlamp high beams to illuminate. The flash to pass feature can be used any time and also sends a signal to the BCM. This input signal is then communicated to the IPDM E/R and the combination meter via the CAN communication. The CPU located in the IPDM E/R controls the headlamp high relays (LH and RH), which when energized, directs power

- through 10A fuse (No. 34, located in IPDM E/R)
- through IPDM E/R terminal 56
- to headlamp RH terminal 1, and
- through 10A fuse (No. 35, located in IPDM E/R)
- through IPDM E/R terminal 55
- to headlamp LH terminal 1.

Ground is supplied

- to headlamp RH and LH terminal 2
- through grounds E15 and E24.

With power and ground supplied, the high beam headlamps illuminate.

The BCM sends a signal, via the CAN communication lines, to the combination meter requesting the high beam indicator lamp be turned ON.

COMBINATION SWITCH READING FUNCTION

Refer to [BCS-4, "System Description"](#) .

EXTERIOR LAMP BATTERY SAVER CONTROL

Refer to [LT-74, "System Description"](#) .

CAN COMMUNICATION SYSTEM DESCRIPTION

INFOID:000000005929030


Refer to [LAN-7](#) .

HEADLAMP (FOR USA)

< SERVICE INFORMATION >

Schematic

INFOID:000000005929031

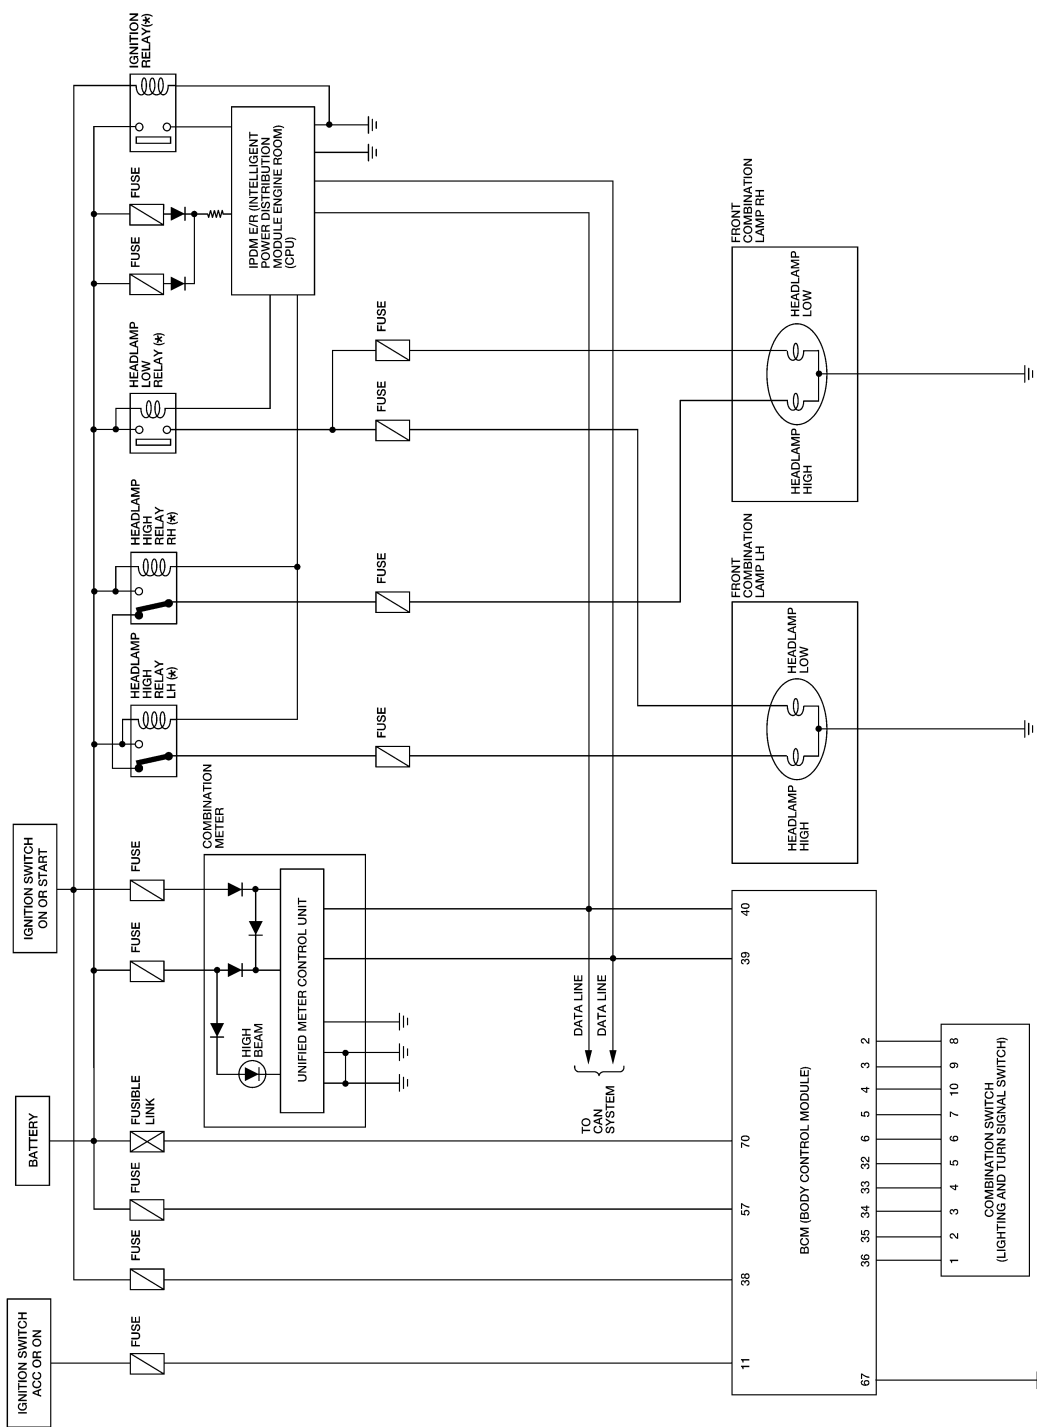

*: THIS RELAY IS BUILT INTO THE IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

LT

ABLWA1012GB

HEADLAMP (FOR USA)



< SERVICE INFORMATION >

Wiring Diagram

INFOID:000000005929032

LT-H/LAMP-01

— : DATA LINE

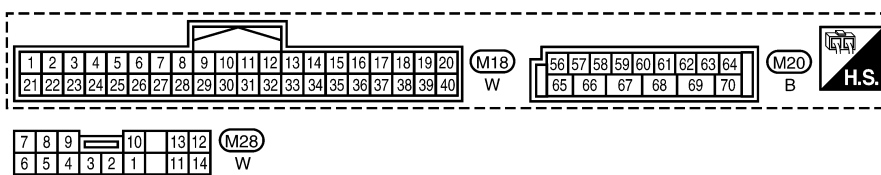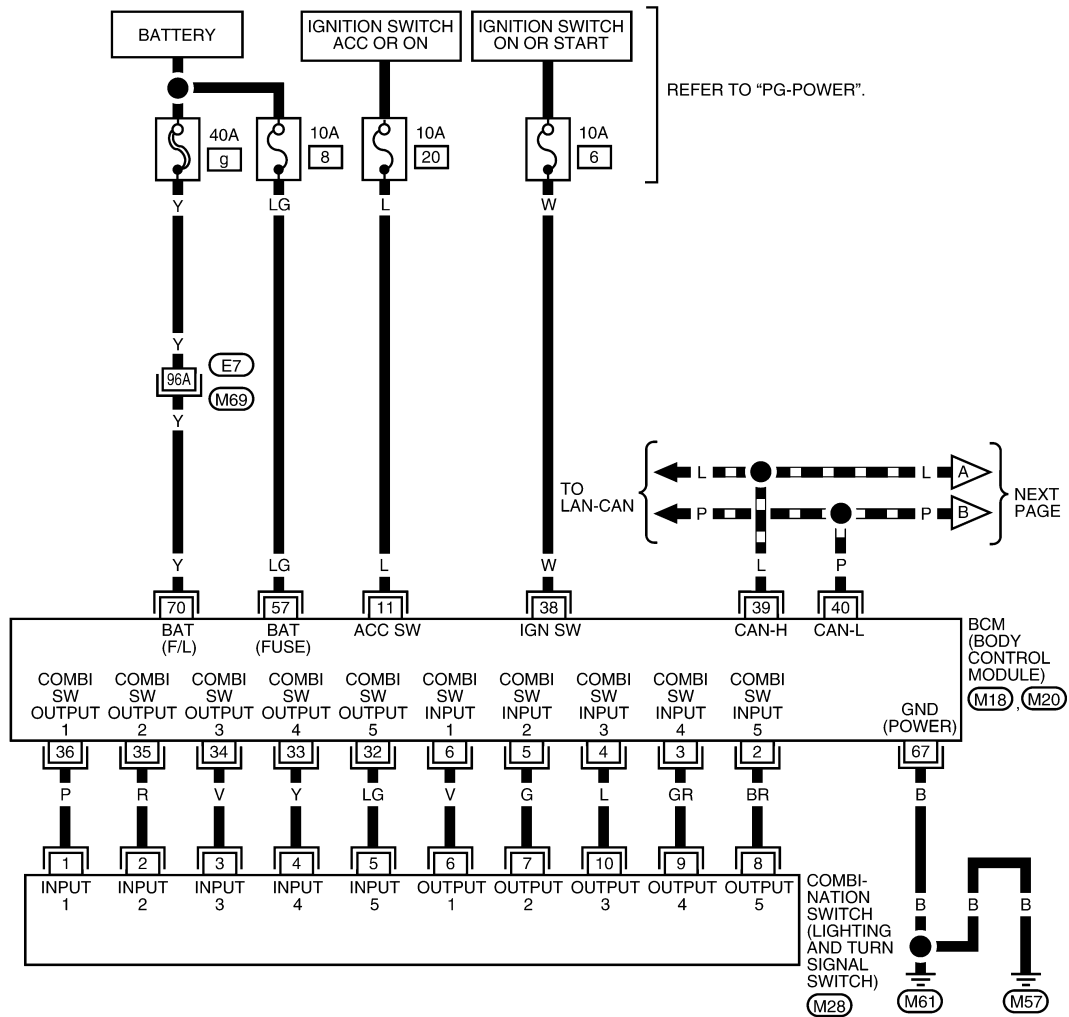



REFER TO THE FOLLOWING.
 (M69) - SUPER MULTIPLE JUNCTION (SMJ)

ABLWA1013GB

HEADLAMP (FOR USA)

< SERVICE INFORMATION >

 LT-H/LAMP-02

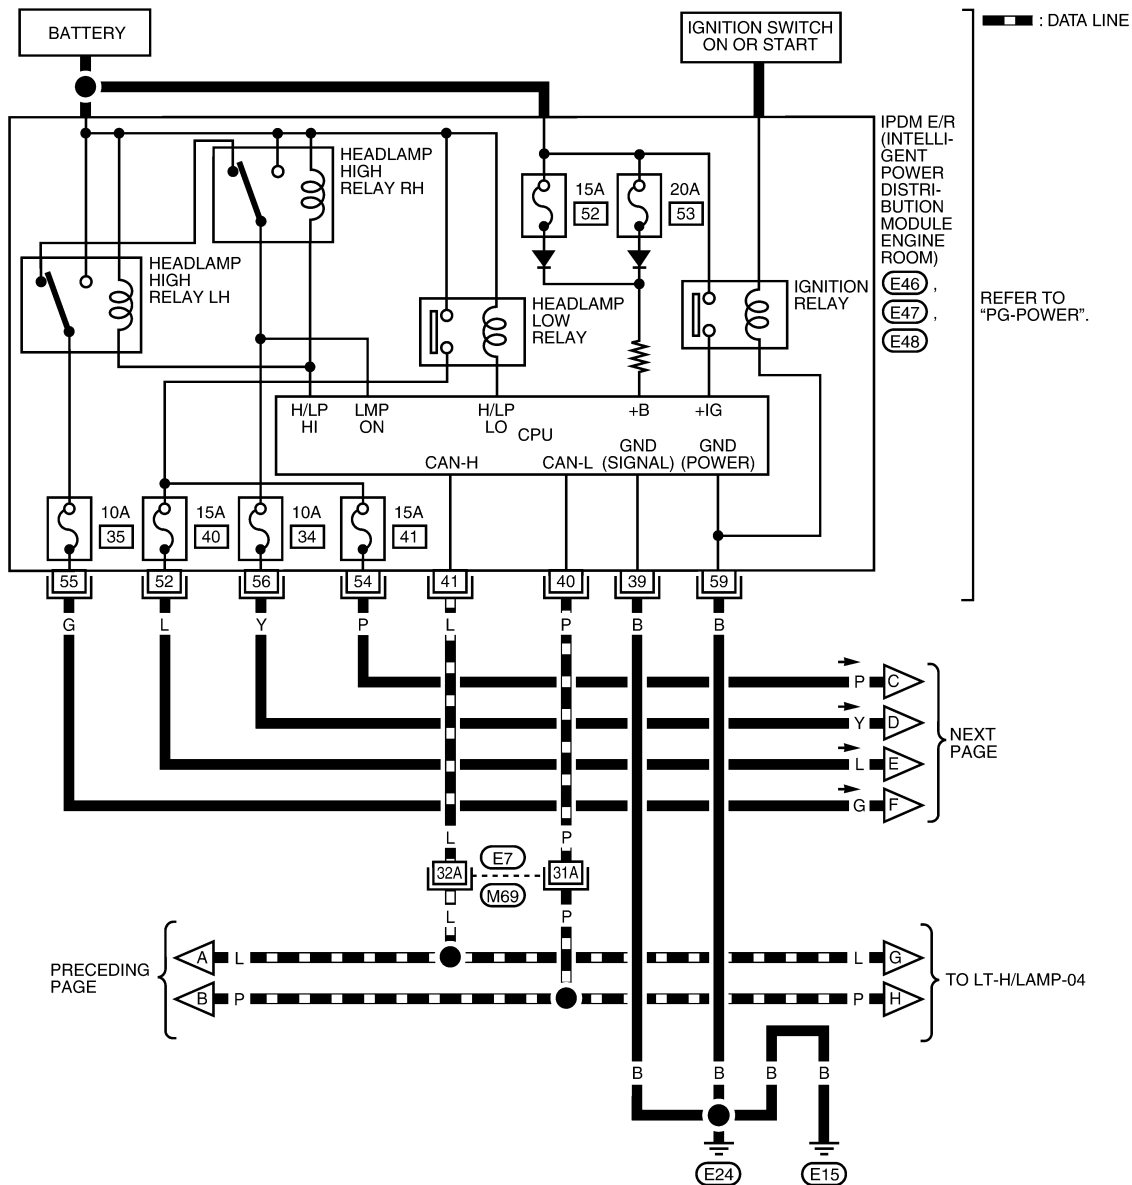



REFER TO THE FOLLOWING.
 (M69) - SUPER MULTIPLE JUNCTION (SMJ)

LKWA0319E

HEADLAMP (FOR USA)

< SERVICE INFORMATION >

 LT-H/LAMP-03

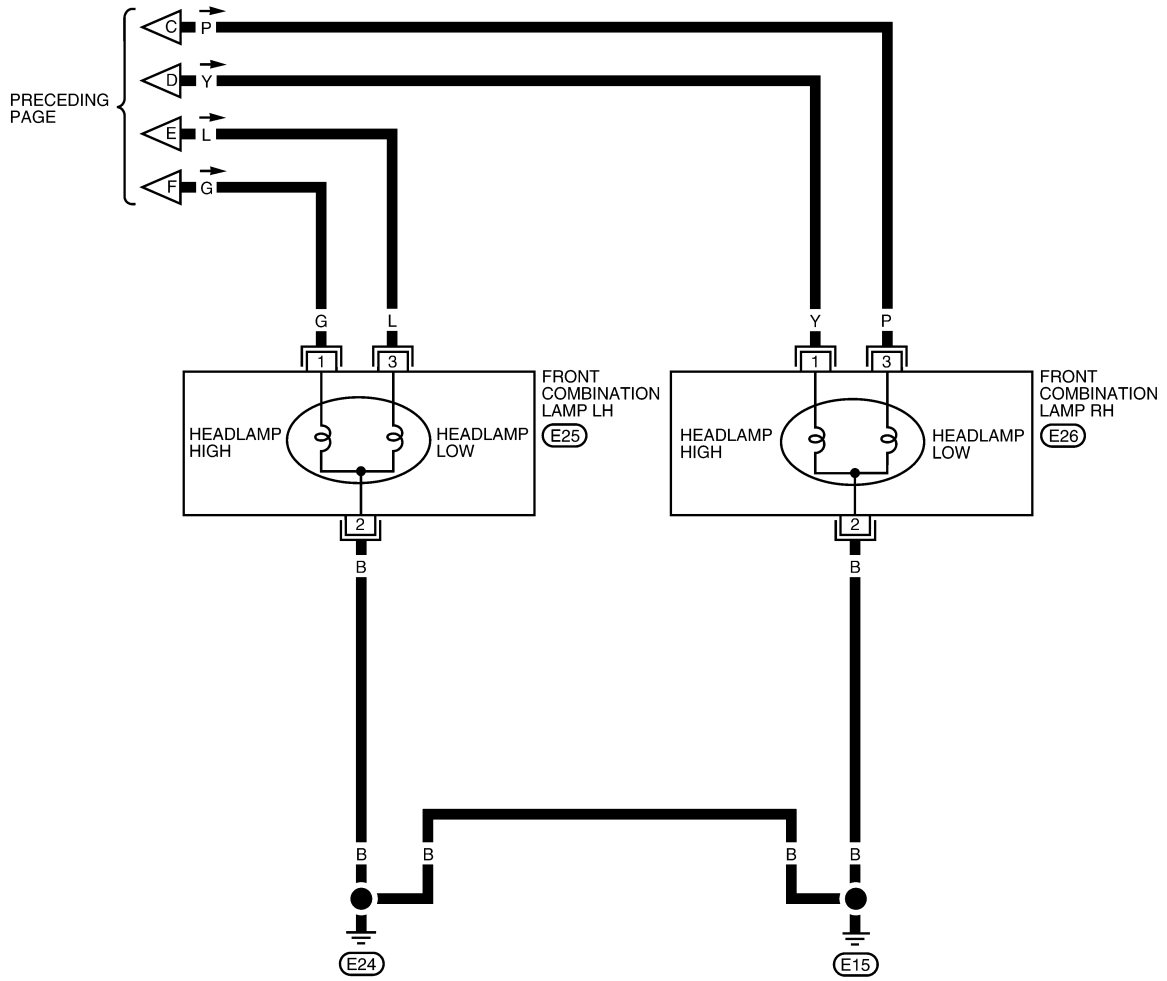


LKWA0320E

HEADLAMP (FOR USA)

< SERVICE INFORMATION >

LT-H/LAMP-04

▬ : DATA LINE

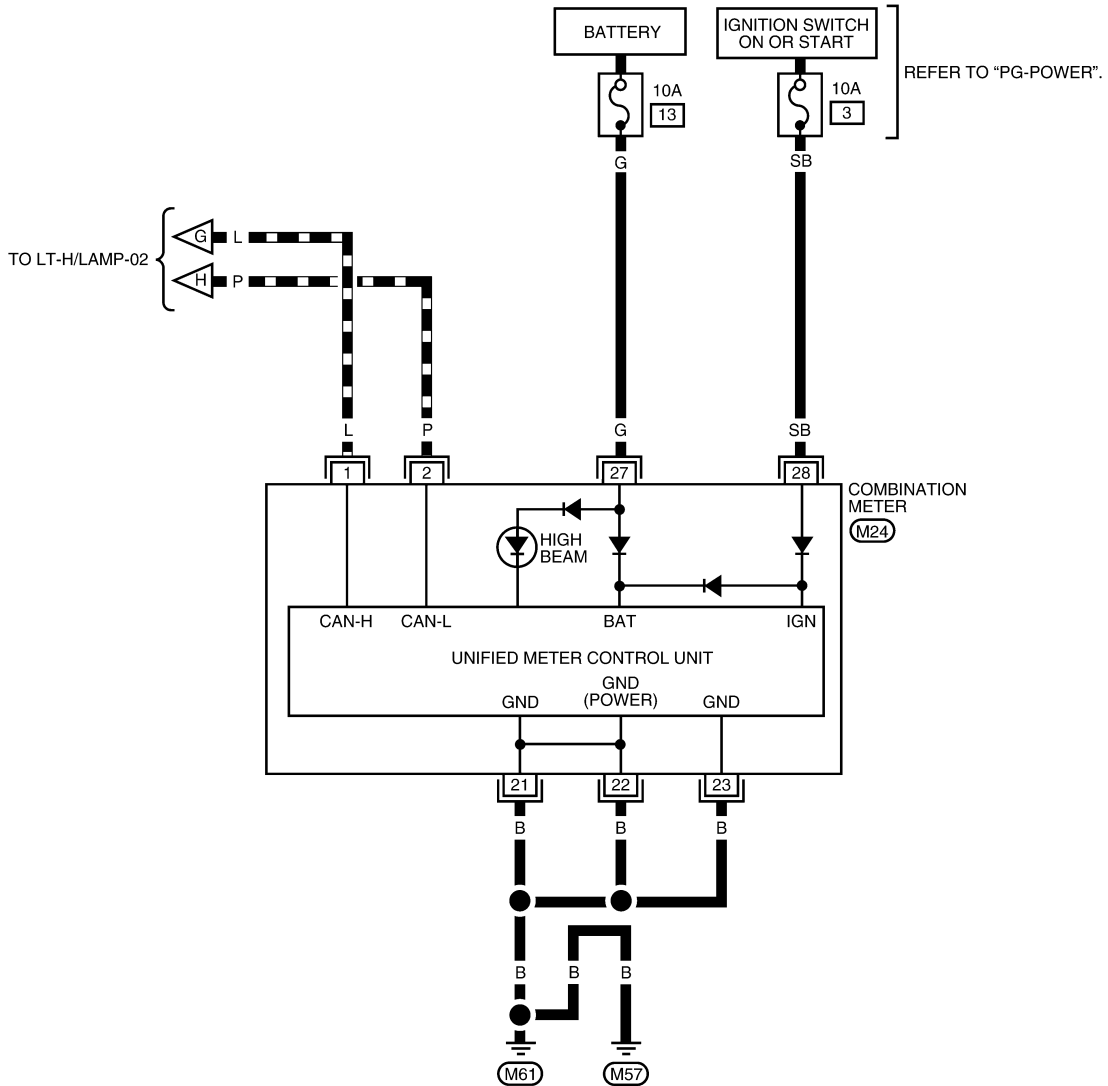

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	M24
21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	W

Terminal and Reference Value for BCM

Refer to [BCS-12, "Terminal and Reference Value for BCM"](#) .

Terminal and Reference Value for IPDM E/R

Refer to [PG-25, "Terminal and Reference Value for IPDM E/R"](#) .

LKWA0321E

INFOID:0000000005929033

INFOID:0000000005929034

HEADLAMP (FOR USA)

< SERVICE INFORMATION >

How to Perform Trouble Diagnosis

INFOID:000000005929035

1. Confirm the symptom or customer complaint.
2. Understand operation, description and function description. Refer to [LT-5. "System Description"](#) .
3. Perform the Preliminary Check. Refer to [LT-12. "Preliminary Check"](#) .
4. Check symptom and repair or replace the cause of the malfunction.
5. Do the headlamps operate normally? If YES, GO TO 6. If NO, GO TO 4.
6. INSPECTION END

Preliminary Check

INFOID:000000005929036

CHECK POWER SUPPLY AND GROUND CIRCUIT FOR BCM

Refer to [BCS-16. "BCM Power Supply and Ground Circuit Inspection"](#) .

CHECK POWER SUPPLY AND GROUND CIRCUIT FOR IPDM E/R

Refer to [PG-27. "IPDM E/R Power/Ground Circuit Inspection"](#) .

CONSULT-III Function (BCM)

INFOID:000000006227566

CONSULT-III can display each diagnostic item using the diagnostic test modes shown following.

Diagnostic mode	Content
WORK SUPPORT	Supports inspections and adjustments. Commands are transmitted to the BCM for setting the status suitable for required operation, input/output signals are received from the BCM and received data is displayed.
DATA MONITOR	Displays BCM input/output data in real time.
ACTIVE TEST	Operation of electrical loads can be checked by sending drive signal to them.
SELF DIAGNOSTIC RESULT	Displays BCM self-diagnosis results.
CAN DIAG SUPPORT MNTR	The results of transmit/receive diagnosis of CAN communication can be read.
ECU IDENTIFICATION	BCM part number can be read.
CONFIGURATION	Performs BCM configuration read/write functions.

ITEMS OF EACH PART

NOTE:

CONSULT-III will only display systems the vehicle possesses.

System and item	CONSULT-III display	Diagnostic test mode (Inspection by part)						
		WORK SUPPORT	SELF DIAGNOSTIC RESULT	CAN DIAG SUPPORT MNTR	DATA MONITOR	ECU IDENTIFICATION	ACTIVE TEST	CONFIGURATION
BCM	BCM	×	×	×		×		×
Power door lock system	DOOR LOCK	×			×		×	
Rear defogger	REAR DEFOGGER				×		×	
Warning chime	BUZZER				×		×	
Room lamp timer	INT LAMP	×			×		×	
Remote keyless entry system	MULTI REMOTE ENT	×			×		×	
Headlamp	HEAD LAMP	×			×		×	
Wiper	WIPER	×			×		×	
Turn signal lamp Hazard lamp	FLASHER				×		×	

HEADLAMP (FOR USA)

< SERVICE INFORMATION >

System and item	CONSULT-III display	Diagnostic test mode (Inspection by part)						
		WORK SUPPORT	SELF DIAGNOSTIC RESULT	CAN DIAG SUPPORT MNTR	DATA MONITOR	ECU IDENTIFICATION	ACTIVE TEST	CONFIGURATION
Blower fan switch signal Air conditioner switch signal	AIR CONDITIONER				×		×	
Intelligent Key	INTELLIGENT KEY				×			
Combination switch	COMB SW				×			
NVIS (NATS)	IMMU				×		×	
Interior lamp battery saver	BATTERY SAVER	×			×		×	
Back door/Trunk	TRUNK				×		×	
Theft alarm	THEFT ALARM	×			×		×	
Retained accessory power control	RETAINED PWR	×			×		×	
Oil pressure switch	SIGNAL BUFFER				×		×	
Low tire pressure monitor	AIR PRESSURE MONITOR	×	×		×		×	
Panic alarm	PANIC ALARM						×	

WORK SUPPORT

Display Item List

Item	Description
RESET SETTING VALUE	Return a value set with WORK SUPPORT of each system to a default value in factory shipment.

CONSULT-III Function (IPDM E/R)

INFOID:000000006227567

CONSULT-III can display each diagnostic item using the diagnostic test modes shown following.

IPDM E/R diagnostic Mode	Description
SELF-DIAG RESULTS	Displays IPDM E/R self-diagnosis results.
DATA MONITOR	Displays IPDM E/R input/output data in real time.
CAN DIAG SUPPORT MNTR	The result of transmit/receive diagnosis of CAN communication can be read.
ACTIVE TEST	Operation of electrical loads can be checked by sending drive signal to them.

SELF-DIAGNOSTIC RESULTS

Display Item List

HEADLAMP (FOR USA)

< SERVICE INFORMATION >

Display items	CONSULT-III display code	Malfunction detection	TIME		Possible causes
			CRNT	PAST	
NODTC IS DETECTED. FURTHER TESTING MAY BE REQUIRED.	—	—	—	—	—
CAN COMM CIRC	U1000	<ul style="list-style-type: none"> • If CAN communication reception/transmission data has a malfunction, or if any of the control units fail, data reception/transmission cannot be confirmed. • When the data in CAN communication is not received before the specified time. 	X	X	Any of items listed below have errors: <ul style="list-style-type: none"> • TRANSMIT DIAG • ECM • BCM/SEC
IGN RELAY ON	—	When the ignition switch is not in the ON position, the ignition relay in the IPDM E/R is ON.	X	X	Ignition relay (integrated in IPDM E/R)
IGN RELAY OFF	—	When the ignition switch is not in the ON position, the ignition relay in the IPDM E/R is OFF.	X	X	Ignition relay (integrated in IPDM E/R)
EEPROM	—	Malfunction is detected with the integrated EEPROM memory diagnosis.	X	X	IPDM E/R

x: Applicable

NOTE:

The details for display of the period are as follows:

- CRNT: Error currently detected with IPDM E/R.
- PAST: Error detected in the past and placed in IPDM E/R memory.

DATA MONITOR

All Signals, Main Signals, Selection From Menu

Item name	CONSULT-III screen display	Display or unit	Monitor item selection			Description
			ALL SIGNALS	MAIN SIGNALS	SELECTION FROM MENU	
Motor fan request	MOTOR FAN REQ	1/2/3/4	X	X	X	Signal status input from ECM
Compressor request	AC COMP REQ	ON/OFF	X	X	X	Signal status input from ECM
Parking, license, and tail lamp request	TAIL & CLR REQ	ON/OFF	X	X	X	Signal status input from BCM
Headlamp low beam request	HL LO REQ	ON/OFF	X	X	X	Signal status input from BCM
Headlamp high beam request	HL HI REQ	ON/OFF	X	X	X	Signal status input from BCM
Front fog request	FR FOG REQ	ON/OFF	X	X	X	Signal status input from BCM
FR wiper request	FR WIP REQ	STOP/1LO/LO/HI	X	X	X	Signal status input from BCM
Wiper auto stop	WIP AUTO STOP	ACT P/STOP P	X	X	X	Output status of IPDM E/R
Wiper protection	WIP PROT	OFF/LS/HS/Block	X	X	X	Control status of IPDM E/R
Starter request	ST RLY REQ	ON/OFF	X		X	Status of input signal (*1)
Ignition relay status	IGN RLY	ON/OFF	X	X	X	Ignition relay status monitored with IPDM E/R
Rear defogger request	RR DEF REQ	ON/OFF	X	X	X	Signal status input from BCM
Oil pressure switch	OIL P SW	OPEN/CLOSE	X		X	Signal status input from IPDM E/R
Hood switch	HOOD SW (*2)	OFF	X		X	Signal status input from IPDM E/R

HEADLAMP (FOR USA)

< SERVICE INFORMATION >

Item name	CONSULT-III screen display	Display or unit	Monitor item selection			Description
			ALL SIGNALS	MAIN SIGNALS	SELECTION FROM MENU	
Theft warning horn request	THFT HRN REQ	ON/OFF	X		X	Signal status input from BCM
Horn chirp	HORN CHIRP	ON/OFF	X		X	Output status of IPDM E/R
Daytime light request	DTRL REQ	ON/OFF	X		X	Signal status input from BCM

*1 Perform monitoring of IPDM E/R data with the ignition switch ON. When the ignition switch is in ACC position, display may not be correct.

*2 This item is displayed, but does not function.

CAN DIAG SUPPORT MNTR

Refer to [LAN-9. "Description"](#) .

ACTIVE TEST

Display Item List

Test name	CONSULT-III screen display	Description
Head, tail, fog lamp output	EXTERNAL LAMPS	With a certain ON-OFF operation (OFF, TAIL, LO, HI, FOG), the front fog lamp, headlamp low, headlamp high RH, headlamp high LH, and tail lamp relays can be operated.
Rear defogger output	REAR DEFOGGER	With a certain ON-OFF operation, the rear defogger relay can be operated.
Front wiper (HI, LO) output	FRONT WIPER	With a certain operation (OFF, HI ON, LO ON), the front wiper relays (Lo, Hi) can be operated.
Cooling fan output	MOTOR FAN	With a certain operation (1, 2, 3, 4), the cooling fan relays can be operated.
Horn output	HORN	With a certain ON-OFF operation, the horn relay can be operated.

Headlamp High Beam Does Not Illuminate (Both Sides)

INFOID:000000005929039

1. CHECK COMBINATION SWITCH (LIGHTING AND TURN SIGNAL SWITCH) INPUT SIGNAL

 With CONSULT-III

1. Select "BCM" on CONSULT-III. Select "HEAD LAMP" on "SELECT TEST ITEM" screen.
2. Select "DATA MONITOR" on "SELECT DIAG MODE" screen. Make sure that "HI BEAM SW" turns ON-OFF linked with operation of lighting switch.

When lighting switch is high : HI BEAM SW ON position

 Without CONSULT-III

Refer to [LT-65. "Combination Switch Inspection"](#) .

OK or NG

OK >> GO TO 2.

NG >> Check combination switch (lighting and turn signal switch). Refer to [LT-65. "Combination Switch Inspection"](#) .

2. HEADLAMP ACTIVE TEST

 With CONSULT-III

1. Select "IPDM E/R" on CONSULT-III. Select "ACTIVE TEST" on "SELECT DIAG MODE" screen.
2. Select "EXTERNAL LAMPS" on "SELECT TEST ITEM" screen.
3. Touch "HI" screen.
4. Make sure headlamp high beam operates.

HEADLAMP (FOR USA)

< SERVICE INFORMATION >

**Headlamp high beam should operate
(Headlamp high beam repeats ON-OFF every 2 seconds).**

⊗ Without CONSULT-III

1. Start auto active test. Refer to [PG-20, "Auto Active Test"](#) .
2. Make sure headlamp high beam operates.

Headlamp high beam should operate.

OK or NG

- OK >> GO TO 3.
NG >> GO TO 4.

3. CHECK IPDM E/R

1. Select "IPDM E/R" on CONSULT-III. Select "DATA MONITOR" on "SELECT DIAG MODE" screen.
2. Make sure "HL HI REQ" turns ON when lighting switch is in high position.

**When lighting switch is high : HL HI REQ ON
position**

OK or NG

- OK >> Replace IPDM E/R. Refer to [PG-28, "Removal and Installation of IPDM E/R"](#) .
NG >> Replace BCM. Refer to [BCS-19, "Removal and Installation of BCM"](#) .

4. HEADLAMP HIGH BEAM FUSE INSPECTION

Inspect 10A fuse No. 34 (RH) and fuse No. 35 (LH).

OK or NG

- OK >> GO TO 5.
NG >> Repair harness.

5. BULB INSPECTION

Inspect inoperative headlamp bulbs.

OK or NG


- OK >> GO TO 6.
NG >> Replace headlamp bulb. [LT-24, "Bulb Replacement"](#) .

6. CHECK HEADLAMP INPUT SIGNAL

Ⓟ With CONSULT-III

1. Turn ignition switch OFF.
2. Disconnect headlamp connector.
3. Select "IPDM E/R" on CONSULT-III. Select "ACTIVE TEST" on "SELECT DIAG MODE" screen.
4. Select "EXTERNAL LAMPS" on "SELECT TEST ITEM" screen.
5. Touch "HI" screen.
6. When headlamp high beam is operating, check voltage between headlamp harness connector and ground (Headlamp high beam repeats ON-OFF every 2 seconds).

Terminal		Terminal	Voltage
(+)	(-)		
Headlamp connector			
RH	E26	1	Battery voltage
LH	E25		

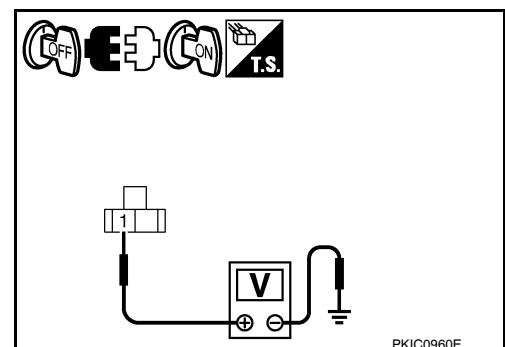

⊗ Without CONSULT-III

1. Turn ignition switch OFF.
2. Disconnect headlamp connector.
3. Start auto active test. Refer to [PG-20, "Auto Active Test"](#) .

HEADLAMP (FOR USA)

< SERVICE INFORMATION >

- When headlamp high beam is operating, check voltage between headlamp harness connector and ground.

Terminal				Voltage
(+)		(-)		
Headlamp connector	Terminal			
RH	E26	1	Ground	Battery voltage
LH	E25			

OK or NG

- OK >> GO TO 7.
 NG >> GO TO 8.


7. CHECK HEADLAMP GROUND CIRCUIT

- Turn ignition switch OFF.
- Check continuity between headlamp harness connector and ground.

Headlamp connector	Terminal	Ground	Continuity
RH	E26		2
LH	E25		

OK or NG

- OK >> Check front combination lamp connector for damage or poor connection. Repair as necessary.
 NG >> Repair harness.

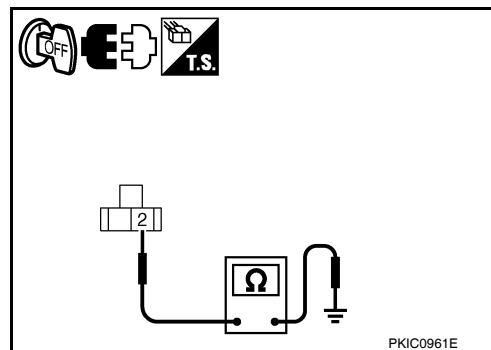


8. CHECK HEADLAMP CIRCUIT

- Turn ignition switch OFF.
- Disconnect IPDM E/R connector.
- Check continuity between IPDM E/R harness connector (A) and headlamp harness connector (B).

Circuit	A		B		Continuity
	Connector	Terminal	Connector	Terminal	
RH	E47	56	E26	1	Yes
LH		55	E25		

OK or NG

- OK >> Replace IPDM E/R. Refer to [PG-28, "Removal and Installation of IPDM E/R"](#) .
 NG >> Repair harness or connector.

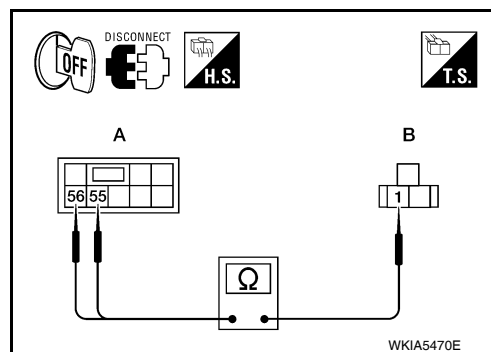

Headlamp High Beam Does Not Illuminate (One Side)

INFOID:000000005929040

1. HEADLAMP HIGH BEAM FUSE INSPECTION

Inspect 10A fuse No. 34 (RH) or fuse No. 35 (LH).

OK or NG

- OK >> GO TO 2.
 NG >> Repair harness.

2. CHECK BULB

Check headlamp bulb which does not illuminate.

OK or NG

- OK >> GO TO 3.
 NG >> Replace bulb. Refer to [LT-24, "Bulb Replacement"](#) .

HEADLAMP (FOR USA)

< SERVICE INFORMATION >


3. CHECK HEADLAMP INPUT SIGNAL

1. Turn ignition switch OFF.
2. Disconnect headlamp connector.
3. Lighting switch is turned to HIGH position.
4. Check voltage between headlamp harness connector and ground.

Terminal		Terminal	(-)	Voltage
(+)				
Headlamp connector		1	Ground	Battery voltage
RH	E26			
LH	E25			

OK or NG

- OK >> GO TO 4.
 NG >> GO TO 5.

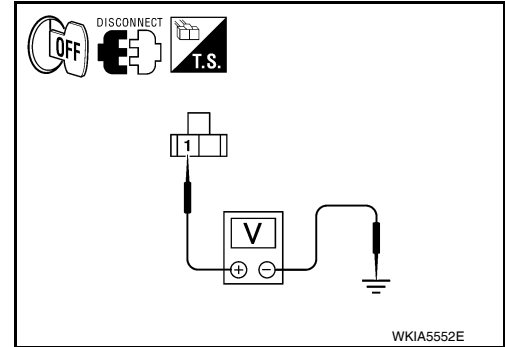


4. CHECK HEADLAMP GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Check continuity between headlamp harness connector and ground.

Headlamp connector		Terminal	Ground	Continuity
RH	E26	2		Ground
LH	E25			

OK or NG

- OK >> Check connecting condition headlamp harness connector.
 NG >> Repair harness or connector.

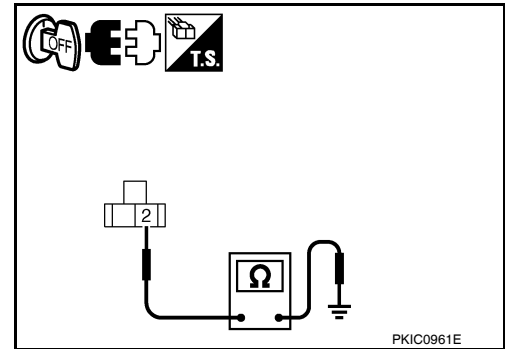


5. CHECK HEADLAMP CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check continuity between IPDM E/R harness connector (A) and headlamp harness connector (B).

Circuit	A		B		Continuity
	Connector	Terminal	Connector	Terminal	
RH	E47	56	E26	1	Yes
LH		55	E25		

OK or NG

- OK >> Replace IPDM E/R. Refer to [PG-28, "Removal and Installation of IPDM E/R"](#) .
 NG >> Repair harness or connector.

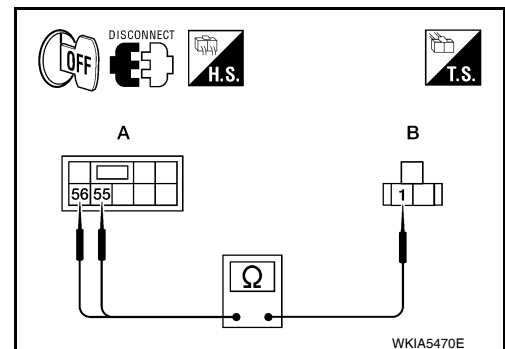

High Beam Indicator Lamp Does Not Illuminate

INFOID:000000005929041

1. BULB INSPECTION

Inspect CAN communication system. Refer to [LAN-7](#) .

OK or NG

- OK >> Replace combination meter. Refer to [DI-20, "Removal and Installation"](#) .
 NG >> Repair as necessary.

HEADLAMP (FOR USA)

< SERVICE INFORMATION >

Headlamp Low Beam Does Not Illuminate (Both Sides)

INFOID:000000005929042

1. CHECK COMBINATION SWITCH (LIGHTING AND TURN SIGNAL SWITCH) INPUT SIGNAL

With CONSULT-III

1. Select "BCM" on CONSULT-III. Select "HEAD LAMP" on "SELECT TEST ITEM" screen.
2. Select "DATA MONITOR" on "SELECT DIAG MODE" screen. Make sure that "HEAD LAMP SW 1" and "HEAD LAMP SW 2" turns ON-OFF linked with operation of lighting switch.

**When lighting switch is 2ND position : HEAD LAMP SW 1 ON
: HEAD LAMP SW 2 ON**

Without CONSULT-III

Refer to [LT-65. "Combination Switch Inspection"](#) .

OK or NG

OK >> GO TO 2.

NG >> Check combination switch (lighting and turn signal switch). Refer to [LT-65. "Combination Switch Inspection"](#) .

2. CHECK HEADLAMP ACTIVE TEST

With CONSULT-III

1. Select "IPDM E/R" on CONSULT-III. Select "ACTIVE TEST" on "SELECT DIAG MODE" screen.
2. Select "EXTERNAL LAMPS" on "SELECT TEST ITEM" screen.
3. Touch "LO" screen.
4. Make sure headlamp low beam operates.

Headlamp low beam should operate.

Without CONSULT-III

1. Start auto active test. Refer to [PG-20. "Auto Active Test"](#) .
2. Make sure headlamp low beam operates.

Headlamp low beam should operate.

OK or NG

OK >> GO TO 3.

NG >> GO TO 4.

3. CHECK IPDM E/R

1. Select "IPDM E/R" on CONSULT-III. Select "DATA MONITOR" on "SELECT DIAG MODE" screen.
2. Make sure "HL LO REQ" turns ON when lighting switch is in 2ND position.

When lighting switch is 2ND position : HL LO REQ ON

OK or NG

OK >> Replace IPDM E/R. Refer to [PG-28. "Removal and Installation of IPDM E/R"](#) .

NG >> Replace BCM. Refer to [BCS-19. "Removal and Installation of BCM"](#) .

4. HEADLAMP LOW BEAM FUSE INSPECTION

Inspect 15A fuse No. 40 (LH) and fuse No. 41 (RH).

OK or NG

OK >> GO TO 5.

NG >> Repair harness.

5. BULB INSPECTION

Inspect inoperative headlamp bulbs.

OK or NG

OK >> GO TO 6.

NG >> Replace headlamp bulb. [LT-24. "Bulb Replacement"](#) .

HEADLAMP (FOR USA)


< SERVICE INFORMATION >

6. CHECK HEADLAMP INPUT SIGNAL

④ With CONSULT-III

1. Turn ignition switch OFF.
2. Disconnect headlamp connector.
3. Select "IPDM E/R" on CONSULT-III. Select "ACTIVE TEST" on "SELECT DIAG MODE" screen.
4. Select "EXTERNAL LAMPS" on "SELECT TEST ITEM" screen.
5. Touch "LO" screen.
6. When headlamp low beam is operating, check voltage between headlamp low beam harness connector and ground.

Terminal		Terminal	Voltage
(+)			
Headlamp connector		3	Ground
RH	E26		
LH	E25		

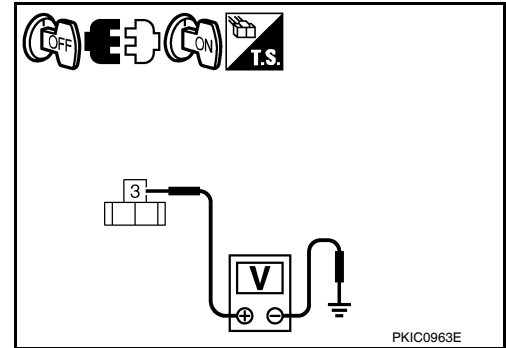

⊗ Without CONSULT-III

1. Turn ignition switch OFF.
2. Disconnect headlamp connector.
3. Start auto active test. Refer to [PG-20. "Auto Active Test"](#).
4. When headlamp low beam is operating, check voltage between headlamp harness connector and ground.

Terminal		Terminal	Voltage
(+)			
Headlamp connector		3	Ground
RH	E26		
LH	E25		

OK or NG

- OK >> GO TO 7.
 NG >> GO TO 8.

7. CHECK HEADLAMP GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Check continuity between headlamp harness connector (B) and ground.


Headlamp connector		Terminal	Ground	Continuity
RH	E26	2		Ground
LH	E25			

OK or NG

- OK >> Check front combination lamp connector for damage or poor connection. Repair as necessary.
 NG >> Repair harness.

8. CHECK HEADLAMP CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector.

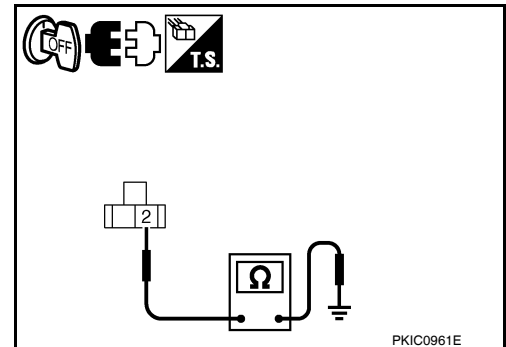

HEADLAMP (FOR USA)


< SERVICE INFORMATION >

- Check continuity between IPDM E/R harness connector (A) and headlamp harness connector (B).

Circuit	A		B		Continuity
	Connector	Terminal	Connector	Terminal	
RH	E47	54	E26	3	Yes
LH		52	E25		

OK or NG

- OK >> Replace IPDM E/R. Refer to [PG-28. "Removal and Installation of IPDM E/R"](#) .
- NG >> Repair harness or connector.

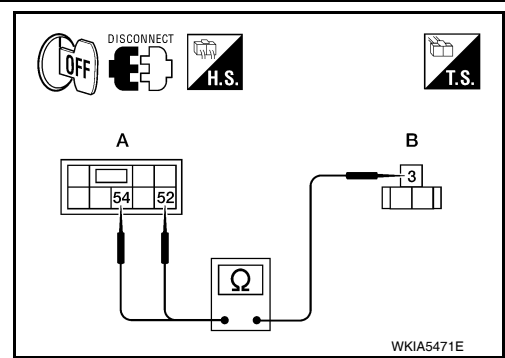

Headlamp Low Beam Does Not Illuminate (One Side)

INFOID:000000005929043

1. HEADLAMP LOW BEAM FUSE INSPECTION

Inspect 15A fuse No. 40 (LH) and fuse No. 41 (RH).

OK or NG

- OK >> GO TO 2.
- NG >> Repair harness.

2. CHECK BULB

Check bulb of headlamp which does not illuminate.

OK or NG

- OK >> GO TO 3.
- NG >> Replace bulb. Refer to [LT-24. "Bulb Replacement"](#) .

3. CHECK HEADLAMP INPUT SIGNAL

- Turn ignition switch OFF.
- Disconnect headlamp connector.
- Lighting switch is turned to 2ND position.
- Check voltage between headlamp harness connector and ground.

Terminal		Voltage
(+)	(-)	
Headlamp connector	Terminal	Battery voltage
RH	E26	
LH	E25	3

OK or NG

- OK >> GO TO 4.
- NG >> GO TO 5.



4. CHECK HEADLAMP GROUND CIRCUIT

- Turn ignition switch OFF.
- Check continuity between headlamp harness connector and ground.

Headlamp connector	Terminal	Ground	Continuity
RH	E26		2
LH	E25		

OK or NG

- OK >> Check condition of headlamp harness connector.
- NG >> Repair harness or connector.

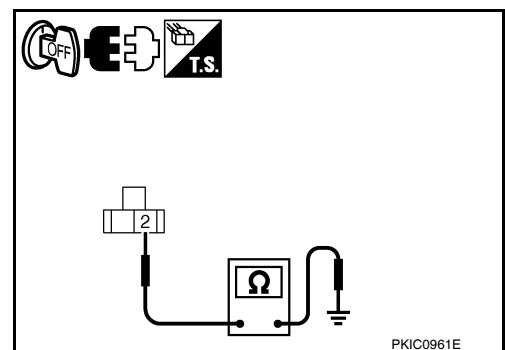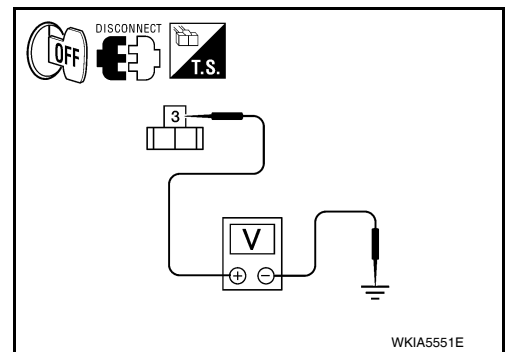

HEADLAMP (FOR USA)

< SERVICE INFORMATION >


5. CHECK HEADLAMP CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check continuity between IPDM E/R harness connector (A) and headlamp harness connector (B).

Circuit	A		B		Continuity
	Connector	Terminal	Connector	Terminal	
RH	E47	54	E26	3	Yes
LH		52	E25		

OK or NG

- OK >> Replace IPDM E/R. Refer to [PG-27, "IPDM E/R Power/Ground Circuit Inspection"](#) .
- NG >> Repair harness or connector.

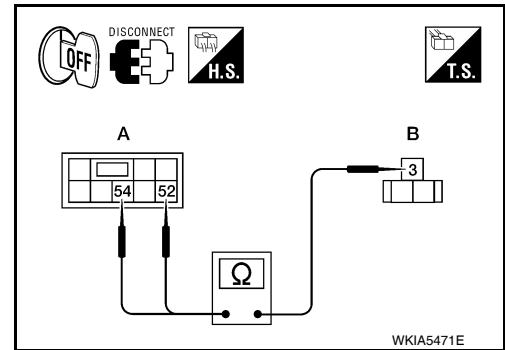

Headlamps Do Not Turn OFF

INFOID:000000005929044

1. CHECK HEADLAMPS TURN OFF

Make sure that lighting switch is OFF. Make sure headlamp turns OFF when ignition switch is turned OFF.

OK or NG

- OK >> GO TO 3.
- NG >> GO TO 2.

2. CHECK COMBINATION SWITCH (LIGHTING AND TURN SIGNAL SWITCH) INPUT SIGNAL

1. Select "BCM" on CONSULT-III. Select "HEAD LAMP" on "SELECT TEST ITEM" screen.
2. Select "DATA MONITOR" on "SELECT DIAG MODE" screen. Make sure that "HEAD LAMP SW 1" and "HEAD LAMP SW 2" turns ON-OFF linked with operation of lighting switch.

When lighting switch is OFF : HEAD LAMP SW 1 OFF position : HEAD LAMP SW 2 OFF

OK or NG

- OK >> Replace IPDM E/R. Refer to [PG-28, "Removal and Installation of IPDM E/R"](#) .
- NG >> Check combination switch (lighting and turn signal switch). Refer to [LT-65, "Combination Switch Inspection"](#) .

3. CHECKING CAN COMMUNICATIONS BETWEEN BCM AND IPDM E/R

Select "BCM" on CONSULT-III, and perform self-diagnosis for "BCM".

Display of self-diagnosis results


- NO DTC>> Replace IPDM E/R. Refer to [PG-28, "Removal and Installation of IPDM E/R"](#) .
- CAN COMM CIRCUIT>> Refer to [LAN-7, "System Description"](#) .

HEADLAMP (FOR USA)

< SERVICE INFORMATION >

Aiming Adjustment

INFOID:000000005929045

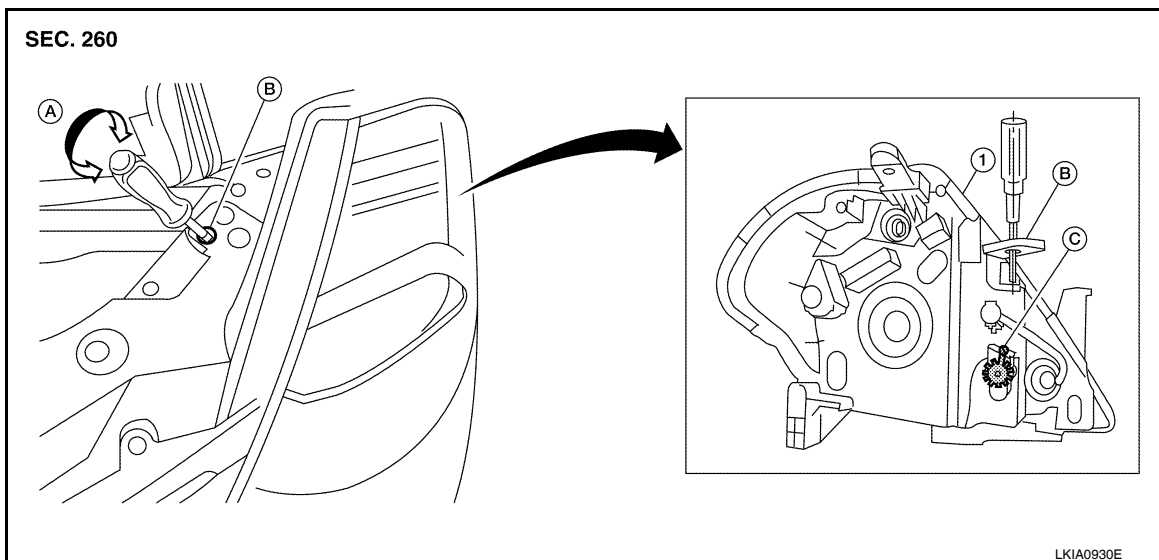

- 1. Headlamp
- A. Inner and outer adjustment
- B. Adjusting screw access hole
- C. Adjusting screw

PREPARATION BEFORE ADJUSTING

Before performing aiming adjustment, check the following.

1. Keep all tires inflated to correct pressures.
2. Place vehicle on level surface.
3. See that there is no-load in vehicle other than the driver (or equivalent weight placed in driver's position). Coolant, engine oil filled up to correct level and full fuel tank, spare tire, jack and tools are properly stowed.

LOW BEAM AND HIGH BEAM


1. Turn headlamp low beam ON.
2. Use adjusting screw to perform aiming adjustment.
3. Insert the tool through the adjusting screw access hole to avoid damage to the adjusting screw.

ADJUSTMENT USING AN ADJUSTMENT SCREEN (LIGHT/DARK BORDERLINE)

A
B
C
D
E
F
G
H
I
J
LT
L
M
N
O
P

HEADLAMP (FOR USA)

< SERVICE INFORMATION >

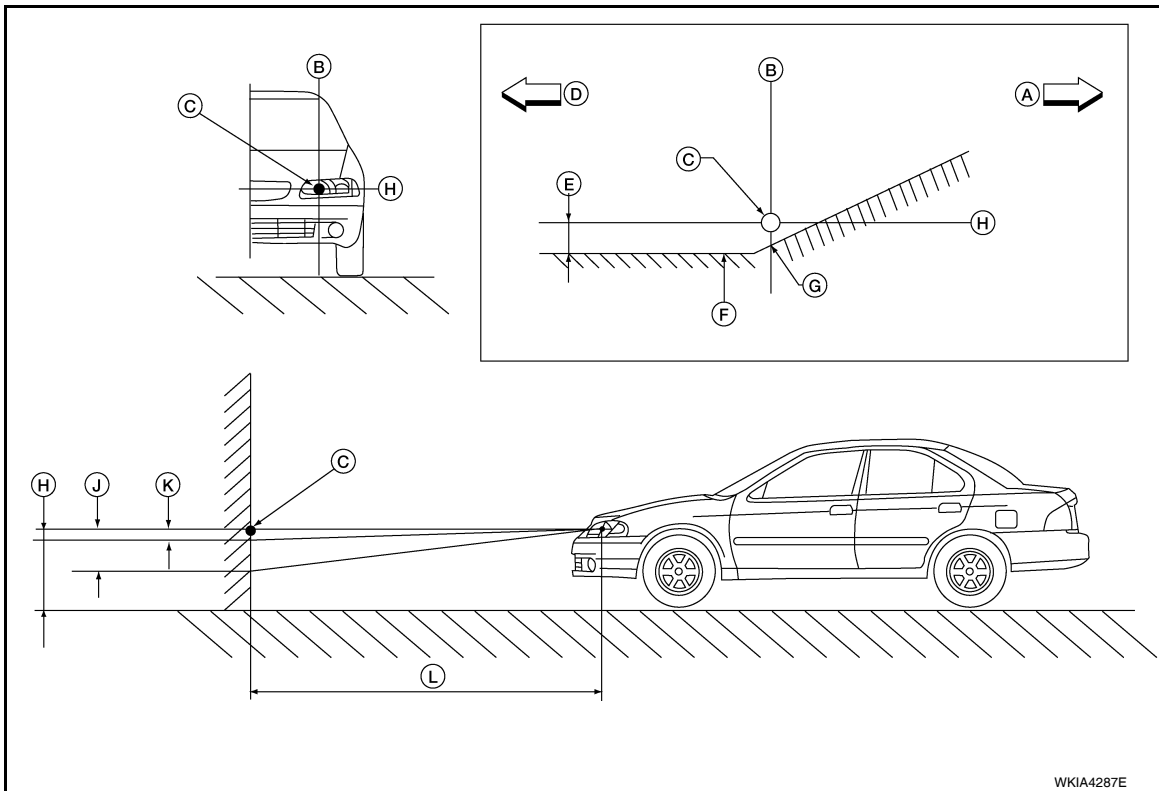

WKIA4287E

A.	Right	B.	Vertical center line of headlamp	C.	Horizontal and vertical aiming center point of headlamp
D.	Left	E.	Vertical aiming cutoff point	F.	Cutoff line for vertical aiming evaluation
G.	Acceptable vertical cutoff setting at horizontal aiming point	H.	Horizontal center line of headlamp	J.	Maximum acceptable vertical aiming point
K.	Minimum acceptable vertical aiming point	L.	Aiming distance from center of headlamp to aiming screen		

- Aim each headlamp individually and ensure other headlamp beam pattern is blocked from screen.
- For vertical headlamp aiming, adjust headlamp until beam pattern is positioned per specified dimensions.

Description	Halogen Headlamp
Vertical aiming cutoff point (E)	53.2 mm (2.094 in)
Minimum acceptable vertical aiming point (K)	13.3 mm (0.52 in)
Maximum acceptable vertical aiming point (J)	93.1 mm (3.67 in)
Aiming distance from center of headlamp to aiming screen (L)	7.62 m (25 ft)

Bulb Replacement

INFOID:000000005929046

CAUTION:

After installing bulb, be sure to install plastic cap and bulb socket securely to ensure watertightness.

HEADLAMP (HIGH/LOW)

1. Turn lighting switch OFF.
2. Disconnect headlamp bulb connector.
3. Remove headlamp bulb back cover.
4. Unlock retaining spring and remove headlamp bulb from front combination lamp assembly.

PARKING LAMP

1. Turn lighting switch OFF.

HEADLAMP (FOR USA)

< SERVICE INFORMATION >

2. Turn bulb socket counterclockwise and unlock from the front combination lamp assembly.
3. Remove bulb from its socket.

FRONT TURN SIGNAL LAMP


1. Turn lighting switch OFF.
2. Turn bulb socket counterclockwise and unlock from the front combination lamp assembly.
3. Remove bulb from its socket.

Removal and Installation

INFOID:000000005929047

REMOVAL

1. Disconnect the negative battery terminal.
2. Remove front bumper fascia. Refer to [EI-15](#).
3. Remove front combination lamp assembly bolts (A).
4. Pull front combination lamp assembly (1) toward the vehicle front, disconnect connector, and remove assembly.

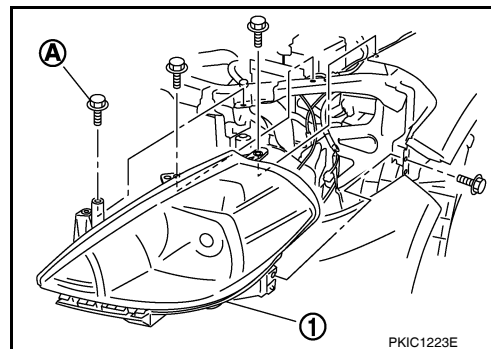


INSTALLATION

Installation is in the reverse order of removal.

- After installation, perform aiming adjustment. Refer to [LT-23, "Aiming Adjustment"](#).

Disassembly and Assembly

INFOID:000000005929048

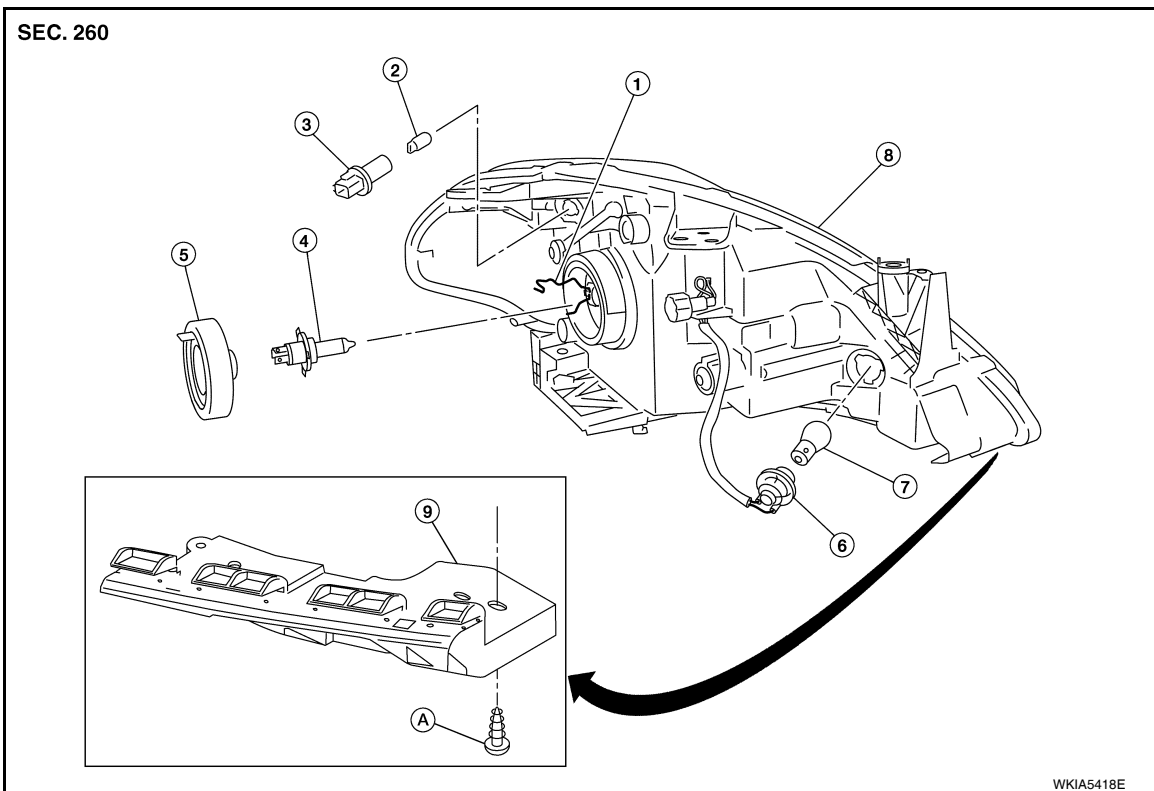

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

LT

HEADLAMP (FOR USA)

< SERVICE INFORMATION >

- | | | |
|-------------------------------------|------------------------------------|---------------------------------------|
| 1. Retaining spring | 2. Parking lamp bulb | 3. Parking lamp bulb socket |
| 4. Halogen headlamp bulb (High/Low) | 5. Headlamp bulb back cover | 6. Front turn signal lamp bulb socket |
| 7. Front turn signal lamp bulb | 8. Front combination lamp assembly | 9. Bumper stay |
| A. Screw | | |

DISASSEMBLY

1. Remove headlamp bulb back cover.
2. Unlock retaining spring and remove headlamp bulb (High/Low).
3. Turn parking lamp bulb socket counterclockwise and unlock it.
4. Remove parking lamp bulb from its socket.
5. Turn front turn signal lamp bulb socket counterclockwise and unlock it.
6. Remove front turn signal lamp bulb from its socket.
7. Remove the bumper stay.

ASSEMBLY

Assembly is in the reverse order of disassembly.

CAUTION:

- **After installing bulb, be sure to install plastic cap securely to insure water tight seal.**


HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

< SERVICE INFORMATION >

HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

Component Parts and Harness Connector Location

INFOID:000000005929049

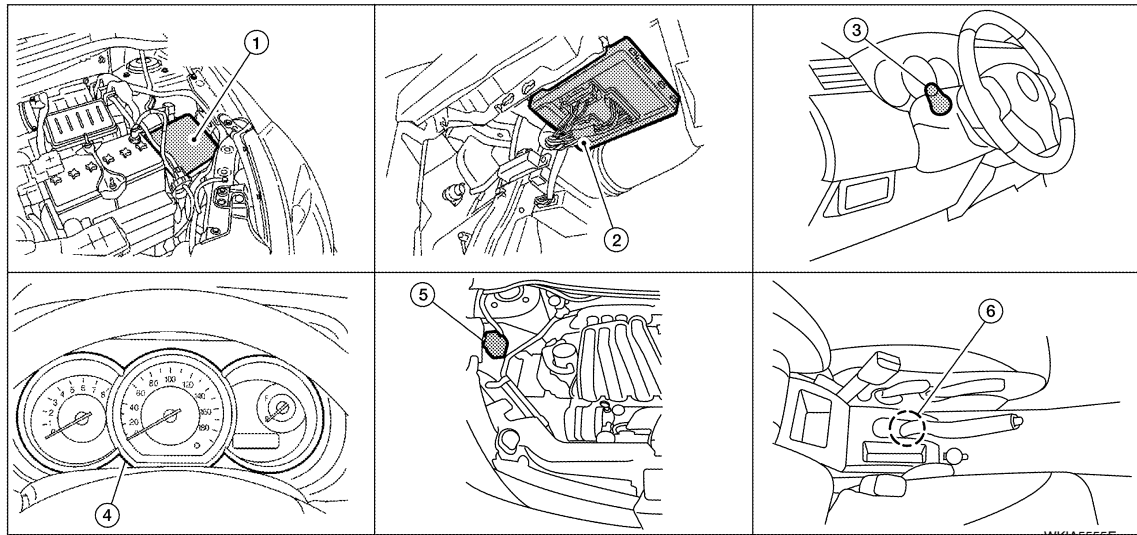

- | | | |
|-----------------------------------|--|---|
| 1. IPDM E/R E43, E46, E47 and E48 | 2. BCM M18 and M20 (view with glove box removed) | 3. Combination switch (lighting and turn signal switch) M28 |
| 4. Combination meter M24 | 5. Daytime light relay 1 E37 and daytime light relay 2 E38 | 6. Parking brake switch M17 |

System Description

INFOID:000000005929050

Headlamp operation is controlled by the BCM (body control module) based on inputs from the combination switch (lighting and turn signal switch). When the lighting switch is placed in the 2ND position, the BCM receives an input signal requesting the headlamps (and tail lamps) illuminate. The request is then communicated to the IPDM E/R (intelligent power distribution module engine room) via the CAN communication lines. The CPU (central processing unit) located in the IPDM E/R controls ground for the headlamp high and headlamp low relay coils. These relays direct power to the respective headlamps, which then illuminate. When the headlamp switch is OFF or in the 1ST position (parking lamps ON), the parking brake is released and the engine is running, the IPDM E/R de-energizes the headlamp relays and supplies ground to the daytime light relay 1 to actuate the daytime light function.

OUTLINE

Power is supplied at all times

- to headlamp high relay RH and LH (located in IPDM E/R)
- to headlamp low relay (located in IPDM E/R) and
- to ignition relay (located in IPDM E/R)
- through 15A fuse (No. 52, located in IPDM E/R) and
- through 20A fuse (No. 53, located in IPDM E/R)
- to CPU located in IPDM E/R,
- through 40A fusible link (letter **g**, located in fuse and fusible link box)
- to BCM terminal 70,
- through 10A fuse [No. 8, located in fuse block (J/B)]
- to BCM terminal 57,
- through 10A fuse [No. 13, located in fuse block (J/B)]
- to combination meter terminal 27,
- through 10A fuse (No. 26, located in fuse and fusible link box)
- to the daytime light relay 1.

With the ignition switch in the ON or START position, power is supplied

- to the ignition relay (located in IPDM E/R),
- through 10A fuse [No. 6, located in fuse block (J/B)]
- to BCM terminal 38,

HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

< SERVICE INFORMATION >

- through 10A fuse [No. 3, located in fuse block (J/B)]
- to combination meter terminal 28.

With the ignition switch in the ACC or ON position, power is supplied

- through 10A fuse [No. 20, located in fuse block (J/B)]
- to BCM terminal 11.

Ground is supplied

- to BCM terminal 67 and
- to combination meter terminals 21, 22 and 23
- through grounds M57 and M61,
- to IPDM E/R terminals 39 and 59
- through grounds E15 and E24,

HEADLAMP OPERATION

Low Beam Operation

With the lighting switch in 2ND position, the BCM receives an input signal requesting the headlamps to illuminate. This input signal is communicated to the IPDM E/R via the CAN communication lines. The CPU located in the IPDM E/R controls the headlamp low relay coil, which when energized, directs power

- through 15A fuse (No. 41, located in IPDM E/R)
- through IPDM E/R terminal 54
- to daytime light relay 2 terminals 1 and 5 (energizing the relay),
- through daytime light relay 2 terminal 3
- to front combination lamp RH terminal 3, and
- through 15A fuse (No. 40, located in IPDM E/R)
- through IPDM E/R terminal 52
- to front combination lamp LH terminal 3.

Ground is supplied

- to front combination lamp LH terminal 2
- through grounds E15 and E24,
- to headlamp RH terminal 2 via
- daytime light relay 1 terminals 3 and 4
- through grounds E15 and E24.

With power and ground supplied, low beam headlamps illuminate.

High Beam/Flash-to-Pass Operation

With the lighting switch in 2ND position and high beam switch in the HIGH position, the BCM receives input signal requesting the headlamp high beams to illuminate. The flash-to-pass feature can be used any time and also sends a signal to the BCM. This input signal is communicated to the IPDM E/R and the combination meter via the CAN communication lines. The CPU located in the IPDM E/R controls the headlamp high relay coil, which when energized, directs power

- through 10A fuse (No. 34, located in IPDM E/R)
- through IPDM E/R terminal 56
- to front combination lamp RH terminal 1, and
- through 10A fuse (No. 35, located in IPDM E/R)
- through IPDM E/R terminal 55
- to front combination lamp LH terminal 1.

Ground is supplied

- to front combination lamp LH terminal 2
- through grounds E15 and E24, and
- to front combination lamp RH terminal 2 via
- daytime light relay 1 terminals 3 and 4
- through grounds E15 and E24.

With power and ground supplied, the high beam headlamps illuminate.

The BCM sends a signal to the combination meter requesting the high beam indicator lamp to turn ON.

Daytime Light System Operation

With the lighting switch in the OFF or 1ST position (parking lamps ON), the BCM receives inputs requesting the headlights off. If the parking brake is released and the engine is running, the BCM then sends a signal, via the CAN communication lines, requesting the IPDM E/R to activate the daytime light system. The CPU located in the IPDM E/R controls the daytime light relay 1 coil, which when energized, directs power

- from daytime light relay 1 terminal 3
- to front combination lamp RH terminal 2,
- through front combination lamp RH high beam terminal 1

HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

< SERVICE INFORMATION >

- to IPDM E/R terminal 56,
- through 10A fuse (No. 34, located in IPDM E/R) and
- through both de-energized headlamp high relays
- to 10A fuse (No. 35, located in IPDM E/R),
- through IPDM E/R terminal 55
- to front combination lamp LH terminal high beam 1.

A

B

Ground is supplied

- to front combination lamp LH terminal 2
- through grounds E15 and E24,
- to daytime light relay 1 terminal 1
- through IPDM E/R terminal 6.

C

With power and ground supplied, high beam headlamps illuminate at reduced intensity.

D

COMBINATION SWITCH READING FUNCTION

Refer to [BCS-4, "System Description"](#) .

E

EXTERIOR LAMP BATTERY SAVER CONTROL

Refer to [LT-74, "System Description"](#) .

CAN Communication System Description

INFOID:000000005929051

F

Refer to [LAN-7, "System Description"](#) .

G

H

I

J

LT

L

M

N

O

P

HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -



< SERVICE INFORMATION >

Wiring Diagram - DTRL -

INFOID:000000005929053

LT-DTRL-01

— : DATA LINE

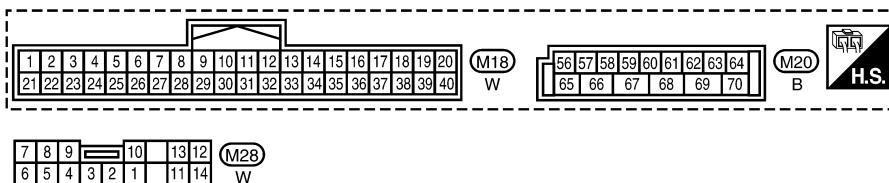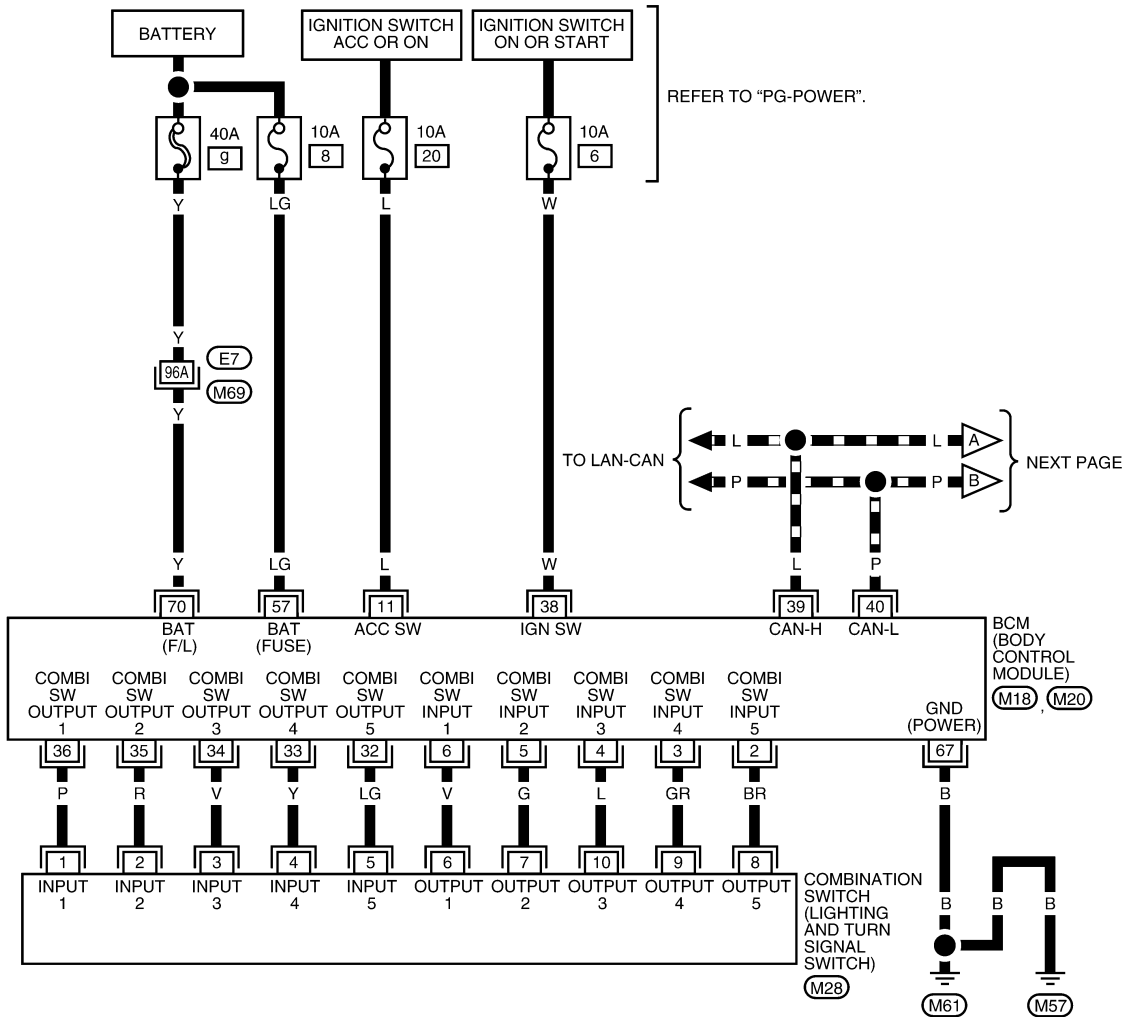


REFER TO THE FOLLOWING.
 (M69) - SUPER MULTIPLE JUNCTION (SMJ)


ABLWA1015GB

HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

< SERVICE INFORMATION >

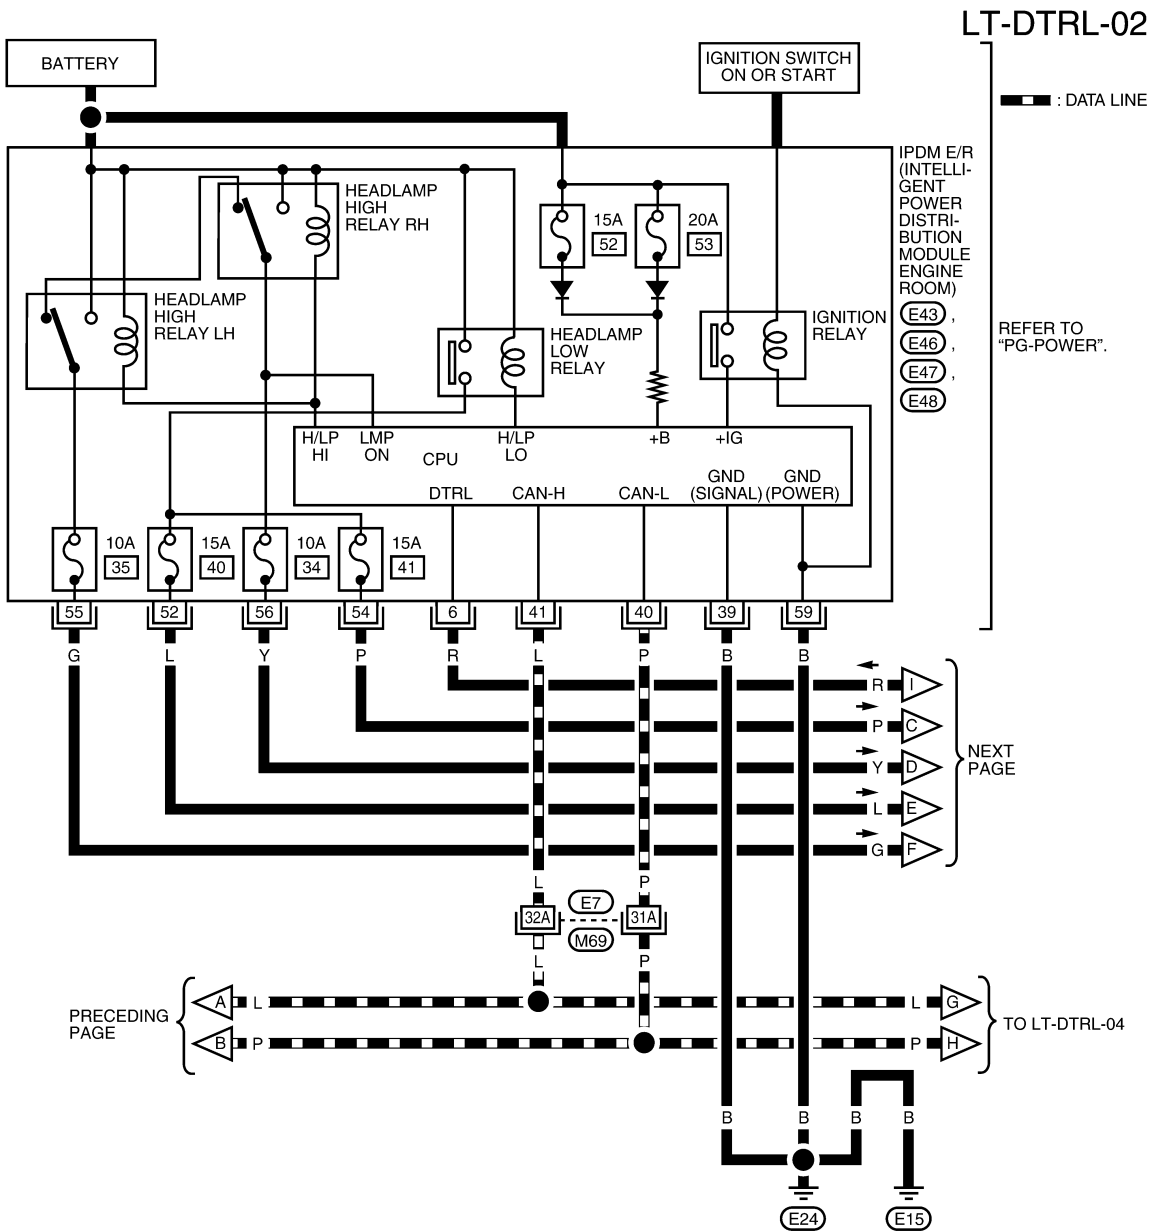

 REFER TO THE FOLLOWING.
 (M69) - SUPER MULTIPLE JUNCTION (SMJ)





LKWA0323E

HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

< SERVICE INFORMATION >

 LT-DTRL-03

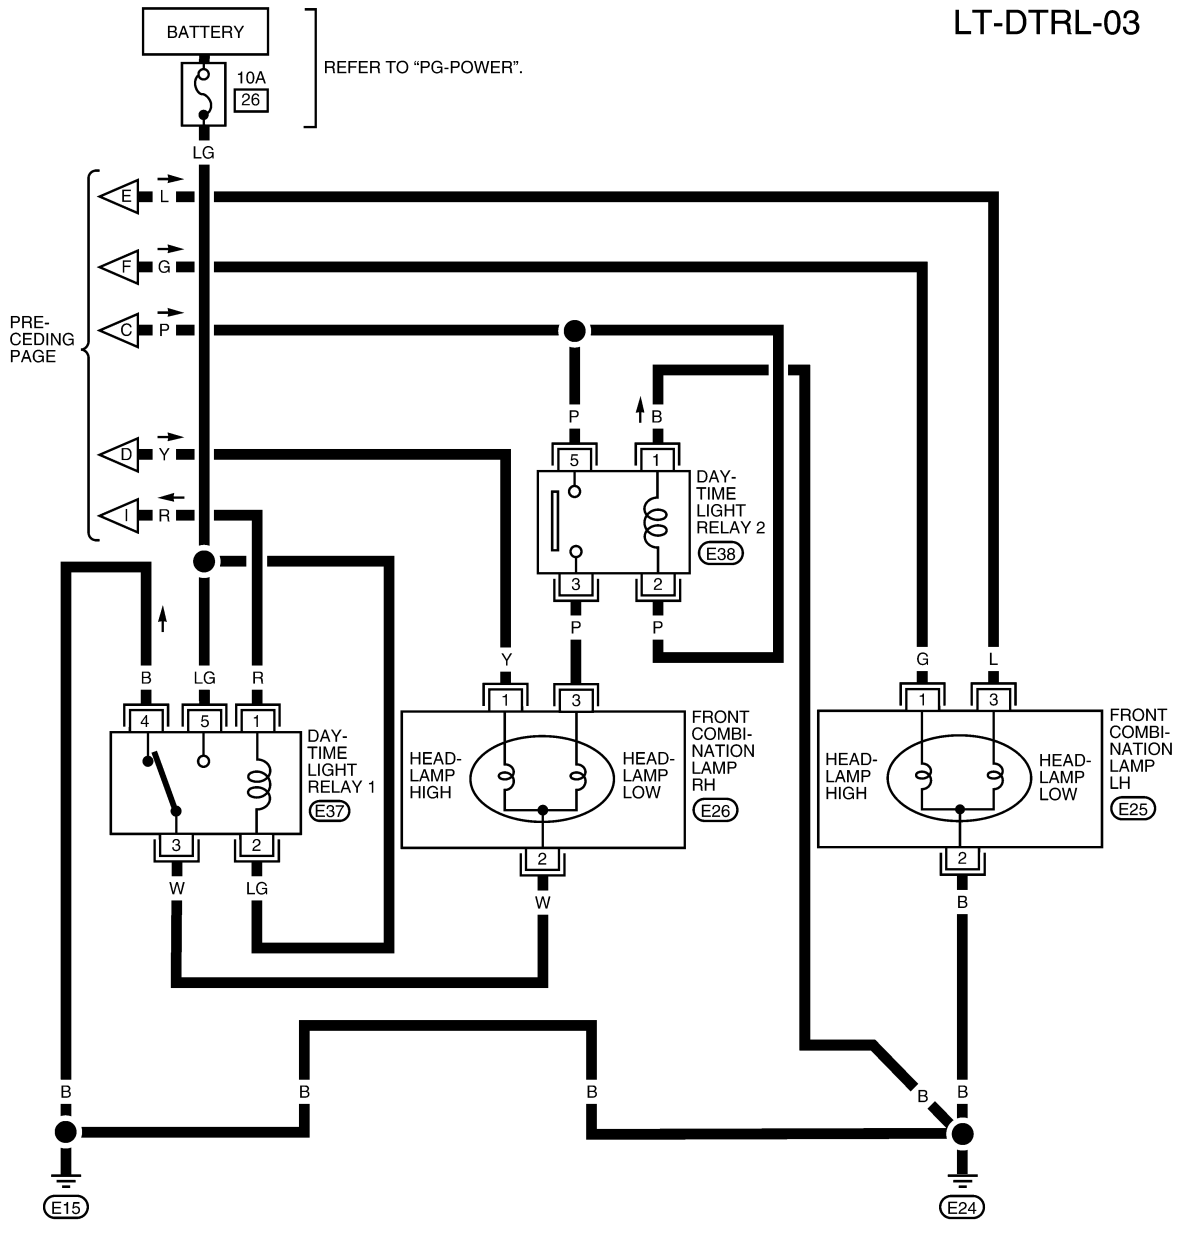

LKWA0324E

 

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

LT

HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

< SERVICE INFORMATION >

LT-DTRL-04

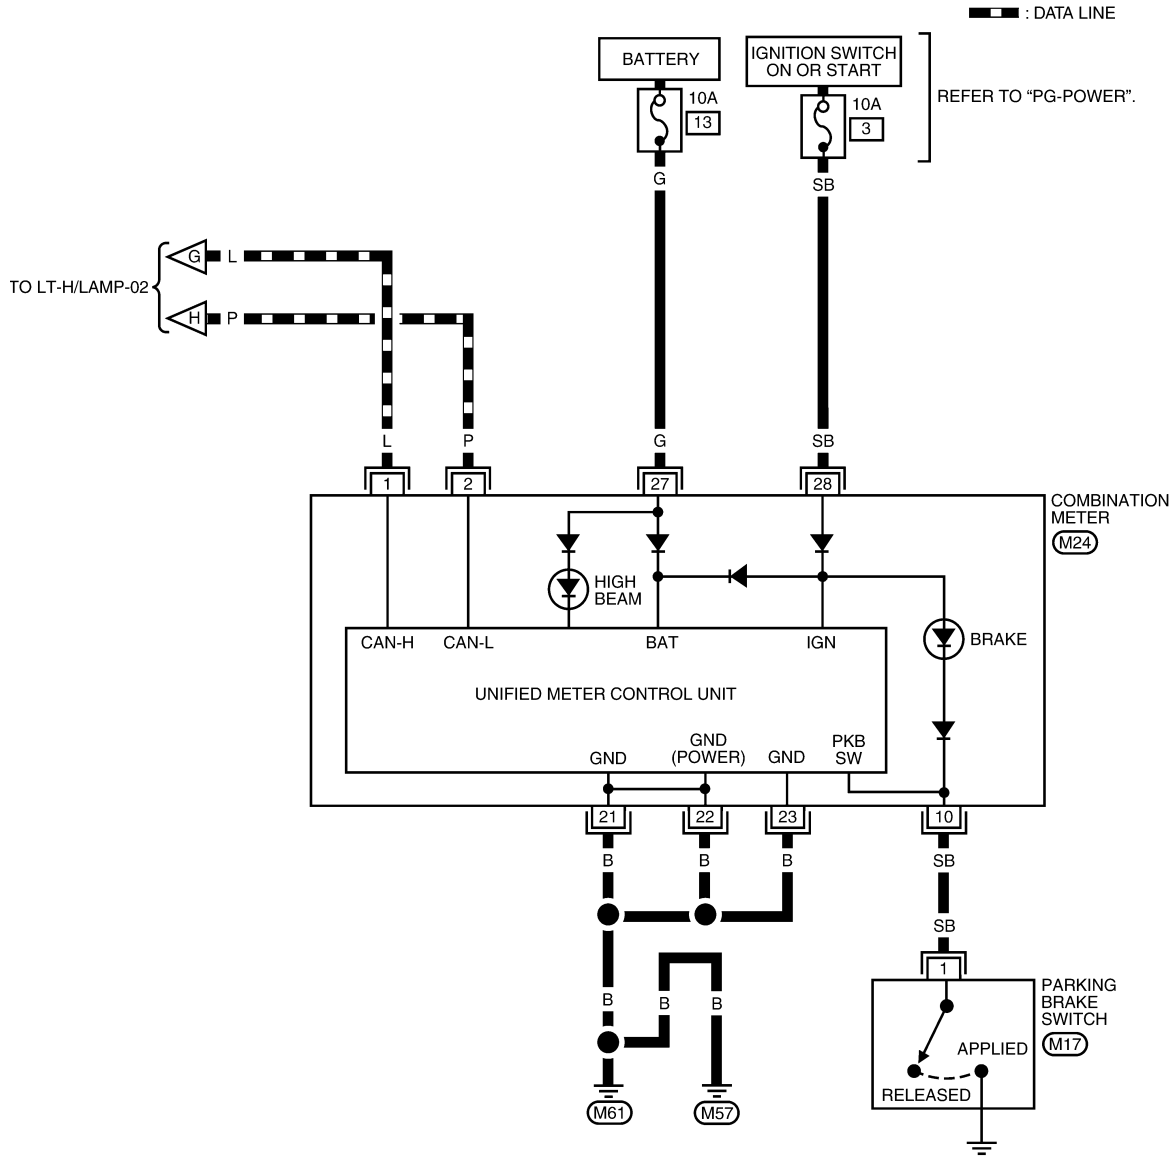

Terminal and Reference Value for BCM

Refer to [BCS-12, "Terminal and Reference Value for BCM"](#)

Terminal and Reference Value for IPDM E/R

Refer to [PG-25, "Terminal and Reference Value for IPDM E/R"](#).

LKWA0325E

INFOID:000000005929054

INFOID:000000005929055

HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

< SERVICE INFORMATION >

How to Perform Trouble Diagnosis

INFOID:000000005929056

1. Confirm the symptom or customer complaint.
2. Understand operation, description and function description. Refer to [LT-27. "System Description"](#) .
3. Perform the Preliminary Check. Refer to [LT-35. "Preliminary Check"](#) .
4. Check symptom and repair or replace the cause of the malfunction.
5. Does the daytime light system operate normally? If YES, GO TO 6. If NO, GO TO 4.
6. INSPECTION END

Preliminary Check

INFOID:000000005929057

CHECK BCM CONFIGURATION

1. CHECK BCM CONFIGURATION

Confirm BCM configuration for "DTRL" is set to "WITH". Refer to [BCS-19. "Configuration"](#) .

OK or NG

- OK >> Continue preliminary check. Refer to [BCS-16. "BCM Power Supply and Ground Circuit Inspection"](#) .
- NG >> Change BCM configuration for "DTRL" to "WITH". Refer to [BCS-19. "Configuration"](#) .

CHECK POWER SUPPLY AND GROUND CIRCUIT FOR BCM

Refer to [BCS-16. "BCM Power Supply and Ground Circuit Inspection"](#) .

CHECK POWER SUPPLY AND GROUND CIRCUIT FOR IPDM E/R

Refer to [PG-27. "IPDM E/R Power/Ground Circuit Inspection"](#) .

CONSULT-III Function (BCM)

INFOID:000000005929058

Refer to [LT-12. "CONSULT-III Function \(BCM\)"](#) .

CONSULT-III Function (IPDM E/R)

INFOID:000000005929059

Refer to [PG-18. "CONSULT-III Function \(IPDM E/R\)"](#) .

Daytime Light Control Does Not Operate Properly (High Beam Headlamps Operate Properly)

INFOID:000000005929060

1. CHECK DAYTIME LIGHT RELAY 1 FUSE

Inspect daytime light relay fuse 10A fuse (No. 26, located in the fuse and fusible link box).

OK or NG

- OK >> GO TO 2.
- NG >> Repair harness.

2. CHECK DAYTIME LIGHT RELAY 1 POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Remove daytime light relay 1.
3. Check voltage between daytime light relay 1 harness connector E37 terminals 2, 5 and ground.


2, 5 - Ground : Battery voltage should exist.

OK or NG

- OK >> GO TO 3.
- NG >> Repair harness or connector.

3. CHECK DAYTIME LIGHT RELAY 1

1. Apply battery voltage to daytime light relay 1 terminal 2 and supply ground to terminal 1.

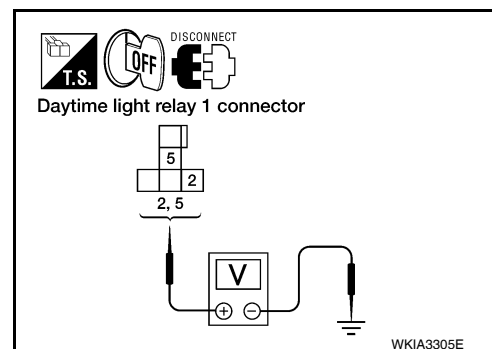

HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -


< SERVICE INFORMATION >

2. Check continuity between terminals 3 and 5.

3 - 5 : Continuity should exist.

OK or NG

- OK >> GO TO 4.
- NG >> Replace daytime light relay 1.

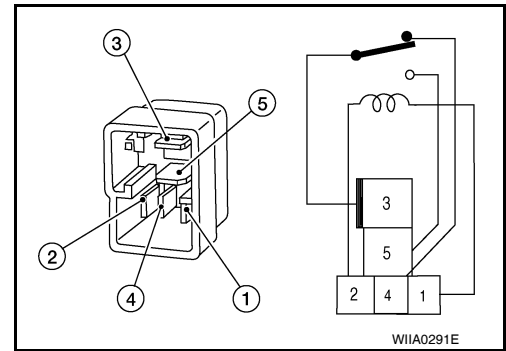

4. CHECK INPUT SIGNAL

1. Connect daytime light relay 1.
2. Apply parking brake and start engine. Headlamp switch OFF.
3. Select "IPDM E/R" on CONSULT-III. With DATA MONITOR, make sure "DTRL REQ" turns OFF-ON linked with operation of parking brake switch.

Parking brake ON : DTRL REQ OFF

Parking brake OFF : DTRL REQ ON

OK or NG

- OK >> GO TO 6.
- NG >> GO TO 5.

5. CHECKING CAN COMMUNICATIONS

Select "BCM" on CONSULT-III and perform self-diagnosis for BCM.

Displayed self-diagnosis results

- NO DTC >> Replace BCM. Refer to [BCS-19. "Removal and Installation of BCM"](#).
- CAN COMM CIRCUIT >> Check BCM CAN communication system. Refer to [LAN-17. "Trouble Diagnosis Flow Chart"](#).


6. CHECK DAYTIME LIGHT RELAY 1 CONTROL CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect daytime light relay 1 connector E37.
3. Disconnect IPDM E/R connector E43.
4. Check continuity between IPDM E/R connector E43 (A) terminal 6 and daytime light relay 1 connector E37 (B) terminal 1.

A		B		Continuity
Connector	Terminal	Connector	Terminal	
E43	6	E37	1	Yes

OK or NG

- OK >> Replace the IPDM E/R. Refer to [PG-28. "Removal and Installation of IPDM E/R"](#).
- NG >> Repair harness or connector.

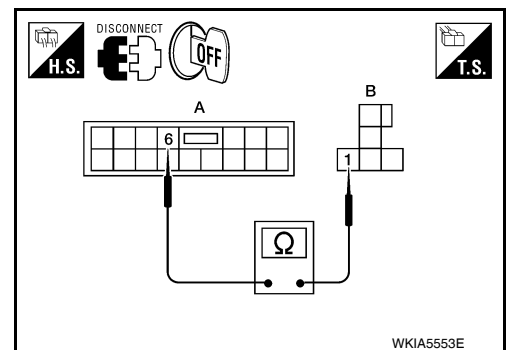


HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

< SERVICE INFORMATION >

Aiming Adjustment

INFOID:000000005929061

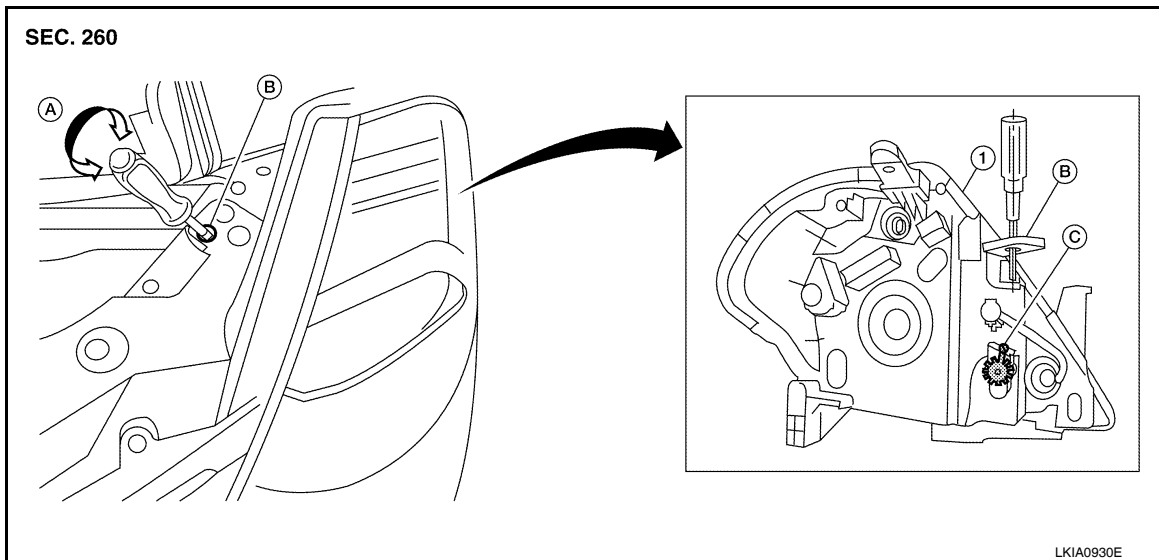

- 1. Headlamp
- A. Inner and outer adjustment
- B. Adjusting screw access hole
- C. Adjusting screw

PREPARATION BEFORE ADJUSTING

Before performing aiming adjustment, check the following.

1. Keep all tires inflated to correct pressures.
2. Place vehicle on level surface.
3. Set that there is no-load in vehicle other than the driver (or equivalent weight placed in driver's position). Coolant, engine oil filled up to correct level and full fuel tank, spare tire, jack and tools are properly stowed.

LOW BEAM AND HIGH BEAM


1. Turn headlamp low beam ON.
2. Use adjusting screw to perform aiming adjustment.
3. Insert the tool through the adjusting screw access hole to avoid damage to the adjusting screw.

ADJUSTMENT USING AN ADJUSTMENT SCREEN (LIGHT/DARK BORDERLINE)

A
B
C
D
E
F
G
H
I
J
LT
L
M
N
O
P

HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

< SERVICE INFORMATION >

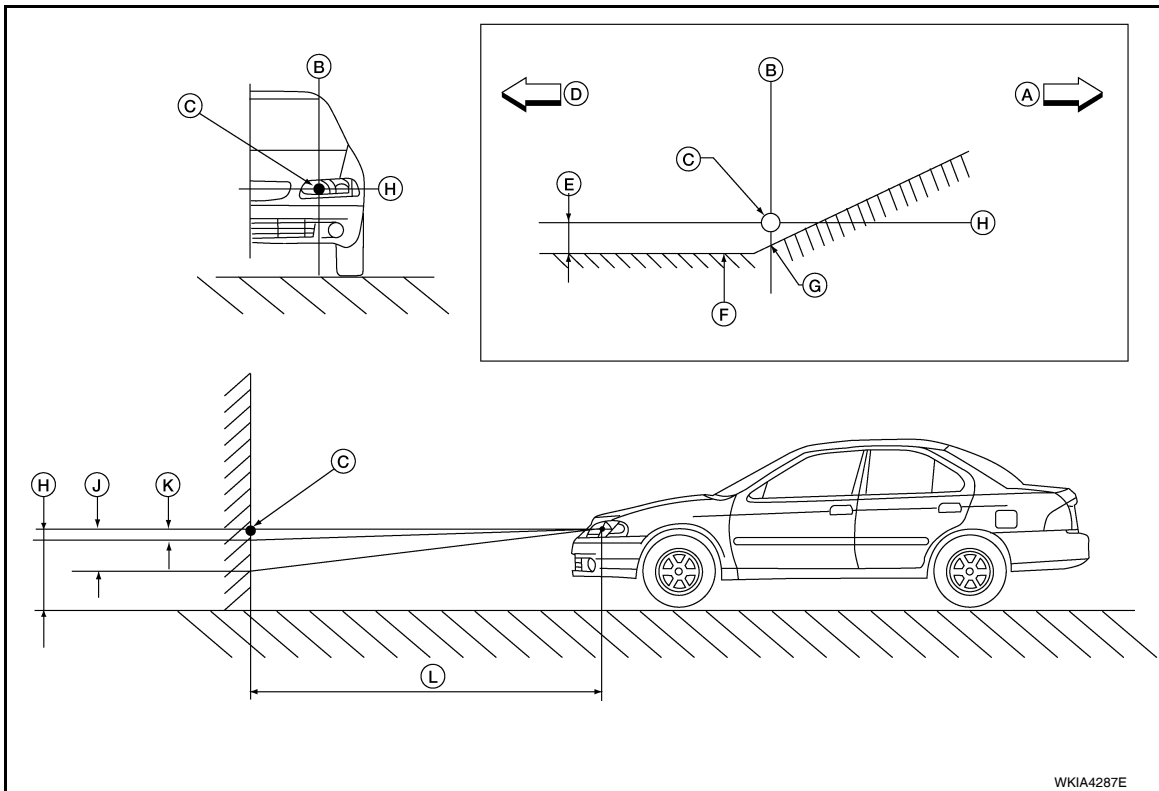

WKIA4287E

A.	Right	B.	Vertical center line of headlamp	C.	Horizontal and vertical aiming center point of headlamp
D.	Left	E.	Vertical aiming cutoff point	F.	Cutoff line for vertical aiming evaluation
G.	Acceptable vertical cutoff setting at horizontal aiming point	H.	Horizontal center line of headlamp	J.	Maximum acceptable vertical aiming point
K.	Minimum acceptable vertical aiming point	L.	Aiming distance from center of headlamp to aiming screen		

- Aim each headlamp individually and ensure other headlamp beam pattern is blocked from screen.
- For vertical headlamp aiming, adjust headlamp until beam pattern is positioned per specified dimensions.

Description	Halogen Headlamp
Vertical aiming cutoff point (E)	53.2 mm (2.094 in)
Minimum acceptable vertical aiming point (K)	13.3 mm (0.52 in)
Maximum acceptable vertical aiming point (J)	93.1 mm (3.67 in)
Aiming distance from center of headlamp to aiming screen (L)	7.62 m (25 ft)

Bulb Replacement

INFOID:000000005929062

CAUTION:

After installing bulb, be sure to install plastic cap and bulb socket securely to ensure watertightness.

HEADLAMP (HIGH/LOW)

1. Turn lighting switch OFF.
2. Disconnect headlamp bulb connector.
3. Remove headlamp bulb back cover.
4. Unlock retaining spring and remove bulb from front combination lamp assembly.

PARKING LAMP

1. Turn lighting switch OFF.

HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

< SERVICE INFORMATION >

2. Turn bulb socket counterclockwise and unlock from front combination lamp assembly.
3. Remove bulb from its socket.

FRONT TURN SIGNAL LAMP


1. Turn lighting switch OFF.
2. Turn bulb socket counterclockwise and unlock from front combination lamp assembly.
3. Remove bulb from its socket.

Removal and Installation

INFOID:000000005929063

REMOVAL

1. Disconnect the negative battery terminal.
2. Remove front bumper fascia. Refer to [EI-15](#).
3. Remove front combination lamp assembly bolts (A).
4. Pull front combination lamp assembly (1) toward the vehicle front, disconnect connector, and remove assembly.

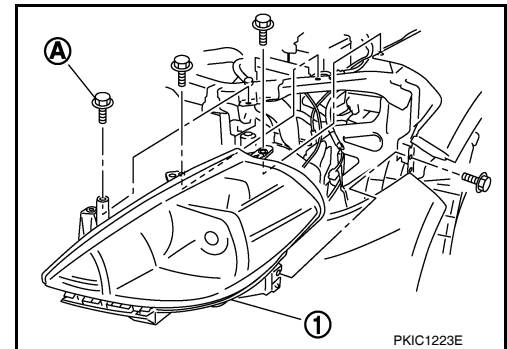


INSTALLATION

Installation is in the reverse order of removal.

- After installation, perform aiming adjustment. Refer to [LT-37, "Aiming Adjustment"](#).

Disassembly and Assembly

INFOID:000000005929064

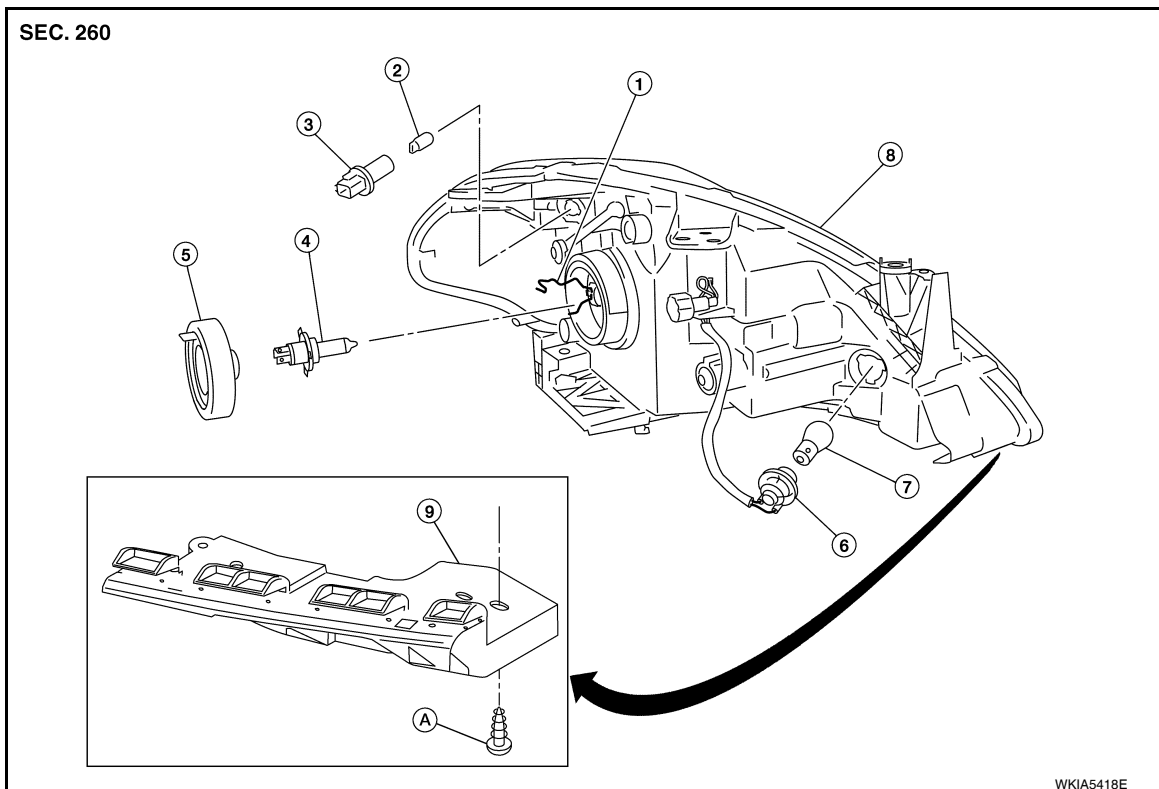

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

LT

HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

< SERVICE INFORMATION >

- | | | |
|-------------------------------------|------------------------------------|---------------------------------------|
| 1. Retaining spring | 2. Parking lamp bulb | 3. Parking lamp bulb socket |
| 4. Halogen headlamp bulb (High/Low) | 5. Headlamp bulb back cover | 6. Front turn signal lamp bulb socket |
| 7. Front turn signal lamp bulb | 8. Front combination lamp assembly | 9. Bumper stay |
| A. Screw | | |

DISASSEMBLY

1. Remove back cover.
2. Unlock retaining spring and remove bulb (High/Low).
3. Turn parking (clearance) lamp bulb socket counterclockwise and unlock it.
4. Remove parking (clearance) lamp bulb from its socket.
5. Turn front turn signal lamp bulb socket counterclockwise and unlock it.
6. Remove front turn signal lamp bulb from its socket.
7. Remove the bumper stay.

ASSEMBLY

Assembly is in the reverse order of disassembly.

CAUTION:

- **After installing bulb, be sure to install plastic cap securely to insure water tight seal.**


FRONT FOG LAMP

< SERVICE INFORMATION >

FRONT FOG LAMP

Component Parts and Harness Connector Location

INFOID:000000005929065

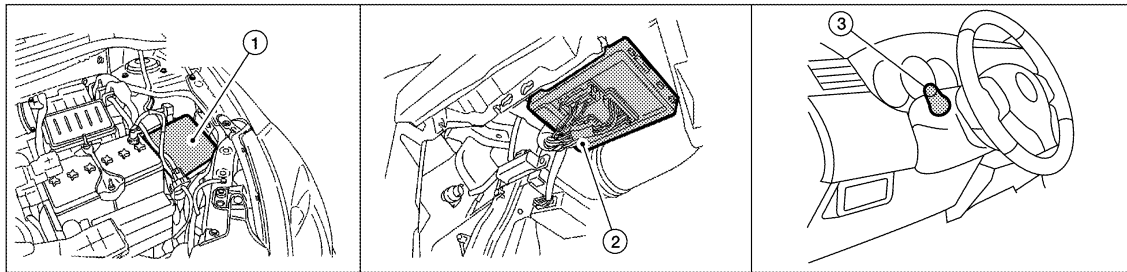

1. IPDM E/R E46, E47 and E48

2. BCM M18 and M20 (viewed with glove box removed)

3. Combination switch (lighting and turn signal switch) M28

System Description

INFOID:000000005929066

The front fog lamps are controlled by lighting switch inputs to the BCM (body control module). The lighting switch must be in the 1ST or 2ND position with the high beams OFF before the BCM will request the IPDM E/R (intelligent power distribution module engine room) to turn the front fog lamps on. The BCM requests the front fog lamps over the CAN communication lines to the IPDM E/R. The CPU (central processing unit) of the IPDM E/R controls the front fog lamp relay coil ground. When energized, the relay directs power to the front fog lamps.

OUTLINE

Power is supplied at all times:

- to front fog lamp relay (located in IPDM E/R),
- to ignition relay (located in IPDM E/R),
- through 15A fuse (No. 52, located in IPDM E/R) and
- through 20A fuse (No. 53, located in IPDM E/R)
- to CPU located in IPDM E/R,
- through 40A fusible link (letter **g**, located in the fuse and fusible link box)
- to BCM terminal 70,
- through 10A fuse [No. 8, located in fuse block (J/B)]
- to BCM terminal 57,
- through 10A fuse [No. 13, located in fuse block (J/B)]
- to combination meter terminal 27.

With the ignition switch in the ON or START position, power is supplied:

- to ignition relay (located in IPDM E/R),
- through 10A fuse [No. 6, located in fuse block (J/B)]
- to BCM terminal 38.

With the ignition switch in the ACC or ON position, power is supplied

- through 10A fuse [No. 20, located in fuse block (J/B)]
- to BCM terminal 11.

Ground is supplied

- to BCM terminal 67
- through grounds M57 and M61,
- to IPDM E/R terminals 39 and 59
- through grounds E15 and E24.

FOG LAMP OPERATION

The front fog lamp switch is built into the lighting switch. The lighting switch must be in 1ST position or 2ND position and front fog lamp switch must be ON position for front fog lamp operation. The fog lamp will not operate with the high beam headlamps ON.

When the front fog lamp switch is in the ON position, the BCM sends a request, via the CAN communication lines, to the CPU of the IPDM E/R to ground the coil side of the front fog lamp relay. The front fog lamp relay then directs power

- through 15A fuse (No. 56, located in IPDM E/R)

A
B
C
D
E
F
G
H
I
J
LT
L
M
N
O
P

FRONT FOG LAMP

< SERVICE INFORMATION >

- through IPDM E/R terminal 50
- to front fog lamp LH terminal 1, and
- through IPDM E/R terminal 51
- to front fog lamp RH terminal 1.

Ground is supplied

- to front fog lamp terminal 2,
- through grounds E15 and E24.

With power and grounds supplied, front fog lamps illuminate.

COMBINATION SWITCH READING FUNCTION

Refer to [BCS-4. "System Description"](#) .

EXTERIOR LAMP BATTERY SAVER CONTROL

Refer to [LT-74. "System Description"](#) .

CAN Communication System Description

INFOID:000000005929067

Refer to [LAN-7. "System Description"](#) .

FRONT FOG LAMP



< SERVICE INFORMATION >

Wiring Diagram - F/FOG -

INFOID:000000005929068

LT-F/FOG-01

DATA LINE

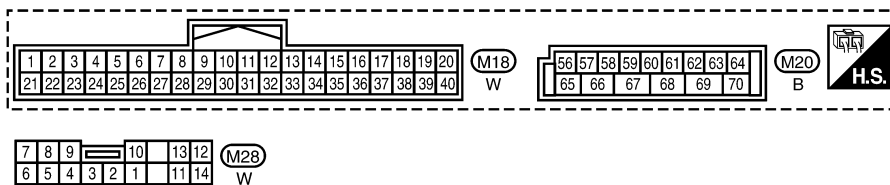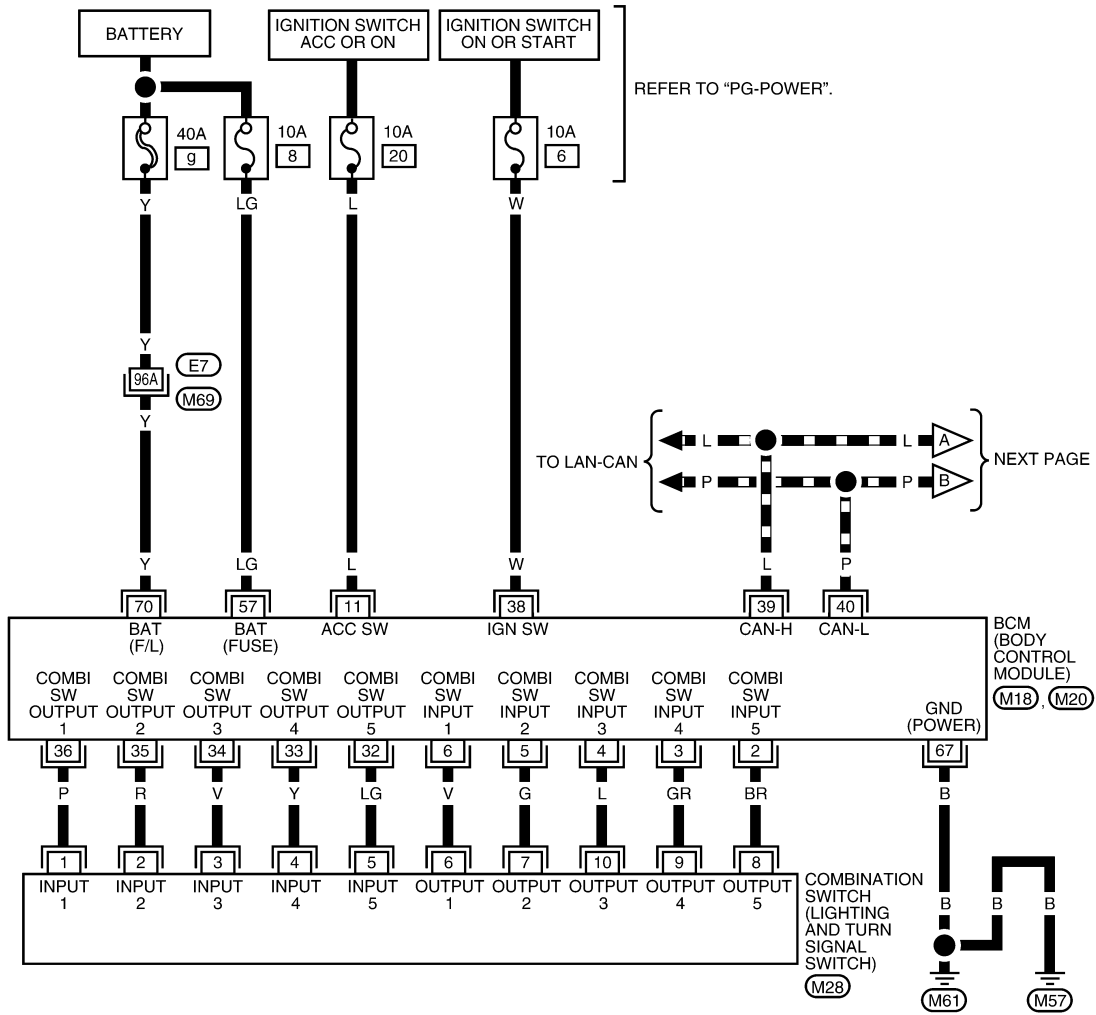



REFER TO THE FOLLOWING.
(M69) - SUPER MULTIPLE JUNCTION (SMJ)

ABLWA1016GB

FRONT FOG LAMP

< SERVICE INFORMATION >

 LT-F/FOG-02

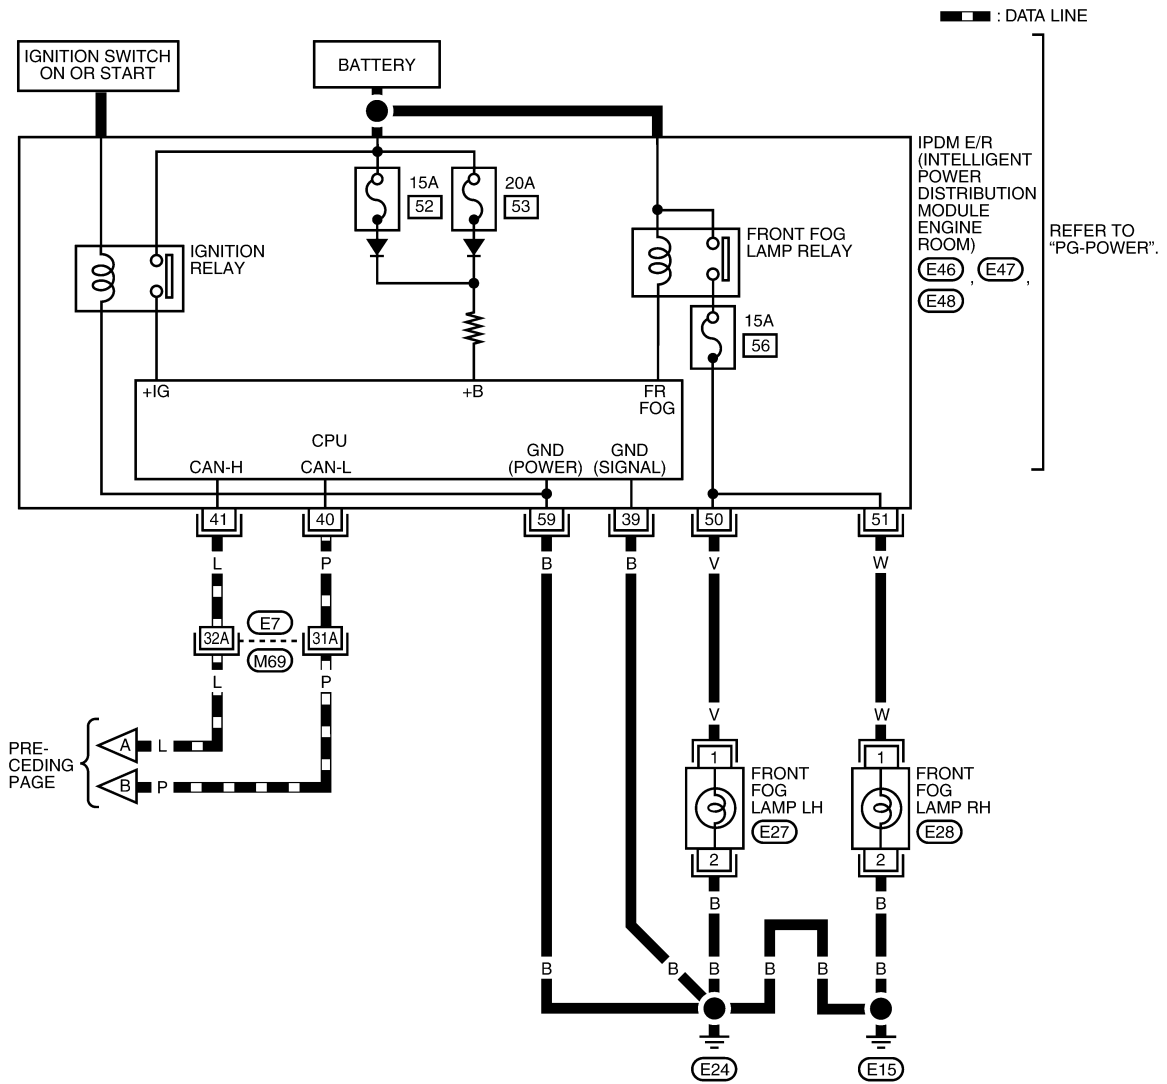

REFER TO THE FOLLOWING.
 (M69) - SUPER MULTIPLE JUNCTION (SMJ)

LKWA0327E

Terminal and Reference Value for BCM

INFOID:000000005929069

Refer to [BCS-12. "Terminal and Reference Value for BCM"](#) .

Terminal and Reference Value for IPDM E/R

INFOID:000000005929070

Refer to [PG-25. "Terminal and Reference Value for IPDM E/R"](#) .

FRONT FOG LAMP

< SERVICE INFORMATION >

How to Proceed with Trouble Diagnosis

INFOID:000000005929071

1. Confirm the symptom or customer complaint.
2. Understand operation description and function description. Refer to [LT-41, "System Description"](#) .
3. Perform the Preliminary Check. Refer to [LT-45, "Preliminary Check"](#) .
4. Check symptom and repair or replace the cause of the malfunction.
5. Do the front fog lamps operate normally? If YES, GO TO 6. If NO, GO TO 4.
6. INSPECTION END.

Preliminary Check

INFOID:000000005929072

CHECK POWER SUPPLY AND GROUND CIRCUIT FOR BCM

Refer to [BCS-16, "BCM Power Supply and Ground Circuit Inspection"](#) .

CHECK POWER SUPPLY AND GROUND CIRCUIT FOR IPDM E/R

Refer to [PG-27, "IPDM E/R Power/Ground Circuit Inspection"](#) .

CONSULT-III Function (BCM)

INFOID:000000005929073

Refer to [BCS-17, "CONSULT-III Function \(BCM\)"](#) .

CONSULT-III Function (IPDM E/R)

INFOID:000000005929074

Refer to [PG-18, "CONSULT-III Function \(IPDM E/R\)"](#) .

Front Fog lamps Do Not Illuminate (Both Sides)

INFOID:000000005929075

1. INSPECT FOG LAMP FUSE

Inspect fog lamp 15A fuse No. 56 in IPDM E/R.

OK or NG

- OK >> GO TO 2.
- NG >> Repair harness.

2. CHECK COMBINATION SWITCH (LIGHTING AND TURN SIGNAL SWITCH) INPUT SIGNAL

1. Select "BCM" on CONSULT-III. Select "HEAD LAMP" on "SELECT TEST ITEM" screen.
2. Select "DATA MONITOR" on "SELECT DIAG MODE" screen. Make sure that "FR FOG SW" turns ON-OFF linked with operation of fog lamp switch.

When fog lamp switch is ON : FR FOG SW ON

With CONSULT-III
Select "BCM" on CONSULT-III. With "HEAD LAMP" data monitor, make sure "FR FOG SW" turns ON-OFF linked with operation of front fog lamp switch.

Without CONSULT-III
Refer to [LT-65, "Combination Switch Inspection"](#) .

OK or NG

- OK >> GO TO 3.
- NG >> Check combination switch (lighting and turn signal switch). Refer to [LT-65, "Combination Switch Inspection"](#) .

3. FOG LAMP ACTIVE TEST

- With CONSULT-III
1. Select "IPDM E/R" on CONSULT-III. Select "ACTIVE TEST" on "SELECT DIAG MODE" screen.
 2. Select "EXTERNAL LAMPS" on "SELECT TEST ITEM" screen.
 3. Touch "FOG" screen.
 4. Make sure front fog lamp operates.

Front fog lamp should operate.

FRONT FOG LAMP

< SERVICE INFORMATION >

⊗ Without CONSULT-III

1. Start auto active test. Refer to [PG-20, "Auto Active Test"](#) .
2. Make sure front fog lamp operates.

Front fog lamp should operate.

OK or NG

- OK >> GO TO 4.
 NG >> GO TO 5.

4.CHECK IPDM E/R

1. Select "IPDM E/R" on CONSULT-III. Select "DATA MONITOR" on "SELECT DIAG MODE" screen.
2. Make sure "FR FOG REQ" turns ON when front fog lamp switch is in ON position.

**When front fog lamp switch : FR FOG REQ ON
 is ON position**

OK or NG


- OK >> Replace IPDM E/R. Refer to [PG-28, "Removal and Installation of IPDM E/R"](#) .
 NG >> Replace BCM. Refer to [BCS-19, "Removal and Installation of BCM"](#) .

5.CHECK FOG LAMP INPUT SIGNAL

Ⓟ With CONSULT-III

1. Turn ignition switch OFF.
2. Disconnect front fog lamp connector.
3. Select "IPDM E/R" on CONSULT-III, and select "ACTIVE TEST" on "SELECT DIAG MODE" screen.
4. Select "EXTERNAL LAMPS" on "SELECT TEST ITEM" screen.
5. Touch "FOG" screen.
6. When front fog lamp relay is operating, check voltage between front fog lamp harness connector and ground.

(+)		Terminal	(-)	Voltage
Front fog lamp connector				
RH	E28	1	Ground	Battery voltage
LH	E27			

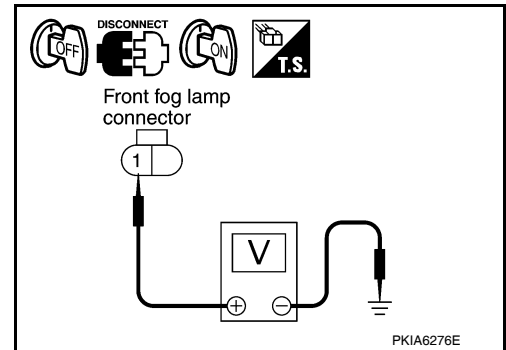

⊗ Without CONSULT-III

1. Turn ignition switch OFF.
2. Disconnect front fog lamp connector.
3. Start auto active test. Refer to [PG-20, "Auto Active Test"](#) .
4. When front fog lamp relay is operating, check voltage between front fog lamp harness connector and ground.

(+)		Terminal	(-)	Voltage
Front fog lamp connector				
RH	E28	1	Ground	Battery voltage
LH	E27			

OK or NG

- OK >> GO TO 7.
 NG >> GO TO 6.

6.CHECK FOG LAMP CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector.

FRONT FOG LAMP

< SERVICE INFORMATION >


3. Check continuity between IPDM E/R harness connector (A) and front fog lamp harness connector (B).

Circuit	A		B		Continuity
	Connector	Terminal	Connector	Terminal	
RH	E47	51	E28	1	Yes
LH		50	E27		

OK or NG

OK >> Replace IPDM E/R. Refer to [PG-28. "Removal and Installation of IPDM E/R"](#).

NG >> Repair harness or connector.

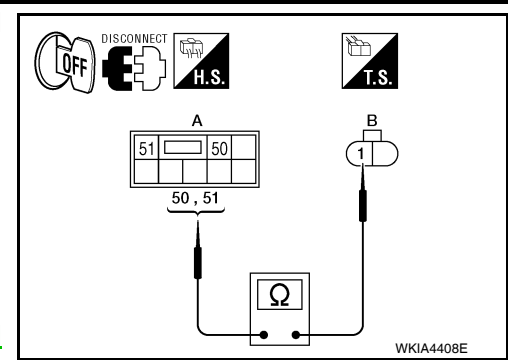

7. CHECK FOG LAMP GROUND


1. Check continuity between front fog lamp harness connector and ground.

Front fog lamp connector		Terminal	Ground	Continuity
RH	E28	2		Yes
LH	E27			

OK or NG

OK >> Check front fog lamp bulbs.

NG >> Repair harness or connector.

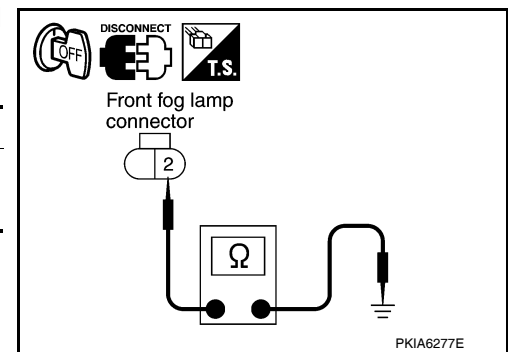

INFOID:000000005929076

Front Fog Lamp Does Not Illuminate (One Side)

1. CHECK BULB

Check bulb of lamp which does not illuminate.

OK or NG

OK >> GO TO 2.

NG >> Replace front fog lamp bulb.

2. CHECK FOG LAMP CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector and front fog lamp connector.
3. Check continuity between IPDM E/R harness connector (A) and front fog lamp harness connector (B).


Circuit	A		B		Continuity
	Connector	Terminal	Connector	Terminal	
RH	E47	51	E28	1	Yes
LH		50	E27		

OK or NG

OK >> GO TO 3.

NG >> Repair harness or connector.

3. CHECK FOG LAMP GROUND

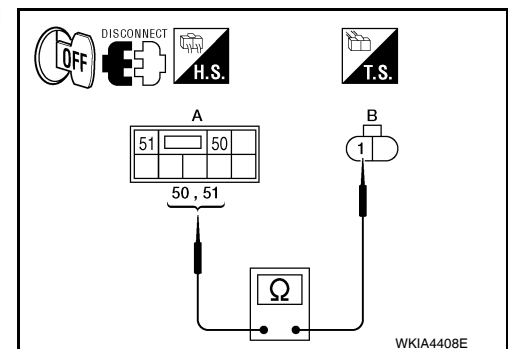

FRONT FOG LAMP


< SERVICE INFORMATION >

1. Check continuity between front fog lamp harness connector and ground.

Front fog lamp connector		Terminal	Ground	Continuity
RH	E28	2		Ground
LH	E27			

OK or NG

- OK >> Replace IPDM E/R. Refer to [PG-28. "Removal and Installation of IPDM E/R"](#).
- NG >> Repair harness or connector.

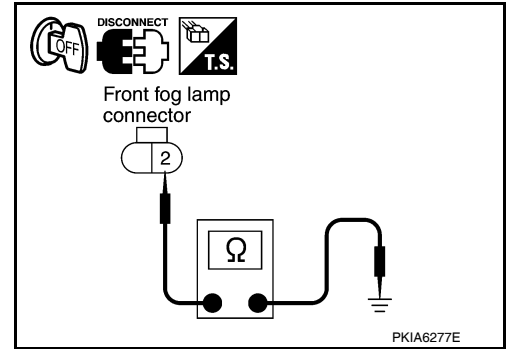


INFOID:000000005929077

Aiming Adjustment

The front fog lamp is a semi-sealed beam type which uses a replaceable halogen bulb. Before performing aiming adjustment, make sure of the following.

- Keep all tires inflated to correct pressure.
 - Place vehicle on level surface.
 - Set that there is no-load in vehicle other than the driver (or equivalent weight placed in driver's position).
Coolant, engine oil filled up to correct level and full fuel tank, spare tire, jack and tools are properly stowed.
- Adjust aiming in the vertical direction by turning the adjusting screw (A).

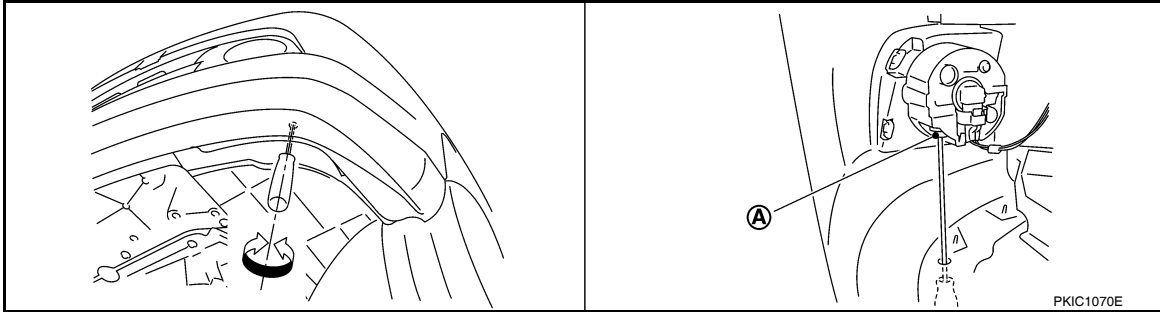


1. Set the distance (C) between the screen and the center of front fog lamp lens as shown.
 - Vertical center line of fog lamp (E).
2. Turn front fog lamps (1) to ON.
3. Adjust front fog lamps using adjusting screw so that the top edge of the high intensity zone (A) is as shown.

Aiming distance from center of fog lamp to screen (C)	10 m (32.8 ft)
Fog lamp beam width (D)	870 mm (34.3 in)
Distance from ground to bottom edge of high intensity zone (B)	220 mm (8.7 in)
Distance from bottom edge to top edge of high intensity zone (A)	21.75 mm (0.9 in)

NOTE:

When performing adjustment, if necessary, cover the headlamps and opposite front fog lamp.

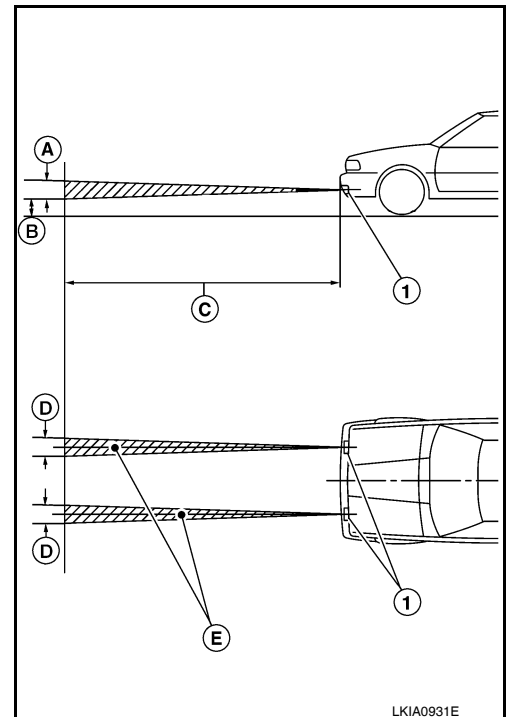


FRONT FOG LAMP

< SERVICE INFORMATION >

Bulb Replacement


INFOID:000000005929078

1. Turn lighting switch OFF.
2. Partially remove the fender protector (front) to obtain work space between the fender protector and fender.
3. Disconnect front fog lamp connector (1).
4. Turn bulb socket (2) counterclockwise unlock and remove it.
5. Remove bulb from its socket.

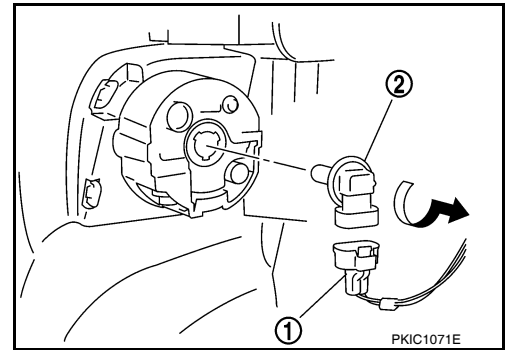

Removal and Installation

INFOID:000000005929079

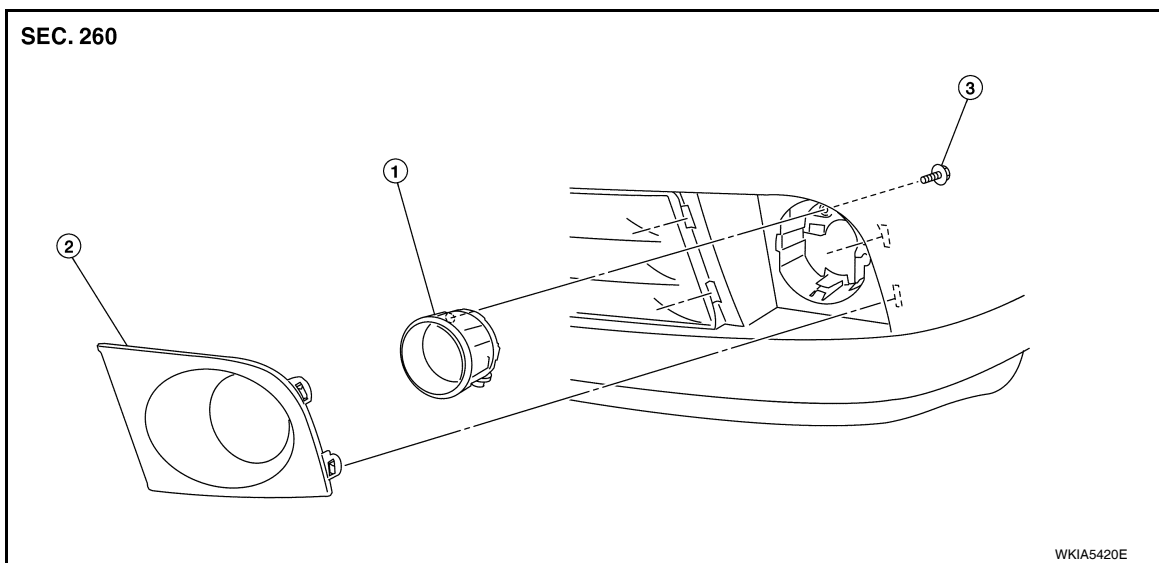

1. Front fog lamp

2. Front bumper finisher

3. Bolt

REMOVAL

1. Partially remove the fender protector and undercover to obtain work space between the fender protector and fender.
2. Disconnect front fog lamp connector.
3. Release the pawl, and remove the front bumper finisher from the front bumper.
4. Remove bolt and remove front fog lamp from bracket.

INSTALLATION

Installation is in the reverse order of removal.

A
B
C
D
E
F
G
H
I
J
LT
L
M
N
O
P


TURN SIGNAL AND HAZARD WARNING LAMPS

< SERVICE INFORMATION >

TURN SIGNAL AND HAZARD WARNING LAMPS

Component Parts and Harness Connector Location

INFOID:000000005929080

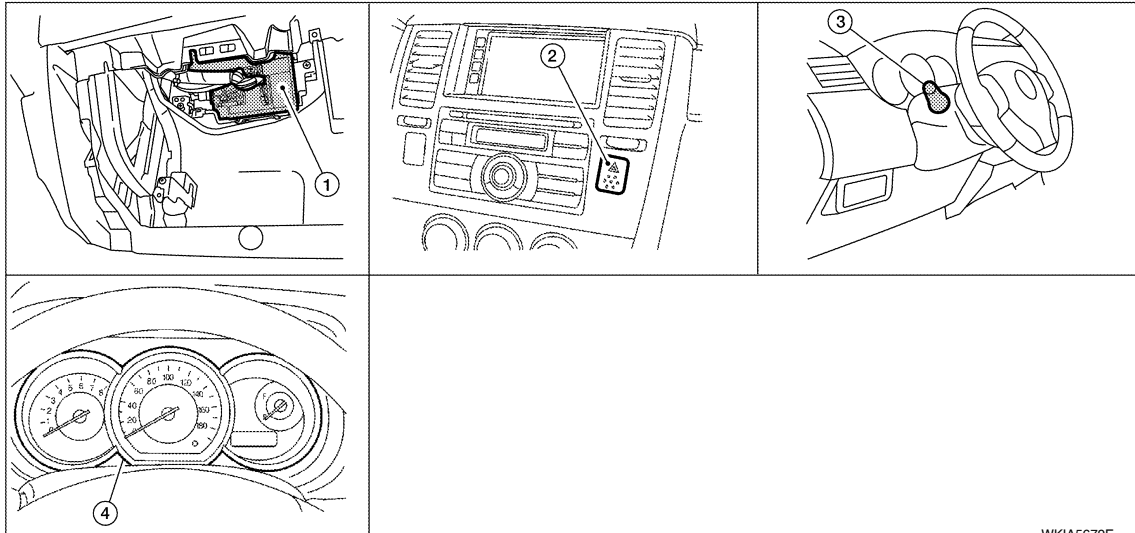

WKIA5679E

1. BCM M18 and M20 (view with glove box removed)
2. Hazard switch M55
3. Combination switch (lighting and turn signal switch) M28
4. Combination meter M24

System Description

INFOID:000000005929081

TURN SIGNAL OPERATION

Power is supplied at all times

- through 40A fusible link (letter **g**, located in the fuse and fusible link box)
- to BCM (body control module) terminal 70,
- through 10A fuse [No. 8, located in the fuse block (J/B)]
- to BCM terminal 57,
- through 10A fuse [No. 13, located in the fuse block (J/B)]
- to combination meter terminal 27.

With the ignition switch in the ON or START position, power is supplied

- through 10A fuse [No. 6, located in fuse block (J/B)]
- to BCM terminal 38,
- through 10A fuse [No. 3, located in fuse block (J/B)]
- to combination meter terminal 28.

With the ignition switch in the ACC or ON position, power is supplied

- through 10A fuse [No. 20, located in the fuse block (J/B)]
- to BCM terminal 11.

Ground is supplied

- to BCM terminal 67 and
- to combination meter terminals 21, 22 and 23
- through grounds M57 and M61.

LH Turn Signal Lamp

When the turn signal switch is moved to the left turn position, the BCM receives an input signal requesting left turn signals to flash. The BCM then supplies power

- through BCM terminal 60
- to front combination lamp LH terminal 4 and
- to rear combination lamp LH terminal 6.

Ground is supplied

- to front combination lamp LH terminal 5
- through grounds E15 and E24,
- to rear combination lamp LH terminal 1

TURN SIGNAL AND HAZARD WARNING LAMPS

< SERVICE INFORMATION >

- through grounds B7 and B19.

The BCM also sends a request, via the CAN communication lines, to the combination meter to flash the left turn signal indicator. The unified meter control unit in the combination meter supplies ground to the left turn signal indicator lamp and activates the audible turn signal indicator.

With power, ground and input supplied, the BCM controls the flashing of the turn signal lamps.

RH Turn Signal Lamp

When turn signal switch is moved to the right turn position, the BCM receives an input signal requesting right turn signals to flash. The BCM then supplies power

- through BCM terminal 61
- to front combination lamp RH terminal 4 and
- to rear combination lamp RH terminal 6.

Ground is supplied

- to front combination lamp RH terminal 5
- through grounds E15 and E24,
- to rear combination lamp RH terminal 1
- through grounds B117, B132 (all models) and D402 (with hatchback).

The BCM also sends a request, via the CAN communication lines, to the combination meter to flash the right turn signal indicator. The unified meter control unit in the combination meter supplies ground to the right turn signal indicator lamp and activates the audible turn signal indicator.

With power, ground and input supplied, the BCM controls the flashing of the turn signal lamps.

HAZARD LAMP OPERATION

Power is supplied at all times

- through 40A fusible link (letter **g** , located in fuse, fusible link and relay box)
- to BCM terminal 70,
- through 10A fuse [No. 8, located in fuse block (J/B)]
- to BCM terminal 57,
- through 10A fuse [No. 13, located in fuse block (J/B)]
- to combination meter terminal 27.

Ground is supplied

- to hazard switch terminal 1,
- to BCM terminal 67, and
- to combination meter terminals 21, 22 and 23
- through grounds M57 and M61.

When hazard switch is depressed, ground is supplied

- through hazard switch terminal 2
- to BCM terminal 29.

BCM then supplies power

- to front combination lamp LH terminal 4 and
- to rear combination lamp LH terminal 6
- through BCM terminal 60,
- to front combination lamp RH terminal 4 and
- to rear combination lamp RH terminal 6
- through BCM terminal 61.

Ground is supplied

- to front combination lamp LH and RH terminal 5
- through grounds E15 and E24,
- to rear combination lamp LH terminal 1
- through grounds B7 and B19,
- to rear combination lamp RH terminal 1
- through grounds B117, B132 and D402 (hatchback).

The BCM also supplies input to combination meter across the CAN communication lines. This input is processed by unified meter control unit in combination meter, which in turn supplies ground to the left and right turn signal indicator lamps.

With power and input supplied, BCM controls flashing of hazard warning lamps.

REMOTE KEYLESS ENTRY SYSTEM OPERATION

Power is supplied at all times

- through 40A fusible link (letter **g** , located in fuse, fusible link and relay box)
- to BCM terminal 70,
- through 10A fuse [No. 13, located in fuse block (J/B)]

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

LT

TURN SIGNAL AND HAZARD WARNING LAMPS

< SERVICE INFORMATION >

- to combination meter terminal 27.

Ground is supplied

- to BCM terminal 67 and
- to combination meter terminals 21, 22 and 23
- through grounds M57 and M61.

When the remote keyless entry system is triggered by input from the keyfob, the BCM supplies power

- through BCM terminal 60
- to front combination lamp LH terminal 4 and
- to rear combination lamp LH terminal 6,
- through BCM terminal 61
- to front turn signal lamp RH terminal 4 and
- to rear combination lamp RH terminal 6.

Ground is supplied

- to front combination lamp LH and RH terminals 5
- through grounds E15 and E24,
- to rear combination lamp LH terminal 1
- through grounds B7 and B19,
- to rear combination lamp RH terminal 1
- through grounds B117, B132 (all models) and D402 (with hatchback).

The BCM also supplies input to combination meter via the CAN communication lines. This input is processed by the unified meter control unit in combination meter, which in turn supplies ground to the left and right turn signal indicator lamps.

With power and ground supplied, BCM controls flashing of hazard warning lamps when keyfob is used to activate remote keyless entry system.

COMBINATION SWITCH READING FUNCTION

Refer to [BCS-4. "System Description"](#) .

CAN Communication System Description

INFOID:000000005929082

Refer to [LAN-7. "System Description"](#) .

TURN SIGNAL AND HAZARD WARNING LAMPS



< SERVICE INFORMATION >

Wiring Diagram - TURN -

INFOID:000000005929084

LT-TURN-01

▬ : DATA LINE

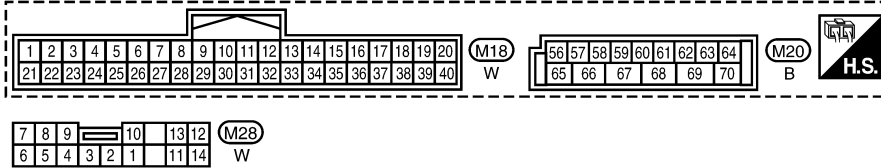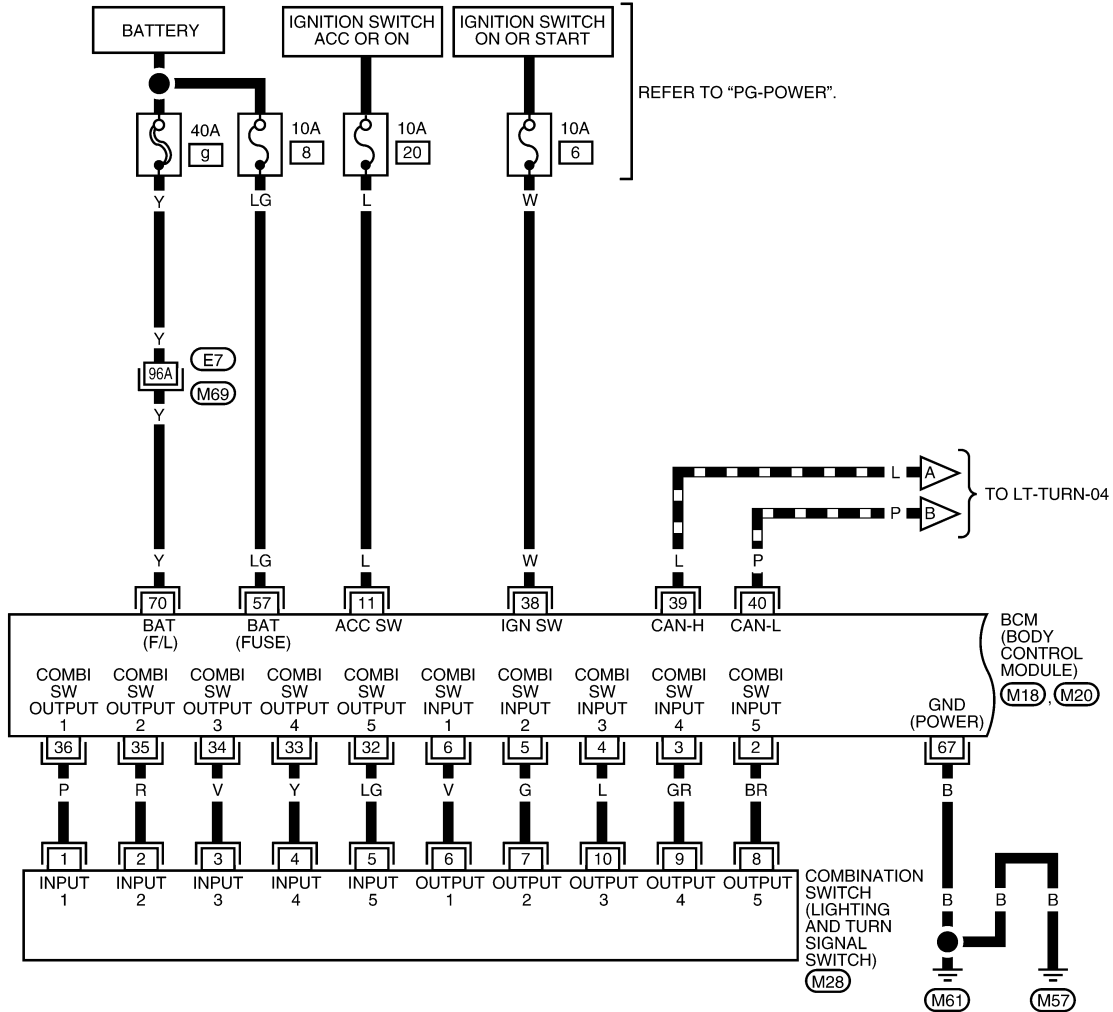

REFER TO THE FOLLOWING.

 

(M69) - SUPER MULTIPLE JUNCTION (SMJ)

ABLWA1018GB

TURN SIGNAL AND HAZARD WARNING LAMPS

< SERVICE INFORMATION >

LT-TURN-02

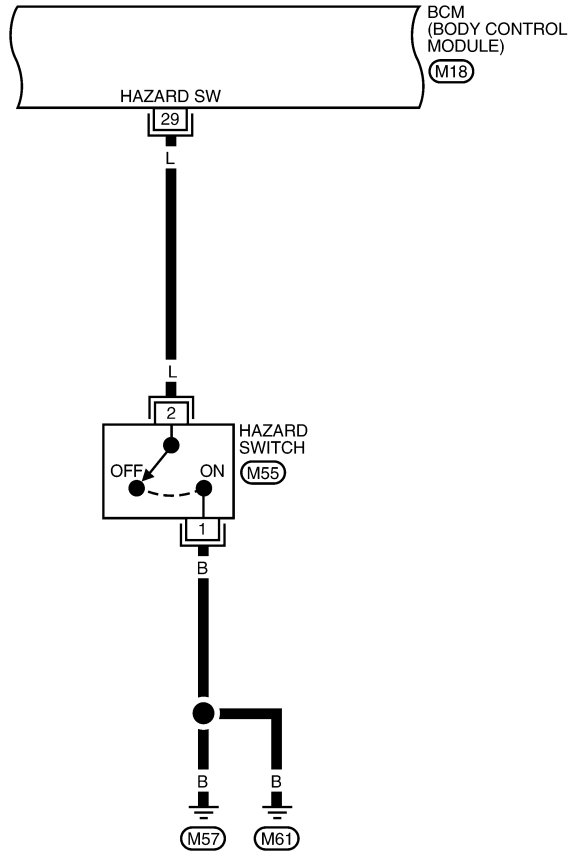

LKWA0330E


A
B
C
D
E
F
G
H
I
J
LT
L
M
N
O
P

TURN SIGNAL AND HAZARD WARNING LAMPS

< SERVICE INFORMATION >

LT-TURN-03

HB : WITH HATCHBACK

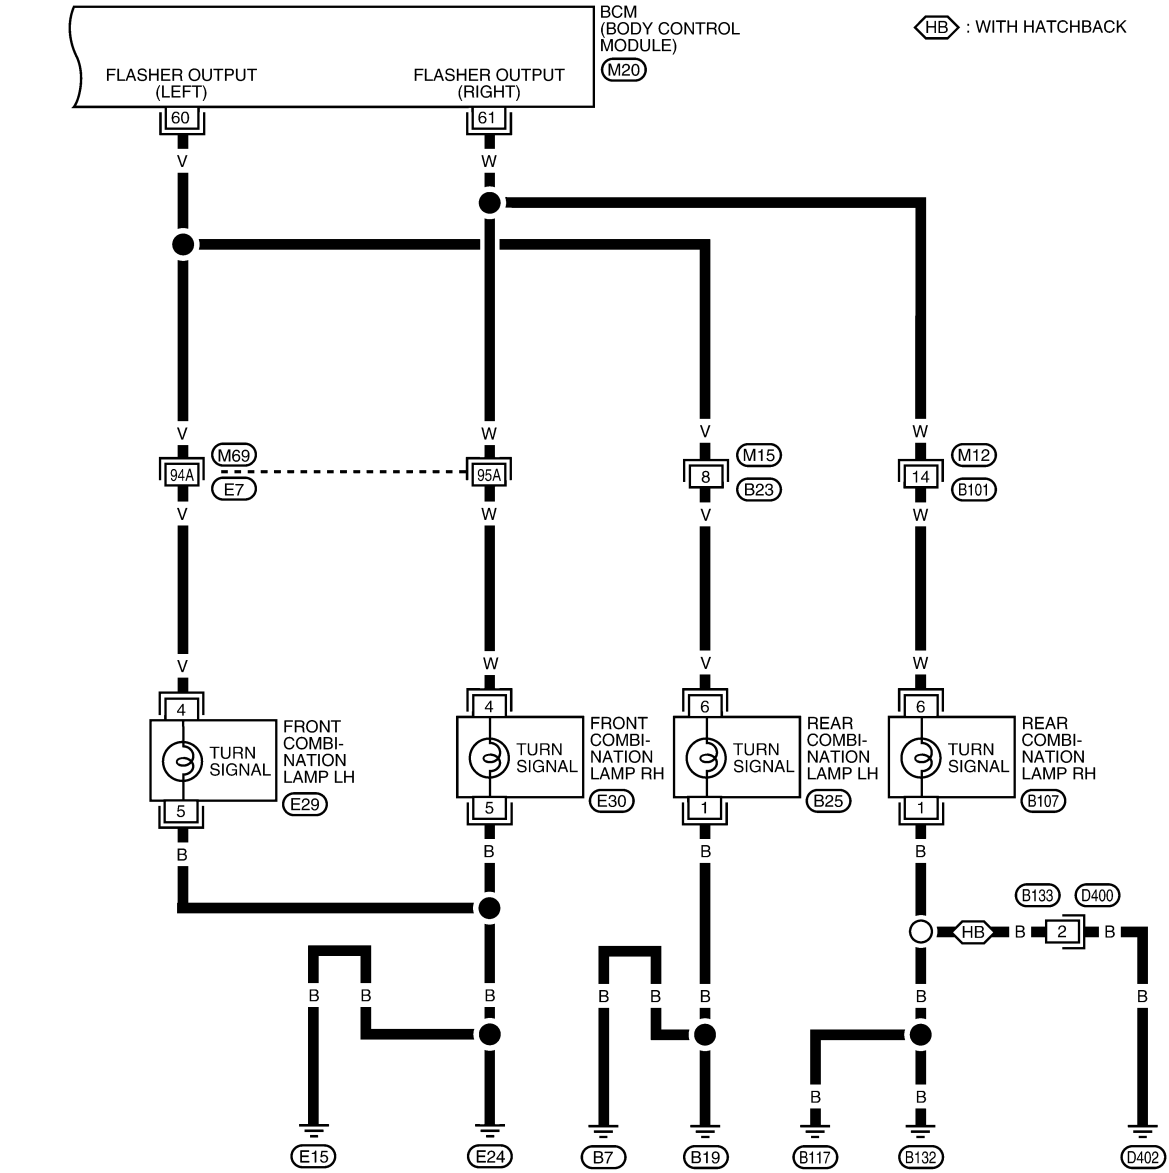

1	2	3	4	5	6	7
8	9	10	11	12	13	14
15	16					

M12, M15
W W

56	57	58	59	60	61	62	63	64
65	66	67	68	69	70			

M20
B



E29, E30
B B

1	2		
3	4	5	6

B25, B107
BR BR

1
2

D400
W

REFER TO THE FOLLOWING.


M69 - SUPER MULTIPLE JUNCTION (SMJ)

ABLWA1019GB

TURN SIGNAL AND HAZARD WARNING LAMPS

< SERVICE INFORMATION >

LT-TURN-04

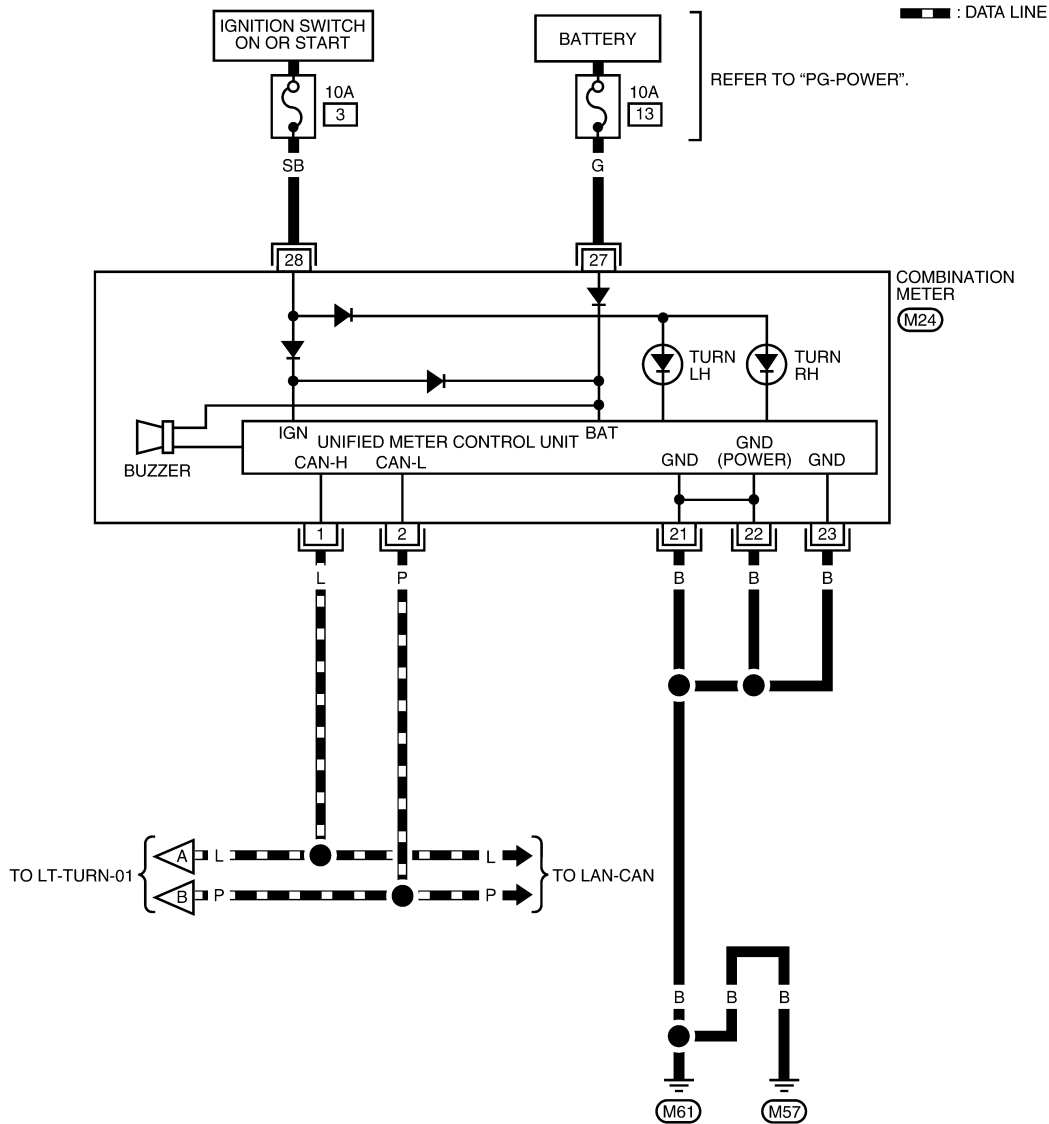

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	(M24)
21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	W

Terminal and Reference Value for BCM

Refer to [BCS-12, "Terminal and Reference Value for BCM"](#) .

How to Proceed with Trouble Diagnosis

1. Confirm the symptom or customer complaint.
2. Understand operation description and function description. Refer to [LT-50, "System Description"](#) .

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

LT

LKWA0332E

INFOID:0000000005929085

INFOID:0000000005929086

TURN SIGNAL AND HAZARD WARNING LAMPS

< SERVICE INFORMATION >

3. Perform the preliminary check. Refer to [LT-58, "Preliminary Check"](#) .
4. Check symptom and repair or replace the cause of the malfunction.
5. Do turn signal and hazard warning lamps operate normally? If YES, GO TO 6. If NO, GO TO 4.
6. INSPECTION END

Preliminary Check

INFOID:000000005929087

CHECK POWER SUPPLY AND GROUND CIRCUIT FOR BCM

Refer to [BCS-16, "BCM Power Supply and Ground Circuit Inspection"](#) .

CONSULT-III Function (BCM)

INFOID:000000005929088

Refer to [BCS-17, "CONSULT-III Function \(BCM\)"](#) .

Turn Signals Do Not Operate

INFOID:000000005929089

1.CHECK COMBINATION SWITCH (LIGHTING AND TURN SIGNAL SWITCH) INPUT SIGNAL

Ⓟ With CONSULT-III

1. Select "BCM" on CONSULT-III. Select "FLASHER" on "SELECT TEST ITEM" screen.
2. Select "DATA MONITOR" on "SELECT DIAG MODE" screen. Make sure that "TURN SIGNAL R" and "TURN SIGNAL L" turns ON-OFF linked with operation of lighting switch.

**When turn signal switch is : TURN SIGNAL R ON
right position**

**When turn signal switch is : TURN SIGNAL L ON
left position**

ⓧ Without CONSULT-III

Refer to [LT-65, "Combination Switch Inspection"](#) .

OK or NG

OK >> Replace the BCM. [BCS-19, "Removal and Installation of BCM"](#)

NG >> Check combination switch (lighting and turn signal switch). Refer to [LT-65, "Combination Switch Inspection"](#) .

Front Turn Signal Lamp Does Not Operate

INFOID:000000005929090

1.CHECK BULB

Verify the bulb standard of each turn signal lamp is correct. Refer to [LT-116, "Exterior Lamp"](#) .

OK or NG

OK >> GO TO 2.

NG >> Replace turn signal lamp bulb. Refer to [LT-61, "Bulb Replacement for Front Turn Signal Lamp"](#) .

2.CHECK FRONT TURN SIGNAL LAMP CIRCUIT


1. Turn ignition switch OFF.
2. Disconnect BCM connector and front combination lamp LH or RH connector.
3. Check continuity between BCM harness connector M20 (A) terminal 60 and front combination lamp LH harness connector E29 (B) terminal 4.

60 - 4 : Continuity should exist.

4. Check continuity between BCM harness connector M20 terminal 61 (A) and front combination lamp RH harness connector E30 (B) terminal 4.

61 - 4 : Continuity should exist.

OK or NG

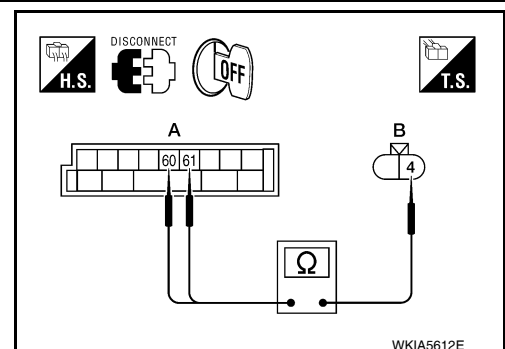

TURN SIGNAL AND HAZARD WARNING LAMPS

< SERVICE INFORMATION >

- OK >> GO TO 3.
- NG >> Repair harness or connector.

3.CHECK GROUND CIRCUIT

1. Check continuity between front combination lamp LH harness connector E29 terminal 5 and ground.


5 - Ground : Continuity should exist.

2. Check continuity between front combination lamp RH harness connector E30 terminal 5 and ground.

5 - Ground : Continuity should exist.

OK or NG

- OK >> Inspect connection at front combination lamp.
- NG >> Repair harness.

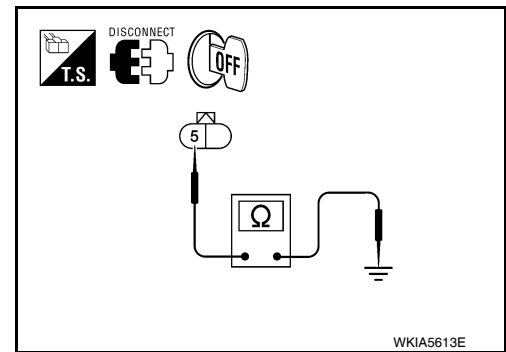

Rear Turn Signal Lamp Does Not Operate

INFOID:000000005929091

1.CHECK BULB

Verify the bulb standard of each turn signal lamp is correct. Refer to [LT-116, "Exterior Lamp"](#).

OK or NG

- OK >> GO TO 2.
- NG >> Replace turn signal lamp bulb. Refer to [LT-61, "Bulb Replacement for Rear Turn Signal Lamp"](#).

2.CHECK REAR TURN SIGNAL LAMP CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connector and rear combination lamp LH or RH connector.
3. Check continuity between BCM harness connector M20 (A) terminal 60 and rear combination lamp LH harness connector B25 (B) terminal 6.

60 - 6 : Continuity should exist.

4. Check continuity between BCM harness connector M20 (A) terminal 61 and rear combination lamp RH harness connector B107 (B) terminal 6.

61 - 6 : Continuity should exist.

OK or NG

- OK >> GO TO 3.
- NG >> Repair harness or connector.

3.CHECK GROUND CIRCUIT

1. Check continuity between rear combination lamp LH harness connector B25 terminal 1 and ground.



1 - Ground : Continuity should exist.

2. Check continuity between rear combination lamp RH harness connector B107 terminal 1 and ground.

1 - Ground : Continuity should exist.

OK or NG

- OK >> Check rear combination lamp connector for proper connection. Repair as necessary.
- NG >> Repair harness or connector.

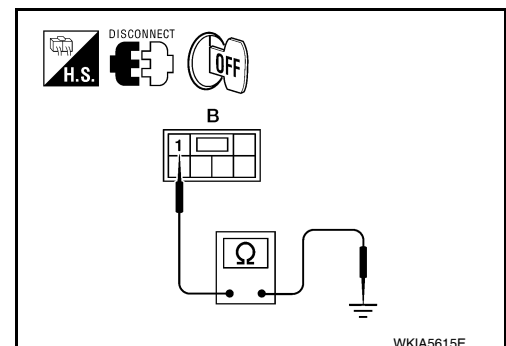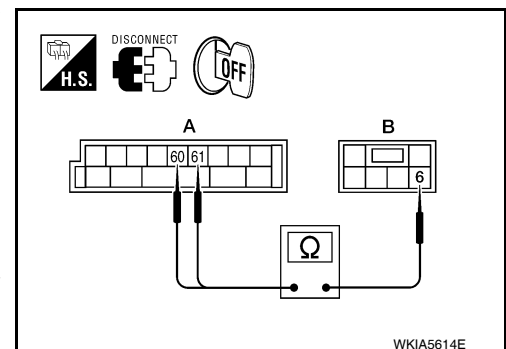

TURN SIGNAL AND HAZARD WARNING LAMPS

< SERVICE INFORMATION >

Hazard Warning Lamp Does Not Operate But Turn Signal Lamp Operates INFOID:000000005929092

1. CHECK HAZARD SWITCH INPUT SIGNAL

④ With CONSULT-III

1. Select "BCM" on CONSULT-III. Select "FLASHER" on "SELECT TEST ITEM" screen.
2. Select "DATA MONITOR" on "SELECT DIAG MODE" screen. Make sure that "HAZARD SW" turns ON-OFF linked with operation of hazard switch.

When hazard switch is in ON position : HAZARD SW ON

⊗ Without CONSULT-III

Check voltage between BCM harness connector and ground.

Terminal (+)		Terminal (-)	Condition	Voltage
BCM connector	Terminal			
M18	29	Ground	Hazard switch is ON	0V
			Hazard switch is OFF	Battery voltage

OK or NG

OK >> Replace BCM. Refer to [BCS-19, "Removal and Installation of BCM"](#).

NG >> GO TO 2.

2. CHECK HAZARD SWITCH CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connector and hazard switch connector.
3. Check continuity BCM harness connector M18 (A) and hazard switch harness connector M55 (B).

A		B		Continuity
Connector	Terminal	Connector	Terminal	
M18	29	M55	2	Yes

OK or NG

OK >> GO TO 3.

NG >> Repair harness or connector.

3. CHECK GROUND CIRCUIT

Check continuity between hazard switch harness connector M55 terminal 1 and ground.




1 – Ground : Continuity should exist.

OK or NG

OK >> GO TO 4.

NG >> Repair harness or connector.

4. CHECK HAZARD SWITCH

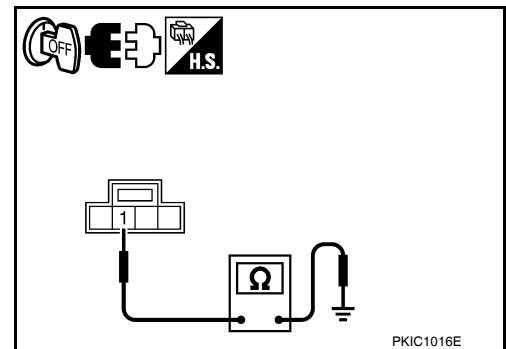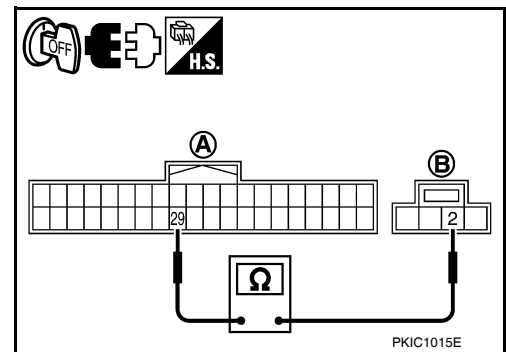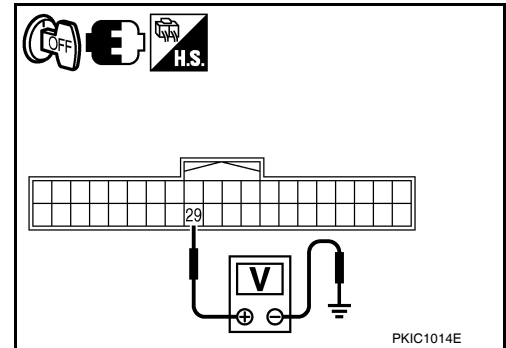

TURN SIGNAL AND HAZARD WARNING LAMPS

< SERVICE INFORMATION >


1. Disconnect hazard switch connector.
2. Check continuity hazard switch terminals.

Terminal		Condition	Continuity
Hazard switch			
1	2	Hazard switch is ON	Yes
		Hazard switch is OFF	No

OK or NG

OK >> Replace BCM if hazard warning lamps do not operate after setting the connector again. Refer to [BCS-19, "Removal and Installation of BCM"](#) .

NG >> Replace hazard switch.

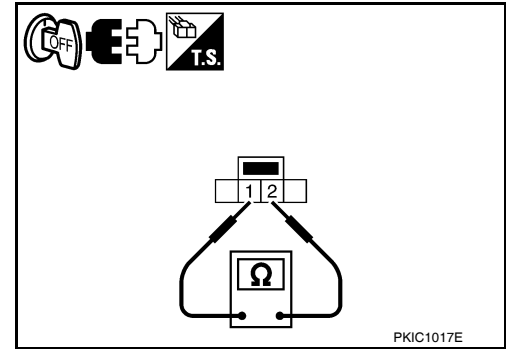

Turn Signal Indicator Lamp Does Not Operate

INFOID:000000005929093

1. CHECK CAN COMMUNICATION SYSTEM

Check CAN communication. Refer to [LAN-7](#) .

OK or NG

OK >> Replace combination meter. Refer to [DI-20, "Removal and Installation"](#) .

NG >> Repair as necessary.

Bulb Replacement for Front Turn Signal Lamp

INFOID:000000005929094

Refer to [LT-24, "Bulb Replacement"](#) .

Bulb Replacement for Rear Turn Signal Lamp

INFOID:000000005929095

Refer to [LT-87, "Bulb Replacement"](#) .

Removal and Installation of Front Turn Signal Lamp

INFOID:000000005929096

Refer to [LT-25, "Removal and Installation"](#) .

Removal and Installation of Rear Turn Signal Lamp

INFOID:000000005929097

Refer to [LT-88, "Removal and Installation"](#) .

A
B
C
D
E
F
G
H
I
J
LT
L
M
N
O
P

LIGHTING AND TURN SIGNAL SWITCH

< SERVICE INFORMATION >


LIGHTING AND TURN SIGNAL SWITCH

Removal and Installation

INFOID:000000005929098

REMOVAL

1. Remove steering column cover. Refer to [IP-11](#).
2. While pressing pawls (A) in direction as shown, pull lighting and turn signal switch (1) toward LH door and disconnect from the base.

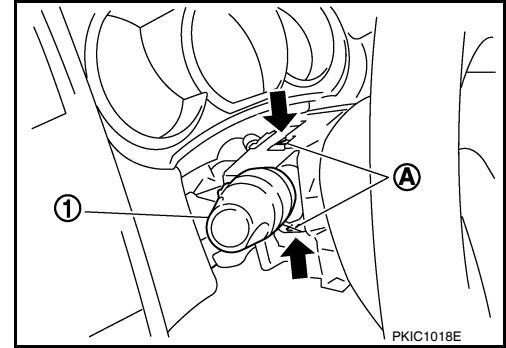

INSTALLATION

Installation is in the reverse order of removal.

HAZARD SWITCH

< SERVICE INFORMATION >


HAZARD SWITCH

Removal and Installation

INFOID:000000005929099

REMOVAL

1. Remove cluster lid C. Refer to [IP-11](#) .
2. Disconnect hazard switch connector.
3. Press pawl (A) on reverse side and remove the hazard switch (1).

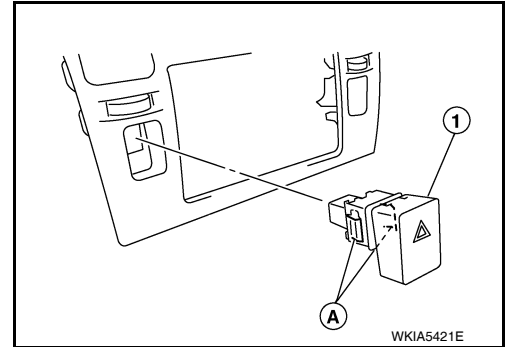

INSTALLATION

Installation is in the reverse order of removal.

A
B
C
D
E
F
G
H
I
J
LT
L
M
N
O
P

COMBINATION SWITCH

< SERVICE INFORMATION >



COMBINATION SWITCH

Wiring Diagram - COMBSW -

INFOID:000000005929100

LT-COMBSW-01

▬ : DATA LINE

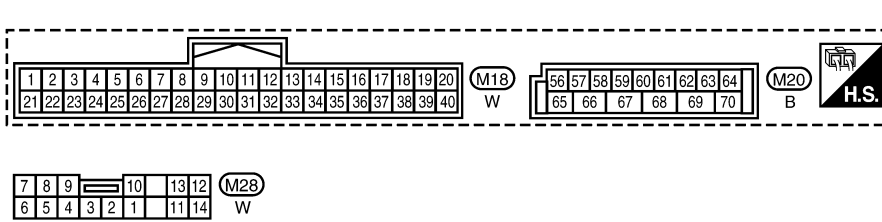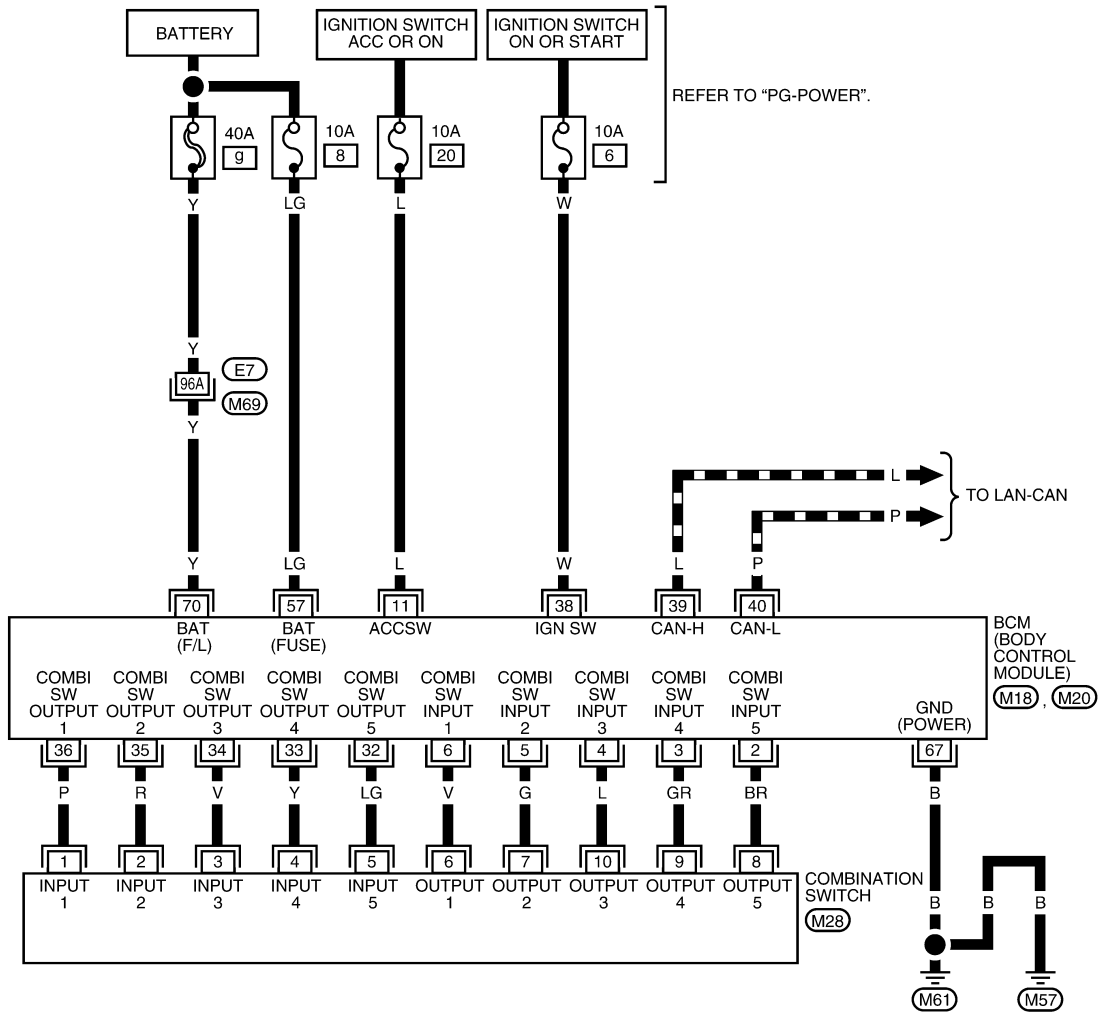

REFER TO THE FOLLOWING.
 (M69) - SUPER MULTIPLE JUNCTION (SMJ)

ABLWA0665GB

Combination Switch Reading Function

For details, refer to [BCS-4, "System Description"](#) .

INFOID:000000005929101

COMBINATION SWITCH

< SERVICE INFORMATION >

Terminal and Reference Value for BCM

INFOID:000000005929102

Refer to [BCS-12, "Terminal and Reference Value for BCM"](#) .

CONSULT-III Function (BCM)

INFOID:000000005929103

Refer to [BCS-17, "CONSULT-III Function \(BCM\)"](#) .

Combination Switch Inspection

INFOID:000000005929104

1.SYSTEM CHECK

Referring to table below, check which system malfunctioning switch belongs to.

System 1	System 2	System 3	System 4	System 5
—	FRONT WASHER	FRONT WIPER LO	TURN LH	TURN RH
FRONT WIPER HI	—	FRONT WIPER INT	PASSING	HEAD LAMP 1
INT VOLUME 1	—	—	HEAD LAMP 2	HI BEAM
—	INT VOLUME 3	—	—	LIGHT SW 1ST
INT VOLUME 2	—	—	FRONT FOG	—

>> Check the system to which the switch belongs, and GO TO 2.

2.SYSTEM CHECK

Ⓜ With CONSULT-III

CAUTION:

If CONSULT-III is used with no connection of CONSULT-III CONVERTER, malfunctions might be detected in self-diagnosis depending on control unit which carry out CAN communication.

1. Connect CONSULT-III, and select "COMB SW" on "SELECT TEST ITEM" screen.
2. Select "DATA MONITOR".
3. Select "START", and confirm that other switches in the system operate normally.
Example: When turn signal LH is inoperative, confirm that PASSING, HEAD LAMP 2 or FRONT FOG (if equipped) turn ON-OFF normally.

Ⓧ Without CONSULT-III

Operating combination switch, and confirm that other switches in the system operate normally.
Example: When a turn signal switch is inoperative, confirm that FRONT WIPER LO or FRONT WIPER INT turn ON-OFF normally.

Check results

Other switches in the system operate normally.>>Replace lighting switch or wiper switch.

Other switches in the system do not operate normally.>>GO TO 3.


3.HARNES INSPECTION

1. Turn ignition switch OFF.
2. Disconnect BCM connector and combination switch connector.
3. Check for continuity between BCM harness connector of the suspect system and the corresponding combination switch harness connector.

COMBINATION SWITCH


< SERVICE INFORMATION >

Suspect system	A		B		Continuity	
	Connector	Terminal	Connector	Terminal		
1	M18	Input 1	6	M28	6	Yes
		Output 1	36		1	
2		Input 2	5		7	
		Output 2	35		2	
3		Input 3	4		10	
		Output 3	34		3	
4		Input 4	3		9	
		Output 4	33		4	
5		Input 5	2		8	
		Output 5	32		5	

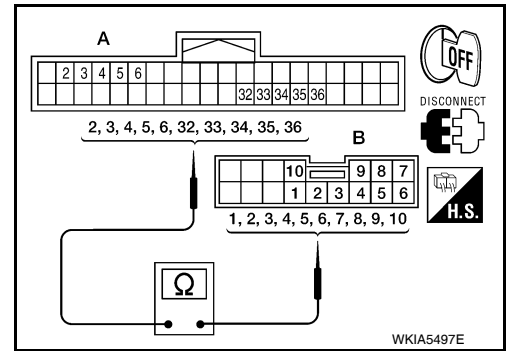

4. Check for continuity between of BCM harness connector in suspect system and ground.

Suspect system	BCM		Continuity		
	Connector	Terminal			
1	M18	Input 1	6	Ground	No
		Output 1	36		
2		Input 2	5		
		Output 2	35		
3		Input 3	4		
		Output 3	34		
4		Input 4	3		
		Output 4	33		
5		Input 5	2		
		Output 5	32		

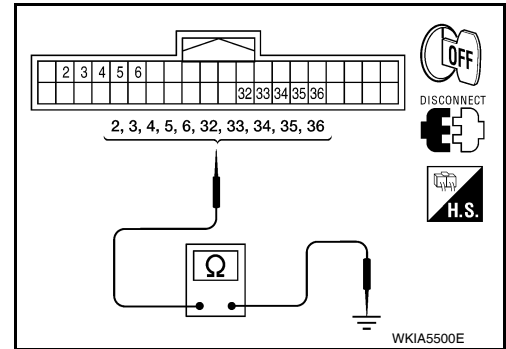


OK or NG

OK >> GO TO 4.

NG >> Check harness between BCM and combination switch for open or short circuit.

4. CHECK BCM OUTPUT TERMINAL

1. Connect BCM and combination switch connectors.
2. Turn ignition switch ON.
3. Turn lighting switch and wiper switch to OFF position.
4. Set wiper dial position 4.
5. Check BCM output terminal voltage waveform of suspect system.

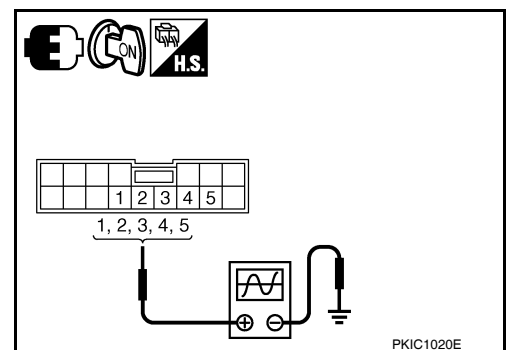

COMBINATION SWITCH

< SERVICE INFORMATION >

Suspect system	Terminal		Reference value
	(+)		
	Combination switch connector	Terminal	
		(-)	
1	M28	1	Ground
2		2	
3		3	
4		4	
5		5	

PKIB4958J
1.2V

PKIB8643J
1.2V

OK or NG

OK >> Open circuit in combination switch, GO TO 5.

NG >> Replace BCM. Refer to [BCS-19, "Removal and Installation of BCM"](#) .

5.COMBINATION SWITCH INSPECTION

Referring to table below, perform combination switch inspection.

Procedure									
1	2		3	4		5	6		7
Re-place lighting switch	Confirm check results	OK	INSPECTION END	Confirm check results	OK	INSPECTION END	Confirm check results	OK	INSPECTION END
		NG	Replace wiper switch		NG	Replace switch base		NG	Confirm symptom again

>> INSPECTION END

Removal and Installation

INFOID:000000005929105

Refer to [LT-62](#) .

STOP LAMP


< SERVICE INFORMATION >

STOP LAMP

Wiring Diagram - STOP/L

INFOID:000000005929106

HATCHBACK

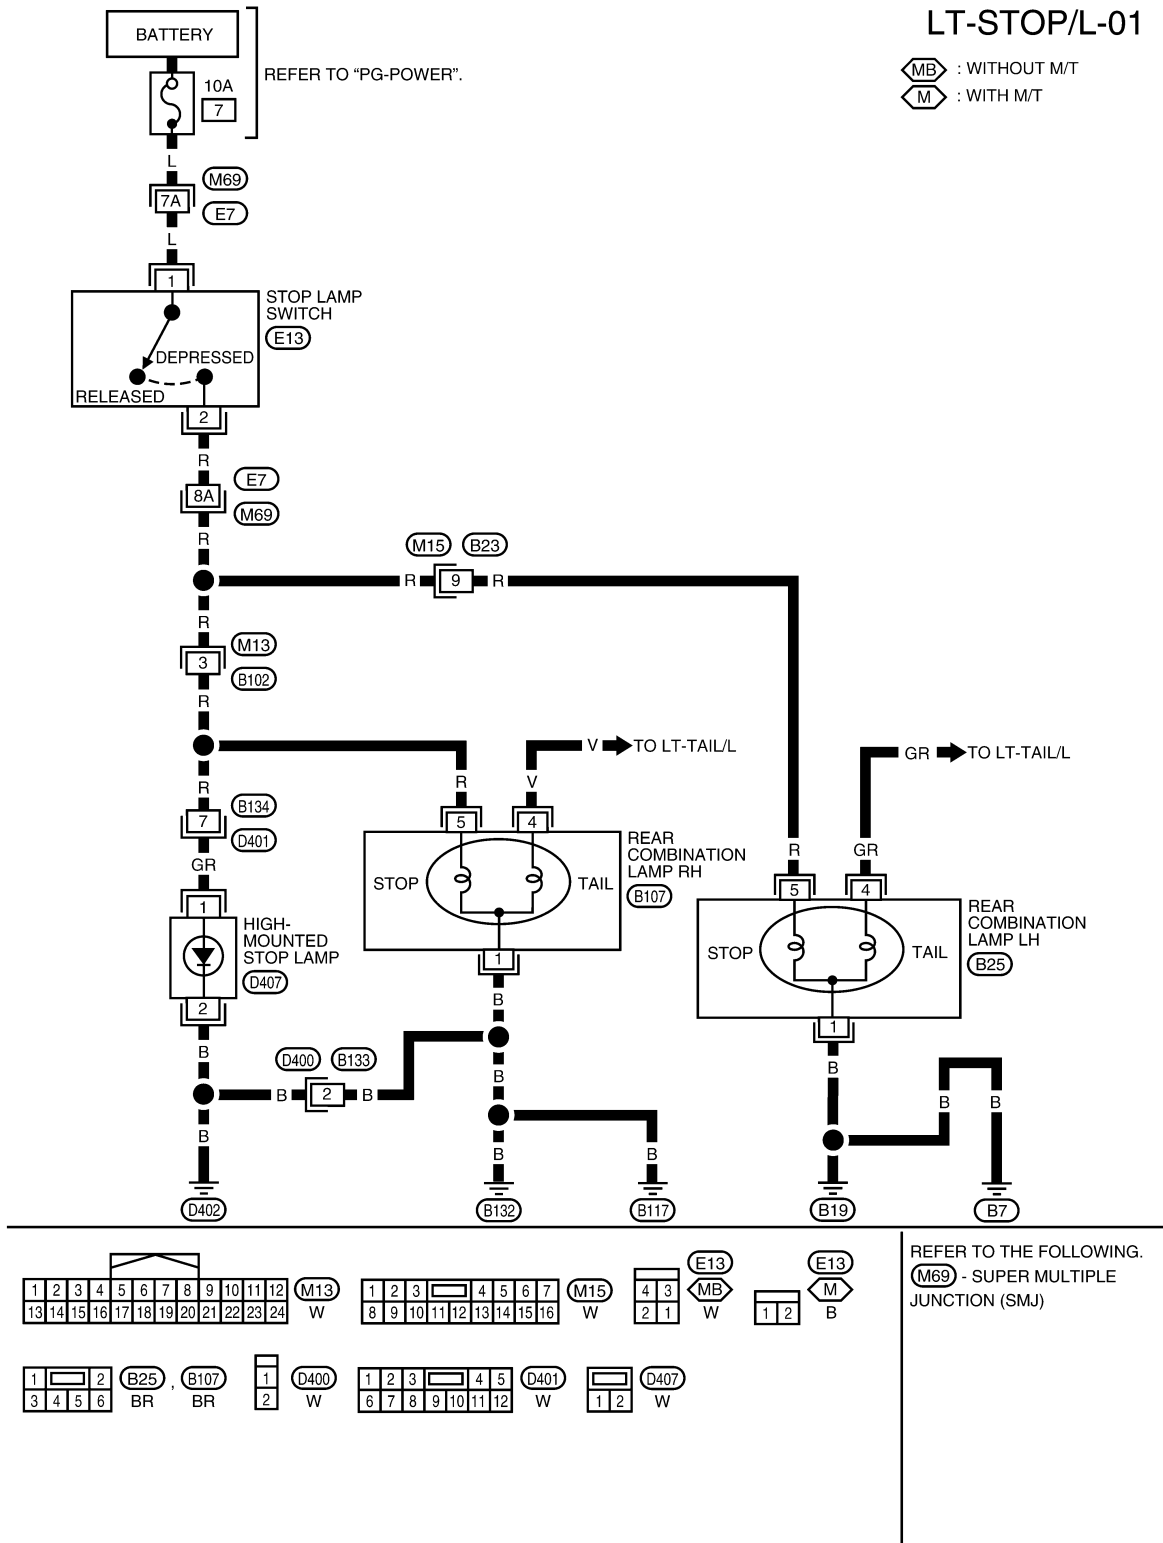

ABLWA1021GB


STOP LAMP

< SERVICE INFORMATION >

Wiring Diagram - STOP/L


INFOID:000000005929107

SEDAN

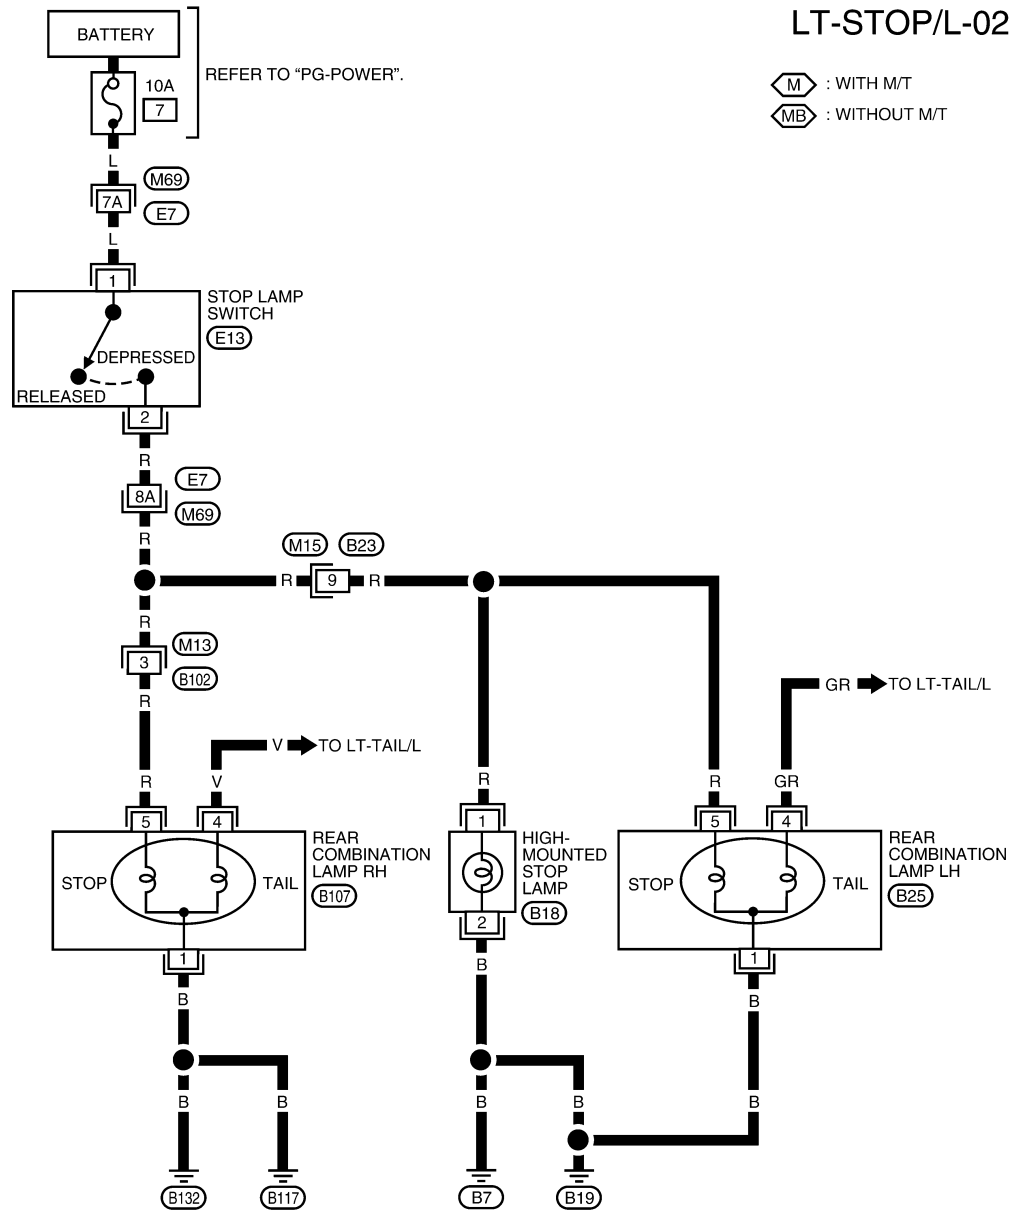

LT-STOP/L-02

Ⓜ : WITH M/T
ⓂⓅ : WITHOUT M/T

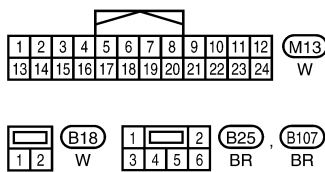

REFER TO THE FOLLOWING.
ⓂⓅ - SUPER MULTIPLE JUNCTION (SMJ)

ABLWA1022GB

Bulb Replacement (High-Mounted Stop Lamp)

INFOID:000000005929108

HATCHBACK

The LED element is not serviced separately, the high-mounted stop lamp must be replaced as an assembly. Refer to [LT-70. "Removal and Installation \(High-Mounted Stop Lamp\)".](#)

STOP LAMP

< SERVICE INFORMATION >

SEDAN - WITH REAR AIR SPOILER


The LED element is not serviced separately, the high-mounted stop lamp must be replaced as an assembly. Refer to [LT-70, "Removal and Installation \(High-Mounted Stop Lamp\)"](#).

1. Installation is in the reverse order of removal.

SEDAN - WITHOUT REAR AIR SPOILER

Removal

1. Remove the high-mounted stop lamp bulb socket (1) and remove the high-mounted stop lamp (2).

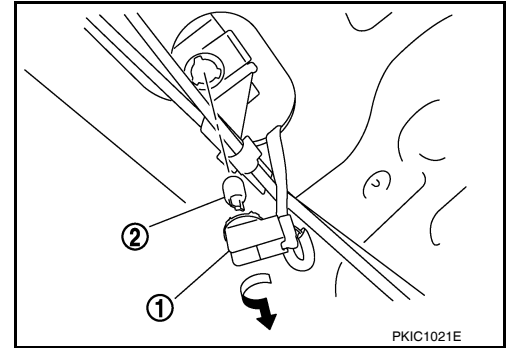

Installation

Installation is in the reverse order of removal.

Bulb Replacement (Rear Combination Lamp)

INFOID:0000000005929109

Refer to [LT-87, "Bulb Replacement"](#).


Removal and Installation (High-Mounted Stop Lamp)

INFOID:0000000005929110

HATCHBACK

Removal

1. Remove the back door finisher upper. Refer to [EI-40, "Removal and Installation"](#).
2. Disconnect the high-mounted stop lamp connector.
3. Remove the nuts and remove the high-mounted stop lamp from rear hatch.

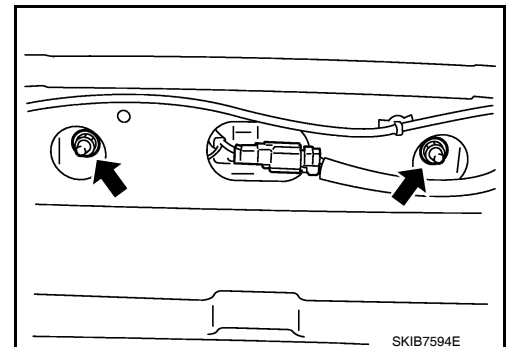

Installation

Installation is in the reverse order of removal.

CAUTION:

Properly seal the high-mounted stop lamp base to the rear hatch to prevent water leaks.

SEDAN - WITH REAR AIR SPOILER

Removal

1. Remove the rear air spoiler. Refer to [EI-34, "Removal and Installation"](#).


STOP LAMP

< SERVICE INFORMATION >

2. Remove the high-mounted stop lamp screws (A), then remove the high-mounted stop lamp finisher (2).
⇐: Vehicle front
3. Release the high-mounted stop lamp (3), then remove wire harness (1) from the rear air spoiler.

NOTE:

Attach a long string to electrical connector of wire harness for assembly routing purposes.

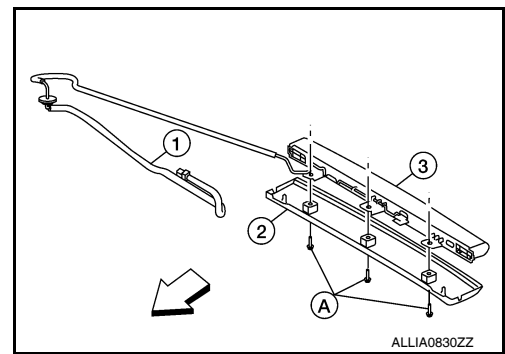


Installation

Installation is in the reverse order of removal.


SEDAN - WITHOUT REAR AIR SPOILER

Removal

1. Remove the rear parcel shelf finisher. Refer to [EI-47. "Removal and Installation"](#).
2. Remove the high-mounted stop lamp assembly screws (A), then remove high-mounted stop lamp assembly (1) from rear parcel shelf finisher.

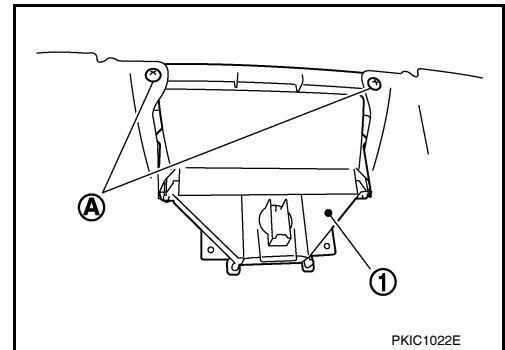

3. Remove high-mounted stop lamp finisher screws (A), then remove the high-mounted stop lamp finisher (1) from high-mounted stop lamp.

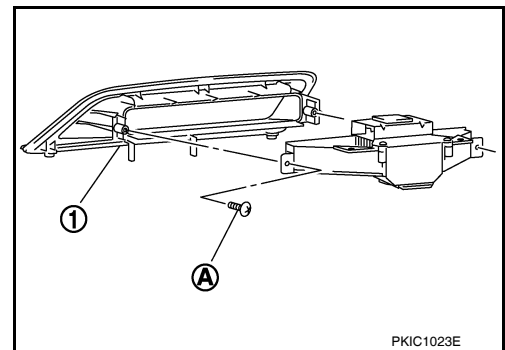

Installation

Installation is in the reverse order of removal.

Removal and Installation (Rear Combination Lamp)

Refer to [LT-88. "Removal and Installation"](#).

INFOID:000000005929111


BACK-UP LAMP

< SERVICE INFORMATION >

BACK-UP LAMP

Wiring Diagram - BACK/L -

INFOID:000000005929112

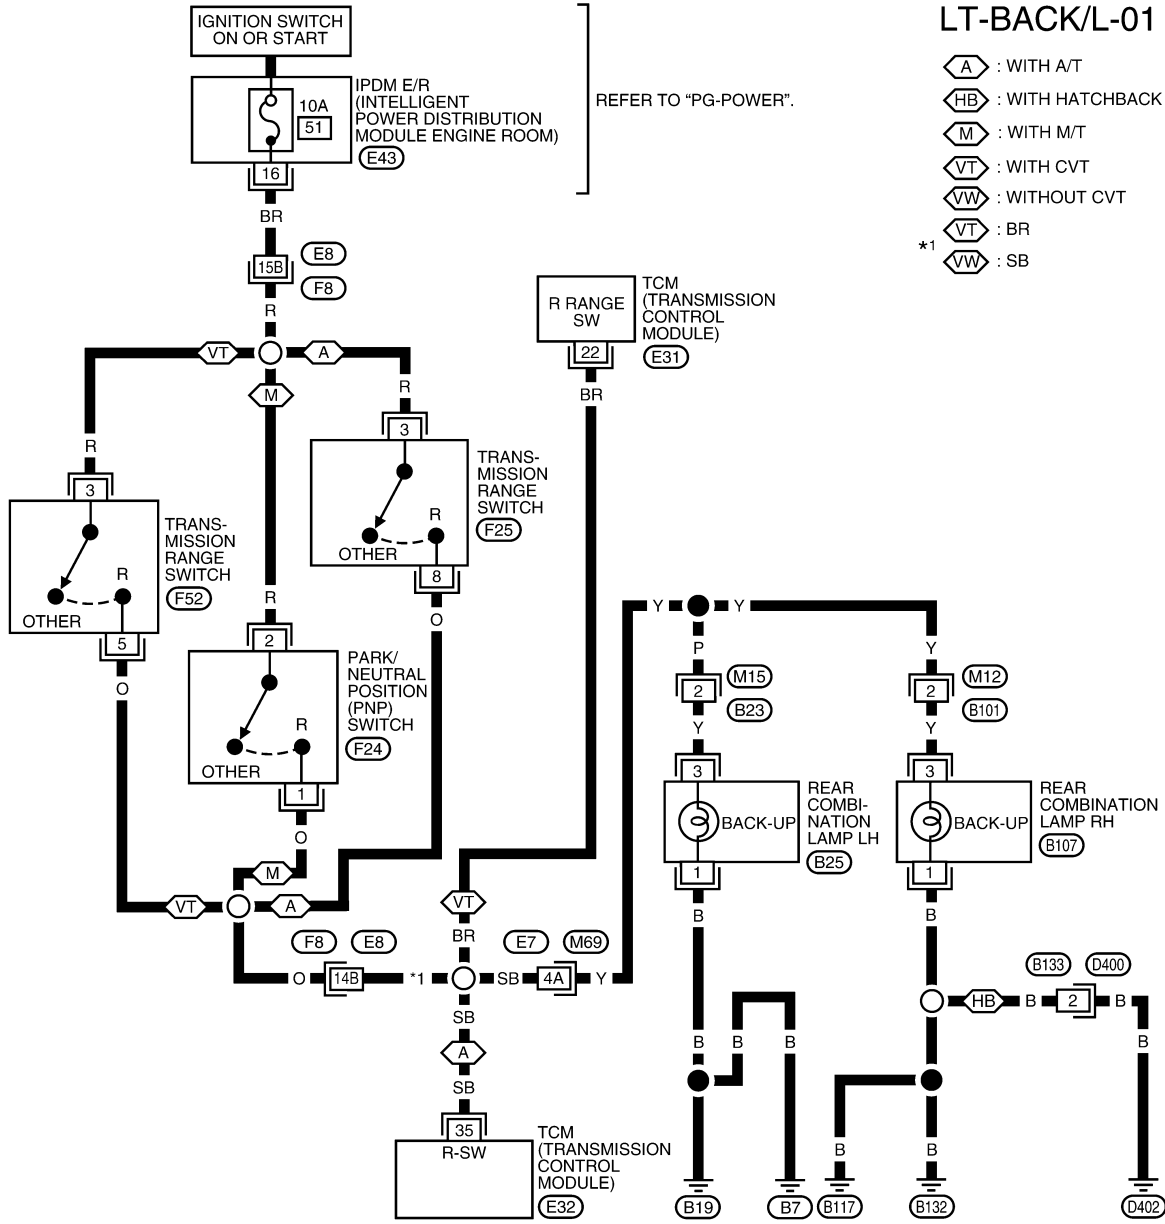


LT-BACK/L-01

- (A) : WITH A/T
 - (HB) : WITH HATCHBACK
 - (M) : WITH M/T
 - (VT) : WITH CVT
 - (VV) : WITHOUT CVT
 - (VT) : BR
 - (VV) : SB
- *1

REFER TO "PG-POWER".

REFER TO THE FOLLOWING.
 (M69), (F8) - SUPER MULTIPLE JUNCTION (SMJ)

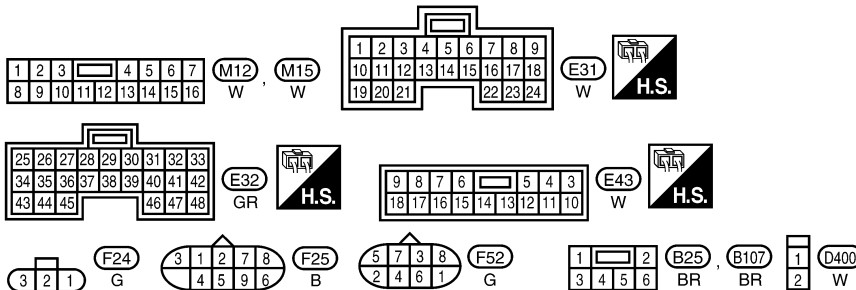

*: THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT" OF PG SECTION.

ABLWA1023GB

Bulb Replacement

INFOID:000000005929113

Refer to [LT-87, "Bulb Replacement"](#) .

BACK-UP LAMP

< SERVICE INFORMATION >

Removal and Installation

INFOID:000000005929114

Refer to [LT-88. "Removal and Installation"](#) .

- A
- B
- C
- D
- E
- F
- G
- H
- I
- J
- LT**
- L
- M
- N
- O
- P


PARKING, LICENSE PLATE AND TAIL LAMPS

< SERVICE INFORMATION >

PARKING, LICENSE PLATE AND TAIL LAMPS

Component Parts and Harness Connector Location

INFOID:000000005929115

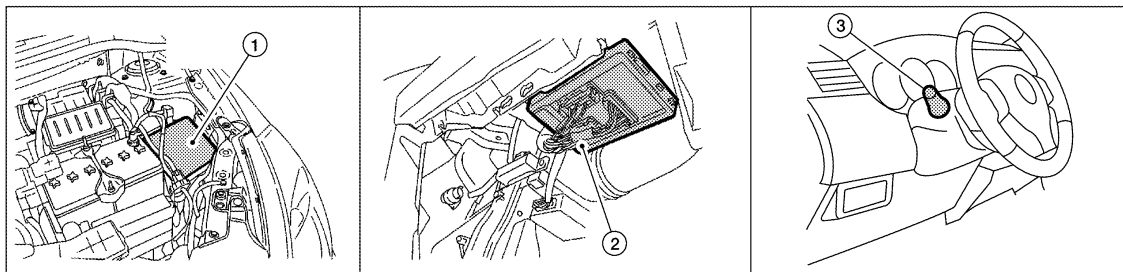

WKIA5554E

1. IPDM E/R E45, E46 and E48
2. BCM M18 and M20 (view with glove box removed)
3. Combination switch (lighting and turn signal switch) M28

System Description

INFOID:000000005929116

The control of the parking, license plate and tail lamp operation is dependent upon the position of lighting switch. When the lighting switch is placed in the 1ST position, the BCM (body control module) receives input signal requesting the parking, license plate and tail lamps to illuminate. This input signal is communicated to the IPDM E/R (intelligent power distribution module engine room) via the CAN communication lines. The CPU (central processing unit) located in the IPDM E/R controls the tail lamp relay coil. This relay, when energized, directs power to parking, license plate and tail lamps, which then illuminate.

Power is supplied at all times

- to ignition relay located in IPDM E/R,
- to tail lamp relay located in IPDM E/R,
- through 15A fuse (No. 52, located in IPDM E/R) and
- through 20A fuse (No. 53, located in IPDM E/R)
- to the CPU located in the IPDM E/R,
- through 40A fusible link (letter **g**, located in fuse and fusible link block)
- to BCM terminal 70,
- through 10A fuse [No. 8, located in fuse block (J/B)],
- to BCM terminal 57.

With the ignition switch in the ON or START position, power is supplied

- through 10A fuse [No. 6, located in fuse block (J/B)]
- to BCM terminal 38,
- to ignition relay located in IPDM E/R and
- through the ignition relay
- to the CPU of the IPDM E/R.

With the ignition switch in the ACC or ON position, power is supplied

- through 10A fuse [No. 20, located in fuse block (J/B)]
- to BCM terminal 11.

Ground is supplied

- to BCM terminal 67
- through grounds M20 and M61,
- to IPDM E/R terminals 59 and 39
- through grounds E15 and E24.

OPERATION BY LIGHTING SWITCH

With the lighting switch in the 1ST or 2ND position, the BCM receives an input signal requesting parking, license plate and tail lamps to illuminate. This input signal is communicated to the IPDM E/R via the CAN communication lines. The CPU, located in the IPDM E/R, controls the tail lamp relay coil. When energized, the tail lamp relay directs power

- through 10A fuse (No. 37, located in IPDM E/R),
- through IPDM E/R terminal 26
- to front combination lamp LH terminal 6, and
- through IPDM E/R terminal 27

PARKING, LICENSE PLATE AND TAIL LAMPS

< SERVICE INFORMATION >

- to front combination lamp RH terminal 6,
- through IPDM E/R terminal 28
- to rear combination lamp LH terminal 4 and
- to license plate lamp LH and RH terminal 1,
- through IPDM E/R terminal 29
- to rear combination lamp RH terminal 4.

A

Ground is supplied

- to front combination lamp LH and RH terminal 7
- through grounds E15 and E24,
- to rear combination lamp LH terminal 1 and
- to license plate lamp LH and RH terminal 2
- through grounds B7 and B19, and
- to rear combination lamp RH terminal 1
- through grounds B117, B132 (all models) and D402 (with hatchback).

B

C

D

With power and ground supplied, parking, license plate and tail lamps illuminate.

E

COMBINATION SWITCH READING FUNCTION

Refer to [BCS-4, "System Description"](#) .

EXTERIOR LAMP BATTERY SAVER CONTROL

When the combination switch (lighting and turn signal switch) is in the 1ST (or 2ND) position and the ignition switch is turned from ON or ACC to OFF, the battery saver control feature is activated.

Under this condition, the parking, license and tail lamps remain illuminated for 5 minutes, then the parking, license plate and tail lamps are turned off.

Exterior lamp battery saver control mode can be changed by the function setting of CONSULT-III.

F

G

CAN Communication System Description

INFOID:000000005929117

H

Refer to [LAN-7, "System Description"](#) .

I

J

LT

L

M

N

O


P

PARKING, LICENSE PLATE AND TAIL LAMPS

< SERVICE INFORMATION >

Schematic

INFOID:000000005929118

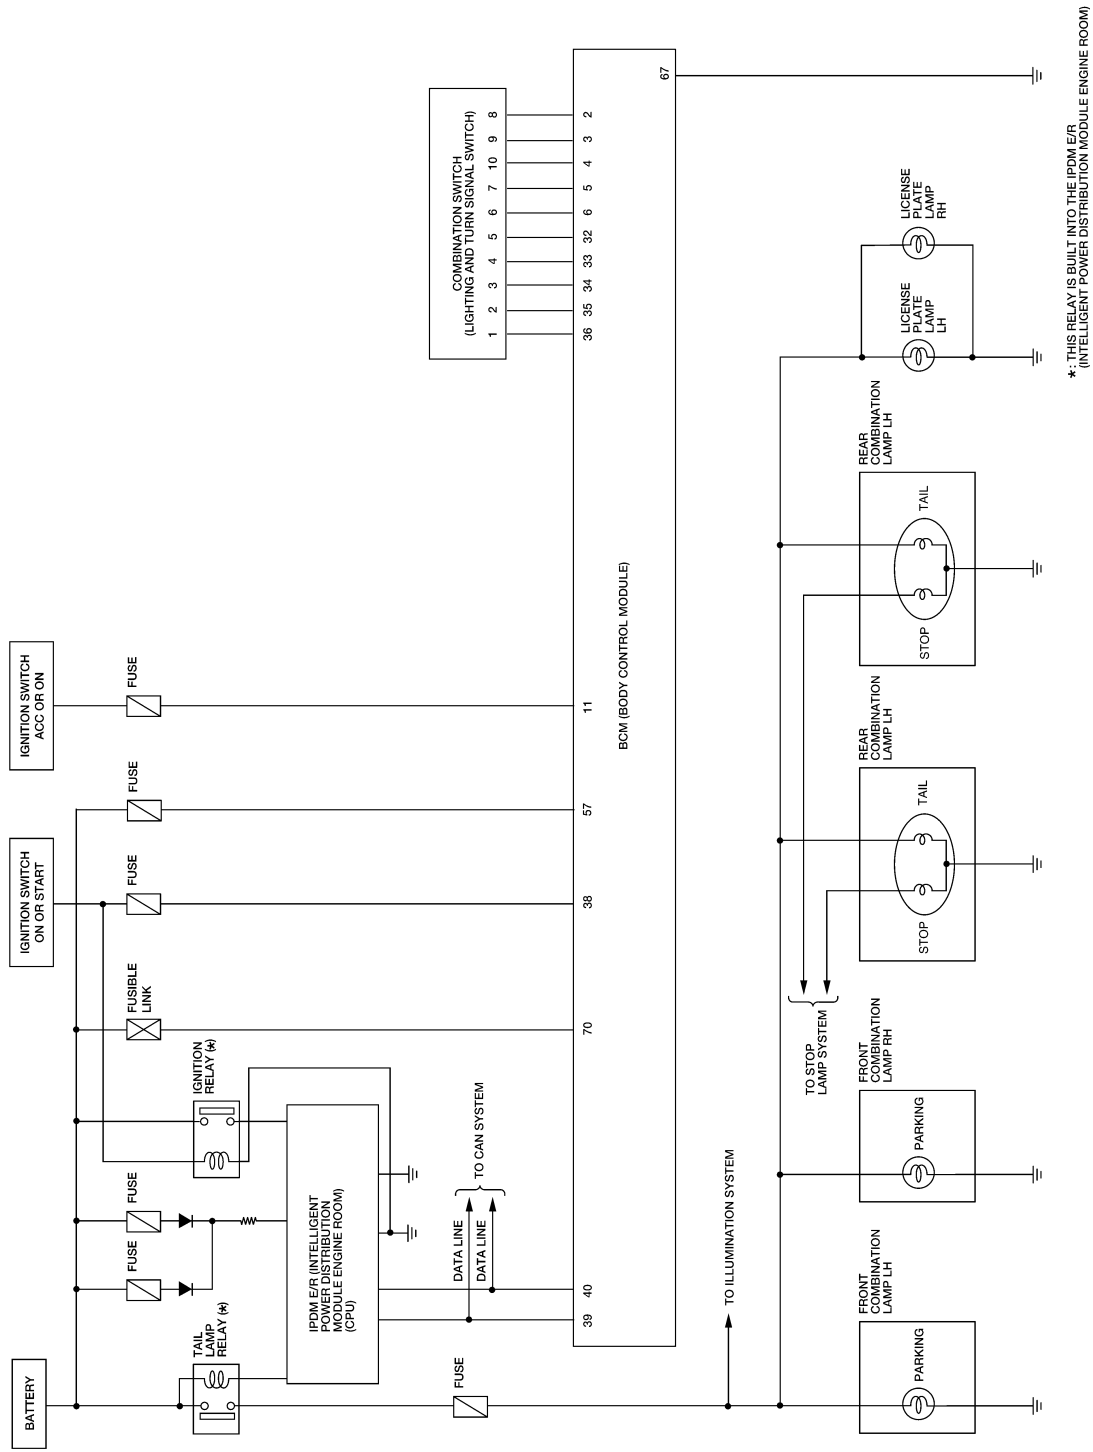

ABLWA1024GB

PARKING, LICENSE PLATE AND TAIL LAMPS



< SERVICE INFORMATION >

Wiring Diagram - TAIL/L -

INFOID:000000005929119

LT-TAIL/L-01

— : DATA LINE

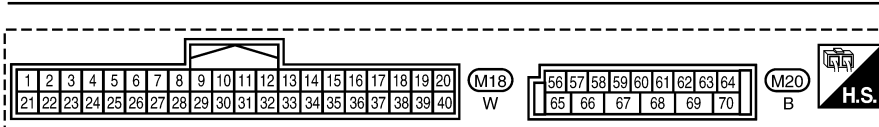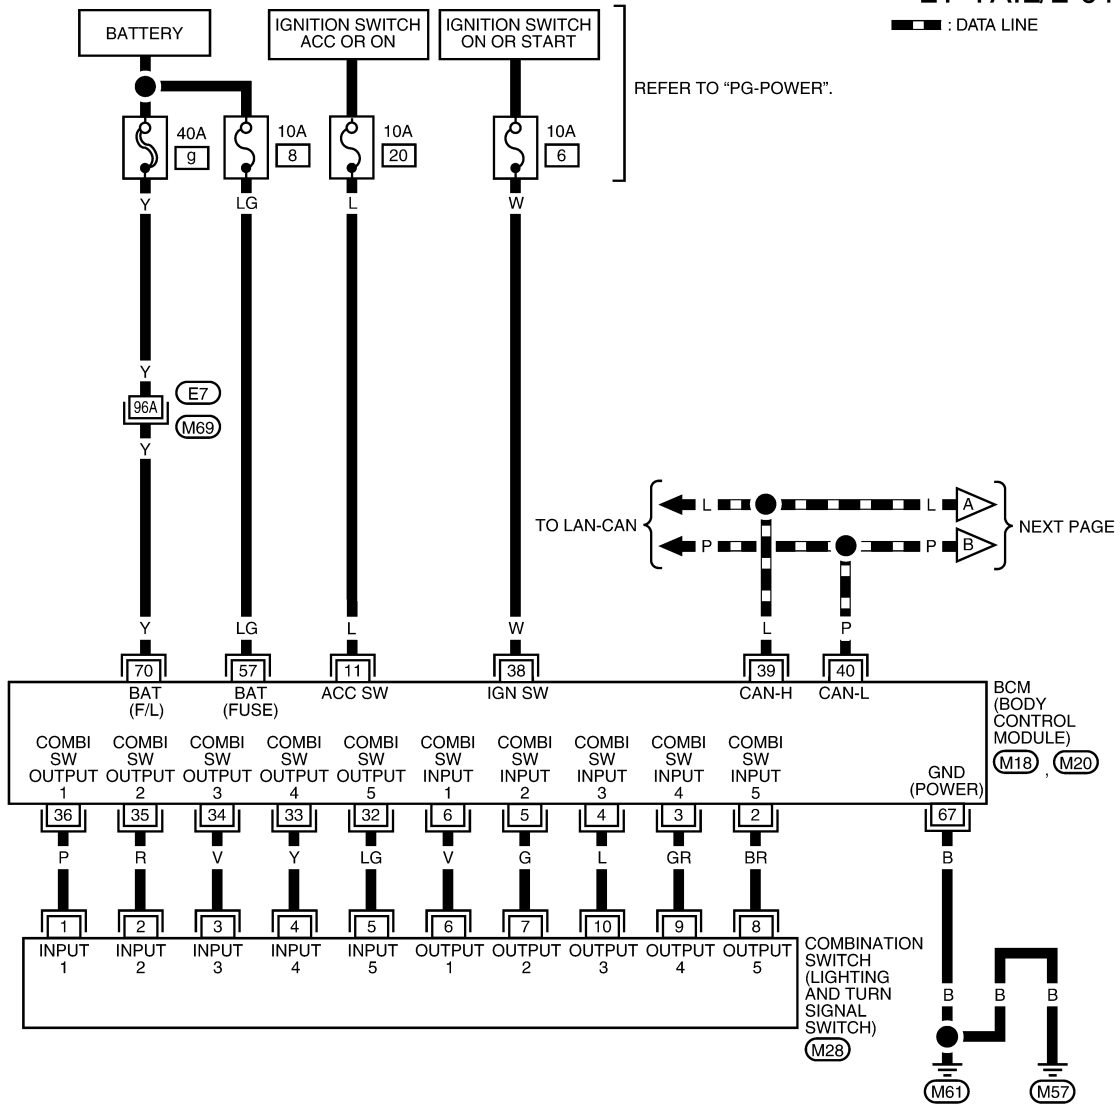

REFER TO THE FOLLOWING.

(M69) - SUPER MULTIPLE JUNCTION (SMJ)


ABLWA1025GB

PARKING, LICENSE PLATE AND TAIL LAMPS

< SERVICE INFORMATION >

LT-TAIL/L-02



HB : WITH HATCHBACK
SE : WITH SEDAN
 : DATA LINE

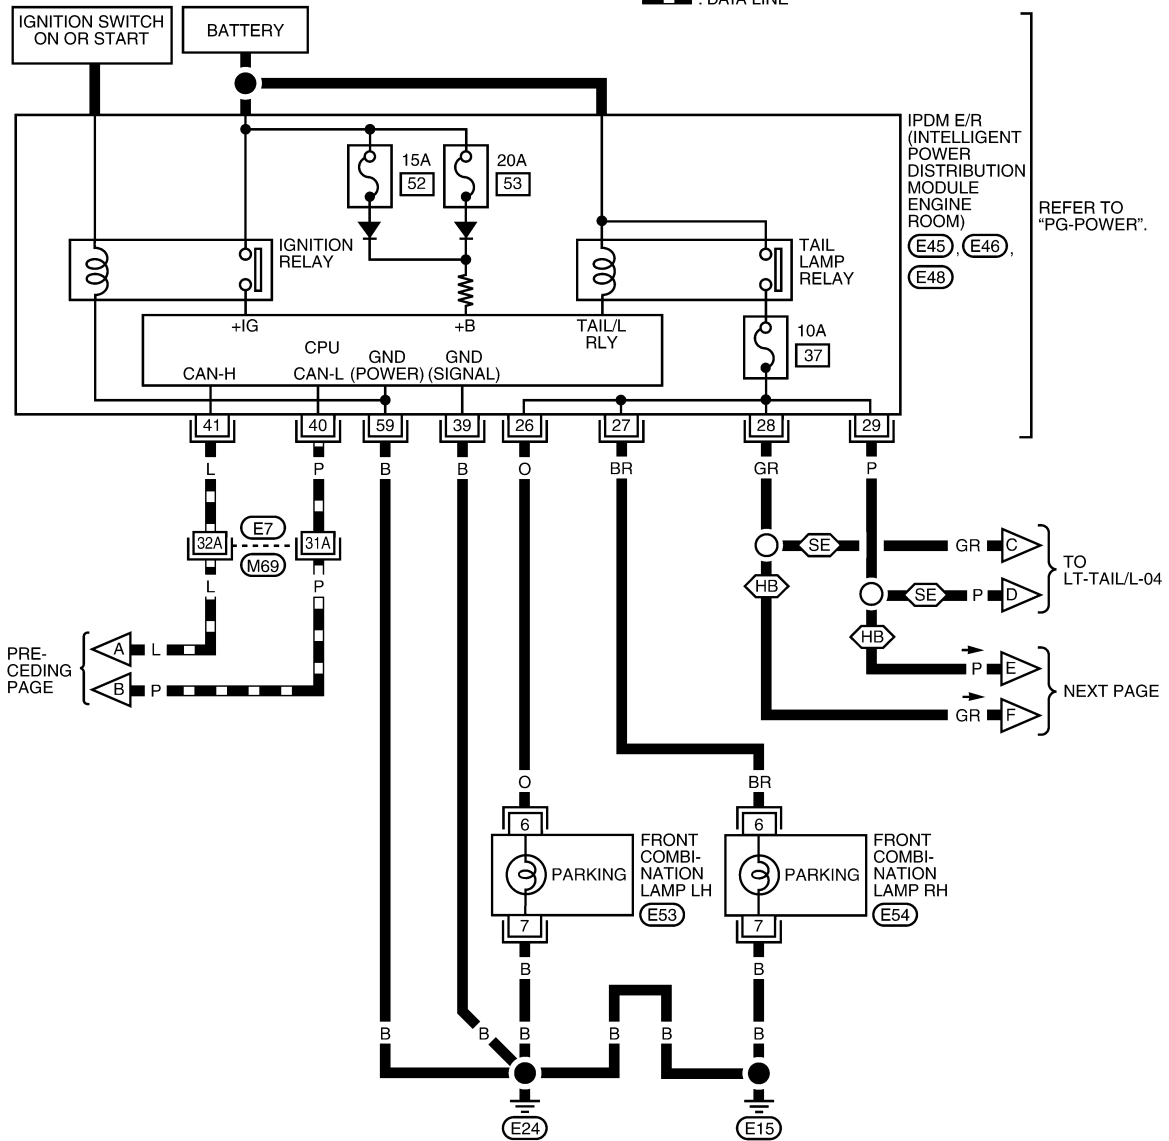

REFER TO "PG-POWER".

TO LT-TAIL/L-04

  NEXT PAGE



REFER TO THE FOLLOWING.
M69 - SUPER MULTIPLE JUNCTION (SMJ)

 

ABLWA1026GB

PARKING, LICENSE PLATE AND TAIL LAMPS

< SERVICE INFORMATION >

Hatchback

LT-TAIL/L-03

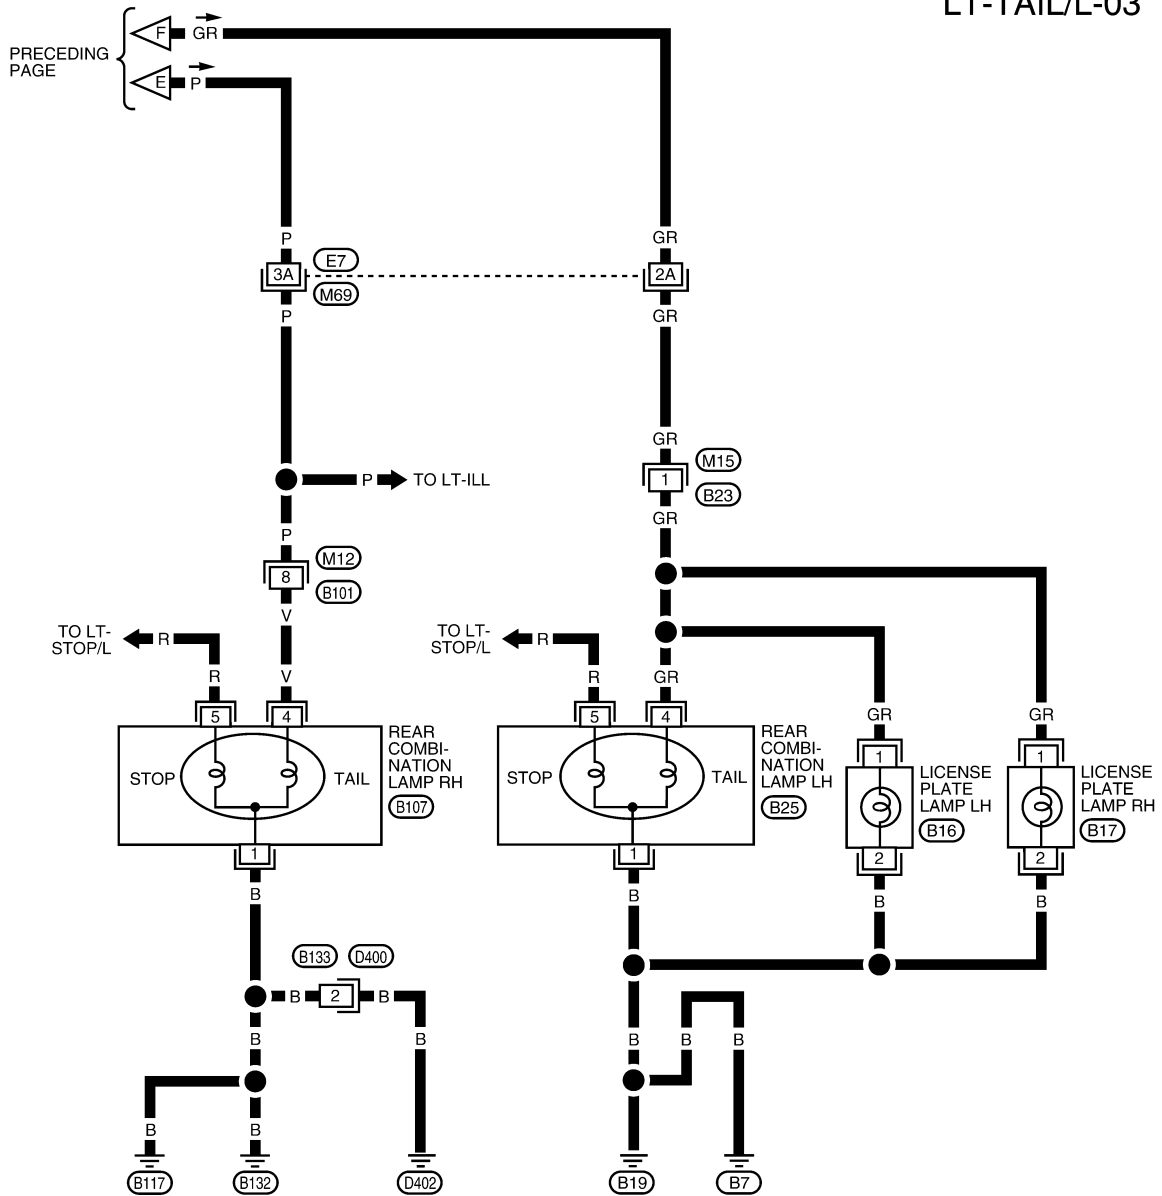

REFER TO THE FOLLOWING.
 (M69) - SUPER MULTIPLE JUNCTION (SMJ)

ABLWA1027GB

PARKING, LICENSE PLATE AND TAIL LAMPS

< SERVICE INFORMATION >

How to Proceed with Trouble Diagnosis

INFOID:000000005929122

1. Confirm the symptom or customer complaint.
2. Understand operation description and function description. Refer to [LT-74, "System Description"](#) .
3. Perform the preliminary check. Refer to [LT-81, "Preliminary Check"](#) .
4. Check symptom and repair or replace the cause of the malfunction.
5. Do the parking, license plate and tail lamps operate normally? If YES, GO TO 6. If NO, GO TO 4.
6. Inspection End.

Preliminary Check

INFOID:000000005929123

CHECK POWER SUPPLY AND GROUND CIRCUIT FOR BCM

Refer to [BCS-16, "BCM Power Supply and Ground Circuit Inspection"](#) .

CHECK POWER SUPPLY AND GROUND CIRCUIT FOR IPDM E/R

Refer to [PG-27, "IPDM E/R Power/Ground Circuit Inspection"](#) .

CONSULT-III Function (BCM)

INFOID:000000005929124

Refer to [BCS-17, "CONSULT-III Function \(BCM\)"](#) .

CONSULT-III Function (IPDM E/R)

INFOID:000000005929125

Refer to [PG-18, "CONSULT-III Function \(IPDM E/R\)"](#) .

Parking, License Plate and Tail Lamps Do Not Illuminate

INFOID:000000005929126

1. CHECK TAIL LAMP FUSE

Inspect tail lamp 10A fuse (No. 37, located in IPDM E/R).

OK or NG

- OK >> GO TO 2.
- NG >> Repair harness.

2. CHECK COMBINATION SWITCH (LIGHTING AND TURN SIGNAL SWITCH) INPUT SIGNAL

With CONSULT-III

1. Select "BCM" on CONSULT-III. Select "HEAD LAMP" on "SELECT TEST ITEM" screen.
2. Select "DATA MONITOR" on "SELECT DIAG MODE" screen. Make sure "LIGHT SW 1ST" turns ON-OFF linked with operation of lighting switch.

When lighting switch is 1ST : LIGHT SW 1ST ON position

Without CONSULT-III

Refer to [LT-65, "Combination Switch Inspection"](#) .

OK or NG

- OK >> GO TO 3.
- NG >> Check combination switch (lighting and turn signal switch). Refer to [LT-65, "Combination Switch Inspection"](#) .

3. ACTIVE TEST

With CONSULT-III

1. Select "IPDM E/R" on CONSULT-III, and select "ACTIVE TEST" on "SELECT DIAG MODE" screen.
2. Select "EXTERNAL LAMPS" on "SELECT TEST ITEM" screen.
3. Touch "TAIL" on "ACTIVE TEST" screen.
4. Make sure parking, license plate and tail lamps operate.

Parking, license plate and tail lamps should operate.

PARKING, LICENSE PLATE AND TAIL LAMPS

< SERVICE INFORMATION >

⊗ Without CONSULT-III

1. Start auto active test. Refer to [PG-20. "Auto Active Test"](#) .
2. Make sure parking, license plate and tail lamps operate.

Parking, license plate and tail lamps should operate.

OK or NG

- OK >> GO TO 4.
NG >> GO TO 5.

4. CHECK IPDM E/R

1. Select "IPDM E/R" on CONSULT-III, and select "DATA MONITOR" on "SELECT DIAG MODE" screen.
2. Make sure "TAIL&CLR REQ" turns ON when lighting switch is in 1ST position.

When lighting switch is 1ST : TAIL&CLR REQ ON position

OK or NG

- OK >> Replace IPDM E/R. Refer to [PG-28. "Removal and Installation of IPDM E/R"](#) .
NG >> Replace BCM. Refer to [BCS-19. "Removal and Installation of BCM"](#) .

5. CHECK INPUT SIGNAL


Ⓟ With CONSULT-III

1. Turn ignition switch OFF.
2. Disconnect front combination lamp, license plate lamp and rear combination lamp connectors.
3. Select "IPDM E/R" on CONSULT-III, and select "ACTIVE TEST" on "SELECT DIAG MODE" screen.
4. Select "EXTERNAL LAMPS" on "SELECT TEST ITEM" screen.
5. Touch "TAIL" on "ACTIVE TEST" screen.
6. When tail lamp relay is operating, check voltage between front combination lamp, license plate lamp and rear combination lamp harness connector and ground.


Ⓟ Without CONSULT-III

1. Turn ignition switch OFF.
2. Disconnect front combination lamp, license plate lamp and rear combination lamp connectors.
3. Start auto active test. Refer to [PG-20. "Auto Active Test"](#) .
4. When tail lamp relay is operating, check voltage between front combination lamp, license plate lamp and rear combination lamp harness connector and ground.

Terminal				Voltage
(+)		Terminal	(-)	
Front combination lamp connector				
RH	E54	6	Ground	Battery voltage
LH	E53			

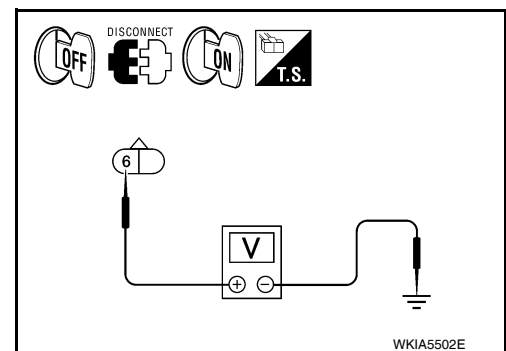

Terminal				Voltage
(+)		Terminal	(-)	
License plate lamp connector				
RH	B17 (Hatchback) B144 (Sedan)	1	Ground	Battery voltage
LH	B16 (Hatchback) B143 (Sedan)			

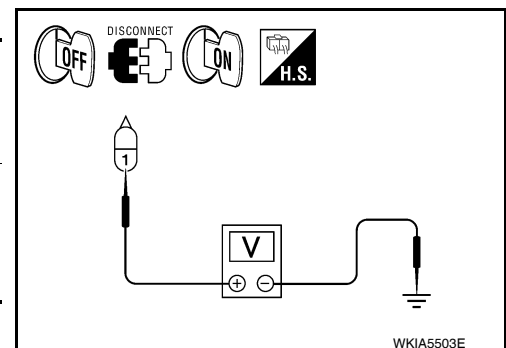

PARKING, LICENSE PLATE AND TAIL LAMPS

< SERVICE INFORMATION >

Terminal		Terminal	Voltage
(+)			
Rear combination lamp connector (Tail lamp)		4	Ground
RH	B107		
LH	B25		Battery voltage

OK or NG


OK >> GO TO 7.

NG >> GO TO 6.

6. CHECK PARKING, LICENSE PLATE AND TAIL LAMP CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check continuity between IPDM E/R harness connector (A) and front combination lamp harness connector (B).


A		B		Continuity
Connector	Terminal	Connector	Terminal	
E45	27	RH	E54	Yes
	26	LH	E53	

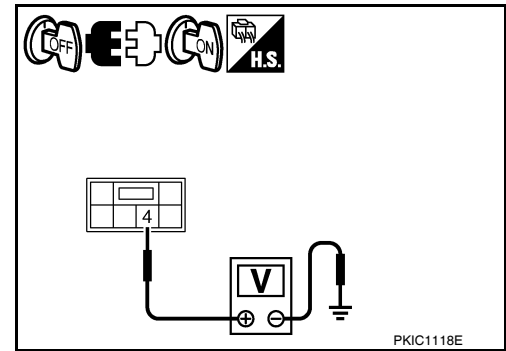

PKIA1118E

4. Check continuity between IPDM E/R harness connector (A) and license plate lamp harness connector (B).


A		B		Continuity
Connector	Terminal	Connector	Terminal	
E45	28	RH	B17 (Hatchback) B144 (Sedan)	Yes
		LH	B16 (Hatchback) B143 (Sedan)	

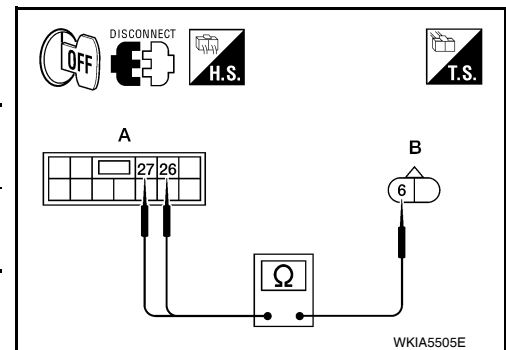

WKIA5505E

5. Check continuity between IPDM E/R harness connector (A) and rear combination lamp harness connector (B).

A		B		Continuity
Connector	Terminal	Connector	Terminal	
E45	29	RH	B107	Yes
	28	LH	B25	

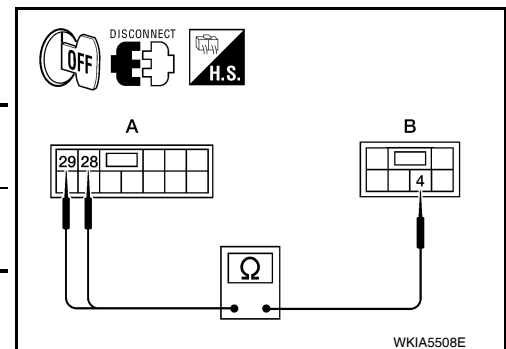

WKIA5508E

OK or NG

OK >> Replace IPDM E/R. Refer to [PG-28, "Removal and Installation of IPDM E/R"](#).

NG >> Repair harness or connector.


7. CHECK PARKING, LICENSE PLATE AND TAIL LAMPS GROUND CIRCUIT

PARKING, LICENSE PLATE AND TAIL LAMPS

< SERVICE INFORMATION >


1. Check continuity between front combination lamp harness connector and ground.

Front combination lamp connector		Terminal	Ground	Continuity
RH	E54	7		Ground
LH	E53			

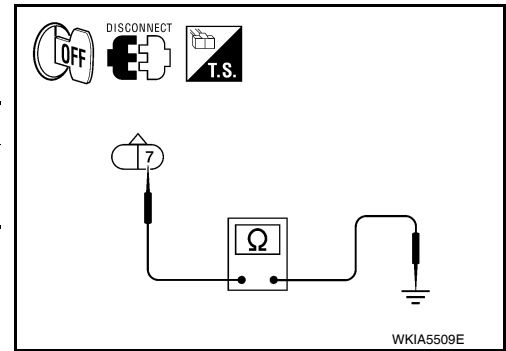


2. Check continuity between license plate lamp harness connector and ground.

License plate lamp connector		Terminal	Ground	Continuity
RH	B17 (Hatchback) B144 (Sedan)	2		Ground
LH	B16 (Hatchback) B143 (Sedan)			

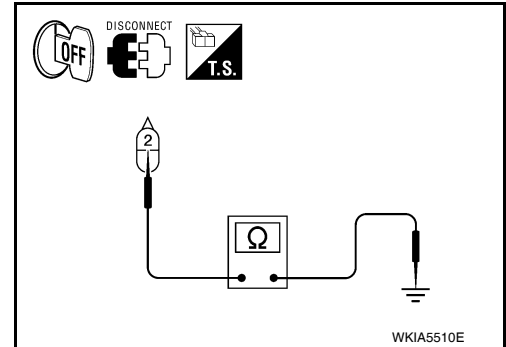

3. Check continuity between rear combination lamp harness connector and ground.

Rear combination lamp connector		Terminal	Ground	Continuity
RH	B107	1		Ground
LH	B25			

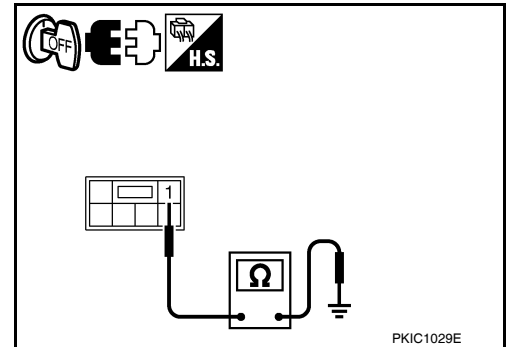

OK or NG

- OK >> Check bulbs.
- NG >> Repair harness or connector.

Parking, License Plate and Tail Lamps Do Not Turn OFF (After Approx. 10 Minutes)

INFOID:000000005929127

- This symptom is related to the ignition relay in IPDM E/R. Refer to [PG-18, "Function of Detecting Ignition Relay Malfunction"](#).
- Select "BCM" on CONSULT-III. Select "HEADLAMP" on "SELECT TEST ITEM" screen and select "DATA MONITOR" on "SELECT DIAG MODE" screen. If "LIGHT SW 1ST" is OFF when lighting switch is OFF, replace IPDM E/R.

Bulb Replacement

INFOID:000000005929128

PARKING LAMP

Refer to [LT-87, "Bulb Replacement"](#).

LICENSE PLATE LAMP

Hatchback

1. Remove the license plate lamp. Refer to [LT-85, "Removal and Installation"](#).
2. Turn bulb socket counterclockwise and unlock it.
3. Remove bulb from the socket.
4. Installation is in the reverse order of removal.


Sedan

1. Remove the trunk lid finisher. Refer to [EI-33, "Removal and Installation"](#).

PARKING, LICENSE PLATE AND TAIL LAMPS

< SERVICE INFORMATION >

2. Remove the license plate lamp bulb socket (1) and remove the license plate lamp bulb (2).
3. Installation is in the reverse order of removal.

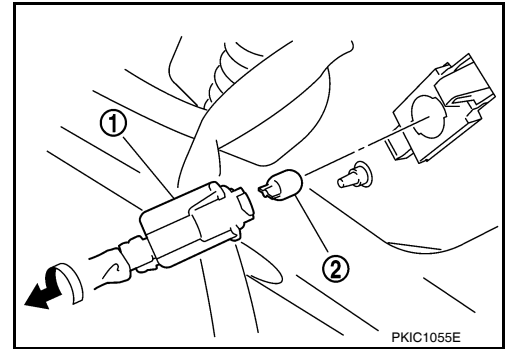

TAIL LAMP

Refer to [LT-87, "Bulb Replacement"](#).


Removal and Installation

INFOID:000000005929129

PARKING LAMP

Refer to [LT-88, "Removal and Installation"](#).

LICENSE PLATE LAMP-HATCHBACK

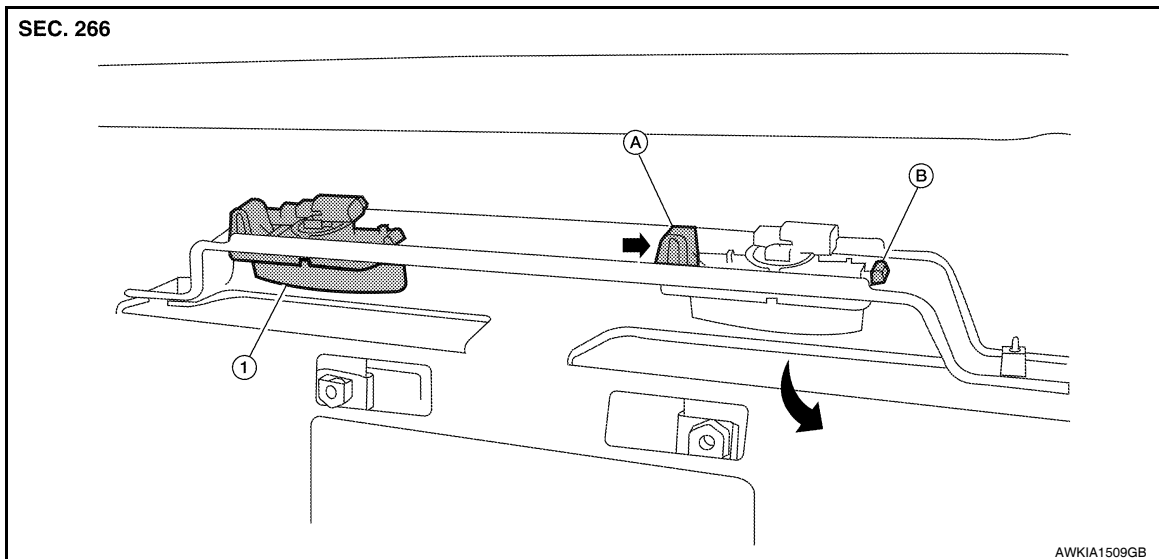

1. License plate lamp

A. Pawl

B. Hook

Removal

1. Press the license plate lamp pawl on the side of the rear bumper fascia, then swing the license plate lamp down to release the license plate lamp hook from the rear bumper fascia.
2. Disconnect the license plate lamp connector and remove the licence plate lamp.

Installation

Installation is in the reverse order of removal.

LICENSE PLATE LAMP-SEDAN


Removal

1. Remove the license plate lamp finisher. Refer to [EI-59, "Removal and Installation"](#).

PARKING, LICENSE PLATE AND TAIL LAMPS

< SERVICE INFORMATION >

2. Remove the license plate lamp assembly (1).

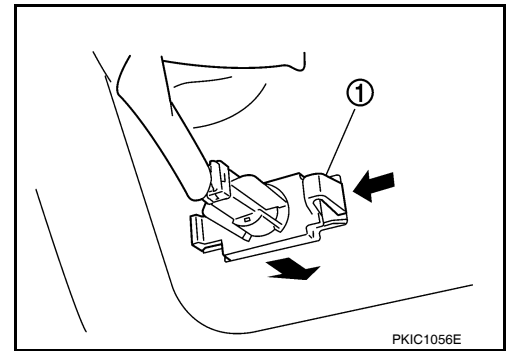

Installation

Installation is in the reverse order of removal.

TAIL LAMP

Refer to [LT-88, "Removal and Installation"](#).

REAR COMBINATION LAMP


< SERVICE INFORMATION >

REAR COMBINATION LAMP

Component

INFOID:000000005929130

Hatchback

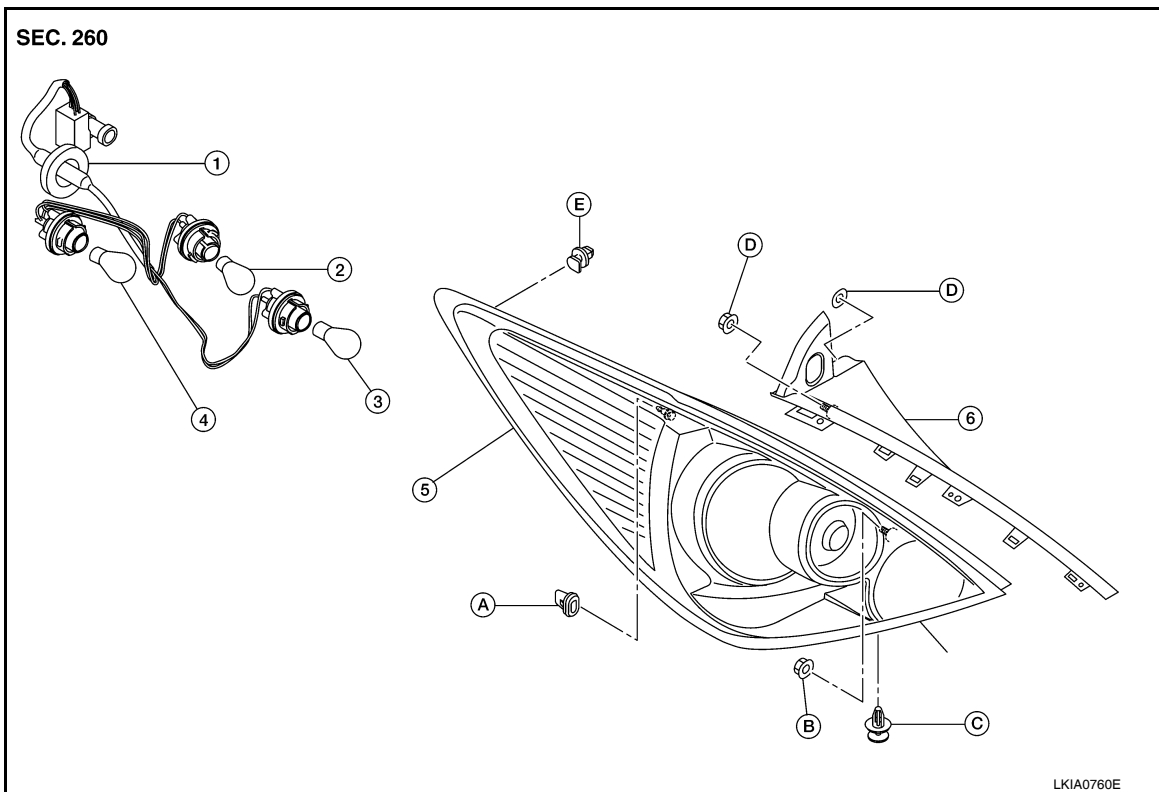

- | | | |
|----------------------------------|-----------------------------------|----------------------|
| 1. Rear combination lamp harness | 2. Turn signal lamp bulb | 3. Back-up lamp bulb |
| 4. Stop/tail lamp bulb | 5. Rear combination lamp assembly | 6. Bumper stay |
| A. Grommet | B. Nut | C. Clip |
| D. Nuts | E. Clip | |

Bulb Replacement

INFOID:000000006416709

HATCHBACK

CAUTION:

It is not necessary to remove the luggage side finisher, Doing so may render the part damaged or unusable.

Removal

1. Remove the rear combination lamp assembly. Refer to [LT-88. "Removal and Installation"](#).
2. Turn bulb socket counterclockwise and unlock it.
3. Remove bulb.

Installation

Installation is in the reverse order of removal.

SEDAN


Removal

1. Remove trunk side finisher. Refer to [EI-59. "Removal and Installation"](#).

REAR COMBINATION LAMP

< SERVICE INFORMATION >

2. Turn bulb socket counterclockwise and unlock it.
3. Remove the stop/tail lamp bulb (1), turn signal lamp bulb (2), and the back-up lamp bulb (3).

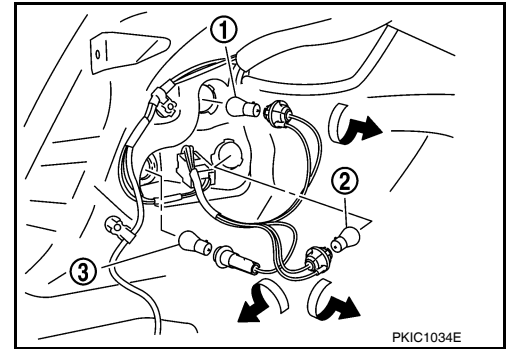

Installation

Installation is in the reverse order of removal.

Removal and Installation

INFOID:000000005929132


HATCHBACK

CAUTION:

It is not necessary to remove the luggage side finisher. Doing so may render the part damaged or unusable.

Removal

1. Remove the access panels using suitable tool.
2. Remove rear combination lamp assembly nuts.
3. Pull the rear combination lamp assembly toward rear of the vehicle.
4. Disconnect rear combination lamp connector, and remove rear combination lamp assembly.

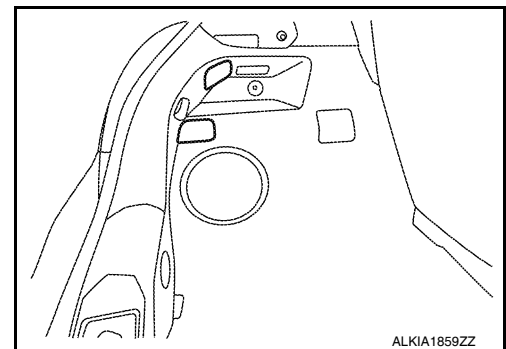


Installation

Installation is in the reverse order of removal.

SEDAN

Removal

1. Remove trunk side finisher. Refer to [EI-56, "Removal and Installation"](#).
2. Remove the rear combination lamp assembly nuts (1).
3. Remove the rear combination lamp assembly (2).
4. Remove the rear combination lamp assembly seal (3).

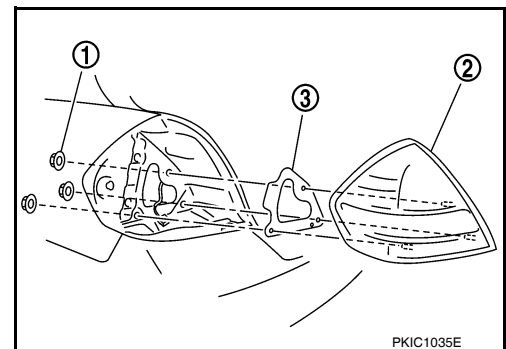

Installation

Installation is in the reverse order of removal.

Disassembly and Assembly

INFOID:000000005929133

DISSASSEMBLY

1. Remove the rear combination lamp harness.

REAR COMBINATION LAMP

< SERVICE INFORMATION >

2. Remove the bulbs from the rear combination lamp harness, as necessary.
3. Remove the bumper stay (hatchback only).
4. Remove the rear combination lamp assembly seal (sedan only).

ASSEMBLY

Assembly is in the reverse order of disassembly.

A

B

C

D

E

F

G

H

I

J

LT

L

M

N

O

P

INTERIOR LAMP

< SERVICE INFORMATION >


INTERIOR LAMP

Map Lamp

INFOID:000000005929134

BULB REPLACEMENT


1. Remove the map lamp lens (1).
2. Remove the bulb from lamp.
NOTE:
Pull bulb end from Y-shaped connector first to remove.
3. Installation is in the reverse order of removal.
 - Install the map lamp lens (1) so the round lens is positioned to the front of the vehicle as shown. There is a tab on the lens to prevent incorrect installation of the lens.

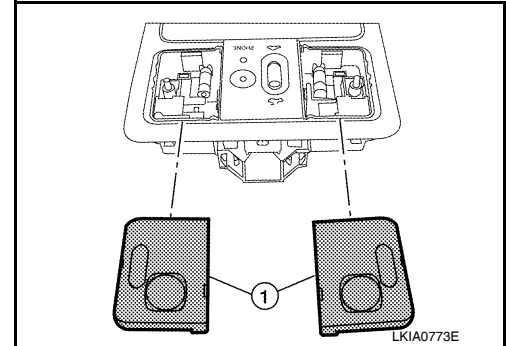

REMOVAL AND INSTALLATION

Removal

1. Insert a suitable tool and disengage the pawl (A) fittings from the map lamp (1).
2. Disconnect map lamp connector and remove map lamp (1).

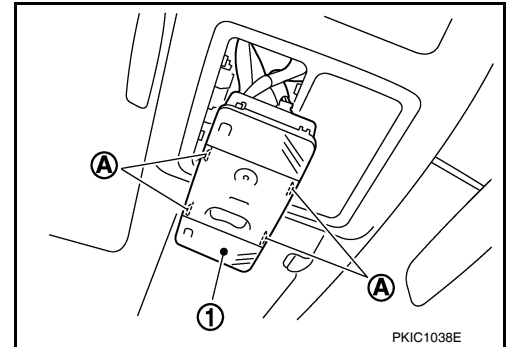


Installation

Installation is in the reverse order of removal.

DISASSEMBLY AND ASSEMBLY

Disassembly

1. Remove screw (A).
2. Remove sunroof switch (1).

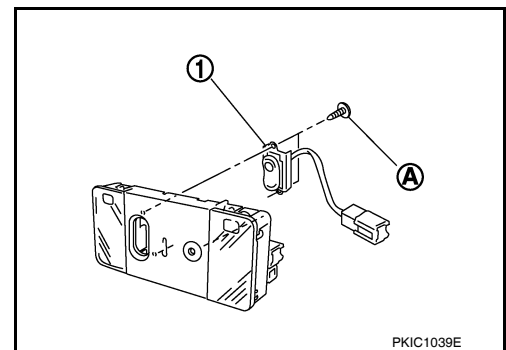

Assembly

Assembly is in the reverse order of disassembly.


Luggage Room Lamp, Hatch Back

INFOID:000000005929135

BULB REPLACEMENT

INTERIOR LAMP

< SERVICE INFORMATION >

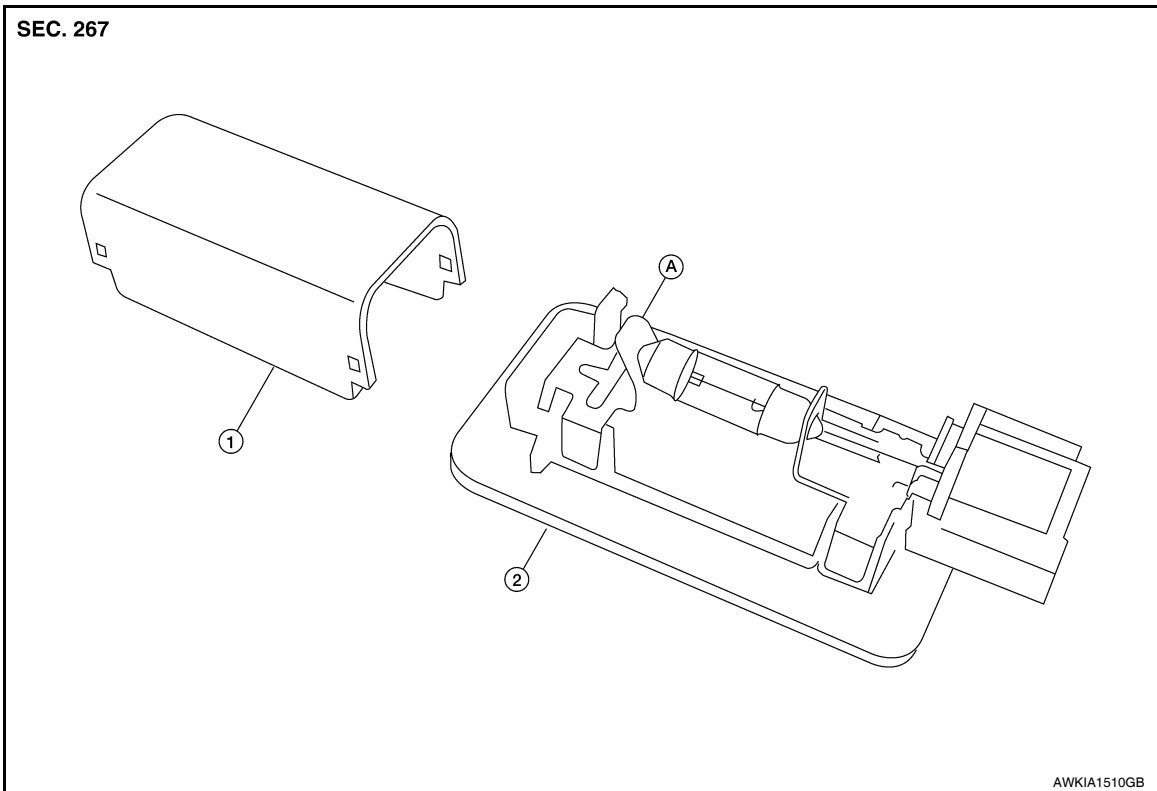

1. Luggage compartment lamp bulb cover 2. Luggage compartment lamp A. Tab A

1. Remove luggage compartment lamp from the luggage side finisher LH.
2. Remove luggage compartment lamp cover.
3. Press tab A and remove the bulb.
4. Installation is in the reverse order of removal.

REMOVAL AND INSTALLATION

Removal

1. Remove luggage compartment lamp from the luggage side finisher LH.
2. Disconnect luggage compartment lamp connector.

Installation

Installation is in the reverse order of removal.

Trunk Room Lamp, Sedan

INFOID:000000005929136

BULB REPLACEMENT

1. Press the tab and open the cover.
2. Remove the bulb.

REMOVAL AND INSTALLATION

Removal

1. Flex the tab and separate the trunk room lamp from the panel.
2. Disconnect the electrical connector and remove the lamp.

Installation

Installation is in the reverse order of removal.

Vanity Mirror Lamp

INFOID:000000005929137

BULB REPLACEMENT

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

LT

INTERIOR LAMP

< SERVICE INFORMATION >

Removal

1. Remove the lens using a suitable tool.
2. Remove the bulb.

Installation

Installation is in the reverse order of removal.


INTERIOR ROOM LAMP

< SERVICE INFORMATION >

INTERIOR ROOM LAMP

Component Parts and Harness Connector Location

INFOID:000000005929138

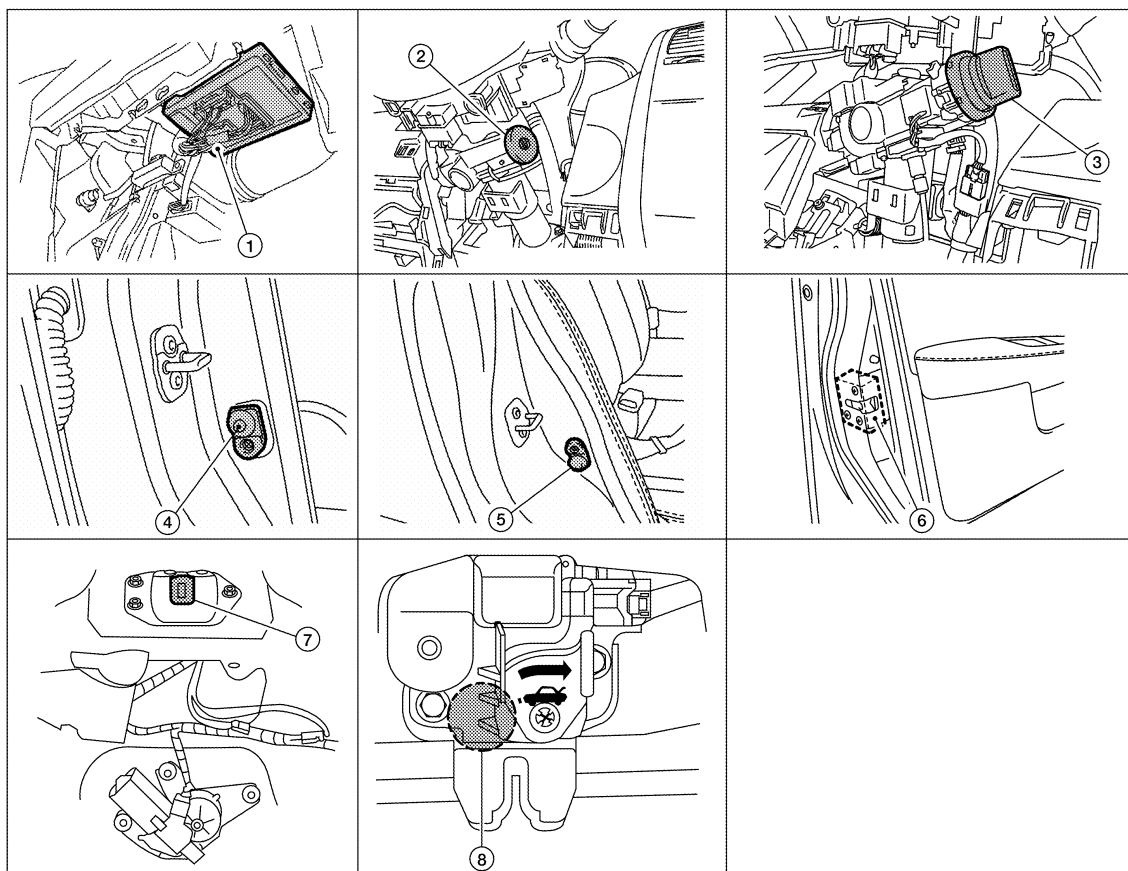

L1IA2936E

- | | | |
|---|---|---|
| 1. BCM M18, M19 and M20 (view with glove box removed) | 2. Key switch and key lock solenoid (without Intelligent Key) M27 | 3. Key switch and ignition knob switch (with Intelligent Key) M73 |
| 4. Front door switch LH B8 and RH B108 | 5. Rear door switch LH B6 and RH B116 | 6. Front door lock assembly LH (key cylinder switch) D14 |
| 7. Back door lock assembly D405 (hatchback) | 8. Trunk lamp switch and trunk release solenoid B127 (sedan) | |

System Description

INFOID:000000005937473

When room lamp switch is in DOOR position, room lamp ON/OFF is controlled by timer according to signals from switches including key switch, front door switch LH, unlock signal from keyfob, door lock and unlock switch, key cylinder lock and unlock switch, ignition switch.

When room lamp turns ON, there is a gradual brightening over 1 second.

When room lamp turns OFF, there is a gradual dimming over 1 second.

Interior room lamp timer is controlled by BCM (body control module).

Interior room lamp timer control settings can be changed with CONSULT-III.

POWER SUPPLY AND GROUND

Power is supplied at all times (without Intelligent Key system)

- through 10A fuse [No. 14, located in fuse block (J/B)]
- to key switch and key lock solenoid terminal 2,
- through 10A fuse [No. 8, located in fuse block (J/B)]
- to BCM terminal 57,
- through 40A fusible link (letter **g**, located in fuse and fusible link box)
- to BCM terminal 70.

Power is supplied at all times (with Intelligent Key system)

INTERIOR ROOM LAMP

< SERVICE INFORMATION >

- through 10A fuse (No. 31, located in fuse and fusible link box)
- to key switch and ignition knob switch terminals 2 and 4,
- through 10A fuse [No. 8, located in fuse block (J/B)]
- to BCM terminal 57,
- through 40A fusible link (letter **g** , located in fuse and fusible link box)
- to BCM terminal 70.

When key is inserted in the key switch and key lock solenoid, power is supplied (without Intelligent Key system)

- through key switch and key lock solenoid terminal 1
- to BCM terminal 37.

When key is inserted in the key switch and ignition knob switch, power is supplied (with Intelligent Key system)

- through key switch and ignition knob switch terminal 1
- to BCM terminal 37.

When ignition knob switch is pushed, power is supplied (with Intelligent Key system)

- through key switch and ignition knob switch terminal 3
- to Intelligent Key unit terminal 27.

With the ignition switch in the ON or START position, power is supplied

- through 10A fuse [No. 6, located in fuse block (J/B)]
- to BCM terminal 38.

Ground is supplied

- to BCM terminal 67
- through grounds M57 and M61.

When front door LH is opened, ground is supplied

- to BCM terminal 47
- through front door switch LH terminal 2
- through case ground of front door switch LH.

When front door RH is opened, ground is supplied

- to BCM terminal 12
- through front door switch RH terminal 2
- through case ground of front door switch RH.

When rear door LH is opened, ground is supplied

- to BCM terminal 48
- through rear door switch LH terminal 1
- through case ground of rear door switch LH.

When rear door RH is opened, ground is supplied

- to BCM terminal 13
- through rear door switch RH terminal 1
- through case ground of rear door switch RH.

When back door (hatchback) is opened, ground is supplied

- to BCM terminal 43
- through back door lock assembly (back door switch) terminal 3
- through back door lock assembly (back door switch) terminal 4
- through grounds B117, B132 and D402.

When trunk lid (sedan) is opened, ground is supplied

- to BCM terminal 42
- through trunk lamp switch and trunk release solenoid terminal 3
- through trunk lamp switch and trunk release solenoid terminal 1
- through grounds B117 and B132.

When front door LH is unlocked by front door lock assembly LH (key cylinder switch), the BCM receives a ground signal

- to BCM terminal 7
- through front door lock assembly LH (key cylinder switch) terminal 5
- through front door lock assembly LH (key cylinder switch) terminal 4
- through grounds M57 and M61.

When a signal, or combination of signals is received by BCM, ground is supplied

- to room lamp terminal 2
- through map lamp terminals 5 and 2 (with map lamp)
- through BCM terminal 63.

With power and ground supplied, the interior room lamp illuminates.

SWITCH OPERATION

When map lamp switch is ON (with map lamp), ground is supplied

INTERIOR ROOM LAMP

< SERVICE INFORMATION >

- through grounds M57 and M61.
- to map lamp terminal 1

Power is supplied

- through BCM terminal 56
- to map lamp terminal 4.

When interior room lamp switch is ON, ground is supplied

- to interior room lamp terminal 1
- through map lamp (with map lamp) terminal 7
- through map lamp (with map lamp) terminal 1
- through grounds M57 and M61.

Power is supplied

- through BCM terminal 56
- through map lamp (with map lamp) terminal 4
- through map lamp (with map lamp) terminal 6
- to room lamp terminal 3.

INTERIOR ROOM LAMP TIMER OPERATION

Without Intelligent Key System

When room lamp switch is in DOOR position, and when all conditions below are met, BCM performs timer control (maximum 30 seconds) for room lamp ON/OFF.

In addition, when the interior room lamp turns ON or OFF there is gradual brightening or dimming over 1 second.

Power is supplied

- through 10A fuse [No. 14, located in fuse block (J/B)]
- to key switch and key lock solenoid terminal 2.

When the key is removed from ignition key cylinder (key switch OFF), power will not be supplied to BCM terminal 37.

When front door lock assembly LH (key cylinder switch) is unlocked, ground is supplied

- to BCM terminal 7
- through front door lock assembly LH (key cylinder switch) terminal 5
- through front door lock assembly LH (key cylinder switch) terminal 4
- through grounds M57 and M61.

At the time that front door LH is opened, BCM detects that front door LH is unlocked. It determines that interior room lamp timer operation condition is met, and turns the room lamp ON for 30 seconds.

When key is in ignition key cylinder (key switch ON),

Power is supplied

- through key switch and key lock solenoid terminal 1
- to BCM terminal 37.

When key is removed from key switch and key lock solenoid (key switch OFF), the power supply to BCM terminal 37 is terminated. BCM detects that key has been removed, determines that interior room lamp timer conditions are met, and turns the room lamp ON for 30 seconds.

When front door LH opens → closes, and the key is not inserted in the key switch and key lock solenoid (key switch OFF), voltage at BCM terminal 47 changes between 0V (door open) → 12V (door closed). The BCM determines that conditions for room lamp operation are met and turns the room lamp ON for 30 seconds.

Interior room lamp timer control is canceled under the following conditions:

- Front door LH is locked (locked by front door lock assembly LH (key cylinder switch), keyfob or door lock/unlock switch).
- Front door LH is opened (front door switch LH).
- Ignition switch ON.

With Intelligent Key System

When the room lamp switch is in DOOR position, and when all conditions below are met, BCM performs timer control (maximum 30 second) for room lamp ON/OFF.

In addition, when interior room lamp turns ON or OFF there is gradual brightening or dimming over 1 second.

Power is supplied

- through 10A fuse (No. 31, located in fuse and fusible link box)
- to key switch and ignition knob switch terminals 2 and 4.

When key is removed from ignition key cylinder (key switch OFF), power will not be supplied to BCM terminal 37.

When the ignition knob switch is released, power will not be supplied to Intelligent Key unit terminal 27.

When front door lock assembly LH (key cylinder switch) is unlocked, ground is supplied

A

B

C

D

E

F

G

H

I

J

LT

L

M

N

O

P

INTERIOR ROOM LAMP

< SERVICE INFORMATION >

- to BCM terminal 7
- through front door lock assembly LH (key cylinder switch) terminal 5
- through front door lock assembly LH (key cylinder switch) terminal 4
- through grounds M57 and M61.

At the time the front door LH is opened, the BCM detects the front door LH is unlocked. It determines that the interior room lamp timer operation conditions are met, and interior room lamp ON for 30 seconds.

When the key is in ignition key cylinder (key switch ON), or ignition knob switch is pushed, power is supplied

- through key switch and ignition knob switch terminal 1
- to BCM terminal 37, or
- through key switch and ignition knob switch terminal 3
- to Intelligent Key unit terminal 27.

When the key is removed from key switch (key switch OFF), power supply to BCM terminal 37 is terminated.

When the ignition knob switch is released, power supply to intelligent key unit is terminated. The BCM detects that the key has been removed, determines that interior room lamp timer conditions are met, and turns room lamp ON for 30 seconds.

When the front door LH opens → closes, and key is not inserted in key switch (or ignition knob switch is released), BCM terminal 47 changes between 0V (door open) → 12V (door closed). BCM determines that conditions for room lamp operation are met, and turns room lamp ON for 30 seconds.

Interior room lamp timer control is canceled under the following conditions:

- Front door LH is locked (with keyfob, front door lock assembly LH (key cylinder switch) or door lock/unlock switch).
- Front door LH is opened (front door switch LH).
- Ignition switch ON.

INTERIOR LAMP BATTERY SAVER CONTROL

If an interior room lamp is left ON, it will not be turned OFF even when door is closed.

BCM turns off interior lamp automatically to save battery 15 minutes after ignition switch is turned off.

After lamps are turned OFF by the battery saver system, the lamps illuminate again when

- front door lock assembly LH (key cylinder switch) is locked or unlocked
- door is opened or closed
- key is removed from ignition key cylinder or inserted in ignition key cylinder, or the ignition knob switch is pushed or released.


Interior lamp battery saver control time period can be changed by the function setting of CONSULT-III.

INTERIOR ROOM LAMP

< SERVICE INFORMATION >

Schematic

INFOID:000000005929140

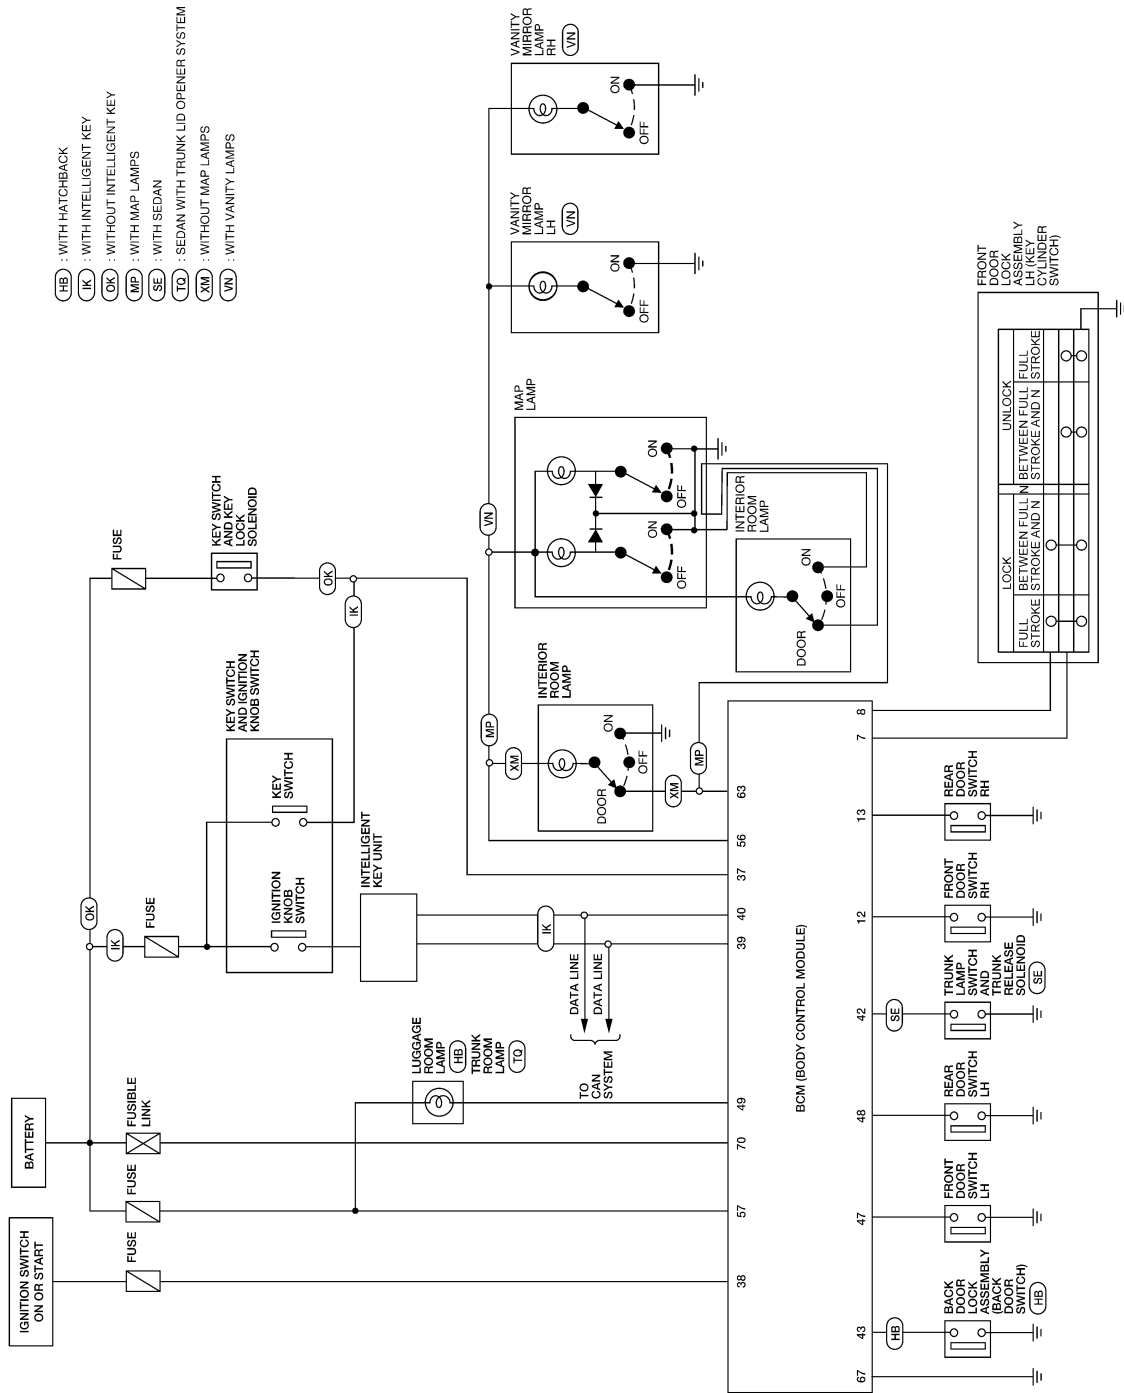

ABLWA1029GB

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

LT


INTERIOR ROOM LAMP

< SERVICE INFORMATION >

Wiring Diagram - INT/L -


INFOID:000000005929141

LT-INT/L-01





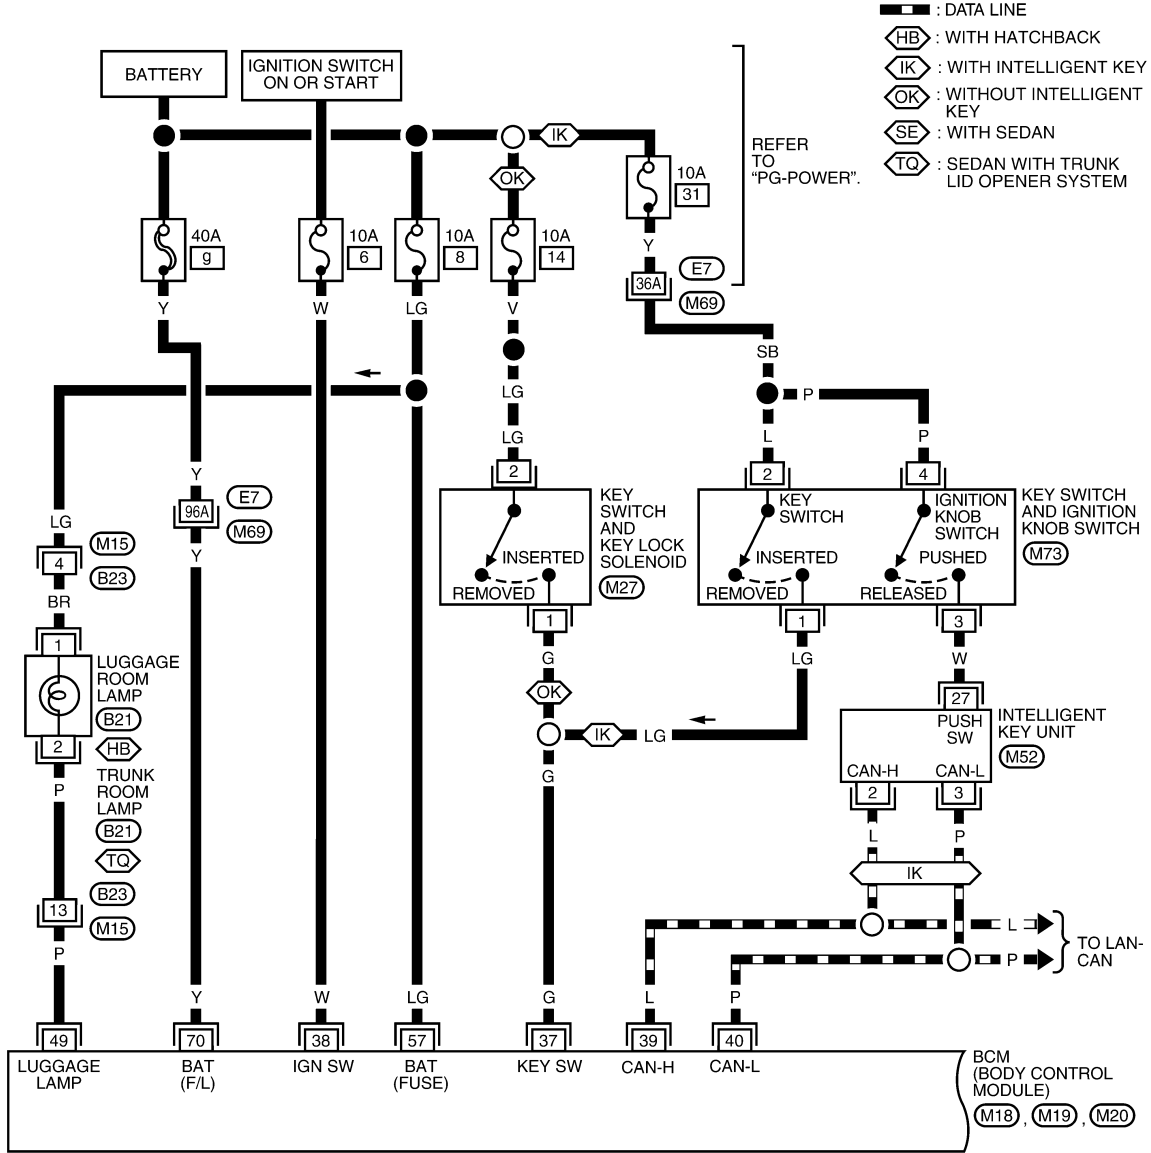


- : DATA LINE
- HB : WITH HATCHBACK
- IK : WITH INTELLIGENT KEY
- OK : WITHOUT INTELLIGENT KEY
- SE : WITH SEDAN
- TQ : SEDAN WITH TRUNK LID OPENER SYSTEM

 REFER TO "PG-POWER".



     REFER TO THE FOLLOWING.
 (M69) - SUPER MULTIPLE JUNCTION (SMJ)





ABLWA1030GB

INTERIOR ROOM LAMP

< SERVICE INFORMATION >

LT-INTL/L-02

HB : WITH HATCHBACK
SE : WITH SEDAN

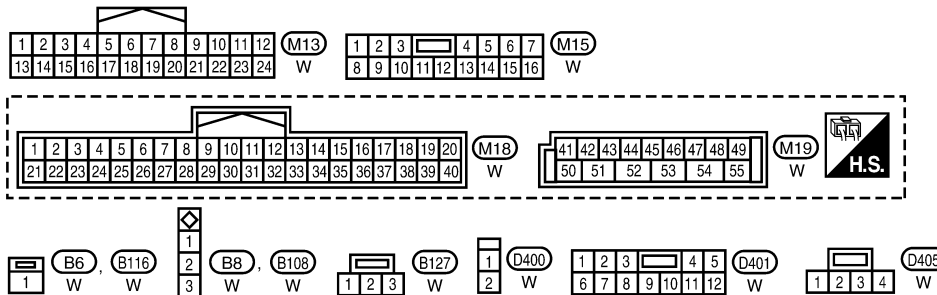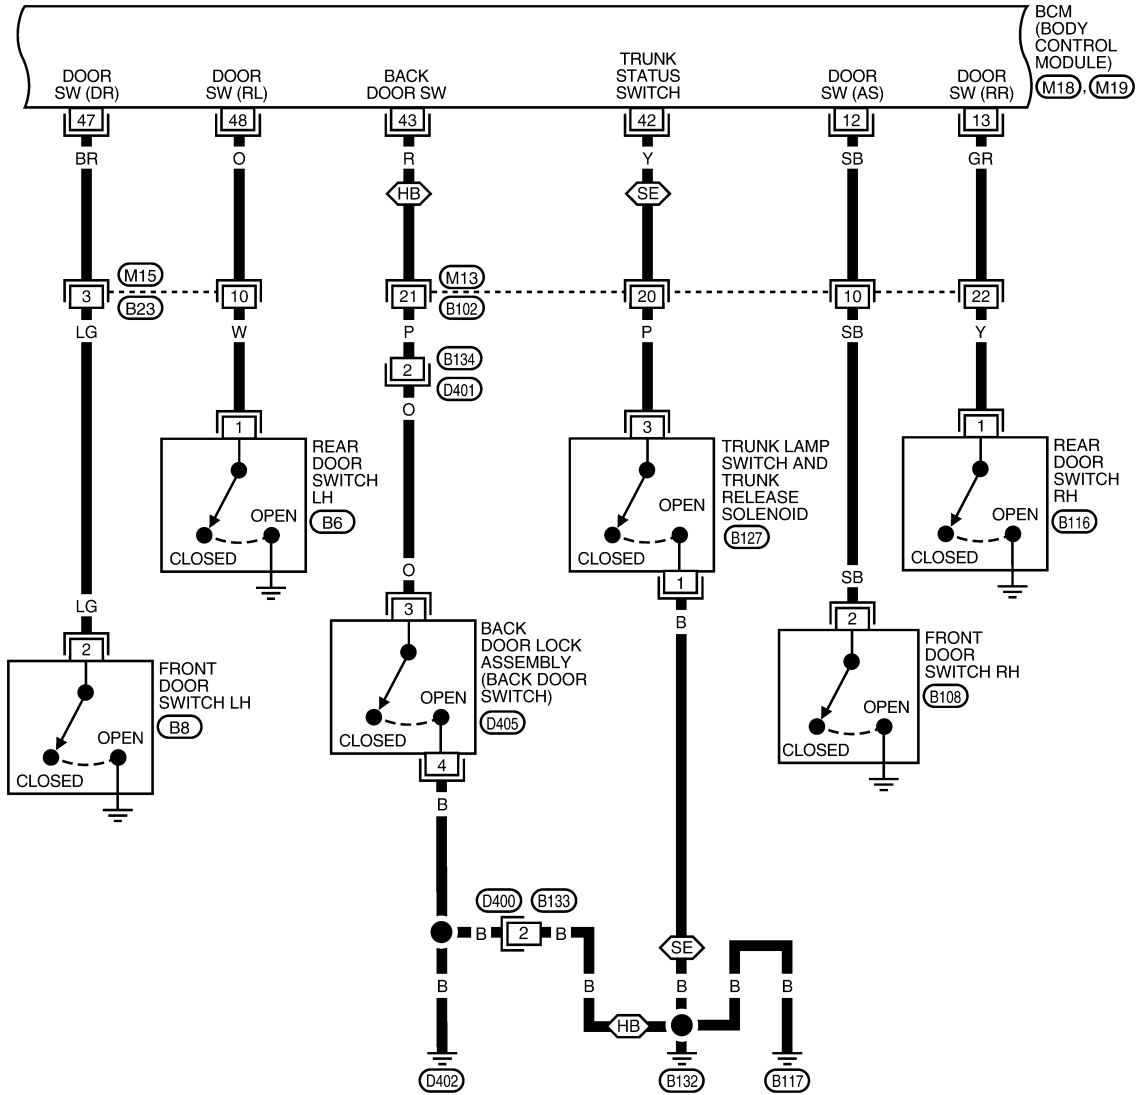

WKWA5814E



INTERIOR ROOM LAMP

< SERVICE INFORMATION >

WITH MAP LAMPS

LT-INT/L-05

: WITH VANITY LAMPS

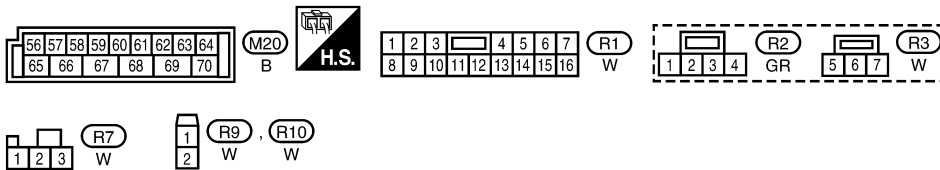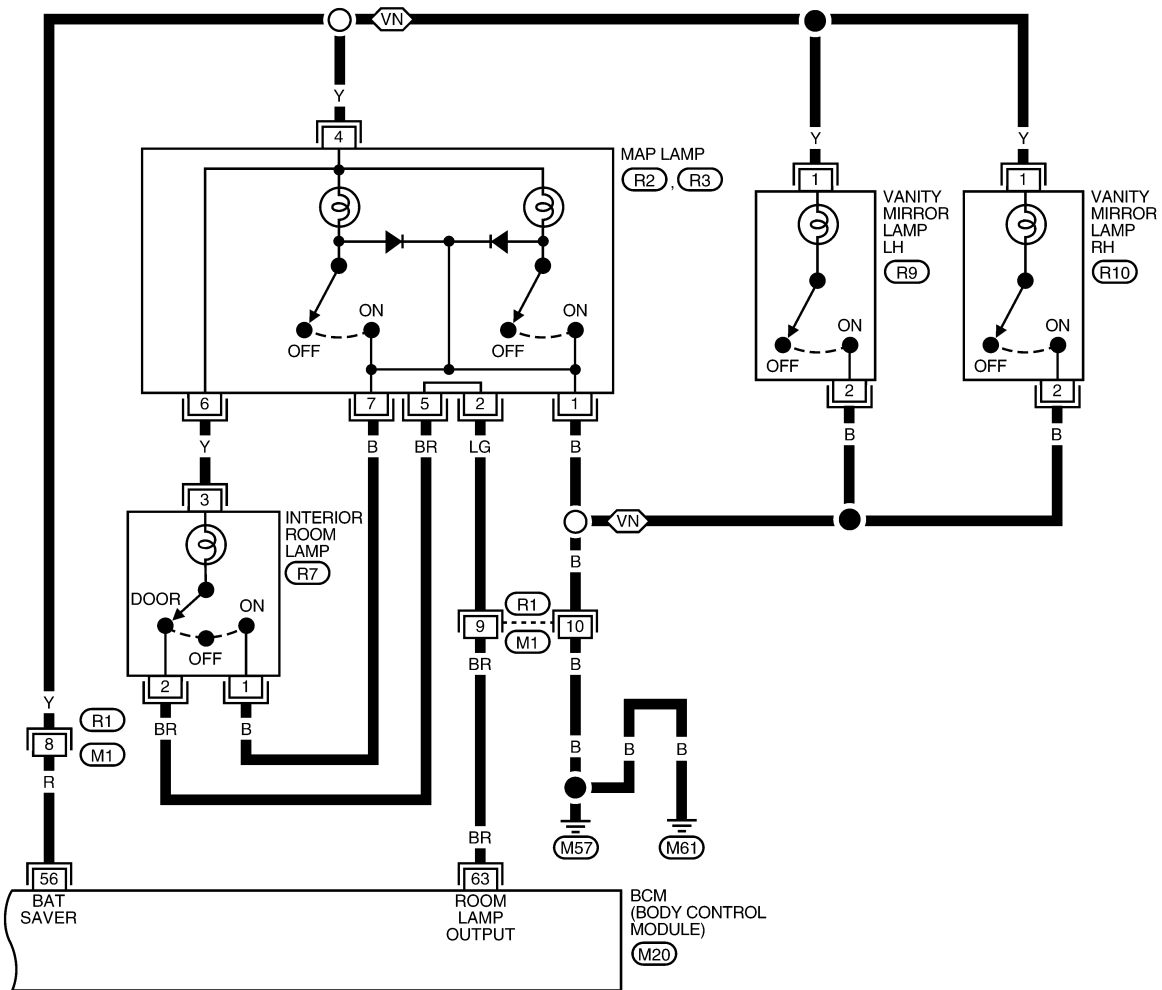

ABLWA1032GB

INFOID:000000005929142

Terminal and Reference Value for BCM

Refer to [BCS-12. "Terminal and Reference Value for BCM"](#).

How to Proceed with Trouble Diagnosis

INFOID:000000005929143

1. Confirm the symptom or customer complaint.

INTERIOR ROOM LAMP

< SERVICE INFORMATION >

2. Understand operation description and function description. Refer to [LT-93, "System Description"](#) .
3. Perform the preliminary check. Refer to [LT-103, "Preliminary Check"](#) .
4. Check symptom and repair or replace the cause of the malfunction.
5. Does the interior room lamp operate normally? If YES, GO TO 6. If NO, GO TO 4.
6. Inspection End

Preliminary Check

INFOID:000000005929144

CHECK POWER SUPPLY AND GROUND CIRCUIT FOR BCM

Refer to [BCS-16, "BCM Power Supply and Ground Circuit Inspection"](#) .

CHECK POWER SUPPLY AND GROUND CIRCUIT FOR IPDM E/R

Refer to [PG-27, "IPDM E/R Power/Ground Circuit Inspection"](#) .

CONSULT-III Function (BCM)

INFOID:000000006227569

CONSULT-III can display each diagnostic item using the diagnostic test modes shown following.

BCM diagnostic test item	Diagnostic mode	Content
Inspection by part	WORK SUPPORT	Supports inspections and adjustments. Commands are transmitted to the BCM for setting the status suitable for required operation, input/output signals are received from the BCM and received data is displayed.
	DATA MONITOR	Displays BCM input/output data in real time.
	ACTIVE TEST	Operation of electrical loads can be checked by sending drive signal to them.
	SELF DIAGNOSTIC RESULT	Displays BCM self-diagnosis results.
	CAN DIAG SUPPORT MNTR	The results of transmit/receive diagnosis of CAN communication can be read.
	ECU IDENTIFICATION	BCM part number can be read.
	CONFIGURATION	Performs BCM configuration read/write functions.

ITEMS OF EACH PART

NOTE:

CONSULT-III will only display systems the vehicle possesses.

System and item	CONSULT-III display	Diagnostic test mode (Inspection by part)						
		WORK SUPPORT	SELF-DIAG RESULTS	CAN DIAG SUPPORT MNTR	DATA MONITOR	ECU PART NUMBER	ACTIVE TEST	CONFIGURATION
BCM	BCM	×	×	×		×		×
Power door lock system	DOOR LOCK	×			×		×	
Rear defogger	REAR DEFOGGER				×		×	
Warning chime	BUZZER				×		×	
Room lamp timer	INT LAMP	×			×		×	
Headlamp	HEAD LAMP	×			×		×	
Wiper	WIPER	×			×		×	
Turn signal lamp Hazard lamp	FLASHER				×		×	
Intelligent Key ²	INTELLIGENT KEY			×	×			

INTERIOR ROOM LAMP

< SERVICE INFORMATION >

System and item	CONSULT-III display	Diagnostic test mode (Inspection by part)						
		WORK SUPPORT	SELF-DIAG RESULTS	CAN DIAG SUPPORT MNTR	DATA MONITOR	ECU PART NUMBER	ACTIVE TEST	CONFIGURATION
Blower fan switch signal Air conditioner switch signal	AIR CONDITIONER				×		×	
Combination switch	COMB SW				×			
NVIS (NATS)	IMMU				×		×	
Interior lamp battery saver	BATTERY SAVER	×			×		×	
Back door/Trunk	TRUNK/BACK DOOR				×		×	
Theft alarm	THEFT ALM	×			×		×	
Retained accessory power control	RETAINED PWR	×			×		×	
Oil pressure switch	SIGNAL BUFFER				×		×	
Panic alarm	PANIC ALARM						×	
Remote keyless entry system ¹	MULTI REMOTE ENTRY	×			×		×	

1 : With remote keyless entry system

2: With Intelligent Key system

WORK SUPPORT

Display Item List

Item	Description
RESET SETTING VALUE	Return a value set with WORK SUPPORT of each system to a default value in factory shipment.

Interior Room Lamp Control Does Not Operate (With Map Lamp)

INFOID:000000005929146

1.CHECK EACH SWITCH

Select "BCM" on CONSULT-III. With "INT LAMP" data monitor, make sure switches listed in display item list turn ON-OFF linked with switch operation. Refer to [BCS-17, "CONSULT-III Function \(BCM\)"](#) for switches and their functions.

OK or NG

- OK >> GO TO 2.
- NG >> Inspect malfunctioning switch system.

2.ACTIVE TEST

1. Select "BCM" on CONSULT-III. Select "INT LAMP" active test.
2. When room lamp switch is in DOOR position, make sure room lamp operates.

Room lamp should operate.

OK or NG

- OK >> Replace BCM. Refer to [BCS-19, "Removal and Installation of BCM"](#).
- NG >> GO TO 3.

3.CHECK ROOM LAMP INPUT VOLTAGE

INTERIOR ROOM LAMP


< SERVICE INFORMATION >

1. Turn ignition switch OFF.
2. Check voltage between interior room lamp harness connector R7 terminal 3 and ground.

3 - Ground : **Battery voltage.**

OK or NG

- OK >> GO TO 6.
 NG >> GO TO 4.

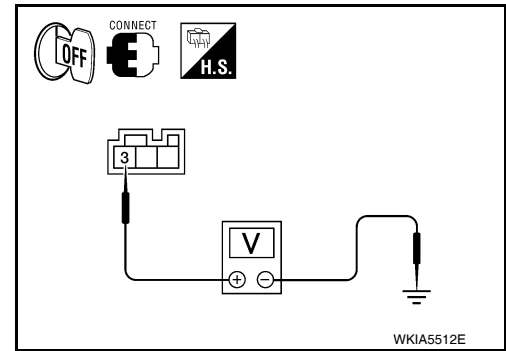


4. CHECK MAP LAMP INPUT CIRCUIT

1. Map lamp switch is in OFF position.
2. Check voltage between map lamp harness connector R2 terminal 4 and ground.

4 - Ground : **Battery voltage.**

OK or NG

- OK >> GO TO 5.
 NG >> Repair harness or connector.

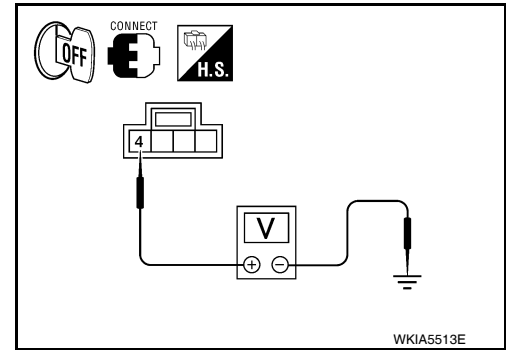


5. CHECK ROOM LAMP INPUT CIRCUIT

1. Disconnect map lamp connector and interior room lamp connector.
2. Check continuity between map lamp harness connector R3 (A) terminal 6 and interior room lamp harness connector R7 (B) terminal 3.

6 - 3 : **Continuity should exist.**

OK or NG

- OK >> Replace map lamp.
 NG >> Repair harness or connector.

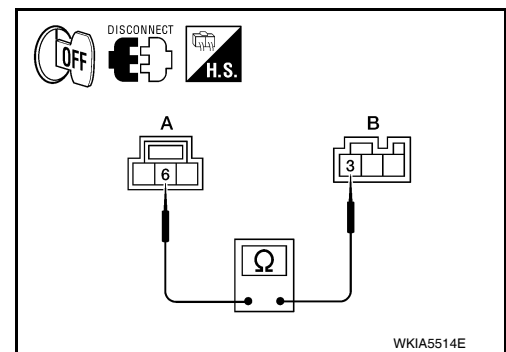


6. CHECK ROOM LAMP

1. Disconnect interior room lamp connector.
2. Check continuity between interior room lamp terminals.

Terminal		Condition	Continuity
Interior room lamp			
2	3	Room lamp switch is in DOOR position	Yes
		Room lamp switch is in OFF position	No

OK or NG

- OK >> GO TO 7.
 NG >> Check bulb. If OK, replace interior room lamp.

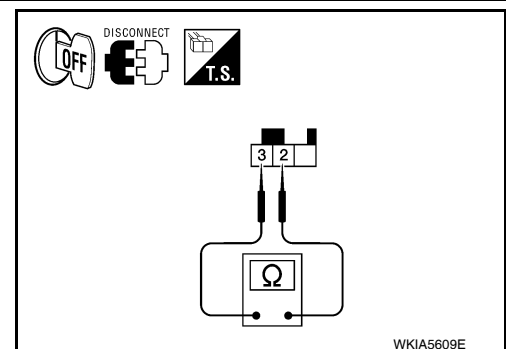

7. CHECK MAP LAMP

A
B
C
D
E
F
G
H
I
J
LT
L
M
N
O
P

INTERIOR ROOM LAMP


< SERVICE INFORMATION >

1. Disconnect map lamp connectors.
2. Check continuity between map lamp terminals.

2 - 5 : Continuity should exist.

OK or NG

- OK >> GO TO 8.
NG >> Replace map lamp.

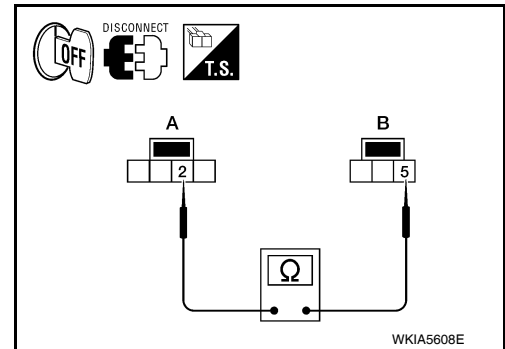


8. CHECK CIRCUIT BETWEEN ROOM LAMP AND MAP LAMP

Check continuity between interior room lamp harness connector R7 (A) terminal 2 and map lamp harness connector R3 (B) terminal 5.

2 - 5 : Continuity should exist.

OK or NG

- OK >> GO TO 9.
NG >> Repair harness or connector.

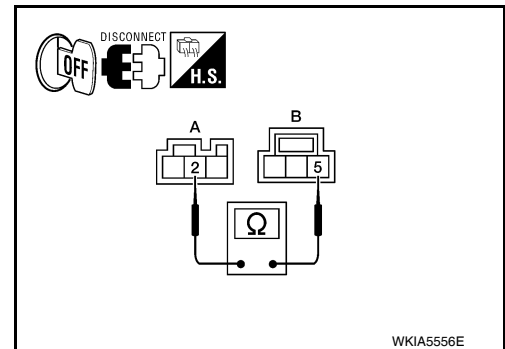


9. CHECK CIRCUIT BETWEEN MAP LAMP AND BCM

1. Disconnect BCM connector.
2. Check continuity between BCM harness connector M20 (A) terminal 63 and map lamp harness connector R2 (B) terminal 2.

63 - 2 : Continuity should exist.

OK or NG

- OK >> Replace BCM if room lamp does not work after setting the connector again. Refer to [BCS-19, "Removal and Installation of BCM"](#) .
NG >> Repair harness or connector.

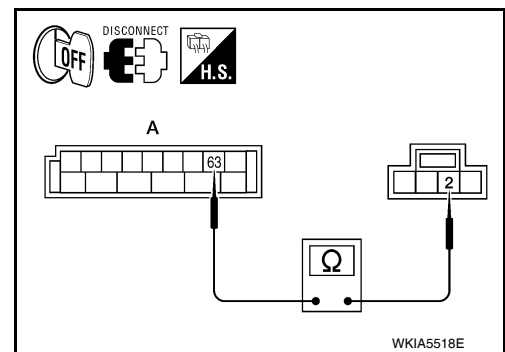

Interior Room Lamp Control Does Not Operate (Without Map Lamp)

INFOID:000000005929147

1. CHECK EACH SWITCH

Select "BCM" on CONSULT-III. With "INT LAMP" data monitor, make sure switches listed in display item list turn ON-OFF linked with switch operation. Refer to [BCS-17, "CONSULT-III Function \(BCM\)"](#) for switches and their functions.

OK or NG

- OK >> GO TO 2.
NG >> Inspect malfunctioning switch system.

2. ACTIVE TEST

1. Select "BCM" on CONSULT-III. Select "INT LAMP" active test.
2. When room lamp switch is in DOOR position, make sure room lamp operates.

Room lamp should operate.

OK or NG

- OK >> Replace BCM. Refer to [BCS-19, "Removal and Installation of BCM"](#) .
NG >> GO TO 3.

3. CHECK ROOM LAMP INPUT VOLTAGE

INTERIOR ROOM LAMP


< SERVICE INFORMATION >

1. Turn ignition switch OFF.
2. Check voltage between interior room lamp harness connector R7 terminal 3 and ground.

3 - Ground : Battery voltage should exist.

OK or NG

- OK >> GO TO 4.
NG >> GO TO 6.

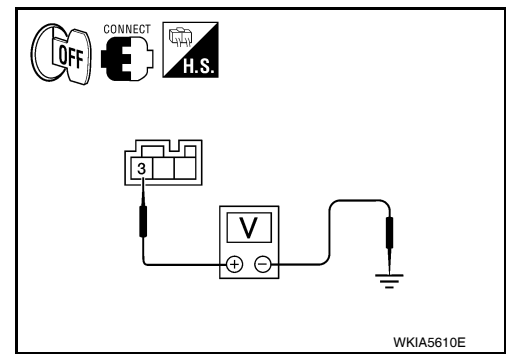


4. CHECK ROOM LAMP

1. Disconnect room lamp connector.
2. Check continuity between room lamp terminals.

Room lamp		Condition	Continuity
Terminal			
2	3	Room lamp switch is in DOOR position	Yes
		Room lamp switch is in OFF position	No

OK or NG

- OK >> GO TO 5.
NG >> Check bulb. If OK, replace room lamp. Refer to [LT-107. "Bulb Replacement"](#) .

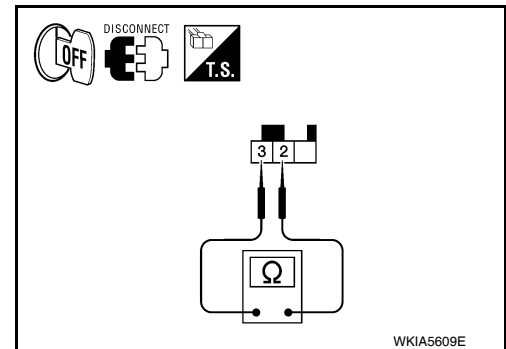


5. CHECK ROOM LAMP CIRCUIT

1. Disconnect BCM connector.
2. Check continuity between BCM harness connector M20 (A) terminal 56 and room lamp harness connector R7 (B) terminal 3.

56 - 3 : Continuity should exist.

OK or NG

- OK >> GO TO 6.
NG >> Repair harness or connector.

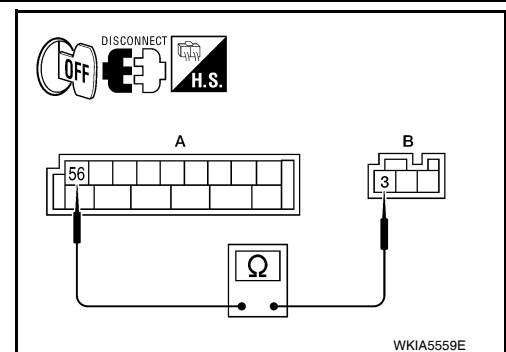


6. CHECK ROOM LAMP CIRCUIT

1. Disconnect BCM connector and room lamp connector.
2. Check continuity between BCM harness connector M20 (A) terminal 63 and room lamp harness connector R7 (B) terminal 2.

63 - 2 : Continuity should exist.

OK or NG

- OK >> Replace BCM if interior lamp does not work after setting the connector again. Refer to [BCS-19. "Removal and Installation of BCM"](#) .
NG >> Repair harness or connector.

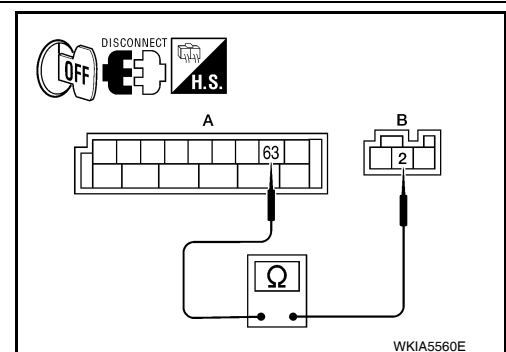

Bulb Replacement

ROOM LAMP

INFOID:000000005929148


INTERIOR ROOM LAMP

< SERVICE INFORMATION >

1. Remove lens (1) by inserting suitable tool and releasing LH (switch side first).
2. Remove bulb (2).
3. Installation is in the reverse order of removal.

NOTE:

Insert the lens hook end RH side first to install lens.

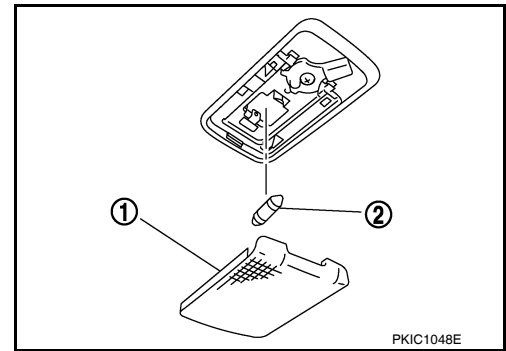


Removal and Installation

INFOID:000000005929149

ROOM LAMP

Removal

1. Remove lens (1) and remove the room lamp by pulling down to release the room lamp metal clips (A).
2. Disconnect connector and remove room lamp.

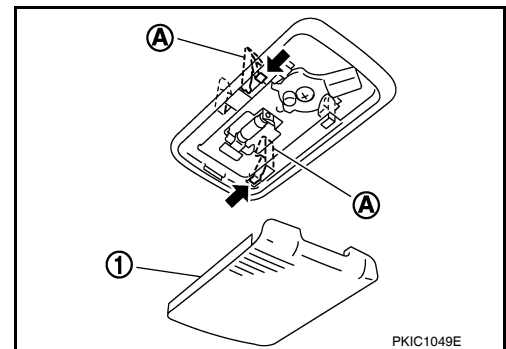

Installation

Installation is in the reverse order of removal.

ILLUMINATION

< SERVICE INFORMATION >

ILLUMINATION

System Description

INFOID:000000005929150

The control of the illumination lamps operation is dependent upon the position of the lighting switch. When the lighting switch is placed in the 1ST or 2ND position, the BCM (body control module) receives input signal requesting the illumination lamps to illuminate. This input signal is communicated to IPDM E/R (intelligent power distribution module engine room) across CAN communication lines. CPU (central processing unit) located in the IPDM E/R controls the tail lamp relay coil. This relay, when energized, directs power to the illumination lamps, which then illuminate.

Power is supplied at all times

- to ignition relay, located in IPDM E/R,
- to tail lamp relay, located in IPDM E/R,
- through 15A fuse (No. 52, located in IPDM E/R) and
- through 20A fuse (No. 53, located in IPDM E/R)
- to CPU located in IPDM E/R,
- through 40A fusible link (letter **g**, located in fuse and fusible link box)
- to BCM terminal 70, and
- through 10A fuse [No. 8, located in fuse block (J/B)]
- to BCM terminal 57.

With the ignition switch in the ON or START position, power is supplied

- to ignition relay, located in IPDM E/R, and
- through 10A fuse [No. 6, located in fuse block (J/B)]
- to BCM terminal 38.

With the ignition switch in the ACC or ON position, power is supplied

- through 10A fuse [No. 20, located in fuse block (J/B)]
- to BCM terminal 11.

Ground is supplied

- to BCM terminal 67
- through grounds M57 and M61
- to IPDM E/R terminals 39 and 59, and
- through grounds E15 and E24.

ILLUMINATION OPERATION BY LIGHTING SWITCH

With the lighting switch in the 1ST or 2ND position, BCM receives input signal requesting the illumination lamps to illuminate. This input signal is communicated to IPDM E/R across CAN communication lines. CPU located in the IPDM E/R controls the tail lamp relay coil, which, when energized, directs power

- through 10A fuse (No. 37, located in IPDM E/R)
- through IPDM E/R terminal 29
- to illumination control switch terminal 1
- to VDC OFF switch terminal 3 (with VDC)
- to audio unit terminal 9
- to front air control terminal 5
- to A/T shift selector terminal 3 (with 4-speed A/T)
- to CVT shift selector terminal 3 (with CVT)
- to hazard switch terminal 3
- to combination meter terminal 12
- to door mirror remote control switch terminal 16
- to combination switch (spiral cable) terminal 26 (with steering wheel audio control switches)
- to steering wheel audio control switches through combination switch (spiral cable) terminal 18 (with steering wheel audio control switches).

Ground is supplied

- to VDC OFF switch terminal 4 (with VDC)
- to illumination control switch terminal 3, and
- through grounds M57 and M61.

The illumination control switch controls illumination intensity by varying the ground to the following

- through illumination control switch terminal 2
- to audio unit terminal 8
- to front air control terminal 6
- to A/T shift selector terminal 4 (with 4-speed A/T)
- to CVT shift selector terminal 3 (with CVT)

A

B

C

D

E

F

G

H

I

J

LT

L

M

N

O

P

ILLUMINATION

< SERVICE INFORMATION >

- to hazard switch terminal 4
- to combination meter terminal 13
- to door mirror remote control switch terminal 15
- to combination switch (spiral cable) terminal 27 (with steering wheel audio control switches)
- to steering wheel audio control switches through combination switch (spiral cable) terminal 21 (with steering wheel audio control switches).

With power and ground supplied, illumination lamps illuminate.

EXTERIOR LAMP BATTERY SAVER CONTROL

Refer to [LT-74, "System Description"](#).

CAN Communication System Description

INFOID:000000005929151


Refer to [LAN-7, "System Description"](#) .

ILLUMINATION

< SERVICE INFORMATION >

Schematic

INFOID:000000005929152

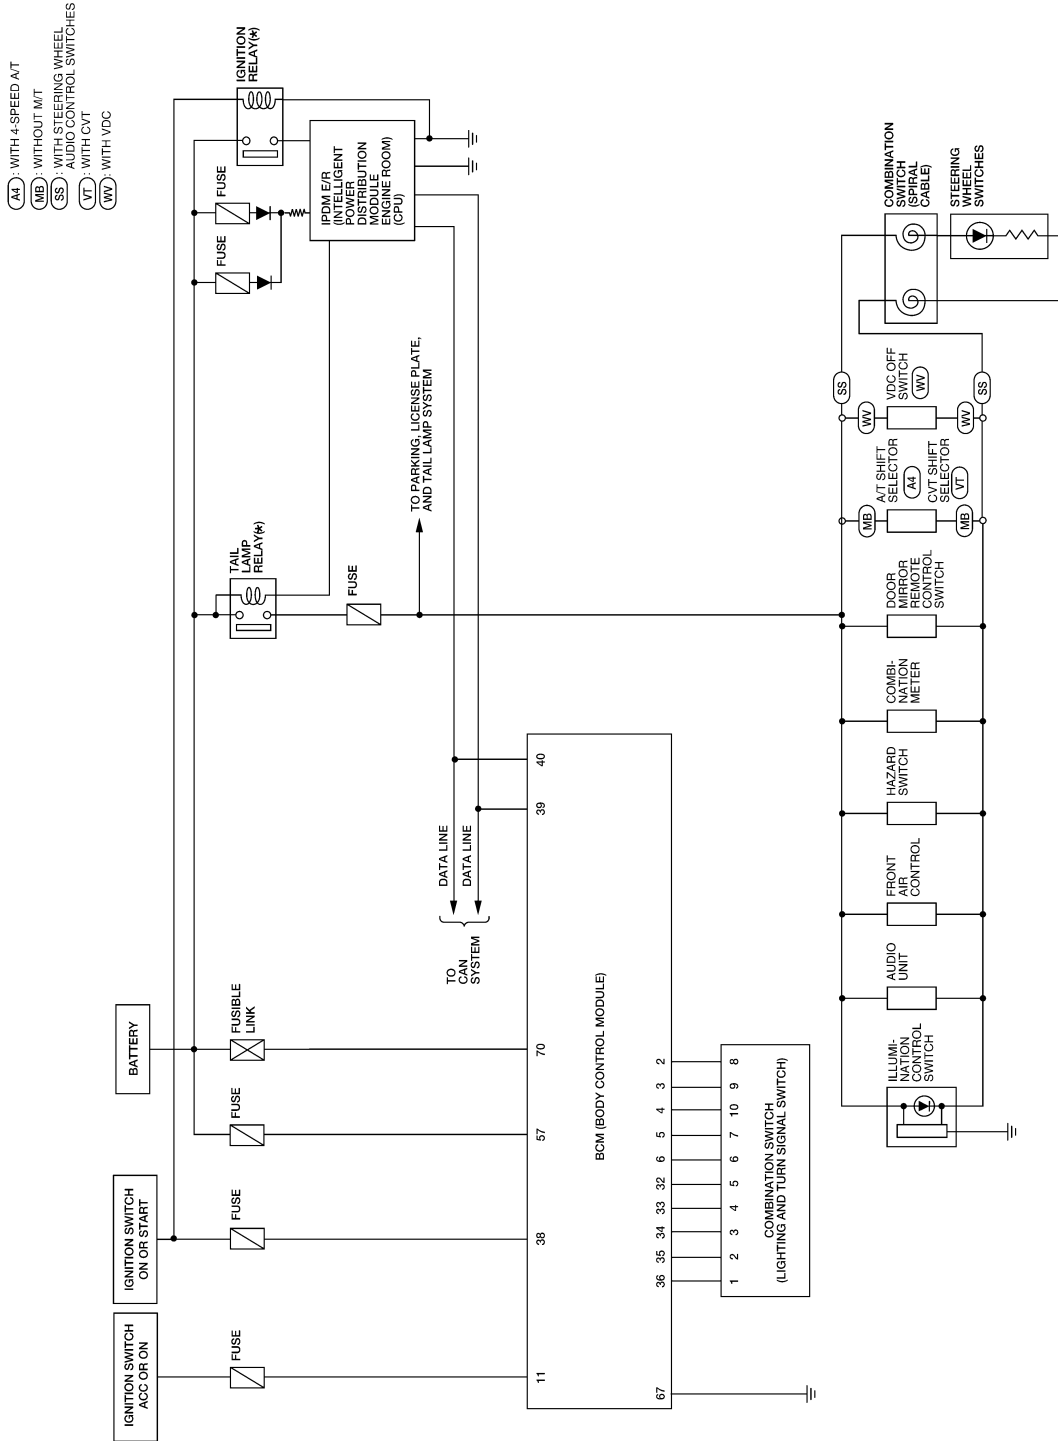

*: THIS RELAY IS BUILT INTO THE IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

ABLWA1033GB

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

LT

ILLUMINATION



< SERVICE INFORMATION >

Wiring Diagram - ILL -

INFOID:000000005929153

LT-ILL-01

▬ : DATA LINE

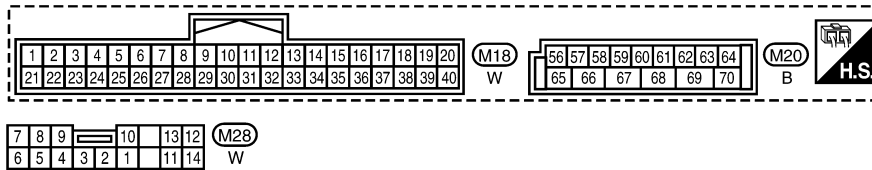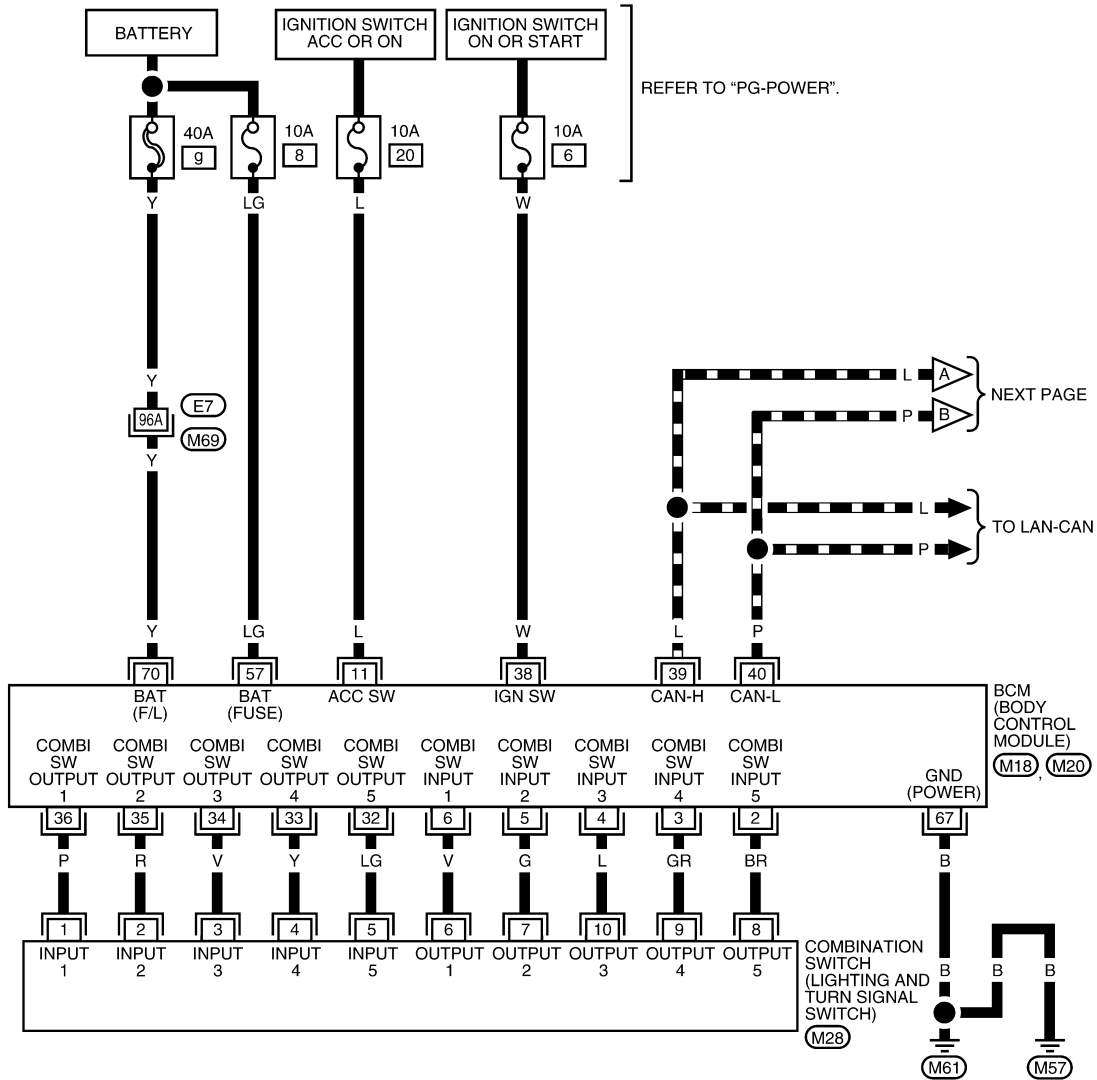

REFER TO THE FOLLOWING.
 (M69) - SUPER MULTIPLE JUNCTION (SMJ)


ABLWA1034GB

ILLUMINATION

< SERVICE INFORMATION >

LT-ILL-02

— : DATA LINE

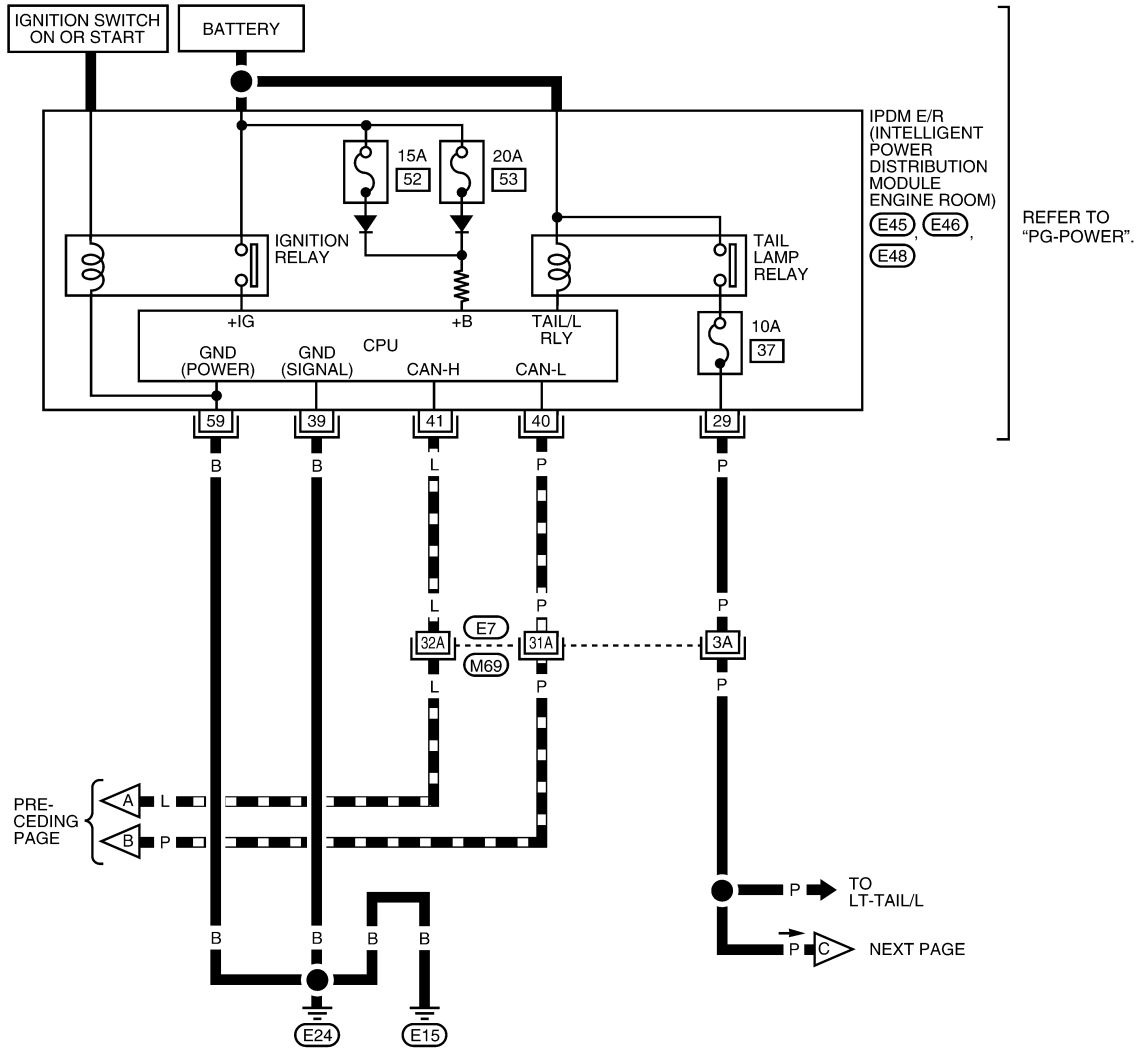


REFER TO "PG-POWER".

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) (E45), (E46), (E48)

PRE-CEDING PAGE

 TO LT-TAIL/L
NEXT PAGE



REFER TO THE FOLLOWING.
(M69) - SUPER MULTIPLE JUNCTION (SMJ)

ABLWA0674GB


A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P


LT

ILLUMINATION


< SERVICE INFORMATION >

LT-ILL-03

 : WITH VDC

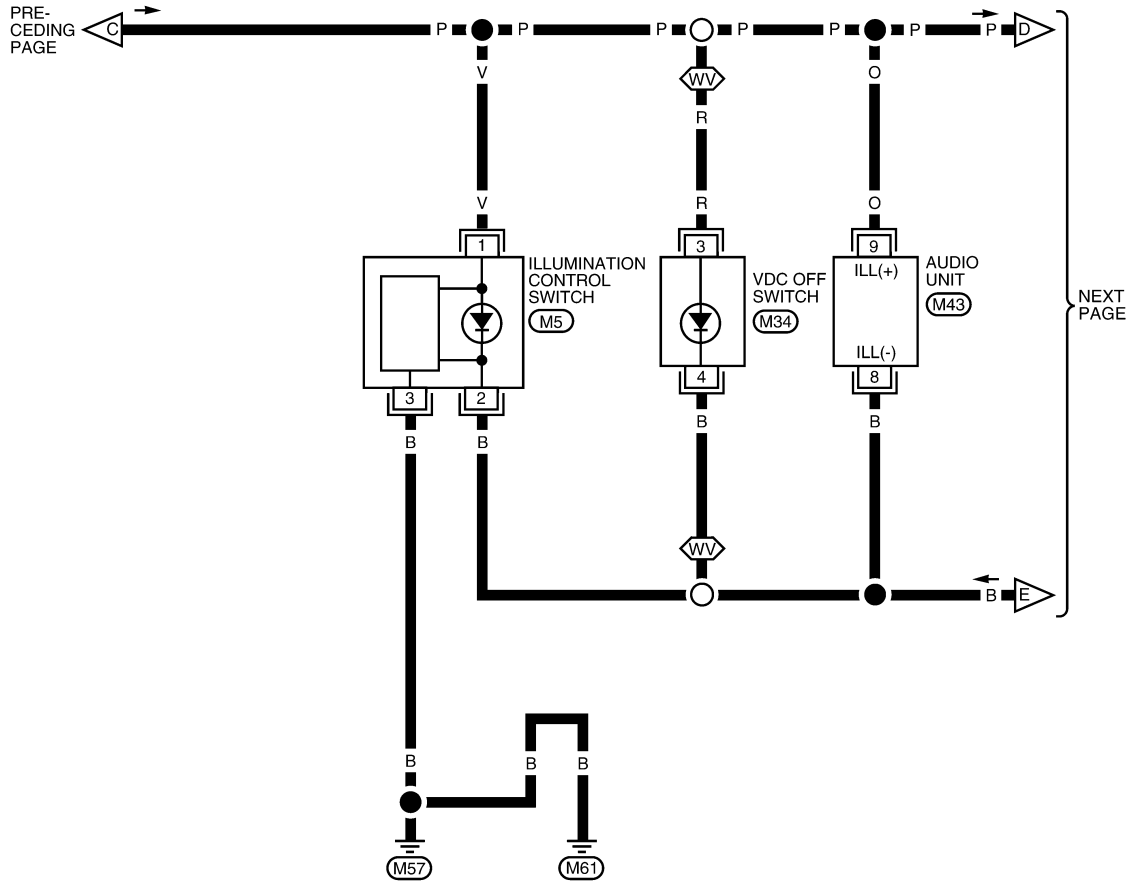

NEXT PAGE

 



ABLWA1035GB

ILLUMINATION

< SERVICE INFORMATION >

LT-ILL-04

- ⬡A4 : WITH 4-SPEED A/T
- ⬡IK : WITH INTELLIGENT KEY
- ⬡MB : WITHOUT MT
- ⬡OK : WITHOUT INTELLIGENT KEY
- ⬡SS : WITH STEERING WHEEL AUDIO CONTROL SWITCHES
- ⬡VT : WITH CVT

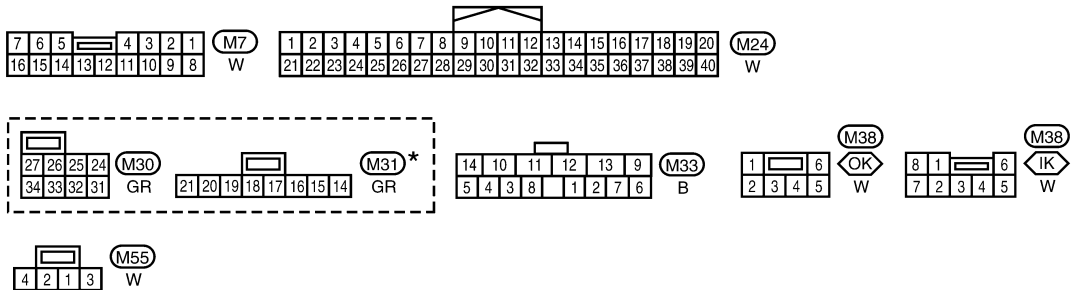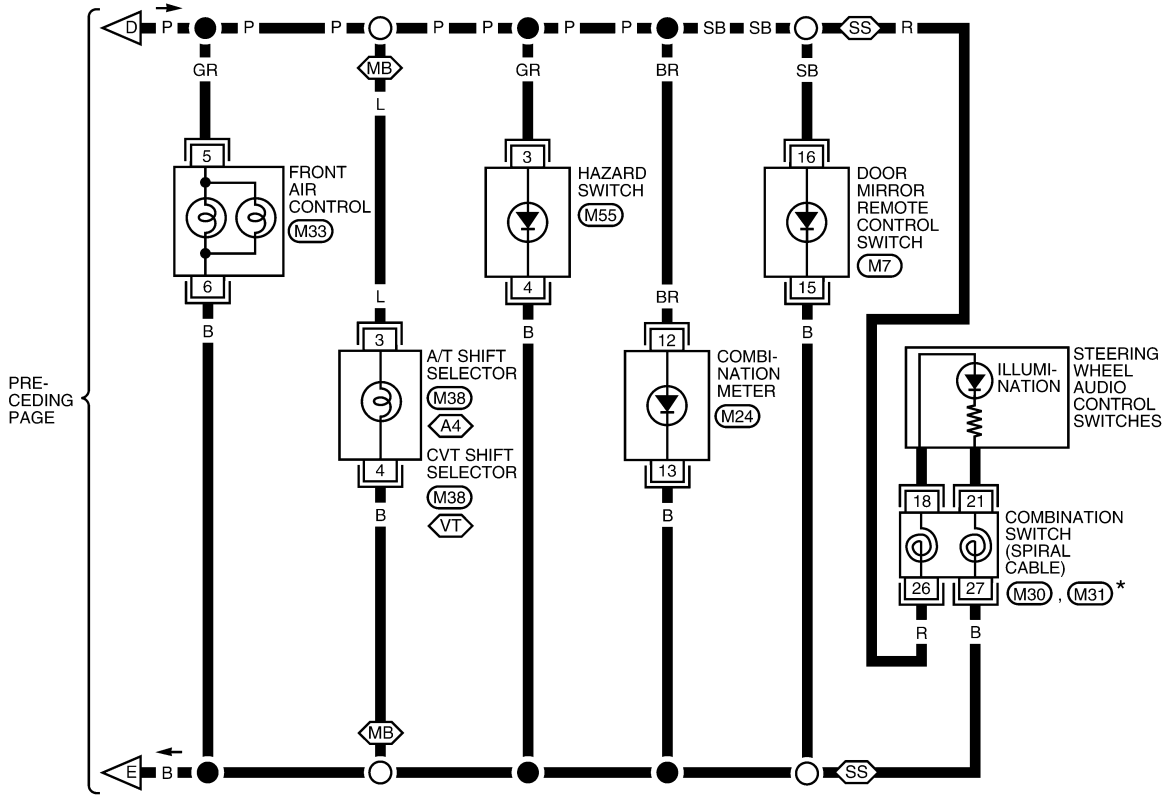

* : THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT" OF PG SECTION.

ABLWA0683GB

BULB SPECIFICATIONS

< SERVICE INFORMATION >

BULB SPECIFICATIONS

Headlamp

INFOID:000000005929155

Item	Wattage (W)
High/Low (Halogen type)	60/55

Exterior Lamp

INFOID:000000005929156

Item	Wattage (W)	
Front combination lamp	Turn signal lamp	21 (amber)
	Parking (clearance) lamp	5
Rear combination lamp	Stop/Tail lamp	21/5
	Turn signal lamp	21 (amber)
	Back-up lamp	21
Front fog lamp	35	
License plate lamp	5	
High-mounted stop lamp	Hatchback	LED
	Sedan, rear window	18
	Sedan, rear spoiler	LED

Interior Lamp/Illumination

INFOID:000000005929157

Item	Wattage (W)
Map lamp	8
Room lamp	8
Luggage room lamp (Hatchback)	5
Trunk room lamp (Sedan)	5
Vanity mirror lamp	*

* Always check with the parts department for the latest parts information.