

SECTION CHG

CHARGING SYSTEM

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

CONTENTS

| | | | |
|--|-----------|--|-----------|
| PRECAUTION | 2 | CHARGING SYSTEM PRELIMINARY INSPECTION | 19 |
| PRECAUTIONS | 2 | Diagnosis Procedure | 19 |
| Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER" | 2 | | |
| PREPARATION | 3 | POWER GENERATION VOLTAGE VARIABLE CONTROL SYSTEM OPERATION INSPECTION | 20 |
| PREPARATION | 3 | Diagnosis Procedure | 20 |
| Special Service Tool | 3 | | |
| Commercial Service Tool | 3 | | |
| SYSTEM DESCRIPTION | 4 | B TERMINAL CIRCUIT | 22 |
| COMPONENT PARTS | 4 | Description | 22 |
| Component Parts Location | 4 | Diagnosis Procedure | 22 |
| Component Description | 4 | | |
| SYSTEM | 6 | L TERMINAL CIRCUIT (OPEN) | 23 |
| CHARGING SYSTEM | 6 | Description | 23 |
| CHARGING SYSTEM : System Diagram | 6 | Diagnosis Procedure | 23 |
| CHARGING SYSTEM : System Description | 6 | | |
| CHARGING SYSTEM : Component Description..... | 6 | L TERMINAL CIRCUIT (SHORT) | 25 |
| POWER GENERATION VOLTAGE VARIABLE CONTROL SYSTEM | 7 | Description | 25 |
| System Diagram | 7 | Diagnosis Procedure | 25 |
| System Description | 7 | | |
| WIRING DIAGRAM | 8 | S TERMINAL CIRCUIT | 26 |
| CHARGING SYSTEM | 8 | Description | 26 |
| Wiring Diagram | 8 | Diagnosis Procedure | 26 |
| BASIC INSPECTION | 13 | SYMPTOM DIAGNOSIS | 27 |
| DIAGNOSIS AND REPAIR WORKFLOW | 13 | CHARGING SYSTEM | 27 |
| Work Flow (With EXP-800 NI or GR8-1200 NI) | 13 | Symptom Table | 27 |
| Work Flow (Without EXP-800 NI or GR8-1200 NI)... | 16 | | |
| DTC/CIRCUIT DIAGNOSIS | 19 | REMOVAL AND INSTALLATION | 28 |
| GENERATOR | 28 | GENERATOR | 28 |
| Exploded View | 28 | Exploded View | 28 |
| Removal and Installation | 28 | Removal and Installation | 28 |
| SERVICE DATA AND SPECIFICATIONS (SDS) | 30 | SERVICE DATA AND SPECIFICATIONS (SDS) | 30 |
| Generator | 30 | Generator | 30 |

CHG

PRECAUTIONS

< PRECAUTION >

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:0000000009269514

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SR and SB sections of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SR section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

- When working near the Airbag Diagnosis Sensor Unit or other Airbag System sensors with the Ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the Ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

PREPARATION

< PREPARATION >


PREPARATION

PREPARATION

Special Service Tool

INFOID:000000009269515

The actual shapes of Kent-Moore tools may differ from those of special service tools illustrated here.
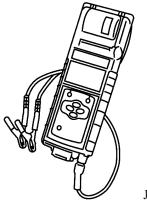
| Tool number (Kent-Moore No.) Tool name | Description |
|---|--|
| — —) Model GR8-1200 NI Multitasking battery and electrical diagnostic station |  AWIIA1239ZZ |
| — —) Model EXP-800 NI Battery and electrical diagnostic analyzer |  JSMIA0806ZZ |

Commercial Service Tool

INFOID:000000009269516

| Tool name | Description |
|------------|--|
| Power tool |  PIIB1407E |

CHG

N

O

P

COMPONENT PARTS


< SYSTEM DESCRIPTION >

SYSTEM DESCRIPTION

COMPONENT PARTS

Component Parts Location

INFOID:0000000009269517

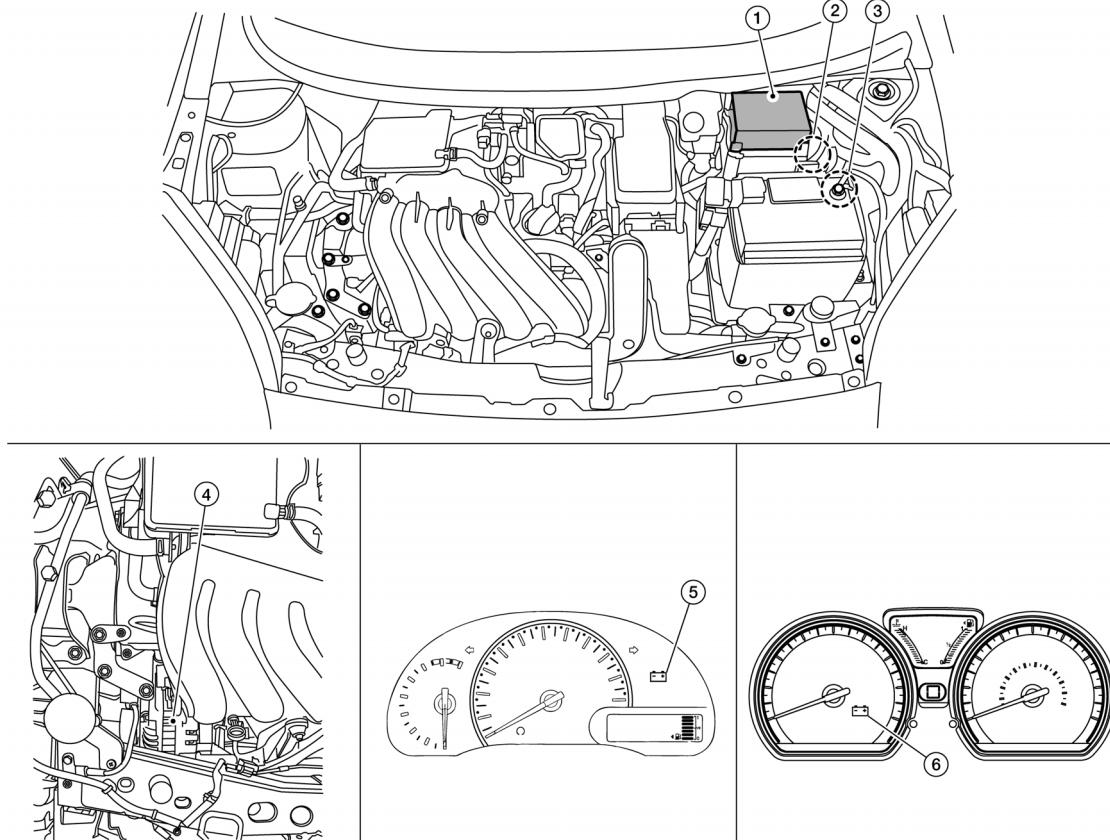

ALMIA0606ZZ

1. Battery current sensor
2. IPDM E/R
3. ECM
4. Generator
5. Combination meter (Type A)
6. Combination meter (Type B)

Component Description

INFOID:0000000009269518

| Component part | Description |
|--------------------------|--|
| Generator (IC regulator) | <p>The IC regulator controls the power generation voltage by the target power generation voltage based on the received PWM command signal.</p> <p>When there is no PWM command signal, the generator performs the normal power generation according to the characteristic of the IC regulator.</p> |
| ECM | <p>The battery current sensor detects the charging/discharging current of the battery. The ECM judges the battery condition based on this signal.</p> <p>The ECM judges whether to request more output via the power generation voltage variable control according to the battery condition.</p> <p>When performing the power generation voltage variable control, the ECM calculates the target power generation voltage according to the battery condition and sends the calculated value as the power generation command value to the IPDM E/R.</p> |

COMPONENT PARTS

< SYSTEM DESCRIPTION >

| Component part | Description |
|---|---|
| IPDM E/R | The IPDM E/R converts the received power generation command value into a pulse width modulated (PWM) command signal and sends it to the IC regulator. |
| Combination meter (charge warning lamp) | The IC regulator warning function activates to illuminate the charge warning lamp if any of the following symptoms occur while generator is operating: ·Excessive voltage is produced. ·No voltage is produced. |
| Battery current sensor | The battery current sensor is located on the negative battery cable terminal. The battery current sensor detects the charging/discharging current of the battery and sends a voltage signal to the ECM according to the current value detected. |

A

B

C

D

E

F

G

H

I

J

K

L

CHG

N

O

P

SYSTEM


< SYSTEM DESCRIPTION >

SYSTEM

CHARGING SYSTEM

CHARGING SYSTEM : System Diagram

INFOID:000000009269519

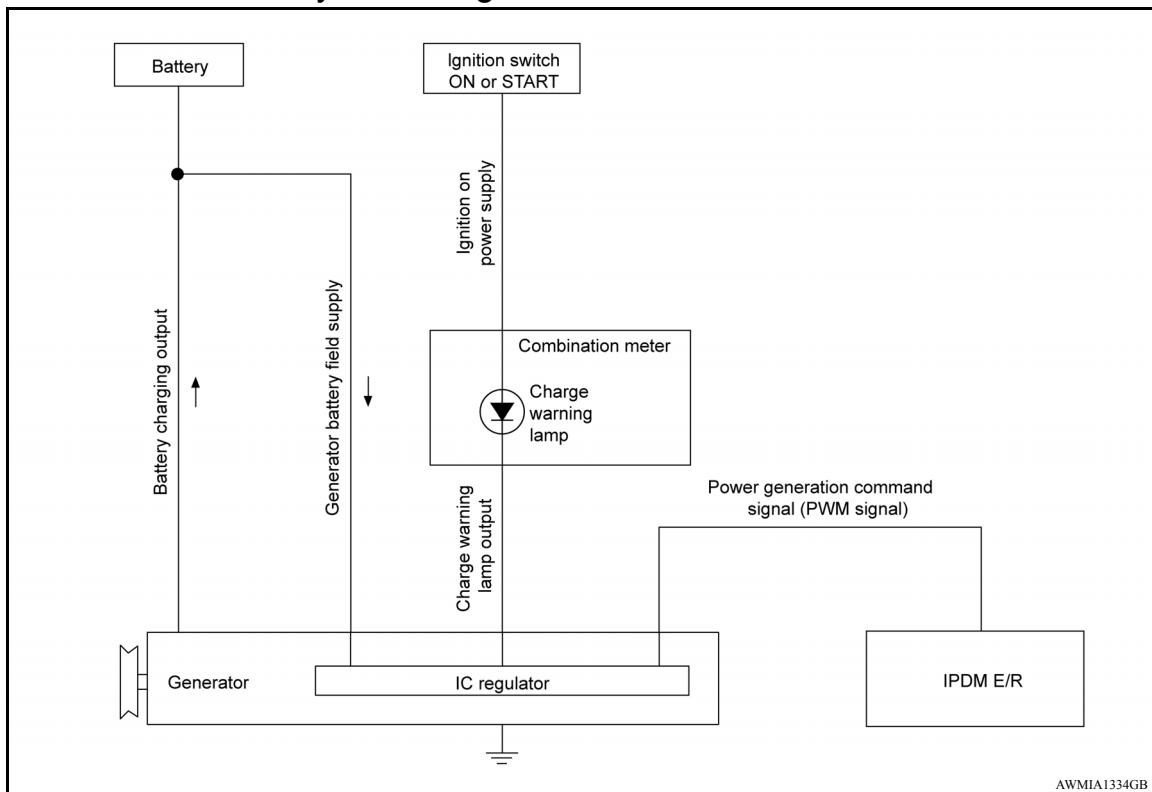

CHARGING SYSTEM : System Description

INFOID:000000009269520

The generator provides DC voltage to operate the vehicle's electrical system and to keep the battery charged. The voltage output is controlled by the IC regulator.

CHARGING SYSTEM : Component Description

INFOID:000000009269521

| Component part | | Description |
|---|--------------|---|
| Generator | Terminal "1" | Refer to CHG-22, "Description" . |
| | Terminal "2" | Refer to CHG-23, "Description" . |
| | Terminal "3" | Refer to CHG-26, "Description" . |
| | Terminal "4" | Used for the power generation voltage variable control system. Refer to CHG-7, "System Description" . |
| Combination meter (Charge warning lamp) | | The IC regulator warning function activates to illuminate the charge warning lamp if any of the following symptoms occur while generator is operating: <ul style="list-style-type: none"> • Excessive voltage is produced. • No voltage is produced. |
| IPDM E/R | | Used for the power generation voltage variable control system. Refer to CHG-7, "System Description" . |


POWER GENERATION VOLTAGE VARIABLE CONTROL SYSTEM

< SYSTEM DESCRIPTION >

POWER GENERATION VOLTAGE VARIABLE CONTROL SYSTEM

System Diagram

INFOID:000000009269522

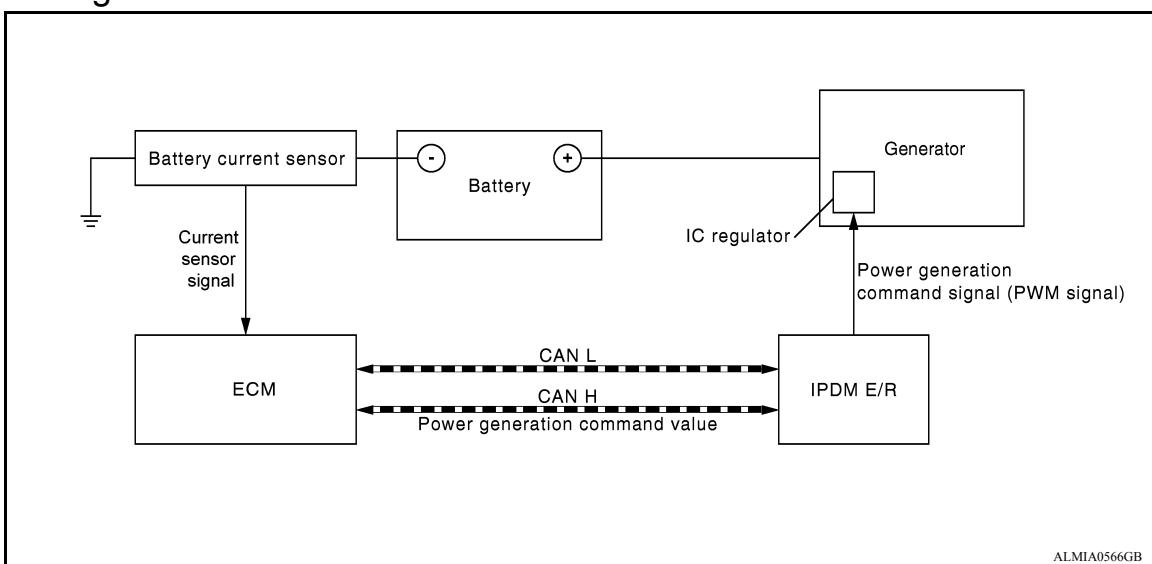

ALMIA0566GB

A
B
C
D
E
F
G
H
I
J
K
L
CHG
N
O
P

System Description

INFOID:000000009269523

Power generation variable voltage control system has been adopted. By varying the voltage to the generator, engine load due to power generation of the generator is reduced and fuel consumption is decreased.

NOTE:

When any malfunction is detected in the power generation variable voltage control system, power generation is performed according to the characteristic of the IC regulator in the generator.


CHARGING SYSTEM

< WIRING DIAGRAM >

WIRING DIAGRAM CHARGING SYSTEM

Wiring Diagram

INFOID:0000000009269524

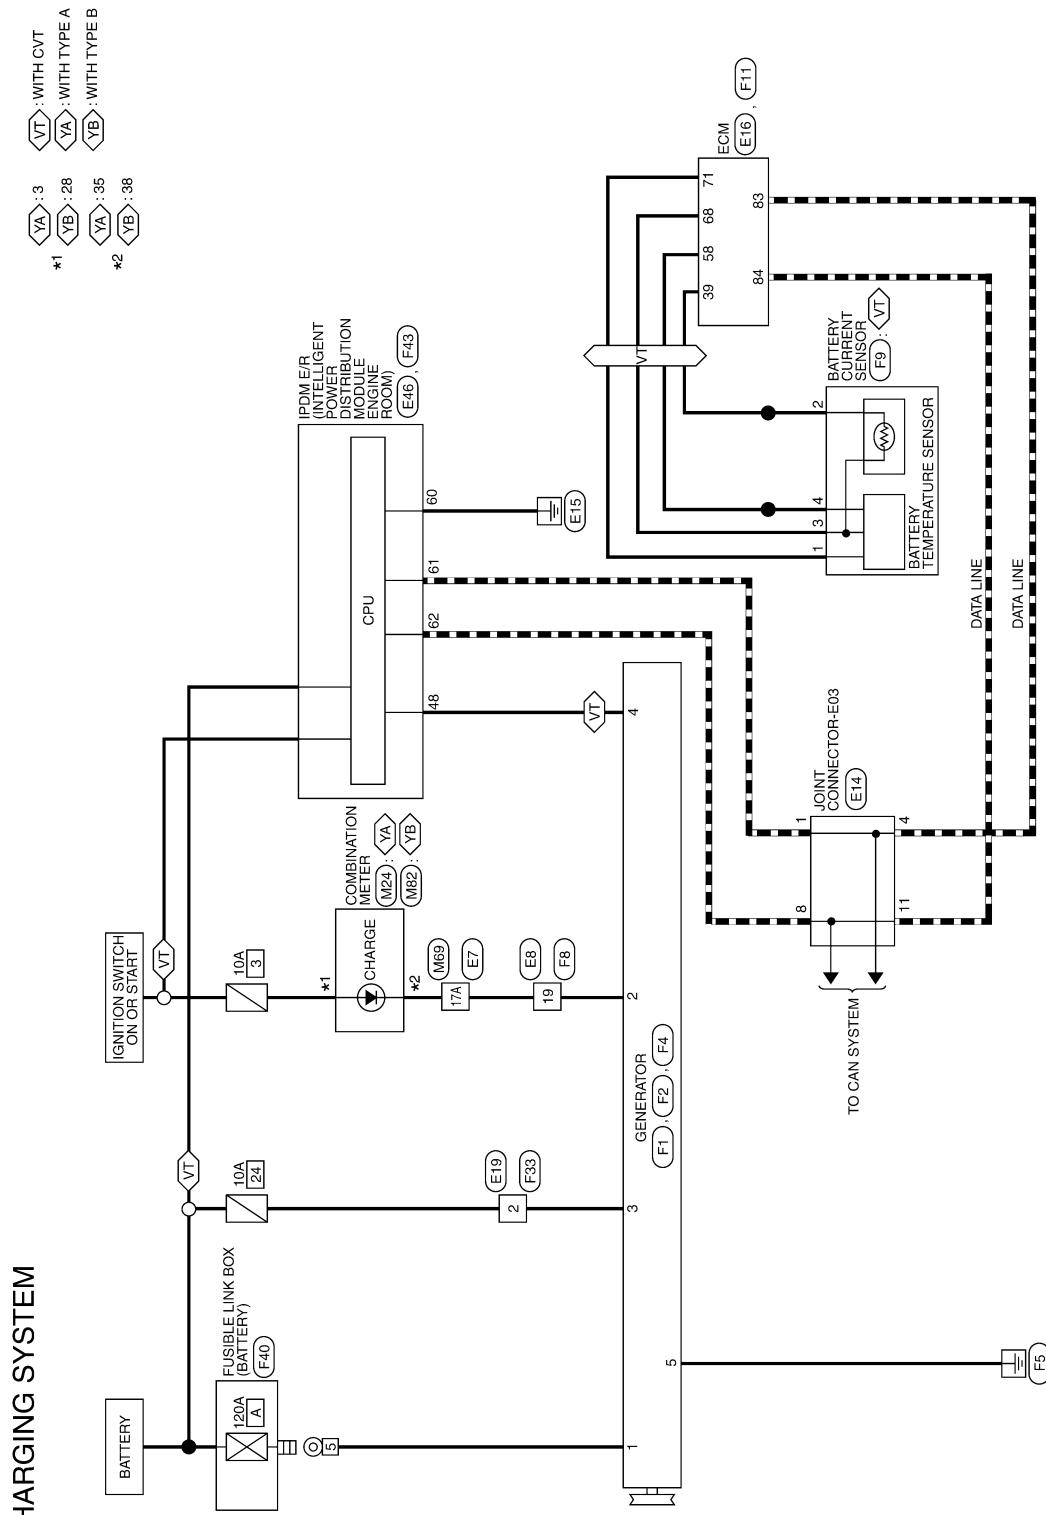


ABMWA2058GB

CHARGING SYSTEM

< WIRING DIAGRAM >

CHARGING SYSTEM CONNECTORS

| | |
|-----------------|------------------------------------|
| Connector No. | M24 |
| Connector Name | COMBINATION METER (WITH TYPE A) |
| Connector Color | WHITE |

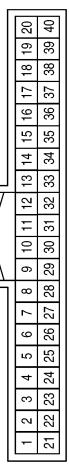


| | |
|-----------------|--------------|
| Connector No. | M69 |
| Connector Name | WIRE TO WIRE |
| Connector Color | WHITE |




| | | |
|--------------|---------------|-------------|
| Terminal No. | Color of Wire | Signal Name |
| 3 | GR | IGN |
| 35 | Y | CHG |

| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 17A | Y | - |

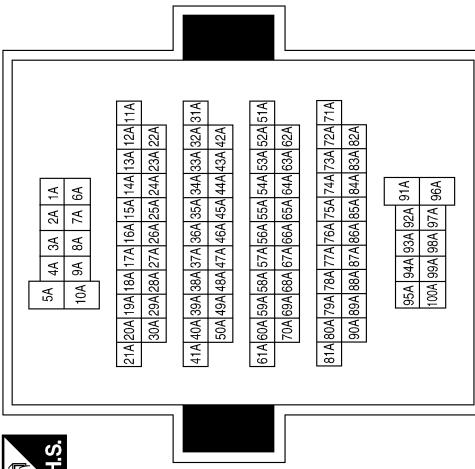

| | | |
|--------------|---------------|-------------|
| Terminal No. | Color of Wire | Signal Name |
| 28 | GR | IGN |
| 38 | Y | CHG |

| | |
|-----------------|------------------------------------|
| Connector No. | M82 |
| Connector Name | COMBINATION METER (WITH TYPE B) |
| Connector Color | WHITE |

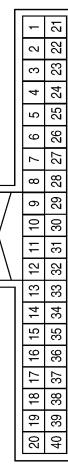


ABMIA4730GB

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P
Q
R
S
T
U
V
W
X
Y
Z



CHARGING SYSTEM

< WIRING DIAGRAM >

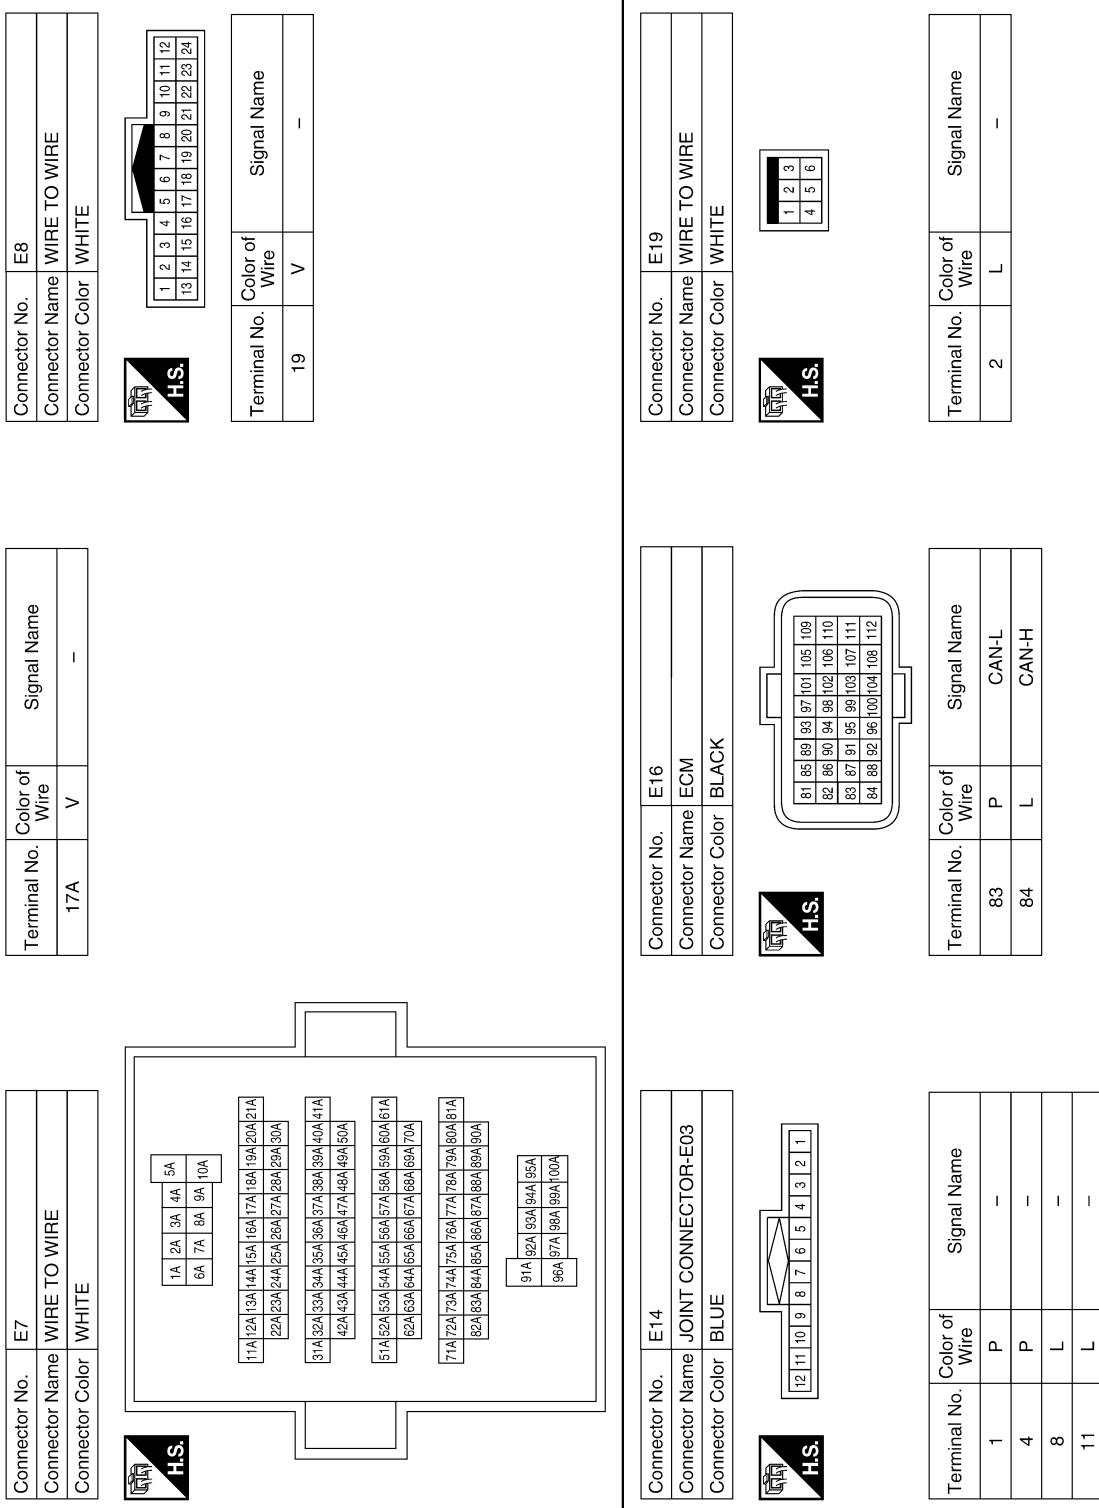

ABMIA3970GB

CHARGING SYSTEM

< WIRING DIAGRAM >

| | |
|-----------------|-----------|
| Connector No. | F2 |
| Connector Name | GENERATOR |
| Connector Color | - |



| | |
|-----------------|-----------|
| Connector No. | F1 |
| Connector Name | GENERATOR |
| Connector Color | BLACK |




| | | |
|--------------|---------------|-------------|
| Terminal No. | Color of Wire | Signal Name |
| 1 | B/R | - |
| 2 | L/W | - |
| 3 | G | - |
| 4 | O | - |

| | | |
|--------------|---------------|--------------|
| Terminal No. | Color of Wire | Signal Name |
| 60 | B | GND (SIGNAL) |
| 61 | P | CAN-L |
| 62 | L | CAN-H |



| | |
|-----------------|--|
| Connector No. | E46 |
| Connector Name | IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) |
| Connector Color | WHITE |

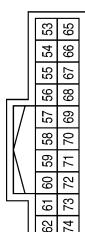


| | | |
|--------------|---------------|-------------|
| Terminal No. | Color of Wire | Signal Name |
| 64 | 63 | 61 |
| 65 | 62 | 60 |
| 66 | 59 | 58 |
| 67 | 58 | 57 |
| 68 | 55 | 56 |
| 69 | 54 | 53 |
| 70 | 53 | 52 |
| 71 | 72 | 73 |
| 72 | 71 | 74 |
| 73 | 70 | 75 |
| 74 | 69 | 76 |
| 75 | 68 | 66 |
| 76 | 67 | 65 |

| | | |
|--------------|---------------|-------------|
| Terminal No. | Color of Wire | Signal Name |
| 12 | 11 | 9 |
| 13 | 10 | 8 |
| 14 | 11 | 7 |
| 15 | 10 | 6 |
| 16 | 9 | 5 |
| 17 | 8 | 4 |
| 18 | 7 | 3 |
| 19 | 6 | 2 |
| 20 | 5 | 1 |
| 21 | 23 | 22 |
| 22 | 23 | 24 |
| 23 | 24 | 21 |
| 24 | 21 | 22 |

| | | |
|--------------|---------------|-------------|
| Terminal No. | Color of Wire | Signal Name |
| 19 | L/W | - |


| | | |
|--------------|---------------|-------------|
| Terminal No. | Color of Wire | Signal Name |
| 5 | B/GR | - |
| 6 | Y | - |
| 7 | L | - |
| 8 | R | - |
| 9 | O | - |

| | |
|-----------------|------------------------|
| Connector No. | F9 |
| Connector Name | BATTERY CURRENT SENSOR |
| Connector Color | GRAY |

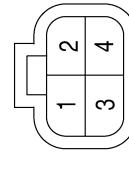

| | | |
|--------------|---------------|-------------|
| Terminal No. | Color of Wire | Signal Name |
| 1 | Y | - |
| 2 | L | - |
| 3 | R | - |
| 4 | O | - |

| | |
|-----------------|--------------|
| Connector No. | F8 |
| Connector Name | WIRE TO WIRE |
| Connector Color | WHITE |

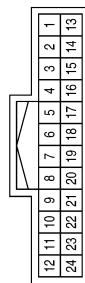

| | | |
|--------------|---------------|-------------|
| Terminal No. | Color of Wire | Signal Name |
| 1 | Y | - |
| 2 | L | - |
| 3 | R | - |
| 4 | O | - |

| | |
|-----------------|-----------|
| Connector No. | F4 |
| Connector Name | GENERATOR |
| Connector Color | - |



A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P
Q
R
S
T
U
V
W
X
Y
Z
CHG

ABMIA3971GB

CHARGING SYSTEM

< WIRING DIAGRAM >

| | | | |
|-----------------|-------|-----------------|--------------|
| Connector No. | F11 | Connector No. | F33 |
| Connector Name | ECM | Connector Name | WIRE TO WIRE |
| Connector Color | BROWN | Connector Color | WHITE |

| | | | | | | | | | | | |
|----|----|----|----|----|----|----|----|----|----|----|----|
| 33 | 37 | 41 | 45 | 49 | 53 | 57 | 61 | 65 | 69 | 73 | 77 |
| 34 | 38 | 42 | 46 | 50 | 54 | 58 | 62 | 66 | 70 | 74 | 78 |
| 35 | 39 | 43 | 47 | 51 | 55 | 59 | 63 | 67 | 71 | 75 | 79 |
| 36 | 40 | 44 | 48 | 52 | 56 | 60 | 64 | 68 | 72 | 76 | 80 |



| | | |
|--------------|---------------|------------------------|
| Terminal No. | Color of Wire | Signal Name |
| 39 | Y | — |
| 58 | L | BATTERY CURRENT SENSOR |
| 68 | R | SENSOR GROUND |
| 71 | Y | SENSOR POWER SUPPLY |

| | | | |
|-----------------|-----|----------------|----------------------------|
| Connector No. | F40 | Connector Name | FUSIBLE LINK BOX (BATTERY) |
| Connector Color | — | | |



| | | |
|--------------|---------------|-------------|
| Terminal No. | Color of Wire | Signal Name |
| 5 | B/R | — |

| | | | |
|-----------------|-------|----------------|--|
| Connector No. | F43 | Connector Name | IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) |
| Connector Color | WHITE | | |



| | | |
|--------------|---------------|-------------|
| Terminal No. | Color of Wire | Signal Name |
| 48 | O | ALT C |

ABMIA4731GB

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

BASIC INSPECTION

DIAGNOSIS AND REPAIR WORKFLOW

Work Flow (With EXP-800 NI or GR8-1200 NI)

INFOID:000000009269525

A

CHARGING SYSTEM DIAGNOSIS WITH EXP-800 NI OR GR8-1200 NI

To test the charging system, use the following special service tools:

- EXP-800 NI Battery and electrical diagnostic analyzer
- GR8-1200 NI Multitasking battery and electrical diagnostic station

C

NOTE:

Refer to the applicable Instruction Manual for proper charging system diagnosis procedures.

D

E

F

G

H

I

J

K

L

CHG

N


O

P

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

OVERALL SEQUENCE

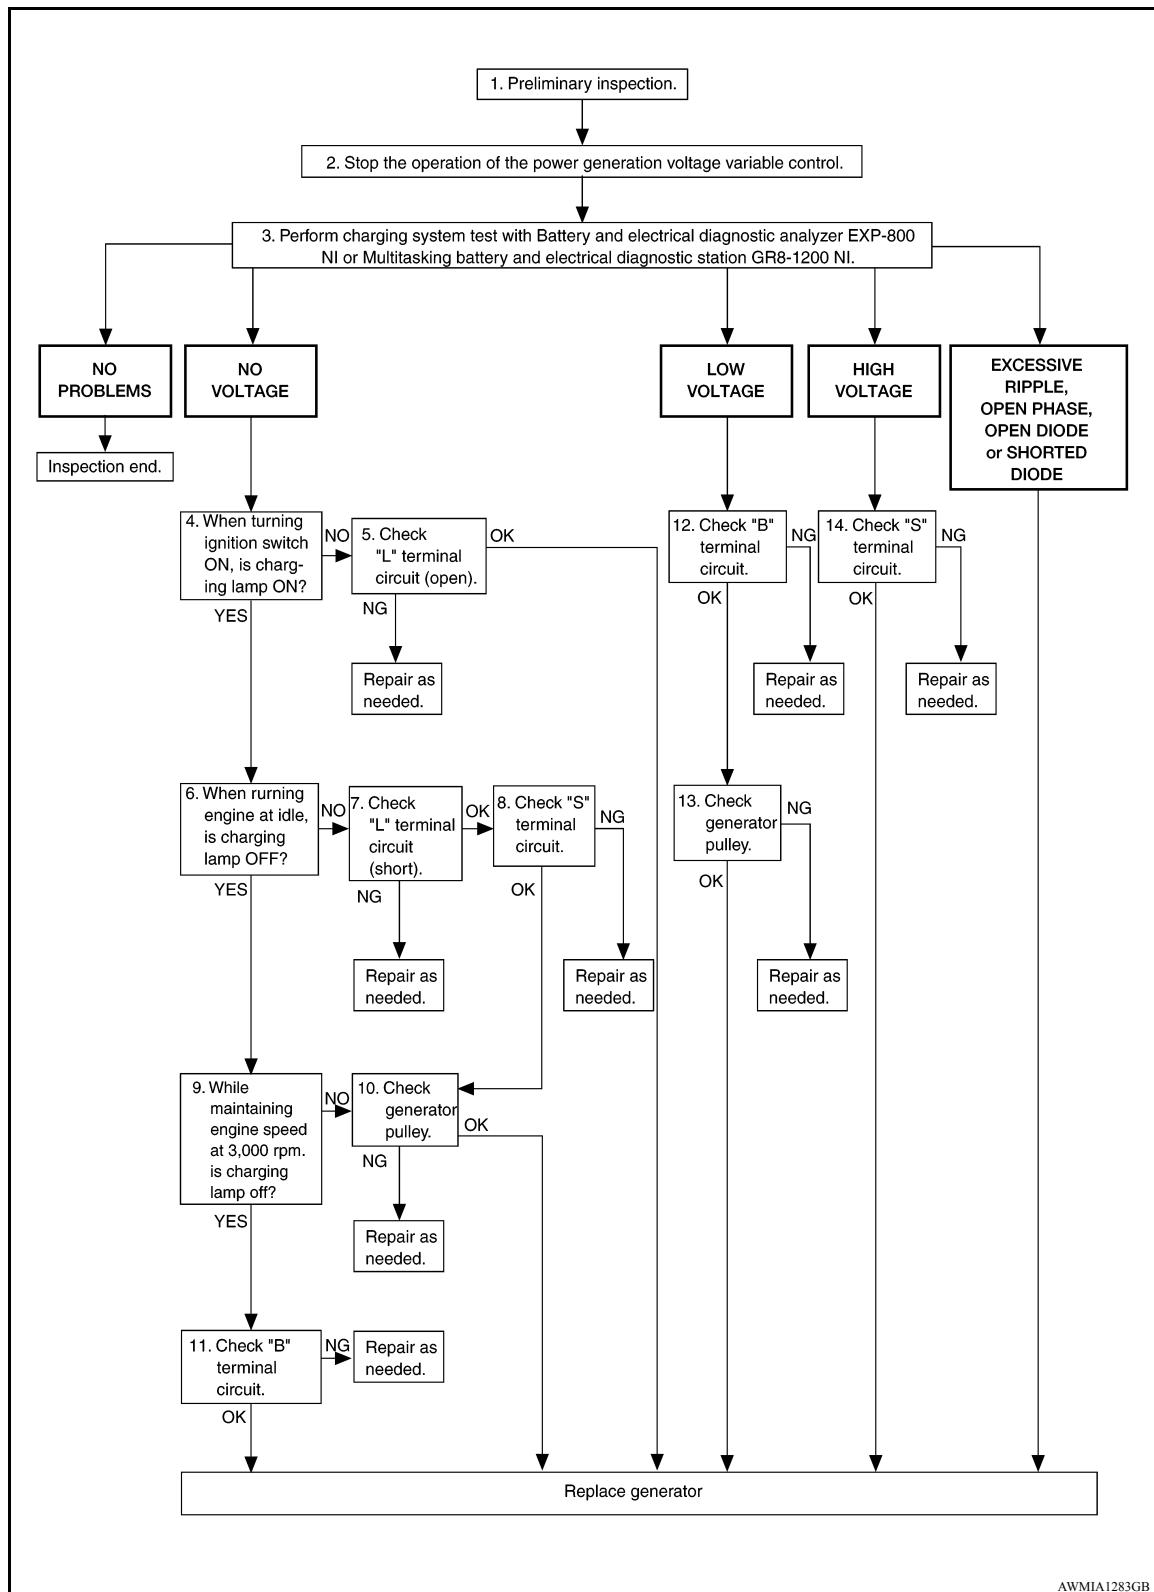

AWMIA1283GB

DETAILED FLOW

NOTE:

To ensure a complete and thorough diagnosis, the battery, stator and generator test segments must be done as a set from start to finish.

1. PRELIMINARY INSPECTION

Perform the preliminary inspection. Refer to [CHG-19. "Diagnosis Procedure"](#).

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

>> GO TO 2.

2. STOP POWER GENERATION VOLTAGE VARIABLE CONTROL SYSTEM

Stop the operation of the power generation voltage variable control in either of the following procedures.

- After selecting “ENGINE” using CONSULT, set the DUTY value of “ALTERNATOR DUTY” to 0 % by selecting “ALTERNATOR DUTY” of “Active Test”. Continue “Active Test” until the end of inspection. (When the DUTY value is 0 or 100 %, the normal power generation is performed according to the characteristic of the IC regulator of the generator.)
- Turn the ignition switch OFF, and disconnect the battery current sensor connector. [However, DTC (P1550–P1554) of the engine might remain. After finishing the inspection, connect the battery current sensor connector and erase the self diagnosis results history of the engine using CONSULT.]

>> GO TO 3.

3. DIAGNOSIS WITH EXP-800 NI OR GR8-1200 NI

Perform the charging system test using Multitasking battery and electrical diagnostic station GR8-1200 NI or Battery and electrical diagnostic analyzer EXP-800 NI. Refer to the applicable Instruction Manual for proper testing procedures.

Test result

NO PROBLEMS>>Charging system is normal and will also show “DIODE RIPPLE” test result.

NO VOLTAGE>>GO TO 4.

LOW VOLTAGE>>GO TO 12.

HIGH VOLTAGE>>GO TO 14.

EXCESSIVE RIPPLE, OPEN PHASE, OPEN DIODE or SHORTED DIODE>>Replace the generator. Refer to [CHG-28, "Removal and Installation"](#). Perform “DIODE RIPPLE” test again using Multitasking battery and electrical diagnostic station GR8-1200 NI or Battery and electrical diagnostic analyzer EXP-800 NI to confirm repair.

4. INSPECTION WITH CHARGE WARNING LAMP (IGNITION SWITCH IS ON)

Turn the ignition switch ON.

Does the charge warning lamp illuminate?

YES >> GO TO 6.

NO >> GO TO 5.

5. “L” TERMINAL CIRCUIT (OPEN) INSPECTION

Check “L” terminal circuit (open). Refer to [CHG-23, "Diagnosis Procedure"](#).

Is the “L” terminal circuit normal?

YES >> Replace generator. Refer to [CHG-28, "Removal and Installation"](#).

NO >> Repair as needed.

6. INSPECTION WITH CHARGE WARNING LAMP (IDLING)

Start the engine and run it at idle.

Does the charge warning lamp turn OFF?

YES >> GO TO 9.

NO >> GO TO 7.

7. “L” TERMINAL CIRCUIT (SHORT) INSPECTION

Check “L” terminal circuit (short). Refer to [CHG-25, "Diagnosis Procedure"](#).

Is the “L” terminal circuit normal?

YES >> GO TO 8.

NO >> Repair as needed.

8. “S” TERMINAL CIRCUIT INSPECTION

Check “S” terminal circuit. Refer to [CHG-26, "Diagnosis Procedure"](#).

Is the “S” terminal circuit normal?

YES >> GO TO 10.

A

B

C

D

E

F

G

H

I

J

K

L

CHG

N

O

P

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

NO >> Repair as needed.

9. INSPECTION WITH CHARGE WARNING LAMP (ENGINE AT 3,000 RPM)

Increase and maintain the engine speed at 3,000 rpm.

Does the charge warning lamp remain off?

YES >> GO TO 11.

NO >> GO TO 10.

10. INSPECTION OF GENERATOR PULLEY

Check generator pulley. Refer to [CHG-28, "Removal and Installation"](#).

Is generator pulley normal?

YES >> Replace generator. Refer to [CHG-28, "Removal and Installation"](#).

NO >> Repair as needed.

11. "B" TERMINAL CIRCUIT INSPECTION

Check "B" terminal circuit. Refer to [CHG-22, "Diagnosis Procedure"](#).

Is "B" terminal circuit normal?

YES >> Replace generator. Refer to [CHG-28, "Removal and Installation"](#).

NO >> Repair as needed.

12. "B" TERMINAL CIRCUIT INSPECTION

Check "B" terminal circuit. Refer to [CHG-22, "Diagnosis Procedure"](#).

Is "B" terminal circuit normal?

YES >> GO TO 13.

NO >> Repair as needed.

13. INSPECTION OF GENERATOR PULLEY

Check generator pulley. Refer to [CHG-28, "Removal and Installation"](#).

Is generator pulley normal?

YES >> Replace generator. Refer to [CHG-28, "Removal and Installation"](#).

NO >> Repair as needed.

14. "S" TERMINAL CIRCUIT INSPECTION

Check "S" terminal circuit. Refer to [CHG-26, "Diagnosis Procedure"](#).

Is the "S" terminal circuit normal?

YES >> Replace generator. Refer to [CHG-28, "Removal and Installation"](#).

NO >> Repair as needed.

Work Flow (Without EXP-800 NI or GR8-1200 NI)

INFOID:0000000009269526

OVERALL SEQUENCE


Before performing a generator test, make sure that the battery is fully charged. A 30-volt voltmeter and suitable test probes are necessary for the test.

- Before starting, inspect the fusible link.

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

- Use fully charged battery.

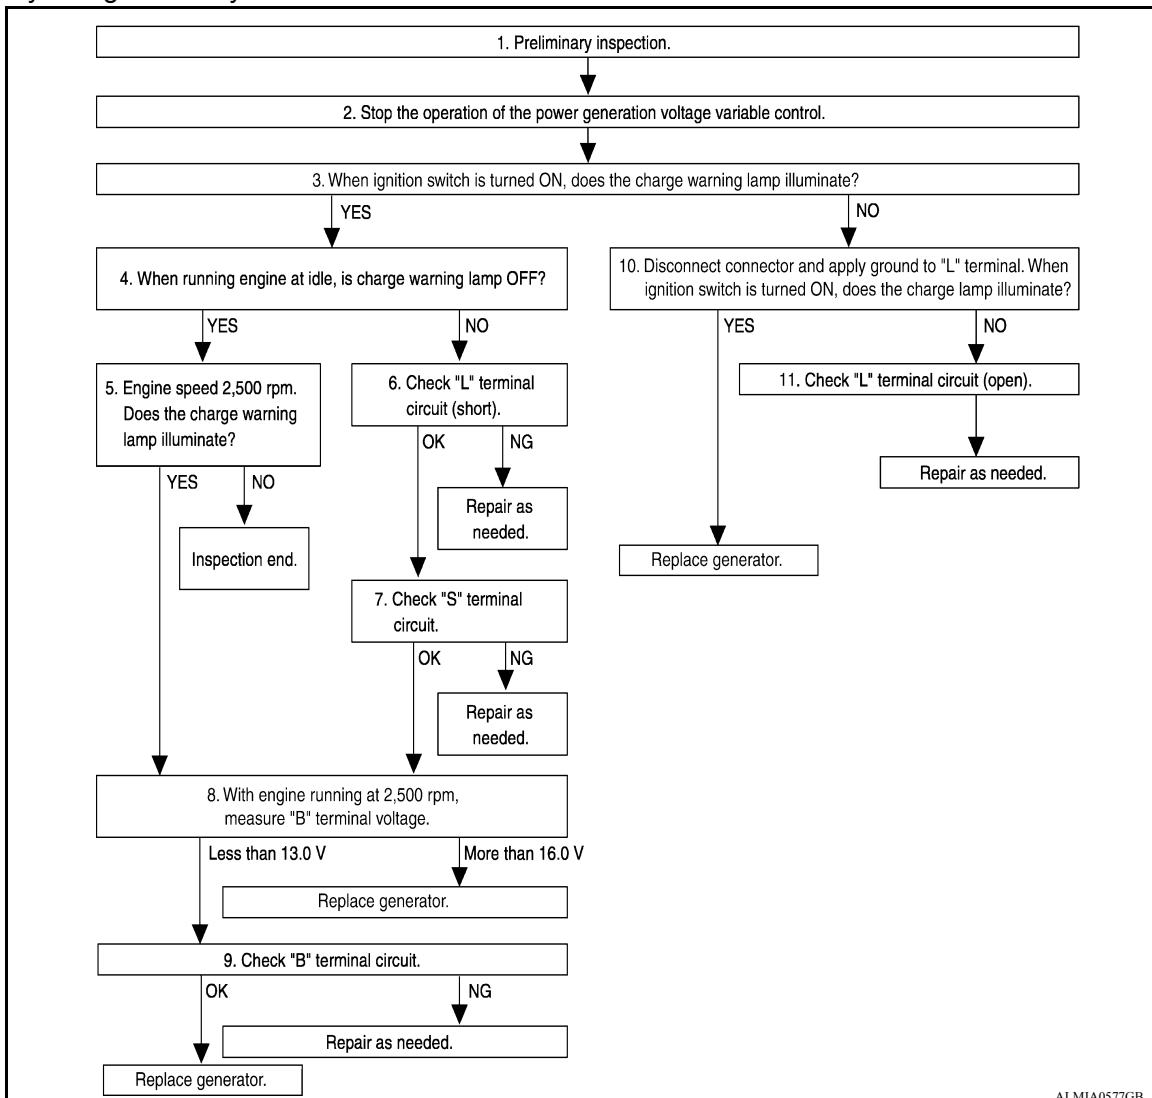

DETAILED FLOW

1. PRELIMINARY INSPECTION

Perform the preliminary inspection. Refer to [CHG-19, "Diagnosis Procedure"](#).

>> GO TO 2.

2. STOP POWER GENERATION VOLTAGE VARIABLE CONTROL SYSTEM

Stop the operation of the power generation voltage variable control in either of the following procedures:

- After selecting “ENGINE” using CONSULT, set the DUTY value of “ALTERNATOR DUTY” to 0 % by selecting “ALTERNATOR DUTY” with “Active Test”. Continue “Active Test” until the end of inspection. (When the DUTY value is 0 or 100 %, the normal power generation is performed according to the characteristic of the IC regulator of the generator.)
- Turn the ignition switch OFF, and disconnect the battery current sensor connector. [However, DTC (P1550 - P1554) of the engine might remain. After finishing the inspection, connect the battery current sensor connector and erase the self-diagnostic results history of the engine using CONSULT.]

>> GO TO 3.

3. INSPECTION WITH CHARGE WARNING LAMP (IGNITION SWITCH IS TURNED ON)

When ignition switch is turned ON.

Does the charge warning lamp illuminate?

A
B
C
D
E
F
G
H
I
J
K
L

CHG

N
O
P

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

YES >> GO TO 4.
NO >> GO TO 10.

4. INSPECTION WITH CHARGE WARNING LAMP (IDLING)

Start the engine and run it at idle

Does the charge warning lamp turn OFF?

YES >> GO TO 5.
NO >> GO TO 6.

5. INSPECTION WITH CHARGE WARNING LAMP (ENGINE AT 2,500 RPM)

Increase and maintain the engine speed at 2,500 rpm.

Does the charge warning lamp illuminate?

YES >> GO TO 8.
NO >> Inspection End.

6. "L" TERMINAL CIRCUIT (SHORT) INSPECTION

Check terminal "L" circuit for (short). Refer to [CHG-25, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 7.
NO >> Repair as needed.

7. "S" TERMINAL CIRCUIT INSPECTION

Check terminal "S" circuit. Refer to [CHG-26, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 8.
NO >> Repair as needed.

8. MEASURE "B" TERMINAL VOLTAGE

Start engine. With engine running at 2,500 rpm, measure "B" terminal voltage.

What voltage does the measurement result show?

Less than 13.0 V>>GO TO 9.
More than 16.0 V>>Replace generator. Refer to [CHG-28, "Removal and Installation"](#).

9. "B" TERMINAL CIRCUIT INSPECTION

Check "B" terminal circuit. Refer to [CHG-22, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> Replace generator. Refer to [CHG-28, "Removal and Installation"](#).
NO >> Repair as needed.

10. INSPECTION WITH CHARGE WARNING LAMP (IGNITION SWITCH IS ON)

1. Disconnect generator connector and apply ground to "L" terminal.
2. Turn the ignition switch ON.

Does the charge warning lamp illuminate?

YES >> Replace generator. Refer to [CHG-28, "Removal and Installation"](#).
NO >> GO TO 11.

11. CHECK "L" TERMINAL CIRCUIT (OPEN)

Check "L" terminal circuit (OPEN). Refer to [CHG-23, "Diagnosis Procedure"](#).

>> Repair as needed.

CHARGING SYSTEM PRELIMINARY INSPECTION

< DTC/CIRCUIT DIAGNOSIS >

DTC/CIRCUIT DIAGNOSIS

CHARGING SYSTEM PRELIMINARY INSPECTION

Diagnosis Procedure

INFOID:000000009269527

A

1.CHECK BATTERY TERMINALS CONNECTION

Check if battery terminals are clean and tight.

B

Is the inspection result normal?

C

D

E

F

G

H

I

J

K

L

CHG

N

O

P

YES >> GO TO 2.

NO >> Repair battery terminal connection. Confirm repair by performing complete Charging system test using EXP-800 NI or GR8-1200 NI (if available). Refer to the applicable Instruction Manual for proper testing procedures.

2.CHECK FUSE

Check for blown fuse and fusible link.

| Unit | Power source (Power supply terminals) | Fuse or Fusible Link |
|----------------------------|---------------------------------------|----------------------|
| Generator | Battery (terminal 3) | Fuse 24 |
| | Battery (terminal 1) | Fusible Link A |
| Combination meter (Type A) | Ignition switch ON (terminal 3) | Fuse 3 |
| Combination meter (Type B) | Ignition switch ON (terminal 28) | Fuse 3 |

Is the inspection result normal?

I

YES >> GO TO 3.

NO >> Replace the blown fuse or fusible link after repairing the affected circuit.

3.CHECK GENERATOR GROUND TERMINAL CONNECTION

Check if connector F4 terminal 5 is clean.

J

Is the inspection result normal?

K

YES >> GO TO 4.

L

NO >> Repair connection.

4.CHECK DRIVE BELT TENSION

CHG

Check drive belt tension. Refer to [EM-17, "Inspection"](#).

N

Is the inspection result normal?

O

YES >> Inspection End.

P

NO >> Repair as needed.

POWER GENERATION VOLTAGE VARIABLE CONTROL SYSTEM OPERATION INSPECTION

< DTC/CIRCUIT DIAGNOSIS >

POWER GENERATION VOLTAGE VARIABLE CONTROL SYSTEM OPERATION INSPECTION

Diagnosis Procedure

INFOID:000000009269528

Regarding Wiring Diagram information. Refer to [CHG-8, "Wiring Diagram"](#).

CAUTION:

When performing this inspection, always use a charged battery that has completed the battery inspection. (When the charging rate of the battery is low, the response speed of the voltage change will become slow. This can cause an incorrect inspection.)

1. CHECK ECM (CONSULT)

Perform ECM self-diagnosis with CONSULT. Refer to [EC-61, "CONSULT Function"](#).

Self-diagnostic results content

No malfunction detected>> GO TO 2.

Malfunction detected>> Check applicable parts, and repair or replace corresponding parts.

2. CHECK OPERATION OF POWER GENERATION VOLTAGE VARIABLE CONTROL SYSTEM

1. Connect CONSULT and start the engine.
2. The selector lever is in "P" or "N" position and all of the electric loads and A/C, etc. are turned OFF.
3. Select "ALTERNATOR DUTY" in "Active Test" of "ENGINE", and then check the value of "BATTERY VOLT" monitor when DUTY value of "DUTY" is set to 40.0 %.

"BATTERY VOLT"

2 seconds after setting the DUTY value of "ALTERNATOR DUTY" to 40.0 % : 12 - 13.6 V

4. Check the value of "BATTERY VOLT" monitor when DUTY value of "DUTY" is set to 80.0%.

"BATTERY VOLT"

20 seconds after setting the DUTY value of "ALTERNATOR DUTY" to 80.0 % : +0.5 V or more against the value of "BATTERY VOLT" monitor when DUTY value is 40.0 %

Is the inspection result normal?

YES >> Inspection End.

NO >> GO TO 3.

3. CHECK IPDM E/R (CONSULT)

Perform IPDM E/R self-diagnosis with CONSULT. Refer to [PCS-37, "CONSULT Function \(IPDM E/R\)"](#).

Is the inspection result normal?

No malfunction detected>> GO TO 4.

Malfunction detected>> Check applicable parts, and repair or replace corresponding parts.

4. CHECK HARNESS BETWEEN GENERATOR AND IPDM E/R

1. Turn ignition switch OFF.
2. Disconnect generator connector and IPDM E/R connector.
3. Check continuity between generator harness connector and IPDM E/R harness connector.

| Generator | | IPDM E/R | | Continuity |
|-----------|----------|-----------|----------|------------|
| Connector | Terminal | Connector | Terminal | |
| F1 | 4 | F43 | 48 | Yes |

POWER GENERATION VOLTAGE VARIABLE CONTROL SYSTEM OPERATION INSPECTION

< DTC/CIRCUIT DIAGNOSIS >

4. Check continuity between generator harness connector and ground.

| Generator | | — | Continuity |
|-----------|----------|--------|------------|
| Connector | Terminal | | |
| F1 | 4 | Ground | No |

Is the inspection result normal?

YES >> Replace IPDM E/R. Refer to [PCS-56, "Removal and Installation"](#).

NO >> Repair harness or connectors between IPDM E/R and generator.

A

B

C

D

E

F

G

H

I

J

K

L

CHG

N

O

P

B TERMINAL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

B TERMINAL CIRCUIT

Description

INFOID:0000000009269529

"B" terminal circuit supplies power to charge the battery and to operate the vehicles electrical system.

Diagnosis Procedure

INFOID:0000000009269530

Regarding Wiring Diagram information. Refer to [CHG-8, "Wiring Diagram"](#).

1. CHECK "B" TERMINAL CONNECTION

1. Turn ignition switch OFF.
2. Check if "B" terminal is clean and tight.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair terminal "B" connection. Confirm repair by performing complete Charging system test using the EXP-800 NI or GR8-1200 NI (if available). Refer to applicable Instruction Manual for proper testing procedures.

2. CHECK "B" TERMINAL CIRCUIT

Check voltage between generator "B" terminal and ground.

| (+) Generator | | (-) | Voltage (Approx.) |
|---------------|----------|--------|-------------------|
| Connector | Terminal | | |
| F2 | 1 | Ground | Battery voltage |

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check harness for open between generator and fusible link.

3. CHECK "B" TERMINAL CONNECTION (VOLTAGE DROP TEST)

1. Start engine, then engine running at idle and warm.
2. Check voltage between battery positive terminal and generator connector "B" terminal.

| (+) Generator | | (-) | Voltage (Approx.) |
|---------------|----------|---------------------------|-------------------|
| Connector | Terminal | | |
| F2 | 1 | Battery positive terminal | Less than 0.2V |

Is the inspection result normal?

YES >> "B" terminal circuit is normal. Refer to [CHG-13, "Work Flow \(With EXP-800 NI or GR8-1200 NI\)"](#) or [CHG-16, "Work Flow \(Without EXP-800 NI or GR8-1200 NI\)"](#).

NO >> Check harness between battery and generator for continuity.

L TERMINAL CIRCUIT (OPEN)

< DTC/CIRCUIT DIAGNOSIS >

L TERMINAL CIRCUIT (OPEN)

Description

INFOID:0000000009269531

The "L" terminal circuit controls the charge warning lamp. The charge warning lamp turns ON when the ignition switch is set to ON or START. When the generator is providing sufficient voltage with the engine running, the charge warning lamp turns OFF. If the charge warning lamp illuminates with the engine running, a malfunction is indicated.

Diagnosis Procedure

INFOID:0000000009269532

Regarding Wiring Diagram information. Refer to [CHG-8, "Wiring Diagram"](#).

1. CHECK "L" TERMINAL CONNECTION

1. Turn ignition switch OFF.
2. Check if "L" terminal is clean and tight.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair "L" terminal connection. Confirm repair by performing complete Charging system test using EXP-800 NI or GR8-1200 NI (if available). Refer to applicable Instruction Manual for proper testing procedures.

2. CHECK "L" TERMINAL CIRCUIT (OPEN)

1. Disconnect the generator connector.
2. Apply ground to generator harness connector terminal.
3. Check condition of the charge warning lamp with the ignition switch in the ON position.

| Generator | | Ground | Condition | |
|-----------|----------|--------|--------------------------|---------------------|
| Connector | Terminal | | Ignition switch position | Charge warning lamp |
| F1 | 2 | | ON | Illuminate |

Does it illuminate?

YES >> "L" terminal circuit is normal. Refer to [CHG-13, "Work Flow \(With EXP-800 NI or GR8-1200 NI\)"](#) or [CHG-16, "Work Flow \(Without EXP-800 NI or GR8-1200 NI\)"](#).

NO >> GO TO 3.

3. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the battery cable from the negative terminal.
2. Disconnect the combination meter connector.
3. Check continuity between generator harness connector and combination meter harness connector.

| Combination meter Type B | | Combination meter | | Continuity |
|--------------------------|----------|-------------------|----------|------------|
| Generator | Terminal | Connector | Terminal | |
| Connector | Terminal | Connector | Terminal | |
| F1 | 2 | M82 | 38 | Yes |

Combination meter Type A

| Generator | | Combination meter | | Continuity |
|-----------|----------|-------------------|----------|------------|
| Connector | Terminal | Connector | Terminal | |
| Connector | Terminal | Connector | Terminal | |
| F1 | 2 | M24 | 35 | Yes |

is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace the harness or connectors.

4. CHECK POWER SUPPLY CIRCUIT

CHG

N

O

P

L TERMINAL CIRCUIT (OPEN)

< DTC/CIRCUIT DIAGNOSIS >

1. Connect the battery cable to the negative terminal.
2. Check voltage between combination meter harness connector and ground.

Combination meter Type B

| (+) Combination meter | | (-) | Condition | Voltage (Approx.) |
|-----------------------|----------|--------|--|-------------------|
| Connector | Terminal | | | |
| M82 | 28 | Ground | When the ignition switch is in ON position | Battery voltage |

Combination meter Type A

| (+) Combination meter | | (-) | Condition | Voltage (Approx.) |
|-----------------------|----------|--------|--|-------------------|
| Connector | Terminal | | | |
| M24 | 3 | Ground | When the ignition switch is in ON position | Battery voltage |

Is the inspection result normal?

YES >> Replace the combination meter. Refer to [MWI-53, "Removal and Installation"](#) (Type A) or [MWI-104, "Removal and Installation"](#) (Type B).

NO >> Repair or replace the harness or connectors.

L TERMINAL CIRCUIT (SHORT)

< DTC/CIRCUIT DIAGNOSIS >

L TERMINAL CIRCUIT (SHORT)

Description

INFOID:0000000009269533

The terminal "L" circuit controls the charge warning lamp. The charge warning lamp turns ON when the ignition switch is set to ON or START. When the generator is providing sufficient voltage with the engine running, the charge warning lamp turns off. If the charge warning lamp illuminates with the engine running, a malfunction is indicated.

Diagnosis Procedure

INFOID:0000000009269534

Regarding Wiring Diagram information, refer to [CHG-8, "Wiring Diagram"](#).

1. CHECK "L" TERMINAL CIRCUIT (SHORT)

1. Turn ignition switch OFF.
2. Disconnect generator connector.
3. Turn ignition switch ON.

Does charge warning lamp illuminate?

- YES >> GO TO 2.
NO >> Refer to [CHG-13, "Work Flow \(With EXP-800 NI or GR8-1200 NI\)"](#) or [CHG-16, "Work Flow \(Without EXP-800 NI or GR8-1200 NI\)"](#).

2. CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

1. Turn ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect combination meter connector.
4. Check continuity between the combination meter harness connector and ground.

| Combination meter | | Ground | Continuity |
|-------------------|----------|--------|------------|
| Connector | Terminal | | |
| F1 | 2 | | No |

Is the inspection result normal?

- YES >> Replace the combination meter. Refer to [MWI-104, "Removal and Installation"](#) (Type B) or [MWI-53, "Removal and Installation"](#) (Type A).
NO >> Repair or replace the harness or connectors.

A

B

C

D

E

F

G

H

I

J

K

L

CHG

N

O

P

S TERMINAL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

S TERMINAL CIRCUIT

Description

INFOID:0000000009269535

The output voltage of the generator is controlled by the IC regulator at terminal "S" detecting the input voltage from battery.

The "S" terminal circuit detects the battery voltage to adjust the generator output voltage with the IC voltage regulator.

Diagnosis Procedure

INFOID:0000000009269536

Regarding Wiring Diagram information. Refer to [CHG-8, "Wiring Diagram"](#).

1.CHECK "S" TERMINAL CONNECTION

1. Turn ignition switch OFF.
2. Check if "S" terminal is clean and tight.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair "S" terminal connection. Confirm repair by performing complete Charging system test using EXP-800 NI or GR8-1200 NI (if available). Refer to the applicable Instruction Manual for proper testing procedures.

2.CHECK "S" TERMINAL CIRCUIT

Check voltage between generator harness connector and ground.

| (+) Generator | | (-) | Voltage (Approx.) |
|---------------|----------|--------|-------------------|
| Connector | Terminal | | |
| F1 | 3 | Ground | Battery voltage |

Is the inspection result normal?

YES >> Refer to [CHG-13, "Work Flow \(With EXP-800 NI or GR8-1200 NI\)"](#) or [CHG-16, "Work Flow \(Without EXP-800 NI or GR8-1200 NI\)"](#).

NO >> Check harness for open between generator and fuse.

CHARGING SYSTEM

< SYMPTOM DIAGNOSIS >

SYMPTOM DIAGNOSIS CHARGING SYSTEM

Symptom Table

INFOID:000000009269537

| Symptom | Reference |
|--|---|
| Battery discharged | |
| The charge warning lamp does not illuminate when the ignition switch is set to ON. | Refer to CHG-13, "Work Flow (With EXP-800 NI or GR8-1200 NI)" or CHG-16, "Work Flow (Without EXP-800 NI or GR8-1200 NI)" . |
| The charge warning lamp does not turn OFF after the engine starts. | |
| The charging warning lamp turns ON when increasing the engine speed. | |

A

B

C

D

E

F

G

H

I

J

K

L

CHG

N

O

P


GENERATOR

< REMOVAL AND INSTALLATION >

REMOVAL AND INSTALLATION GENERATOR

Exploded View

INFOID:0000000009269538

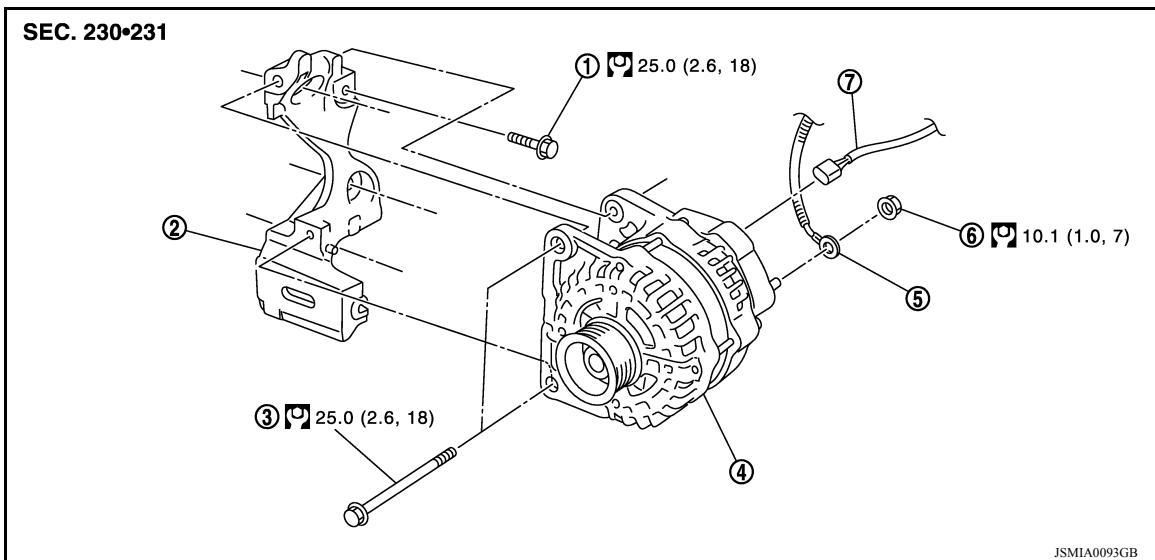

1. Generator bracket bolt
2. Generator bracket
3. Generator bolt
4. Generator
5. "B" terminal harness
6. "B" terminal nut
7. Generator harness connector

Removal and Installation

INFOID:0000000009269539

REMOVAL


1. Disconnect the battery cable from the negative terminal. Refer to [PG-63, "Removal and Installation"](#).
2. Remove fender protector (RH). Refer to [EXT-26, "Removal and Installation"](#).
3. Remove the under cover. Refer to [EXT-19, "Removal and Installation"](#).
4. Remove drive belt. Refer to [EM-16, "Removal and Installation"](#).
5. Remove the horn bracket.
6. Disconnect the harness connector from the generator.
7. Remove "B" terminal nut and disconnect "B" terminal harness.
8. Remove generator bolts.
9. Remove the generator.

CAUTION:

Be careful not to damage surrounding parts when removing generator from the vehicle.

NOTE:

Front fascia shown removed for clarity.

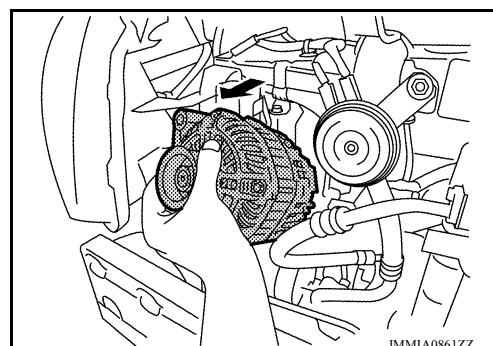


10. Remove generator bracket if necessary.

INSTALLATION

GENERATOR

< REMOVAL AND INSTALLATION >

1. Install the generator bracket (if removed), using the following procedure.
 - a. Temporarily tighten bolt (1).
 - b. Temporarily tighten bolt (2).
 - c. Tighten bolts (3) and (4) to specification in numerical order as shown.Tighten bolts (1) and (2) to specification.

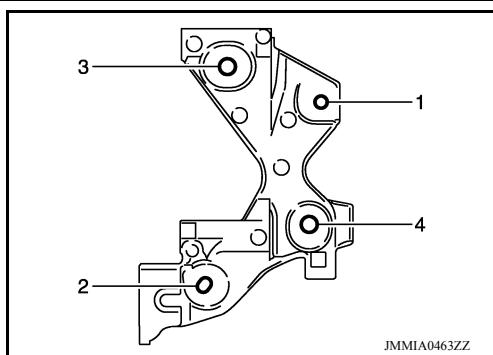

2. Install generator using the following procedure.
 - a. Temporarily tighten the generator bolts in order from the lower to the upper.
 - b. Tighten the generator bolts to the specification starting with the top bolt.
 - c. Install "B" terminal harness and "B" terminal nut.
CAUTION:
Be sure to tighten "B" terminal nut carefully.
3. Install and check the tension of the drive belt. Refer to [EM-16, "Removal and Installation"](#).
4. Installation of the remaining components is in the reverse order of removal.

A
B
C
D

E

F

G

H

I

J

K

L

CHG

N

O

P

SERVICE DATA AND SPECIFICATIONS (SDS)

< SERVICE DATA AND SPECIFICATIONS (SDS)

SERVICE DATA AND SPECIFICATIONS (SDS)

SERVICE DATA AND SPECIFICATIONS (SDS)

Generator

INFOID:000000009269540

| | |
|---|--|
| Model* | A002TJ1791ZC |
| Manufacturer | Mitsubishi |
| Nominal rating | 13.5V - 110A |
| Ground polarity | Negative |
| Minimum revolution under no-load | 1,000 rpm |
| Hot output current (When 13.5 V is applied) | More than 27A/1,300 rpm More than 95A/2,500 rpm More than 116A/5,000 rpm |
| Regulated output voltage | 14.1 - 14.7V @20°C (68°F) |
| Adjustment range of power generation voltage variable control | 11.4 - 15.6V |

* : Always check with the Parts Department for the latest parts information.