

SECTION **LAN**
LAN SYSTEM

A
B
C
D
E
F
G
H
I
J
L
M

CONTENTS

CAN FUNDAMENTAL	CAN
PRECAUTIONS 3	INDEX FOR DTC 40
Precautions When Using CONSULT-II 3	DTC No. Index 40
Precautions for Trouble Diagnosis 3	HOW TO USE THIS SECTION 41
Precautions for Harness Repair 3	Caution 41
SYSTEM DESCRIPTION 4	Abbreviation List 41
CAN Communication System 4	PRECAUTIONS 42
SYSTEM DIAGRAM 4	Precautions for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TEN- SIONER" 42
CAN COMMUNICATION CONTROL CIRCUIT..... 5	Precautions When Using CONSULT-II 42
Diag on CAN 6	Precautions for Trouble Diagnosis 42
DESCRIPTION 6	Precautions for Harness Repair 42
SYSTEM DIAGRAM 6	TROUBLE DIAGNOSIS 44
TROUBLE DIAGNOSIS 7	CAN Diagnostic Support Monitor 44
Condition of Error Detection 7	MONITOR ITEM LIST (CONSULT-II) 44
CAN COMMUNICATION SYSTEM ERROR 7	CAN System Specification Chart 47
WHEN INDICATED "U1000" OR "U1001" IS INDI- CATED EVEN THOUGH CAN COMMUNICA- TION SYSTEM IS NORMAL 7	VEHICLE EQUIPMENT IDENTIFICATION INFORMATION 47
Symptom When Error Occurs in CAN Communi- cation System 8	CAN Communication Signal Chart 48
ERROR EXAMPLE 8	TYPE 1/TYPE 2/TYPE 3/TYPE 4 48
Self-Diagnosis 12	TYPE 5/TYPE 6 49
CAN Diagnostic Support Monitor 13	TYPE 7/TYPE 8/TYPE 9/TYPE 10 50
MONITOR ITEM (CONSULT-II) 13	Schematic 53
MONITOR ITEM (ON-BOARD DIAGNOSIS) 14	Wiring Diagram — CAN — 54
TROUBLE DIAGNOSES WORK FLOW 15	Interview Sheet 56
Information Needed for Trouble Diagnosis 15	Data Sheet 57
How to Use CAN Communication Signal Chart 15	CONSULT-II DATA ATTACHMENT SHEET 57
Trouble Diagnosis Flow Chart 16	CAN System (Type 1) 60
Trouble Diagnosis Procedure 17	DIAGNOSIS SHEET 60
INTERVIEW WITH CUSTOMER 17	CAN System (Type 2) 61
INSPECTION OF VEHICLE CONDITION 18	DIAGNOSIS SHEET 61
CHECK OF CAN SYSTEM TYPE (HOW TO USE CAN SYSTEM TYPE SPECIFICATION CHART).. 19	CAN System (Type 3) 62
CREATE INTERVIEW SHEET 21	DIAGNOSIS SHEET 62
CREATE DATA SHEET 22	CAN System (Type 4) 63
CREATE DIAGNOSIS SHEET 24	DIAGNOSIS SHEET 63
DETECT THE ROOT CAUSE 25	CAN System (Type 5) 64
	DIAGNOSIS SHEET 64
	CAN System (Type 6) 65
	DIAGNOSIS SHEET 65

LAN

CAN System (Type 7)	66	Main Line Between Data Link Connector and TCM... 72
DIAGNOSIS SHEET	66	Main Line Between Data Link Connector and ABS
CAN System (Type 8)	67	Actuator and Electric Unit (Control Unit)
DIAGNOSIS SHEET	67	ECM Branch Line Circuit
CAN System (Type 9)	68	BCM Branch Line Circuit
DIAGNOSIS SHEET	68	Data Link Connector Branch Line Circuit
CAN System (Type 10)	69	EPS Control Unit Branch Line Circuit
DIAGNOSIS SHEET	69	Intelligent Key Unit Branch Line Circuit
Component Parts Location	70	Combination Meter Branch Line Circuit
Harness Layout	70	ABS Actuator and Electric Unit (Control Unit) Branch
Malfunction Area Chart	71	Line Circuit
MAIN LINE	71	TCM Branch Line Circuit
BRANCH LINE	71	IPDM E/R Branch Line Circuit
SHORT CIRCUIT	71	CAN Communication Circuit

PRECAUTIONS

PFP:00001

Precautions When Using CONSULT-II

UKS005XZ

Use CONSULT-II CONVERTER when connecting CONSULT-II to data link connector.

CAUTION:

CAN communication does not function properly if CONSULT-II is used without connecting CONSULT-II CONVERTER.

Precautions for Trouble Diagnosis

UKS005Y0

CAUTION:

- Never apply 7.0 V or more to the measurement terminal.
- Use a tester with open terminal voltage of 7.0 V or less.
- Turn the ignition switch OFF and disconnect the battery cable from the negative terminal when checking the harness.


Precautions for Harness Repair

UKS005Y1

- Solder the repaired area and wrap tape around the soldered area.

NOTE:


A fray of twisted lines must be within 110 mm (4.33 in).

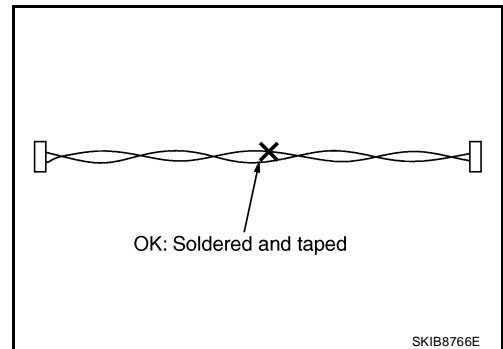

- Bypass connection is never allowed at the repaired area.

NOTE:

Bypass connection may cause CAN communication error. The spliced wire becomes separated and the characteristics of twisted line are lost.

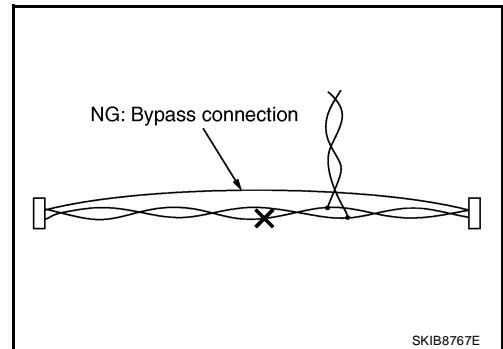

- Replace the applicable harness as an assembly if error is detected on the shield lines of CAN communication line.

A
B
C
D
E
F
G
H
I
J
LAN
L
M

SYSTEM DESCRIPTION


PF0:0000

CAN Communication System

UKS005Y2

- CAN communication is a multiplex communication system. This enables the system to transmit and receive large quantities of data at high speed by connecting control units with two communication lines (CAN-H and CAN-L).
- Control units on the CAN network transmit signals using the CAN communication control circuit. They receive only necessary signals from other control units to operate various functions.
- CAN communication lines adopt twisted-pair line style (two lines twisted) for noise immunity.


SYSTEM DIAGRAM

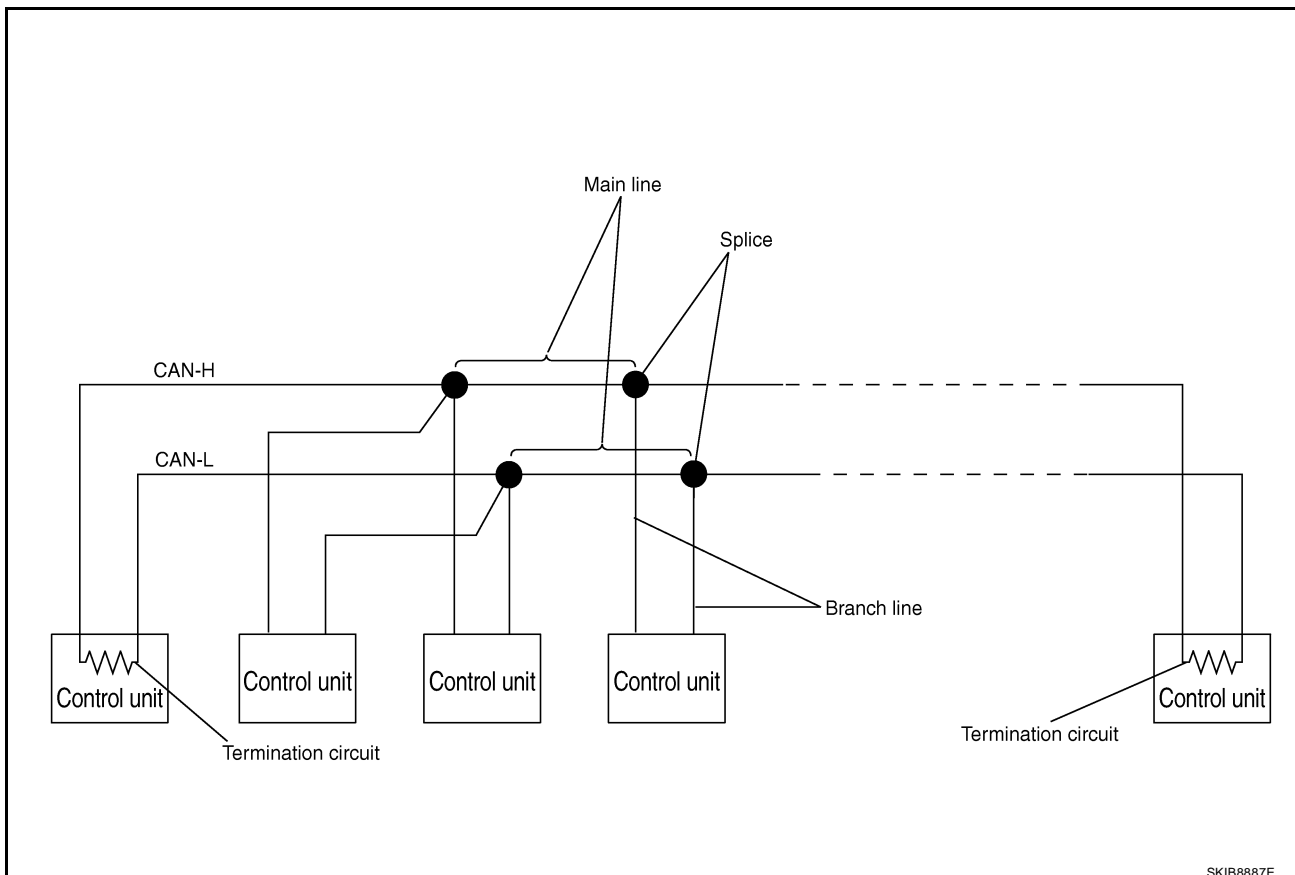

Each control unit passes an electric current to the termination circuits when transmitting CAN communication signal. The termination circuits produce an electrical potential difference between CAN-H and CAN-L. CAN communication system transmits and receives CAN communication signals by the potential difference.

Component	Description
Main line	CAN communication line between splices
Branch line	CAN communication line between splice and a control unit
Splice	A point connecting a branch line with a main line
Termination circuit	Refer to LAN-5, "CAN COMMUNICATION CONTROL CIRCUIT" .

CAN COMMUNICATION CONTROL CIRCUIT

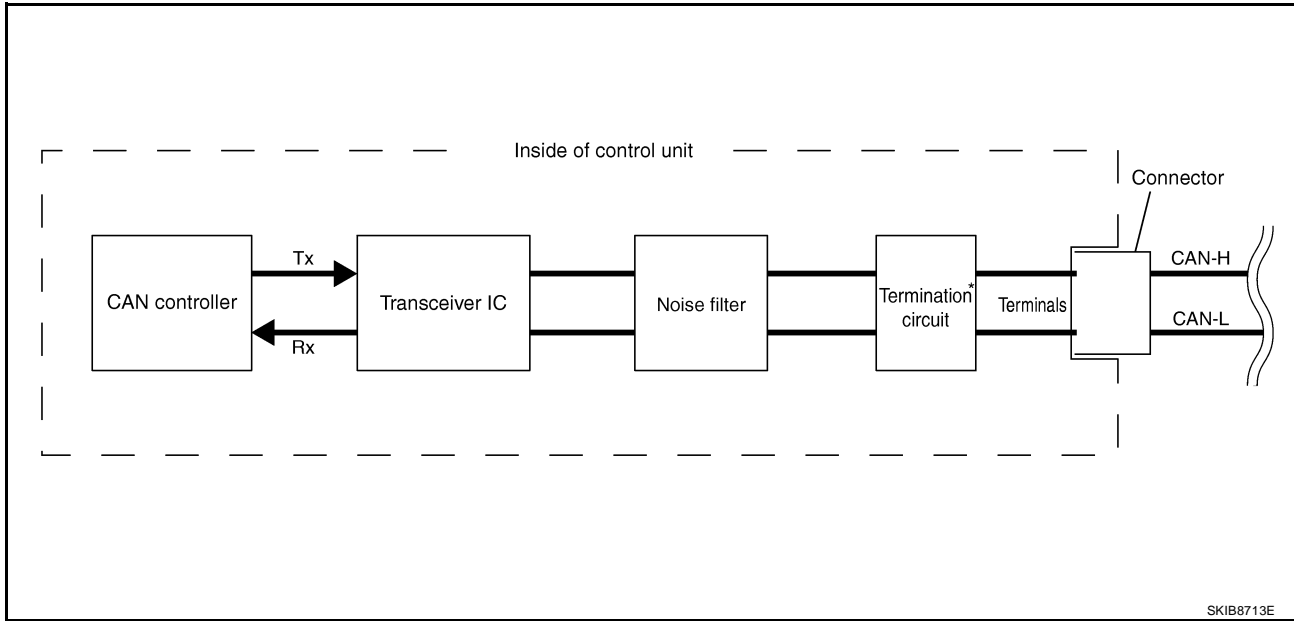

Component	System description
CAN controller	It controls CAN communication signal transmission and reception, error detection, etc.
Transceiver IC	It converts digital signal into CAN communication signal, and CAN communication signal into digital signal.
Noise filter	It eliminates noise of CAN communication signal.
Termination circuit* (Resistance of approx. 120 Ω)	It produces potential difference.

*: These are the only control units wired with both ends of CAN communication system.


A
B
C
D
E
F
G
H
I
J
L
M

LAN

Diag on CAN DESCRIPTION

“Diag on CAN” is a diagnosis using CAN communication instead of previous DDL1 and DDL2 communication line, between control unit and diagnosis unit.

SYSTEM DIAGRAM

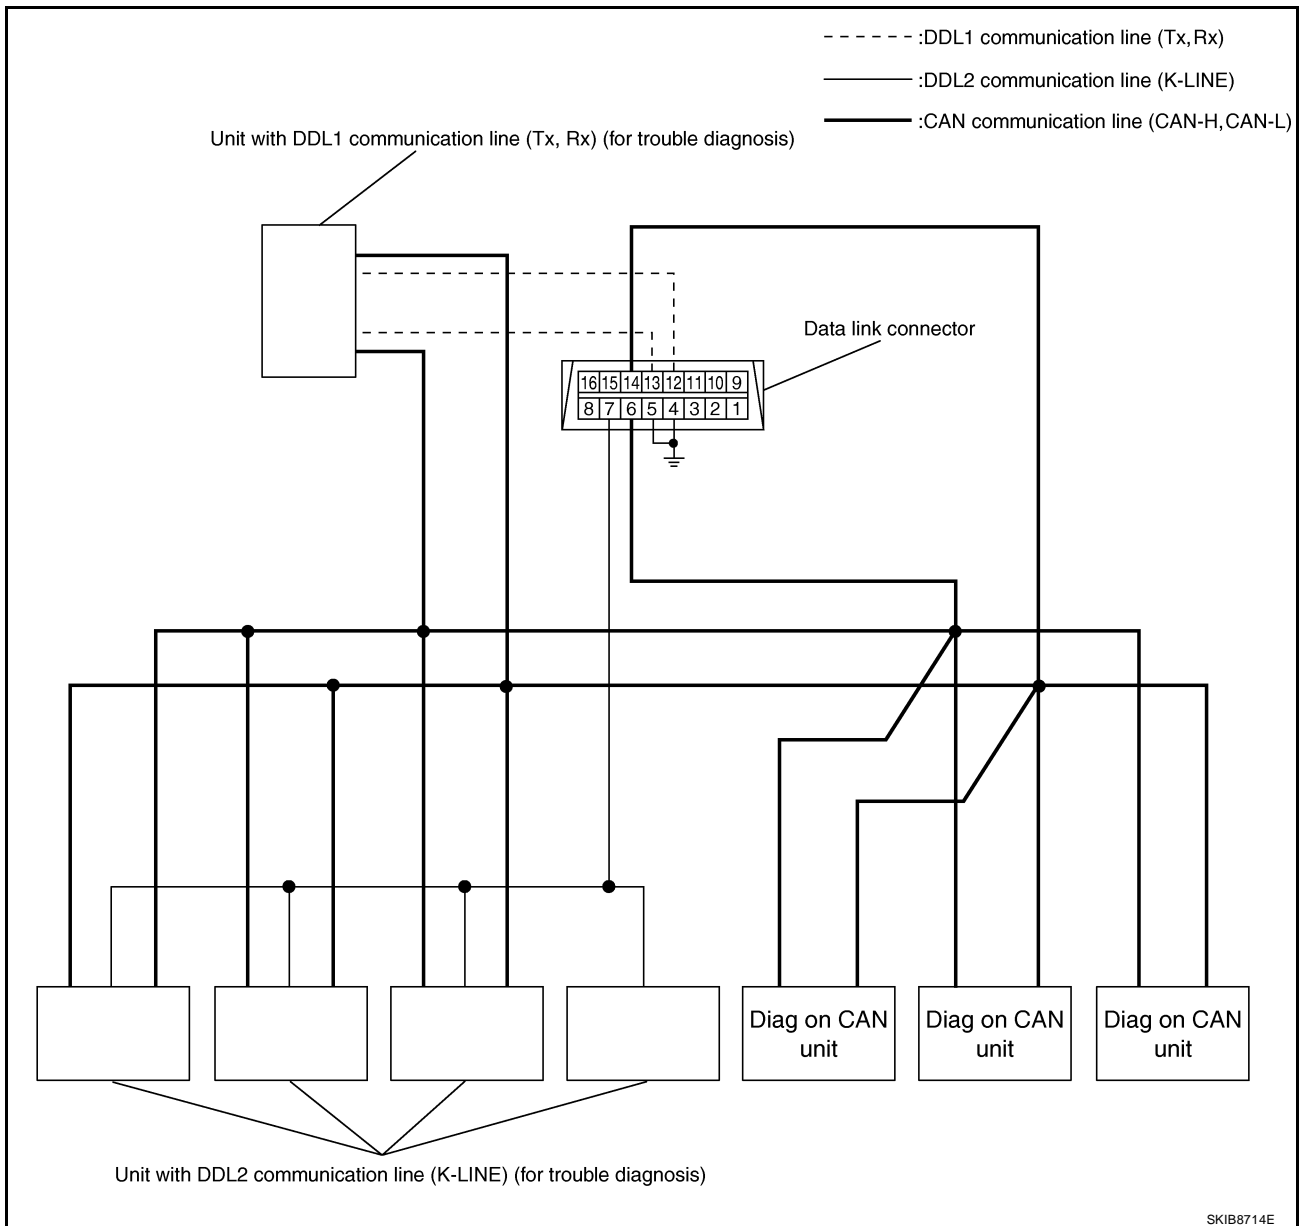

Name	Harness	Description
DDL1	Tx Rx	It is used for trouble diagnosis. (CAN-H and CAN-L are used for controlling)
DDL2	K-LINE	It is used for trouble diagnosis. (CAN-H and CAN-L are used for controlling)
Diag on CAN	CAN-H CAN-L	It is used for trouble diagnosis and control.

TROUBLE DIAGNOSIS

PFP:00004

Condition of Error Detection

UKS005Y4

“U1000” or “U1001” is indicated on SELF-DIAG RESULTS on CONSULT-II if CAN communication signal is not transmitted or received between units for 2 seconds or more.

CAN COMMUNICATION SYSTEM ERROR

- CAN communication line open (CAN-H, CAN-L, or both)
- CAN communication line short (ground, between CAN communication lines, other harnesses)
- Error of CAN communication control circuit of the unit connected to CAN communication line

WHEN INDICATED “U1000” OR “U1001” IS INDICATED EVEN THOUGH CAN COMMUNICATION SYSTEM IS NORMAL

- CONSULT-II CONVERTER not connected: Error may be detected by the self-diagnosis when not using CONSULT-II CONVERTER (Depending on the control unit which carries out CAN communication).
- Removal/installation of parts: Error may be detected when removing and installing CAN communication unit and related parts while turning the ignition switch ON. (A DTC except for CAN communication may be detected.)
- Fuse blown out (removed): CAN communication of the unit may cease.
- Voltage drop: Error may be detected if voltage drops due to discharged battery when turning the ignition switch ON (Depending on the control unit which carries out CAN communication).
- Error may be detected if the power supply circuit of the control unit, which carries out CAN communication, malfunctions (Depending on the control unit which carries out CAN communication).
- Error may be detected if reprogramming is not completed normally.

NOTE:

CAN communication system is normal if “U1000” or “U1001” is indicated on SELF-DIAG RESULTS of CONSULT-II under the above conditions. Erase the memory of the self-diagnosis of each unit.

A

B

C

D

E

F

G

H

I

J

LAN

L

M

Symptom When Error Occurs in CAN Communication System


In CAN communication system, multiple units mutually transmit and receive signals. Each unit cannot transmit and receive signals if any error occurs on CAN communication line. Under this condition, multiple control units related to the root cause malfunction or go into fail-safe mode.

ERROR EXAMPLE

NOTE:

- Each vehicle differs in symptom of each unit under fail-safe mode and CAN communication line wiring.
- Refer to [LAN-41, "Abbreviation List"](#) for the unit abbreviation.


Example: TCM branch line open circuit

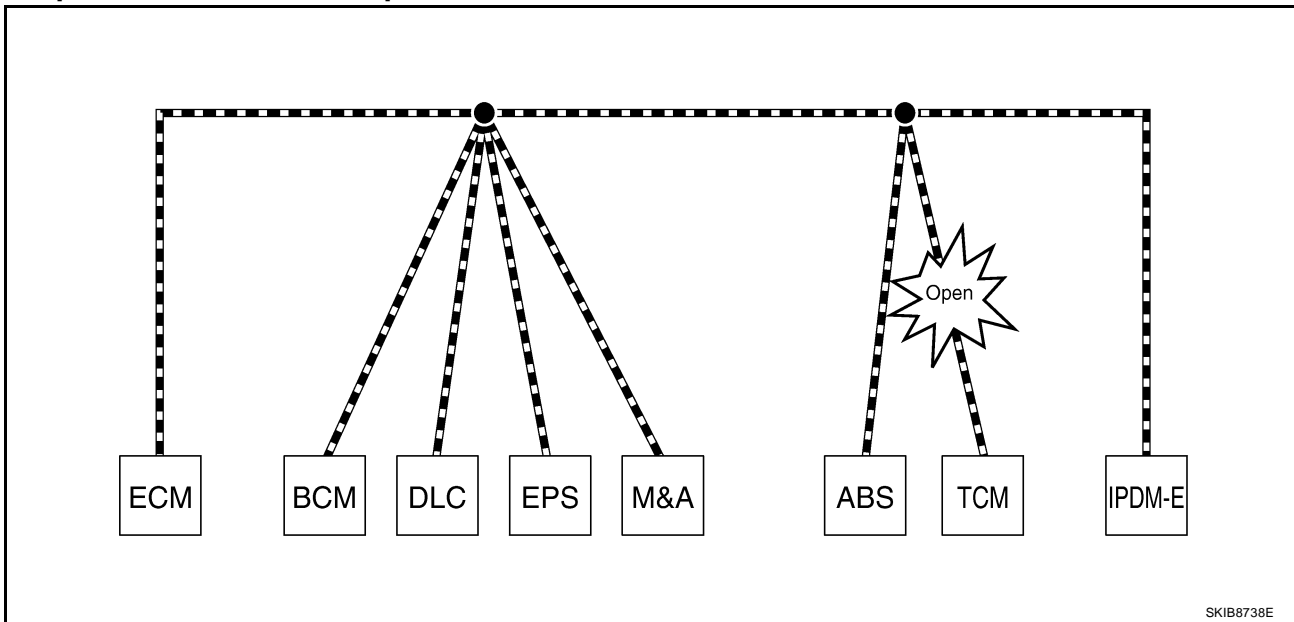

SKIB6738E

Unit name	Symptom
ECM	Engine torque limiting is affected, and shift harshness increases.
BCM	Reverse warning chime does not sound.
EPS control unit	Normal operation.
Combination meter	<ul style="list-style-type: none"> ● Shift position indicator and OD OFF indicator turn OFF. ● Warning lamps turn ON.
ABS actuator and electric unit (control unit)	Normal operation.
TCM	No impact on operation.
IPDM E/R	Normal operation.

Example: Data link connector branch line open circuit

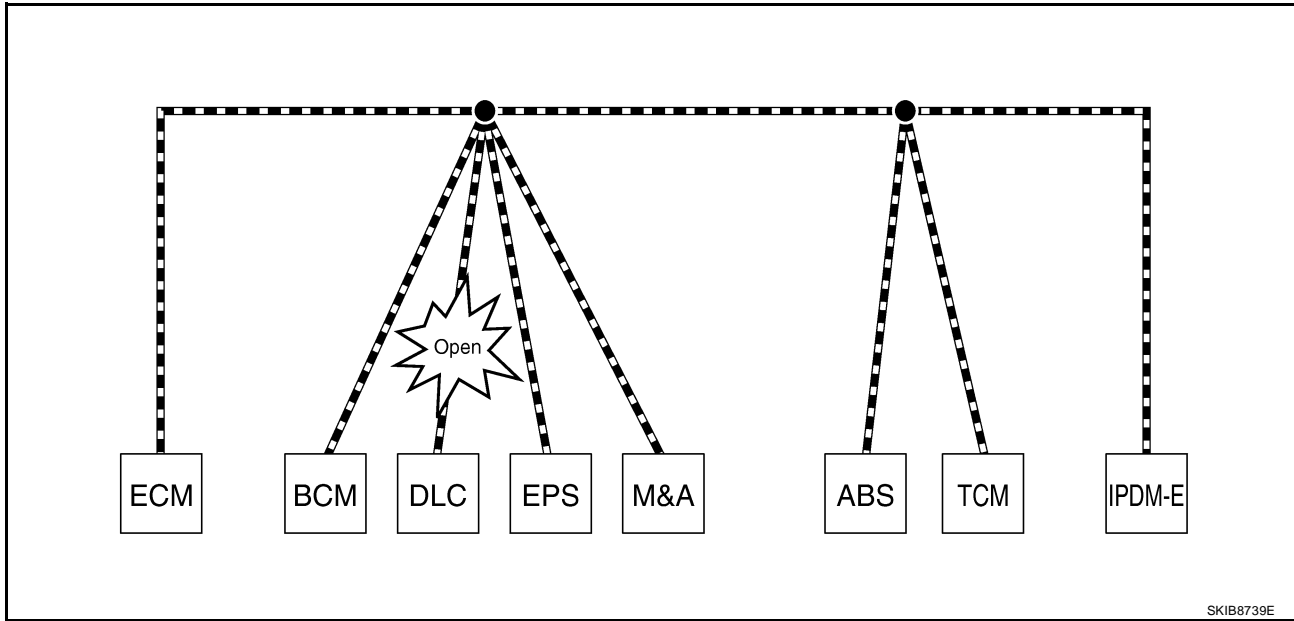

Unit name	Symptom
ECM	Normal operation.
BCM	
EPS control unit	
Combination meter	
ABS actuator and electric unit (control unit)	
TCM	
IPDM E/R	

NOTE:


- When data link connector branch line is open, transmission and reception of CAN communication signals is not affected. Therefore, no symptoms occur. However, be sure to repair malfunctioning circuit.
- When data link connector branch line is open, the screen-display of the CONSULT-II "SELECT SYSTEM" screen may be the same as when the CAN communication line has short-circuit. However, symptoms differ depending on the case. See below chart for the differences.

	SELECT SYSTEM (CONSULT-II)	Difference of symptom
Data link connector branch line open circuit	All Diag on CAN units are not indicated.	Normal operation.
CAN-H, CAN-L harness short-circuit		Most the units which are connected to the CAN communication system enter fail-safe mode or are deactivated.

TROUBLE DIAGNOSIS

[CAN FUNDAMENTAL]

Example: Main Line Between Data Link Connector and ABS Actuator and Electric Unit (Control Unit) Open Circuit

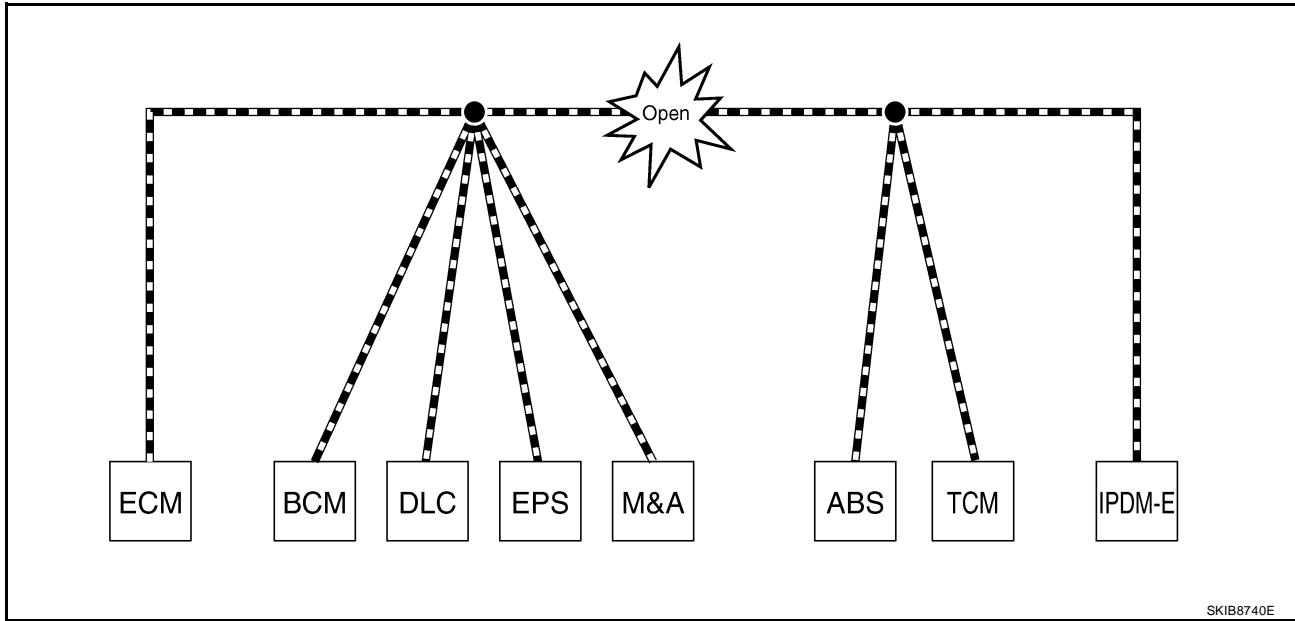


Unit name	Symptom
ECM	Engine torque limiting is affected, and shift harshness increases.
BCM	<ul style="list-style-type: none"> ● Reverse warning chime does not sound. ● The front wiper moves under continuous operation mode even though the front wiper switch being in the intermittent position.
EPS control unit	The steering effort increases.
Combination meter	<ul style="list-style-type: none"> ● The shift position indicator and OD OFF indicator turn OFF. ● The speedometer is inoperative. ● The odo/trip meter stops.
ABS actuator and electric unit (control unit)	Normal operation.
TCM	No impact on operation.
IPDM E/R	When the ignition switch is ON, <ul style="list-style-type: none"> ● The headlamps (Lo) turn ON. ● The cooling fan continues to rotate.

TROUBLE DIAGNOSIS

[CAN FUNDAMENTAL]

Example: CAN-H, CAN-L Harness Short Circuit

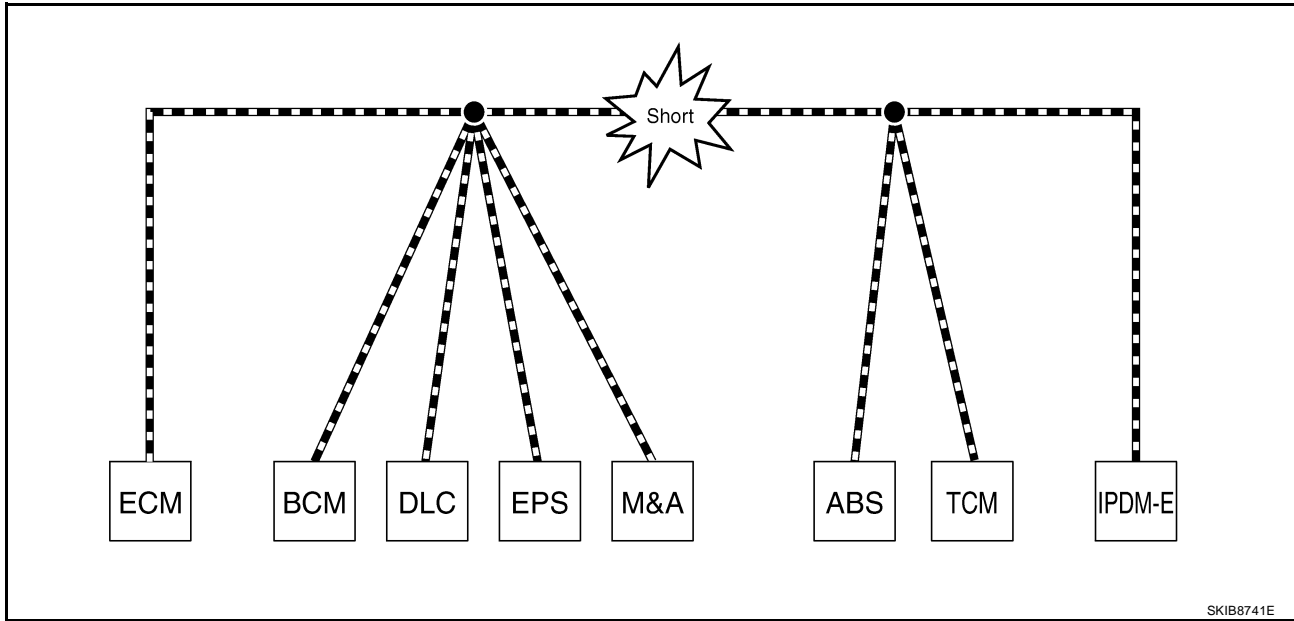

Unit name	Symptom
ECM	<ul style="list-style-type: none"> ● Engine torque limiting is affected, and shift harshness increases. ● Engine speed drops.
BCM	<ul style="list-style-type: none"> ● Reverse warning chime does not sound. ● The front wiper moves under continuous operation mode even though the front wiper switch being in the intermittent position. ● The room lamp does not turn ON. ● The engine does not start (if an error or malfunction occurs while turning the ignition switch is OFF.) ● The steering lock does not release (if an error or malfunction occurs while turning the ignition switch is OFF.)
EPS control unit	The steering effort increases.
Combination meter	<ul style="list-style-type: none"> ● The tachometer and the speedometer do not move. ● Warning lamps turn ON. ● Indicator lamps do not turn ON.
ABS actuator and electric unit (control unit)	Normal operation.
TCM	No impact on operation.
IPDM E/R	When the ignition switch is ON, <ul style="list-style-type: none"> ● The headlamps (Lo) turn ON. ● The cooling fan continues to rotate.

A
B
C
D
E
F
G
H
I
J
L
M

LAN

TROUBLE DIAGNOSIS

[CAN FUNDAMENTAL]

Self-Diagnosis

UKS005Y6

DTC	Self-diagnosis item (CONSULT-II indication)	DTC detection condition	Inspection/Action
U1000	CAN COMM CIRCUIT	When ECM is not transmitting or receiving CAN communication signal of OBD (emission-related diagnosis) for 2 seconds or more.	Refer to LAN-15 . "TROUBLE DIAG- NOSES WORK FLOW" .
		When a control unit (except for ECM) is not transmitting or receiving CAN communication signal for 2 seconds or more.	
U1001	CAN COMM CIRCUIT	When ECM is not transmitting or receiving CAN communication signal other than OBD (emission-related diagnosis) for 2 seconds or more.	
U1002	SYSTEM COMM	When a control unit is not transmitting or receiving CAN communication signal for 2 seconds or less.	Start the inspection. Refer to the applicable section of the indicated control unit.
U1010	CONTROL UNIT [CAN]	When an error is detected during the initial diagnosis for CAN controller of each control unit.	Replace the control unit indicating "U1010".

CAN Diagnostic Support Monitor

CONSULT-II and CAN diagnostic support monitor (on-board diagnosis function) are used for detecting root cause.

MONITOR ITEM (CONSULT-II)

Example: CAN DIAG SUPPORT MNTR indication

Without PAST			With PAST		
SYSTEM	ENGINE		SYSTEM	ENGINE	
DATE			DATE		
P/#			P/#		
		PRSNT			PRSNT PAST
INITIAL DIAG		OK	TRANSMIT DIAG		OK OK
TRANSMIT DIAG		OK	VDC/TCS/ABS		- -
TCM		OK	METER/M&A		OK OK
VDC/TCS/ABS		UNKWN	BCM/SEC		OK OK
METER/M&A		OK	ICC		- -
ICC		UNKWN	HVAC		- -
BCM/SEC		OK	TCM		OK OK
IPDM E/R		OK	EPS		- -
			IPDM E/R		OK OK
			e4WD		- -
			AWD/4WD		OK OK

SKIB8742E

Without PAST

Item	PRSNT	Description
Initial diagnosis	OK	Normal at present
	NG	Control unit error (Except for some control units)
Transmission diagnosis	OK	Normal at present
	UNKWN	Unable to transmit signals for 2 seconds or more. Diagnosis not performed
Control unit name (Reception diagnosis)	OK	Normal at present
	UNKWN	Unable to receive signals for 2 seconds or more. Diagnosis not performed
	UNKWN	No control unit for receiving signals. (No applicable optional parts)

With PAST

Item	PRSNT	PAST	Description
Transmission diagnosis	OK	OK	Normal at present and in the past
		1 – 39	Normal at present, but unable to transmit signals for 2 seconds or more in the past. (The number indicates the number of ignition switch cycles from OFF to ON.)
	UNKWN	0	Unable to transmit signals for 2 seconds or more at present.
Control unit name (Reception diagnosis)	OK	OK	Normal at present and in the past
		1 – 39	Normal at present, but unable to receive signals for 2 seconds or more in the past. (The number indicates the number of ignition switch cycles from OFF to ON.)
	UNKWN	0	Unable to receive signals for 2 seconds or more at present
	-	-	Diagnosis not performed. No control unit for receiving signals. (No applicable optional parts)

TROUBLE DIAGNOSIS

[CAN FUNDAMENTAL]

MONITOR ITEM (ON-BOARD DIAGNOSIS)

NOTE:

For some models, CAN communication diagnosis result is received from the vehicle monitor. (CONSULT-II is not available.)

Example: Vehicle Display

Item	Result indicated	Error counter	Description
CAN_COMM (Initial diagnosis)	OK	0	Normal at present
	NG	1 – 50	Control unit error (The number indicates how many times diagnosis has been run.)
CAN_CIRC_1 (Transmission diagnosis)	OK	0	Normal at present
	UNKWN	1 – 50	Unable to transmit for 2 seconds or more at present. (The number indicates how many times diagnosis has been run.)
CAN_CIRC_2 – 9 (Reception diagnosis of each unit)	OK	0	Normal at present
	UNKWN	1 – 50	Unable to transmit for 2 seconds or more at present. (The number indicates how many times diagnosis has been run.)
			Diagnosis not performed.
		No control unit for receiving signals. (No applicable optional parts)	

TROUBLE DIAGNOSES WORK FLOW

PFP:00004

Information Needed for Trouble Diagnosis

UKS005Y8

CAN communication system performs trouble diagnosis with the following tools.

Tool	Usage
Interview sheet	For filling in vehicle information and interview with customer.
Data sheet	For attaching CONSULT-II data or on-board diagnosis data.
Diagnosis sheet	For detecting the root cause. (Diagnosis sheet includes system diagram for every CAN system type)
SELECT SYSTEM (CONSULT-II)	For checking the condition of control units and the status of CAN communication.
SELF-DIAG RESULTS (CONSULT-II)	
CAN DIAG SUPPORT MNTR (CONSULT-II)	
CAN communication signal chart	For converting information received from a customer into CAN communication signal transmission and reception. This information can be used to judge whether a circuit between control units is normal or abnormal.
Abbreviation list	For checking abbreviations in CAN communication signal chart and diagnosis sheet.

How to Use CAN Communication Signal Chart

UKS005Y9

The CAN communication signal chart lists the signals needed for trouble diagnosis. It is useful for detecting the root cause by finding a signal related to the symptom, and by checking transmission and reception unit.

Example: Tachometer does not move even though the engine rotates.

T: Transmit R: Receive

Signal name/Connecting unit	ECM	BCM	M&A	STRG	ABS	IPDM-E
A/C compressor feedback signal	T		R			
A/C compressor request signal	T					R
Accelerator pedal position signal	T				R	
Cooling fan motor operation signal	T					R
Engine coolant temperature signal	T		R			
Engine speed signal	T		R		R	
Fuel consumption monitor signal	T		R			
Malfunction indicator lamp signal	T		R			
A/C switch signal	R	T				
Ignition switch signal		T				R
Sleep/wake up signal		T	R			R


No communication between ECM and M&A.

It indicates that an error occurs between ECM and M&A (Shaded area).

SKIB8715E

Trouble Diagnosis Flow Chart

UKS005YA

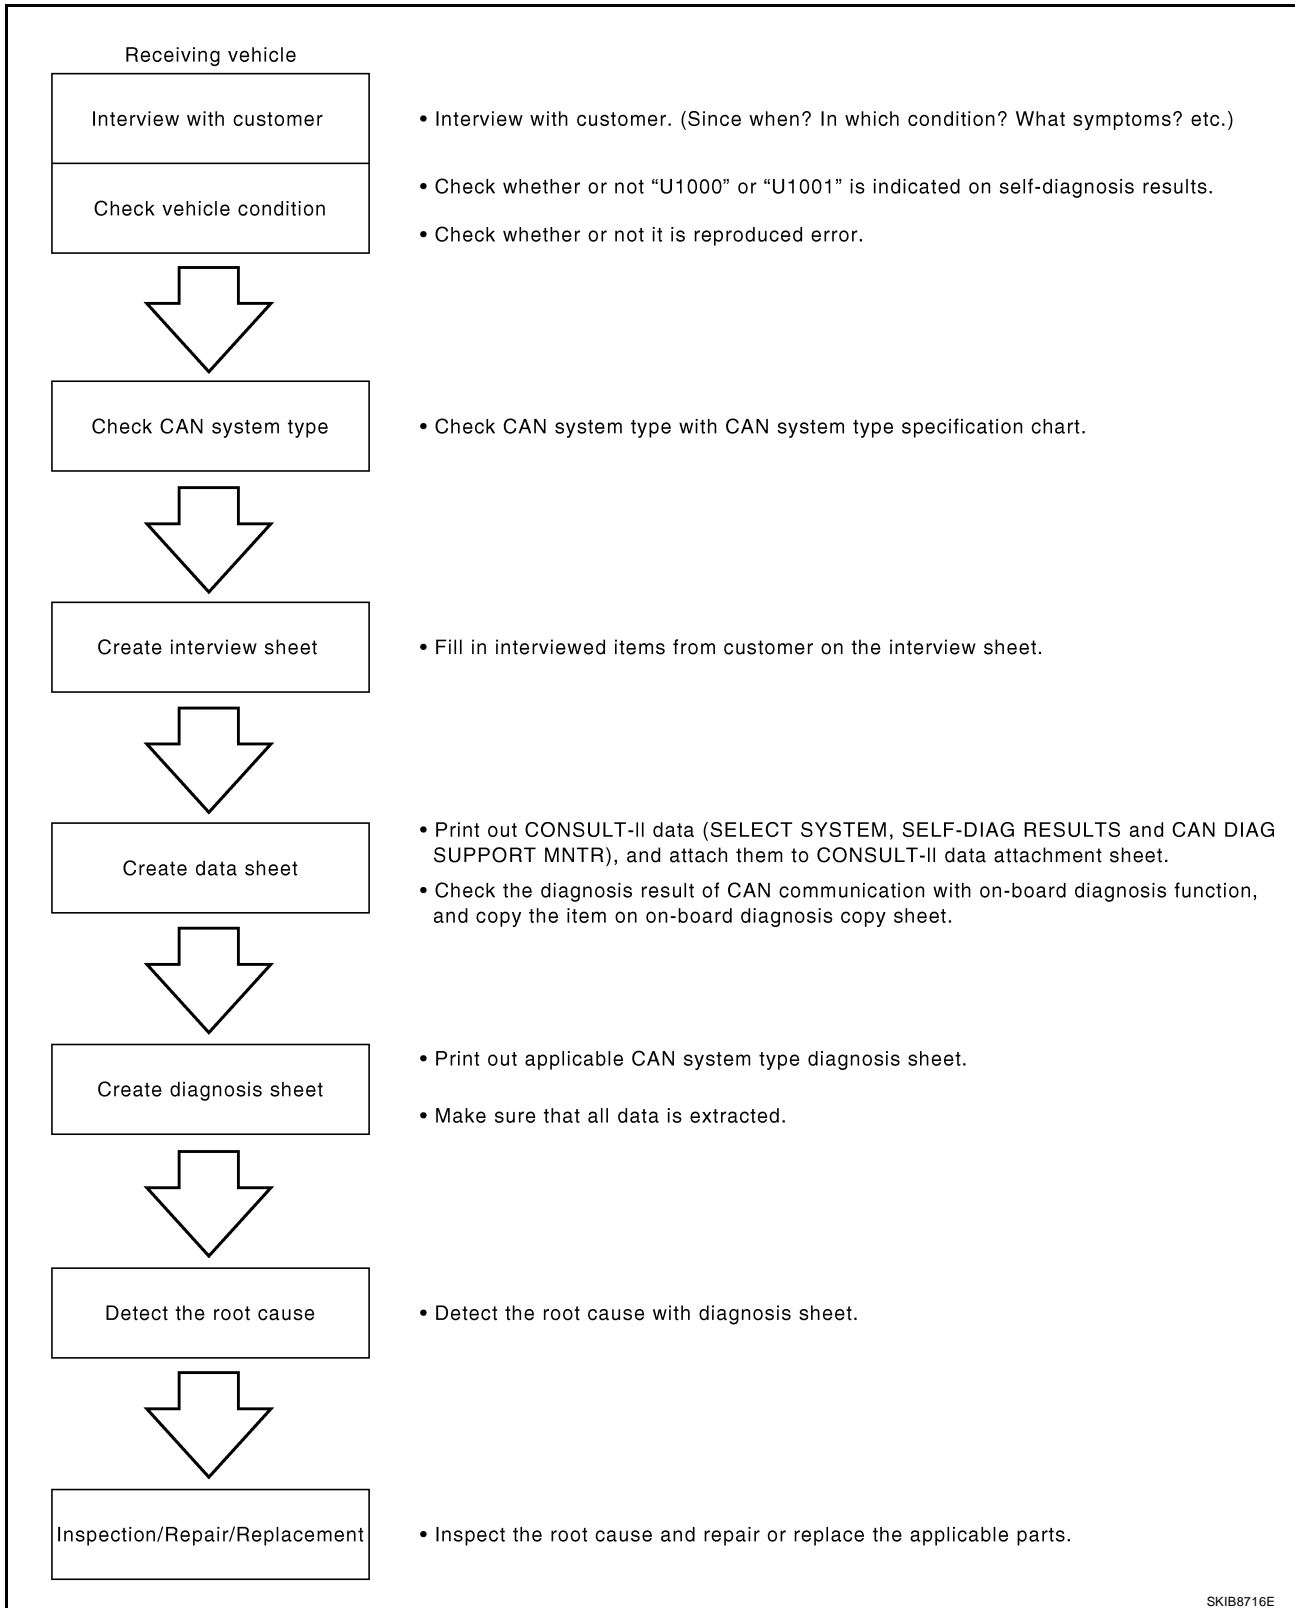

SKIB8716E

Trouble Diagnosis Procedure

INTERVIEW WITH CUSTOMER


Interview with the customer is important to detect the root cause of CAN communication system errors and to understand vehicle condition and symptoms for proper trouble diagnosis.

Points in interview

- What: Parts name, system name
- When: Date, Frequency
- Where: Road condition, Place
- In what condition: Driving condition/environment
- Result: Symptom

NOTE:

- Check normal units as well as error symptoms.
 - Example: Circuit between ECM and the combination meter is judged normal if the customer indicates tachometer functions normally.
- When a CAN communication system error is present, multiple control units may malfunction or go into fail-safe mode.
- Indication of the combination meter is important to detect the root cause because it is the most obvious from the customer, and it performs CAN communication with many units.

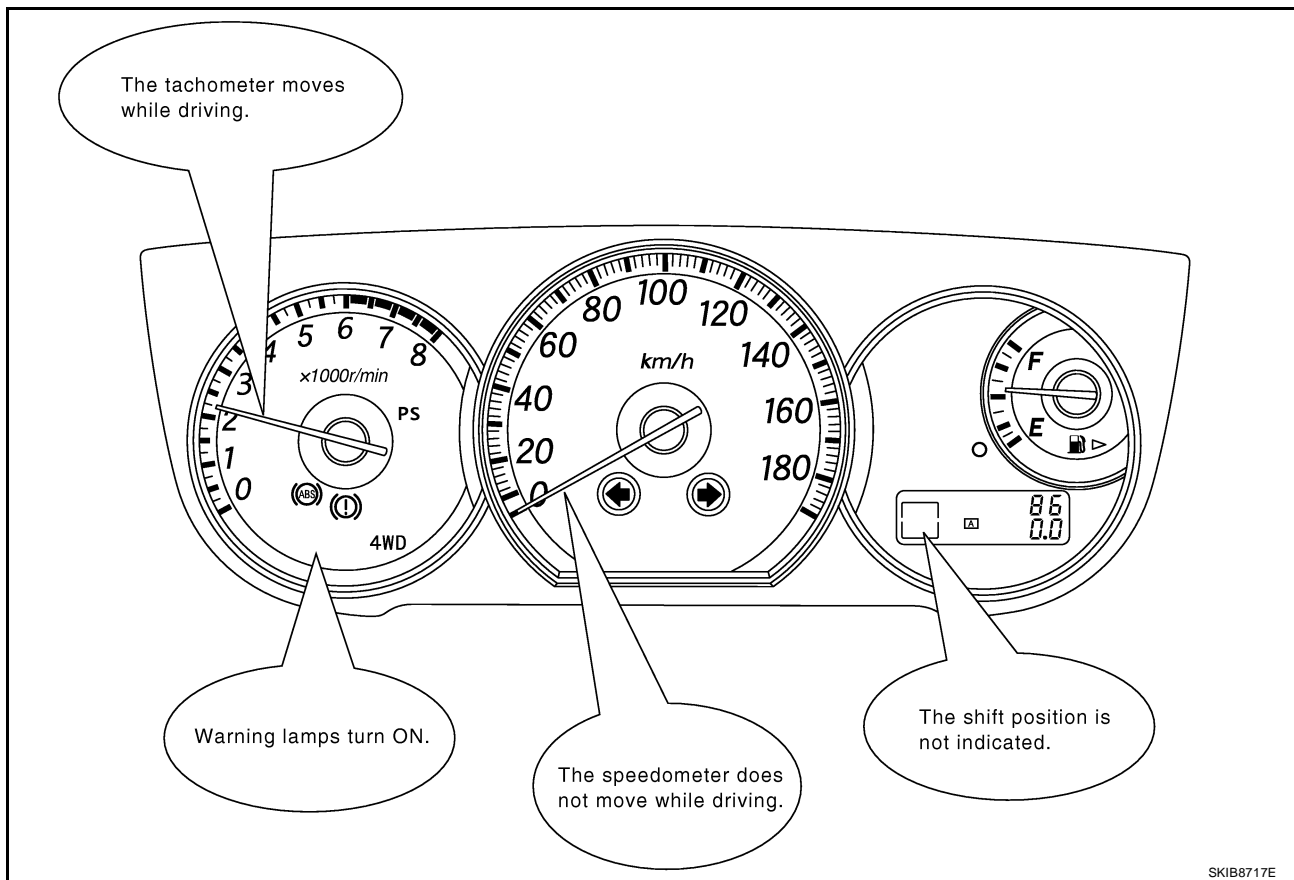

SKIB8717E

INSPECTION OF VEHICLE CONDITION

- Check whether or not “U1000” or “U1001” is indicated on “SELF-DIAG RESULTS” by CONSULT-II.

NOTE:

Root cause cannot be detected using the procedure in this section if “U1000” or “U1001” is not indicated.

- Check whether the symptom is reproduced or not.

NOTE:

- Never turn the ignition switch OFF or disconnect the battery cable while the reproducing the error. The error may temporarily correct itself, making it difficult to determine the root cause.
- The procedures for present errors differ from the procedures for past errors. Refer to [LAN-25](#).
"DETECT THE ROOT CAUSE".

TROUBLE DIAGNOSES WORK FLOW

[CAN FUNDAMENTAL]

CHECK OF CAN SYSTEM TYPE (HOW TO USE CAN SYSTEM TYPE SPECIFICATION CHART)

Determine CAN system type based on vehicle equipment. Then choose the correct diagnosis sheet.

NOTE:

There are two styles for CAN system type specification charts. Depending on the number of available system types, either style A or style B may be used.

CAN System Type Specification Chart (Style A)

NOTE:

CAN system type is easily checked with the vehicle equipment identification information shown in the chart.

Example:

Vehicle is equipped as follows: Wagon, AWD, VQ35DE, CVT, VDC, and Intelligent Key system. (○ shows an example of CAN system type.)

CAN System Specification Chart

Determine CAN system type from the following specification chart. Then choose the correct diagnosis sheet.

Body type	Wagon					
Axle	2WD			AWD		
Engine	QR25DE		VQ35DE			
Transmission	A/T		CVT			
Brake control	ABS			VDC		
Intelligent Key system		X		X		X
CAN system type	1	2	3	4	5	6
Diagnosis sheet	(XX-XX)	(XX-XX)	(XX-XX)	(XX-XX)	(XX-XX)	(XX-XX)
CAN communication signal chart	XX-XX. "TYPE 1/TYPE 2"		XX-XX. "TYPE 3/TYPE 4"		XX-XX. "TYPE 5/TYPE 6"	

Check the vehicle equipment with the vehicle identification number plate.

Check the vehicle equipment.


The number indicates the CAN system type of the vehicle.

X : Applicable

VEHICLE EQUIPMENT IDENTIFICATION INFORMATION

NOTE:

Check CAN system type from the vehicle shape and equipment.

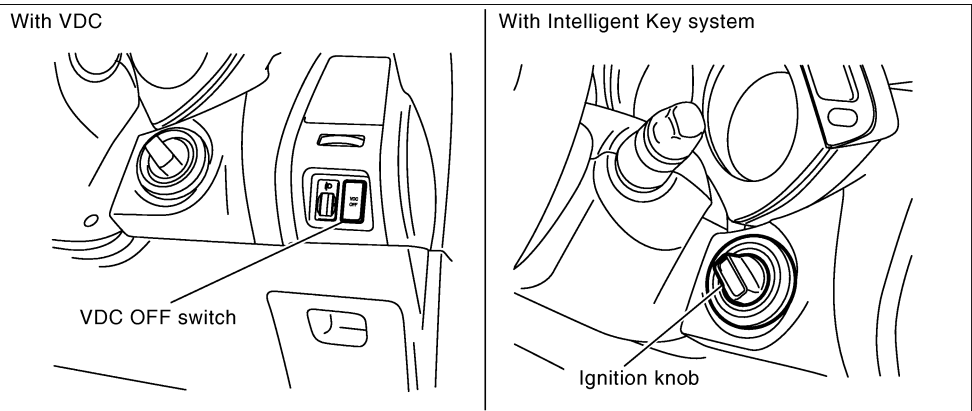

- In the above example,
 - Checking VDC OFF switch leads to judge whether or not VDC is equipped.
 - Checking the ignition knob leads to judge whether or not Intelligent Key system is equipped.

For the above case, CAN system type is "6".

SKIB888E

TROUBLE DIAGNOSES WORK FLOW

[CAN FUNDAMENTAL]

CAN System Type Specification Chart (Style B)

NOTE:

CAN system type is easily checked with the vehicle equipment identification information shown in the chart.

Example:

Vehicle is equipped as follows: Sedan, 2WD, MR20DE, CVT, ABS, Active AFS, Intelligent Key system, Navigation system and Automatic drive positioner. (○ shows an example of CAN system type.)

CAN System Specification Chart

Refer to the specification as shown in the chart.

Body type	Sedan		
Axle	2WD		AWD
Engine	HR15DE	MR20DE	HR15DE
Transmission	A/T	CVT	A/T
Brake control	ABS		
Specification chart	AAA SPECIFICATION CHART A	YYY SPECIFICATION CHART Y	AAA SPECIFICATION CHART C

Check the vehicle equipment with the vehicle identification number plate.

Check the vehicle equipment.

Select the applicable vehicle equipment. Refer to the specification chart.

x: Applicable

SPECIFICATION CHART B

Determine CAN system type from the following specification chart. Then choose the correct diagnosis sheet.

Body type	Sedan											
Axle	2WD											
Engine	MR20DE											
Transmission	CVT											
Brake control	ABS											
Active AFS		x			x	x			x	x	x	x
Intelligent Key system			x		x		x	x	x	x	x	x
Navigation system				x		x	x		x		x	
Automatic drive positioner								x		x	x	
CAN system type	9	10	11	12	13	14	15	16	17	18	19	20
Diagnosis sheet	AA: XX	AA: XX	AA: XX	AA: XX	AA: XX	AA: XX	AA: XX	AA: XX	AA: XX	AA: XX	AA: XX	AA: XX
CAN communication signal chart	XX:XX TYPE 9TYPE 10TYPE 11TYPE 12TYPE 13TYPE 14TYPE 15TYPE 16TYPE 17TYPE 18TYPE 19TYPE 20											

Check the vehicle equipment.


The number indicates the CAN system type of the vehicle.

x: Applicable

VEHICLE EQUIPMENT IDENTIFICATION INFORMATION

NOTE:

Check CAN system type from the vehicle shape and equipment.

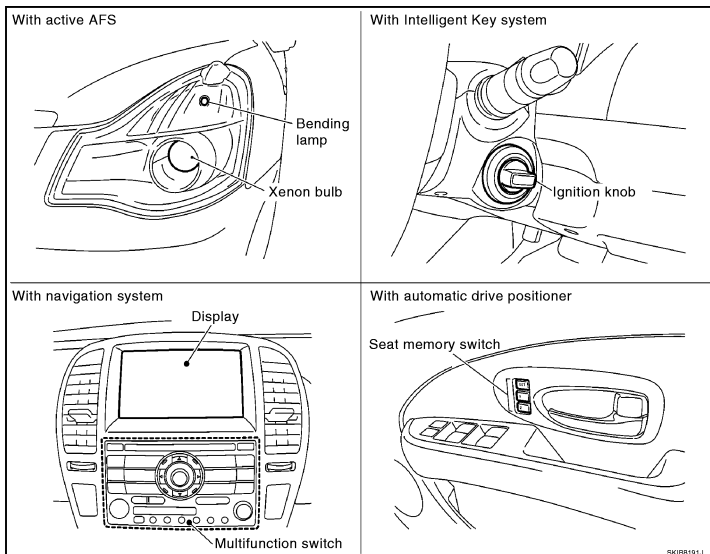

In the above example,

- Checking Xenon bulb and bending lamp lead to judge whether or not Active AFS is equipped.
- Checking the ignition knob leads to judge whether or not Intelligent Key system is equipped.
- Checking display and multifunction switch lead to judge whether or not Navigation system is equipped.
- Checking seat memory switch leads to judge whether or not Automatic drive positioner is equipped.

[For the above case, CAN system type is "20".]

SKIB8889E

TROUBLE DIAGNOSES WORK FLOW

[CAN FUNDAMENTAL]

CREATE INTERVIEW SHEET

Fill out the symptom described by the customer, vehicle condition, and CAN system type on the interview sheet.

Interview Sheet (Example)

CAN Communication System Diagnosis Interview Sheet			
Date received:	3, Feb. 2005		
Type:	DBA-KG11	VIN No.:	KG11-005040
Model:	BDRARGZ397EDA-E-J-		
First registration:	10, Jan. 2005	Mileage:	952 km
CAN system type:	Type 19		
Symptom (Results from interview with customer)			
<ul style="list-style-type: none">• Headlamps suddenly turn ON while driving the vehicle.• The engine does not restart after stopping the vehicle and turning the ignition switch OFF.• The cooling fan continues rotating while turning the ignition switch ON.			
Condition at inspection			
Error Symptom: <u>Present</u> / Past			
The engine does not start. While turning the ignition switch ON, <ul style="list-style-type: none">• The headlamps (Lo) turn ON, and the cooling fan continues rotating.• The interior lamp does not turn ON. On CONSULT-II screen, <ul style="list-style-type: none">• IPDM E/R is not indicated on SELECT SYSTEM.• ENGINE: U1001• BCM, ADAPTIVE LIGHT: U1000			

SKIB8890E

A
B
C
D
E
F
G
H
I
J
LAN
L
M

TROUBLE DIAGNOSES WORK FLOW

[CAN FUNDAMENTAL]

CREATE DATA SHEET


Create CONSULT-II Data Attachment Sheet

Print out the following CONSULT-II screens, and attach them to the CONSULT-II data attachment sheet.

- SELECT SYSTEM
- SELF-DIAG RESULTS
- CAN DIAG SUPPORT MNTR

NOTE:

Some items may not be needed depending on CAN system type of vehicle.

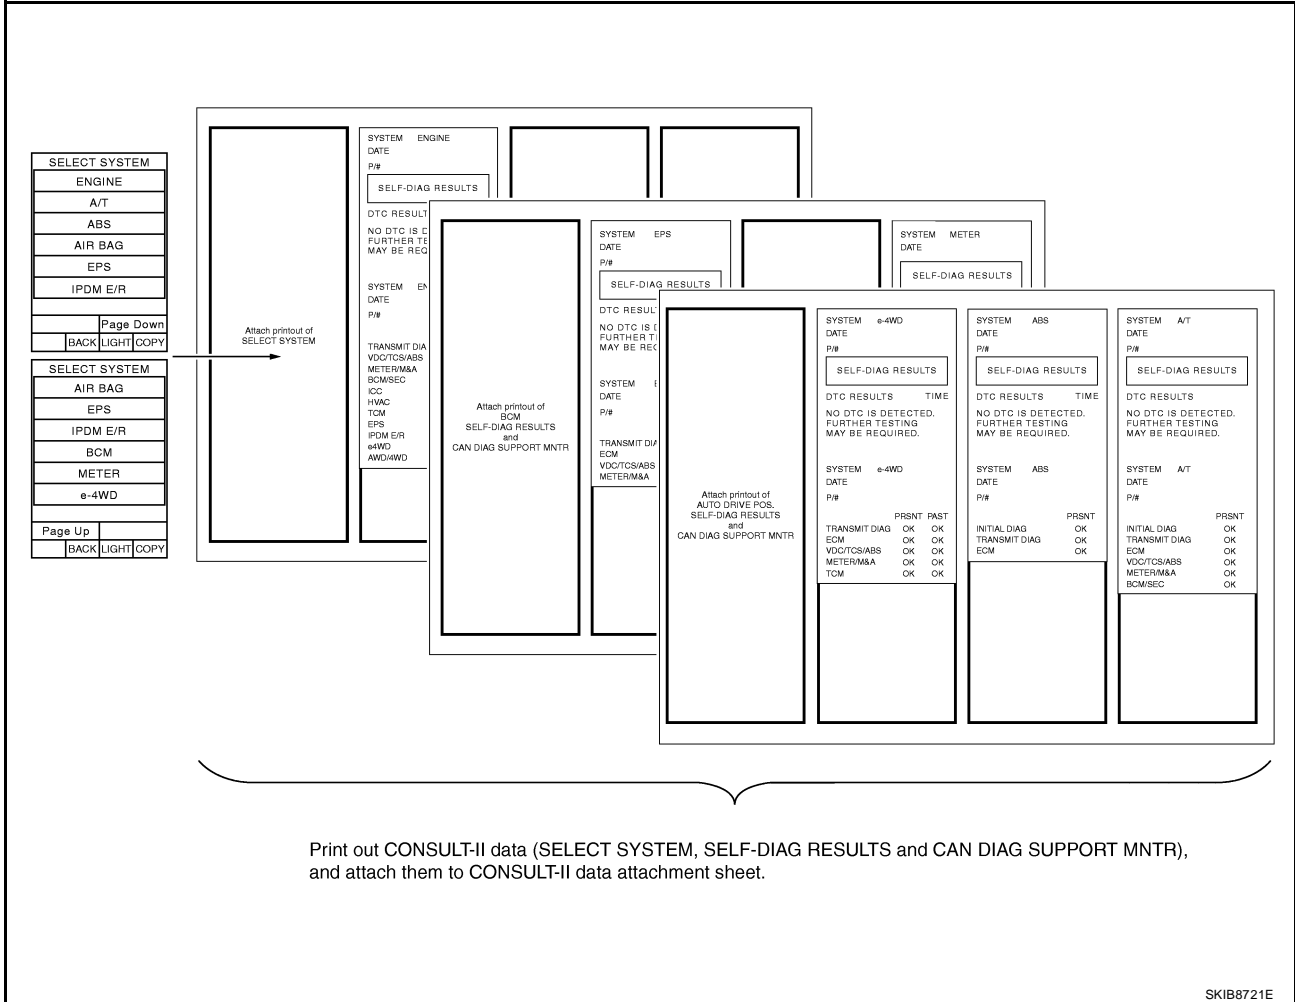

SKIB8721E

TROUBLE DIAGNOSES WORK FLOW

[CAN FUNDAMENTAL]

Create On-board Diagnosis Copy Sheet

Display the trouble diagnosis result of CAN communication with the on-board diagnosis function on the vehicle monitor, etc. Copy them on the on-board diagnosis copy sheet.


NOTE:

For some models, CAN communication diagnosis result is received from the vehicle monitor. (CONSULT-II is not available.)

Example: Copy the diagnosis result of CAN communication from the vehicle monitor.

Vehicle monitor indication

CAN DIAG SUPPORT MONITOR			
CAN_COMM	OK	0	Delete
CAN_CIRC_1	OK	0	
CAN_CIRC_2	UNKWN	12	
CAN_CIRC_3	UNKWN	12	
CAN_CIRC_4	UNKWN	0	
CAN_CIRC_5	OK	0	
CAN_CIRC_6	UNKWN	0	
CAN_CIRC_7	OK	0	
CAN_CIRC_8	UNKWN	0	
CAN_CIRC_9	UNKWN	50	

 

Vehicle monitor (Display control unit) CAN DIAG SUPPORT MONITOR copy sheet

Indication item (Diagnosis item)	Vehicle monitor		Indication item (Diagnosis item)	Vehicle monitor	
	Result indicated	Error counter		Result indicated	Error counter
CAN_COMM (Initial diagnosis)	OK	0	CAN_CIRC_5 (Receive diagnosis of Unified meter and A/C amp.)	OK	0
CAN_CIRC_1 (Transmit diagnosis)	OK	0	CAN_CIRC_6	Not available	
CAN_CIRC_2 (Receive diagnosis of BCM)	UNKWN	12	CAN_CIRC_7 (Receive diagnosis of IPDM E/R)	OK	0
CAN_CIRC_3 (Receive diagnosis of ECM)	UNKWN	12	CAN_CIRC_8	Not available	
CAN_CIRC_4	Not available		CAN_CIRC_9	Not available	

Result indicated: Fill in the indication (OK, NG or UNKWN).
Error counter: Fill in the indicated number.

SKIB8722E

CREATE DIAGNOSIS SHEET

NOTE:

Be sure to use the diagnosis sheet for the correct CAN system type.


Print Diagnosis Sheet

Print the diagnosis sheet for the applicable CAN system type.

Check of Received Data

Check the created data sheet for missing information.

- For abbreviations, refer to [LAN-41, "Abbreviation List"](#).

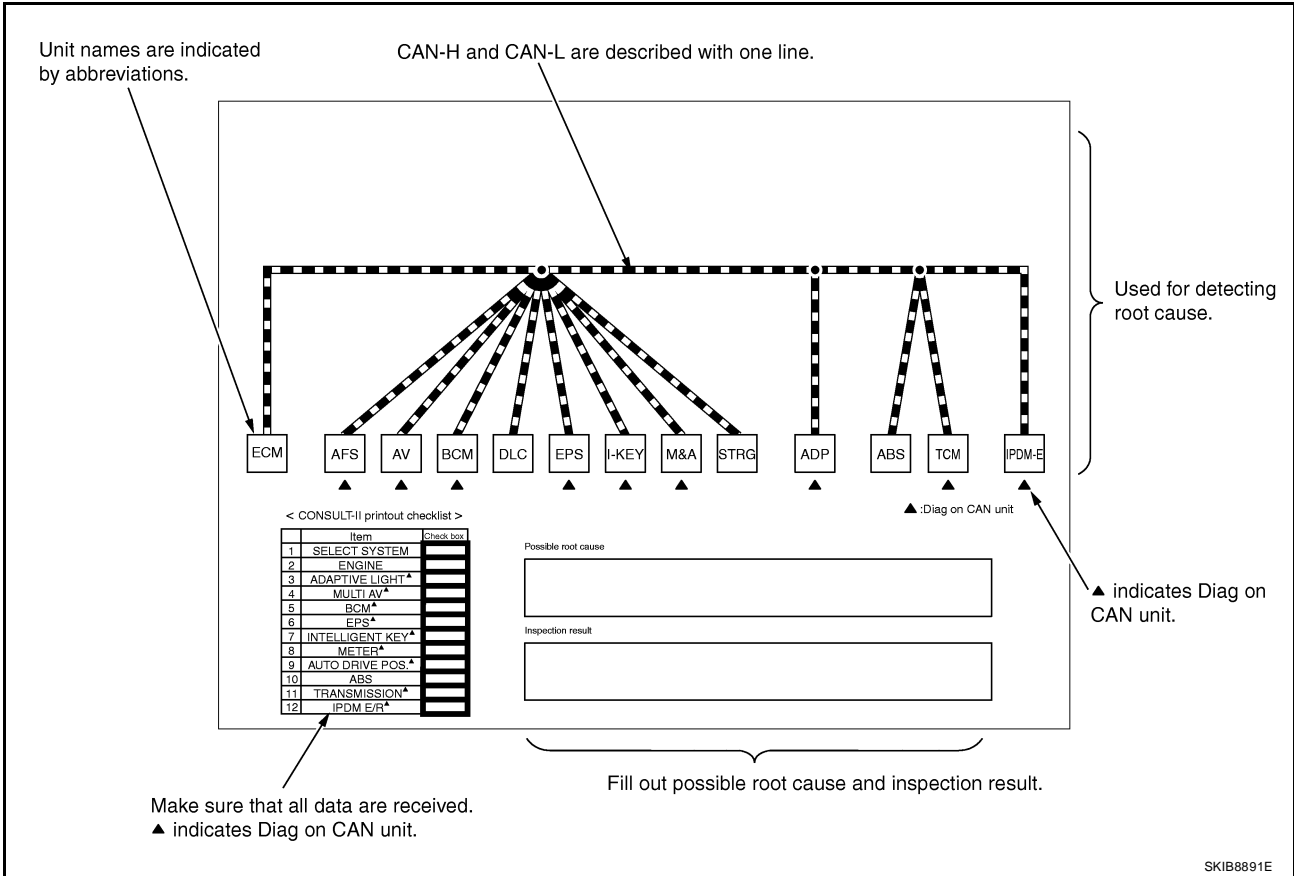

SKIB8891E

DETECT THE ROOT CAUSE

Identify the root cause using the created diagnosis sheet.

Identifying the root cause

- Draw a line on the diagnosis sheet to indicate the possible cause. Narrow the search.

NOTE:

- Color-code when drawing lines.
- Do not draw a line onto a existing line.
- Drawing a line is not necessary if the circuit is shorted. Refer to [LAN-32, "Present Error — Short Circuit —"](#) , [LAN-39, "Past Error — Short Circuit —"](#) .

Refer to the following for details of the trouble diagnosis procedure.

- [LAN-26, "Present Error — Open Circuit —"](#)
- [LAN-32, "Present Error — Short Circuit —"](#)
- [LAN-33, "Past Error — Open Circuit —"](#)
- [LAN-39, "Past Error — Short Circuit —"](#)

NOTE:

When the root cause appears to be a branch line or short circuit, be sure to check the control unit as well as the communication line.

A

B

C

D

E

F

G

H

I

J

LAN

L

M

TROUBLE DIAGNOSES WORK FLOW

[CAN FUNDAMENTAL]

Present Error — Open Circuit —

Identify the error circuit using information from the “SELECT SYSTEM” and “CAN DIAG SUPPORT MNTR” screens.

1. SELECT SYSTEM: Check the items indicated in “SELECT SYSTEM”. Draw a line on the diagnosis sheet to indicate the error circuit.

NOTE:


CAN communication line has no error if units other than Diag on CAN units are indicated. An error may be on the power supply of the control unit, DDL1 line or DDL2 line.

- a. “TRANSMISSION” which is Diag on CAN unit, is not indicated on “SELECT SYSTEM” screen. This indicates that DLC is not receiving a signal from TCM. Draw a line to indicate an error between DLC and TCM (line 1-a in the figure).

NOTE:

- Diag on CAN units are not indicated on the “SELECT SYSTEM” screen when the CAN line between Diag on CAN unit and the data link connector is open.
- For a description of Diag on CAN, refer to [LAN-6, "Diag on CAN"](#).

(Example)

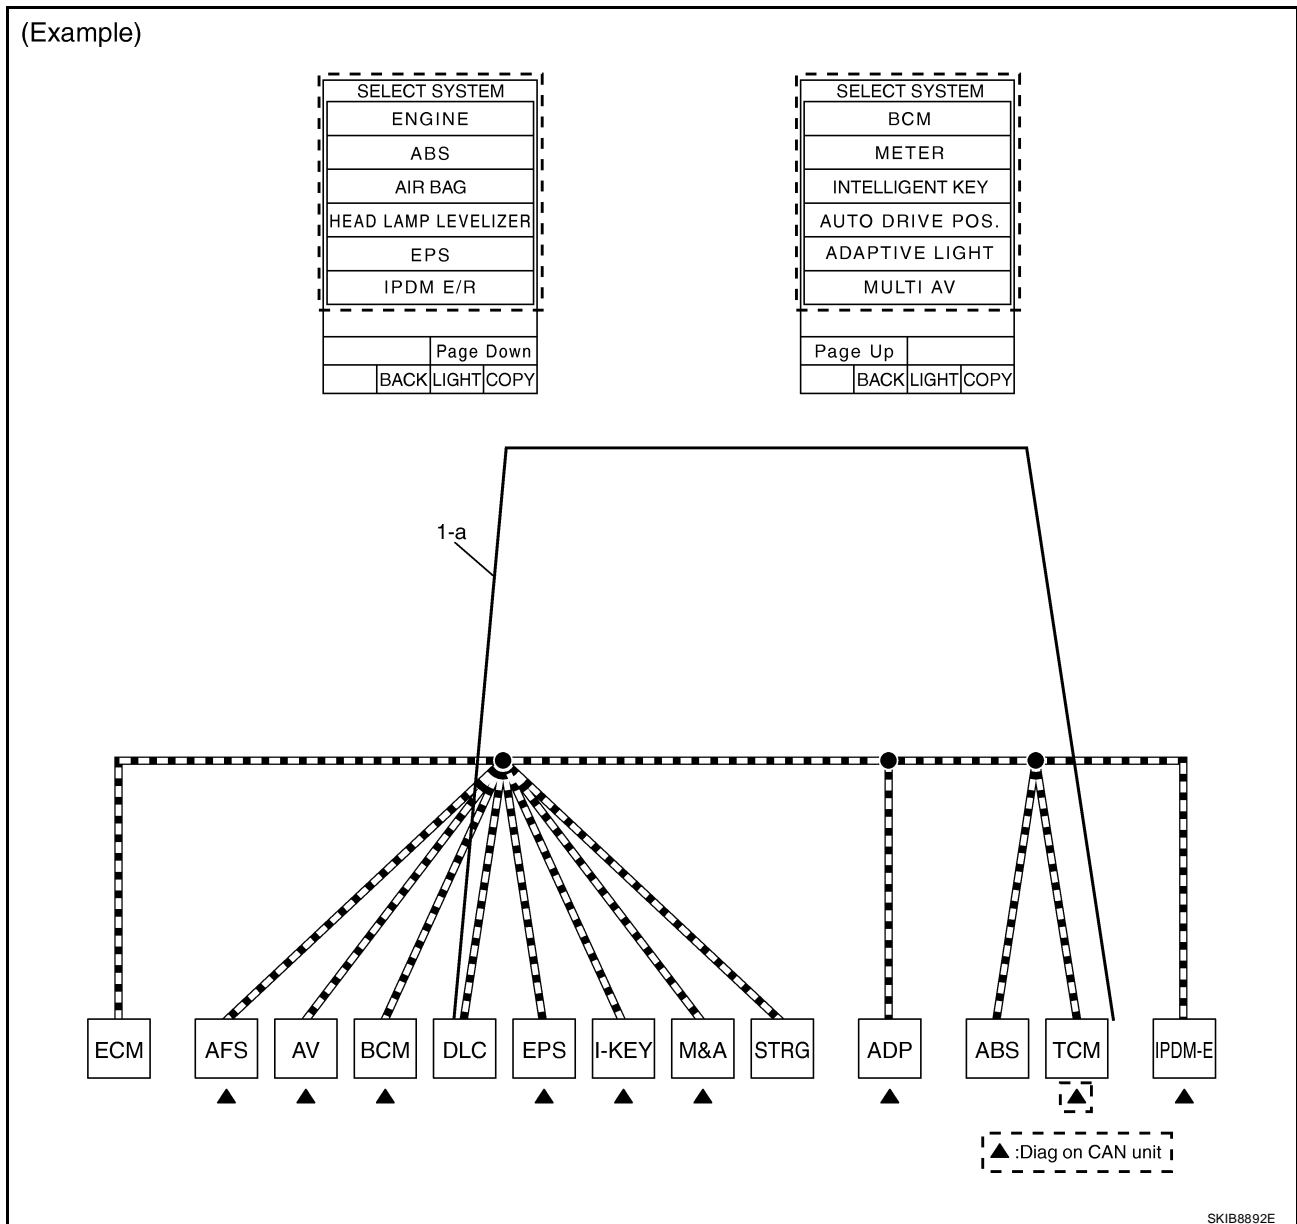

TROUBLE DIAGNOSES WORK FLOW

[CAN FUNDAMENTAL]

2. CAN DIAG SUPPORT MNTR: Check each item on "CAN DIAG SUPPORT MNTR". Draw a line on the diagnosis sheet to indicate the error circuit.
- a. Reception item of "ENGINE": On "TCM", "UNKWN" is indicated. This means ECM cannot receive the signal from TCM. Draw a line to indicate an error between ECM and TCM (line 2-a in the figure).


NOTE:

If "UNKWN" is indicated on "TRANSMIT DIAG", then the control unit cannot transmit CAN communication signal to each unit. Draw a line between the control unit and the splice.

- b. Reception item of "ADAPTIVE LIGHT": On "TCM", "UNKWN" is indicated. This means AFS cannot receive the signal from TCM. Draw a line to indicate an error between AFS and TCM (line 2-b in the figure).
- c. Reception item of "MULTI AV": "UNKWN" is not indicated. This indicates normal communication between AV and its receiving units. Do not draw any line.

(Example)

SYSTEM	ENGINE		SYSTEM	ADAPTIVE LIGHT		SYSTEM	MULTI AV	
DATE			DATE			DATE		
P/#	PRSNT	PAST	P/#	PRSNT	PAST	P/#	PRSNT	PAST
TRANSMIT DIAG	OK	OK	TRANSMIT DIAG	-	-	TRANSMIT DIAG	-	-
VDC/TCS/ABS	OK	OK	ECM	OK	OK	ECM	OK	OK
METER/M&A	-	-	METER/M&A	OK	OK	METER/M&A	OK	OK
BCM/SEC	OK	OK	TCM	UNKWN	0	BCM/SEC	-	-
ICC	-	-	STRG	OK	OK	HVAC	-	-
HVAC	-	-	EPS	-	-	IPDM E/R	-	-
TCM	UNKWN	0	IPDM E/R	OK	OK	TIRE-P	-	-
EPS	OK	OK						
IPDM E/R	OK	OK						
e4WD	-	-						
AWD/4WD	-	-						

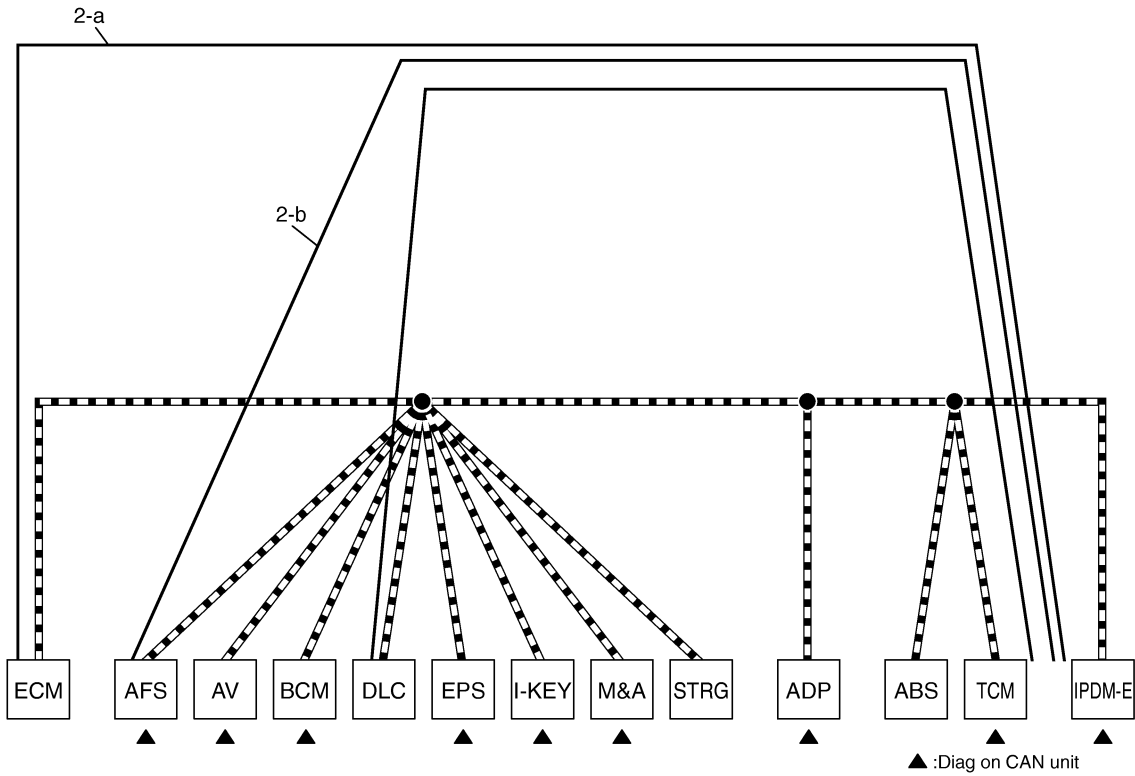

SKIB8725E


TROUBLE DIAGNOSES WORK FLOW

[CAN FUNDAMENTAL]

- d. Reception item of "BCM": On "TCM", "UNKWN" is indicated. This means BCM cannot receive the signal from TCM. Draw a line to indicate an error between BCM and TCM (line 2-d in the figure).
- e. Reception item of "EPS" and "INTELLIGENT KEY": "UNKWN" is not indicated. This indicates normal communication between EPS and I-KEY and their receiving units. Do not draw any line.

NOTE:


On CAN DIAG SUPPORT MNTR (without PAST), "UNKWN" is indicated even though the item is not used in the trouble diagnosis. For the details of each item on CAN diagnostic support monitor, refer to [LAN-44, "CAN Diagnostic Support Monitor"](#) .

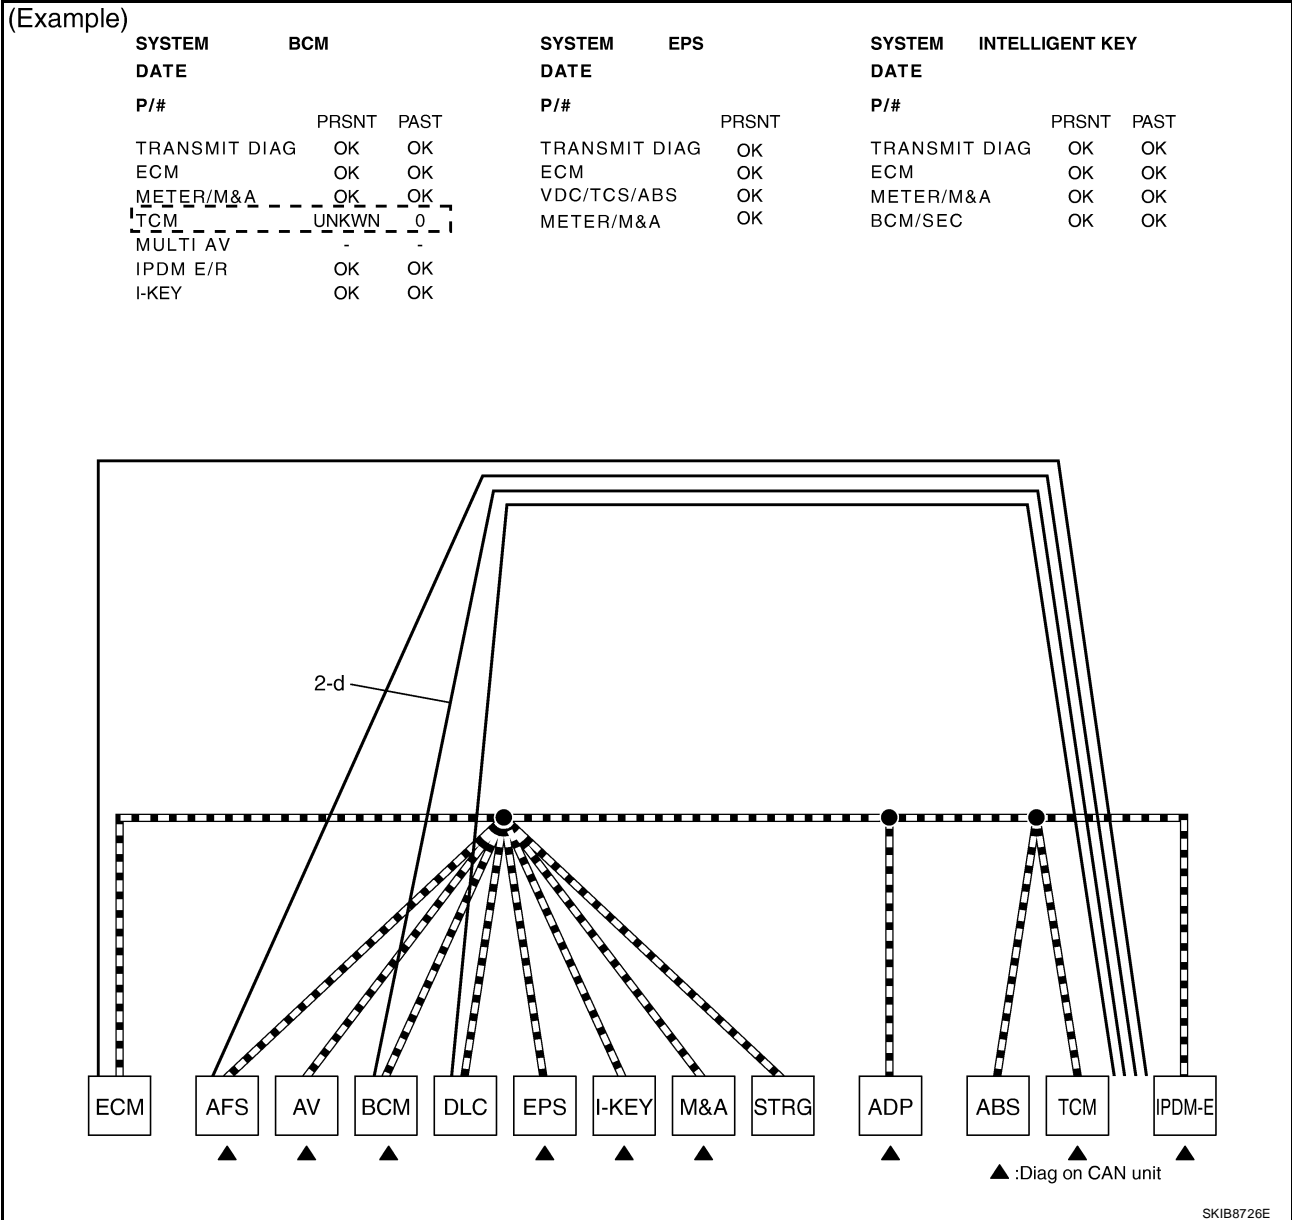

TROUBLE DIAGNOSES WORK FLOW

[CAN FUNDAMENTAL]

- f. Reception item of "METER": On "TCM", "UNKWN" is indicated. This means M&A cannot receive the signal from TCM. Draw a line to indicate an error between M&A and TCM (line 2-f in the figure).
- g. Reception item of "AUTO DRIVE POS.": On "TCM", "UNKWN" is indicated. This means ADP cannot receive the signal from TCM. Draw a line to indicate an error between ADP and TCM (line 2-g in the figure).
- h. Reception item of "ABS": "UNKWN" is not indicated. This indicates normal communication between ABS and its receiving units. Do not draw any line.

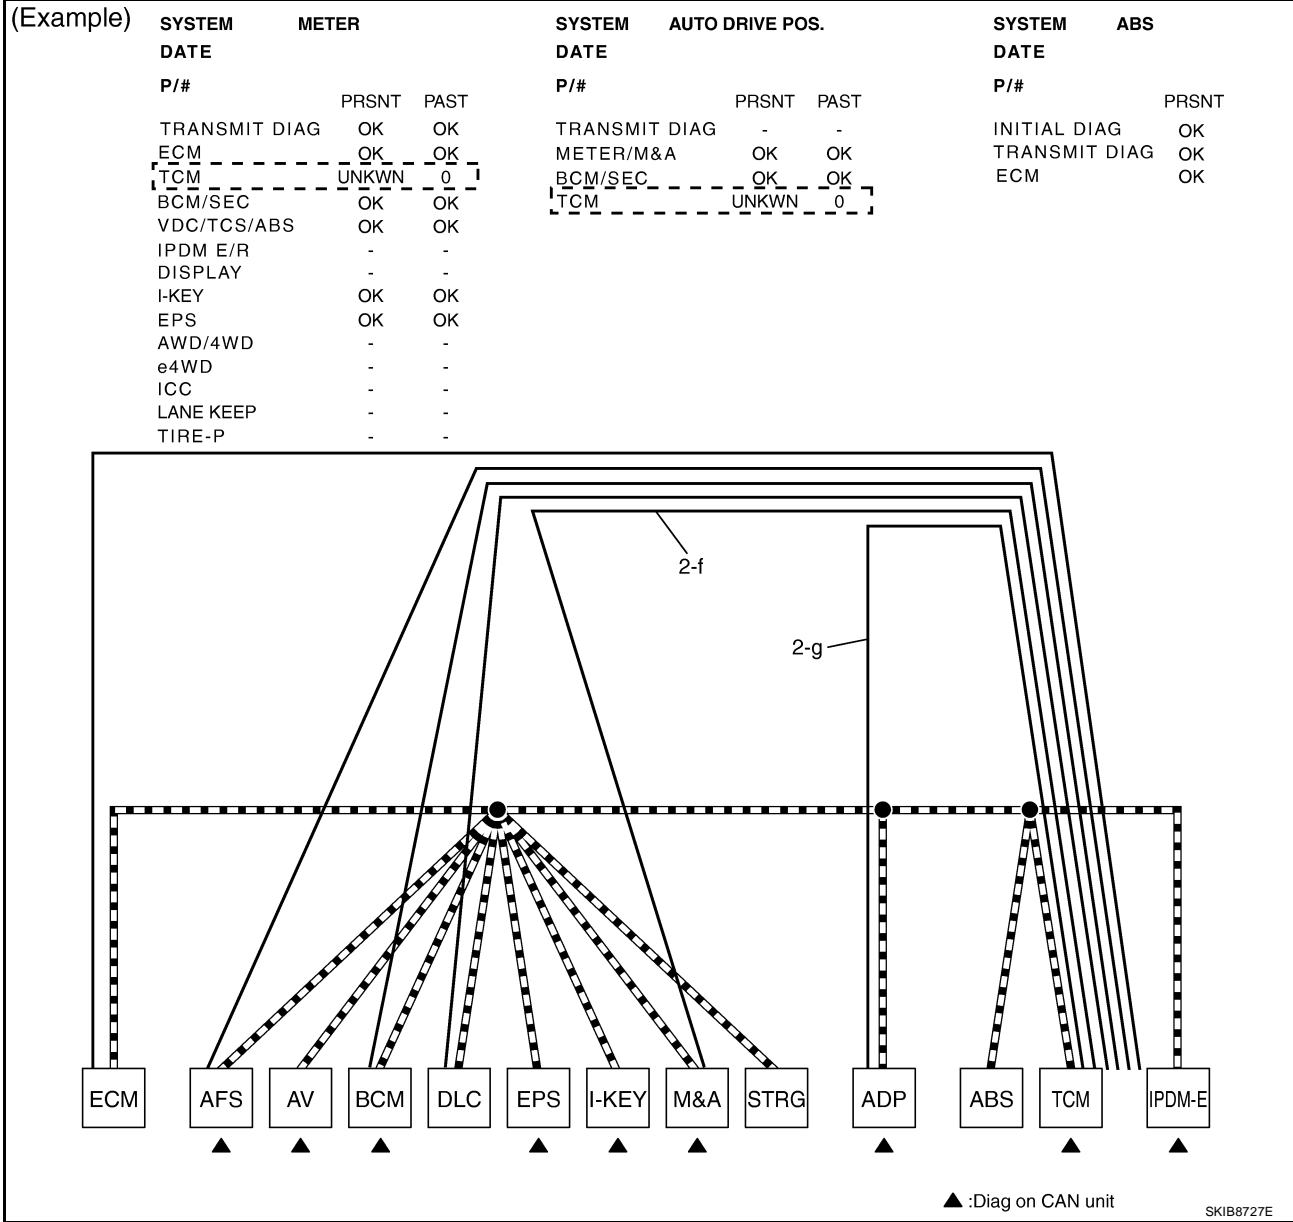


TROUBLE DIAGNOSES WORK FLOW

[CAN FUNDAMENTAL]

- i. Reception item of "IPDM E/R": "UNKWN" is not indicated. This indicates normal communication between IPDM-E and its receiving units. Do not draw any line.
3. Based on information received from "CAN DIAG SUPPORT MNTR", place a check mark on the known good CAN communication line between ECM and IPDM-E.
 - a. Through the previous procedure, the circuit between ADP splice and TCM has the most amount of lines (shade 3-a in the figure).
 - b. Place a check mark on the known good lines to establish the error circuit. Reception item of "IPDM E/R": On "ECM", "OK" is indicated. IPDM-E communicates normally with ECM. Put a check mark on the normal circuit between ECM and IPDM-E (check mark 3-b in the figure).

(Example)

SYSTEM	IPDM E/R		
DATE		PRSENT	PAST
TRANSMIT DIAG		OK	OK
ECM		OK	OK
BCM/SEC		OK	OK

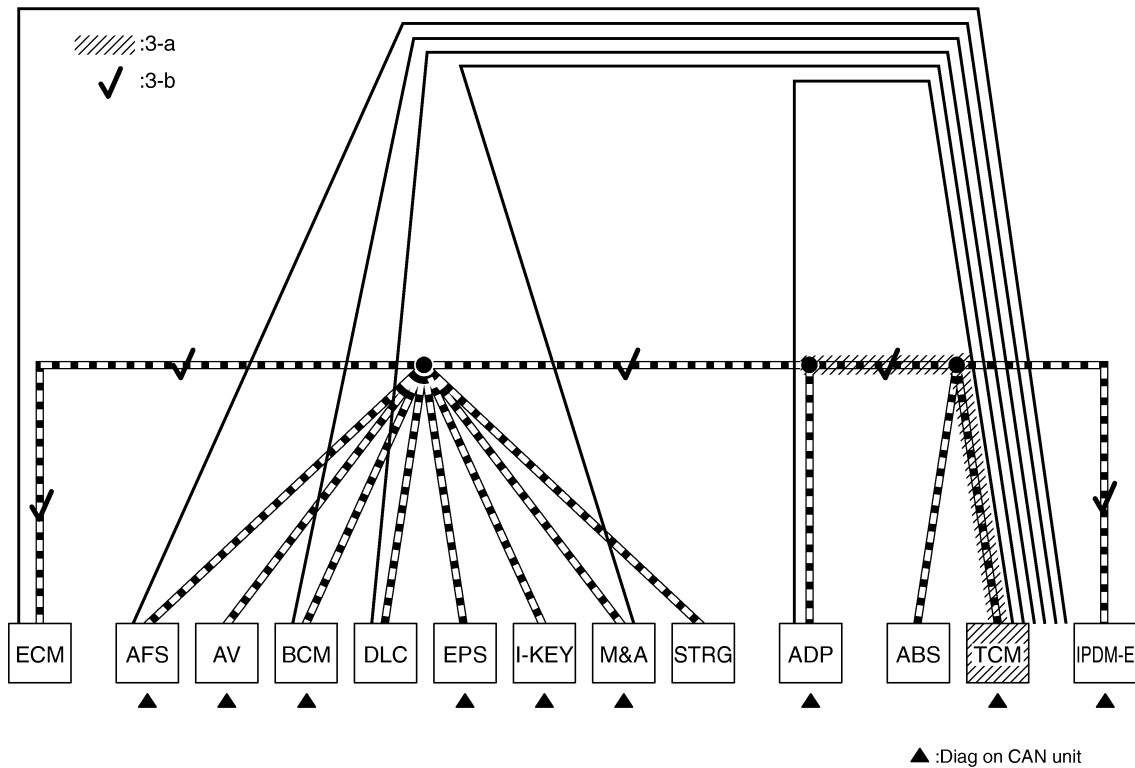

SKIB8728E

TROUBLE DIAGNOSES WORK FLOW

[CAN FUNDAMENTAL]


4. Through the above procedure, the error is detected in the TCM branch line (shaded in the figure).

NOTE:

For abbreviations, refer to [LAN-41, "Abbreviation List"](#).

5. Perform the inspection for the detected error circuit. For the inspection procedure, refer to [LAN-71, "Mal-function Area Chart"](#).

(Example)

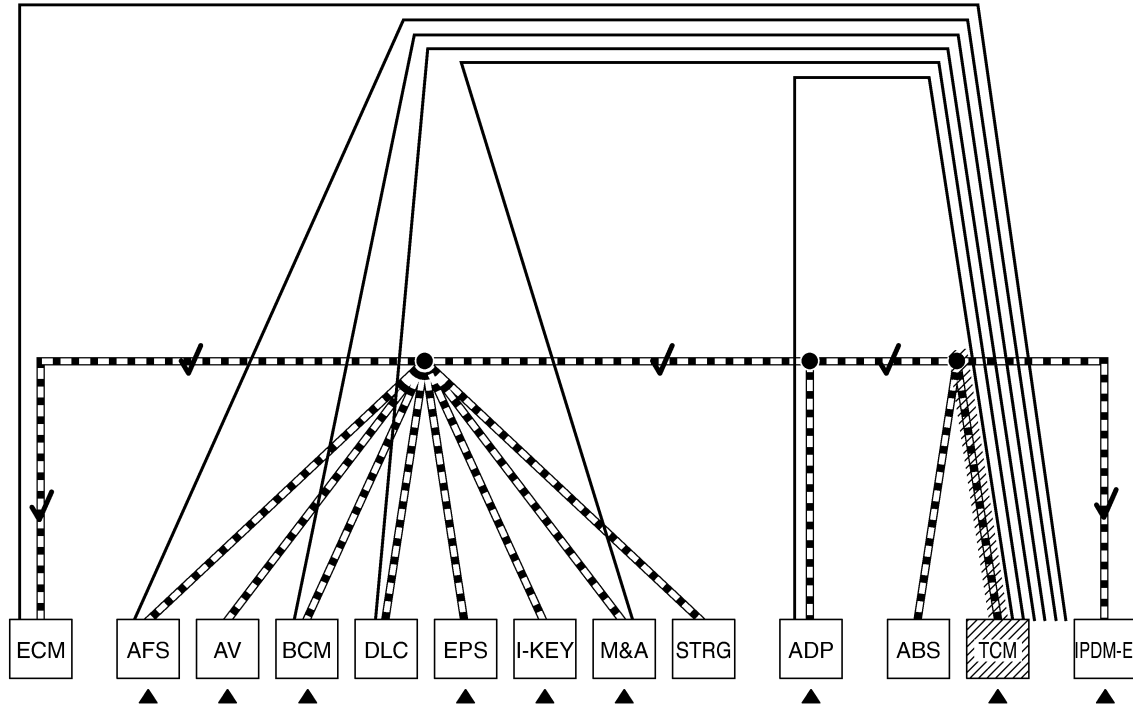

< CONSULT-II printout checklist >

	Item	Check box
1	SELECT SYSTEM	<input checked="" type="checkbox"/>
2	ENGINE	<input checked="" type="checkbox"/>
3	ADAPTIVE LIGHT [▲]	<input checked="" type="checkbox"/>
4	MULTI AV [▲]	<input checked="" type="checkbox"/>
5	BCM [▲]	<input checked="" type="checkbox"/>
6	EPS [▲]	<input checked="" type="checkbox"/>
7	INTELLIGENT KEY [▲]	<input checked="" type="checkbox"/>
8	METER [▲]	<input checked="" type="checkbox"/>
9	AUTO DRIVE POS. [▲]	<input checked="" type="checkbox"/>
10	ABS	<input checked="" type="checkbox"/>
11	TRANSMISSION [▲]	N-IDC
12	IPDM E/R [▲]	<input checked="" type="checkbox"/>

Possible root cause

· Error between TCM and splice.
· Error in TCM.

Inspection result

SKIB8893E

A
B
C
D
E
F
G
H
I
J
L
M

LAN

TROUBLE DIAGNOSES WORK FLOW

[CAN FUNDAMENTAL]

Present Error — Short Circuit —

When the symptoms listed below exist, a short circuit of the CAN communication line is a possible cause.

Received data

Item (CONSULT-II)	Indication
SELECT SYSTEM	All Diag on CAN units are not indicated.
CAN DIAG SUPPORT MNTR	"UNKWN" is indicated under "TRANSMIT DIAG" and most reception items.

Error symptom

- Most the units connected to the CAN communication system go into fail-safe mode or are deactivated.

Inspection procedure

- Refer to [LAN-71, "Malfunction Area Chart"](#).

(Example)

SELECT SYSTEM	
ENGINE	
ABS	
AIR BAG	
HEAD LAMP LEVELIZER	
BACKLIGHT	COPY

} All Diag on CAN units are not indicated.

SYSTEM ENGINE			SYSTEM ABS	
DATE			DATE	
P/#	PRSNT	PAST	P/#	PRSNT
TRANSMIT DIAG	UNKWN	0	INITIAL DIAG	NG
VDC/TCS/ABS	UNKWN	0	TRANSMIT DIAG	UNKWN
METER/M&A	-	-	ECM	UNKWN
BCM/SEC	UNKWN	0		
ICC	-	-		
HVAC	-	-		
TCM	UNKWN	0		
EPS	UNKWN	0		
IPDM E/R	UNKWN	0		
e4WD	-	-		
AWD/4WD	-	-		

} "UNKWN" is indicated under most reception items of CAN DIAG SUPPORT MNTR.

SKIB8894E

TROUBLE DIAGNOSES WORK FLOW

[CAN FUNDAMENTAL]

Past Error — Open Circuit —

Review CAN communication signal chart based on information received from the interview with the customer and on past error information from SELF-DIAG RESULTS and CAN DIAG SUPPORT MNTR.

- SELF-DIAG RESULTS: Inspect the control units indicating "U1000" or "U1001" on SELF-DIAG RESULTS.

(Example)

<p>SYSTEM ENGINE DATE P/#</p> <div style="border: 1px solid black; padding: 5px; text-align: center;">SELF-DIAG RESULTS</div> <p>DTC RESULTS TIME</p> <div style="border: 1px dashed black; padding: 2px;">CAN COMM CIRCUIT 1t [U1001]</div>	<p>SYSTEM ADAPTIVE LIGHT DATE P/#</p> <div style="border: 1px solid black; padding: 5px; text-align: center;">SELF-DIAG RESULTS</div> <p>DTC RESULTS TIME</p> <p>NO DTC IS DETECTED. FURTHER TESTING MAY BE REQUIRED.</p>	<p>SYSTEM MULTI AV DATE P/#</p> <div style="border: 1px solid black; padding: 5px; text-align: center;">SELF-DIAG RESULTS</div> <p>DTC RESULTS TIME</p> <p>NO DTC IS DETECTED. FURTHER TESTING MAY BE REQUIRED.</p>	<p>SYSTEM BCM DATE P/#</p> <div style="border: 1px solid black; padding: 5px; text-align: center;">SELF-DIAG RESULTS</div> <p>DTC RESULTS TIME</p> <p>NO DTC IS DETECTED. FURTHER TESTING MAY BE REQUIRED.</p>
<p>SYSTEM EPS DATE P/#</p> <div style="border: 1px solid black; padding: 5px; text-align: center;">SELF-DIAG RESULTS</div> <p>DTC RESULTS TIME</p> <div style="border: 1px dashed black; padding: 2px;">CAN COMM CIRCUIT PAST [U1000]</div>	<p>SYSTEM INTELLIGENT KEY DATE P/#</p> <div style="border: 1px solid black; padding: 5px; text-align: center;">SELF-DIAG RESULTS</div> <p>DTC RESULTS TIME</p> <p>NO DTC IS DETECTED. FURTHER TESTING MAY BE REQUIRED.</p>	<p>SYSTEM METER DATE P/#</p> <div style="border: 1px solid black; padding: 5px; text-align: center;">SELF-DIAG RESULTS</div> <p>DTC RESULTS TIME</p> <div style="border: 1px dashed black; padding: 2px;">CAN COMM CIRCUIT 3 [U1000]</div>	<p>SYSTEM AUTO DRIVE POS. DATE P/#</p> <div style="border: 1px solid black; padding: 5px; text-align: center;">SELF-DIAG RESULTS</div> <p>DTC RESULTS TIME</p> <p>NO DTC IS DETECTED. FURTHER TESTING MAY BE REQUIRED.</p>
<p>SYSTEM ABS DATE P/#</p> <div style="border: 1px solid black; padding: 5px; text-align: center;">SELF-DIAG RESULTS</div> <p>DTC RESULTS TIME</p> <div style="border: 1px dashed black; padding: 2px;">CAN COMM CIRCUIT 3 [U1000]</div>	<p>SYSTEM TRANSMISSION DATE P/#</p> <div style="border: 1px solid black; padding: 5px; text-align: center;">SELF-DIAG RESULTS</div> <p>DTC RESULTS TIME</p> <div style="border: 1px dashed black; padding: 2px;">CAN COMM CIRCUIT 3 [U1000]</div>	<p>SYSTEM IPDM E/R DATE P/#</p> <div style="border: 1px solid black; padding: 5px; text-align: center;">SELF-DIAG RESULTS</div> <p>DTC RESULTS TIME</p> <p>NO DTC IS DETECTED. FURTHER TESTING MAY BE REQUIRED.</p>	

SKIB8731E

A
B
C
D
E
F
G
H
I
J
L
M

LAN

TROUBLE DIAGNOSES WORK FLOW

[CAN FUNDAMENTAL]

2. CAN DIAG SUPPORT MNTR (with PAST): Check the CAN DIAG SUPPORT MNTR (with PAST) of units indicating "U1000" or "U1001" on SELF-DIAG RESULTS. Draw a line on the diagnosis sheet to indicate the possible error circuit.


NOTE:

For the details of each indication on CAN DIAG SUPPORT MNTR, refer to [LAN-44, "CAN Diagnostic Support Monitor"](#).

- a. Reception item of "ENGINE": "VDC/TCS/ABS", "3" is indicated in the "PAST". This means ECM could not receive the signal from ABS in the past. Draw a line between ECM and ABS (line 2-a in the figure).
- b. Reception item of "METER": "VDC/TCS/ABS", "3" is indicated in the "PAST". This means M&A could not receive the signal from ABS in the past. Draw a line between M&A and ABS (line 2-b in the figure).
- c. Reception item of "TRANSMISSION": "VDC/TCS/ABS", "3" is indicated in the "PAST". This means TCM could not receive the signal from ABS in the past. Draw a line between TCM and ABS (line 2-c in the figure).

(Example)

SYSTEM	ENGINE		SYSTEM	METER		SYSTEM	TRANSMISSION	
DATE			DATE			DATE		
P/#	PRSENT	PAST	P/#	PRSENT	PAST	P/#	PRSENT	PAST
TRANSMIT DIAG	OK	OK	TRANSMIT DIAG	OK	OK	TRANSMIT DIAG	OK	OK
VDC/TCS/ABS	OK	3	ECM	OK	OK	VDC/TCS/ABS	OK	3
METER/M&A	-	-	TCM	OK	OK	METER/M&A	OK	OK
BCM/SEC	OK	OK	BCM/SEC	OK	OK	BCM/SEC	OK	OK
ICC	-	-	VDC/TCS/ABS	OK	3	ICC	-	-
HVAC	-	-	IPDM E/R	-	-	e4WD	-	-
TCM	OK	OK	DISPLAY	-	-	AWD/4WD	-	-
EPS	OK	OK	I-KEY	OK	OK			
IPDM E/R	OK	OK	EPS	OK	OK			
e4WD	-	-	AWD/4WD	-	-			
AWD/4WD	-	-	e4WD	-	-			
			ICC	-	-			
			LANE KEEP	-	-			
			TIRE-P	-	-			

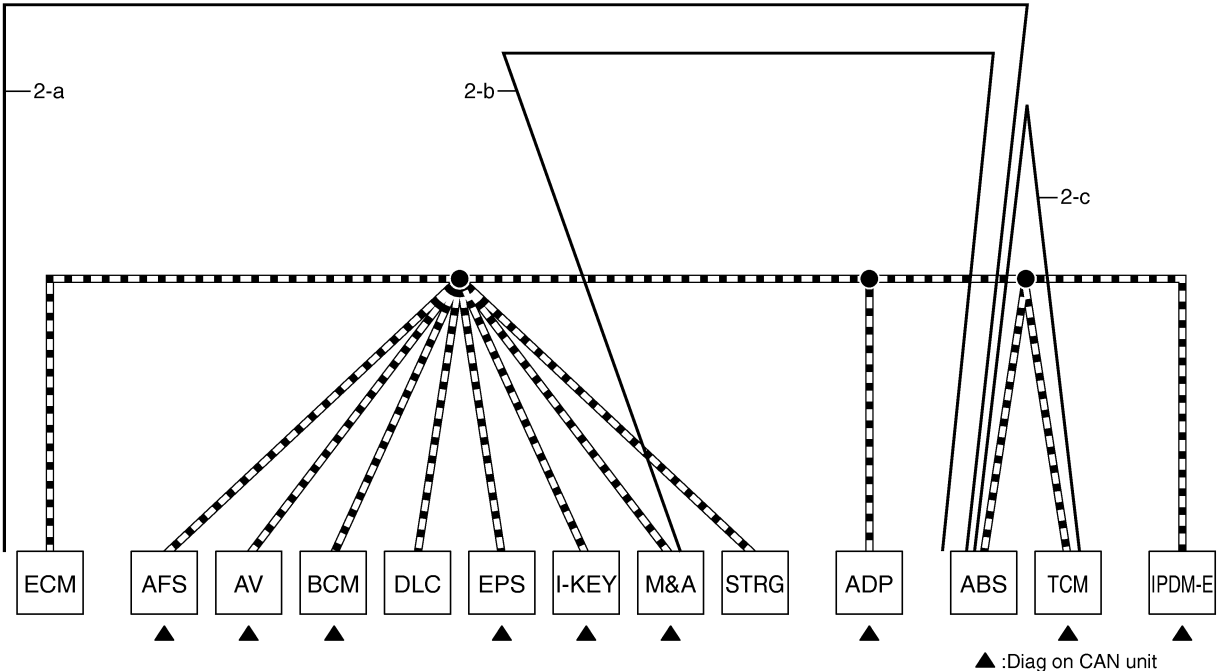

SK1B8732E

TROUBLE DIAGNOSES WORK FLOW

[CAN FUNDAMENTAL]


3. CAN DIAG SUPPORT MNTR (without PAST): Check the CAN DIAG SUPPORT MNTR (without PAST) of units indicating "U1000" or "U1001" on SELF-DIAG RESULTS. Draw a line on the diagnosis sheet to indicate the possible error circuit.

NOTE:

- While an error occurred in the past according to SELF-DIAG RESULTS, it is unclear which signal is not received. Assume that errors were detected from all reception items.
 - Draw a single line among the unit and all reception items. (Work flow differs from CAN DIAG SUPPORT MNTR (with PAST).)
- a. Reception item of "EPS": Assume that the unit could not receive the signals from ECM, ABS, and M&A. Draw a line among EPS, ECM, ABS, and M&A (line 3-a in the figure).
- b. Reception item of "ABS": Assume that the unit could not receive the signal from ECM. Draw a line between ABS and ECM (line 3-b in the figure).

(Example)

SYSTEM	EPS	SYSTEM	ABS
DATE		DATE	
P/#	PRSNT	P/#	PRSNT
TRANSMIT DIAG	OK	INITIAL DIAG	OK
ECM	OK	TRANSMIT DIAG	OK
VDC/TCS/ABS	OK	ECM	OK
METER/M&A	OK		

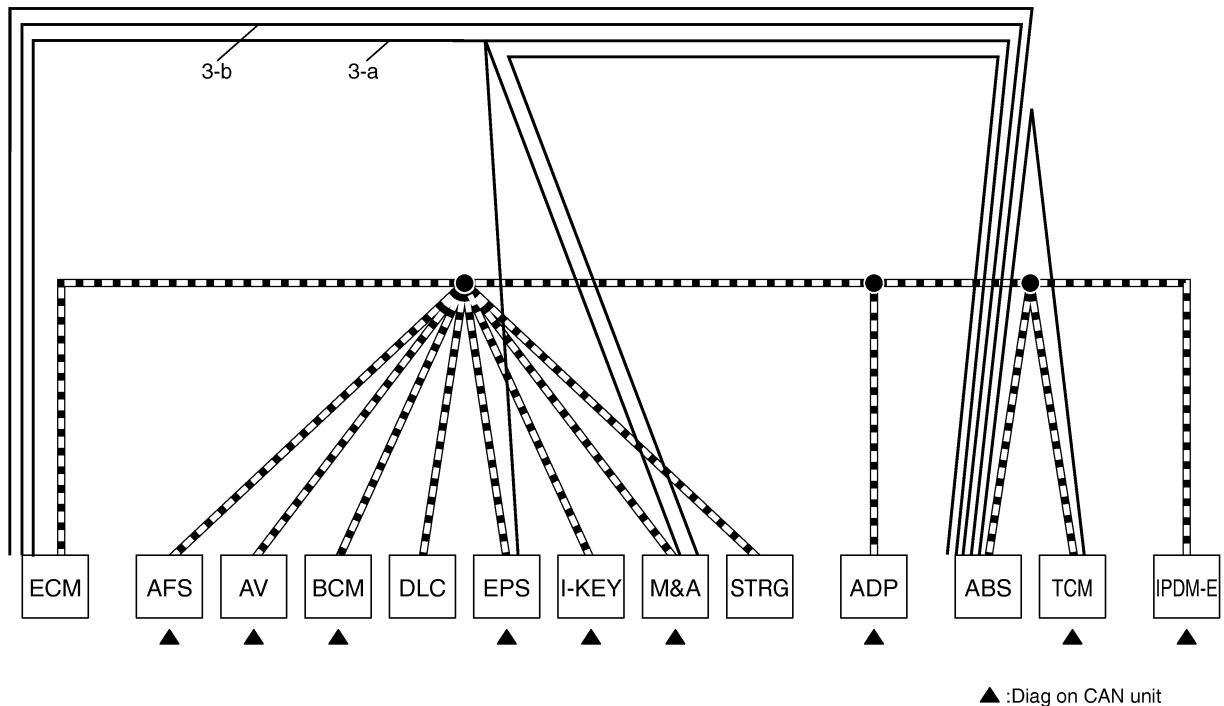

▲ :Diag on CAN unit

SKIB8733E

TROUBLE DIAGNOSES WORK FLOW

[CAN FUNDAMENTAL]

4. Search for the possible cause using CAN communication signal chart using information from the interview with the customer.

NOTE:

For the details of CAN communication signal, refer to [LAN-48, "CAN Communication Signal Chart"](#) .

- a. ABS warning lamp turned ON and speedometer did not move: This means that “ABS warning lamp signal” and “Vehicle speed signal” could not communicate between M&A and ABS (4-a in the figure).
- b. The tachometer moved normally: This means that “Engine speed signal” could communicate normally between ECM and M&A (4-b in the figure).

(Example)

 
First registration: 28, Jan. 2005

CAN system type: Type 20

Symptom (Results from interview with customer)

While driving,

- ABS warning lamp turned ON.
- Speedometer did not move.
- Tachometer moved normally.



CAN Communication Signal Chart

T: Transmit R: Receive

Signal name/Connecting unit	ECM	AFS ¹	AV ²	BCM	EPS	I-KEY ³	M&A	STRG ¹	ADP ⁴	ABS	TCM	IPDM-E
A/C compressor request signal	T											R
Accelerator pedal position signal	T										R	
Closed throttle position signal	T										R	
Cooling fan speed request signal	T											R
Engine and CVT integrated control signal	T R										R T	
Engine coolant temperature signal	T						R				R	
4-b Engine speed signal	T						R				R	
Engine status signal	T		R		R							
Fuel consumption monitor signal	T		R				R					
MI signal	T						R					
Wide open throttle position signal	T										R	
4-a ABS warning lamp signal							R			T		
Brake warning lamp signal							R			T		
Steering angle sensor signal		R						T				
Vehicle speed signal	R				R		R			T	R	
Input shaft revolution signal	R			R	R	R	T		R			T
Output shaft revolution signal	R											T
Shift position indicator signal	R	R	R	R ⁵			R		R ⁶			T
Second position indicator signal							R					T
Front wiper stop position signal				R								T
High beam status signal	R	R										T
Low beam status signal	R	R										T


SKIB8895E

TROUBLE DIAGNOSES WORK FLOW

[CAN FUNDAMENTAL]

5. Fill out the diagnosis sheet based on information from step 4.
 - a. The ABS warning lamp turned ON and speedometer did not move: Assume that a possible cause is no communication between M&A and ABS. Draw a line between M&A and ABS. (Line 5-a in the figure).
 - b. The tachometer moved normally: Put check marks between ECM and M&A. The circuit between ECM and M&A is functioning properly (check marks 5-b in the figure).

(Example)

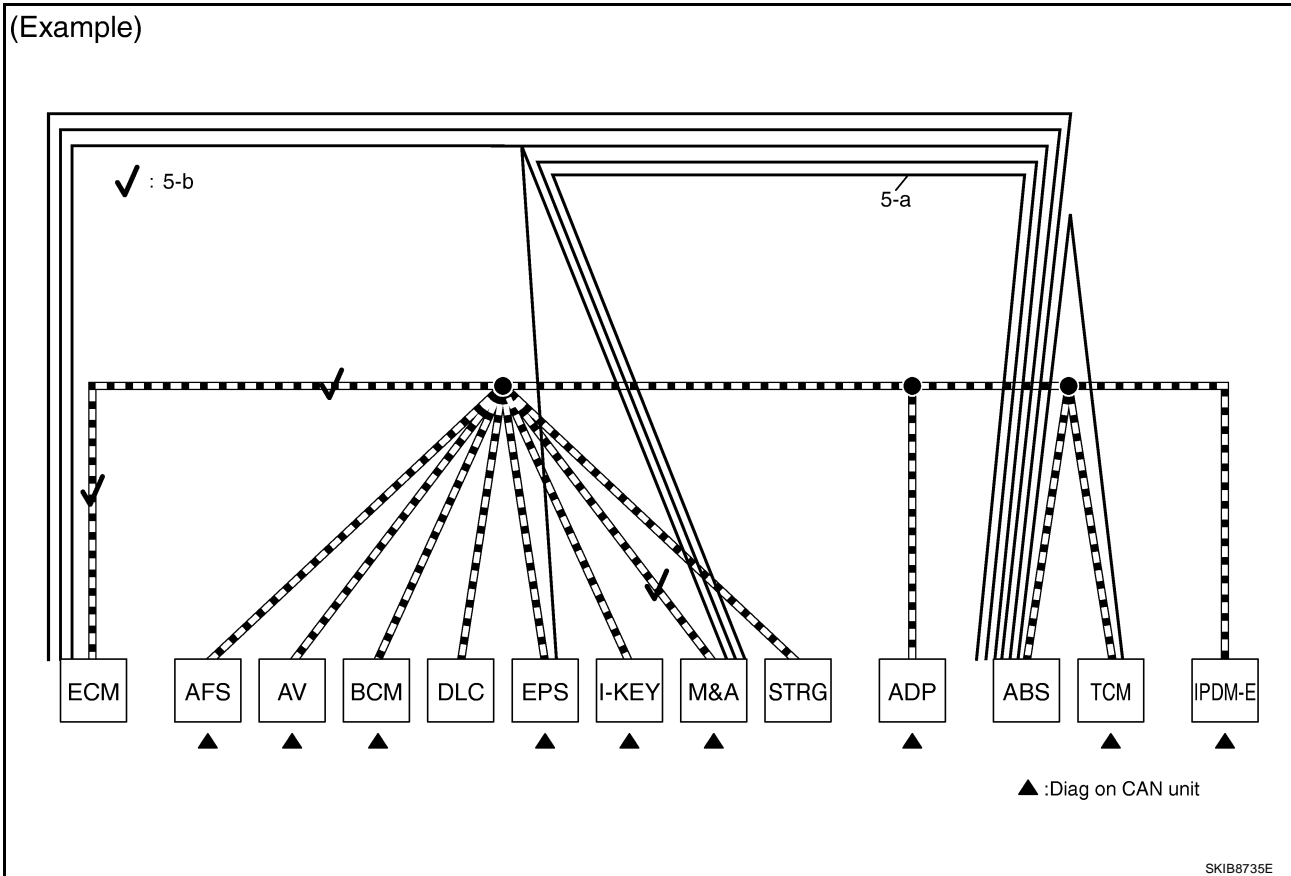

A
B
C
D
E
F
G
H
I
J

LAN

L
M

TROUBLE DIAGNOSES WORK FLOW

[CAN FUNDAMENTAL]


6. The circuit which has the most amount of lines are the possible cause. Error is detected from ABS actuator and electric unit (control unit) branch line (shaded in the figure).

NOTE:

For abbreviations, refer to [LAN-41, "Abbreviation List"](#) .

7. Perform the inspection procedure for the possible cause. Refer to [LAN-71, "Malfunction Area Chart"](#) .

(Example)

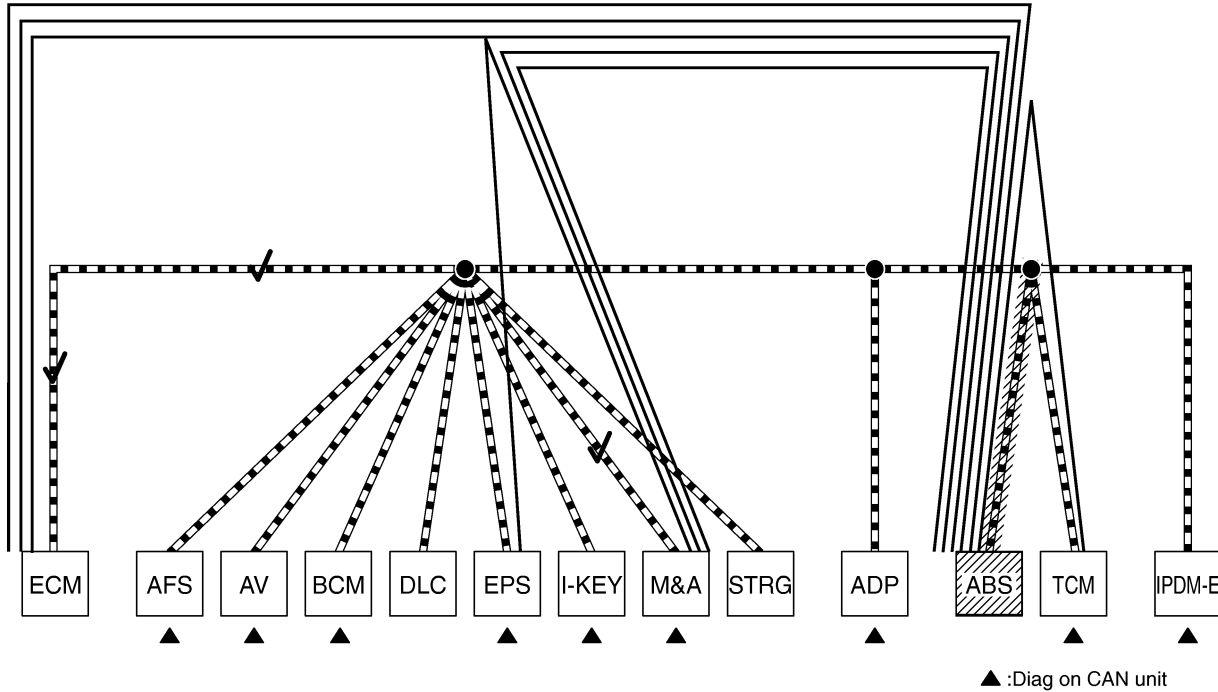

< CONSULT-II printout checklist >

	Item	Check box
1	SELECT SYSTEM	<input checked="" type="checkbox"/>
2	ENGINE	<input checked="" type="checkbox"/>
3	ADAPTIVE LIGHT [▲]	<input checked="" type="checkbox"/>
4	MULTI AV [▲]	<input checked="" type="checkbox"/>
5	BCM [▲]	<input checked="" type="checkbox"/>
6	EPS [▲]	<input checked="" type="checkbox"/>
7	INTELLIGENT KEY [▲]	<input checked="" type="checkbox"/>
8	METER [▲]	<input checked="" type="checkbox"/>
9	AUTO DRIVE POS. [▲]	<input checked="" type="checkbox"/>
10	ABS	<input checked="" type="checkbox"/>
11	TRANSMISSION [▲]	<input checked="" type="checkbox"/>
12	IPDM E/R [▲]	<input checked="" type="checkbox"/>

Possible root cause

- Error between ABS actuator and electric unit (control unit) and splice.
- Error in ABS actuator and electric unit (control unit).

Inspection result

SKIB8896E

TROUBLE DIAGNOSES WORK FLOW

[CAN FUNDAMENTAL]

Past Error — Short Circuit —

When the symptoms listed below exist, a short circuit of the CAN communication line is a possible cause.

Item (CONSULT-II)	Indication	Inspection procedure
SELF-DIAG RESULTS	"U1000" and "U1001" is indicated in the past for most units.	Refer to LAN-71, "Malfunction Area Chart" .
CAN DIAG SUPPORT MNTR	Only on CAN DIAG SUPPORT MNTR (with PAST), "1 - 39" is indicated on "PAST" of "TRANSMIT DIAG" and the reception item.	

(Example)

SYSTEM DATE P/#	ENGINE	SYSTEM DATE P/#	ADAPTIVE LIGHT	SYSTEM DATE P/#	MULTI AV	SYSTEM DATE P/#	BCM	
SELF-DIAG RESULTS		SELF-DIAG RESULTS		SELF-DIAG RESULTS		SELF-DIAG RESULTS		
DTC RESULTS		TIME	DTC RESULTS		TIME	DTC RESULTS		TIME
CAN COMM CIRCUIT [U1000]		1t	CAN COMM CIRCUIT [U1000]		5	CAN COMM CIRCUIT [U1000]		5
CAN COMM CIRCUIT [U1001]		1t						
SYSTEM DATE P/#	EPS	SYSTEM DATE P/#	INTELLIGENT KEY	SYSTEM DATE P/#	METER	SYSTEM DATE P/#	AUTO DRIVE POS.	
SELF-DIAG RESULTS		SELF-DIAG RESULTS		SELF-DIAG RESULTS		SELF-DIAG RESULTS		
DTC RESULTS		TIME	DTC RESULTS		TIME	DTC RESULTS		TIME
CAN COMM CIRCUIT [U1000]					5	CAN COMM CIRCUIT [U1000]		PAST

SYSTEM DATE P/#	ENGINE	SYSTEM DATE P/#	ADAPTIVE LIGHT	SYSTEM DATE P/#	MULTI AV	SYSTEM DATE P/#	BCM		
TRANSMIT DIAG	OK	5	TRANSMIT DIAG	-	TRANSMIT DIAG	-	TRANSMIT DIAG	OK	5
VDC/TCS/ABS	OK	5	ECM	OK	5	ECM	OK	5	
METER/M&A	-	-	METER/M&A	OK	5	METER/M&A	OK	5	
BCM/SEC	OK	5	TCM	OK	5	BCM/SEC	-	-	
ICC	-	-	STRG	OK	5	HVAC	-	-	
HVAC	-	-	EPS	-	-	IPDM E/R	-	-	
TCM	OK	5	IPDM E/R	OK	5	TIRE-P	-	-	
EPS	OK	5							
IPDM E/R	OK	5							
e4WD	-	-							
AWD/4WD	-	-							

SYSTEM DATE P/#	EPS	SYSTEM DATE P/#	INTELLIGENT KEY	SYSTEM DATE P/#	METER	SYSTEM DATE P/#	AUTO DRIVE POS.
TRANSMIT DIAG	OK	5	TRANSMIT DIAG	OK	5	TRANSMIT DIAG	-
ECM	OK	5	ECM	OK	5	ECM	OK
VDC/TCS/ABS	OK	5	METER/M&A	OK	5	METER/M&A	OK
METER/M&A	OK	5	BCM/SEC	OK	5	BCM/SEC	OK
			TCM	OK	5	TCM	OK
			VDC/TCS/ABS	OK	5		
			IPDM E/R	-	-		
				-	-		
				OK	5		

"U1000" and "U1001" is indicated in the past for most units.

Only on CAN DIAG SUPPORT MNTR (with PAST), "1 - 39" is indicated on "PAST" of "TRANSMIT DIAG" and the reception item.

SKIB8897E

A
B
C
D
E
F
G
H
I
J
L
M

LAN

INDEX FOR DTC

[CAN]

INDEX FOR DTC

PFP:00004

DTC No. Index

UKS005YC

DTC	Self-diagnosis item (CONSULT-II indication)	DTC detection condition	Inspection
U1000	CAN COMM CIRCUIT	When ECM is not transmitting or receiving CAN communication signal of OBD (emission-related diagnosis) for 2 seconds or more.	Refer to LAN-41. "HOW TO USE THIS SECTION" .
		When a control unit (except for ECM) is not transmitting or receiving CAN communication signal for 2 seconds or more.	
U1001	CAN COMM CIRCUIT	When ECM is not transmitting or receiving CAN communication signal other than OBD (emission-related diagnosis) for 2 seconds or more.	
U1002	SYSTEM COMM	When a control unit is not transmitting or receiving CAN communication signal for 2 seconds or less.	Start the inspection. Refer to the applicable section of the indicated control unit.
U1010	CONTROL UNIT [CAN]	When an error is detected during the initial diagnosis for CAN controller of each control unit.	Replace the control unit indicating "U1010".

HOW TO USE THIS SECTION

PFP:00008

Caution

UKS005VI

- This section describes information peculiar to a vehicle, sheets for trouble diagnosis, and inspection procedures.
- For trouble diagnosis procedure [LAN-17, "Trouble Diagnosis Procedure"](#) .

Abbreviation List

UKS005VJ

Abbreviations in CAN communication signal chart, and the diagnosis sheet are as per the following list.

Abbreviation	Unit name	SELECT SYSTEM (CONSULT-II)	CAN DIAG SUPPORT MNTR (CONSULT-II)
A-BAG	Air bag diagnosis sensor unit	AIR BAG	—
ABS	ABS actuator and electric unit (control unit)	ABS	VDC/TCS/ABS
BCM	BCM	BCM	BCM/SEC
DLC	Data link connector	—	—
ECM	ECM	ENGINE	ECM
EPS	EPS control unit	EPS	EPS
I-KEY	Intelligent Key unit	INTELLIGENT KEY	I-KEY
IPDM-E	IPDM E/R	IPDM E/R	IPDM E/R
M&A	Combination meter	METER	METER/M&A
TCM	TCM	A/T	TCM
		TRANSMISSION	

A
B
C
D
E
F
G
H
I
J
L
M

LAN

PRECAUTIONS

PFP:00001

Precautions for Supplemental Restraint System (SRS) “AIR BAG” and “SEAT BELT PRE-TENSIONER”

UKS005VK

The Supplemental Restraint System such as “AIR BAG” and “SEAT BELT PRE-TENSIONER”, used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SRS and SB section of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SRS section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

Precautions When Using CONSULT-II

UKS005YD

Use CONSULT-II CONVERTER when connecting CONSULT-II to data link connector.

CAUTION:

CAN communication does not function properly if CONSULT-II is used without connecting CONSULT-II CONVERTER.

Precautions for Trouble Diagnosis

UKS005YE

CAUTION:

- Never apply 7.0 V or more to the measurement terminal.
- Use a tester with open terminal voltage of 7.0 V or less.
- Turn the ignition switch OFF and disconnect the battery cable from the negative terminal when checking the harness.


Precautions for Harness Repair

UKS005YF

- Solder the repaired area and wrap tape around the soldered area.

NOTE:

A fray of twisted lines must be within 110 mm (4.33 in).

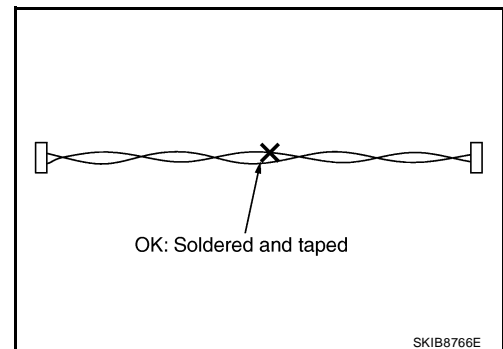


PRECAUTIONS

[CAN]

- Bypass connection is never allowed at the repaired area.

NOTE:

Bypass connection may cause CAN communication error. The spliced wire becomes separated and the characteristics of twisted line are lost.

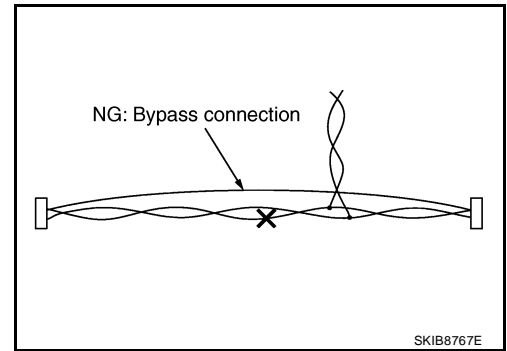

- Replace the applicable harness as an assembly if error is detected on the shield lines of CAN communication line.

A
B
C
D
E
F
G
H
I
J
L
M

LAN

TROUBLE DIAGNOSIS

[CAN]

TROUBLE DIAGNOSIS

PFP:00004

CAN Diagnostic Support Monitor

UKS005WF

Use "CAN DIAG SUPPORT MNTR" for detecting the root cause.

MONITOR ITEM LIST (CONSULT-II)

ECM

0: Error at present, 1 – 39: Error in the past (Number means the number of times the ignition switch is turned OFF→ON)

SELECT SYSTEM	CAN DIAG SUPPORT MNTR	Description	Normal		Error	
			PRSNT	PAST	PRSNT	PAST
ENGINE	TRANSMIT DIAG	Signal transmission status	OK	OK or 1 – 39*	UNKWN	0
	VDC/TCS/ABS	Signal receiving status from the ABS actuator and electric unit (control unit)				
	METER/M&A	Signal receiving status from the combination meter				
	BCM/SEC	Signal receiving status from the BCM				
	ICC	Not used even though indicated				
	HVAC					
	TCM	Signal receiving status from the TCM	OK	OK or 1 – 39*	UNKWN	0
	EPS	Signal receiving status from the EPS control unit				
	IPDM E/R	Signal receiving status from the IPDM E/R				
	e4WD	Not used even though indicated				
AWD/4WD						

*: 39 or higher number is fixed at 39 until the self-diagnosis result is erased.

BCM

NOTE:

Replace the unit when "NG" is indicated on the "INITIAL DIAG".

SELECT SYSTEM	CAN DIAG SUPPORT MNTR	Description	Normal	Error
			PRSNT	
BCM	INITIAL DIAG	Status of CAN controller	OK	NG
	TRANSMIT DIAG	Signal transmission status		UNKWN
	ECM	Signal receiving status from the ECM		
	IPDM E/R	Signal receiving status from the IPDM E/R		
	METER/M&A	Signal receiving status from the combination meter		
	I-KEY	Signal receiving status from the Intelligent Key unit		
	TCM	Not used even though indicated		

EPS control unit

SELECT SYSTEM	CAN DIAG SUPPORT MNTR	Description	Normal	Error
			PRSNT	
EPS	TRANSMIT DIAG	Signal transmission status	OK	UNKWN
	ECM	Signal receiving status from the ECM		
	VDC/TCS/ABS	Signal receiving status from the ABS actuator and electric unit (control unit)		
	METER/M&A	Signal receiving status from the combination meter		

TROUBLE DIAGNOSIS

[CAN]

Intelligent Key unit

0: Error at present, 1 – 39: Error in the past (Number means the number of times the ignition switch is turned OFF→ON)

SELECT SYSTEM	CAN DIAG SUPPORT MNTR	Description	Normal		Error	
			PRSNT	PAST	PRSNT	PAST
INTELLIGENT KEY	TRANSMIT DIAG	Signal transmission status	OK	OK or 1 – 39*	UNKWN	0
	ECM	Signal receiving status from the ECM				
	METER/M&A	Signal receiving status from the combination meter				
	BCM/SEC	Signal receiving status from the BCM				

*: 39 or higher number is fixed at 39 until the self-diagnosis result is erased.

Combination meter

0: Error at present, 1 – 39: Error in the past (Number means the number of times the ignition switch is turned OFF→ON)

SELECT SYSTEM	CAN DIAG SUPPORT MNTR	Description	Normal		Error	
			PRSNT	PAST	PRSNT	PAST
METER	TRANSMIT DIAG	Signal transmission status	OK	OK or 1 – 39*	UNKWN	0
	ECM	Signal receiving status from the ECM				
	TCM	Signal receiving status from the TCM				
	BCM/SEC	Signal receiving status from the BCM				
	VDC/TCS/ABS	Signal receiving status from the ABS actuator and electric unit (control unit)				
	IPDM E/R	Signal receiving status from the IPDM E/R				
	DISPLAY	Not used even though indicated				
	I-KEY	Signal receiving status from the Intelligent Key unit	OK	OK or 1 – 39*	UNKWN	0
	EPS	Signal receiving status from the EPS control unit				
	AWD/4WD	Not used even though indicated				
	e4WD					
	ICC					
	LANE KEEP					
	TIRE-P					

*: 39 or higher number is fixed at 39 until the self-diagnosis result is erased.

ABS actuator and electric unit (control unit)

SELECT SYSTEM	CAN DIAG SUPPORT MNTR	Description	Normal	Error
			PRSNT	
ABS	INITIAL DIAG	Status of CAN controller	OK	NG ^{Caution}
	TRANSMIT DIAG	Signal transmission status		UNKWN
	ECM	Signal receiving status from the ECM		

CAUTION:

Never replace the unit even when “NG” is indicated on the “INITIAL DIAG” at this stage. Follow the trouble diagnosis procedures.

TROUBLE DIAGNOSIS

[CAN]

TCM (Models with A/T)

NOTE:

Replace the unit when “NG” is indicated on the “INITIAL DIAG”.

SELECT SYSTEM	CAN DIAG SUPPORT MNTR	Description	Normal	Error
			PRSNT	
A/T	INITIAL DIAG	Status of CAN controller	OK	NG
	TRANSMIT DIAG	Signal transmission status		UNKWN
	ECM	Signal receiving status from the ECM		
	VDC/TCS/ABS	Not used even though indicated		
	METER/M&A	Signal receiving status from the combination meter	OK	UNKWN
	ICC/e4WD	Not used even though indicated		

TCM (Models with CVT)

0: Error at present, 1 – 39: Error in the past (Number means the number of times the ignition switch is turned OFF→ON)

SELECT SYSTEM	CAN DIAG SUPPORT MNTR	Description	Normal		Error	
			PRSNT	PAST	PRSNT	PAST
TRANSMISSION	TRANSMIT DIAG	Signal transmission status	OK	OK or 1 – 39*	UNKWN	0
	ECM	Signal receiving status from the ECM				
	VDC/TCS/ABS	Signal receiving status from the ABS actuator and electric unit (control unit)				
	METER/M&A	Signal receiving status from the combination meter				
	BCM/SEC	Not used even though indicated				
	ICC					
	e4WD					
	AWD/4WD					

*: 39 or higher number is fixed at 39 until the self-diagnosis result is erased.

IPDM E/R

0: Error at present, 1 – 39: Error in the past (Number means the number of times the ignition switch is turned OFF→ON)

SELECT SYSTEM	CAN DIAG SUPPORT MNTR	Description	Normal		Error	
			PRSNT	PAST	PRSNT	PAST
IPDM E/R	TRANSMIT DIAG	Signal transmission status	OK	OK or 1 – 39*	UNKWN	0
	ECM	Signal receiving status from the ECM				
	BCM/SEC	Signal receiving status from the BCM				

*: 39 or higher number is fixed at 39 until the self-diagnosis result is erased.

TROUBLE DIAGNOSIS

[CAN]

UKS005VP

CAN System Specification Chart

Check CAN system type from the following specification chart. Then choose the correct diagnosis sheet.

NOTE:

Refer to [LAN-19, "CHECK OF CAN SYSTEM TYPE \(HOW TO USE CAN SYSTEM TYPE SPECIFICATION CHART\)"](#) for how to use CAN system specification chart.


Body type	Hatchback										
Axle	2WD										
Engine	MR18DE										
Transmission	M/T			A/T			CVT				
Brake control	—		ABS		—		ABS		—		ABS
Intelligent Key system		×		×				×		×	
CAN system type	1	2	3	4	5	6	7	8	9	10	
Diagnosis sheet	LAN-60	LAN-61	LAN-62	LAN-63	LAN-64	LAN-65	LAN-66	LAN-67	LAN-68	LAN-69	
CAN communication signal chart	LAN-48, "TYPE 1/TYPE 2/TYPE 3/TYPE 4"				LAN-49, "TYPE 5/TYPE 6"		LAN-50, "TYPE 7/TYPE 8/TYPE 9/TYPE 10"				

X: Applicable

VEHICLE EQUIPMENT IDENTIFICATION INFORMATION

NOTE:

Check CAN system type from the vehicle shape and equipment.

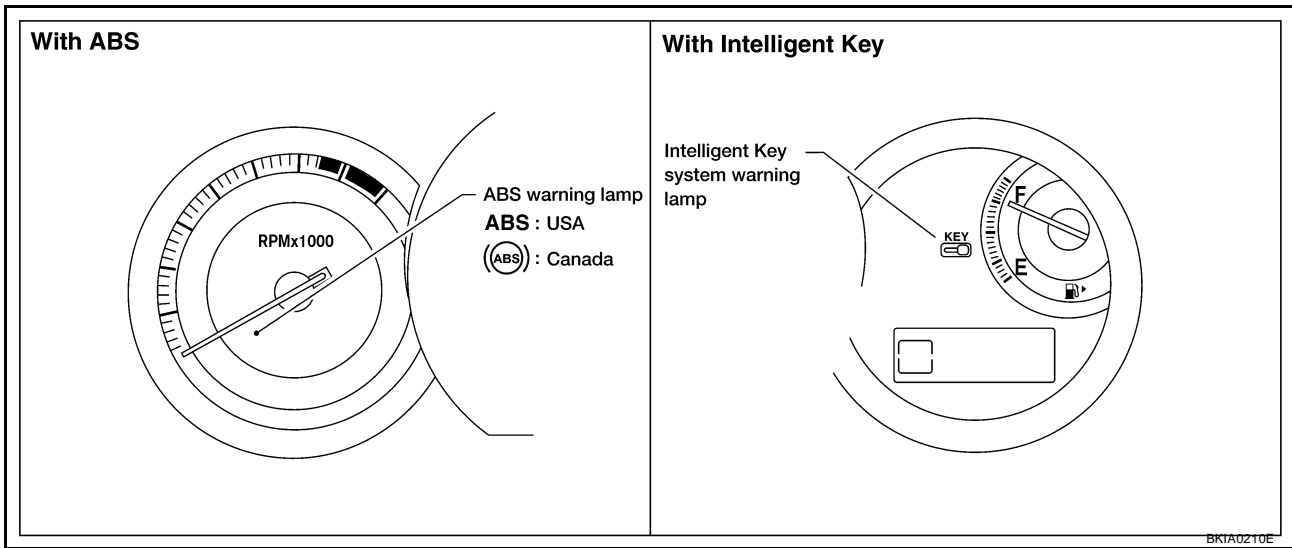

TROUBLE DIAGNOSIS

[CAN]

UKS005VQ

CAN Communication Signal Chart

Refer to [LAN-15, "How to Use CAN Communication Signal Chart"](#) for how to use CAN communication signal chart.

TYPE 1/TYPE 2/TYPE 3/TYPE 4

NOTE:

Refer to [LAN-41, "Abbreviation List"](#) for the abbreviations of the connecting units.

T: Transmit R: Receive

Signals	ECM	BCM	EPS	I-KEY ^{*1}	M&A	ABS ^{*2}	IPDM-E
A/C compressor request signal ^{*3}	T						R
ASCD CRUISE lamp signal	T				R		
ASCD SET lamp signal	T				R		
Cooling fan motor operation signal	T						R
Engine coolant temperature signal	T				R		
Engine speed signal	T				R		
Engine status signal	T		R				
Fuel consumption monitor signal	T				R		
Malfunction indicator lamp signal	T				R		
A/C switch signal ^{*3}	R	T					
Blower fan motor switch signal	R	T					
Buzzer output signal		T			R		
				T	R		
Day time running light request signal ^{*4}		T					R
Door lock/unlock status signal		T		R			
Door switch signal		T		R	R		R
Front wiper request signal		T					R
High beam request signal		T			R		R
Horn chirp signal		T					R
Ignition switch signal		T					R
Low beam request signal		T					R
Position lights request signal		T			R		R
Rear window defogger switch signal		T					R
Theft warning horn request signal		T					R
Tire pressure signal ^{*5}		T			R		
Trunk open/close status signal		T		R			
Turn indicator signal		T			R		
EPS operation signal	R		T				
EPS warning lamp signal			T		R		
Door lock/unlock/trunk open request signal		R		T			
Hazard request signal		R		T			
Ignition knob switch signal		R		T			
KEY warning lamp signal				T	R		
LOCK warning lamp signal				T	R		
Panic alarm request signal		R		T			
Fuel level sensor signal	R				T		

TROUBLE DIAGNOSIS

[CAN]

Signals	ECM	BCM	EPS	I-KEY ^{*1}	M&A	ABS ^{*2}	IPDM-E
Sleep/wake up signal		R			T		
		T		R	R		R
Vehicle speed signal	R	R	R		T		
	R		R		R	T	
ABS warning lamp signal					R	T	
Brake warning lamp signal					R	T	
Front wiper stop position signal		R					T
High beam status signal	R						T
Low beam status signal	R						T
Oil pressure switch signal					R		T
Rear window defogger control signal	R						T

*1: Models with Intelligent Key system

*2: Models with ABS

*3: Models with air conditioner

*4: Models for Canada

*5: Models for USA

NOTE:

CAN data of the air bag diagnosis sensor unit is not used by usual service work, thus it is omitted.

TYPE 5/TYPE 6

NOTE:

Refer to [LAN-41, "Abbreviation List"](#) for the abbreviations of the connecting units.

T: Transmit R: Receive

Signals	ECM	BCM	EPS	M&A	ABS ^{*1}	TCM	IPDM-E
A/C compressor request signal ^{*2}	T						R
Accelerator pedal position signal	T					R	
ASCD CRUISE lamp signal	T			R			
ASCD SET lamp signal	T			R			
Closed throttle position signal	T					R	
Cooling fan motor operation signal	T						R
Engine coolant temperature signal	T			R			
Engine speed signal	T			R			
Engine status signal	T		R				
Fuel consumption monitor signal	T			R			
Malfunction indicator lamp signal	T			R			
Wide open throttle position signal	T					R	
A/C switch signal ^{*2}	R	T					
Blower fan motor switch signal	R	T					
Buzzer output signal		T		R			
				R			
Day time running light request signal ^{*3}		T					R
Door switch signal		T		R			R
Front wiper request signal		T					R
High beam request signal		T		R			R
Horn chirp signal		T					R
Ignition switch signal		T					R

TROUBLE DIAGNOSIS

[CAN]

Signals	ECM	BCM	EPS	M&A	ABS*1	TCM	IPDM-E
Low beam request signal		T					R
Position lights request signal		T		R			R
Rear window defogger switch signal		T					R
Theft warning horn request signal		T					R
Tire pressure signal*4		T		R			
Turn indicator signal		T		R			
EPS operation signal	R		T				
EPS warning lamp signal			T	R			
Fuel level sensor signal	R			T			
Overdrive control switch signal				T		R	
P/N range signal				T		R	
Sleep/wake up signal		R		T			
		T		R			R
Stop lamp switch signal				T		R	
Vehicle speed signal	R	R	R	T			
	R		R	R	T		
ABS warning lamp signal				R	T		
Brake warning lamp signal				R	T		
A/T check indicator signal				R		T	
A/T self-diagnosis signal	R					T	
OD OFF indicator signal				R		T	
Output shaft revolution signal	R					T	
Shift position signal				R		T	
Turbine revolution signal	R					T	
Front wiper stop position signal		R					T
High beam status signal	R						T
Low beam status signal	R						T
Oil pressure switch signal				R			T
Rear window defogger control signal	R						T

*1: Models with ABS

*2: Models with air conditioner

*3: Models for Canada

*4: Models for USA

NOTE:

CAN data of the air bag diagnosis sensor unit is not used by usual service work, thus it is omitted.

TYPE 7/TYPE 8/TYPE 9/TYPE 10

NOTE:

Refer to [LAN-41, "Abbreviation List"](#) for the abbreviations of the connecting units.

T: Transmit R: Receive

Signals	ECM	BCM	EPS	I-KEY*1	M&A	ABS*2	TCM	IPDM-E
A/C compressor request signal	T							R
Accelerator pedal position signal	T						R	
ASCD CRUISE lamp signal	T				R			
ASCD SET lamp signal	T				R			
Closed throttle position signal	T						R	

TROUBLE DIAGNOSIS

[CAN]

Signals	ECM	BCM	EPS	I-KEY*1	M&A	ABS*2	TCM	IPDM-E	
Cooling fan motor operation signal	T							R	A
Engine coolant temperature signal	T				R				
Engine speed signal	T				R		R		B
Engine status signal	T		R						
Fuel consumption monitor signal	T				R				
Malfunction indicator lamp signal	T				R				C
Wide open throttle position signal	T						R		
A/C switch signal	R	T							D
Blower fan motor switch signal	R	T							
Buzzer output signal		T			R				
				T	R				E
Day time running light request signal*3		T			R			R	
Door lock/unlock status signal		T		R					F
Door switch signal		T		R	R			R	
Front wiper request signal		T						R	
High beam request signal		T			R			R	G
Horn chirp signal		T						R	
Ignition switch signal		T						R	H
Low beam request signal		T						R	
Position lights request signal		T			R			R	
Rear window defogger switch signal		T						R	I
Theft warning horn request signal		T						R	
Tire pressure signal*4									J
Trunk open/close status signal		T		R					
Turn indicator signal		T			R				
EPS operation signal	R		T						LAN
EPS warning lamp signal			T		R				
Door lock/unlock/trunk open request signal		R		T					L
Hazard request signal		R		T					
Ignition knob switch signal		R		T					
KEY warning lamp signal				T	R				M
LOCK warning lamp signal				T	R				
Panic alarm request signal		R		T					
Fuel level sensor signal	R				T				
Sleep/wake up signal		R			T				
		T		R	R			R	
Overdrive control switch signal					T		R		
Stop lamp switch signal					T		R		
Vehicle speed signal	R	R	R		T				
	R		R		R	T	R		
			R*5		R*5		T*5		
ABS warning lamp signal					R	T			
Brake warning lamp signal					R	T			
CVT self-diagnosis signal	R						T		

TROUBLE DIAGNOSIS

[CAN]

Signals	ECM	BCM	EPS	I-KEY*1	M&A	ABS*2	TCM	IPDM-E
Input shaft revolution signal	R						T	
Output shaft revolution signal	R						T	
Shift position indicator signal					R		T	
OD OFF indicator signal					R		T	
Front wiper stop position signal		R						T
High beam status signal	R							T
Low beam status signal	R							T
Oil pressure switch signal					R			T
Rear window defogger control signal	R							T

*1: Models with Intelligent Key system

*2: Models with ABS

*3: Models for Canada

*4: Models for USA

*5: Models without ABS

NOTE:

CAN data of the air bag diagnosis sensor unit is not used by usual service work, thus it is omitted.


TROUBLE DIAGNOSIS

[CAN]

Schematic

UKS005VR

(AB) : WITH ABS
 (IK) : WITH INTELLIGENT KEY
 (MB) : WITHOUT MT

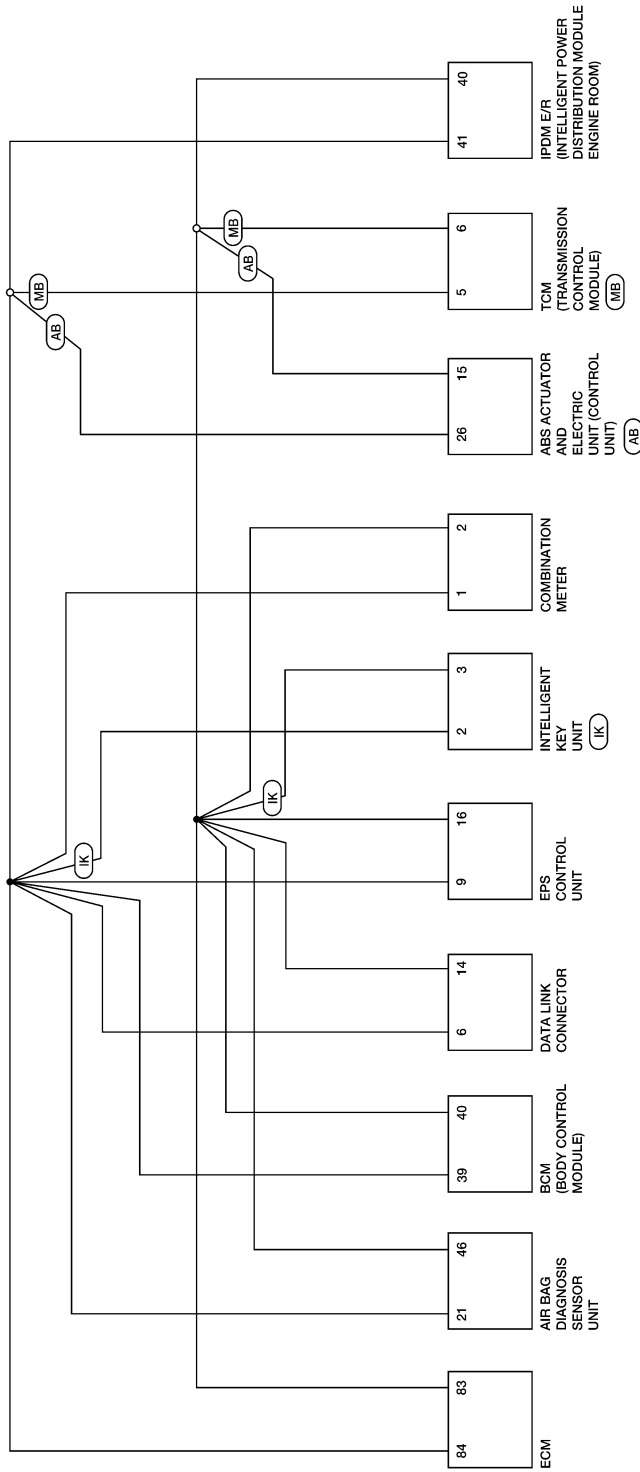

A
B
C
D
E
F
G
H
I
J
L
M

LAN



BKWA0700E

TROUBLE DIAGNOSIS





[CAN]

Wiring Diagram — CAN —

 UKS005VS

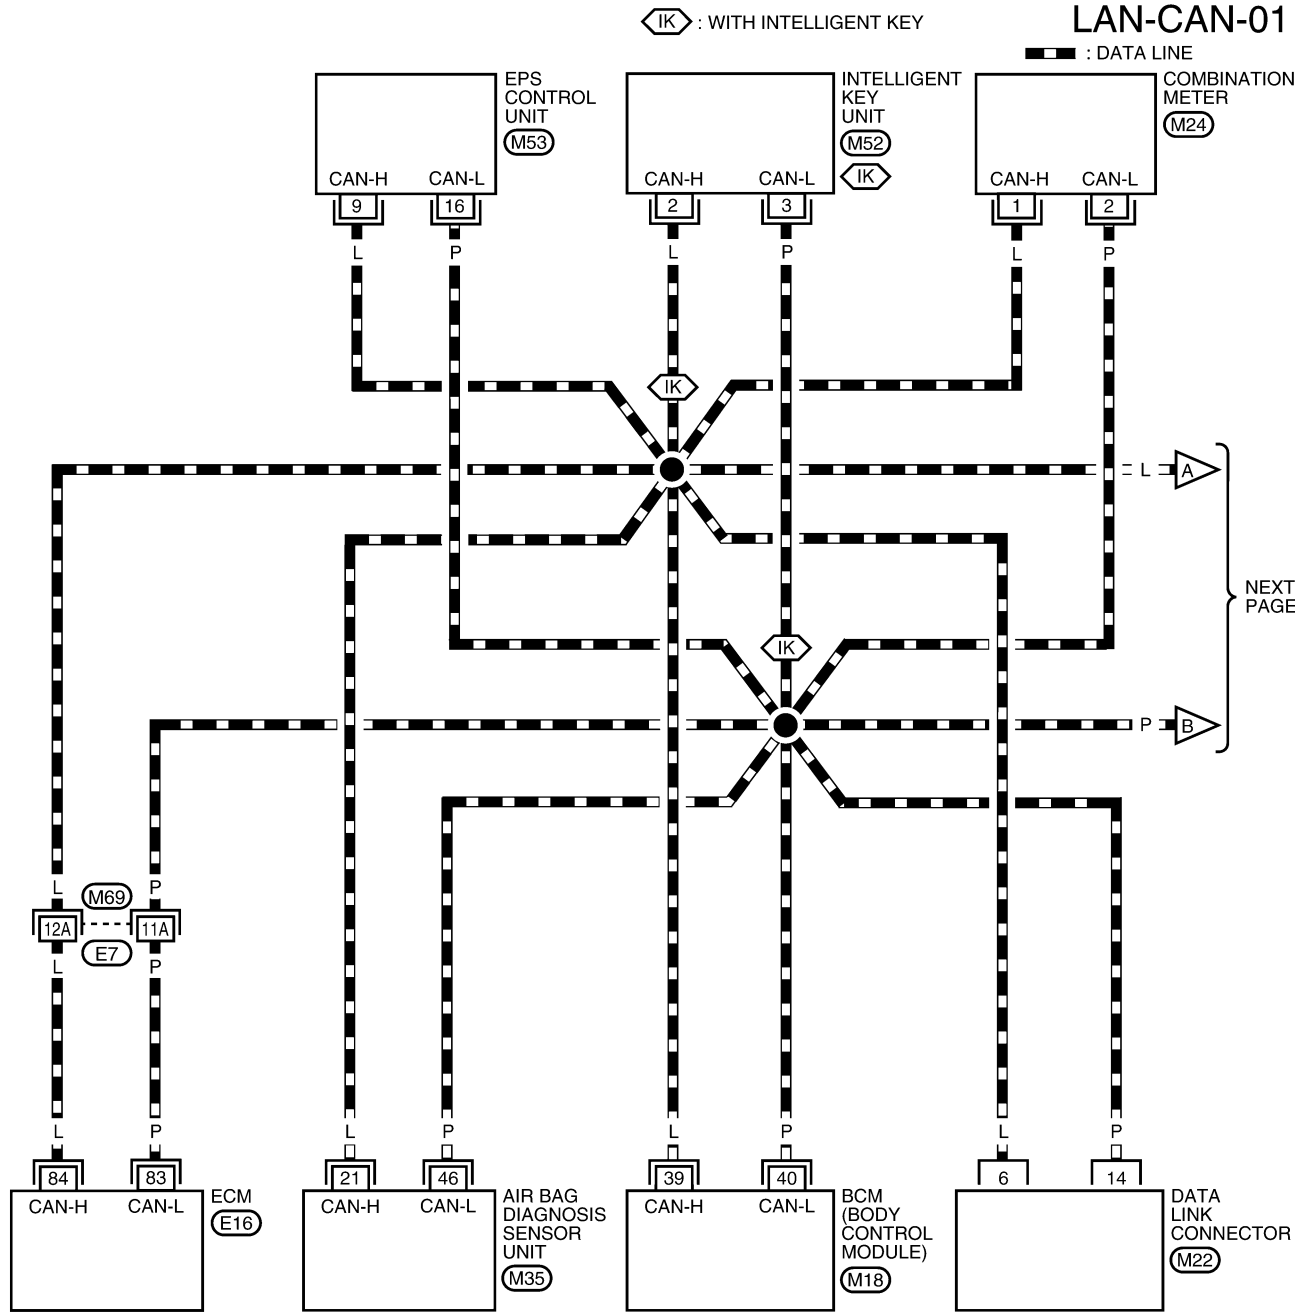


   REFER TO THE FOLLOWING.
(M69) - SUPER MULTIPLE JUNCTION (SMJ)

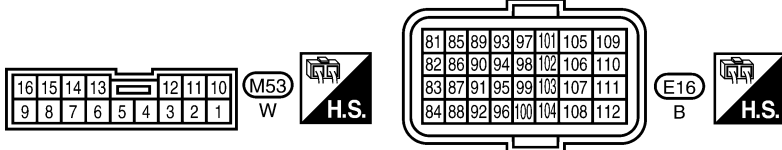




BKWA0701E

LAN-CAN-02

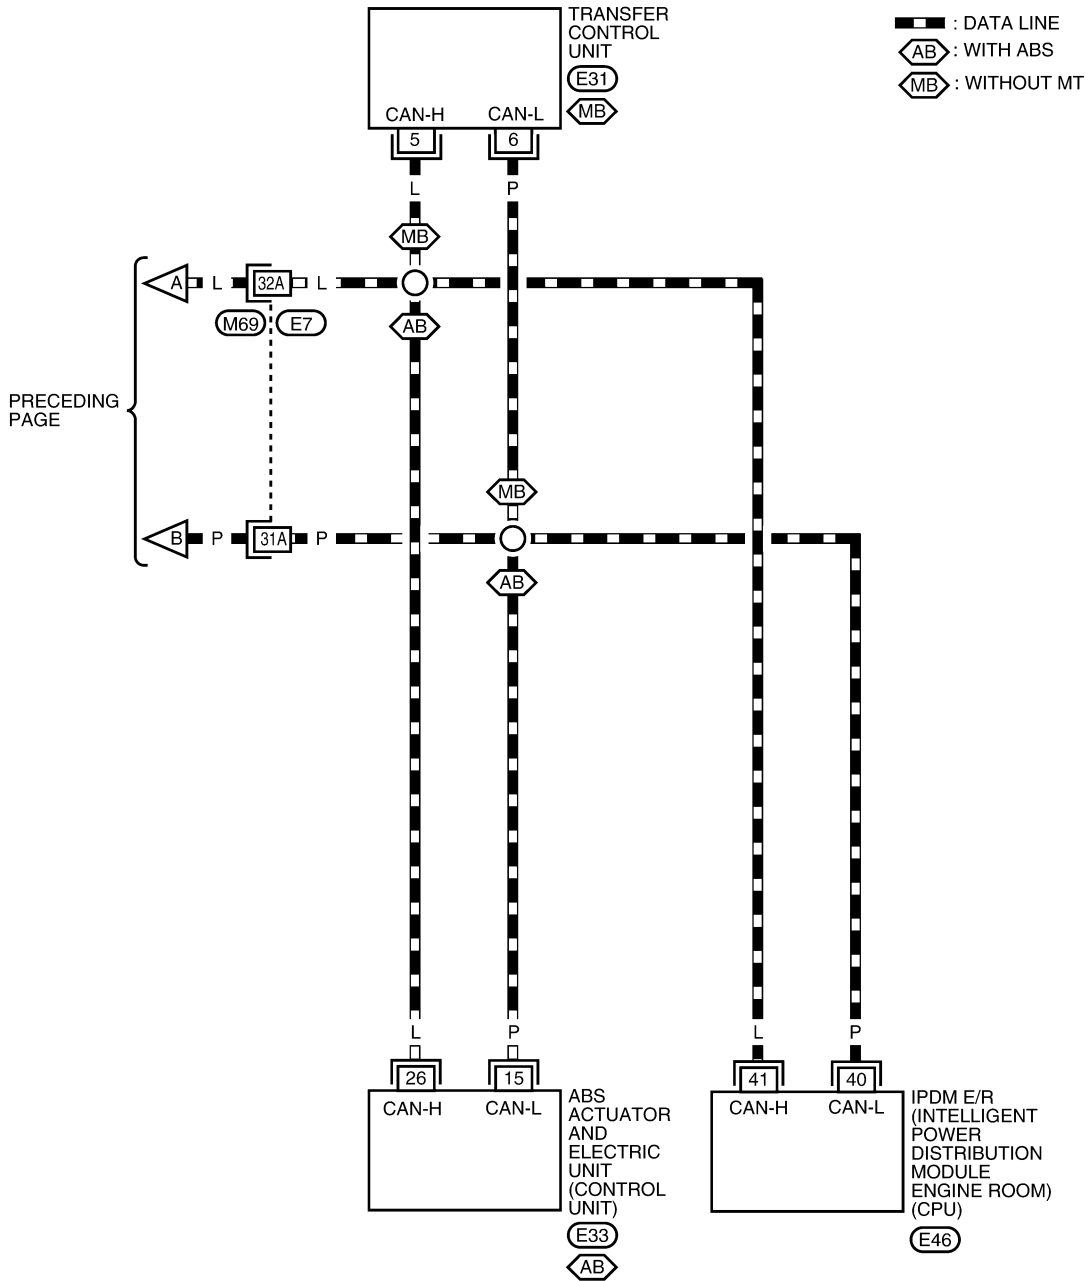

A
B
C
D
E
F
G
H
I
J
LAN
L
M

  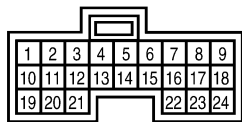

REFER TO THE FOLLOWING.
 (M69) - SUPER MULTIPLE JUNCTION (SMJ)

BKWA0702E

Interview Sheet

UKS005VT

CAN Communication System Diagnosis Interview Sheet

Date received:

Type:

VIN No.:

Model:

First registration:

Mileage:

CAN system type:

Symptom (Results from interview with customer)

Condition at inspection

Error symptom : Present / Past

SKIB8898E

TROUBLE DIAGNOSIS

[CAN]

Data Sheet CONSULT-II DATA ATTACHMENT SHEET

UKS005VU

A
B
C
D
E
F
G
H
I
J
LAN
L
M

Attach printout of
EPS
SELF-DIAG RESULTS
and
CAN DIAG SUPPORT MNTR

Attach printout of
BCM
SELF-DIAG RESULTS
and
CAN DIAG SUPPORT MNTR

Attach printout of
ENGINE
SELF-DIAG RESULTS
and
CAN DIAG SUPPORT MNTR

Attach printout of
SELECT SYSTEM

PKIC9840E

TROUBLE DIAGNOSIS

[CAN]

Attach printout of
A/T
or
TRANSMISSION
SELF-DIAG RESULTS
and
CAN DIAG SUPPORT MNTR

Attach printout of
ABS
SELF-DIAG RESULTS
and
CAN DIAG SUPPORT MNTR

Attach printout of
METER
SELF-DIAG RESULTS
and
CAN DIAG SUPPORT MNTR

Attach printout of
INTELLIGENT KEY
SELF-DIAG RESULTS
and
CAN DIAG SUPPORT MNTR

PKID0307E

TROUBLE DIAGNOSIS

[CAN]

Attach printout of
IPDM E/R
SELF-DIAG RESULTS
and
CAN DIAG SUPPORT MNTR

SKIB8770E

A

B

C

D

E

F

G

H

I

J

LAN

L


M

TROUBLE DIAGNOSIS

[CAN]

UKS005VV

CAN System (Type 1) DIAGNOSIS SHEET

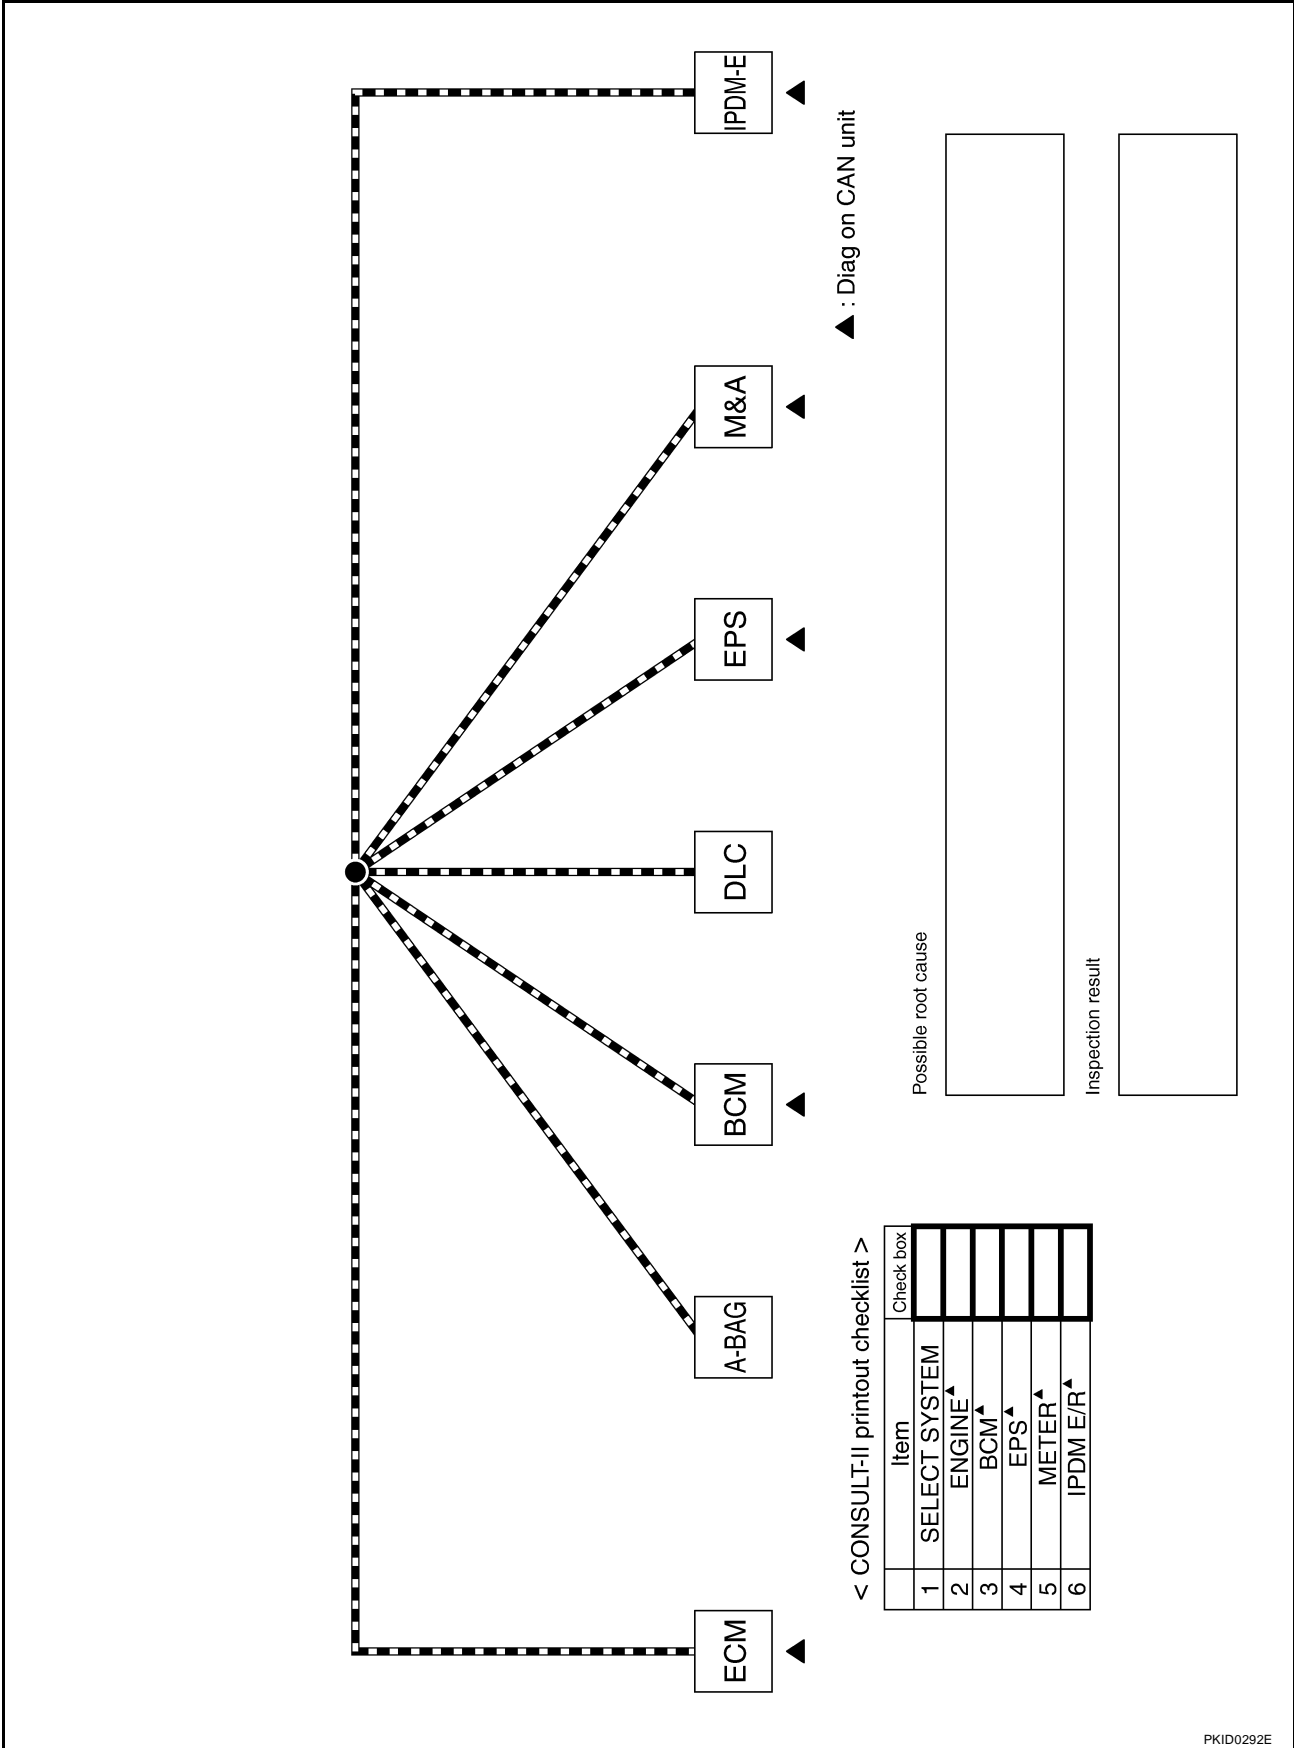

PKID0292E


TROUBLE DIAGNOSIS

[CAN]

UKS005VW

CAN System (Type 2) DIAGNOSIS SHEET

A
B
C
D
E
F
G
H
I
J
K
L
M

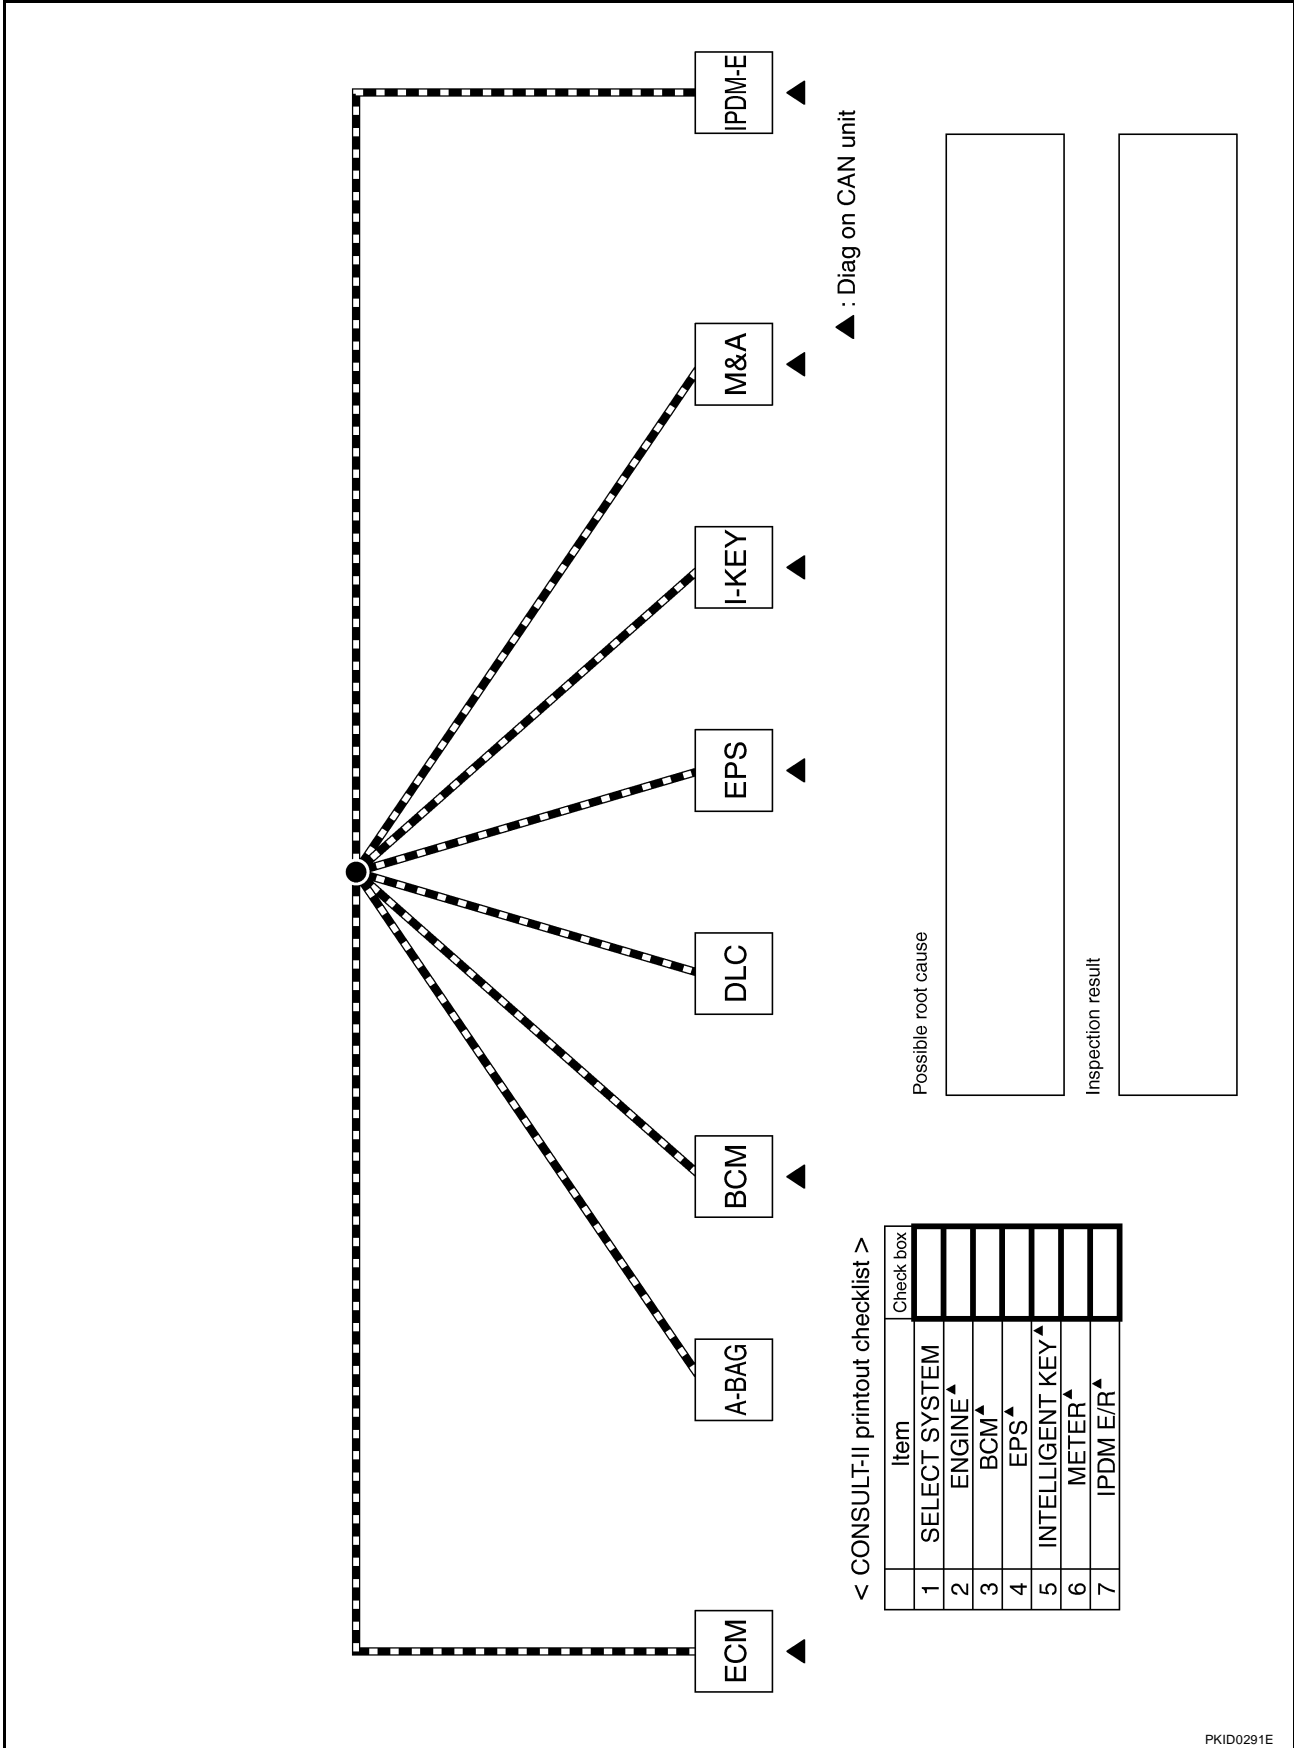


PKID0291E

TROUBLE DIAGNOSIS

[CAN]

UKS005VX

CAN System (Type 3) DIAGNOSIS SHEET

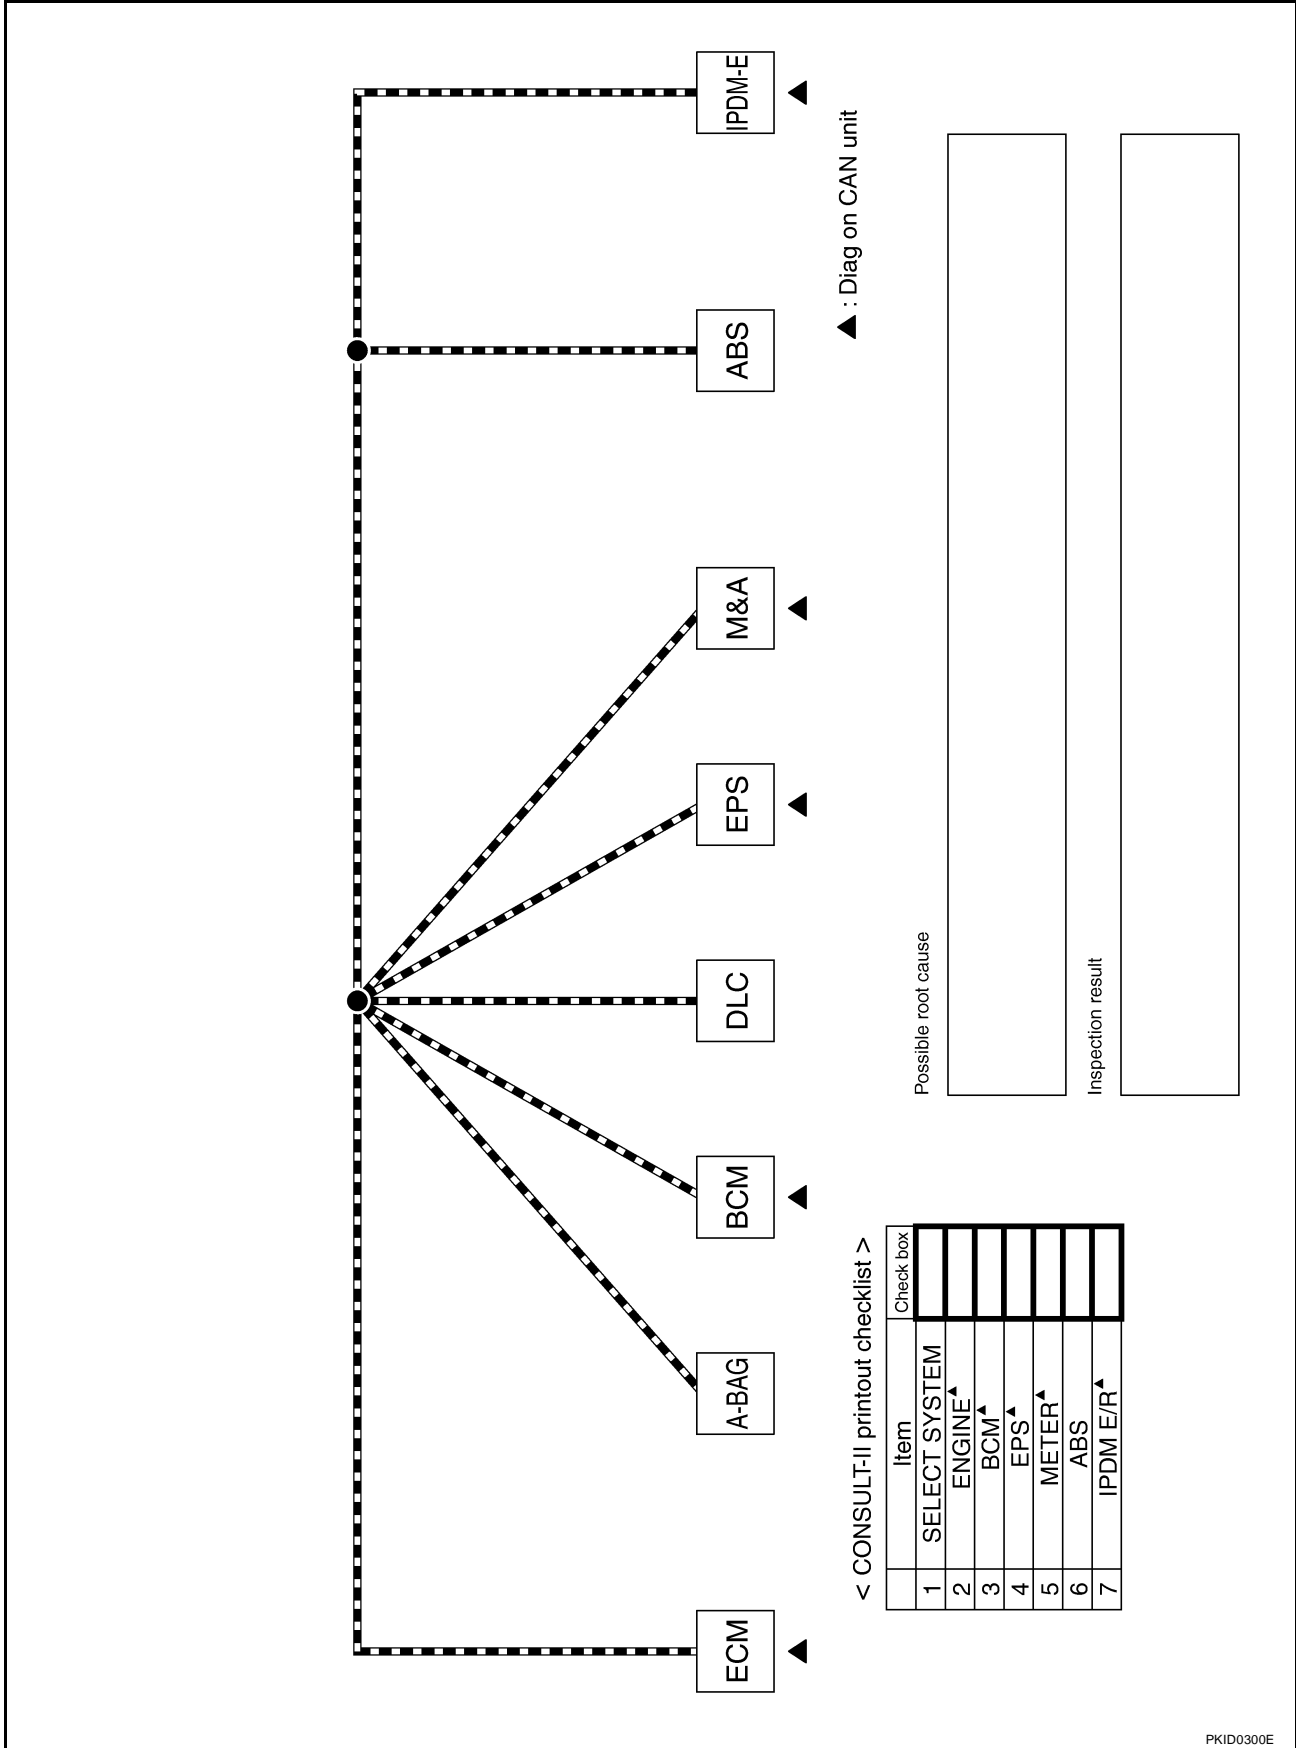

PKID0300E


TROUBLE DIAGNOSIS

[CAN]

UKS005VY

CAN System (Type 4) DIAGNOSIS SHEET

A
B
C
D
E
F
G
H
I
J
LAN
L
M

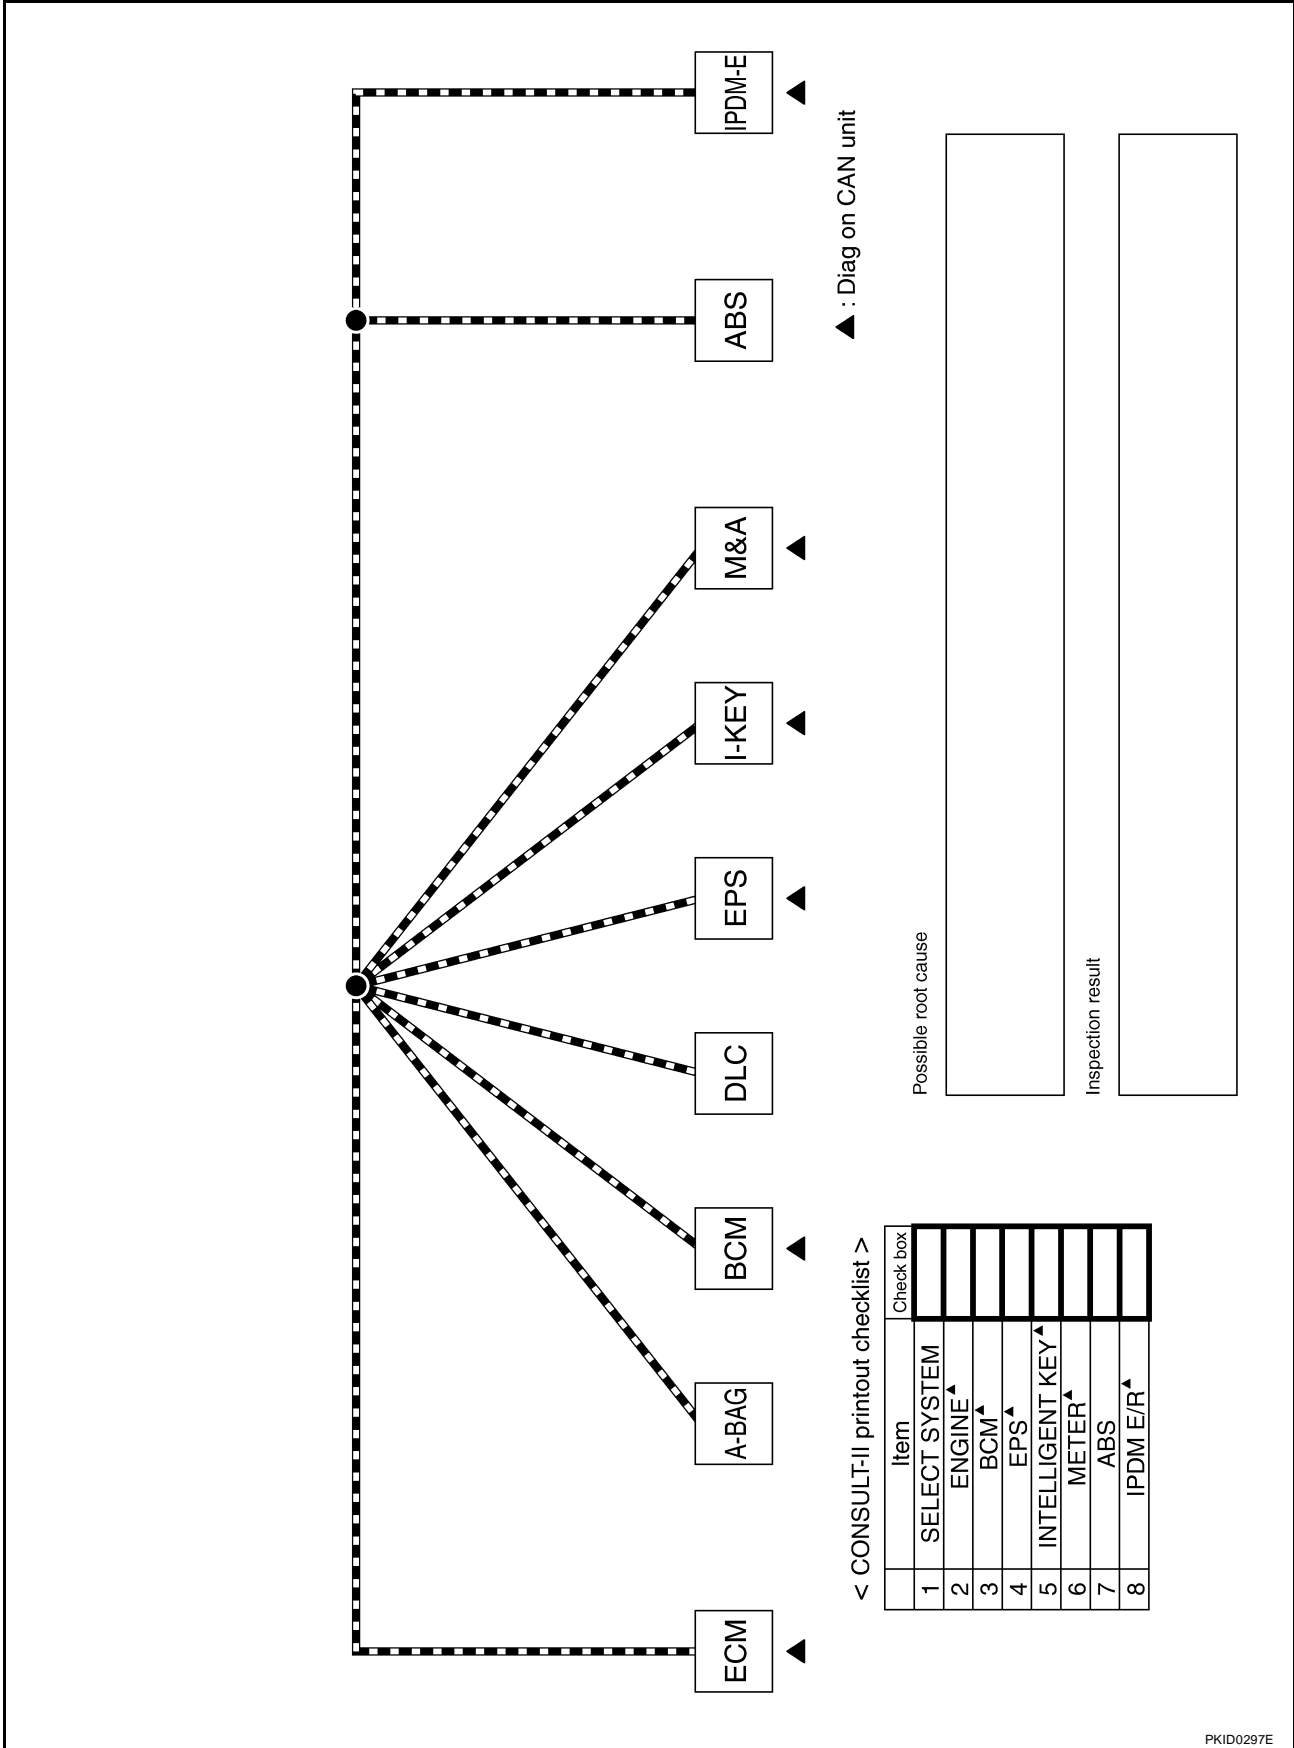


PKID0297E

TROUBLE DIAGNOSIS

[CAN]

CAN System (Type 5) DIAGNOSIS SHEET

UKS005WV

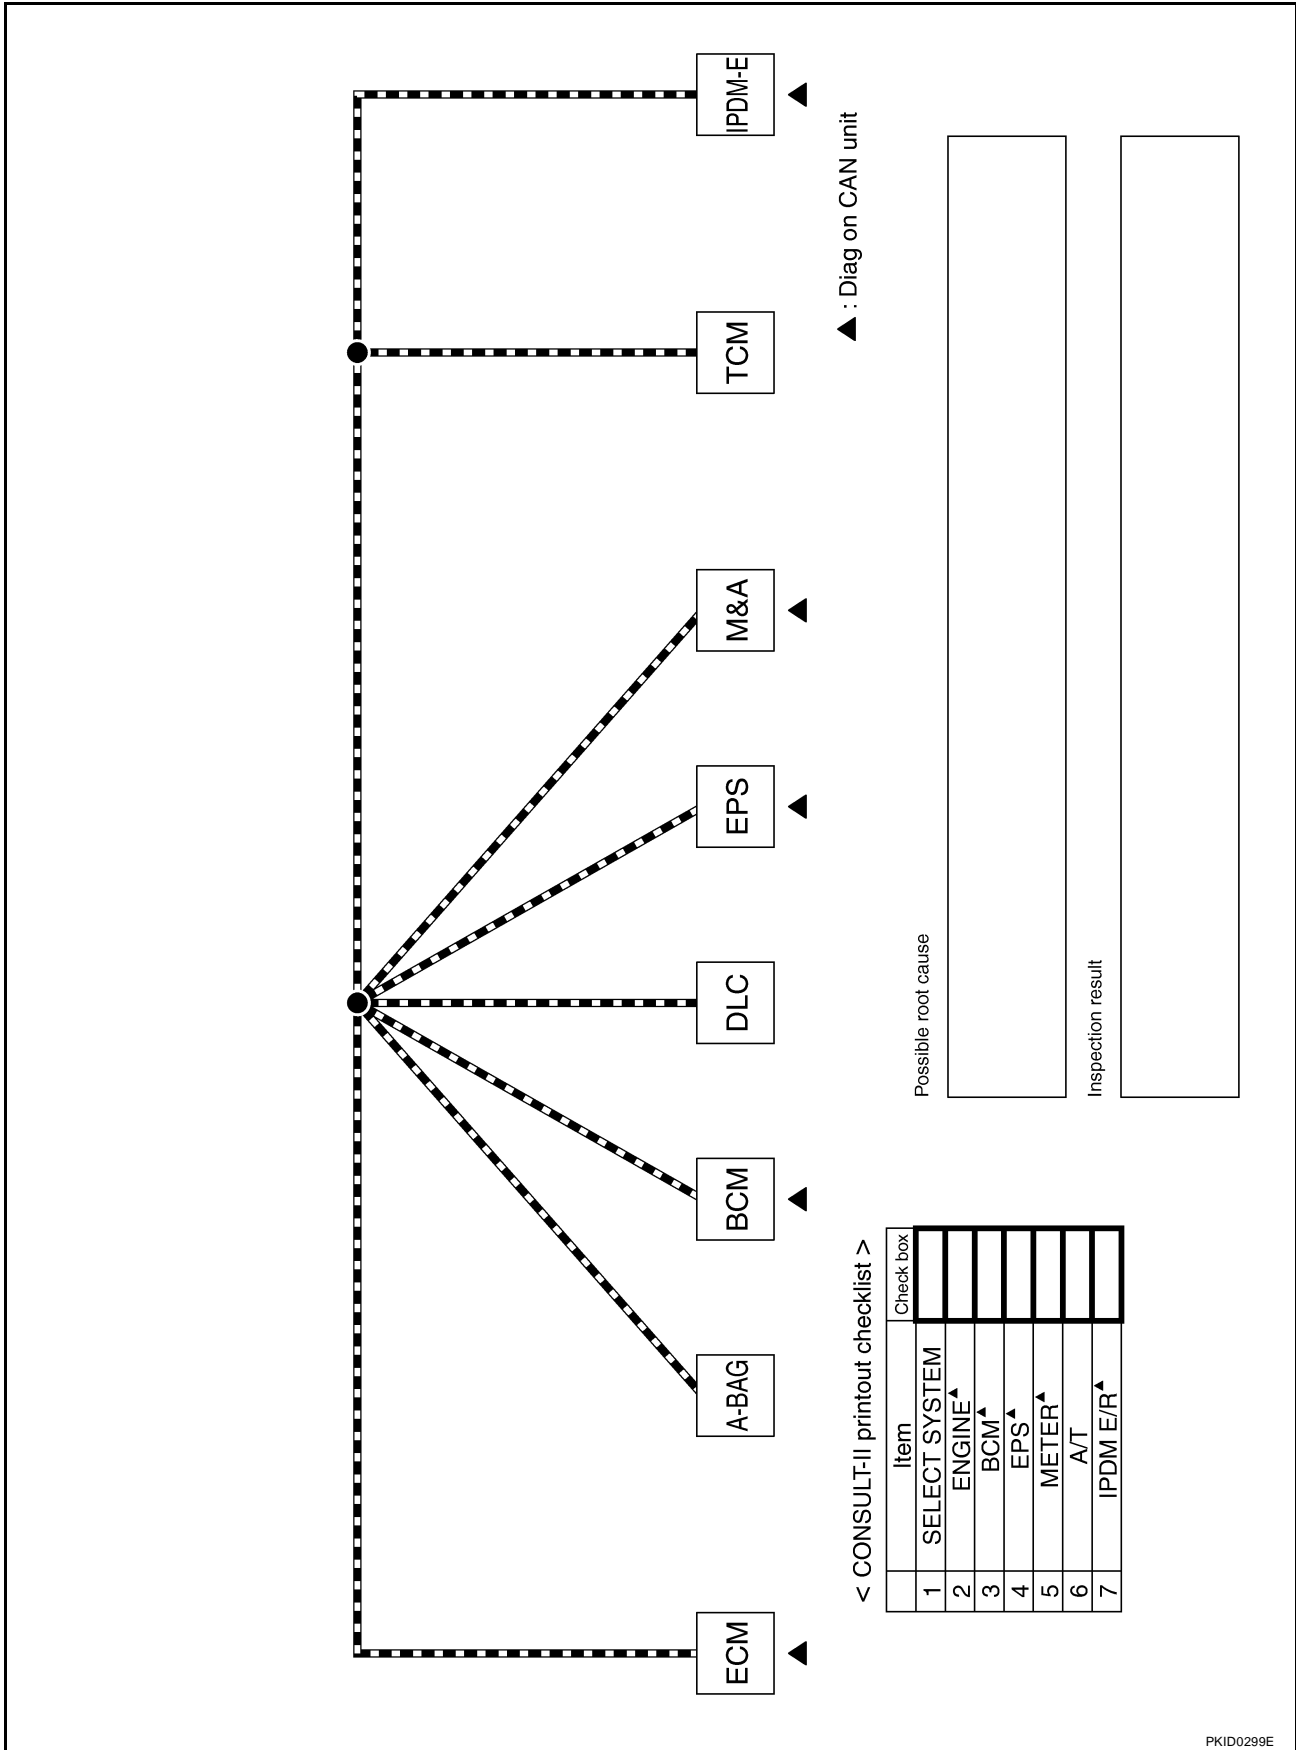

PKID0299E


TROUBLE DIAGNOSIS

[CAN]

UKS005WW


CAN System (Type 6) DIAGNOSIS SHEET

A
B
C
D
E
F
G
H
I
J
LAN
L
M

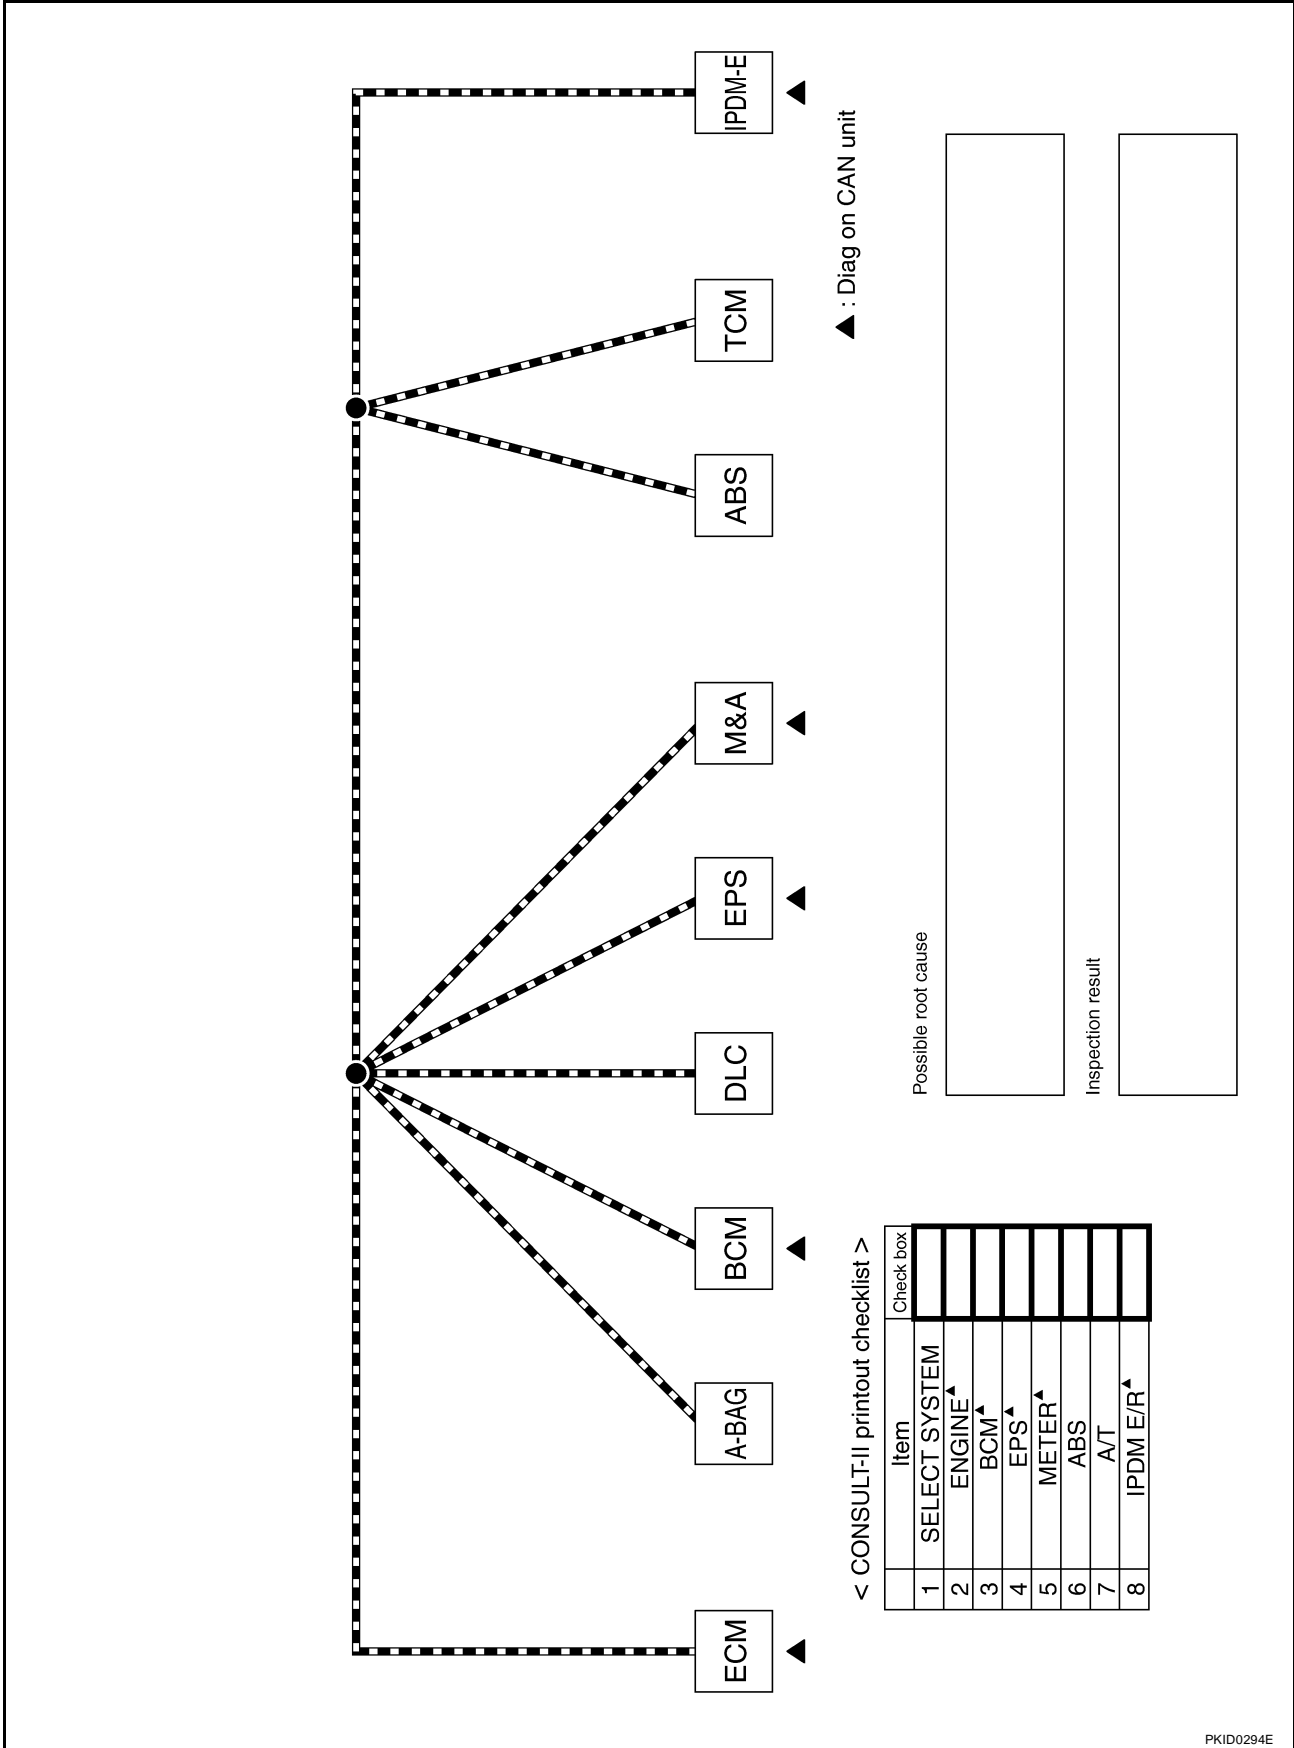

CAN System (Type 7) DIAGNOSIS SHEET

UKS005WX

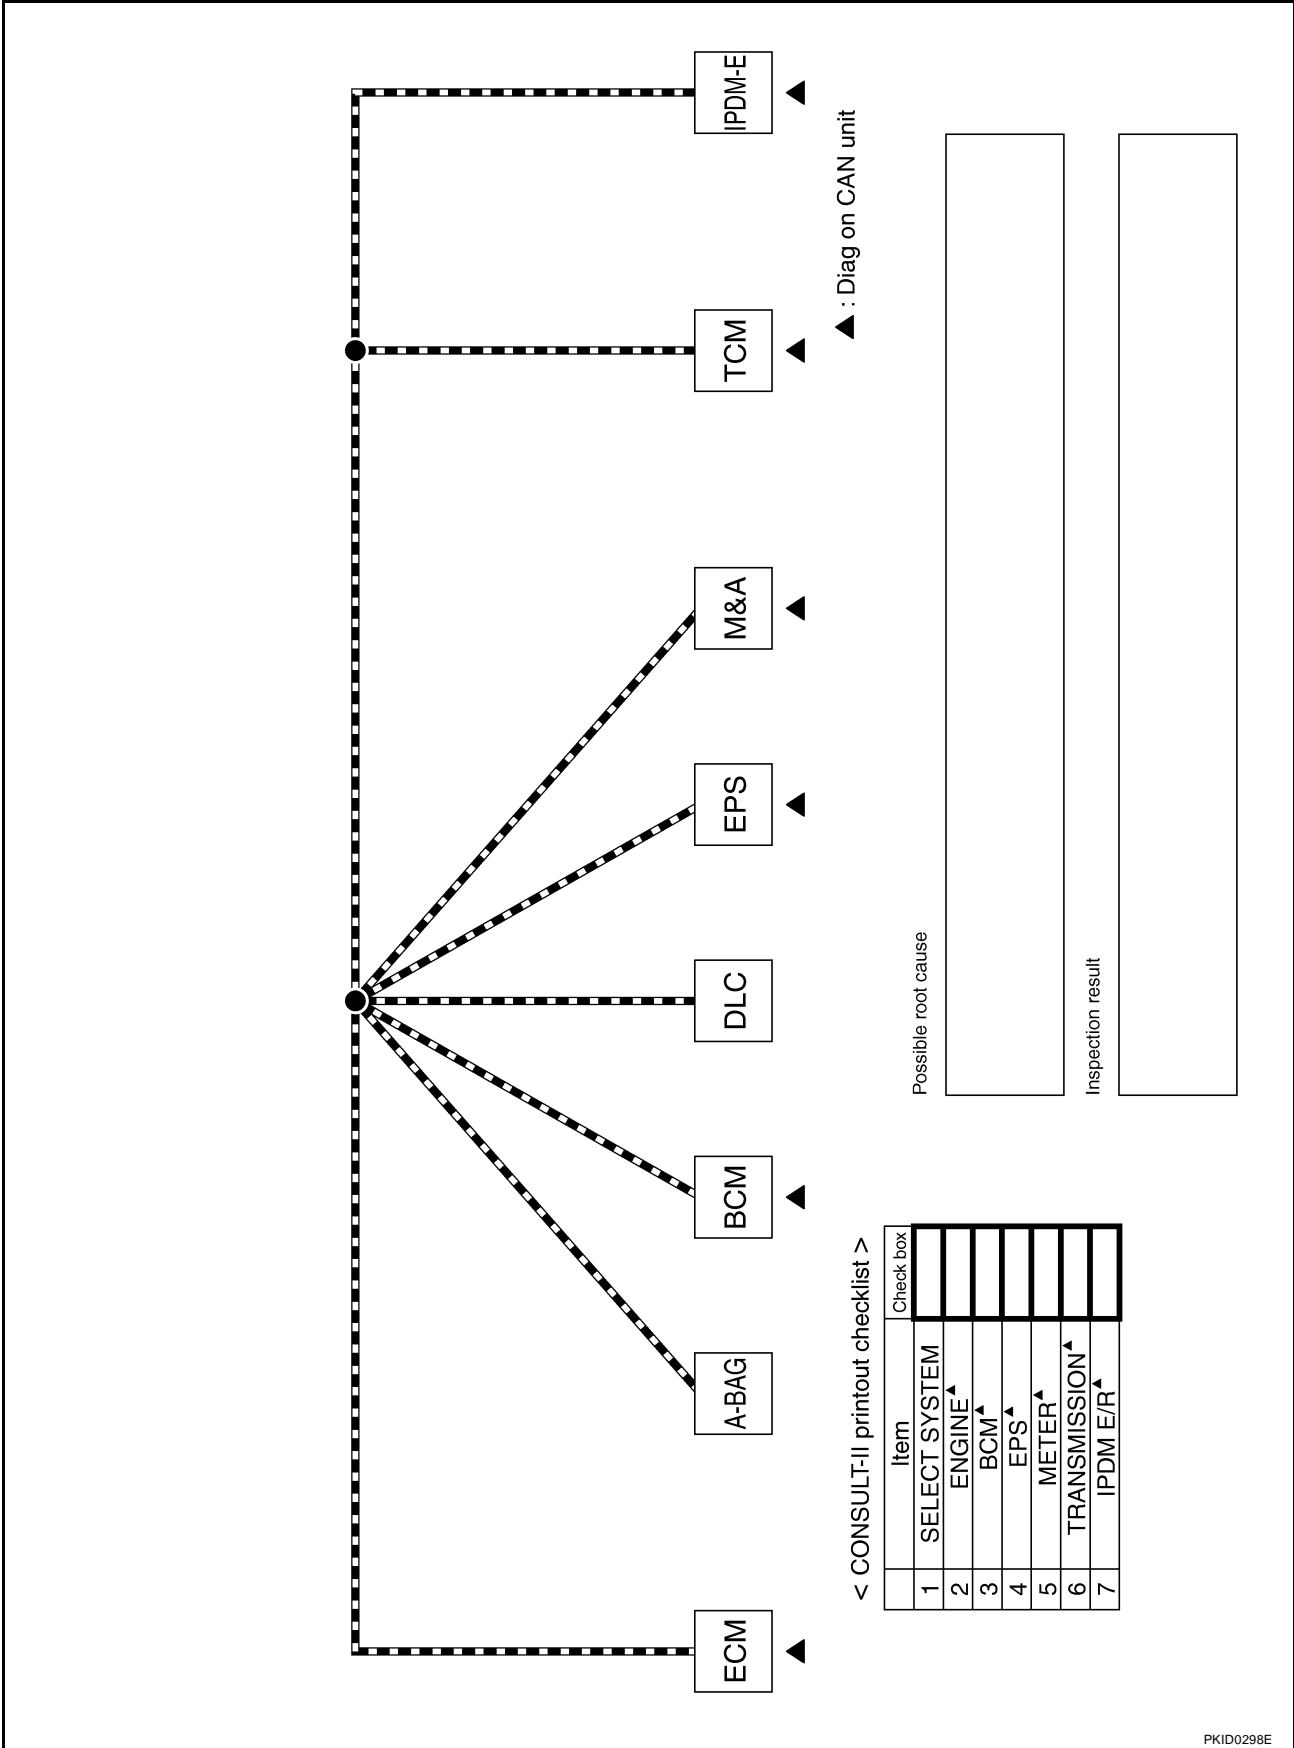

PKID0298E


TROUBLE DIAGNOSIS

[CAN]

UKS005WY

CAN System (Type 8) DIAGNOSIS SHEET

A
B
C
D
E
F
G
H
I
J
LAN
L
M

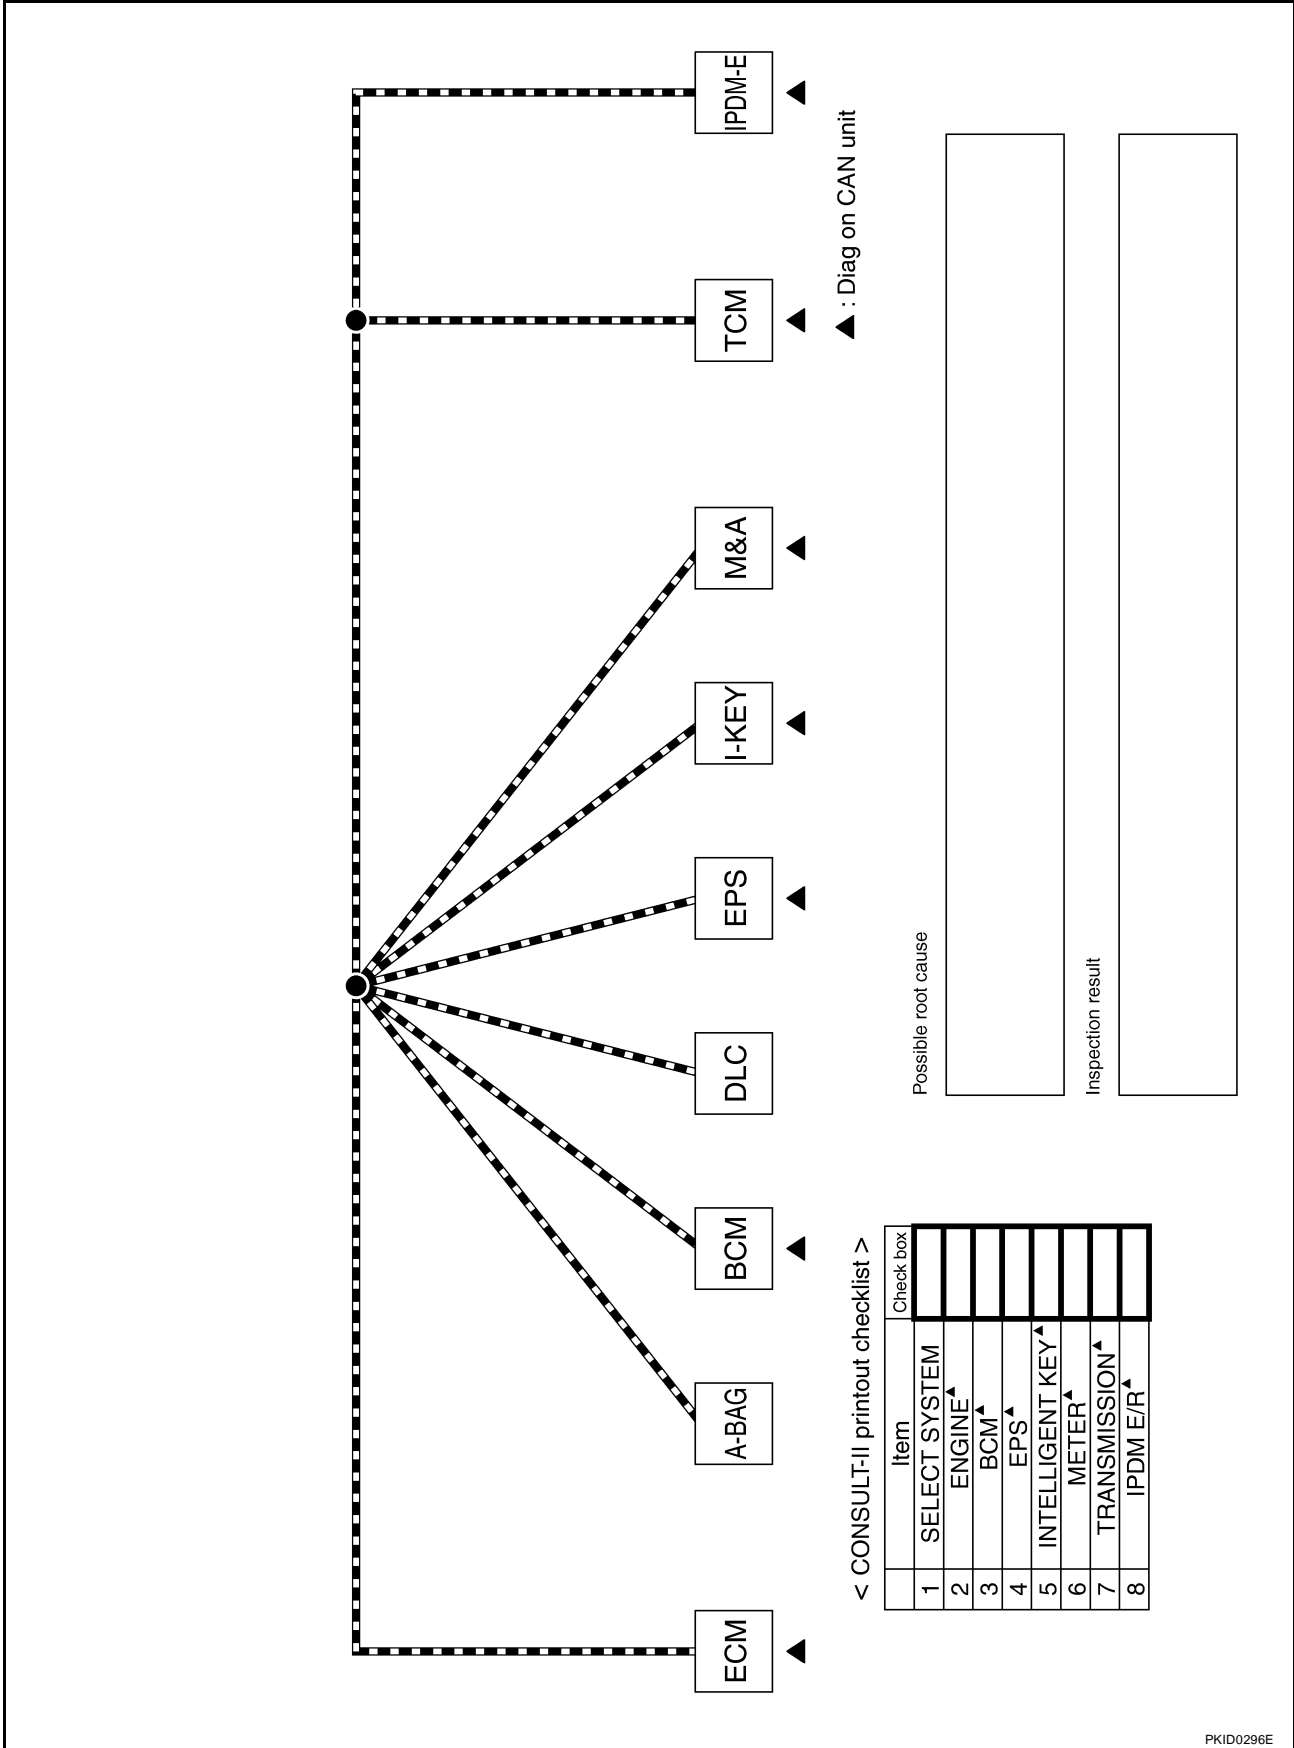


PKID0296E

TROUBLE DIAGNOSIS

[CAN]

CAN System (Type 9) DIAGNOSIS SHEET

UKS005WZ

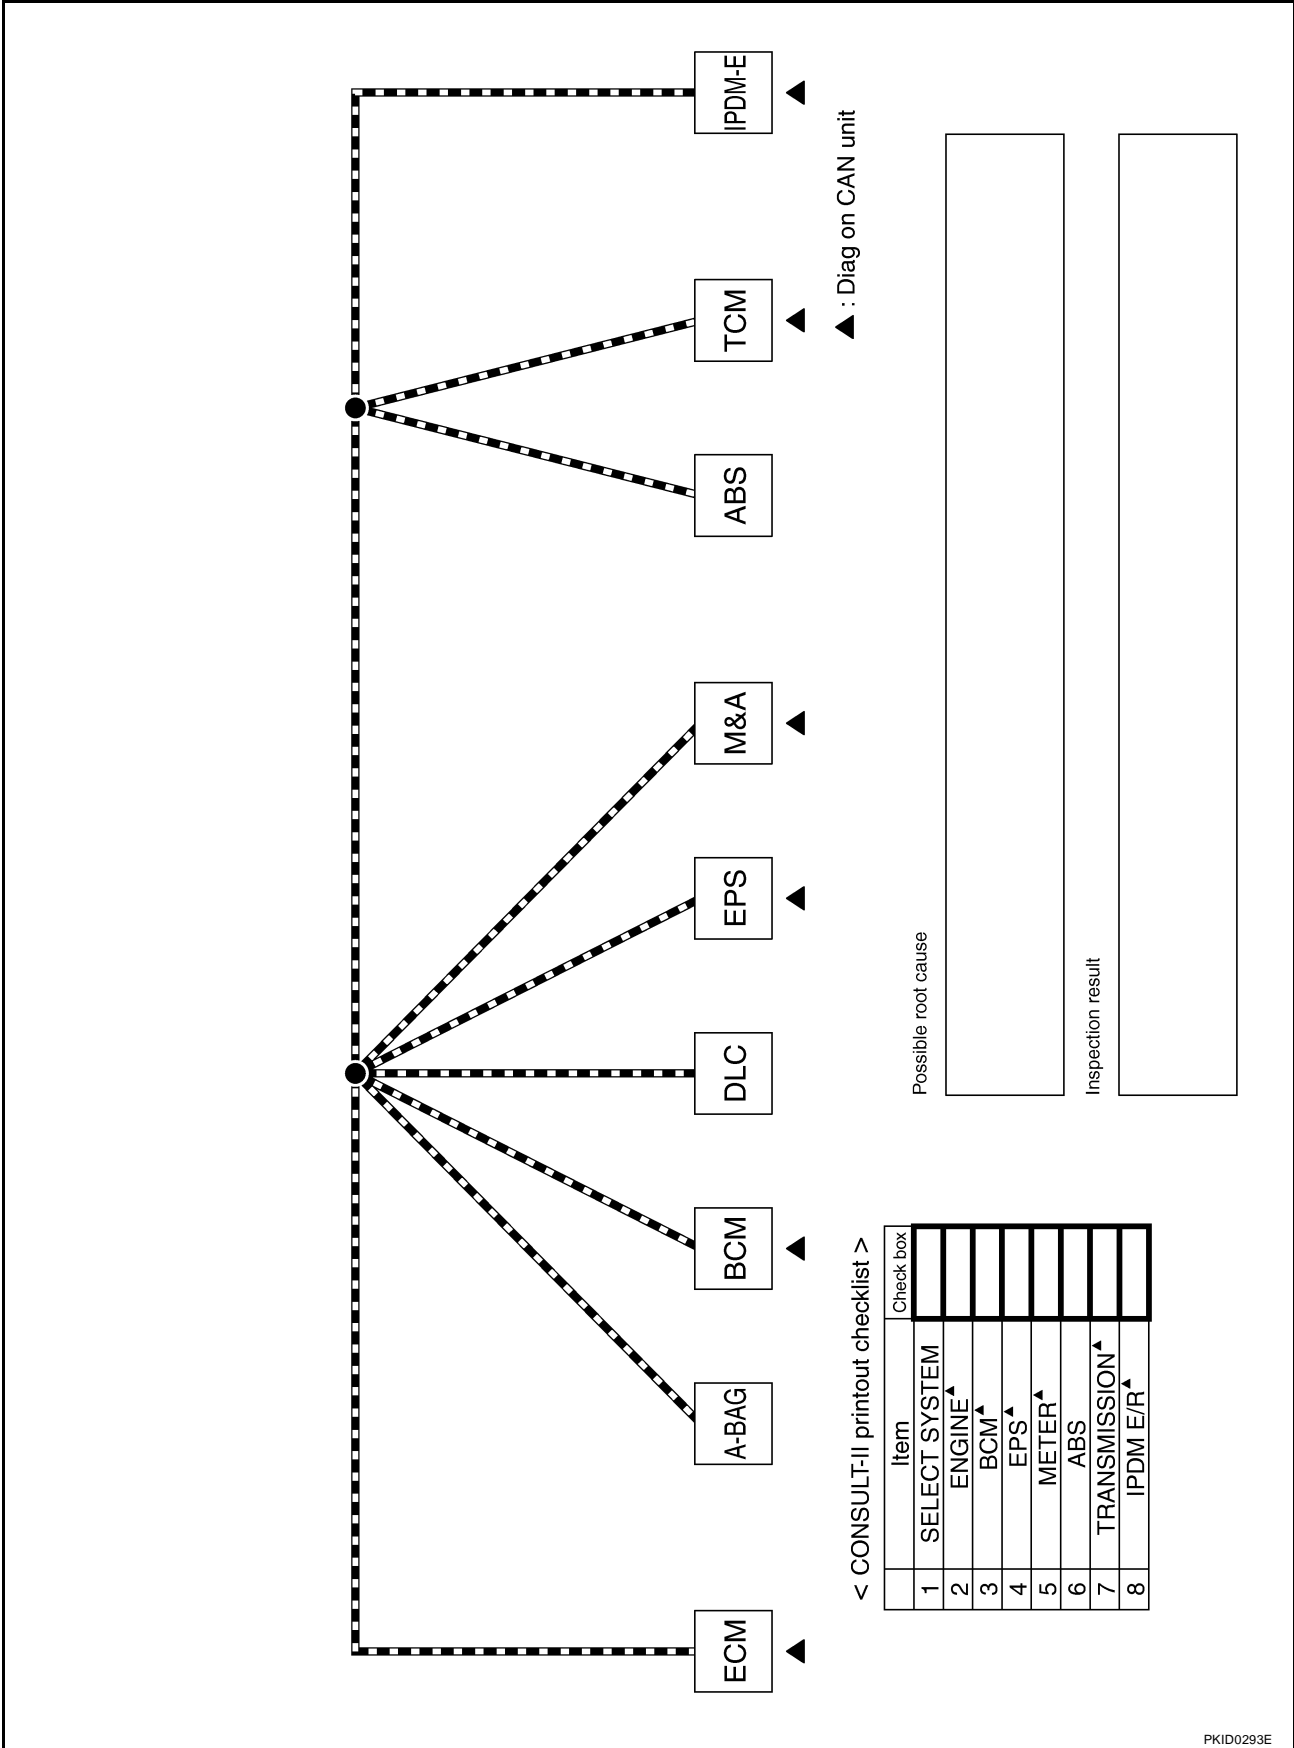

PKID0293E


TROUBLE DIAGNOSIS

[CAN]

UKS005X0

CAN System (Type 10) DIAGNOSIS SHEET


A
B
C
D
E
F
G
H
I
J
LAN
L
M

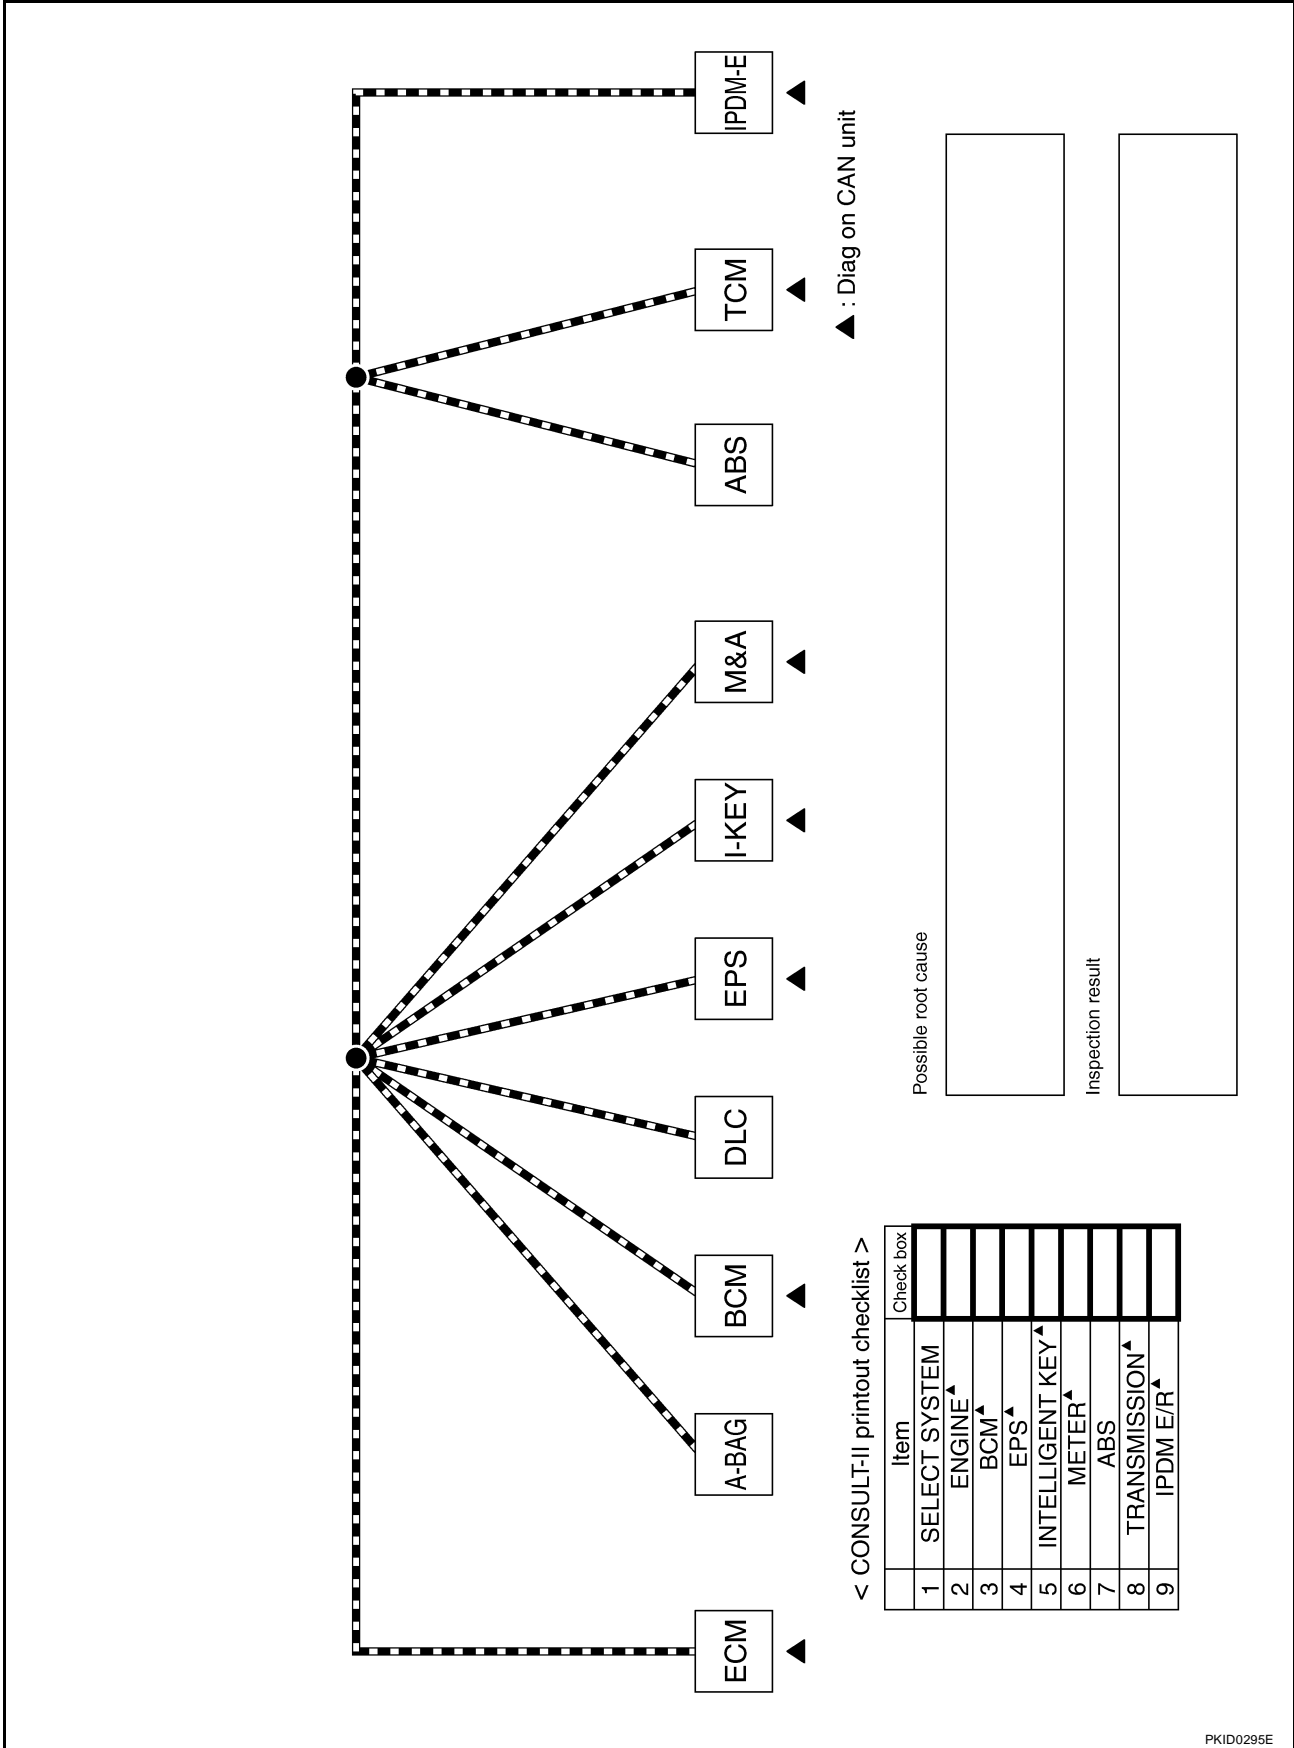

PKID0295E

Component Parts Location

UKS005VZ

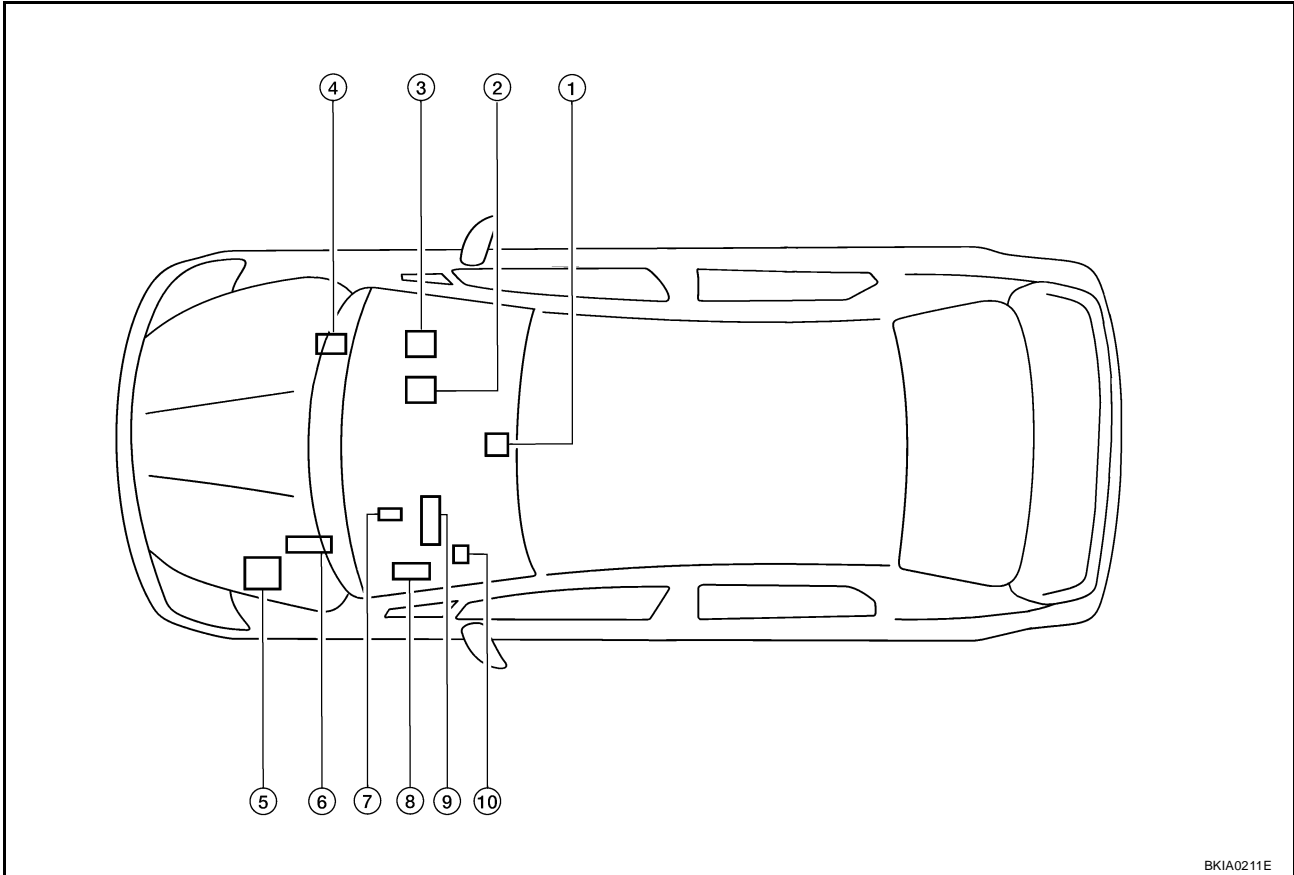

BKIA0211E

- | | | |
|--|-----------------------------|--------------------------|
| 1. Air bag diagnosis sensor unit M35 | 2. Intelligent Key unit M52 | 3. BCM M18 |
| 4. ABS actuator and electric unit (control unit) E33 | 5. IPDM E/R E46 | 6. ECM E16 |
| 7. EPS control unit M53 | 8. TCM E31 | 9. Combination meter M24 |
| 10. Data link connector M22 | | |

Harness Layout

UKS005W0

Refer to [PG-39, "Harness Layout"](#) .

TROUBLE DIAGNOSIS

[CAN]

UKS005WH

Malfunction Area Chart

MAIN LINE

Malfunction Area	Reference
Main line between data link connector and TCM	LAN-72, "Main Line Between Data Link Connector and TCM"
Main line between data link connector and ABS actuator and electric unit (control unit)	LAN-73, "Main Line Between Data Link Connector and ABS Actuator and Electric Unit (Control Unit)"

BRANCH LINE

Malfunction Area	Reference
ECM branch line circuit	LAN-74, "ECM Branch Line Circuit"
BCM branch line circuit	LAN-74, "BCM Branch Line Circuit"
Data link connector branch line circuit	LAN-75, "Data Link Connector Branch Line Circuit"
EPS control unit branch line circuit	LAN-76, "EPS Control Unit Branch Line Circuit"
Intelligent Key unit branch line circuit	LAN-76, "Intelligent Key Unit Branch Line Circuit"
Combination meter branch line circuit	LAN-77, "Combination Meter Branch Line Circuit"
ABS actuator and electric unit (control unit) branch line circuit	LAN-78, "ABS Actuator and Electric Unit (Control Unit) Branch Line Circuit"
TCM branch line circuit	LAN-78, "TCM Branch Line Circuit"
IPDM E/R branch line circuit	LAN-79, "IPDM E/R Branch Line Circuit"

SHORT CIRCUIT

Malfunction Area	Reference
CAN communication circuit	LAN-80, "CAN Communication Circuit"

A
B
C
D
E
F
G
H
I
J
L
M

LAN

Main Line Between Data Link Connector and TCM

INSPECTION PROCEDURE

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector M69
 - Harness connector E7

OK or NG

- OK >> GO TO 2.
 NG >> Repair the terminal and connector.

2. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connectors M69 and E7.
2. Check the continuity between the data link connector and the harness connector.

Data link connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M22	6	M69	32A	Yes
	14		31A	Yes

OK or NG

- OK >> GO TO 3.
 NG >> Repair the main line between the data link connector and the harness connector M69.

3. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of TCM.
2. Check the continuity between the harness connector and the TCM harness connector.

Harness connector		TCM harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
E7	32A	E31	5	Yes
	31A		6	Yes

OK or NG

- OK >> ● Present error: Check the following items again.
- Decision of CAN system type.
 - Not received CONSULT-II data (SELECT SYSTEM, SELF-DIAG RESULTS, CAN DIAG SUPPORT MNTR).
 - Procedure for detecting root cause.
- Past error: Error was detected in the main line between the data link connector and the TCM.
- NG >> Repair the main line between the harness connector E7 and the TCM.

Main Line Between Data Link Connector and ABS Actuator and Electric Unit (Control Unit)

UKS005WT

INSPECTION PROCEDURE

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector M69
 - Harness connector E7

OK or NG

- OK >> GO TO 2.
 NG >> Repair the terminal and connector.

2. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connectors M69 and E7.
2. Check the continuity between the data link connector and the harness connector.

Data link connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M22	6	M69	32A	Yes
	14		31A	Yes

OK or NG

- OK >> GO TO 3.
 NG >> Repair the main line between the data link connector and the harness connector M69.

3. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of ABS actuator and electric unit (control unit).
2. Check the continuity between the harness connector and the ABS actuator and electric unit (control unit) harness connector.

Harness connector		ABS actuator and electric unit (control unit) harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
E7	32A	E33	26	Yes
	31A		15	Yes

OK or NG

- OK >> ● Present error: Check the following items again.
- Decision of CAN system type.
 - Not received CONSULT-II data (SELECT SYSTEM, SELF-DIAG RESULTS, CAN DIAG SUPPORT MNTR).
 - Procedure for detecting root cause.
 - Past error: Error was detected in the main line between the data link connector and the ABS actuator and electric unit (control unit).
- NG >> Repair the main line between the harness connector E7 and the ABS actuator and electric unit (control unit).

ECM Branch Line Circuit

INSPECTION PROCEDURE

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - ECM connector
 - Harness connector E7
 - Harness connector M69

OK or NG

- OK >> GO TO 2.
 NG >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of ECM.
2. Check the resistance between the ECM harness connector terminals.

ECM harness connector		Resistance (Ω)
Connector No.	Terminal No.	
E16	84 83	Approx. 108 – 132

OK or NG

- OK >> GO TO 3.
 NG >> Repair the ECM branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of ECM. Refer to [EC-144, "POWER SUPPLY AND GROUND CIRCUIT"](#) .

OK or NG

- OK >> ● Present error: Replace the ECM. Refer to [EC-77, "Procedure After Replacing ECM"](#) .
 ● Past error: Error was detected in the ECM branch line.
 NG >> Repair the power supply and the ground circuit.

BCM Branch Line Circuit

INSPECTION PROCEDURE

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the BCM for damage, bend and loose connection (unit side and connector side).

OK or NG

- OK >> GO TO 2.
 NG >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of BCM.
2. Check the resistance between the BCM harness connector terminals.

BCM harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M18	39	40	Approx. 54 – 66

OK or NG

- OK >> GO TO 3.
 NG >> Repair the BCM branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of BCM. Refer to [BCS-16, "BCM Power Supply and Ground Circuit Check"](#).

OK or NG

- OK >> ● Present error: Replace the BCM. Refer to [BCS-25, "Removal and Installation of BCM"](#).
 ● Past error: Error was detected in the BCM branch line.
 NG >> Repair the power supply and the ground circuit.

Data Link Connector Branch Line Circuit

UKS005WL

INSPECTION PROCEDURE

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the data link connector for damage, bend and loose connection (connector side and harness side).

OK or NG

- OK >> GO TO 2.
 NG >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

Check the resistance between the data link connector terminals.

Data link connector			Resistance (Ω)
Connector No.	Terminal No.		
M22	6	14	Approx. 54 – 66

OK or NG

- OK >> ● Present error: Check the following items again.
 – Decision of CAN system type.
 – Not received CONSULT-II data (SELECT SYSTEM, SELF-DIAG RESULTS, CAN DIAG SUPPORT MNTR).
 – Procedure for detecting root cause.
 ● Past error: Error was detected in the data link connector branch line circuit.
 NG >> Repair the data link connector branch line.

EPS Control Unit Branch Line Circuit

INSPECTION PROCEDURE

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the EPS control unit for damage, bend and loose connection (unit side and connector side).

OK or NG

- OK >> GO TO 2.
NG >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of EPS control unit.
2. Check the resistance between the EPS control unit harness connector terminals.

EPS control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M53	9	16	Approx. 54 – 66

OK or NG

- OK >> GO TO 3.
NG >> Repair the EPS control unit branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of EPS control unit. Refer to [STC-9, "Wiring Diagram — EPS —"](#).

OK or NG

- OK >> ● Present error: Replace the EPS control unit. Refer to [PS-9, "Removal and Installation"](#) .
● Past error: Error was detected in the EPS control unit branch line.
- NG >> Repair the power supply and the ground circuit.

Intelligent Key Unit Branch Line Circuit

INSPECTION PROCEDURE

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the Intelligent Key unit for damage, bend and loose connection (unit side and connector side).

OK or NG

- OK >> GO TO 2.
NG >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of Intelligent Key unit.
2. Check the resistance between the Intelligent Key unit harness connector terminals.

Intelligent Key unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M52	2	3	Approx. 54 – 66

OK or NG

- OK >> GO TO 3.
- NG >> Repair the Intelligent Key unit branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of Intelligent Key unit. Refer to [BL-123, "Power Supply and Ground Circuit Check"](#) .

OK or NG

- OK >> ● Present error: Replace the Intelligent Key unit. Refer to [BL-160, "Removal and Installation of Intelligent Key Unit"](#) .
 - Past error: Error was detected in the Intelligent Key unit branch line.
- NG >> Repair the power supply and the ground circuit.

Combination Meter Branch Line Circuit

UKS005WO

INSPECTION PROCEDURE

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the combination meter for damage, bend and loose connection (unit side and connector side).

OK or NG

- OK >> GO TO 2.
- NG >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of combination meter.
2. Check the resistance between the combination meter harness connector terminals.

Combination meter harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M24	1	2	Approx. 54 – 66

OK or NG

- OK >> GO TO 3.
- NG >> Repair the combination meter branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of combination meter. Refer to [DI-17, "Power Supply and Ground Circuit Inspection"](#) .

OK or NG

- OK >> ● Present error: Replace the combination meter. Refer to [DI-23, "Removal and Installation"](#) .
 - Past error: Error was detected in the combination meter branch line.
- NG >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
LAN
L
M

ABS Actuator and Electric Unit (Control Unit) Branch Line Circuit

UKS005WP

INSPECTION PROCEDURE

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the ABS actuator and electric unit (control unit) for damage, bend and loose connection (unit side and connector side).

OK or NG

- OK >> GO TO 2.
 NG >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of ABS actuator and electric unit (control unit).
2. Check the resistance between the ABS actuator and electric unit (control unit) harness connector terminals.

ABS actuator and electric unit (control unit) harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E33	26	15	Approx. 54 – 66

OK or NG

- OK >> GO TO 3.
 NG >> Repair the ABS actuator and electric unit (control unit) branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of ABS actuator and electric unit (control unit). Refer to [BRC-29, "ABS Control Unit Power and Ground Systems Inspection"](#) .

OK or NG

- OK >> ● Present error: Replace the ABS actuator and electric unit (control unit). Refer to [BRC-36, "Removal and Installation"](#) .
 ● Past error: Error was detected in the ABS actuator and electric unit (control unit) branch line.
 NG >> Repair the power supply and the ground circuit.

TCM Branch Line Circuit

UKS005WQ

INSPECTION PROCEDURE

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the TCM for damage, bend and loose connection (unit side and connector side).

OK or NG

- OK >> GO TO 2.
 NG >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of TCM.
2. Check the resistance between the TCM harness connector terminals.

TCM harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E31	5	6	Approx. 54 – 66

OK or NG

- OK >> GO TO 3.
 NG >> Repair the TCM branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of TCM. Refer to [AT-183, "MAIN POWER SUPPLY AND GROUND CIRCUIT"](#) (Models with A/T), [CVT-42, "Circuit Diagram"](#) (Models with CVT).

OK or NG

- OK >> ● Present error: Replace the TCM. Refer to [AT-228, "Removal and Installation"](#) (Models with A/T), [CVT-190, "Removal and Installation"](#) (Models with CVT).
 ● Past error: Error was detected in the TCM branch line.
- NG >> Repair the power supply and the ground circuit.

IPDM E/R Branch Line Circuit

UKS005WR

INSPECTION PROCEDURE

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - Models with ABS and/or TCM:
 - IPDM E/R connector
 - Models without ABS and TCM:
 - IPDM E/R connector
 - Harness connector E7
 - Harness connector M69

OK or NG

- OK >> GO TO 2.
 NG >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of IPDM E/R.
2. Check the resistance between the IPDM E/R harness connector terminals.

IPDM E/R harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E46	41	40	Approx. 108 – 132

OK or NG

- OK >> GO TO 3.
 NG >> Repair the IPDM E/R branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of IPDM E/R. Refer to [PG-28, "IPDM E/R Power/Ground Circuit Inspection"](#) .

OK or NG

- OK >> ● Present error: Replace the IPDM E/R. Refer to [PG-29, "Removal and Installation of IPDM E/R"](#)
- Past error: Error was detected in the IPDM E/R branch line.
- NG >> Repair the power supply and the ground circuit.

CAN Communication Circuit

UKS005WS

INSPECTION PROCEDURE

1. CONNECTOR INSPECTION

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect all the unit connectors on CAN communication system.
4. Check terminals and connectors for damage, bend and loose connection.

OK or NG

- OK >> GO TO 2.
- NG >> Repair the terminal and connector.

2. CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector terminals.

Data link connector			Continuity
Connector No.	Terminal No.		
M22	6	14	No

OK or NG

- OK >> GO TO 3.
- NG >> Check the harness and repair the root cause.

3. CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector and the ground.

Data link connector		Ground	Continuity
Connector No.	Terminal No.		
M22	6		No
	14		No

OK or NG

- OK >> GO TO 4.
- NG >> Check the harness and repair the root cause.


4. CHECK ECM AND IPDM E/R TERMINATION CIRCUIT

1. Remove the ECM and the IPDM E/R.
2. Check the resistance between the ECM terminals.

ECM		Resistance (Ω)
Terminal No.		
84	83	Approx. 108 – 132

3. Check the resistance between the IPDM E/R terminals.

IPDM E/R		Resistance (Ω)
Terminal No.		
41	40	Approx. 108 – 132

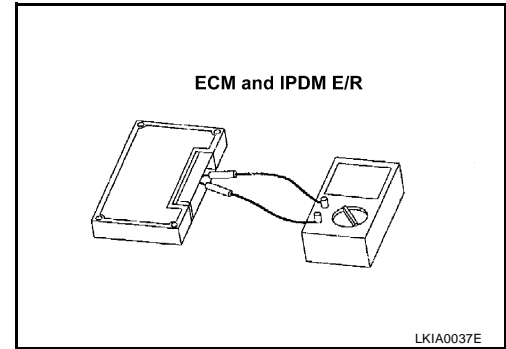

OK or NG

- OK >> GO TO 5.
- NG >> Replace the ECM and/or the IPDM E/R.

5. CHECK SYMPTOM

Connect all the connectors. Check if the symptoms described in the “Symptom (Results from interview with customer)” are reproduced.

Inspection result

- Reproduced>>GO TO 6.
- Non-reproduced>>Start the diagnosis again. Follow the trouble diagnosis procedure when past error is detected.

6. CHECK UNIT REPRODUCTION

Perform the reproduction test as per the following procedure for each unit.

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect one of the unit connectors of CAN communication system.

NOTE:

The ECM and the IPDM E/R have a termination circuit. Check other units first.

4. Connect the battery cable to the negative terminal. Check if the symptoms described in the “Symptom (Results of interview with customer)” are reproduced.

NOTE:

Although unit-related error symptoms occur, do not confuse them with other symptoms.

Inspection result

- Reproduced>>Connect the connector. Check other units as per the above procedure.
- Non-reproduced>>Replace unit whose connector was disconnected.

A
B
C
D
E
F
G
H
I
J
L
M

LAN

