
ALPHABETICAL INDEX

Numerics

5TH MAIN GEAR ASSEMBLY TM-23

A

A-BAG BRANCH LINE CIRCUIT . LAN-49, LAN-62,
LAN-76, LAN-90, LAN-105, LAN-119

A/C INDICATOR..... HAC-39

A/C ON SIGNAL..... HAC-32

ABBREVIATIONS GI-14

ABS ACTUATOR AND ELECTRIC UNIT
(CONTROL UNIT).....BRC-36, BRC-144

ABS BRANCH LINE CIRCUIT LAN-45, LAN-60,
LAN-73, LAN-87, LAN-101, LAN-116

ABS FUNCTION DOES NOT OPERATE. BRC-136

ABS WARNING LAMP..... BRC-128

ACC WARNING DOES NOT OPERATE... DLK-128

ACCELERATOR CONTROL SYSTEM ACC-3

ACCELERATOR PEDAL RELEASED POSITION
LEARNING.....EC-128

ACTIVE GRILLE SHUTTEREXT-13, EXT-33

ADDITIONAL SERVICE WHEN REPLACING BCM
BCS-58, BCS-121

ADDITIONAL SERVICE WHEN REPLACING
CONTROL UNITSEC-49

ADDITIONAL SERVICE WHEN REPLACING
CONTROL VALVE OR TRANSAXLE
ASSEMBLY TM-127

ADDITIONAL SERVICE WHEN REPLACING ECM
EC-125

ADDITIONAL SERVICE WHEN REPLACING TCM
TM-125

AIR BAG DIAGNOSIS SENSOR UNIT SR-30

AIR BREATHER HOSE..... TM-22, TM-240

AIR CLEANER AND AIR DUCT.....EM-26

AIR CLEANER FILTER.....EM-19

AMBIENT SENSORMWI-116

AMBIENT SENSOR SIGNAL CIRCUIT ...MWI-104

ANTENNA FEEDER AV-61, AV-124, AV-256

APPLICATION NOTICE ... MWI-5, MWI-55, WCS-3

AROUND VIEW MONITOR CONTROL UNIT.....
AV-152, AV-249

ASCD BRAKE SWITCH..... EC-437

AUDIO SYSTEMAV-48, AV-108

AUDIO UNITAV-18, AV-53, AV-76, AV-113

AUTO DOOR LOCK OPERATION DOES NOT
OPERATE DLK-120

AUTO OPERATION DOES NOT OPERATE BUT
MANUAL OPERATE NORMALLY (DRIVER
SIDE)PWC-52

AUTOMATIC SPEED CONTROL DEVICE (ASCD)
CCS-3

AUXILIARY INPUT JACK AV-107, AV-117, AV-227,
AV-246

AV BRANCH LINE CIRCUITLAN-50, LAN-77,
LAN-106, LAN-120

AV CONTROL UNITAV-148, AV-241

AVM BRANCH LINE CIRCUITLAN-48, LAN-75,
LAN-104

B

B TERMINAL CIRCUIT CHG-23, STR-27

B0001, B0002 DRIVER AIRBAG MODULE SRC-42

B0010, B0011 PASSENGER AIRBAG MODULE....
SRC-45

B0020 SIDE AIRBAG MODULE LH SRC-47

B0021 SIDE CURTAIN AIR BAG MODULE LH
SRC-51

B0028 SIDE AIRBAG MODULE RH SRC-49

B0029 SIDE CURTAIN AIR BAG MODULE RH.....
SRC-53

B0091 FRONT SIDE AIR BAG SATELLITE
SENSOR LH SRC-71

B0092 REAR SIDE AIR BAG SATELLITE SENSOR
LH..... SRC-77

B0093 FRONT DOOR SATELLITE SENSOR LH ...
SRC-65

B0094 CRASH ZONE SENSOR SRC-63

B0096 FRONT SIDE AIR BAG SATELLITE
SENSOR RH..... SRC-74

B0097 REAR SIDE AIR BAG SATELLITE SENSOR
RH SRC-80

B0098 FRONT DOOR SATELLITE SENSOR RH...
SRC-67

B00A0 OCS SYSTEM..... SRC-83

B00D2 FRONT PASSENGER AIR BAG ON
INDICATOR..... SRC-88

B00D5 FRONT PASSENGER AIR BAG OFF
INDICATOR..... SRC-90

B1428 SEAT BELT BUCKLE SWITCH LH. SRC-59

B1429 SEAT BELT BUCKLE SWITCH RH SRC-61

B142A IGNITION VOLTAGE SRC-92

B142X COLLISION DETECTION..... SRC-96

B1430 SEAT BELT PRE-TENSIONER..... SRC-55

B1431 SEAT BELT PRE-TENSIONER..... SRC-57

B14XX AIR BAG DIAGNOSIS SENSOR UNIT
SRC-86

B1500 DOOR SATELLITE SENSOR SRC-69

B2098 IGNITION RELAY ON STUCK..... PCS-27

B2099 IGNITION RELAY OFF STUCK PCS-28

B210B STARTER CONTROL RELAY SEC-99

B210C STARTER CONTROL RELAY SEC-100

B210D STARTER RELAY SEC-102

B210E STARTER RELAY..... SEC-104

B210F SHIFT POSITION/CLUTCH INTERLOCK
SWITCH SEC-106

B2110 SHIFT POSITION/CLUTCH INTERLOCK
SWITCH SEC-108

B2190, P1614 NATS ANTENNA AMP. SEC-144
 B2191, P1615 DIFFERENCE OF KEY SEC-147
 B2192 ID DISCORD, IMMU-ECM SEC-54
 B2192, P1611 ID DISCORD, IMMU-ECM SEC-148
 B2193 CHAIN OF ECM-IMMU SEC-55
 B2193, P1612 CHAIN OF ECM-IMMU SEC-150
 B2195 ANTI-SCANNING SEC-56, SEC-151
 B2196 DONGLE UNIT SEC-57, SEC-152
 B2198 NATS ANTENNA AMP. SEC-59
 B2205 VEHICLE SPEED MWI-40, MWI-95
 B2267 ENGINE SPEED MWI-41, MWI-96
 B2268 WATER TEMP MWI-42, MWI-97
 B2555 STOP LAMP SEC-62
 B2556 PUSH-BUTTON IGNITION SWITCH SEC-65
 B2557 VEHICLE SPEED SEC-67
 B2562 LOW VOLTAGE BCS-66
 B2601 SHIFT POSITION SEC-68
 B2602 SHIFT POSITION SEC-70
 B2603 SHIFT POSITION SEC-73
 B2604 SHIFT POSITION SEC-77
 B2605 SHIFT POSITION SEC-80
 B2608 STARTER RELAY SEC-82
 B260F ENGINE STATUS SEC-84
 B2614 ACC RELAY CIRCUIT PCS-56
 B2615 BLOWER RELAY CIRCUIT PCS-58
 B2616 IGNITION RELAY CIRCUIT PCS-60
 B2618 BCM PCS-62
 B261A PUSH-BUTTON IGNITION SWITCH PCS-63
 B261F ASCD CLUTCH SWITCH SEC-85
 B2620 PARK/NEUTRAL POSITION SWITCH
 SEC-88
 B2621 INSIDE ANTENNA DLK-65
 B2622 INSIDE ANTENNA DLK-67
 B2623 INSIDE ANTENNA DLK-69
 B2626 OUTSIDE ANTENNA DLK-71
 B2627 OUTSIDE ANTENNA DLK-73
 B2628 OUTSIDE ANTENNA DLK-75
 B26E8 CLUTCH INTERLOCK SWITCH SEC-91
 B26F1 IGNITION RELAY PCS-65
 B26F2 IGNITION RELAY PCS-66
 B26F3 STARTER CONTROL RELAY SEC-94
 B26F4 STARTER CONTROL RELAY SEC-95
 B26F6 BCM PCS-68
 B26F7 BCM SEC-96
 B26FB CLUTCH SWITCH SEC-97
 B26FC KEY REGISTRATION SEC-98
 BACK DOOR DLK-159, DLK-286
 BACK DOOR LOCK DLK-176, DLK-303
 BACK DOOR LOCK ACTUATOR RELAY ... DLK-86
 BACK DOOR OUTER FINISHER EXT-48
 BACK DOOR REQUEST SWITCH DLK-96
 BACK DOOR TRIM INT-36
 BACK DOOR WINDOW GLASS GW-19
 BACK-UP LAMP EXL-67
 BASE AUDIO AV-24
 BASIC INSPECTION EC-133

BATTERY PG-61, PG-70
 BATTERY CURRENT SENSOR PG-73
 BATTERY SAVER OUTPUT/POWER SUPPLY
 CIRCUIT INL-41
 BATTERY TERMINAL WITH FUSIBLE LINK PG-72
 BCM BCS-30, BCS-52, BCS-101, BCS-117, DEF-11,
 DLK-35, INL-20, PWC-13, WT-14
 BCM (BODY CONTROL MODULE) BCS-74,
 BCS-137, MWI-25, MWI-78, PCS-76
 BCM BRANCH LINE CIRCUIT LAN-55, LAN-67,
 LAN-82, LAN-95, LAN-111, LAN-125
 BCM, COMBINATION METER WCS-25
 BCM, ECM, IPDM E/R HAC-21
 BCM, IPDM E/R DLK-205, EXL-24, PCS-41, WW-21
 BLOWER FAN ON SIGNAL HAC-35
 BLUETOOTH® ANTENNA AV-57, AV-120
 BLUETOOTH® CONTROL SIGNAL CIRCUIT AV-43
 BLUETOOTH® CONTROL UNIT AV-21, AV-56,
 AV-119
 BLUETOOTH® VOICE SIGNAL CIRCUIT AV-41
 BODY ALIGNMENT BRM-41
 BODY COMPONENT PARTS BRM-12
 BODY EXTERIOR PAINT COLOR BRM-2
 BODY SEALING BRM-19
 BODY SIDE TRIM INT-21
 BOTH DOORS MIRROR DEFOGGER DON'T
 OPERATE BUT REAR WINDOW DEFOGGER
 OPERATES DEF-32
 BOTH SIDE FRONT FOG LAMPS ARE NOT
 TURNED ON EXL-96
 BOTH SIDE HEADLAMPS (LO) ARE NOT TURNED
 ON EXL-94
 BOTH SIDE HEADLAMPS DO NOT SWITCH TO
 HIGH BEAM EXL-93
 BRAKE BOOSTER BR-15
 BRAKE BOOSTER AND CHECK VALVE BR-31
 BRAKE CONTROL SYSTEM BRC-44
 BRAKE FLUID BR-12
 BRAKE MASTER CYLINDER BR-14, BR-28
 BRAKE PEDAL BR-9, BR-20
 BRAKE PIPING BR-22
 BRAKE WARNING LAMP BRC-129

C

C1101, C1102, C1103, C1104 WHEEL SENSOR ...
 BRC-58
 C1105, C1106, C1107, C1108 WHEEL SENSOR ...
 BRC-63
 C1109 POWER AND GROUND SYSTEM . BRC-70
 C1110, C1153 ABS ACTUATOR AND ELECTRIC
 UNIT (CONTROL UNIT) BRC-72
 C1111 ABS MOTOR, MOTOR RELAY SYSTEM
 BRC-74
 C1115 WHEEL SENSOR BRC-77
 C1116 STOP LAMP SWITCH BRC-84

C1120, C1122, C1124, C1126 ABS IN VALVE SYSTEM BRC-88	COMBINATION METER BUZZER DLK-78
C1121, C1123, C1125, C1127 ABS OUT VALVE SYSTEM BRC-90	COMBINATION SWITCH BCS-75, BCS-138, EXL-107
C1130 ENGINE SIGNAL BRC-92	COMBINATION SWITCH INPUT CIRCUIT BCS-68, BCS-130
C1140 ACTUATOR RELAY SYSTEM BRC-94	COMBINATION SWITCH OUTPUT CIRCUIT BCS-70, BCS-132
C1142 PRESS SENSOR BRC-96	COMBINATION SWITCH SYSTEM SYMPTOMS... BCS-72, BCS-134
C1143 STEERING ANGLE SENSOR BRC-99	COMPRESSION PRESSURE EM-13
C1144 INCOMPLETE STEERING ANGLE SENSOR ADJUSTMENT BRC-103	COMPRESSOR HA-26
C1145, C1146 YAW RATE/SIDE/DECEL G SENSOR BRC-105	COMPRESSOR DOES NOT OPERATE... HAC-50
C1154 TRANSMISSION RANGE SWITCH BRC-106	CONDENSER DEF-38, HA-31
C1155 BRAKE FLUID LEVEL SWITCH... BRC-108	CONFIGURATION (BCM) BCS-59, BCS-123
C1164, C1165 CV SYSTEM BRC-112	CONSOLE POWER SOCKET PWO-6
C1166, C1167 SV SYSTEM BRC-114	CONSULT/GST CHECKING SYSTEM GI-50
C1170 VARIANT CODING BRC-116	CONTROL CABLE TM-234
C1601 BATTERY POWER SUPPLY STC-18	CONTROL LINKAGE TM-20
C1604 TORQUE SENSOR STC-21	COOLER PIPE AND HOSE HA-28
C1606 EPS MOTOR STC-23	COOLING FAN CO-16, EC-441
C1607, C1608 EPS CONTROL UNIT STC-25	CORROSION PROTECTION BRM-16
C1609 VEHICLE SPEED SIGNAL STC-26	COWL TOP EXT-36
C1610 ENGINE STATUS SIGNAL STC-27	CRASH ZONE SENSOR SR-24
C1704, C1705, C1706, C1707 LOW TIRE PRESSURE WT-25	CSC (CONCENTRIC SLAVE CYLINDER).... CL-17
C1708, C1709, C1710, C1711 TRANSMITTER (NO DATA) WT-27	CVT CONTROL SYSTEM TM-112, TM-223
C1716, C1717, C1718, C1719 TRANSMITTER (PRESSURE DATA) WT-30	CVT FLUID TM-228
C1729 VEHICLE SPEED SIGNAL WT-32	CVT FLUID FILTER TM-257
CALIBRATION OF G SENSOR TM-130	CVT OIL WARMER TM-256
CAMSHAFT EM-60	CVT POSITION TM-133
CAMSHAFT VALVE CLEARANCE EM-10	CVT SHIFT LOCK SYSTEM TM-119
CAN COMMUNICATION CIRCUIT LAN-56, LAN-68, LAN-83, LAN-96, LAN-112, LAN-126	CVT SHIFT SELECTOR TM-231
CAN SYSTEM LAN-33	CYLINDER BLOCK EM-93
CARGO LAMP CONTROL CIRCUIT INL-46	CYLINDER HEAD EM-76
CARGO ROOM LAMP INL-54	
CENTER CONSOLE ASSEMBLY IP-18	D
CENTER CONSOLE LOWER IP-20	DAYTIME LIGHT SYSTEM EXL-37
CHARGING SYSTEM CHG-9, CHG-28	DEFROSTER POSITION SIGNAL HAC-37
CHARGING SYSTEM PRELIMINARY INSPECTION CHG-20	DIAGNOSIS AND REPAIR WORK FLOW BRC-52, DEF-17, DLK-61, MWI-37, MWI-92, PCS-50, PWC-23, SEC-46, SRC-36, TM-122, WCS-32, WT-21
CHASSIS AND BODY MAINTENANCE MA-26	DIAGNOSIS SENSOR UNIT SRC-17
CLUSTER LID A IP-21	DIAGNOSIS SYSTEM (AIR BAG) SRC-14
CLUSTER LID C IP-22	DIAGNOSIS SYSTEM (AROUND VIEW MONITOR CONTROL UNIT) AV-146
CLUTCH DISC AND CLUTCH COVER CL-19	DIAGNOSIS SYSTEM (AUDIO UNIT) AV-14, AV-71
CLUTCH FLUID CL-7	DIAGNOSIS SYSTEM (AV CONTROL UNIT) AV-143
CLUTCH MASTER CYLINDER CL-13	DIAGNOSIS SYSTEM (BCM) BCS-17, BCS-89, DLK-30, DLK-201, PCS-37, SEC-18, SEC-125, WT-10
CLUTCH PEDAL CL-5, CL-11	DIAGNOSIS SYSTEM (BCM) (WITH INTELLIGENT KEY SYSTEM) DEF-7, EXL-12, HAC-17, INL-10, PWC-9, WCS-21, WW-13
CLUTCH PEDAL POSITION SWITCH EC-439	DIAGNOSIS SYSTEM (BCM) (WITHOUT INTELLIGENT KEY SYSTEM) DEF-9, EXL-16, HAC-19, INL-16, PWC-11, WCS-23, WW-15
CLUTCH PIPING CL-15	
COIL SPRING RSU-11	
COLLISION DIAGNOSIS SR-5	
COMBINATION METER MWI-21, MWI-54, MWI-74, MWI-115	

DIAGNOSIS SYSTEM (BLUETOOTH® CONTROL UNIT).....	AV-17
DIAGNOSIS SYSTEM (COMBINATION METER)...	MWI-17, MWI-69, WCS-13
DIAGNOSIS SYSTEM (ECM)	EC-50
DIAGNOSIS SYSTEM (EPS CONTROL UNIT)	STC-6
DIAGNOSIS SYSTEM (IPDM E/R) EXL-20, PCS-9, SEC-127, WW-17	
DIAGNOSIS SYSTEM (TCM).....	TM-91
DIAGNOSIS SYSTEM [ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)]... BRC-31	
DIFFERENTIAL SIDE OIL SEAL.....	TM-249
DISPLAY AUDIO	AV-80
DLC BRANCH LINE CIRCUIT..... LAN-51, LAN-63, LAN-78, LAN-91, LAN-107, LAN-121	
DOOR CABLE	HAC-56
DOOR DOES NOT LOCK/UNLOCK WITH DOOR LOCK AND UNLOCK SWITCH.....	DLK-112
DOOR DOES NOT LOCK/UNLOCK WITH DOOR REQUEST SWITCH.....	DLK-116
DOOR DOES NOT LOCK/UNLOCK WITH DRIVER SIDE DOOR LOCK KNOB OR DOOR KEY CYLINDER	DLK-115
DOOR DOES NOT LOCK/UNLOCK WITH INTELLIGENT KEY	DLK-118
DOOR LOCK ACTUATOR.....	DLK-79, DLK-242
DOOR LOCK AND UNLOCK SWITCH	DLK-89, DLK-235
DOOR LOCK OPERATION WARNING DOES NOT OPERATE.....	DLK-132
DOOR MIRROR	MIR-15
DOOR MIRROR GLASS	MIR-17
DOOR MIRROR REAR FINISHER	MIR-18
DOOR MIRROR REMOTE CONTROL SWITCH	MIR-19
DOOR MIRROR SYSTEM	MIR-4, MIR-7
DOOR MIRROR TURN SIGNAL LAMP	EXL-106
DOOR OUTSIDE MOLDING	EXT-46
DOOR REQUEST SWITCH	DLK-94, DLK-185
DOOR SASH TAPE	EXT-44
DOOR SWITCH.....	DLK-98, DLK-181, DLK-232, DLK-308, PWC-39
DRIVE BELT	EM-16
DRIVE BELT IDLER PULLEY.....	EM-24
DRIVER AIR BAG MODULE	SR-12
DRIVER SIDE DOOR MIRROR DEFOGGER.....	DEF-26
DRIVER SIDE DOOR MIRROR DEFOGGER DOES NOT OPERATE.....	DEF-33
DRIVER SIDE POWER WINDOW DOES NOT OPERATE.....	PWC-45
DUCT AND GRILLE	VTL-5

E

EASY FILL TIRE ALERT DOES NOT ACTIVATE ...	WT-40
ECM BRANCH LINE CIRCUIT	LAN-44, LAN-59, LAN-72, LAN-86, LAN-100, LAN-115
ECM, IPDM E/R, BCM.....	SEC-23, SEC-131
ELECTRICAL LOAD SIGNAL.....	EC-444
ELECTRICAL UNITS LOCATION.....	PG-5
ENGINE ASSEMBLY	EM-86
ENGINE CONTROL SYSTEM.....	EC-99
ENGINE CONTROL SYSTEM SYMPTOMSEC-464	
ENGINE COOLANT.....	CO-8
ENGINE DOES NOT START WHEN INTELLIGENT KEY IS INSIDE OF VEHICLE.....	SEC-112
ENGINE MAINTENANCE	MA-13
ENGINE OIL	LU-7
ENGINE UNIT.....	EM-91
EPS BRANCH LINE CIRCUIT	LAN-52, LAN-64, LAN-79, LAN-92, LAN-108, LAN-122
EPS CONTROL UNIT	STC-8, STC-37
EPS SYSTEM.....	STC-11
EPS WARNING LAMP.....	STC-29
EPS WARNING LAMP DOES NOT TURN OFF.....	STC-31
EPS WARNING LAMP DOES NOT TURN ON	STC-30
EVAP CANISTER	FL-14
EVAP CANISTER FILTER	FL-16
EVAP CANISTER VENT CONTROL VALVE .	FL-17
EVAP CONTROL SYSTEM PRESSURE SENSOR	FL-19
EVAP LEAK CHECK.....	EC-474
EVAPORATIVE EMISSION SYSTEM.....	EC-473
EXCESSIVE ABS FUNCTION OPERATION FREQUENCY	BRC-133
EXHAUST MANIFOLD	EM-31
EXHAUST SYSTEM.....	EX-4, EX-5
EXTERIOR LIGHTING SYSTEM SYMPTOMS	EXL-91

F

FENDER PROTECTOR	EXT-38
FILAMENT	DEF-36
FINAL DRIVE.....	TM-52
FLOOR TRIM.....	INT-27
FLUID COOLER HOSE	TM-254
FRONT AIR CONTROL.....	HAC-52
FRONT AIR CONTROL FINISHER	IP-23
FRONT BLOWER MOTOR	HAC-41, VTL-9
FRONT BLOWER MOTOR RESISTOR	HAC-55
FRONT BUMPER	EXT-23
FRONT CAMERA	AV-250
FRONT COIL SPRING AND STRUTFSU-9, FSU-16	
FRONT COMBINATION LAMP .	EXL-102, EXL-113
FRONT DISC BRAKE.....	BR-8, BR-16, BR-35

FRONT DOORDLK-149, DLK-277
FRONT DOOR FINISHER INT-15
FRONT DOOR GLASS AND REGULATOR GW-21
FRONT DOOR LOCKDLK-168, DLK-295
FRONT DOOR SPEAKER AV-37, AV-54, AV-96,
AV-114, AV-218, AV-243
FRONT DRIVE SHAFT FAX-8, FAX-19, FAX-21
FRONT DRIVE SHAFT BOOT FAX-14
FRONT FENDERDLK-147, DLK-275
FRONT FOG LAMP EXL-43, EXL-104
FRONT FOG LAMP AIMING ADJUSTMENT
EXL-100
FRONT FOG LAMP CIRCUIT EXL-88
FRONT GRILLEEXT-32
FRONT HEATED SEAT SWITCH SE-29
FRONT PASSENGER AIR BAG MODULE ... SR-19
FRONT PASSENGER AIR BAG OFF INDICATOR
SR-36
FRONT PASSENGER SIDE POWER WINDOW
DOES NOT OPERATEPWC-46
FRONT POWER WINDOW MOTORGW-24
FRONT POWER WINDOW SWITCH (PASSENGER
SIDE)PWC-30
FRONT SEAT SE-18, SE-30
FRONT SEAT BELT SB-8
FRONT SEAT BELT BUCKLE SWITCH SR-35
FRONT SPOILEREXT-34
FRONT STABILIZERFSU-12
FRONT SUSPENSION ASSEMBLYFSU-6
FRONT SUSPENSION MEMBERFSU-14
FRONT WASHER MOTOR WW-58
FRONT WASHER NOZZLE AND TUBE WW-60
FRONT WHEEL HUB AND KNUCKLE FAX-7, FAX-9
FRONT WIPER AND WASHER SYSTEM .. WW-22
FRONT WIPER ARM WW-63
FRONT WIPER AUTO STOP SIGNAL CIRCUIT
WW-40
FRONT WIPER BLADE WW-65
FRONT WIPER DOES NOT OPERATE WW-53
FRONT WIPER DRIVE ASSEMBLY WW-66
FRONT WIPER MOTOR GROUND CIRCUIT
WW-42
FRONT WIPER MOTOR HI CIRCUIT WW-38
FRONT WIPER MOTOR LO CIRCUIT WW-36
FUEL FILLER LID OPENERDLK-178, DLK-305
FUEL INJECTOR EC-446
FUEL INJECTOR AND FUEL TUBEEM-40
FUEL LEVEL SENSOR SIGNAL CIRCUIT MWI-45,
MWI-101
FUEL LEVEL SENSOR UNIT FL-20
FUEL LEVEL SENSOR UNIT, FUEL FILTER AND
FUEL PUMP ASSEMBLY FL-6
FUEL PRESSURE CHECK EC-137
FUEL PUMP EC-448
FUEL SYSTEM FL-5
FUEL TANK FL-10

FUSE AND FUSIBLE LINK BOX PG-59
FUSE BLOCK - JUNCTION BOX (J/B) PG-58
FUSE INSPECTION PG-65
FUSIBLE LINK INSPECTION PG-69

G

G SENSOR TM-241
GEAR OIL TM-17
GENERAL MAINTENANCE MA-5
GENERATOR CHG-29
GLOVE BOX ASSEMBLY IP-25
GPS ANTENNA AV-253
GROUND PG-35

H

HANDLING PRECAUTIONS FOR PLASTICS
BRM-4
HARNES PG-42
HAZARD AND BUZZER REMINDER DOES NOT
OPERATE DLK-123
HAZARD FUNCTIONDLK-101, DLK-255
HAZARD SWITCH EXL-108
HEADLAMP EXL-25
HEADLAMP (HI) CIRCUIT EXL-77
HEADLAMP (LO) CIRCUIT EXL-79
HEADLAMP AIMING ADJUSTMENT EXL-97
HEADLINING INT-30
HEATED SEAT SYSTEM SE-14
HEATING AND COOLING UNIT ASSEMBLY HA-33
HIGH-MOUNTED STOP LAMP EXL-111
HOODDLK-140, DLK-268
HOOD LOCKDLK-165, DLK-292
HORN HRN-3, HRN-6
HORN FUNCTION DLK-252
HOW TO ERASE PERMANENT DTC EC-145,
TM-134
HOW TO FOLLOW TROUBLE DIAGNOSES .. GI-6
HOW TO READ WIRING DIAGRAMS GI-9
HOW TO SELECT PISTON AND BEARING EM-111
HOW TO SET SRT CODE EC-139
HOW TO USE THIS MANUAL GI-3
HOW TO USE THIS SECTION LAN-5, LAN-21

I

ID REGISTRATION CANNOT BE COMPLETED
WT-42
ID REGISTRATION PROCEDURE WT-22
IDENTIFICATION INFORMATION GI-33
IDLE AIR VOLUME LEARNING EC-130
IDLE SPEED EC-471
IGN OFF INTERLOCK DOOR UNLOCK FUNCTION
DOES NOT OPERATE DLK-122
IGNITION COIL EM-47

IGNITION POSITION WARNING FUNCTION DOES NOT OPERATE	DLK-119
IGNITION SIGNAL	EC-451
IGNITION TIMING	EC-472
ILLUMINATION	INL-28
ILLUMINATION CONTROL SWITCH	INL-56
INPUT SHAFT AND GEAR	TM-45
INSIDE KEY ANTENNA	DLK-182
INSIDE MIRROR	MIR-14
INSTRUMENT LOWER PANEL LH	IP-24
INSTRUMENT PANEL ASSEMBLY	IP-14
INSUFFICIENT COOLING	HAC-48
INSUFFICIENT HEATING	HAC-49
INTAKE MANIFOLD	EM-28
INTELLIGENT KEY	DLK-104
INTELLIGENT KEY BATTERY	DLK-188
INTELLIGENT KEY LOW BATTERY WARNING DOES NOT OPERATE	DLK-131
INTELLIGENT KEY SYSTEM	DLK-46
INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION	SEC-24
INTELLIGENT KEY WARNING BUZZER	DLK-102, DLK-186
INTERIOR LIGHTING SYSTEM SYMPTOMS	INL-50
INTERIOR ROOM LAMP	INL-53
INTERIOR ROOM LAMP CONTROL CIRCUIT	INL-43
INTERIOR ROOM LAMP CONTROL SYSTEM	INL-21
INTERMITTENT INCIDENT	SRC-41
IPDM E/R	PCS-30
IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)	PCS-13, PCS-21, PG-60
IPDM-E BRANCH LINE CIRCUIT	LAN-46, LAN-61, LAN-74, LAN-88, LAN-102, LAN-117

K

KEY CYLINDER SWITCH	DLK-239
KEY ID WARNING DOES NOT OPERATED	DLK-133
KEY INTERLOCK CABLE	TM-237
KEY REMINDER FUNCTION DOES NOT OPERATE	DLK-124
KEY SWITCH (BCM INPUT)	DLK-241
KEY SWITCH SIGNAL CIRCUIT (WITHOUT INTELLIGENT KEY)	WCS-45
KEY WARNING LAMP	DLK-105
KEYFOB BATTERY	DLK-310
KEYFOB BATTERY AND FUNCTION	DLK-250
KEYFOB ID SET UP WITH CONSULT	DLK-256
KEYFOB ID SET UP WITHOUT CONSULT	DLK-257

L

L TERMINAL CIRCUIT (OPEN)	CHG-24
L TERMINAL CIRCUIT (SHORT)	CHG-26

LATCH (LOWER ANCHORS AND TETHER FOR CHILDREN) SYSTEM	SB-15
LICENSE PLATE LAMP	EXL-112
LIFTING POINT	GI-28
LINE PRESSURE TEST	TM-132
LOW TIRE PRESSURE WARNING LAMP	WT-33
LOW TIRE PRESSURE WARNING LAMP BLINKS	WT-39
LOW TIRE PRESSURE WARNING LAMP DOES NOT TURN OFF	WT-38
LOW TIRE PRESSURE WARNING LAMP DOES NOT TURN ON	WT-37
LUGGAGE TRIM	INT-33

M

M&A BRANCH LINE CIRCUIT	LAN-53, LAN-65, LAN-80, LAN-93, LAN-109, LAN-123
MAGNET CLUTCH	HAC-45
MAIN LINE BETWEEN AVM AND DLC CIRCUIT	LAN-43, LAN-71, LAN-99
MAIN LINE BETWEEN IPDM-E AND AVM CIRCUIT	LAN-42, LAN-70, LAN-98
MAIN LINE BETWEEN IPDM-E AND DLC CIRCUIT	LAN-41, LAN-58, LAN-85, LAN-114
MAIN POWER SUPPLY AND GROUND CIRCUIT	TM-215
MAIN POWER WINDOW AND DOOR LOCK/ UNLOCK SWITCH	PWC-55
MAINSHAFT AND GEAR	TM-47
MALFUNCTION AREA CHART	LAN-40
MALFUNCTION INDICATOR LAMP	EC-456
MANUAL AIR CONDITIONING SYSTEM	HAC-22, HAC-47
MAP LAMP	INL-51
METER BUZZER CIRCUIT	WCS-38
METER SYSTEM	MWI-26, MWI-79
MICROPHONE	AV-59, AV-122, AV-248
MICROPHONE SIGNAL CIRCUIT	AV-44, AV-102, AV-222
MIXTURE RATIO SELF-LEARNING VALUE CLEAR	EC-132
MULTI AV SYSTEM	AV-228

N

NATS ANTENNA AMP	SEC-114, SEC-159
NAVIGATION SYSTEM	AV-155
NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS SYMPTOMS	SEC-158
NOISE	HA-17
NOISE, VIBRATION AND HARSHNESS (NVH) TROUBLESHOOTING	BR-7, CL-4, EM-14, FAX-6, FSU-5, RAX-4, RSU-4, ST-7, TM-16, WT-43
NONE OF THE POWER WINDOWS CAN BE OPERATED USING ANY SWITCH	PWC-44

NORMAL OPERATING CONDITION [AV-51](#), [AV-111](#),
[AV-232](#), [BCS-73](#), [BCS-136](#), [BRC-139](#), [EC-470](#),
[WW-55](#)
 NVIS (NISSAN VEHICLE IMMOBILIZER SYSTEM-
 NATS)[SEC-132](#)
 NVIS - WITH INTELLIGENT KEY SYSTEM [SEC-37](#)

O

OCCUPANT CLASSIFICATION SYSTEM
 CONTROL UNIT [SR-32](#)
 OD OFF INDICATOR LAMP [TM-219](#)
 OFF POSITION WARNING DOES NOT OPERATE
[DLK-125](#)
 OIL [HA-22](#)
 OIL COOLER [LU-13](#)
 OIL FILTER [LU-10](#)
 OIL PAN AND OIL STRAINER [EM-34](#)
 OIL PAN, CONTROL VALVE [TM-242](#)
 OIL PUMP [LU-11](#)
 OIL SEAL [EM-73](#)
 ON BOARD DIAGNOSTIC (OBD) SYSTEM [EC-49](#),
[TM-90](#)
 ON BOARD REFUELING VAPOR RECOVERY
 (ORVR) [EC-457](#)
 OPERA WINDOW [GW-14](#)
 OPERATION [EC-47](#), [HAC-16](#), [MWI-16](#), [MWI-68](#)
 OPERATION INSPECTION [HAC-30](#)
 OUTPUT SPEED SENSOR [TM-248](#)
 OUTSIDE KEY ANTENNA [DLK-184](#)
 OVERDRIVE CONTROL SWITCH [TM-217](#)
 OVERHEATING CAUSE ANALYSIS [CO-6](#)

P

P POSITION WARNING DOES NOT OPERATE....
[DLK-126](#)
 P0011 IVT CONTROL [EC-167](#)
 P0014 EVT CONTROL [EC-171](#)
 P0030, P0031, P0032 A/F SENSOR HEATER.....
[EC-174](#)
 P0037, P0038 HO2S2 HEATER [EC-177](#)
 P0075 IVT CONTROL SOLENOID VALVE [EC-180](#)
 P0078 EVT CONTROL SOLENOID VALVE [EC-182](#)
 P0101 MAF SENSOR [EC-185](#)
 P0102, P0103 MAF SENSOR [EC-190](#)
 P0111 IAT SENSOR [EC-195](#)
 P0112, P0113 IAT SENSOR [EC-197](#)
 P0116 ECT SENSOR [EC-199](#)
 P0117, P0118 ECT SENSOR [EC-201](#)
 P0122, P0123 TP SENSOR [EC-203](#)
 P0125 ECT SENSOR [EC-206](#)
 P0127 IAT SENSOR [EC-208](#)
 P0128 THERMOSTAT FUNCTION [EC-210](#)
 P0130 A/F SENSOR 1 [EC-213](#)
 P0131 A/F SENSOR 1 [EC-217](#)
 P0132 A/F SENSOR 1 [EC-220](#)

P0137 HO2S2 [EC-223](#)
 P0138 HO2S2 [EC-229](#)
 P0139 HO2S2 [EC-237](#)
 P014C, P014D, P015A, P015B, A/F SENSOR 1
[EC-243](#)
 P0171 FUEL INJECTION SYSTEM FUNCTION
[EC-248](#)
 P0172 FUEL INJECTION SYSTEM FUNCTION
[EC-252](#)
 P0181 FTT SENSOR [EC-256](#)
 P0182, P0183 FTT SENSOR [EC-260](#)
 P0196 EOT SENSOR [EC-262](#)
 P0197, P0198 EOT SENSOR [EC-265](#)
 P0222, P0223 TP SENSOR [EC-267](#)
 P0300, P0301, P0302, P0303, P0304 MISFIRE.....
[EC-270](#)
 P0327, P0328 KS [EC-276](#)
 P0335 CKP SENSOR (POS) [EC-278](#)
 P0340 CMP SENSOR (PHASE) [EC-282](#)
 P0420 THREE WAY CATALYST FUNCTION [EC-285](#)
 P0441 EVAP CONTROL SYSTEM [EC-290](#)
 P0443 EVAP CANISTER PURGE VOLUME
 CONTROL SOLENOID VALVE [EC-295](#)
 P0444, P0445 EVAP CANISTER PURGE VOLUME
 CONTROL SOLENOID VALVE [EC-300](#)
 P0447 EVAP CANISTER VENT CONTROL VALVE
[EC-303](#)
 P0448 EVAP CANISTER VENT CONTROL VALVE
[EC-307](#)
 P0451 EVAP CONTROL SYSTEM PRESSURE
 SENSOR [EC-311](#)
 P0452 EVAP CONTROL SYSTEM PRESSURE
 SENSOR [EC-315](#)
 P0453 EVAP CONTROL SYSTEM PRESSURE
 SENSOR [EC-318](#)
 P0456 EVAP CONTROL SYSTEM [EC-322](#)
 P0460 FUEL LEVEL SENSOR [EC-328](#)
 P0461 FUEL LEVEL SENSOR [EC-329](#)
 P0462, P0463 FUEL LEVEL SENSOR [EC-331](#)
 P0500 VSS [EC-332](#)
 P0506 ISC SYSTEM [EC-334](#)
 P0507 ISC SYSTEM [EC-335](#)
 P050A, P050B, P050E COLD START CONTROL...
[EC-337](#)
 P0520 EOP SENSOR [EC-339](#)
 P0524 ENGINE OIL PRESSURE [EC-341](#)
 P059F ACTIVE GRILLE SHUTTER [EC-344](#)
 P0603 ECM [EC-349](#)
 P0604 ECM [EC-350](#)
 P0605 ECM [EC-351](#)
 P0606 ECM [EC-352](#)
 P0607 ECM [EC-353](#)
 P060A ECM [EC-354](#)
 P060B ECM [EC-355](#)
 P062F EEPROM [TM-143](#)
 P0643 SENSOR POWER SUPPLY [EC-356](#)

P0705 TRANSMISSION RANGE SENSOR A	P159F ACTIVE GRILLE SHUTTER
TM-144	EC-390
P0706 TRANSMISSION RANGE SENSOR A	P1610 LOCK MODE.....
TM-150	SEC-51, SEC-143
P0711 TRANSMISSION FLUID TEMPERATURE	P1611 ID DISCORD, IMMU-ECM.....
SENSOR A.....	SEC-52
TM-153	P1612 CHAIN OF ECM-IMMU
P0712 TRANSMISSION FLUID TEMPERATURE	SEC-53
SENSOR A.....	P1715 INPUT SPEED SENSOR
TM-157	EC-392
P0713 TRANSMISSION FLUID TEMPERATURE	P1720 VSS
SENSOR A.....	EC-394
TM-159	P1805 BRAKE SWITCH.....
P0715 INPUT SPEED SENSOR A.....	EC-396
TM-161	P2096, P2097 A/F SENSOR 1
P0720 OUTPUT SPEED SENSOR.....	EC-398
TM-164	P2100, P2103 THROTTLE CONTROL MOTOR
P0740 TORQUE CONVERTER	RELAY
TM-167	EC-402
P0743 TORQUE CONVERTER	P2101 ELECTRIC THROTTLE CONTROL
TM-169	FUNCTION
P0744 TORQUE CONVERTER	EC-405
TM-171	P2118 THROTTLE CONTROL MOTOR.....
P0746 PRESSURE CONTROL SOLENOID A.....	EC-409
TM-173	P2119 ELECTRIC THROTTLE CONTROL
P0846 TRANSMISSION FLUID PRESSURE SEN/ SW B	ACTUATOR
TM-175	EC-411
P0847 TRANSMISSION FLUID PRESSURE SEN/ SW B	P2122, P2123 APP SENSOR.....
TM-177	EC-413
P0848 TRANSMISSION FLUID PRESSURE SEN/ SW B	P2127, P2128 APP SENSOR.....
TM-179	EC-416
P0850 PNP SWITCH.....	P2135 TP SENSOR.....
EC-358	EC-419
P0863 TCM COMMUNICATION.....	P2138 APP SENSOR.....
TM-181	EC-422
P0890 TCM	P219A AIR FUEL RATIO
TM-182	EC-426
P0962 PRESSURE CONTROL SOLENOID A.....	P219C, P219D, P219E, P219F AIR FUEL RATIO ..
TM-184	EC-431
P0963 PRESSURE CONTROL SOLENOID A.....	P2765 CLUTCH B SPEED SENSOR.....
TM-186	TM-206
P0965 PRESSURE CONTROL SOLENOID B.....	P2857 CLUTCH A PRESSURE.....
TM-188	TM-209
P0966 PRESSURE CONTROL SOLENOID B.....	P2858 CLUTCH B PRESSURE.....
TM-189	TM-210
P0967 PRESSURE CONTROL SOLENOID B.....	P2859 CLUTCH A PRESSURE.....
TM-191	TM-211
P0998 SHIFT SOLENOID F	P285A CLUTCH B PRESSURE
TM-193	TM-213
P0999 SHIFT SOLENOID F	PARKING BRAKE CABLE
TM-195	PB-7
P099B SHIFT SOLENOID G	PARKING BRAKE CONTROL
TM-197	PB-6
P099C SHIFT SOLENOID G.....	PARKING BRAKE REAR CABLE
TM-199	PB-8
P1078 EVT CONTROL POSITION SENSOREC-361	PARKING BRAKE SWITCH
P1148 CLOSED LOOP CONTROL	BRC-124, PB-9
EC-364	PARKING BRAKE SWITCH SIGNAL CIRCUIT.....
P1212 TCS COMMUNICATION LINE	WCS-42
EC-365	PARKING BRAKE SYSTEM.....
P1217 ENGINE OVER TEMPERATURE ...	PB-4
EC-366	PARKING LAMP CIRCUIT
P1225 TP SENSOR	EXL-82
EC-369	PARKING, LICENSE PLATE AND TAIL LAMPS ARE
P1226 TP SENSOR	NOT TURNED ON.....
EC-370	EXL-95
P1550 BATTERY CURRENT SENSOR	PARKING, LICENSE PLATE AND TAIL LAMPS
EC-371	SYSTEM.....
P1551, P1552 BATTERY CURRENT SENSOR.....	EXL-55
EC-373	PASSENGER SIDE DOOR MIRROR DEFOGGER
P1553 BATTERY CURRENT SENSOR	DEF-28
EC-375	PASSENGER SIDE DOOR MIRROR DEFOGGER
P1554 BATTERY CURRENT SENSOR	DOES NOT OPERATE.....
EC-377	DEF-34
P1564 ASCD STEERING SWITCH.....	PEDAL VIBRATION OR ABS OPERATION SOUND
EC-380	OCCURS
P1572 ASCD BRAKE SWITCH.....	BRC-137
EC-383	PERFORMANCE TEST.....
P1574 ASCD VEHICLE SPEED SENSOR	HA-24
EC-388	PERIODIC MAINTENANCE
P1586 G SENSOR	MA-7
TM-201	PLUG
P1588 G SENSOR	TM-255
TM-204	POSITION SWITCH
	TM-15, TM-19
	POSITIVE CRANKCASE VENTILATION ...
	EC-476
	POWER DISTRIBUTION SYSTEM
	PCS-42
	POWER DOOR LOCK SYSTEM DLK-36, DLK-206
	POWER DOOR LOCK SYSTEM SYMPTOMS
	DLK-259
	POWER GENERATION VOLTAGE VARIABLE
	CONTROL SYSTEM
	CHG-8

POWER GENERATION VOLTAGE VARIABLE CONTROL SYSTEM OPERATION INSPECTION CHG-21
POWER SOCKET PWO-4
POWER SUPPLY ROUTING CIRCUIT PG-15
POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH RH PWC-56
POWER WINDOW CONTROL SYSTEM SYMPTOMS PWC-43
POWER WINDOW LOCK SWITCH DOES NOT FUNCTION PWC-54
POWER WINDOW MAIN SWITCH PWC-14
POWER WINDOW MOTOR PWC-34
POWER WINDOW RETAINED POWER OPERATION DOES NOT OPERATE PROPERLY PWC-53
POWER WINDOW SYSTEM PWC-16
PRECAUTIONS ACC-2, AV-6, AV-62, AV-126, BCS-5, BCS-76, BR-3, BRC-4, BRM-3, CCS-2, CHG-3, CL-2, CO-2, DEF-3, DLK-9, DLK-189, EC-8, EM-3, EX-2, EXL-4, EXT-3, FAX-2, FL-2, FSU-2, GI-23, GW-2, HA-3, HAC-3, HRN-2, INL-3, INT-3, IP-2, LAN-6, LAN-22, LU-2, MA-3, MIR-2, MWI-6, MWI-56, PB-2, PCS-3, PCS-32, PG-3, PWC-4, PWO-2, RAX-2, RSU-2, SB-2, SE-2, SEC-5, SEC-117, SR-2, SRC-4, ST-2, STC-3, STR-2, TM-7, TM-55, VTL-2, WCS-4, WT-3, WW-3
PRECAUTIONS IN REPAIRING HIGH STRENGTH STEEL BRM-8
PRIMARY SPEED SENSOR TM-246
PROCEDURE FOR TEMPORARILY DISABLING THE IGNITION BATTERY SAVER SYSTEM PCS-53
PUSH-BUTTON IGNITION SWITCH PCS-70, PCS-77, SEC-115
PUSH-BUTTON IGNITION SWITCH DOES NOT OPERATE PCS-75
PUSH-BUTTON IGNITION SWITCH ILLUMINATION CIRCUIT INL-48

R

RADIATOR CO-12, CO-13
RADIATOR CORE SUPPORT .. DLK-144, DLK-272
REAR BUMPER EXT-28
REAR COMBINATION LAMP ... EXL-109, EXL-114
REAR DOOR DLK-154, DLK-281
REAR DOOR FINISHER INT-18
REAR DOOR GLASS AND REGULATOR ... GW-25
REAR DOOR LOCK DLK-172, DLK-299
REAR DOOR SPEAKER AV-39, AV-55, AV-98, AV-115, AV-220, AV-244
REAR DRUM BRAKE BR-18, BR-41
REAR LH SIDE POWER WINDOW DOES NOT OPERATE PWC-48
REAR POWER WINDOW MOTOR GW-28

REAR POWER WINDOW SWITCH PWC-32, PWC-57
REAR RH SIDE POWER WINDOW DOES NOT OPERATE PWC-50
REAR SEAT SE-23, SE-38
REAR SEAT BELT SB-12
REAR SHOCK ABSORBER RSU-8
REAR SPOILER EXT-49
REAR SUSPENSION ASSEMBLY RSU-5
REAR SUSPENSION BEAM RSU-13
REAR VIEW CAMERA AV-118, AV-251
REAR VIEW CAMERA IMAGE SIGNAL CIRCUIT . AV-100
REAR WASHER NOZZLE AND TUBE WW-73
REAR WHEEL HUB RAX-5, RAX-6
REAR WINDOW DEFOGGER AND DOOR MIRROR DEFOGGER DO NOT OPERATE. DEF-30
REAR WINDOW DEFOGGER DOES NOT OPERATE BUT BOTH OF DOOR MIRROR DEFOGGER OPERATE DEF-31
REAR WINDOW DEFOGGER POWER SUPPLY AND GROUND CIRCUIT DEF-24
REAR WINDOW DEFOGGER RELAY DEF-22
REAR WINDOW DEFOGGER SWITCH DEF-20
REAR WINDOW DEFOGGER SWITCH DOES NOT LIGHT, BUT REAR WINDOW DEFOGGER OPERATES DEF-35
REAR WINDOW DEFOGGER SYSTEM DEF-12
REAR WIPER AND WASHER SYSTEM WW-28
REAR WIPER ARM WW-69
REAR WIPER AUTO STOP SIGNAL CIRCUIT WW-48
REAR WIPER BLADE WW-71
REAR WIPER MOTOR WW-72
REAR WIPER MOTOR CIRCUIT WW-46
RECOMMENDED CHEMICAL PRODUCTS AND SEALANTS GI-22
RECOMMENDED FLUIDS AND LUBRICANTS MA-11
REFRIGERANT HA-18
REFRIGERANT PRESSURE SENSOR EC-462, HAC-54
REFRIGERATION SYSTEM SYMPTOMS HA-15
REMOTE KEYLESS ENTRY RECEIVER DLK-106, DLK-187, DLK-247, DLK-309, SEC-116, SEC-160
REMOTE KEYLESS ENTRY SYSTEM DLK-216
REMOTE KEYLESS ENTRY SYSTEM SYMPTOMS DLK-260
REPAIRING MATERIAL BRM-11
REPLACEMENT OPERATIONS BRM-22
ROCKER COVER EM-48
ROD ANTENNA AV-60, AV-123, AV-255
ROOF SIDE MOLDING EXT-42

S

S CONNECTOR CIRCUIT..... STR-29
S TERMINAL CIRCUITCHG-27
SATELLITE RADIO ANTENNA AV-125, AV-254
SATELLITE SENSOR.....SR-26
SEAT BELT BUCKLE SWITCH SIGNAL CIRCUIT .
WCS-39
SEAT BELT PRE-TENSIONERSR-34
SEAT BELT WARNING SYSTEM..... SRC-99
SECONDARY SPEED SENSOR..... TM-247
SECURITY INDICATOR LAMP DOES NOT TURN
ON OR BLINK SEC-113
SENSOR ROTOR.....BRC-143
SERVICE DATA AND SPECIFICATIONS (SDS).....
ACC-5, BR-45, CHG-31, CL-22, CO-25, EC-478,
EM-116, EXL-115, FAX-27, FL-22, FSU-20,
HA-37, INL-57, LU-15, PB-10, PG-74, PWO-7,
RAX-10, RSU-15, ST-19, STR-32, TM-54,
TM-265, WT-54, WW-76
SERVICE INFORMATION FOR ELECTRICAL
INCIDENT GI-38
SHIFT LOCK SYSTEM..... TM-221
SHIFT P WARNING LAMP.....DLK-111
SHIFT POSITION INDICATOR CIRCUIT ... TM-220
SHIFT SELECTOR LAMP INL-55
SHIPPING MODE CANCEL OPERATION BCS-61,
BCS-125
SIDE AIR BAG MODULESR-23
SIDE CAMERA.....AV-252
SIDE CURTAIN AIR BAG MODULE.....SR-21
SIDE OIL SEAL TM-18
SIDE WINDOW GLASS GW-16
SLIP INDICATOR LAMP..... BRC-131
SPARK PLUG EM-21
SPIRAL CABLESR-16
SQUEAK AND RATTLE TROUBLE DIAGNOSES ..
DLK-134, DLK-262, EXT-17, GW-5, INT-9, IP-8,
MIR-8, SE-8
SRS AIR BAG SYSTEM.....SRC-25
SRS AIR BAG WARNING LAMP DOES NOT TURN
OFF SRC-97
SRS AIR BAG WARNING LAMP DOES NOT TURN
ON SRC-98
STALL TEST..... TM-131
STARTER MOTOR..... STR-31
STARTING SYSTEM.....STR-10, STR-30
STEERING ANGLE SENSOR..... BRC-147
STEERING COLUMN..... ST-9
STEERING COLUMN COVERS IP-17
STEERING GEAR AND LINKAGE.... ST-14, ST-16
STEERING LOCK UNITDLK-311
STEERING SHAFT ST-12
STEERING SWITCHAV-46, AV-58, AV-104, AV-121,
AV-224, AV-247, MWI-103
STEERING WHEEL ST-5, ST-8

STEERING WHEEL TURNING FORCE IS HEAVY
OR LIGHT STC-32
STOP LAMPEXL-63
STRG BRANCH LINE CIRCUIT .. LAN-54, LAN-66,
LAN-81, LAN-94, LAN-110, LAN-124
STRUCTURE AND OPERATION EC-28, TM-13,
TM-70
SYSTEM (INTELLIGENT KEY SYSTEM) .. DLK-22

T

TAKE AWAY WARNING DOES NOT OPERATE.....
DLK-129
TCM TM-99, TM-239
TCM BRANCH LINE CIRCUIT LAN-47, LAN-89,
LAN-103, LAN-118
THE AMBIENT TEMPERATURE DISPLAY IS
INCORRECT MWI-113
THE BRAKING DISTANCE IS LONGBRC-135
THE DOOR OPEN WARNING CONTINUES
DISPLAYING, OR DOES NOT DISPLAY.....
MWI-51, MWI-110
THE FUEL GAUGE INDICATOR DOES NOT
OPERATE..... MWI-48, MWI-107
THE KEY WARNING DOES NOT SOUND
(WITHOUT INTELLIGENT KEY)WCS-50
THE LIGHT REMINDER WARNING DOES NOT
SOUND.....WCS-49
THE LOW WASHER FLUID WARNING
CONTINUES DISPLAYING, or DOES NOT
DISPLAYMWI-53, MWI-114
THE OIL PRESSURE WARNING LAMP DOES NOT
TURN OFF MWI-50, MWI-109
THE OIL PRESSURE WARNING LAMP DOES NOT
TURN ON MWI-49, MWI-108
THE PARKING BRAKE RELEASE WARNING
CONTINUES DISPLAYING, OR DOES NOT
DISPLAY..... MWI-52, MWI-111
THE PARKING BRAKE RELEASE WARNING
CONTINUES SOUNDING, OR DOES NOT
SOUND.....WCS-47
THE SEAT BELT REMINDER WARNING
CONTINUES SOUNDING, OR DOES NOT
SOUND.....WCS-48
THE STEERING SWITCH (METER CONTROL
SWITCH) IS INOPERATIVE MWI-112
THERMO CONTROL AMPLIFIER.....HAC-53
THERMOSTAT..... CO-20
THROTTLE VALVE CLOSED POSITION
LEARNING EC-129
TIGHTENING TORQUE OF STANDARD BOLTS ...
GI-19
TIMING CHAIN EM-51
TIRE PRESSURE MONITORING SYSTEM.WT-15
TIRE PRESSURE RECEIVER WT-53
TOP TETHER STRAP CHILD RESTRAINT ..SB-16

TORQUE CONVERTER AND CONVERTER HOUSING OIL SEAL	TM-263
TOW TRUCK TOWING	GI-31
TPMS SYMPTOMS	WT-36
TRANSAXLE ASSEMBLY	TM-24, TM-26
TRANSIT MODE CANCEL OPERATION	BCS-62, BCS-126
TRANSMISSION ASSEMBLY	TM-259
TRANSMITTER	WT-49
TRANSVERSE LINK	FSU-10
TROUBLE DIAGNOSIS	LAN-9
TROUBLE DIAGNOSIS - SPECIFICATION VALUE	EC-151
TURN SIGNAL AND HAZARD WARNING LAMP SYSTEM	EXL-48
TURN SIGNAL LAMP CIRCUIT	EXL-85

U

U0073 COMMUNICATION BUS A OFF	TM-135
U0100 LOST COMMUNICATION (ECM A)	TM-136
U0101 CAN COMM CIRCUIT	EC-162
U0140 LOST COMMUNICATION (BCM)	TM-137
U0141 LOST COMMUNICATION (BCM A)	TM-138
U0155 LOST COMMUNICATION (IPC)	TM-139
U0284 ACTIVE GRILLE SHUTTER	EC-163
U0300 CAN COMMUNICATION DATA	TM-140
U0415 VEHICLE SPEED	BCS-65
U0428 STEERING ANGLE SENSOR	AV-185
U1000 CAN COMM	BCS-127, DLK-229
U1000 CAN COMM CIRCUIT	AV-186, BCS-63, BRC-117, MWI-38, MWI-93, PCS-26, PCS-54, SRC-94, STC-28, TM-141
U1001 CAN COMM CIRCUIT	EC-164
U1002 SYSTEM COMM (CAN)	BRC-118
U1010 CONTROL UNIT (CAN)	AV-187, BCS-64, BCS-128, BRC-120, DLK-230, MWI-39, MWI-94, PCS-55, SRC-95
U1040 ENG COMM CIRCUIT	EC-165
U1044 ENG COMM CIRCUIT	EC-166
U1117 LOST COMMUNICATION (ABS)	TM-142
U111A REAR CAMERA IMAGE SIGNAL CIRCUIT	AV-188
U111B SIDE CAMERA RH IMAGE SIGNAL CIRCUIT	AV-192
U111C FRONT CAMERA IMAGE SIGNAL CIRCUIT	AV-194
U111D SIDE CAMERA LH IMAGE SIGNAL CIRCUIT	AV-196
U1200 AV CONTROL UNIT	AV-198
U1217 AV CONTROL UNIT	AV-199
U1229 AV CONTROL UNIT	AV-200
U122F AV CONTROL UNIT	AV-201
U1232 STEERING ANGLE SENSOR	AV-202
U1244 GPS ANTENNA	AV-203
U1258 SATELLITE RADIO ANTENNA	AV-204
U1263 USB	AV-205

U1264 ANTENNA AMP.	AV-206
U12AA CONFIGURATION ERROR	AV-207
U12AC AV CONTROL UNIT	AV-208
U12AD AV CONTROL UNIT	AV-209
U12AE AV CONTROL UNIT	AV-210
U12AF AV CONTROL UNIT	AV-211
U12B0 POWER SUPPLY VOLTAGE	AV-212
U12B1 POWER SUPPLY VOLTAGE	AV-213
U1304 CAMERA IMAGE CALIBRATION	AV-214
U1305 CONFIG UNFINISH	AV-215
UNBALANCE STEERING WHEEL TURNING FORCE (TORQUE VARIATION)	STC-35
UNBALANCE STEERING WHEEL TURNING FORCE AND RETURN BETWEEN RIGHT AND LEFT	STC-34
UNDER COVER	EXT-39
UNEXPECTED PEDAL REACTION	BRC-134
UNLOCK SENSOR	DLK-92
UPPER GLOVE BOX	IP-26
USB CONNECTOR	AV-106, AV-226
USB INTERFACE	AV-116, AV-245

V

VACUUM LINES	BR-33
VDC OFF INDICATOR LAMP	BRC-130
VDC OFF SWITCH	BRC-126, BRC-146
VDC/TCS/ABS	BRC-132
VEHICLE JERKS DURING VDC/TCS/ABS CONTROL	BRC-138
VEHICLE SECURITY INDICATOR	SEC-110, SEC-155
VEHICLE SPEED SENSING AUTO LOCK OPERATION DOES NOT OPERATE	DLK-121
VENTILATION SYSTEM	VTL-4
VIN REGISTRATION	EC-127

W

WARNING CHIME FUNCTION	DLK-254
WARNING CHIME SYSTEM	WCS-26
WASHER FLUID LEVEL SWITCH	WW-59
WASHER FLUID LEVEL SWITCH CIRCUIT	MWI-47, MWI-106
WASHER MOTOR CIRCUIT	WW-43
WASHER SWITCH	WW-44
WASHER TANK	WW-56
WATER HOSE	TM-251
WATER OUTLET	CO-23
WATER PUMP	CO-18
WHEEL	WT-44
WHEEL ALIGNMENT	FSU-7, RSU-6
WHEEL AND TIRE	WT-45, WT-48
WHEEL SENSOR	BRC-140
WINDSHIELD GLASS	GW-11
WIPER AND WASHER FUSE	WW-35
WIPER AND WASHER SWITCH	WW-68

WIPER AND WASHER SYSTEM SYMPTOMS

[WW-50](#)

