

SECTION **SE** SEAT

A
B
C
D
E
F
G
H
I
J
K
L
M

CONTENTS

FRONT SEAT	2	REAR SEAT	3
Removal and Installation	2	Removal and Installation	3

SE

FRONT SEAT

FRONT SEAT



PFP:87000

Removal and Installation

EIS0014M

- When removing and installing the seat trim, carefully handle it to keep dirt out and avoid damage.

SEC. 868 • 870

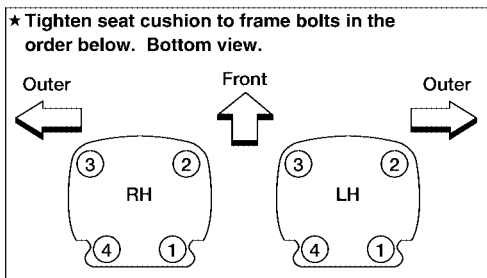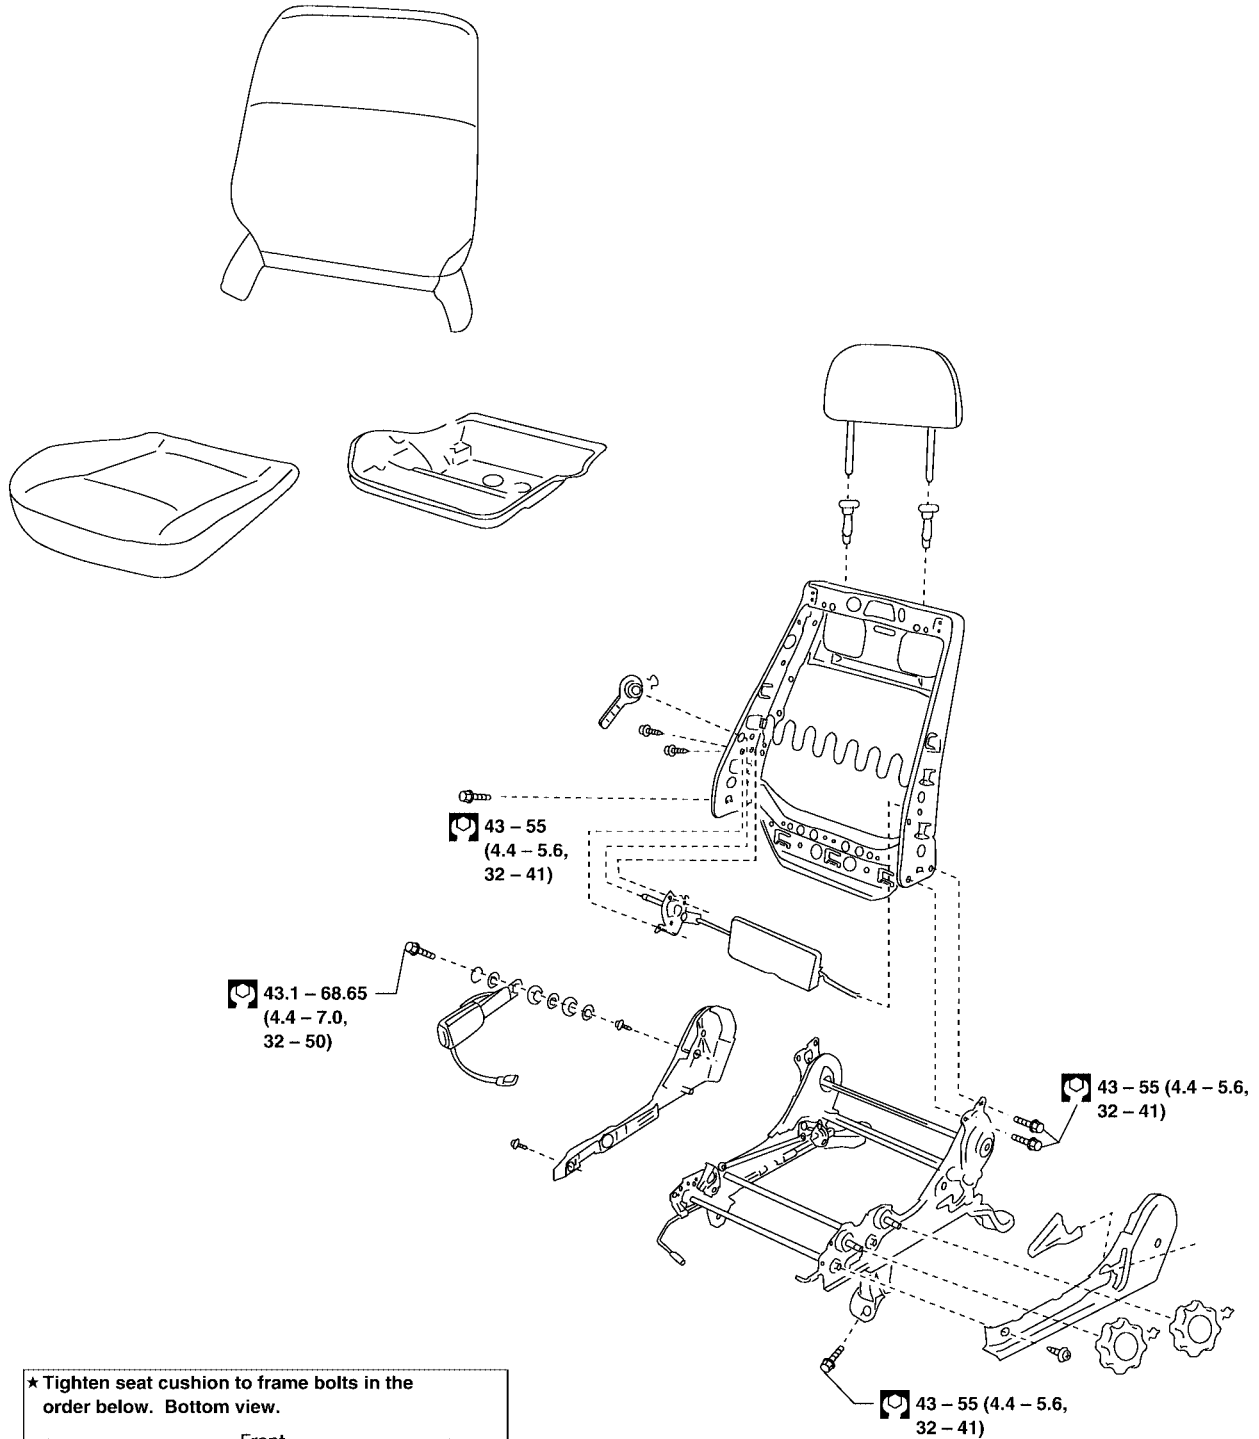

: N·m (kg·m, ft·lb)

: Grease-up point
(Do not apply too much grease as it will drip)

LIA0261E

REAR SEAT





REAR SEAT

Removal and Installation

PFP:88300

EIS0014N

SEC. 870

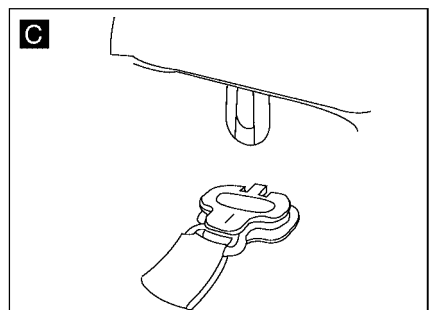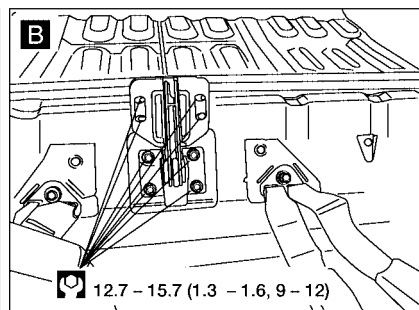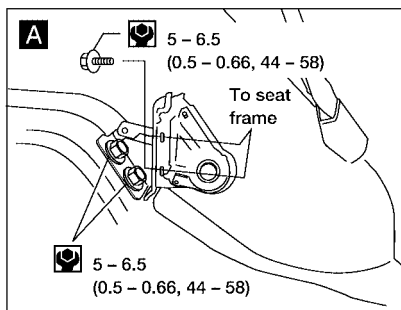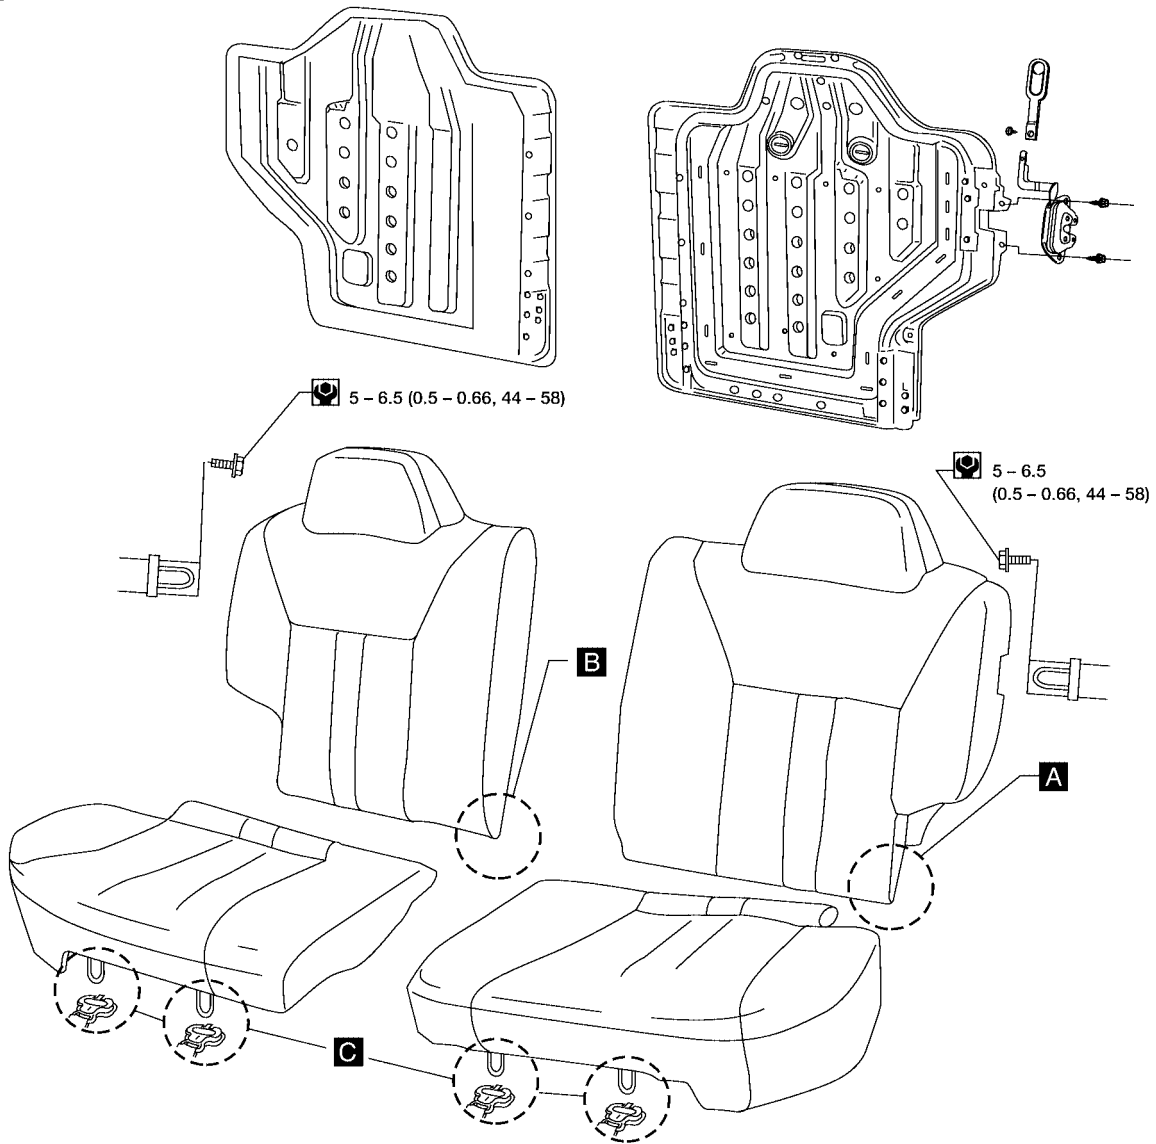

: N•m (kg-m, in-lb)

: N•m (kg-m, ft-lb)

LIIA0263E

REAR SEAT
