

LT
SECTION
LIGHTING SYSTEM

A
B
C

CONTENTS

D
E

<p>PRECAUTIONS 4</p> <p> Precautions for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER" 4</p> <p> General precautions for service operations 4</p> <p>HEADLAMP (FOR USA) 5</p> <p> Component Parts and Harness Connector Location... 5</p> <p> System Description 5</p> <p> OUTLINE 5</p> <p> BATTERY SAVER CONTROL 6</p> <p> VEHICLE SECURITY SYSTEM (PANIC ALARM)... 6</p> <p> CAN Communication System Description 6</p> <p> Schematic 7</p> <p> Wiring Diagram — H/LAMP — 8</p> <p> Terminals and Reference Values for BCM 12</p> <p> Terminals and Reference Values for IPDM E/R 12</p> <p> How to Proceed With Trouble Diagnosis 12</p> <p> Preliminary Check 12</p> <p> CHECK POWER SUPPLY AND GROUND CIRCUIT 12</p> <p> CONSULT-II Function (BCM) 12</p> <p> CONSULT-II OPERATION 12</p> <p> WORK SUPPORT 13</p> <p> DATA MONITOR 13</p> <p> ACTIVE TEST 14</p> <p> SELF-DIAGNOSTIC RESULTS 15</p> <p> CONSULT-II Function (IPDM E/R) 15</p> <p> CONSULT-II OPERATION 15</p> <p> DATA MONITOR 16</p> <p> ACTIVE TEST 17</p> <p> Headlamp HI Does Not Illuminate (Both Sides) 17</p> <p> Headlamp HI Does Not Illuminate (One Side) 19</p> <p> High Beam Indicator Lamp Does Not Illuminate ... 20</p> <p> Headlamp LO Does Not Illuminate (Both Sides) ... 21</p> <p> Headlamp LO Does Not Illuminate (One Side) 23</p> <p> Headlamps Do Not Turn OFF 24</p> <p> Aiming Adjustment 25</p> <p> LOW BEAM AND HIGH BEAM 25</p> <p> HEADLAMP AIMING 26</p> <p> Bulb Replacement 27</p>	<p> HEADLAMP BULB 27</p> <p> FRONT TURN SIGNAL/PARKING LAMP BULB.. 27</p> <p> FRONT SIDE MARKER LAMP BULB 27</p> <p> Removal and Installation 27</p> <p> FRONT COMBINATION LAMP 27</p> <p> Disassembly and Assembly 29</p> <p>HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM - 30</p> <p> Component Parts and Harness Connector Location.. 30</p> <p> System Description 30</p> <p> OUTLINE 31</p> <p> DAYTIME LIGHT OPERATION 32</p> <p> COMBINATION SWITCH READING FUNCTION.. 32</p> <p> CAN Communication System Description 33</p> <p> Schematic 34</p> <p> Wiring Diagram — DTRL — 35</p> <p> Terminals and Reference Values for BCM 39</p> <p> How to Proceed With Trouble Diagnosis 39</p> <p> Preliminary Check 39</p> <p> CHECK BCM CONFIGURATION 39</p> <p> INSPECTION FOR POWER SUPPLY AND GROUND CIRCUIT 39</p> <p> INSPECTION PARKING BRAKE SWITCH CIRCUIT 39</p> <p> CONSULT-II Functions 40</p> <p> Daytime Light Control Does Not Operate Properly (Normal Headlamps Operate Properly) 40</p> <p> Aiming Adjustment 41</p> <p> Bulb Replacement 41</p> <p> Removal and Installation 41</p> <p> Disassembly and Assembly 41</p> <p>FRONT FOG LAMP 42</p> <p> Component Parts and Harness Connector Location.. 42</p> <p> System Description 42</p> <p> OUTLINE 42</p> <p> COMBINATION SWITCH READING FUNCTION.. 43</p> <p> EXTERIOR LAMP BATTERY SAVER CONTROL.. 43</p> <p> CAN Communication System Description 43</p> <p> Wiring Diagram — F/FOG — 44</p> <p> Terminals and Reference Values for BCM 46</p>
--	--

F
G
H
I
J
LT
L
M

Terminals and Reference Values for IPDM E/R	46	CONSULT-II OPERATION	68
How to Proceed With Trouble Diagnosis	46	DATA MONITOR	69
Preliminary Check	46	Combination Switch Inspection	70
CHECK POWER SUPPLY AND GROUND CIR- CUIT	46	Removal and Installation	73
CONSULT-II Functions	46	Switch Circuit Inspection	73
Front Fog Lamps Do Not Illuminate (Both Sides) ...	46	STOP LAMP	74
Front Fog Lamp Does Not Illuminate (One Side) ...	47	System Description	74
Aiming Adjustment	48	Wiring Diagram — STOP/L —	75
Bulb Replacement	49	Bulb Replacement	77
REMOVAL	49	HIGH-MOUNTED STOP LAMP	77
INSTALLATION	49	STOP LAMP	77
Removal and Installation	49	Removal and Installation	77
REMOVAL	49	HIGH-MOUNTED STOP LAMP	77
INSTALLATION	49	STOP LAMP	77
TURN SIGNAL AND HAZARD WARNING LAMPS.. 50		BACK-UP LAMP	78
Component Parts and Harness Connector Location..	50	Wiring Diagram — BACK/L —	78
System Description	50	Bulb Replacement	80
OUTLINE	50	Removal and Installation	80
TURN SIGNAL OPERATION	50	PARKING, LICENSE PLATE AND TAIL LAMPS	81
HAZARD LAMP OPERATION	51	Component Parts and Harness Connector Location..	81
REMOTE KEYLESS ENTRY SYSTEM OPERA- TION	52	System Description	81
COMBINATION SWITCH READING FUNCTION..	52	OPERATION BY LIGHTING SWITCH	82
CAN Communication System Description	52	COMBINATION SWITCH READING FUNCTION..	82
Schematic	53	EXTERIOR LAMP BATTERY SAVER CONTROL..	82
Wiring Diagram — TURN —	54	CAN Communication System Description	82
Terminals and Reference Values for BCM	57	Schematic	83
How to Proceed With Trouble Diagnosis	57	Wiring Diagram — TAIL/L —	84
Preliminary Check	57	Terminals and Reference Values for BCM	88
CHECK POWER SUPPLY AND GROUND CIR- CUIT	57	Terminals and Reference Values for IPDM E/R	88
CONSULT-II Function (BCM)	57	How to Proceed With Trouble Diagnosis	88
CONSULT-II OPERATION	57	Preliminary Check	88
DATA MONITOR	58	CHECK POWER SUPPLY AND GROUND CIR- CUIT	88
ACTIVE TEST	59	CONSULT-II Functions	88
Turn Signal Lamp Does Not Operate	59	Parking, Side Marker, License Plate and/or Tail Lamps Do Not Illuminate	88
Rear Turn Signal Lamp Does Not Operate	60	Parking, Side Marker, License Plate and Tail Lamps Do Not Turn OFF (After Approx. 10 Minutes)	95
Hazard Warning Lamp Does Not Operate But Turn Signal Lamps Operate	61	Bulb Replacement	95
Turn Signal Indicator Lamp Does Not Operate	63	FRONT PARKING LAMP	95
Bulb Replacement	64	LICENSE PLATE LAMP	95
FRONT TURN SIGNAL LAMP	64	TAIL LAMP	95
REAR TURN SIGNAL LAMP	64	Removal and Installation	95
Removal and Installation	64	FRONT PARKING LAMP	95
FRONT TURN SIGNAL LAMP	64	LICENSE PLATE LAMP	95
REAR TURN SIGNAL LAMP	64	TAIL LAMP	95
LIGHTING AND TURN SIGNAL SWITCH	65	REAR COMBINATION LAMP	96
Removal and Installation	65	Bulb Replacement	96
REMOVAL	65	REMOVAL	96
INSTALLATION	65	INSTALLATION	96
HAZARD SWITCH	66	Removal and Installation	96
Removal and Installation	66	REMOVAL	96
REMOVAL	66	INSTALLATION	96
INSTALLATION	66	TRAILER TOW	97
COMBINATION SWITCH	67	Component Parts and Harness Connector Location..	97
Wiring Diagram — COMBSW —	67	System Description	97
Combination Switch Reading Function	68	TRAILER TAIL LAMP OPERATION	98
CONSULT-II Function (BCM)	68	TRAILER STOP, TURN SIGNAL AND HAZARD LAMP OPERATION	98

TRAILER POWER SUPPLY OPERATION	99	erly	125	
TRAILER BACK-UP LAMPS OPERATION	99	Room/Map Lamp Control Does Not Operate	126	A
Schematic	100	MODELS WITH POWER DOOR LOCKS	126	
Wiring Diagram — T/TOW —	101	Room Lamp 2nd Row Control Does Not Operate	128	
INTERIOR ROOM LAMP	106	All Interior Room Lamps Do Not Operate	129	B
Component Parts and Harness Connector Location	106	Ignition Keyhole Illumination Control Does Not Operate	129	
System Description	107	Cargo Lamp Control Does Not Operate With Switch In DOOR Position	131	C
MODELS WITHOUT POWER DOOR LOCKS	107	ILLUMINATION	134	
MODELS WITH POWER DOOR LOCKS	108	Component Parts and Harness Connector Location	134	
Schematic / With Power Door Locks	111	System Description	134	D
Schematic / Without Power Door Locks	113	ILLUMINATION OPERATION BY LIGHTING SWITCH	135	
Wiring Diagram — INT/L —	114	EXTERIOR LAMP BATTERY SAVER CONTROL	136	E
WITH POWER DOOR LOCKS	114	CAN Communication System Description	136	
WITHOUT POWER DOOR LOCKS	119	Schematic	137	
Terminals and Reference Values for BCM	122	Wiring Diagram — ILL —	139	F
How to Proceed With Trouble Diagnosis	122	Removal and Installation	147	
Preliminary Check	122	ILLUMINATION CONTROL SWITCH	147	
INSPECTION FOR POWER SUPPLY AND GROUND CIRCUIT	122	BULB SPECIFICATIONS	148	G
CONSULT-II Function (BCM)	122	Headlamp	148	
CONSULT-II OPERATION	122	Exterior Lamp	148	
WORK SUPPORT	123	Interior Lamp/Illumination	148	H
DATA MONITOR	124			I
ACTIVE TEST	125			J
Room/Map Lamp Does Not Turn ON or OFF Prop-				

LT

PRECAUTIONS

PRECAUTIONS

PF0:00011

Precautions for Supplemental Restraint System (SRS) “AIR BAG” and “SEAT BELT PRE-TENSIONER”

EKS00E1B

The Supplemental Restraint System such as “AIR BAG” and “SEAT BELT PRE-TENSIONER”, used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SRS and SB section of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SRS section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

General precautions for service operations

EKS00E1C

- Never work with wet hands.
- Turn the lighting switch OFF before disconnecting and connecting the connector.
- When checking the headlamp on/off operation, check it on vehicle and with the power connected to the vehicle-side connector.
- Do not touch the headlamp bulb glass surface with bare hands or allow oil or grease to get on it. Do not touch the headlamp bulb just after the headlamp is turned off, because it is very hot.
- When the bulb has burned out, wrap it in a thick vinyl bag and discard. Do not break the bulb.
- Leaving the bulb removed from the headlamp housing for a long period of time can deteriorate the performance of the lens and reflector (dirt, clouding). Always prepare a new bulb and have it on hand when replacing the bulb.
- Do not use organic solvent (paint thinner or gasoline) to clean lamps and to remove old sealant.


HEADLAMP (FOR USA)

HEADLAMP (FOR USA)

PFP:26010

Component Parts and Harness Connector Location

EKS00HML

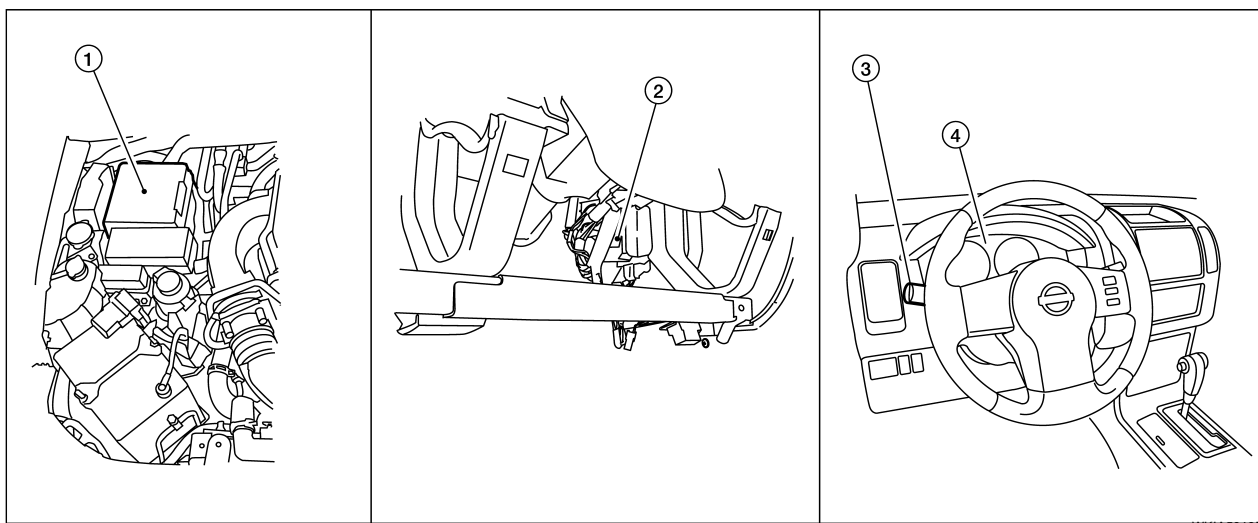

VKTA9019E

1. IPDM E/R
E122, E123, E124
2. BCM
M18, M20
(view with lower instrument panel LH removed)
3. Combination switch (lighting switch)
M28
4. Combination meter
M24

System Description

EKS00EIF

Control of the headlamp system operation is dependent upon the position of the combination switch (lighting switch). When the lighting switch is placed in the 2ND position, the BCM (body control module) receives input requesting the headlamps (and tail lamps) illuminate. This input is communicated to the IPDM E/R (intelligent power distribution module engine room) across the CAN communication lines. The CPU (central processing unit) of the IPDM E/R controls the headlamp high and headlamp low relay coils. When energized, these relays direct power to the respective headlamps, which then illuminate.

OUTLINE

Power is supplied at all times

- to headlamp high relay, located in the IPDM E/R, and
- to headlamp low relay, located in the IPDM E/R, and
- to ignition relay, located in the IPDM E/R, and
- through 20A fuse (No. 52 and 53, located in the IPDM E/R)
- to CPU of the IPDM E/R, and
- through 10A fuse [No. 18, located in the fuse block (J/B)]
- to BCM terminal 57, and
- through 50A fusible link (letter **g**, located in the fuse and fusible link box)
- to BCM terminal 70.

With the ignition switch in the ACC or ON position, power is supplied

- through 10A fuse [No. 4, located in the fuse block (J/B)]
- to BCM terminal 11.

With the ignition switch in the ON or START position, power is supplied

- to ignition relay, located in the IPDM E/R, and
- through 10A fuse [No. 1, located in the fuse block (J/B)]
- to BCM terminal 38.

Ground is supplied

- to BCM terminal 67
- through grounds M57, M61 and M79, and

A
B
C
D
E
F
G
H
I
J
LT
L
M

HEADLAMP (FOR USA)

- to IPDM E/R terminals 38 and 59
- through grounds E9, E15 and E24.

Low Beam Operation

With the lighting switch in 2ND position, the BCM receives input requesting the headlamps to illuminate. This input is communicated to the IPDM E/R across the CAN communication lines. The CPU of the IPDM E/R controls the headlamp low relay coil. When energized, this relay directs power

- through 15A fuse (No. 41, located in the IPDM E/R)
- through IPDM E/R terminal 54
- to front combination lamp RH (headlamp) terminal 3, and
- through 15A fuse (No. 40, located in the IPDM E/R)
- through IPDM E/R terminal 52
- to front combination lamp LH (headlamp) terminal 3.

Ground is supplied

- to front combination lamp LH and RH (headlamp) terminal 2
- through grounds E9, E15 and E24.

With power and ground supplied, low beam headlamps illuminate.

High Beam Operation/Flash-to-Pass Operation

With the lighting switch in 2ND position and placed in HIGH or PASS position, the BCM receives input requesting the headlamp high beams to illuminate. This input is communicated to the IPDM E/R across the CAN communication lines. The CPU of the combination meter controls the ON/OFF status of the HIGH BEAM indicator. The CPU of the IPDM E/R controls the headlamp high relay coil. When energized, this relay directs power

- through 10A fuse (No. 34, located in the IPDM E/R)
- through IPDM E/R terminal 56
- to front combination lamp RH (headlamp) terminal 1, and
- through 10A fuse (No. 35, located in the IPDM E/R)
- through IPDM E/R terminal 55
- to front combination lamp LH (headlamp) terminal 1.

Ground is supplied

- to front combination lamp LH and RH (headlamp) terminal 2
- through grounds E9, E15 and E24.

With power and ground supplied, the high beam headlamps illuminate.

BATTERY SAVER CONTROL

When the combination switch (lighting switch) is in the 2ND position (ON), and the ignition switch is turned from ON or ACC to OFF, the battery saver control feature is activated.

Under this condition, the headlamps remain illuminated for 5 minutes, unless the combination switch (lighting switch) position is changed. If the combination switch (lighting switch) position is changed, then the headlamps are turned off.

VEHICLE SECURITY SYSTEM (PANIC ALARM)

The vehicle security system (panic alarm) will flash the high beams if the system is triggered. Refer to [BL-71, "PANIC ALARM OPERATION"](#).

CAN Communication System Description


Refer to [LAN-21, "CAN COMMUNICATION"](#).

EKS00EIG

HEADLAMP (FOR USA)

Schematic

EKS00EIH

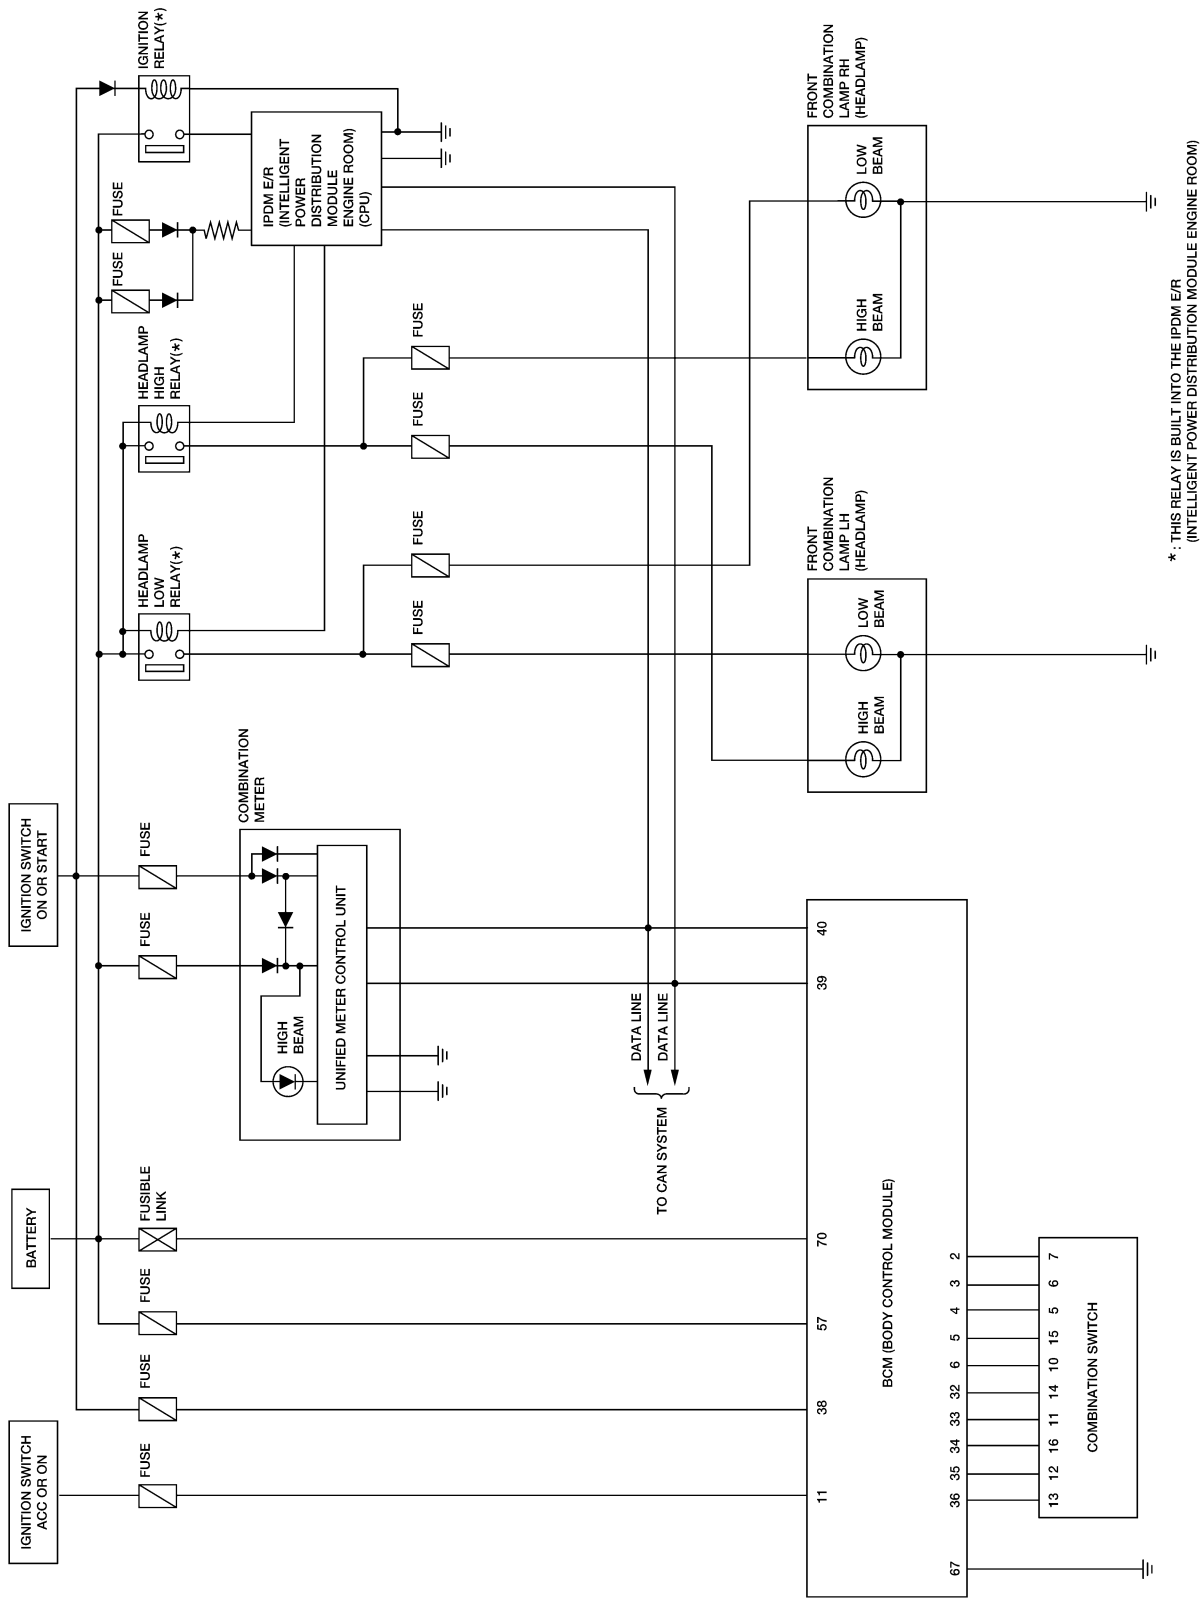

WKWA5940E



A
B
C
D
E
F
G
H
I
J
LT
L
M

HEADLAMP (FOR USA)

EKS00EII

Wiring Diagram — H/LAMP —


LT-H/LAMP-01

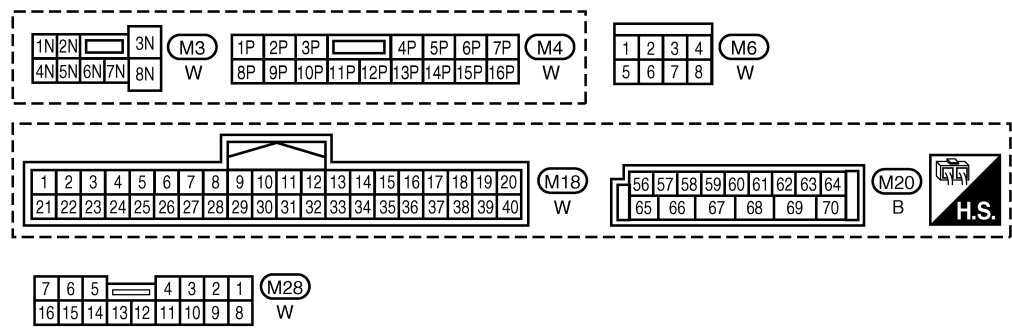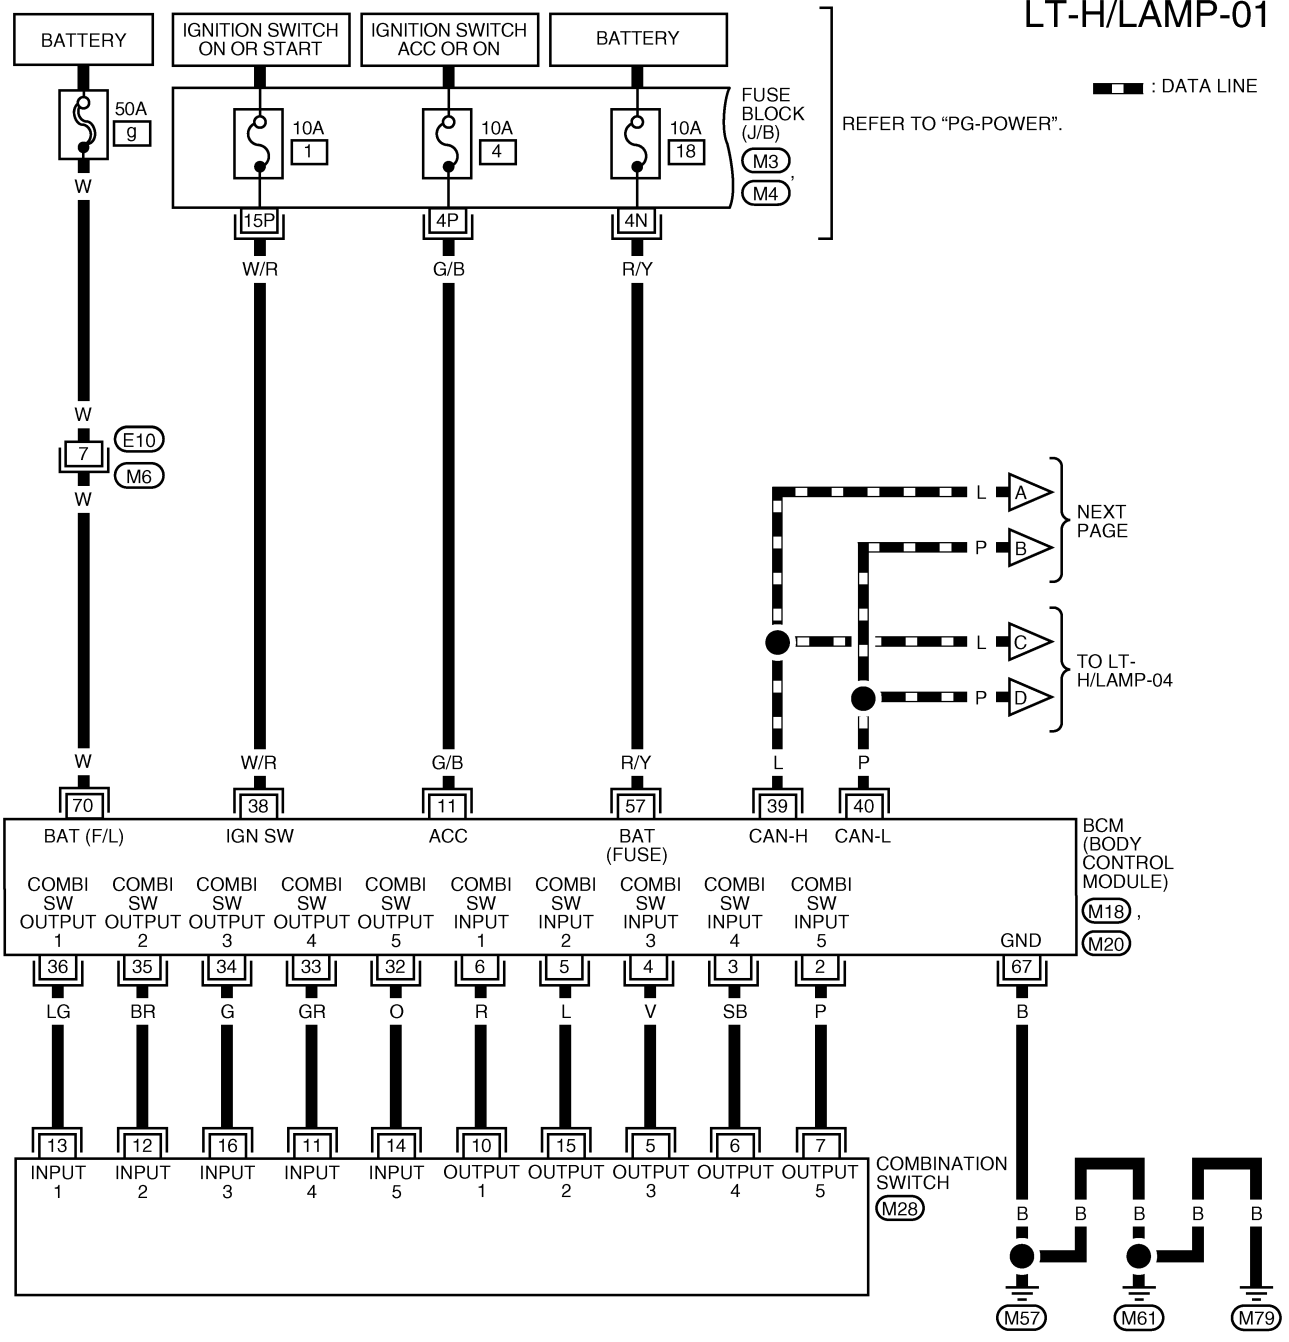


WKWA4629E

HEADLAMP (FOR USA)

LT-H/LAMP-02

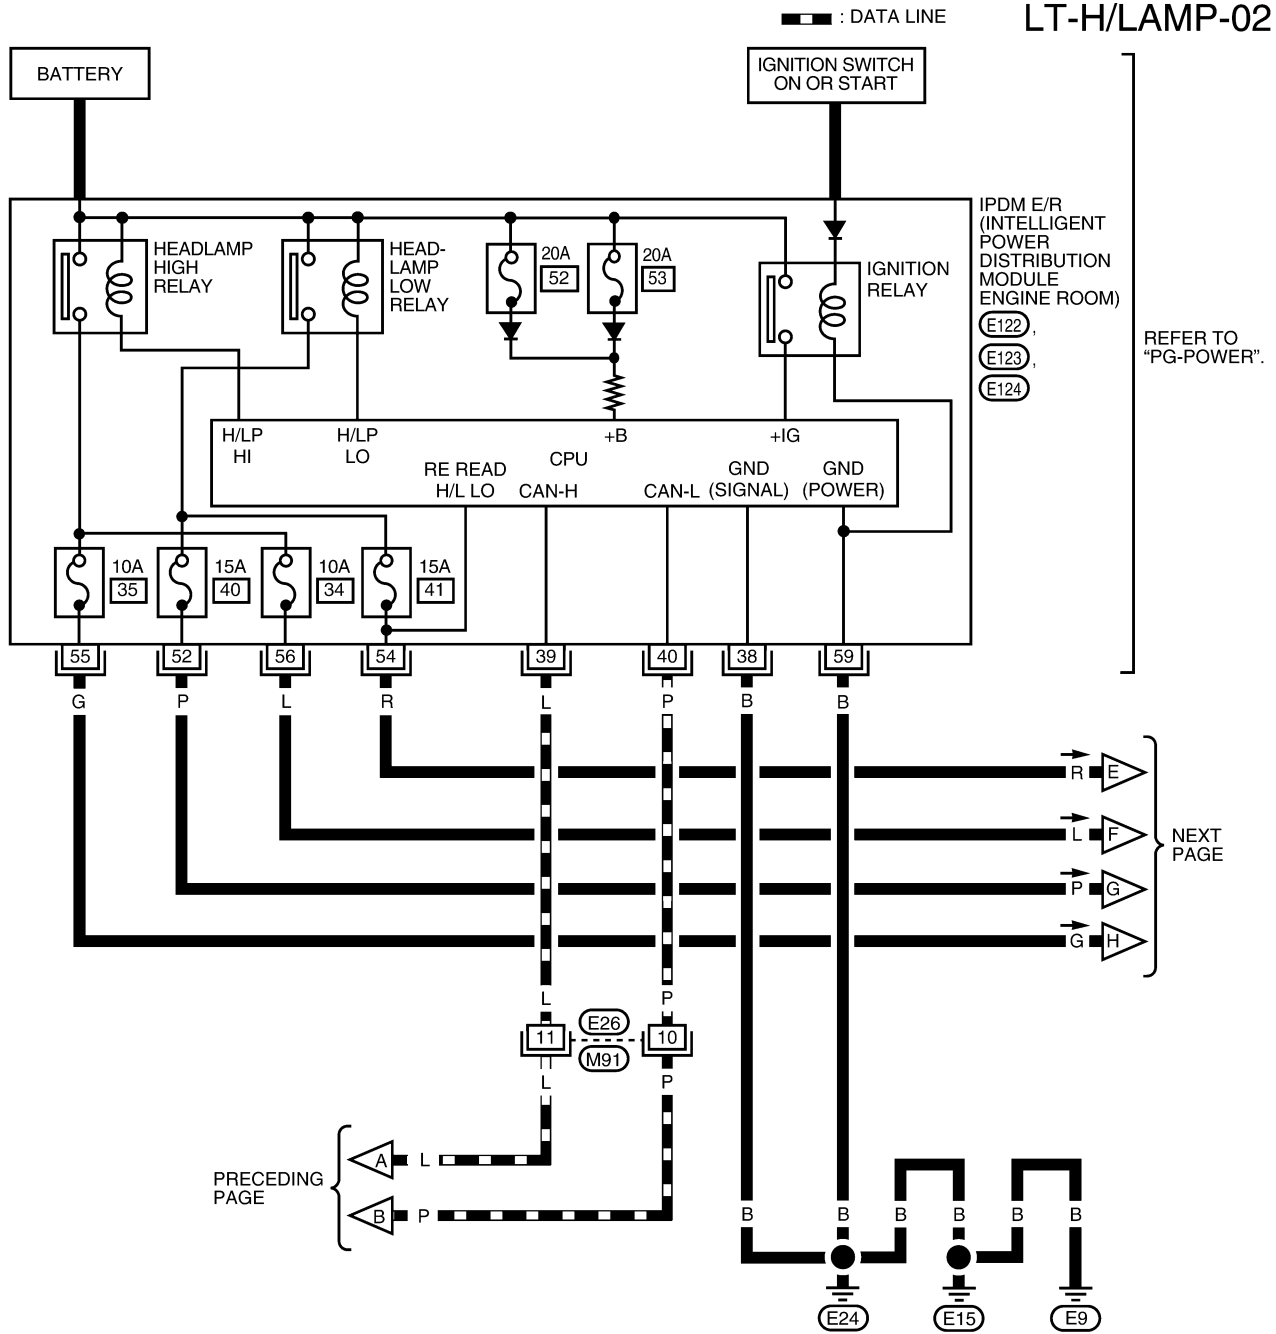


A
B
C
D
E
F
G
H
I
J
LT
L
M

 

HEADLAMP (FOR USA)


LT-H/LAMP-03

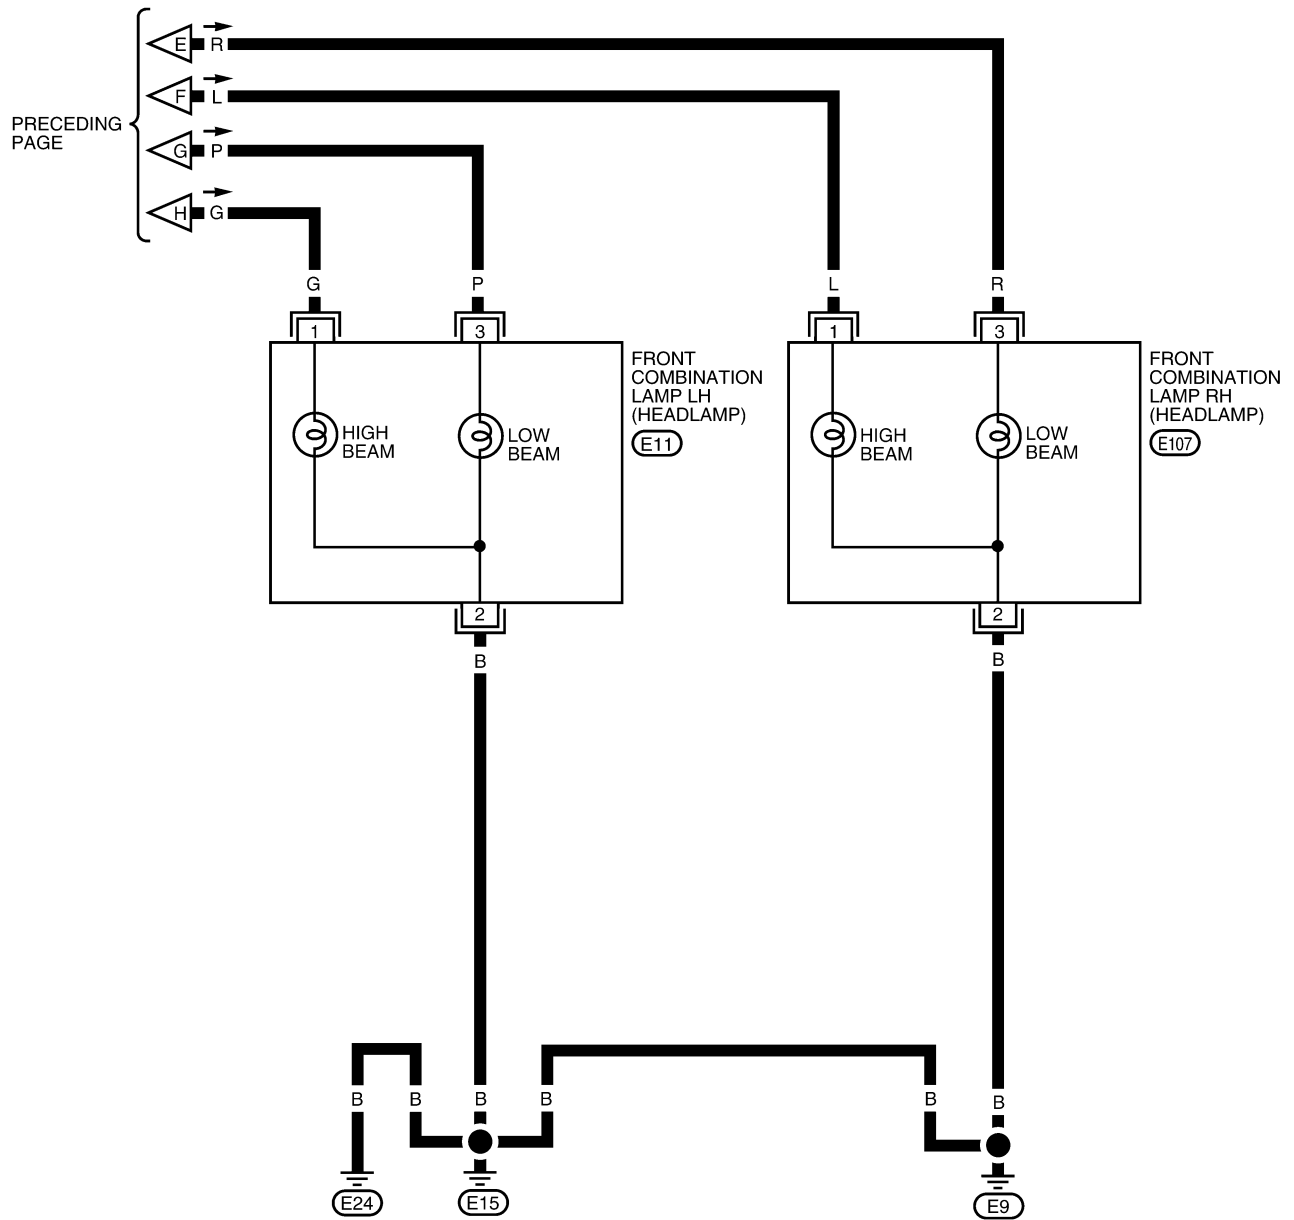

WKWA5982E

HEADLAMP (FOR USA)

LT-H/LAMP-04

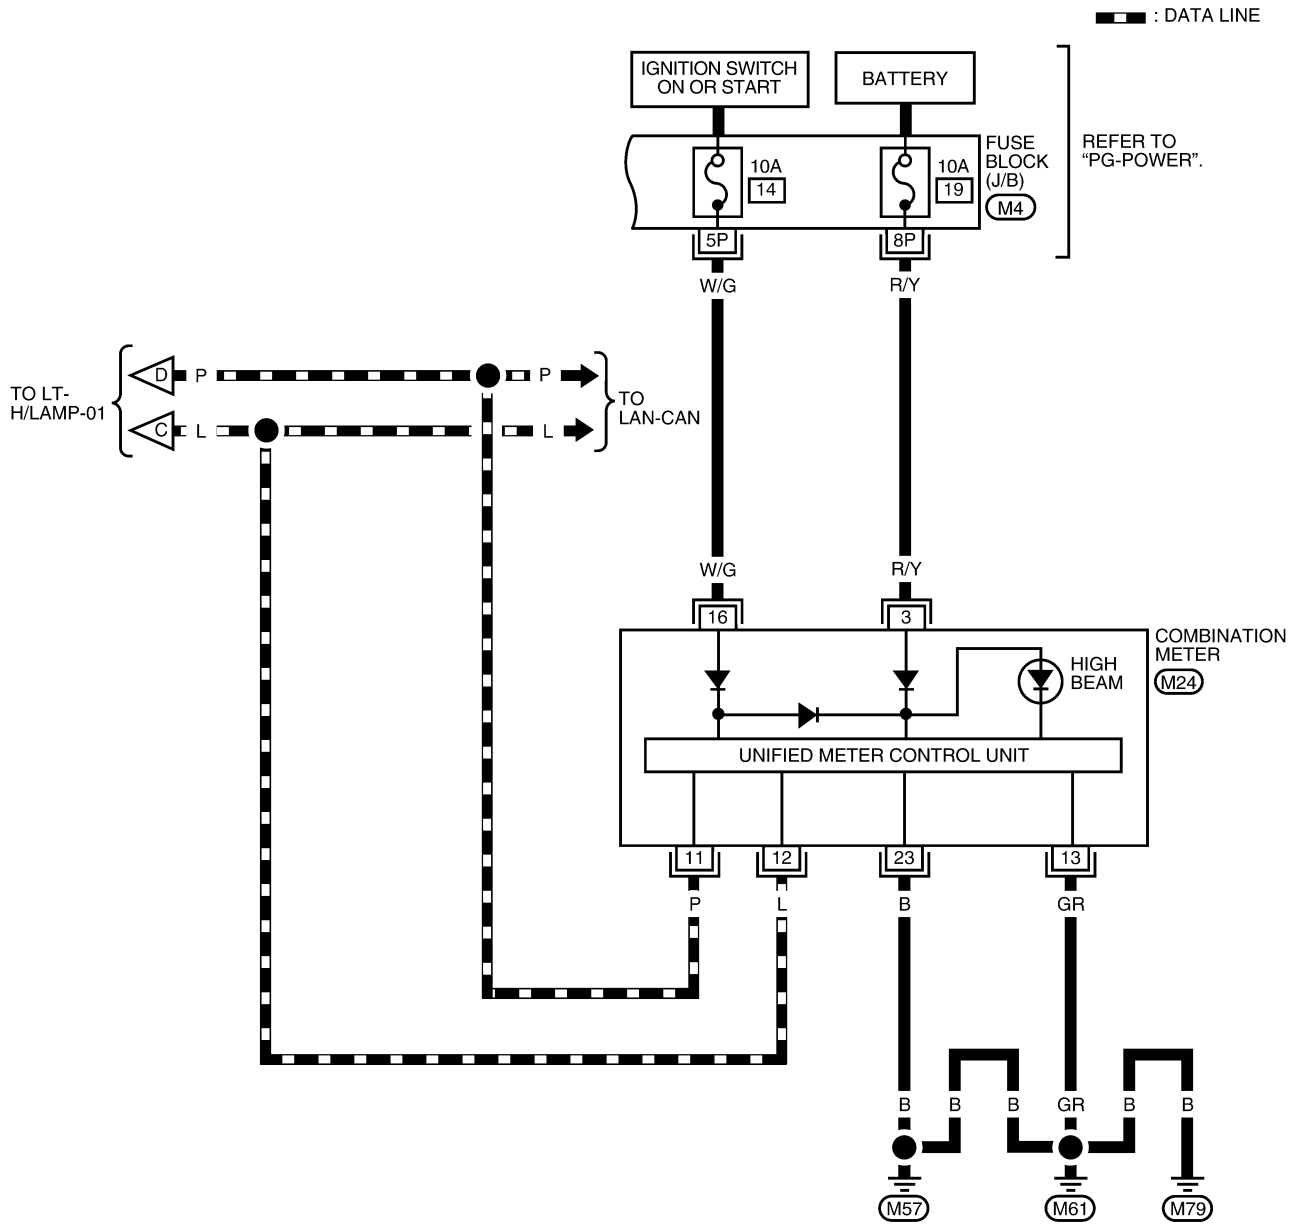

1P	2P	3P	4P	5P	6P	7P	M4	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	M24		
8P	9P	10P	11P	12P	13P	14P	15P	16P	W	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	W

WKWA4416E

HEADLAMP (FOR USA)

Terminals and Reference Values for BCM

EKS00HMM

Refer to [BCS-12, "Terminals and Reference Values for BCM"](#) .

Terminals and Reference Values for IPDM E/R

EKS00HMN

Refer to [PG-29, "Terminals and Reference Values for IPDM E/R"](#) .

How to Proceed With Trouble Diagnosis

EKS00HMO

1. Confirm the symptom or customer complaint.
2. Understand operation description and function description. Refer to [LT-5, "System Description"](#) .
3. Perform the Preliminary Check. Refer to [LT-12, "Preliminary Check"](#) .
4. Check symptom and repair or replace the cause of malfunction.
5. Does the headlamp operate normally? If YES: GO TO 6. If NO: GO TO 4.
6. Inspection End.

Preliminary Check

EKS00HMP

CHECK POWER SUPPLY AND GROUND CIRCUIT

Refer to [BCS-16, "BCM Power Supply and Ground Circuit Check"](#) and [PG-31, "IPDM E/R Power/Ground Circuit Inspection"](#) .

CONSULT-II Function (BCM)

EKS00HMQ

CONSULT-II can display each diagnostic item using the diagnostic test modes shown following.


BCM diagnostic test item	Diagnostic mode	Description
Inspection by part	WORK SUPPORT	Supports inspections and adjustments. Commands are transmitted to the BCM for setting the status suitable for required operation, input/output signals are received from the BCM and received data is displayed.
	DATA MONITOR	Displays BCM input/output data in real time.
	ACTIVE TEST	Operation of electrical loads can be checked by sending drive signal to them.
	SELF-DIAG RESULTS	Displays BCM self-diagnosis results.
	CAN DIAG SUPPORT MNTR	The result of transmit/receive diagnosis of CAN communication can be read.
	ECU PART NUMBER	BCM part number can be read.
	CONFIGURATION	Performs BCM configuration read/write functions.

CONSULT-II OPERATION

CAUTION:


If **CONSULT-II** is used with no connection of **CONSULT-II CONVERTER**, malfunctions might be detected in self-diagnosis depending on control unit which carries out CAN communication.

1. With the ignition switch OFF, connect CONSULT-II and CONSULT-II CONVERTER to the data link connector, then turn ignition switch ON.

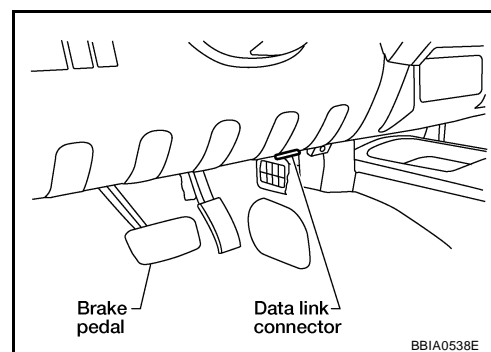


HEADLAMP (FOR USA)


2. Touch "START (NISSAN BASED VHCL)".

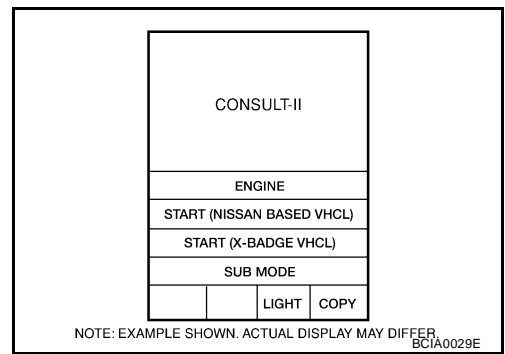

3. Touch "BCM" on "SELECT SYSTEM" screen.
If "BCM" is not indicated, go to [GI-41, "CONSULT-II Data Link Connector \(DLC\) Circuit"](#).

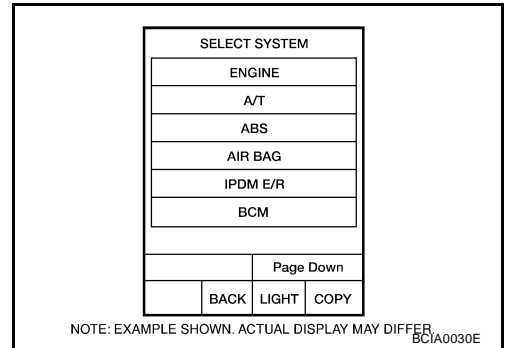

4. Touch "HEAD LAMP" on "SELECT TEST ITEM" screen.

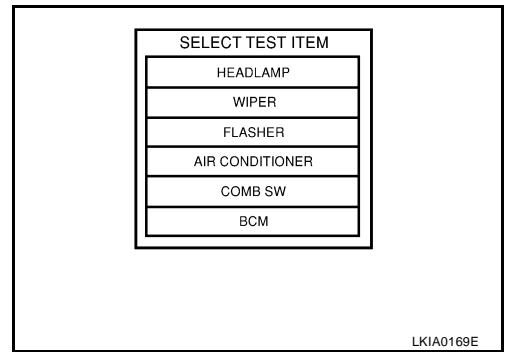

WORK SUPPORT

Operation Procedure

1. Touch "HEAD LAMP" on "SELECT TEST ITEM" screen.
2. Touch "WORK SUPPORT" on "SELECT DIAG MODE" screen.
3. Touch item on "SELECT WORK ITEM" screen.
4. Touch "START".
5. Touch "CHANGE SETT".
6. The setting will be changed and "CUSTOMIZING COMPLETED" will be displayed.
7. Touch "END".

Display Item List

Item	Description	CONSULT-II	Factory setting
BATTERY SAVER SET	Exterior lamp battery saver control mode can be changed in this mode. Selects exterior lamp battery saver control mode between ON/OFF.	ON	×
		OFF	—

DATA MONITOR

Operation Procedure

1. Touch "HEAD LAMP" on "SELECT TEST ITEM" screen.
2. Touch "DATA MONITOR" on "SELECT DIAG MODE" screen.
3. Touch either "ALL SIGNALS" or "SELECTION FROM MENU" on the "SELECT MONITOR ITEM" screen.

A
B
C
D
E
F
G
H
I
J
LT

HEADLAMP (FOR USA)

All signals	Monitors all the signals.
Selection from menu	Selects and monitors individual signal.

4. Touch "START".
5. When "SELECTION FROM MENU" is selected, touch individual items to be monitored. When "ALL SIGNALS" is selected, all the items will be monitored.
6. Touch "RECORD" while monitoring, then the status of the monitored item can be recorded. To stop recording, touch "STOP".

Display Item List

Monitor item	Contents
IGN ON SW "ON/OFF"	Displays "IGN position (ON)/OFF, ACC position (OFF)" judged from the ignition switch signal.
ACC ON SW "ON/OFF"	Displays "ACC (ON)/OFF, Ignition OFF (OFF)" status judged from ignition switch signal.
HI BEAM SW "ON/OFF"	Displays status (high beam switch: ON/Others: OFF) of high beam switch judged from lighting switch signal.
HEAD LAMP SW 1 "ON/OFF"	Displays status (headlamp switch 1: ON/Others: OFF) of headlamp switch 2 judged from lighting switch signal.
HEAD LAMP SW 2 "ON/OFF"	Displays status (headlamp switch 2: ON/Others: OFF) of headlamp switch 2 judged from lighting switch signal.
LIGHT SW 1ST "ON/OFF"	Displays status (lighting switch 1st position: ON/Others: OFF) of lighting switch judged from lighting switch signal.
AUTO LIGHT SW "ON/OFF"	Displays status of the lighting switch as judged from the lighting switch signal. (AUTO position: ON/Other than AUTO position: OFF)
PASSING SW "ON/OFF"	Displays status (flash-to-pass switch: ON/Others: OFF) of flash-to-pass switch judged from lighting switch signal.
FR FOG SW "ON/OFF"	Displays status (front fog lamp switch: ON/Others: OFF) of front fog lamp switch judged from lighting switch signal.
DOOR SW-DR "ON/OFF"	Displays status of the driver door as judged from the driver door switch signal. (Door is open: ON/Door is closed: OFF)
DOOR SW-AS "ON/OFF"	Displays status of the passenger door as judged from the passenger door switch signal. (Door is open: ON/Door is closed: OFF)
DOOR SW-RR "ON/OFF"	Displays status of the rear door as judged from the rear door switch (RH) signal. (Door is open: ON/Door is closed: OFF)
DOOR SW-RL "ON/OFF"	Displays status of the rear door as judged from the rear door switch (LH) signal. (Door is open: ON/Door is closed: OFF)
BACK DOOR SW "ON/OFF"	Not used.
TURN SIGNAL R "ON/OFF"	Displays status (Turn right: ON/Others: OFF) as judged from lighting switch signal.
TURN SIGNAL L "ON/OFF"	Displays status (Turn left: ON/Others: OFF) as judged from lighting switch signal.
CARGO LAMP SW "ON/OFF"	Displays status of cargo lamp switch.
OPTICAL SENSOR [0 - 5V]	Displays "ambient light (close to 5V when dark/close to 0V when light)" judged from optical sensor signal.

ACTIVE TEST

Operation Procedure

1. Touch "HEAD LAMP" on "SELECT TEST ITEM" screen.
2. Touch "ACTIVE TEST" on "SELECT DIAG MODE" screen.
3. Touch item to be tested and check operation of the selected item.
4. During the operation check, touching "BACK" deactivates the operation.

HEADLAMP (FOR USA)

Display Item List

Test item	Description
TAIL LAMP	Allows tail lamp relay to operate by switching ON-OFF.
HEAD LAMP	Allows headlamp relay (HI, LO) to operate by switching ON-OFF.
FR FOG LAMP	Allows fog lamp relay to operate by switching ON-OFF.
CARGO LAMP	Allows cargo lamp to operate by switching ON-OFF.
CORNERING LAMP	Not used.

SELF-DIAGNOSTIC RESULTS

Operation Procedure

1. Touch "BCM" on "SELECT TEST ITEM" screen.
2. Touch "SELF-DIAG RESULTS" on "SELECT DIAG MODE" screen.
3. Self-diagnostic results are displayed.

Display Item List

Monitored item	CONSULT-II display	Description
CAN communication	CAN communication [U1000]	Malfunction is detected in CAN communication.
CAN communication system	CAN communication system 1 to 6 [U1000]	Malfunction is detected in CAN system.

CONSULT-II Function (IPDM E/R)

EKS00HMR

CONSULT-II can display each diagnostic item using the diagnostic test modes shown following.


IPDM E/R diagnostic mode	Description
SELF-DIAG RESULTS	Displays IPDM E/R self-diagnosis results.
DATA MONITOR	Displays IPDM E/R input/output data in real time.
CAN DIAG SUPPORT MNTR	The result of transmit/receive diagnosis of CAN communication can be read.
ACTIVE TEST	Operation of electrical loads can be checked by sending drive signal to them.

CONSULT-II OPERATION

CAUTION:


If CONSULT-II is used with no connection of CONSULT-II CONVERTER, malfunctions might be detected in self-diagnosis depending on control unit which carries out CAN communication.

1. With the ignition switch OFF, connect CONSULT-II and CONSULT-II CONVERTER to the data link connector, then turn the ignition switch ON.

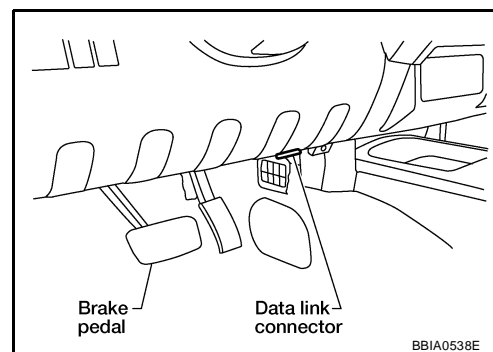


HEADLAMP (FOR USA)


2. Touch "START (NISSAN BASED VHCL)".

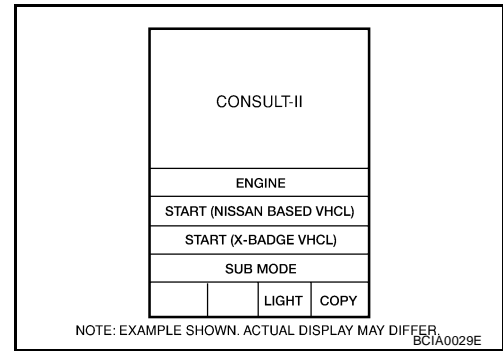

3. Touch "IPDM E/R" on "SELECT SYSTEM" screen. If "IPDM E/R" is not displayed, refer to [GI-41, "CONSULT-II Data Link Connector \(DLC\) Circuit"](#).

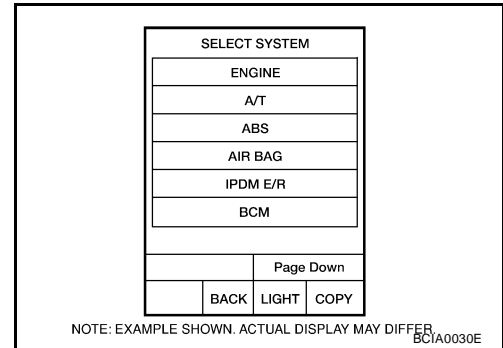

4. Select the desired part to be diagnosed on the "SELECT DIAG MODE" screen.

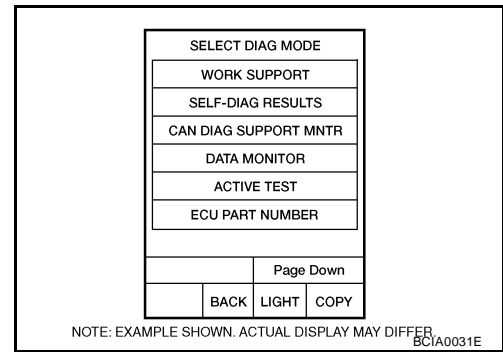

DATA MONITOR

Operation Procedure

1. Touch "DATA MONITOR" on "SELECT DIAG MODE" screen.
2. Touch "ALL SIGNALS", "MAIN SIGNALS" or "SELECTION FROM MENU" on the "SELECT MONITOR ITEM" screen.

ALL SIGNALS	All items will be monitored.
MAIN SIGNALS	Monitor the predetermined item.
SELECTION FROM MENU	Select any item for monitoring.

3. Touch "START".
4. Touch the required monitoring item on "SELECTION FROM MENU". In "ALL SIGNALS", all items are monitored. In "MAIN SIGNALS", predetermined items are monitored.
5. Touch "RECORD" while monitoring to record the status of the item being monitored. To stop recording, touch "STOP".

HEADLAMP (FOR USA)

All Signals, Main Signals, Selection From Menu

Item name	CONSULT-II screen display	Display or unit	Monitor item selection			Description
			ALL SIGNALS	MAIN SIGNALS	SELECTION FROM MENU	
Parking, license plate and tail lamps request	TAIL&CLR REQ	ON/OFF	×	×	×	Signal status input from BCM
Headlamp low beam request	HL LO REQ	ON/OFF	×	×	×	Signal status input from BCM
Headlamp high beam request	HL HI REQ	ON/OFF	×	×	×	Signal status input from BCM
Daytime lights request	DTRL REQ	ON/OFF	×	-	×	Signal status input from BCM
Front fog lamps request	FR FOG REQ	ON/OFF	×	×	×	Signal status input from BCM

NOTE:

Perform monitoring of IPDM E/R data with the ignition switch ON. When the ignition switch is at ACC, the display may not be correct.

ACTIVE TEST

Operation Procedure

1. Touch "ACTIVE TEST" on "SELECT DIAG MODE" screen.
2. Touch "EXTERNAL LAMPS" on "SELECT TEST ITEM" screen.
3. Touch item to be tested, and check operation.
4. Touch "START".
5. Touch "STOP" while testing to stop the operation.

Test item	CONSULT-II screen display	Description
Tail lamp relay output	TAIL LAMP	Allows tail lamp relay to operate by switching operation ON-OFF at your option.
Headlamp relay (HI, LO) output	LAMPS	Allows headlamp relay (HI, LO) to operate by switching operation (OFF, HI, LO) at your option (Head lamp high beam repeats ON-OFF every 1 second).
Front fog lamp relay (FOG) output		Allows fog lamp relay (FOG) to operate by switching operation ON-OFF at your option.

Headlamp HI Does Not Illuminate (Both Sides)

EKS00HMS

1. CHECK COMBINATION SWITCH INPUT SIGNAL

Select "BCM" on CONSULT-II. With "HEAD LAMP" data monitor, make sure "HI BEAM SW" turns ON-OFF linked with operation of lighting switch.

**When lighting switch is in : HI BEAM SW ON
HIGH position**

OK or NG

OK >> GO TO 2.

NG >> Check lighting switch. Refer to [LT-70, "Combination Switch Inspection"](#).

DATA MONITOR	
MONITOR	MONITOR
HI BEAM SW	ON

SKIA4193E

HEADLAMP (FOR USA)

2. HEADLAMP ACTIVE TEST

1. Select "IPDM E/R" on CONSULT-II, and select "ACTIVE TEST" on "SELECT DIAG MODE" screen.
2. Select "EXTERNAL LAMPS" on "SELECT TEST ITEM" screen.
3. Touch "HI" on "ACTIVE TEST" screen.
4. Make sure headlamp high beam operates.

Headlamp high beam should operate.

OK or NG

- OK >> GO TO 3.
 NG >> GO TO 4.

ACTIVE TEST			
EXTERNAL LAMPS		OFF	
		TAIL	
LO		HI	
FOG			
MODE	BACK	LIGHT	COPY

WKIA1438E

3. CHECK IPDM E/R

1. Select "IPDM E/R" on CONSULT-II, and select "DATA MONITOR" on "SELECT DIAG MODE" screen.
2. Make sure "HL LO REQ" and "HL HI REQ" turns ON when lighting switch is in HIGH position.

**When lighting switch is in HIGH position : HL LO REQ ON
 : HL HI REQ ON**

OK or NG


- OK >> Replace IPDM E/R. Refer to [PG-34, "Removal and Installation of IPDM E/R"](#) .
 NG >> Replace BCM. Refer to [BCS-26, "Removal and Installation of BCM"](#) .

DATA MONITOR			
MONITOR			
HL LO REQ	ON		
HL HI REQ	ON		
		Page Down	
		RECORD	
MODE	BACK	LIGHT	COPY

SKIA5775E

4. CHECK HEADLAMP INPUT SIGNAL

1. Turn ignition switch OFF.
2. Disconnect front combination lamp RH and LH (headlamp) connectors.
3. Turn ignition switch ON.
4. Select "IPDM E/R" on CONSULT-II, and select "ACTIVE TEST" on "SELECT DIAG MODE" screen.
5. Select "EXTERNAL LAMPS" on "SELECT TEST ITEM" screen.
6. Touch "HI" on "ACTIVE TEST" screen.
7. When headlamp high beam is operating, check voltage between front combination lamp RH and LH (headlamp) harness connector and ground.

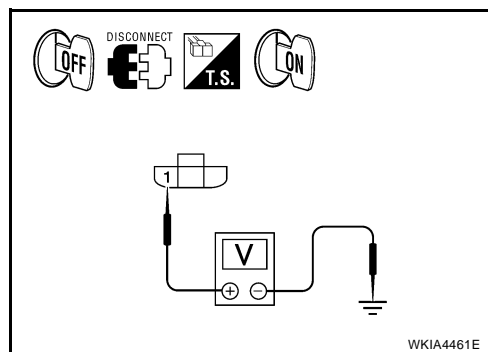

Front combination lamp (headlamp)		Terminal	(-)	Voltage
(+) Connector				
RH	E107	1	Ground	Battery voltage
LH	E11			

OK or NG

- OK >> GO TO 6.
 NG >> GO TO 5.

HEADLAMP (FOR USA)


5. CHECK HEADLAMP CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check continuity between IPDM E/R harness connector E123 terminal 56 and front combination lamp RH (headlamp) harness connector E107 terminal 1.

56 - 1 : Continuity should exist.

4. Check continuity between IPDM E/R harness connector E123 terminal 55 and front combination lamp LH (headlamp) harness connector E11 terminal 1.

55 - 1 : Continuity should exist.

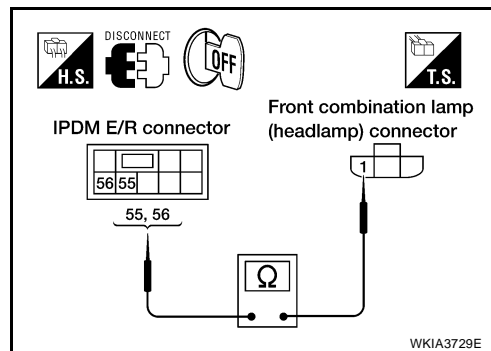

OK or NG

- OK >> Replace IPDM E/R. Refer to [PG-34, "Removal and Installation of IPDM E/R"](#).
- NG >> Repair harness or connector.


6. CHECK HEADLAMP GROUND

1. Turn ignition switch OFF.
2. Check continuity between front combination lamp RH (headlamp) harness connector E107 terminal 2 and ground.

2 - Ground : Continuity should exist.

3. Check continuity between front combination lamp LH (headlamp) harness connector E11 terminal 2 and ground.

2 - Ground : Continuity should exist.

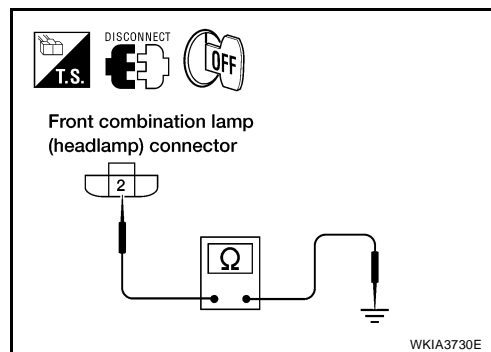

OK or NG

- OK >> Check front headlamp connector for damage or poor connection. Repair as necessary.
- NG >> Repair harness or connector.

Headlamp HI Does Not Illuminate (One Side)

EKS00HMT

1. BULB INSPECTION

Inspect inoperative headlamp bulb.

OK or NG

- OK >> GO TO 2.
- NG >> Replace headlamp bulb. Refer to [LT-27, "HEADLAMP BULB"](#).

HEADLAMP (FOR USA)


2. CHECK POWER TO HEADLAMP

1. Disconnect inoperative headlamp connector.
2. Turn the high beam headlamps ON.
3. Check voltage between inoperative headlamp terminal and ground.

Front combination lamp (headlamp)		Terminal	(-)	Voltage (Approx.)
(+)				
Connector		1	Ground	Battery voltage
RH	E107			
LH	E11			

OK or NG

- OK >> GO TO 3.
 NG >> GO TO 4.

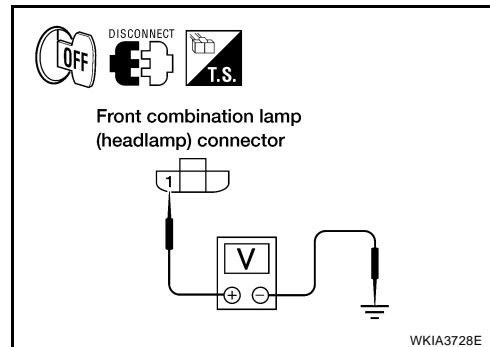


3. CHECK HEADLAMP GROUND

1. Turn the high beam headlamps OFF.
2. Check continuity between inoperative headlamp connector and ground.

Front combination lamp (headlamp)		Terminal	Ground	Continuity
Connector				
RH	E107	2	Ground	Yes
LH	E11			

OK or NG

- OK >> Check headlamp connector for damage or poor connection. Repair as necessary.
 NG >> Repair open circuit in harness between inoperative headlamp and ground.

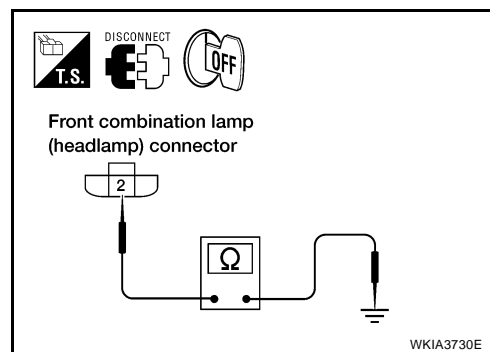


4. INSPECTION BETWEEN IPDM E/R AND HEADLAMPS

1. Disconnect IPDM E/R connector and inoperative headlamp connector.
2. Check continuity between harness connector terminals of IPDM E/R and harness connector terminals of inoperative headlamp.

IPDM E/R		Front combination lamp (headlamp)		Continuity
Connector	Terminal	Connector	Terminal	
E123	56	RH	E107	Yes
	55	LH	E11	

OK or NG

- OK >> Replace IPDM E/R. Refer to [PG-34, "Removal and Installation of IPDM E/R"](#).
 NG >> Check for short circuits and open circuits in harness between IPDM E/R and headlamps. Repair as necessary.

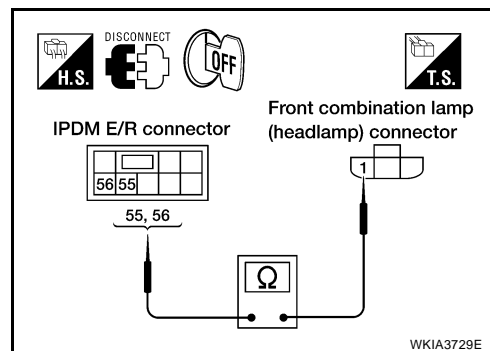

High Beam Indicator Lamp Does Not Illuminate

EKS00HMU

1. BULB INSPECTION

Inspect CAN communication system. Refer to [LAN-21, "CAN COMMUNICATION"](#).

OK or NG

- OK >> Replace combination meter. Refer to [DI-27, "COMBINATION METER"](#).
 NG >> Repair as necessary.

HEADLAMP (FOR USA)

EKS00HMV

Headlamp LO Does Not Illuminate (Both Sides)

1. CHECK COMBINATION SWITCH INPUT SIGNAL

Select "BCM" on CONSULT-II. With "HEAD LAMP" data monitor, make sure "HEAD LAMP SW 1" and "HEAD LAMP SW 2" turns ON-OFF linked with operation of lighting switch.

**When lighting switch is in 2ND position : HEAD LAMP SW 1 ON
: HEAD LAMP SW 2 ON**

OK or NG

- OK >> GO TO 2.
- NG >> Check lighting switch. Refer to [LT-70, "Combination Switch Inspection"](#).

DATA MONITOR	
MONITOR	
HEAD LAMP SW1	ON
HEAD LAMP SW2	ON

SKIA4194E

2. HEADLAMP ACTIVE TEST

1. Select "IPDM E/R" on CONSULT-II, and select "ACTIVE TEST" on "SELECT DIAG MODE" screen.
2. Select "EXTERNAL LAMPS" on "SELECT TEST ITEM" screen.
3. Touch "LO" on "ACTIVE TEST" screen.
4. Make sure headlamp low beam operates.

Headlamp low beam should operate.

OK or NG

- OK >> GO TO 3.
- NG >> GO TO 4.

ACTIVE TEST			
EXTERNAL LAMPS		OFF	
		TAIL	
LO		HI	
FOG			
MODE	BACK	LIGHT	COPY

WKIA1438E

3. CHECK IPDM E/R

1. Select "IPDM E/R" on CONSULT-II, and select "DATA MONITOR" on "SELECT DIAG MODE" screen.
2. Make sure "HL LO REQ" turns ON when lighting switch is in 2ND position.

When lighting switch is in 2ND position : HL LO REQ ON

OK or NG

- OK >> Replace IPDM E/R. Refer to [PG-34, "Removal and Installation of IPDM E/R"](#).
- NG >> Replace BCM. Refer to [BCS-26, "Removal and Installation of BCM"](#).

DATA MONITOR			
MONITOR			
HL LO REQ		ON	
		Page Down	
RECORD			
MODE	BACK	LIGHT	COPY

SKIA5780E

HEADLAMP (FOR USA)


4. CHECK HEADLAMP INPUT SIGNAL

1. Turn ignition switch OFF.
2. Disconnect front combination lamp RH and LH (headlamp) connector.
3. Turn ignition switch ON.
4. Select "IPDM E/R" on CONSULT-II, and select "ACTIVE TEST" on "SELECT DIAG MODE" screen.
5. Select "EXTERNAL LAMPS" on "SELECT TEST ITEM" screen.
6. Touch "LO" on "ACTIVE TEST" screen.
7. When headlamp low beam is operating, check voltage between front combination lamp RH and LH (headlamp) harness connector and ground.

Front combination lamp (headlamp)		Terminal	(-)	Voltage
(+) Connector				
RH	E107	3	Ground	Battery voltage
LH	E11			

OK or NG

- OK >> GO TO 6.
 NG >> GO TO 5.

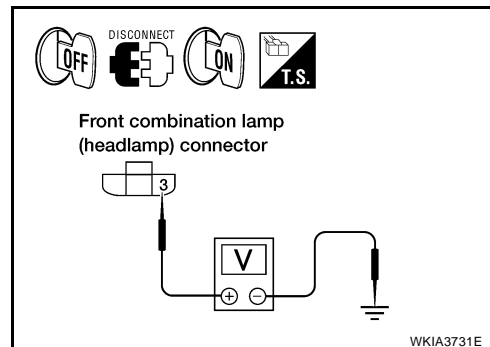

5. CHECK HEADLAMP CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check continuity between IPDM E/R harness connector E123 terminal 54 and front combination lamp RH (headlamp) harness connector E107 terminal 3.


54 - 3 : Continuity should exist.

4. Check continuity between IPDM E/R harness connector E123 terminal 52 and front combination lamp LH (headlamp) harness connector E11 terminal 3.

52 - 3 : Continuity should exist.

OK or NG

- OK >> Replace IPDM E/R. Refer to [PG-34, "Removal and Installation of IPDM E/R"](#) .
 NG >> Repair harness or connector.

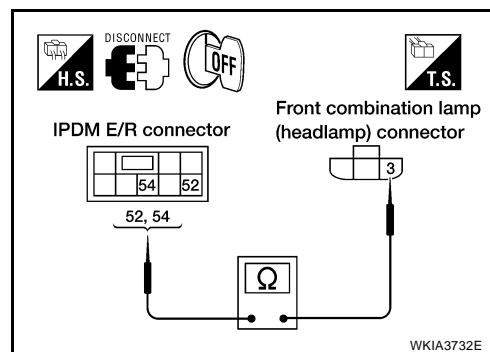

6. CHECK HEADLAMP GROUND

1. Turn ignition switch OFF.
2. Check continuity between front combination lamp RH (headlamp) harness connector E107 terminal 2 and ground.


2 - Ground : Continuity should exist.

3. Check continuity between front combination lamp LH (headlamp) harness connector E11 terminal 2 and ground.

2 - Ground : Continuity should exist.

OK or NG

- OK >> Check front combination lamp (headlamp) connector for damage or poor connection. Repair as necessary.
 NG >> Repair harness or connector.

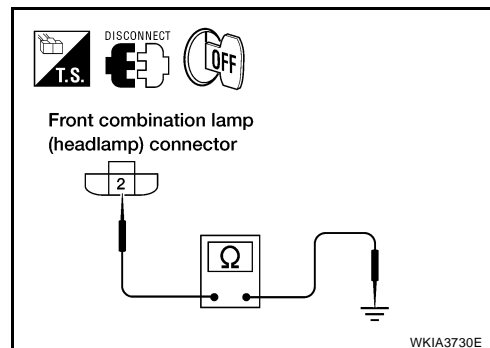

HEADLAMP (FOR USA)

EKS00HMW

Headlamp LO Does Not Illuminate (One Side)

1. BULB INSPECTION

Inspect inoperative headlamp bulb.

OK or NG

OK >> GO TO 2.

NG >> Replace headlamp bulb. Refer to [LT-27, "HEADLAMP BULB"](#).

2. CHECK POWER TO HEADLAMP


1. Disconnect inoperative headlamp connector.
2. Turn the low beam headlamps ON.
3. Check voltage between inoperative headlamp connector terminal and ground.

Front combination lamp (headlamp)		Terminal	(-)	Voltage (Approx.)
(+)				
Connector				
RH	E107	3	Ground	Battery voltage
LH	E11			

OK or NG

OK >> GO TO 3.

NG >> GO TO 4.

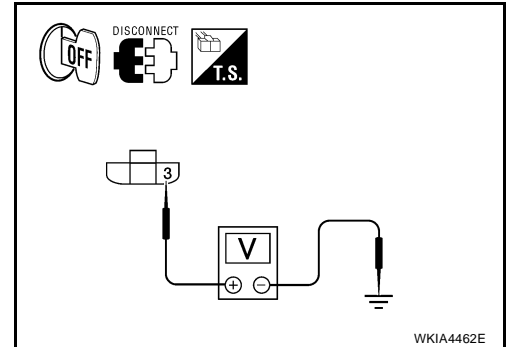

3. CHECK HEADLAMP GROUND


1. Turn the low beam headlamps OFF.
2. Check continuity between inoperative headlamp connector terminal and ground.

Front combination lamp (headlamp)		Terminal	Ground	Continuity
Connector				
RH	E107	2	Ground	Yes
LH	E11			

OK or NG

OK >> Check headlamp and IPDM E/R connector. Repair as necessary.

NG >> Repair open circuit in harness between inoperative headlamp and ground.

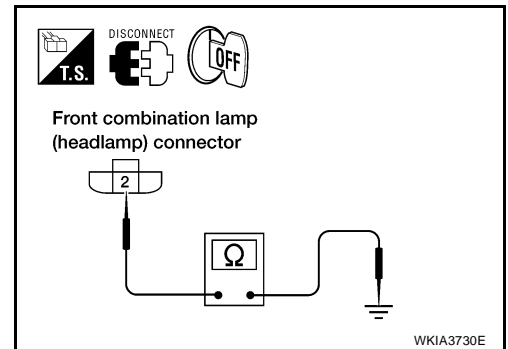

HEADLAMP (FOR USA)


4. INSPECTION BETWEEN IPDM E/R AND HEADLAMPS

1. Disconnect IPDM E/R connector.
2. Check continuity between harness connector terminals of IPDM E/R and harness connector terminals of inoperative headlamp.

IPDM E/R		Front combination lamp (headlamp)		Continuity
Connector	Terminal	Connector	Terminal	
E123	54	RH	E107	Yes
	52	LH	E11	

OK or NG

- OK >> Replace IPDM E/R. Refer to [PG-34, "Removal and Installation of IPDM E/R"](#) .
- NG >> Check for short circuits and open circuits in harness between IPDM E/R and headlamps. Repair as necessary.

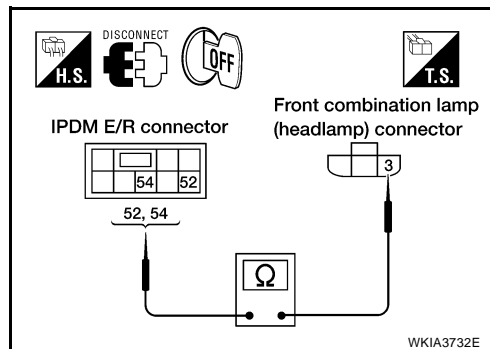

Headlamps Do Not Turn OFF

EKS00HMX

1. CHECK COMBINATION SWITCH INPUT SIGNAL

Select "BCM" on CONSULT-II. With "HEAD LAMP" data monitor, make sure "HEAD LAMP SW 1" and "HEAD LAMP SW 2" turns ON-OFF linked with operation of lighting switch.

**When lighting switch is in OFF position : HEAD LAMP SW 1 OFF
: HEAD LAMP SW 2 OFF**

OK or NG

- OK >> Replace IPDM E/R. Refer to [PG-34, "Removal and Installation of IPDM E/R"](#) .
- NG >> GO TO 2.

DATA MONITOR	
MONITOR	
HEAD LAMP SW 1	OFF
HEAD LAMP SW 2	OFF

SKIA5200E

2. CHECK LIGHTING SWITCH

Check lighting switch. Refer to [LT-70, "Combination Switch Inspection"](#) .

OK or NG

- OK >> GO TO 3.
- NG >> Replace lighting switch. Refer to [LT-65, "Removal and Installation"](#) .

3. CHECKING CAN COMMUNICATIONS BETWEEN BCM AND IPDM E/R

Select "BCM" on CONSULT-II and perform self-diagnosis for BCM.

Display of self-diagnosis results

- NO DTC>> Replace IPDM E/R. Refer to [PG-34, "Removal and Installation of IPDM E/R"](#) .
- CAN COMM CIRCUIT>> Refer to [BCS-19, "CAN Communication Inspection Using CONSULT-II \(Self-Diagnosis\)"](#) .


SELF-DIAG RESULTS			
DTC RESULTS		TIME	
CAN COMM CIRCUIT [U1000]		PAST	
ERASE		PRINT	
MODE	BACK	LIGHT	COPY

SKIA1039E

HEADLAMP (FOR USA)

Aiming Adjustment

EKS00HMY

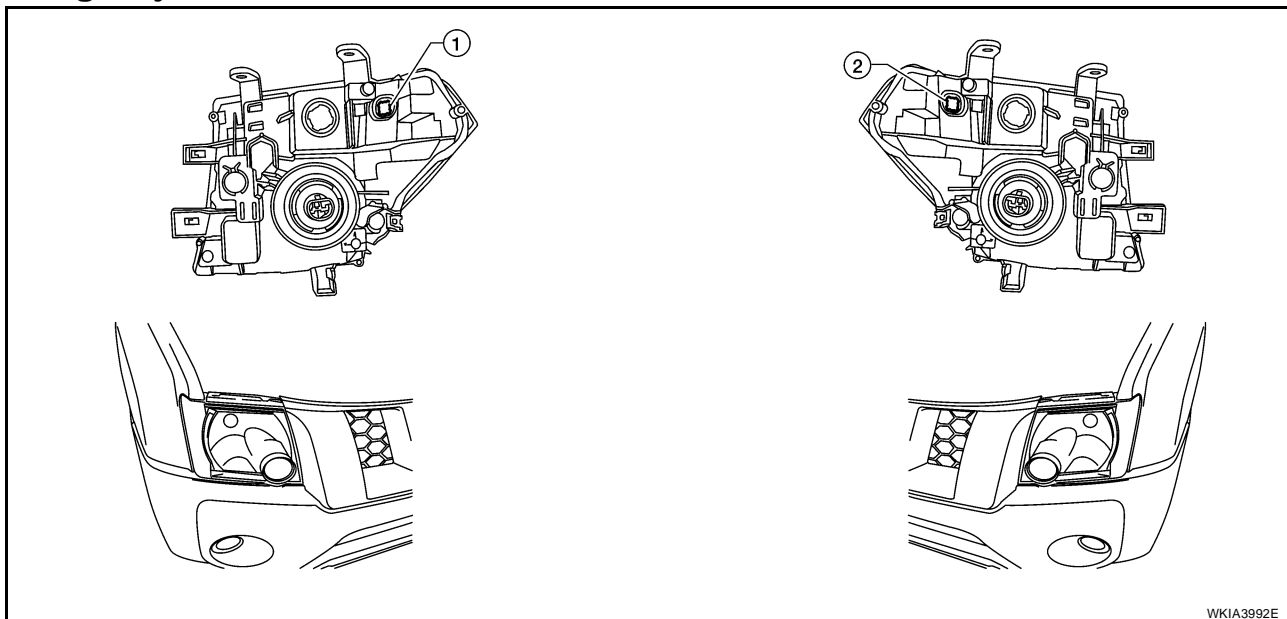

1. Adjustment screw (passenger side) 2. Adjustment screw (driver side)

For details, refer to the regulations in your area.

NOTE:

If vehicle front body has been repaired and /or the headlamp assembly has been replaced, check headlamp aiming.

- Before performing aiming adjustment, check the following:
 - Confirm headlamp aiming switch is set to "0" (zero) position.
 - Ensure all tires are inflated to correct pressure.
 - Place vehicle and screen on level surface.
 - Ensure there is no load in vehicle other than the driver (or equivalent weight placed in driver's position). Coolant and engine oil filled to correct level, and fuel tank full.
 - Confirm spare tire, jack and tools are properly stowed.
 - Aim each headlamp individually and ensure other headlamp beam pattern is blocked from screen.
 - Use adjusting screw to perform aiming adjustment

LOW BEAM AND HIGH BEAM

CAUTION:

Do not tighten adjustment screw beyond a torque of 1.67 N·m (17 kg·cm, 14.8 in·lb) or damage may occur.

NOTE:


By regulation, no means for horizontal aim adjustment is provided from the factory; only vertical aim is adjustable.

1. Turn headlamp low beam on.
2. Use adjustment screw to perform aiming adjustment.
3. Adjust beam pattern until cut-off line (top edge of illumination area) is positioned at same height off ground as bulb center (on H-line). Measure cut-off line within distance A on H-line. See aiming chart below.

- **Basic illuminating area for adjustment should be within the range shown on the aiming chart. Adjust headlamps accordingly.**

HEADLAMP (FOR USA)

HEADLAMP AIMING

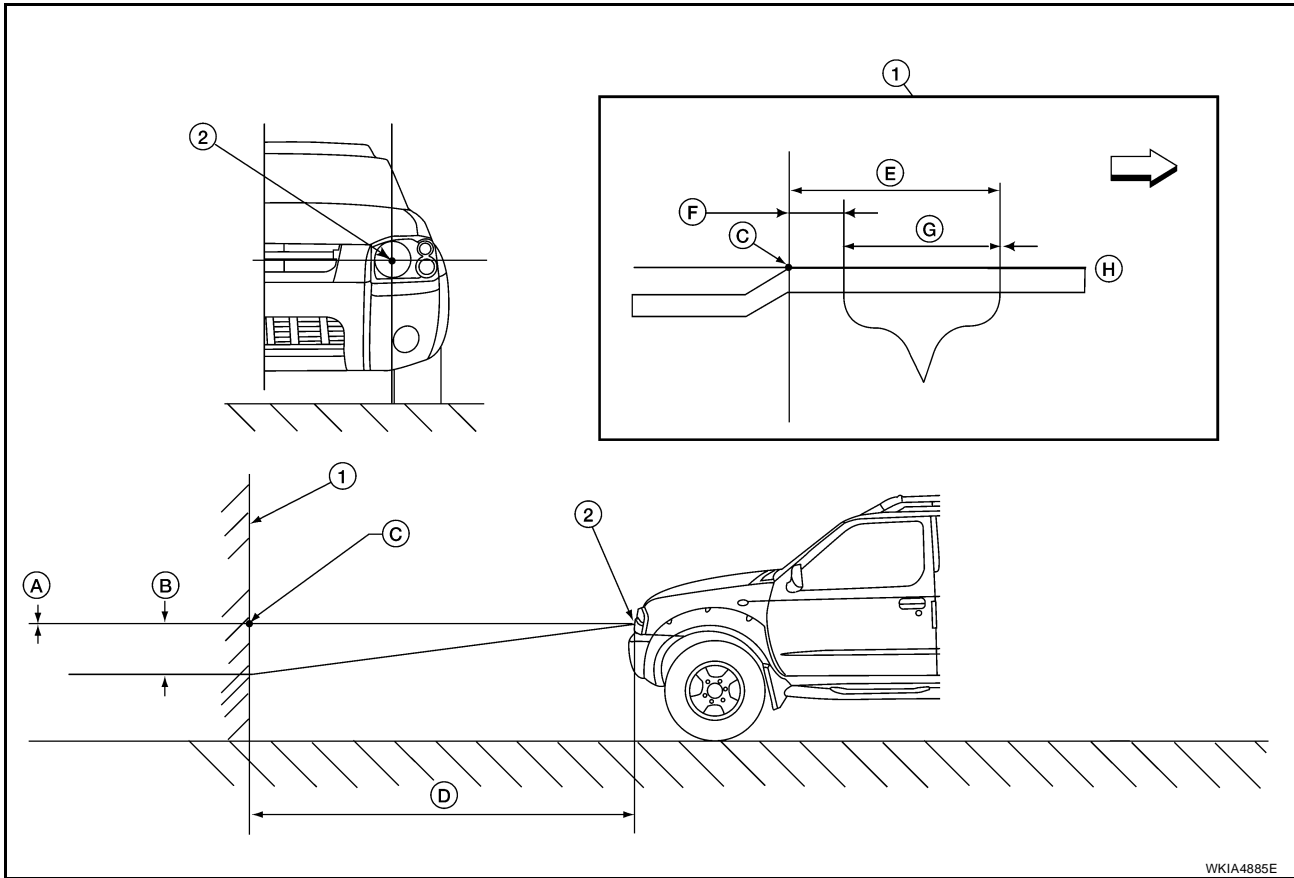

WKIA4885E

- | | | | | | |
|---|---|---|--|---|---|
| 1 | Adjustment screen | 2 | Headlamp bulb center (HV point) | A | Minimum acceptable vertical aim dimension (see aiming chart) |
| B | Maximum acceptable vertical aim dimension (see aiming chart) | C | H-V point | D | Distance of headlamp aiming screen from vehicle 7.62 m (25 ft.) |
| E | Maximum aim evaluation distance from vertical center on aiming screen 399mm (3° R). | F | Minimum aim evaluation distance from vertical center on aiming screen 133 mm (1°R) | G | Aim evaluation area |
| H | Horizontal aiming evaluation line. | ⇒ | Right | | |

Aiming Chart

A (Minimum acceptable vertical aim dimension)	-3.3 mm (0.13 in)	0.025° up
B (Maximum acceptable vertical aim dimension)	36.6 mm (1.44 in)	0.275° down

HEADLAMP (FOR USA)

EKS00HMZ

Bulb Replacement

CAUTION:

Leaving bulb removed from the headlamp housing for a long period of time can deteriorate the performance of the lens and reflector (dirt, clouding). Always prepare a new bulb and have it on hand when replacing a bulb.

HEADLAMP BULB

Removal

Grasp only the plastic base when handling headlamp bulb. Never touch the glass envelope.

1. Turn front headlamp switch OFF.
2. Disconnect the electrical connector.
3. Rotate the headlamp bulb retaining ring counterclockwise and remove.
4. Pull the headlamp bulb straight out from the headlamp assembly.

Installation

Installation is in the reverse order of removal.

CAUTION:

- After installing bulb, be sure to install the bulb socket and plastic cap securely to ensure watertightness.

FRONT TURN SIGNAL/PARKING LAMP BULB

Removal

1. Turn the bulb socket counterclockwise to unlock it.
2. Pull the bulb to remove it from the socket.

Installation

Installation is in the reverse order of removal.

CAUTION:

- After installing bulb, be sure to install the bulb socket and plastic cap securely to ensure watertightness.

FRONT SIDE MARKER LAMP BULB

Removal

1. Turn the bulb socket counterclockwise to unlock it.
2. Pull the bulb to remove it from the socket.

Installation

Installation is in the reverse order of removal.

CAUTION:


After installing bulb, be sure to install the bulb socket securely for watertightness.

Removal and Installation FRONT COMBINATION LAMP

EKS00HNO

Removal

1. Position front fender protector aside. Refer to [EI-19, "FENDER PROTECTOR"](#).
2. Remove the front bumper upper valance. Refer to [EI-14, "FRONT BUMPER"](#).
3. Remove the front combination lamp bolts.

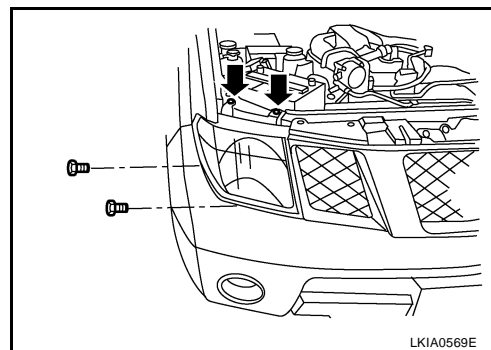

HEADLAMP (FOR USA)

4. Disconnect the front combination lamp connector and remove front combination lamp.

Installation


Installation is in the reverse order of removal.

: **6.0 N·m (0.61 kg-m, 53 in-lb)**

HEADLAMP (FOR USA)

Disassembly and Assembly

EKS00HN1

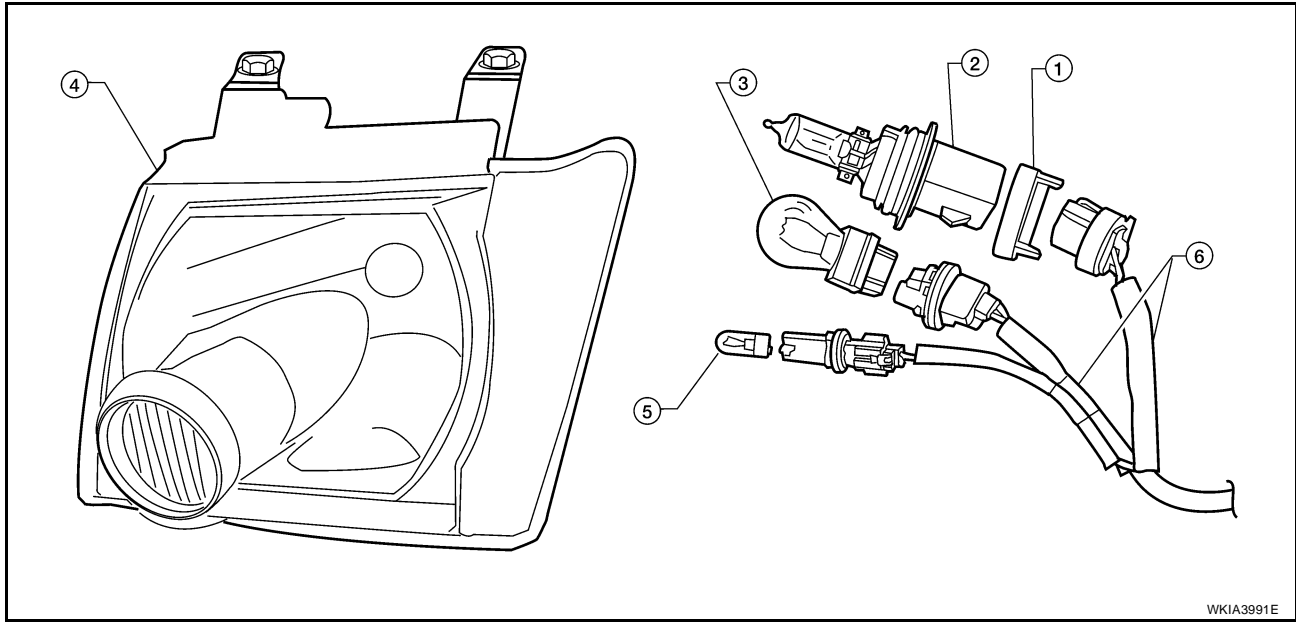

- 1. Headlamp bulb retaining ring
- 4. Headlamp assembly

- 2. Headlamp bulb
- 5. Front side marker lamp bulb

- 3. Front turn signal/parking lamp bulb
- 6. Wiring harness assembly

WKIA3991E

A
B
C
D
E
F
G
H
I
J
LT
L
M


HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

PF26010

Component Parts and Harness Connector Location

EKS00HNY

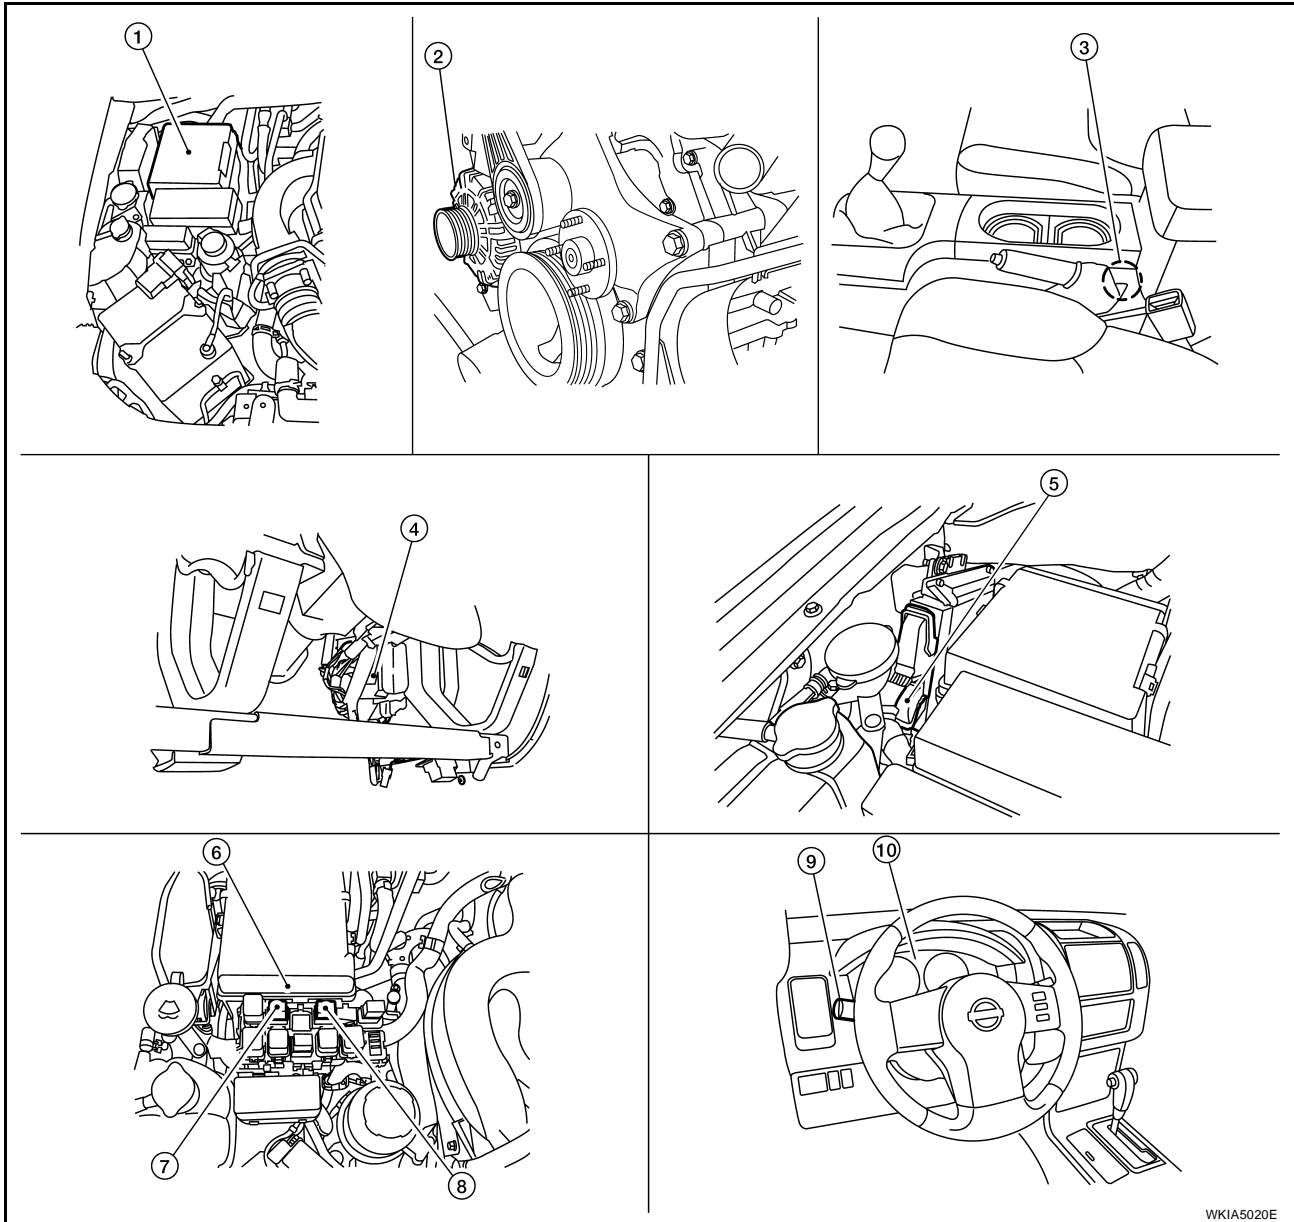

WKIA5020E

- | | | |
|---|--|--|
| 1. IPDM E/R
E122, E123, E124 | 2. Generator
E205 | 3. Parking brake switch
B84 |
| 4. BCM
M18, M20
(view with lower instrument panel LH removed) | 5. ECM
E16
(view with ECM cover removed) | 6. Fuse and relay box |
| 7. Daytime light relay 1
E103 | 8. Daytime light relay 2
E104 | 9. Combination switch (lighting switch)
M28 |
| 10. Combination meter
M24 | | |

System Description

EKS00EJ0

Daytime light system turns on daytime light lamps while driving. Daytime light lamps are not turned on if engine is activated with parking brake on. Take off parking brake to turn on daytime light lamps. The lamps turn off when lighting switch is in the 2ND position (Headlamp is "ON") and when lighting switch is in the PASSING position. (Daytime light lamps are not turned off only by parking brake itself.)

A parking brake signal and engine run or stop signal are sent to BCM (body control module) by CAN communication line.

HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

OUTLINE

Power is supplied at all times

- to ignition relay, located in the IPDM E/R (intelligent power distribution module engine room), and
- through 10A fuse [No. 19, located in the fuse block (J/B)]
- to combination meter terminal 3, and
- through 20A fuse [No. 52 and 53, located in the IPDM E/R (intelligent power distribution module engine room)]
- to CPU (central processing unit) of IPDM E/R, and
- to headlamp high relay, located in the IPDM E/R, and
- to headlamp low relay, located in the IPDM E/R, and
- through 50A fusible link (letter **g** , located in the fuse and fusible link box)
- to BCM terminal 70,
- through 10A fuse [No. 18, located in the fuse block (J/B)]
- to BCM terminal 57, and
- through 10A fuse (No. 45, located in the IPDM E/R)
- to daytime light relay 1 terminals 2 and 5.

When the ignition switch is in ACC or ON position, power is supplied

- through 10A fuse [No. 4, located in the fuse block (J/B)]
- to BCM terminal 11.

When the ignition switch is in ON or START position, power is supplied

- to ignition relay, located in the IPDM E/R, and
- through 10A fuse [No. 14, located in the fuse block (J/B)]
- to combination meter terminal 16, and
- through 10A fuse [No. 1, located in the fuse block (J/B)]
- to BCM terminal 38.

Ground is supplied

- to BCM terminal 67 and
- to combination meter terminals 13 and 23
- through grounds M57, M61 and M79, and
- to IPDM E/R terminals 38 and 59
- through grounds E9, E15 and E24.

Low Beam Operation

With the lighting switch in 2ND position, the BCM receives input requesting the headlamps to illuminate. This input is communicated to the IPDM E/R across the CAN communication lines. The CPU of the IPDM E/R controls the headlamp low relay coil. When energized, this relay directs power

- through 15A fuse (No. 41, located in the IPDM E/R)
- through IPDM E/R terminal 54
- to front combination lamp RH (headlamp) terminal 3, and
- through 15A fuse (No. 40, located in the IPDM E/R)
- through IPDM E/R terminal 52
- to daytime light relay 2 terminals 2 and 5, and
- through daytime light relay 2 terminal 3
- to front combination lamp LH (headlamp) terminal 3.

Ground is supplied

- to front combination lamp RH (headlamp) terminal 2
- to daytime light relay 1 terminal 4
- to daytime light relay 2 terminal 1
- through grounds E9, E15 and E24.

A
B
C
D
E
F
G
H
I
J
LT
L
M

HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

When the CPU of the IPDM E/R energizes the headlamp low relay, it de-energizes daytime relay 1. When de-energized, this relay supplies ground

- to front combination lamp LH (headlamp) terminal 2
- through daytime light relay 1 terminal 3.

With power and ground supplied, low beam headlamps illuminate.

High Beam Operation/Flash-to-Pass Operation

With the lighting switch in 2ND position and placed in HIGH or PASS position, the BCM receives input requesting the headlamp high beams to illuminate. This input is communicated to the IPDM E/R across the CAN communication lines. The CPU of the combination meter controls the ON/OFF status of the HIGH BEAM indicator. The CPU of the IPDM E/R controls the headlamp high relay coil. When energized, this relay directs power

- through 10A fuse (No. 34, located in the IPDM E/R)
- through IPDM E/R terminal 56
- to front combination lamp RH (headlamp) terminal 1, and
- through 10A fuse (No. 35, located in the IPDM E/R)
- through IPDM E/R terminal 55
- to front combination lamp LH (headlamp) terminal 1.

Ground is supplied

- to front combination lamp RH (headlamp) terminal 2, and
- to daytime light relay 1 terminal 4, and
- to daytime light relay 2 terminal 1
- through grounds E9, E15 and E24.

When the CPU of the IPDM E/R energizes the headlamp high relay, it de-energizes daytime relay 1. When de-energized, this relay supplies ground

- to front combination lamp LH (headlamp) terminal 2
- through daytime light relay 1 terminal 3.

With power and ground supplied, the high beam headlamps illuminate.

DAYTIME LIGHT OPERATION

With the engine running, the lighting switch in the OFF or 1ST position and parking brake released, the IPDM E/R receives input requesting the daytime lights illuminate. This input is communicated across the CAN communication lines. The CPU of the IPDM E/R controls daytime light relay 1 which supplies ground

- to daytime light relay 1 terminal 1
- through IPDM E/R terminal 44.

When energized, daytime light relay 1 directs power

- through daytime light relay 1 terminal 3
- through front combination lamp LH (headlamp) terminal 2
- through front combination lamp LH (headlamp) terminal 1
- through IPDM E/R terminal 55
- through 10A fuse (No. 35, located in the IPDM E/R)
- through 10A fuse (No. 34, located in the IPDM E/R)
- through IPDM E/R terminal 56
- to front combination lamp RH (headlamp) terminal 1.

Ground is supplied

- to front combination lamp RH (headlamp) terminal 2
- through grounds E9, E15 (all) and E24 (VQ40DE engine only).

With power and ground supplied, the daytime lights illuminate. The high beam headlamps are now wired in series and illuminate at a reduced intensity.

COMBINATION SWITCH READING FUNCTION

Refer to [BCS-3, "COMBINATION SWITCH READING FUNCTION"](#) .

HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

CAN Communication System Description

EKS00EJ1

Refer to [LAN-21, "CAN COMMUNICATION"](#).

A

B

C

D

E

F

G

H

I

J

LT


L

M

HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

EKS00EJ2

Schematic

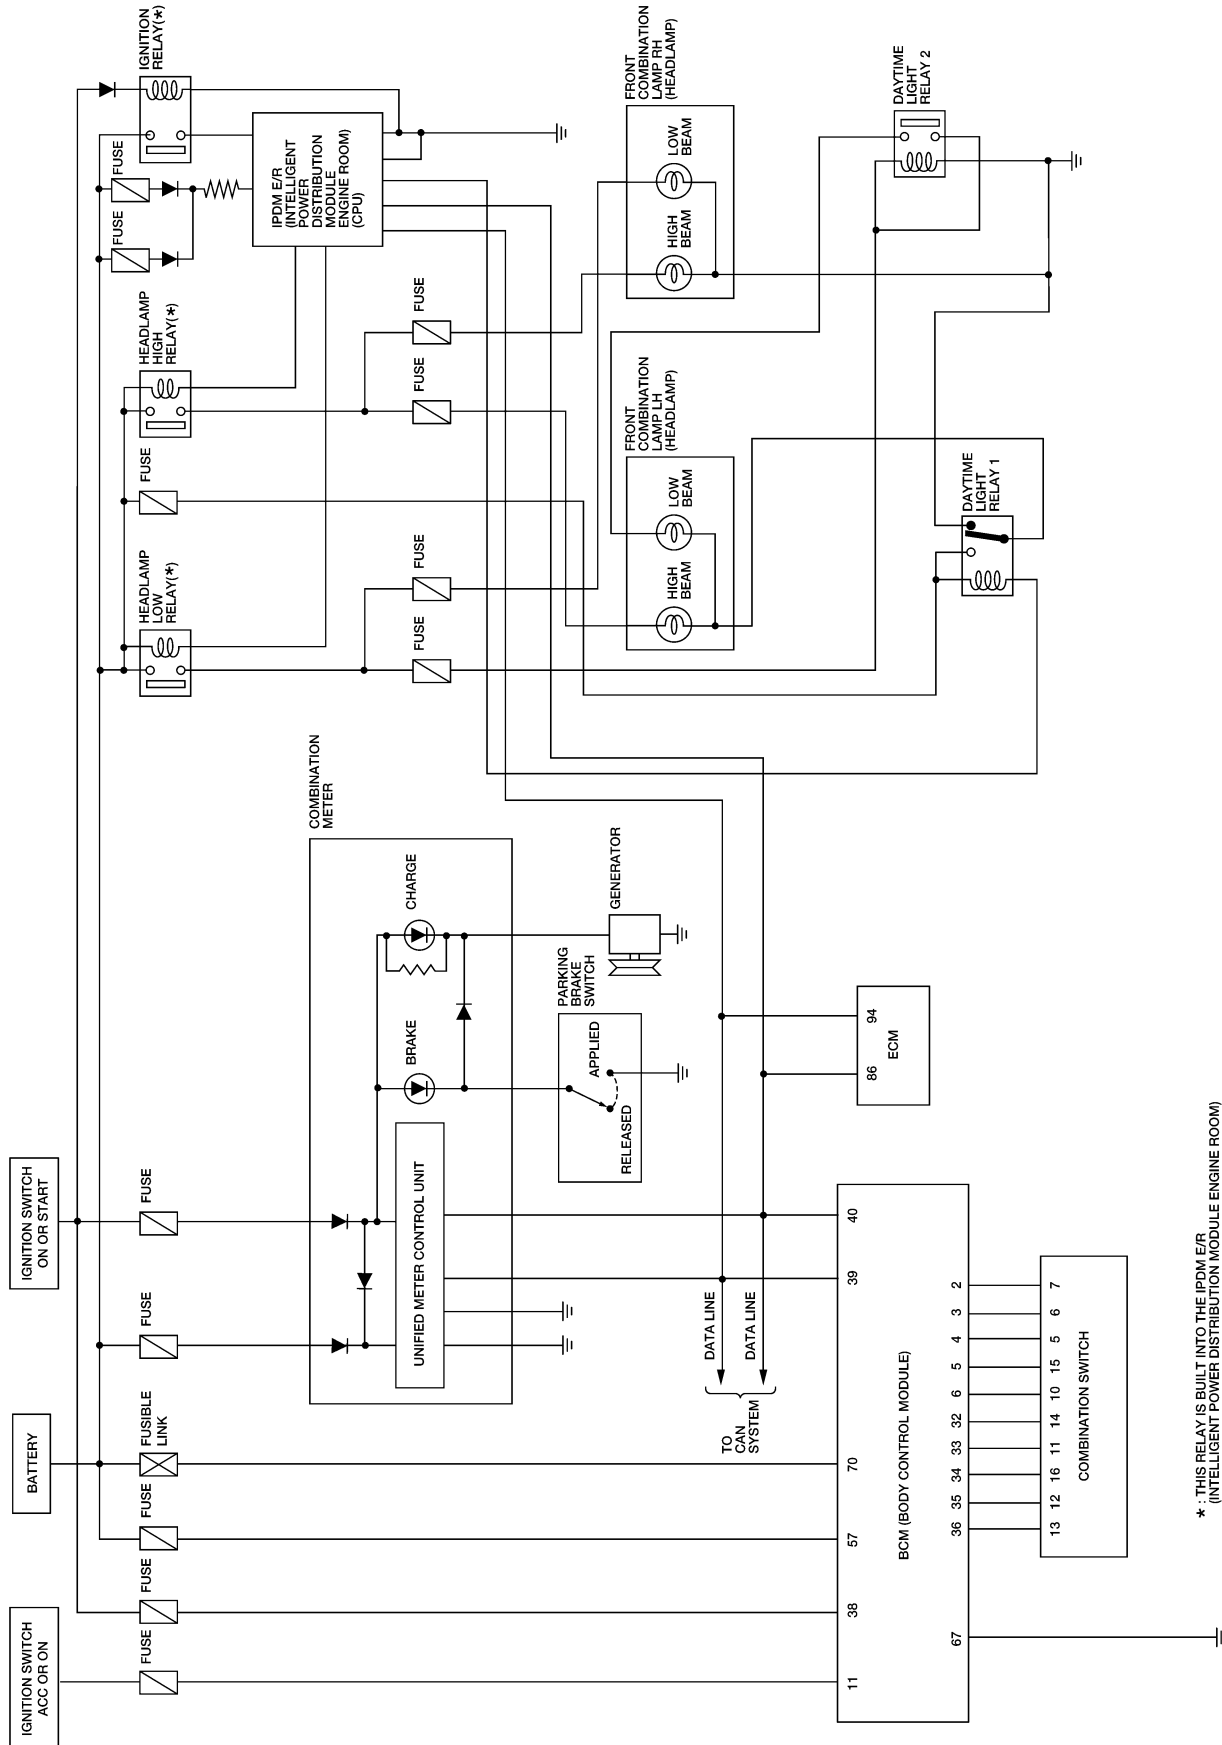

* : THIS RELAY IS BUILT INTO THE IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

WKWA5917E


HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

Wiring Diagram — DTRL —


EKS00E.J3

LT-DTRL-01

▬ : DATA LINE

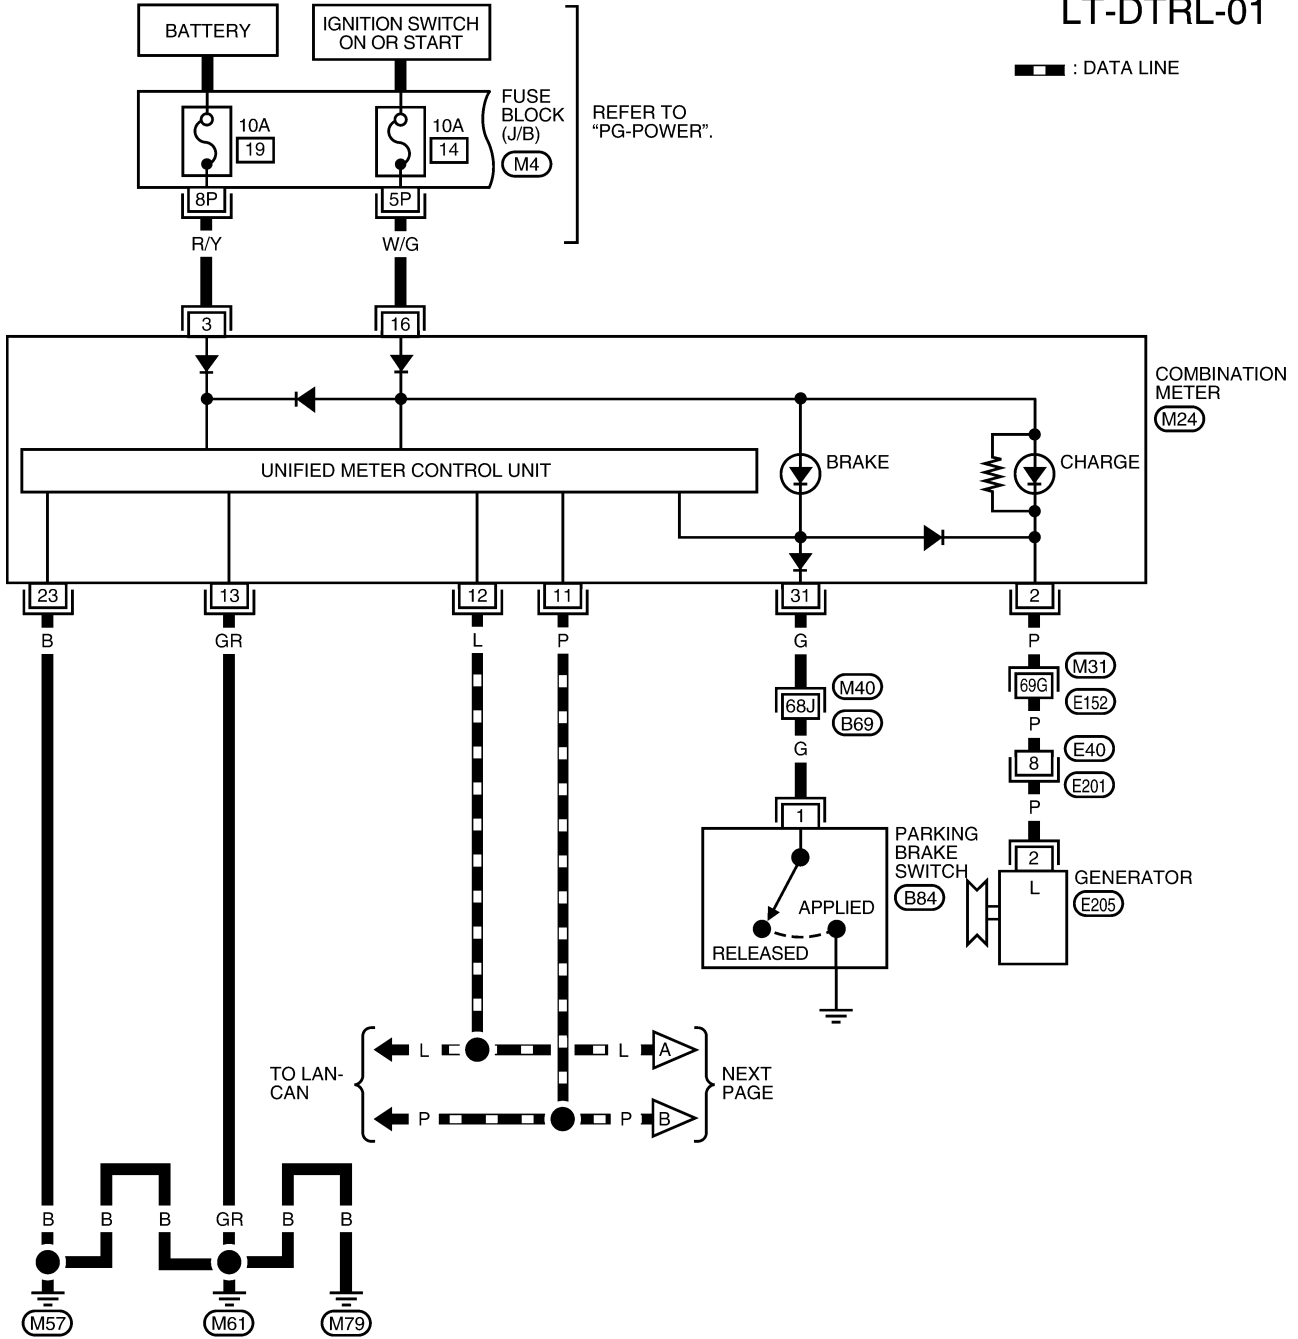



1P	2P	3P	4P	5P	6P	7P	(M4)	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	(M24)		
8P	9P	10P	11P	12P	13P	14P	15P	16P	W	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	W

 

REFER TO THE FOLLOWING.
 (M31) (M40) - SUPER MULTIPLE JUNCTION (SMJ)

WKWA4418E



HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

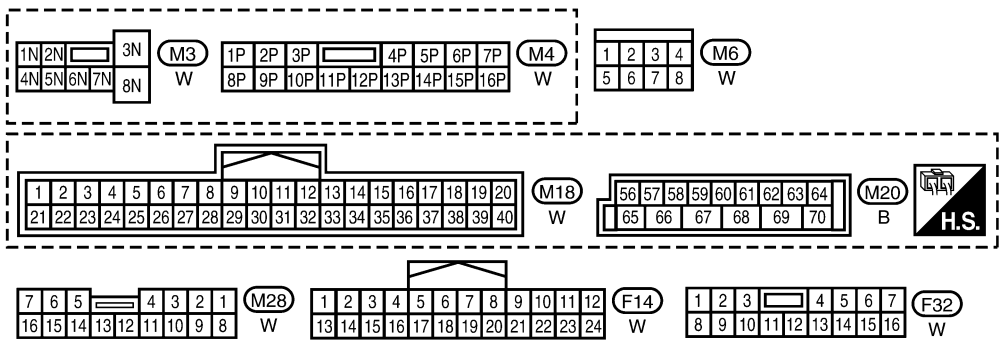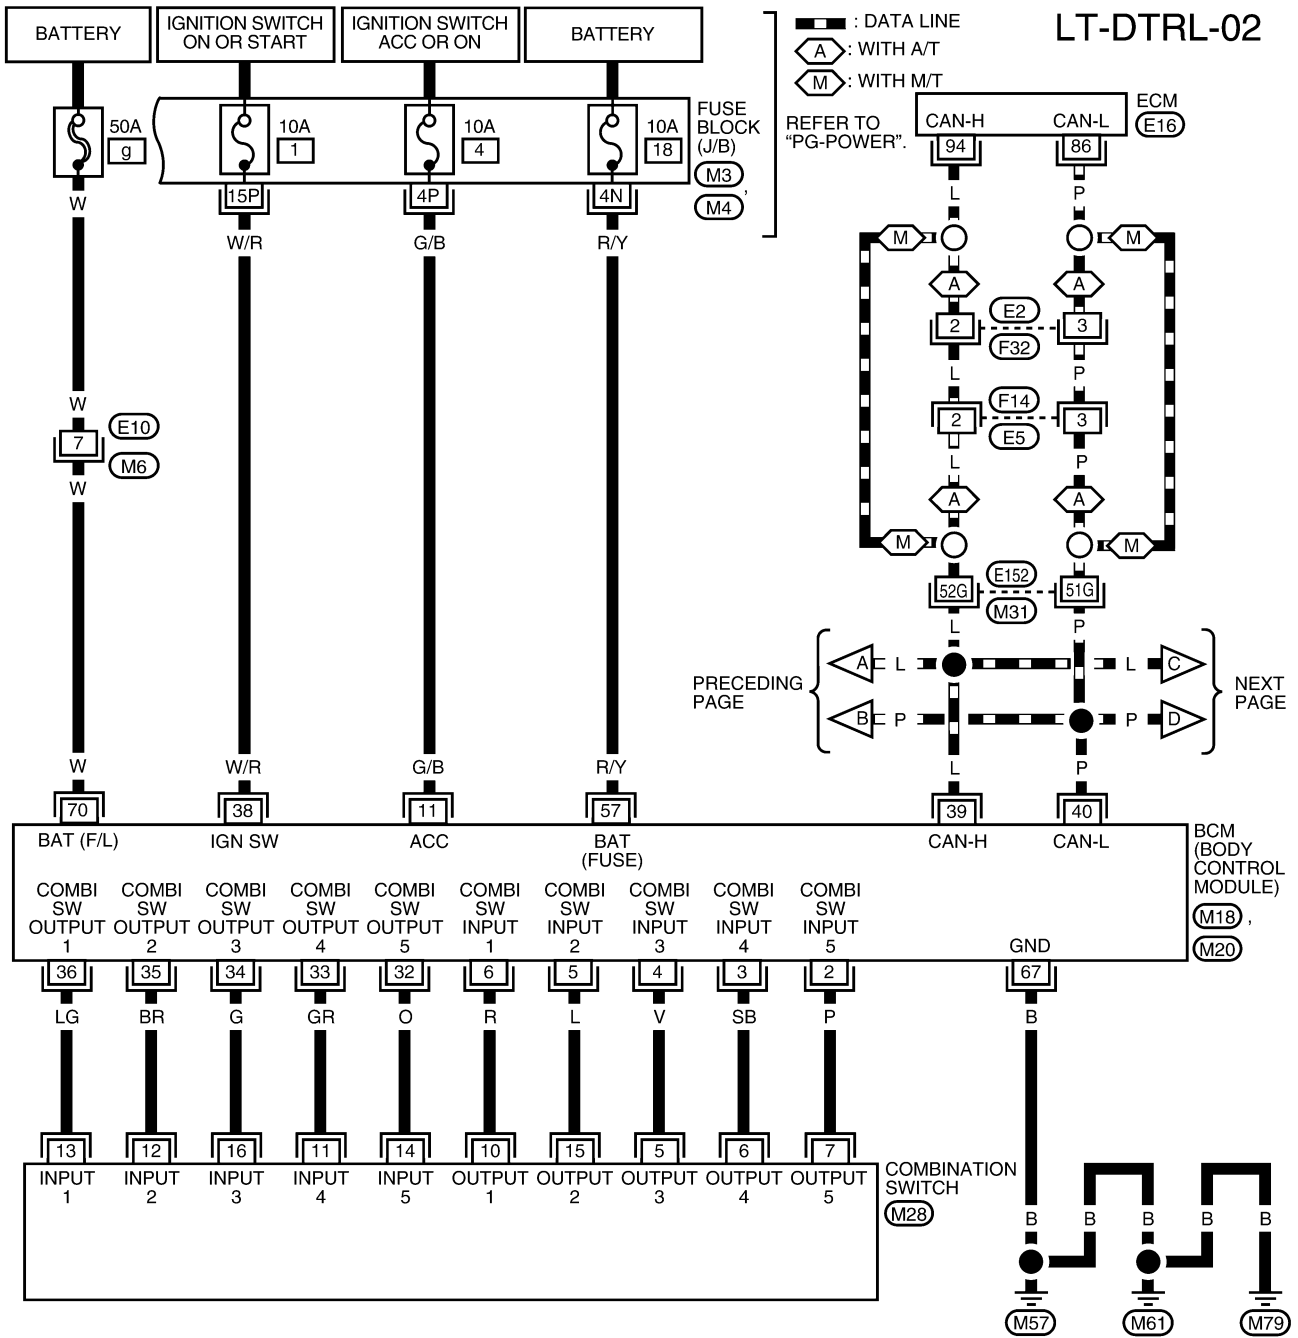

REFER TO THE FOLLOWING.
 (E16) - ELECTRICAL UNITS
 (M31) - SUPER MULTIPLE JUNCTION (SMJ)

WKWA5943E

 

HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

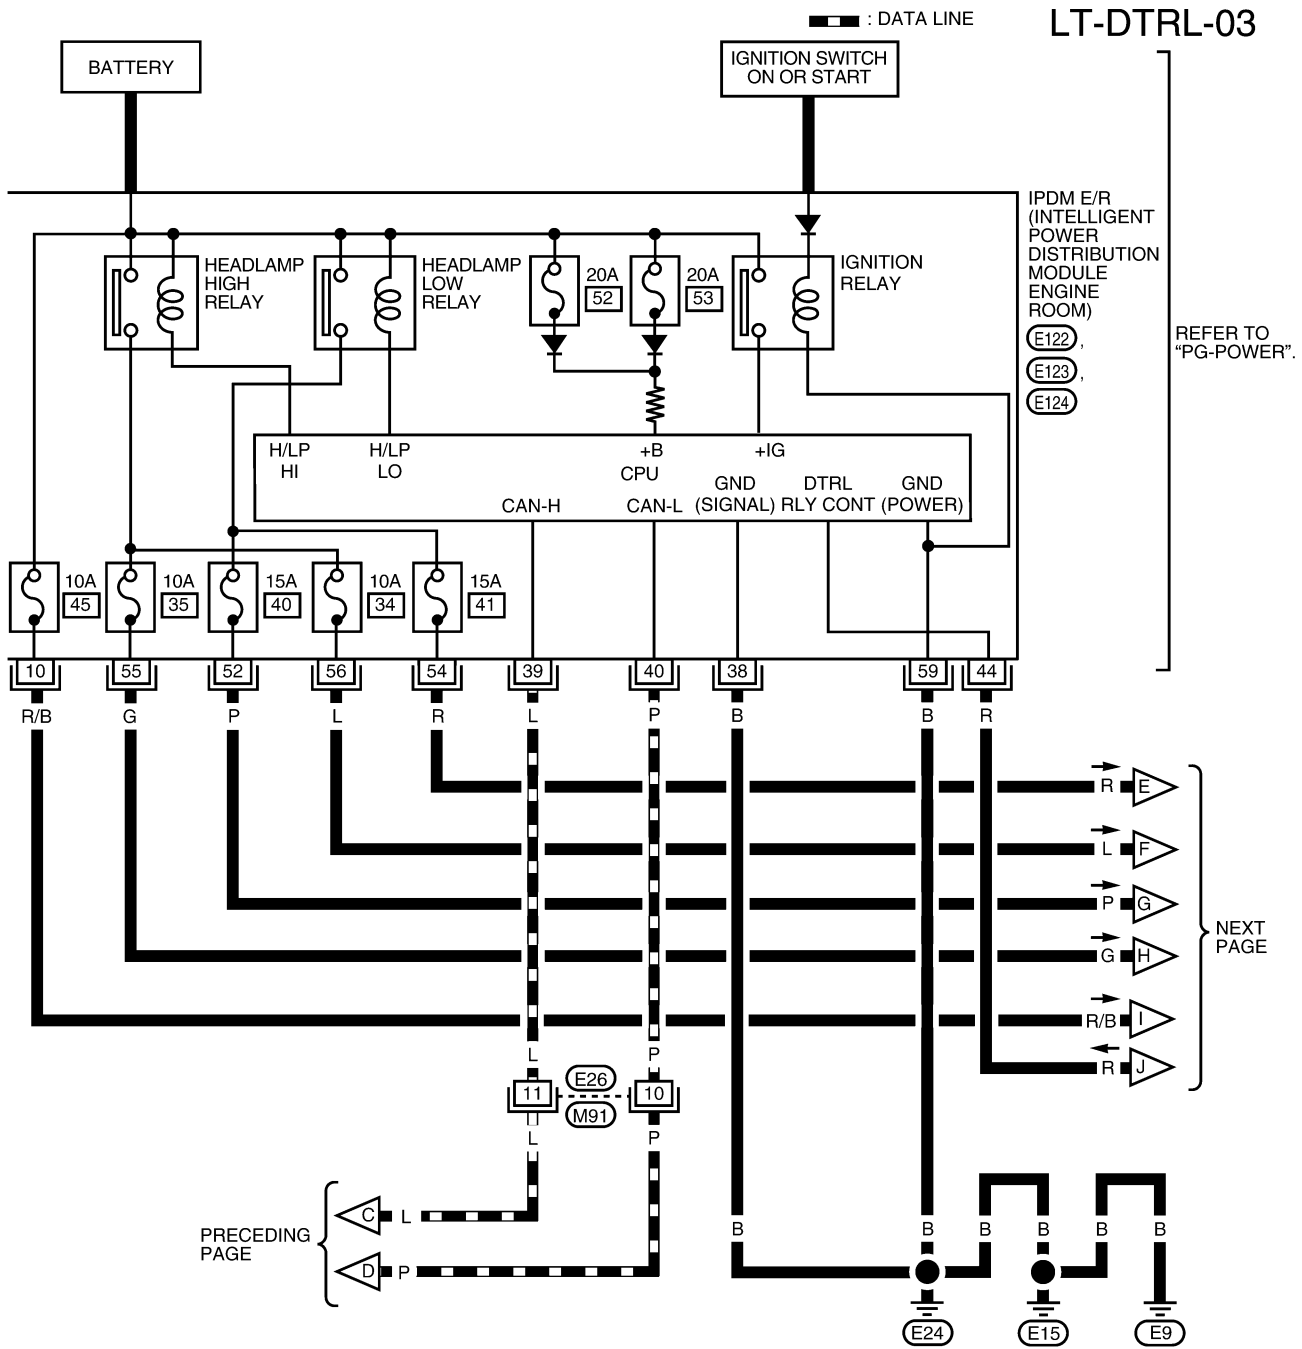

WKWA5944E

HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

 LT-DTRL-04

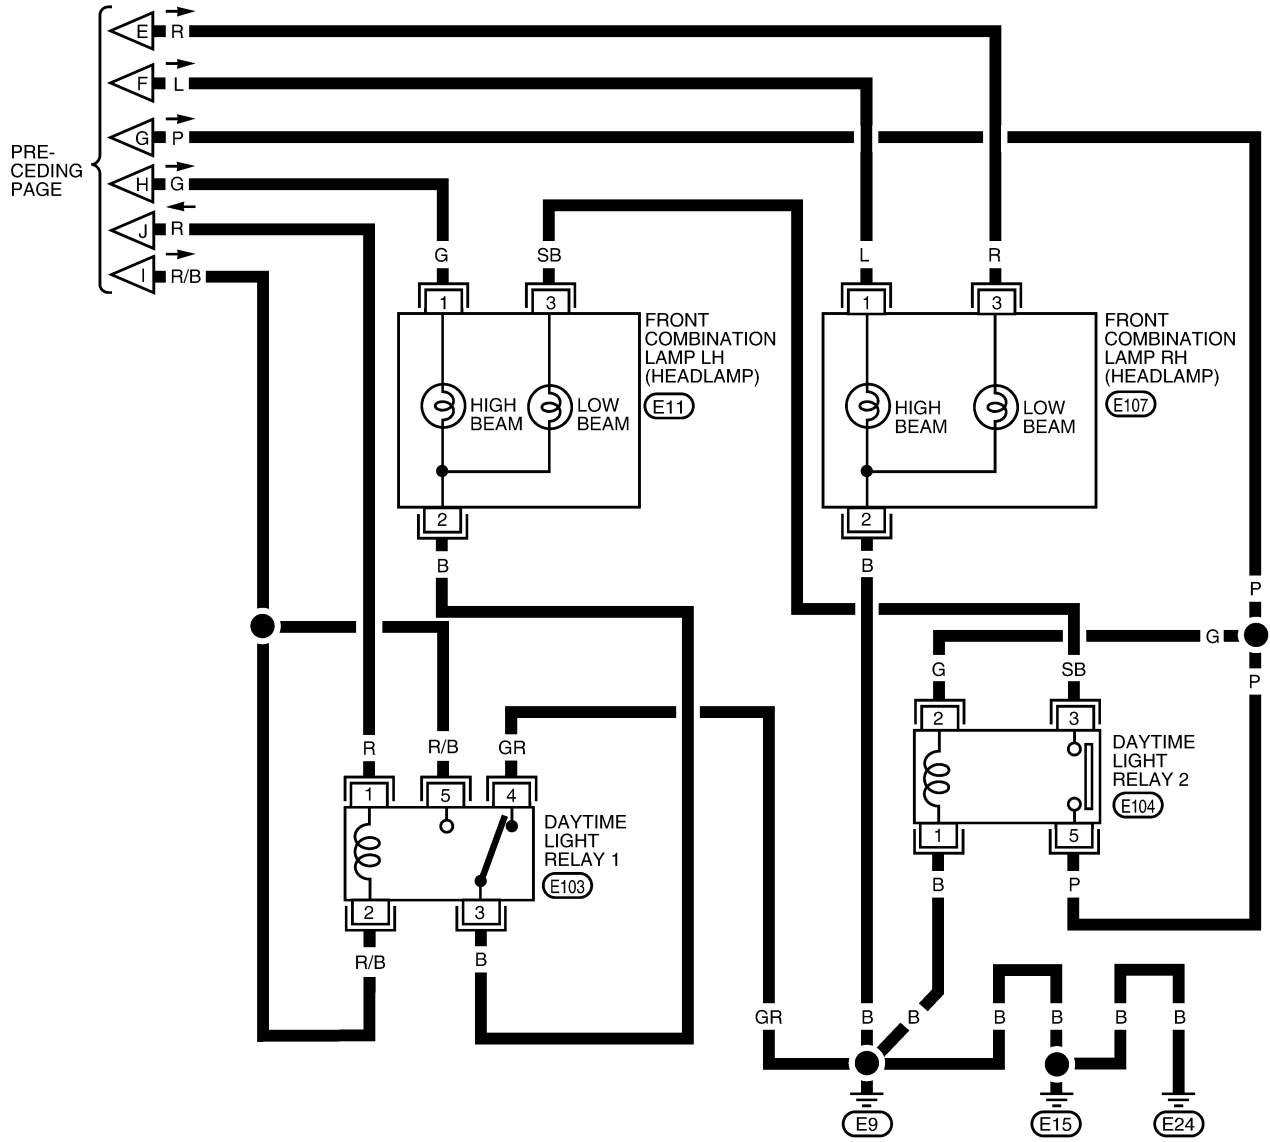

WKWA5945E

HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

Terminals and Reference Values for BCM

EKS00HNZ

Refer to [BCS-12, "Terminals and Reference Values for BCM"](#) .

How to Proceed With Trouble Diagnosis

EKS00EJ5

1. Confirm the symptom or customer complaint.
2. Understand operation description and function description. Refer to [LT-30, "System Description"](#) .
3. Perform the Preliminary Check. Refer to [LT-39, "Preliminary Check"](#) .
4. Check symptom and repair or replace the cause of malfunction.
5. Does the headlamp operate normally? If YES: GO TO 6. If NO: GO TO 4.
6. Inspection End.

Preliminary Check

EKS00EJ6

CHECK BCM CONFIGURATION

1. CHECK BCM CONFIGURATION

Confirm BCM configuration for "DTRL" is set to "WITH". Refer to [BCS-20, "READ CONFIGURATION PROCEDURE"](#) .

OK or NG

- OK >> Continue preliminary check. Refer to [LT-39, "INSPECTION FOR POWER SUPPLY AND GROUND CIRCUIT"](#) .
- NG >> Change BCM configuration for "DTRL" to "WITH". Refer to [BCS-22, "WRITE CONFIGURATION PROCEDURE"](#) .

INSPECTION FOR POWER SUPPLY AND GROUND CIRCUIT

Refer to [BCS-16, "BCM Power Supply and Ground Circuit Check"](#) .

INSPECTION PARKING BRAKE SWITCH CIRCUIT

1. CHECK BRAKE INDICATOR

1. Turn ignition switch ON.
2. Apply parking brake.
3. Release parking brake.

Brake indicator in combination meter should illuminate when parking brake is applied and turn OFF when released.

OK or NG

- OK >> Inspection End.
- NG >> GO TO 2.


2. CHECK PARKING BRAKE SWITCH SIGNAL

1. Turn ignition switch OFF.
2. Disconnect parking brake switch connector.
3. Turn ignition switch ON.
4. Check voltage between parking brake switch harness connector B84 terminal 1 and ground.

1 - Ground : Battery voltage should exist.

OK or NG

- OK >> Replace parking brake switch.
- NG >> GO TO 3.

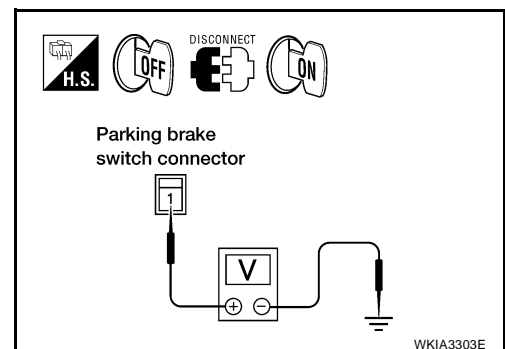

HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

3. CHECK PARKING BRAKE SWITCH CIRCUIT


1. Turn ignition switch OFF.
2. Disconnect combination meter connector.
3. Check continuity between combination meter harness connector M24 terminal 31 and parking brake switch harness connector B84 terminal 1.

1 - 31 : Continuity should exist.

OK or NG

OK >> Replace combination meter. Refer to [DI-27, "COMBINATION METER"](#).

NG >> Repair harness or connector.

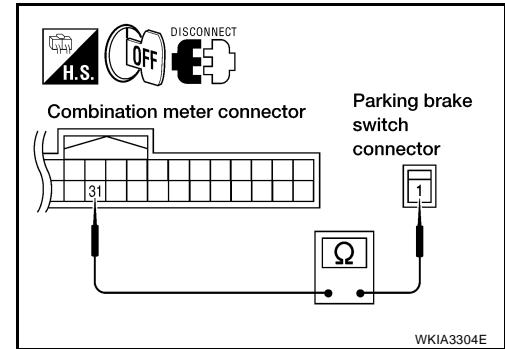

EKS00EJ7

CONSULT-II Functions

Refer to [LT-12, "CONSULT-II Function \(BCM\)"](#).

Refer to [LT-15, "CONSULT-II Function \(IPDM E/R\)"](#).

Daytime Light Control Does Not Operate Properly (Normal Headlamps Operate Properly)

EKS00EJ8

1. CHECK DAYTIME LIGHT RELAY 1 POWER SUPPLY CIRCUIT


1. Remove daytime light relay 1.
2. Check voltage between daytime light relay 1 harness connector E103 terminals 2, 5 and ground.

2, 5 - Ground : Battery voltage should exist.

OK or NG

OK >> GO TO 2.

NG >> Repair harness or connector.

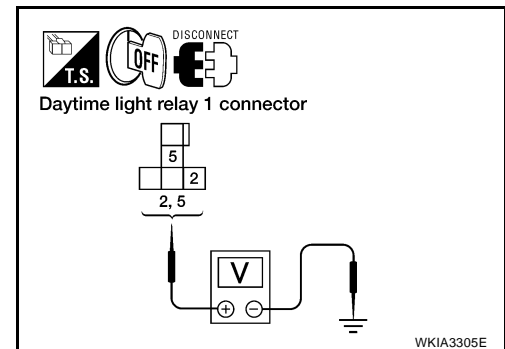

2. CHECK DAYTIME LIGHT RELAY 1


1. Apply battery voltage to daytime light relay 1 terminal 2 and ground terminal 1.
2. Check continuity between terminals 3 and 5.

3 - 5 : Continuity should exist.

OK or NG

OK >> GO TO 3.

NG >> Replace daytime light relay 1.

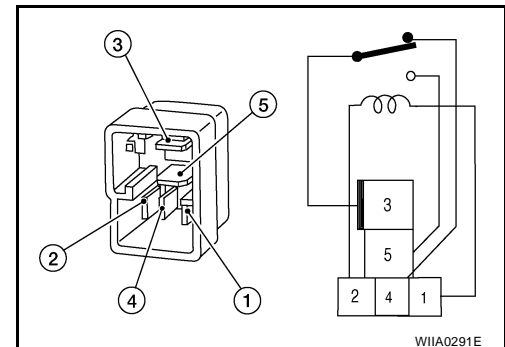

HEADLAMP (FOR CANADA) - DAYTIME LIGHT SYSTEM -

3. CHECK INPUT SIGNAL

1. Connect daytime light relay 1.
2. Start engine and release parking brake. Headlamp switch OFF.
3. Select "IPDM E/R" on CONSULT-II. With data monitor, make sure "DTRL REQ" turns ON-OFF linked with operation of parking brake switch.

Parking brake ON : DTRL REQ ON
Parking brake OFF : DTRL REQ OFF

OK or NG

OK >> Replace IPDM E/R. Refer to [PG-34, "Removal and Installation of IPDM E/R"](#).

NG >> GO TO 4.

DATA MONITOR			
MONITOR			
DTRL REQ		OFF	
		RECORD	
MODE	BACK	LIGHT	COPY

WKIA1449E

4. CHECKING CAN COMMUNICATIONS

Select "BCM" on CONSULT-II and perform self-diagnosis for BCM.

Displayed self-diagnosis results

NO DTC>>Replace BCM. Refer to [BCS-26, "Removal and Installation of BCM"](#).

CAN COMM CIRCUIT>> Check BCM CAN communication system. Refer to [BCS-19, "CAN Communication Inspection Using CONSULT-II \(Self-Diagnosis\)"](#).

SELF-DIAG RESULTS			
DTC RESULTS		TIME	
CAN COMM CIRCUIT [U1000]		PAST	
ERASE		PRINT	
MODE	BACK	LIGHT	COPY

SKIA1039E

Aiming Adjustment

Refer to [LT-25, "Aiming Adjustment"](#).

Bulb Replacement

Refer to [LT-27, "Bulb Replacement"](#).

Removal and Installation

Refer to [LT-27, "Removal and Installation"](#).

Disassembly and Assembly

Refer to [LT-29, "Disassembly and Assembly"](#).

EKS00EJ9

EKS00EJA

EKS00EJB

EKS00EJC


FRONT FOG LAMP

FRONT FOG LAMP

PF2:26150

Component Parts and Harness Connector Location

EKS00HN4

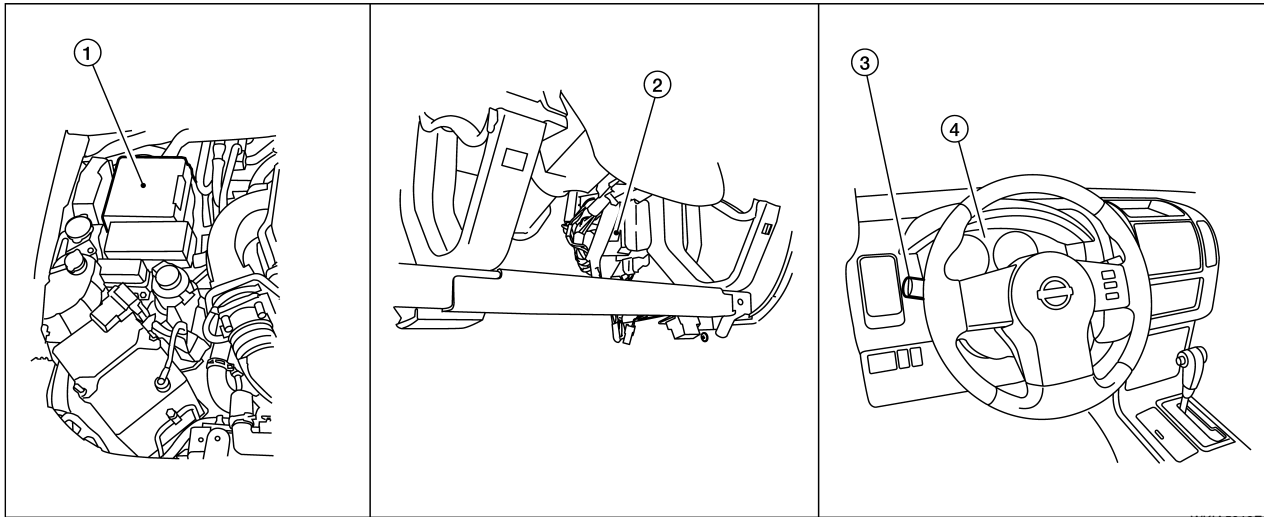

1. IPDM E/R
E122, E123, E124

2. BCM
M18, M20
(view with lower instrument panel LH removed)

3. Combination switch (lighting switch)
M28

System Description

EKS00EJU

Control of the fog lamps is dependent upon the position of the combination switch (lighting switch). The lighting switch must be in the 2ND position (LOW beam is ON) for front fog lamp operation. When the lighting switch is placed in the fog lamp position, the BCM (body control module) receives input signal requesting the fog lamps to illuminate. When the headlamps are illuminated, this input signal is communicated to the IPDM E/R (intelligent power distribution module engine room) across the CAN communication lines. The CPU (central processing unit) of the IPDM E/R controls the front fog lamp relay coil. When activated, this relay directs power to the front fog lamps.

OUTLINE

Power is supplied at all times

- to front fog lamp relay, located in the IPDM E/R, and
- to ignition relay, located in the IPDM E/R, and
- through 20A fuse (No. 52 and 53, located in the IPDM E/R)
- to CPU of the IPDM E/R, and
- through 50A fusible link (letter **g**, located in the fuse and fusible link box)
- to BCM terminal 70, and
- through 10A fuse [No. 18, located in the fuse block (J/B)]
- to BCM terminal 57.

When the ignition switch is in the ACC or ON position, power is supplied

- through 10A fuse [No. 4, located in the fuse block (J/B)]
- to BCM terminal 11.

When the ignition switch is in ON or START position, power is supplied

- to ignition relay, located in the IPDM E/R, and
- through 10A fuse [No. 1, located in the fuse block (J/B)]
- to BCM terminal 38.

Ground is supplied

- to BCM terminal 67
- through grounds M57, M61 and M79, and
- to IPDM E/R terminals 38 and 59
- through grounds E9, E15 and E24.

FRONT FOG LAMP

FOG LAMP OPERATION

The fog lamp switch is built into the combination switch. The lighting switch must be in the 2ND position (LOW beam is ON) and the fog lamp switch must be ON for fog lamp operation.

With the fog lamp switch in the ON position, the CPU of the IPDM E/R grounds the coil side of the fog lamp relay. The fog lamp relay directs power

- through 20A fuse (No. 56, located in the IPDM E/R)
- through IPDM E/R terminal 50
- to front fog lamp LH terminal 1, and
- through IPDM E/R terminal 51
- to front fog lamp RH terminal 1.

Ground is supplied

- to front fog lamp LH and RH terminal 2
- through grounds E9, E15 and E24.

With power and ground supplied, the front fog lamps illuminate.

COMBINATION SWITCH READING FUNCTION

Refer to [BCS-3, "COMBINATION SWITCH READING FUNCTION"](#) .

EXTERIOR LAMP BATTERY SAVER CONTROL

When the combination switch (lighting switch) is in the 2ND position (ON), the fog lamp switch is ON, and the ignition switch is turned from ON or ACC to OFF, the battery saver control feature is activated.

Under this condition, the fog lamps (and headlamps) remain illuminated for 5 minutes, then the fog lamps (and headlamps) are turned off.

Exterior lamp battery saver control mode can be changed by the function setting of CONSULT-II.

CAN Communication System Description

EKS00EJV

Refer to [LAN-21, "CAN COMMUNICATION"](#) .

A

B

C

D

E

F

G

H

I

J

LT

L



M

FRONT FOG LAMP

Wiring Diagram — F/FOG —

EKS00EJW



LT-F/FOG-01

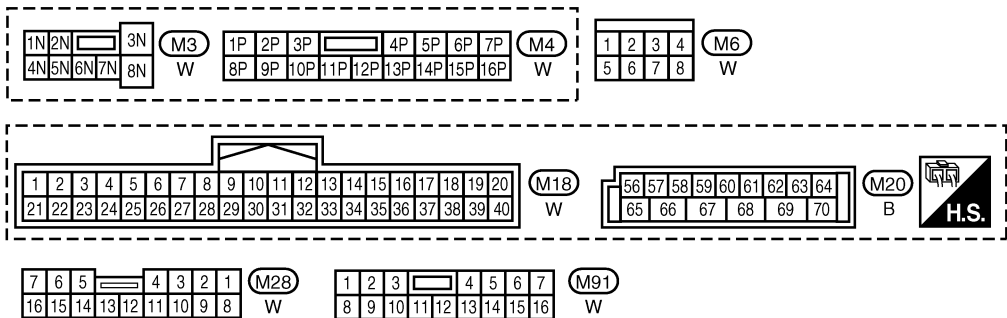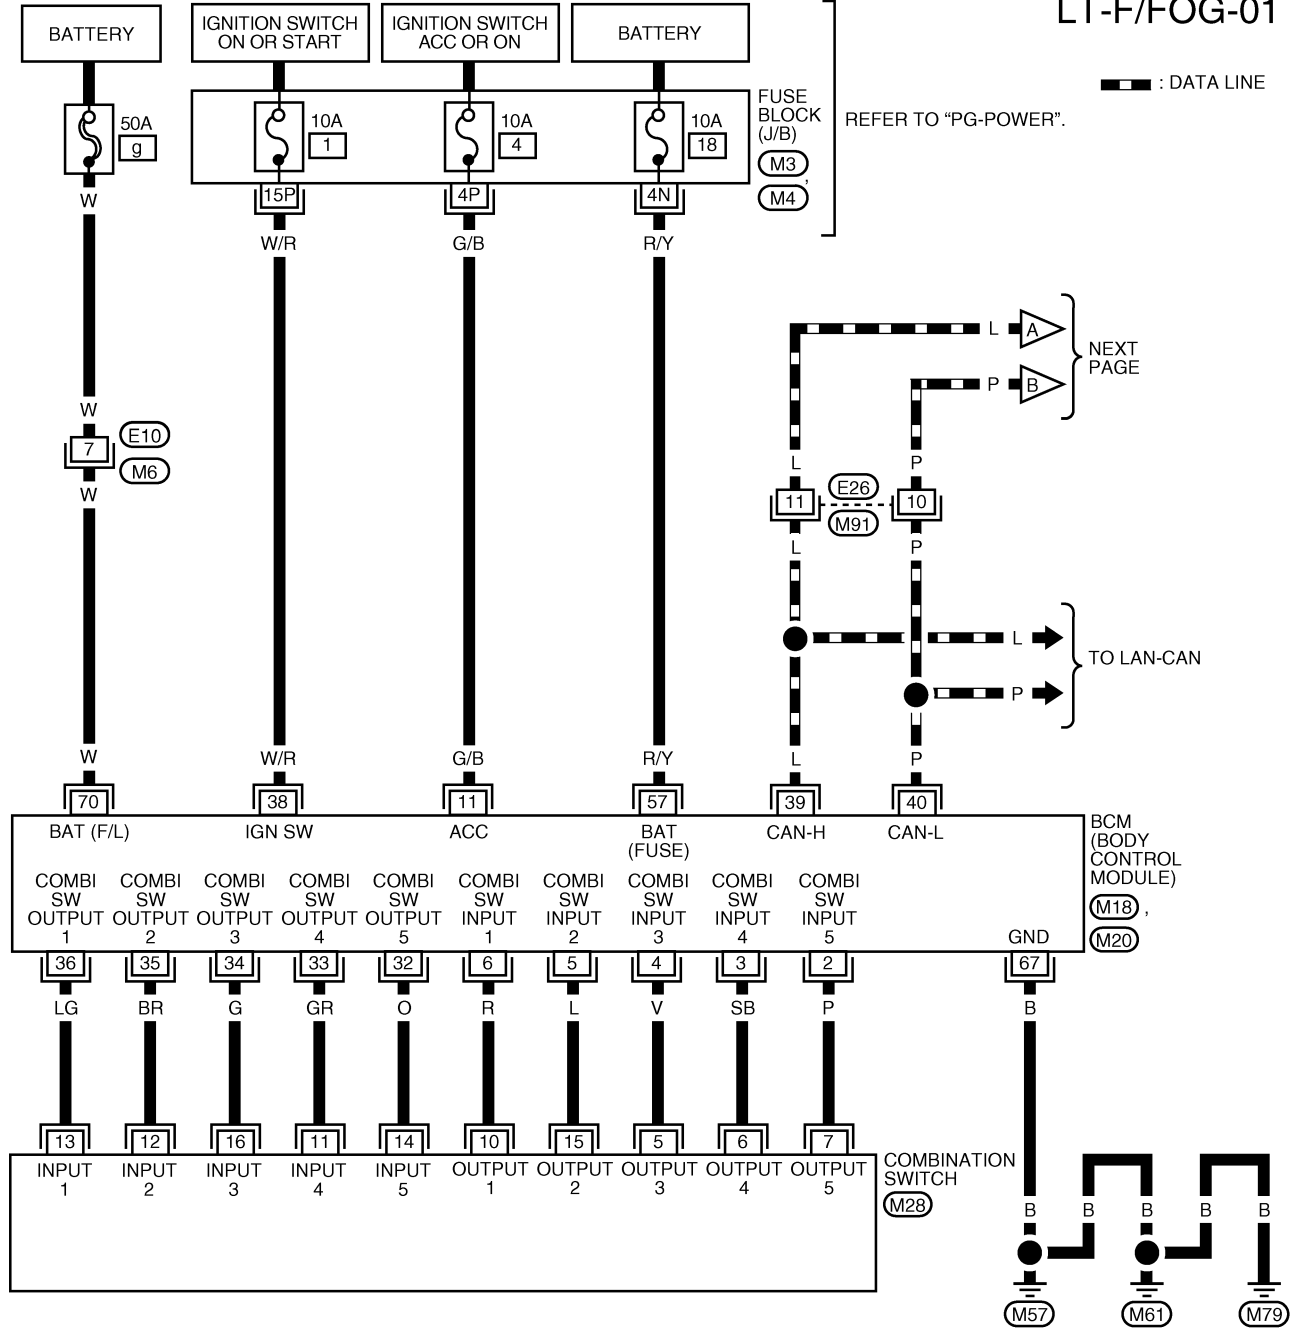

WKWA4617E

FRONT FOG LAMP

 LT-F/FOG-02

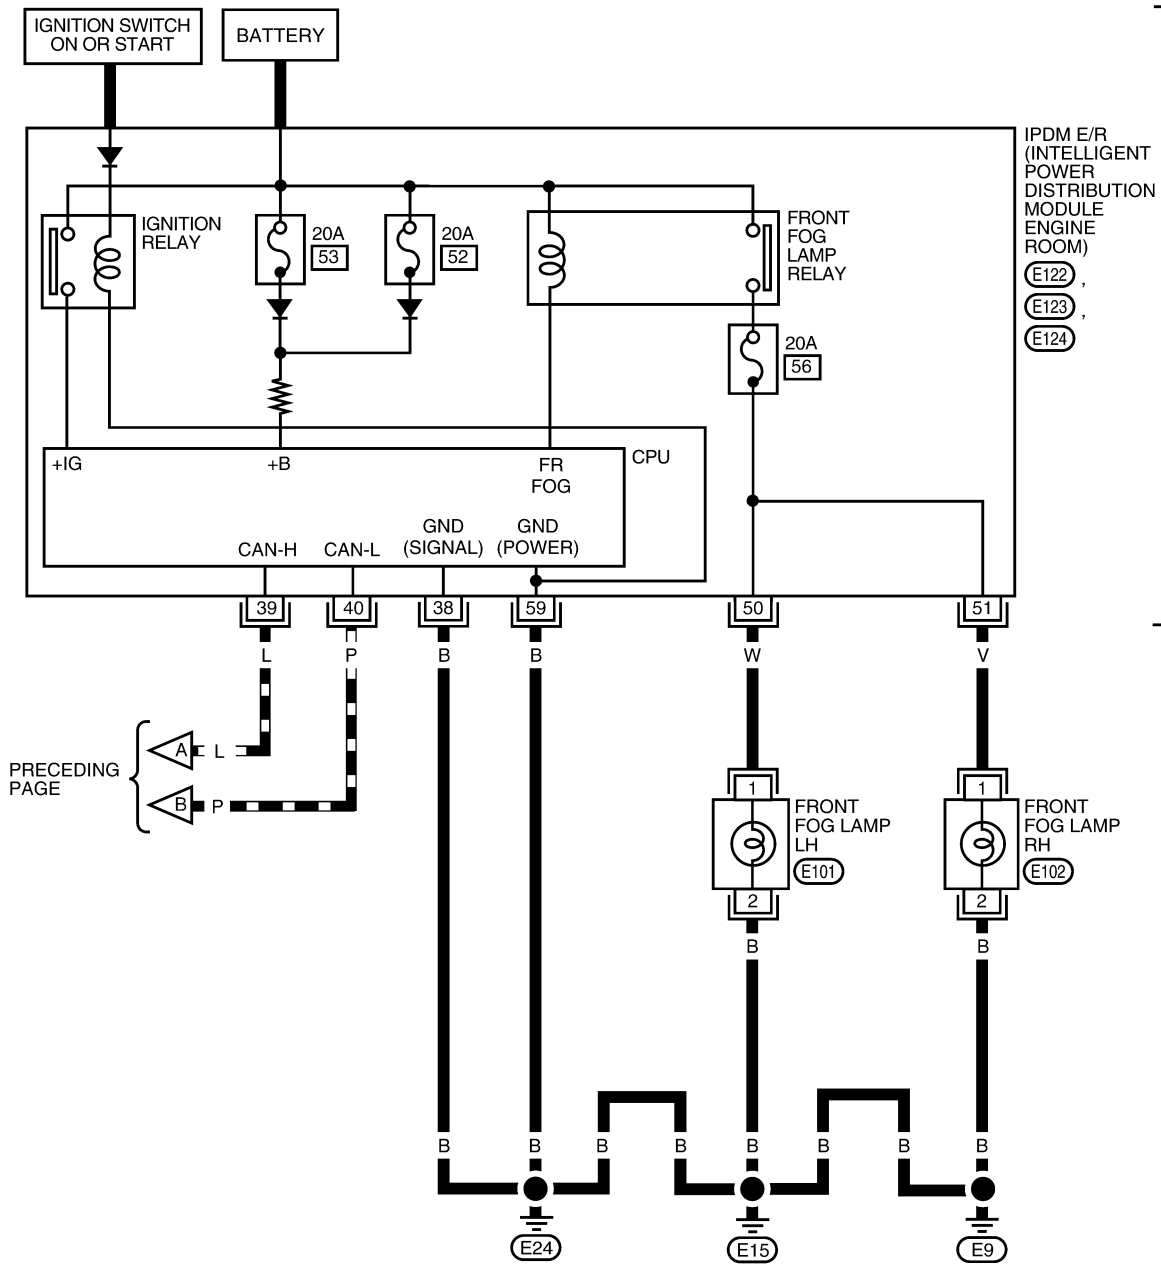

WKWA5946E

FRONT FOG LAMP

Terminals and Reference Values for BCM

EKS00HN5

Refer to [BCS-12, "Terminals and Reference Values for BCM"](#) .

Terminals and Reference Values for IPDM E/R

EKS00HN6

Refer to [PG-29, "Terminals and Reference Values for IPDM E/R"](#) .

How to Proceed With Trouble Diagnosis

EKS00HN7

1. Confirm the symptom or customer complaint.
2. Understand operation description and function description. Refer to [LT-42, "System Description"](#) .
3. Perform the Preliminary Check. Refer to [LT-46, "Preliminary Check"](#) .
4. Check symptom and repair or replace the cause of malfunction.
5. Does the front fog lamp operate normally? If YES: GO TO 6. If NO: GO TO 4.
6. Inspection End.

Preliminary Check

EKS00HN8

CHECK POWER SUPPLY AND GROUND CIRCUIT

Refer to [BCS-16, "BCM Power Supply and Ground Circuit Check"](#) and [PG-31, "IPDM E/R Power/Ground Circuit Inspection"](#) .

CONSULT-II Functions

EKS00HN9

Refer to [LT-12, "CONSULT-II Function \(BCM\)"](#) .

Refer to [LT-15, "CONSULT-II Function \(IPDM E/R\)"](#) .

Front Fog Lamps Do Not Illuminate (Both Sides)

EKS00HNA

1. CHECK COMBINATION SWITCH INPUT SIGNAL

Select "BCM" on CONSULT-II. With "HEAD LAMP" data monitor, make sure "FR FOG SW" turns ON-OFF linked with operation of lighting switch.

When lighting switch is in FOG position : FR FOG SW ON

OK or NG

OK >> GO TO 2.

NG >> Check lighting switch. Refer to [LT-70, "Combination Switch Inspection"](#) .

DATA MONITOR	
MONITOR	
FR FOG SW	ON

SKIA5897E

2. FOG LAMP ACTIVE TEST

1. Select "IPDM E/R" on CONSULT-II, and select "ACTIVE TEST" on "SELECT DIAG MODE" screen.
2. Select "EXTERNAL LAMPS" on "SELECT TEST ITEM" screen.
3. Touch "FOG" on "ACTIVE TEST" screen.
4. Make sure fog lamps operate.

Fog lamps should operate.

OK or NG

OK >> GO TO 3.

NG >> GO TO 4.

ACTIVE TEST			
EXTERNAL LAMPS		OFF	
		TAIL	
LO		HI	
FOG			
MODE	BACK	LIGHT	COPY

WKIA1438E

FRONT FOG LAMP


3. CHECK IPDM E/R

1. Select "IPDM E/R" on CONSULT-II, and select "DATA MONITOR" on "SELECT DIAG MODE" screen.
2. Make sure "FR FOG REQ" turns ON when lighting switch is in FOG position.

When lighting switch is in FOG position : FR FOG REQ ON

OK or NG

- OK >> Replace IPDM E/R. Refer to [PG-34, "Removal and Installation of IPDM E/R"](#) .
- NG >> Replace BCM. Refer to [BCS-26, "Removal and Installation of BCM"](#) .

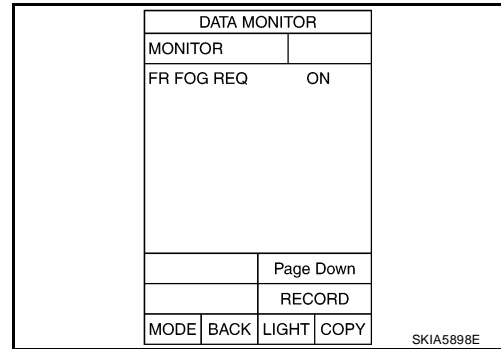


4. IPDM E/R INSPECTION

Start auto active test. Refer to [PG-24, "Auto Active Test"](#) . When front fog lamp relay is operating, check voltage between left/right front fog lamp connector terminals and ground.

Front fog lamp (+)		Terminal	(-)	Voltage (Approx.)
Connector				
LH	E101	1	Ground	Battery voltage
RH	E102			

OK or NG

- OK >> Check front fog lamp bulbs and replace as necessary. Refer to [LT-49, "Bulb Replacement"](#) .
- NG >> Replace IPDM E/R. Refer to [PG-34, "Removal and Installation of IPDM E/R"](#) .

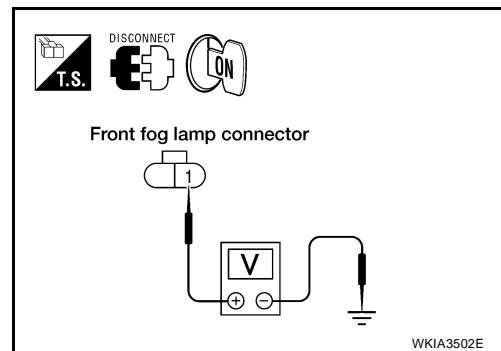

Front Fog Lamp Does Not Illuminate (One Side)

1. BULB INSPECTION

Inspect bulb of front fog lamp which does not illuminate.

OK or NG

- OK >> GO TO 2.
- NG >> Replace front fog lamp bulb. Refer to [LT-49, "Bulb Replacement"](#) .


2. INSPECTION BETWEEN IPDM E/R AND FRONT FOG LAMPS

1. Disconnect IPDM E/R connector and inoperative front fog lamp connector.
2. Check continuity between harness connector terminals of IPDM E/R and harness connector terminal of front fog lamps.

IPDM E/R		Front fog lamp		Continuity
Connector	Terminal	Connector	Terminal	
E123	50	LH	E101	Yes
	51	RH	E102	

OK or NG

- OK >> Check ground circuit. If OK, replace IPDM E/R. Refer to [PG-34, "Removal and Installation of IPDM E/R"](#) . If NG, repair harness or connector.
- NG >> Check for short circuits and open circuits in harness between IPDM E/R and front fog lamps.

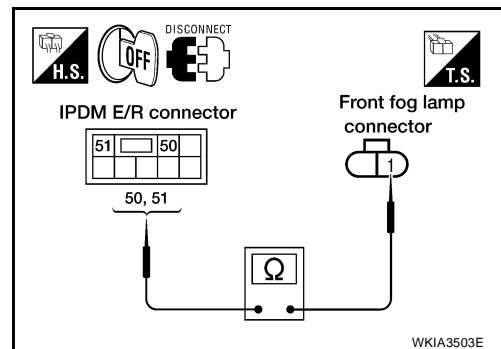

FRONT FOG LAMP


EKS00HNC

Aiming Adjustment

The fog lamp is a semi-sealed beam type which uses a replaceable halogen bulb. Before performing aiming adjustment, make sure of the following.

- Keep all tires inflated to correct pressure.
- Place vehicle on level ground.
- See that vehicle is unloaded (except for full levels of coolant, engine oil and fuel, and spare tire, jack, and tools). Have the driver or equivalent weight placed in driver seat.


1. Set the distance between the screen and the center of the fog lamp lens as shown.
2. Turn front fog lamps ON.
3. Remove front portion of fender protector(s) for adjustment screw access. Refer to [EI-20, "Rear Fender Protector"](#)

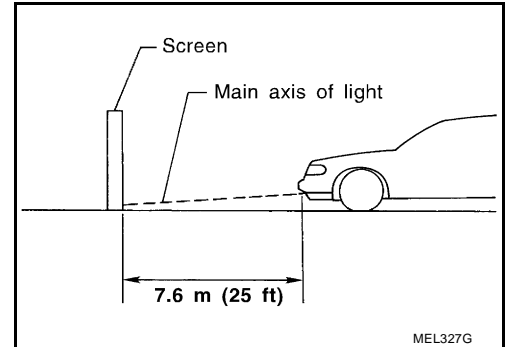


4. Adjust front fog lamps.
 - When performing adjustment, if necessary, cover the headlamps and opposite fog lamp.
 - Adjust aiming in the vertical direction by turning the adjustment screw, as shown.

NOTE:

Use a Phillips screwdriver to adjust. Turn screw clockwise to raise pattern and counterclockwise to lower pattern.

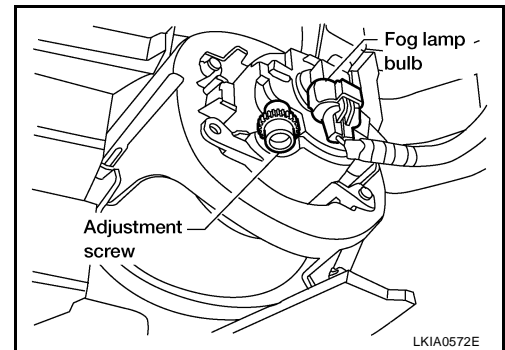

- Use adjustment screw so that the top edge of the high intensity zone is 100 mm (4 in) below the height of the fog lamp centers as shown.

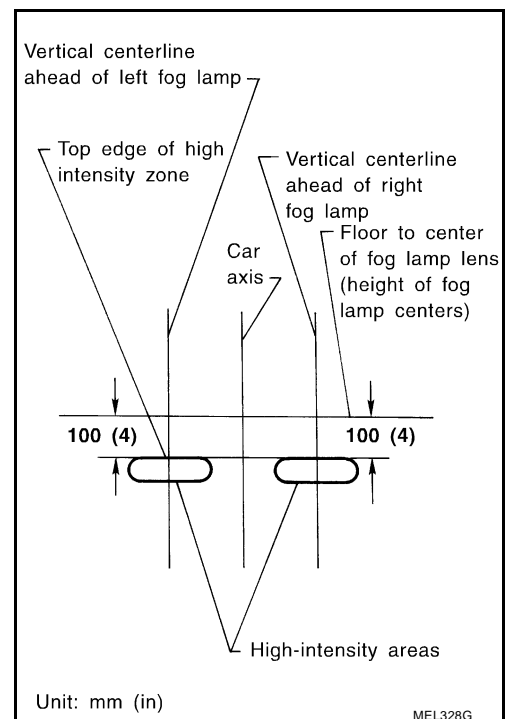

FRONT FOG LAMP


EKS00HND

Bulb Replacement REMOVAL

1. Disconnect fog lamp connector.
2. Turn the bulb counterclockwise to remove it.

CAUTION:

- Do not touch the glass of bulb directly by hand. Keep grease and other oily substances away from it. Do not touch bulb by hand while it is lit or right after being turned off. Burning may result.
- Do not leave bulb out of fog lamp reflector for a long time because dust, moisture smoke, etc. may affect the performance of fog lamp. When replacing bulb, be sure to replace it with new one.
- Be sure to install the bulb securely for watertightness.

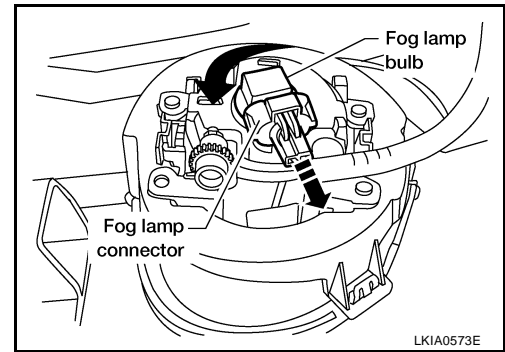

INSTALLATION

Installation is in the reverse order of removal.

Removal and Installation REMOVAL


EKS00HNE

The fog lamp is a semi-sealed beam type which uses a replaceable halogen bulb.

1. Remove front portion of fender protector. Refer to [EI-20, "Rear Fender Protector"](#)
2. Disconnect fog lamp connector.
3. Remove fog lamp screws and pull fog lamp rearward out of front bumper.

CAUTION:

- Do not leave fog lamp assembly without bulb for a long period of time. Dust, moisture, smoke, etc. entering the fog lamp body may affect the performance. Remove the bulb from the fog lamp assembly just before replacement bulb is installed.
- Grasp only the plastic base when handling the bulb. Never touch the glass envelope. Touching the glass could significantly affect the bulb life and/or fog lamp performance.

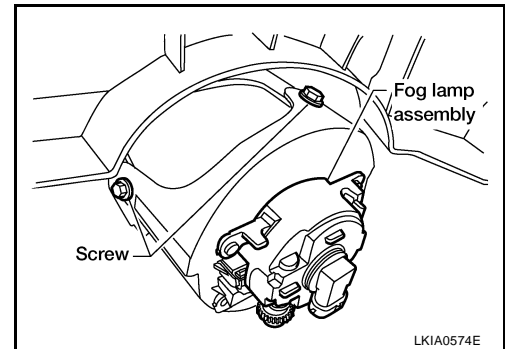

INSTALLATION

Installation is in the reverse order of removal.

A
B
C
D
E
F
G
H
I
J
LT
L
M


TURN SIGNAL AND HAZARD WARNING LAMPS

TURN SIGNAL AND HAZARD WARNING LAMPS

PFP:26120

Component Parts and Harness Connector Location

EKS00HNI

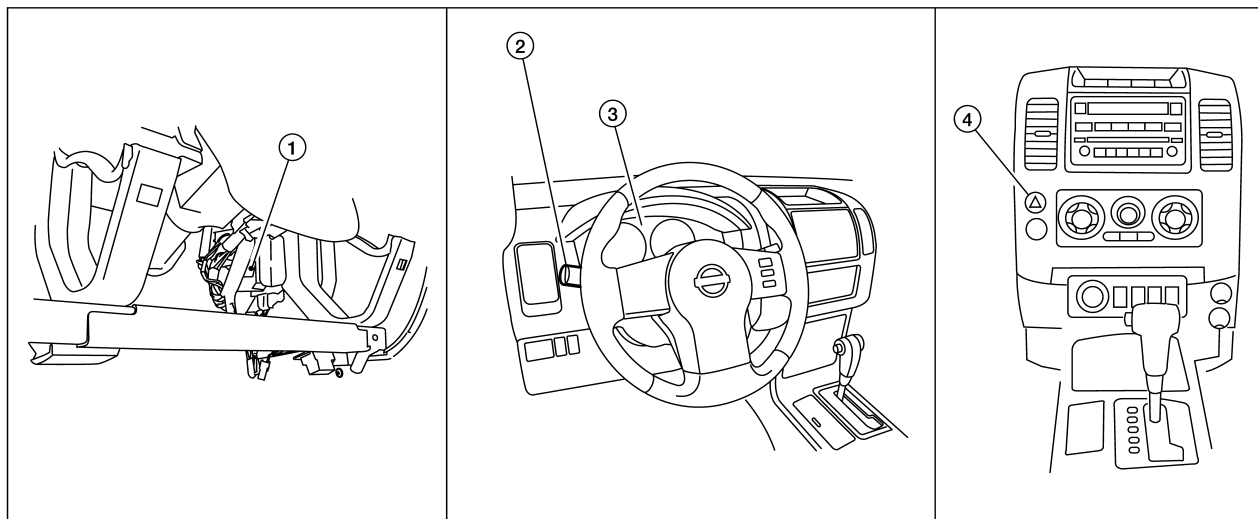

WKTA5023E

1. BCM
M18, M20
(view with lower instrument panel LH removed)
2. Combination switch (lighting switch)
M28
3. Combination meter
M24
4. Hazard switch
M55

System Description OUTLINE

EKS00EK8

Power is supplied at all times

- through 10A fuse [No. 18, located in the fuse block (J/B)]
- to BCM terminal 57, and
- through 50A fusible link (letter **g**, located in the fuse and fusible link box)
- to BCM terminal 70, and
- through 10A fuse [No. 19, located in the fuse block (J/B)]
- to combination meter terminal 3.

TURN SIGNAL OPERATION

When the ignition switch is in the ACC or ON position, power is supplied

- through 10A fuse [No. 4, located in the fuse block (J/B)]
- to BCM terminal 11.

When the ignition switch is in the ON or START position, power is supplied

- through 10A fuse [No. 1, located in the fuse block (J/B)]
- to BCM terminal 38, and
- through 10A fuse [No. 14, located in the fuse block (J/B)]
- to combination meter terminal 16.

Ground is supplied

- to BCM terminal 67 and
- to combination meter terminals 13 and 23
- through grounds M57, M61 and M79.

LH Turn

When the turn signal switch is moved to the left position, the BCM, interpreting it as turn signal is ON, outputs turn signal from BCM terminal 60.

The BCM supplies power

- through BCM terminal 60

TURN SIGNAL AND HAZARD WARNING LAMPS

- to front combination lamp LH (turn signal) terminal 6
- through front combination lamp LH (turn signal) terminal 5
- to grounds E9, E15 and E24, and
- to rear combination lamp LH terminal 4
- through rear combination lamp LH terminal 5
- to ground B85.

A

B

BCM sends signal to combination meter through CAN communication lines and turns on turn signal indicator lamp within combination meter.

C

RH Turn

When the turn signal switch is moved to the right position, the BCM, interpreting it as turn signal is ON, outputs turn signal from BCM terminal 61.

D

The BCM supplies power

- through BCM terminal 61
- to front combination lamp RH (turn signal) terminal 6
- through front combination lamp RH (turn signal) terminal 5
- to grounds E9, E15 and E24, and
- to rear combination lamp RH terminal 4
- through rear combination lamp RH terminal 5
- to ground B160.

E

F

BCM sends signal to combination meter through CAN communication lines, and turns on turn signal indicator lamp within combination meter.

G

H

HAZARD LAMP OPERATION

Power is supplied at all times

- through 50A fusible link (letter **g**, located in the fuse and fusible link box)
- to BCM terminal 70,
- through 10A fuse [No. 18, located in the fuse block (J/B)]
- to BCM terminal 57, and
- through 10A fuse [No. 19, located in the fuse block (J/B)]
- to combination meter terminal 3.

I

J

Ground is supplied

- to BCM terminal 67 and
- to combination meter terminals 13 and 23
- through grounds M57, M61 and M79.

LT

L

When the hazard switch is depressed, ground is supplied

- to BCM terminal 29
- through hazard switch terminal 2
- through hazard switch terminal 1
- through grounds M57, M61 and M79.

M

When the hazard switch is depressed, the BCM, interpreting it as hazard warning lamps are ON, outputs turn signal from BCM terminals 60 and 61.

The BCM supplies power

- through BCM terminals 60 and 61
- to front combination lamp LH and RH (turn signal) terminal 6
- through front combination lamp LH and RH (turn signal) terminal 5
- to grounds E9, E15 and E24, and
- to rear combination lamp LH and RH terminal 4
- through rear combination lamp LH terminal 5
- to ground B85, and
- through rear combination lamp RH terminal 5

TURN SIGNAL AND HAZARD WARNING LAMPS

- to ground B160.

BCM sends signal to combination meter through CAN communication lines and turns on turn signal indicator lamps within combination meter.

REMOTE KEYLESS ENTRY SYSTEM OPERATION

Power is supplied at all times

- through 50A fusible link (letter **g** , located in the fuse and fusible link box)
- to BCM terminal 70,
- through 10A fuse [No. 18, located in the fuse block (J/B)]
- to BCM terminal 57, and
- through 10A fuse [No. 19, located in the fuse block (J/B)]
- to combination meter terminal 3.

Ground is supplied

- to BCM terminal 67 and
- to combination meter terminals 13 and 23
- through grounds M57, M61 and M79.

When the remote keyless entry system is triggered by input from the keyfob, the BCM, interpreting it as turn signal is ON, outputs turn signal from BCM terminals 60 and 61.

The BCM supplies power

- through BCM terminals 60 and 61
- to front combination lamp LH and RH (turn signal) terminal 6
- through front combination lamp LH and RH (turn signal) terminal 5
- to grounds E9, E15 and E24, and
- to rear combination lamp LH and RH terminal 4
- through rear combination lamp LH terminal 5
- to ground B85, and
- through rear combination lamp RH terminal 5
- to ground B160.

BCM sends signal to combination meter through CAN communication lines, and turns on turn signal indicator lamps within combination meter.

With power and input supplied, the BCM controls the flashing of the hazard warning lamps when keyfob is used to activate the remote keyless entry system.

COMBINATION SWITCH READING FUNCTION

Refer to [BCS-3, "COMBINATION SWITCH READING FUNCTION"](#) .

CAN Communication System Description


Refer to [LAN-21, "CAN COMMUNICATION"](#) .

EKS00EK9

TURN SIGNAL AND HAZARD WARNING LAMPS

Schematic

EKS00HNJ

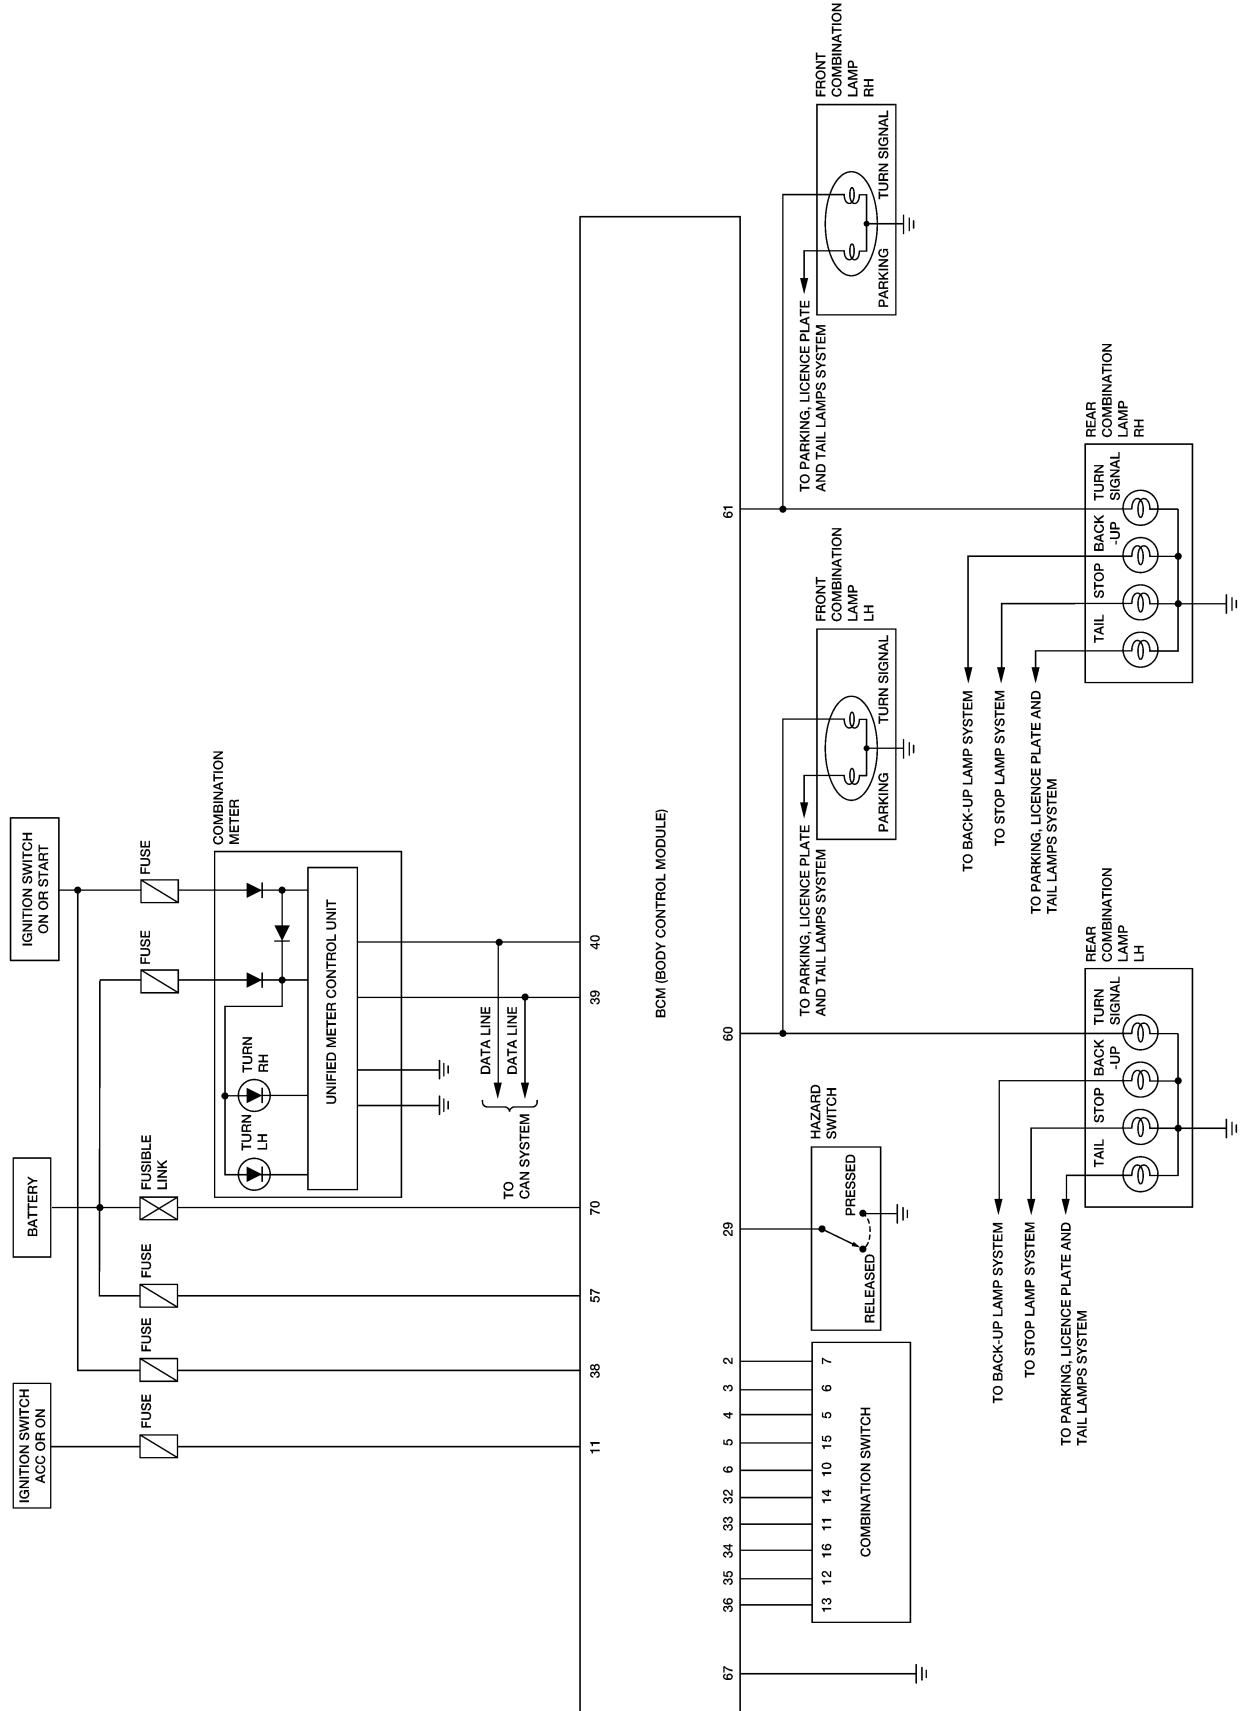

A
B
C
D
E
F
G
H
I
J
K
L
M

LT

 
 
 

TURN SIGNAL AND HAZARD WARNING LAMPS

EKS00EKA

Wiring Diagram — TURN —

LT-TURN-01

— : DATA LINE


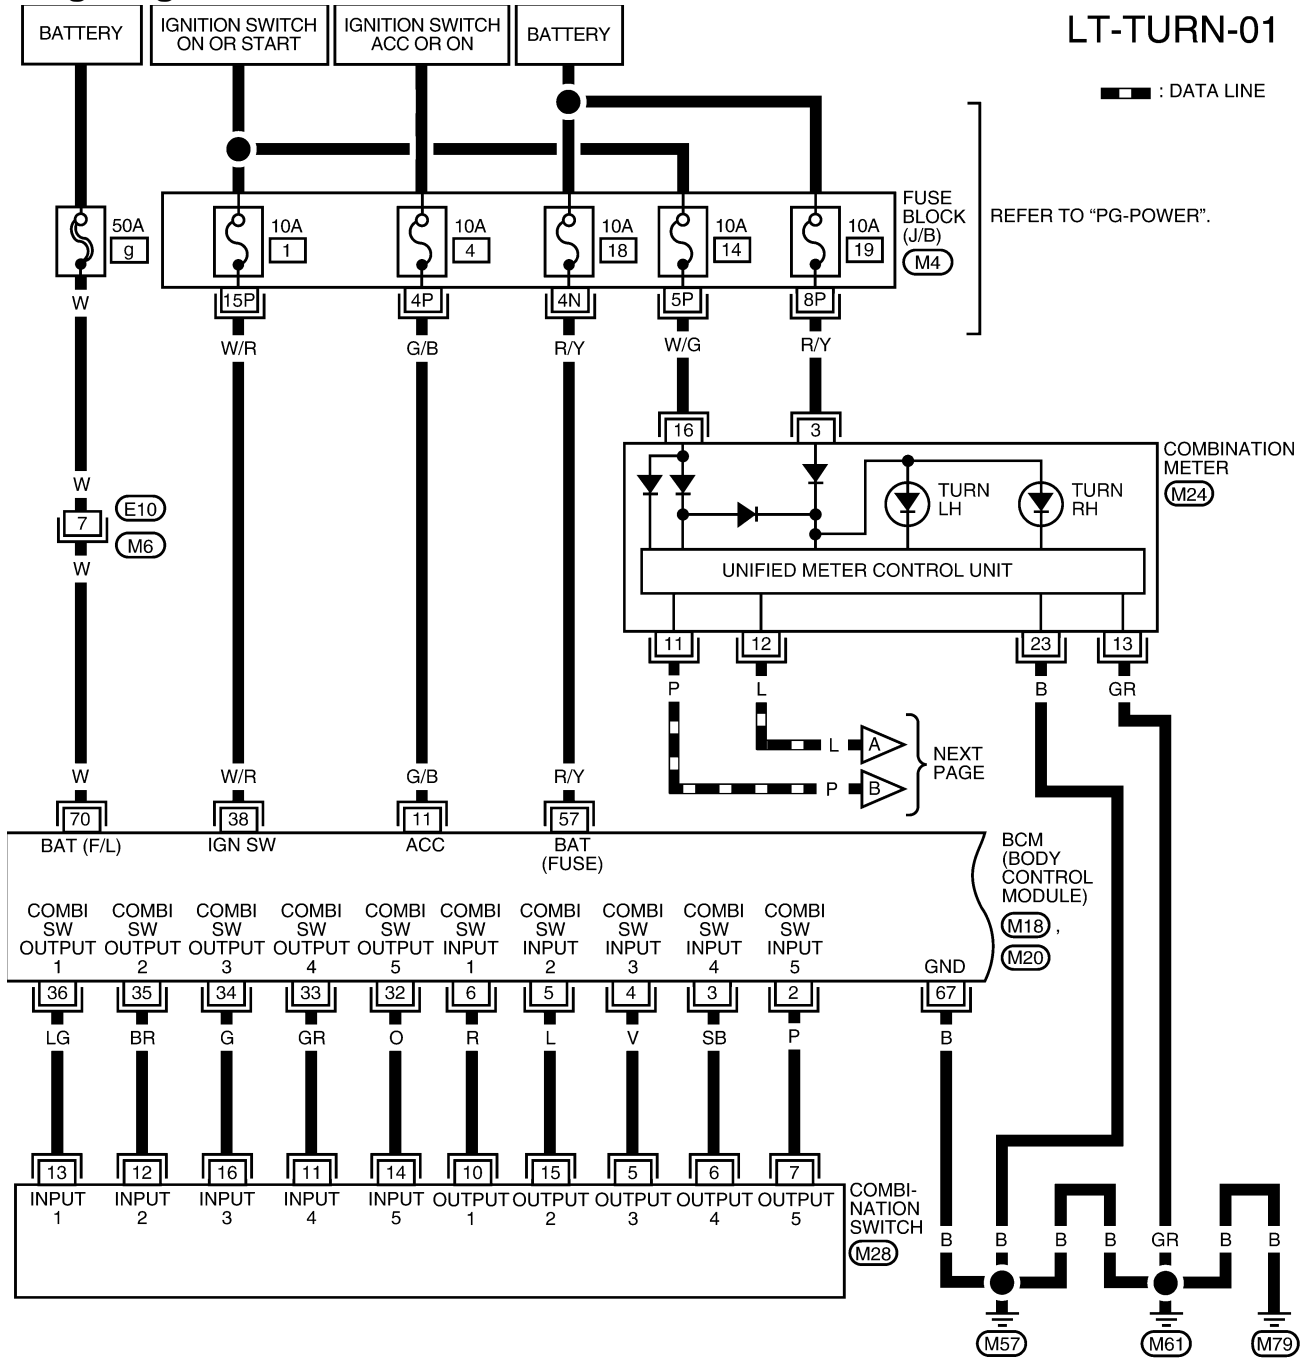


WKWA5948E

TURN SIGNAL AND HAZARD WARNING LAMPS

LT-TURN-02

▬ : DATA LINE

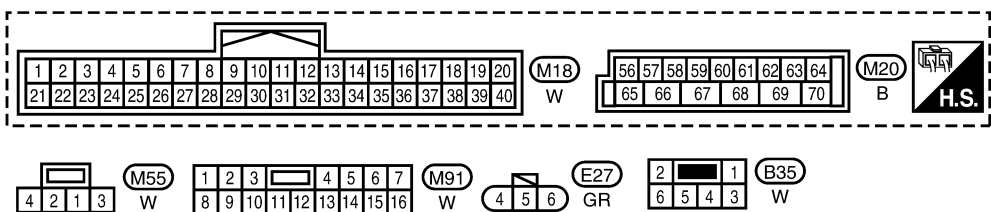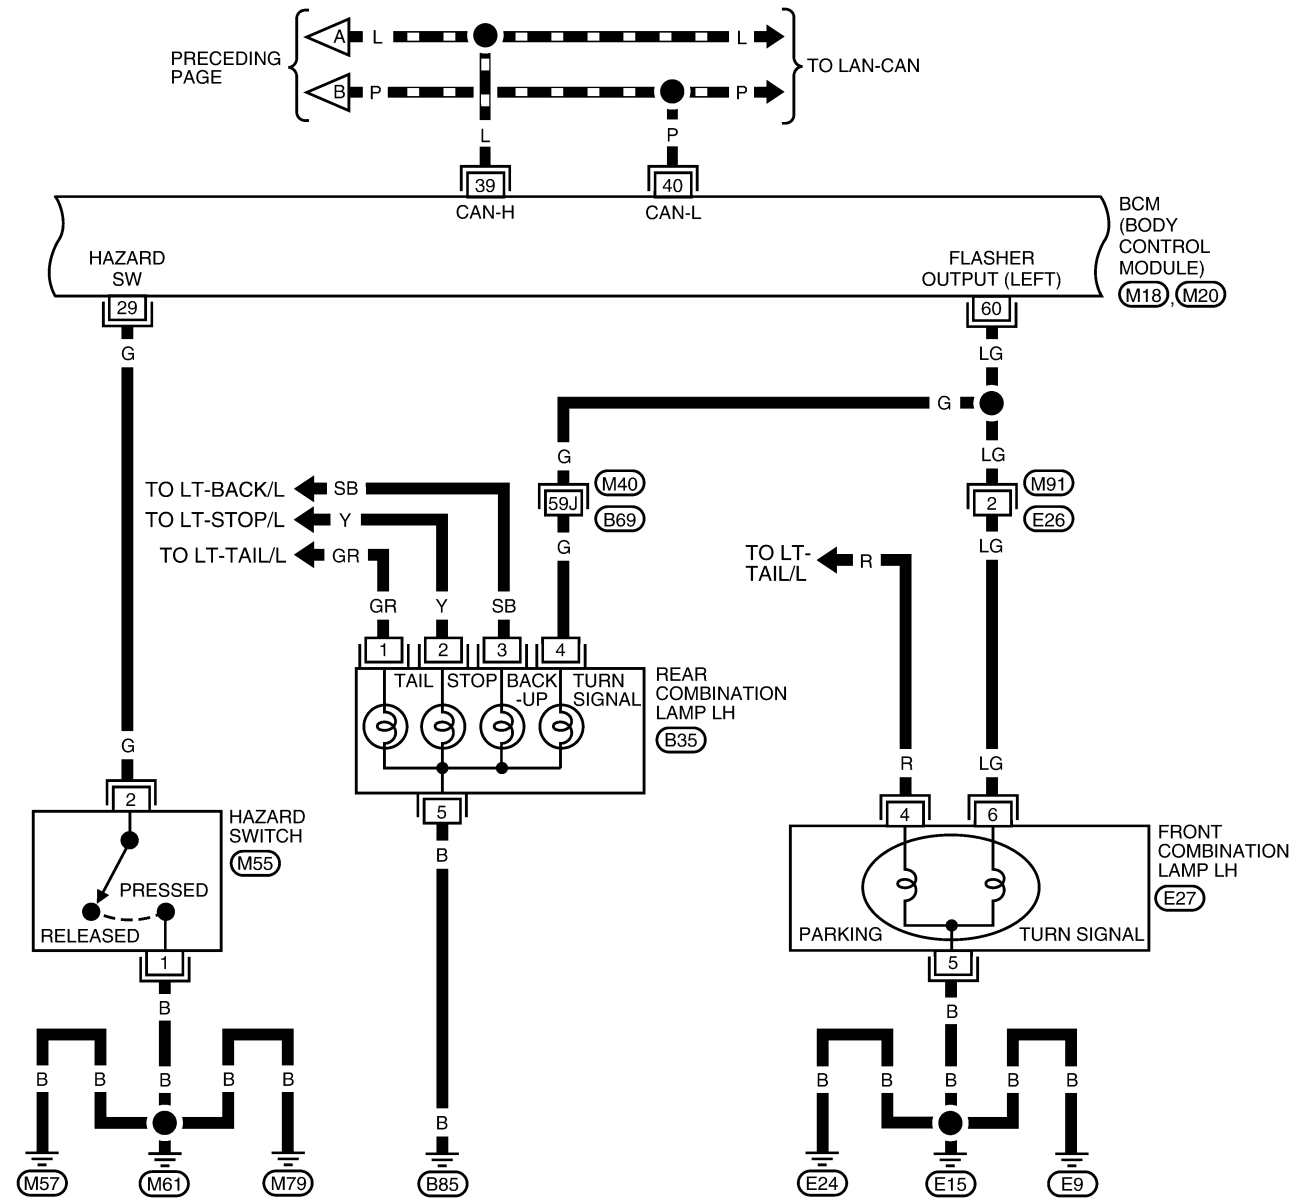


REFER TO THE FOLLOWING.
 (M40) - SUPER MULTIPLE JUNCTION (SMJ)

WKWA4423E




TURN SIGNAL AND HAZARD WARNING LAMPS

LT-TURN-03

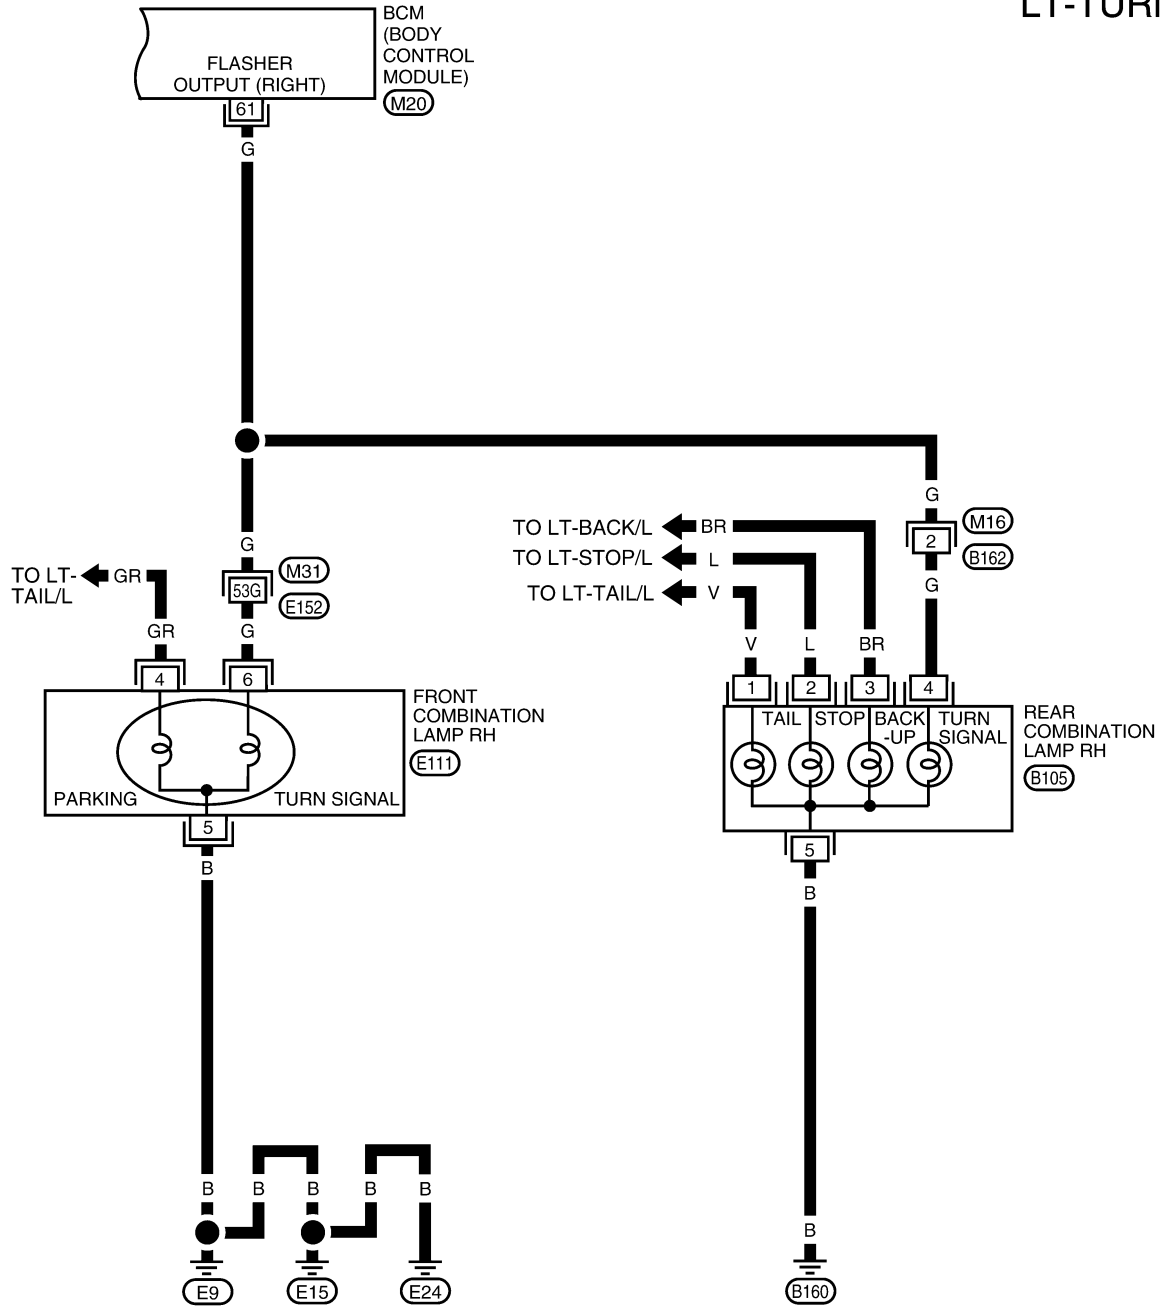

REFER TO THE FOLLOWING.

   (M31) - SUPER MULTIPLE JUNCTION (SMJ)



WKWA3498E

TURN SIGNAL AND HAZARD WARNING LAMPS

Terminals and Reference Values for BCM

EKS00HMK

Refer to [BCS-12, "Terminals and Reference Values for BCM"](#) .

How to Proceed With Trouble Diagnosis

EKS00EKC

1. Confirm the symptom or customer complaint.
2. Understand operation description and function description. Refer to [LT-50, "System Description"](#) .
3. Perform preliminary check. Refer to [LT-57, "Preliminary Check"](#) .
4. Check symptom and repair or replace the cause of malfunction.
5. Do turn signal and hazard warning lamps operate normally? If YES: GO TO 6. If NO: GO TO 4.
6. Inspection End.

Preliminary Check

EKS00EKD

CHECK POWER SUPPLY AND GROUND CIRCUIT

Refer to [BCS-16, "BCM Power Supply and Ground Circuit Check"](#) .

CONSULT-II Function (BCM)

EKS00EKE

CONSULT-II can display each diagnostic item using the diagnostic test modes shown following.


BCM diagnostic test item	Diagnostic mode	Description
Inspection by part	WORK SUPPORT	Supports inspections and adjustments. Commands are transmitted to the BCM for setting the status suitable for required operation, input/output signals are received from the BCM and received data is displayed.
	DATA MONITOR	Displays BCM input/output data in real time.
	ACTIVE TEST	Operation of electrical loads can be checked by sending drive signal to them.
	SELF-DIAG RESULTS	Displays BCM self-diagnosis results.
	CAN DIAG SUPPORT MNTR	The result of transmit/receive diagnosis of CAN communication can be read.
	ECU PART NUMBER	BCM part number can be read.
	CONFIGURATION	Performs BCM configuration read/write functions.

CONSULT-II OPERATION

CAUTION:


If CONSULT-II is used with no connection of CONSULT-II CONVERTER, malfunctions might be detected in self-diagnosis depending on control unit which carries out CAN communication.

1. With the ignition switch OFF, connect CONSULT-II and CONSULT-II CONVERTER to the data link connector, then turn ignition switch ON.

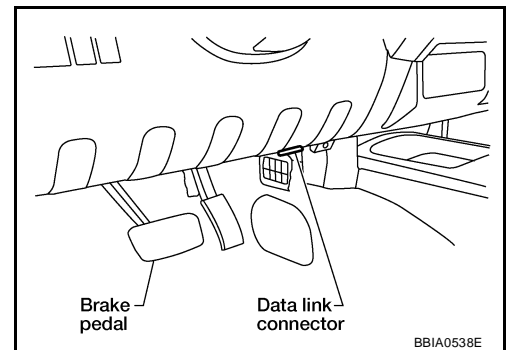


TURN SIGNAL AND HAZARD WARNING LAMPS


2. Touch "START (NISSAN BASED VHCL)".

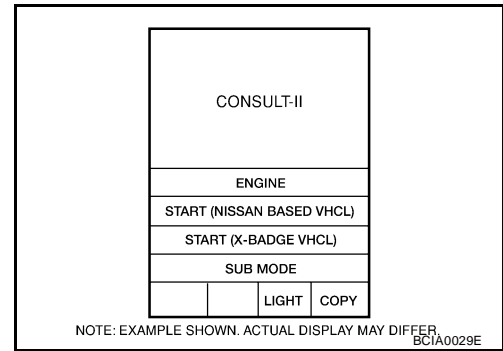

3. Touch "BCM" on "SELECT SYSTEM" screen.
If "BCM" is not indicated, go to [GI-41, "CONSULT-II Data Link Connector \(DLC\) Circuit"](#).

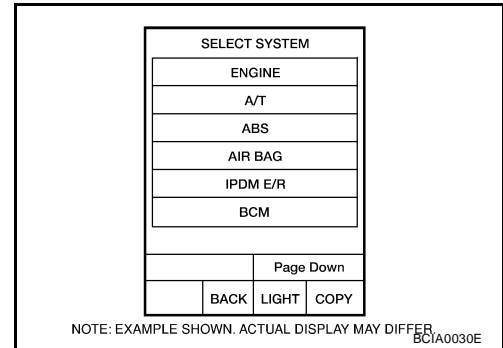

4. Touch "FLASHER" on "SELECT TEST ITEM" screen.

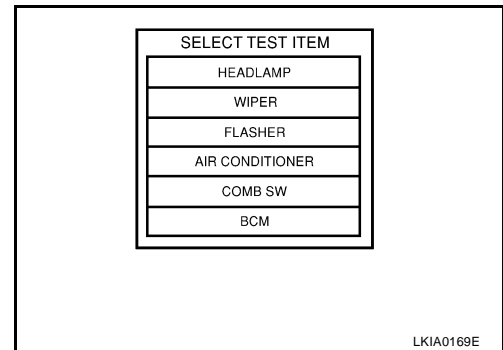

DATA MONITOR

Operation Procedure

1. Touch "FLASHER" on "SELECT TEST ITEM" screen.
2. Touch "DATA MONITOR" on "SELECT DIAG MODE" screen.
3. Touch either "ALL SIGNALS" or "SELECTION FROM MENU" on the "SELECT MONITOR ITEM" screen.

ALL SIGNALS	Monitors all the signals.
SELECTION FROM MENU	Selects and monitors the individual signal.

4. Touch "START".
5. When "SELECTION FROM MENU" is selected, touch items to be monitored. When "ALL SIGNALS" is selected, all the items will be monitored.
6. Touch "RECORD" while monitoring, then the status of the monitored item can be recorded. To stop recording, touch "STOP".

Display Item List

Monitor item	Contents
IGN ON SW "ON/OFF"	Displays "IGN position (ON)/OFF, ACC position (OFF)" judged from the ignition switch signal.
HAZARD SW "ON/OFF"	Displays "Hazard ON (ON)/Hazard OFF (OFF)" status, determined from hazard switch signal.

TURN SIGNAL AND HAZARD WARNING LAMPS

Monitor item	Contents	
TURN SIGNAL R	"ON/OFF"	Displays "Turn right (ON)/Other (OFF)" status, determined from lighting switch signal.
TURN SIGNAL L	"ON/OFF"	Displays "Turn left (ON)/Other (OFF)" status, determined from lighting switch signal.
BRAKE SW	"ON/OFF"	Displays status of stop lamp switch.

ACTIVE TEST

Operation Procedure

1. Touch "FLASHER" on "SELECT TEST ITEM" screen.
2. Touch "ACTIVE TEST" on "SELECT DIAG MODE" screen.
3. Touch item to be tested and check operation of the selected item.
4. During the operation check, touching "BACK" or "OFF" deactivates the operation.

Display Item List

Test item	Description
FLASHER (RH)	Turn signal lamp (right) can be operated by any ON-OFF operations.
FLASHER (LH)	Turn signal lamp (left) can be operated by any ON-OFF operations.

Turn Signal Lamp Does Not Operate

EKS00EKF

1. CHECK COMBINATION SWITCH INPUT SIGNAL

Ⓜ With CONSULT-II

Select "BCM" on CONSULT-II. With "FLASHER" data monitor, make sure "TURN SIGNAL R" and "TURN SIGNAL L" turns ON-OFF linked with operation of lighting switch.

**When lighting switch is in : TURN SIGNAL R ON
TURN RH position**

**When lighting switch is in : TURN SIGNAL L ON
TURN LH position**

ⓧ Without CONSULT-II

Refer to [LT-70, "Combination Switch Inspection"](#) .

OK or NG

OK >> GO TO 2.

NG >> Check lighting switch. Refer to [LT-70, "Combination Switch Inspection"](#) .

DATA MONITOR	
MONITOR	
TURN SIGNAL R	ON
TURN SIGNAL L	ON

SKIA4499E

2. ACTIVE TEST

Ⓜ With CONSULT-II

1. Select "FLASHER" during active test. Refer to [LT-59, "ACTIVE TEST"](#) .
2. Make sure "FLASHER RH" and "FLASHER LH" operate.

ⓧ Without CONSULT-II

GO TO 3.

OK or NG

OK >> Replace BCM. Refer to [BCS-26, "Removal and Installation of BCM"](#) .

NG >> GO TO 3.

ACTIVE TEST			
FLASHER		OFF	
RH	LH		
MODE	BACK	LIGHT	COPY


SKIA6190E

TURN SIGNAL AND HAZARD WARNING LAMPS

3. CHECK TURN SIGNAL LAMPS CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connector and front combination lamp LH and RH (turn signal) connectors.
3. Check continuity between BCM harness connector terminal and front combination lamp (turn signal) harness connector terminal.

A		B		Continuity
BCM connector	Terminal	Front combination lamp (turn signal) connector	Terminal	
M20	60	E27	6	Yes
	61	E111		

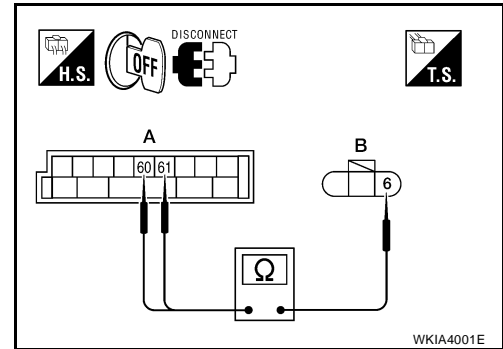


OK or NG

- OK >> GO TO 4.
- NG >> Repair harness or connector.

4. CHECK GROUND

Check continuity between front combination lamp (turn signal) harness connector terminal and ground.

A		Continuity
Front combination lamp (turn signal) connector	Terminal	
E27	5	Ground
E111		

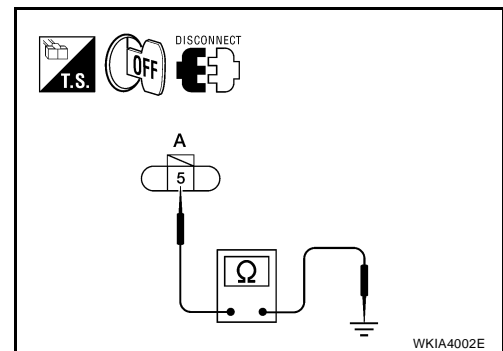

OK or NG

- OK >> GO TO 5.
- NG >> Repair harness or connector.

5. CHECK BULB

Check bulb standard of each turn signal lamp is correct. Refer to [LT-148, "Exterior Lamp"](#) .

OK or NG

- OK >> Replace BCM if turn signal lamps do not work after setting the connector again. Refer to [BCS-26, "Removal and Installation of BCM"](#) .
- NG >> Replace turn signal lamp bulb. Refer to [LT-64, "FRONT TURN SIGNAL LAMP"](#) .

Rear Turn Signal Lamp Does Not Operate

EKS00EKG

1. CHECK TAIL LAMPS AND STOP LAMPS

Check bulb standard of each turn signal lamp is correct. Refer to [LT-148, "Exterior Lamp"](#) .

OK or NG

- OK >> GO TO 2.
- NG >> Replace turn signal lamp bulb. Refer to [LT-96, "Bulb Replacement"](#) .

TURN SIGNAL AND HAZARD WARNING LAMPS


2. CHECK TURN SIGNAL LAMPS CIRCUIT

1. Disconnect BCM connector and rear combination lamp connector.
2. Check continuity between BCM harness connector M20 terminal 60 and rear combination lamp LH harness connector B35 terminal 4.

60 - 4 : Continuity should exist.

3. Check continuity between BCM harness connector M20 terminal 61 and rear combination lamp RH harness connector B105 terminal 4.

61 - 4 : Continuity should exist.

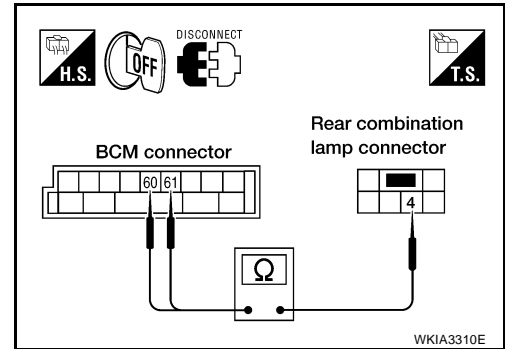

OK or NG

- OK >> GO TO 3.
- NG >> Repair harness or connector.


3. CHECK GROUND CIRCUIT

Check continuity between rear combination lamp harness connector B35 (LH) and B105 (RH) terminal 5 and ground.

5 - Ground : Continuity should exist.

OK or NG

- OK >> Check rear combination lamp connector for proper connection. Repair as necessary.
- NG >> Repair harness or connector.

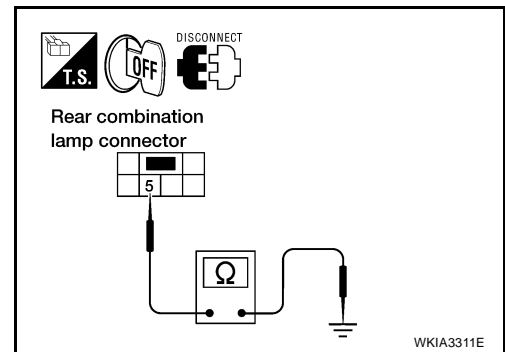

Hazard Warning Lamp Does Not Operate But Turn Signal Lamps Operate

EKS00EKH

1. CHECK BULB

Make sure bulb standard of each turn signal lamp is correct. Refer to [LT-148, "Exterior Lamp"](#).

OK or NG


- OK >> GO TO 2.
- NG >> Replace turn signal lamp bulb. Refer to [LT-64, "FRONT TURN SIGNAL LAMP"](#) for front turn signal bulb. Refer to [LT-96, "Bulb Replacement"](#) for rear turn signal bulb.

TURN SIGNAL AND HAZARD WARNING LAMPS

2. CHECK HAZARD SWITCH INPUT SIGNAL

With CONSULT-II
Select "BCM" on CONSULT-II. With "FLASHER" data monitor, make sure "HAZARD SW" turns ON-OFF linked with operation of hazard switch.

When hazard switch is in ON position : HAZARD SW ON

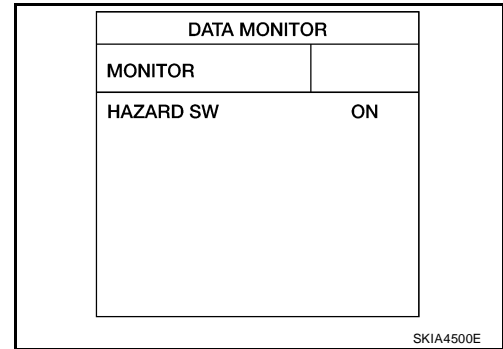


Without CONSULT-II
Check voltage between BCM harness connector M18 terminal 29 and ground.

BCM (+)		(-)	Condition	Voltage (Approx.)
Connector	Terminal			
M18	29	Ground	Hazard switch is ON	0V
			Hazard switch is OFF	5V

OK or NG

- OK >> Replace BCM. Refer to [BCS-26, "Removal and Installation of BCM"](#).
- NG >> GO TO 3.

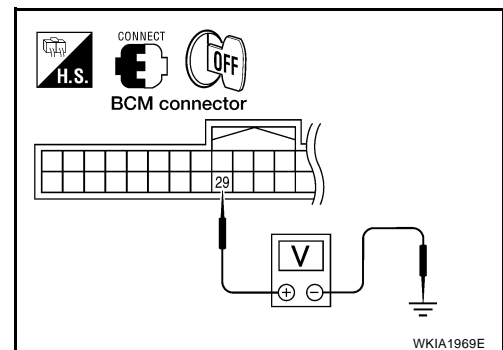


3. CHECK HAZARD SWITCH CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connector and hazard switch connector.
3. Check continuity between BCM harness connector M18 terminal 29 and hazard switch harness connector M55 terminal 2.

29 - 2 : Continuity should exist.

OK or NG

- OK >> GO TO 4.
- NG >> Repair harness or connector.

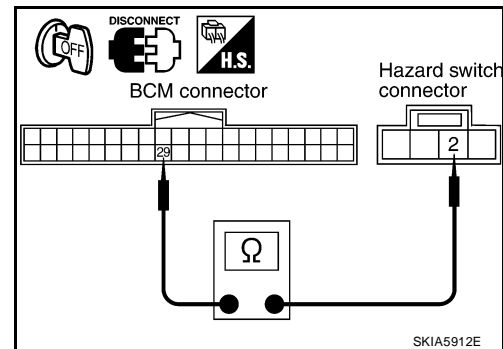


4. CHECK GROUND

Check continuity between hazard switch harness connector M55 terminal 1 and ground.

1 - Ground : Continuity should exist.

OK or NG

- OK >> GO TO 5.
- NG >> Repair harness or connector.

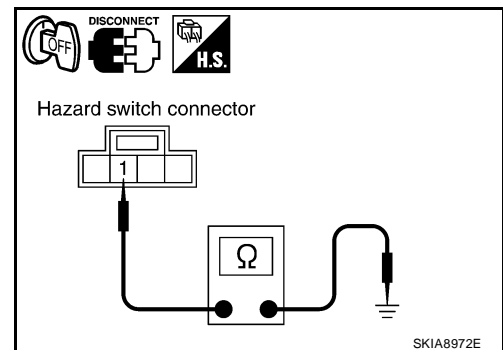

TURN SIGNAL AND HAZARD WARNING LAMPS

5. CHECK HAZARD SWITCH


1. Disconnect hazard switch connector.
2. Check continuity of hazard switch.

Hazard switch		Condition	Continuity
Terminal			
2	1	Hazard switch is ON	Yes
		Hazard switch is OFF	No

OK or NG

OK >> Replace BCM if hazard warning lamps do not work after setting the connector again. Refer to [BCS-26, "Removal and Installation of BCM"](#) .

NG >> Replace hazard switch. Refer to [LT-66, "Removal and Installation"](#) .

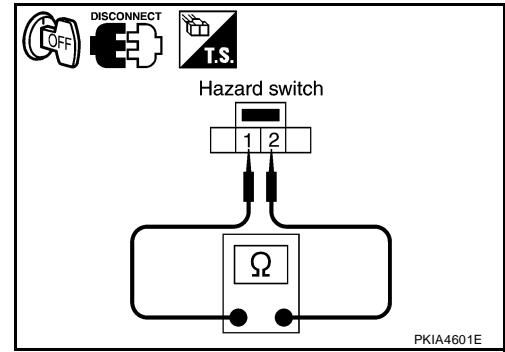

Turn Signal Indicator Lamp Does Not Operate

EKS00EKI

1. CHECK CAN COMMUNICATION SYSTEM

Check CAN communication. Refer to [LAN-21, "CAN COMMUNICATION"](#) .

OK or NG

OK >> Replace combination meter. Refer to [DI-27, "COMBINATION METER"](#) .

NG >> Repair as necessary.

A
B
C
D
E
F
G
H
I
J
LT
L
M

LT

TURN SIGNAL AND HAZARD WARNING LAMPS

Bulb Replacement

EKS00EKJ

FRONT TURN SIGNAL LAMP

Refer to [LT-64, "Bulb Replacement"](#) .

REAR TURN SIGNAL LAMP

Refer to [LT-96, "Bulb Replacement"](#) .

Removal and Installation

EKS00EKL

FRONT TURN SIGNAL LAMP

Refer to [LT-64, "Removal and Installation"](#) .

REAR TURN SIGNAL LAMP

Refer to [LT-64, "REAR TURN SIGNAL LAMP"](#) .

LIGHTING AND TURN SIGNAL SWITCH

LIGHTING AND TURN SIGNAL SWITCH


PF2P:25540

Removal and Installation

EKS00EKN

REMOVAL

1. Remove instrument lower cover LH. Refer to [IP-12, "LOWER INSTRUMENT PANEL LH"](#) .
2. Remove upper and lower steering column cover. Refer to [IP-10, "INSTRUMENT PANEL ASSEMBLY"](#) .
3. Disconnect the lighting and turn signal switch connector.
4. While pressing tabs, pull lighting and turn signal switch toward driver door and release from the steering column.

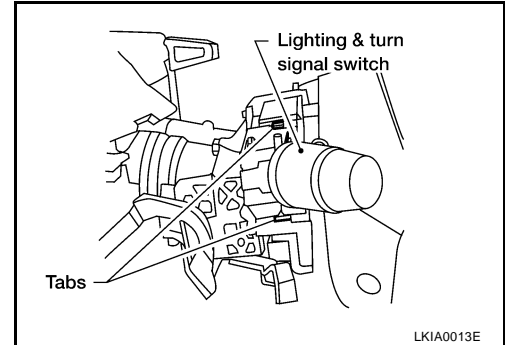

INSTALLATION

Installation is in the reverse order of removal.

A
B
C
D
E
F
G
H
I
J
LT
L
M

HAZARD SWITCH

PFP:25290


HAZARD SWITCH

Removal and Installation

EKS00EKO

REMOVAL

1. Remove cluster lid C. Refer to [IP-11, "CLUSTER LID C"](#).
2. Disconnect the hazard switch connector.
3. Remove the screws and remove the hazard switch.

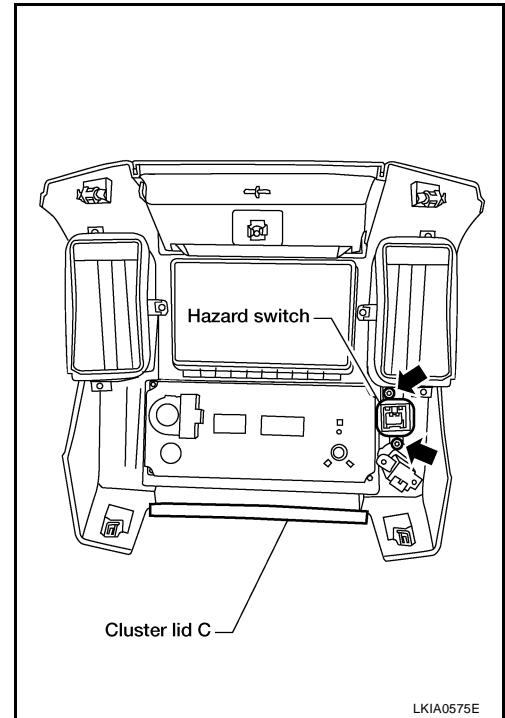

INSTALLATION

Installation is in the reverse order of removal.

COMBINATION SWITCH



PF2:25567

COMBINATION SWITCH

Wiring Diagram — COMBSW —

EKS00EKP

LT-COMBSW-01

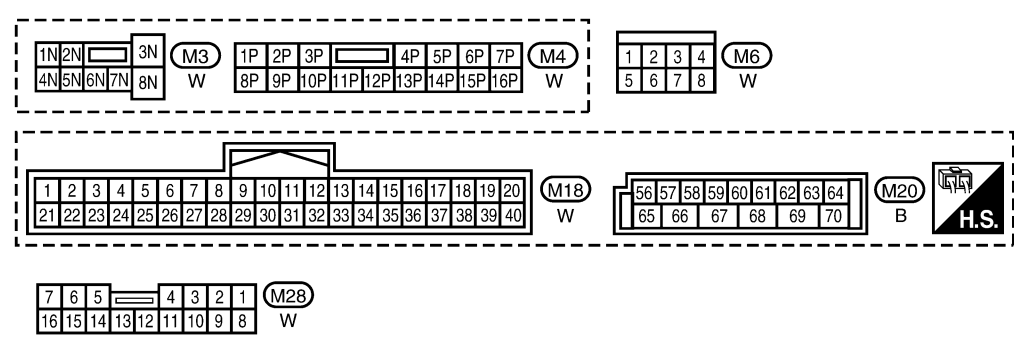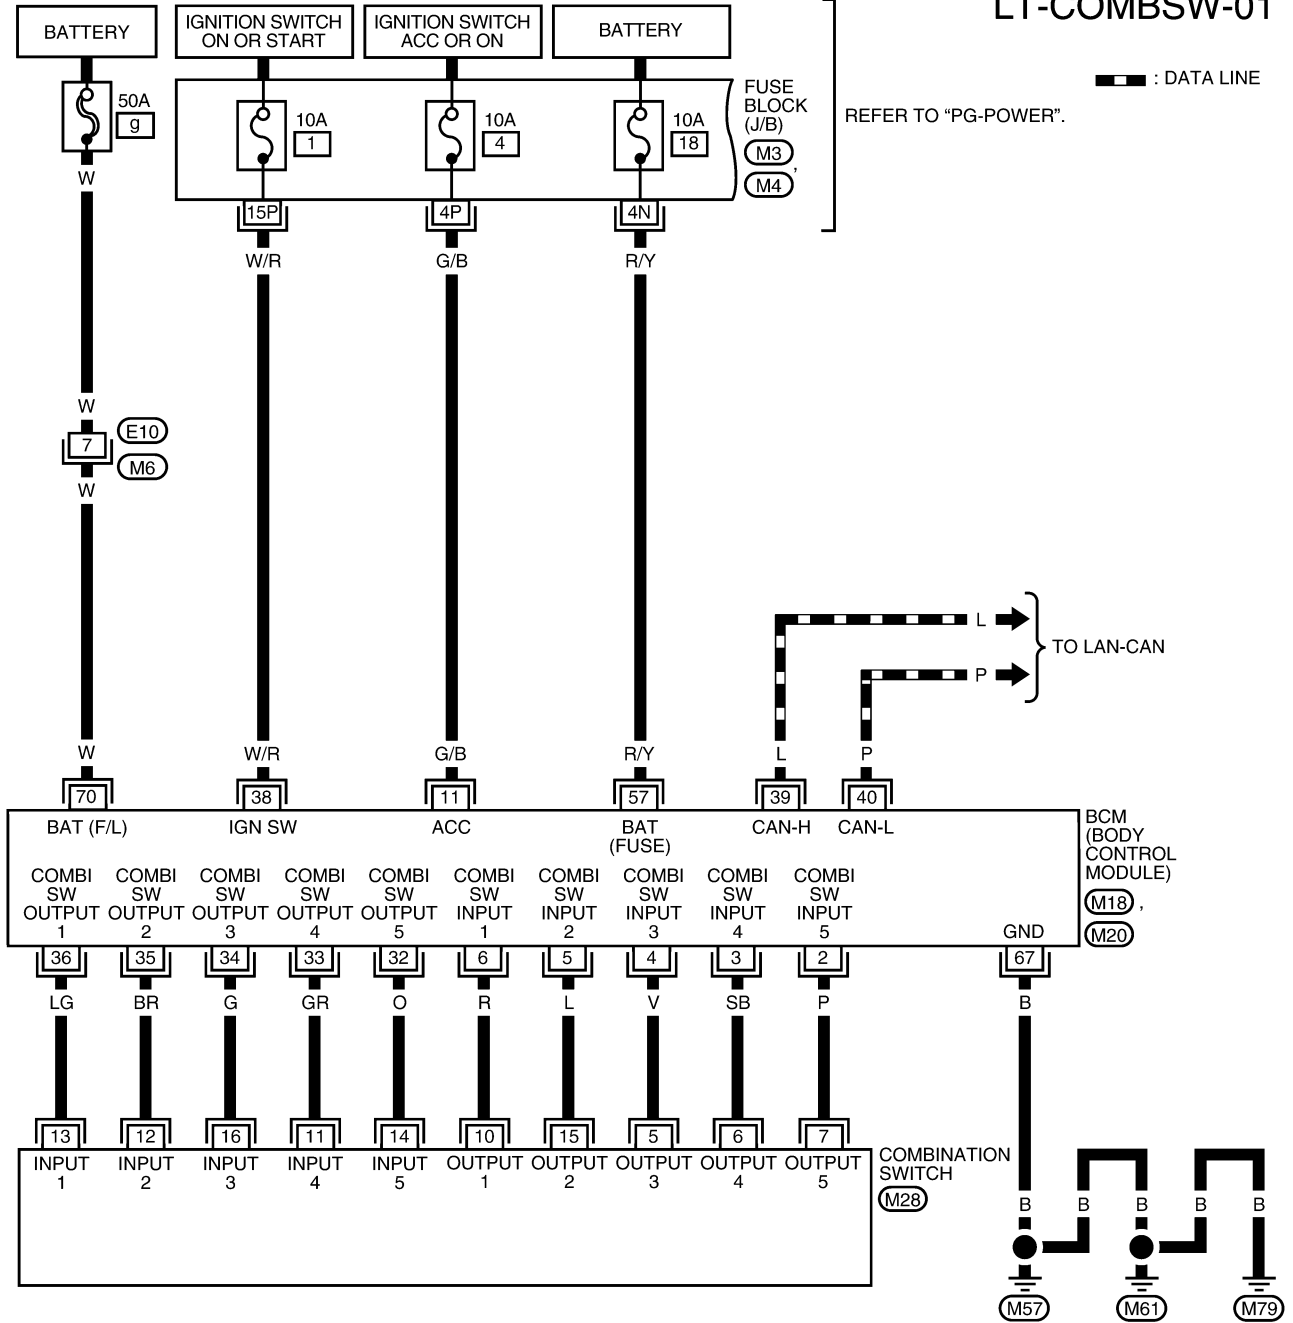

COMBINATION SWITCH

Combination Switch Reading Function

EKS00EKG

For details, refer to [BCS-3, "COMBINATION SWITCH READING FUNCTION"](#).

CONSULT-II Function (BCM)

EKS00EKR

CONSULT-II can display each diagnostic item using the diagnostic test modes shown following.


BCM diagnostic test item	Diagnostic mode	Description
Inspection by part	WORK SUPPORT	Supports inspections and adjustments. Commands are transmitted to the BCM for setting the status suitable for required operation, input/output signals are received from the BCM and received data is displayed.
	DATA MONITOR	Displays BCM input/output data in real time.
	ACTIVE TEST	Operation of electrical loads can be checked by sending drive signal to them.
	SELF-DIAG RESULTS	Displays BCM self-diagnosis results.
	CAN DIAG SUPPORT MNTR	The result of transmit/receive diagnosis of CAN communication can be read.
	ECU PART NUMBER	BCM part number can be read.
	CONFIGURATION	Performs BCM configuration read/write functions.

CONSULT-II OPERATION


CAUTION:

If CONSULT-II is used with no connection of CONSULT-II CONVERTER, malfunctions might be detected in self-diagnosis depending on control unit which carries out CAN communication.


1. With the ignition switch OFF, connect CONSULT-II and CONSULT-II CONVERTER to the data link connector, then turn ignition switch ON.

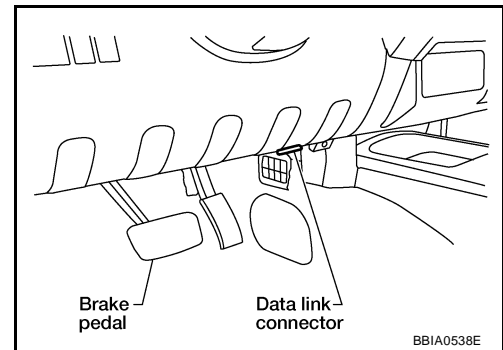

2. Touch "START (NISSAN BASED VHCL)".

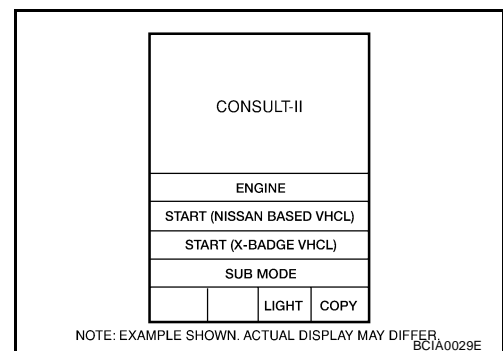


3. Touch "BCM" on "SELECT SYSTEM" screen.
If "BCM" is not indicated, go to [GI-41, "CONSULT-II Data Link Connector \(DLC\) Circuit"](#).

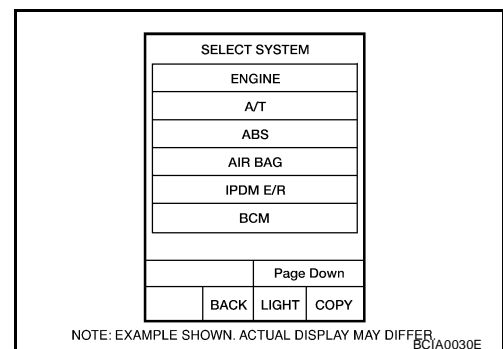

COMBINATION SWITCH

4. Touch "COMB SW" on "SELECT TEST ITEM" screen.

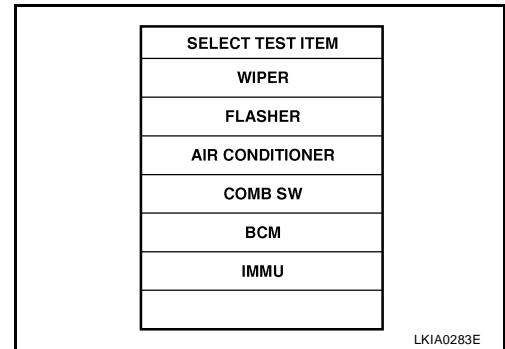

DATA MONITOR

Operation Procedure

1. Touch "COMB SW" on "SELECT TEST ITEM" screen.
2. Touch "DATA MONITOR" on "SELECT DIAG MODE" screen.
3. Touch either "ALL SIGNALS" or "SELECTION FROM MENU" on "SELECT MONITOR ITEM" screen.

ALL SIGNALS	Monitors all the signals.
SELECTION FROM MENU	Selects and monitors individual signal.

4. Touch "START".
5. When "SELECTION FROM MENU" is selected, touch items to be monitored. When "ALL SIGNALS" is selected, all the signals will be monitored.
6. Touch "RECORD" while monitoring, then the status of the monitored item can be recorded. To stop recording, touch "STOP".

Display Item List

Monitor item name "OPERATION OR UNIT"	Contents
TURN SIGNAL R "ON/OFF"	Displays "Turn Right (ON)/Other (OFF)" status, determined from lighting switch signal.
TURN SIGNAL L "ON/OFF"	Displays "Turn Left (ON)/Other (OFF)" status, determined from lighting switch signal.
HI BEAM SW "ON/OFF"	Displays status (high beam switch: ON/Others: OFF) of high beam switch judged from lighting switch signal.
HEAD LAMP SW 1 "ON/OFF"	Displays "Headlamp switch 1 (ON)/Other (OFF)" status, determined from lighting switch signal.
HEAD LAMP SW 2 "ON/OFF"	Displays status (headlamp switch 2: ON/Others: OFF) of headlamp switch 2 judged from lighting switch signal.
LIGHT SW 1ST "ON/OFF"	Displays status (lighting switch 1st position: ON/Others: OFF) of lighting switch judged from lighting switch signal.
PASSING SW "ON/OFF"	Displays status (flash-to-pass switch: ON/Others: OFF) of flash-to-pass switch judged from lighting switch signal.
AUTO LIGHT SW "ON/OFF"	Displays "Auto light switch (ON)/Other (OFF)" status, determined from lighting switch signal.
FR FOG SW "ON/OFF"	Displays "Front fog lamp switch (ON)/Other (OFF)" status, determined from lighting switch signal.
FR WIPER HI "ON/OFF"	Displays "Front Wiper HI (ON)/Other (OFF)" status, determined from wiper switch signal.
FR WIPER LOW "ON/OFF"	Displays "Front Wiper LOW (ON)/Other (OFF)" status, determined from wiper switch signal.
FR WIPER INT "ON/OFF"	Displays "Front Wiper INT (ON)/Other (OFF)" status, determined from wiper switch signal.
FR WASHER SW "ON/OFF"	Displays "Front Washer Switch (ON)/Other (OFF)" status, determined from wiper switch signal.
INT VOLUME [1 - 7]	Displays intermittent operation knob setting (1 - 7), determined from wiper switch signal.
RR WIPER ON "ON/OFF"	Displays "Rear Wiper (ON)/(OFF)" status, determined from wiper switch signal.
RR WIPER INT "ON/OFF"	Displays "Rear Wiper INT (ON)/(OFF)" status, determined from wiper switch signal.
RR WASHER SW "ON/OFF"	Displays "Rear Washer (ON)/(OFF)" status, determined from wiper switch signal.

COMBINATION SWITCH

EKS00EKS

Combination Switch Inspection

1. SYSTEM CHECK

Referring to table below, check to which system the malfunctioning switch belongs.

System 1	System 2	System 3	System 4	System 5
—	FR WASHER	FR WIPER LO	TURN LH	TURN RH
FR WIPER HI	—	FR WIPER INT	PASSING	HEAD LAMP1
INT VOLUME 1	RR WASHER	—	HEAD LAMP2	HI BEAM
RR WIPER INT	INT VOLUME 3	—	—	TAIL LAMP
INT VOLUME 2	RR WIPER ON	—	FR FOG	—

>> GO TO 2.

2. SYSTEM CHECK

 With CONSULT-II

CAUTION:

If CONSULT-II is used with no connection of CONSULT-II CONVERTER, malfunctions might be detected in self-diagnosis depending on control unit which carries out CAN communication.

1. Connect CONSULT-II, and select "COMB SW" on "SELECT TEST ITEM" screen.
2. Select "DATA MONITOR".
3. Select "START", and confirm that other switches in malfunctioning system operate normally.

Example: When auto light switch is malfunctioning, confirm that "FRONT WIPER LOW" and "FRONT WIPER INT" in System 3, to which the auto light switch belongs, turn ON-OFF normally.

DATA MONITOR			
MONITOR			
TURN SIGNAL R		OFF	
TURN SIGNAL L		OFF	
HIBEAM SW		OFF	
HEAD LAMP SW1		OFF	
HEAD LAMP SW2		OFF	
LIGHT SW 1ST		OFF	
PASSING SW		OFF	
AUTO LIGHT SW		OFF	
FR FOG SW		OFF	
		Page Down	
		RECORD	
MODE	BACK	LIGHT	COPY

SKIA7075E

 Without CONSULT-II

Operate combination switch, and confirm that other switches in malfunctioning system operate normally.

Example: When auto light switch is malfunctioning, confirm that "FRONT WIPER LOW" and "FRONT WIPER INT" in System 3, to which the auto light switch belongs, operate normally.

Check results

Other switches in malfunctioning system operate normally.>>Replace lighting switch or wiper switch.


Other switches in malfunctioning system do not operate normally.>>GO TO 3.

COMBINATION SWITCH

3. HARNESS INSPECTION

1. Turn ignition switch OFF.
2. Disconnect BCM and combination switch connectors.
3. Check for continuity between BCM harness connector of the suspect system and the corresponding combination switch connector terminals.

Suspect system	A		B		Continuity
	BCM connector	Terminal	Combination switch connector	Terminal	
1	M18	Input 1	6	M28	10
		Output 1	36		13
2		Input 2	5		15
		Output 2	35		12
3		Input 3	4		5
		Output 3	34		16
4		Input 4	3		6
		Output 4	33		11
5		Input 5	2		7
		Output 5	32		14

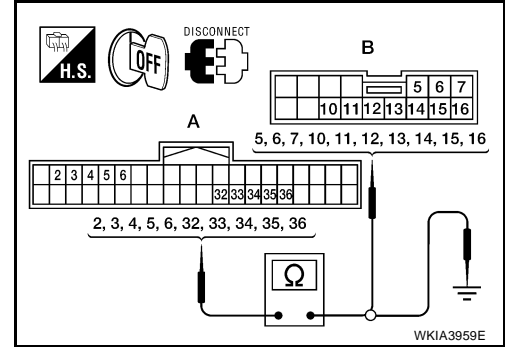

4. Check for continuity between each terminal of BCM harness connector in suspect malfunctioning system and ground.

Suspect system	A		Continuity		
	BCM connector	Terminal			
1	M18	Input 1	6	Ground	No
		Output 1	36		
2		Input 2	5		
		Output 2	35		
3		Input 3	4		
		Output 3	34		
4		Input 4	3		
		Output 4	33		
5		Input 5	2		
		Output 5	32		

OK or NG


OK >> GO TO 4.

NG >> Check harness between BCM and combination switch for open or short circuit.

COMBINATION SWITCH

4. BCM OUTPUT TERMINAL INSPECTION

1. Turn lighting switch and wiper switch to OFF.
2. Set wiper dial to position 4.
3. Connect BCM and combination switch connectors.
4. Turn ignition switch ON.
5. Check combination switch input terminal voltage waveform of suspect malfunctioning system.

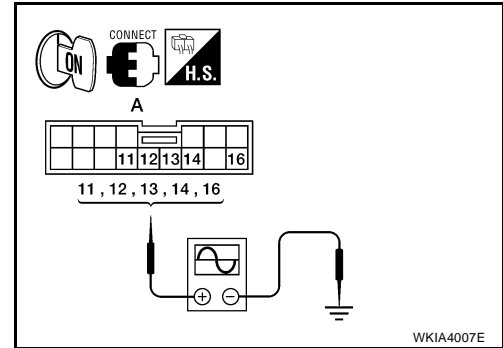

Suspect system	A		Signal		
	(+)				
	Combina-tion switch connector	Terminal			
1	M28	Input 1	13	<p>SKIA5292E</p>	
2		Input 2	12		
3		Input 3	16		<p>SKIA5291E</p>
4		Input 4	11		<p>SKIA5292E</p>
5		Input 5	14		<p>SKIA5291E</p>

OK or NG

- OK >> Open circuit in combination switch, GO TO 5.
 NG >> Replace BCM. Refer to [BCS-26, "Removal and Installation of BCM"](#) .

5. COMBINATION SWITCH INSPECTION

Referring to table below, perform combination switch inspection.

Procedure									
1	2		3	4		5	6		7
Replace lighting switch.	Confirm check results.	OK	INSPECTION END	Confirm check results.	OK	INSPECTION END	Confirm check results.	OK	INSPECTION END
		NG	Replace wiper switch.		NG	Replace switch base.		NG	Confirm symptom again.

COMBINATION SWITCH

>> Inspection End.

Removal and Installation

EKS00EKT

For details, refer to [SRS-44, "SPIRAL CABLE"](#) .

Switch Circuit Inspection

EKS00EKU

For details, refer to [LT-70, "Combination Switch Inspection"](#) .

A

B

C

D

E

F

G

H

I

J

LT

L

M

STOP LAMP

STOP LAMP

PF2:26550

System Description

EKS00EKV

Power is supplied at all times

- through 10A fuse [No. 20, located in fuse block (J/B)]
- to stop lamp switch terminal 1, and
- to stop lamp relay terminals 2 and 3 (with hill descent control and hill start assist).

When the brake pedal is pressed, the stop lamp switch is closed and power is supplied

- through stop lamp switch terminal 2
- to rear combination lamp LH and RH terminal 2
- to high-mounted stop lamp terminal 1
- to ABS actuator and electric unit (control unit) terminal 41, and
- to stop lamp relay terminal 5 (with hill descent control and hill start assist).

Ground is supplied

- to rear combination lamp LH terminal 5
- through ground B85, and
- to rear combination lamp RH terminal 5
- through ground B160, and
- to high-mounted stop lamp terminal 2
- through grounds B406 and B652.

 

With power and ground supplied, the stop lamps illuminate.

STOP LAMP

Wiring Diagram — STOP/L —

EKS00EKW



LT-STOP/L-01

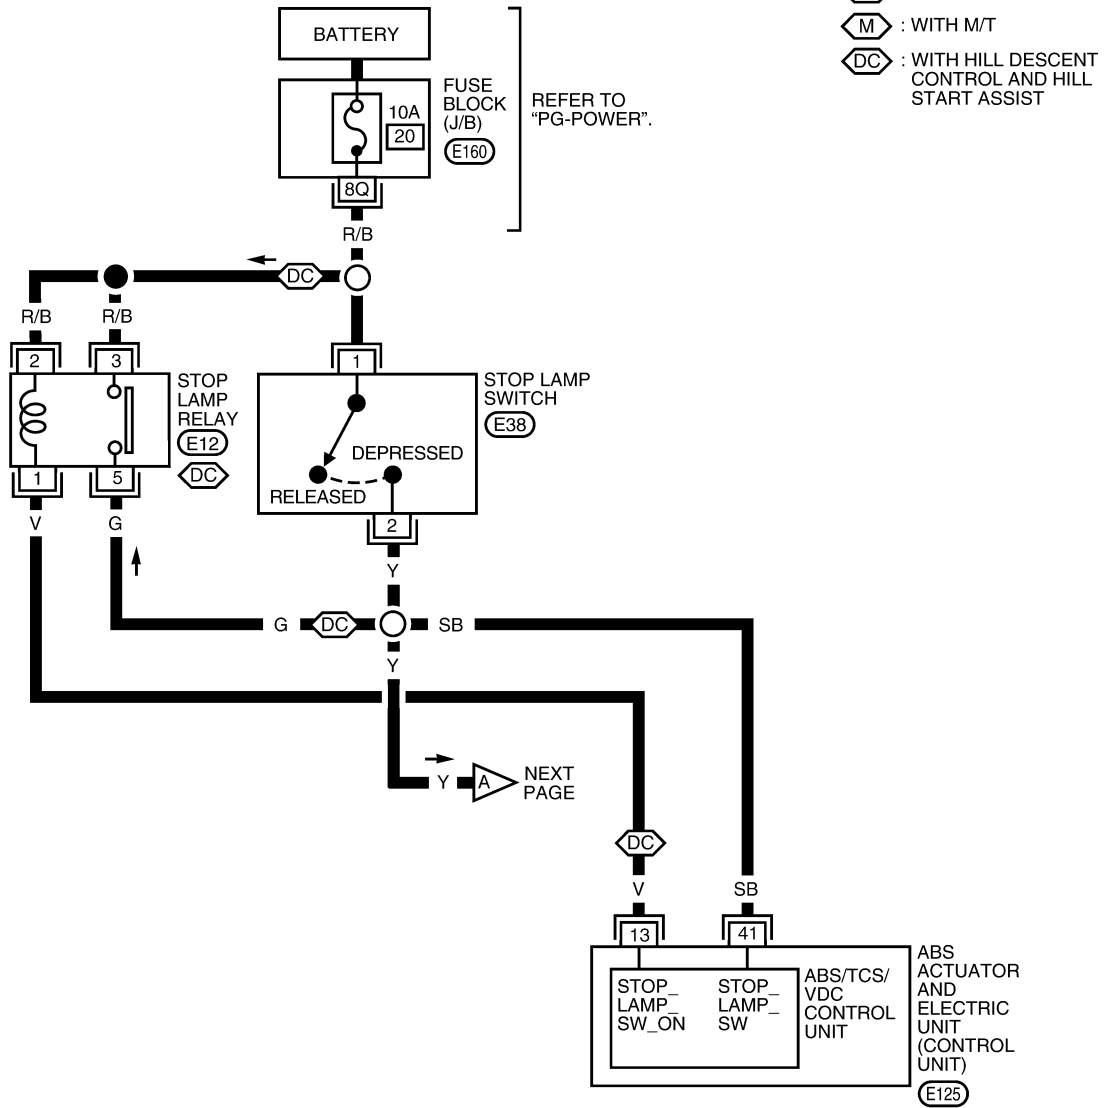

REFER TO THE FOLLOWING.
E125 - ELECTRICAL UNITS

STOP LAMP

LT-STOP/L-02

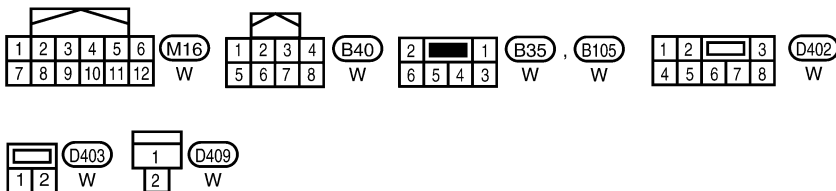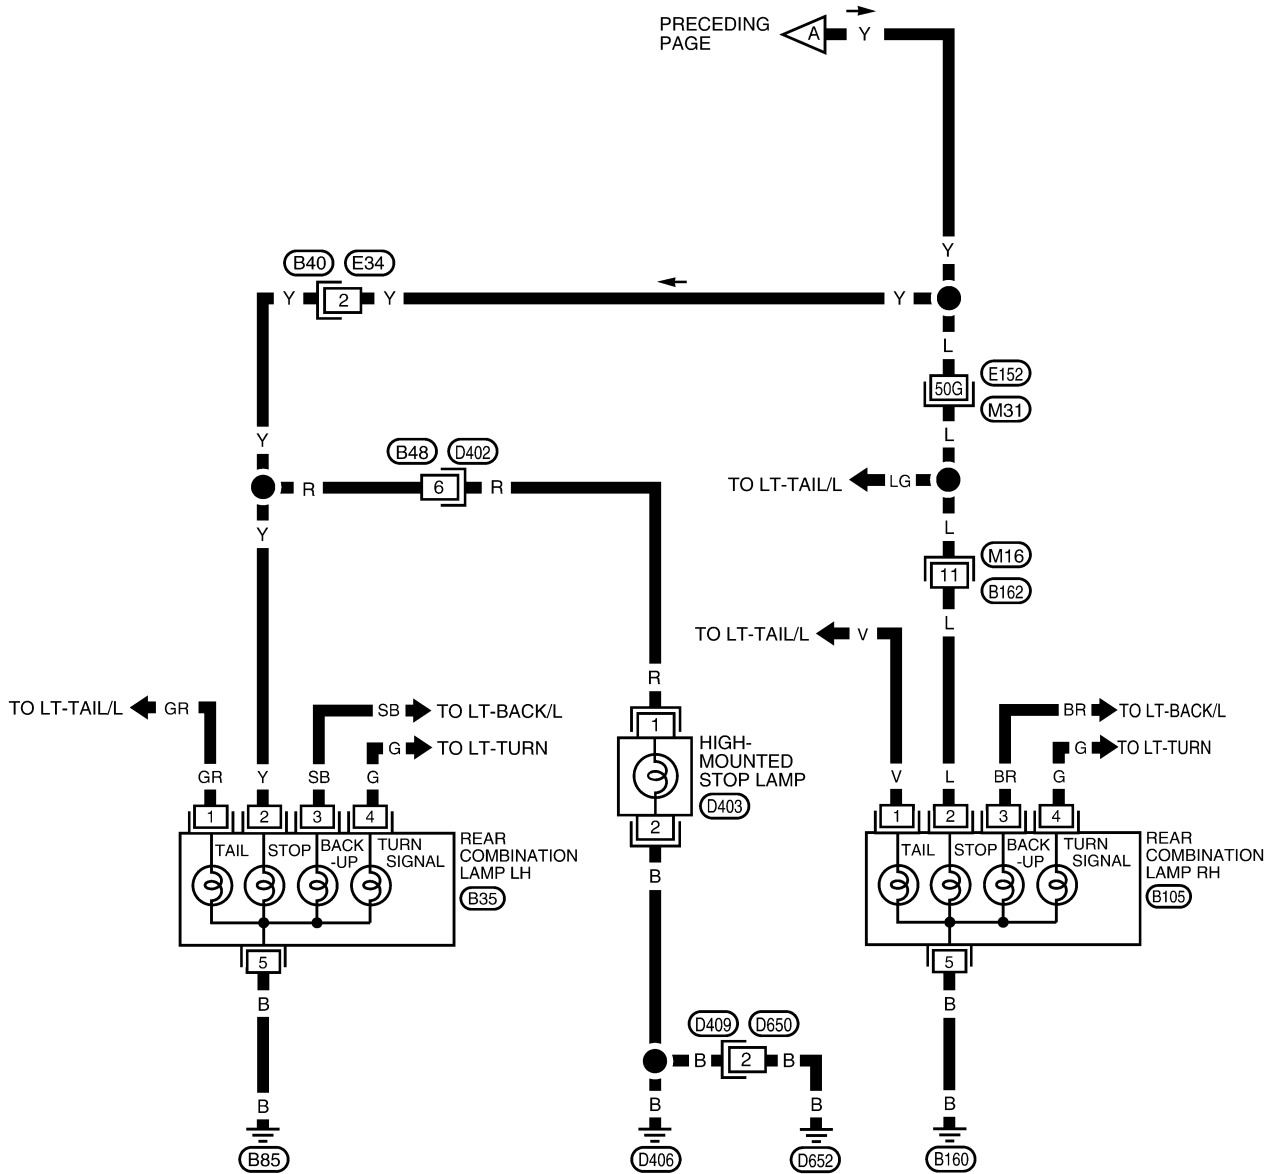

REFER TO THE FOLLOWING.
 (M31) - SUPER MULTIPLE JUNCTION (SMJ)

WKWA2730E

STOP LAMP

Bulb Replacement HIGH-MOUNTED STOP LAMP

EKS00F9W

The high-mounted stop lamp bulbs are not serviceable.

STOP LAMP


Refer to [LT-77, "Bulb Replacement"](#) .

Removal and Installation HIGH-MOUNTED STOP LAMP

EKS00F9X

Removal

1. Remove back door upper finisher. Refer to [EI-35, "BACK DOOR TRIM"](#) .
2. Disconnect the high-mounted stop lamp connector.
3. Remove two nuts and remove high-mounted stop lamp.

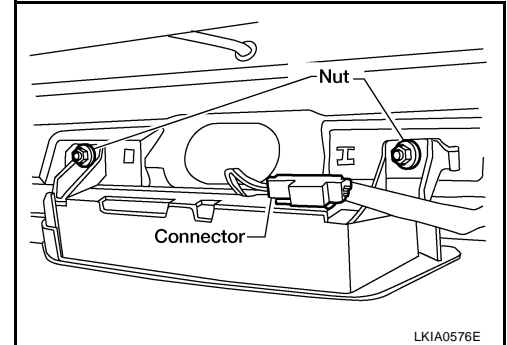

Installation

Installation is in the reverse order of removal.

STOP LAMP

Refer to [LT-77, "STOP LAMP"](#) .

A
B
C
D
E
F
G
H
I
J
LT
L
M

BACK-UP LAMP

PF#:26550



EKS00EKZ

BACK-UP LAMP

Wiring Diagram — BACK/L —

LT-BACK/L-01

⬡ : WITH A/T
⬢ : WITH M/T

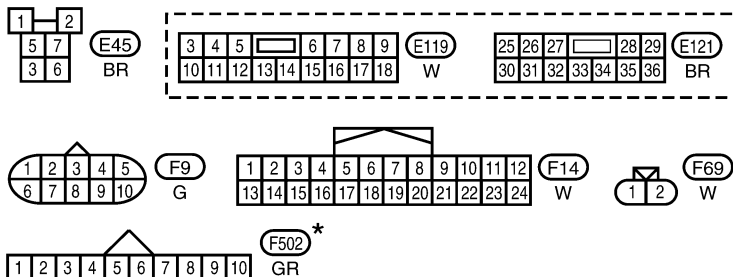
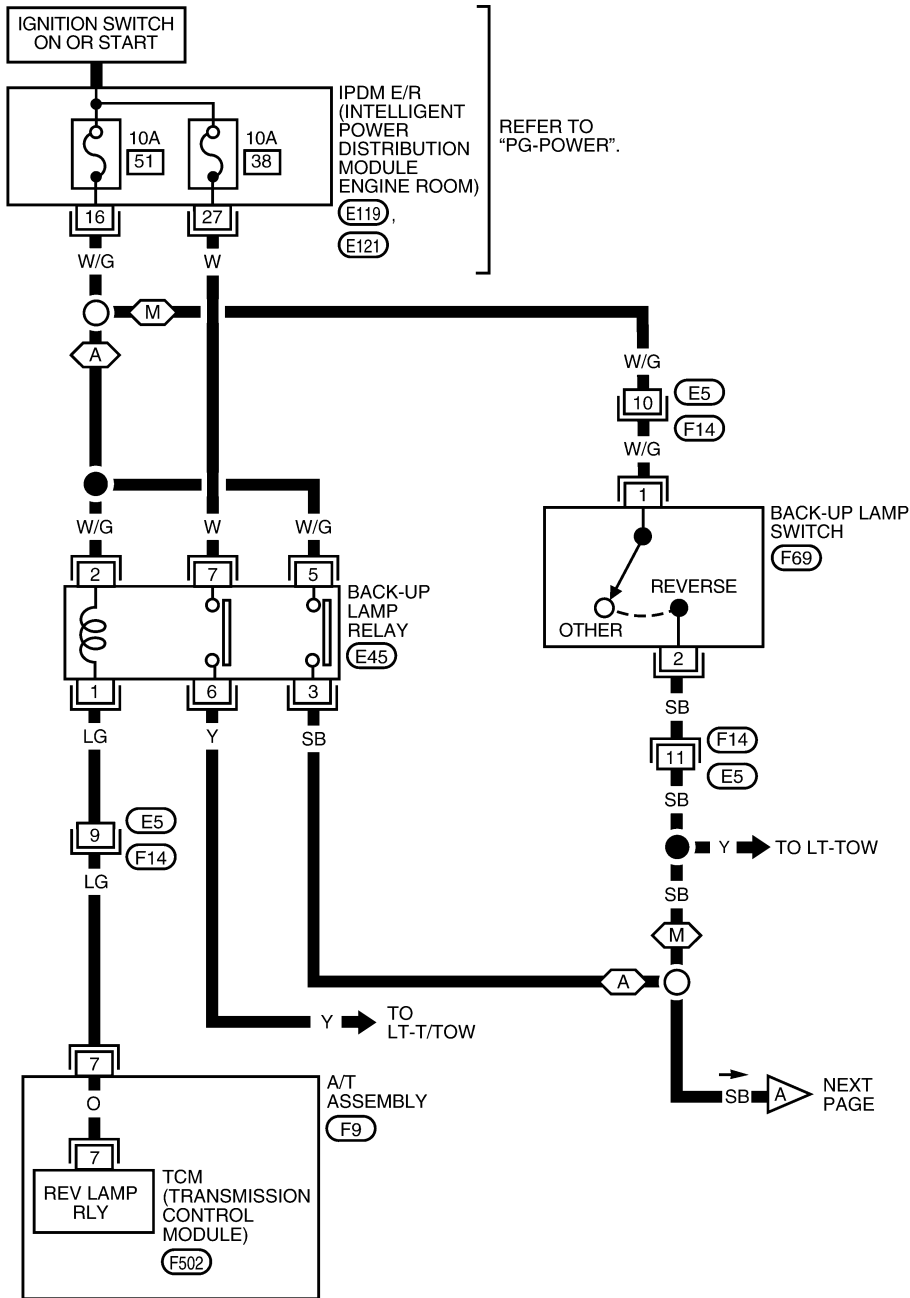


*: THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT" OF PG SECTION.

WKWA5949E

BACK-UP LAMP

 LT-BACK/L-02

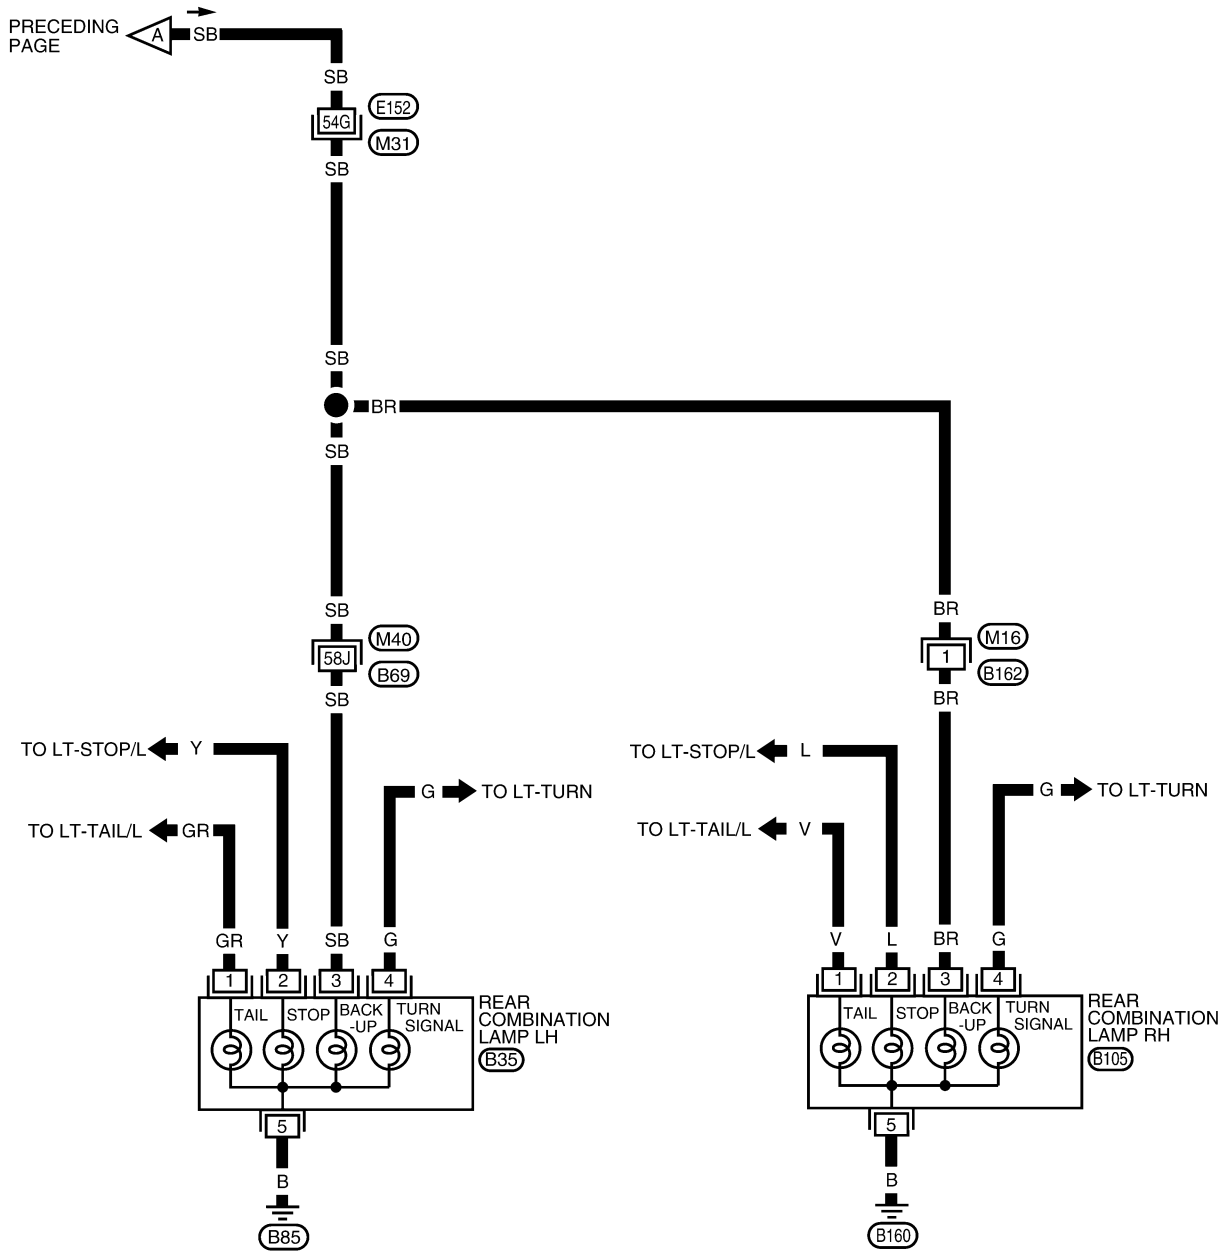

REFER TO THE FOLLOWING.
 (M31), (M40) - SUPER
 MULTIPLE JUNCTION (SMJ)

WKWA2729E

BACK-UP LAMP

Bulb Replacement

EKS00EL0

Refer to [LT-80, "Bulb Replacement"](#) .

Removal and Installation

EKS00EL1


Refer to [LT-80, "Removal and Installation"](#) .

PARKING, LICENSE PLATE AND TAIL LAMPS

PFP:26550

Component Parts and Harness Connector Location

EKS00HNL

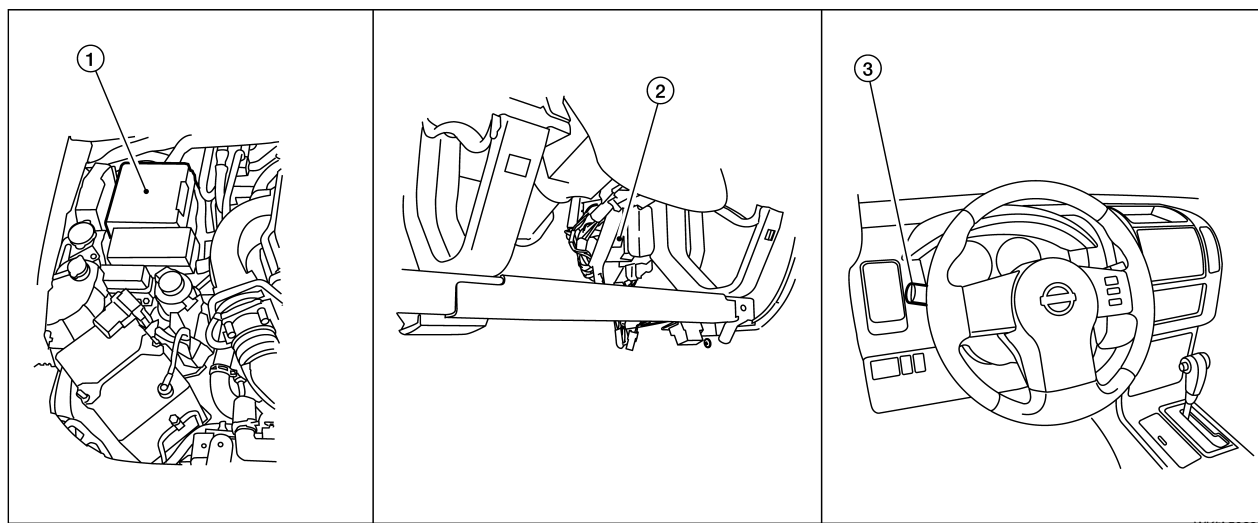

VKTA902ZE

- | | | |
|---|--|--|
| <p>1. IPDM E/R
E121, E122, E123, E124</p> | <p>2. BCM
M18, M20
(view with lower instrument panel LH removed)</p> | <p>3. Combination switch (lighting switch)
M28</p> |
|---|--|--|

System Description

EKS00EL3

Control of the parking, license plate, and tail lamp operation is dependent upon the position of the lighting switch (combination switch). When the lighting switch is placed in the 1ST position, the BCM (body control module) receives input signal requesting the parking, license plate, side marker and tail lamps to illuminate. This input signal is communicated to the IPDM E/R (intelligent power distribution module engine room) across the CAN communication lines. The CPU (central processing unit) of the IPDM E/R controls the tail lamp relay coil. This relay, when energized, directs power to the parking, license plate and tail lamps, which then illuminate.

Power is supplied at all times

- to tail lamp relay, located in the IPDM E/R, and
- through 20A fuse (No. 52 and 53, located in the IPDM E/R)
- to CPU of the IPDM E/R, and
- to ignition relay, located in the IPDM E/R, and
- through 50A fusible link (letter **g**, located in the fuse and fusible link box)
- to BCM terminal 70, and
- through 10A fuse [No. 18, located in the fuse block (J/B)]
- to BCM terminal 57.

With the ignition switch in the ACC or ON position, power is supplied

- through 10A fuse [No. 4, located in the fuse block (J/B)]
- to BCM terminal 11.

With the ignition switch in the ON or START position, power is supplied

- to ignition relay, located in the IPDM E/R, and
- through 10A fuse [No. 1, located in the fuse block (J/B)]
- to BCM terminal 38.

Ground is supplied

- to BCM terminal 67
- through grounds M57, M61 and M79, and
- to IPDM E/R terminals 38 and 59
- through grounds E9, E15 and E24.

A
B
C
D
E
F
G
H
I
J
LT
L
M

PARKING, LICENSE PLATE AND TAIL LAMPS

OPERATION BY LIGHTING SWITCH

With the lighting switch in the 1ST or 2ND position (or if the auto light system is activated), the BCM receives input signal requesting the parking, license plate, side marker and tail lamps to illuminate. This input signal is communicated to the IPDM E/R across the CAN communication lines. The CPU of the IPDM E/R controls the tail lamp relay coil, which when energized, directs power

- through 10A fuse (No. 37, located in the IPDM E/R)
- through IPDM E/R terminal 57
- to license plate lamp terminal 1
- to rear combination lamp LH and RH terminal 1, and
- through 10A fuse (No. 36, located in the IPDM E/R)
- through IPDM E/R terminal 28
- to front combination lamp LH (side marker) terminal 7
- to front combination lamp LH (parking) terminal 4, and
- through IPDM E/R terminal 49
- to front combination lamp RH (side marker) terminal 7
- to front combination lamp RH (parking) terminal 4.

Ground is supplied

- to front combination lamp LH and RH (side marker) terminal 8
- to front combination lamp LH and RH (parking) terminal 5
- to license plate lamp terminal 2
- through grounds E9, E15 and E24, and
- to rear combination lamp LH terminal 5
- through ground B85, and
- to rear combination lamp RH terminal 5
- through ground B160.

With power and ground supplied, the parking, side marker, license plate and tail lamps illuminate.

COMBINATION SWITCH READING FUNCTION

Refer to [BCS-3, "COMBINATION SWITCH READING FUNCTION"](#) .

EXTERIOR LAMP BATTERY SAVER CONTROL

When the combination switch (lighting switch) is in the 1ST (or 2ND) position, and the ignition switch is turned from ON or ACC to OFF, the battery saver control feature is activated.

Under this condition, the parking, side marker, license and tail lamps remain illuminated for 5 minutes, then the parking, side marker, license plate and tail lamps are turned off.

Exterior lamp battery saver control mode can be changed by the function setting of CONSULT-II.

CAN Communication System Description


EKS00EL4

Refer to [LAN-21, "CAN COMMUNICATION"](#) .

PARKING, LICENSE PLATE AND TAIL LAMPS

Schematic

EKS00EL5

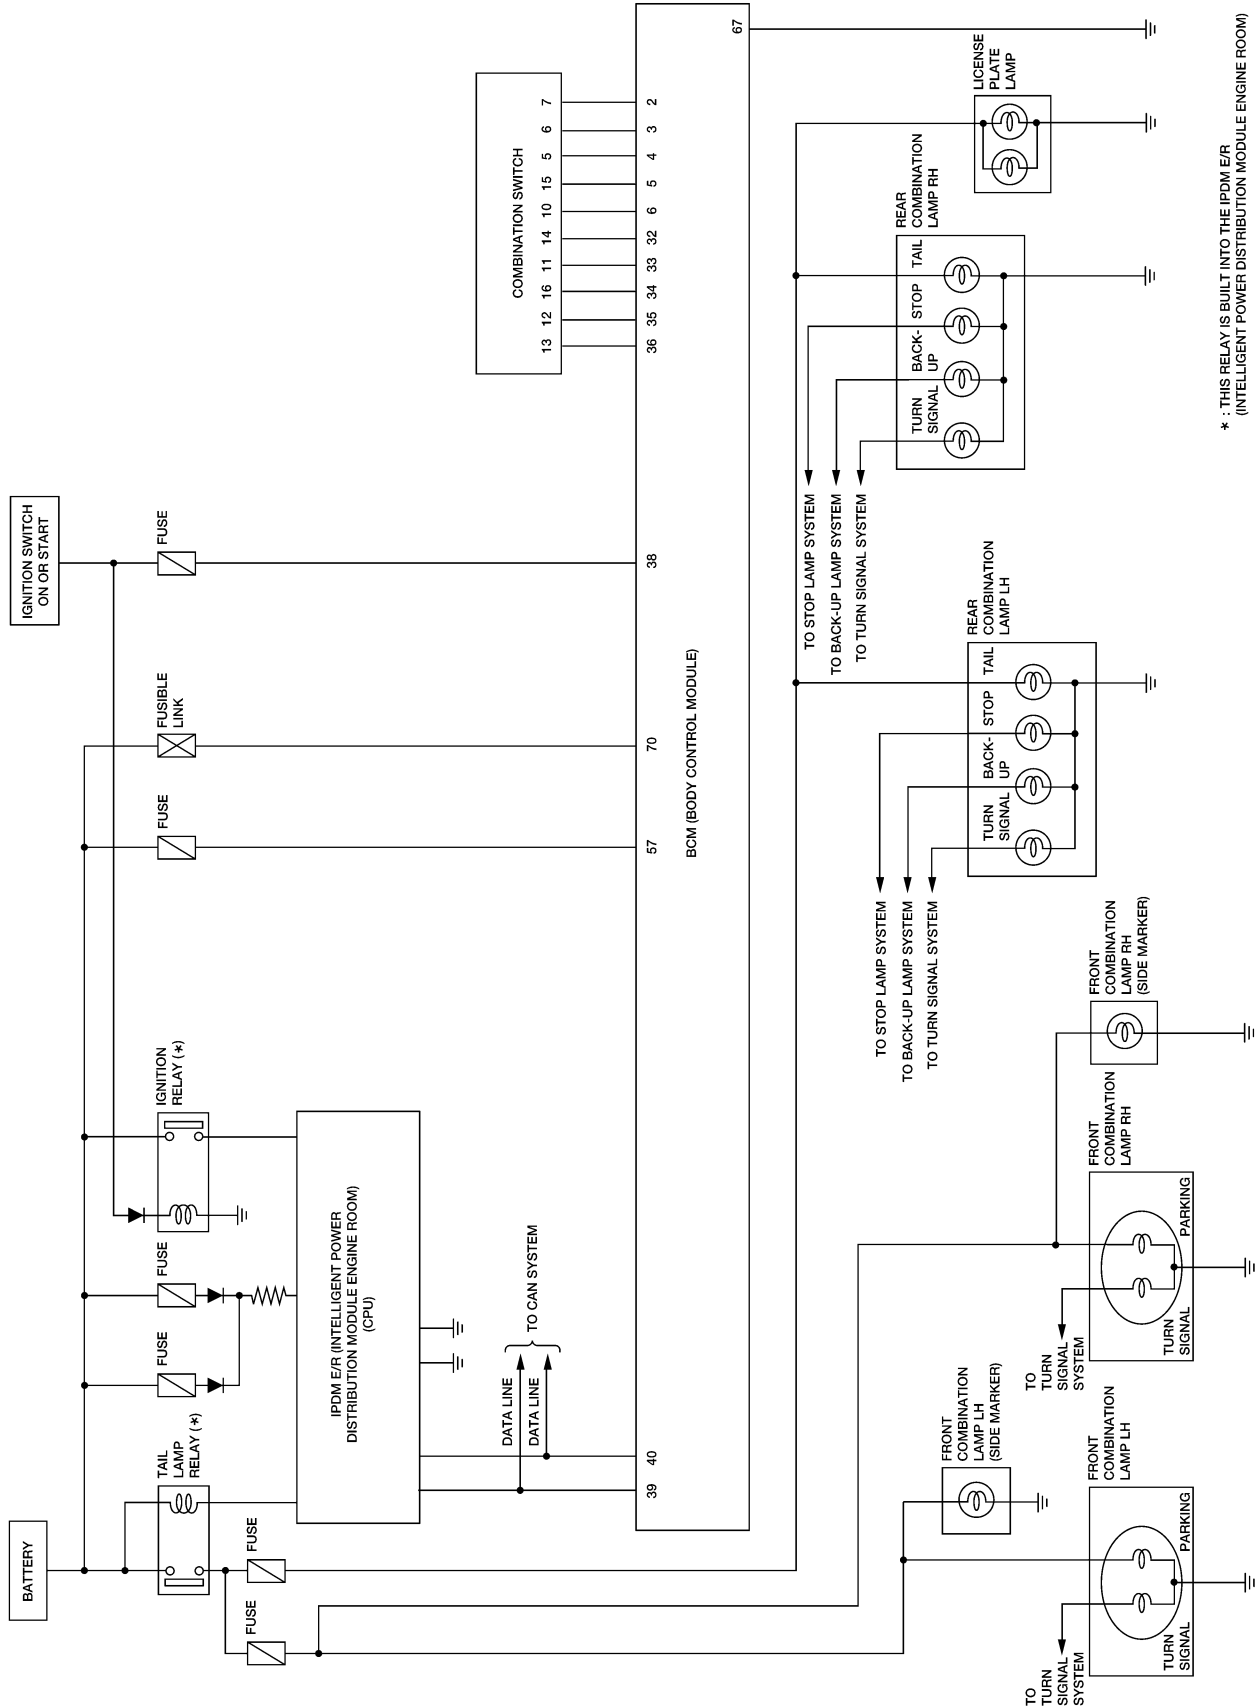

* : THIS RELAY IS BUILT INTO THE IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

WKWA5950E

A
B
C
D
E
F
G
H
I
J
LT
L
M

 
 
 

PARKING, LICENSE PLATE AND TAIL LAMPS

EKS00EL6

Wiring Diagram — TAIL/L —

LT-TAIL/L-01


— : DATA LINE

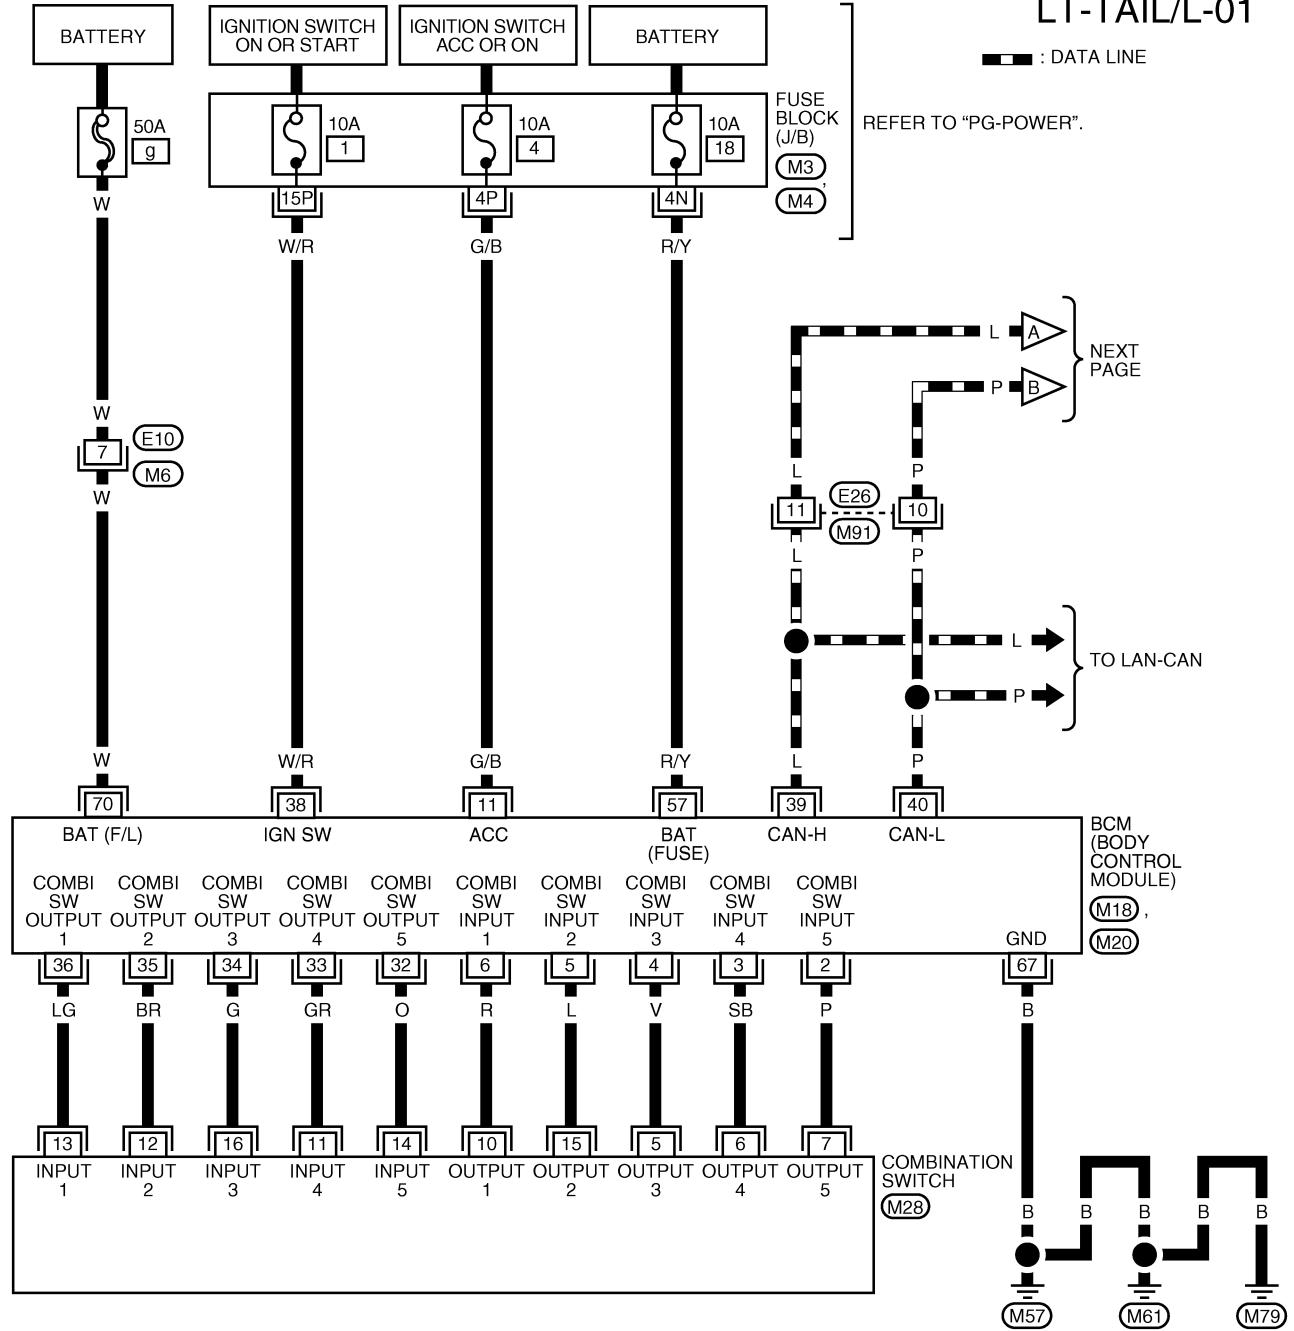

WKWA4620E


PARKING, LICENSE PLATE AND TAIL LAMPS

LT-TAIL/L-02

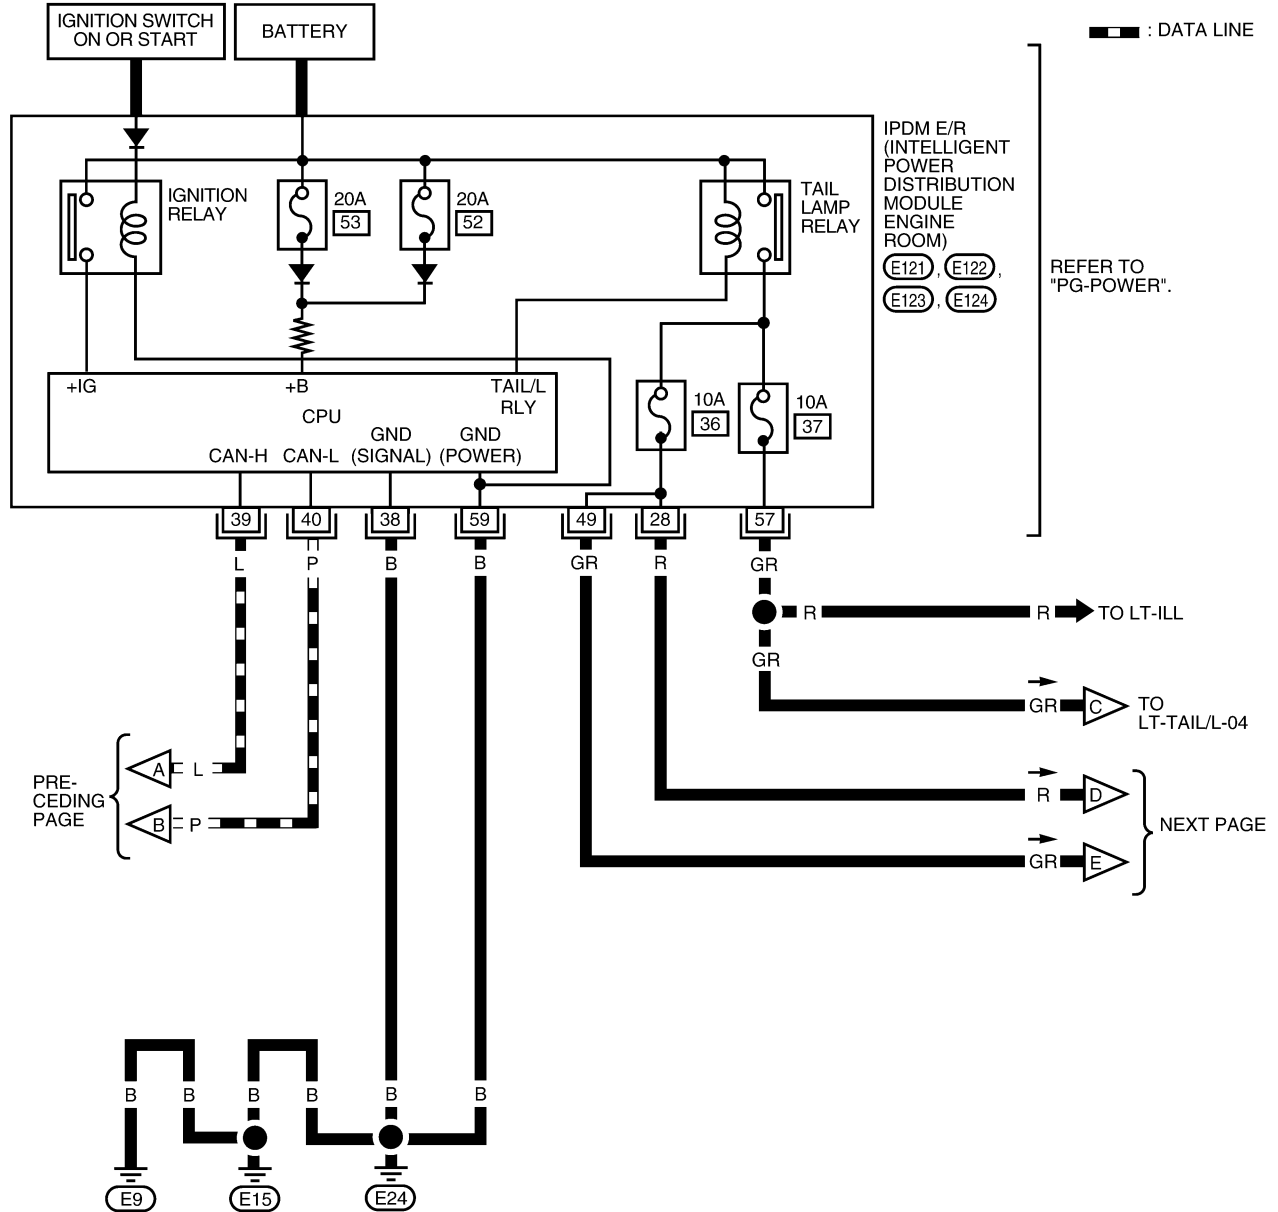

A
B
C
D
E
F
G
H
I
J
K
L
M


 
LT



WKWA5951E

PARKING, LICENSE PLATE AND TAIL LAMPS

 
LT-TAIL/L-03

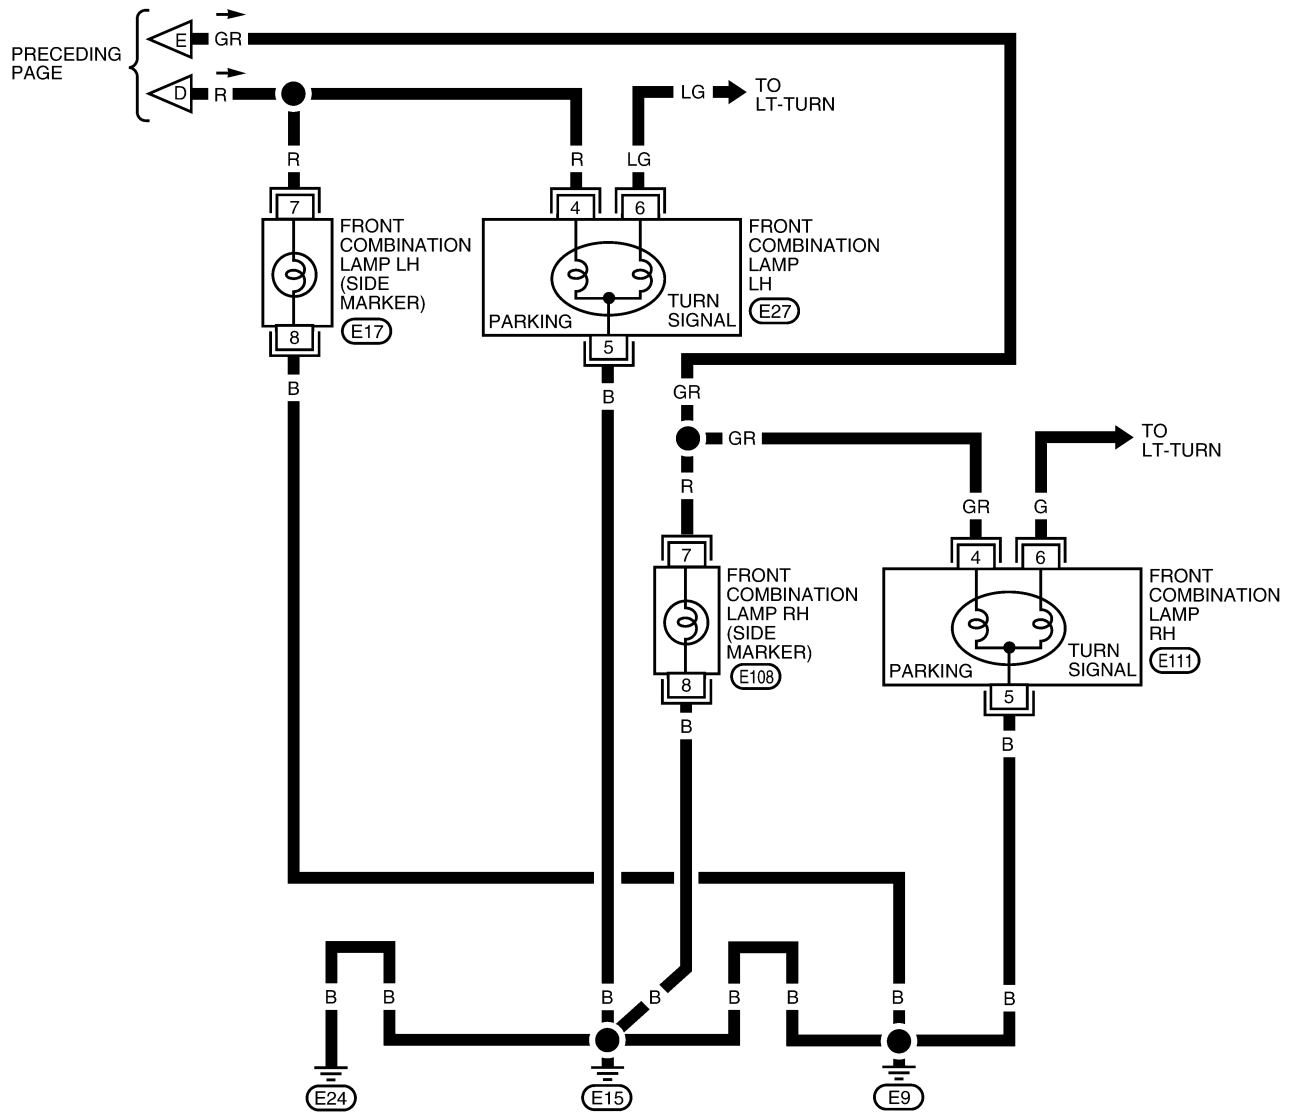

WKWA2554E


PARKING, LICENSE PLATE AND TAIL LAMPS

LT-TAIL/L-04

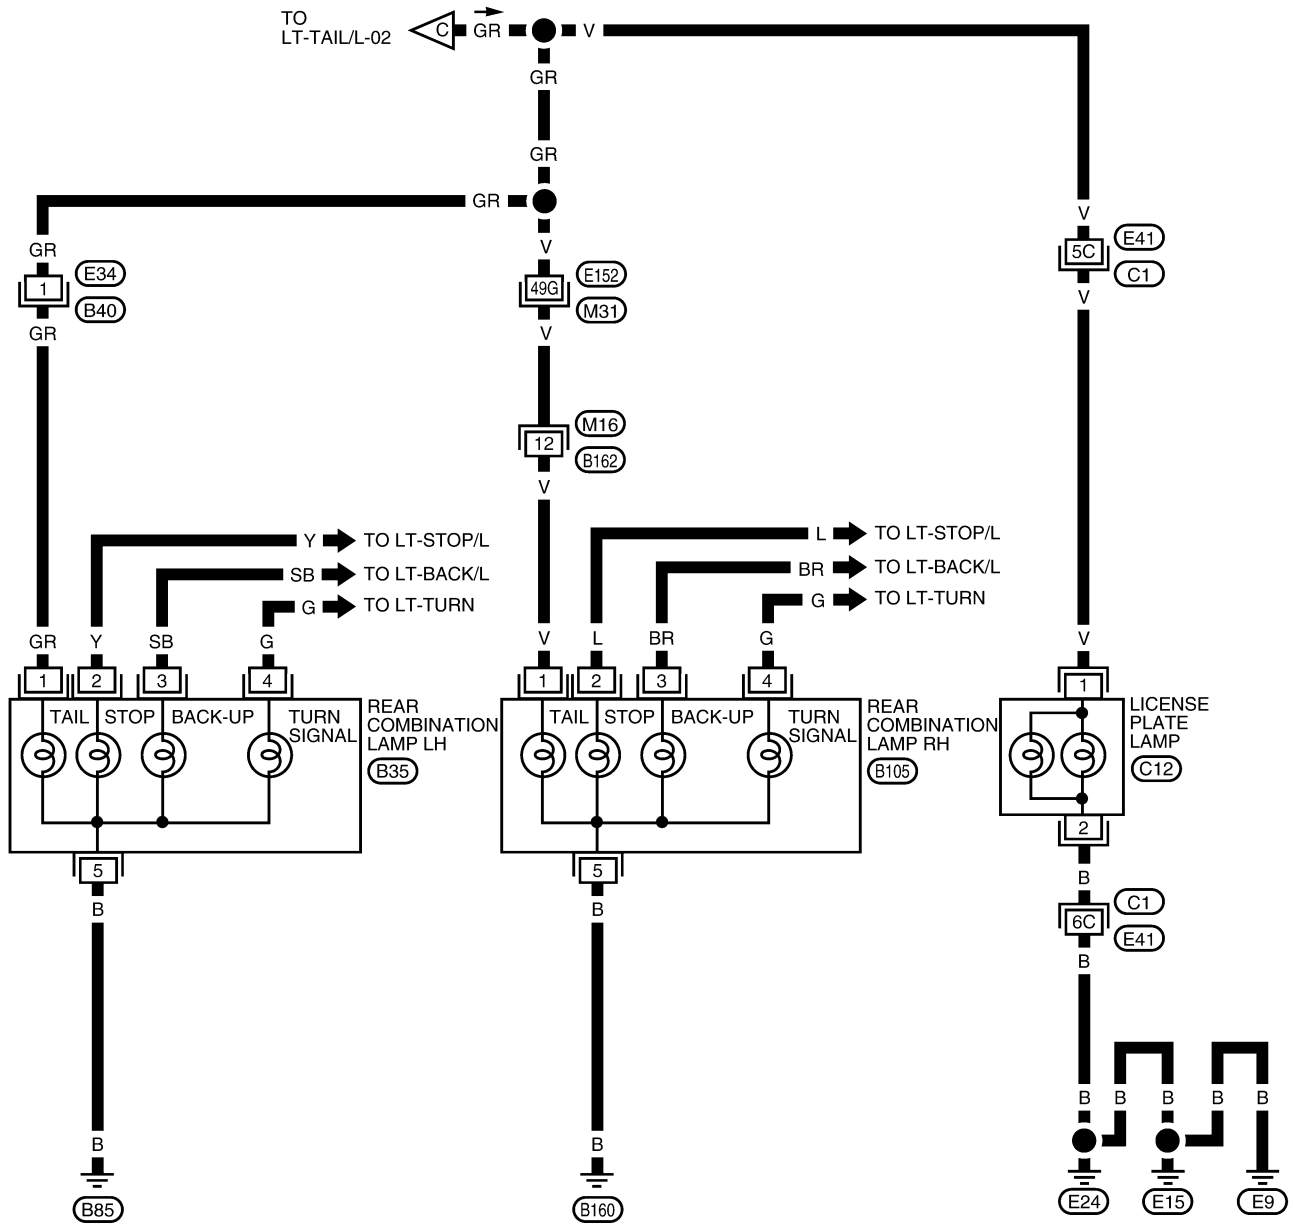

A
B
C
D
E
F
G
H
I
J
K
L
M

 LT



REFER TO THE FOLLOWING.
 (M31), (C1) - SUPER
 MULTIPLE JUNCTION (SMJ)

WKWA2555E

PARKING, LICENSE PLATE AND TAIL LAMPS

Terminals and Reference Values for BCM

EKS00HNM

Refer to [BCS-12, "Terminals and Reference Values for BCM"](#) .

Terminals and Reference Values for IPDM E/R

EKS00HNN

Refer to [PG-29, "Terminals and Reference Values for IPDM E/R"](#) .

How to Proceed With Trouble Diagnosis

EKS00HNO

1. Confirm the symptom or customer complaint.
2. Understand operation description and function description. Refer to [LT-81, "System Description"](#) .
3. Carry out the Preliminary Check. Refer to [LT-88, "Preliminary Check"](#) .
4. Check symptom and repair or replace the cause of malfunction.
5. Do the parking, license and tail lamps operate normally? If YES: GO TO 6. If NO: GO TO 4.
6. Inspection End.

Preliminary Check

EKS00HNP

CHECK POWER SUPPLY AND GROUND CIRCUIT

Refer to [BCS-16, "BCM Power Supply and Ground Circuit Check"](#) and [PG-31, "IPDM E/R Power/Ground Circuit Inspection"](#) .

CONSULT-II Functions

EKS00HNO

Refer to [LT-12, "CONSULT-II Function \(BCM\)"](#) .

Refer to [LT-15, "CONSULT-II Function \(IPDM E/R\)"](#) .

Parking, Side Marker, License Plate and/or Tail Lamps Do Not Illuminate

EKS00HNR

1. CHECK COMBINATION SWITCH INPUT SIGNAL

☐ With CONSULT-II

Select "BCM" on CONSULT-II. With "HEAD LAMP" data monitor, make sure "LIGHT SW 1ST" turns ON-OFF linked with operation of lighting switch.

When lighting switch is in 1ST position : LIGHT SW 1ST ON

☒ Without CONSULT-II

Refer to [LT-70, "Combination Switch Inspection"](#) .

OK or NG

OK >> GO TO 2.

NG >> Check lighting switch. Refer to [LT-70, "Combination Switch Inspection"](#) .

DATA MONITOR	
MONITOR	
LIGHT SW 1ST	ON

SKIA5956E

PARKING, LICENSE PLATE AND TAIL LAMPS

2. ACTIVE TEST

Ⓜ With CONSULT-II

1. Select "IPDM E/R" on CONSULT-II, and select "ACTIVE TEST" on "SELECT DIAG MODE" screen.
2. Select "EXTERNAL LAMPS" on "SELECT TEST ITEM" screen.
3. Touch "TAIL" on "ACTIVE TEST" screen.
4. Make sure front parking, front side marker, license plate and tail lamp operation.

Front parking, front side marker, license plate and tail lamps should operate

ACTIVE TEST			
EXTERNAL LAMPS		OFF	
		TAIL	
LO		HI	
FOG			
MODE	BACK	LIGHT	COPY

WKIA1438E

ⓧ Without CONSULT-II

1. Start auto active test. Refer to [PG-24, "Auto Active Test"](#).
2. Make sure front parking, front side marker, license plate and tail lamp operation.

Front parking, front side marker, license plate and tail lamps should operate

OK or NG

- OK >> GO TO 3.
 NG >> GO TO 4.

3. CHECK IPDM E/R

1. Select "IPDM E/R" on CONSULT-II, and select "DATA MONITOR" on "SELECT DIAG MODE" screen.
2. Make sure "TAIL&CLR REQ" turns ON when lighting switch is in 1ST position.

When lighting switch is in 1ST position : TAIL&CLR REQ ON

DATA MONITOR			
MONITOR			
TAIL&CLR REQ		ON	
		RECORD	
MODE	BACK	LIGHT	COPY

SKIA5958E

OK or NG

- OK >> Replace IPDM E/R. Refer to [PG-34, "Removal and Installation of IPDM E/R"](#).
- NG >> Replace BCM. Refer to [BCS-26, "Removal and Installation of BCM"](#).

PARKING, LICENSE PLATE AND TAIL LAMPS

4. CHECK INPUT SIGNAL


☑ With CONSULT-II

1. Turn ignition switch OFF.
2. Disconnect front combination lamp (side marker), front combination lamp (parking), license plate lamp and rear combination lamp connectors.
3. Turn ignition switch ON.
4. Select "IPDM E/R" on CONSULT-II, and select "ACTIVE TEST" on "SELECT DIAG MODE" screen.
5. Select "TAIL LAMP" on "SELECT TEST ITEM" screen.
6. Touch "ON" on "ACTIVE TEST" screen.
7. When tail lamp is operating, check voltage between front combination lamp (side marker), front combination lamp (parking), license plate lamp, rear combination lamp harness connector and ground.


☒ Without CONSULT-II

1. Turn ignition switch OFF.
2. Start auto active test. Refer to [PG-24, "Auto Active Test"](#).
3. When tail lamp is operating, check voltage between front combination lamp (side marker), front combination lamp (parking), license plate lamp, rear combination lamp harness connector and ground.


Front combination lamp (side marker)		Terminal	(-)	Voltage
(+)				
Connector				
LH	E17	7	Ground	Battery voltage
RH	E108			

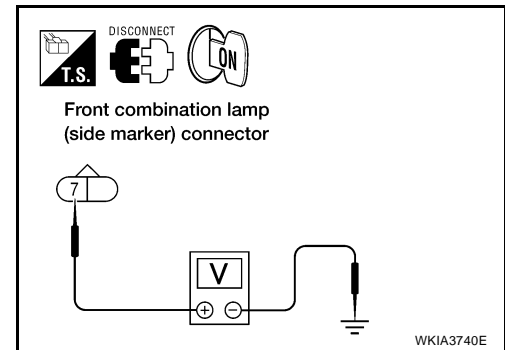

Front combination lamp (parking)		Terminal	(-)	Voltage
(+)				
Connector				
LH	E27	4	Ground	Battery voltage
RH	E111			

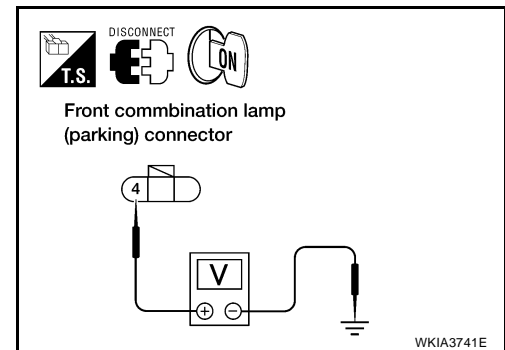

License plate lamp		Terminal	(-)	Voltage
(+)				
Connector				
C12		1	Ground	Battery voltage

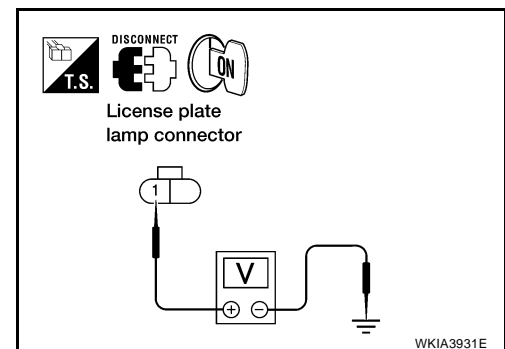


PARKING, LICENSE PLATE AND TAIL LAMPS

Rear combination lamp		Terminal	(-)	Voltage
(+)				
Connector		1	Ground	Battery voltage
LH	B35			
RH	B105			

OK or NG

OK >> GO TO 6.
 NG >> GO TO 5.

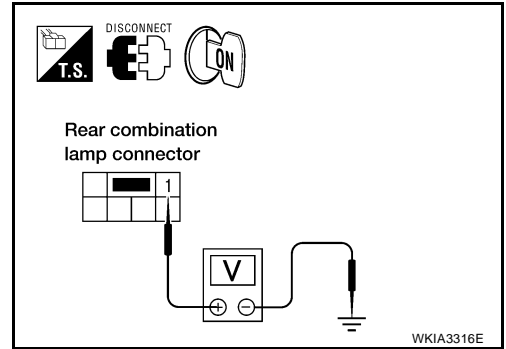


A
 B
 C
 D
 E
 F
 G
 H
 I
 J
 LT
 L
 M

PARKING, LICENSE PLATE AND TAIL LAMPS

5. CHECK PARKING, SIDE MARKER, LICENSE PLATE AND TAIL LAMP CIRCUIT


1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check continuity between IPDM E/R harness connector and front combination lamp (side marker) harness connector.

IPDM E/R		Front combination lamp (side marker)		Continuity
Connector	Terminal	Connector	Terminal	
E121	28	LH	E17	Yes
E123	49	RH	E108	

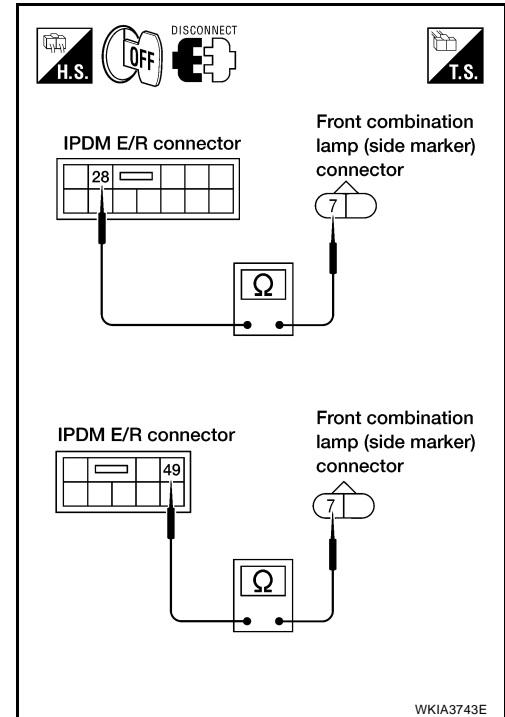

4. Check continuity between IPDM E/R harness connector and front combination lamp (parking) harness connector.


IPDM E/R		Front combination lamp (parking)		Continuity
Connector	Terminal	Connector	Terminal	
E121	28	LH	E27	Yes
E123	49	RH	E111	

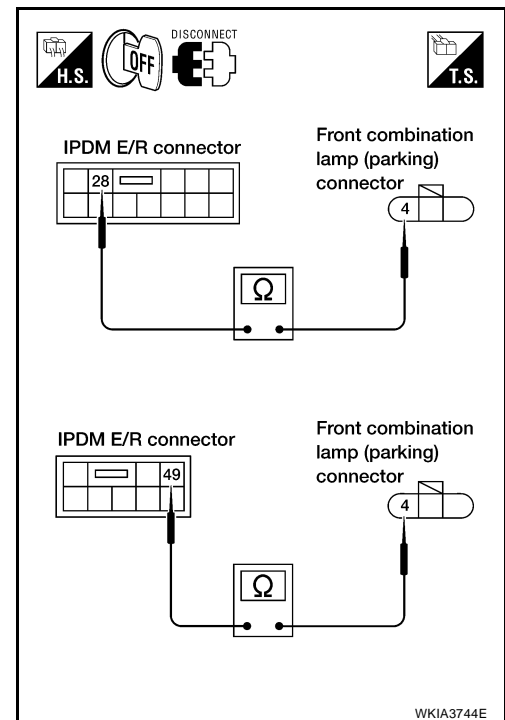

PARKING, LICENSE PLATE AND TAIL LAMPS


5. Check continuity between IPDM E/R harness connector and license plate lamp harness connector.

IPDM E/R		License plate lamp		Continuity
Connector	Terminal	Connector	Terminal	
E124	57	C12	1	Yes

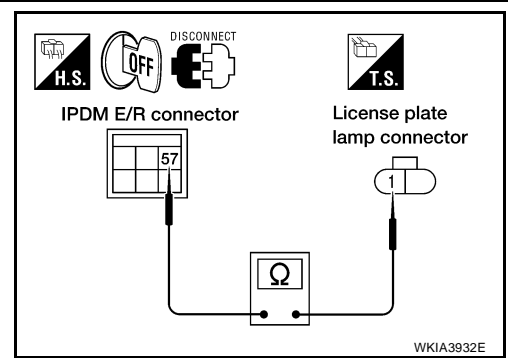

6. Check continuity between IPDM E/R harness connector and rear combination lamp harness connector.

IPDM E/R		Rear combination lamp		Continuity
Connector	Terminal	Connector	Terminal	
E124	57	LH	B35	Yes
		RH	B105	

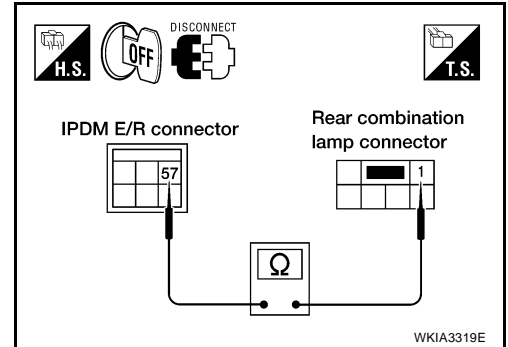

OK or NG

- OK >> Replace IPDM E/R. Refer to [PG-34, "Removal and Installation of IPDM E/R"](#).
- NG >> Repair harness or connector.


A
B
C
D
E
F
G
H
I
J
LT
L
M

PARKING, LICENSE PLATE AND TAIL LAMPS

6. CHECK GROUND


1. Turn ignition switch OFF.
2. Check continuity between front combination lamp (side marker) harness connector and ground.

Front combination lamp (side marker)		Terminal	Ground	Continuity
Connector				
LH	E17	8	Ground	Yes
RH	E108			

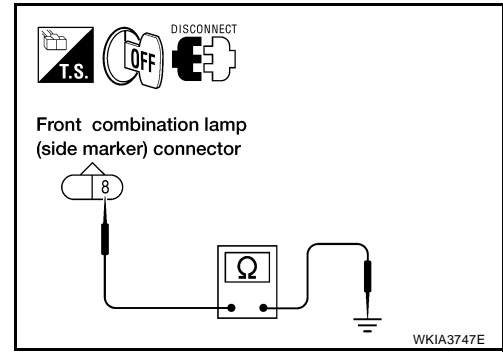


3. Check continuity between front combination lamp (parking) harness connector and ground.

Front combination lamp (parking)		Terminal	Ground	Continuity
Connector				
LH	E27	5	Ground	Yes
RH	E111			

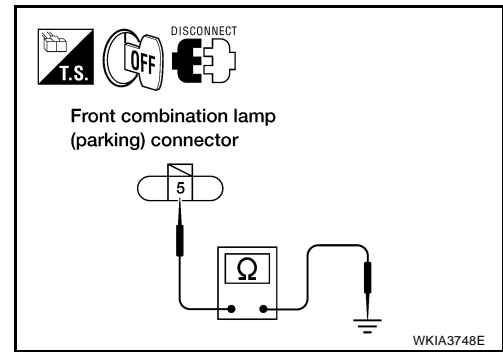


4. Check continuity between license plate lamp harness connector and ground.

License plate lamp		Terminal	Ground	Continuity
Connector				
C12		2	Ground	Yes

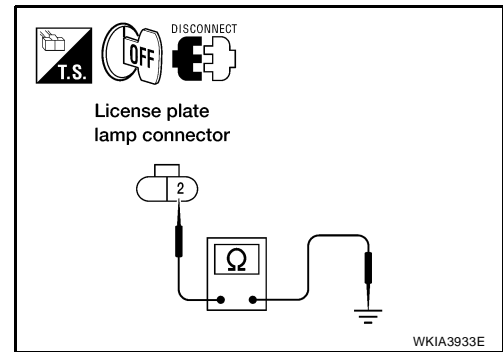

5. Check continuity between rear combination lamp harness connector and ground.

Rear combination lamp		Terminal	Ground	Continuity
Connector				
LH	B35	5	Ground	Yes
RH	B105			

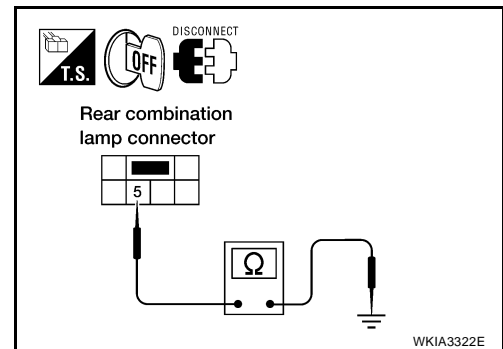

OK or NG

- OK >> Check bulbs.
 NG >> Repair harness or connector.

PARKING, LICENSE PLATE AND TAIL LAMPS

Parking, Side Marker, License Plate and Tail Lamps Do Not Turn OFF (After Approx. 10 Minutes)

EKS00HNS

1. CHECK IPDM E/R

1. Turn ignition switch ON. Turn the combination switch (lighting switch) to the OFF position. Turn ignition switch OFF.
2. Verify that the front parking, front side marker, license plate, and tail lamps turn on and off after approximately 10 minutes.

OK or NG

- OK >> Ignition relay malfunction. Refer to [PG-19, "Function of Detecting Ignition Relay Malfunction"](#).
- NG >> Inspection End.

Bulb Replacement FRONT PARKING LAMP

EKS00HNT

Refer to [LT-64, "Bulb Replacement"](#).

LICENSE PLATE LAMP

Removal

1. Turn bulb socket counterclockwise to unlock bulb socket.
2. Pull bulb to remove from bulb socket.

Installation

Installation is in the reverse order of removal.

TAIL LAMP

Refer to [LT-96, "Bulb Replacement"](#).

Removal and Installation FRONT PARKING LAMP

EKS00HNU

Refer to [LT-27, "FRONT COMBINATION LAMP"](#).

LICENSE PLATE LAMP

Removal

1. Disconnect license plate lamp harness.
2. Depress tab to remove license plate lamp from rear bumper.

Installation

Installation is in the reverse order of removal.

TAIL LAMP

Refer to [LT-96, "Removal and Installation"](#).

LT

REAR COMBINATION LAMP


REAR COMBINATION LAMP

PFP:26554

Bulb Replacement REMOVAL

EKS00ELG

1. Remove rear combination lamp. Refer to [LT-96, "Removal and Installation"](#) .
2. Rotate each bulb socket (1, 2, 3) counterclockwise to unlock it.
3. Pull bulb straight out away from socket to release.

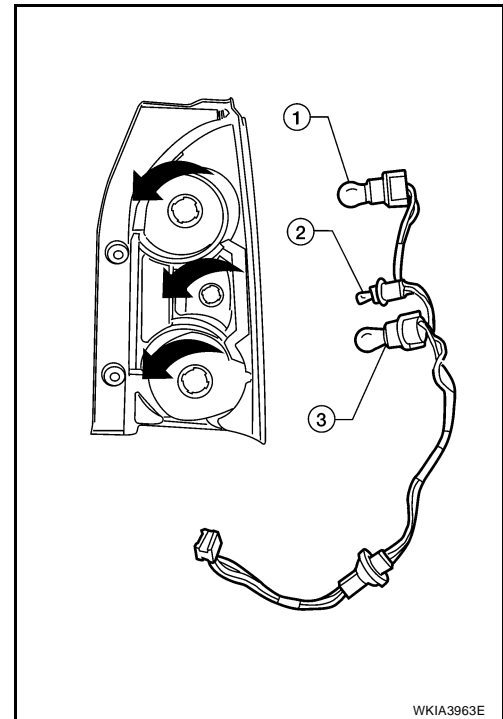


INSTALLATION

Installation is in the reverse order of removal.

Removal and Installation REMOVAL

EKS00ELH

1. Remove rear combination lamp bolts (1).
- Rear combination lamp locator (3)
2. Pull the lamp assembly (2) rearward to remove from the vehicle.
3. Disconnect the connector and remove the rear combination lamp.

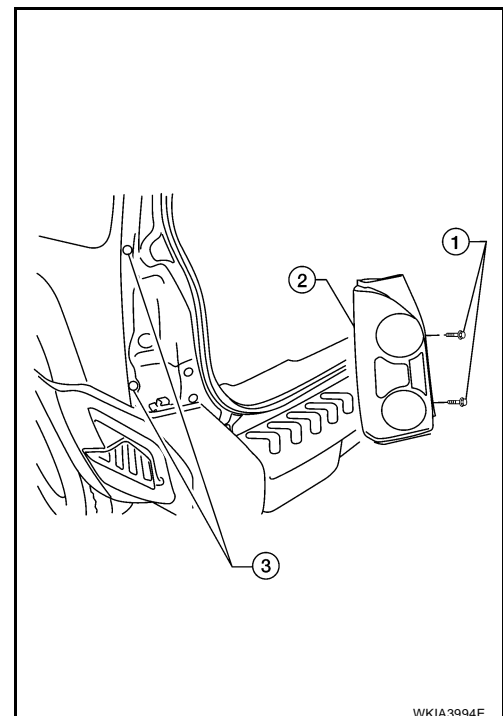

INSTALLATION

Installation is in the reverse order of removal.


TRAILER TOW

PFP:93020

TRAILER TOW

Component Parts and Harness Connector Location

EKS00HNV

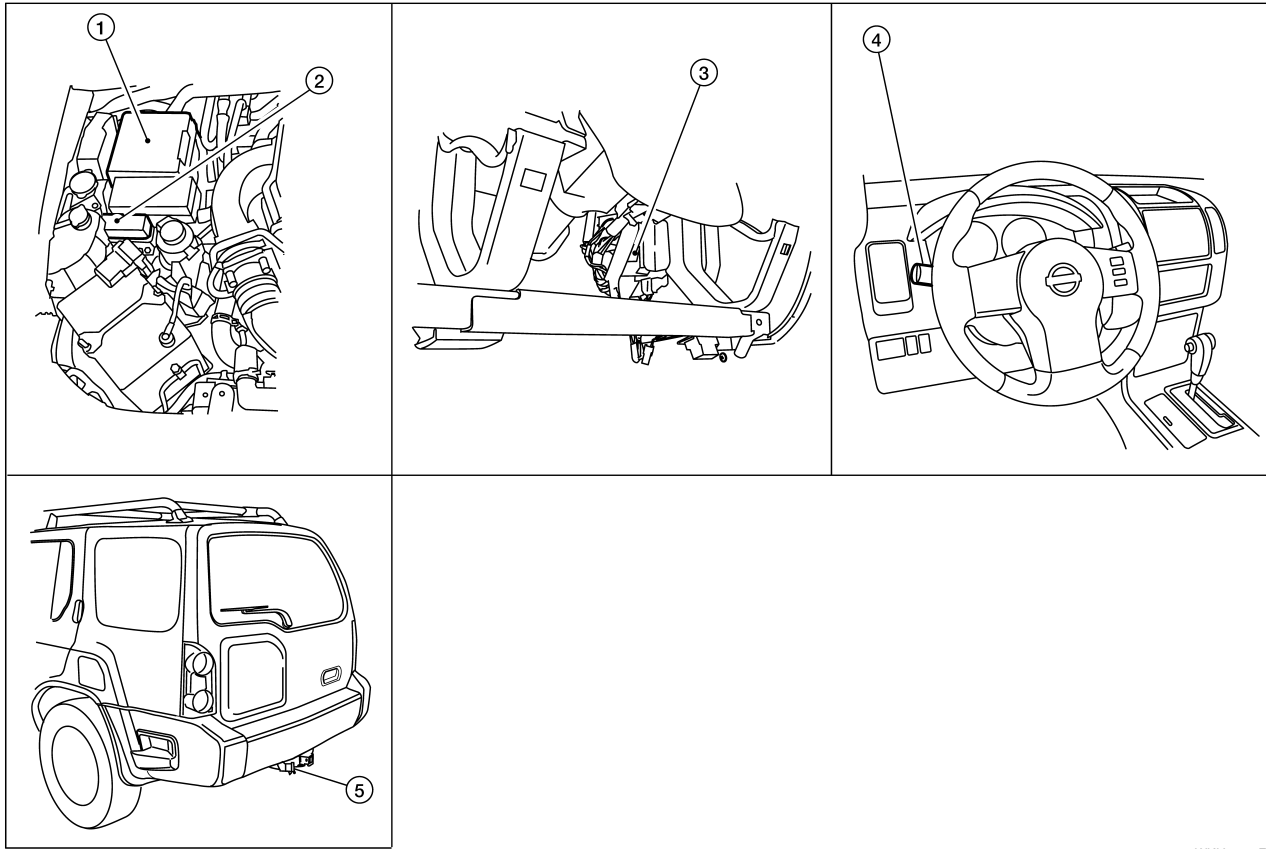

A
B
C
D
E
F
G
H
I
J

WKIA5083E

- | | | |
|--|-------------------------------------|--|
| 1. IPDM E/R
E121, E122, E124 | 2. Trailer tow relays
E227, E228 | 3. BCM
M18, M19, M20
(view with lower instrument panel LH removed) |
| 4. Combination switch (lighting switch)
M28 | 5. Trailer
C126 | |

LT

System Description

EKS00HNV

Power is supplied at all times

- to ignition relay, located in the IPDM E/R (intelligent power distribution module engine room), and
- to tail lamp relay, located in the IPDM E/R, and
- through 50A fusible link (letter **g** , located in the fuse and fusible link box)
- to BCM (body control module) terminal 70, and
- through 10A fuse [No. 18, located in the fuse block (J/B)]
- to BCM terminal 57, and
- to 15A fuse (No. 60, located in the fuse and relay box),
- to trailer turn relay RH and LH terminal 5, and
- through 20A fuse (No. 52 and 53, located in the IPDM E/R)
- to CPU of the IPDM E/R, and
- through 10A fuse (No. 32, located in the IPDM E/R)
- to IPDM E/R terminal 61
- to trailer tow relay 1 terminal 3, and
- through 30A fusible link (letter **m** , located in the fuse and fusible link box)
- to trailer tow relay 2 terminals 3 and 6, and
- through 30A fusible link (letter **h** , located in the fuse and fusible link box)

L
M

TRAILER TOW

- to electric brake (pre-wiring) terminal 5.

With the ignition switch in the ACC or ON position, power is supplied

- through 10A fuse [No. 4, located in the fuse block (J/B)]
- to BCM terminal 11.

With the ignition switch in the ON or START position, power is supplied

- to ignition relay, located in the IPDM E/R, and
- through 10A fuse [No. 1, located in the fuse block (J/B)]
- to BCM terminal 38, and
- through 10A fuse (No. 38, located in the IPDM E/R)
- to IPDM E/R terminal 27,
- to trailer tow relay 2 terminal 1, and
- to back-up lamp relay terminal 3 (with M/T).

Ground is supplied

- to BCM terminal 67 and
- to electric brake (pre-wiring) terminal 1
- through grounds M57, M61 and M79, and
- to IPDM E/R terminals 38 and 59
- to trailer tow relay 1 terminal 2
- to trailer tow relay 2 terminal 2
- to trailer connector terminal 2
- to trailer turn relay RH and LH terminal 2, and
- to back-up lamps relay terminal 1 (with M/T)
- through grounds E9, E15 and E24.

TRAILER TAIL LAMP OPERATION

The trailer tail lamps are controlled by the trailer tow relay 1.

With the lighting switch in the parking and tail lamp ON (1ST) position, AUTO position (and the auto light system is activated) or headlamp ON (2ND) position, power is supplied from the tail lamp relay

- through 10A fuse (No. 37, located in the IPDM E/R)
- through IPDM E/R terminal 29
- to trailer tow relay 1 terminal 1.

When energized, power is supplied

- through trailer tow relay 1 terminal 5
- to trailer connector terminal 4.

TRAILER STOP, TURN SIGNAL AND HAZARD LAMP OPERATION

The trailer stop, turn signal and hazard lamps are controlled by the BCM. If either turn signal or the hazard lamps are turned on, the BCM supplies voltage to the trailer turn relay RH or LH to make them flash. If the BCM receives stop lamp switch signal, the BCM supplies voltage to the trailer turn relay RH and LH to make them illuminate.

Left stop, turn signal and hazard lamp output is supplied

- through BCM terminal 52
- to trailer turn relay LH terminal 1

When energized, trailer turn relay LH supplies power to the left stop, turn signal, and hazard lamp

- through trailer turn relay LH terminal 3
- to trailer connector terminal 3.

Right stop, turn signal and hazard lamp output is supplied

- through BCM terminal 51
- to trailer turn relay RH terminal 1

When energized, trailer turn relay RH supplies power to the right stop, turn signal, and hazard lamp

- through trailer turn relay RH terminal 3

TRAILER TOW

- to trailer connector terminal 6.

TRAILER POWER SUPPLY OPERATION

The trailer power supply is controlled by trailer tow relay 2.

When the ignition switch is in the ON or START position, power is supplied

- through 10A fuse (No. 38, located in the IPDM E/R)
- through IPDM E/R terminal 27
- to trailer tow relay 2 terminal 1.

When energized, trailer tow relay 2 power is supplied

- through trailer tow relay 2 terminals 5 and 7
- to trailer connector terminal 5.

TRAILER BACK-UP LAMPS OPERATION

The trailer back-up lamps are controlled by back-up lamp relay.

When the ignition switch is in the ON or START position, power is supplied

- through 10A fuse (No. 38, located in the IPDM E/R)
- through IPDM E/R terminal 27
- to back-up lamp relay terminal 3 (with M/T) or 7 (with A/T).

When energized, back-up lamp relay power is supplied

- through back-up lamp relay terminal 5 (with M/T) or 6 (with A/T)
- to trailer connector terminal 7.

A

B

C

D

E

F

G

H

I

J

LT


L

M

TRAILER TOW

Schematic

EKS00ELK

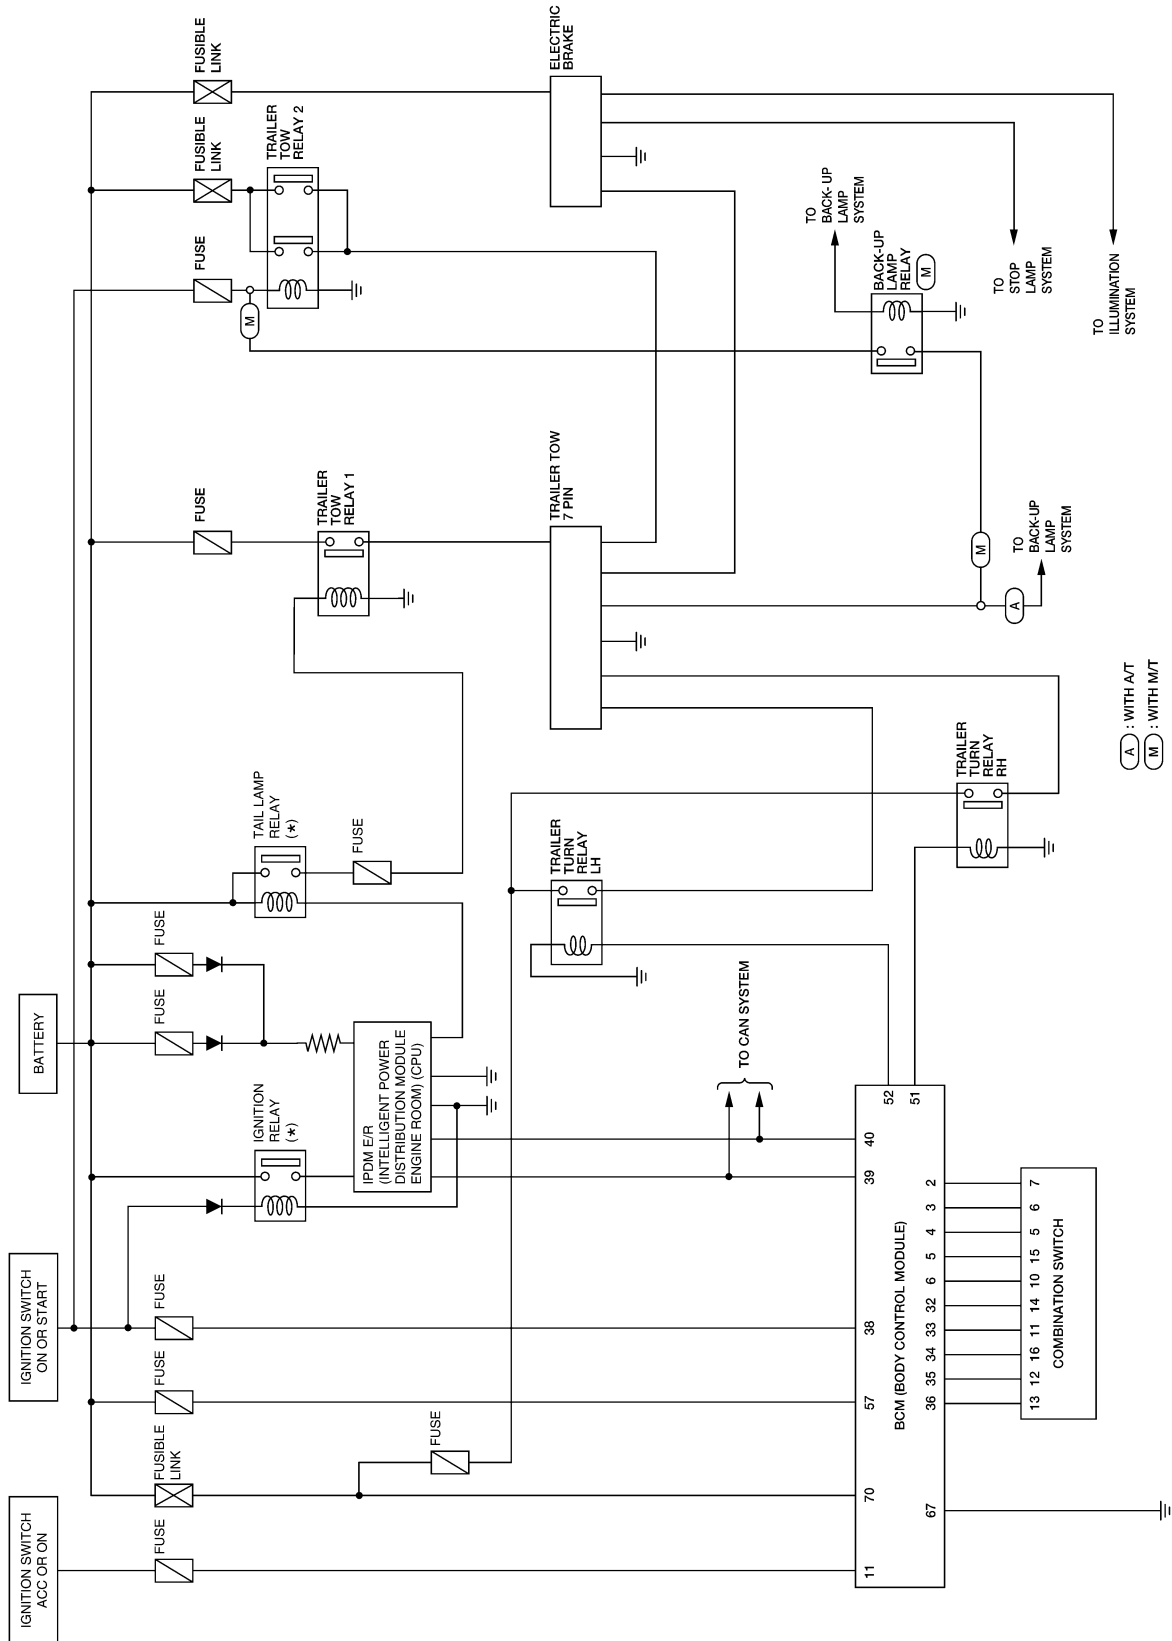





WKWA5952E

TRAILER TOW

Wiring Diagram — T/TOW —



EKS00ELL

  LT-T/TOW-01

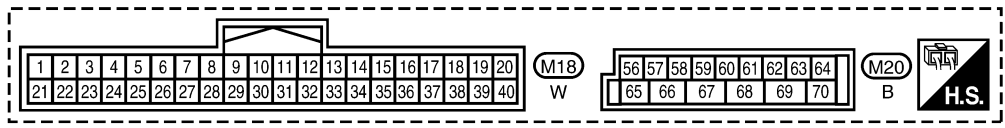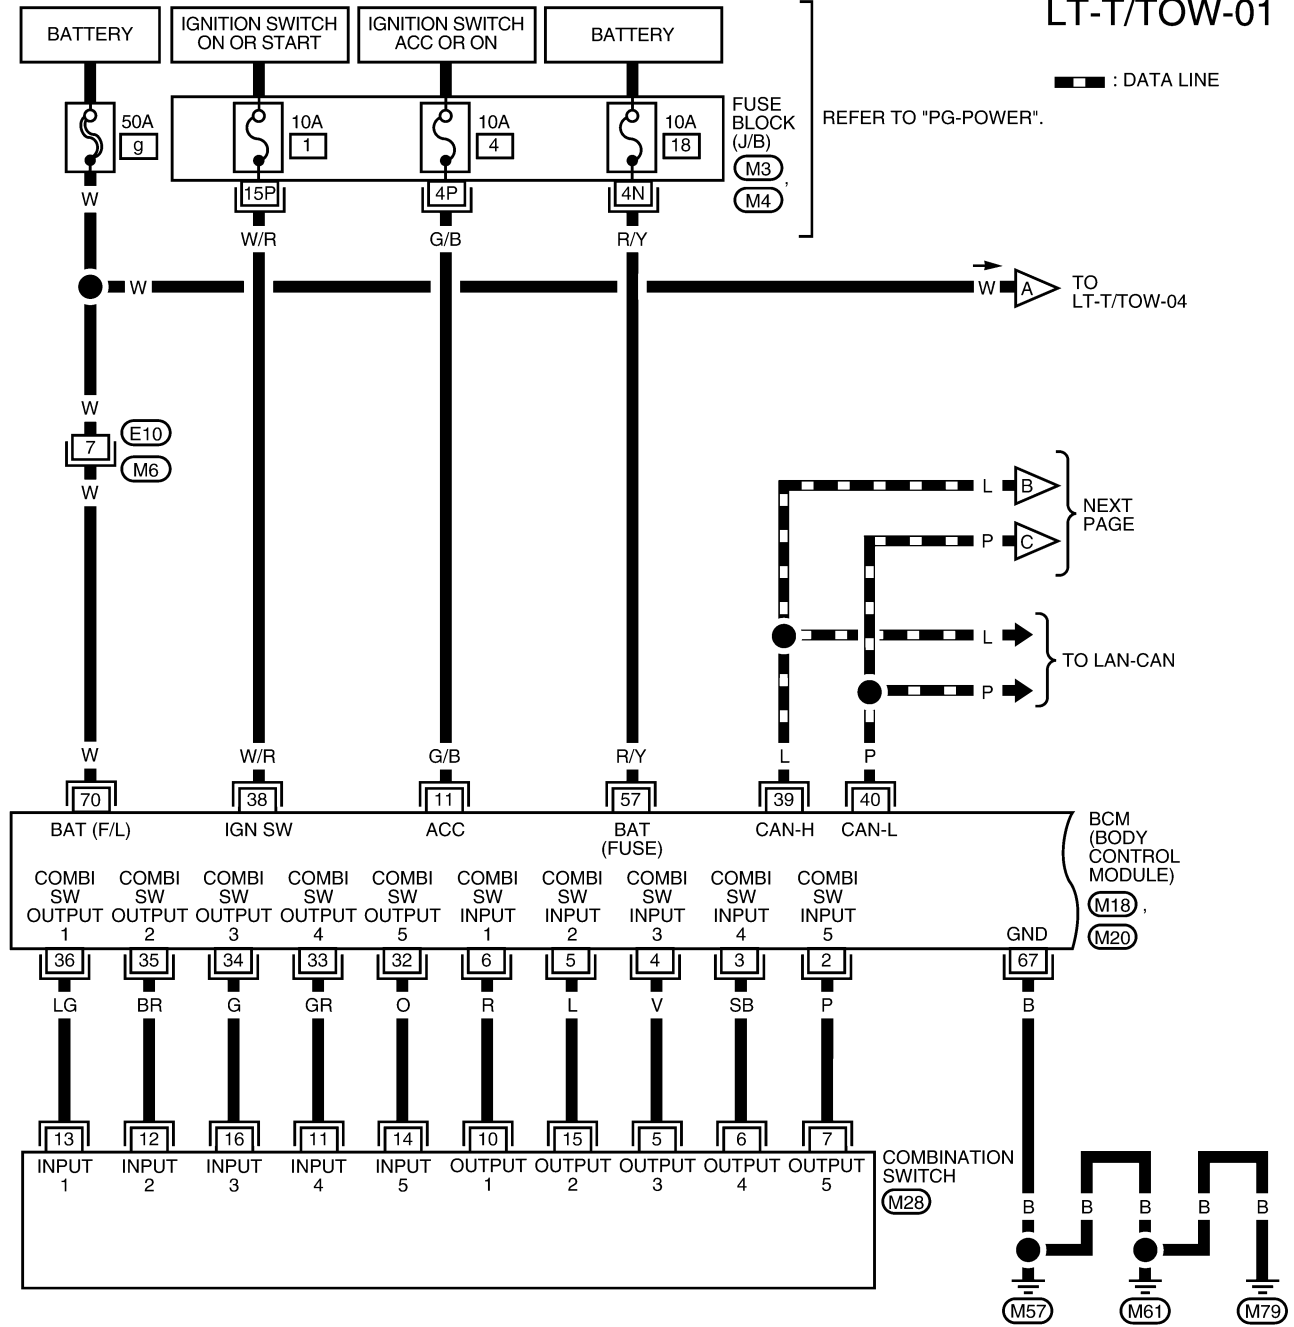

TRAILER TOW

LT-T/TOW-02

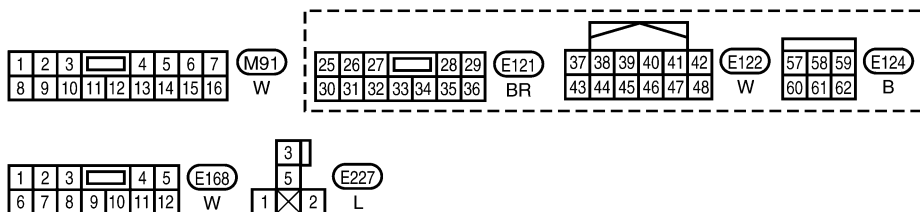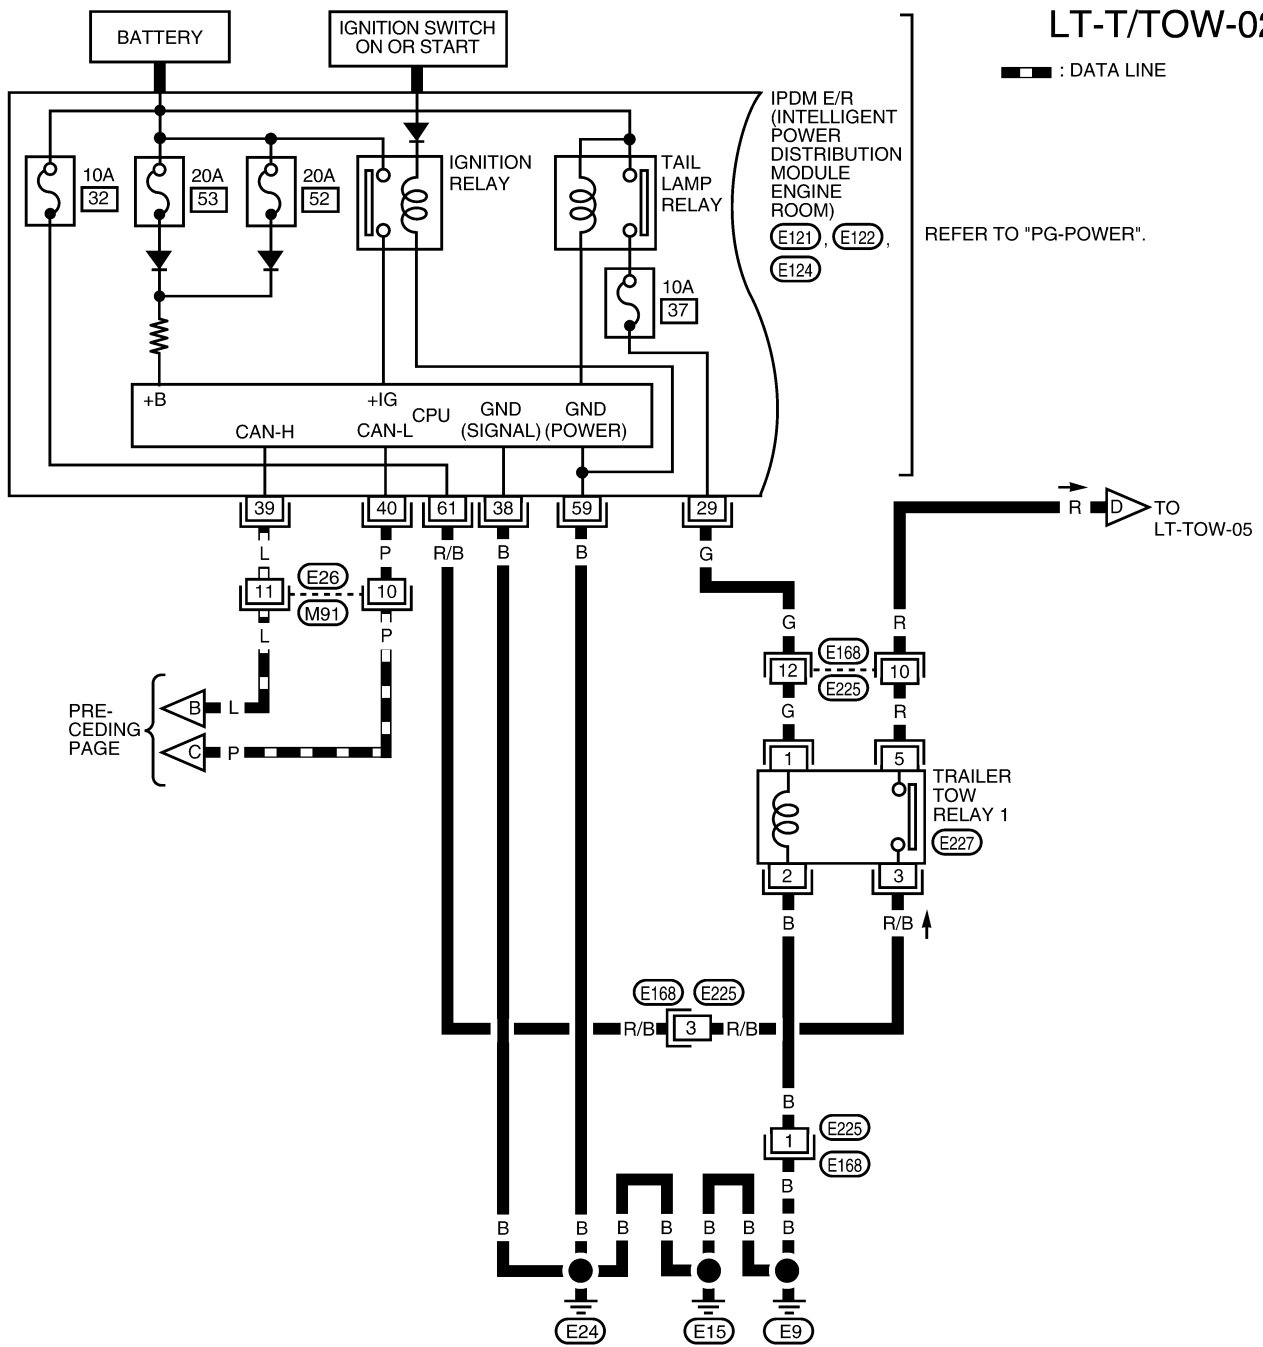


WKWA5954E


TRAILER TOW

LT-T/TOW-03

(M) : WITH M/T

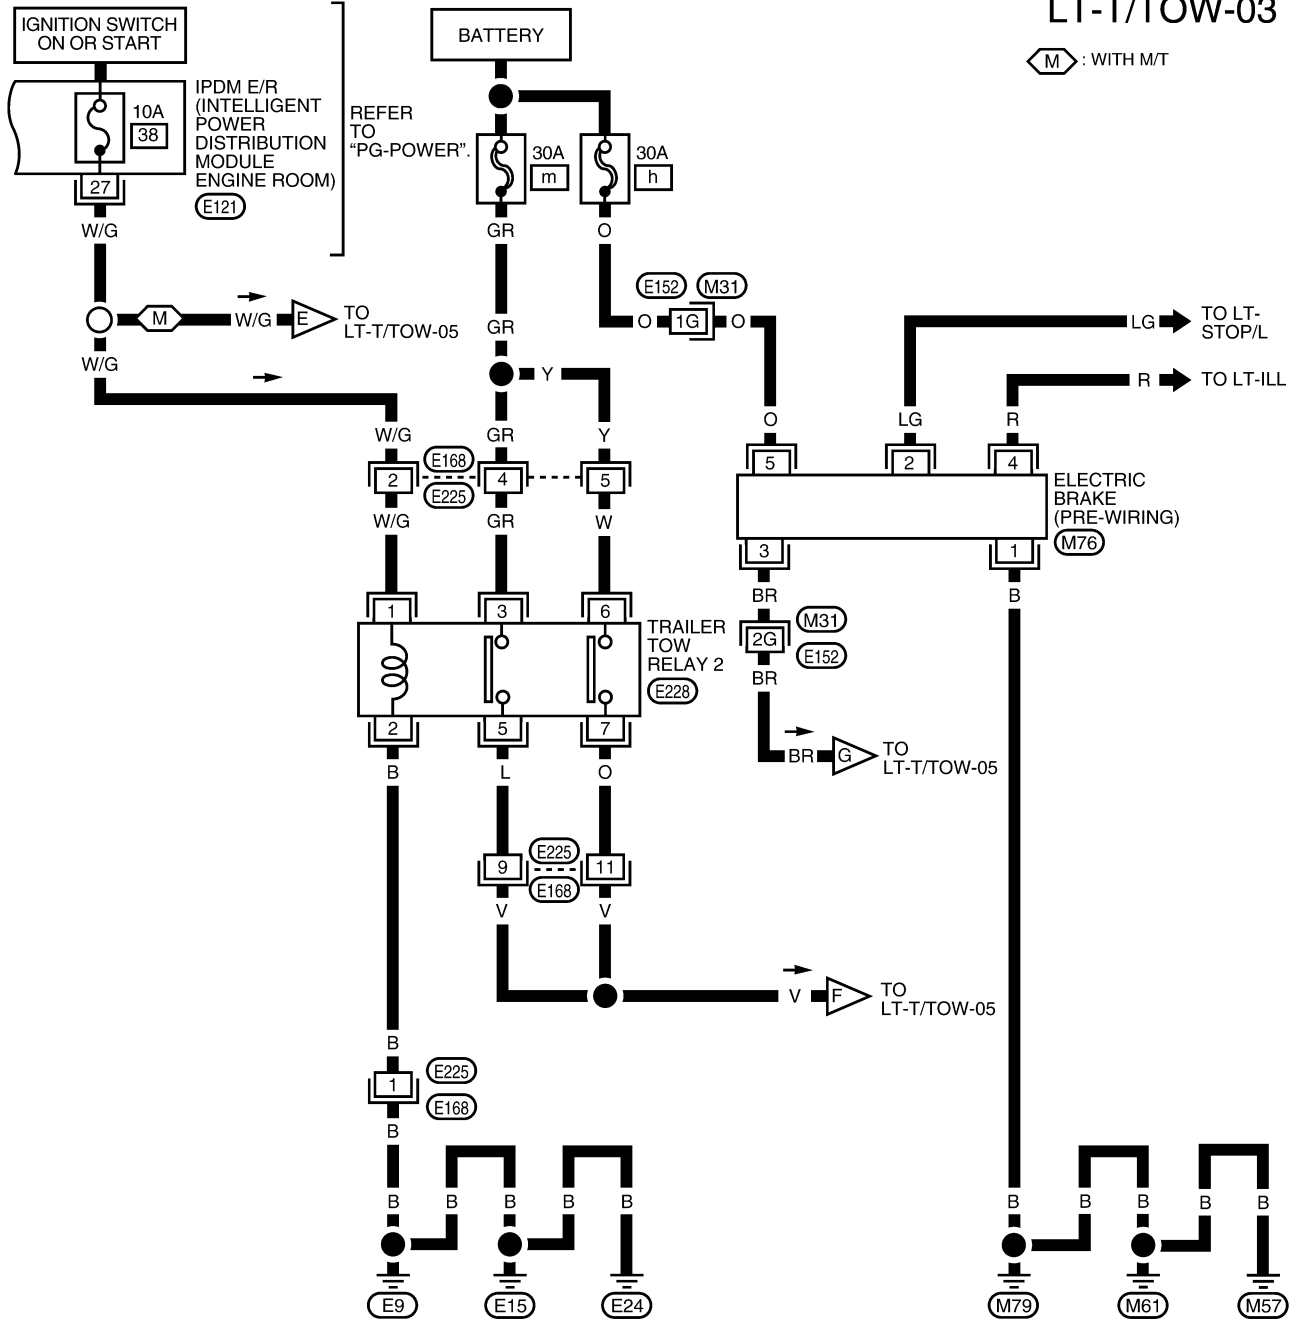

A
B
C
D
E
F
G
H
I
J
LT
L
M


 


REFER TO THE FOLLOWING.
(M31) - SUPER MULTIPLE JUNCTION (SMJ)

WKWA4431E

TRAILER TOW

 
LT-T/TOW-04

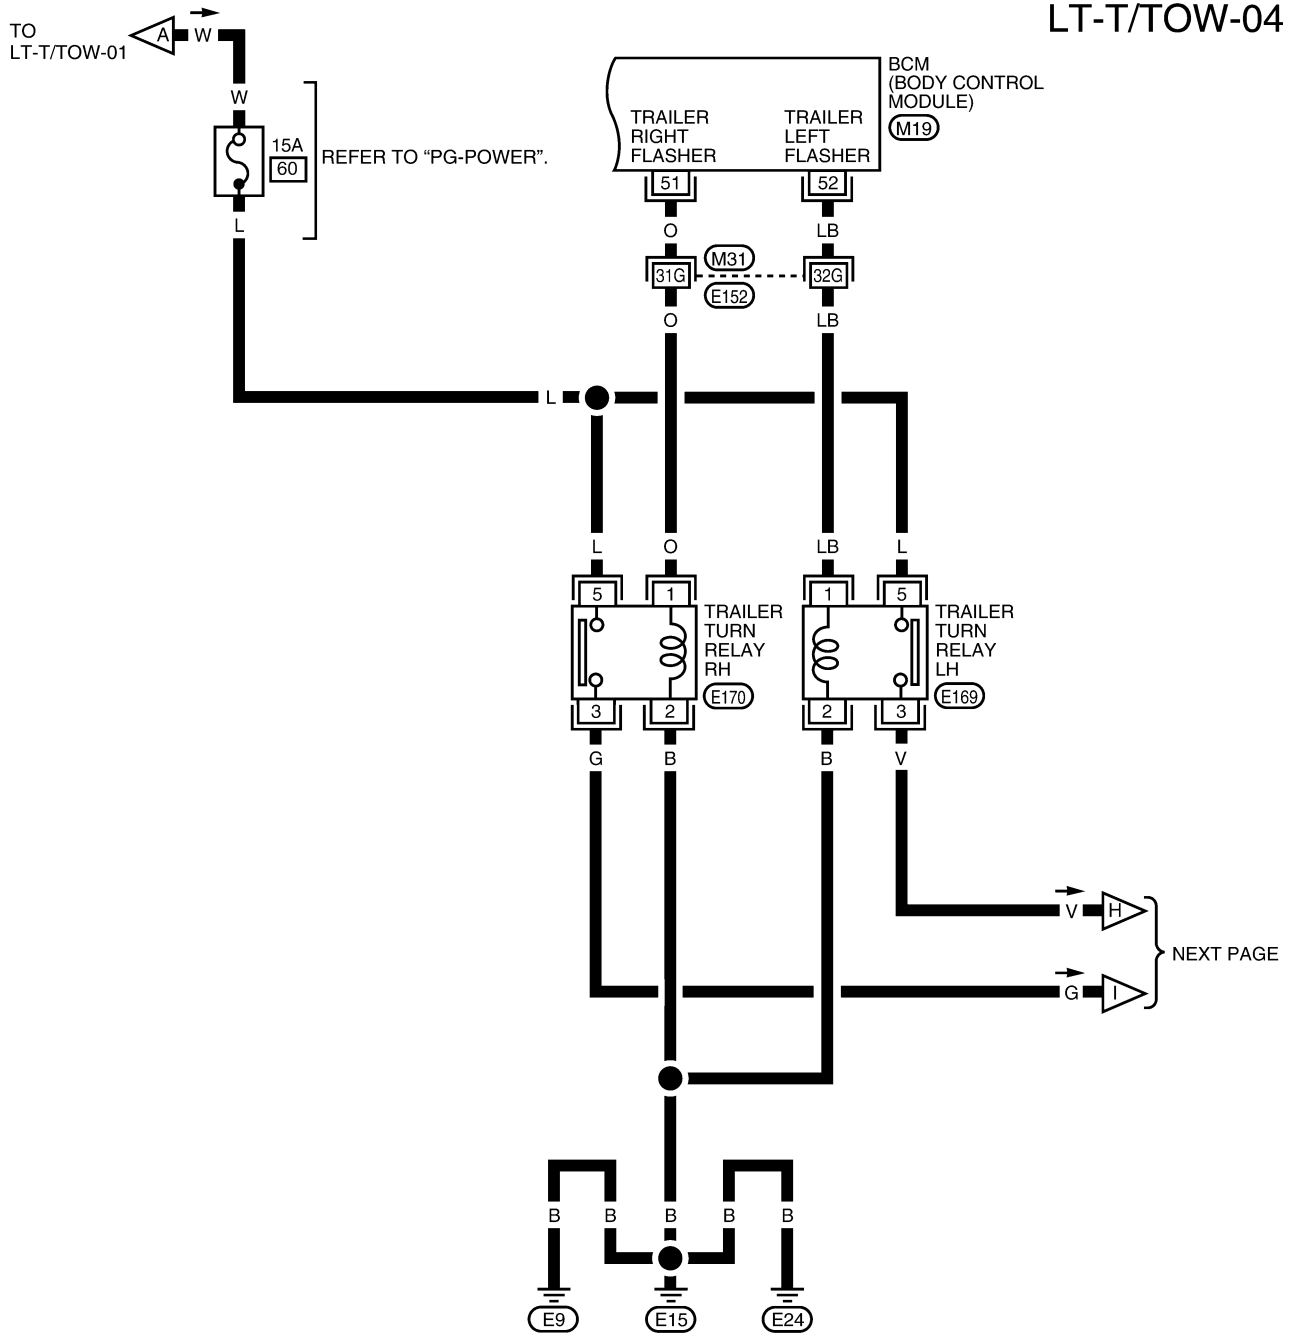


REFER TO THE FOLLOWING.
 (M31) - SUPER MULTIPLE JUNCTION (SMJ)

WKWA4432E

TRAILER TOW

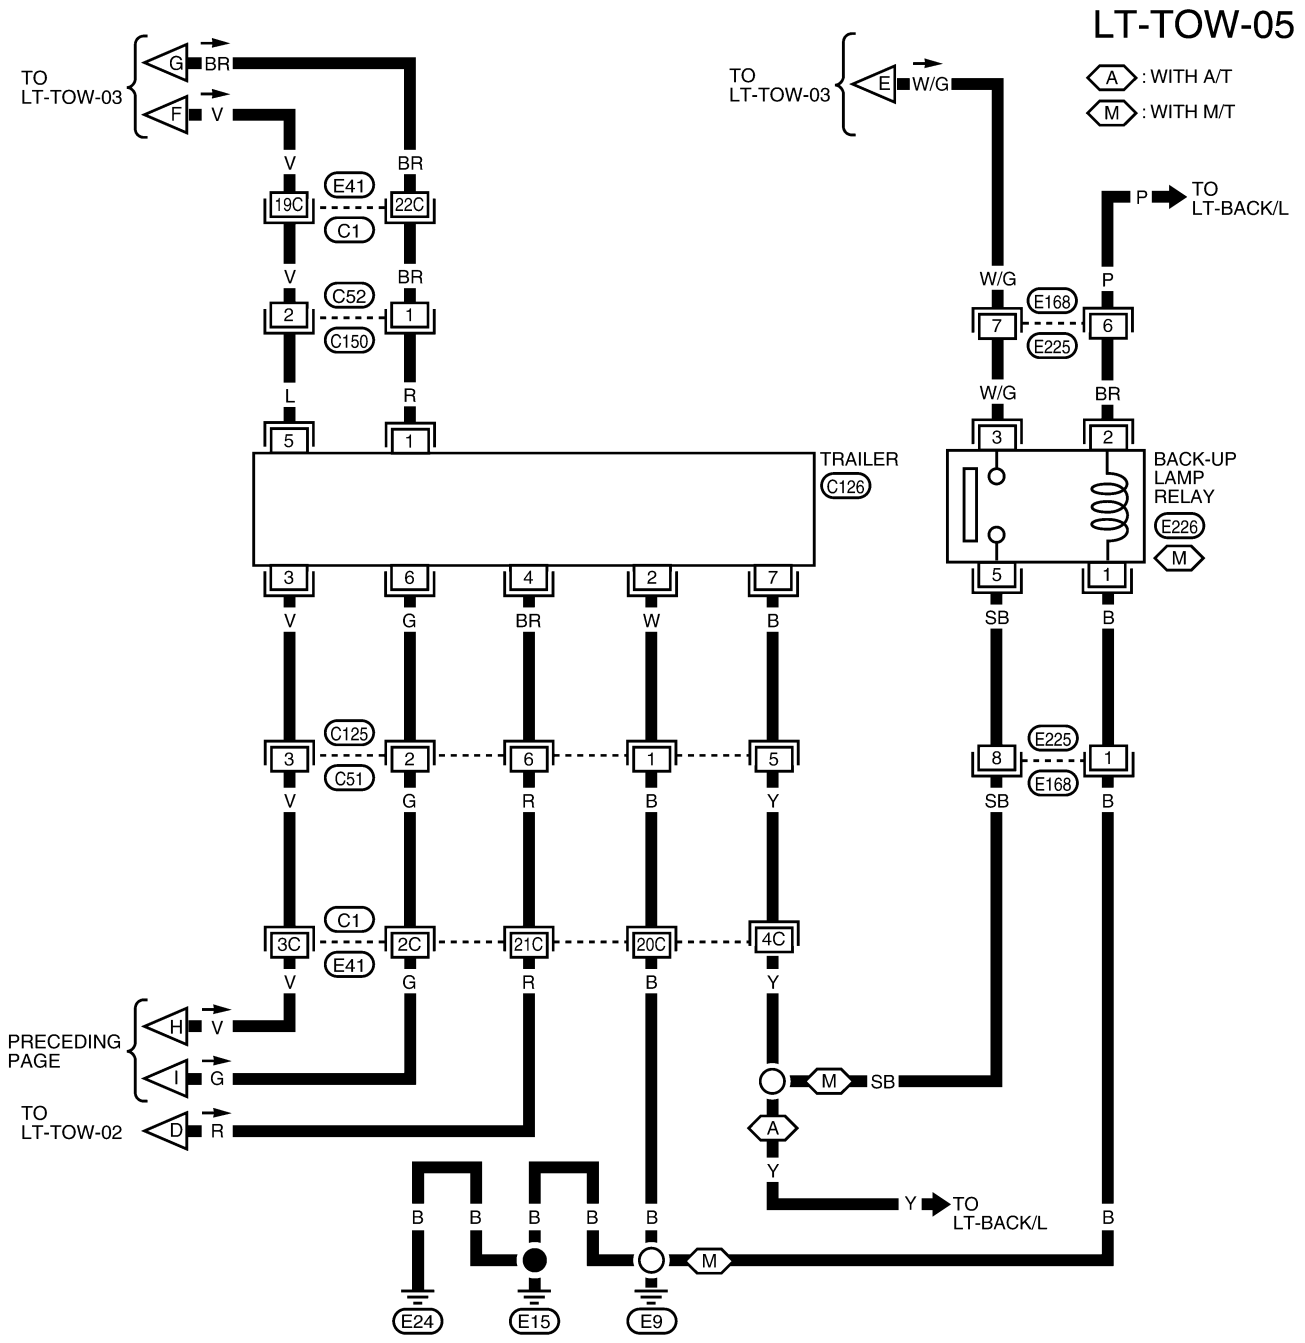

A
B
C
D
E
F
G
H
I
J
LT
L
M

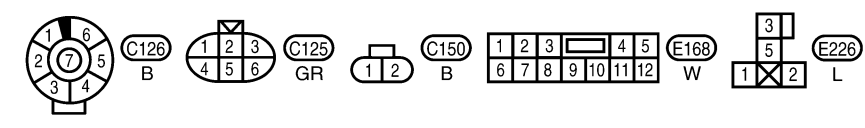

REFER TO THE FOLLOWING.
 (C1) - SUPER MULTIPLE JUNCTION (SMJ)

WKWA4433E


INTERIOR ROOM LAMP

INTERIOR ROOM LAMP

PFP:26410

Component Parts and Harness Connector Location

EKS00HOF

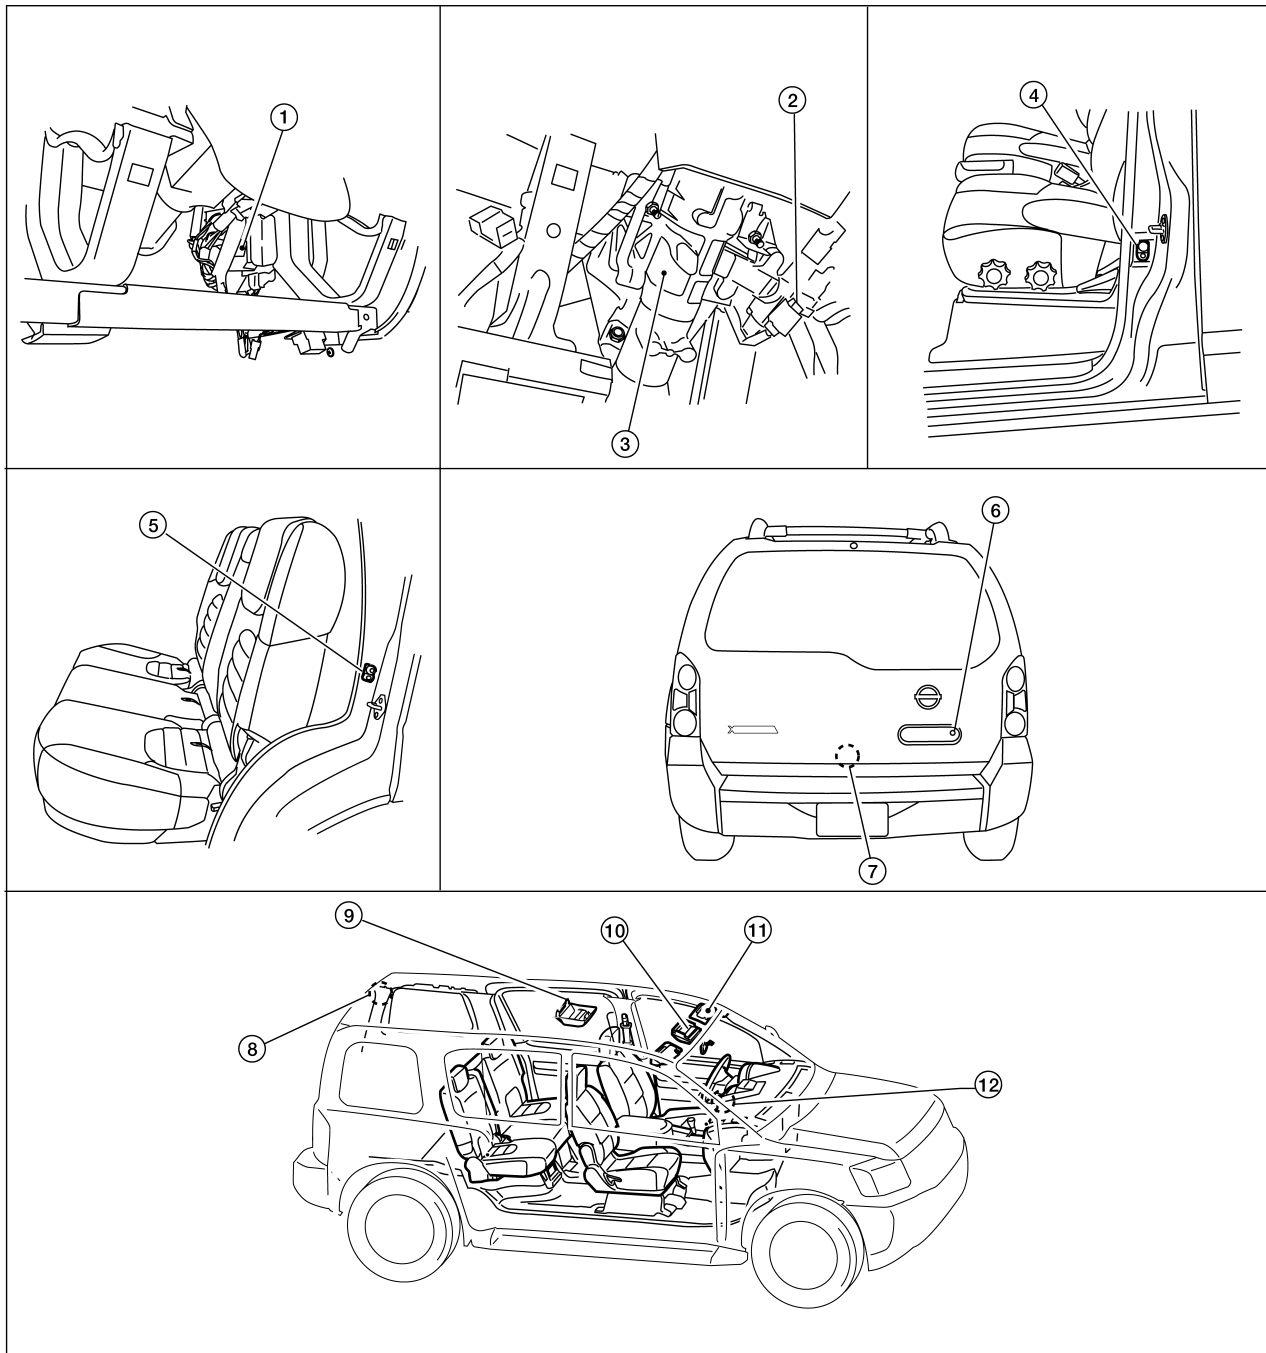

WKIA5084E

- | | | |
|--|---|---|
| 1. BCM
M18, M19, M20
(view with lower instrument panel LH removed) | 2. Key switch
M27 | 3. Steering column assembly |
| 4. Front door switch
LH B8
RH B108 | 5. Rear door switch
LH B18
RH B116 | 6. Back door key cylinder switch
D505 |
| 7. Back door switch
D502 | 8. Cargo lamp
R11 | 9. Room lamp 2nd row
R12 |
| 10. Front room/map lamp assembly
R9 | 11. Vanity lamp (with vanity lamps)
LH B80
RH B81 | 12. Ignition keyhole illumination
M150 |

INTERIOR ROOM LAMP

EKS00ELN

System Description

MODELS WITHOUT POWER DOOR LOCKS

Power Supply and Ground

Power is supplied at all times

- through 10A fuse [No. 18, located in the fuse block (J/B)]
- to front room/map lamp assembly terminal 2
- to room lamp 2nd row terminal 2
- to ignition keyhole illumination terminal 1
- to cargo lamp terminal 2.

Ground is supplied

- to front room/map lamp assembly terminal 3
- through grounds M57, M61 and M79, and
- to back door switch terminal 1
- through grounds D406 and D652.

Switch Operation

When the back door is open, ground is supplied

- to cargo lamp terminal 1
- through diode 7 terminal 2
- through diode 7 terminal 1
- through back door switch terminal 3
- through back door switch terminal 1
- through grounds D406 and D652.

Power is supplied

- through 10A fuse [No. 18, located in the fuse block (J/B)]
- to cargo lamp terminal 2.

When the cargo lamp switch is ON, ground is supplied through case ground of cargo lamp.

With power and ground supplied, the cargo lamp illuminates.

When any side door switch is ON (door is opened), ground is supplied

- to front room/map lamp assembly terminal 1
- to room lamp 2nd row terminal 1
- through diode 6 terminal 2 (front door switch LH only)
- through diode 6 terminal 1 (front door switch LH only)
- through door switch terminal 1
- through case ground of any door switch.

When the front door LH is open, ground is supplied

- to ignition keyhole illumination terminal 2
- through front door switch LH terminal 1
- through case ground of the front door switch LH.

Power is supplied

- through 10A fuse [No. 18, located in the fuse block (J/B)]
- to front room/map lamp assembly terminal 2
- to room lamp 2nd row terminal 2, and
- to ignition keyhole illumination terminal 1.

When room lamp 2nd row is ON, ground is supplied through room lamp 2nd row case ground.

When front room/map lamp assembly switch is ON, ground is supplied

- through front room/map lamp assembly terminal 3
- to grounds M57, M61 and M79.

A

B

C

D

E

F

G

H

I

J

LT

L

M

INTERIOR ROOM LAMP

MODELS WITH POWER DOOR LOCKS

When room lamp and personal lamp switch is in DOOR position, room lamp and personal lamp ON/OFF is controlled by timer according to signals from switches including key switch, front door switch LH, unlock signal from keyfob, door lock and unlock switch, key cylinder switch, ignition switch and back door switch.

When room/map lamp and personal lamp turns ON, they will stay on for about 30 seconds. When room/map lamp and personal lamp turns OFF, they will turn off after about 30 seconds.

The room/map lamp and personal lamp timer is controlled by the BCM (body control module).

Room/map lamp and personal lamp timer control settings can be changed with CONSULT-II.

Ignition keyhole illumination turns ON when front door LH is opened (door switch ON) or key is removed from key switch. Illumination turns OFF when front door LH is closed (door switch OFF).

Power Supply and Ground

Power is supplied at all times

- through 10A fuse (No. 25, located in the fuse and fusible link box)
- to key switch terminal 2, and
- through 10A fuse [No. 18, located in the fuse block (J/B)]
- to BCM terminal 57, and
- through 50A fusible link (letter **g** , located in the fuse and fusible link box)
- to BCM terminal 70.

When the key is inserted in key switch, power is supplied

- through key switch terminal 1
- to BCM terminal 37.

With the ignition switch in the ACC or ON position, power is supplied

- through 10A fuse [No. 4, located in the fuse block (J/B)]
- to BCM terminal 11.

With the ignition switch in the ON or START position, power is supplied

- through 10A fuse [No. 1, located in the fuse block (J/B)]
- to BCM terminal 38.

Ground is supplied

- to BCM terminal 67
- through grounds M57, M61 and M79.

When the front door LH is opened, ground is supplied

- to BCM terminal 47
- through front door switch LH terminal 2
- through case ground of front door switch LH.

When the front door RH is opened, ground is supplied

- to BCM terminal 12
- through front door switch RH terminal 2
- through case ground of front door switch RH.

When the rear door LH is opened, ground is supplied

- to BCM terminal 48
- through rear door switch LH terminal 2
- through case ground of rear door switch LH.

When the rear door RH is opened, ground is supplied

- to BCM terminal 13
- through rear door switch RH terminal 2
- through case ground of rear door switch RH.

When the back door is open, ground is supplied

- to BCM terminal 43
- through back door switch terminal 3
- through back door switch terminal 1

INTERIOR ROOM LAMP

- through grounds D406 and D652.

When the front door LH or RH is unlocked by the door lock/unlock switch, BCM receives ground signal

- to BCM terminal 46
- through main power window and door lock/unlock switch terminal 11 or power window and door lock/unlock switch RH terminal 2
- through main power window and door lock/unlock switch terminal 14 or power window and door lock/unlock switch RH terminal 3
- through grounds M57, M61 and M79.

When the front door LH is unlocked by the key, the BCM receives ground signal

- to BCM terminal 7
- through front door lock assembly LH (key cylinder switch) terminal 3
- through front door lock assembly LH (key cylinder switch) terminal 4
- through grounds M57, M61 and M79.

When the back door is unlocked by the key, the BCM receives ground signal

- to BCM terminal 7
- through back door switch terminal 3
- through back door switch terminal 2
- through grounds D406 and D652.

When a signal, or combination of signals is received by BCM, ground is supplied

- to front room/map lamp assembly terminal 2
- to room lamp 2nd row terminal 1
- through BCM terminal 63, and
- to cargo lamp terminal 1
- through BCM terminal 49.

With power and ground supplied, the lamps illuminate.

Switch Operation

When any door switch is ON (door is opened), ground is supplied

- to front room/map lamp assembly terminal 2
- to room lamp 2nd row terminal 1
- through BCM terminal 63, and
- to ignition keyhole illumination terminal 2
- through BCM terminal 1.

Power is supplied

- through BCM terminal 56
- to ignition keyhole illumination terminal 1
- to front room/map lamp assembly terminal 1
- to vanity lamp LH and RH terminal 1 (with vanity lamps)
- to room lamp 2nd row terminal 2, and
- to cargo lamp terminal 2.

When front room/map lamp assembly switch is ON, ground is supplied

- through front room/map lamp assembly terminal 3
- to grounds M57, M61 and M79.

When vanity lamp (LH and RH) is ON, ground is supplied

- to vanity lamp LH and RH terminal 2
- through grounds B7 and B19.

When the cargo lamp switch is ON, ground is supplied through case ground of cargo lamp.

When room lamp 2nd row is ON, ground is supplied through room lamp case ground.

With power and ground supplied, the lamps illuminate.

A

B

C

D

E

F

G

H

I

J

LT

L

M

INTERIOR ROOM LAMP

Room Lamp Timer Operation

When lamp switch is in DOOR position, and when all conditions below are met, BCM performs timer control (maximum 30 seconds) for interior room lamp and map lamp ON/OFF.

Power is supplied

- through 10A fuse (No. 25, located in the fuse and fusible link box)]
- to key switch terminal 2.

Key is removed from ignition key cylinder (key switch OFF), power will not be supplied to BCM terminal 37.

Ground is supplied

- to BCM terminal 46
- through main power window and door lock/unlock switch terminal 11.

At the time that front door LH is opened, BCM detects that front door LH is unlocked. It determines that interior room lamp and map lamp timer operation conditions are met, and turns the interior room lamps ON for 30 seconds.

Key is in ignition key cylinder (key switch ON), power is supplied

- through key switch terminal 1
- to BCM terminal 37.

When key is removed from key switch (key switch OFF), power supply to BCM terminal 37 is terminated. BCM detects that key has been removed, determines that interior room lamp and map lamp timer conditions are met, and turns the interior room lamps ON for 30 seconds.

When front door LH opens → closes, and the key is not inserted in the key switch (key switch OFF), BCM terminal 47 changes between 0V (door open) → 12V (door closed). The BCM determines that conditions for interior room lamp operation are met and turns the interior room lamp ON for 30 seconds.

Timer control is canceled under the following conditions.

- Front door LH is locked [when locked by keyfob, main power window and door lock/unlock switch, or front door lock assembly LH (key cylinder switch)]
- Front door LH is opened (front door switch LH turns ON)
- Ignition switch ON.

Interior Lamp Battery Saver Control

If interior lamp is left ON, it will not be turned off even when door is closed.

BCM turns off interior lamp automatically to save battery 30 minutes after ignition switch is turned off.

BCM controls interior lamps listed below:

- Vanity lamp (with vanity lamps)
- Front room/map lamp
- Room lamp 2nd row
- Ignition keyhole illumination
- Cargo lamp

After lamps turn OFF by the battery saver system, the lamps illuminate again when


- signal received from keyfob, main power window and door lock/unlock switch or front door lock assembly LH (key cylinder switch) is locked or unlocked
- door is opened or closed
- key is removed from ignition key cylinder or inserted in ignition key cylinder.

Interior lamp battery saver control period can be changed by the function setting of CONSULT-II.

INTERIOR ROOM LAMP


Schematic / With Power Door Locks

EKS00ELO

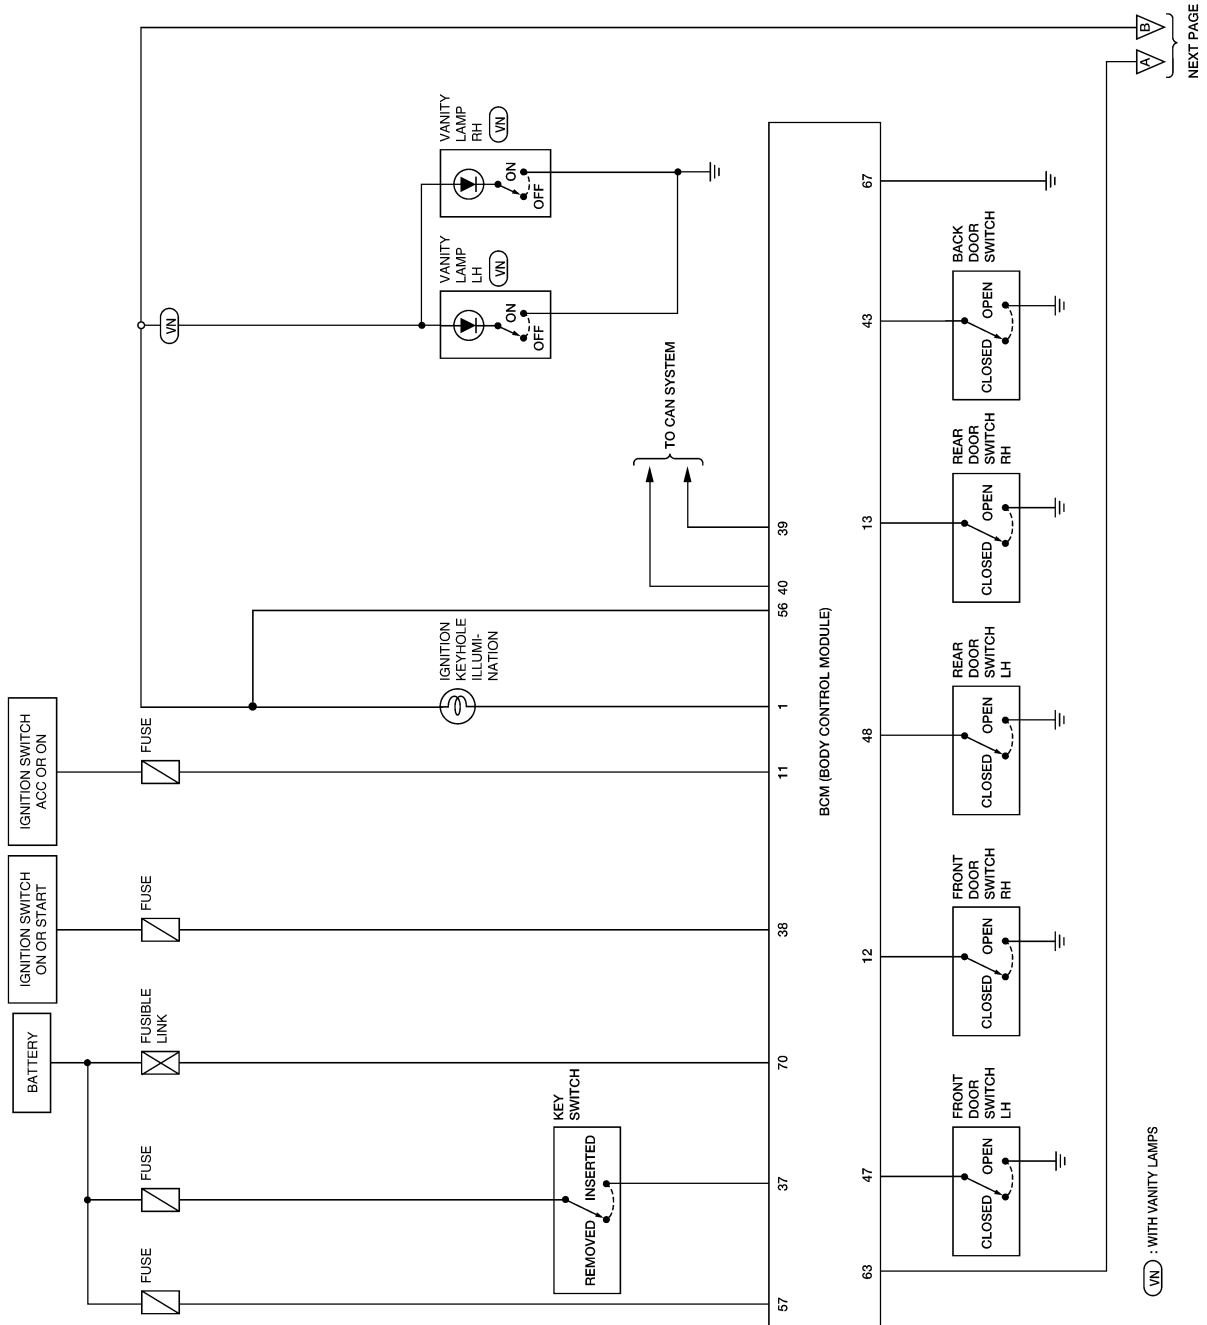

A
B
C
D
E
F
G
H
I
J
LT
L
M

INTERIOR ROOM LAMP

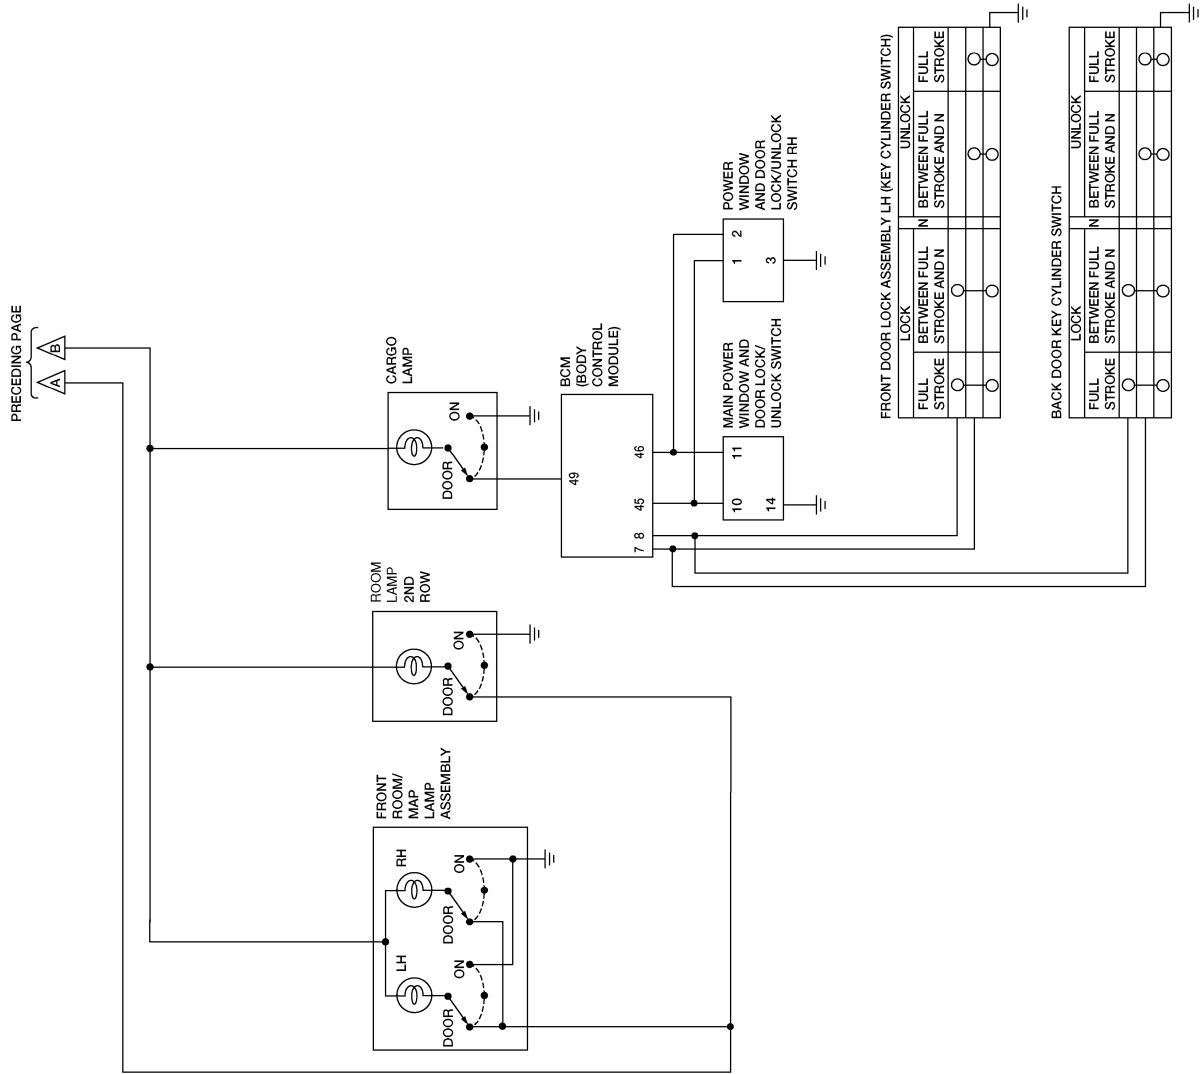


WKWA4435E

INTERIOR ROOM LAMP

Schematic / Without Power Door Locks

EKS00H0G

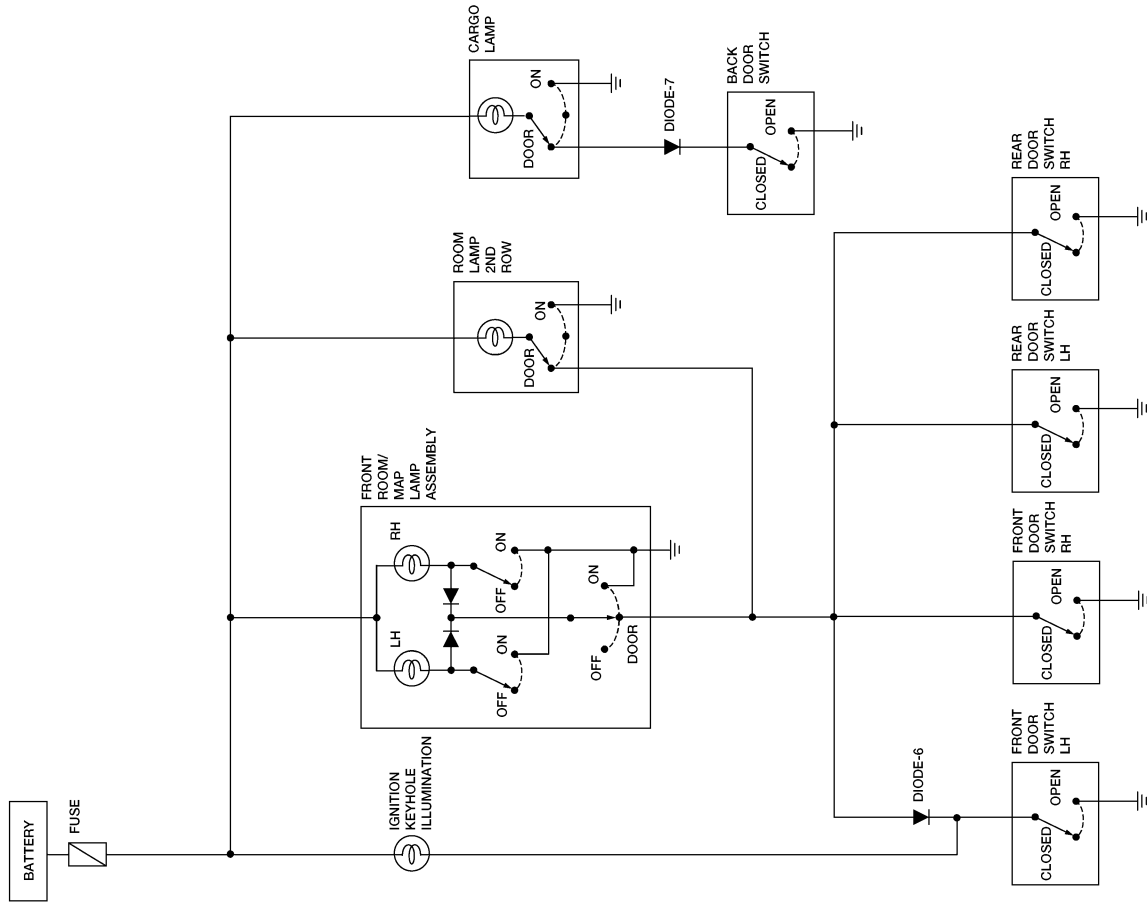

A
B
C
D
E
F
G
H
I
J
LT
L
M

WKWA4436E



INTERIOR ROOM LAMP

EKS00ELP

Wiring Diagram — INT/L — WITH POWER DOOR LOCKS

LT-INT/L-01

— : DATA LINE



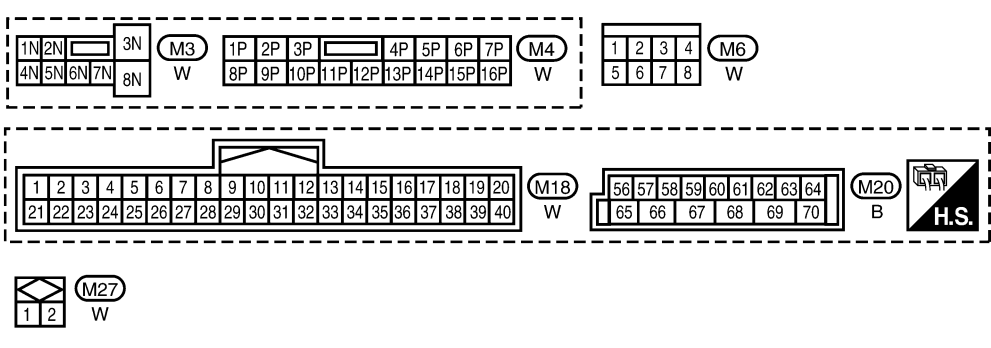
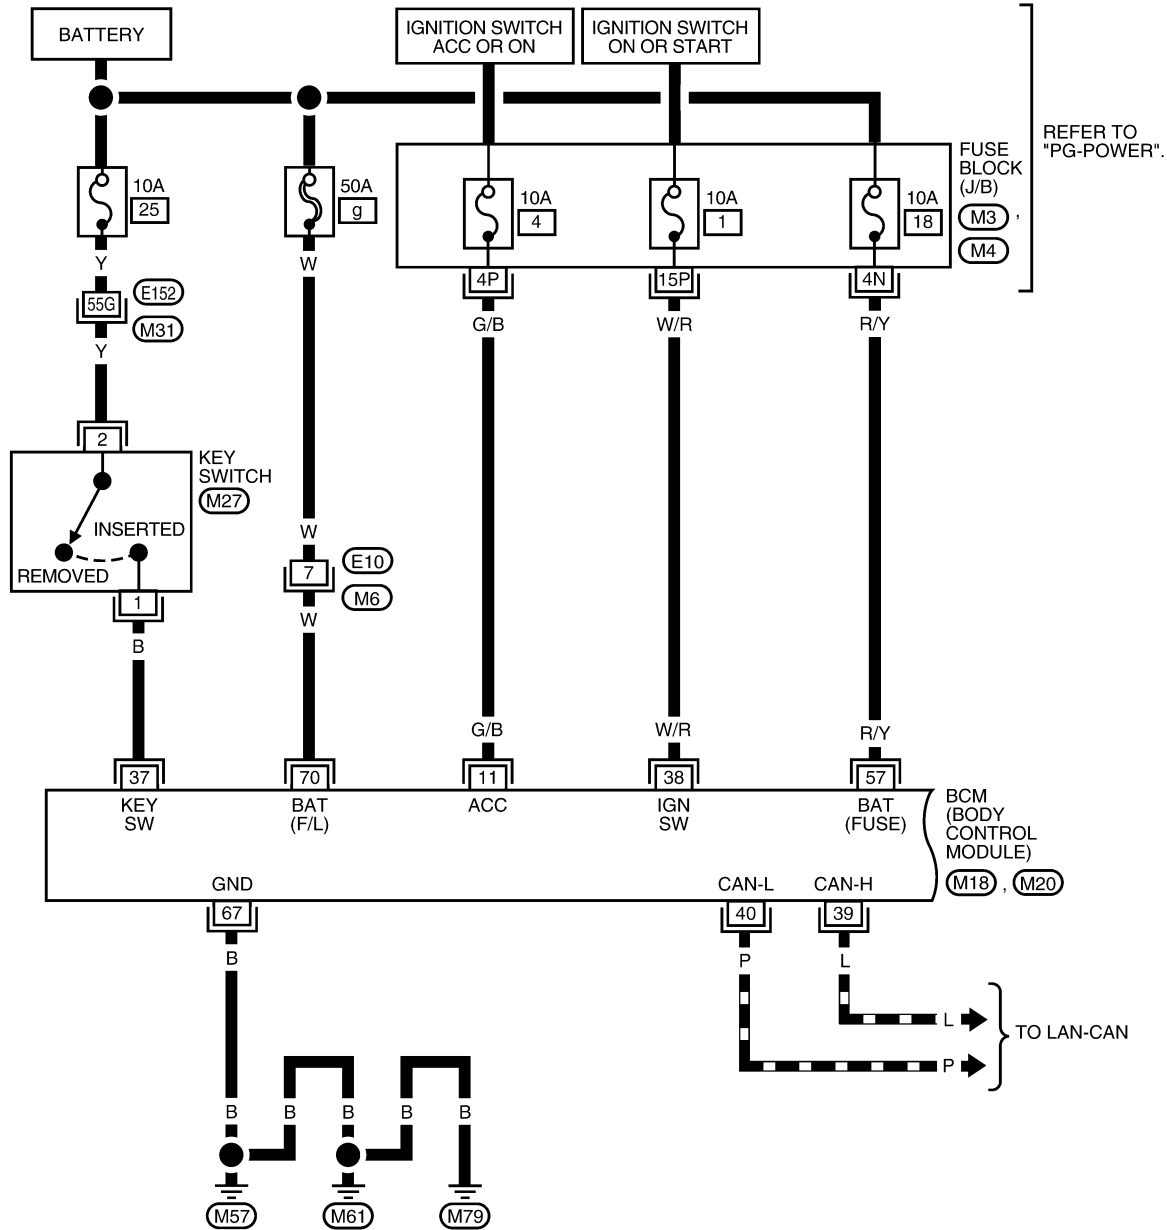


WKWA5958E

INTERIOR ROOM LAMP

WITH POWER DOOR LOCKS — (CONT) —

   LT-INT/L-02

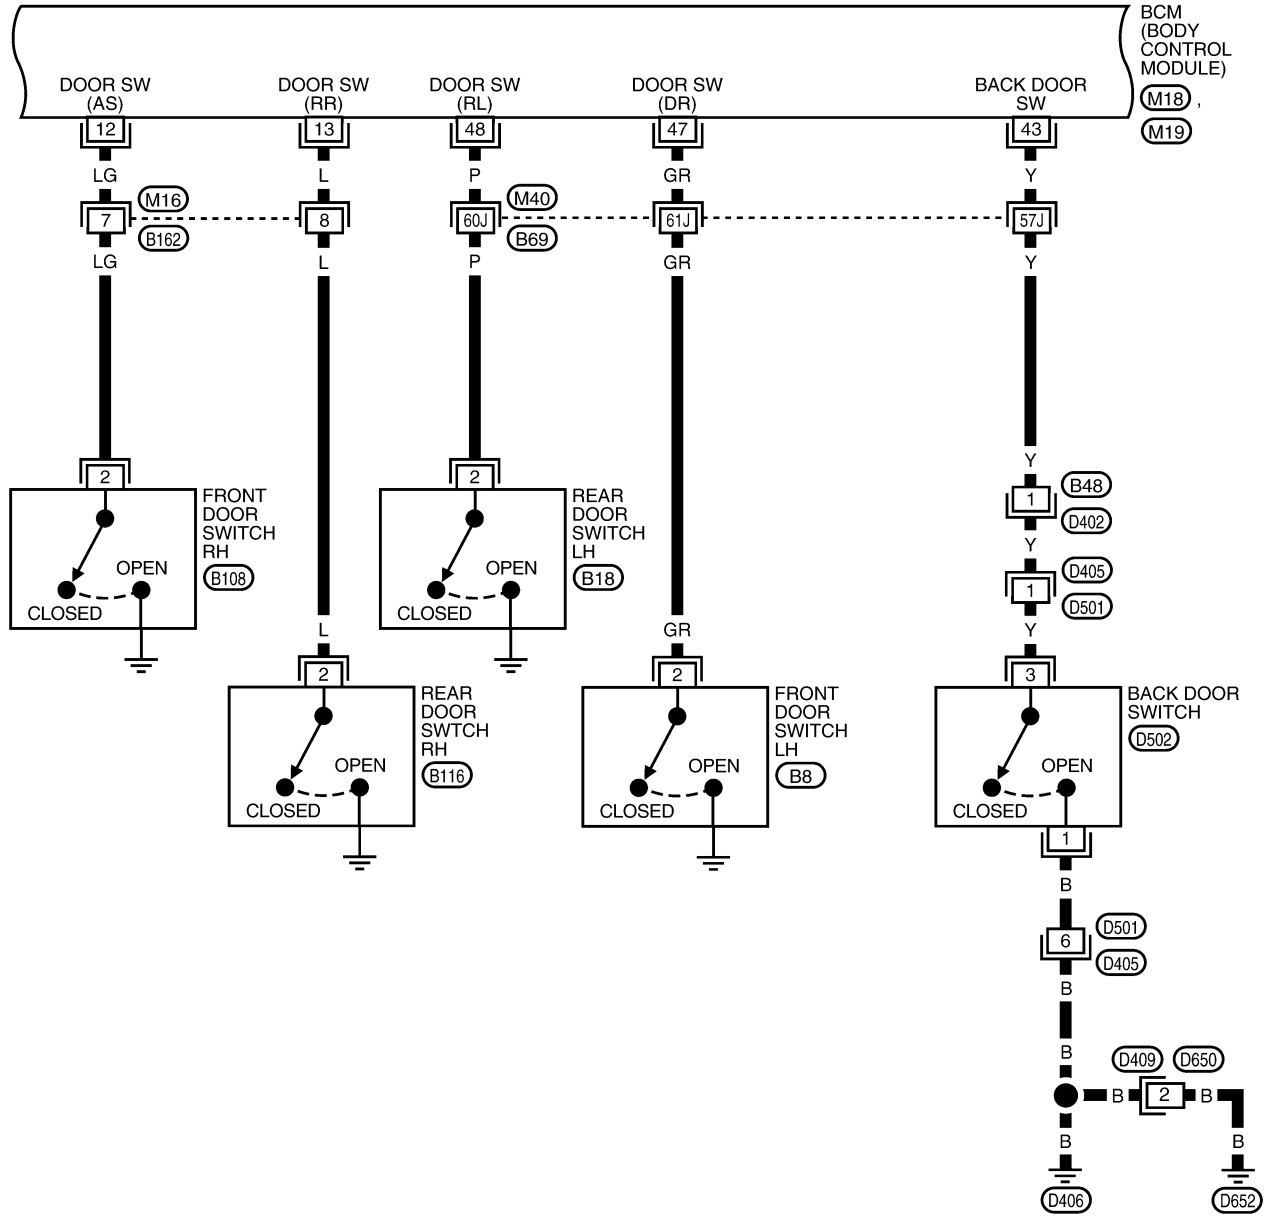



REFER TO THE FOLLOWING.
M40 - SUPER MULTIPLE JUNCTION (SMJ)

WKWA2564E

INTERIOR ROOM LAMP

WITH POWER DOOR LOCKS — (CONT) —

LT-INT/L-03

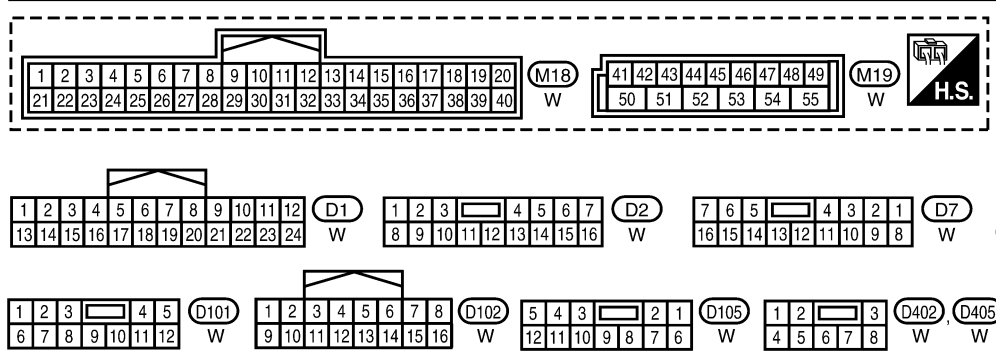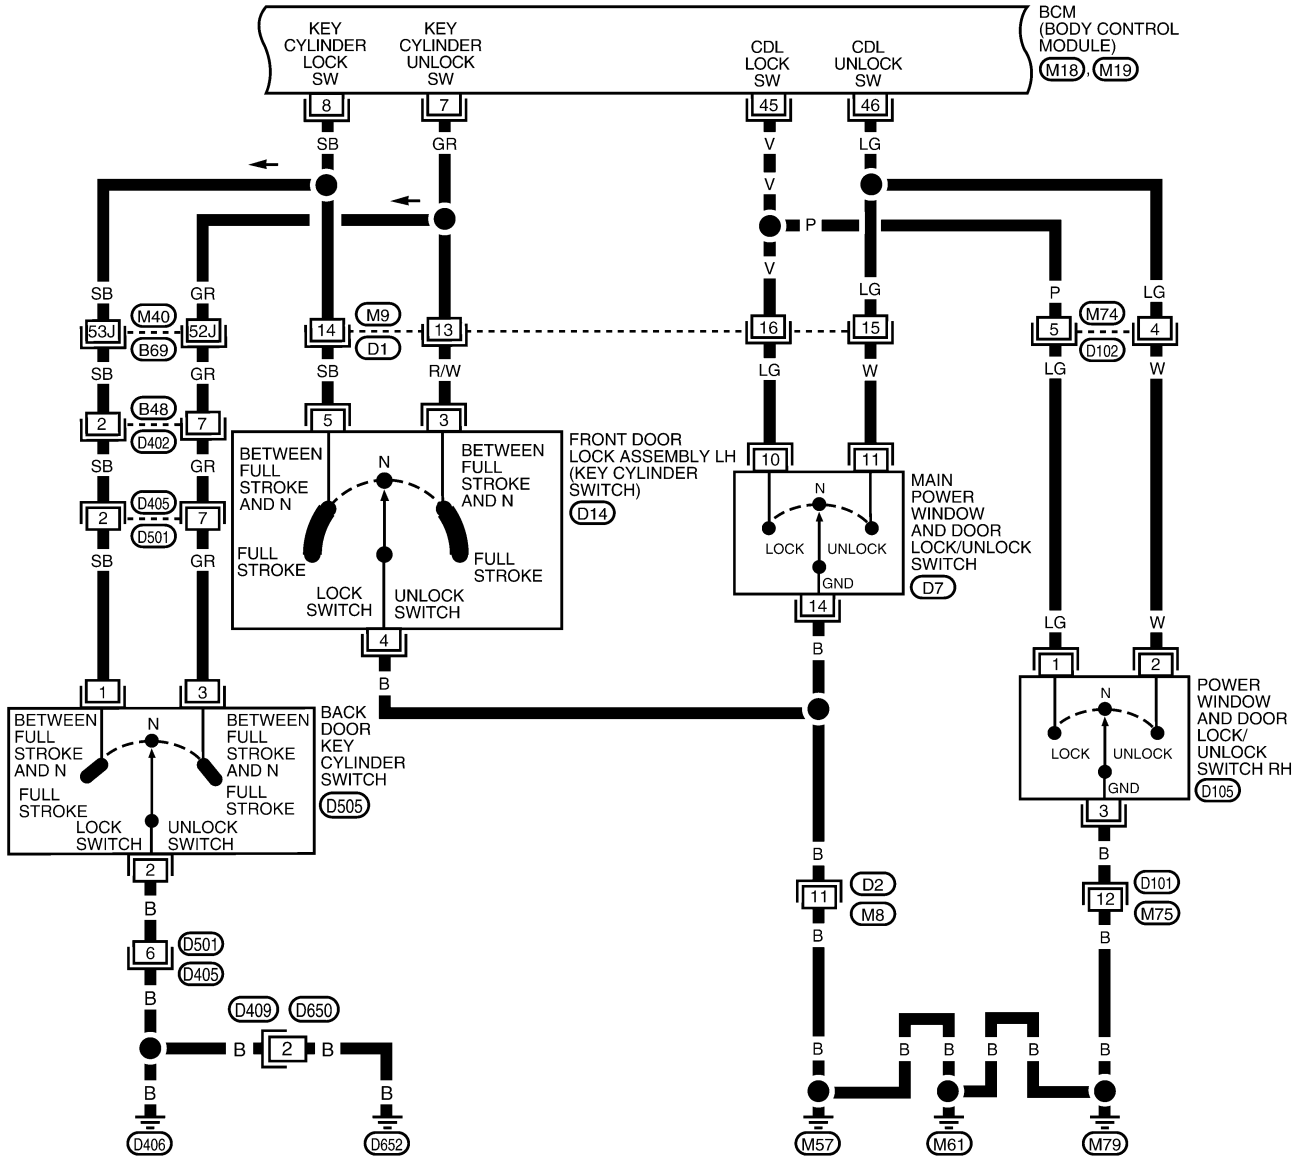


REFER TO THE FOLLOWING.
 (M40) - SUPER MULTIPLE JUNCTION (SMJ)

WKWA2565E


INTERIOR ROOM LAMP

WITH POWER DOOR LOCKS — (CONT) —

LT-INT/L-04

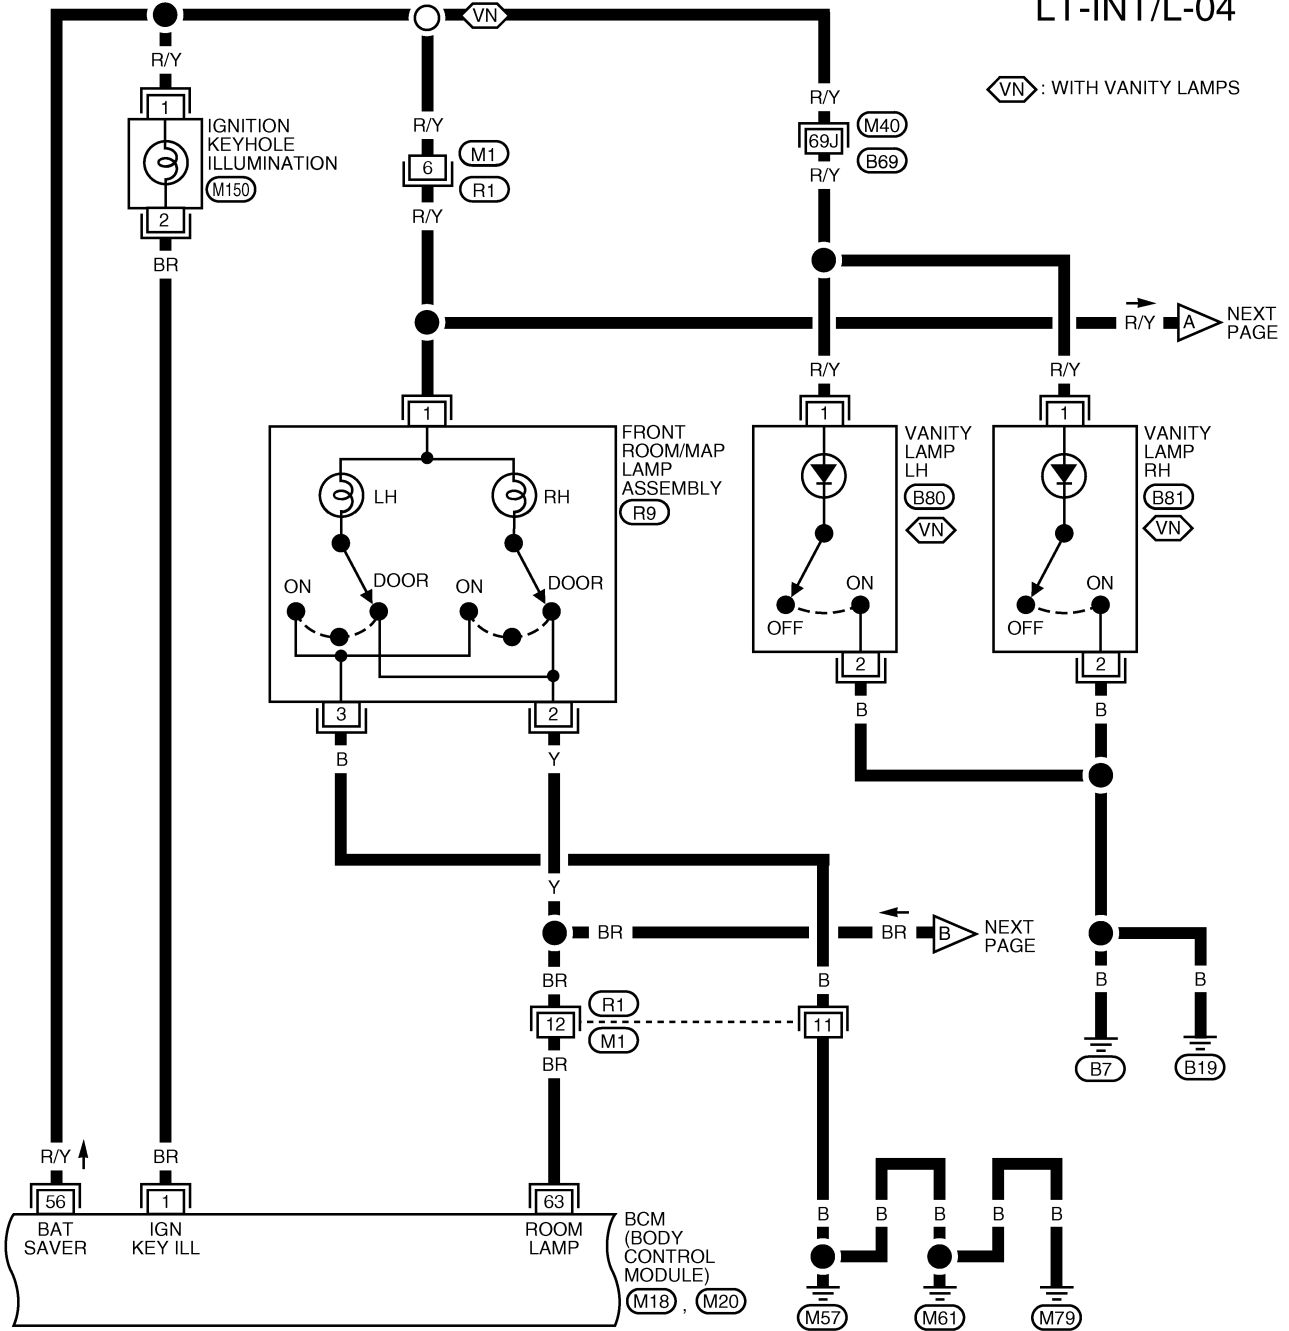

A
B
C
D
E
F
G
H
I
J
LT
L
M

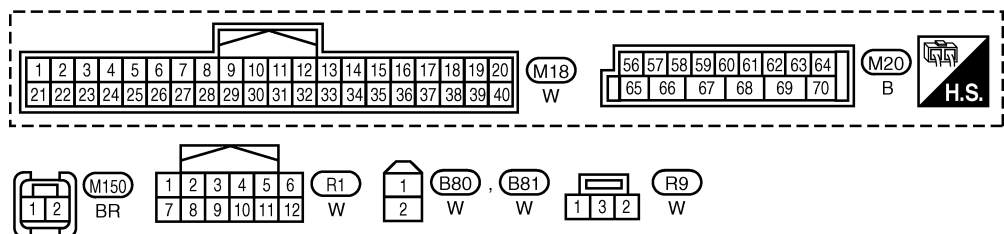



REFER TO THE FOLLOWING.
 (M40) - SUPER MULTIPLE JUNCTION (SMJ)

WKWA4438E

INTERIOR ROOM LAMP

WITH POWER DOOR LOCKS — (CONT) —

 LT-INT/L-05

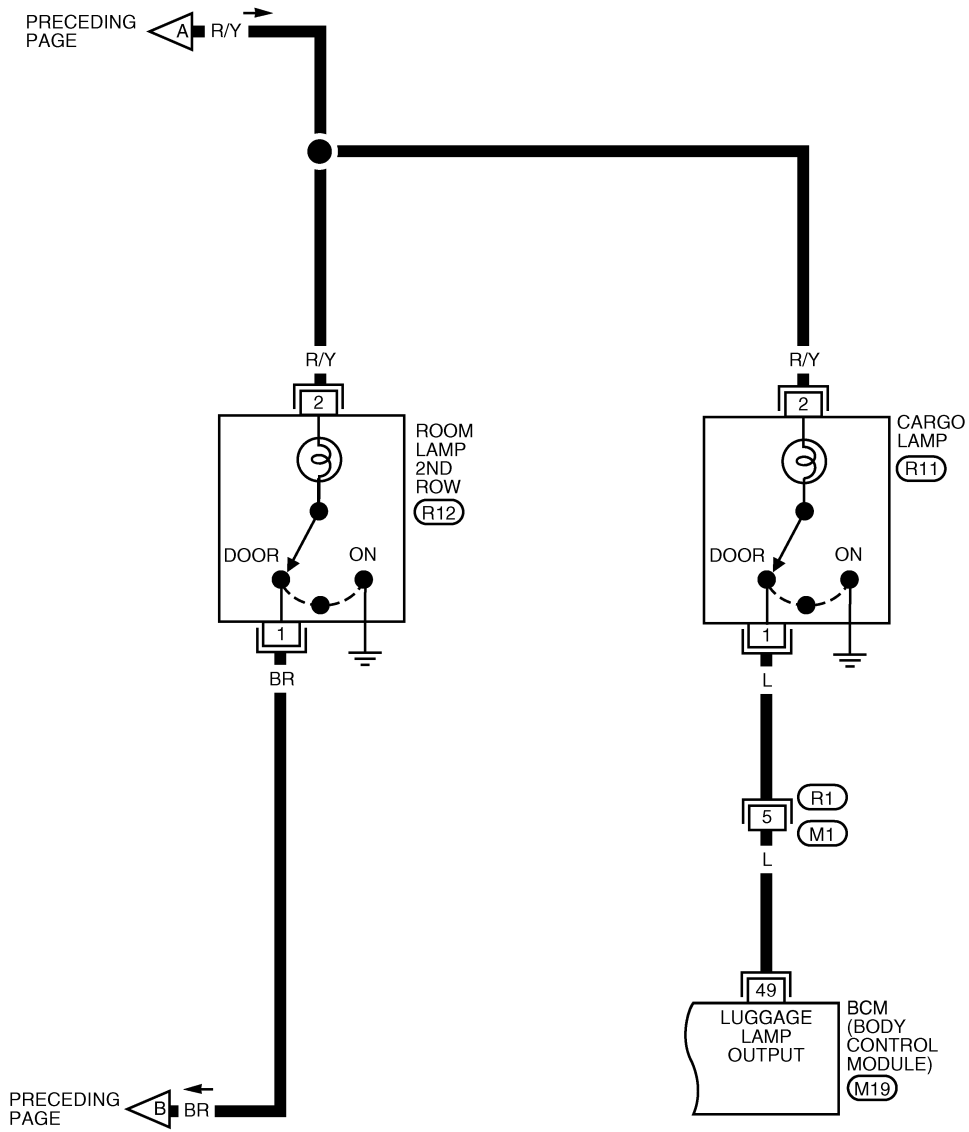


WKWA4439E


INTERIOR ROOM LAMP

WITHOUT POWER DOOR LOCKS

LT-INT/L-06

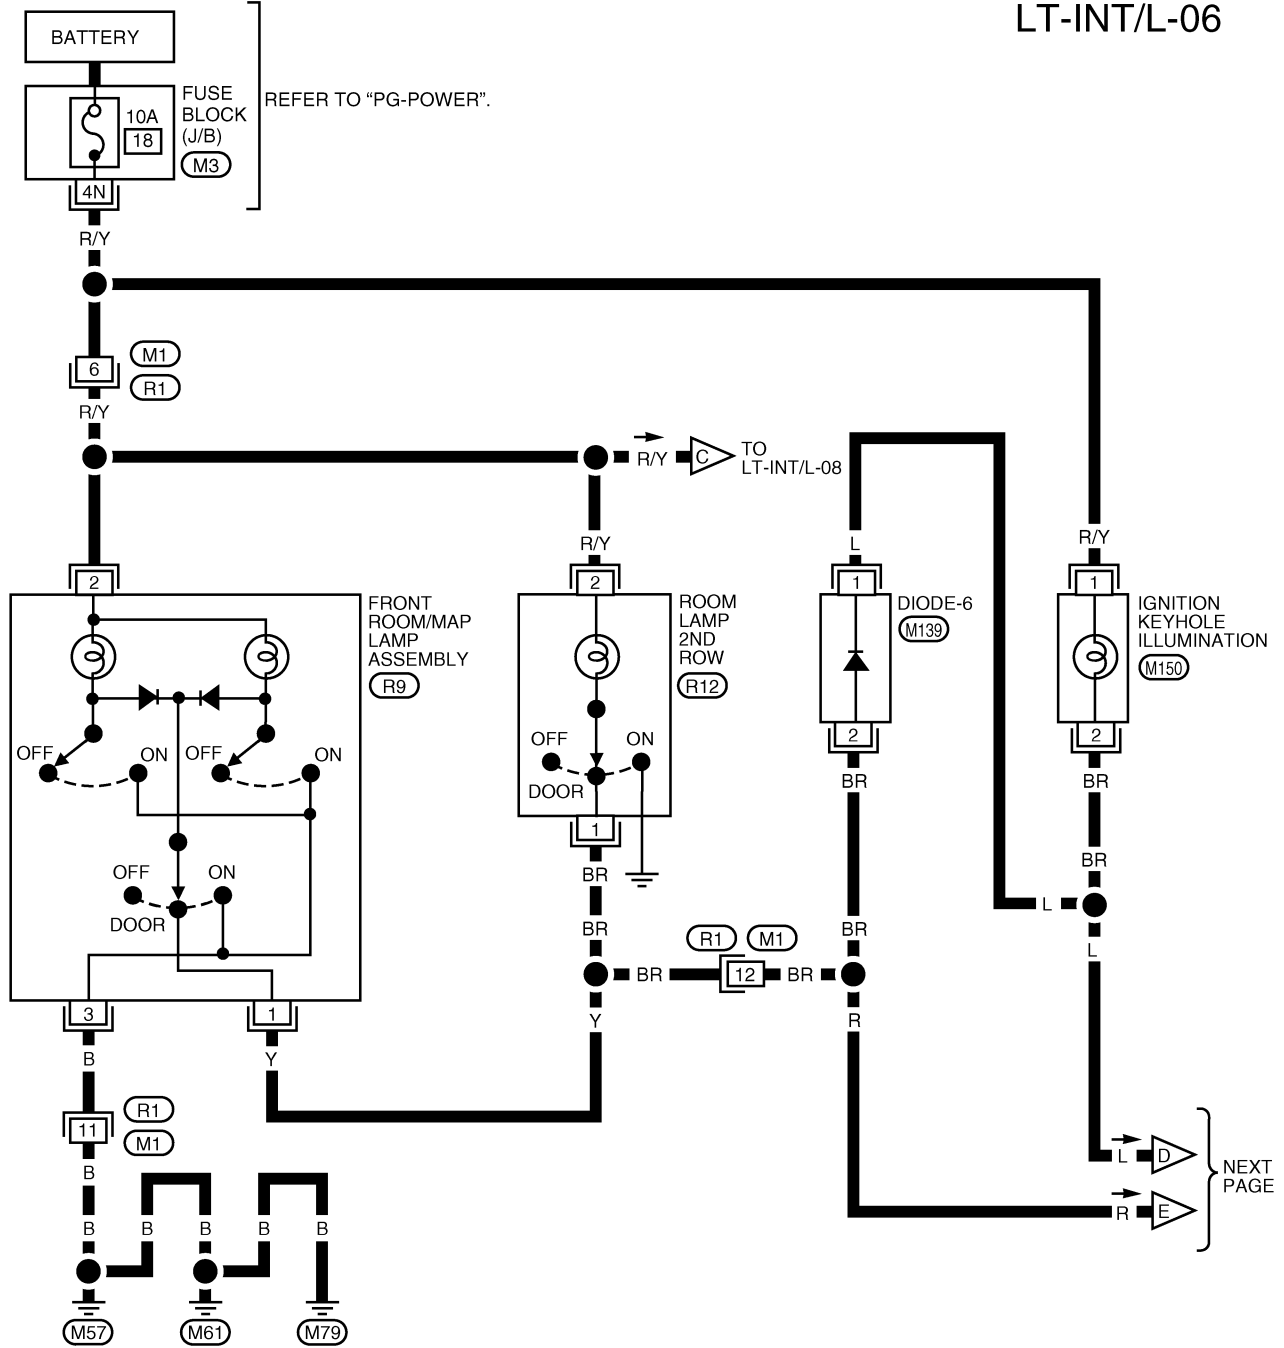

A
B
C
D
E
F
G
H
I
J
LT
L
M


 


WKWA4440E

INTERIOR ROOM LAMP

WITHOUT POWER DOOR LOCKS — (CONT) —

 LT-INT/L-07

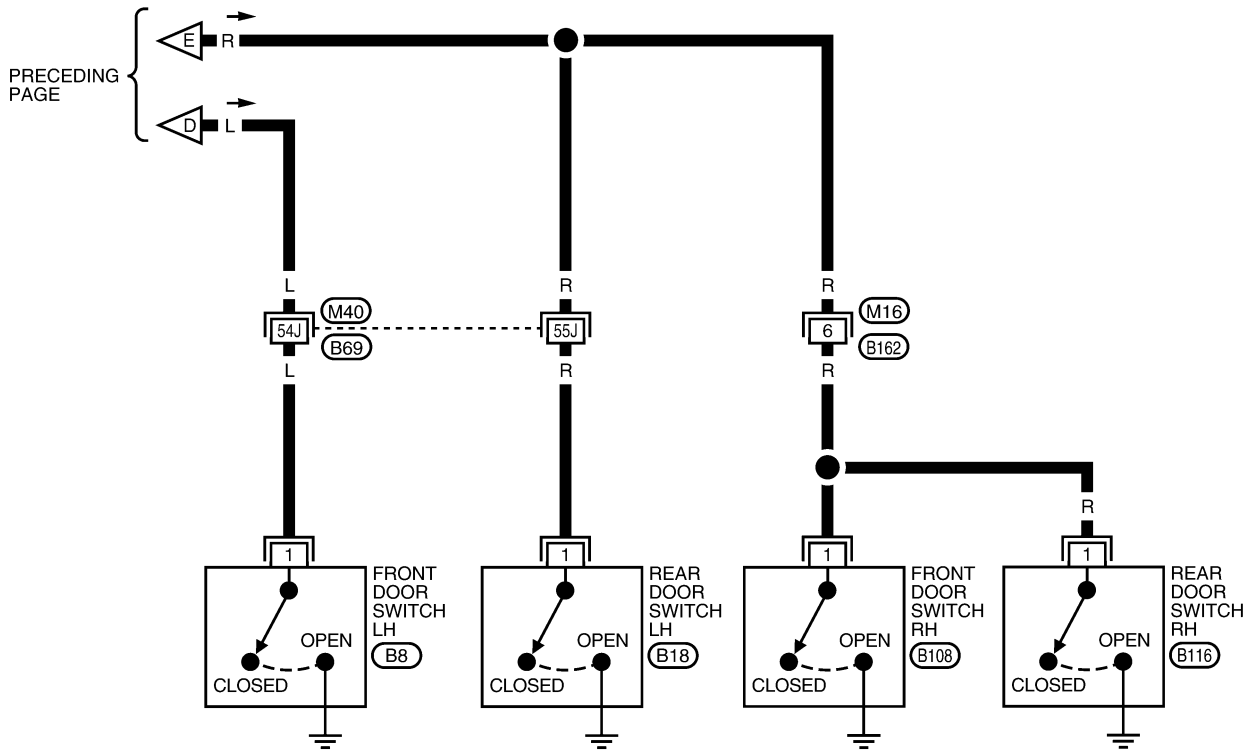


REFER TO THE FOLLOWING.
 (M40) - SUPER MULTIPLE JUNCTION (SMJ)

WKWA2566E


INTERIOR ROOM LAMP

WITHOUT POWER DOOR LOCKS — (CONT) —

LT-INT/L-08

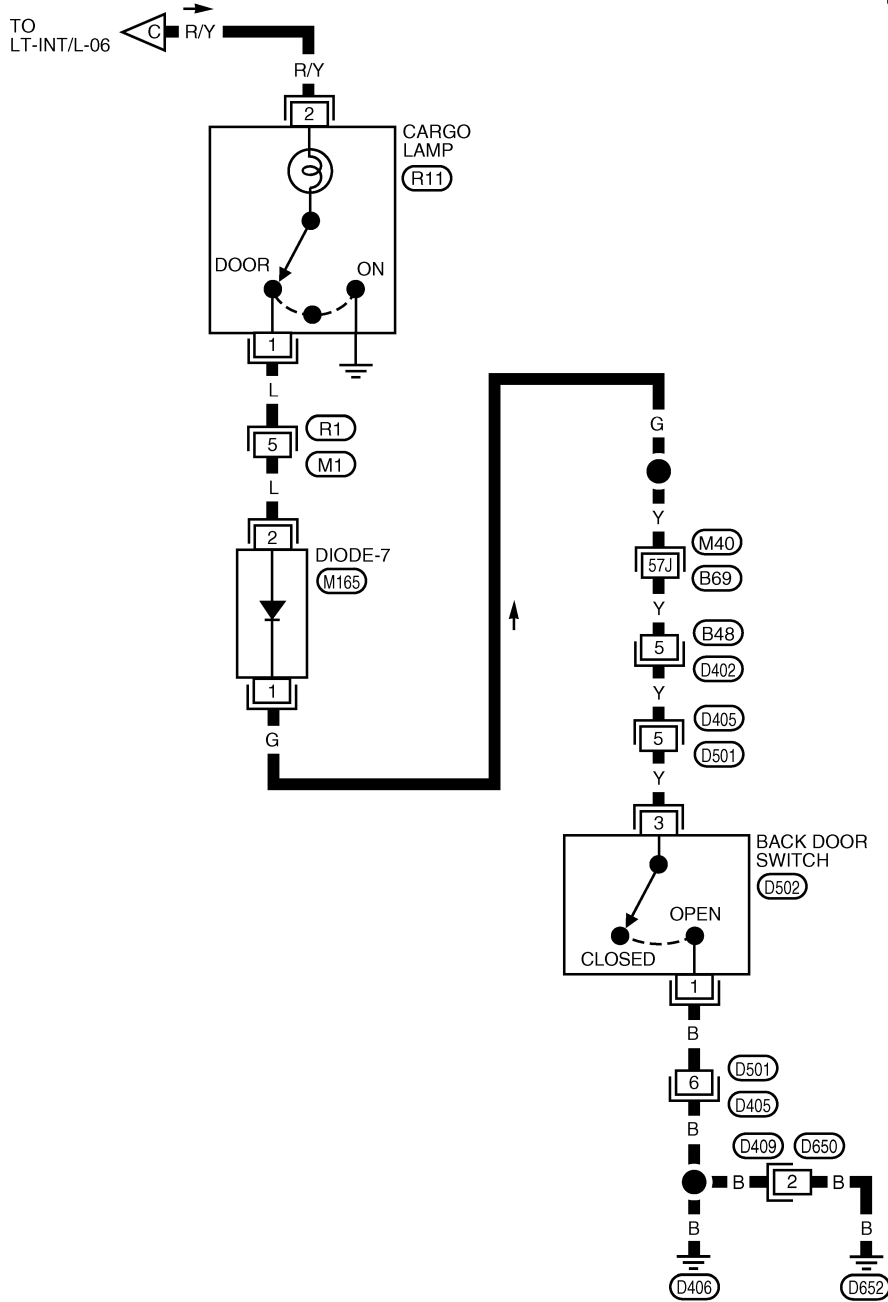

A
B
C
D
E
F
G
H
I
J
LT
L
M

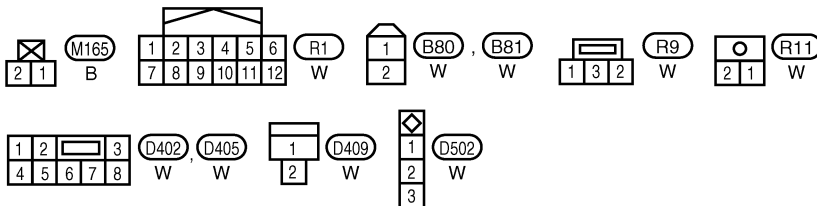

REFER TO THE FOLLOWING.
M40 - SUPER MULTIPLE JUNCTION (SMJ)

WKWA4441E

INTERIOR ROOM LAMP

Terminals and Reference Values for BCM

EKS00HOH

Refer to [BCS-12, "Terminals and Reference Values for BCM"](#) .

How to Proceed With Trouble Diagnosis

EKS00ELR

1. Confirm the symptom or customer complaint.
2. Understand operation description and function description. Refer to [LT-107, "System Description"](#) .
3. Carry out the Preliminary Check. Refer to [LT-122, "Preliminary Check"](#) .
4. Check symptom and repair or replace the cause of malfunction.
5. Does the interior room lamp operate normally? If YES: GO TO 6. If NO: GO TO 4.
6. Inspection End.

Preliminary Check

EKS00ELS

INSPECTION FOR POWER SUPPLY AND GROUND CIRCUIT

Refer to [BCS-16, "BCM Power Supply and Ground Circuit Check"](#) .

CONSULT-II Function (BCM)

EKS00ELT

CONSULT-II can display each diagnostic item using the diagnostic test modes shown following.


BCM diagnostic test item	Diagnostic mode	Description
Inspection by part	WORK SUPPORT	Supports inspections and adjustments. Commands are transmitted to the BCM for setting the status suitable for required operation, input/output signals are received from the BCM and received data is displayed.
	DATA MONITOR	Displays BCM input/output data in real time.
	ACTIVE TEST	Operation of electrical loads can be checked by sending drive signal to them.
	SELF-DIAG RESULTS	Displays BCM self-diagnosis results.
	CAN DIAG SUPPORT MNTR	The result of transmit/receive diagnosis of CAN communication can be read.
	ECU PART NUMBER	BCM part number can be read.
	CONFIGURATION	Performs BCM configuration read/write functions.

CONSULT-II OPERATION

CAUTION:


If **CONSULT-II** is used with no connection of **CONSULT-II CONVERTER**, malfunctions might be detected in self-diagnosis depending on control unit which carries out CAN communication.

1. With the ignition switch OFF, connect CONSULT-II and CONSULT-II CONVERTER to the data link connector, then turn ignition switch ON.

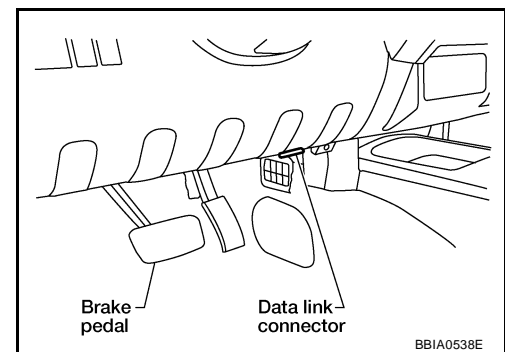


INTERIOR ROOM LAMP


2. Touch "START (NISSAN BASED VHCL)".

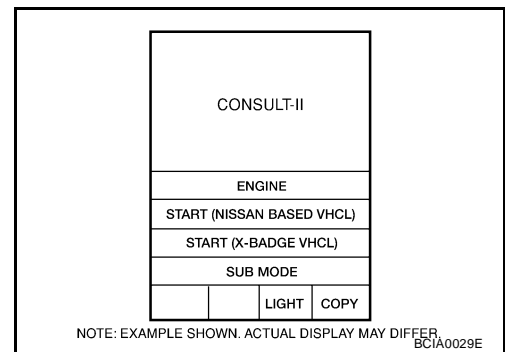

3. Touch "BCM" on "SELECT SYSTEM" screen.
If "BCM" is not indicated, go to [GI-41, "CONSULT-II Data Link Connector \(DLC\) Circuit"](#).

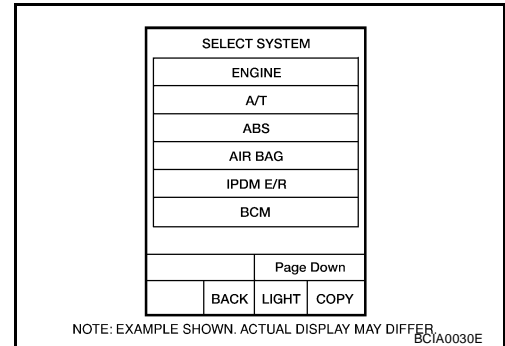

4. Touch "INT LAMP" on "SELECT TEST ITEM" screen.

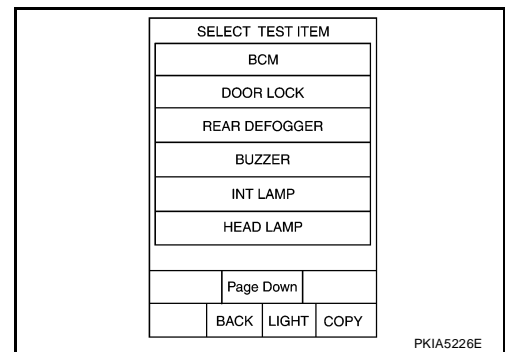

WORK SUPPORT

Operation Procedure

1. Touch "INT LAMP" on "SELECT TEST ITEM" screen.
2. Touch "WORK SUPPORT" on "SELECT DIAG MODE" screen.
3. Touch "SET I/L D-UNLCK INTCON" on "SELECT WORK ITEM" screen.
4. Touch "START".
5. Touch "CHANGE SETT".
6. The setting will be changed and "CUSTOMIZING COMPLETED" will be displayed.
7. Touch "END".

A
B
C
D
E
F
G
H
I
J
LT

INTERIOR ROOM LAMP

Display Item List

Item	Description	CONSULT-II
SET I/L D-UNLCK INTCON	The 30 seconds operating function of the interior room lamps and the ignition keyhole illumination can be selected when driver door is released (unlocked).	ON/OFF
ROOM LAMP ON TIME SET	The time in order to escalate illumination can be adjusted when the interior room lamps and the ignition keyhole illumination is turned on.	MODE 1 - 7
ROOM LAMP OFF TIME SET	The time in order to diminish illumination can be adjusted when the interior room lamps and the ignition keyhole illumination is turned off.	MODE 1 - 7

Reference between "MODE" and "TIME" for "TURN ON/OFF".

MODE	1	2	3	4	5	6	7
Time (sec.)	0.5	1	2	3	4	5	0

DATA MONITOR

Operation Procedure

1. Touch "INT LAMP" on "SELECT TEST ITEM" screen.
2. Touch "DATA MONITOR" on "SELECT DIAG MODE" screen.
3. Touch either "ALL SIGNALS" or "SELECTION FROM MENU" on "SELECT MONITOR ITEM" screen.

ALL SIGNALS	Monitors all the signals.
SELECTION FROM MENU	Selects and monitors the individual signal.

4. Touch "START".
5. When "SELECTION FROM MENU" is selected, touch items to be monitored. When "ALL SIGNALS" is selected, all the items will be monitored.
6. Touch "RECORD" while monitoring, then the status of the monitored item can be recorded. To stop recording, touch "STOP".

Display Item List

Monitor item	Contents
IGN ON SW	"ON/OFF" Displays "IGN position (ON)/OFF, ACC position (OFF)" judged from the ignition switch signal.
KEY ON SW	"ON/OFF" Displays "Key inserted (ON)/key removed (OFF)" status judged from the key switch signal.
DOOR SW-DR	"ON/OFF" Displays status of the driver door as judged from the driver door switch signal. (Door is open: ON/Door is closed: OFF)
DOOR SW-AS	"ON/OFF" Displays "Door open (ON)/Door closed (OFF)" status, determined from passenger door switch signal.
DOOR SW-RR	"ON/OFF" Displays "Door open (ON)/Door closed (OFF)" status, determined from rear door switch RH signal.
DOOR SW-RL	"ON/OFF" Displays "Door open (ON)/Door closed (OFF)" status, determined from rear door switch LH signal.
BACK DOOR SW	"ON/OFF" Displays "Door open (ON)/Door closed (OFF)" status, determined from back door switch signal.
KEY CYL LK-SW	"ON/OFF" Displays "Door locked (ON)" status, determined from key cylinder lock switch in driver door.
KEY CYL UN-SW	"ON/OFF" Displays "Door unlocked (OFF)" status, determined from key cylinder lock switch in driver door.
CDL LOCK SW	"ON/OFF" Displays "ON/OFF" condition of lock signal from lock/unlock switch.
CDL UNLOCK SW	"ON/OFF" Displays "ON/OFF" condition of unlock signal from lock/unlock switch.
KEYLESS LOCK	"ON/OFF" Displays "Locked (ON)/Other (OFF)" status, determined from lock signal.
KEYLESS UNLOCK	"ON/OFF" Displays "Unlocked (ON)/Other (OFF)" status, determined from unlock signal.

INTERIOR ROOM LAMP

ACTIVE TEST

Operation Procedure

1. Touch "INT LAMP" on "SELECT TEST ITEM" screen.
2. Touch "ACTIVE TEST" on "SELECT DIAG MODE" screen.
3. Touch item to be tested and check operation of the selected item.
4. During the operation check, touching "BACK" or "OFF" deactivates the operation.

Display Item List

Test item	Description
INT LAMP	Interior room lamp can be operated by ON-OFF operation.
IGN ILLUM	Ignition keyhole illumination can be operated by ON-OFF operation.
LUGGAGE LAMP TEST	Luggage lamp can be operated by ON-OFF operation.

Room/Map Lamp Does Not Turn ON or OFF Properly

EKS00ELU

MODELS WITHOUT POWER DOOR LOCKS

1. CHECK FRONT ROOM/MAP LAMP AND ROOM LAMP 2ND ROW FUSE

Check 10A fuse [No. 18, located in fuse block (J/B)].

OK or NG

- OK >> GO TO 2.
- NG >> Replace fuse. Check harness for short between fuse and front room/map lamp, room lamp 2nd row, cargo lamp or ignition keyhole illumination.

2. CHECK FRONT ROOM/MAP LAMP AND ROOM 2ND ROW LAMP SWITCH SIGNALS

1. Close all doors, turn ON front room/map lamp and room lamp 2nd row switches.

Front room/map lamp and room lamp 2nd row should turn on.

2. Turn off front room/map lamp and room lamp 2nd row switches.

Front room/map lamp and room lamp 2nd row should turn off.

OK or NG


- OK >> GO TO 3.
- NG >> Check the following.
 - Front room/map lamp and room lamp 2nd row switch
 - Front room/map lamp and room lamp 2nd row ground circuits
 - Check bulbs.

3. CHECK FRONT ROOM/MAP LAMP AND ROOM LAMP 2ND ROW POWER SUPPLY

Check continuity between front room/map lamp connector R9 terminal 1 and room lamp 2nd row connector R12 terminal 1.

OK or NG

- OK >> Check harness for open or short between front room/map lamp, room lamp 2nd row switches and front door switch LH, front door switch RH, rear door switch LH or rear door switch RH. Check diode 6 for open or short. IF OK, refer to [BL-84, "Diagnostic Procedure 1"](#) in VEHICLE SECURITY (THEFT WARNING) SYSTEM.
- NG >> Repair harness or connector.

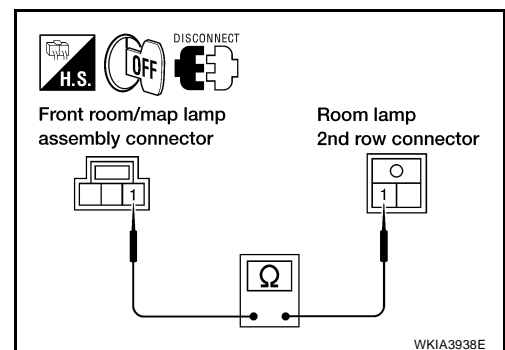

INTERIOR ROOM LAMP

4. CHECK INTERIOR ROOM LAMP BULB

Check interior room lamp bulb.

OK or NG

- OK >> GO TO 5.
- NG >> Replace bulb.

5. CHECK KEY SWITCH (INSERTED) AND IGNITION ON SIGNAL

1. Insert key into ignition key cylinder.
2. Open front door LH.

Warning chime should sound.

3. Turn ignition key to ON position.

Warning chime should stop sounding.

OK or NG

- OK >> Check harness for open or short between front room/map lamp, room lamp 2nd row switches and front door switch LH, front door switch RH, rear door switch LH or rear door switch RH.
- NG >> Refer to [DI-40, "WARNING CHIME"](#) .

Room/Map Lamp Control Does Not Operate MODELS WITH POWER DOOR LOCKS

EKS00H01

1. CHECK EACH SWITCH

Select "BCM" on CONSULT-II. With "INT LAMP" data monitor, make sure switches listed in display item list turn ON-OFF linked with switch operation. Refer to [LT-125, "Display Item List"](#) for switches and their functions.

OK or NG

- OK >> GO TO 2.
- NG >> Inspect malfunctioning switch system.

DATA MONITOR	
MONITOR	
IGN ON SW	ON
KEY ON SW	ON
DOOR SW-DR	ON
DOOR SW-AS	ON
DOOR SW-RR	OFF
DOOR SW-RL	OFF
BACK DOOR SW	OFF
KEY CYL LK-SW	OFF
KEY CYL UN-SW	OFF

SKIA5930E

2. ACTIVE TEST

1. Select "BCM" on CONSULT-II. Select "INT LAMP" active test.
2. When switch is in "DOOR" position, use active test to make sure interior room lamp operates.

Room lamps should turn on.

OK or NG

- OK >> Replace BCM. Refer to [BCS-26, "Removal and Installation of BCM"](#) .
- NG >> GO TO 3.

ACTIVE TEST	
INT LAMP	ON
	OFF

LKIA0092E

INTERIOR ROOM LAMP


3. CHECK INTERIOR ROOM LAMP INPUT

1. Turn ignition switch OFF.
2. Check voltage between front room/map lamp assembly harness connector R9 terminal 1 and ground.

1 - Ground : Battery voltage should exist.

OK or NG

- OK >> GO TO 4.
NG >> GO TO 5.

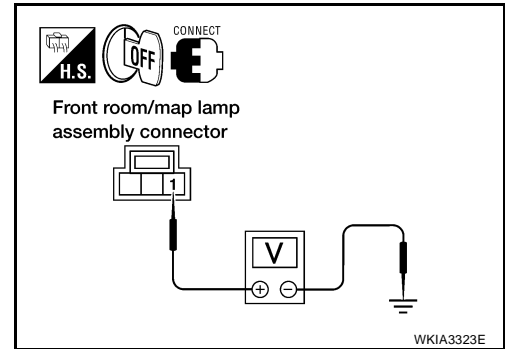


4. CHECK INTERIOR ROOM LAMP CIRCUIT

1. Disconnect BCM connector.
2. Check continuity between BCM harness connector M20 terminal 63 and front room/map lamp assembly harness connector R9 terminal 2.

63 - 2 : Continuity should exist.

OK or NG

- OK >> Replace BCM if interior lamp does not work after setting the connector again. Refer to [BCS-26, "Removal and Installation of BCM"](#) .
- NG >> Repair harness or connector.

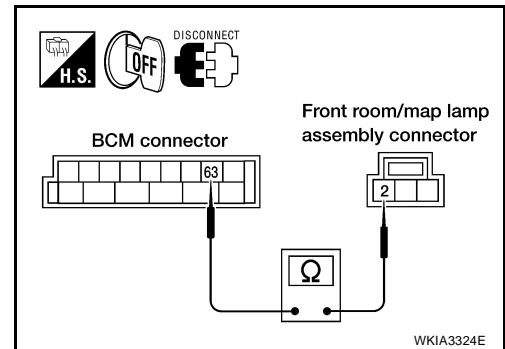


5. CHECK INTERIOR ROOM LAMP CIRCUIT

1. Disconnect BCM connector and front room/map lamp assembly connector.
2. Check continuity between BCM harness connector M20 terminal 56 and front room/map lamp assembly harness connector R9 terminal 1.

56 - 1 : Continuity should exist.

OK or NG

- OK >> Replace BCM if interior lamp does not work after setting the connector again. Refer to [BCS-26, "Removal and Installation of BCM"](#) .
- NG >> Repair harness or connector between BCM and room/map lamp.

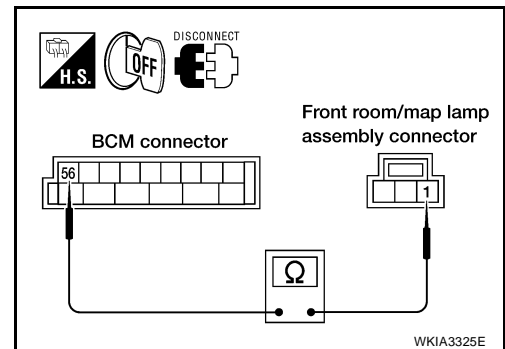

INTERIOR ROOM LAMP

EKS00HOJ

Room Lamp 2nd Row Control Does Not Operate

MODELS WITH POWER DOOR LOCKS

1. CHECK EACH DOOR SWITCH

Select "BCM" on CONSULT-II. With "INT LAMP" data monitor, make sure switches listed in display item list turn ON-OFF linked with switch operation. Refer to [LT-107, "Switch Operation"](#) (models without power door locks) or [LT-109, "Switch Operation"](#) (models with power door locks) for switches and their function.

OK or NG

- OK >> GO TO 2.
- NG >> Inspect malfunctioning door switch.

DATA MONITOR	
MONITOR	
IGN ON SW	ON
KEY ON SW	ON
DOOR SW-DR	ON
DOOR SW-AS	ON
DOOR SW-RR	OFF
DOOR SW-RL	OFF
BACK DOOR SW	OFF
KEY CYL LK-SW	OFF
KEY CYL UN-SW	OFF

SKIA5930E


2. CHECK ROOM LAMP 2ND ROW OUTPUT

1. Turn ignition switch OFF.
2. Confirm lamp switch is in the "DOOR" position.
3. Disconnect room lamp 2nd row connector.
4. Open any door.
5. Check voltage between room lamp 2nd row harness connector R12 terminal 2 and ground.

2 - Ground : Battery voltage should exist.

OK or NG

- OK >> GO TO 3.
- NG >> Repair harness or connector.

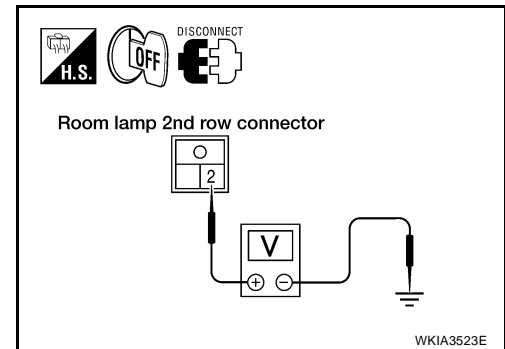


3. CHECK PERSONAL LAMP CONTROL CIRCUIT

1. Disconnect BCM connector M20.
2. Check continuity between BCM harness connector M20 terminal 63 and room lamp 2nd row harness connector R12 terminal 1.

63 - 1 : Continuity should exist.

OK or NG

- OK >> Replace room lamp 2nd row.
- NG >> Repair harness or connector.

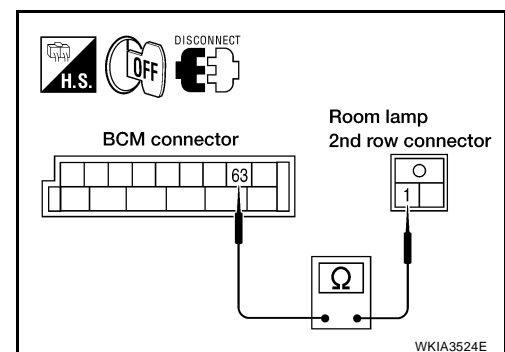

INTERIOR ROOM LAMP

All Interior Room Lamps Do Not Operate

EKS00HOK

MODELS WITH POWER DOOR LOCKS


1. CHECK POWER SUPPLY CIRCUIT

1. All interior room lamp switches are OFF.
2. Turn ignition switch ON.
3. Check voltage between BCM harness connector M20 terminal 56 and ground.

56 - Ground : Battery voltage should exist.

OK or NG

- OK >> Repair harness or connector. To prevent making a short circuit, be sure to disconnect battery negative cable after repairing harness, and then reconnect.
- NG >> Replace BCM. Refer to [BCS-26, "Removal and Installation of BCM"](#).

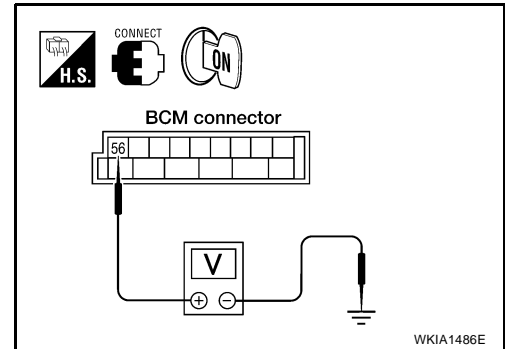

Ignition Keyhole Illumination Control Does Not Operate

EKS00HOL

MODELS WITH POWER DOOR LOCKS

1. CHECK EACH SWITCH

Select "BCM" on CONSULT-II. With "INT LAMP" data monitor, make sure switches listed in display item list turn ON-OFF linked with switch operation. Refer to [LT-124, "Display Item List"](#) for switches and their functions.

OK or NG

- OK >> GO TO 2.
- NG >> Inspect malfunctioning switch system.

DATA MONITOR	
MONITOR	
IGN ON SW	ON
KEY ON SW	ON
DOOR SW-DR	ON
DOOR SW-AS	ON
DOOR SW-RR	OFF
DOOR SW-RL	OFF
BACK DOOR SW	OFF
KEY CYL LK-SW	OFF
KEY CYL UN-SW	OFF

SKIA5930E

2. ACTIVE TEST

1. Select "BCM" on CONSULT-II. Select "INT LAMP".
2. Select "IGN ILLUM" active test to make sure lamp operates.

OK or NG

- OK >> Replace BCM. Refer to [BCS-26, "Removal and Installation of BCM"](#).
- NG >> GO TO 3.

ACTIVE TEST	
IGN ILLUM	ON
	OFF

SKIA3992E

INTERIOR ROOM LAMP


3. CHECK IGNITION KEYHOLE ILLUMINATION POWER SUPPLY INPUT

1. Check voltage between ignition keyhole illumination harness connector M150 terminal 1 and ground.

A		(-)	Voltage (Approx.)
(+)			
Ignition keyhole illumination connector	Terminal		
M150	1	Ground	Battery voltage

OK or NG

- OK >> GO TO 4.
- NG >> GO TO 6.

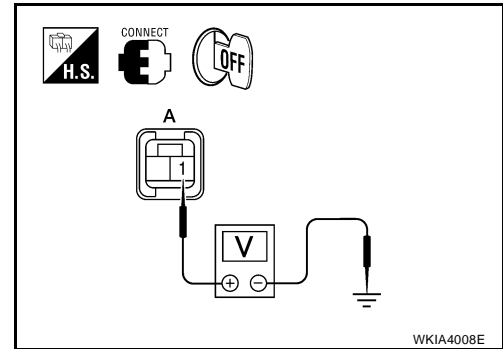


4. CHECK IGNITION KEYHOLE ILLUMINATION BULB

1. Turn ignition switch OFF.
2. Disconnect ignition keyhole illumination connector.
3. Check continuity between ignition keyhole illumination terminals 1 and 2.

Ignition keyhole illumination		Continuity
Terminals		
1	2	Yes

OK or NG

- OK >> GO TO 5.
- NG >> Replace ignition keyhole illumination bulb.

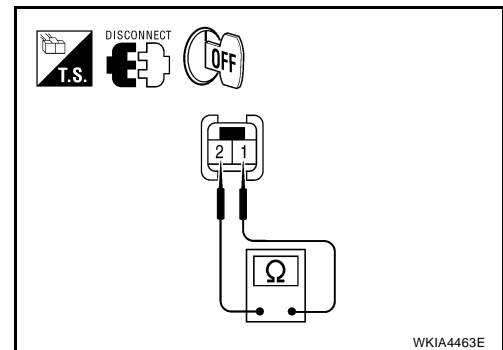


5. CHECK IGNITION KEYHOLE ILLUMINATION CONTROL CIRCUIT

1. Disconnect BCM connector.
2. Check continuity between BCM harness connector M18 terminal 1 and ignition keyhole illumination harness connector M150 terminal 2.

A		B		Continuity
BCM connector	Terminal	Ignition keyhole illumination connector	Terminal	
M18	1	M150	2	Yes

OK or NG

- OK >> Replace BCM if ignition keyhole illumination does not work after setting the connector again. Refer to [BCS-26. "Removal and Installation of BCM"](#).
- NG >> Repair harness or connector.

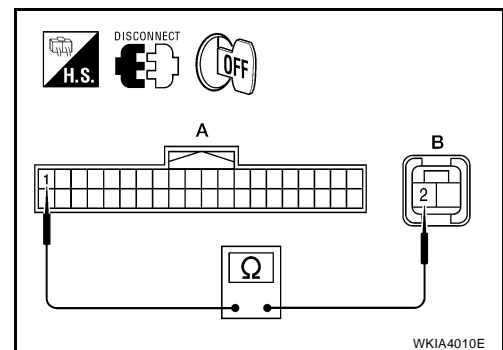


INTERIOR ROOM LAMP

6. CHECK IGNITION KEYHOLE ILLUMINATION POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connector and ignition keyhole illumination connector.
3. Check continuity between BCM harness connector M20 terminal 56 and ignition keyhole illumination harness connector M150 terminal 1.

A		B		Continuity
BCM connector	Terminal	Ignition keyhole illumination connector	Terminal	
M20	56	M150	1	Yes

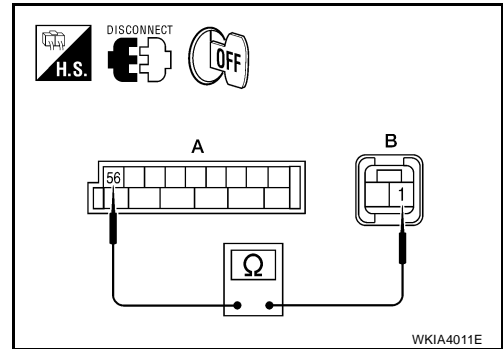

OK or NG

- OK >> Replace BCM if ignition keyhole illumination does not work after setting the connector again. Refer to [BCS-26, "Removal and Installation of BCM"](#).
- NG >> Repair harness or connector.

Cargo Lamp Control Does Not Operate With Switch In DOOR Position

EKS00HOM

MODELS WITH POWER DOOR LOCKS

1. CHECK EACH SWITCH

Select "BCM" on CONSULT-II. With "INT LAMP" data monitor, make sure switches listed in display item list turn ON-OFF linked with switch operation. Refer to [LT-124, "Display Item List"](#) for switches and their functions.

OK or NG

- OK >> GO TO 2.
- NG >> Inspect malfunctioning switch system.

DATA MONITOR	
MONITOR	
IGN ON SW	ON
KEY ON SW	ON
DOOR SW-DR	ON
DOOR SW-AS	ON
DOOR SW-RR	OFF
DOOR SW-RL	OFF
BACK DOOR SW	OFF
KEY CYL LK-SW	OFF
KEY CYL UN-SW	OFF

SKIA5930E

2. ACTIVE TEST

1. Select "BCM" on CONSULT-II. Select "INT LAMP".
2. Select "LUGGAGE LAMP TEST" active test to make sure lamp operates.

OK or NG

- OK >> Replace BCM. Refer to [BCS-26, "Removal and Installation of BCM"](#).
- NG >> GO TO 3.

ACTIVE TEST	
LUGGAGE LAMP TEST	ON
OFF	

WKIA4012E

INTERIOR ROOM LAMP


3. CHECK CARGO LAMP POWER SUPPLY INPUT

1. Check voltage between cargo lamp harness connector R11 terminal 2 and ground.

Terminals		(-)	Voltage (Approx.)
(+)			
Cargo lamp connector	Terminal No.		
R11	2	Ground	Battery voltage

OK or NG

- OK >> GO TO 4.
 NG >> GO TO 6.

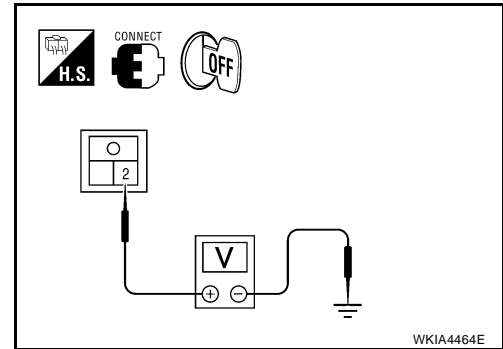


4. CHECK CARGO LAMP

1. Turn ignition switch OFF.
2. **NOTE:**
Make sure cargo lamp operates with cargo lamp switch in ON position.
 Disconnect cargo lamp connector.
3. Check continuity between cargo lamp terminals 1 and 2.

A		Continuity
Cargo lamp terminal		
1	2	Yes

OK or NG

- OK >> GO TO 5.
 NG >> Replace cargo lamp.

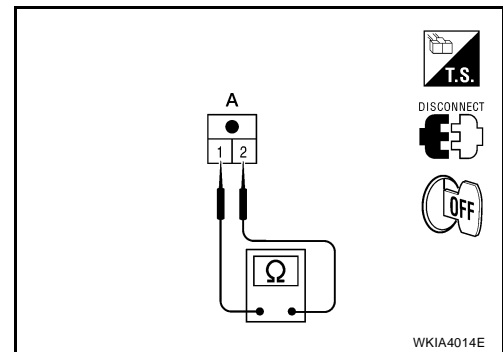


5. CHECK CARGO LAMP CONTROL CIRCUIT

1. Disconnect BCM connector.
2. Check continuity between BCM harness connector M19 terminal 49 and cargo lamp harness connector R11 terminal 1.

A		B		Continuity
BCM connector	Terminal	Cargo lamp connector	Terminal	
M19	49	R11	1	Yes

OK or NG

- OK >> Replace BCM if cargo lamp does not work after setting the connector again. Refer to [BCS-26, "Removal and Installation of BCM"](#) .
 NG >> Repair harness or connector.

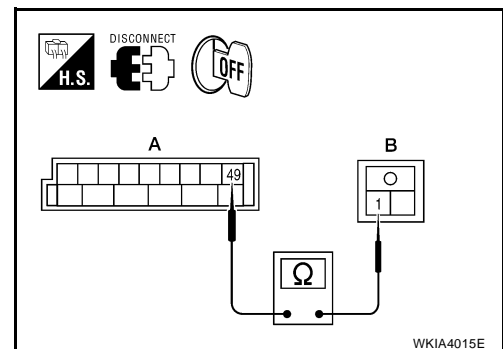

INTERIOR ROOM LAMP


6. CHECK CARGO LAMP POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connector and cargo lamp connector.
3. Check continuity between BCM harness connector M20 terminal 56 and cargo lamp harness connector R11 terminal 2.

A		B		Continuity
BCM connector	Terminal	Cargo lamp connector	Terminal	
M20	56	R11	2	Yes

OK or NG

- OK >> Replace BCM if cargo lamp does not work after setting the connector again. Refer to [BCS-26, "Removal and Installation of BCM"](#).
- NG >> Repair harness or connector.

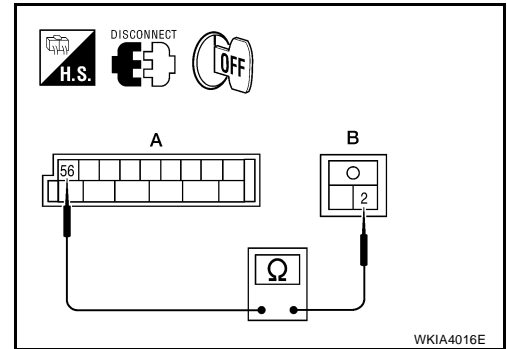

A
B
C
D
E
F
G
H
I
J
LT
L
M


ILLUMINATION

ILLUMINATION

PFP:27545

Component Parts and Harness Connector Location

EKS00HNX

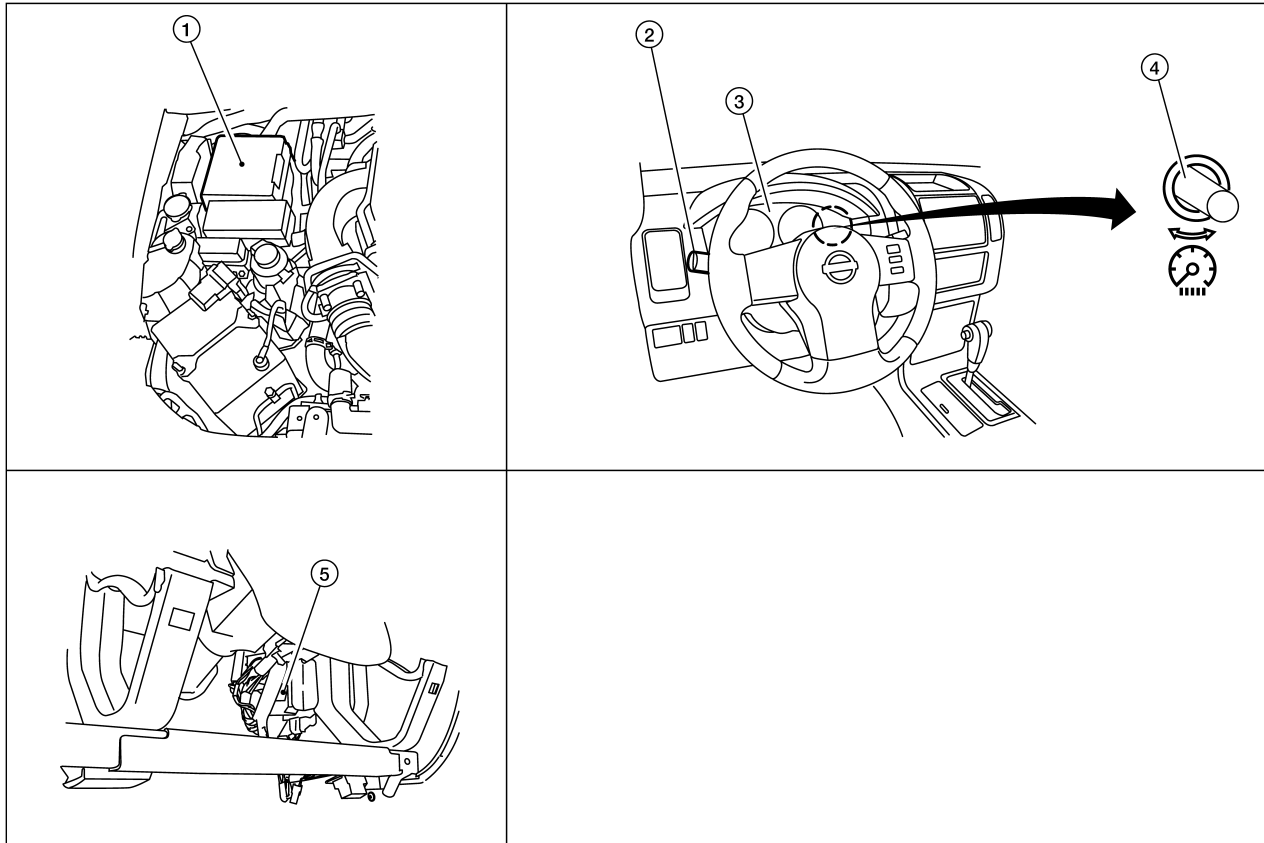

WKIA5029E

- | | | |
|--|---|-----------------------------|
| 1. IPDM E/R
E122, E123, E124 | 2. Combination switch (lighting switch)
M28 | 3. Combination meter
M24 |
| 4. Illumination control switch
(built into combination meter) | 5. BCM
M18, M20
(view with instrument lower panel LH removed) | |

System Description

EKS00ELZ

Control of the illumination lamps operation is dependent upon the position of the lighting switch (combination switch). When the lighting switch is placed in the 1ST or 2ND position (or if the auto light system is activated) the BCM (body control module) receives input signal requesting the illumination lamps to illuminate. This input signal is communicated to the IPDM E/R (intelligent power distribution module engine room) across the CAN communication lines. The CPU (central processing unit) of the IPDM E/R controls the tail lamp relay coil. This relay, when energized, directs power to the illumination lamps, which then illuminate. Power is supplied at all times

- to ignition relay, located in the IPDM E/R, and
- to tail lamp relay, located in the IPDM E/R, and
- through 50A fusible link (letter **g**, located in the fuse and fusible link box)
- to BCM terminal 70, and
- through 10A fuse [No. 18, located in the fuse block (J/B)]
- to BCM terminal 57, and
- through 20A fuse (No. 52 and 53, located in the IPDM E/R)
- to CPU of the IPDM E/R, and
- through 10A fuse [No.19, located in fuse block (J/B)]
- to combination meter terminal 3.

With the ignition switch in the ACC or ON position, power is supplied

- through 10A fuse [No. 4, located in the fuse block (J/B)]

ILLUMINATION

- to BCM terminal 11.

With the ignition switch in the ON or START position, power is supplied

- to ignition relay, located in the IPDM E/R, and
- through 10A fuse [No. 1, located in the fuse block (J/B)]
- to BCM terminal 38.

Ground is supplied

- to BCM terminal 67 and
- to combination meter terminal 13 and 23
- through grounds M57, M61 and M79, and
- to IPDM E/R terminals 38 and 59
- through grounds E9, E15 and E24.

ILLUMINATION OPERATION BY LIGHTING SWITCH

With the lighting switch in the 1ST or 2ND position (or if the auto light system is activated), the BCM receives input signal requesting the illumination lamps to illuminate. This input signal is communicated to the IPDM E/R across the CAN communication lines. The CPU of the IPDM E/R controls the tail lamp relay coil, which, when energized, directs power

- through 10A fuse (No. 37, located in the IPDM E/R)
- through IPDM E/R terminal 57
- to hazard switch terminal 3
- to audio unit terminal 8
- to differential lock switch terminal 4 (with electronic locking rear differential)
- to 4WD shift switch terminal 7 (with 4-wheel drive)
- to front air control terminal 8
- to clutch interlock cancel switch terminal 5 (with clutch interlock cancel switch)
- to door mirror remote control switch terminal 16 (with power outside mirrors)
- to electric brake (pre-wiring) terminal 4 (with trailer tow)
- to A/T device terminal 3 (with A/T)
- to VDC OFF switch terminal 3
- to HDC switch terminal 5 (with hill descent control and hill start assist).

The BCM directs power

- through BCM terminal 68
- to main power window and door lock/unlock switch terminal 5,
- to power window and door lock/unlock switch RH terminal 8,
- to rear power window switch LH terminal 8,
- to rear power window switch RH terminal 8.

Illumination is controlled

- through combination meter terminal 22
- to hazard switch terminal 4
- to audio unit terminal 7
- to differential lock switch terminal 5 (with electronic locking rear differential)
- to 4WD switch terminal 8 (with 4-wheel drive)
- to front air control terminal 9
- to clutch interlock cancel switch terminal 6 (with clutch interlock cancel switch)
- to door mirror remote control switch terminal 15 (with power outside mirrors)
- to A/T device terminal 5 (with A/T)
- to VDC OFF switch terminal 4
- to HDC switch terminal 6 (with hill descent control and hill start assist).

Ground is supplied

- to electric brake (pre-wiring) terminal 1,

A
B
C
D
E
F
G
H
I
J
LT
L
M

ILLUMINATION

- to main power window and door lock/unlock switch terminal 14,
- to power window and door lock/unlock switch RH terminal 3
- through grounds M57, M61 and M79,
- to rear power window switch LH terminal 2
- through grounds B7 and B19,
- to rear power window switch RH terminal 2
- through grounds B117 and B132.

With power and ground supplied, illumination lamps illuminate.

EXTERIOR LAMP BATTERY SAVER CONTROL

When the combination switch (lighting switch) is in the 1ST or 2ND position (or if auto light system is activated), and the ignition switch is turned from ON or ACC to OFF, the battery saver control function is activated. Under this condition, the illumination lamps remain illuminated for 5 minutes, then the illumination lamps are turned off.

When the lighting switch is turned from OFF to 1ST or 2ND position (or if auto light system is activated) after illumination lamps are turned off by the battery saver control, the illumination lamps illuminate again. Exterior lamp battery saver control mode can be changed by the function setting of CONSULT-II.

CAN Communication System Description


EKS00EM0

Refer to [LAN-21, "CAN COMMUNICATION"](#) .

ILLUMINATION

Schematic


EKS00EM1

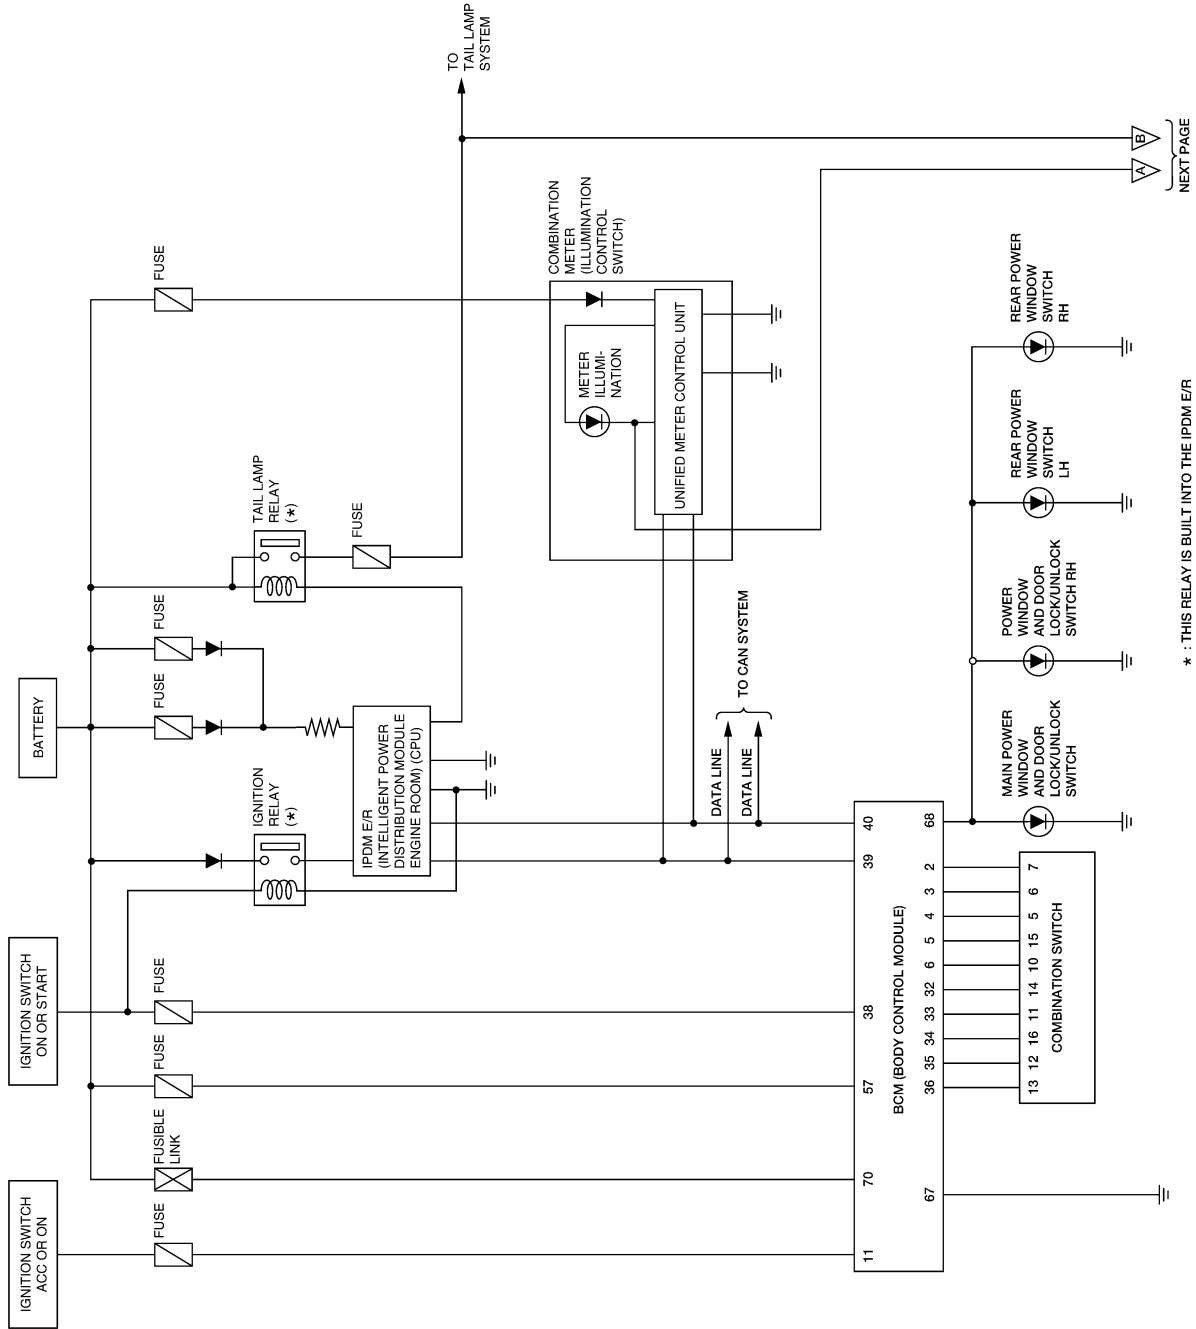

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P
Q
R
S
T
U
V
W
X
Y
Z

LT

ILLUMINATION

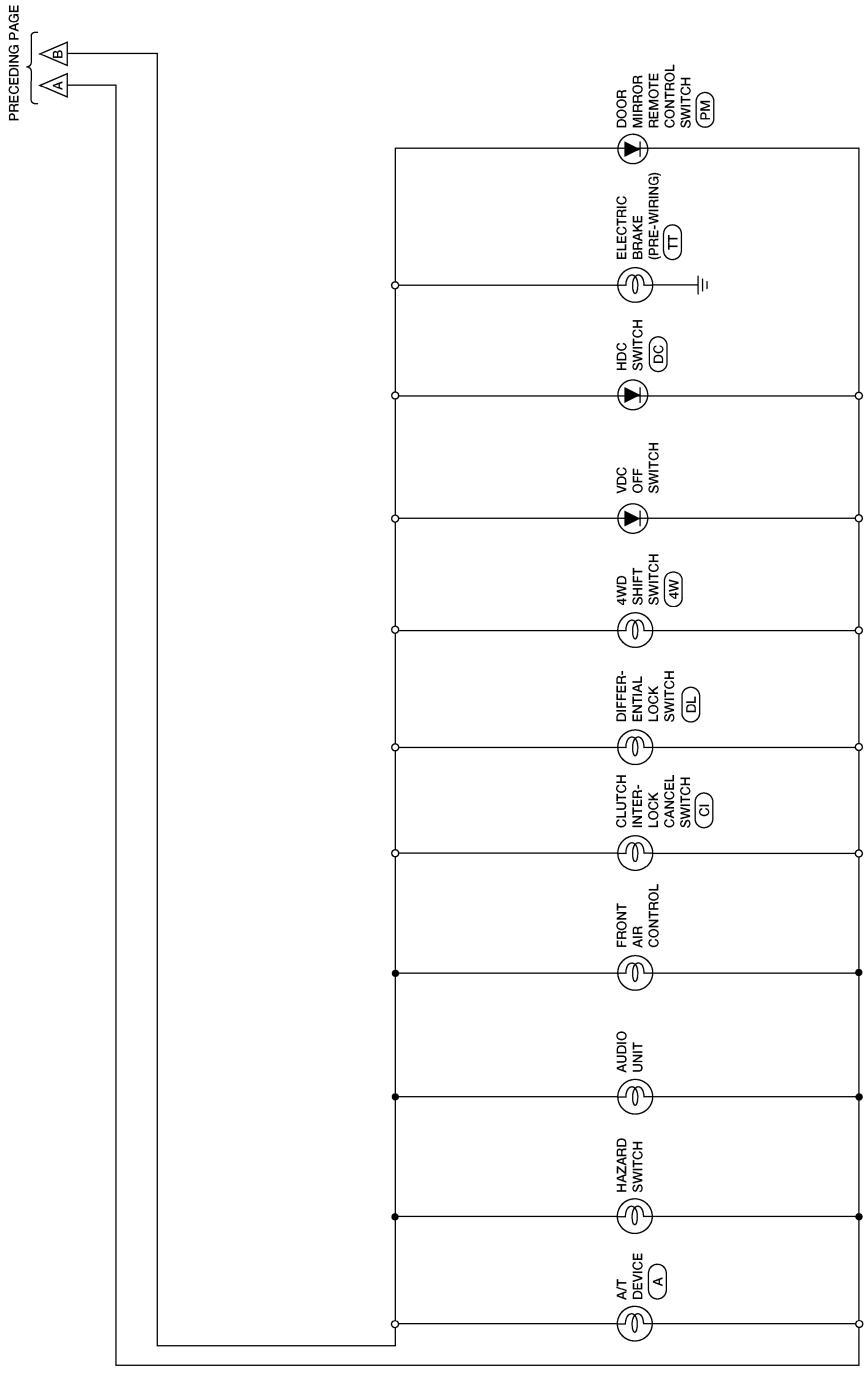

- (A) : WITH A/T
- (4W) : WITH 4-WHEEL DRIVE
- (CI) : WITH CLUTCH INTERLOCK CANCEL SWITCH
- (DC) : WITH HILL DESCENT CONTROL AND HILL START ASSIST
- (DL) : WITH ELECTRONIC LOCKING REAR DIFFERENTIAL
- (PM) : WITH POWER OUTSIDE MIRRORS
- (TT) : WITH TRAILER TOW



WKWA4443E

ILLUMINATION

Wiring Diagram — ILL —

EKS00EM2



LT-ILL-01

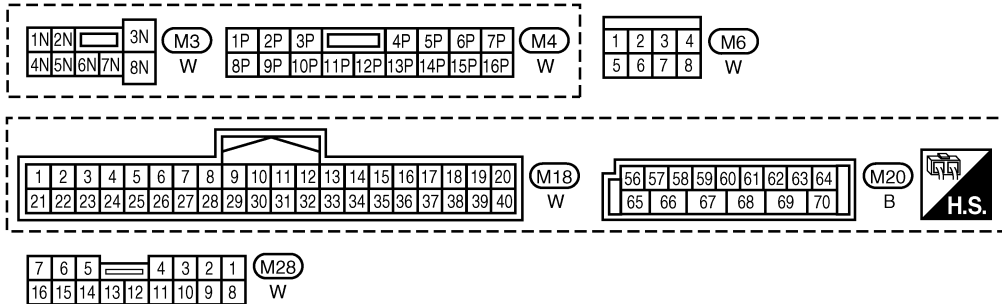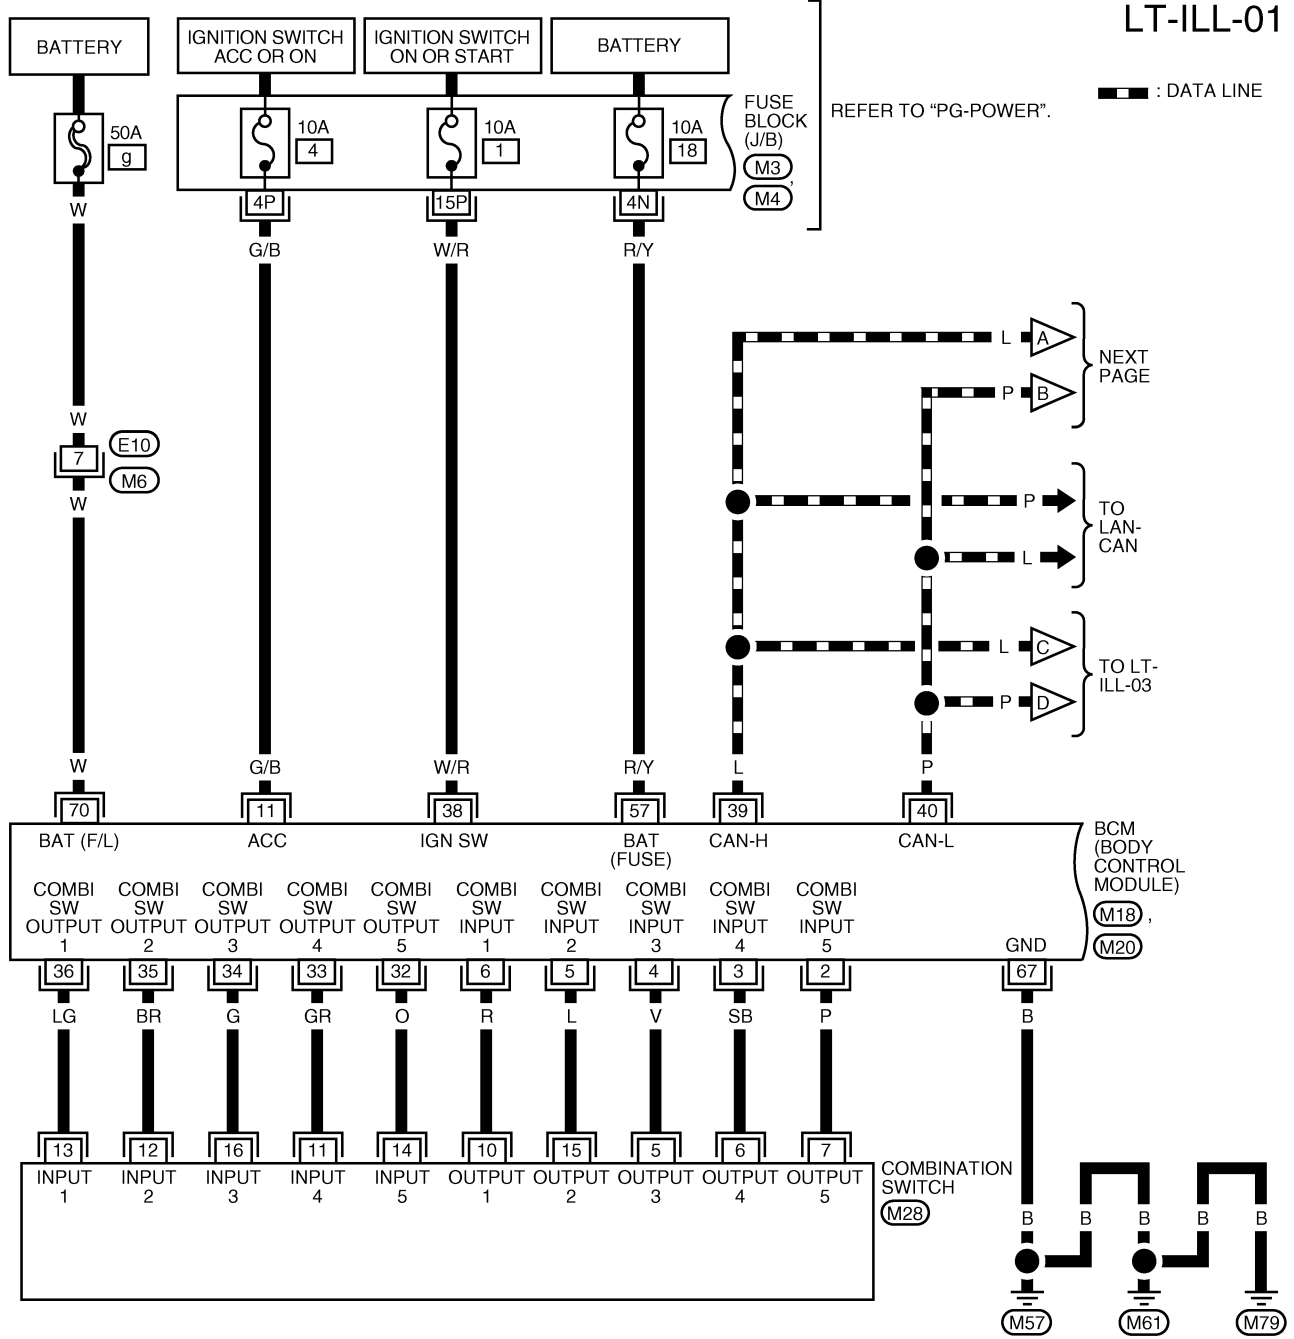

WKWA4633E

ILLUMINATION

 
LT-ILL-02

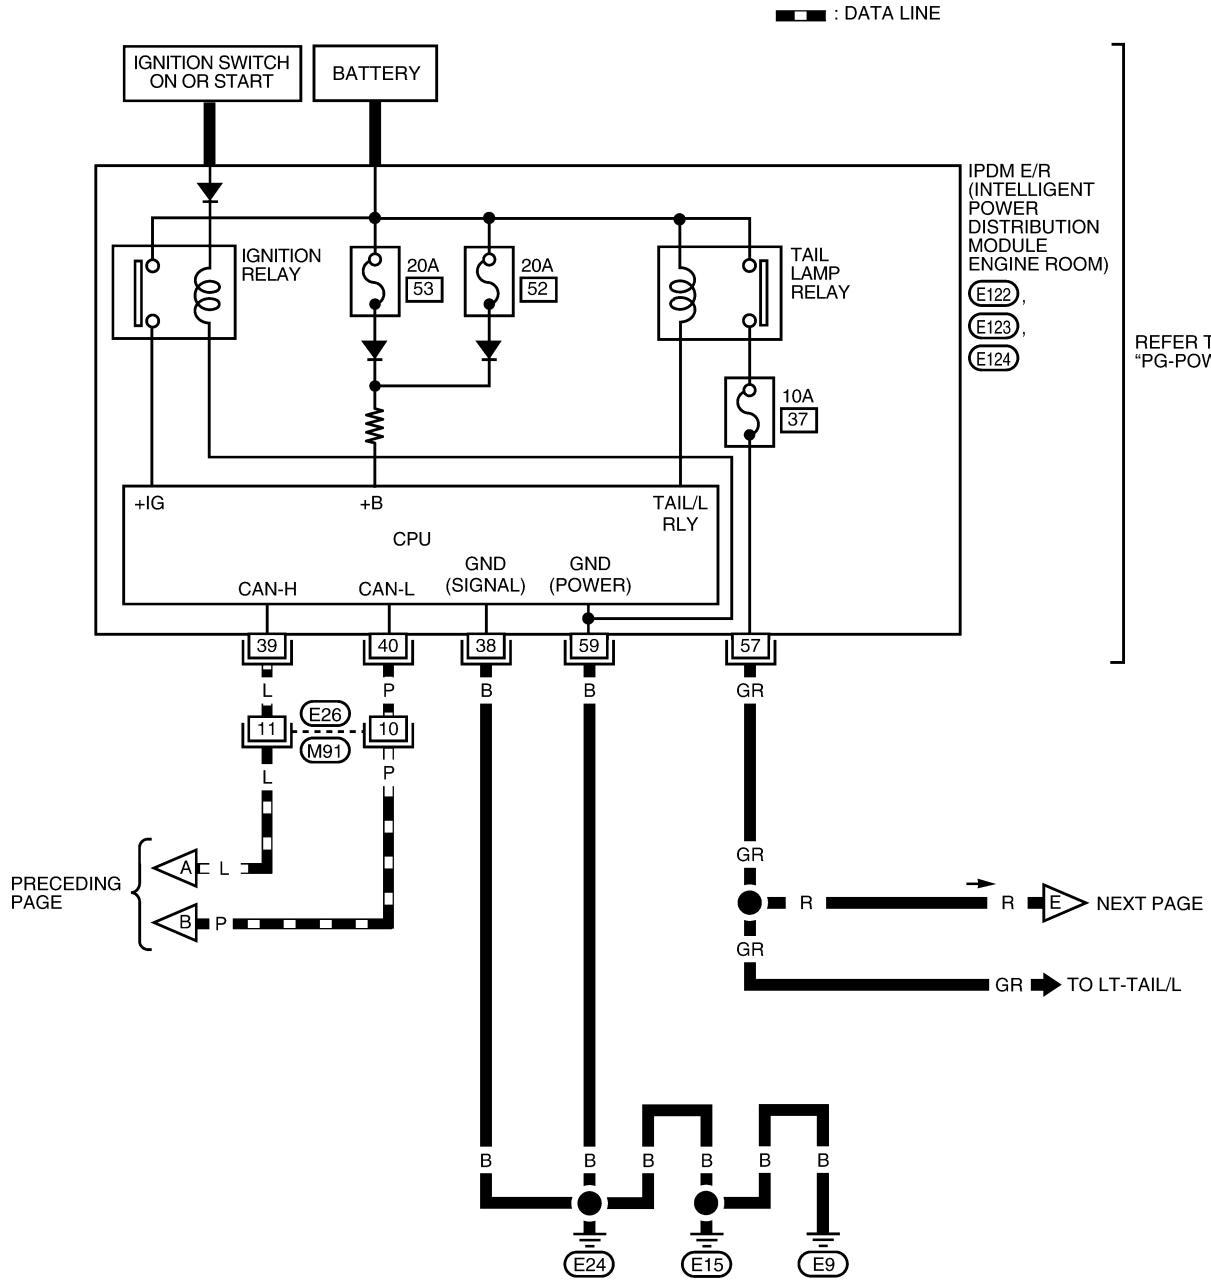

WKWA5960E

ILLUMINATION

LT-ILL-03

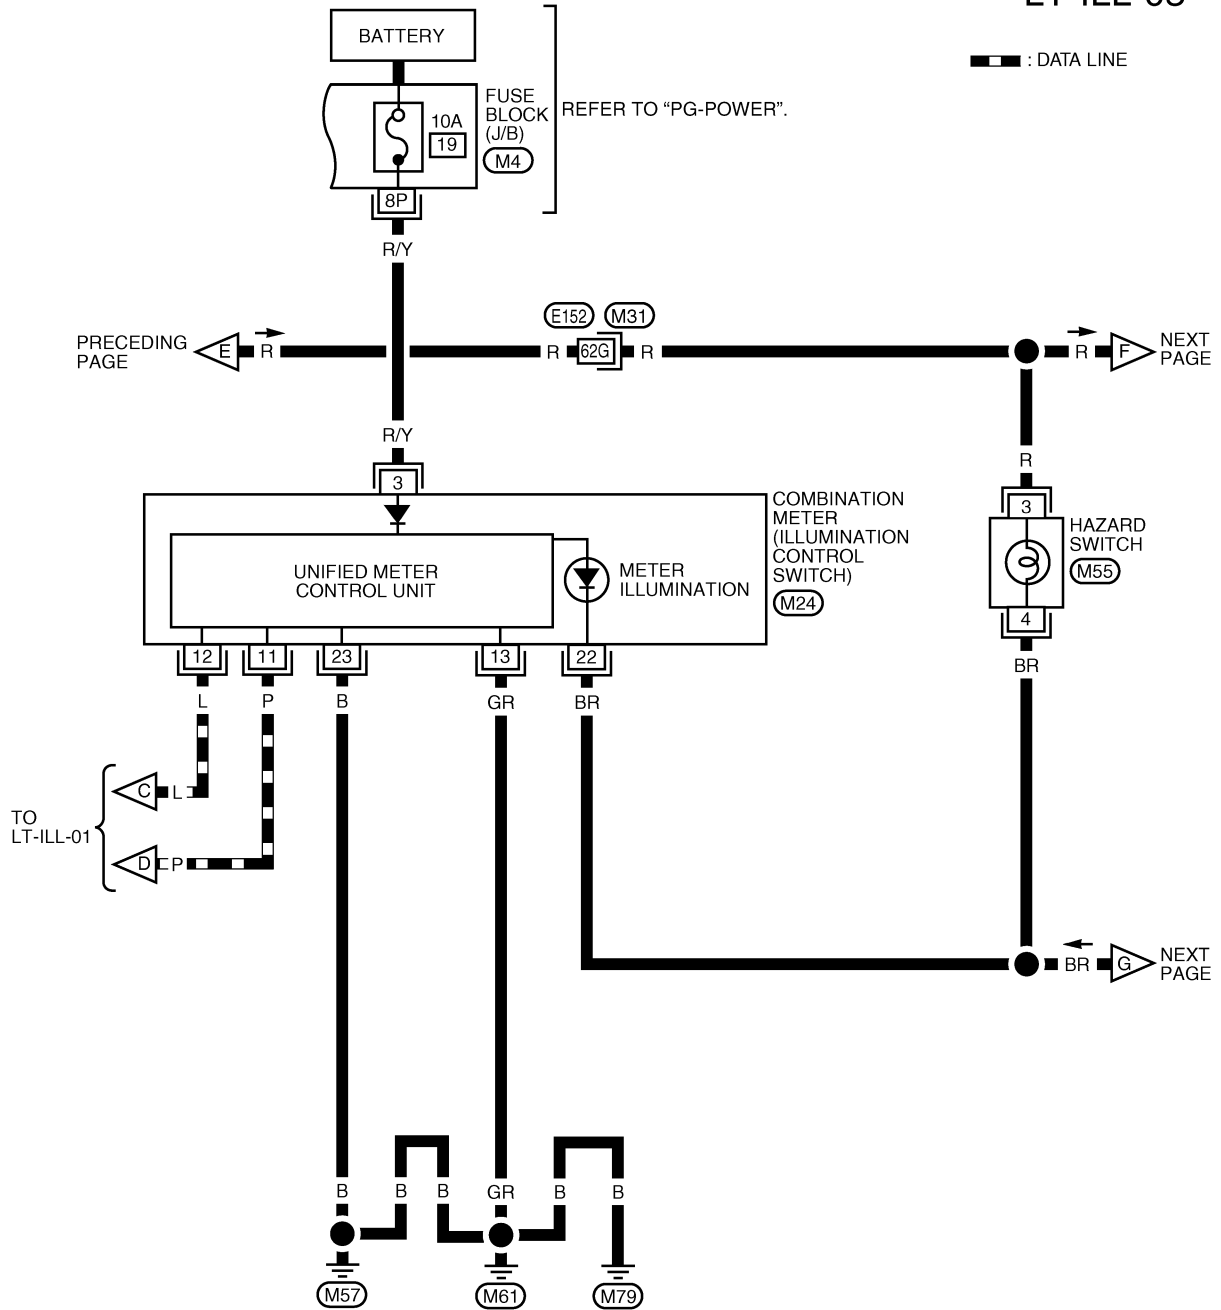

A
B
C
D
E
F
G
H
I
J
LT
L
M

1P	2P	3P	4P	5P	6P	7P	(M4)		
8P	9P	10P	11P	12P	13P	14P	15P	16P	W

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	(M24)
21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	W

4	2	1	3	(M55)
				W



REFER TO THE FOLLOWING.
(M31) - SUPER MULTIPLE JUNCTION (SMJ)

WKWA4445E

ILLUMINATION

LT-ILL-04

 
 : WITH ELECTRONIC LOCKING REAR DIFFERENTIAL

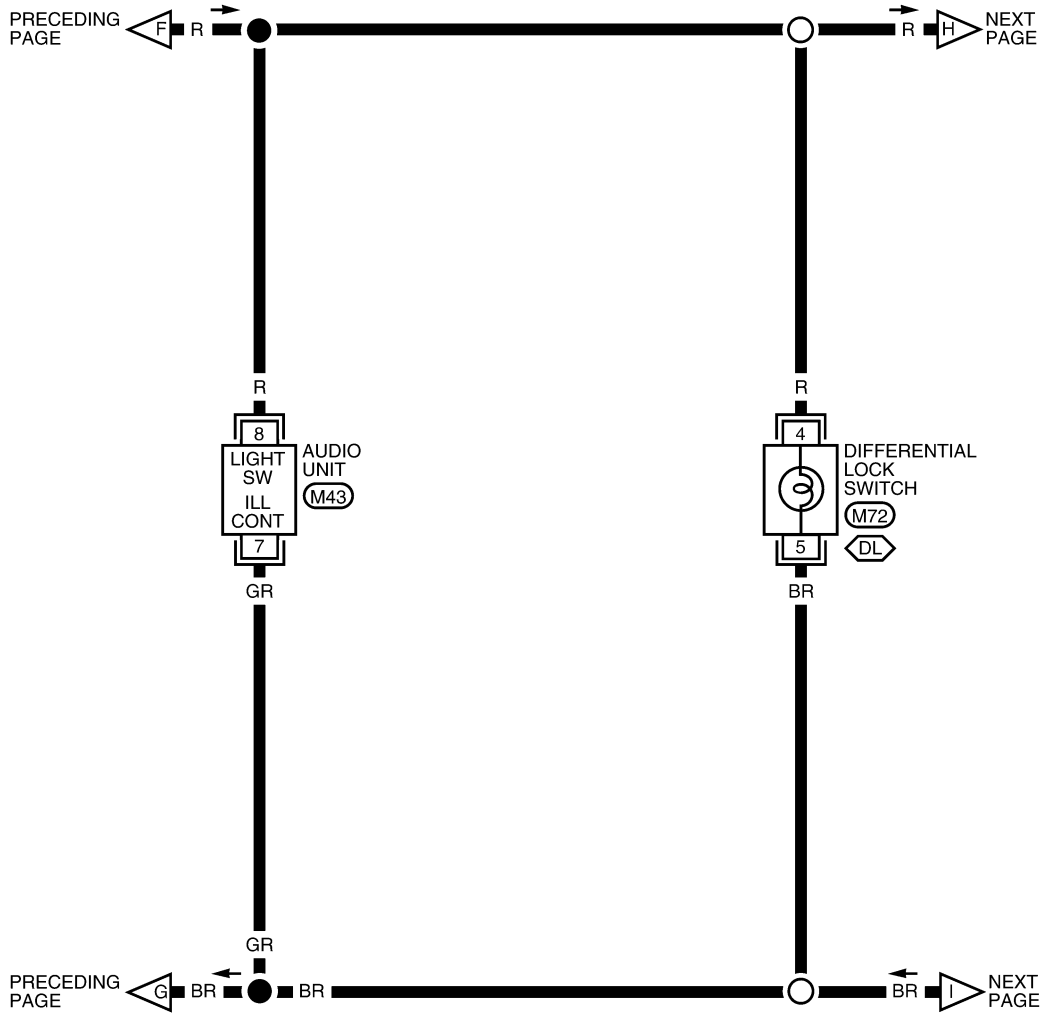


WKWA3505E




ILLUMINATION

LT-ILL-05

    : WITH 4-WHEEL DRIVE

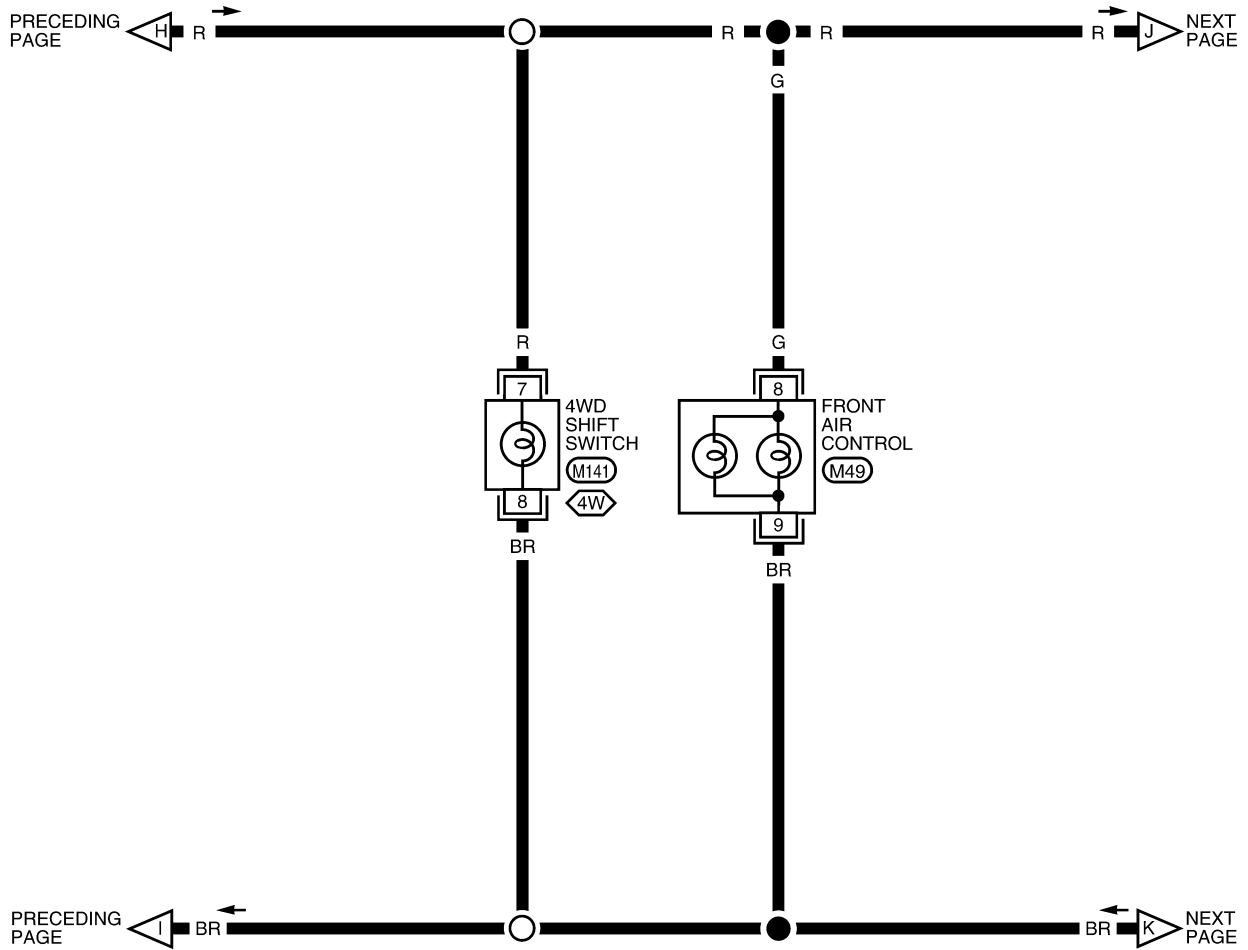




A
B
C
D
E
F
G
H
I
J
K
LT
L
M





1	2	3	4	5	6	7	8	9	10	11	12	13	 B		 GR					
14	15	16	17	18	19	20	21	22	23	24	25	26				8	7	6	5	4

WKWA3506E

ILLUMINATION

LT-ILL-06

   -  : TRAILER TOW 7 PIN
-  : WITH CLUTCH INTERLOCK CANCEL SWITCH
-  : WITH POWER OUTSIDE MIRRORS

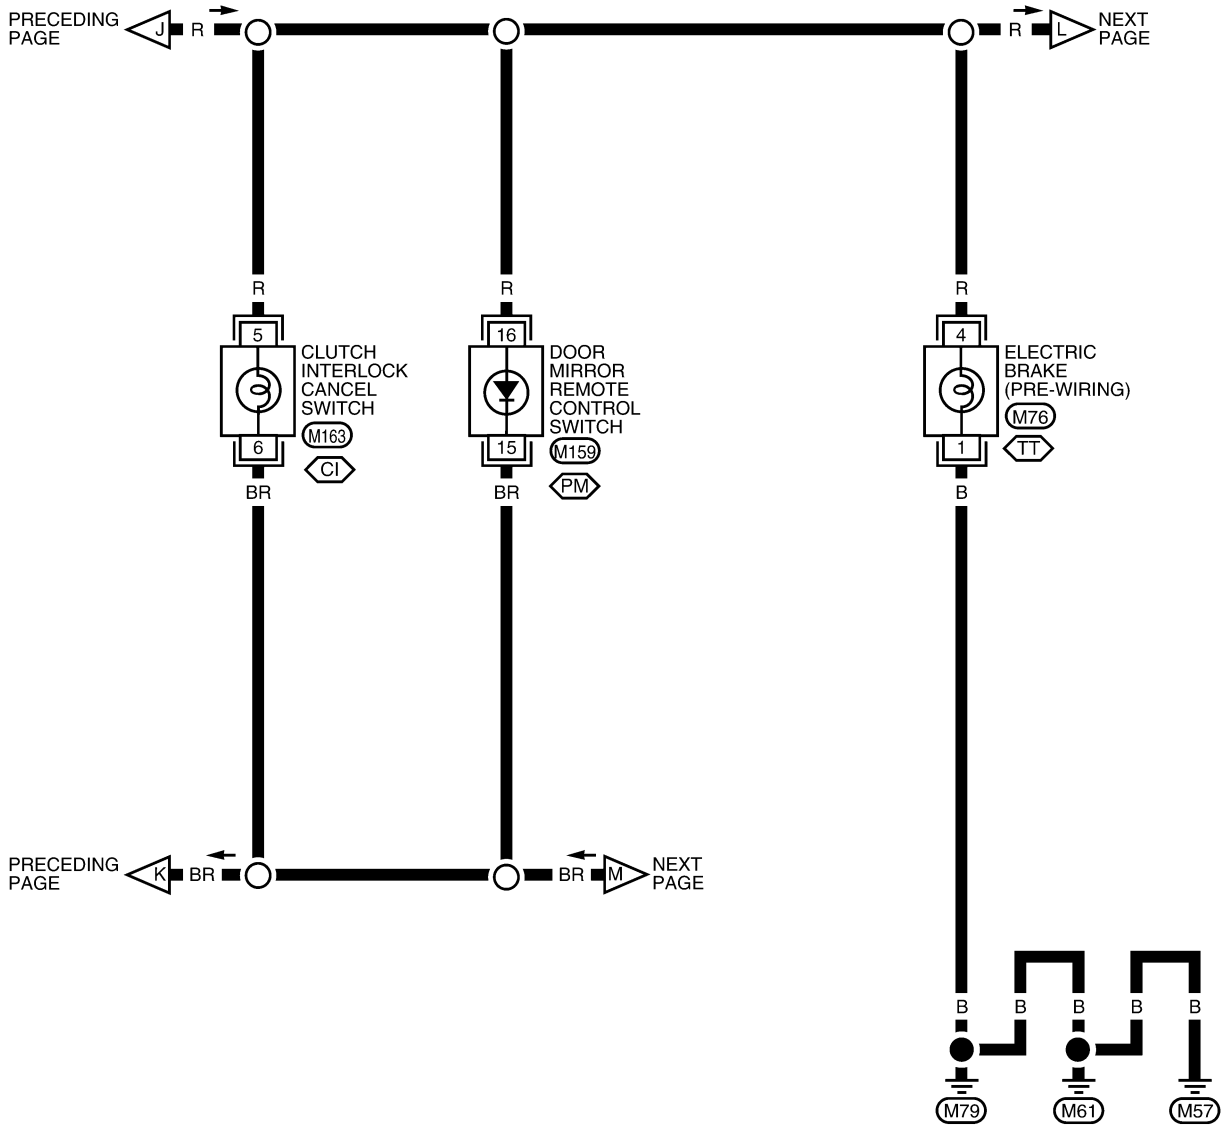


WKWA3507E


ILLUMINATION

LT-ILL-07

⬡A⬡ : WITH A/T
 ⬡DC⬡ : WITH HILL DESCENT CONTROL AND HILL START ASSIST

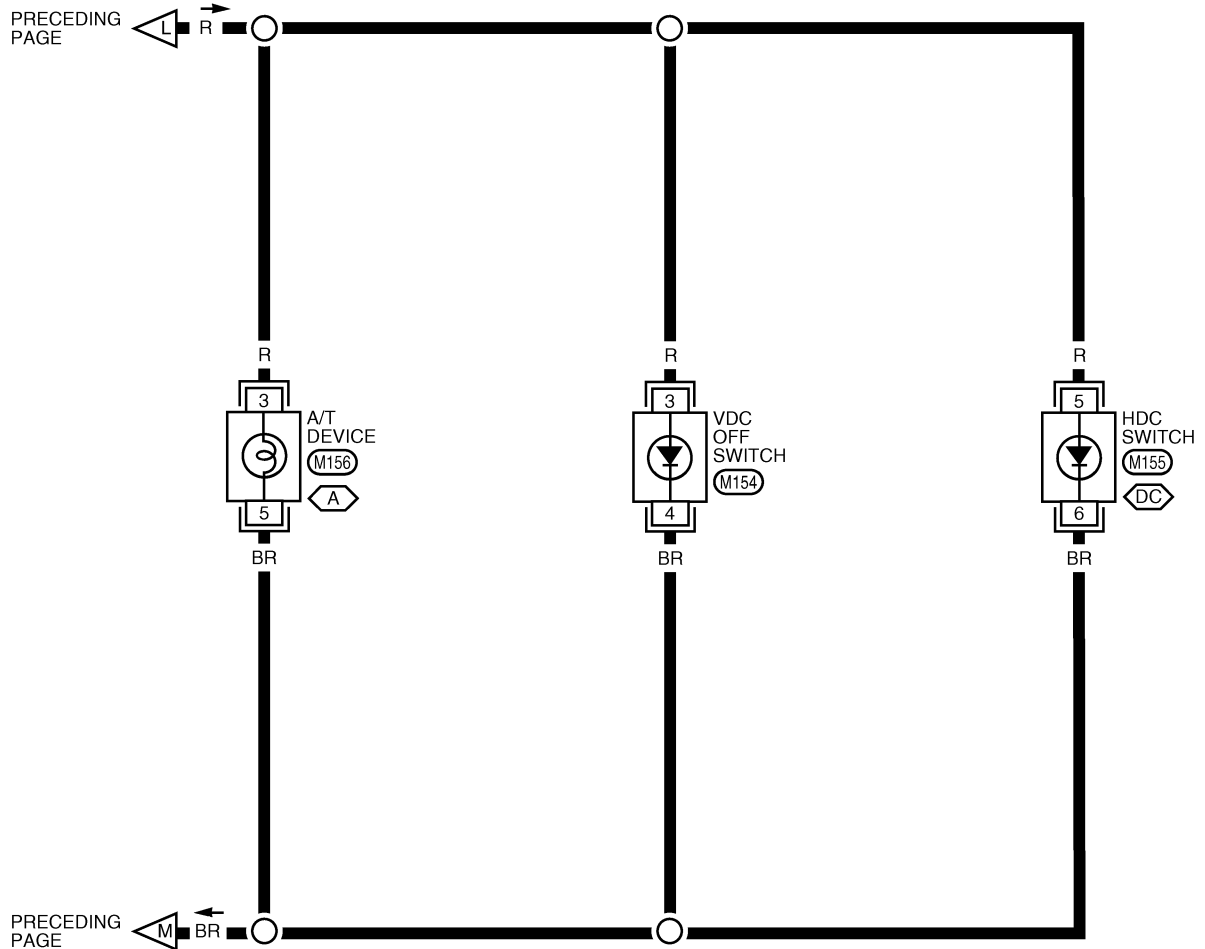

A
B
C
D
E
F
G
H
I
J
LT
L
M


 



WKWA4446E

ILLUMINATION

LT-ILL-08

  : WITH POWER WINDOWS

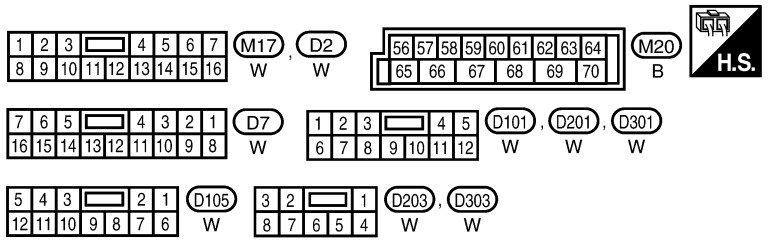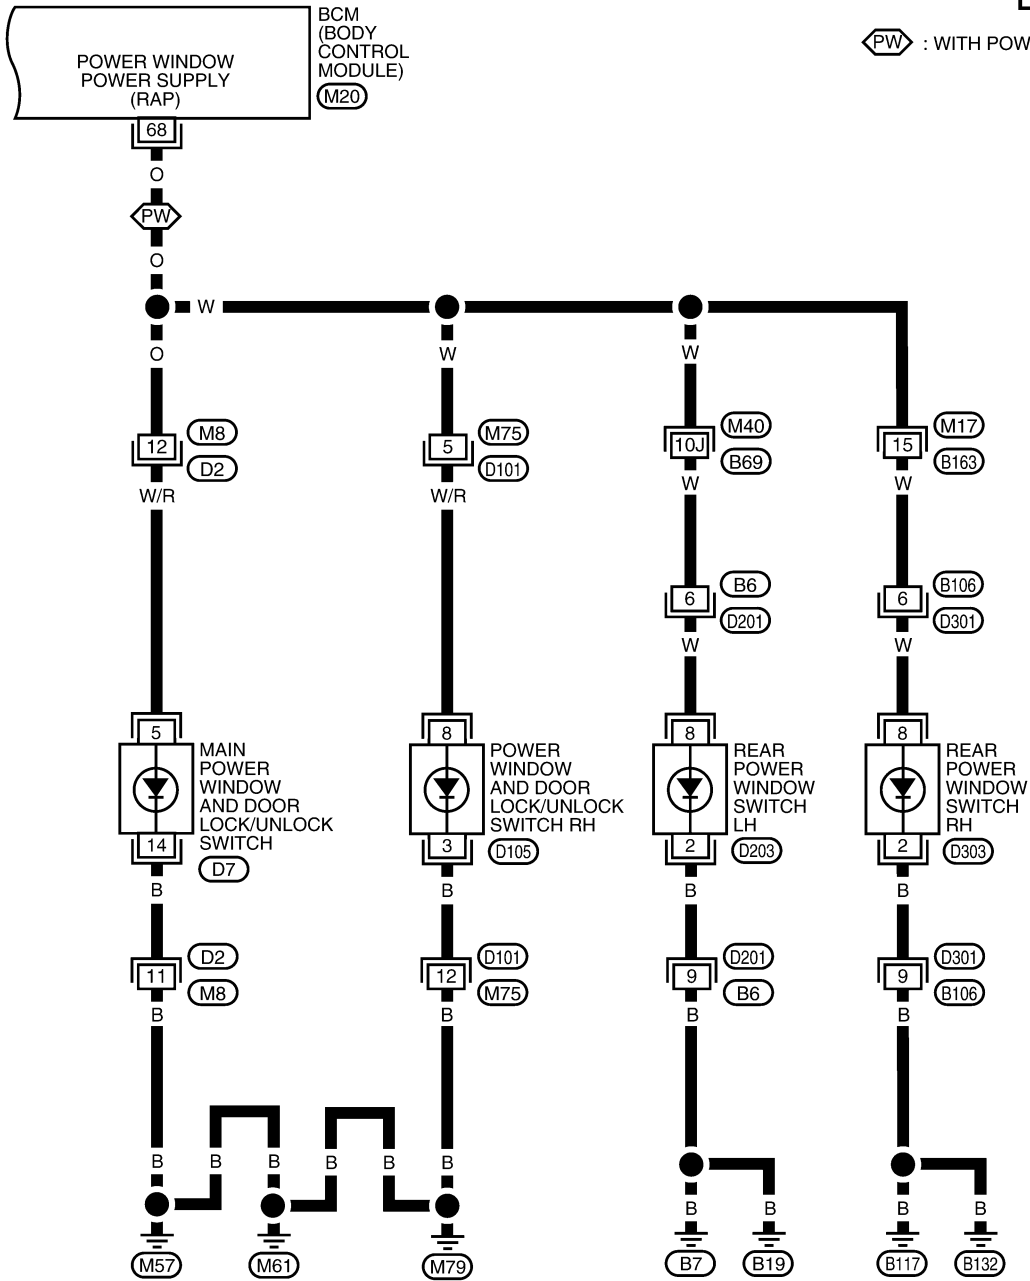

REFER TO THE FOLLOWING.
 - SUPER MULTIPLE JUNCTION (SMJ)


WKWA5961E

ILLUMINATION

Removal and Installation ILLUMINATION CONTROL SWITCH

EKS00EM3

The illumination control switch is a function of the combination meter, and not serviced separately. For replacement, refer to [IP-13, "COMBINATION METER"](#).

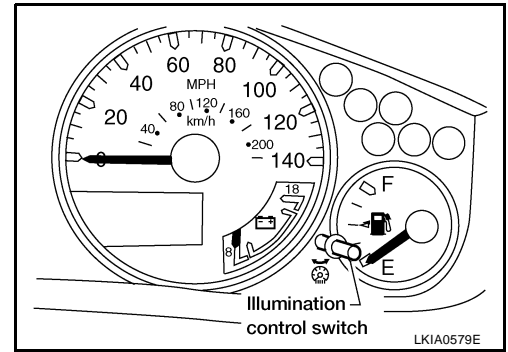

A
B
C
D
E
F
G
H
I
J
LT
L
M

BULB SPECIFICATIONS

BULB SPECIFICATIONS

PFP:26297

Headlamp

EKS00EM4

Item	Wattage (W)*
Low/High	65/55 (HB5)

*: Always check with the Parts Department for the latest parts information.

Exterior Lamp

EKS00EM5

Item	Wattage (W)*	
Front combination lamp	Turn signal lamp/parking lamp	29/8
	Side marker	3.8
Rear combination lamp	Stop/Tail lamp	27/8
	Turn signal lamp	27
	Back-up lamp	18
Fog lamp	55	
License plate lamp	5	
High-mounted stop lamp	16	

*: Always check with the Parts Department for the latest parts information.

Interior Lamp/Illumination

EKS00EM6

Item	Wattage (W)*
Room/Map/Cargo lamp	8
A/T device lamp	3
Vanity lamp	LED

*: Always check with the Parts Department for the latest parts information.