

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

SECTION MIR MIRRORS

CONTENTS

WIRING DIAGRAM	2	PREPARATION	11
DOOR MIRROR	2	Special Service Tool	11
Wiring Diagram - With Heated Mirrors	2	Commercial Service Tool	11
Wiring Diagram - Without Heated Mirrors	5	UNIT REMOVAL AND INSTALLATION	12
INSIDE MIRROR	8	INSIDE MIRROR	12
Wiring Diagram	8	Removal	12
PRECAUTION	10	Installation	12
PRECAUTIONS	10	DOOR MIRROR	13
Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TEN- SIONER"	10	Door Mirror Assembly	13
Precaution for Work	10	Door Mirror Glass	14
PREPARATION	11	UNIT DISASSEMBLY AND ASSEMBLY ...	15
		DOOR MIRROR	15
		Mirror Actuator	15

MIR

DOOR MIRROR

< WIRING DIAGRAM >


WIRING DIAGRAM

DOOR MIRROR

Wiring Diagram - With Heated Mirrors

INFOID:0000000007361926

DOOR MIRROR - WITH HEATED MIRRORS

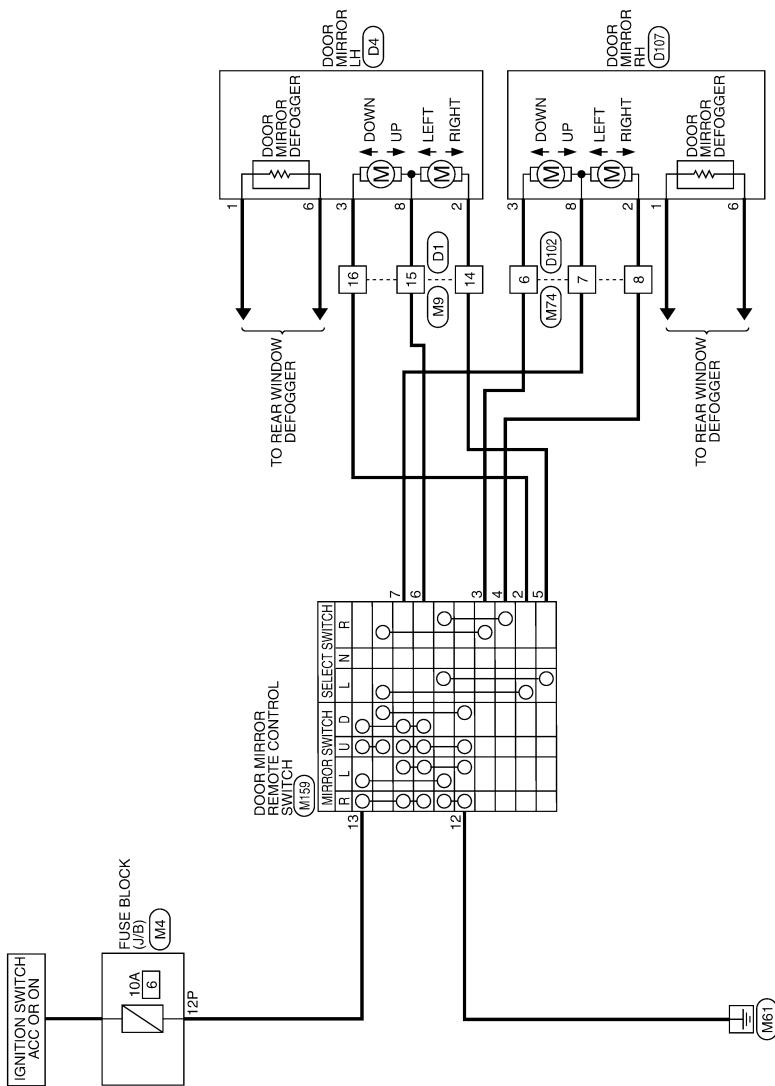

ABLWA1227GB

DOOR MIRROR

< WIRING DIAGRAM >

DOOR MIRROR CONNECTORS - WITH HEATED MIRRORS

Connector No.	M4	Color of Wire	Signal Name
Connector Name	FUSE BLOCK (J/B)		
Connector Color	WHITE		

Terminal No.	Color of Wire	Signal Name
12P	G/Y	-



Terminal No.	Color of Wire	Signal Name
14	Y	-
15	V	-
16	L	-



Terminal No.	Color of Wire	Signal Name
7P	BP	4P
8P	BP	5P
9P	BP	6P
10P	BP	7P
11P	BP	8P
12P	BP	9P
13P	BP	10P
14P	BP	11P
15P	BP	12P
16P	BP	13P

Terminal No.	Color of Wire	Signal Name
6	R	-
7	P	-
8	LG	-





Terminal No.	Color of Wire	Signal Name
14	Y	-
15	V	-
16	L	-

Terminal No.	Color of Wire	Signal Name
4	LG	-
5	Y	-
6	V	-
7	P	-
12	B	-
13	GY	-





Terminal No.	Color of Wire	Signal Name
14	Y/R	-
15	V/W	-
16	L/R	-


AWLIA0430GB

A B C D E F G H I J K L M N O P MIR

DOOR MIRROR

< WIRING DIAGRAM >


Connector No.	D107
Connector Name	DOOR MIRROR RH (WITH HEATED MIRRORS)
Connector Color	BLACK

 

Terminal No.	Color of Wire	Signal Name
1	L/B	-
2	Y/R	-
3	L/R	-
6	B	-
8	V/W	-

1
2
3
4
5
6
7
8
9
10

Connector No.	D102
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
1	1	2
2	2	3
3	3	4
4	4	5
5	5	6
6	6	7
7	7	8
8	8	9
9	9	10
10	10	11
11	11	12
12	12	13
13	13	14
14	14	15
15	15	16

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16

Connector No.	D4
Connector Name	DOOR MIRROR LH (WITH HEATED MIRRORS)
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	L/B	-
2	Y/R	-
3	L/R	-
6	B	-
8	V/W	-

1
2
3
4
5
6
7
8
9
10

ABLIA0623GB


DOOR MIRROR

< WIRING DIAGRAM >

Wiring Diagram - Without Heated Mirrors

INFOID:0000000007361927

DOOR MIRROR - WITHOUT HEATED MIRRORS

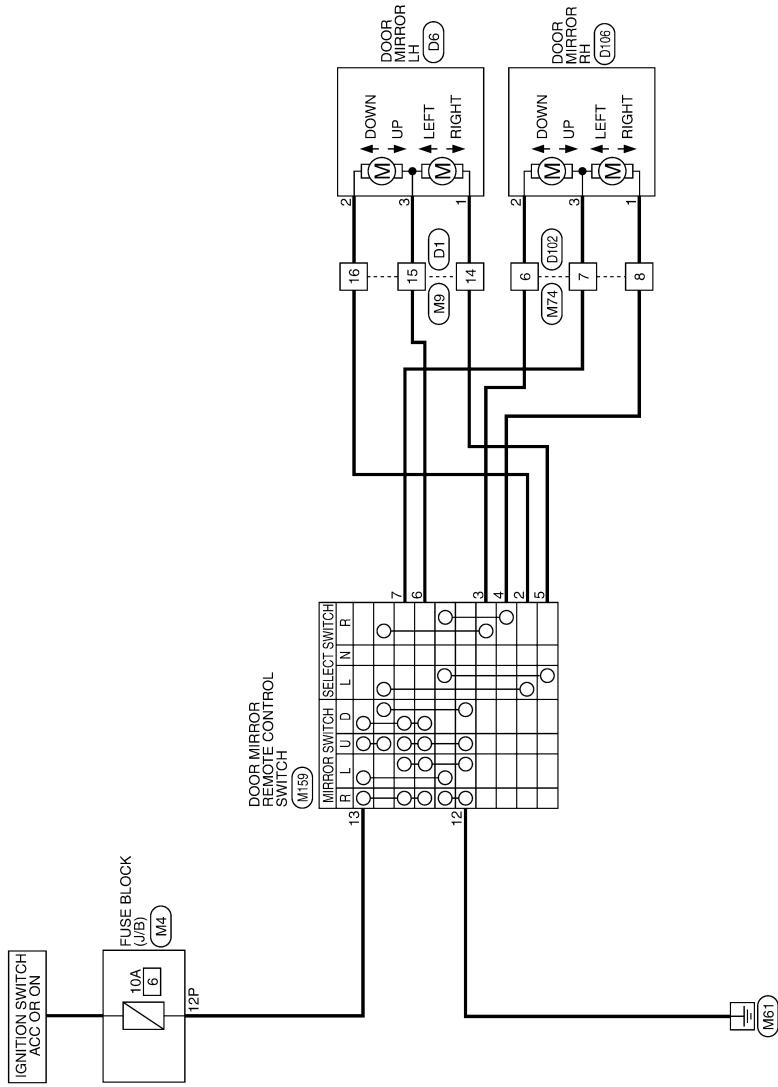


ABLWA1228GB

DOOR MIRROR

< WIRING DIAGRAM >

DOOR MIRROR CONNECTORS - WITHOUT HEATED MIRRORS


Connector No.	M4
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
12P	G/Y	-

Terminal No.	Color of Wire	Signal Name
14	Y	-
15	V	-
16	L	-

Connector No.	M74
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
6	R	-
7	P	-
8	LG	-

Terminal No.	Color of Wire	Signal Name
6	R	-
7	P	-
8	LG	-

Terminal No.	Color of Wire	Signal Name
14	Y	-
15	V	-
16	L	-

Terminal No.	Color of Wire	Signal Name
6	V	-
7	P	-
12	B	-

Terminal No.	Color of Wire	Signal Name
13	GY	-

Terminal No.	Color of Wire	Signal Name
14	Y/R	-
15	V/W	-
16	L/R	-

Terminal No.	Color of Wire	Signal Name
14	Y/R	-
15	V/W	-
16	L/R	-

DOOR MIRROR

< WIRING DIAGRAM >

A

B

C

D

E

F

G

H

I

K

MIR

M

N

O


P

Connector No.	D106
Connector Name	DOOR MIRROR RH (WITH-OUT HEATED MIRRORS)
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	Y/R	-
2	L/R	-
3	V/W	-

Connector No.	D102
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
6	L/B	-
7	V/W	-
8	Y/B	-

Connector No.	D6
Connector Name	DOOR MIRROR LH (WITH-OUT HEATED MIRRORS)
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	Y/R	-
2	L/R	-
3	V/W	-

ABLIA0624GB


INSIDE MIRROR

< WIRING DIAGRAM >

INSIDE MIRROR

Wiring Diagram

INFOID:0000000007361928

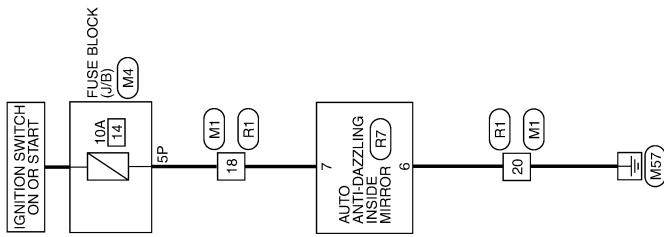

INSIDE MIRROR


AWLWA0127GB

INSIDE MIRROR

< WIRING DIAGRAM >


INSIDE MIRROR CONNECTORS

Connector No.	M1
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
18	W/G	-
20	B	-


Connector No.	R7
Connector Name	AUTO ANTI-DAZZLING INSIDE MIRROR
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
6	B	GND
7	W/G	IGN

ABLIA1867GB

Connector No.	R1
Connector Name	WIRE TO WIRE
Connector Color	WHITE

 

Terminal No.	Color of Wire	Signal Name
5P	W/G	-
18	-	-
20	B	-

A

B

C

D

E

F

G

H

I

J

K

MIR

L

Z

O

P

PRECAUTIONS

< PRECAUTION >

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:0000000007361929

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SR and SB section of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SR section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

- When working near the Airbag Diagnosis Sensor Unit or other Airbag System sensors with the Ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the Ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

Precaution for Work

INFOID:0000000007361930

- When removing or disassembling each component, be careful not to damage or deform it. If a component may be subject to interference, be sure to protect it with a shop cloth.
- When removing (disengaging) components with a screwdriver or similar tool, be sure to wrap the component with a shop cloth or vinyl tape to protect it.
- Protect the removed parts with a shop cloth and prevent them from being dropped.
- Replace a deformed or damaged clip.
- If a part is specified as a non-reusable part, always replace it with new one.
- Be sure to tighten bolts and nuts securely to the specified torque.
- After installation is complete, be sure to check that each part works properly.
- Follow the steps below to clean components.
 - Water soluble dirt: Dip a soft cloth into lukewarm water, and wring the water out of the cloth to wipe the dirty area.
Then rub with a soft and dry cloth.
 - Oily dirt: Dip a soft cloth into lukewarm water with mild detergent (concentration: within 2 to 3%), and wipe the dirty area.
Then dip a cloth into fresh water, and wring the water out of the cloth to wipe the detergent off. Then rub with a soft and dry cloth.
- Do not use organic solvent such as thinner, benzene, alcohol, or gasoline.
- For genuine leather seats, use a genuine leather seat cleaner.

PREPARATION

< PREPARATION >



PREPARATION

PREPARATION

Special Service Tool


INFOID:0000000007361931

The actual shapes of Kent-Moore tools may differ from those of special service tools illustrated here.

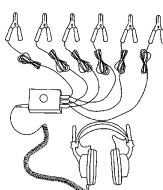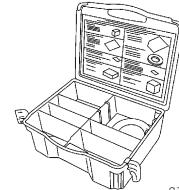Tool number (Kent-Moore No.) Tool name	Description
— (J-39570) Chassis ear	 SIIA0993E Locating the noise
— (J-43980) NISSAN Squeak and Rattle Kit	 SIIA0994E Repairing the cause of noise

Commercial Service Tool

INFOID:0000000007361932

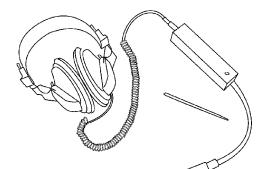(Kent-Moore No.) Tool name	Description
(J-39565) Engine ear	 SIIA0995E Locating the noise

A

B

C

D

E

F

G

H

I

J

K

MIR

M

N

O

P

INSIDE MIRROR


< UNIT REMOVAL AND INSTALLATION >

UNIT REMOVAL AND INSTALLATION INSIDE MIRROR

Removal

INFOID:0000000007361933

1. Remove the mirror finisher.
2. Remove the screw and slide the mirror upward to remove.
3. Disconnect the connector.

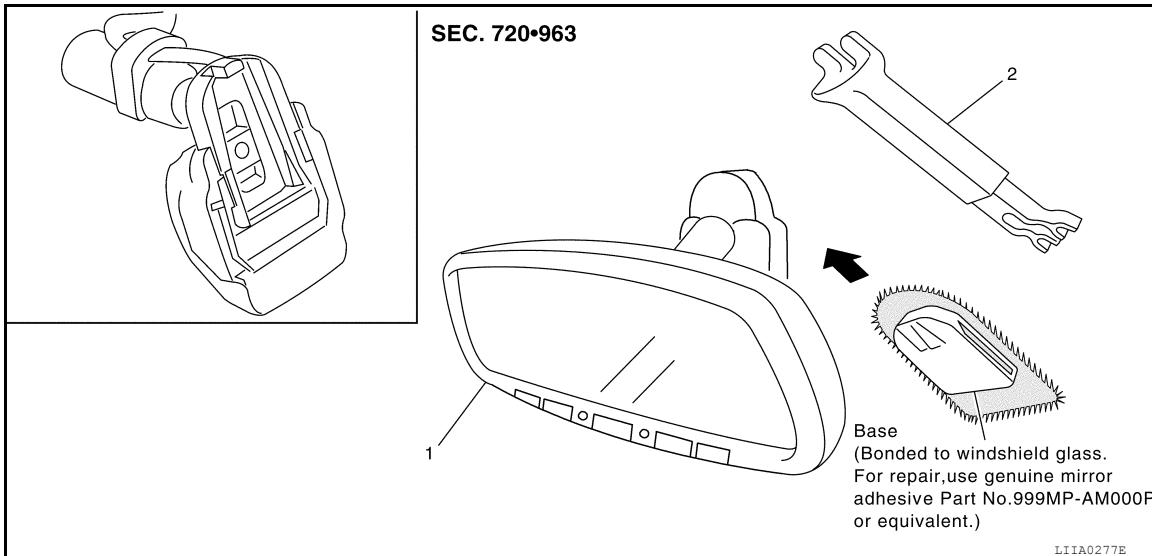

Installation

INFOID:0000000007361934

Installation is in the reverse order of removal.

DOOR MIRROR


< UNIT REMOVAL AND INSTALLATION >

DOOR MIRROR

Door Mirror Assembly

INFOID:0000000007361935

EXPLODED VIEW

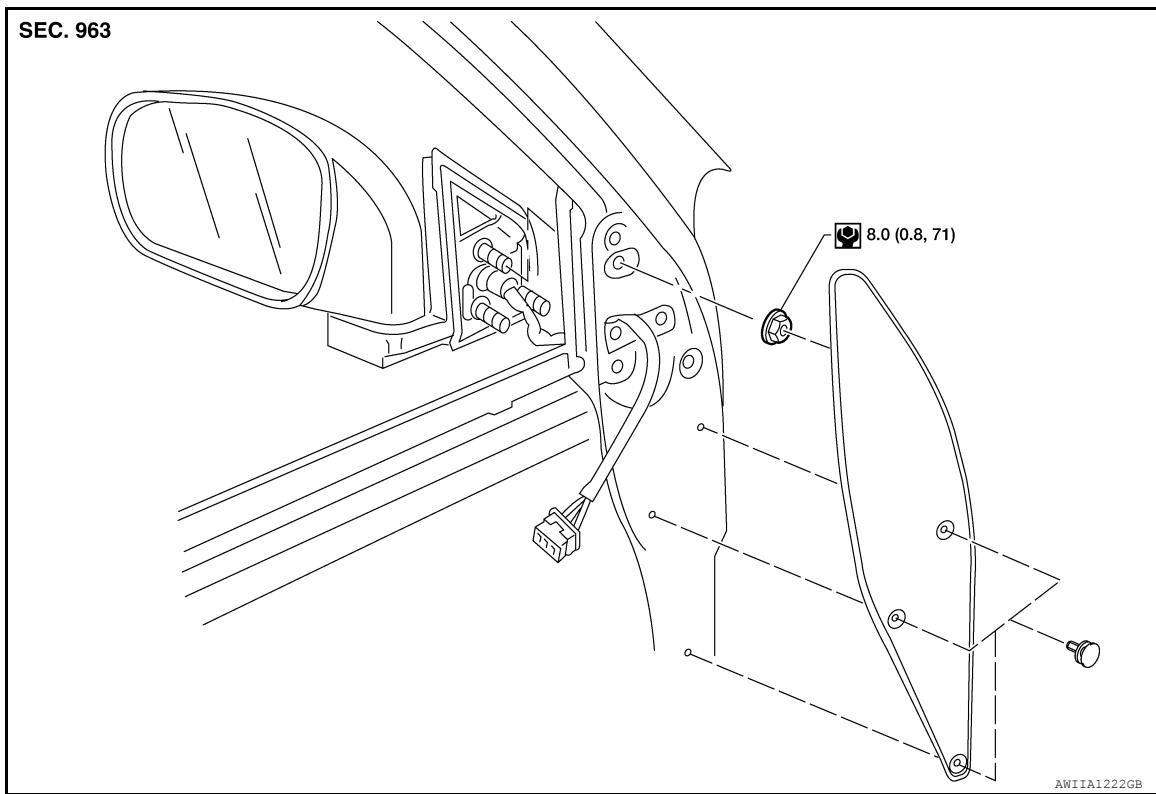

NOTE:

Power mirror shown, manual mirror similar.

MANUAL MIRROR

CAUTION:

Be careful not to damage the mirror body.

Removal

1. Remove the front door sash cover.
2. Remove the front door finisher. Refer to [INT-14, "Removal and Installation"](#).
3. Remove the nuts and the door mirror assembly.

Installation

Installation is in the reverse order of removal

POWER MIRROR

CAUTION:

Be careful not to damage the mirror body.

Removal

1. Remove the front door sash cover.
2. Remove the front door finisher. Refer to [INT-14, "Removal and Installation"](#).
3. Disconnect the door mirror harness connector.
4. Remove the nuts and the door mirror assembly.

Installation

Installation is in the reverse order of removal.


DOOR MIRROR

< UNIT REMOVAL AND INSTALLATION >

Door Mirror Glass

INFOID:0000000007361936

REMOVAL

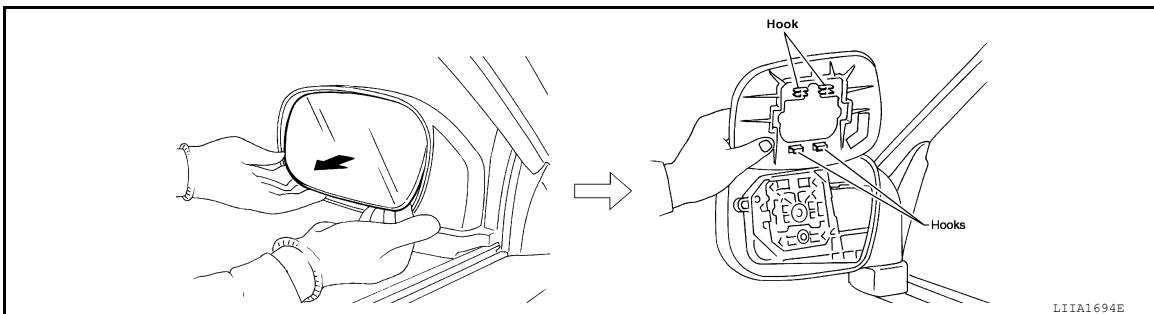

LIIA1694E

1. Angle the mirror fully up.
2. Remove the mirror.
 - Pull from the bottom to disengage the clips.
 - Continue to pivot the mirror upward from the bottom to separate the hooks.
 - If equipped, disconnect the electrical connectors.

INSTALLATION

Installation is in the reverse order of removal.

DOOR MIRROR

< UNIT DISASSEMBLY AND ASSEMBLY >

UNIT DISASSEMBLY AND ASSEMBLY

DOOR MIRROR


Mirror Actuator

INFOID:000000007361937


DISASSEMBLY AND ASSEMBLY

Disassembly

1. Remove the mirror glass. Refer to [MIR-14, "Door Mirror Glass"](#).
2. Remove the screws (A) and release the actuator from housing (B).

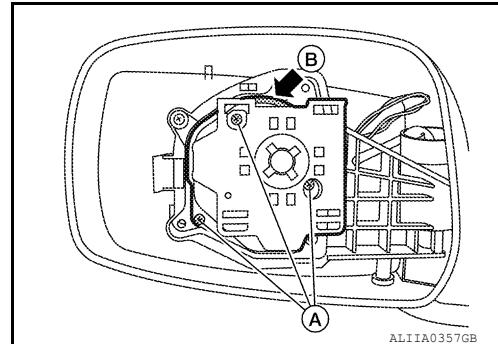

3. Disconnect the connectors (A) and remove the actuator (1).

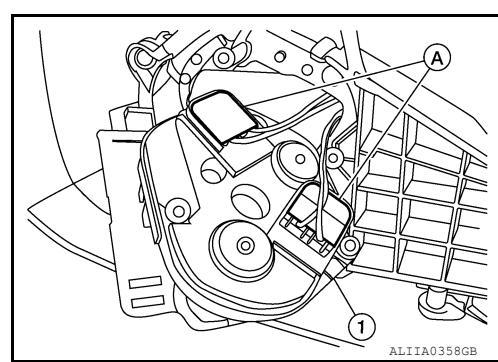

Assembly

Assembly is the reverse order of disassembly.

MIR