

# SECTION WCS

## WARNING CHIME SYSTEM

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
O  
P

### CONTENTS

<b>BASIC INSPECTION</b> .....	3	PARKING BRAKE RELEASE WARNING CHIME : System Description .....	9
<b>DIAGNOSIS AND REPAIR WORKFLOW</b> .....	3	PARKING BRAKE RELEASE WARNING CHIME : Component Parts Location .....	10
Work Flow .....	3	PARKING BRAKE RELEASE WARNING CHIME : Component Description .....	10
<b>SYSTEM DESCRIPTION</b> .....	5	<b>DIAGNOSIS SYSTEM (METER)</b> .....	11
<b>WARNING CHIME SYSTEM</b> .....	5	CONSULT Function (METER/M&A) .....	11
<b>WARNING CHIME SYSTEM</b> .....	5	<b>DIAGNOSIS SYSTEM (BCM)</b> .....	15
WARNING CHIME SYSTEM : System Diagram .....	5	<b>COMMON ITEM</b> .....	15
WARNING CHIME SYSTEM : System Description .....	5	COMMON ITEM : CONSULT Function (BCM - COMMON ITEM) .....	15
WARNING CHIME SYSTEM : Component Parts Location .....	6	<b>BUZZER</b> .....	16
WARNING CHIME SYSTEM : Component De- scription .....	6	BUZZER : CONSULT Function (BCM - BUZZER)....	16
<b>LIGHT REMINDER WARNING CHIME</b> .....	6	<b>DTC/CIRCUIT DIAGNOSIS</b> .....	18
LIGHT REMINDER WARNING CHIME : System Diagram .....	7	<b>POWER SUPPLY AND GROUND CIRCUIT</b> ....	18
LIGHT REMINDER WARNING CHIME : System Description .....	7	<b>COMBINATION METER</b> .....	18
LIGHT REMINDER WARNING CHIME : Compo- nent Parts Location .....	7	COMBINATION METER : Diagnosis Procedure ....	18
LIGHT REMINDER WARNING CHIME : Compo- nent Description .....	8	<b>BCM (BODY CONTROL MODULE)</b> .....	18
<b>SEAT BELT WARNING CHIME</b> .....	8	BCM (BODY CONTROL MODULE) : Diagnosis Procedure .....	18
SEAT BELT WARNING CHIME : System Diagram .....	8	<b>METER BUZZER CIRCUIT</b> .....	20
SEAT BELT WARNING CHIME : System Descrip- tion .....	8	Description .....	20
SEAT BELT WARNING CHIME : Component Parts Location .....	9	Component Function Check .....	20
SEAT BELT WARNING CHIME : Component De- scription .....	9	Diagnosis Procedure .....	20
<b>PARKING BRAKE RELEASE WARNING CHIME</b> .....	9	<b>SEAT BELT BUCKLE SWITCH SIGNAL CIR- CUIT</b> .....	21
PARKING BRAKE RELEASE WARNING CHIME : System Diagram .....	9	Description .....	21
		Component Function Check .....	21
		Diagnosis Procedure .....	21
		Component Inspection .....	22
		<b>WARNING CHIME SYSTEM</b> .....	23

WCS

Wiring Diagram - WARNING CHIME - .....	23	Diagnosis Procedure .....	96
<b>ECU DIAGNOSIS INFORMATION .....</b>	<b>29</b>	<b>THE SEAT BELT WARNING CONTINUES</b>	
<b>COMBINATION METER .....</b>	<b>29</b>	<b>SOUNDING, OR DOES NOT SOUND .....</b>	<b>97</b>
Reference Value .....	29	Description .....	97
Wiring Diagram - METER - .....	36	Diagnosis Procedure .....	97
Fail-Safe .....	48	<b>PRECAUTION .....</b>	<b>98</b>
DTC Index .....	49	<b>PRECAUTIONS .....</b>	<b>98</b>
<b>BCM (BODY CONTROL MODULE) .....</b>	<b>51</b>	<b>EXCEPT FOR MEXICO .....</b>	<b>98</b>
Reference Value .....	51	EXCEPT FOR MEXICO : Precautions for Supple-	
Wiring Diagram - BCM - .....	75	mental Restraint System (SRS) "AIR BAG" and	
Fail-safe .....	90	"SEAT BELT PRE-TENSIONER" .....	98
DTC Inspection Priority Chart .....	91	EXCEPT FOR MEXICO : Precaution for Battery	
DTC Index .....	92	Service .....	98
<b>SYMPTOM DIAGNOSIS .....</b>	<b>95</b>	EXCEPT FOR MEXICO : Precautions for Remov-	
<b>THE PARKING BRAKE RELEASE WARNING</b>		ing Battery Terminal .....	98
<b>CONTINUES SOUNDING, OR DOES NOT</b>		<b>FOR MEXICO .....</b>	<b>99</b>
<b>SOUND .....</b>	<b>95</b>	FOR MEXICO : Precaution for Supplemental Re-	
Description .....	95	straint System (SRS) "AIR BAG" and "SEAT BELT	
Diagnosis Procedure .....	95	PRE-TENSIONER" .....	99
<b>THE LIGHT REMINDER WARNING DOES</b>		FOR MEXICO : Precaution for Battery Service .....	99
<b>NOT SOUND .....</b>	<b>96</b>	FOR MEXICO : Precautions for Removing Battery	
Description .....	96	Terminal .....	99

# DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >


## BASIC INSPECTION

### DIAGNOSIS AND REPAIR WORKFLOW

Work Flow

INFOID:0000000010841592

#### OVERALL SEQUENCE

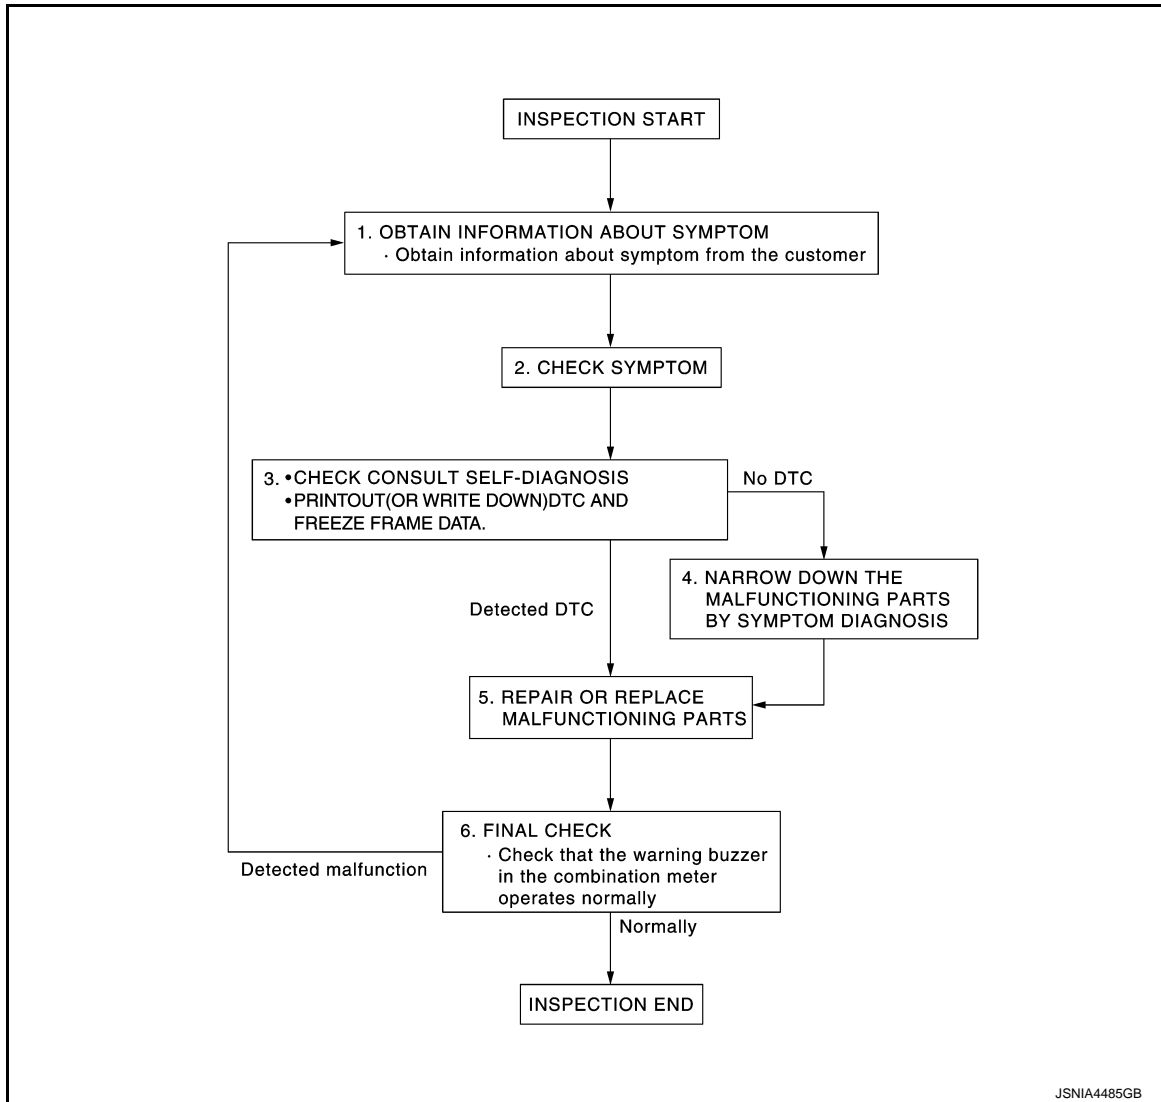

#### DETAILED FLOW

##### 1.OBTAIN INFORMATION ABOUT SYMPTOM

Interview the customer to obtain as much information as possible about the conditions and environment under which the malfunction occurred.

>> GO TO 2.

##### 2.CHECK SYMPTOM

- Check the symptom based on the information obtained from the customer.
- Check if any other malfunctions are present.

>> GO TO 3.

##### 3.CHECK CONSULT SELF-DIAGNOSIS RESULTS

1. Connect CONSULT and perform self-diagnosis. Refer to [MWI-77, "DTC Index"](#).

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M

WCS

O  
P

# DIAGNOSIS AND REPAIR WORKFLOW

## < BASIC INSPECTION >

---

2. When DTC is detected, follow the instructions below:

- Record DTC and Freeze Frame Data.

Are self-diagnosis results normal?

YES >> GO TO 4.

NO >> GO TO 5.

## 4.NARROW DOWN MALFUNCTIONING PARTS BY SYMPTOM DIAGNOSIS

---

Perform symptom diagnosis and narrow down the malfunctioning parts.

>> GO TO 5.

## 5.REPAIR OR REPLACE MALFUNCTIONING PARTS

---

Repair or replace malfunctioning parts.

**NOTE:**

If DTC is displayed, erase DTC after repairing or replacing malfunctioning parts.

>> GO TO 6.

## 6.FINAL CHECK

---

Check that the warning buzzer in the combination meter operates normally.

Does it operate normally?

YES >> INSPECTION END

NO >> GO TO 1.

# WARNING CHIME SYSTEM

< SYSTEM DESCRIPTION >


## SYSTEM DESCRIPTION

WARNING CHIME SYSTEM

WARNING CHIME SYSTEM

WARNING CHIME SYSTEM : System Diagram

INFOID:0000000010841593

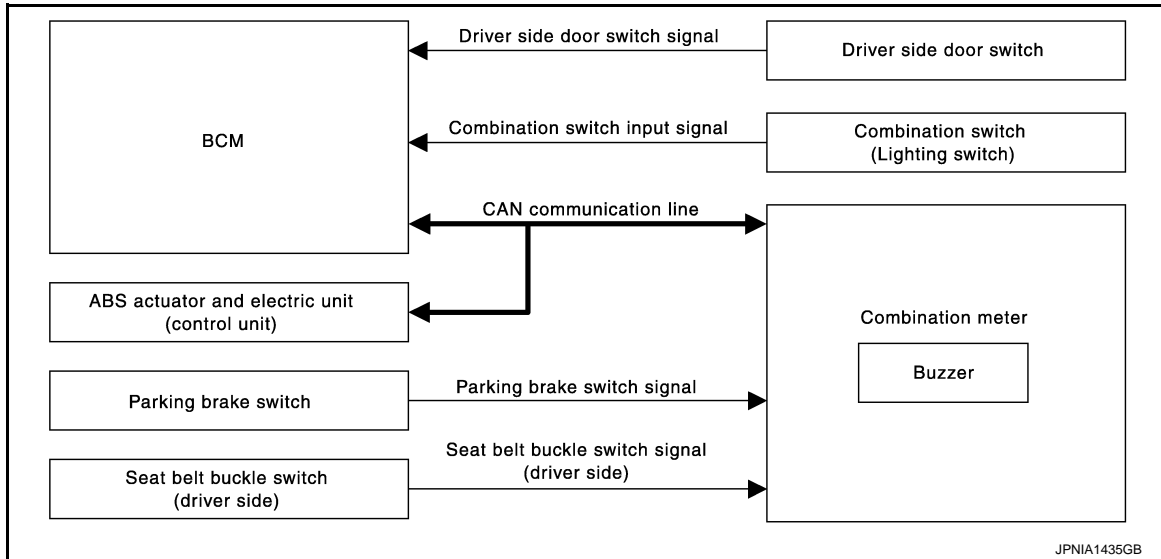


WARNING CHIME SYSTEM : System Description

INFOID:0000000010841594

### COMBINATION METER

- The buzzer (1) for the warning chime system is integrated in the combination meter.
- The combination meter sounds the alarm buzzer installed in the combination meter when receiving the buzzer output signal transmitted from each unit.
- Judges whether the parking brake is released from the vehicle speed signal received from the ABS actuator and electric unit (control unit) with CAN communication line and the parking brake switch signal from the parking brake switch, and sounds the buzzer if necessary.

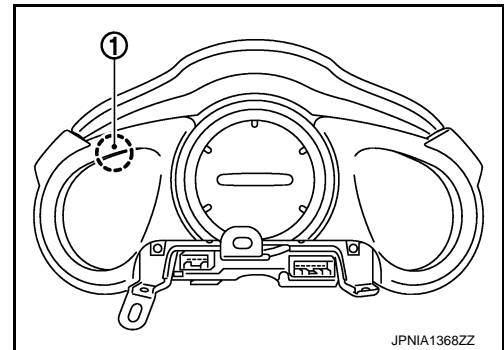

### BCM

BCM receives signals from various units and transmits a buzzer output signal to the combination meter via CAN communication if it judges that the warning buzzer should be activated.

BCM Warning Function List

Warning functions	Signal name
Light reminder warning chime	<ul style="list-style-type: none"> <li>• Ignition switch signal</li> <li>• Combination switch input signal</li> <li>• Driver side door switch signal</li> </ul>
Seat belt warning chime	<ul style="list-style-type: none"> <li>• Ignition switch signal</li> <li>• Seat belt buckle switch signal (driver side)</li> </ul>

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
O  
P


WCS

# WARNING CHIME SYSTEM

< SYSTEM DESCRIPTION >

## WARNING CHIME SYSTEM : Component Parts Location

INFOID:000000010841595

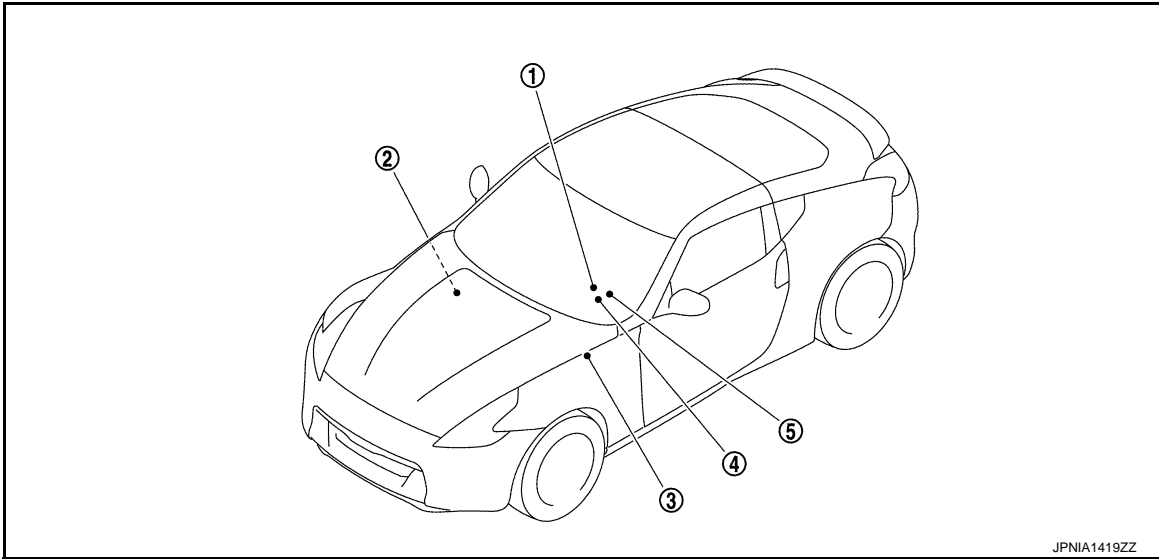

JPNIA1419ZZ

- |                         |  |  |
|-------------------------|--|--|
| 1. Parking brake switch | 2. BCM   | 3. ABS actuator and electric unit (control unit)                 |
|                         | 2. Refer to <a href="#">BCS-10, "Component Parts Location"</a> . | 3. Refer to <a href="#">BRC-12, "Component Parts Location"</a> . |
| 4. Combination meter    | 5. Seat belt buckle switch (driver side)                         |  |

## WARNING CHIME SYSTEM : Component Description

INFOID:000000010841596

Unit	Description
Combination meter	<ul style="list-style-type: none"> <li>Receives a buzzer output signal from the BCM with CAN communication line and sounds the buzzer.</li> <li>Judges whether the parking brake is released from the vehicle speed signal received from the ABS actuator and electric unit (control unit) with CAN communication line and the parking brake switch signal from the parking brake switch, and sounds the buzzer if necessary.</li> <li>Receives the seat belt buckle switch signal (driver side) from the seat belt buckle switch (driver side) and transmits it to BCM with CAN communication line.</li> </ul>
BCM	Transmits signals provided by various units to the combination meter with CAN communication line.
ABS actuator and electric unit (control unit)	Transmits the vehicle speed signal to combination meter with CAN communication line.
Seat belt buckle switch (driver side)	Transmits a seat belt buckle switch signal (driver side) to the combination meter.
Combination switch (Lighting switch)	Transmits the combination switch input signal to BCM.
Driver side door switch	Transmits the driver side door switch signal to BCM.
Parking brake switch	Refer to <a href="#">MWI-53, "Description"</a> .


## LIGHT REMINDER WARNING CHIME

# WARNING CHIME SYSTEM

< SYSTEM DESCRIPTION >

## LIGHT REMINDER WARNING CHIME : System Diagram

INFOID:000000010841597

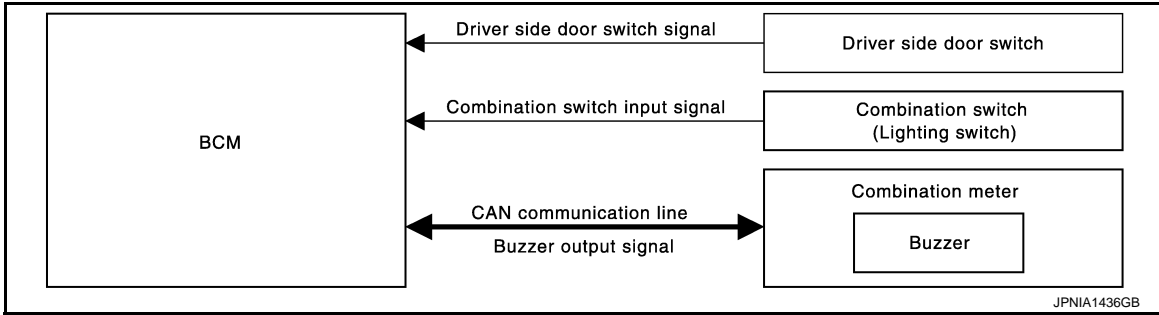

## LIGHT REMINDER WARNING CHIME : System Description

INFOID:000000010841598

### DESCRIPTION

With ignition switch in the OFF or ACC position, when the driver door is open and the lighting switch is the 1st or 2nd position, the light warning chime will sound.

- BCM detects ignition switch in the OFF or ACC position, driver side door switch ON, and lighting switch in 1st or 2nd position. Then the BCM transmits the buzzer output signal (light reminder warning chime) to combination meter with CAN communication line.
- When combination meter receives buzzer output signal (light reminder warning chime), it sounds the buzzer.

### WARNING OPERATION CONDITIONS

If all of the following conditions are fulfilled.

- Ignition switch is in the OFF or ACC
- Lighting switch is in the 1st or 2nd position
- Driver side door switch is ON


### WARNING CANCEL CONDITIONS

Warning is canceled if any of the following conditions is fulfilled.

- Lighting switch OFF
- Ignition switch ON
- Driver side door switch is OFF

## LIGHT REMINDER WARNING CHIME : Component Parts Location

INFOID:000000010841599

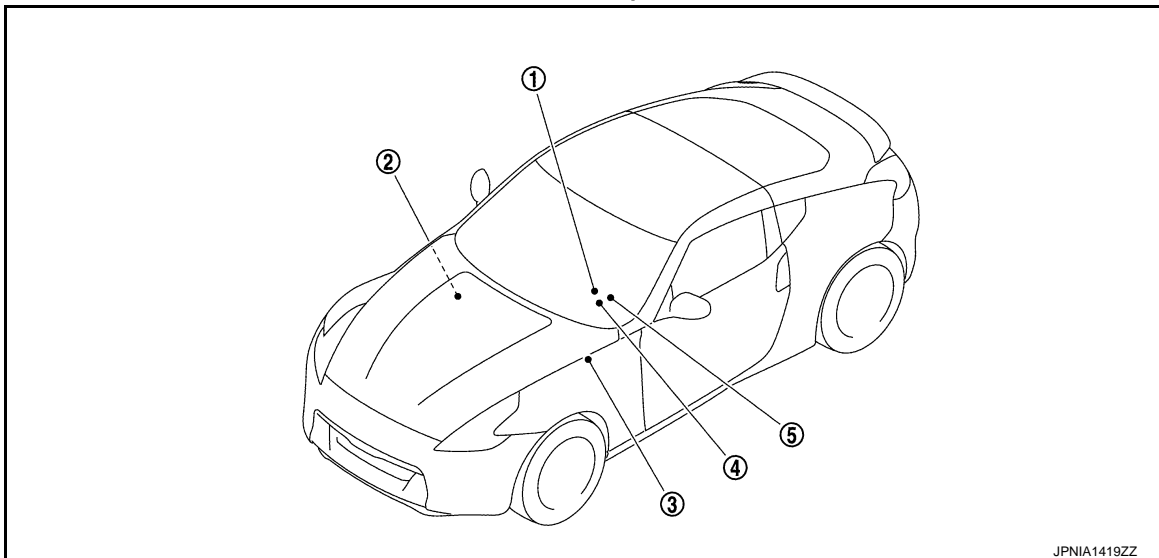

- |                         |  |  |
|-------------------------|--|--|
| 1. Parking brake switch | 2. Refer to <a href="#">BCS-10, "Component Parts Location"</a> . | 3. Refer to <a href="#">BRC-12, "Component Parts Location"</a> . |
| 4. Combination meter    | 5. Seat belt buckle switch (driver side)                         |  |

# WARNING CHIME SYSTEM

< SYSTEM DESCRIPTION >

## LIGHT REMINDER WARNING CHIME : Component Description


INFOID:000000010841600

Unit	Description
Combination meter	Receives a buzzer output signal from the BCM and sounds the buzzer.
BCM	Judges the light reminder warning conditions from the signals provided by various switches and transmits a buzzer output signal to the combination meter via CAN communication line if necessary.
Combination switch (Lighting switch)	Transmits the combination switch input signal to BCM.
Driver side door switch	Transmits the driver side door switch signal to BCM.

## SEAT BELT WARNING CHIME

### SEAT BELT WARNING CHIME : System Diagram

INFOID:000000010841601

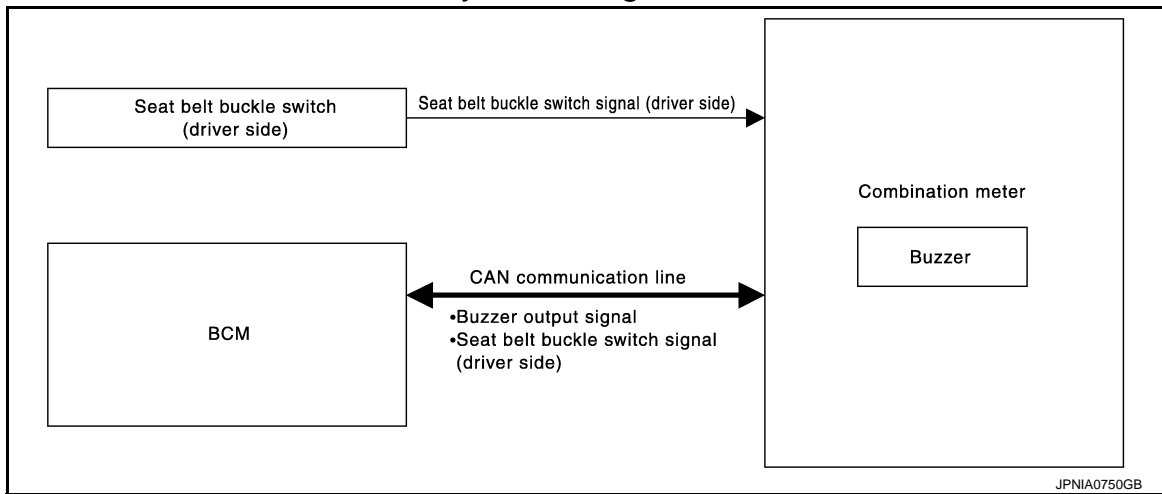

### SEAT BELT WARNING CHIME : System Description

INFOID:000000010841602

#### DESCRIPTION

With ignition switch turned ON and driver seat belt unfastened, seat belt warning chime will sound for approximately 6 seconds.

- The combination meter receives the seat belt buckle switch signal (driver side) from seat belt buckle switch (driver side) and transmits it to the BCM via CAN communication.
- The BCM receives seat belt buckle switch signal from combination meter via CAN communication.
- The BCM detects seat belt reminder warning based on the received signal and transmits the buzzer output signal to combination meter via CAN communication.
- The combination meter receives the buzzer output signal from BCM via CAN communication and sounds the warning buzzer.

#### WARNING OPERATION CONDITIONS

If all of the following conditions are fulfilled, the warning buzzer will sound.

- Ignition switch ON
- Seat belt buckle switch (driver side) is ON (driver seat belt not fastened)

#### WARNING CANCEL CONDITIONS

Warning is canceled if any of the following conditions are fulfilled.

- Ignition switch OFF
- Seat belt buckle switch (driver side) is OFF (driver seat belt fastened)




# WARNING CHIME SYSTEM

< SYSTEM DESCRIPTION >

## SEAT BELT WARNING CHIME : Component Parts Location

INFOID:000000010841603

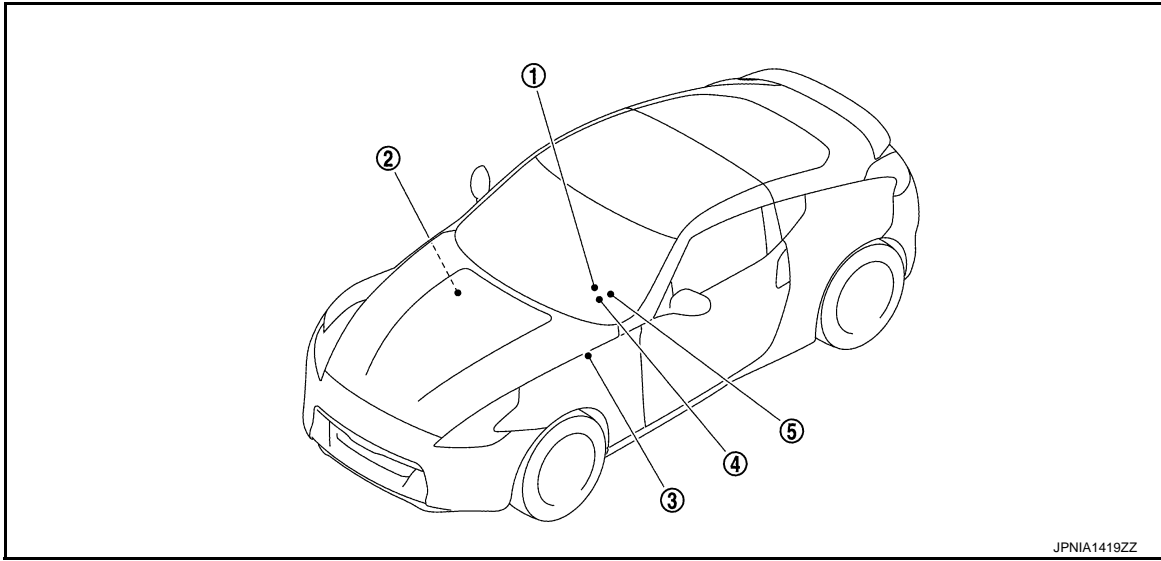

- 1. Parking brake switch
- 2. BCM
- 3. ABS actuator and electric unit (control unit)  
Refer to [BRC-12, "Component Parts Location"](#).
- 4. Combination meter
- 5. Seat belt buckle switch (driver side)

## SEAT BELT WARNING CHIME : Component Description


INFOID:000000010841604

Unit	Description
Combination meter	<ul style="list-style-type: none"> <li>Receives the seat belt buckle switch signal (driver side) from the seat belt buckle switch (driver side) and transmits it to BCM via CAN communication line.</li> <li>Receives a buzzer output signal from the BCM and sounds the buzzer.</li> </ul>
BCM	Judges the seat belt warning condition according to the seat belt buckle switch signal (driver side) received from the combination meter via CAN communication and transmits a buzzer output signal to the combination meter via CAN communication line if necessary.
Seat belt buckle switch (driver side)	Transmits the seat belt buckle switch signal (driver side) to the combination meter.

## PARKING BRAKE RELEASE WARNING CHIME

### PARKING BRAKE RELEASE WARNING CHIME : System Diagram

INFOID:000000010841605

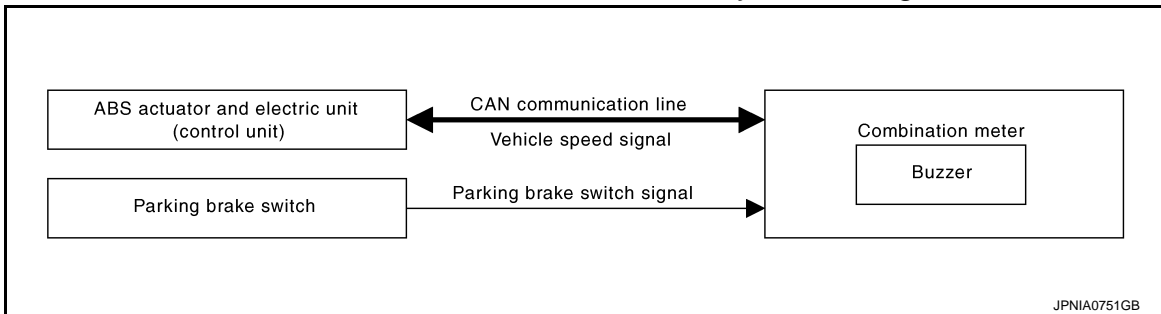

### PARKING BRAKE RELEASE WARNING CHIME : System Description

INFOID:000000010841606

#### DESCRIPTION

Parking brake release warning chime judges the remaining parking brake according to the vehicle speed signal received from the ABS actuator and electric unit (control unit) via CAN communication and the parking brake switch signal from parking brake switch to sound the warning buzzer.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
O  
P

WCS

# WARNING CHIME SYSTEM

## < SYSTEM DESCRIPTION >

### WARNING OPERATION CONDITIONS

If all of the following conditions are fulfilled.

- Vehicle speed is 7 km/h (4.3 MPH) or more
- Parking brake switch ON


### WARNING CANCEL CONDITIONS

Warning is canceled if any of the following conditions are fulfilled.

- Vehicle speed is approximately 3 km/h (1.9 MPH) or less
- Parking brake switch OFF

### PARKING BRAKE RELEASE WARNING CHIME : Component Parts Location

INFOID:000000010841607

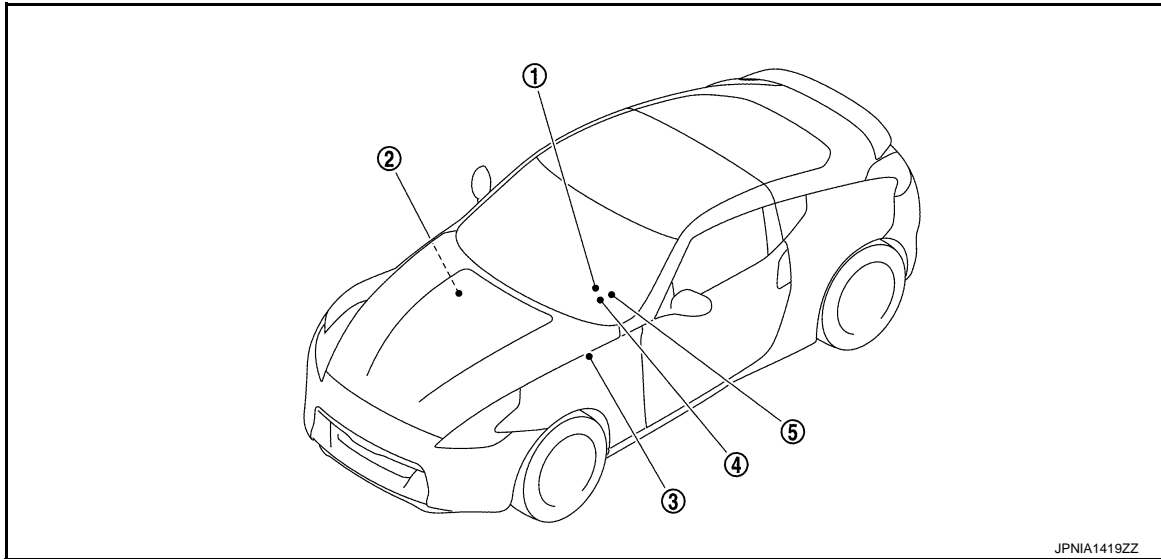

JPNIA1419ZZ

- |                         |   |   |
|-------------------------|---|---|
| 1. Parking brake switch | 2. BCM  | 3. ABS actuator and electric unit (control unit)              |
|                         | Refer to <a href="#">BCS-10. "Component Parts Location"</a> . | Refer to <a href="#">BRC-12. "Component Parts Location"</a> . |
| 4. Combination meter    | 5. Seat belt buckle switch (driver side)                      |   |

### PARKING BRAKE RELEASE WARNING CHIME : Component Description

INFOID:000000010841608

Unit	Description
Combination meter	Judges the remaining parking brake according to the vehicle speed signal received from the ABS actuator and electric unit (control unit) via CAN communication and the parking brake switch signal from parking brake switch and sounds the warning buzzer.
ABS actuator and electric unit (control unit)	Transmits the vehicle speed signal to the combination meter via CAN communication.
Parking brake switch	Transmits the parking brake switch signal to the combination meter.

# DIAGNOSIS SYSTEM (METER)

< SYSTEM DESCRIPTION >

## DIAGNOSIS SYSTEM (METER)

### CONSULT Function (METER/M&A)

INFOID:000000011312925

#### CONSULT APPLICATION ITEMS

CONSULT can perform the following diagnosis modes via CAN communication and the combination meter.

System	Diagnosis mode	Description
METER/M&A	Self Diagnostic Result	The combination meter checks the conditions and displays memorized errors.
	Data Monitor	Displays the combination meter input/output data in real time.
	Warning History	Lighting history of the warning lamp and indicator lamp can be checked.

#### SELF DIAG RESULT

Refer to [MWI-77, "DTC Index"](#).

#### DATA MONITOR

##### NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

##### Display Item List

X: Applicable

Display item [Unit]	MAIN SIGNALS	Description
SPEED METER [km/h]	X	Value of vehicle speed signal received from ABS actuator and electric unit (control unit) via CAN communication. <b>NOTE:</b> 655.35 is displayed when the malfunction signal is received.
SPEED OUTPUT [km/h]	X	Vehicle speed signal value transmitted to other units via CAN communication. <b>NOTE:</b> 655.35 is displayed when the malfunction signal is received.
ODO OUTPUT [km/h or mph]		Odometer signal value transmitted to other units via CAN communication.
TACHO METER [rpm]	X	Value of the engine speed signal received from ECM via CAN communication. <b>NOTE:</b> 8191.875 is displayed when the malfunction signal is received.
FUEL METER [L]	X	Fuel level indicated on combination meter.
W TEMP METER [°C]	X	Value of engine coolant temperature signal is received from ECM via CAN communication. <b>NOTE:</b> 215 is displayed when the malfunction signal is input.
ABS W/L [On/Off]		Status of ABS warning lamp detected from ABS warning lamp signal is received from ABS actuator and electric unit (control unit) via CAN communication.
VDC/TCS IND [On/Off]		Status of VDC OFF indicator lamp detected from VDC OFF indicator lamp signal is received from ABS actuator and electric unit (control unit) via CAN communication.
SLIP IND [On/Off]		Status of VDC warning lamp detected from VDC warning lamp signal received from ABS actuator and electric unit (control unit) via CAN communication.
BRAKE W/L [On/Off]		Status of brake warning lamp detected from brake warning lamp signal is received from ABS actuator and electric unit (control unit) via CAN communication. <b>NOTE:</b> Displays "Off" if the brake warning lamp is illuminated when the valve check starts, the parking brake switch is turned ON or the brake fluid level switch is turned ON.
DOOR W/L [On/Off]		Status of door warning detected from door switch signal received from BCM via CAN communication.
TRUNK/GLAS-H [Off]		This item is displayed, but cannot be monitored.

A

B

C

D

E

F

G

H

I

J

K

L

M

WCS

O

P



## DIAGNOSIS SYSTEM (METER)

### < SYSTEM DESCRIPTION >

Display item [Unit]	MAIN SIGNALS	Description
HI-BEAM IND [On/Off]		Status of high beam indicator lamp detected from high beam request signal is received from BCM via CAN communication.
TURN IND [On/Off]		Status of turn indicator lamp detected from turn indicator signal is received from BCM via CAN communication.
RR FOG IND [On/Off]		Status of rear fog lamp indicator lamp detected from rear fog lamp status signal is received from BCM via CAN communication.
LIGHT IND [On/Off]		Status of light indicator lamp detected from position light request signal is received from BCM via CAN communication.
OIL W/L [On/Off]		Status of oil pressure warning lamp detected from oil pressure switch signal is received from BCM via CAN communication.
MIL [On/Off]		Status of malfunction indicator lamp detected from malfunctioning indicator lamp signal is received from ECM via CAN communication.
CRUISE IND [On/Off]		Status of CRUISE indicator lamp detected from CRUISE indicator lamp signal is received from ECM via CAN communication.
SET IND [Off]		This item is displayed, but cannot be monitored.
ATC/T-AMT W/L [On/Off]		A/T CHECK indicator lamp status judged by the transmission check warning lamp signal received from TCM via CAN communication.
FUEL W/L [On/Off]		Low-fuel warning lamp status detected by the identified fuel level.
WASHER W/L [On/Off]		Status of washer warning lamp judged from washer level switch input to combination meter.
AIR PRES W/L [On/Off]		Status of low tire pressure warning lamp detected from tire pressure signal is received from BCM via CAN communication.
KEY G/Y W/L [On/Off]		Status of key warning lamp (yellow) detected from key warning signal is received from BCM via CAN communication.
MT SYNC REV IND [On/Off]		Status of S-MODE indicator judged from S-MODE indicator signal received from ECM with CAN communication line.
FUEL CAP W/L [On/Off]		Status of fuel filler cap warning judged from fuel filler cap warning display signal received from ECM with CAN communication line.
LCD [C&P N, C&P I, B&P N, B&P I, ID NG, ROTAT, SFT P, INSRT, BATT, NO KY, OUTKY, LK WN]		Displays status of Intelligent Key system warning detected from meter display signal is received from BCM via CAN communication.
SHIFT IND [P, R, N, D, L, M1, M2, M3, M4, M5, M6, M7]		<ul style="list-style-type: none"> <li>• Status of shift position indicator detected from shift position signal and manual mode indicator signal is received from TCM via CAN communication. (A/T models)</li> <li>• Status of shift position indicator detected from shift position signal is received from ECM via CAN communication. (with SynchroRev Match mode models)</li> </ul>
AT S MODE SW [Off]		This item is displayed, but cannot be monitored.
M RANGE SW [On/Off]		Status of manual mode switch.
NM RANGE SW [On/Off]		Status of non-manual mode switch.
AT SFT UP SW [On/Off]		Status of position select switch (up).
AT SFT DWN SW [On/Off]		Status of position select switch (down).
ST SFT UP SW [On/Off]		Status of paddle shifter up switch.
ST SFT DWN SW [On/Off]		Status of paddle shifter down switch.

# DIAGNOSIS SYSTEM (METER)

## < SYSTEM DESCRIPTION >

Display item [Unit]	MAIN SIGNALS	Description
SYNC MODE [On/Off]		This item is displayed, but cannot be monitored.
PKB SW [On/Off]		Status of parking brake switch.
BUCKLE SW [On/Off]		Status of seat belt buckle switch (driver side).
BRAKE OIL SW [On/Off]		Status of brake fluid level switch.
A/C AMP CONN [On/Off]		Status of A/C auto amp. connection recognition signal.
ENTER SW [On/Off]		Status of  (ENTER) switch.
SELECT SW [On/Off]		Status of  (SELECT) switch.
MT SYNC REV SW [On/Off]		Status of S-MODE switch.
DISTANCE [km]		Value of possible driving distance calculated by combination meter.
OUTSIDE TEMP [°C or °F]		Ambient air temperature value converted from ambient sensor signal received from ambient sensor. <b>NOTE:</b> This may not match with the temperature value indicated on the information display. (Because the information display value is a corrected value from the ambient sensor input value.)
FUEL LOW SIG [On/Off]		Status of fuel level low warning signal to output to AV control unit via CAN communication.
BUZZER [On/Off]	X	Buzzer status (in the combination meter) is detected from the buzzer output signal received from each unit via CAN communication and the warning output condition of the combination meter.

**NOTE:**

Some items are not available according to vehicle specification.

### WARNING HISTORY

- Stores histories when warning/indicator lamp is turned on.
- “Warning History” indicates the “TIME” when the warning/ indicator lamp is turned on.
- The “TIME” above is:
  - 0: The condition that the warning/indicator lamp has been turned on 1 or more times after starting the engine and waiting for 30 seconds.
  - 1 - 39: The number of times the engine was restarted after the 0 condition.
  - NO Warning History: Stores NO (0) turning on history of warning/indicator lamp.

**NOTE:**

- Warning History is not stored for approximately 30 seconds after the engine starts.
- Brake warning lamp does not store any history when the parking brake is applied or the brake fluid level gets low.

### Display Item

Display item	Description
ABS W/L	Lighting history of ABS warning lamp.
VDC/TCS IND	Lighting history of VDC OFF indicator lamp.
SLIP IND	Lighting history of VDC warning lamp.
BRAKE W/L	Lighting history of brake warning lamp.
DOOR W/L	Lighting history of door warning.
OIL W/L	Lighting history of oil pressure warning lamp.

## DIAGNOSIS SYSTEM (METER)

### < SYSTEM DESCRIPTION >

Display item	Description
C-ENG W/L	Lighting history of malfunction indicator lamp.
CRUISE IND	Lighting history of CRUISE indicator lamp.
ATC/T-AMT W/L	Lighting history of A/T CHECK indicator lamp.
FUEL W/L	Lighting history of low fuel level warning.
WASHER W/L	Lighting history of low washer fluid warning
AIR PRES W/L	Lighting history of low tire pressure warning lamp.
KEY G/Y W/L	Lighting history of key warning lamp (yellow).

**NOTE:**

In items displayed on the CONSULT screen, only those listed in the above table are used.

# DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

## DIAGNOSIS SYSTEM (BCM)

### COMMON ITEM

#### COMMON ITEM : CONSULT Function (BCM - COMMON ITEM)

INFOID:000000011312924

#### APPLICATION ITEM

CONSULT performs the following functions via CAN communication with BCM.

Diagnosis mode	Function Description
Work Support	Changes the setting for each system function.
Self Diagnostic Result	Displays the diagnosis results judged by BCM.
CAN Diag Support Monitor	Monitors the reception status of CAN communication viewed from BCM.
Data Monitor	The BCM input/output signals are displayed.
Active Test	The signals used to activate each device are forcibly supplied from BCM.
Ecu Identification	The BCM part number is displayed.
Configuration	<ul style="list-style-type: none"> <li>Read and save the vehicle specification.</li> <li>Write the vehicle specification when replacing BCM.</li> </ul>

#### SYSTEM APPLICATION

BCM can perform the following functions for each system.

#### NOTE:

It can perform the diagnosis modes except the following for all sub system selection items.

×: Applicable item

System	Sub system selection item	Diagnosis mode		
		Work Support	Data Monitor	Active Test
Door lock	DOOR LOCK	×	×	×
Rear window defogger	REAR DEFOGGER		×	×
Warning chime	BUZZER		×	×
Interior room lamp timer	INT LAMP	×	×	×
Exterior lamp	HEAD LAMP	×	×	×
Wiper and washer	WIPER	×	×	×
Turn signal and hazard warning lamps	FLASHER	×	×	×
—	AIR CONDITONER*			
<ul style="list-style-type: none"> <li>Intelligent Key system</li> <li>Engine start system</li> </ul>	INTELLIGENT KEY	×	×	×
Combination switch	COMB SW		×	
Body control system	BCM	×		
NVIS - NATS	IMMU		×	×
Interior room lamp battery saver	BATTERY SAVER	×	×	×
Back door/Trunk lid open	TRUNK		×	×
Vehicle security system	THEFT ALM	×	×	×
RAP system	RETAINED PWR		×	
Signal buffer system	SIGNAL BUFFER		×	×
TPMS	TPMS (AIR PRESSURE MONITOR)	×	×	×

#### NOTE:

\*: This item is displayed, but is not used.

#### FREEZE FRAME DATA (FFD)

The BCM records the following vehicle condition at the time a particular DTC is detected, and displays on CONSULT.

# DIAGNOSIS SYSTEM (BCM)

## < SYSTEM DESCRIPTION >

CONSULT screen item	Indication/Unit	Description	
Vehicle Speed	km/h	Vehicle speed of the moment a particular DTC is detected	
Odo/Trip Meter	km	Total mileage (Odometer value) of the moment a particular DTC is detected	
Vehicle Condition	SLEEP>LOCK	Power supply position status of the moment a particular DTC is detected	While turning BCM status from low power consumption mode to normal mode (Power supply position is "LOCK"*)
	SLEEP>OFF		While turning BCM status from low power consumption mode to normal mode (Power supply position is "OFF".)
	LOCK>ACC		While turning power supply position from "LOCK"* to "ACC"
	ACC>ON		While turning power supply position from "ACC" to "IGN"
	RUN>ACC		While turning power supply position from "RUN" to "ACC" (Except emergency stop operation)
	CRANK>RUN		While turning power supply position from "CRANKING" to "RUN" (From cranking up the engine to run it)
	RUN>URGENT		While turning power supply position from "RUN" to "ACC" (Emergency stop operation)
	ACC>OFF		While turning power supply position from "ACC" to "OFF"
	OFF>LOCK		While turning power supply position from "OFF" to "LOCK"*
	OFF>ACC		While turning power supply position from "OFF" to "ACC"
	ON>CRANK		While turning power supply position from "IGN" to "CRANKING"
	OFF>SLEEP		While turning BCM status from normal mode (Power supply position is "OFF".) to low power consumption mode
	LOCK>SLEEP		While turning BCM status from normal mode (Power supply position is "LOCK"*. ) to low power consumption mode
	LOCK		Power supply position is "LOCK"*
	OFF		Power supply position is "OFF" (Ignition switch OFF)
	ACC		Power supply position is "ACC" (Ignition switch ACC)
	ON		Power supply position is "IGN" (Ignition switch ON with engine stopped)
ENGINE RUN	Power supply position is "RUN" (Ignition switch ON with engine running)		
CRANKING	Power supply position is "CRANKING" (At engine cranking)		
IGN Counter	0 - 39	The number of times that ignition switch is turned ON after DTC is detected <ul style="list-style-type: none"> <li>• The number is 0 when a malfunction is detected now.</li> <li>• The number increases like 1 → 2 → 3...38 → 39 after returning to the normal condition whenever ignition switch OFF → ON.</li> <li>• The number is fixed to 39 until the self-diagnosis results are erased if it is over 39.</li> </ul>	

### NOTE:

\*: Power supply position shifts to "LOCK" from "OFF", when ignition switch is in the OFF position, selector lever is in the P position (A/T models), and any of the following conditions are met.

- Closing door
- Opening door
- Door is locked using door request switch
- Door is locked using Intelligent Key

The power supply position shifts to "ACC" when the push-button ignition switch (push switch) is pushed at "LOCK".

## BUZZER

### BUZZER : CONSULT Function (BCM - BUZZER)

INFOID:000000010841611

### CONSULT APPLICATION ITEMS



# DIAGNOSIS SYSTEM (BCM)

## < SYSTEM DESCRIPTION >

Test item	Diagnosis mode	Description
BUZZER	Data Monitor	Displays BCM input data in real time.
	Active Test	Operation of electrical loads can be checked by sending driving signal to them.

### DATA MONITOR

#### NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

Display item [Unit]	Description
PUSH SW [On/Off]	Status of push-button ignition switch judged by BCM.
UNLK SEN-DR [On/Off]	Status of unlock sensor judged by BCM.
VEH SPEED 1 [km/h]	Value of vehicle speed signal received from ABS actuator and electric unit (control unit) with CAN communication line.
KEY SW-SLOT [On/Off]	Status of key slot judged by BCM.
TAIL LAMP SW [On/Off]	Status of each switch judged by BCM using the combination switch readout function.
FR FOG SW [On/Off]	Status of front fog lamp switch judged by BCM.
DOOR SW-DR [On/Off]	Status of driver side door switch judged by BCM.

### ACTIVE TEST

Display item [Unit]	Description
IGN KEY WARN ALM	The key warning chime operation can be checked by operating the relevant function (On/Off).
SEAT BELT WARN TEST	The seat belt warning chime operation can be checked by operating the relevant function (On/Off).
ID REGIST WARNING	The ID regist warning chime operation can be checked by operating the relevant function (On/Off).
LIGHT WARN ALM	The light warning chime operation can be checked by operating the relevant function (On/Off).
RUN FLAT/T WARN BUZZER	The run-flat tire warning chime operation can be checked by operating the relevant function (On/Off).
KEY REMINDER WARN	The key reminder warning chime operation can be checked by operating the relevant function (On/Off).

WCS

# POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

## DTC/CIRCUIT DIAGNOSIS

### POWER SUPPLY AND GROUND CIRCUIT COMBINATION METER

#### COMBINATION METER : Diagnosis Procedure

INFOID:000000011312926

#### 1.CHECK FUSE

Check for blown fuses.

Power source	Fuse No.
Battery (With front door satellite sensor)	6
Battery (Without front door satellite sensor)	11
Ignition switch ACC or ON	19
Ignition switch ON or START	4

Is the inspection result normal?

YES >> GO TO 2.

NO >> Be sure to eliminate cause of malfunction before installing new fuse.

#### 2.CHECK POWER SUPPLY CIRCUIT

Check voltage between combination meter harness connector and ground.

Terminals		Ignition switch position	Voltage (Approx.)
(+)	(-)		
Combination meter		OFF ACC ON	Battery voltage
Connector	Terminal		
M53	1		
	15		
	2		
Ground			

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check harness between combination meter and fuse.

#### 3.CHECK GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect combination meter connector.
3. Check continuity between combination meter harness connector and ground.

Combination meter		Ground	Continuity
Connector	Terminal		
M53	17		Existed
	23		

Is the inspection result normal?

YES >> INSPECTION END

NO >> Repair harness or connector.

### BCM (BODY CONTROL MODULE)

#### BCM (BODY CONTROL MODULE) : Diagnosis Procedure

INFOID:000000011312929

#### 1.CHECK FUSE AND FUSIBLE LINK

Check that the following fuse and fusible link are not blown.

# POWER SUPPLY AND GROUND CIRCUIT

## < DTC/CIRCUIT DIAGNOSIS >

Signal name	Fuse and fusible link No.
Battery power supply	K
	10

### Is the fuse fusing?

YES >> Replace the blown fuse or fusible link after repairing the affected circuit if a fuse or fusible link is blown.

NO >> GO TO 2.

## 2.CHECK POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connectors.
3. Check voltage between BCM harness connector and ground.

Terminals		Voltage (Approx.)
(+)	(-)	
BCM		Ground  Battery voltage
Connector	Terminal	
M118	1	
M119	11	

### Is the measurement value normal?

YES >> GO TO 3.

NO >> Repair harness or connector.

## 3.CHECK GROUND CIRCUIT

Check continuity between BCM harness connector and ground.

BCM		Ground	Continuity
Connector	Terminal		
M119	13		Existed

### Does continuity exist?

YES >> INSPECTION END

NO >> Repair harness or connector.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
O  
P

WCS

# METER BUZZER CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

## METER BUZZER CIRCUIT

### Description

INFOID:000000010841614

- The buzzer for warning chime system is installed in the combination meter.
- The combination meter sounds the alarm buzzer based on the signals transmitted from various units.

### Component Function Check

INFOID:000000010841615

#### 1.CHECK OPERATION OF METER BUZZER

1. Select "BUZZER" of "BCM" on CONSULT.
2. Perform "LIGHT WARN ALM" of "Active Test".

##### Does meter buzzer beep?

- YES >> INSPECTION END  
NO >> GO TO 2.

#### 2.CHECK COMBINATION METER INPUT SIGNAL

Select the "Data Monitor" for the "METER/M&A" and check the "BUZZER" monitor value.

BUZZER  
Under the condition of buzzer input : On  
Except above : Off

##### Is the inspection result normal?

- YES >> Replace combination meter.  
NO >> Replace BCM. Refer to [BCS-106, "Removal and Installation"](#).

### Diagnosis Procedure

INFOID:000000010841616

#### 1.CHECK POWER SUPPLY OF COMBINATION METER

Check power supply of combination meter. Refer to [MWI-45, "COMBINATION METER : Diagnosis Procedure"](#).

##### Is the inspection result normal?

- YES >> INSPECTION END  
NO >> Repair power supply circuit of combination meter. Refer to [MWI-45, "COMBINATION METER : Diagnosis Procedure"](#).

# SEAT BELT BUCKLE SWITCH SIGNAL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

## SEAT BELT BUCKLE SWITCH SIGNAL CIRCUIT

### Description

INFOID:0000000010841617

Transmits a seat belt buckle switch signal (driver side) to the combination meter.

### Component Function Check

INFOID:0000000010841618

#### 1.CHECK COMBINATION METER INPUT SIGNAL

Select the "Data Monitor" for the "METER/M&A" and check the "BUCKLE SW" monitor value.

BUCKLE SW

When seat belt is fastened : Off

When seat belt is unfastened : On

>> INSPECTION END

### Diagnosis Procedure

INFOID:0000000010841619

#### 1.CHECK COMBINATION METER INPUT SIGNAL

1. Turn ignition switch ON.
2. Check voltage between combination meter harness connector and ground.

Terminals		Condition	Voltage (Approx.)
(+)	(-)		
Combination meter			
Connector	Terminal		
M54	35	Ground	0 V
		When seat belt is unfastened	

Is the inspection result normal?

YES >> Replace combination meter

NO >> GO TO 2.

#### 2.CHECK SEAT BELT BUCKLE SWITCH (DRIVER SIDE) CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect combination meter connector and seat belt buckle switch (driver side) connector.
3. Check continuity between combination meter harness connector and seat belt buckle switch (driver side) harness connector.

Terminals				Continuity
Combination meter		Seat belt buckle switch (driver side)		
Connector	Terminal	Connector	Terminal	
M54	35	B13*1 B515*2	1	Exist

\*1 : Without climate controlled seat

\*2 : With climate controlled seat

4. Check harness continuity between combination meter harness connector and ground.

Terminals		Ground	Continuity
Combination meter			
Connector	Terminal		
M54	35		Not existed

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
O  
P

WCS

# SEAT BELT BUCKLE SWITCH SIGNAL CIRCUIT

## < DTC/CIRCUIT DIAGNOSIS >

### Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair harness or connector.

### 3. CHECK SEAT BELT BUCKLE SWITCH (DRIVER SIDE) GROUND CIRCUIT

Check harness continuity between seat belt buckle switch (driver side) harness connector and ground.

Terminals		Ground	Continuity
Seat belt buckle switch (driver side)			
Connector	Terminal		
B13*1 B515*2	2		Exist

\*1 : Without climate controlled seat

\*2 : With climate controlled seat

### Is the inspection result normal?

YES >> INSPECTION END

NO >> Repair harness or connector.

## Component Inspection

INFOID:000000010841620

### 1. CHECK SEAT BELT BUCKLE SWITCH (DRIVER SIDE)

1. Turn ignition switch OFF.
2. Disconnect the seat belt buckle switch (driver side) connector.
3. Check continuity between terminals.

Terminals		Condition	Continuity
Seat belt buckle switch (driver side)			
1	2		
		When seat belt is fastened	Not existed
		When seat belt is unfastened	Exist

### Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace seat belt buckle (driver side). Refer to [SB-11. "SEAT BELT BUCKLE : Removal and Installation"](#).




# WARNING CHIME SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

## WARNING CHIME


Connector No.	B1
Connector Name	WIRE TO WIRE
Connector Type	TH80FW-CS16-TM4

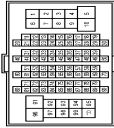

Terminal No.	Color Of Wire	Signal Name [Specification]
1	G	-
2	BG	-
3	W	-
4	Y	-
5	V	-
6	LG	-
7	GR	-
8	SB	-
9	Y	-
10	W	-
11	Y	-
12	W	-
13	BR	-
14	LG	-
15	B	-
16	V	-
17	R	-
18	B	-
19	B	-
20	SB	-
21	G	-
22	GR	-
23	V	-
24	BG	-
25	L	-
26	P	-
27	W	-
28	SHIELD	-
31	W	-
32	B	-
33	P	- [Coupe models]
33	W	- [Roaster models]
34	R	-
35	B	-
35	W	- [Roaster models]
36	B	- [Coupe models]
40	Y	-
41	L	-


42	GR	-
43	BR	-
44	R	-
45	BG	-
46	SB	- [Roaster models]
46	SHIELD	- [Coupe models]
47	V	-
48	SHIELD	-
51	W	-
52	R	-
57	SHIELD	-
58	B	-
60	V	-
61	SB	-
62	SHIELD	-
63	BR	-
64	Y	-
66	SHIELD	-
66	P	-
67	L	-
68	SHIELD	-
69	R	-
70	G	-
71	V	-
72	P	-
73	BR	-
74	GR	-
75	BG	-
80	Y	-
81	R	-
82	B	-
83	GR	-
84	G	-
84	L	- [Coupe models]
85	LG	- [Roaster models]
86	V	-
87	BR	-
88	GR	-
93	Y	-
94	G	- [Roaster models]
94	L	- [Coupe models]
95	GR	- [Coupe models]
95	LG	- [Roaster models]
96	L	-
97	Y	-
98	W	- [Coupe models]
98	Y/B	- [Roaster models]
99	LG	-
100	B	-

Connector No.	B13
Connector Name	SEAT BELT BUCKLE SWITCH (DRIVER SIDE)
Connector Type	A03FW

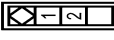

Terminal No.	Color Of Wire	Signal Name [Specification]
1	G	- [Coupe models]
1	L	- [Roaster models]
2	B	-

Connector No.	B16
Connector Name	DRIVER SIDE DOOR SWITCH
Connector Type	A03FW

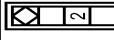


Terminal No.	Color Of Wire	Signal Name [Specification]
2	GR	-

Connector No.	B57
Connector Name	WIRE TO WIRE
Connector Type	NS16FW-CS



Terminal No.	Color Of Wire	Signal Name [Specification]
75	L	-
76	B	-
78	LG	-
79	B	-
80	B	-
91	L	-
92	V	-
93	G	-
94	BG	-
95	GR	-
100	BR	-

Connector No.	B63
Connector Name	DRIVER SIDE DOOR SWITCH
Connector Type	A03FW

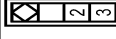

Terminal No.	Color Of Wire	Signal Name [Specification]
2	GR	-
3	B	-

JRNWD6429GB



# WARNING CHIME SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

## WARNING CHIME

Connector No.	BS507
Connector Name	WIRE TO WIRE
Connector Type	NS16MM-CS



95	92	91	78	78	83	82
93	100	90	94	77	75	79
81						

Terminal No.	Color Of Wire	Signal Name [Specification]
75	L	-
76	B	-
78	LG	-
78	B	-
90	B	-
91	P	-
92	V	-
93	G	-
94	BG	-
95	GR	-
100	BR	-

Connector No.	BS15
Connector Name	SEATBELT BUCKLE SWITCH (DRIVER SIDE)
Connector Type	TK03FW



2	1
---	---

Terminal No.	Color Of Wire	Signal Name [Specification]
1	LW	-
2	O	-

Connector No.	E41
Connector Name	ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)
Connector Type	BAA42FB-ALZ4-LH



1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45
---	---	---	---	---	---	---	---	---	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----

Terminal No.	Color Of Wire	Signal Name [Specification]
1	B	GROUND
2	G	LEVER
3	R	LEVER
4	B	GROUND
5	Y	DS FL
6	BG	DP RL
7	BR	DP RR
9	B	DP FR
10	W	DS FR
14	P	CANL
25	Y	BUS-L
26	LG	DP FL
27	GR	DS RL
28	G	LZ
29	P	DS RR
30	SB	BLS
31	R	VDC OFF SW
35	L	CAN-H
45	B	BUS-H

Connector No.	E106
Connector Name	WIRE TO WIRE
Connector Type	TH80FW-CS16-TM4



1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80	81	82	83	84	85	86	87	88	89	90	91	92	93	94	95	96	97	98	99	100
---	---	---	---	---	---	---	---	---	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	-----

Terminal No.	Color Of Wire	Signal Name [Specification]
1	Y	-
3	L	-
4	L	-
7	B	-
8	P	-
9	B	-
11	V	-
12	R	-
13	L	-
14	GR	-
15	P	-
16	W	-
17	SB	-
20	LS	-
21	BR	-
21	G	- [Coupe models]
31	L	-
32	Y	-
36	V	-
37	Y	-
38	R	-
39	B	-
40	W	-
41	LG	-
42	SB	-
43	G	-
44	GR	- [Except for roadster models with M/T]
44	R	- [Roadster models with M/T]
45	BG	-
46	W	-
47	P	-
56	SHIELD	-
59	L	-
70	P	-
80	W	-
81	P	-
82	G	-
83	V	-
84	L	-
85	BG	-
86	LG	-
87	R	-
89	P	-
91	W	-
92	L	-
93	G	-
94	Y	-
96	Y	-

97	BR	-
98	GR	-
99	LG	-
100	BG	-

Connector No.	M1
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS06FW-M2



3A	2A1A
6A	7A
8A	9A
10A	11A

Terminal No.	Color Of Wire	Signal Name [Specification]
1A	V	-
2A	G	-
3A	L	-
4A	P	-
5A	L	-
6A	Y	-
7A	BR	-
8A	L	-

Connector No.	M2
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS10FW-CS



4B	3B
6B	5B
8B	7B
10B	9B

Terminal No.	Color Of Wire	Signal Name [Specification]
2B	P	-
4B	G	-
5B	O	-
6B	Y	-
8B	R	-
9B	SB	-

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P


WCS

# WARNING CHIME SYSTEM

## < DTC/CIRCUIT DIAGNOSIS >


### WARNING CHIME

Connector No.	IM3
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS12FW-CS

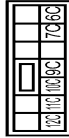

Terminal No.	Color Of Wire	Signal Name [Specification]
10C	L	-
11C	LG	-
12C	O	-
13C	R	-
14C	B	-
15C	O	-


Connector No.	IM6
Connector Name	WIRE TO WIRE
Connector Type	TH80MW-CS16-TM4

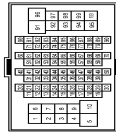

Terminal No.	Color Of Wire	Signal Name [Specification]
1	Y	-
3	L	-
4	L	-
7	B	-
8	P	-
9	B	-
11	GR	-
12	R	-
13	L	-
14	G	-
15	P	-
16	W	-
17	BR	-
20	GR	-

21	R	-
31	BR	-
32	V	-
36	SB	-
37	Y	-
38	LG	-
39	SB	-
40	W	-
41	LG	-
42	R	-
43	G	-
44	G	- [With A/T] - [With M/T]
44	R	-
45	O	-
46	G	-
47	BR	-
58	SHIELD	-
59	L	-
70	R	-
80	LG	-
91	GR	-
92	V	-
93	V	-
94	L	-
95	BR	-
96	Y	-
97	G	-
98	P	-
99	W	-
100	R	-

Connector No.	IM7
Connector Name	WIRE TO WIRE
Connector Type	TH80MW-CS16-TM4

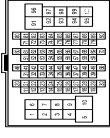

Terminal No.	Color Of Wire	Signal Name [Specification]
1	BR	-
2	O	-
3	LG	-
4	O	-
6	V	-
7	LG	-
8	SB	-
9	GR	-
11	Y	-
12	V	-
13	BR	-
14	V	-
15	B	-
16	V	-
17	R	-
18	L	-
20	SB	-
21	G	-
22	GR	-
23	V	-
24	R	-
25	L	-
26	P	-
27	B	-
28	SHIELD	-
31	W	-
32	B	-
33	W	-
34	R	-
35	B	-
36	L	-
40	L	-
41	R	-
42	GR	-
43	R	-
44	R	-

45	O	-
46	G	- [Roadster models] - [Coupe models]
46	SHIELD	-
47	R	-
48	SHIELD	-
51	V	-
52	R	-
57	SHIELD	-
58	B	-
60	L	-
61	R	-
62	SHIELD	-
63	R	-
64	G	-
65	SHIELD	-
66	LG	-
67	V	-
68	SHIELD	-
69	L	-
70	b	-
71	V	-
72	P	-
73	BR	-
74	GR	-
75	O	-
80	Y	-
81	W	-
82	BR	-
83	GR	-
84	L	-
85	LG	-
86	V	-
87	BR	-
88	SB	-
93	Y	-
94	L	-
94	SB	- [Roadster models] - [Coupe models]
95	GR	- [Roadster models] - [Coupe models]
95	W	-
96	L	-
97	LG	- [Coupe models]
97	Y	- [Roadster models]
98	BG	- [Coupe models]
98	Y/B	- [Roadster models]
99	W	-
100	B	-


JRNWD6431GB

# WARNING CHIME SYSTEM

## < DTC/CIRCUIT DIAGNOSIS >


### WARNING CHIME

Connector No.	M24
Connector Name	DATA LINK CONNECTOR
Connector Type	BD18FW

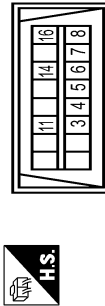

Terminal No.	Color Of Wire	Signal Name [Specification]
3	LG	- [Coupe models] - [Roadster models]
4	B	-
5	B	-
6	Y	-
7	Y	-
8	G	-
11	LG	- [Roadster models]
11	Y	- [Coupe models]
14	P	-
16	Y	-


Connector No.	M33
Connector Name	COMBINATION SWITCH
Connector Type	TH18FW-NH

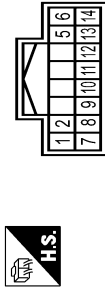

Terminal No.	Color Of Wire	Signal Name [Specification]
1	P	FR WASHER (L)
2	SB	OUTPUT 4
5	L	OUTPUT 3
6	B	GROUND
7	V	INPUT 3
8	O	OUTPUT 5
9	V	INPUT 2
10	R	INPUT 4
11	LG	INPUT 1

12	P	OUTPUT 1
13	BR	INPUT 5
14	G	OUTPUT 2

Connector No.	M53
Connector Name	COMBINATION METER
Connector Type	TH24FW-NH

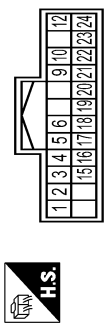

Terminal No.	Color Of Wire	Signal Name [Specification]
1	V	BATTERY POWER SUPPLY
2	O	IGNITION SIGNAL
3	L	VEHICLE SPEED SIGNAL (2-PULSE)
4	V	VEHICLE SPEED SIGNAL (6-PULSE) [For Mexico]
4	Y	VEHICLE SPEED SIGNAL (6-PULSE) [Except for Mexico]
5	B	ILLUMINATION CONTROL SIGNAL
6	R	ROOF STATUS SIGNAL
9	BR	COMMUNICATION SIGNAL (LINE (R)-TRIPLE METER)
10	L	COMMUNICATION SIGNAL (TRIPLE METER-METER)
12	G	S-MODE SWITCH SIGNAL
15	L	ACC POWER SUPPLY
16	R	AIR BAG SIGNAL
17	B	GROUND
18	V	AMBIENT SENSOR SIGNAL
19	G	AC AUTO AMP CONNECTION RECOGNITION SIGNAL
20	GR	AMBIENT SENSOR GROUND
21	L	CAN-H
22	P	CAN-L
23	B	GROUND
24	Y	FUEL LEVEL SENSOR GROUND

Connector No.	M54
Connector Name	COMBINATION METER
Connector Type	TH18FW-NH




Terminal No.	Color Of Wire	Signal Name [Specification]
25	W	ALTERNATOR SIGNAL
26	O	PARKING BRAKE SWITCH SIGNAL
27	LG	BRAKE FLUID LEVEL SWITCH SIGNAL
28	Y	SECURITY SIGNAL
29	GR	WASHER LEVEL SWITCH SIGNAL
32	G	PADDLE SHIFTER DOWN SIGNAL
33	O	PADDLE SHIFTER UP SIGNAL
34	BR	FUEL LEVEL SENSOR SIGNAL
35	L	SEAT BELT BUCKLE SWITCH SIGNAL (DRIVER SIDE)
36	L	PASSENGER SEAT BELT WARNINGSIGNAL [Except for Mexico]
36	P	NON-MANUAL MODE SIGNAL
37	G	MANUAL MODE SHIFT DOWN SIGNAL
38	L	MANUAL MODE SHIFT UP SIGNAL
39	L	MANUAL MODE SIGNAL
40	W	MANUAL MODE SIGNAL

Connector No.	M68
Connector Name	PARKING BRAKE SWITCH
Connector Type	F01FB-A




Terminal No.	Color Of Wire	Signal Name [Specification]
1	O	-

Connector No.	M118
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	M03FB-LC

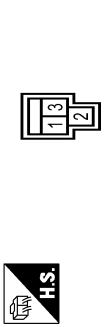

Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	BAT (FL)
2	W	POWER WINDOW POWER SUPPLY (BAT)
3	Y	POWER WINDOW POWER SUPPLY (IGN)

Connector No.	M119
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	NS18FW-CS

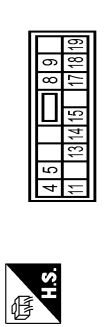

Terminal No.	Color Of Wire	Signal Name [Specification]
4	R	INTERIOR ROOM LAMP POWER SUPPLY
5	G	PASSENGER DOOR UNLOCK OUTPUT
8	V	ALL DOOR - FUEL LID LOCK OUTPUT
9	G	DRIVER DOOR - FUEL LID UNLOCK OUTPUT
11	BR	BAT (FUSE)
13	B	GROUND
14	R	PUSH BUTTON (IGNITION SW ILL GND)
15	Y	ACC. I.D.
17	W	TURN SIGNAL RH (FRONT SIDE)
18	O	TURN SIGNAL LH (FRONT SIDE)
19	P	ROOM LAMP TIMER CONTROL

JRNWD6432GB

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

WCS

# WARNING CHIME SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

## WARNING CHIME

Connector No.	M122
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH4QFB-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
72	L	ROOM ANT 2-
73	P	ROOM ANT 2+
74	SB	PASSENGER DOOR ANT-
75	BR	PASSENGER DOOR ANT+
76	V	DRIVER DOOR ANT-
77	LG	DRIVER DOOR ANT+
78	L	ROOM ANT 1-
79	R	ROOM ANT 1+
80	GR	NATS ANT AMP
81	W	NATS ANT AMP
82	R	IGN RELAY (FBI) CONT
83	GR	KYLS ENT RECEIVER (FRONT) COMM
87	BR	COMB SW INPUT 5
88	V	COMB SW INPUT 3
90	P	CANL
91	L	CANH
92	LG	KEY SLOT ILL
93	V	ON IND
95	O	ACC RELAY CONT
96	Y	AT SHIFT SELECTOR POWER SUPPLY
99	R	SHIFT P/CLUTCH PEDAL POS SW
100	GR	PASSENGER DOOR REQUEST SW
101	Y	DRIVER DOOR REQUEST SW
102	O	BLOWER FAN MOTOR RELAY CONT
103	LG	KYLS ENT RECEIVER (FRONT) PWR SUPPLY
107	LG	COMB SW INPUT 4
108	R	COMB SW INPUT 1
109	Y	COMB SW INPUT 2
110	P	HAZARD SW

Connector No.	M123
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH4QFS-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
113	O	OPTICAL SENSOR
114	R	CLUTCH INTERLOCK SW
115	O	STOP LAMP SW 1
116	SB	STOP LAMP SW 2
118	P	DR DOOR UNLOCK SENSOR
119	SB	DR DOOR UNLOCK SENSOR
121	R	IGN/FB
122	W	KEY SLOT SW
124	LG	PASSENGER DOOR SW
129	O	TRUNK LID OPENER CANCEL SW
130	L	REAR DEFOGGER SW
132	V	PWR SW & SOFT TOP CUI COMM (Passenger models)
132	Y	POWER WINDOW SW COMM (Coupe models)
133	G	PUSH BUTTON IGNITION SW ILL POWER LOCK IND
134	GR	LOCK IND
137	P	RECEIVER & SENSOR GND
138	V	RECEIVER & SENSOR POWER SUPPLY
139	L	TIRE PRESS RECEIV COMM
140	G	PIN POSITION
141	Y	SECURITY INDICATOR
142	O	COMBI SW OUTPUT 5
143	P	COMBI SW OUTPUT 1
144	G	COMBI SW OUTPUT 2
145	L	COMBI SW OUTPUT 3
146	SB	COMBI SW OUTPUT 4
150	GR	DRIVER DOOR SW
151	G	REAR WINDOW DEFOGGER RELAY CONT

JRNWD6433GB

# COMBINATION METER

< ECU DIAGNOSIS INFORMATION >

## ECU DIAGNOSIS INFORMATION

### COMBINATION METER

#### Reference Value

INFOID:0000000011312930

#### VALUES ON THE DIAGNOSIS TOOL

**NOTE:**

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

Monitor Item	Condition		Value/Status
SPEED METER [km/h]	Ignition switch ON	While driving	Equivalent to speedometer reading <b>NOTE:</b> 655.35 is displayed when the malfunction signal is received
SPEED OUTPUT [km/h]	Ignition switch ON	While driving	Equivalent to speedometer reading <b>NOTE:</b> 655.35 is displayed when the malfunction signal is received
ODO OUTPUT [km/h or mph]	Ignition switch ON	—	Equivalent to odometer reading in combination meter
TACHO METER [rpm]	Ignition switch ON	While driving	Equivalent to tachometer reading <b>NOTE:</b> 8191.875 is displayed when the malfunction signal is received
FUEL METER [L]	Ignition switch ON	—	Values according to fuel level
W TEMP METER [°C]	Ignition switch ON	—	Values according to engine coolant temperature <b>NOTE:</b> 215 is displayed when the malfunction signal is input
ABS W/L	Ignition switch ON	ABS warning lamp ON	On
		ABS warning lamp OFF	Off
VDC/TCS IND	Ignition switch ON	VDC OFF indicator lamp ON	On
		VDC OFF indicator lamp OFF	Off
SLIP IND	Ignition switch ON	SLIP Indicator lamp ON	On
		SLIP indicator lamp OFF	Off
BRAKE W/L	Ignition switch ON	Brake warning lamp ON	On
		Brake warning lamp OFF	Off
DOOR W/L	Ignition switch ON	Door warning lamp ON	On
		Door warning lamp OFF	Off
TRUNK/GLAS-H	Ignition switch ON	<b>NOTE:</b> This item is displayed, but cannot be monitored.	Off
HI-BEAM IND	Ignition switch ON	High-beam indicator lamp ON	On
		High-beam indicator lamp OFF	Off
TURN IND	Ignition switch ON	Turn signal indicator lamp ON	On
		Turn signal indicator lamp OFF	Off
RR FOG IND	Ignition switch ON	Rear fog lamp indicator lamp ON	On
		Rear fog lamp indicator lamp	Off

# COMBINATION METER

## < ECU DIAGNOSIS INFORMATION >

Monitor Item	Condition		Value/Status
LIGHT IND	Ignition switch ON	Tail lamp indicator lamp ON	On
		Tail lamp indicator lamp OFF	Off
OIL W/L	Ignition switch ON	Oil pressure warning lamp ON	On
		Oil pressure warning lamp OFF	Off
MIL	Ignition switch ON	Malfunction indicator lamp ON	On
		Malfunction indicator lamp OFF	Off
CRUISE IND	Ignition switch ON	Cruise indicator lamp ON	On
		Cruise indicator lamp OFF	Off
ATC/T-AMT W/L	Ignition switch ON	A/T CHECK indicator lamp ON	On
		A/T CHECK indicator lamp OFF	Off
4WD W/L	Ignition switch ON	<b>NOTE:</b> This item is displayed, but cannot be monitored.	Off
4WD LOCK IND	Ignition switch ON	<b>NOTE:</b> This item is displayed, but cannot be monitored.	Off
FUEL W/L	Ignition switch ON	Low-fuel warning displayed	On
		Low-fuel warning not displayed	Off
WASHER W/L	Ignition switch ON	Washer warning displayed	On
		Washer warning not displayed	Off
AIR PRES W/L	Ignition switch ON	Low tire pressure lamp ON	On
		Low tire pressure lamp OFF	Off
KEY G/Y W/L	Ignition switch ON	KEY warning lamp (yellow) ON	On
		KEY warning lamp (yellow) OFF	Off
KEY R W/L	Ignition switch ON	<b>NOTE:</b> This item is displayed, but cannot be monitored.	Off
KEY KNOB W/L	Ignition switch ON	<b>NOTE:</b> This item is displayed, but cannot be monitored.	Off
AFS OFF IND	Ignition switch ON	<b>NOTE:</b> This item is displayed, but cannot be monitored.	Off
MT SYNC REV IND	Ignition switch ON	S-MODE indicator ON	On
		S-MODE indicator OFF	Off
FUEL CAP W/L	Ignition switch ON	Fuel filler cap warning displayed	On
		Fuel filler cap warning not displayed	Off



# COMBINATION METER

## < ECU DIAGNOSIS INFORMATION >

Monitor Item	Condition		Value/Status	
LCD	Ignition switch ON	Engine start information display (A/T models)	B&P I	A
		Engine start information display (M/T models)	C&P I	B
	Ignition switch LOCK or ACC	Engine start information display (A/T models)	B&P N	C
		Engine start information display (M/T models)	C&P N	
	Ignition switch LOCK	Key ID warning display	ID NG	D
	Ignition switch LOCK	Steering lock information display	ROTAT	
	Ignition switch LOCK	P position warning display	SFT P	E
	Ignition switch LOCK	Intelligent Key insert information display	INSRT	F
	Ignition switch LOCK	Intelligent Key low battery warning display	BATT	
	Ignition switch ON	Take away warning display	NO KY	G
	Ignition switch LOCK	Key warning display	OUTKY	H
	Ignition switch ON	ACC warning display	LK WN	
SHIFT IND	Ignition switch ON	Shift position indicator P display	P	I
		Shift position indicator R display	R	
		Shift position indicator N display	N	J
		Shift position indicator D display	D	
		Shift position indicator L display	L	
		Shift position indicator M1 display	M1	K
		Shift position indicator M2 display	M2	
		Shift position indicator M3 display	M3	
		Shift position indicator M4 display	M4	L
		Shift position indicator M5 display	M5	
		Shift position indicator M6 display	M6	M
		Shift position indicator M7 display	M7	
AT S MODE SW	Ignition switch ON	<b>NOTE:</b> This item is displayed, but cannot be monitored.	Off	WCS
M RANGE SW	Ignition switch ON	Selector lever manual mode position	On	
		Other than the above	Off	O
NM RANGE SW	Ignition switch ON	Selector lever manual mode position	Off	
		Other than the above	On	P
AT SFT UP SW	Ignition switch ON	Selector lever + position	On	
		Other than the above	Off	
AT SFT DWN SW	Ignition switch ON	Selector lever – position	On	
		Other than the above	Off	
ST SFT UP SW	Ignition switch ON	Paddle shifter switch up operation	On	
		Other than above	Off	

# COMBINATION METER


## < ECU DIAGNOSIS INFORMATION >

Monitor Item	Condition		Value/Status
ST SFT DWN SW	Ignition switch ON	Paddle shifter switch down operation	On
		Other than above	Off
PKB SW	Ignition switch ON	Parking brake switch ON	On
		Parking brake switch OFF	Off
BUCKLE SW	Ignition switch ON	Seat belt not fastened	On
		Seat belt fastened	Off
BRAKE OIL SW	Ignition switch ON	Brake fluid level switch ON	On
		Brake fluid level switch OFF	Off
A/C AMP CONN	Ignition switch ON	Other than the following	On
		Receives A/C auto amp. connection recognition signal	Off
AMB POWER	Ignition switch ON	<b>NOTE:</b> This item is displayed, but cannot be monitored.	Off
ENTER SW	Ignition switch ON	When  is pressed	On
		Other than the above	Off
SELECT SW	Ignition switch ON	When  is pressed	On
		Other than the above	Off
MT SYNC REV SW	Ignition switch ON	S-MODE switch ON	On
		S-MODE switch OFF	Off
DISTANCE [km]	Ignition switch ON	—	Possible driving distance calculated by combination meter
OUTSIDE TEMP [°C or °F]	Ignition switch ON	—	Equivalent to ambient temperature <b>NOTE:</b> This may not match the indicated value on the information display.
FUEL LOW SIG	Ignition switch ON	Low fuel warning displayed	On
		Low fuel warning not displayed	Off
CRANKING SIG	Ignition switch ON		On
	At engine cranking		Off
ST CNT SIG	Ignition switch ON		On
	At engine cranking		Off
BUZZER	Ignition switch ON	Buzzer ON	On
		Buzzer OFF	Off

### NOTE:

Some items are not available according to vehicle specification.

### TERMINAL LAYOUT




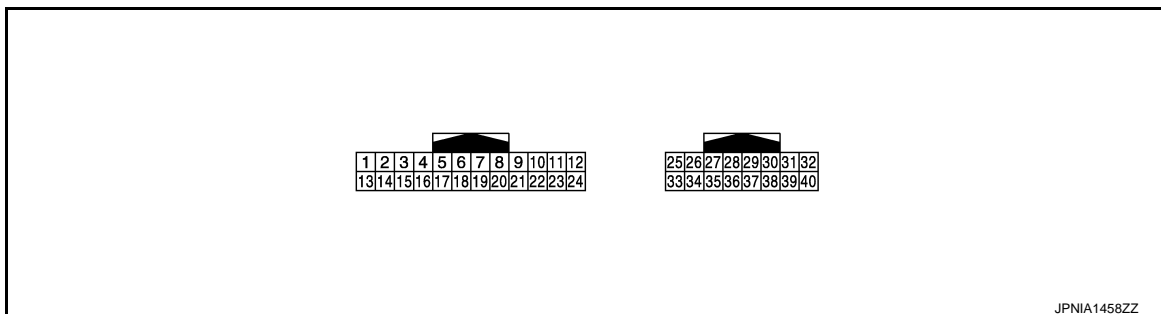


### PHYSICAL VALUES



# COMBINATION METER

## < ECU DIAGNOSIS INFORMATION >

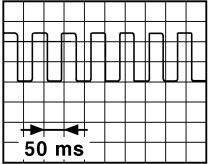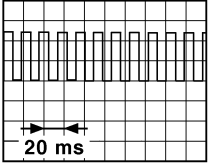
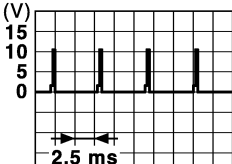
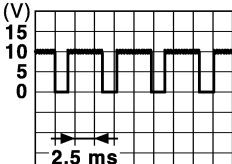
Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
1 (V)	Ground	Battery power supply	Input	Ignition switch OFF	—	Battery voltage
2 (O)	Ground	Ignition signal	Input	Ignition switch ON	—	Battery voltage
3 (L)	Ground	Vehicle speed signal (2-pulse)	Output	Ignition switch ON	Speedometer operated [When vehicle speed is ap- prox. 40 km/h (25 MPH)]	<p><b>NOTE:</b> The maximum voltage varies de- pending on the specification (destination unit).</p>  <p style="text-align: right; font-size: small;">JSNIA0015GB</p>
4 (Y) <sup>*1</sup> (V) <sup>*2</sup>	Ground	Vehicle speed signal (8-pulse)	Output	Ignition switch ON	Speedometer operated [When vehicle speed is ap- prox. 40 km/h (25 MPH)]	<p><b>NOTE:</b> The maximum voltage varies de- pending on the specification (destination unit).</p>  <p style="text-align: right; font-size: small;">JSNIA0012GB</p>
5 (B)	Ground	Illumination control signal	Output	Ignition switch ON	<ul style="list-style-type: none"> <li>• Lighting switch 1ST</li> <li>• When meter illumination is maximum</li> </ul>	 <p style="text-align: right; font-size: small;">JPNIA1363GB</p>
					<ul style="list-style-type: none"> <li>• Lighting switch 1ST</li> <li>• When meter illumination is step 12</li> </ul>	 <p style="text-align: right; font-size: small;">JPNIA1362GB</p>
					<ul style="list-style-type: none"> <li>• Lighting switch 1ST</li> <li>• When meter illumination is minimum</li> </ul>	10 V
6 (R)	Ground	Roof status signal	Input	Ignition switch ON	Roof warning lamp ON	0 V
					Roof warning lamp OFF	12 V

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
O  
P

WCS


# COMBINATION METER

## < ECU DIAGNOSIS INFORMATION >

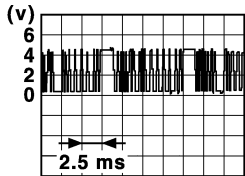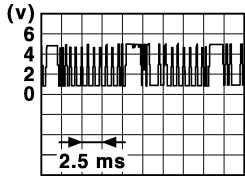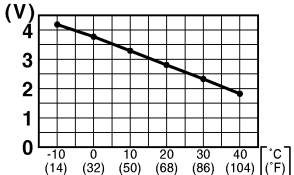Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
9 (BR)	Ground	Communication signal (METER⇒TRIPLE METER)	Output	Ignition switch ON	—	 <p style="text-align: right; font-size: small;">JPNIA1425GB</p>
10 (L)	Ground	Communication signal (TRIPLE METER⇒METER)	Input	Ignition switch ON	—	 <p style="text-align: right; font-size: small;">JPNIA1426GB</p>
12 (G)	Ground	S-MODE switch signal	Input	Ignition switch ON	S-MODE switch operation	12 V
					Other than the above	0 V
15 (L)	Ground	ACC power supply	Input	Ignition switch ACC	—	Battery voltage
16 (R)	Ground	Air bag signal	Input	Ignition switch ON	Air bag warning lamp ON	4 V
				Ignition switch OFF	Air bag warning lamp OFF	0 V
17 (B)	Ground	Ground	—	Ignition switch ON	—	0 V
18 (V)	Ground	Ambient sensor signal	Input	Ignition switch ON	Changes depending to amb- ient temperature.	 <p style="text-align: right; font-size: small;">JSNIA0014GB</p>
19 (G)	Ground	A/C auto amp. connection recognition signal	Input	Ignition switch ON	—	5 V
20 (GR)	Ground	Ambient sensor ground	Input	Ignition switch ON	—	0 V
21 (L)	—	CAN-H	—	—	—	—
22 (P)	—	CAN-L	—	—	—	—
23 (B)	Ground	Ground	—	Ignition switch ON	—	0 V
24 (Y)	Ground	Fuel level sensor ground	—	Ignition switch ON	—	0 V

# COMBINATION METER

## < ECU DIAGNOSIS INFORMATION >

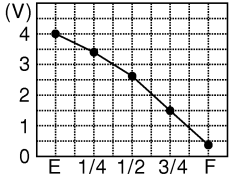Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
25 (W)	Ground	Alternator signal	Input	Ignition switch ON	Charge warning lamp ON	2 V
					Charge warning lamp OFF	12 V
26 (O)	Ground	Parking brake switch signal	Input	Engine idling	Parking brake is applied	0 V
					Parking brake is released	12 V
27 (LG)	Ground	Brake fluid level switch signal	Input	Ignition switch ON	Brake fluid level is normal	12 V
					Brake fluid level is less than LOW level	0 V
28 (Y)	Ground	Security signal	Input	Ignition switch ON	Security warning lamp ON	0 V
					Security warning lamp OFF	12 V
29 (GR)	Ground	Washer level switch signal	Input	Ignition switch ON	Washer level switch ON	0 V
					Washer level switch OFF	5 V
32 (G)	Ground	Paddle shifter down signal	Input	Ignition switch ON	Paddle shifter down operation	0 V
					Other than the above	5 V
33 (O)	Ground	Paddle shifter up signal	Input	Ignition switch ON	Paddle shifter up operation	0 V
					Other than the above	5 V
34 (BR)	Ground	Fuel level sensor signal	Input	Ignition switch ON	—	 <p style="text-align: right; font-size: small;">JPNIA0740ZZ</p>
35 (L)	Ground	Seat belt buckle switch signal (driver side)	Input	Ignition switch ON	When driver seat belt is fastened.	12 V
					When driver seat belt is unfastened.	0 V
36 (P) <sup>*1</sup> (L) <sup>*2</sup>	Ground	Passenger seat belt warning signal	Input	Ignition switch ON	<ul style="list-style-type: none"> <li>• When getting in the passenger seat.</li> <li>• When passenger seat belt is fastened.</li> </ul>	12 V
					<ul style="list-style-type: none"> <li>• When getting in the passenger seat.</li> <li>• When passenger seat belt is unfastened.</li> </ul>	0 V
37 (G)	Ground	Non-manual mode signal	Input	Ignition switch ON	Manual mode	12 V
					Other than the above	0 V
38 (V)	Ground	Manual mode shift down signal	Input	Ignition switch ON	Selector lever down operation	0 V
					Other then the above	12 V
39 (L)	Ground	Manual mode shift up signal	Input	Ignition switch ON	Selector lever up operation	0 V
					Other then the above	12 V
40 (W)	Ground	Manual mode signal	Input	Ignition switch ON	Manual mode	0 V
					Other than the above	12 V

A

B

C

D

E

F

G

H

I

J

K

L

M

WCS

O

P

# COMBINATION METER


## < ECU DIAGNOSIS INFORMATION >

\*1 : Except for Mexico

\*2 : For Mexico

### Wiring Diagram - METER -


INFOID:000000011312931

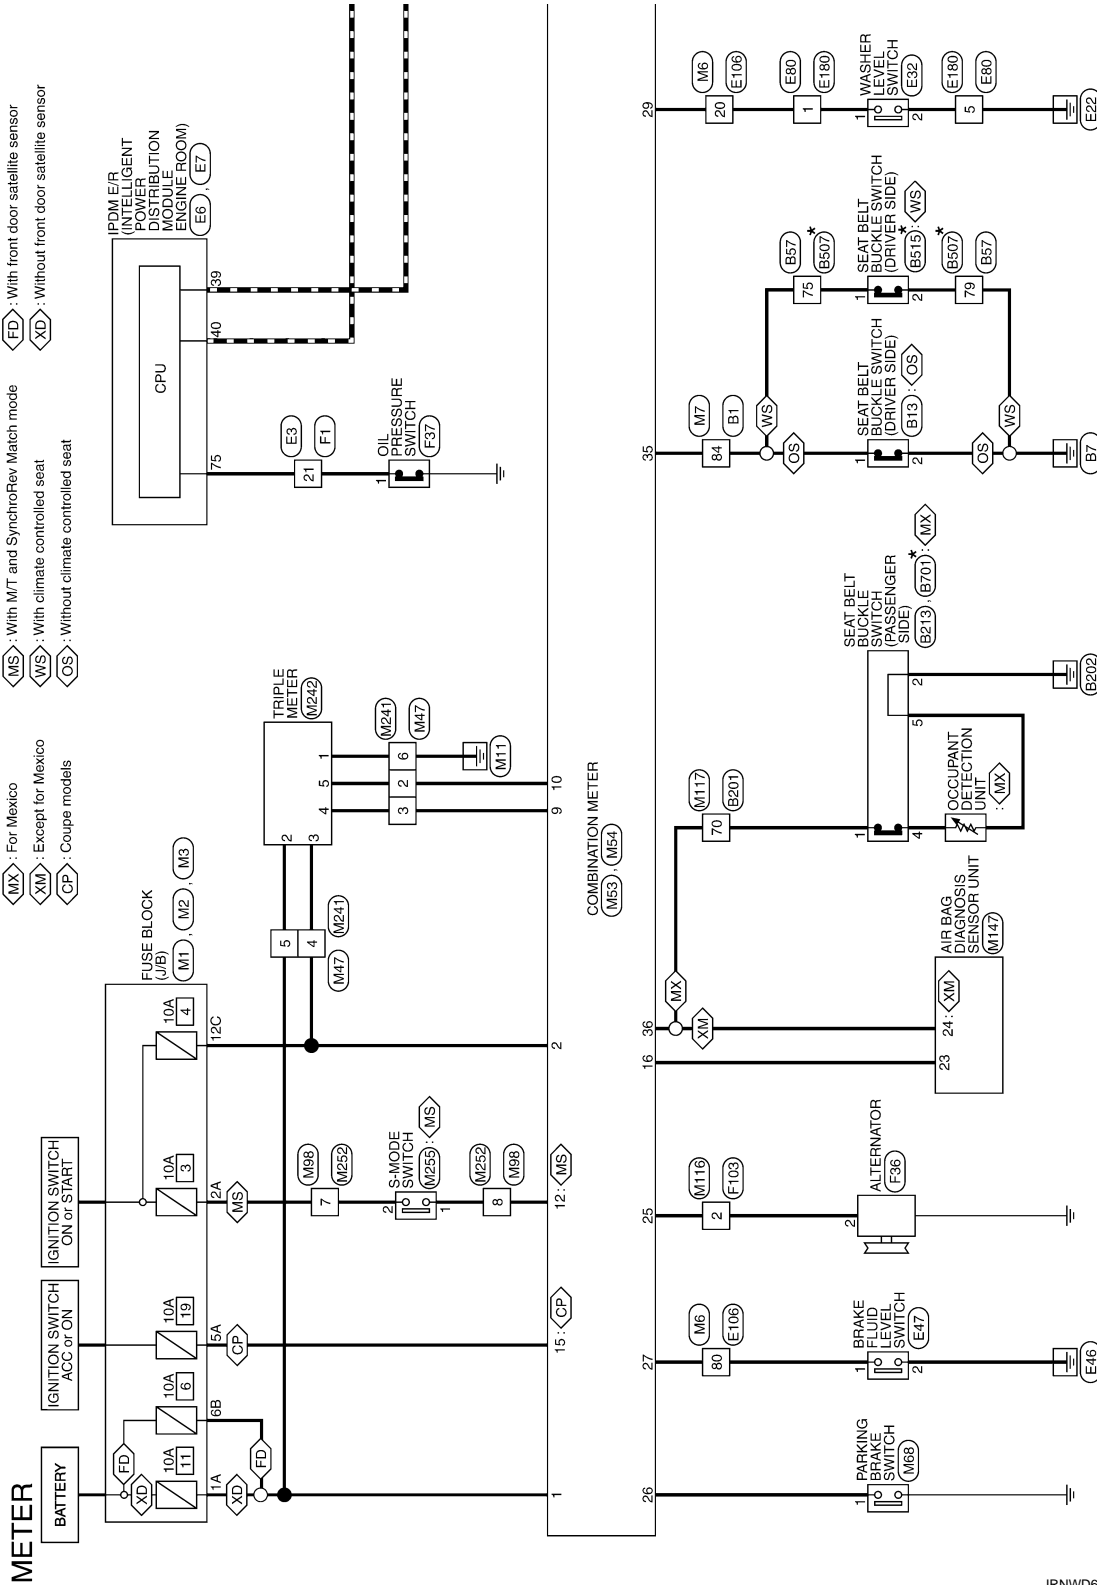

\* : This connector is not shown in "Harness Layout".

# COMBINATION METER

< ECU DIAGNOSIS INFORMATION >

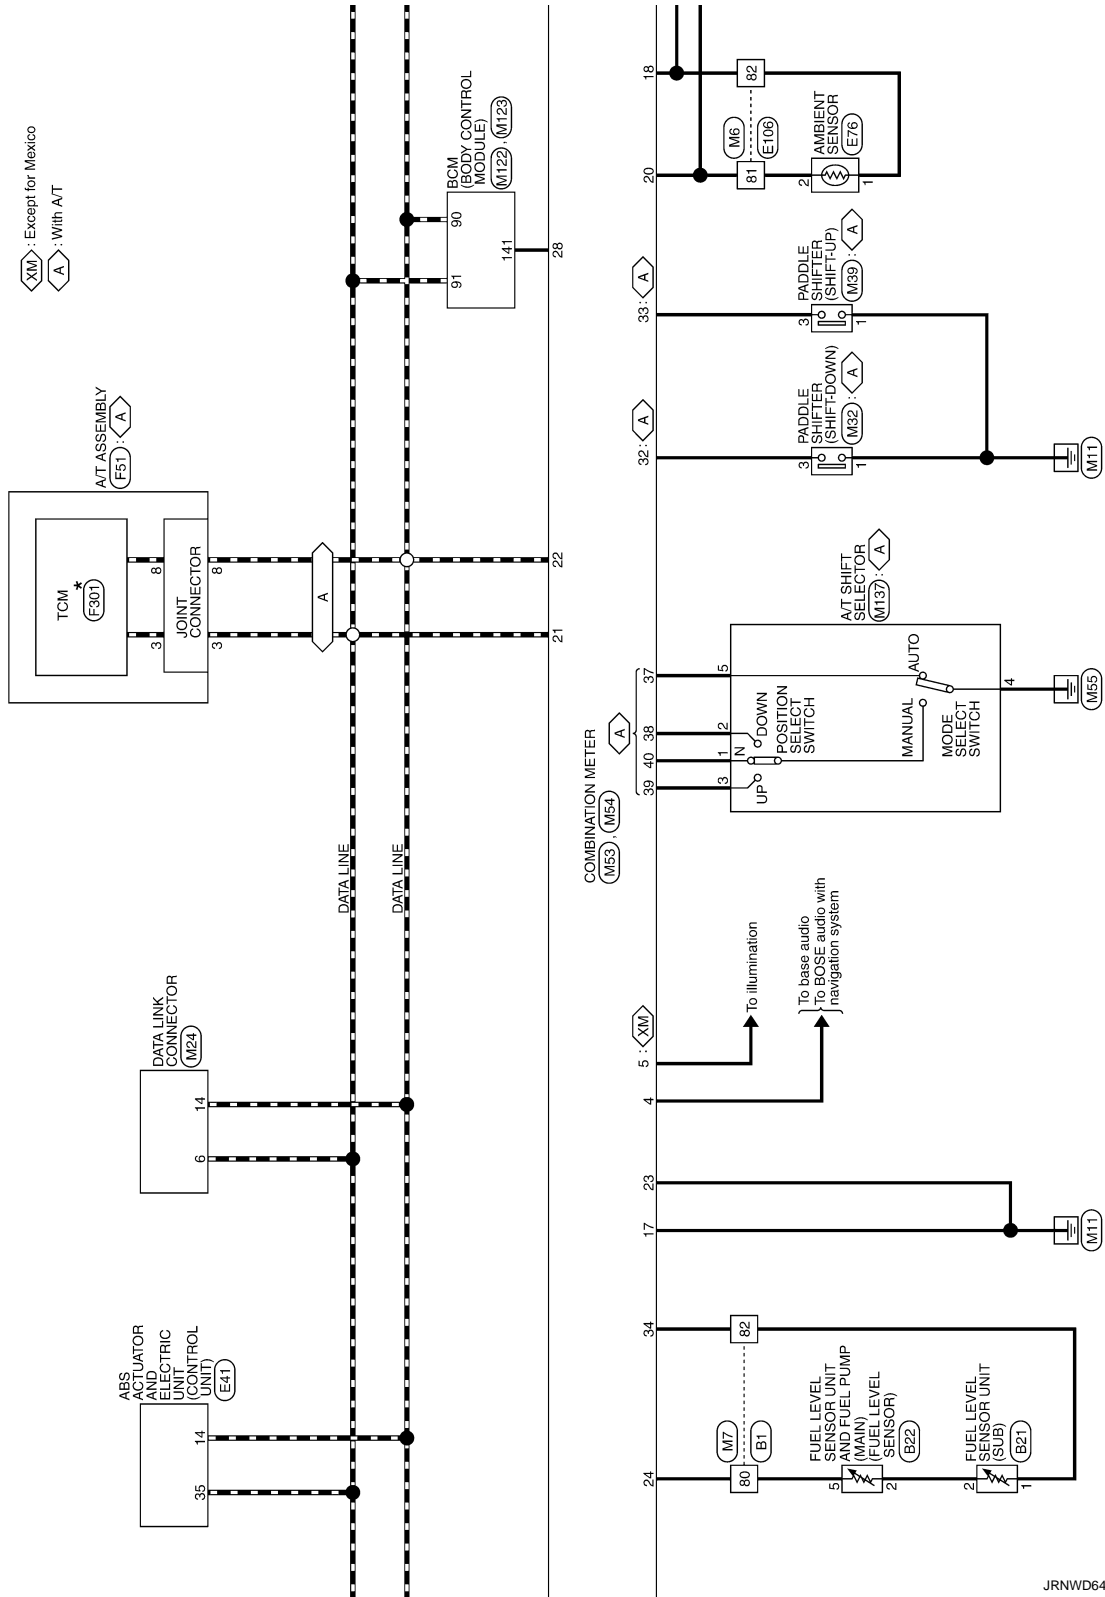

JRNWD6417GB


A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

WCS

# COMBINATION METER

< ECU DIAGNOSIS INFORMATION >

RS : Roadster models

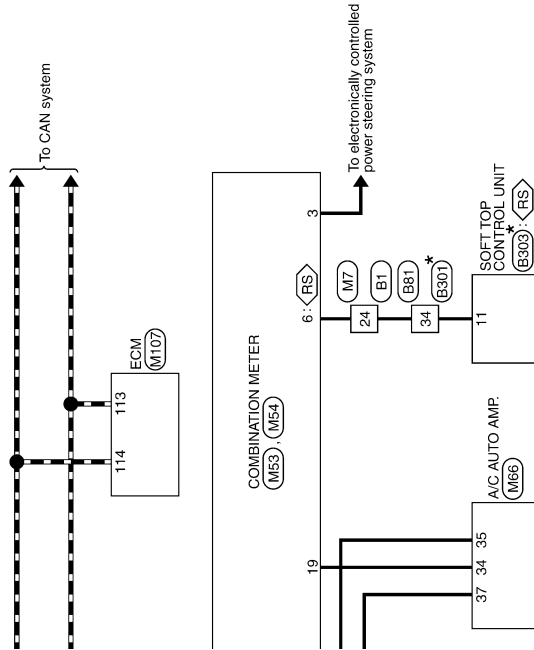

\* : This connector is not shown in "Harness Layout".


JRNWD6418GB

# COMBINATION METER

< ECU DIAGNOSIS INFORMATION >

## METER


Connector No.	B1
Connector Name	WIRE TO WIRE
Connector Type	TR80FW-CS16-TM4

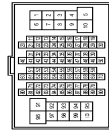

Terminal No.	Color Of Wire	Signal Name [Specification]
1	G	-
2	BG	-
3	Y	-
4	W	-
5	V	-
6	V	-
7	LG	-
8	GR	-
9	SB	-
11	Y	-
12	W	-
13	BR	-
14	LG	-
15	B	-
16	V	-
17	R	-
18	B	-
20	SB	-
21	G	-
22	GR	-
23	V	-
24	BG	-
25	L	-
26	P	-
27	W	-
28	SHIELD	-
31	W	-
32	B	-
33	P	- [Coupe models]
33	W	- [Rooster models]
34	R	-
35	B	- [Rooster models]
35	W	- [Coupe models]
36	B	-
40	Y	-
41	L	-

42	GR	-
43	BR	-
44	R	-
45	BG	-
46	SB	- [Rooster models]
46	SHIELD	- [Coupe models]
47	V	-
48	SHIELD	-
51	W	-
52	R	-
57	SHIELD	-
58	B	-
60	V	-
61	SB	-
62	SHIELD	-
63	BR	-
64	Y	-
68	SHIELD	-
68	P	-
67	L	-
68	SHIELD	-
69	R	-
70	G	-
71	V	-
72	P	-
73	BR	-
74	GR	-
75	BG	-
80	Y	-
81	R	-
82	B	-
83	GR	-
84	G	- [Coupe models]
84	L	- [Rooster models]
85	LG	-
86	V	-
87	BR	-
88	GR	-
93	Y	-
94	G	- [Rooster models]
94	L	- [Coupe models]
95	GR	- [Rooster models]
95	LG	- [Coupe models]
96	L	-
97	Y	-
98	W	- [Coupe models]
98	Y/B	- [Rooster models]
99	LG	-
100	B	-

Connector No.	B13
Connector Name	SEAT BELT BUCKLE SWITCH (DRIVER SIDE)
Connector Type	A03FW

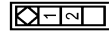

Terminal No.	Color Of Wire	Signal Name [Specification]
1	G	- [Coupe models]
1	L	- [Rooster models]
2	B	-

Connector No.	B21
Connector Name	FUEL LEVEL SENSOR UNIT (SUB)
Connector Type	IE2FGY-RS



Terminal No.	Color Of Wire	Signal Name [Specification]
1	B	-
2	W	-

Connector No.	B22
Connector Name	FUEL LEVEL SENSOR (INT AND FUEL PUMP MAIN)
Connector Type	ED5FGY-RS



Terminal No.	Color Of Wire	Signal Name [Specification]
1	P	-
2	W	-
3	B	-
4	R	-
5	Y	-

Connector No.	B57
Connector Name	WIRE TO WIRE
Connector Type	NS16FW-CS



Terminal No.	Color Of Wire	Signal Name [Specification]
75	L	-
76	B	-
78	LG	-
79	B	-
90	B	-
91	P	-
92	V	-
93	G	-
94	BG	-
95	GR	-
100	BR	-

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

WCS

# COMBINATION METER

## < ECU DIAGNOSIS INFORMATION >


### METER

Connector No.	B81
Connector Name	WIRE TO WIPE
Connector Type	TH40FW-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
4	W	-
5	BR	-
6	B	-
8	Y	-
9	BG	-
14	GR	-
15	SB	-
16	V	-
17	G	-
24	LG	-
25	V	-
31	L	-
32	P	-
34	BG	-
35	R	-

Connector No.	B201
Connector Name	WIRE TO WIPE
Connector Type	TH80FW-CS16-TM4

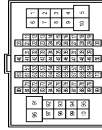


Terminal No.	Color Of Wire	Signal Name [Specification]
2	BR	- [Coupe models]
2	R	- [Roadster models]
3	B	- [Coupe models]
3	V	- [Roadster models]
4	G	- [Coupe models]

Terminal No.	Color Of Wire	Signal Name [Specification]
7	R	- [Coupe models]
7	Y	- [Roadster models]
8	LG	-
9	Y	-
11	R	-
20	G	-
21	R	-
30	B	-
40	W	-
41	V	-
42	G	-
43	L	-
44	SB	-
51	P	-
52	L	-
53	SHIELD	-
54	BR	-
55	Y	-
56	SHIELD	-
57	G	- [Coupe models]
57	P	- [Roadster models]
58	L	- [Roadster models]
58	R	- [Coupe models]
59	B	-
60	W	-
61	GR	-
62	B	-
63	Y	-
64	V	-
65	SB	-
66	BG	-
67	V	-
68	P	-
69	L	-
70	G	-
71	B	- [Roadster models]
71	V	- [Coupe models]
72	L	- [Roadster models]
72	P	- [Coupe models]
73	L	- [Roadster models]
73	P	- [Coupe models]
74	P	-
75	B	-
76	B	- [Coupe models]
76	W	- [Roadster models]
77	W	-
82	LG	- [Roadster models]
82	SB	- [Coupe models]
83	V	- [Coupe models]
83	W	- [Roadster models]

Terminal No.	Color Of Wire	Signal Name [Specification]
94	SHIELD	- [Roadster models]
94	GR	- [Coupe models]
95	LG	- [Roadster models]
97	LG	- [Coupe models]
97	Y	- [Roadster models]
98	W	- [Roadster models]
98	Y/B	- [Coupe models]
99	G	-
100	BR	- [Coupe models]
100	Y	- [Roadster models]

Connector No.	B213
Connector Name	SEAT BELT BUICKLE SWITCH (PASSENGER SIDE)
Connector Type	A03FW

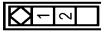

Terminal No.	Color Of Wire	Signal Name [Specification]
1	G	- [For Mexico]
1	LG	- [Except for Mexico]
2	B	-

Connector No.	B301
Connector Name	WIRE TO WIPE
Connector Type	TH40MW-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
4	LG	-
5	L	-
6	P	-
8	O	-

Terminal No.	Color Of Wire	Signal Name [Specification]
9	Y	-
14	BR	-
15	BR	-
16	W	-
17	DG	-
24	V	-
25	LG	-
31	BG	-
32	P	-
34	O	-
35	SB	-

Connector No.	B303
Connector Name	SOFT TOP CONTROL UNIT
Connector Type	TH40FBNH



Terminal No.	Color Of Wire	Signal Name [Specification]
1	BR	SENSOR POWER SUPPLY / ROOF STRIKER SENSOR LH
3	DG	ROOF STRIKER SENSOR RH
4	W	ROOF STRIKER SENSOR LH
8	Y	REVERSE SIGNAL
9	SB	POWER CONDITION (POWER WINDOW)
10	O	TRUNK LID OPEN SIGNAL
11	O	ROOF STATUS SIGNAL (INDICATOR)
12	SB	ROOF STATUS SIGNAL (AUDIO)
14	L	ROOF OPEN / CLOSE SWITCH (CLOSE)
15	LG	ROOF OPEN / CLOSE SWITCH (OPEN)
16	V	TRUNK ROOM LAMP SWITCH
17	BG	CAN-H
18	P	CAN-L
19	LG	LOCAL COMMUNICATION (POWER WINDOW)
20	V	LOCAL COMMUNICATION (BCM)
21	BR	SENSOR POWER SUPPLY / ROOF STRIKER SENSOR RH
28	DG	GROUND
35	P	ROOF OPEN / CLOSE SWITCH (GND)



# COMBINATION METER

< ECU DIAGNOSIS INFORMATION >

## METER

Connector No.	BS507
Connector Name	WIRE TO WIRE
Connector Type	NS16MW-GS



Terminal No.	Color Of Wire	Signal Name (Specification)
75	L	-
76	B	-
78	LG	-
79	B	-
90	B	-
91	P	-
92	V	-
93	G	-
94	BG	-
95	GR	-
100	BR	-

Connector No.	BS15
Connector Name	SEAT BELT BUCKLE SWITCH (DRIVER SIDE)
Connector Type	TK03FW




Terminal No.	Color Of Wire	Signal Name (Specification)
1	LW	-
2	O	-

Connector No.	B701
Connector Name	OCCUPANT DETECTION UNIT
Connector Type	6098E-ZZ20



Terminal No.	Color Of Wire	Signal Name (Specification)
4	-	-
5	-	-

Connector No.	E3
Connector Name	WIRE TO WIRE
Connector Type	5AAS9MB-R59-SH28

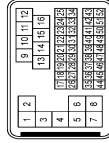

Terminal No.	Color Of Wire	Signal Name (Specification)
1	L/Y	-
2	SHIELD	-
3	L/B	-
4	SHIELD	-
5	BR	-
7	G	-
8	W	-
9	W	-
10	Y	-
11	V	-
12	SB	-
13	L	-
14	G	-
15	R	-
16	LG	-
17	GR	-
18	Y	-
19	BG	-

20	B	-
21	SB	-
22	G	-
23	SB	-
24	GR	-
25	V	-
27	GR	-
28	V	-
29	L	-
30	R	-
31	BR	-
32	Y	-
33	SB	-
34	BG	-
36	CR	-
37	SHIELD	-
38	L	-
39	P	-
40	R	-
41	W	-
42	LG	-
43	G	-
45	SB	-
46	SHIELD	-
47	W	-
48	BR	-
49	G	-
50	B	-
51	SB	-
52	R	-

Connector No.	E6
Connector Name	IPW/ER-INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)
Connector Type	TH08FW-NH



Terminal No.	Color Of Wire	Signal Name (Specification)
39	P	-
40	L	-
41	BW	-
42	Y	-

43	SB	-
44	W	-
45	G	-
46	V	-

Connector No.	E7
Connector Name	IPW/ER-INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)
Connector Type	TH20FW-CS12-M4



Terminal No.	Color Of Wire	Signal Name (Specification)
48	L	-
49	BG	-
51	Y	-
53	W	-
54	V	-
55	SB	-
56	LG	-
57	G	-
58	P	-
59	BR	-
70	BG	-
72	GR	-
73	GR	-
74	G	-
75	SB	-
76	Y	-
77	R	-
80	W	-

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

WCS

JRNWD6421GB

# COMBINATION METER

< ECU DIAGNOSIS INFORMATION >

## METER

Connector No.	E32
Connector Name	WASHER LEVEL SWITCH
Connector Type	Z02FBR



Terminal No.	Color Of Wire	Signal Name [Specification]
1	LG	-
2	B	-

Connector No.	E41
Connector Name	ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)
Connector Type	BAA42FB-AH24-LH



Terminal No.	Color Of Wire	Signal Name [Specification]
1	B	GROUND
2	G	UBMR
3	R	LEVR
4	B	GROUND
5	Y	DS FL
6	BG	DP FL
7	BR	DP RR
9	B	DP FR
10	W	DS FR
14	P	CAN-L
25	Y	BUS-L
26	LG	DS FL
27	GR	DS RL
28	G	UZ
28	P	DS RR
30	SB	BUS
31	R	VDC OFF SW
35	L	CANH

45	B	BUS-H
----	---	-------

Connector No.	E47
Connector Name	BRAKE FLUID LEVEL SWITCH
Connector Type	YV02FGY



Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	-
2	B	-

Connector No.	E76
Connector Name	AMBIENT SENSOR
Connector Type	RS07FB




Terminal No.	Color Of Wire	Signal Name [Specification]
1	G	-
2	P	-

Connector No.	E80
Connector Name	WIRE TO WIPE
Connector Type	RS08MB-PR



Terminal No.	Color Of Wire	Signal Name [Specification]
1	LG	-
2	R	-
4	BG	-
5	B	-
6	L	-
8	B	-

Connector No.	E106
Connector Name	WIRE TO WIPE
Connector Type	TH80FW-CS16-TM4

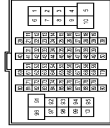

Terminal No.	Color Of Wire	Signal Name [Specification]
1	Y	-
3	L	-
4	L	-
7	B	-
8	P	-
9	B	-
11	V	-
12	R	-
13	L	-
14	GR	-
15	P	-
16	W	-
17	SB	-
20	LG	-

21	BR	- [Coupe models]
21	G	- [Roadster models]
31	L	-
32	Y	-
36	V	-
37	Y	-
38	R	-
39	B	-
40	W	-
41	LG	-
42	SB	-
43	G	-
44	GR	- [Except for roadster models with M/T]
44	R	- [Roadster models with M/T]
45	BG	-
46	W	-
47	P	-
56	SHIELD	-
58	L	-
70	b	-
80	W	-
81	P	-
82	G	-
83	V	-
84	L	-
85	BG	-
86	LG	-
87	R	-
89	P	-
91	W	-
92	L	-
93	G	-
94	Y	-
96	Y	-
97	BR	-
98	GR	-
99	LG	-
100	BG	-

# COMBINATION METER

< ECU DIAGNOSIS INFORMATION >


## METER

Connector No.	E180
Connector Name	WIRE TO WIRE
Connector Type	RS08FB-PR



Terminal No.	Color Of Wire	Signal Name [Specification]
1	LG	-
2	RG	-
4	BG	-
6	B	-
8	B	-

Connector No.	F1
Connector Name	WIRE TO WIRE
Connector Type	SA05FB-RSS-SHZ8

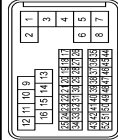

Terminal No.	Color Of Wire	Signal Name [Specification]
1	L/Y	-
2	SHIELD	-
3	L/B	-
4	SHIELD	-
5	BR	-
7	G	-
8	W	-
9	W	-
10	G	-
11	R	-
12	B	-
13	O	-
14	LG	-
15	BR	-

16	Y	-
17	W	-
18	LG	-
19	P	-
20	O	-
21	BR	-
22	G	-
23	Y	-
24	LG	-
25	V	-
27	GR	-
28	BR	-
29	L	-
30	R	-
31	P	-
32	W	-
33	SB	-
34	O	-
35	GR	-
37	SHIELD	-
38	W	-
39	Y	-
40	G	-
41	B	-
42	GR	-
43	R	-
45	SB	-
46	SHIELD	-
47	W/L	-
48	LG	-
49	O/L	-
50	L/Y	-
51	W	-
52	L/G	-

Connector No.	F36
Connector Name	ALTERNATOR
Connector Type	HS03FB




Terminal No.	Color Of Wire	Signal Name [Specification]
2	G	L
3	V	S
4	W	C

Connector No.	F37
Connector Name	OIL PRESSURE SWITCH
Connector Type	ED1FGY-RS-AR



Terminal No.	Color Of Wire	Signal Name [Specification]
1	BR	-

Connector No.	F51
Connector Name	A/T ASSEMBLY
Connector Type	RK10FG-DGY

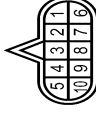

Terminal No.	Color Of Wire	Signal Name [Specification]
1	Y	IGNITION POWER SUPPLY
2	BR	BATTERY POWER SUPPLY (MEMORY BACKUP)
3	L	IGNIT
4	V	KEINE
5	B	GROUND
6	Y	IGNITION POWER SUPPLY
7	W	BACK-UP LAMP-RELAY
8	P	CANL
9	GR	STARTER RELAY
10	B	GROUND

Connector No.	F103
Connector Name	WIRE TO WIRE
Connector Type	TK39FW-NS10



Terminal No.	Color Of Wire	Signal Name [Specification]
2	G	-
3	W	-
4	R	-
5	B	-
8	L	-
9	Y	-
10	GR	-
19	O	-
20	Y	-
28	B	-

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

WCS

# COMBINATION METER

< ECU DIAGNOSIS INFORMATION >

## METER

Terminal No.	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46
Color	LG	R	O	W	W	P	L	Y	Y	LG	SB	W	LG	R	G	L	Y	V
Signal Name	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
Connector No.	M1	M1	M1	M1	M1	M1	M1	M1	M1	M1	M1	M1	M1	M1	M1	M1	M1	M1
Connector Name	IGNITION POWER SUPPLY	BATTERY POWER SUPPLY (MEMORY BACK-UP)	CAN-H	K-LINE	GROUND	IGNITION POWER SUPPLY	BACK-UP LAMP RELAY	CAN-L	STARTER RELAY	GROUND	IGNITION POWER SUPPLY	BACK-UP LAMP RELAY	CAN-L	STARTER RELAY	GROUND	IGNITION POWER SUPPLY	BACK-UP LAMP RELAY	CAN-L
Connector Type	SP10FG	SP10FG	SP10FG	SP10FG	SP10FG	SP10FG	SP10FG	SP10FG	SP10FG	SP10FG	SP10FG	SP10FG	SP10FG	SP10FG	SP10FG	SP10FG	SP10FG	SP10FG

Terminal No.	F301
Connector Name	TCM
Connector Type	SP10FG




Terminal No.	1	2	3	4	5	6	7	8	9	10
Color	W	B	R	O	G	GR	L	BR	Y	W/B
Signal Name	IGNITION POWER SUPPLY	BATTERY POWER SUPPLY (MEMORY BACK-UP)	CAN-H	K-LINE	GROUND	IGNITION POWER SUPPLY	BACK-UP LAMP RELAY	CAN-L	STARTER RELAY	GROUND
Connector No.	M2	M2	M2	M2	M2	M2	M2	M2	M2	M2
Connector Name	IGNITION POWER SUPPLY	BATTERY POWER SUPPLY (MEMORY BACK-UP)	CAN-H	K-LINE	GROUND	IGNITION POWER SUPPLY	BACK-UP LAMP RELAY	CAN-L	STARTER RELAY	GROUND
Connector Type	NS10FV-CS	NS10FV-CS	NS10FV-CS	NS10FV-CS	NS10FV-CS	NS10FV-CS	NS10FV-CS	NS10FV-CS	NS10FV-CS	NS10FV-CS


Terminal No.	M1
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS06FV-M2




Terminal No.	1A	2A	3A	4A	5A	6A	7A	8A
Color	V	G	L	P	L	Y	BR	L
Signal Name	-	-	-	-	-	-	-	-
Connector No.	M2	M2	M2	M2	M2	M2	M2	M2
Connector Name	FUSE BLOCK (J/B)	FUSE BLOCK (J/B)	FUSE BLOCK (J/B)	FUSE BLOCK (J/B)	FUSE BLOCK (J/B)	FUSE BLOCK (J/B)	FUSE BLOCK (J/B)	FUSE BLOCK (J/B)
Connector Type	NS10FV-CS	NS10FV-CS	NS10FV-CS	NS10FV-CS	NS10FV-CS	NS10FV-CS	NS10FV-CS	NS10FV-CS

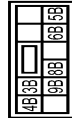

Terminal No.	M3
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS12FV-CS

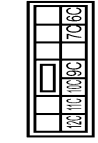

Terminal No.	10C	11C	12C	6C	7C	8C
Color	L	LG	O	R	B	O
Signal Name	-	-	-	-	-	-
Connector No.	M6	M6	M6	M6	M6	M6
Connector Name	WIRE TO WIRE	WIRE TO WIRE	WIRE TO WIRE	WIRE TO WIRE	WIRE TO WIRE	WIRE TO WIRE
Connector Type	TH80MW-CS16-TM4	TH80MW-CS16-TM4	TH80MW-CS16-TM4	TH80MW-CS16-TM4	TH80MW-CS16-TM4	TH80MW-CS16-TM4

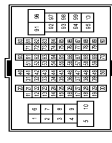

Terminal No.	1	3	4	7	8	9	11	12	13	14	15	16	17	20
Color	Y	L	L	B	P	B	GR	R	L	G	P	W	BR	GR
Signal Name	-	-	-	-	-	-	-	-	-	-	-	-	-	-
Connector No.	M6	M6	M6	M6	M6	M6	M6	M6	M6	M6	M6	M6	M6	M6
Connector Name	WIRE TO WIRE	WIRE TO WIRE	WIRE TO WIRE	WIRE TO WIRE	WIRE TO WIRE	WIRE TO WIRE	WIRE TO WIRE	WIRE TO WIRE	WIRE TO WIRE	WIRE TO WIRE	WIRE TO WIRE	WIRE TO WIRE	WIRE TO WIRE	WIRE TO WIRE
Connector Type	TH80MW-CS16-TM4	TH80MW-CS16-TM4	TH80MW-CS16-TM4	TH80MW-CS16-TM4	TH80MW-CS16-TM4	TH80MW-CS16-TM4	TH80MW-CS16-TM4	TH80MW-CS16-TM4	TH80MW-CS16-TM4	TH80MW-CS16-TM4	TH80MW-CS16-TM4	TH80MW-CS16-TM4	TH80MW-CS16-TM4	TH80MW-CS16-TM4

Terminal No.	21	31	32	36	37	38	39	40	41	42	43	44	44	44	45	46	47	58	59	70	80	81	83	84	85	86	87	89	91	92	93	94	96	97	99	100
Color	R	BR	V	SB	Y	LG	SB	W	LG	R	G	G	R	R	O	G	BR	SHIELD	L	R	LG	GR	V	L	BR	Y	G	P	W	P	P	Y	P	O	W	R
Signal Name	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
Connector No.	M3	M3	M3	M3	M3	M3	M3	M3	M3	M3	M3	M3	M3	M3	M3	M3	M3	M3	M3	M3	M3	M3	M3	M3	M3	M3	M3	M3	M3	M3	M3	M3	M3	M3	M3	M3
Connector Name	FUSE BLOCK (J/B)	FUSE BLOCK (J/B)	FUSE BLOCK (J/B)	FUSE BLOCK (J/B)	FUSE BLOCK (J/B)	FUSE BLOCK (J/B)	FUSE BLOCK (J/B)	FUSE BLOCK (J/B)	FUSE BLOCK (J/B)	FUSE BLOCK (J/B)	FUSE BLOCK (J/B)	FUSE BLOCK (J/B)	FUSE BLOCK (J/B)	FUSE BLOCK (J/B)	FUSE BLOCK (J/B)	FUSE BLOCK (J/B)	FUSE BLOCK (J/B)	FUSE BLOCK (J/B)	FUSE BLOCK (J/B)	FUSE BLOCK (J/B)	FUSE BLOCK (J/B)	FUSE BLOCK (J/B)	FUSE BLOCK (J/B)	FUSE BLOCK (J/B)	FUSE BLOCK (J/B)	FUSE BLOCK (J/B)	FUSE BLOCK (J/B)	FUSE BLOCK (J/B)	FUSE BLOCK (J/B)	FUSE BLOCK (J/B)	FUSE BLOCK (J/B)	FUSE BLOCK (J/B)	FUSE BLOCK (J/B)	FUSE BLOCK (J/B)	FUSE BLOCK (J/B)	FUSE BLOCK (J/B)
Connector Type	NS12FV-CS	NS12FV-CS	NS12FV-CS	NS12FV-CS	NS12FV-CS	NS12FV-CS	NS12FV-CS	NS12FV-CS	NS12FV-CS	NS12FV-CS	NS12FV-CS	NS12FV-CS	NS12FV-CS	NS12FV-CS	NS12FV-CS	NS12FV-CS	NS12FV-CS	NS12FV-CS	NS12FV-CS	NS12FV-CS	NS12FV-CS	NS12FV-CS	NS12FV-CS	NS12FV-CS	NS12FV-CS	NS12FV-CS	NS12FV-CS	NS12FV-CS	NS12FV-CS	NS12FV-CS	NS12FV-CS	NS12FV-CS	NS12FV-CS	NS12FV-CS	NS12FV-CS	NS12FV-CS

JRNWD6424GB

# COMBINATION METER

< ECU DIAGNOSIS INFORMATION >

## METER

Connector No.	M7
Connector Name	WIRE TO WIRE
Connector Type	TR80MM-C516-TM4



Terminal No.	Color Of Wire	Signal Name [Specification]
1	BR	-
2	O	-
3	LG	-
4	V	-
5	LG	-
6	V	-
7	LG	-
8	SB	-
9	GR	-
11	Y	-
12	V	-
13	BR	-
14	V	-
15	B	-
16	V	-
17	R	-
18	L	-
20	SB	-
21	G	-
22	GR	-
23	V	-
24	R	-
25	L	-
26	P	-
27	B	-
28	SHIELD	-
31	W	-
32	B	-
33	W	-
34	R	-
35	B	-
36	L	-
40	L	-
41	R	-
42	GR	-
43	R	-
44	R	-


45	O	-
46	G	- [Roadster models]
46	SHIELD	- [Coupe models]
47	R	-
48	SHIELD	-
51	V	-
52	R	-
57	SHIELD	-
58	B	-
60	L	-
61	R	-
62	SHIELD	-
63	R	-
64	G	-
65	SHIELD	-
66	LG	-
67	V	-
68	SHIELD	-
69	L	-
70	P	-
71	V	-
72	P	-
73	BR	-
74	GR	-
75	O	-
80	Y	-
81	W	-
82	BR	-
83	GR	-
84	L	-
85	LG	-
86	V	-
87	BR	-
88	SB	-
93	Y	-
94	L	-
94	SB	- [Roadster models]
94	SB	- [Coupe models]
95	GR	-
95	W	- [Roadster models]
95	W	- [Coupe models]
96	L	-
97	LG	-
97	Y	- [Roadster models]
98	BG	- [Coupe models]
98	Y/B	- [Roadster models]
99	W	-
100	B	-

Connector No.	M24
Connector Name	DATA LINK CONNECTOR
Connector Type	BD16FW



Terminal No.	Color Of Wire	Signal Name [Specification]
3	LG	- [Coupe models]
3	Y	- [Roadster models]
4	B	-
5	B	-
6	L	-
7	Y	-
8	G	-
11	LG	- [Roadster models]
11	Y	- [Coupe models]
14	P	-
16	Y	-

Connector No.	M32
Connector Name	PADDLE SHIFTER (SHFT-DOWN)
Connector Type	A03FW

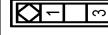


Terminal No.	Color Of Wire	Signal Name [Specification]
1	B	-
3	G	-

Connector No.	M39
Connector Name	PADDLE SHIFTER (SHFT-UP)
Connector Type	A04FW



Terminal No.	Color Of Wire	Signal Name [Specification]
1	B	-
3	O	-

Connector No.	M47
Connector Name	WIRE TO WIRE
Connector Type	TH12FW-NH

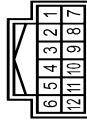

Terminal No.	Color Of Wire	Signal Name [Specification]
2	L	-
3	BR	-
4	O	-
5	V	-
6	B	-

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

WCS

JRNWD6425GB

# COMBINATION METER

## < ECU DIAGNOSIS INFORMATION >

### METER

Connector No.	M53
Connector Name	COMBINATION METER
Connector Type	TH24FY-NH



1	2	3	4	5	6	9	10	12	
15	16	17	18	19	20	21	22	23	24

Terminal No.	Color Of Wire	Signal Name [Specification]
1	V	BATTERY POWER SUPPLY
2	O	IGNITION SIGNAL
3	L	VEHICLE SPEED SIGNAL (2-PULSE)
4	Y	VEHICLE SPEED SIGNAL (PULSE) [For Mexico]
5	B	VEHICLE SPEED SIGNAL (3-PULSE) [For Mexico]
6	R	ILLUMINATION CONTROL SIGNAL
9	BR	ROOF STATUS SIGNAL
10	L	COMMUNICATION SIGNAL (METER-TRIPLE METER)
12	G	S-MODE SWITCH SIGNAL
15	L	ACC POWER SUPPLY
16	R	AIR BAG SIGNAL
17	B	GROUND
18	V	AMBIENT SENSOR SIGNAL
19	G	ACC AUTO AMP CONNECTION RECOGNITION SIGNAL
20	GR	AMBIENT SENSOR GROUND
21	L	CAN-H
22	P	CAN-L
23	B	GROUND
24	Y	FUEL LEVEL SENSOR GROUND

Connector No.	M54
Connector Name	COMBINATION METER
Connector Type	TH18FY-NH



25	26	27	28	29	32		
33	34	35	36	37	38	39	40

Terminal No.	Color Of Wire	Signal Name [Specification]
25	W	ALTERNATOR SIGNAL
26	O	PARKING BRAKE SWITCH SIGNAL
27	LG	BRAKE FLUID LEVEL SWITCH SIGNAL
28	Y	SECURITY SIGNAL
29	GR	WASHER LEVEL SWITCH SIGNAL
32	G	PADDLE SHIFTER DOWN SIGNAL
33	O	PADDLE SHIFTER UP SIGNAL
34	BR	FUEL LEVEL SENSOR SIGNAL
35	L	SEAT BELT BUCKLE SWITCH SIGNAL (DRIVER SIDE)
36	L	PASSENGER SEAT BELT WARNING SIGNAL (Export for Mexico)
37	P	NON-MANUAL MODE SIGNAL
38	V	MANUAL MODE SHIFT DOWN SIGNAL
39	L	MANUAL MODE SHIFT UP SIGNAL
40	W	MANUAL MODE SIGNAL

Connector No.	M66
Connector Name	A/C AUTO AMP.
Connector Type	SAB40FW



1	2	3	4	5	6	7	8	9	10
11	12	13	14	15	16	17	18	19	20

Terminal No.	Color Of Wire	Signal Name [Specification]
1	L	CAN-H
2	P	CAN-L
7	P	TX (CONT. AMP)
10	BR	RX (CONT. AMP) LAN SIGNAL

Terminal No.	Color Of Wire	Signal Name [Specification]
11	Y	EACH DOOR MOTOR POWER SUPPLY
15	O	SUNLOAD SENSOR SIGNAL
16	R	INTAKE SENSOR SIGNAL
17	L	ACC POWER SUPPLY
19	B	GROUND
20	G	IGNITION POWER SUPPLY
24	O	ECV SIGNAL
25	R	REAR WINDOW DEFOGGER FEEDBACK SIGNAL
27	L	REAR WINDOW DEFOGGER ON SIGNAL
32	P	BLOWER MOTOR CONTROL SIGNAL
34	G	A/C AUTO AMP CONNECTION RECOGNITION SIGNAL
35	V	AMBIENT SENSOR SIGNAL
36	LG	IN-VEHICLE SENSOR SIGNAL
37	GR	SENSOR GROUND
39	B	GROUND
40	Y	BATTERY POWER SUPPLY



Connector No.	M68
Connector Name	PARKING BRAKE SWITCH
Connector Type	PR1FB-A



Terminal No.	1
Color Of Wire	O
Signal Name [Specification]	-

Connector No.	M88
Connector Name	WIRE TO WIRE
Connector Type	TH408FW-NH



4	3	2	1
8	7	6	5

Terminal No.	Color Of Wire	Signal Name [Specification]
1	B	-
2	R	-
3	GR	-
4	P	-
5	L	-
6	L	-
7	B	-
8	G	-

Connector No.	M107
Connector Name	ECM
Connector Type	RI24FGY-R2G-R-LHZ



107	108	109	110	111	112	113	114	115	116	117	118	119	120	121	122	123	124	125	126
-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----

Terminal No.	Color Of Wire	Signal Name [Specification]
97	R	ACCELERATOR PEDAL POSITION SENSOR 1
98	P	ACCELERATOR PEDAL POSITION SENSOR 2
99	L	SENSOR POWER SUPPLY
100	W	SENSOR GROUND
101	SB	ASC2 STEERING SWITCH
102	GR	EVAP CONTROL SYSTEM PRESSURE SENSOR
103	G	SENSOR POWER SUPPLY
104	GR	SENSOR GROUND
105	L	REFRIGERANT PRESSURE SENSOR
106	W	FUEL TANK TEMPERATURE SENSOR
107	BR	SENSOR POWER SUPPLY
108	Y	SENSOR GROUND
109	G	PNP SIGNAL
110	R	ENGINE SPEED OUTPUT SIGNAL
112	SB	SENSOR GROUND
113	P	CAN COMMUNICATION LINE
114	L	CAN COMMUNICATION LINE
117	Y	DATA LINK CONNECTOR
121	LG	EVAP CANISTER VENT CONTROL VALVE
122	P	STOP LAMP SWITCH
123	B	ECM GROUND
124	B	ECM GROUND
125	R	POWER SUPPLY FOR ECM
126	BR	ASC2 BRAKE SWITCH

# COMBINATION METER

## < ECU DIAGNOSIS INFORMATION >

### METER


127	B	ECM GROUND
128	B	ECM GROUND

Connector No.	M116
Connector Name	WIRE TO WIRE
Connector Type	TK38BMW-NS10



Terminal No.	Color Of Wire	Signal Name [Specification]
2	W	-
3	BG	- [Coupe models]
3	O	- [Roaster models]
4	W	-
5	B	-
8	L	-
9	Y	-
10	R	-
19	O	-
20	G	-
28	B	-
29	LG	-
30	LG	-
31	O	-
39	G	-
42	G	-
43	P	-
44	L	-
45	BR	-
46	V	-

Connector No.	M117
Connector Name	WIRE TO WIRE
Connector Type	TH80MM-CS16-TM4

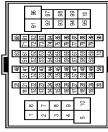

Terminal No.	Color Of Wire	Signal Name [Specification]
2	GR	- [Coupe models]
2	LG	- [Roaster models]
3	O	- [Coupe models]
3	O	- [Roaster models]
4	W	-
7	LG	- [Coupe models]
7	Y	- [Roaster models]
8	LG	-
9	Y	-
11	R	-
20	G	-
21	R	-
30	B	-
40	O	-
41	Y	-
42	G	-
43	L	-
44	SB	-
51	R	-
53	SHIELD	-
54	LG	-
55	V	-
56	SHIELD	-
57	G	- [Coupe models]
57	P	- [Roaster models]
58	L	-
58	R	-
59	B	-
60	W	-
61	GR	-
62	Y	-
63	Y	-
64	L	-
65	G	-
66	O	-

67	V	-
68	P	-
69	L	-
70	L	-
71	B	-
72	B	-
73	B	-
74	B	-
75	B	-
76	B	-
77	B	-
92	G	- [Coupe models]
92	LG	- [Roaster models]
93	R	- [Coupe models]
93	R	- [Roaster models]
94	G	- [Coupe models]
94	SHIELD	- [Roaster models]
95	LG	- [Coupe models]
95	SB	- [Roaster models]
97	LG	- [Coupe models]
97	Y	- [Roaster models]
98	V	- [Coupe models]
98	Y/B	- [Roaster models]
99	G	-
100	BR	- [Coupe models]
100	Y	- [Roaster models]



Connector No.	M122
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40F8-NH



80	GR	NATS ANT AMP
81	W	NATS ANT AMP
82	R	IGN RELAY (F/B) CONT
83	GR	KYLS ENT RECEIVER (FRONT) COMM
87	BR	COMBI SW INPUT 5
88	V	COMBI SW INPUT 3
90	P	CAN-L
91	L	CAN-H
92	LG	KEY SLOT ILL
93	V	ON IND
95	O	ACC RELAY CONT
96	Y	A/T SHIFT SELECTOR POWER SUPPLY
99	R	SHIFT P/CLUTCH PEDAL POS SW
100	GR	PASSENGER DOOR REQUEST SW
101	Y	DRIVER DOOR REQUEST SW
102	O	BLOWER FAN MOTOR RELAY CONT
103	LG	KYLS ENT RECEIVER (FRONT) I/PWR SUPPLY
107	LG	COMBI SW INPUT 1
108	R	COMBI SW INPUT 4
109	Y	COMBI SW INPUT 2
110	P	HAZARD SW



Connector No.	M123
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40F8-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
114	O	OPTICAL SENSOR
115	R	CLUTCH INTERLOCK SW
116	O	-
116	SB	STOP LAMP SW 1
118	P	STOP LAMP SW 2
119	SB	DR DOOR UNLOCK SENSOR
121	R	KEY SLOT SW
122	W	IGN I/F
124	LG	PASSENGER DOOR SW
129	O	TRUNK LID OPENER CANCEL SW
130	L	REAR DEFROGGER SW
132	V	R/W SW & SOFT TOP C/L COMM [Roaster models]
132	Y	POWER WINDOW SW COMM [Coupe models]

Terminal No.	Color Of Wire	Signal Name [Specification]
72	L	ROOM ANT 2-
73	P	ROOM ANT 2+
74	SB	PASSENGER DOOR ANT-
76	BR	PASSENGER DOOR ANT+
76	V	DRIVER DOOR ANT-
77	LG	DRIVER DOOR ANT+
78	L	ROOM ANT 1-
79	R	ROOM ANT 1+

JRNWD6427GB

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
O  
P

WCS

# COMBINATION METER

< ECU DIAGNOSIS INFORMATION >

Terminal No.	Color Of Wire	Signal Name [Specification]
133	G	PUSH BUTTON IGNITION SW ILL POWER
134	GR	LOCK IND
137	P	RECEIVER & SENSOR GND
138	V	RECEIVER & SENSOR POWER SUPPLY
139	L	TIRE PRESS RECEIV COMM
140	G	P/N POSITION
141	Y	SECURITY INDICATOR
142	O	COMBI SW OUTPUT 5
143	P	COMBI SW OUTPUT 1
144	G	COMBI SW OUTPUT 2
145	L	COMBI SW OUTPUT 3
146	SB	COMBI SW OUTPUT 4
150	GR	DRIVER DOOR SW
151	G	REAR WINDOW DEFROGGER RELAY CONT

Terminal No.	Color Of Wire	Signal Name [Specification]
1	LG	IGN
2	B	GND
3	Y	DR1 (+)
4	Y	DR1 (-) DR2 (-)
5	Y	DR2 (+)
6	Y	AS1 (+)
7	Y	AS1 (-)
8	Y	AS2 (+)
9	Y	AS2 (-)
18	R	ECZS (+)
19	L	ECZS (-)
22	SHIELD	GND
23	R	AIRBAG W/L
24	P	SEAT BELT
25	R	CUTOFF TELLTALE
51	W	SATELLITE RH2 (+)
52	B	SATELLITE RH2 (-)
53	Y	SATELLITE LH2 (+)
54	BR	SATELLITE LH2 (-)
59	L	CAN-H
60	P	CAN-L

Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	-
2	V	-
3	L	-
4	B	-
5	G	-
6	R	-
7	W	-
8	P	-
9	Y	-
10	R	-

Terminal No.	Color Of Wire	Signal Name [Specification]
1	LG	IGN
2	B	GND
3	Y	DR1 (+)
4	Y	DR1 (-) DR2 (-)
5	Y	DR2 (+)
6	Y	AS1 (+)
7	Y	AS1 (-)
8	Y	AS2 (+)
9	Y	AS2 (-)
18	R	ECZS (+)
19	L	ECZS (-)
22	SHIELD	GND
23	R	AIRBAG W/L
24	P	SEAT BELT
25	R	CUTOFF TELLTALE
51	W	SATELLITE RH2 (+)
52	B	SATELLITE RH2 (-)
53	Y	SATELLITE LH2 (+)
54	BR	SATELLITE LH2 (-)
59	L	CAN-H
60	P	CAN-L

Terminal No.	Color Of Wire	Signal Name [Specification]
1	B	GROUND
2	V	BATTERY POWER SUPPLY
3	O	IGNITION SIGNAL
4	BR	COMMUNICATION SIGNAL (METER, TRIPLE METER)
5	L	COMMUNICATION SIGNAL (TRIPLE METER, METER)

Terminal No.	Color Of Wire	Signal Name [Specification]
1	BG	- [Course models]
2	O	- [Recaster models]
3	B	-
4	G	-
5	B	-
6	L	-
7	G	-
8	G	-

Terminal No.	Color Of Wire	Signal Name [Specification]
1	B	GROUND
2	V	BATTERY POWER SUPPLY
3	O	IGNITION SIGNAL
4	BR	COMMUNICATION SIGNAL (METER, TRIPLE METER)
5	L	COMMUNICATION SIGNAL (TRIPLE METER, METER)

Terminal No.	Color Of Wire	Signal Name [Specification]
1	BG	- [Course models]
2	O	- [Recaster models]
3	B	-
4	G	-
5	B	-
6	L	-
7	G	-
8	G	-

## METER

## Fail-Safe

### FAIL-SAFE

The combination meter activates the fail-safe control if CAN communication with each unit is malfunctioning.

JRNWD6428GB

INFOID:000000011312932



# COMBINATION METER

## < ECU DIAGNOSIS INFORMATION >

Function		Specifications	
Speedometer		Reset to zero by suspending communication.	A
Tachometer			
Engine coolant temperature gauge		The segment turns OFF by suspending communication.	B
Fuel gauge		Indicates fuel level.	
Illumination control		When suspending communication, changes to nighttime mode.	C
Shift position indicator		The segment turns OFF by suspending communication.	D
S-MODE indicator			
Manual mode indicator			
Information display	Door open warning	The display turns OFF by suspending communication.	E
	Parking brake release warning		
	Fuel filler cap warning		
	Instantaneous fuel warning	<ul style="list-style-type: none"> <li>When reception time of an abnormal signal is 2 seconds or less, the last received datum is used for calculation to indicate the result.</li> <li>When reception time of an abnormal signal is more than two seconds, the last result calculated during normal condition is indicated.</li> </ul>	F
	Average fuel consumption		
	Average vehicle speed		
	Travel distance		
Buzzer		The buzzer turns OFF by suspending communication.	G
Warning lamp/indicator lamp	ABS warning lamp	The lamp turns ON by suspending communication.	H
	VDC warning lamp		
	Brake warning lamp		
	Malfunction indicator lamp		
	Low tire pressure warning lamp	The lamp turns ON after flashing for 1 minute.	I
	High beam indicator lamp	The lamp turns OFF by suspending communication.	J
	Turn signal indicator lamp		
	Light indicator lamp		
	Rear fog lamp indicator lamp		
	Oil pressure warning lamp		
	CRUISE indicator lamp		
	Key warning lamp		
VDC OFF indicator lamp			

## DTC Index

INFOID:000000011312933

Display contents of CONSULT	Diagnostic item is detected when ...	Refer to	WCS
CAN COMM CIRCUIT [U1000]	When combination meter is not transmitting or receiving CAN communication signal for 2 seconds or more.	<a href="#">MWI-38. "Diagnosis Procedure"</a>	O
CONTROL UNIT (CAN) [U1010]	When detecting error during the initial diagnosis of the CAN controller of combination meter.	<a href="#">MWI-39. "Diagnosis Procedure"</a>	P
COMM ERROR 1 [B2201]	If a communication error is present in the communication line between combination meter and triple meter for 2 seconds or more.	<a href="#">MWI-40. "Diagnosis Procedure"</a>	
VEHICLE SPEED [B2205]	The abnormal vehicle speed signal is input from the ABS actuator and electric unit (control unit) for 2 seconds or more.	<a href="#">MWI-42. "Diagnosis Procedure"</a>	

# COMBINATION METER

## < ECU DIAGNOSIS INFORMATION >

Display contents of CONSULT	Diagnostic item is detected when ...	Refer to
ENGINE SPEED [B2267]	If ECM continuously transmits abnormal engine speed signals for 2 seconds or more.	<a href="#">MWI-43.</a> <a href="#">"Diagnosis Procedure"</a>
WATER TEMP [B2268]	If ECM continuously transmits abnormal engine coolant temperature signals for 60 seconds or more.	<a href="#">MWI-44.</a> <a href="#">"Diagnosis Procedure"</a>

### NOTE:

The details of TIME display are as follows.

- CRNT: The malfunctions that are detected now.
- PAST: The malfunctions was detected in the past. IGN counter is displayed on FFD (Freeze Frame data).
- 1 - 39: The number is indicated when it is normal at present and a malfunction was detected in the past. It increases like 0 → 1 → 2 ... 38 → 39 after returning to the normal condition whenever IGN OFF → ON. It is fixed to 39 until the self-diagnosis results are erased if it is over 39. It returns to 0 when a malfunction is detected again in the process.

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

## BCM (BODY CONTROL MODULE)

### Reference Value

INFOID:000000011312934

### VALUES ON THE DIAGNOSIS TOOL

#### NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

#### CONSULT MONITOR ITEM

Monitor Item	Condition	Value/Status
FR WIPER HI	Other than front wiper switch HI	Off
	Front wiper switch HI	On
FR WIPER LOW	Other than front wiper switch LO	Off
	Front wiper switch LO	On
FR WASHER SW	Front washer switch OFF	Off
	Front washer switch ON	On
FR WIPER INT	Other than front wiper switch INT	Off
	Front wiper switch INT	On
FR WIPER STOP	Front wiper is not in STOP position	Off
	Front wiper is in STOP position	On
INT VOLUME	Wiper intermittent dial is in a dial position 1 - 7	Wiper intermittent dial position
TURN SIGNAL R	Other than turn signal switch RH	Off
	Turn signal switch RH	On
TURN SIGNAL L	Other than turn signal switch LH	Off
	Turn signal switch LH	On
TAIL LAMP SW	Other than lighting switch 1ST and 2ND	Off
	Lighting switch 1ST or 2ND	On
HI BEAM SW	Other than lighting switch HI	Off
	Lighting switch HI	On
HEAD LAMP SW 1	Other than lighting switch 2ND	Off
	Lighting switch 2ND	On
HEAD LAMP SW 2	Other than lighting switch 2ND	Off
	Lighting switch 2ND	On
PASSING SW	Other than lighting switch PASS	Off
	Lighting switch PASS	On
AUTO LIGHT SW	Other than lighting switch AUTO	Off
	Lighting switch AUTO	On
FR FOG SW	<b>NOTE:</b> The item is indicated, but not monitored.	Off
RR FOG SW	Rear fog lamp switch OFF	Off
	Rear fog lamp switch ON	On
DOOR SW-DR	Driver door closed	Off
	Driver door opened	On
DOOR SW-AS	Passenger door closed	Off
	Passenger door opened	On
DOOR SW-RR	<b>NOTE:</b> The item is indicated, but not monitored.	Off

## BCM (BODY CONTROL MODULE)

### < ECU DIAGNOSIS INFORMATION >

Monitor Item	Condition	Value/Status
DOOR SW-RL	<b>NOTE:</b> The item is indicated, but not monitored.	Off
DOOR SW-BK	<ul style="list-style-type: none"> <li>• Back door closed (Coupe models)</li> <li>• Trunk lid closed (Roadster models)</li> </ul>	Off
	<ul style="list-style-type: none"> <li>• Back door opened (Coupe models)</li> <li>• Trunk lid opened (Roadster models)</li> </ul>	On
CDL LOCK SW	Other than door lock and unlock switch LOCK	Off
	Door lock and unlock switch LOCK	On
CDL UNLOCK SW	Other than door lock and unlock switch UNLOCK	Off
	Door lock and unlock switch UNLOCK	On
KEY CYL LK-SW	Other than driver door key cylinder LOCK position	Off
	Driver door key cylinder LOCK position	On
KEY CYL UN-SW	Other than driver door key cylinder UNLOCK position	Off
	Driver door key cylinder UNLOCK position	On
KEY CYL SW-TR	<b>NOTE:</b> The item is indicated, but not monitored.	Off
HAZARD SW	Hazard switch is OFF	Off
	Hazard switch is ON	On
REAR DEF SW <b>NOTE:</b> For models with NAVI this item is not monitored.	Rear window defogger switch OFF	Off
	Rear window defogger switch ON	On
H/L WASH SW	<b>NOTE:</b> The item is indicated, but not monitored.	Off
TR CANCEL SW	Trunk lid opener cancel switch OFF	Off
	Trunk lid opener cancel switch ON	On
TR/BD OPEN SW	<ul style="list-style-type: none"> <li>• Back door opener switch OFF (Coupe models)</li> <li>• Trunk lid opener switch OFF (Roadster models)</li> </ul>	Off
	<ul style="list-style-type: none"> <li>• While the back door opener switch is turned ON (Coupe models)</li> <li>• While the trunk lid opener switch is turned ON (Roadster models)</li> </ul>	On
TRNK/HAT MNTR	<b>NOTE:</b> The item is indicated, but not monitored.	Off
RKE-LOCK	LOCK button of the Intelligent Key is not pressed	Off
	LOCK button of the Intelligent Key is pressed	On
RKE-UNLOCK	UNLOCK button of the Intelligent Key is not pressed	Off
	UNLOCK button of the Intelligent Key is pressed	On
RKE-TR/BD <b>NOTE:</b> For Coupe models this item is not monitored.	TRUNK OPEN button of the Intelligent Key is not pressed	Off
	TRUNK OPEN of the Intelligent Key is pressed	On
RKE-PANIC	PANIC button of the Intelligent Key is not pressed	Off
	PANIC button of the Intelligent Key is pressed	On
RKE-P/W OPEN	UNLOCK button of the Intelligent Key is not pressed	Off
	UNLOCK button of the Intelligent Key is pressed and held	On
RKE-MODE CHG	LOCK/UNLOCK button of the Intelligent Key is not pressed and held simultaneously	Off
	LOCK/UNLOCK button of the Intelligent Key is pressed and held simultaneously	On

## BCM (BODY CONTROL MODULE)

### < ECU DIAGNOSIS INFORMATION >

Monitor Item	Condition	Value/Status	
OPTICAL SENSOR	Bright outside of the vehicle	Close to 5 V	A
	Dark outside of the vehicle	Close to 0 V	
REQ SW -DR	Driver door request switch is not pressed	Off	B
	Driver door request switch is pressed	On	
REQ SW -AS	Passenger door request switch is not pressed	Off	C
	Passenger door request switch is pressed	On	
REQ SW -RR	<b>NOTE:</b> The item is indicated, but not monitored.	Off	D
REQ SW -RL	<b>NOTE:</b> The item is indicated, but not monitored.	Off	D
REQ SW -BD/TR	<ul style="list-style-type: none"> <li>• Back door request switch is not pressed (Coupe models)</li> <li>• Trunk lid door request switch is not pressed (Roadster models)</li> </ul>	Off	E
	<ul style="list-style-type: none"> <li>• Back door request switch is pressed (Coupe models)</li> <li>• Trunk lid door request switch is pressed (Roadster models)</li> </ul>	On	
PUSH SW	Push-button ignition switch (push switch) is not pressed	Off	F
	Push-button ignition switch (push switch) is pressed	On	
IGN RLY2 -F/B	<b>NOTE:</b> The item is indicated, but not monitored.	Off	G
ACC RLY -F/B	<b>NOTE:</b> The item is indicated, but not monitored.	Off	H
CLUCH SW <b>NOTE:</b> For A/T models this item is not monitored.	The clutch pedal is not depressed	Off	H
	The clutch pedal is depressed	On	I
BRAKE SW 1	The brake pedal is depressed when No. 7 fuse is blown	Off	I
	The brake pedal is not depressed when No. 7 fuse is blown, or No. 7 fuse is normal	On	J
BRAKE SW 2	The brake pedal is not depressed	Off	J
	The brake pedal is depressed	On	K
DETE/CANCL SW <b>NOTE:</b> For M/T models with Synchro-Rev Match mode this item is not monitored.	<ul style="list-style-type: none"> <li>• Selector lever in P position (A/T models)</li> <li>• The clutch pedal is depressed (M/T models without SynchroRev Match mode)</li> </ul>	Off	L
	<ul style="list-style-type: none"> <li>• Selector lever in any position other than P (A/T models)</li> <li>• The clutch pedal is not depressed (M/T models without SynchroRev Match mode)</li> </ul>	On	L
SFT PN/N SW <b>NOTE:</b> For roadster M/T models and coupe M/T models without SynchroRev Match mode this item is not monitored.	<ul style="list-style-type: none"> <li>• Selector lever in any position other than P and N (A/T models)</li> <li>• Control lever in any position other than neutral position (Coupe M/T models with SynchroRev Match mode)</li> </ul>	Off	M
	<ul style="list-style-type: none"> <li>• Selector lever in P or N position (A/T models)</li> <li>• Control lever in neutral position (Coupe M/T models with SynchroRev Match mode)</li> </ul>	On	WCS
S/L -LOCK	<b>NOTE:</b> The item is indicated but not monitored.	Off	O
S/L -UNLOCK	<b>NOTE:</b> The item is indicated but not monitored.	Off	P
S/L RELAY-F/B	<b>NOTE:</b> The item is indicated but not monitored.	Off	P
UNLK SEN -DR	Driver door is unlocked	Off	
	Driver door is locked	On	
PUSH SW -IPDM	Push-button ignition switch (push-switch) is not pressed	Off	
	Push-button ignition switch (push-switch) is pressed	On	

## BCM (BODY CONTROL MODULE)

### < ECU DIAGNOSIS INFORMATION >

Monitor Item	Condition	Value/Status
IGN RLY1 -F/B	Ignition switch in OFF or ACC position	Off
	Ignition switch in ON position	On
DETE SW -IPDM	Selector lever in any position other than P	Off
	Selector lever in P position	On
SFT PN -IPDM	<ul style="list-style-type: none"> <li>• Selector lever in any position other than P and N (A/T models)</li> <li>• The clutch pedal is not depressed (M/T models)</li> </ul>	Off
	<ul style="list-style-type: none"> <li>• Selector lever in P or N position (A/T models)</li> <li>• The clutch pedal is depressed (M/T models)</li> </ul>	On
SFT P -MET	Selector lever in any position other than P	Off
	Selector lever in P position	On
SFT N -MET	Selector lever in any position other than N	Off
	Selector lever in N position	On
ENGINE STATE	Engine stopped	Stop
	While the engine stalls	Stall
	At engine cranking	Crank
	Engine running	Run
S/L LOCK-IPDM	<b>NOTE:</b> The item is indicated but not monitored.	Off
S/L UNLK-IPDM	<b>NOTE:</b> The item is indicated but not monitored.	Off
S/L RELAY-REQ	<b>NOTE:</b> The item is indicated but not monitored.	Off
VEH SPEED 1	While driving	Equivalent to speedometer reading
VEH SPEED 2	While driving	Equivalent to speedometer reading
DOOR STAT-DR	Driver door is locked	LOCK
	Wait with selective UNLOCK operation (60 seconds)	READY
	Driver door is unlocked	UNLOCK
DOOR STAT-AS	Passenger door is locked	LOCK
	Wait with selective UNLOCK operation (60 seconds)	READY
	Passenger door is unlocked	UNLOCK
ID OK FLAG	Driver side door is open after ignition switch is turned OFF (Shift position is in the P position)	Reset
	Ignition switch ON	Set
PRMT ENG STRT	The engine start is prohibited	Reset
	The engine start is permitted	Set
PRMT RKE STRT	<b>NOTE:</b> The item is indicated, but not monitored.	Reset
KEY SW -SLOT	The Intelligent Key is not inserted into key slot	Off
	The Intelligent Key is inserted into key slot	On
RKE OPE COUN1	During the operation of the Intelligent Key	Operation frequency of the Intelligent Key
RKE OPE COUN2	During the operation of the Intelligent Key	Operation frequency of the Intelligent Key

## BCM (BODY CONTROL MODULE)


### < ECU DIAGNOSIS INFORMATION >

Monitor Item	Condition	Value/Status	
CONFIRM ID ALL	The key ID that the key slot receives is not recognized by any key ID registered to BCM.	Yet	A
	The key ID that the key slot receives is recognized by any key ID registered to BCM.	Done	B
CONFIRM ID4	The key ID that the key slot receives is not recognized by the fourth key ID registered to BCM.	Yet	C
	The key ID that the key slot receives is recognized by the fourth key ID registered to BCM.	Done	
CONFIRM ID3	The key ID that the key slot receives is not recognized by the third key ID registered to BCM.	Yet	D
	The key ID that the key slot receives is recognized by the third key ID registered to BCM.	Done	
CONFIRM ID2	The key ID that the key slot receives is not recognized by the second key ID registered to BCM.	Yet	E
	The key ID that the key slot receives is recognized by the second key ID registered to BCM.	Done	F
CONFIRM ID1	The key ID that the key slot receives is not recognized by the first key ID registered to BCM.	Yet	G
	The key ID that the key slot receives is recognized by the first key ID registered to BCM.	Done	
TP 4	The ID of fourth Intelligent Key is not registered to BCM	Yet	H
	The ID of fourth Intelligent Key is registered to BCM	Done	
TP 3	The ID of third Intelligent Key is not registered to BCM	Yet	I
	The ID of third Intelligent Key is registered to BCM	Done	
TP 2	The ID of second Intelligent Key is not registered to BCM	Yet	J
	The ID of second Intelligent Key is registered to BCM	Done	
TP 1	The ID of first Intelligent Key is not registered to BCM	Yet	K
	The ID of first Intelligent Key is registered to BCM	Done	
AIR PRESS FL	Ignition switch ON (Only when the signal from the transmitter is received)	Air pressure of front LH tire	L
AIR PRESS FR	Ignition switch ON (Only when the signal from the transmitter is received)	Air pressure of front RH tire	M
AIR PRESS RR	Ignition switch ON (Only when the signal from the transmitter is received)	Air pressure of rear RH tire	
AIR PRESS RL	Ignition switch ON (Only when the signal from the transmitter is received)	Air pressure of rear LH tire	
ID REGST FL1	ID of front LH tire transmitter is registered	Done	
	ID of front LH tire transmitter is not registered	Yet	WCS
ID REGST FR1	ID of front RH tire transmitter is registered	Done	
	ID of front RH tire transmitter is not registered	Yet	
ID REGST RR1	ID of rear RH tire transmitter is registered	Done	O
	ID of rear RH tire transmitter is not registered	Yet	
ID REGST RL1	ID of rear LH tire transmitter is registered	Done	P
	ID of rear LH tire transmitter is not registered	Yet	
WARNING LAMP	Tire pressure indicator OFF	Off	
	Tire pressure indicator ON	On	
BUZZER	Tire pressure warning alarm is not sounding	Off	
	Tire pressure warning alarm is sounding	On	

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

## TERMINAL LAYOUT

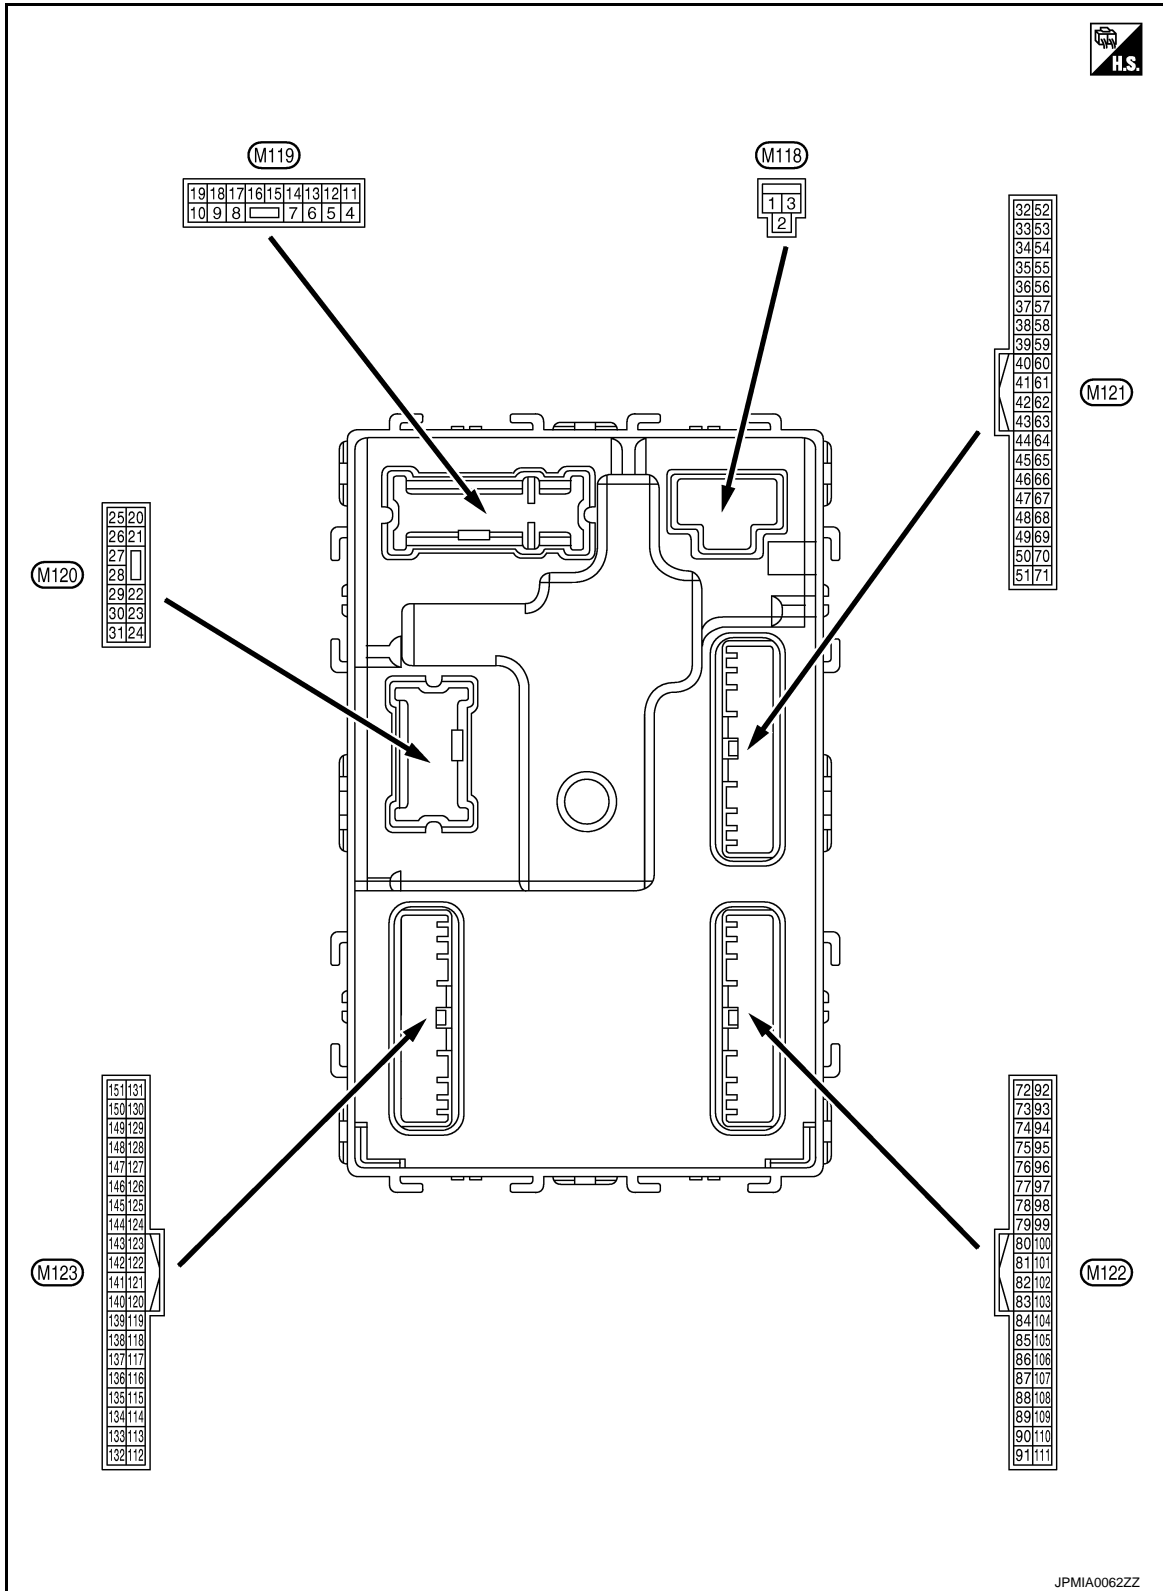


## PHYSICAL VALUES



# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS INFORMATION >

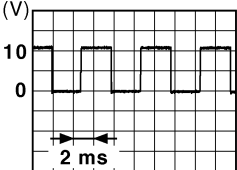Terminal No. (Wire color)		Description		Condition		Value (Approx.)
		Signal name	Input/ Output			
+	-					
1 (W)	Ground	Battery power supply	Input	Ignition switch OFF		Battery voltage
2 (W)	Ground	P/W power supply (BAT)	Output	Ignition switch OFF		12 V
3 (Y)	Ground	P/W power supply (IGN)	Output	Ignition switch ON		12 V
4 (R)	Ground	Interior room lamp power supply	Output	Interior room lamp battery saver is activated. (Cuts the interior room lamp power supply)		0 V
				Interior room lamp battery saver is not activated. (Outputs the interior room lamp power supply)		12 V
5 (G)	Ground	Passenger door UN- LOCK	Output	Passenger door	UNLOCK (Actuator is activated)	12 V
					Other than UNLOCK (Ac- tuator is not activated)	0 V
8 (V)	Ground	All doors, fuel lid LOCK	Output	All doors, fuel lid	LOCK (Actuator is activated)	12 V
					Other than LOCK (Actuator is not activated)	0 V
9 (G)	Ground	Driver door, fuel lid UNLOCK	Output	Driver door, fuel lid	UNLOCK (Actuator is activated)	12 V
					Other than UNLOCK (Actuator is not activated)	0 V
11 (BR)	Ground	Battery power supply	Input	Ignition switch OFF		Battery voltage
13 (B)	Ground	Ground	—	Ignition switch ON		0 V
14 (R)	Ground	Push-button ignition switch illumination ground	Output	Tail lamp	OFF	0 V
					ON	<p><b>NOTE:</b> When the illumination brighten- ing/dimming level is in the neutral position.</p>  <p style="text-align: right; font-size: small;">JSNIA0010GB</p>
15 (Y)	Ground	ACC indicator lamp	Output	Ignition switch	OFF (LOCK indicator is not illuminated)	Battery voltage
					ACC	0 V

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
O  
P

WCS

# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color)		Description		Condition	Value (Approx.)
+	-	Signal name	Input/ Output		
17 (W)	Ground	Turn signal RH (Front and side)	Output	Ignition switch OFF	0 V
				Ignition switch ON	Turn signal switch RH
18 (O)	Ground	Turn signal LH (Front and side)	Output	Ignition switch OFF	0 V
				Ignition switch ON	Turn signal switch LH
19 (P)	Ground	Interior room lamp control	Output	Interior room lamp OFF	12 V
				Interior room lamp ON	0 V
20 (V)	Ground	Turn signal RH (Rear)	Output	Ignition switch OFF	0 V
				Ignition switch ON	Turn signal switch RH
23 (L)*1 (Y)*2	Ground	Back door/Trunk lid open	Output	Back door/Trunk lid OPEN (Back door/Trunk lid opener actuator is activated)	12 V
				Back door/Trunk lid Other than OPEN (Back door/Trunk lid opener actuator is not activated)	0 V
24*8 (O)	Ground	Rear fog lamp	Output	Rear fog lamp OFF	0 V
				Rear fog lamp ON	12 V
25 (LG)	Ground	Turn signal LH (Rear)	Output	Ignition switch OFF	0 V
				Ignition switch ON	Turn signal switch LH
30 (R)	Ground	Luggage room/Trunk room lamp	Output	Luggage room/Trunk room lamp ON	0 V
				Luggage room/Trunk room lamp OFF	12 V

# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS INFORMATION >





Terminal No. (Wire color)		Description		Condition	Value (Approx.)
+	-	Signal name	Input/ Output		
34 (G)	Ground	Luggage room/Trunk room antenna (-)	Output	Ignition switch OFF	<p>JMKIA0062GB</p>
				When Intelligent Key is not in the passenger compartment	<p>JMKIA0063GB</p>
35 (R)	Ground	Luggage room/Trunk room antenna (+)	Output	Ignition switch OFF	<p>JMKIA0062GB</p>
				When Intelligent Key is not in the passenger compartment	<p>JMKIA0063GB</p>
38 (B)	Ground	Rear bumper antenna (-)	Output	When the back door/trunk lid door request switch is operated with ignition switch OFF	<p>JMKIA0062GB</p>
				When Intelligent Key is not in the antenna detection area	<p>JMKIA0063GB</p>

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
O  
P

WCS






# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS INFORMATION >

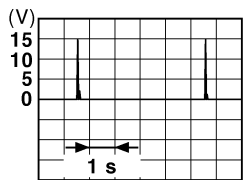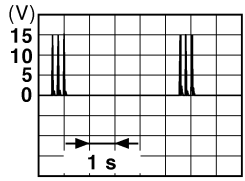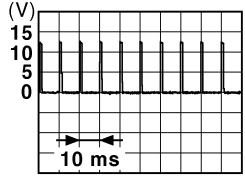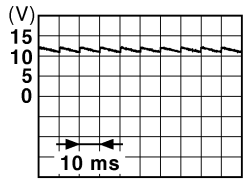Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
		Signal name	Input/ Output			
+	-					
39 (W)	Ground	Rear bumper antenna (+)	Output	When the back door/trunk lid door request switch is operated with ignition switch OFF	When Intelligent Key is in the antenna detection area	 <small>JMKIA0062GB</small>
				When Intelligent Key is not in the antenna detection area	 <small>JMKIA0063GB</small>	
47 (V)	Ground	Ignition relay (IPDM E/R) control	Output	Ignition switch	OFF or ACC ON 12 V 0 V	
52 (SB)	Ground	Starter relay control	Output	Ignition switch ON (A/T models)	When selector lever is in P or N position	12 V
				Ignition switch ON (M/T models)	When selector lever is not in P or N position	0 V
				Ignition switch ON (M/T models)	When the clutch pedal is depressed	Battery voltage
				Ignition switch ON (M/T models)	When the clutch pedal is not depressed	0 V
60 (BR)	Ground	Push-button ignition switch (Push switch)	Input	Push-button ignition switch (push switch)	Pressed	0 V
				Push-button ignition switch (push switch)	Not pressed	Battery voltage
61 (W)	Ground	Back door/Trunk Lid door request switch	Input	Back door/Trunk lid door request switch	ON (Pressed)	0 V
					OFF (Not pressed)	 <small>JPMIA0016GB</small> 1.0 V
64 (G)	Ground	Intelligent Key warning buzzer	Output	Intelligent Key warning buzzer	Sounding	0 V
					Not sounding	12 V
66 (R)	Ground	Back door/Trunk room lamp switch	Input	Back door/Trunk room lamp switch	OFF (Door close)	 <small>JPMIA0011GB</small> 11.8 V
					ON (Door open)	0 V

# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS INFORMATION >

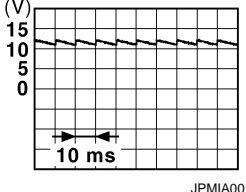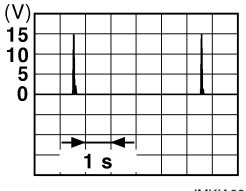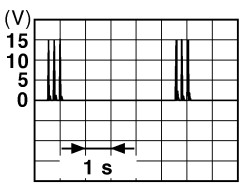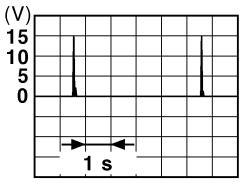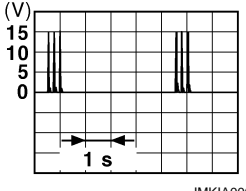Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
		Signal name	Input/ Output			
+	-					
67 (GR)	Ground	Back door/Trunk lid opener switch	Input	Back door/ Trunk lid open- er switch	Pressed	0 V
					Not pressed	 <p style="text-align: center;">11.8 V</p>
72 (L)	Ground	Room antenna 2 (-) (Center console)	Output	Ignition switch OFF	When Intelligent Key is in the passenger compart- ment	
					When Intelligent Key is not in the passenger compart- ment	
73 (P)	Ground	Room antenna 2 (+) (Center console)	Output	Ignition switch OFF	When Intelligent Key is in the passenger compart- ment	
					When Intelligent Key is not in the passenger compart- ment	

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
O  
P

WCS

# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color)		Description		Condition	Value (Approx.)
+	-	Signal name	Input/ Output		
74 (SB)	Ground	Passenger door antenna (-)	Output	When Intelligent Key is in the antenna detection area	<p style="text-align: right; font-size: small;">JMKIA0062GB</p>
				When the passenger door request switch is operated with ignition switch OFF	<p style="text-align: right; font-size: small;">JMKIA0063GB</p>
75 (BR)	Ground	Passenger door antenna (+)	Output	When Intelligent Key is in the antenna detection area	<p style="text-align: right; font-size: small;">JMKIA0062GB</p>
				When the passenger door request switch is operated with ignition switch OFF	<p style="text-align: right; font-size: small;">JMKIA0063GB</p>
76 (V)	Ground	Driver door antenna (-)	Output	When Intelligent Key is in the antenna detection area	<p style="text-align: right; font-size: small;">JMKIA0062GB</p>
				When the driver door request switch is operated with ignition switch OFF	<p style="text-align: right; font-size: small;">JMKIA0063GB</p>

# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS INFORMATION >






Terminal No. (Wire color)		Description		Condition	Value (Approx.)
+	-	Signal name	Input/ Output		
77 (LG)	Ground	Driver door antenna (+)	Output	When the driver door request switch is operated with ignition switch OFF	<p style="text-align: right; font-size: small;">JMkia0062GB</p>
				When Intelligent Key is not in the antenna detection area	<p style="text-align: right; font-size: small;">JMkia0063GB</p>
78*2 (L)	Ground	Room antenna 1 (-) (Instrument panel)	Output	Ignition switch OFF	<p style="text-align: right; font-size: small;">JMkia0062GB</p>
				When Intelligent Key is not in the passenger compartment	<p style="text-align: right; font-size: small;">JMkia0063GB</p>
79*2 (R)	Ground	Room antenna 1 (+) (Instrument panel)	Output	Ignition switch OFF	<p style="text-align: right; font-size: small;">JMkia0062GB</p>
				When Intelligent Key is not in the passenger compartment	<p style="text-align: right; font-size: small;">JMkia0063GB</p>

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
O  
P

WCS

# BCM (BODY CONTROL MODULE)

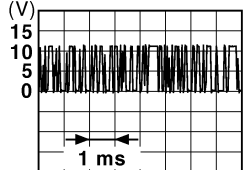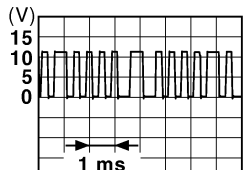

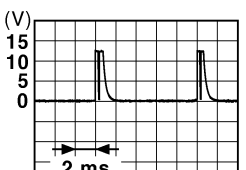

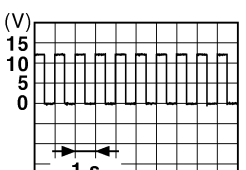
## < ECU DIAGNOSIS INFORMATION >

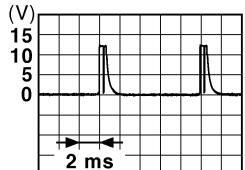Terminal No. (Wire color)		Description		Condition		Value (Approx.)
		Signal name	Input/ Output			
+	-					
80 (GR)	Ground	NATS antenna amp.	Input/ Output	During waiting	Ignition switch is pressed while inserting the Intelligent Key into the key slot.	Just after pressing ignition switch. Pointer of tester should move.
81 (W)	Ground	NATS antenna amp.	Input/ Output	During waiting	Ignition switch is pressed while inserting the Intelligent Key into the key slot.	Just after pressing ignition switch. Pointer of tester should move.
82 (R)	Ground	Ignition relay [Fuse block (J/B)] control	Output	Ignition switch	OFF or ACC	0 V
					ON	12 V
83 (GR)	Ground	Remote keyless entry receiver (front) communication	Input/ Output	During waiting		 <p style="text-align: right; font-size: small;">JMKIA0064GB</p>
				When operating either button on the Intelligent Key		 <p style="text-align: right; font-size: small;">JMKIA0065GB</p>
87 (BR)	Ground	Combination switch INPUT 5	Input	Combination switch	All switches OFF (Wiper intermittent dial 4)	 <p style="text-align: right; font-size: small;">JPMIA0041GB</p> <p style="text-align: center;">1.4 V</p>
					Rear fog lamp switch ON (Wiper intermittent dial 4)	 <p style="text-align: right; font-size: small;">JPMIA0038GB</p> <p style="text-align: center;">1.3 V</p>
					Any of the conditions below with all switches OFF <ul style="list-style-type: none"> <li>• Wiper intermittent dial 1</li> <li>• Wiper intermittent dial 2</li> <li>• Wiper intermittent dial 6</li> <li>• Wiper intermittent dial 7</li> </ul>	 <p style="text-align: right; font-size: small;">JPMIA0040GB</p> <p style="text-align: center;">1.3 V</p>



# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS INFORMATION >


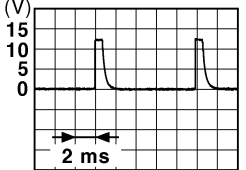
Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
+	-	Signal name	Input/ Output			
88 (V)	Ground	Combination switch INPUT 3	Input	Combination switch	All switches OFF (Wiper intermittent dial 4)	 <p style="text-align: right;">1.4 V</p>
					Lighting switch HI (Wiper intermittent dial 4)	 <p style="text-align: right;">1.3 V</p>
					Lighting switch 2ND (Wiper intermittent dial 4)	 <p style="text-align: right;">1.3 V</p>
					Any of the conditions below with all switches OFF <ul style="list-style-type: none"> <li>• Wiper intermittent dial 1</li> <li>• Wiper intermittent dial 2</li> <li>• Wiper intermittent dial 3</li> </ul>	 <p style="text-align: right;">1.3 V</p>
90 (P)	Ground	CAN-L	Input/ Output	—	—	
91 (L)	Ground	CAN-H	Input/ Output	—	—	
92 (LG)	Ground	Key slot illumination	Output	Key slot illumina- tion	OFF	0 V
					Blinking	 <p style="text-align: right;">6.5 V</p>
93 (V)	Ground	ON indicator lamp	Output	Ignition switch	OFF (LOCK indicator is not illuminated)	Battery voltage
					ON	0 V

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

WCS



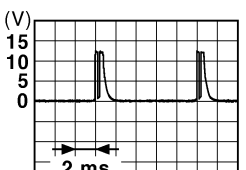

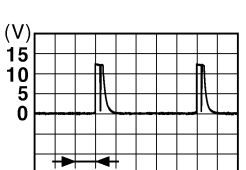
# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS INFORMATION >

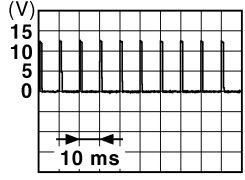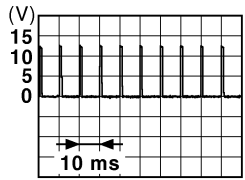Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
95 (O)	Ground	ACC relay control	Output	Ignition switch	OFF	0 V
					ACC or ON	12 V
96*3 (Y)	Ground	A/T shift selector (Detention switch) power supply	Output	—		12 V
99*6 (R)	Ground	Selector lever P position switch (A/T models)	Input	Selector lever	P position	0 V
					Any position other than P	12 V
		Clutch pedal position switch (M/T models without SynchroRev Match mode)	Clutch pedal position switch	OFF (Clutch pedal is depressed)	0 V	
				ON (Clutch pedal is not depressed)	Battery voltage	
100 (GR)	Ground	Passenger door request switch	Input	Passenger door request switch	ON (Pressed)	0 V
					OFF (Not pressed)	 <p style="text-align: right; font-size: small;">JPMIA0016GB 1.0 V</p>
101 (Y)	Ground	Driver door request switch	Input	Driver door request switch	ON (Pressed)	0 V
					OFF (Not pressed)	 <p style="text-align: right; font-size: small;">JPMIA0016GB 1.0 V</p>
102 (O)	Ground	Blower fan motor relay control	Output	Ignition switch	OFF or ACC	0 V
					ON	12 V
103 (LG)	Ground	Remote keyless entry receiver (front) power supply	Output	Ignition switch OFF		12 V

# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS INFORMATION >




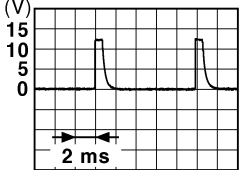
Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
+	-	Signal name	Input/ Output			
107 (LG)	Ground	Combination switch INPUT 1	Input	Combination switch (Wiper intermit- tent dial 4)	All switches OFF	 <p style="text-align: right; margin-right: 50px;">JPMAI0041GB</p> <p style="text-align: center;">1.4 V</p>
					Turn signal switch LH	 <p style="text-align: right; margin-right: 50px;">JPMAI0037GB</p> <p style="text-align: center;">1.3 V</p>
					Turn signal switch RH	 <p style="text-align: right; margin-right: 50px;">JPMAI0036GB</p> <p style="text-align: center;">1.3 V</p>
					Front wiper switch LO	 <p style="text-align: right; margin-right: 50px;">JPMAI0038GB</p> <p style="text-align: center;">1.3 V</p>
					Front washer switch ON	 <p style="text-align: right; margin-right: 50px;">JPMAI0039GB</p> <p style="text-align: center;">1.3 V</p>

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
O  
P

WCS





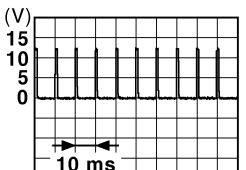
# BCM (BODY CONTROL MODULE)
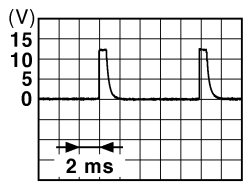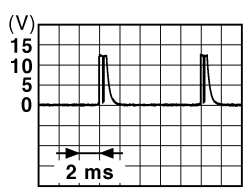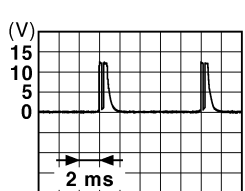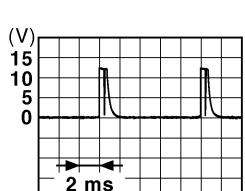
## < ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
		Signal name	Input/ Output			
+	-					
108 (R)	Ground	Combination switch INPUT 4	Input	Combination switch	All switches OFF (Wiper intermittent dial 4)	 <p style="text-align: center;">1.4 V</p>
					Lighting switch AUTO (Wiper intermittent dial 4)	 <p style="text-align: center;">1.3 V</p>
					Lighting switch 1ST (Wiper intermittent dial 4)	 <p style="text-align: center;">1.3 V</p>
					Any of the conditions below with all switches OFF <ul style="list-style-type: none"> <li>• Wiper intermittent dial 1</li> <li>• Wiper intermittent dial 5</li> <li>• Wiper intermittent dial 6</li> </ul>	 <p style="text-align: center;">1.3 V</p>

# BCM (BODY CONTROL MODULE)
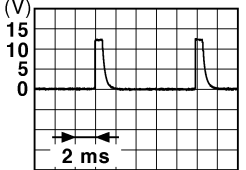
## < ECU DIAGNOSIS INFORMATION >



Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
+	-	Signal name	Input/ Output			
109 (Y)	Ground	Combination switch INPUT 2	Input	Combination switch (Wiper intermit- tent dial 4)	All switches OFF	 <p style="text-align: center;">1.4 V</p>
					Lighting switch PASS	 <p style="text-align: center;">1.3 V</p>
					Lighting switch 2ND	 <p style="text-align: center;">1.3 V</p>
					Front wiper switch INT	 <p style="text-align: center;">1.3 V</p>
					Front wiper switch HI	 <p style="text-align: center;">1.3 V</p>
					ON	0 V
110 (P)	Ground	Hazard switch	Input	Hazard switch	 <p style="text-align: center;">1.1 V</p>	
				OFF		

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
O  
P

WCS




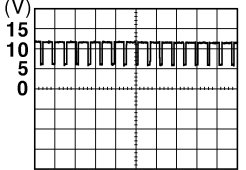
# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS INFORMATION >

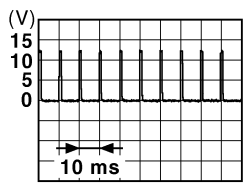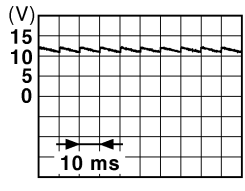Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
		Signal name	Input/ Output			
+	-					
113 (O)	Ground	Optical sensor	Input	Ignition switch ON	When bright outside of the vehicle	Close to 5 V
					When dark outside of the vehicle	Close to 0 V
114*4 (R)	Ground	Clutch interlock switch	Input	Clutch interlock switch	OFF (Clutch pedal is not depressed)	0 V
					ON (Clutch pedal is de- pressed)	Battery voltage
115*9 (O)	—	—	—	—	—	—
116 (SB)	Ground	Stop lamp switch 1	Input	—	—	Battery voltage
118 (P)	Ground	Stop lamp switch 2	Input	Stop lamp switch	OFF (Brake pedal is not depressed)	0 V
					ON (Brake pedal is de- pressed)	Battery voltage
119 (SB)	Ground	Driver side door lock assembly (Unlock sensor)	Input	Driver door	LOCK status (Unlock sensor switch OFF)	 1.1 V
					UNLOCK status (Unlock switch sensor ON)	0 V
121 (R)	Ground	Key slot switch	Input	When the Intelligent Key is inserted into key slot	12 V	
				When the Intelligent Key is not inserted into key slot	0 V	
123 (W)	Ground	IGN feedback	Input	Ignition switch	OFF or ACC	0 V
					ON	Battery voltage
124 (LG)	Ground	Passenger door switch	Input	Passenger door switch	OFF (Door close)	 11.8 V
					ON (Door open)	0 V

# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS INFORMATION >




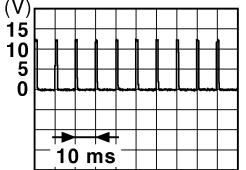
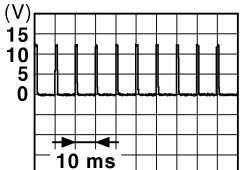
Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
129*2 (O)	Ground	Trunk lid opener cancel switch	Input	Trunk lid opener cancel switch	CANCEL	 1.1 V
					ON	0 V
130*7 (L)	Ground	Rear window defogger switch	Input	Ignition switch ON	Rear window defogger switch OFF	 1.1 V
					Rear window defogger switch ON	0 V
132 (Y)*1 (V)*2	Ground	Power window switch and soft top control unit communication	Input/ Output	Ignition switch ON	 10.2 V	
				Ignition switch OFF or ACC	12 V	
133 (G)	Ground	Push-button ignition switch illumination	Output	Push-button ignition switch illumination	ON (Tail lamps OFF)	9.5 V
					ON (Tail lamps ON)	<p style="text-align: center;"><b>NOTE:</b> The pulse width of this wave is varied by the illumination brightening/dimming level.</p>  10 V
134 (GR)	Ground	LOCK indicator lamp	Output	LOCK indicator lamp	OFF	Battery voltage
					ON	0 V
137 (P)	Ground	Receiver and sensor ground	Input	Ignition switch ON		0 V
138 (V)	Ground	Receiver and sensor power supply	Output	Ignition switch	OFF	0 V
					ACC or ON	5.0 V

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
O  
P

WCS

# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS INFORMATION >

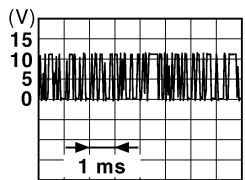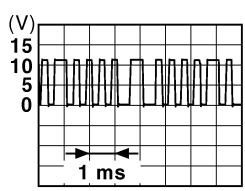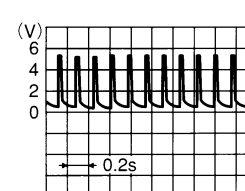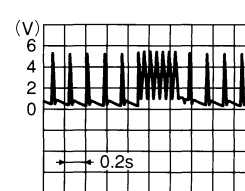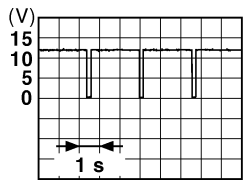Terminal No. (Wire color)		Description		Condition	Value (Approx.)
+	-	Signal name	Input/ Output		
139 (L)	Ground	Tire pressure receiver communication	Input/ Output	Ignition switch OFF (Remote key-less entry receiver communication)	During waiting 
				When operating either button on the Intelligent Key 	
				Ignition switch ON (Tire pressure receiver communication)	Standby state 
				When receiving the signal from the transmitter 	
140 <sup>+5</sup> (G)	Ground	Selector lever P/N position (A/T models)	Input	Selector lever	P or N position 12 V
					Except P and N positions 0 V
		Park/neutral position switch (Coupe M/T models with Synchro-Rev Match mode)	Input	Ignition switch ON	Control lever in neutral position Battery voltage
					Control lever in any position other than neutral 0 V
141 (Y)	Ground	Security indicator lamp	Output	Security indicator lamp	ON 0 V
				Blinking 	
				OFF 11.3 V	
					12 V



# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS INFORMATION >


Terminal No. (Wire color)		Description		Condition	Value (Approx.)
+	-	Signal name	Input/ Output		
142 (O)	Ground	Combination switch OUTPUT 5	Output	Combination switch (Wiper intermittent dial 4)	0 V
				All switches OFF	<p style="text-align: right; font-size: small;">JPMAI0031GB</p>
				Lighting switch 1ST	
				Lighting switch HI	
				Turn signal switch RH	10.7 V
143 (P)	Ground	Combination switch OUTPUT 1	Output	Combination switch	0 V
				All switches OFF (Wiper intermittent dial 4)	<p style="text-align: right; font-size: small;">JPMAI0032GB</p>
				Front wiper switch HI (Wiper intermittent dial 4)	
				Any of the conditions below with all switches OFF	
				<ul style="list-style-type: none"> <li>• Wiper intermittent dial 1</li> <li>• Wiper intermittent dial 2</li> <li>• Wiper intermittent dial 3</li> <li>• Wiper intermittent dial 6</li> <li>• Wiper intermittent dial 7</li> </ul>	
144 (G)	Ground	Combination switch OUTPUT 2	Output	Combination switch	0 V
				All switches OFF (Wiper intermittent dial 4)	<p style="text-align: right; font-size: small;">JPMAI0033GB</p>
				Front washer switch ON (Wiper intermittent dial 4)	
				Any of the conditions below with all switches OFF	
				<ul style="list-style-type: none"> <li>• Wiper intermittent dial 1</li> <li>• Wiper intermittent dial 5</li> <li>• Wiper intermittent dial 6</li> </ul>	
145 (L)	Ground	Combination switch OUTPUT 3	Output	Combination switch (Wiper intermittent dial 4)	0 V
				All switches OFF	<p style="text-align: right; font-size: small;">JPMAI0034GB</p>
				Front wiper switch INT	
				Front wiper switch LO	
Lighting switch AUTO					
				Rear fog lamp switch ON	10.7 V
146 (SB)	Ground	Combination switch OUTPUT 4	Output	Combination switch (Wiper intermittent dial 4)	0 V
				All switches OFF	<p style="text-align: right; font-size: small;">JPMAI0035GB</p>
				Lighting switch 2ND	
				Lighting switch PASS	
				Turn signal switch LH	

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
O  
P

WCS

# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS INFORMATION >

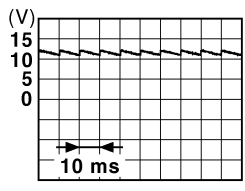Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
		Signal name	Input/ Output			
+	-					
150 (GR)	Ground	Driver door switch	Input	Driver door switch	OFF (Door close)	 11.8 V
				ON (Door open)	0 V	
151 (G)	Ground	Rear window defogger relay control	Output	Rear window defogger	Active	0 V
				Not activated	Battery voltage	


- \*1: Coupe models
- \*2: Roadster models
- \*3: A/T models
- \*4: M/T models
- \*5: With A/T or coupe models with M/T and SynchroRev Match mode
- \*6: With A/T or with M/T without SynchroRev Match mode
- \*7: Without NAVI
- \*8: With rear fog lamp
- \*9: BCM does not use this terminal for control.

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

## Wiring Diagram - BCM -

INFOID:000000011312935

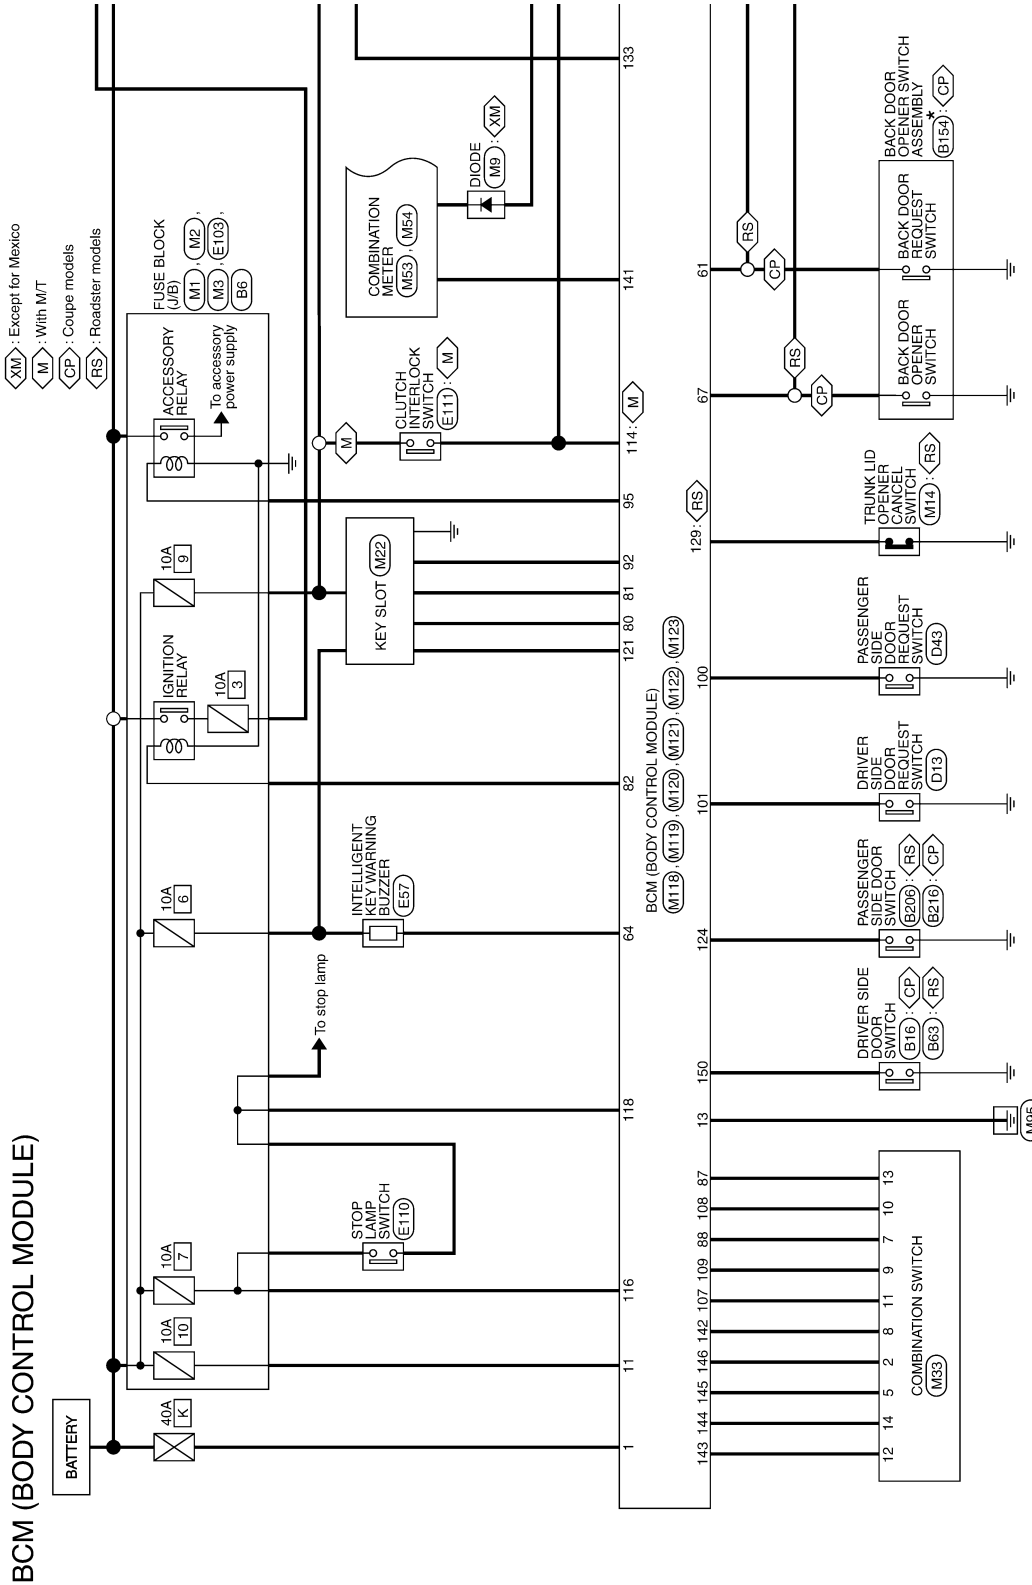

\*: This connector is not shown in "Harness Layout".

2014/05/12

JRMWF7312GB


A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

WCS

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

- $\langle \text{XM} \rangle$ : Except for Mexico
- $\langle \text{CP} \rangle$ : Coupe models
- $\langle \text{A} \rangle$ : With A/T
- $\langle \text{RS} \rangle$ : Roadster models
- $\langle \text{M} \rangle$ : With M/T
- $\langle \text{CS} \rangle$ : Coupe models with M/T and SynchroRev Match mode

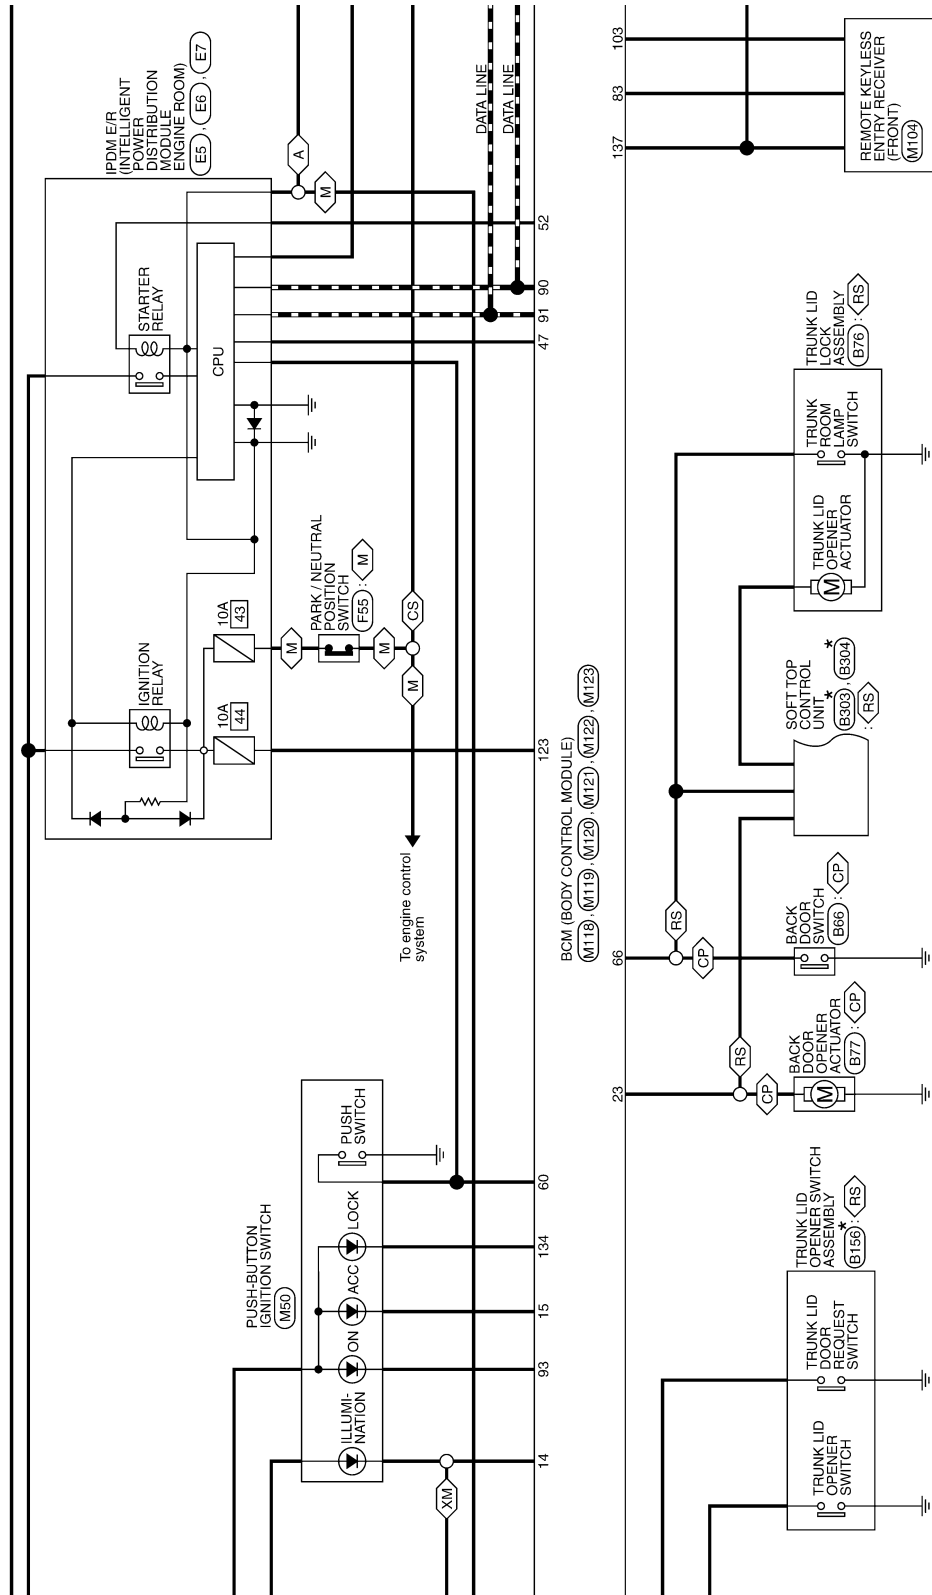


JRMWF7313GB

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

- <A> : With A/T
- <AC> : With A/T or coupe models with M/T and SynchroRev Match mode
- <AD> : With A/T or with M/T without SynchroRev Match mode
- <CS> : Coupe models with M/T and SynchroRev Match mode
- <MD> : With M/T without SynchroRev Match mode
- <CP> : Coupe models
- <RS> : Roadster models

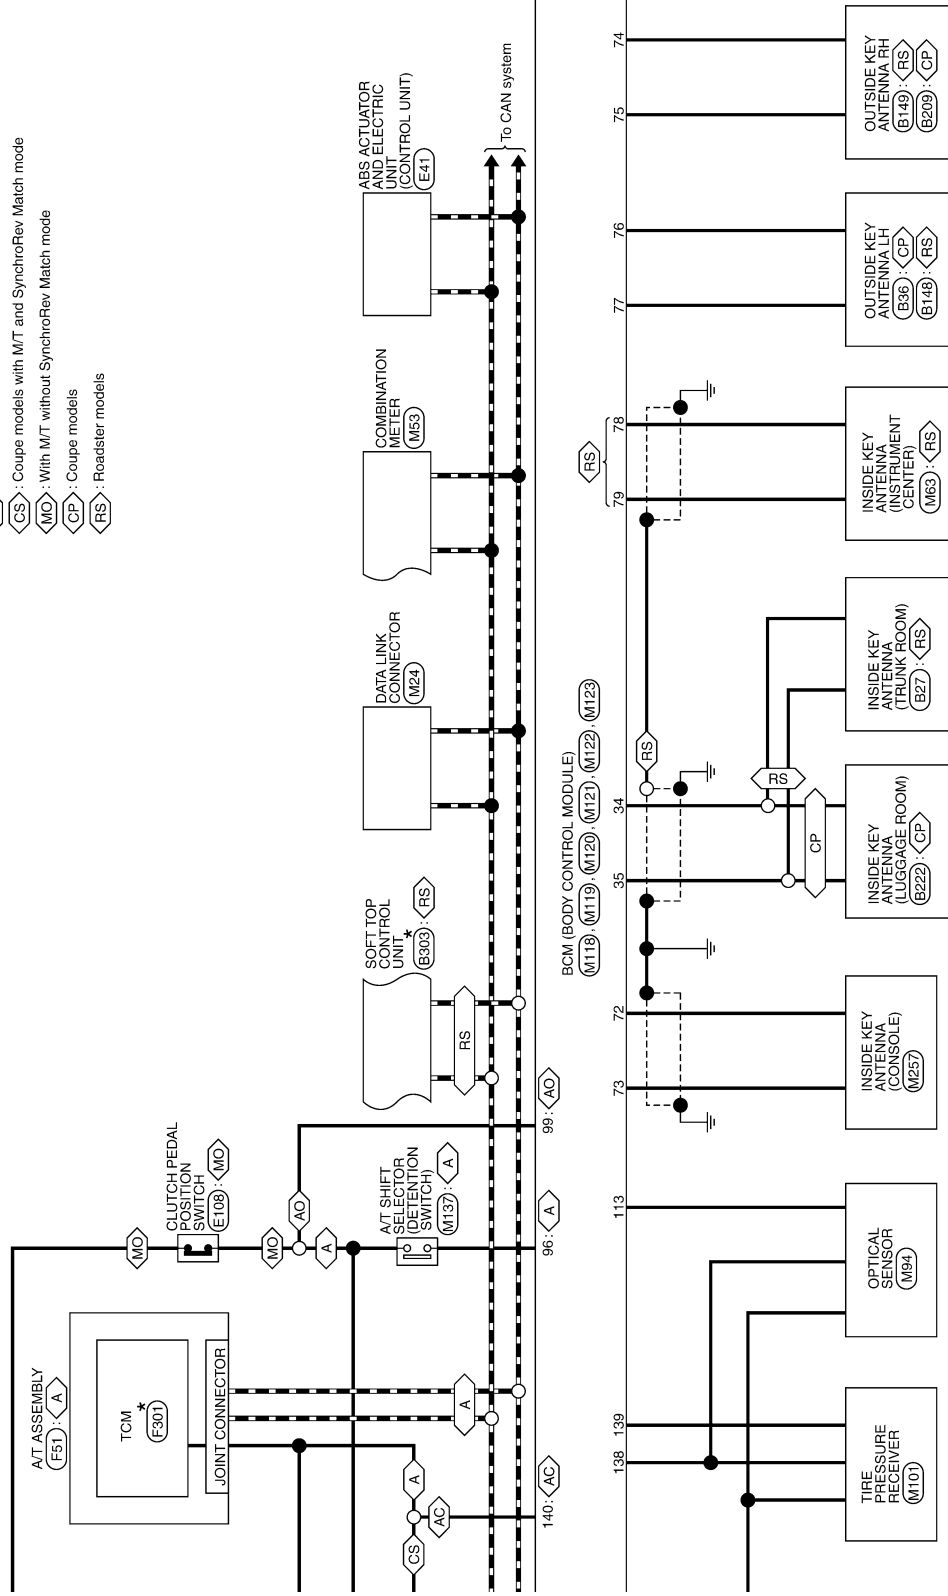

\*: This connector is not shown in "Harness Layout".

JRMWF7314GB



A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

WCS

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

- ◊ CP : Coupe models
- ◊ RS : Roadster models
- ◊ WP : With power seat
- ◊ ON : Without NAVI

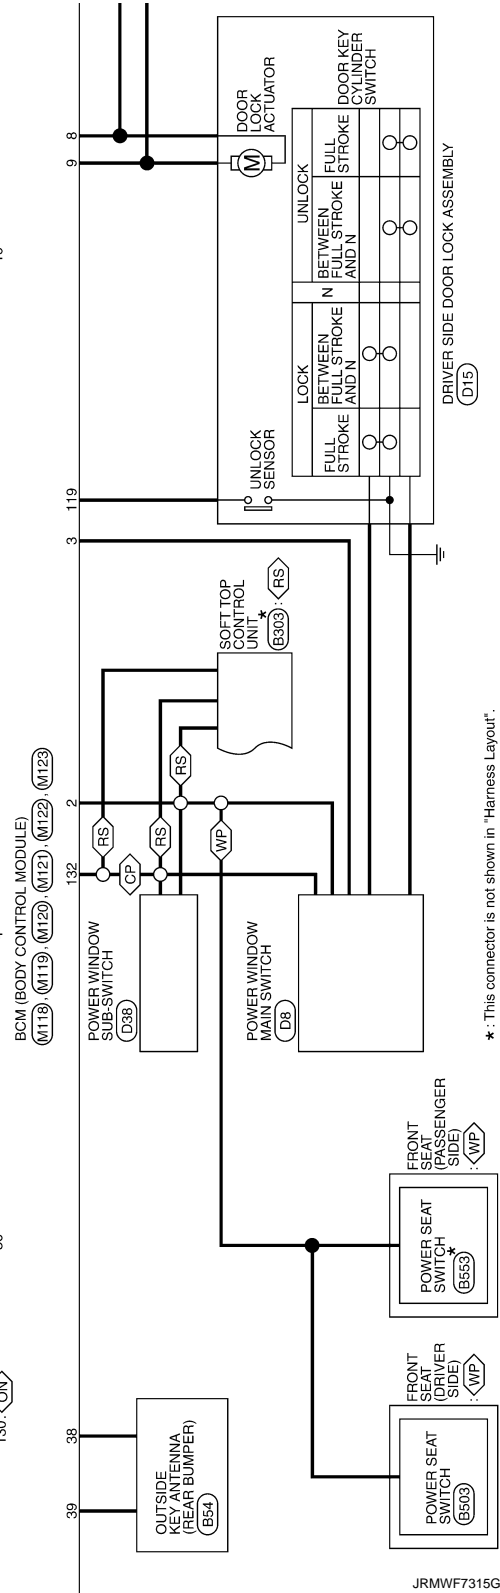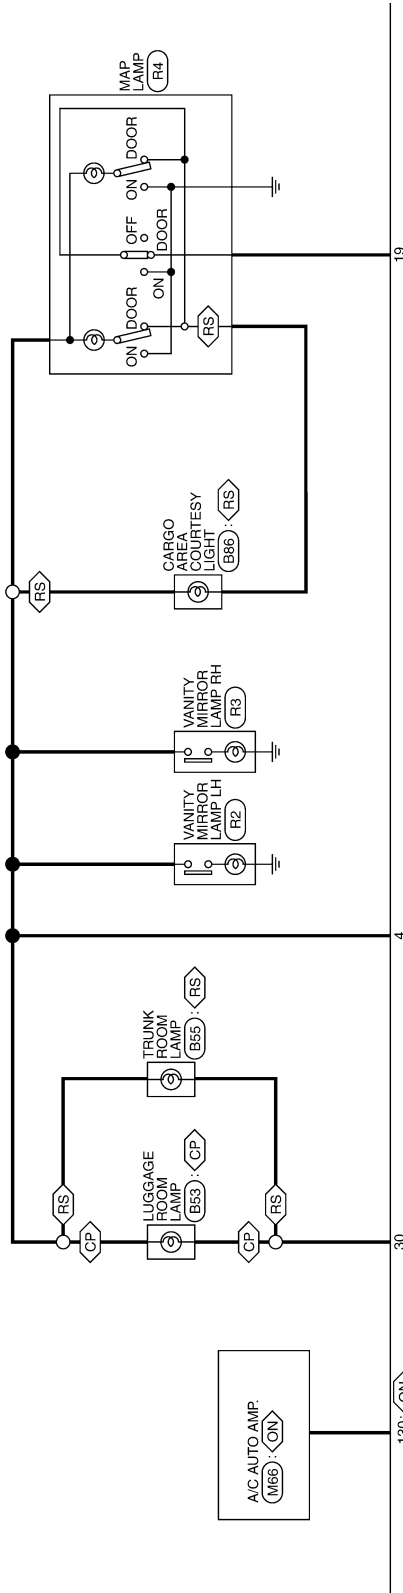


\*: This connector is not shown in "Harness Layout".

JRMWF7315GB

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

- : With A/T
- : With M/T
- : With rear fog lamp
- : With side turn signal lamp

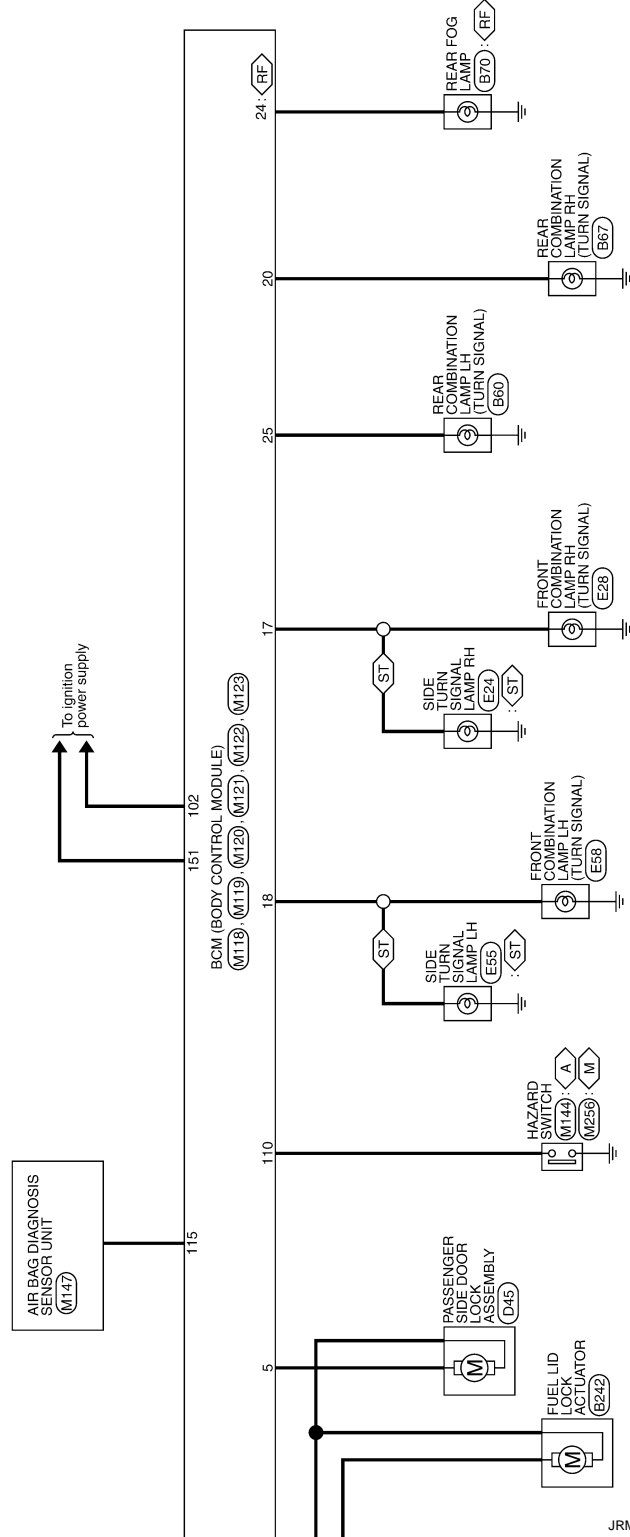


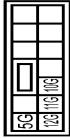








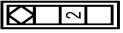








JRMWF7316GB

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
WCS  
O  
P

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

## BCM (BODY CONTROL MODULE)

Connector No.	B6	Connector No.	B5	Connector No.	B53	Connector No.	B55	Connector No.	B59
Connector Name	FUSE BLOCK (J/B)	Connector Name	LUGGAGE ROOM LAMP	Connector Name	LUGGAGE ROOM LAMP	Connector Name	TRUNK ROOM LAMP	Connector Name	REAR COMBINATION LAMP LH
Connector Type	NS12FER-CS	Connector Type	CJ02FGY	Connector Type	CJ02FGY	Connector Type	S02FW	Connector Type	RS06FGY-PR
									
Terminal Color Of No.	Wire	Terminal Color Of No.	Wire	Terminal Color Of No.	Wire	Terminal Color Of No.	Wire	Terminal Color Of No.	Wire
10G	P	1	V	1	BR	1	G	1	R
10G	W	2	SB	2	R	2	R	2	R
11G	G								
11G	W								
12G	Y								
3G	LG								
Signal Name [Specification]		Signal Name [Specification]		Signal Name [Specification]		Signal Name [Specification]		Signal Name [Specification]	
	- [Roadster models]		-		-		-		-
	- [Coupe models]		-		-		-		-
	- [Roadster models]		-		-		-		-
	- [Coupe models]		-		-		-		-
Connector No.	B16	Connector No.	B54	Connector No.	B54	Connector No.	B59	Connector No.	B60
Connector Name	DRIVER SIDE DOOR SWITCH	Connector Name	OUTSIDE KEY ANTENNA (REAR BUMPER)	Connector Name	OUTSIDE KEY ANTENNA (REAR BUMPER)	Connector Name	REAR COMBINATION LAMP LH	Connector Name	REAR COMBINATION LAMP LH
Connector Type	J03FW	Connector Type	RK02MGY	Connector Type	RK02FGY	Connector Type	RS06FGY-PR	Connector Type	RS06FGY-PR
									
Terminal Color Of No.	Wire	Terminal Color Of No.	Wire	Terminal Color Of No.	Wire	Terminal Color Of No.	Wire	Terminal Color Of No.	Wire
2	GR	1	LG	1	W	1	G	1	R
		2	V	2	B	2	R	2	R
Signal Name [Specification]		Signal Name [Specification]		Signal Name [Specification]		Signal Name [Specification]		Signal Name [Specification]	
	-		-		-		-		-
	-		-		-		-		-
	-		-		-		-		-
	-		-		-		-		-










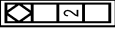






JRMWF7317GB





# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

Connector No.	Wire	Signal Name [Specification]
B148	OUTSIDE KEY ANTENNA RH	
1	BR	
2	GR	
 		
B154	BACK DOOR OPENER SWITCH ASSEMBLY	
1	GR	
2	W	
3	B	
4	B	
 		
B156	TRUNK LID OPENER SWITCH ASSEMBLY	
1	GR	
2	W	
3	B	
4	B	
 		
B209	OUTSIDE KEY ANTENNA RH	
1	BR	
2	GR	
 		
B216	PASSENGER SIDE DOOR SWITCH	
1	BR	
2	GR	
 		
B222	INSIDE KEY ANTENNA (LUGGAGE ROOM)	
1	LG	
2	LG	
3	B	
 		
B242	FUEL LID LOCK ACTUATOR	
1	V	
2	SB	
 		
B293	SOFT TOP CONTROL UNIT	
1	G	
2	W	
 		
B222	INSIDE KEY ANTENNA (LUGGAGE ROOM)	
1	BR	SENSOR POWER SUPPLY (ROOF STRIKER SENSOR LH)
3	DG	ROOF STRIKER SENSOR RH
4	W	ROOF STRIKER SENSOR LH
8	Y	REVERSE SIGNAL
9	SB	POWER CONDITION (POWER WINDOW)
10	O	TRUNK LID OPEN SIGNAL
11	O	ROOF STATUS SIGNAL (INDICATOR)
12	SB	ROOF STATUS SIGNAL (AUDIO)
14	L	ROOF OPEN / CLOSE SWITCH (CLOSE)
15	LG	ROOF OPEN / CLOSE SWITCH (OPEN)
16	V	TRUNK ROOM LAMP SWITCH
17	BG	CANH

JRMWF7319GB

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

BCM (BODY CONTROL MODULE)	
18	P CAN-L
19	LG LOCAL COMMUNICATION (POWER WINDOW)
20	V LOCAL COMMUNICATION (BCM)
21	BR SENSOR POWER SUPPLY (ROOF STRIKER/SUPPLY REL)
29	DG GROUND
35	P ROOF OPEN / CLOSE SWITCH (GND)

Connector No.	B304
Connector Name	SOFT TOP CONTROL UNIT
Connector Type	NS12FW-CS



Terminal No.	Color Of Wire	Signal Name [Specification]
41	DG	TRUNK OPENER ACTUATOR
48	R	REAR WINDOW DEF IN 2
49	R	REAR WINDOW DEF IN 1

Connector No.	B503
Connector Name	POWER SEAT SWITCH
Connector Type	M06MW-LC




Terminal No.	Color Of Wire	Signal Name [Specification]
3	O	-
4	L	-
5	WR	-
6	W	-
33	R	-
48	B	-

Connector No.	B553
Connector Name	POWER SEAT SWITCH
Connector Type	M06MW-LC



Terminal No.	Color Of Wire	Signal Name [Specification]
3	O	-
4	L	-
5	WR	-
6	W	-
33	R	-
48	B	-

Connector No.	DB
Connector Name	POWER WINDOW MAIN SWITCH
Connector Type	NS12FW-CS

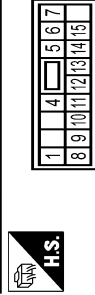

Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	-
4	Y	-
5	BG	-
6	GR	-
7	V	-
8	L	-
9	LG	-
10	Y	-
11	BR	-
12	SB	- [Coupe models]
13	R	- [Rouster models]
14	G	-
15	B	-

Connector No.	D13
Connector Name	DRIVER SIDE DOOR REQUEST SWITCH
Connector Type	RK02FL




Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	-
2	B	-

Connector No.	D15
Connector Name	DRIVER SIDE DOOR LOCK ASSEMBLY
Connector Type	ED9FGY-RS



Terminal No.	Color Of Wire	Signal Name [Specification]
1	BG	-
2	G	-
3	SB	-
4	B	-
5	V	-
6	GR	-

Connector No.	D38
Connector Name	POWER WINDOW SUB-SWITCH
Connector Type	NS12FW-CS

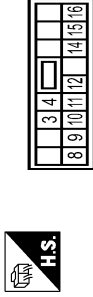

Terminal No.	Color Of Wire	Signal Name [Specification]
3	G	-
4	BG	-
8	L	-
9	BR	-
10	W	-
11	B	-
12	R	-
14	Y	-
15	LG	-
16	Y	-

Connector No.	D43
Connector Name	PASSENGER SIDE DOOR REQUEST SWITCH
Connector Type	RK02FL



Terminal No.	Color Of Wire	Signal Name [Specification]
1	B	-
2	G	-

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
O  
P




JRMWF7320GB

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

**BCM (BODY CONTROL MODULE)**

Connector No.	D45
Connector Name	PASSENGER SIDE DOOR LOCK ASSEMBLY
Connector Type	ET08FGY-RS

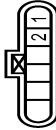

Terminal No.	Color Of Wire	Signal Name [Specification]
1	V	-
2	LG	-

Connector No.	E5
Connector Name	FRONT INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)
Connector Type	TR20FW-CS12-M4-1V



Terminal No.	Color Of Wire	Signal Name [Specification]
4	V	-
5	L	-
7	R	- [Couple models]
12	B/W	- [Roadster models]
13	Y	-
16	LG	-
19	W	-
25	G	-
27	Y	-
28	L	-
30	GR	-
36	G	-

Connector No.	E6
Connector Name	FRONT INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)
Connector Type	TR08FW-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
39	P	-
40	L	-
41	B/W	-
42	Y	-
43	SB	-
44	W	-
45	G	-
46	V	-

Connector No.	E7
Connector Name	FRONT INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)
Connector Type	TR20FW-CS12-M4



Terminal No.	Color Of Wire	Signal Name [Specification]
48	L	-
49	BG	-
51	Y	-
53	W	-
54	V	-
55	SB	-
56	LG	-
57	G	-
58	P	-
66	BR	-
70	BS	-
72	GR	-

73	GR
74	G
75	SB
76	Y
77	R
80	W

Connector No.	E24
Connector Name	SIDE TURN SIGNAL LAMP RH
Connector Type	RK02FGY



Terminal No.	Color Of Wire	Signal Name [Specification]
1	V	-
2	B	-

Connector No.	E28
Connector Name	FRONT COMBINATION LAMP RH
Connector Type	RS08FGY-PR



Terminal No.	Color Of Wire	Signal Name [Specification]
3	B	-
4	B/W	-
5	R	-
6	LG	-
7	BR	-
8	P	-

Connector No.	E41
Connector Name	ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)
Connector Type	BAA42FB-AL24-LH



Terminal No.	Color Of Wire	Signal Name [Specification]
1	B	GROUND
2	G	LEMR
3	R	LEVR
4	B	GROUND
5	Y	DS FL
9	BG	DP RL
7	BR	DP RR
9	B	DP FR
10	W	DS FR
14	P	CANL
25	Y	BUS-L
26	LG	DP FL
27	GR	DS RL
28	G	UZ
29	P	DS RR
30	SB	BLS
31	R	VDC OFF SW
35	L	CAN-H
45	B	BUS-H

Connector No.	E55
Connector Name	SIDE TURN SIGNAL LAMP LH
Connector Type	RK02FGY



# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

## BCM (BODY CONTROL MODULE)

Terminal No.	Color Of Wire	Signal Name [Specification]
1	G	- [Roadster models]
1	GR	- [Coupe models]
2	B	-

Connector No.	Signal Name [Specification]
E57	INTELLIGENT KEY WARNING BUZZER




Terminal No.	Color Of Wire	Signal Name [Specification]
1	LG	+BAT (VOL. SMALL)
3	R	BUZZER SIGNAL

Connector No.	Signal Name [Specification]
E58	FRONT COMBINATION LAMP LH



Terminal No.	Color Of Wire	Signal Name [Specification]
3	B	-
4	BAW	-
5	P	-
6	GR	-
7	LG	-
8	BG	-

Connector No.	Signal Name [Specification]
E103	FUSE BLOCK (JIB)

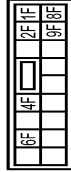

Terminal No.	Color Of Wire	Signal Name [Specification]
1F	SB	-
2F	W	-
4F	G	-
6F	BG	-
8F	L	- [Coupe models]
9F	R	- [Coupe models]
	V	- [Resistor models]

Connector No.	Signal Name [Specification]
E108	CLUTCH PEDAL POSITION SWITCH



Terminal No.	Color Of Wire	Signal Name [Specification]
1	G	- [Without Synchro/Rev Match mode]
1	SB	- [With Synchro/Rev Match mode]
2	B	- [Without Synchro/Rev Match mode]
2	BR	- [With Synchro/Rev Match mode]

Connector No.	Signal Name [Specification]
E110	STOP LAMP SWITCH



Terminal No.	Color Of Wire	Signal Name [Specification]
1	L	-
2	W	-
3	G	-
4	P	-

Connector No.	Signal Name [Specification]
E111	CLUTCH INTERLOCK SWITCH



Terminal No.	Color Of Wire	Signal Name [Specification]
1	G	-
2	GR	-

Connector No.	Signal Name [Specification]
F51	A/T ASSEMBLY



Terminal No.	Color Of Wire	Signal Name [Specification]
1	Y	IGNITION POWER SUPPLY
2	BR	BATTERY POWER SUPPLY (MEMORY BACK-UP)
3	L	CANL
4	V	KLINE
5	B	GROUND
6	Y	IGNITION POWER SUPPLY
7	W	BACK-UP LAMP RELAY
8	P	CANL
9	GR	STARTER RELAY
10	B	GROUND

Connector No.	Signal Name [Specification]
F55	PARK / NEUTRAL POSITION SWITCH



Terminal No.	Color Of Wire	Signal Name [Specification]
1	G	-
2	W	-

JRMWF7322GB

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

WCS

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

## BCM (BODY CONTROL MODULE)

Connector No.	F301
Connector Name	TCM
Connector Type	SP10FG




Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	IGNITION POWER SUPPLY
2	B	BATTERY POWER SUPPLY (MEMORY BACK-UP)
3	R	CAN-H
4	O	K-LINE
5	G	GROUND
6	GR	IGNITION POWER SUPPLY
7	L	BACK-UP LAMP RELAY
8	BR	CAN-L
9	Y	STARTER RELAY
10	W/B	GROUND

Connector No.	M1
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS08FW-M2




Terminal No.	Color Of Wire	Signal Name [Specification]
1A	V	-
2A	G	-
3A	L	-
4A	P	-
5A	L	-
6A	Y	-
7A	BR	-
8A	L	-

Connector No.	M2
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS10FW-CS

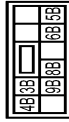

Terminal No.	Color Of Wire	Signal Name [Specification]
3B	P	-
4B	G	-
5B	O	-
6B	Y	-
8B	R	-
9B	SB	-

Connector No.	M3
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS12FW-CS

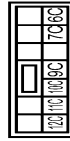

Terminal No.	Color Of Wire	Signal Name [Specification]
10C	L	-
11C	LG	-
12C	O	-
6C	R	-
7C	B	-
9C	O	-

Connector No.	M9
Connector Name	DIODE
Connector Type	Z4335-C9800




Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	-
2	R	-

Connector No.	M14
Connector Name	TRUNK LID OPENER CANCEL SWITCH
Connector Type	IS22FW




Terminal No.	Color Of Wire	Signal Name [Specification]
1	O	-
2	B	-

Connector No.	M22
Connector Name	KEY SLOT
Connector Type	TH12FW-NH

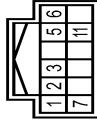

Terminal No.	Color Of Wire	Signal Name [Specification]
1	P	BAT
2	GR	CLOCK
3	W	DATA
5	Y	ILL BAT
8	LG	ILL
9	B	GROUND
11	R	KEY SWITCH SIGNAL

Connector No.	M24
Connector Name	DATA LINK CONNECTOR
Connector Type	BD16FW

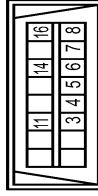

Terminal No.	Color Of Wire	Signal Name [Specification]
3	LG	- [Coupe models]
4	Y	- [Roadster models]
5	B	-
6	L	-
7	Y	-
8	G	-
11	LG	- [Roadster models]
14	Y	- [Coupe models]
16	P	-
18	Y	-

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

## BCM (BODY CONTROL MODULE)


Connector No.	M53
Connector Name	COMBINATION SWITCH
Connector Type	TH16FW-NH



1	2	3	4	5	6
7	8	9	10	11	12
13	14	15	16	17	18
19	20	21	22	23	24

Terminal No.	Color Of Wire	Signal Name [Specification]
1	P	FR WASHER (-)
2	SB	OUTPUT 4
3	L	OUTPUT 3
4	B	GROUND
5	V	INPUT 3
6	O	OUTPUT 5
7	Y	INPUT 4
8	R	INPUT 2
9	LG	INPUT 1
10	LG	OUTPUT 1
11	LG	INPUT 5
12	P	OUTPUT 2
13	BR	
14	G	

Connector No.	M50
Connector Name	PUSH-BUTTON IGNITION SWITCH
Connector Type	TK08FBR

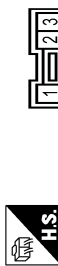

1	2	3
4	5	6
7	8	

Terminal No.	Color Of Wire	Signal Name [Specification]
1	B	-
2	R	-
3	G	-
4	BR	-
5	GR	-
6	Y	-
7	V	-
8	P	-

Connector No.	M53
Connector Name	COMBINATION METER
Connector Type	TH24FW-NH



1	2	3	4	5	6
7	8	9	10	11	12
13	14	15	16	17	18
19	20	21	22	23	24

Terminal No.	Color Of Wire	Signal Name [Specification]
1	V	BATTERY POWER SUPPLY
2	O	IGNITION SIGNAL
3	L	VEHICLE SPEED SIGNAL (2-PULSE)
4	V	VEHICLE SPEED SIGNAL (6-PULSE) [For Mexico]
5	B	VEHICLE SPEED SIGNAL (6-PULSE) [Used for Mexico]
6	R	ILLUMINATION CONTROL SIGNAL
7	R	ROOF STATUS SIGNAL
8	BR	COMMUNICATION SIGNAL (METER-TRIPLE METER)
9	L	COMMUNICATION SIGNAL (TRIPLE METER-METER)
10	L	S-MODE SWITCH SIGNAL
11	L	ACC POWER SUPPLY
12	G	AIR BAG SIGNAL
13	R	GROUND
14	B	AMBIENT SENSOR SIGNAL
15	V	AMBIENT SENSOR SIGNAL
16	V	AC AUTO AMP. CONNECTION RECOGNITION SIGNAL
17	G	AC AUTO AMP. CONNECTION RECOGNITION SIGNAL
18	G	AC AUTO AMP. CONNECTION RECOGNITION SIGNAL
19	G	AC AUTO AMP. CONNECTION RECOGNITION SIGNAL
20	GR	AMBIENT SENSOR GROUND
21	L	CAN-H
22	P	CAN-L
23	B	GROUND
24	Y	FUEL LEVEL SENSOR GROUND



Connector No.	M63
Connector Name	INSIDE KEY ANTENNA (INSTRUMENT CENTER)
Connector Type	RK02FGY



Terminal No.	Color Of Wire	Signal Name [Specification]
1	R	-
2	L	-

Connector No.	M54
Connector Name	COMBINATION METER
Connector Type	TH16FW-NH



25	26	27	28	29	30
31	32	33	34	35	36
37	38	39	40		

Terminal No.	Color Of Wire	Signal Name [Specification]
25	W	ALTERNATOR SWITCH
26	O	PARKING BRAKE SWITCH SIGNAL
27	LG	BRAKE FLUID LEVEL SWITCH SIGNAL
28	Y	SECURITY SIGNAL
29	GR	WASHER LEVEL SWITCH SIGNAL
30	G	PADDLE SHIFTER DOWN SIGNAL
31	O	PADDLE SHIFTER UP SIGNAL
32	BR	FUEL LEVEL SENSOR SIGNAL
33	L	SEAT BELT BUCKLE SWITCH SIGNAL (DRIVER SIDE)
34	L	PASSENGER SEAT BELT WARNINGSIGNAL (For Mexico)
35	L	PASSENGER SEAT BELT WARNINGSIGNAL (For Mexico)
36	P	NON-MANUAL MODE SIGNAL
37	V	MANUAL MODE SHIFT DOWN SIGNAL
38	L	MANUAL MODE SHIFT UP SIGNAL
39	L	MANUAL MODE SIGNAL
40	W	MANUAL MODE SIGNAL

Connector No.	M65
Connector Name	A/C AUTO AMP.
Connector Type	SAB40FW



1	2	3	4	5	6
7	8	9	10	11	12
13	14	15	16	17	18
19	20	21	22	23	24

Terminal No.	Color Of Wire	Signal Name [Specification]
1	L	CAN-H
2	P	CAN-L
3	L	TX (AMP CONT)
4	P	RX (AMP CONT)
5	BR	LAN SIGNAL
6	Y	EACH DOOR MOTOR POWER SUPPLY
7	O	SUNLOAD SENSOR SIGNAL
8	R	INTAKE SENSOR SIGNAL
9	L	ACC POWER SUPPLY
10	B	GROUND
11	O	IGNITION POWER SUPPLY
12	O	ECV SIGNAL
13	R	REAR WINDOW DEFOGGER FEEDBACK SIGNAL
14	L	REAR WINDOW DEFOGGER ON SIGNAL
15	L	BLOWER MOTOR CONTROL SIGNAL
16	G	AC AUTO AMP. CONNECTION RECOGNITION SIGNAL
17	G	AC AUTO AMP. CONNECTION RECOGNITION SIGNAL
18	V	AMBIENT SENSOR SIGNAL
19	LG	IN-VEHICLE SENSOR SIGNAL
20	GR	SENSOR GROUND
21	B	GROUND
22	Y	BATTERY POWER SUPPLY

A B C D E F G H I J K L M N O P

# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS INFORMATION >

### BCM (BODY CONTROL MODULE)

Connector No.	M104
Connector Name	REMOTE KEYLESS ENTRY RECEIVER (FRONT)
Connector Type	JAB04FB




Terminal No.	Color	Wire	Signal Name [Specification]
1	P		GROUND
2	GR		SIGNAL OUTPUT
4	LG		BATTERY

Connector No.	M118
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	M03FB-LC




Terminal No.	Color	Wire	Signal Name [Specification]
1	W		BAT. (F/L)
2	W		POWER WINDOW POWER SUPPLY (BAT)
3	Y		POWER WINDOW POWER SUPPLY (IGN)

Connector No.	M119
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	NS12FW-CS

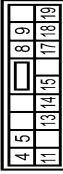


Terminal No.	Color	Wire	Signal Name [Specification]
4	R		INTERIOR ROOM LAMP POWER SUPPLY
5	G		PASSENGER DOOR UNLOCK OUTPUT
8	V		ALL DOOR FUEL LID LOCK OUTPUT
9	G		DRIVER DOOR FUEL LID UNLOCK OUTPUT
11	BR		BAT (F/R/S)
13	B		GROUND
14	R		PUSH-BUTTON IGNITION SW ILL GND
15	Y		ACC. IND.
17	W		TURN SIGNAL RH (FRONT. SIDE)
18	O		TURN SIGNAL LH (FRONT. SIDE)
19	P		ROOM LAMP TIMER CONTROL

Connector No.	M120
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	NS12FW-CS

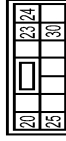

Terminal No.	Color	Wire	Signal Name [Specification]
20	V		TURN SIGNAL RH (REAR)
23	L		BACK DOOR OPEN OUTPUT (Cruise models)
23	Y		TRUNK LID OPEN OUTPUT (Passenger models)
24	O		REAR FOG OUTPUT
25	LG		TURN SIGNAL LH (REAR)
30	R		LUGGAGE/TRUNK ROOM LAMP OUTPUT

Connector No.	M121
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FB-NH

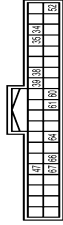

Terminal No.	Color	Wire	Signal Name [Specification]
34	G		LUGGAGE/TRUNK ROOM ANT-
35	R		LUGGAGE/TRUNK ROOM ANT+
36	B		REAR BUMPER ANT-
38	W		REAR BUMPER ANT+
47	V		IGN RELAY (B/D, F/R) CONT
52	SB		STARTER RELAY CONT
60	BR		PUSH SW
61	W		BACK DOOR/TRUNK LID DOOR REQUEST SW
64	G		L-KEY WARN BUZZER (ENG ROOM)
66	R		BACK DOOR/TRUNK ROOM LAMP SW
67	GR		BACK DOOR/TRUNK LID OPENER SW

Connector No.	M122
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FB-NH



Terminal No.	Color	Wire	Signal Name [Specification]
72	L		ROOM ANT 2-
73	P		ROOM ANT 2+
74	SB		PASSENGER DOOR ANT-
76	BR		PASSENGER DOOR ANT+
77	V		DRIVER DOOR ANT-
77	LG		DRIVER DOOR ANT+
78	L		ROOM ANT 1-
79	R		ROOM ANT 1+
80	GR		MATS ANT AMP



# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

**BCM (BODY CONTROL MODULE)**

Terminal No.	Wire	Signal Name [Specification]
81	W	NATS ANT AMP
82	R	IGN RELAY (FIB) CONT
83	R	KYLS ENT RECEIVER (FRONT) COMM
87	BR	COMBI SW INPUT 5
88	V	COMBI SW INPUT 3
90	P	CAN-L
91	L	CAN-H
92	LG	KEY SLOT ILL
93	V	ON IND
95	O	ACC RELAY CONT
96	Y	A/T SHIFT SELECTOR POWER SUPPLY
99	R	SHIFT P/C LUTCH PEDAL POS SW
100	GR	PASSENGER DOOR REQUEST SW
101	Y	DRIVER DOOR REQUEST SW
102	O	BLOWER FAN MOTOR RELAY CONT
103	LG	KYLS ENT RECEIVER (REAR) POWER SUPPLY
107	LG	COMBI SW INPUT 1
108	R	COMBI SW INPUT 4
109	B	COMBI SW INPUT 2
110	P	HAZARD SW


Connector No. M123  
Connector Name BCM (BODY CONTROL MODULE)  
Connector Type TH40FG-NH



Terminal No.	Wire	Signal Name [Specification]
113	O	OPTICAL SENSOR
114	R	CLUTCH INTERLOCK SW
115	O	-
116	SB	STOP LAMP SW 1
118	P	STOP LAMP SW 2
119	SB	DR DOOR UNLOCK SENSOR
121	W	KEY SLOT SW
123	W	IGN FIB
124	LG	PASSENGER DOOR SW
129	O	TRUNK LID OPENER CANCEL SW
130	L	REAR DEFOGGER SW
132	V	POWER SW & SGT-TOP-CLU (coupe models)
132	Y	POWER WINDOW SW COMM (Coupe models)
133	G	PUSH BUTTON IGNITION SW ILL POWER

Terminal No.	Wire	Signal Name [Specification]
134	GR	LOCK IND
137	P	RECEIVER & SENSOR GND
138	V	RECEIVER & SENSOR POWER SUPPLY
139	L	TIRE PRESS RECEIVE COMM
140	G	PI/N POSITION
141	Y	SECURITY INDICATOR
142	O	COMBI SW OUTPUT 5
143	P	COMBI SW OUTPUT 1
144	G	COMBI SW OUTPUT 2
145	L	COMBI SW OUTPUT 3
146	SB	COMBI SW OUTPUT 4
150	GR	DRIVER DOOR SW
151	G	REAR WINDOW DEFROGGER RELAY CONT

Connector No. M137  
Connector Name A/T SHIFT SELECTOR  
Connector Type TK10FW

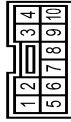


Terminal No.	Wire	Signal Name [Specification]
1	W	-
2	V	-
3	L	-
4	B	-
5	G	-
6	R	-
7	W	-
8	P	-
9	Y	-
10	R	-

Connector No. M144  
Connector Name HAZARD SWITCH  
Connector Type TK04FW



Terminal No.	Wire	Signal Name [Specification]
1	GR	GROUND
2	P	BCM
3	R	ILL*
4	B	ILL-

Connector No. M147  
Connector Name AIR BAG DIAGNOSIS SENSOR UNIT  
Connector Type NH28FY-EX

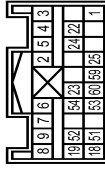

Terminal No.	Wire	Signal Name [Specification]
1	LG	IGN
2	B	GND
3	Y	DR 1 (+)
4	Y	DR 1 (-) DR 2 (-)
5	Y	DR 2 (+)
6	Y	AS-1 (+)
7	Y	AS-1 (-)
8	Y	AS-2 (+)
9	Y	AS-2 (-)
18	R	EC2S (+)
19	L	EC2S (-)
22	SHIELD	GNB
23	R	AIRBAG W/L
24	P	SEAT BELT
25	R	CUTOFF TELLTALE
51	W	SATELLITE RHZ (+)

Connector No. M256  
Connector Name HAZARD SWITCH  
Connector Type TK04FW



Terminal No.	Wire	Signal Name [Specification]
1	B	GROUND
2	G	BCM
3	SB	ILL*
4	BG	ILL- (Coupe models)
4	O	ILL- (Roadster models)

Connector No. M257  
Connector Name INSIDE KEY ANTENNA (CONSOLE)  
Connector Type RK0ZFGY



Terminal No.	Wire	Signal Name [Specification]
1	G	- (Roadster models)
1	P	- (Coupe models)
2	L	- (Coupe models)
2	R	- (Roadster models)

A B C D E F G H I J K L M N O P

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

## BCM (BODY CONTROL MODULE)

Connector No.	R2
Connector Name	VANITY MIRROR LAMP LH
Connector Type	MCA02FW



Terminal No.	Color Of Wire	Signal Name [Specification]
1	B	-
2	R	-

Connector No.	R3
Connector Name	VANITY MIRROR LAMP RH
Connector Type	MCA02FW



Terminal No.	Color Of Wire	Signal Name [Specification]
1	B	-
2	R	-

Connector No.	R4
Connector Name	MAP LAMP
Connector Type	TK08FGY



Terminal No.	Color Of Wire	Signal Name [Specification]
1	R	-
2	V	-
3	B	-
4	SB	-
5	Y	-
6	GR	-

JRMWF7327GB

INFOID:000000011312936

## Fail-safe

### FAIL-SAFE CONTROL BY DTC

BCM performs fail-safe control when any DTC are detected.

# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS INFORMATION >

Display contents of CONSULT	Fail-safe	Cancellation
B2190: NATS ANTENNA AMP	Inhibit engine cranking	Erase DTC
B2191: DIFFERENCE OF KEY	Inhibit engine cranking	Erase DTC
B2192: ID DISCORD BCM-ECM	Inhibit engine cranking	Erase DTC
B2193: CHAIN OF BCM-ECM	Inhibit engine cranking	Erase DTC
B2195: ANTI SCANNING	Inhibit engine cranking	Ignition switch ON → OFF
B2560: STARTER CONT RELAY	Inhibit engine cranking	500 ms after the following CAN signal communication status becomes consistent <ul style="list-style-type: none"> <li>• Starter control relay signal</li> <li>• Starter relay status signal</li> </ul>
B2608: STARTER RELAY	Inhibit engine cranking	500 ms after the following signal communication status becomes consistent <ul style="list-style-type: none"> <li>• Starter motor relay control signal</li> <li>• Starter relay status signal (CAN)</li> </ul>
B260A: IGNITION RELAY	Inhibit engine cranking	500 ms after the following conditions are fulfilled <ul style="list-style-type: none"> <li>• IGN relay (IPDM E/R) control signal: OFF (Battery voltage)</li> <li>• Ignition ON signal (CAN to IPDM E/R): OFF (Request signal)</li> <li>• Ignition ON signal (CAN from IPDM E/R): OFF (Condition signal)</li> </ul>
B260F: ENG STATE SIG LOST	Maintains the power supply position attained at the time of DTC detection	When any of the following conditions are fulfilled <ul style="list-style-type: none"> <li>• Power position changes to ACC</li> <li>• Receives engine status signal (CAN)</li> </ul>
B2617: STARTER RELAY CIRC	Inhibit engine cranking	1 second after the starter motor relay control inside BCM becomes normal
B2618: BCM	Inhibit engine cranking	1 second after the ignition relay (IPDM E/R) control inside BCM becomes normal
B261E: VEHICLE TYPE	Inhibit engine cranking	BCM initialization
B26E8: CLUTCH SW	Inhibit engine cranking	When any of the following BCM recognition conditions are fulfilled <ul style="list-style-type: none"> <li>• Status 1 <ul style="list-style-type: none"> <li>- Clutch switch signal (CAN from ECM): ON</li> <li>- Clutch interlock switch signal: OFF (0 V)</li> </ul> </li> <li>• Status 2 <ul style="list-style-type: none"> <li>- Clutch switch signal (CAN from ECM): OFF</li> <li>- Clutch interlock switch signal: ON (Battery voltage)</li> </ul> </li> </ul>

## DTC Inspection Priority Chart

INFOID:000000011312937

If some DTCs are displayed at the same time, perform inspections one by one based on the following priority chart.

Priority	DTC
1	B2562: LOW VOLTAGE
2	<ul style="list-style-type: none"> <li>• U1000: CAN COMM CIRCUIT</li> <li>• U1010: CONTROL UNIT (CAN)</li> </ul>
3	<ul style="list-style-type: none"> <li>• B2190: NATS ANTENNA AMP</li> <li>• B2191: DIFFERENCE OF KEY</li> <li>• B2192: ID DISCORD BCM-ECM</li> <li>• B2193: CHAIN OF BCM-ECM</li> <li>• B2195: ANTI SCANNING</li> </ul>

# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS INFORMATION >

Priority	DTC
4	<ul style="list-style-type: none"> <li>• B2553: IGNITION RELAY</li> <li>• B2555: STOP LAMP</li> <li>• B2556: PUSH-BTN IGN SW</li> <li>• B2557: VEHICLE SPEED</li> <li>• B2560: STARTER CONT RELAY</li> <li>• B2601: SHIFT POSITION</li> <li>• B2602: SHIFT POSITION</li> <li>• B2603: SHIFT POSI STATUS</li> <li>• B2604: PNP SW</li> <li>• B2605: PNP SW</li> <li>• B2608: STARTER RELAY</li> <li>• B260A: IGNITION RELAY</li> <li>• B260F: ENG STATE SIG LOST</li> <li>• B2614: BCM</li> <li>• B2615: BCM</li> <li>• B2616: BCM</li> <li>• B2617: BCM</li> <li>• B2618: BCM</li> <li>• B261A: PUSH-BTN IGN SW</li> <li>• B261E: VEHICLE TYPE</li> <li>• B26E8: CLUTCH SW</li> <li>• B26EA: KEY REGISTRATION</li> <li>• C1729: VHCL SPEED SIG ERR</li> <li>• U0415: VEHICLE SPEED SIG</li> </ul>
5	<ul style="list-style-type: none"> <li>• C1704: LOW PRESSURE FL</li> <li>• C1705: LOW PRESSURE FR</li> <li>• C1706: LOW PRESSURE RR</li> <li>• C1707: LOW PRESSURE RL</li> <li>• C1708: [NO DATA] FL</li> <li>• C1709: [NO DATA] FR</li> <li>• C1710: [NO DATA] RR</li> <li>• C1711: [NO DATA] RL</li> <li>• C1716: [PRESSDATA ERR] FL</li> <li>• C1717: [PRESSDATA ERR] FR</li> <li>• C1718: [PRESSDATA ERR] RR</li> <li>• C1719: [PRESSDATA ERR] RL</li> <li>• C1734: CONTROL UNIT</li> </ul>
6	<ul style="list-style-type: none"> <li>• B2621: INSIDE ANTENNA</li> <li>• B2622: INSIDE ANTENNA</li> <li>• B2623: INSIDE ANTENNA</li> </ul>

### DTC Index

INFOID:0000000011312938

#### NOTE:

The details of time display are as follows.

- CRNT: A malfunction is detected now.
- PAST: A malfunction was detected in the past.

IGN counter is displayed on Freeze Frame Data. For details of Freeze Frame Data, refer to [BCS-20, "COMMON ITEM : CONSULT Function \(BCM - COMMON ITEM\)"](#).

CONSULT display	Fail-safe	Freeze Frame Data •Vehicle Speed •Odo/Trip Meter •Vehicle condition	Intelligent Key warning lamp ON	Tire pressure monitor warn- ing lamp ON	Reference
No DTC is detected. further testing may be required.	—	—	—	—	—
U1000: CAN COMM CIRCUIT	—	—	—	—	<a href="#">BCS-49</a>
U1010: CONTROL UNIT (CAN)	—	—	—	—	<a href="#">BCS-50</a>
U0415: VEHICLE SPEED SIG	—	—	—	—	<a href="#">BCS-51</a>

## BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

CONSULT display	Fail-safe	Freeze Frame Data •Vehicle Speed •Odo/Trip Meter •Vehicle condition	Intelligent Key warning lamp ON	Tire pressure monitor warning lamp ON	Reference
B2190: NATS ANTENNA AMP	×	—	—	—	<a href="#">SEC-42</a>
B2191: DIFFERENCE OF KEY	×	—	—	—	<a href="#">SEC-45</a>
B2192: ID DISCORD BCM-ECM	×	—	—	—	<a href="#">SEC-46</a>
B2193: CHAIN OF BCM-ECM	×	—	—	—	<a href="#">SEC-48</a>
B2195: ANTI SCANNING	×	—	—	—	<a href="#">SEC-49</a>
B2553: IGNITION RELAY	—	×	—	—	<a href="#">PCS-54</a>
B2555: STOP LAMP	—	×	—	—	<a href="#">SEC-50</a>
B2556: PUSH-BTN IGN SW	—	×	×	—	<a href="#">SEC-52</a>
B2557: VEHICLE SPEED	×	×	×	—	<a href="#">SEC-54</a>
B2560: STARTER CONT RELAY	×	×	×	—	<a href="#">SEC-55</a>
B2562: LOW VOLTAGE	—	×	—	—	<a href="#">BCS-52</a>
B2601: SHIFT POSITION	×	×	×	—	<a href="#">SEC-56</a>
B2602: SHIFT POSITION	×	×	×	—	<a href="#">SEC-59</a>
B2603: SHIFT POSI STATUS	×	×	×	—	<a href="#">SEC-62</a>
B2604: PNP SW	×	×	×	—	<a href="#">SEC-65</a>
B2605: PNP SW	×	×	×	—	<a href="#">SEC-67</a>
B2608: STARTER RELAY	×	×	×	—	<a href="#">SEC-69</a>
B260A: IGNITION RELAY	×	×	×	—	<a href="#">PCS-56</a>
B260F: ENG STATE SIG LOST	×	×	×	—	<a href="#">SEC-71</a>
B2614: BCM	—	×	×	—	<a href="#">PCS-58</a>
B2615: BCM	—	×	×	—	<a href="#">PCS-61</a>
B2616: BCM	—	×	×	—	<a href="#">PCS-64</a>
B2617: BCM	×	×	×	—	<a href="#">SEC-75</a>
B2618: BCM	×	×	×	—	<a href="#">PCS-67</a>
B261A: PUSH-BTN IGN SW	—	×	×	—	<a href="#">PCS-68</a>
B261E: VEHICLE TYPE	×	×	× (Turn ON for 15 seconds)	—	<a href="#">SEC-78</a>
B2621: INSIDE ANTENNA	—	×	—	—	<a href="#">DLK-282</a>
B2622: INSIDE ANTENNA	—	×	—	—	• <a href="#">DLK-85</a> (Coupe) • <a href="#">DLK-284</a> (Roadster)
B2623: INSIDE ANTENNA	—	×	—	—	• <a href="#">DLK-87</a> (Coupe) • <a href="#">DLK-286</a> (Roadster)
B26E8: CLUTCH SW	×	×	×	—	<a href="#">SEC-72</a>
B26EA: KEY REGISTRATION	—	×	× (Turn ON for 15 seconds)	—	<a href="#">SEC-74</a>
C1704: LOW PRESSURE FL	—	—	—	×	<a href="#">WT-24</a>
C1705: LOW PRESSURE FR	—	—	—	×	
C1706: LOW PRESSURE RR	—	—	—	×	
C1707: LOW PRESSURE RL	—	—	—	×	

A

B

C

D

E

F

G

H

I

J

K

L

M

WCS

O

P

## BCM (BODY CONTROL MODULE)

### < ECU DIAGNOSIS INFORMATION >

CONSULT display	Fail-safe	Freeze Frame Data •Vehicle Speed •Odo/Trip Meter •Vehicle condition	Intelligent Key warning lamp ON	Tire pressure monitor warn- ing lamp ON	Reference
C1708: [NO DATA] FL	—	—	—	×	<a href="#">WT-26</a>
C1709: [NO DATA] FR	—	—	—	×	
C1710: [NO DATA] RR	—	—	—	×	
C1711: [NO DATA] RL	—	—	—	×	
C1716: [PRESSDATA ERR] FL	—	—	—	×	<a href="#">WT-29</a>
C1717: [PRESSDATA ERR] FR	—	—	—	×	
C1718: [PRESSDATA ERR] RR	—	—	—	×	
C1719: [PRESSDATA ERR] RL	—	—	—	×	
C1729: VHCL SPEED SIG ERR	—	—	—	×	<a href="#">WT-31</a>
C1734: CONTROL UNIT	—	—	—	×	<a href="#">WT-33</a>

# THE PARKING BRAKE RELEASE WARNING CONTINUES SOUNDING, OR DOES NOT SOUND

< SYMPTOM DIAGNOSIS >

## SYMPTOM DIAGNOSIS

### THE PARKING BRAKE RELEASE WARNING CONTINUES SOUNDING, OR DOES NOT SOUND

#### Description

INFOID:0000000010841631

- The parking brake warning buzzer sounds continuously during vehicle travel though the parking brake is released.
- The parking brake warning buzzer does not sound at all even though driving the vehicle with the parking brake applied.

#### Diagnosis Procedure

INFOID:0000000010841632

#### 1. CHECK PARKING BRAKE WARNING LAMP

1. Start the engine.
2. Check the operation of the brake warning lamp by operating the parking brake.

When parking brake is applied : ON  
When parking brake is released : OFF

##### Is the inspection result normal?

- YES >> Replace combination meter.  
NO >> GO TO 2.

#### 2. CHECK PARKING BRAKE SWITCH SIGNAL CIRCUIT

Perform check for the parking brake switch signal circuit. Refer to [MWI-53, "Diagnosis Procedure"](#).

##### Is the inspection result normal?

- YES >> GO TO 3.  
NO >> Repair harness or connector.

#### 3. CHECK PARKING BRAKE SWITCH

Perform a unit check for the parking brake switch. Refer to [MWI-53, "Component Inspection"](#).

##### Is the inspection result normal?

- YES >> Replace combination meter.  
NO >> Replace parking brake switch. Refer to [PB-7, "Exploded View"](#).

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
O  
P

WCS

# THE LIGHT REMINDER WARNING DOES NOT SOUND

< SYMPTOM DIAGNOSIS >

---

## THE LIGHT REMINDER WARNING DOES NOT SOUND

### Description

INFOID:000000010841633

Light reminder warning chime does not sound even though headlamp is illuminated.

### Diagnosis Procedure

INFOID:000000010841634

#### 1. CHECK COMBINATION SWITCH (LIGHTING SWITCH) OPERATION

---

Check that the headlamps operate normally by operating the combination switch (lighting switch).

Do they operate normally?

YES >> GO TO 2.

NO >> Refer to [EXL-98, "Symptom Table"](#).

#### 2. CHECK DRIVER SIDE DOOR SWITCH SIGNAL CIRCUIT

---

Perform the check for the driver side door switch signal circuit. Refer to [DLK-89, "Diagnosis Procedure"](#) (coupe) or [DLK-288, "Diagnosis Procedure"](#) (roadster).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair harness or connector.

#### 3. CHECK DRIVER SIDE DOOR SWITCH

---

Perform a unit check for the driver side door switch. Refer to [DLK-90, "Component Inspection"](#) (coupe) or [DLK-289, "Component Inspection"](#) (roadster).

Is the inspection result normal?

YES >> Replace BCM. Refer to [BCS-106, "Removal and Installation"](#).

NO >> Replace driver side door switch. Refer to [DLK-198, "Removal and Installation"](#) (coupe) or [DLK-401, "Removal and Installation"](#) (roadster).



# THE SEAT BELT WARNING CONTINUES SOUNDING, OR DOES NOT SOUND

< SYMPTOM DIAGNOSIS >

## THE SEAT BELT WARNING CONTINUES SOUNDING, OR DOES NOT SOUND

### Description

INFOID:000000010841635

- Seat belt reminder warning does not sound.
- Seat belt reminder warning sounds continuously.

### Diagnosis Procedure

INFOID:000000010841636

#### 1. CHECK SEAT BELT WARNING LAMP

1. Turn ignition switch ON.
2. Check the operation of the seat belt warning lamp in the combination meter.

Seat belt fastened : OFF  
Seat belt not fastened : ON

#### Is the inspection result normal?

- YES >> GO TO 2.  
NO >> GO TO 4.

#### 2. CHECK BCM OUTPUT SIGNAL

Check if the light reminder warning chime is activated by performing BCM active test. Refer to [WCS-16, "BUZZER : CONSULT Function \(BCM - BUZZER\)"](#).

#### Is the inspection result normal?

- YES >> INSPECTION END  
NO >> GO TO 3.

#### 3. CHECK COMBINATION METER INPUT SIGNAL

Check if buzzer switches to proper condition (On/Off) on data monitor of combination meter. Refer to [MWI-34, "CONSULT Function \(METER/M&A\)"](#).

Buzzer active condition : On  
Buzzer non-active condition : Off

#### Is the inspection result normal?

- YES >> Replace combination meter.  
NO >> Replace BCM. Refer to [BCS-106, "Removal and Installation"](#).

#### 4. CHECK SEAT BELT BUCKLE SWITCH (DRIVER SIDE) CIRCUIT

Perform the check for the seat belt buckle switch (driver side) circuit. Refer to [WCS-21, "Diagnosis Procedure"](#).

#### Is the inspection result normal?

- YES >> GO TO 5.  
NO >> Repair harness or connector.

#### 5. CHECK SEAT BELT BUCKLE SWITCH (DRIVER SIDE)

Perform a unit check for the seat belt buckle switch (driver side). Refer to [WCS-22, "Component Inspection"](#).

#### Is the inspection result normal?

- YES >> Replace combination meter.  
NO >> Replace seat belt buckle (driver side). Refer to [SB-11, "SEAT BELT BUCKLE : Removal and Installation"](#).

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
O  
P

WCS

# PRECAUTIONS

< PRECAUTION >

## PRECAUTION

### PRECAUTIONS

#### EXCEPT FOR MEXICO

#### EXCEPT FOR MEXICO : Precautions for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000010841637

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

#### **WARNING:**

Always observe the following items for preventing accidental activation.

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision that would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see "SRS AIR BAG".
- Never use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

#### PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

#### **WARNING:**

Always observe the following items for preventing accidental activation.

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, never use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

#### EXCEPT FOR MEXICO : Precaution for Battery Service

INFOID:000000011313553

Before disconnecting the battery, lower both the driver and passenger windows. This will prevent any interference between the window edge and the vehicle when the door is opened/closed. During normal operation, the window slightly raises and lowers automatically to prevent any window to vehicle interference. The automatic window function will not work with the battery disconnected.

#### EXCEPT FOR MEXICO : Precautions for Removing Battery Terminal

INFOID:000000011313553

- When removing the 12V battery terminal, turn OFF the ignition switch and wait at least 30 seconds.

#### **NOTE:**

ECU may be active for several tens of seconds after the ignition switch is turned OFF. If the battery terminal is removed before ECU stops, then a DTC detection error or ECU data corruption may occur.


- For vehicles with the 2-batteries, be sure to connect the main battery and the sub battery before turning ON the ignition switch.

#### **NOTE:**

If the ignition switch is turned ON with any one of the terminals of main battery and sub battery disconnected, then DTC may be detected.

- After installing the 12V battery, always check "Self Diagnosis Result" of all ECUs and erase DTC.

#### **NOTE:**

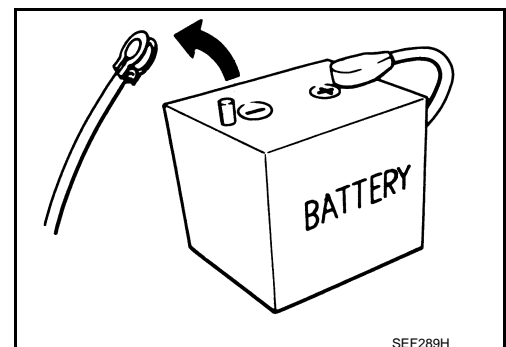

# PRECAUTIONS

## < PRECAUTION >

The removal of 12V battery may cause a DTC detection error.

### FOR MEXICO

### FOR MEXICO : Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000010841639

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

#### **WARNING:**

Always observe the following items for preventing accidental activation.

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision that would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see "SRS AIR BAG".
- Never use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

### PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

#### **WARNING:**

Always observe the following items for preventing accidental activation.

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, never use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

### FOR MEXICO : Precaution for Battery Service

INFOID:000000010841640

Before disconnecting the battery, lower both the driver and passenger windows. This will prevent any interference between the window edge and the vehicle when the door is opened/closed. During normal operation, the window slightly raises and lowers automatically to prevent any window to vehicle interference. The automatic window function will not work with the battery disconnected.

### FOR MEXICO : Precautions for Removing Battery Terminal

INFOID:000000011313554

- When removing the 12V battery terminal, turn OFF the ignition switch and wait at least 30 seconds.

#### **NOTE:**

ECU may be active for several tens of seconds after the ignition switch is turned OFF. If the battery terminal is removed before ECU stops, then a DTC detection error or ECU data corruption may occur.

- For vehicles with the 2-batteries, be sure to connect the main battery and the sub battery before turning ON the ignition switch.


#### **NOTE:**

If the ignition switch is turned ON with any one of the terminals of main battery and sub battery disconnected, then DTC may be detected.

- After installing the 12V battery, always check "Self Diagnosis Result" of all ECUs and erase DTC.

#### **NOTE:**

The removal of 12V battery may cause a DTC detection error.

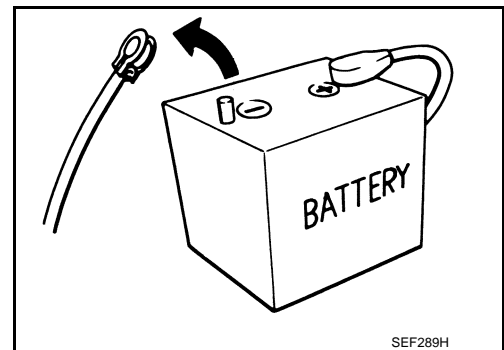

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
O  
P

WCS