

SECTION LAN
LAN SYSTEM

A
B
C

CONTENTS

CAN FUNDAMENTAL		
HOW TO USE THIS MANUAL	4	
DESCRIPTION	4	
Description	4	
PRECAUTION	6	
PRECAUTIONS	6	
Precautions for Trouble Diagnosis	6	
Precautions for Harness Repair	6	
FUNCTION DIAGNOSIS	7	
CAN COMMUNICATION SYSTEM	7	
System Description	7	
System Diagram	7	
CAN Communication Control Circuit	8	
DIAG ON CAN	9	
Description	9	
System Diagram	9	
TROUBLE DIAGNOSIS	10	
Condition of Error Detection	10	
Symptom When Error Occurs in CAN Communi- cation System	10	
CAN Diagnosis with CONSULT-III	13	
Self-Diagnosis	14	
CAN Diagnostic Support Monitor	14	
How to Use CAN Communication Signal Chart	16	
BASIC INSPECTION	17	
DIAGNOSIS AND REPAIR WORKFLOW	17	
Trouble Diagnosis Flow Chart	17	
Trouble Diagnosis Procedure	17	
CAN		
HOW TO USE THIS MANUAL	22	
DESCRIPTION	22	
Description	22	
HOW TO USE THIS SECTION	24	
Caution	24	
Abbreviation List	24	
PRECAUTION	25	
PRECAUTIONS	25	
Precautions For High-Voltage System	25	
Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TEN- SIONER"	25	
Precautions for Trouble Diagnosis	25	
Precautions for Harness Repair	25	
BASIC INSPECTION	27	
DIAGNOSIS AND REPAIR WORKFLOW	27	
Interview Sheet	27	
FUNCTION DIAGNOSIS	28	
CAN COMMUNICATION SYSTEM	28	
CAN System Specification Chart	28	
CAN Communication Signal Chart	28	
COMPONENT DIAGNOSIS	31	
CAN COMMUNICATION SYSTEM	31	
Component Parts Location	31	
Wiring Diagram - CAN SYSTEM -	32	
MALFUNCTION AREA CHART	37	
Main Line	37	
Branch Line	37	
Short Circuit	37	
MAIN LINE BETWEEN HVAC AND DLC CIR- CUIT	38	
Diagnosis Procedure	38	

D
E
F
G
H
I
J
K
L

LAN

N
O
P

MAIN LINE BETWEEN DLC AND A-BAG CIRCUIT	39	Trouble Diagnosis Procedure	57
Diagnosis Procedure	39	Diagnosis Sheet	63
MAIN LINE BETWEEN A-BAG AND HV ECU CIRCUIT	40	DTC Related to HEV SYSTEM CAN List	63
Diagnosis Procedure	40	COMPONENT DIAGNOSIS	67
ECM BRANCH LINE CIRCUIT	41	CAN COMMUNICATION SYSTEM	67
Diagnosis Procedure	41	Component Parts Location	67
AV BRANCH LINE CIRCUIT	42	Wiring Diagram - HEV SYSTEM CAN -	68
Diagnosis Procedure	42	MALFUNCTION AREA CHART	73
HVAC BRANCH LINE CIRCUIT	43	Main Line	73
Diagnosis Procedure	43	Branch Line	73
M&A BRANCH LINE CIRCUIT	44	Short Circuit	73
Diagnosis Procedure	44	MAIN LINE BETWEEN EPS AND DLC CIRCUIT	74
BCM BRANCH LINE CIRCUIT	45	Diagnosis Procedure	74
Diagnosis Procedure	45	MAIN LINE BETWEEN DLC AND STRG CIRCUIT	75
DLC BRANCH LINE CIRCUIT	46	Diagnosis Procedure	75
Diagnosis Procedure	46	MAIN LINE BETWEEN STRG AND YAW CIRCUIT	76
A-BAG BRANCH LINE CIRCUIT	47	Diagnosis Procedure	76
Diagnosis Procedure	47	MAIN LINE BETWEEN YAW AND ABS CIRCUIT	77
HV ECU BRANCH LINE CIRCUIT	48	Diagnosis Procedure	77
Diagnosis Procedure	48	ECM BRANCH LINE CIRCUIT	78
IPDM-E BRANCH LINE CIRCUIT	49	Diagnosis Procedure	78
Diagnosis Procedure	49	EPS BRANCH LINE CIRCUIT	79
CAN COMMUNICATION CIRCUIT	50	Diagnosis Procedure	79
Diagnosis Procedure	50	DLC BRANCH LINE CIRCUIT	80
HEV SYSTEM CAN		Diagnosis Procedure	80
HOW TO USE THIS MANUAL	52	STRG BRANCH LINE CIRCUIT	81
DESCRIPTION	52	Diagnosis Procedure	81
Description	52	YAW BRANCH LINE CIRCUIT	82
HOW TO USE THIS SECTION	54	Diagnosis Procedure	82
Caution	54	ABS BRANCH LINE CIRCUIT	83
Abbreviation List	54	Diagnosis Procedure	83
PRECAUTION	55	HV ECU BRANCH LINE CIRCUIT	84
PRECAUTIONS	55	Diagnosis Procedure	84
Precautions For High-Voltage System	55	HEV SYSTEM CAN COMMUNICATION CIRCUIT	85
Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	55	Diagnosis Procedure	85
Precautions for Trouble Diagnosis	55	CAN SYSTEM (TYPE 1)	
Precautions for Harness Repair	55	COMPONENT DIAGNOSIS	87
BASIC INSPECTION	57	MAIN LINE BETWEEN HVAC AND DLC CIRCUIT	87
DIAGNOSIS AND REPAIR WORKFLOW	57	Diagnosis Procedure	87
Information Needed for Trouble Diagnosis	57		
Trouble Diagnosis Flow Chart	57		

MAIN LINE BETWEEN DLC AND A-BAG CIRCUIT	88	Diagnosis Procedure	100	
Diagnosis Procedure	88			A
MAIN LINE BETWEEN A-BAG AND HV ECU CIRCUIT	89	MAIN LINE BETWEEN DLC AND A-BAG CIRCUIT	101	
Diagnosis Procedure	89	Diagnosis Procedure	101	B
ECM BRANCH LINE CIRCUIT	90	MAIN LINE BETWEEN A-BAG AND HV ECU CIRCUIT	102	
Diagnosis Procedure	90	Diagnosis Procedure	102	C
HVAC BRANCH LINE CIRCUIT	91	ECM BRANCH LINE CIRCUIT	103	
Diagnosis Procedure	91	Diagnosis Procedure	103	D
M&A BRANCH LINE CIRCUIT	92	AV BRANCH LINE CIRCUIT	104	
Diagnosis Procedure	92	Diagnosis Procedure	104	E
BCM BRANCH LINE CIRCUIT	93	HVAC BRANCH LINE CIRCUIT	105	
Diagnosis Procedure	93	Diagnosis Procedure	105	F
DLC BRANCH LINE CIRCUIT	94	M&A BRANCH LINE CIRCUIT	106	
Diagnosis Procedure	94	Diagnosis Procedure	106	G
A-BAG BRANCH LINE CIRCUIT	95	BCM BRANCH LINE CIRCUIT	107	
Diagnosis Procedure	95	Diagnosis Procedure	107	H
HV ECU BRANCH LINE CIRCUIT	96	DLC BRANCH LINE CIRCUIT	108	
Diagnosis Procedure	96	Diagnosis Procedure	108	I
IPDM-E BRANCH LINE CIRCUIT	97	A-BAG BRANCH LINE CIRCUIT	109	
Diagnosis Procedure	97	Diagnosis Procedure	109	J
CAN COMMUNICATION CIRCUIT	98	HV ECU BRANCH LINE CIRCUIT	110	
Diagnosis Procedure	98	Diagnosis Procedure	110	K
CAN SYSTEM (TYPE 2)		IPDM-E BRANCH LINE CIRCUIT	111	
COMPONENT DIAGNOSIS	100	Diagnosis Procedure	111	L
MAIN LINE BETWEEN HVAC AND DLC CIRCUIT	100	CAN COMMUNICATION CIRCUIT	112	
		Diagnosis Procedure	112	


LAN

HOW TO USE THIS MANUAL

DESCRIPTION

Description

INFOID:000000005438958

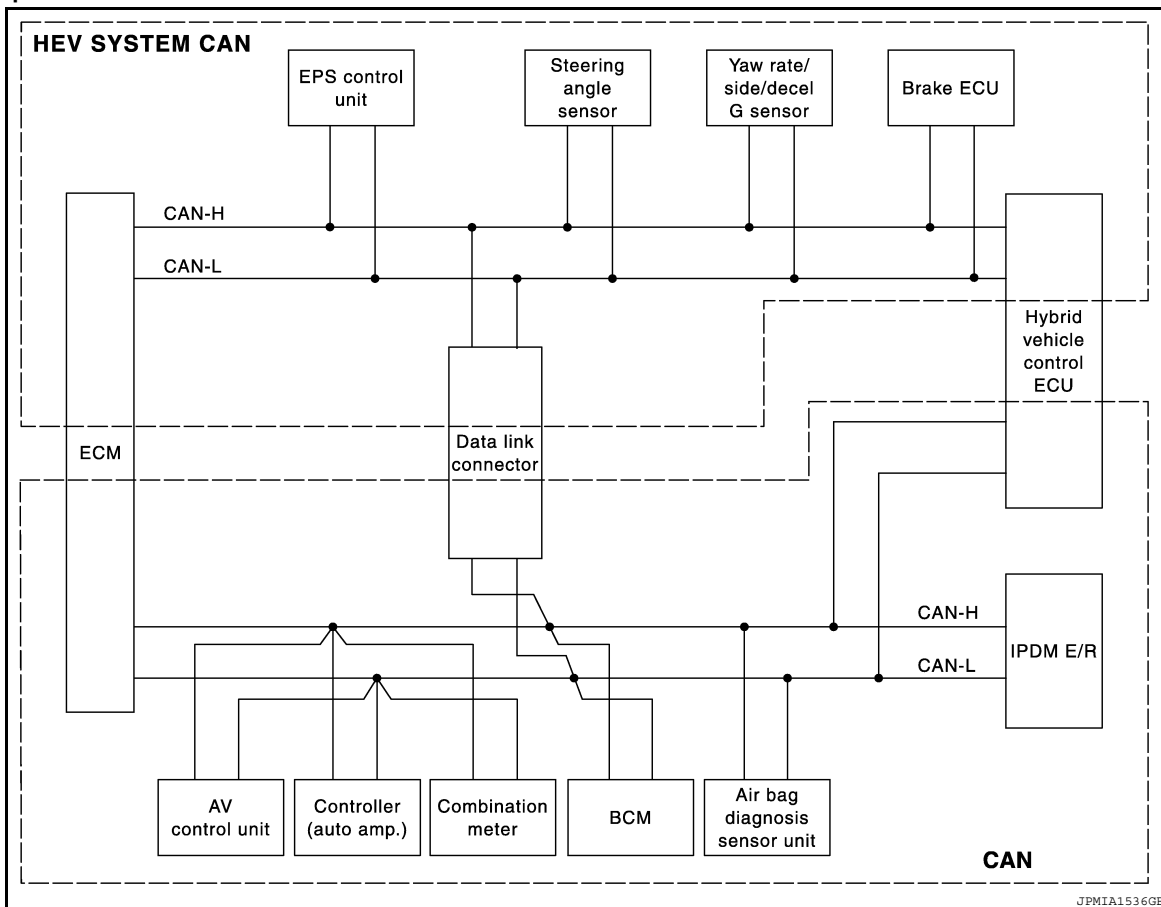

This vehicle has two types of CAN communication systems; CAN and HEV SYSTEM CAN. For starting the trouble diagnosis, refer to the following list.

NOTE:

- If the DTCs related to CAN and related to HEV SYSTEM CAN are displayed at the same time, diagnose CAN first.
- After the diagnosis of HEV SYSTEM CAN or CAN, erase the DTCs of unit connected to HEV SYSTEM CAN and CAN.

DESCRIPTION

< HOW TO USE THIS MANUAL >

[CAN FUNDAMENTAL]

Unit	DTC (INF code*) displayed on CONSULT-III	CAN communication system	Inspection
ECM	P0607, U1001, U1002, U1010, U0164	CAN	LAN-17, "Trouble Diagnosis Procedure"
	P0607, U0129, U0293, U1011, U1020, U1022	HEV SYSTEM CAN	
EPS control unit	C1608, U0129, U0293	HEV SYSTEM CAN	
Brake ECU	C1300, U0073, U0123, U0124, U0126, U0293	HEV SYSTEM CAN	LAN-57, "Trouble Diagnosis Procedure"
Hybrid vehicle control ECU	P0A1D (924), P0A1D (925), U0100, U0100 (211), U0100 (212), U0100 (530), U0129, U0129 (220), U0129 (222), U0129 (528), U0131, U0131 (433), U0131 (434)	HEV SYSTEM CAN	
	U1001, U1001 (146), U1001 (435), U1001 (594), U1001 (827), U1001 (919), U1001 (920)	CAN	
AV control unit	P0607, U1000, U1002, U1010	CAN	LAN-17, "Trouble Diagnosis Procedure"
BCM			
Controller (auto amp.)			
Combination meter			
IPDM E/R			

*: For the details, refer to [HBC-80, "Diagnosis Description"](#).

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

PRECAUTION

PRECAUTIONS

Precautions for Trouble Diagnosis

INFOID:000000005713593

CAUTION:

- Never apply 7.0 V or more to the measurement terminal.
- Use a tester with open terminal voltage of 7.0 V or less.
- Turn the ignition switch OFF and disconnect the battery cable from the negative terminal when checking the harness.


Precautions for Harness Repair

INFOID:000000005713594

- Solder the repaired area and wrap tape around the soldered area.

NOTE:


A fray of twisted lines must be within 110 mm (4.33 in).

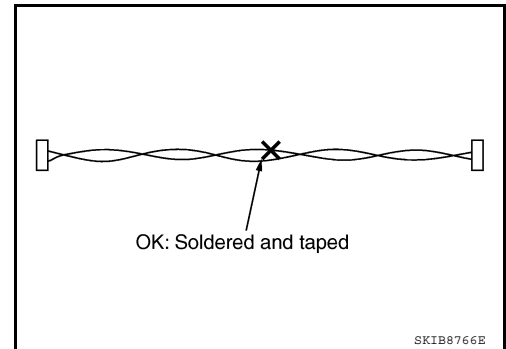

- Bypass connection is never allowed at the repaired area.

NOTE:

Bypass connection may cause CAN communication error. The spliced wire becomes separated and the characteristics of twisted line are lost.

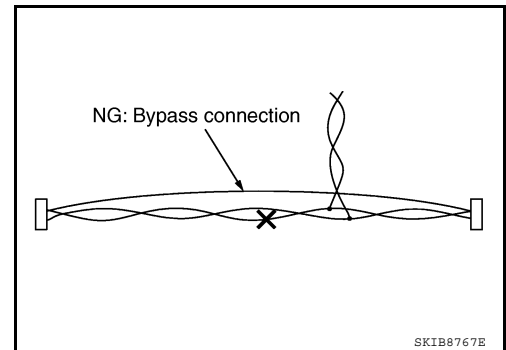

- Replace the applicable harness as an assembly if error is detected on the shield lines of CAN communication line.

FUNCTION DIAGNOSIS

CAN COMMUNICATION SYSTEM


System Description

INFOID:000000005713595

- CAN communication is a multiplex communication system. This enables the system to transmit and receive large quantities of data at high speed by connecting control units with two communication lines (CAN-H and CAN-L).
- Control units on the CAN network transmit signals using the CAN communication control circuit. They receive only necessary signals from other control units to operate various functions.
- CAN communication lines adopt twisted-pair line style (two lines twisted) for noise immunity.

System Diagram

INFOID:000000005713596

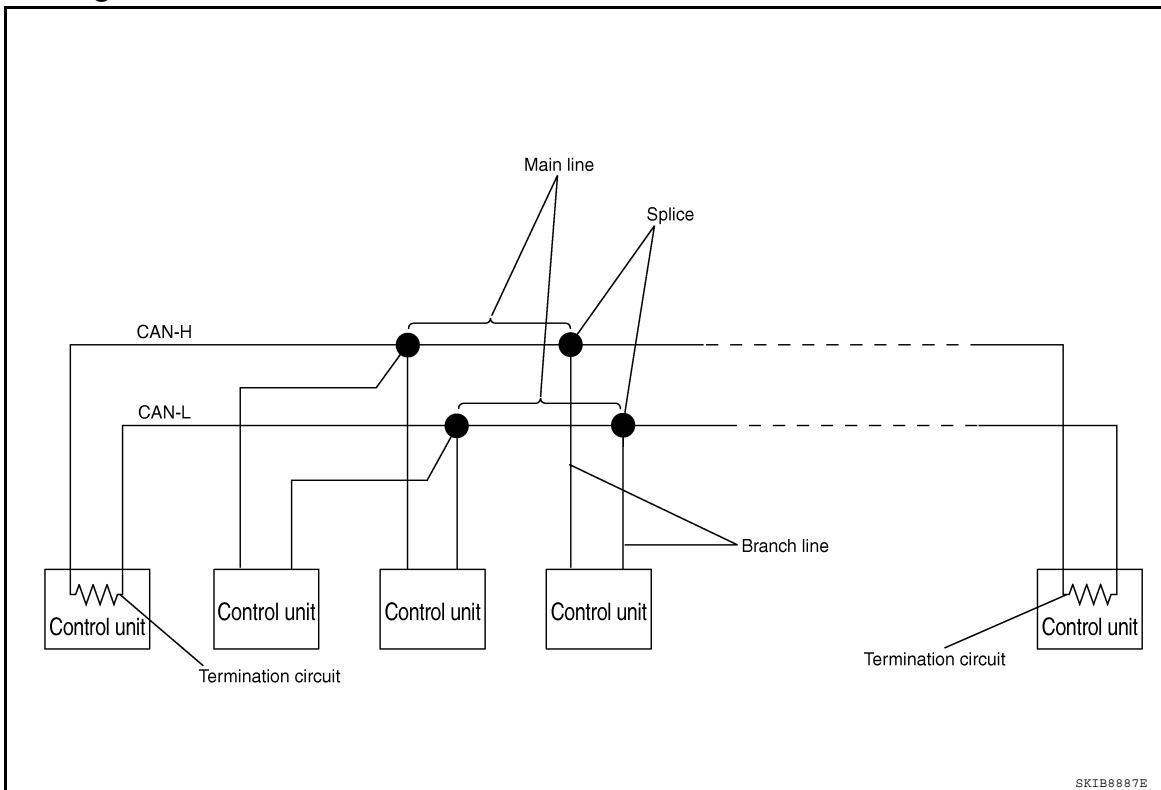

Each control unit passes an electric current to the termination circuits when transmitting CAN communication signal. The termination circuits produce an electrical potential difference between CAN-H and CAN-L. CAN communication system transmits and receives CAN communication signals by the potential difference.

LAN

Component	Description
Main line	CAN communication line between splices
Branch line	CAN communication line between splice and a control unit
Splice	A point connecting a branch line with a main line
Termination circuit	Refer to LAN-8. "CAN Communication Control Circuit" .

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P


CAN COMMUNICATION SYSTEM

< FUNCTION DIAGNOSIS >

[CAN FUNDAMENTAL]

CAN Communication Control Circuit

INFOID:000000005713597

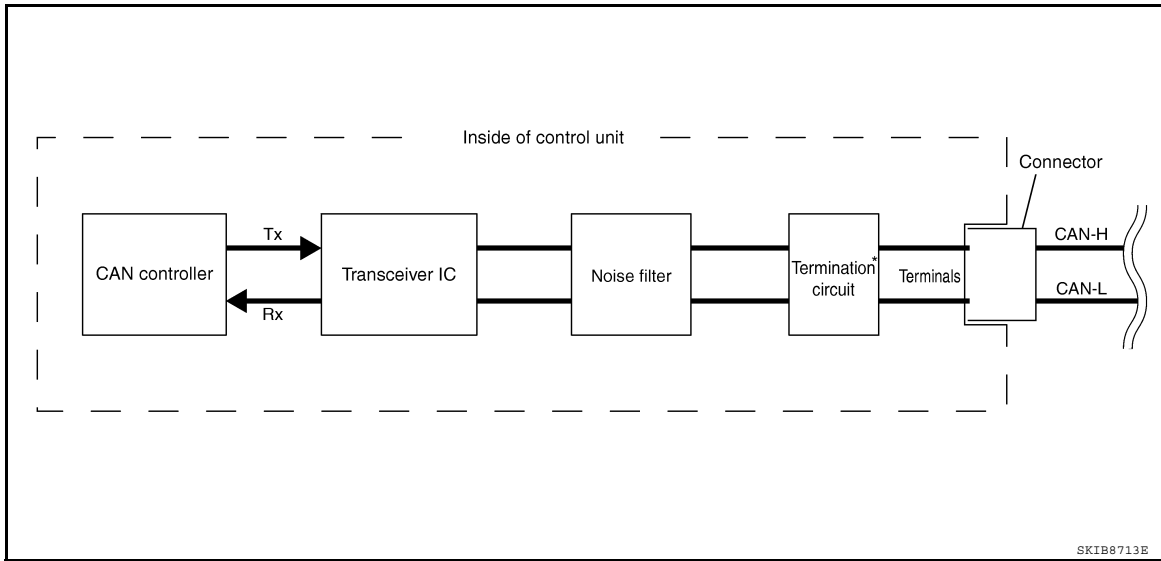

Component	System description
CAN controller	It controls CAN communication signal transmission and reception, error detection, etc.
Transceiver IC	It converts digital signal into CAN communication signal, and CAN communication signal into digital signal.
Noise filter	It eliminates noise of CAN communication signal.
Termination circuit* (Resistance of approx. 120 Ω)	It produces potential difference.

*: These are the only control units wired with both ends of CAN communication system.

DIAG ON CAN


Description

INFOID:000000005713598

“Diag on CAN” is a diagnosis using CAN communication instead of previous DDL1 and DDL2 communication lines, between control units and diagnosis unit.

System Diagram

INFOID:000000005713599

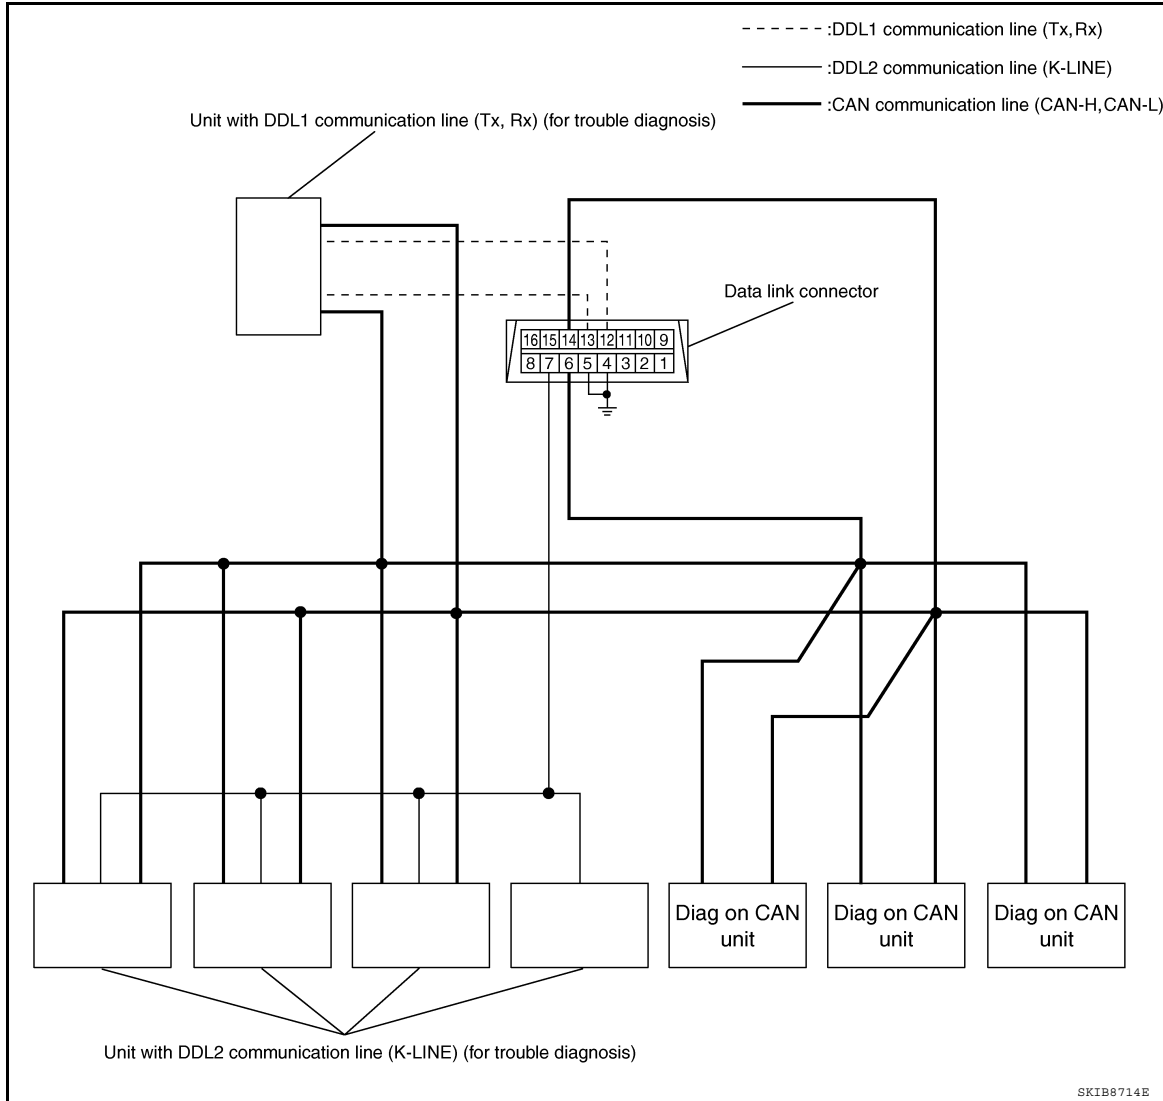

Name	Harness	Description
DDL1	Tx Rx	It is used for trouble diagnosis. (CAN-H and CAN-L are used for controlling)
DDL2	K-LINE	It is used for trouble diagnosis. (CAN-H and CAN-L are used for controlling)
Diag on CAN	CAN-H CAN-L	It is used for trouble diagnosis and control.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

TROUBLE DIAGNOSIS

Condition of Error Detection

INFOID:000000005713600

DTC of CAN communication is indicated on SELF-DIAG RESULTS on CONSULT-III if a CAN communication signal is not transmitted or received between units for 2 seconds or more.

NOTE:

DTCs of CAN communication are as follows:

- U0101
- U0140
- U0164
- U1000
- U1001

CAN COMMUNICATION SYSTEM ERROR

- CAN communication line open (CAN-H, CAN-L, or both)
- CAN communication line short (ground, between CAN communication lines, other harnesses)
- Error of CAN communication control circuit of the unit connected to CAN communication line

WHEN DTC OF CAN COMMUNICATION IS INDICATED EVEN THOUGH CAN COMMUNICATION SYSTEM IS NORMAL

- Removal/installation of parts: Error may be detected when removing and installing CAN communication unit and related parts while turning the ignition switch ON. (A DTC except for CAN communication may be detected.)
- Fuse blown out (removed): CAN communication of the unit may cease.
- Voltage drop: Error may be detected if voltage drops due to discharged battery when turning the ignition switch ON (Depending on the control unit which carries out CAN communication).
- Error may be detected if the power supply circuit of the control unit, which carries out CAN communication, malfunctions (Depending on the control unit which carries out CAN communication).
- Error may be detected if reprogramming is not completed normally.

CAUTION:

CAN communication system is normal if DTC of CAN communication is indicated on SELF-DIAG RESULTS of CONSULT-III under the above conditions. Erase the memory of the self-diagnosis of each unit.

Symptom When Error Occurs in CAN Communication System

INFOID:000000005713601

In CAN communication system, multiple units mutually transmit and receive signals. Each unit cannot transmit and receive signals if any error occurs on CAN communication line. Under this condition, multiple control units related to the root cause malfunction or go into fail-safe mode.

ERROR EXAMPLE

NOTE:


- Each vehicle differs in symptom of each unit under fail-safe mode and CAN communication line wiring.
- Refer to [LAN-24, "Abbreviation List"](#) for the unit abbreviation.

TROUBLE DIAGNOSIS

< FUNCTION DIAGNOSIS >


[CAN FUNDAMENTAL]

Example: TCM branch line open circuit

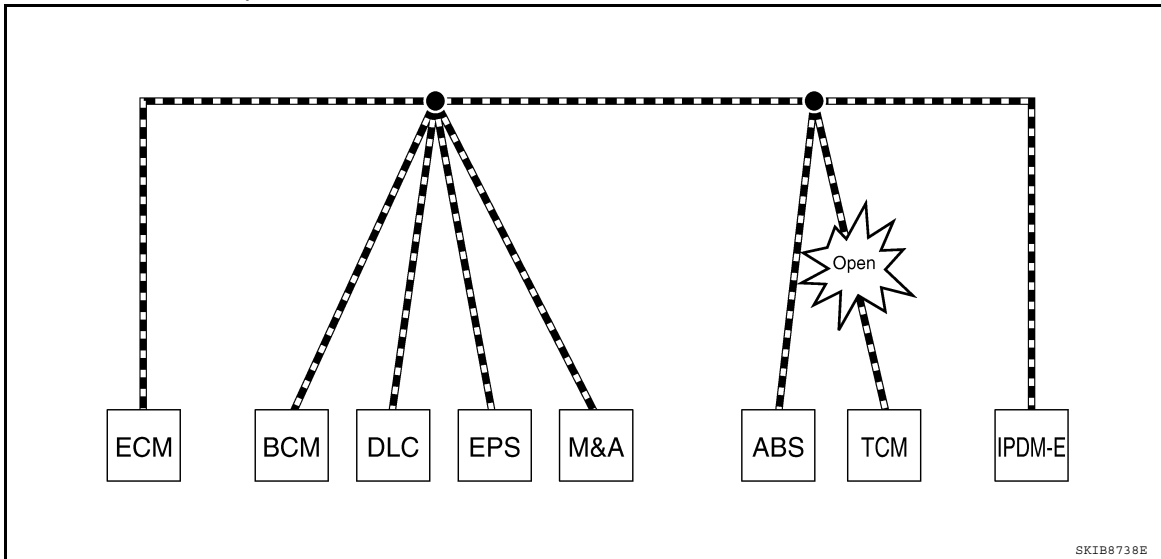

Unit name	Symptom
ECM	Engine torque limiting is affected, and shift harshness increases.
BCM	Reverse warning chime does not sound.
EPS control unit	Normal operation.
Combination meter	<ul style="list-style-type: none"> • Shift position indicator and OD OFF indicator turn OFF. • Warning lamps turn ON.
ABS actuator and electric unit (control unit)	Normal operation.
TCM	No impact on operation.
IPDM E/R	Normal operation.

Example: Data link connector branch line open circuit

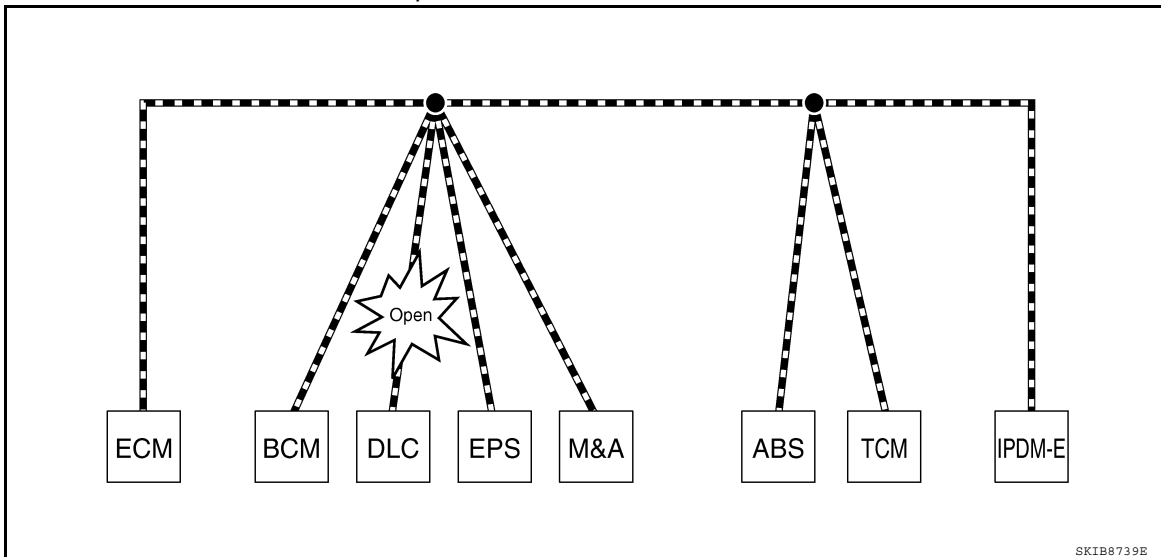

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

TROUBLE DIAGNOSIS

< FUNCTION DIAGNOSIS >

[CAN FUNDAMENTAL]


Unit name	Symptom
ECM	Normal operation.
BCM	
EPS control unit	
Combination meter	
ABS actuator and electric unit (control unit)	
TCM	
IPDM E/R	

NOTE:

- When data link connector branch line is open, transmission and reception of CAN communication signals are not affected. Therefore, no symptoms occur. However, be sure to repair malfunctioning circuit.
- The model (all units on CAN communication system are Diag on CAN) cannot perform CAN diagnosis with CONSULT-III if the following error occurs. The error is judged by the symptom.

Error	Difference of symptom
Data link connector branch line open circuit	Normal operation.
CAN-H, CAN-L harness short-circuit	Most of the units which are connected to the CAN communication system enter fail-safe mode or are deactivated.

Example: Main Line Between Data Link Connector and ABS Actuator and Electric Unit (Control Unit) Open Circuit

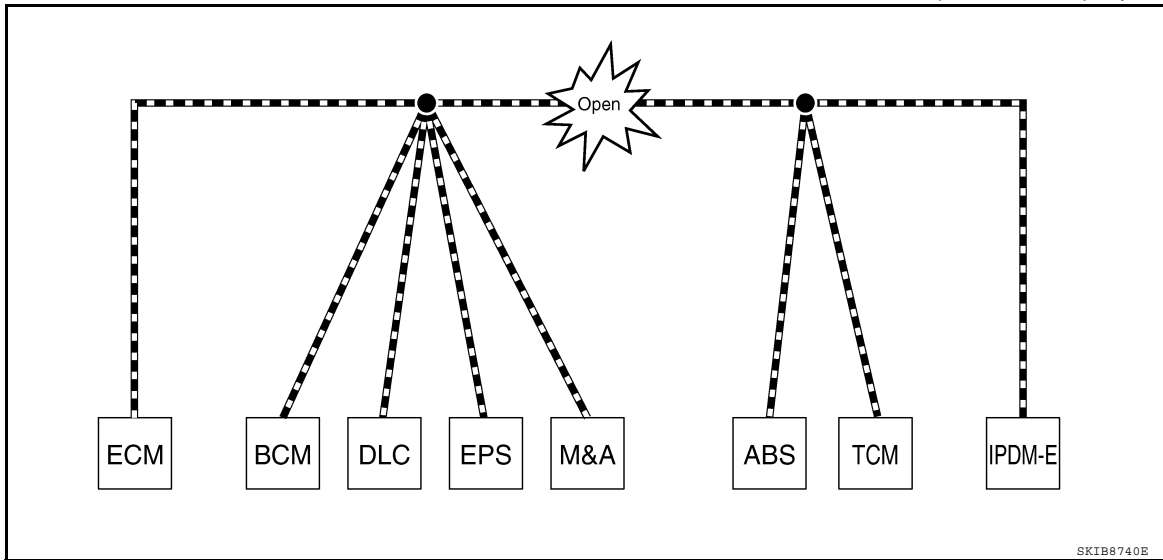


Unit name	Symptom
ECM	Engine torque limiting is affected, and shift harshness increases.
BCM	<ul style="list-style-type: none"> • Reverse warning chime does not sound. • The front wiper moves under continuous operation mode even though the front wiper switch being in the intermittent position.
EPS control unit	The steering effort increases.
Combination meter	<ul style="list-style-type: none"> • The shift position indicator and OD OFF indicator turn OFF. • The speedometer is inoperative. • The odo/trip meter stops.
ABS actuator and electric unit (control unit)	Normal operation.
TCM	No impact on operation.
IPDM E/R	When the ignition switch is ON, <ul style="list-style-type: none"> • The headlamps (Lo) turn ON. • The cooling fan continues to rotate.

TROUBLE DIAGNOSIS

< FUNCTION DIAGNOSIS >

[CAN FUNDAMENTAL]

Example: CAN-H, CAN-L Harness Short Circuit

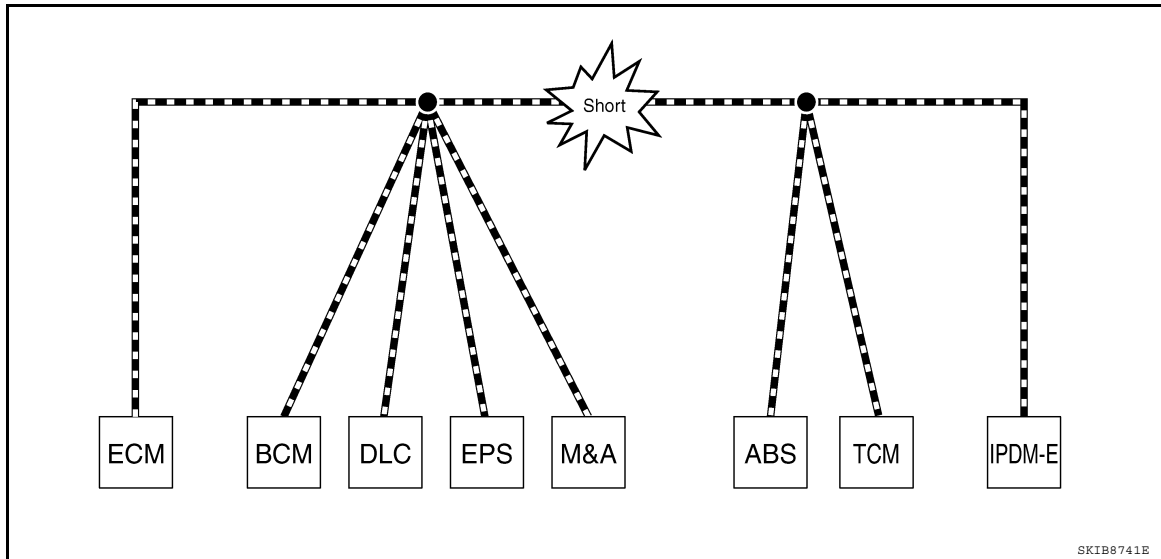

Unit name	Symptom
ECM	<ul style="list-style-type: none"> Engine torque limiting is affected, and shift harshness increases. Engine speed drops.
BCM	<ul style="list-style-type: none"> Reverse warning chime does not sound. The front wiper moves under continuous operation mode even though the front wiper switch being in the intermittent position. The room lamp does not turn ON. The engine does not start (if an error or malfunction occurs while turning the ignition switch OFF.) The steering lock does not release (if an error or malfunction occurs while turning the ignition switch OFF.)
EPS control unit	The steering effort increases.
Combination meter	<ul style="list-style-type: none"> The tachometer and the speedometer do not move. Warning lamps turn ON. Indicator lamps do not turn ON.
ABS actuator and electric unit (control unit)	Normal operation.
TCM	No impact on operation.
IPDM E/R	When the ignition switch is ON, <ul style="list-style-type: none"> The headlamps (Lo) turn ON. The cooling fan continues to rotate.

CAN Diagnosis with CONSULT-III

INFOID:000000005713602

LAN

CAN diagnosis on CONSULT-III extracts the root cause by receiving the following information.

- Response to the system call
- Control unit diagnosis information
- Self-diagnosis
- CAN diagnostic support monitor

TROUBLE DIAGNOSIS

< FUNCTION DIAGNOSIS >

[CAN FUNDAMENTAL]

Self-Diagnosis

INFOID:000000005713603

DTC	Self-diagnosis item (CONSULT-III indication)	DTC detection condition		Inspection/Action
U0101	LOST COMM (TCM)	When ECM is not transmitting or receiving CAN communication signal of OBD (emission-related diagnosis) from TCM for 2 seconds or more.		Start the inspection. Refer to the applicable section of the indicated control unit.
U0140	LOST COMM (BCM)	When ECM is not transmitting or receiving CAN communication signal of OBD (emission-related diagnosis) from BCM for 2 seconds or more.		
U0164	LOST COMM (HVAC)	When ECM is not transmitting or receiving CAN communication signal of OBD (emission-related diagnosis) from A/C auto amp. or unified meter and A/C amp. for 2 seconds or more.		
U1000	CAN COMM CIRCUIT	ECM	When ECM is not transmitting or receiving CAN communication signal of OBD (emission-related diagnosis) for 2 seconds or more.	
		Except for ECM	When a control unit (except for ECM) is not transmitting or receiving CAN communication signal for 2 seconds or more.	
U1001	CAN COMM CIRCUIT	When ECM is not transmitting or receiving CAN communication signal other than OBD (emission-related diagnosis) for 2 seconds or more.		
U1002	SYSTEM COMM	When a control unit is not transmitting or receiving CAN communication signal for 2 seconds or less.		
U1010	CONTROL UNIT(CAN)	When an error is detected during the initial diagnosis for CAN controller of each control unit.		Replace the control unit indicating "U1010" or "P0607".
P0607	ECM			

CAN Diagnostic Support Monitor

INFOID:000000005713604

MONITOR ITEM (CONSULT-III)

Example: CAN DIAG SUPPORT MNTR indication

Without PAST				With PAST			
ECM				ECM			
	PRSENT	PAST		PRSENT	PAST		
INITIAL DIAG	OK		TRANSMIT DIAG	OK	OK		
TRANSMIT DIAG	OK		VDC/TCS/ABS	-	-		
TCM	OK		METER/M&A	OK	OK		
VDC/TCS/ABS	UNKWN		BCM/SEC	OK	OK		
METER/M&A	OK		ICC	-	-		
ICC	UNKWN		HVAC	-	-		
BCM/SEC	OK		TCM	OK	OK		
IPDM E/R	OK		EPS	-	-		
			IPDM E/R	OK	OK		
			e4WD	-	-		
			AWD/4WD	OK	OK		

JSMIA0015GB

Without PAST

Item	PRSENT	Description
Initial diagnosis	OK	Normal at present
	NG	Control unit error (Except for some control units)

TROUBLE DIAGNOSIS

< FUNCTION DIAGNOSIS >

[CAN FUNDAMENTAL]

Item	PRSNT	Description
Transmission diagnosis	OK	Normal at present
	UNKWN	Unable to transmit signals for 2 seconds or more.
		Diagnosis not performed
Control unit name (Reception diagnosis)	OK	Normal at present
	UNKWN	Unable to receive signals for 2 seconds or more.
		Diagnosis not performed
		No control unit for receiving signals. (No applicable optional parts)

With PAST

Item	PRSNT	PAST	Description
Transmission diagnosis	OK	OK	Normal at present and in the past
		1 – 39	Normal at present, but unable to transmit signals for 2 seconds or more in the past. (The number indicates the number of ignition switch cycles from OFF to ON.)
	UNKWN	0	Unable to transmit signals for 2 seconds or more at present.
Control unit name (Reception diagnosis)	OK	OK	Normal at present and in the past
		1 – 39	Normal at present, but unable to receive signals for 2 seconds or more in the past. (The number indicates the number of ignition switch cycles from OFF to ON.)
	UNKWN	0	Unable to receive signals for 2 seconds or more at present.
	-	-	Diagnosis not performed.
			No control unit for receiving signals. (No applicable optional parts)

MONITOR ITEM (ON-BOARD DIAGNOSIS)

NOTE:

For some models, CAN communication diagnosis result is received from the vehicle monitor.

Example: Vehicle Display

Item	Result indicated	Error counter	Description
CAN_COMM (Initial diagnosis)	OK	0	Normal at present
	NG	1 – 50	Control unit error (The number indicates how many times diagnosis has been run.)
CAN_CIRC_1 (Transmission diagnosis)	OK	0	Normal at present
	UNKWN	1 – 50	Unable to transmit for 2 seconds or more at present. (The number indicates how many times diagnosis has been run.)
CAN_CIRC_2 – 9 (Reception diagnosis of each unit)	OK	0	Normal at present
	UNKWN	1 – 50	Unable to transmit for 2 seconds or more at present. (The number indicates how many times diagnosis has been run.)
			Diagnosis not performed.
		No control unit for receiving signals. (No applicable optional parts)	

TROUBLE DIAGNOSIS

< FUNCTION DIAGNOSIS >

[CAN FUNDAMENTAL]

How to Use CAN Communication Signal Chart

INFOID:000000005713605

The CAN communication signal chart lists the signals needed for trouble diagnosis. It is useful for detecting the root cause by finding a signal related to the symptom, and by checking transmission and reception unit.

Example: Tachometer does not move even though the engine rotates.

T: Transmit R: Receive

Signal name/Connecting unit	ECM	BCM	M&A	STRG	ABS	IPDM-E
A/C compressor feedback signal	T		R			
A/C compressor request signal	T					R
Accelerator pedal position signal	T				R	
Cooling fan motor operation signal	T					R
Engine coolant temperature signal	T		R			
Engine speed signal	T		R		R	
Fuel consumption monitor signal	T		R			
Malfunction indicator lamp signal	T		R			
A/C switch signal	R	T				
Ignition switch signal		T				R
Sleep/wake up signal		T	R			R

It indicates that an error occurs between ECM and M&A (Shaded area).


SKIB8715E

BASIC INSPECTION

DIAGNOSIS AND REPAIR WORKFLOW

Trouble Diagnosis Flow Chart

INFOID:000000005713606

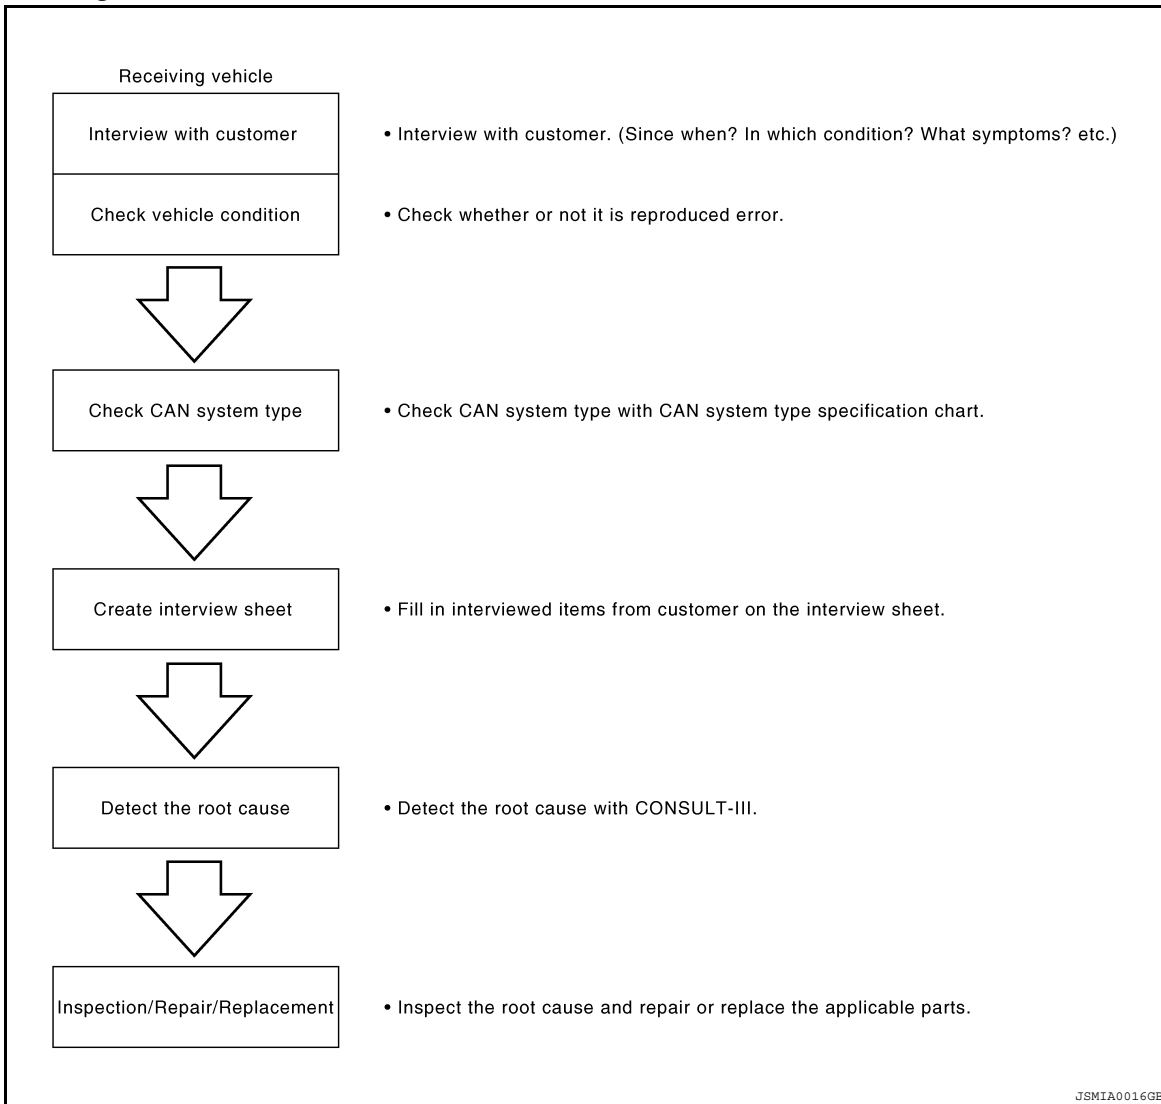

Trouble Diagnosis Procedure

INFOID:000000005713607

INTERVIEW WITH CUSTOMER

Interview with the customer is important to detect the root cause of CAN communication system errors and to understand vehicle condition and symptoms for proper trouble diagnosis.

Points in interview

- What: Parts name, system name
- When: Date, Frequency
- Where: Road condition, Place
- In what condition: Driving condition/environment
- Result: Symptom

NOTE:

- Check normal units as well as error symptoms.
- Example: Circuit between ECM and the combination meter is judged normal if the customer indicates tachometer functions normally.
- When a CAN communication system error is present, multiple control units may malfunction or go into fail-safe mode.

A
B
C
D
E
F
G
H
I
J
K
L

LAN


N
O
P

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[CAN FUNDAMENTAL]

- Indication of the combination meter is important to detect the root cause because it is the most obvious to the customer, and it performs CAN communication with many units.

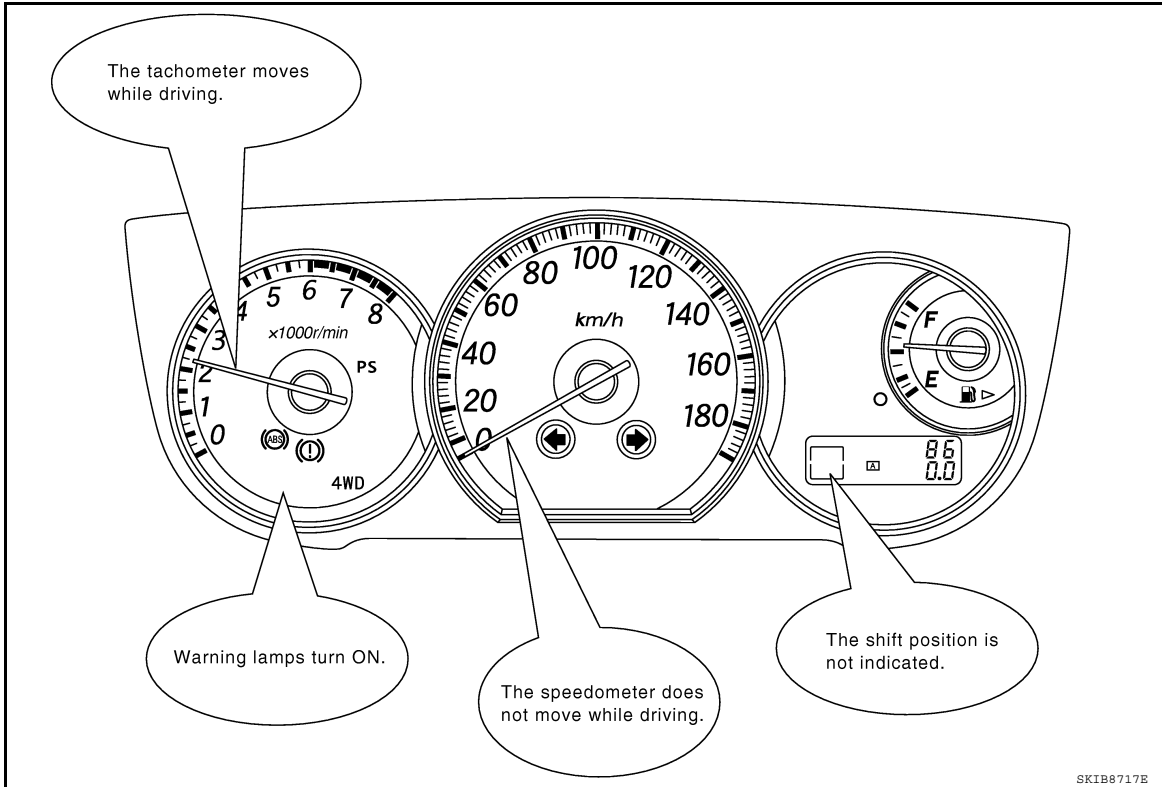

INSPECTION OF VEHICLE CONDITION

Check whether the symptom is reproduced or not.

NOTE:

Do not turn the ignition switch OFF or disconnect the battery cable while reproducing the error. The error may temporarily correct itself, making it difficult to determine the root cause.

CHECK OF CAN SYSTEM TYPE (HOW TO USE CAN SYSTEM TYPE SPECIFICATION CHART)

Determine CAN system type based on vehicle equipment.

NOTE:

- This chart is used if CONSULT-III does not automatically recognize CAN system type.
- There are two styles for CAN system type specification charts. Depending on the number of available system types, either style A or style B may be used.

CAN System Type Specification Chart (Style A)

NOTE:

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[CAN FUNDAMENTAL]

CAN system type is easily checked with the vehicle equipment identification information shown in the chart.

Example:
Vehicle is equipped as follows: Wagon, AWD, VQ35DE, CVT, VDC, and Intelligent Key system. (○ shows an example of CAN system type.)


CAN System Specification Chart
Determine CAN system type from the following specification chart.

Body type	Wagon					
Axle	2WD			AWD		
Engine	QR25DE		VQ35DE			
Transmission	A/T			CVT		
Brake control	ABS				VDC	
Intelligent Key system		X		X		X
CAN system type	1	2	3	4	5	6
CAN communication signal chart	XX-XX. "TYPE 1/TYPE 2"		XX-XX. "TYPE 3/TYPE 4"		XX-XX. "TYPE 5/TYPE 6"	

X : Applicable


VEHICLE EQUIPMENT IDENTIFICATION INFORMATION
NOTE:
Check CAN system type from the vehicle shape and equipment.

With VDC

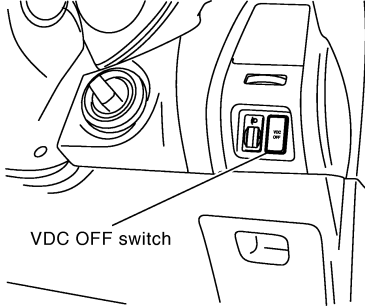

VDC OFF switch

With Intelligent Key system

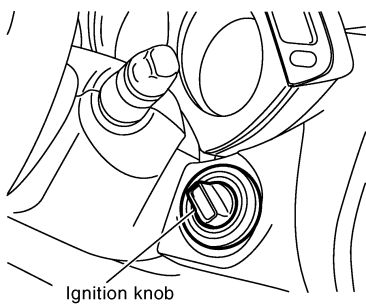

Ignition knob

[For the above case, CAN system type is "6".]

JSMIA0017GB

A
B
C
D
E
F
G
H
I
J
K
L

CAN System Type Specification Chart (Style B)

NOTE:

LAN

N
O
P

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[CAN FUNDAMENTAL]

CAN system type is easily checked with the vehicle equipment identification information shown in the chart.

Example:

Vehicle is equipped as follows: Sedan, 2WD, MR20DE, CVT, ABS, Active AFS, Intelligent Key system, Navigation system and Automatic drive positioner. (○ shows an example of CAN system type.)

CAN System Specification Chart

Refer to the specification as shown in the chart.

Body type	Sedan		
Axle	2WD		AWD
Engine	HR15DE	MR20DE	HR15DE
Transmission	AT	CVT	AT
Brake control	ABS		
Specification chart	XXX SPECIFICATION CHART A	YYY SPECIFICATION CHART B	XXX SPECIFICATION CHART C

Check the vehicle equipment with the vehicle identification number plate.

Check the vehicle equipment.

Select the applicable vehicle equipment. Refer to the specification chart.

x: Applicable

SPECIFICATION CHART B

Determine CAN system type from the following specification chart.

Body type	Sedan											
Axle	2WD											
Engine	MR20DE											
Transmission	CVT											
Brake control	ABS											
Active AFS	x			x	x			x	x		x	
Intelligent Key system		x		x		x	x	x	x		x	
Navigation system			x			x	x		x		x	
Automatic drive positioner							x		x	x	x	
CAN system type	9	10	11	12	13	14	15	16	17	18	19	20
CAN communication signal chart	XXX SPECIFICATION CHART A											

Check the vehicle equipment.


The number indicates the CAN system type of the vehicle.

x: Applicable

VEHICLE EQUIPMENT IDENTIFICATION INFORMATION

NOTE:

Check CAN system type from the vehicle shape and equipment.

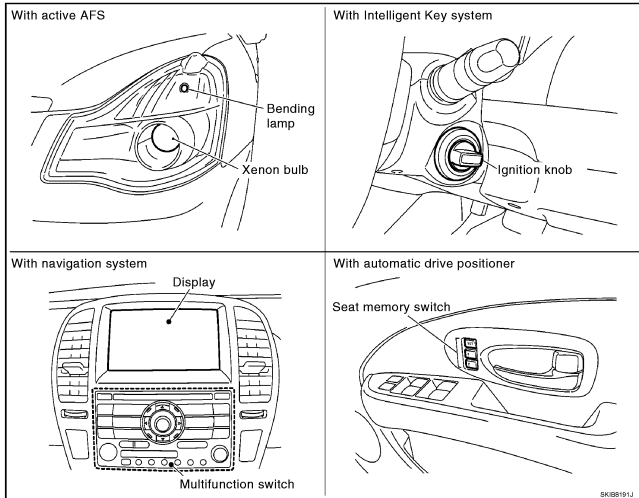

In the above example,

- Checking Xenon bulb and bending lamp lead to judge whether or not Active AFS is equipped.
- Checking the ignition knob leads to judge whether or not Intelligent Key system is equipped.
- Checking display and multifunction switch lead to judge whether or not Navigation system is equipped.
- Checking seat memory switch leads to judge whether or not Automatic drive positioner is equipped.

[For the above case, CAN system type is "20".]

JSMIA0018GB

CREATE INTERVIEW SHEET

Fill out the symptom described by the customer, vehicle condition, and CAN system type on the interview sheet.

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[CAN FUNDAMENTAL]

Interview Sheet (Example)

CAN Communication System Diagnosis Interview Sheet	
Date received:	3, Feb. 2006
Type: DBA-KG11	VIN No.: KG11-005040
Model: BDRARGZ397EDA-E-J-	
First registration: 10, Jan. 2001	Mileage: 62,140
CAN system type: Type 19	
Symptom (Results from interview with customer)	
<ul style="list-style-type: none">•Headlamps suddenly turn ON while driving the vehicle.•The engine does not restart after stopping the vehicle and turning the ignition switch OFF.•The cooling fan continues rotating while turning the ignition switch ON.	
Condition at inspection	
Error Symptom: Present / Past	
<p>The engine does not start. While turning the ignition switch ON,</p> <ul style="list-style-type: none">•The headlamps (Lo) turn ON, and the cooling fan continues rotating.•The interior lamp does not turn ON.	

A
B
C
D
E
F
G
H
I
J
K
L

LAN

DETECT THE ROOT CAUSE

CAN diagnosis function of CONSULT-III detects the root cause.


N
O
P

< HOW TO USE THIS MANUAL >

HOW TO USE THIS MANUAL**DESCRIPTION**

Description

INFOID:000000005713608

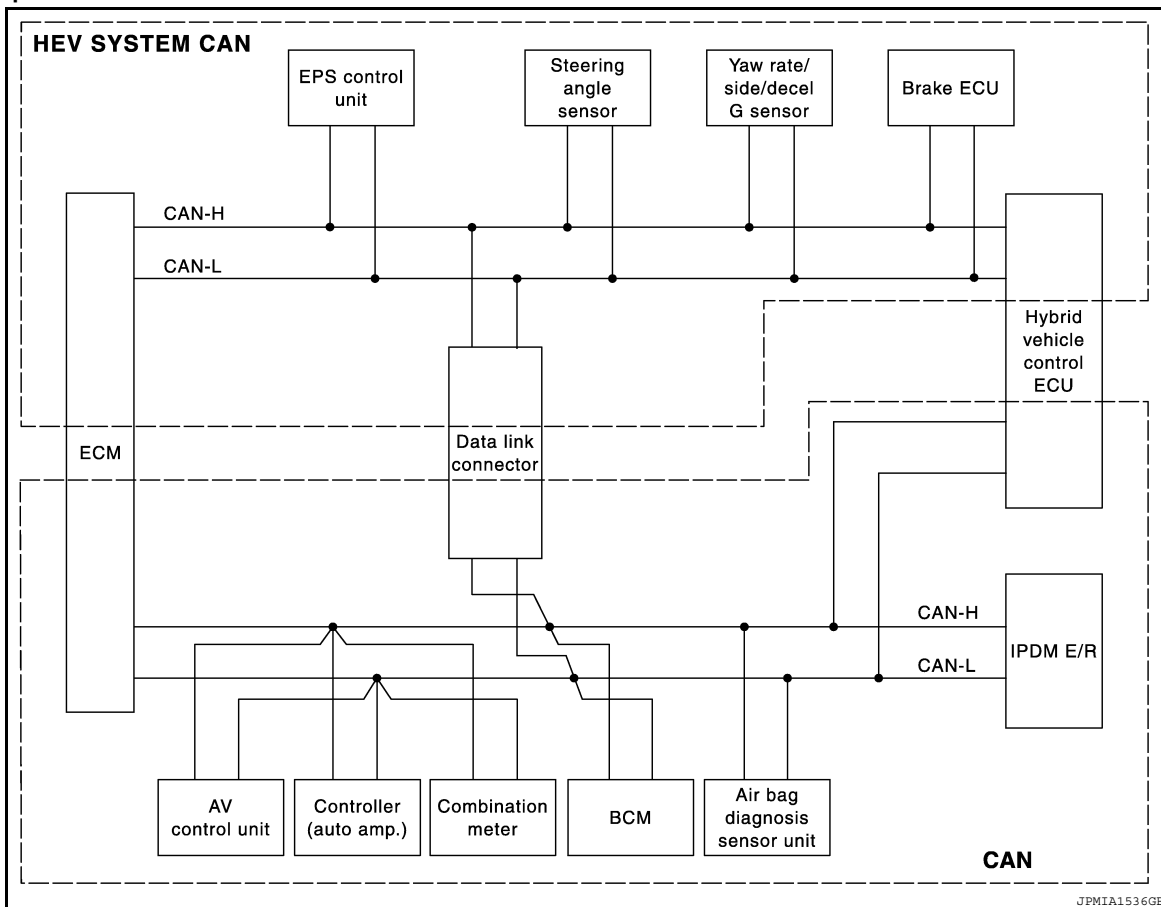

This vehicle has two types of CAN communication systems; CAN and HEV SYSTEM CAN. For starting the trouble diagnosis, refer to the following list.

NOTE:

- If the DTCs related to CAN and related to HEV SYSTEM CAN are displayed at the same time, diagnose CAN first.
- After the diagnosis of HEV SYSTEM CAN or CAN, erase the DTCs of unit connected to HEV SYSTEM CAN and CAN.

DESCRIPTION

< HOW TO USE THIS MANUAL >

[CAN]

Unit	DTC (INF code*) displayed on CONSULT-III	CAN communication system	Inspection
ECM	P0607, U1000, U1001	CAN	LAN-17, "Trouble Diagnosis Flow Chart"
	P0607, U0129, U0293, U1020, U1022	HEV SYSTEM CAN	
EPS control unit	C1608, U0129, U0293	HEV SYSTEM CAN	
Brake ECU	C1300, U0073, U0123, U0124, U0126, U0293	HEV SYSTEM CAN	LAN-57, "Trouble Diagnosis Flow Chart"
Hybrid vehicle control ECU	P0A1D (924), P0A1D (925), U0100, U0100 (211), U0100 (212), U0100 (530), U0129, U0129 (220), U0129 (222), U0129 (528), U0131, U0131 (433), U0131 (434)	HEV SYSTEM CAN	
	U1001, U1001 (146), U1001 (435), U1001 (594), U1001 (827), U1001 (919), U1001 (920)	CAN	
AV control unit	P0607, U1000, U1010	CAN	LAN-17, "Trouble Diagnosis Flow Chart"
BCM			
Controller (auto amp.)			
Combination meter			
IPDM E/R			

*: For the details, refer to [HBC-80, "Diagnosis Description"](#).

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

HOW TO USE THIS SECTION

< HOW TO USE THIS MANUAL >

[CAN]

HOW TO USE THIS SECTION

Caution

INFOID:000000005713609

- This section describes information peculiar to a vehicle and inspection procedures.
- For trouble diagnosis procedure, refer to [LAN-17, "Trouble Diagnosis Procedure"](#).

Abbreviation List

INFOID:000000005713610

Unit name abbreviations in CONSULT-III CAN diagnosis and in the description of CAN diagnosis in this section are as per the following list.

Abbreviation	Unit name
A-BAG	Air bag diagnosis sensor unit
AV	AV control unit
BCM	BCM
DLC	Data link connector
ECM	ECM
HVAC	Controller (auto amp.)
HV ECU	Hybrid vehicle control ECU
IPDM-E	IPDM E/R
M&A	Combination meter

PRECAUTION

PRECAUTIONS

Precautions For High-Voltage System

INFOID:000000005713611

Refer to [GI-24, "Precautions For High-Voltage System"](#).

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000005713612

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the "SRS AIR BAG".
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

Precautions for Trouble Diagnosis

INFOID:000000005713613

CAUTION:

- Never apply 7.0 V or more to the measurement terminal.
- Use a tester with open terminal voltage of 7.0 V or less.
- Turn the ignition switch OFF and disconnect the battery cable from the negative terminal when checking the harness.


Precautions for Harness Repair

INFOID:000000005713614

- Solder the repaired area and wrap tape around the soldered area.

NOTE:

A fray of twisted lines must be within 110 mm (4.33 in).

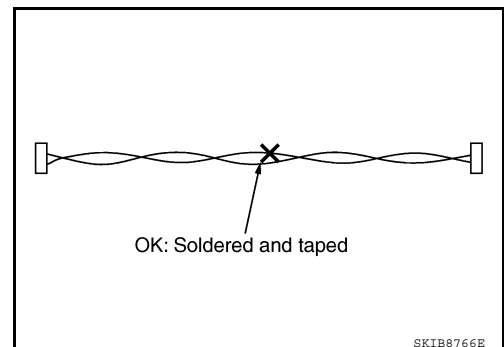

PRECAUTIONS


< PRECAUTION >

[CAN]

- Bypass connection is never allowed at the repaired area.

NOTE:

Bypass connection may cause CAN communication error. The spliced wire becomes separated and the characteristics of twisted line are lost.

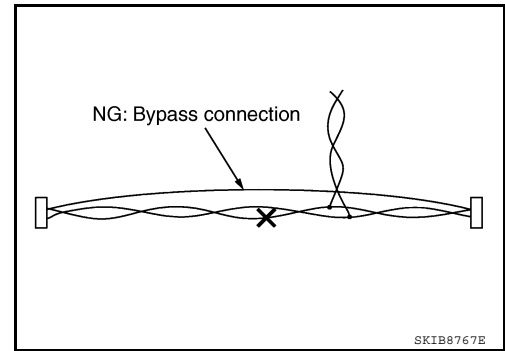

- Replace the applicable harness as an assembly if error is detected on the shield lines of CAN communication line.

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[CAN]

BASIC INSPECTION

DIAGNOSIS AND REPAIR WORKFLOW

Interview Sheet

INFOID:000000005713615

CAN Communication System Diagnosis Interview Sheet	
Date received: <input type="text"/>	
Type: <input type="text"/>	VIN No.: <input type="text"/>
Model: <input type="text"/>	
First registration: <input type="text"/>	Mileage: <input type="text"/>
CAN system type: <input type="text"/>	
Symptom (Results from interview with customer)	
<input type="text"/>	
Condition at inspection	
Error symptom : Present / Past	
<input type="text"/>	

A
B
C
D
E
F
G
H
I
J
K
L
LAN
N
O
P

CAN COMMUNICATION SYSTEM

< FUNCTION DIAGNOSIS >

[CAN]

FUNCTION DIAGNOSIS

CAN COMMUNICATION SYSTEM

CAN System Specification Chart

INFOID:000000005713616

Determine CAN system type from the following specification chart.

NOTE:

Refer to [LAN-17. "Trouble Diagnosis Procedure"](#) for how to use CAN system specification chart.


Body type	Sedan	
Axle	2WD	
Engine	QR25DE	
Transmission	e-CVT	
Brake control	VDC	
Navigation system		×
CAN system type	1	2

×: Applicable

VEHICLE EQUIPMENT IDENTIFICATION INFORMATION

NOTE:

Check CAN system type from the vehicle shape and equipment.

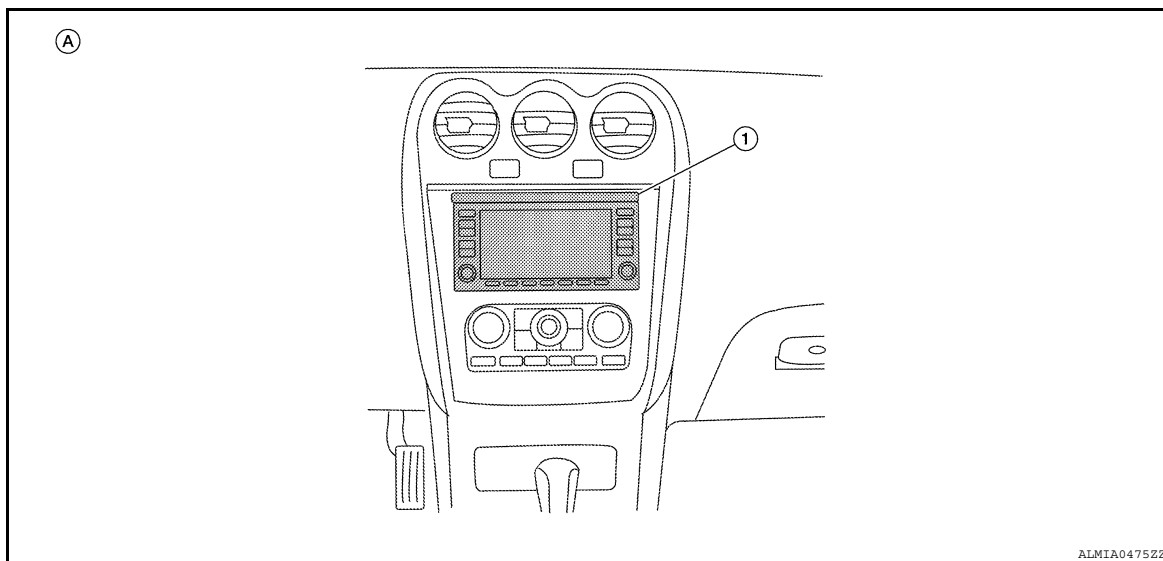

- 1. Display
- A. With navigation system

CAN Communication Signal Chart

INFOID:000000005713617

Refer to [LAN-16. "How to Use CAN Communication Signal Chart"](#) for how to use CAN communication signal chart.

NOTE:

Refer to [LAN-24. "Abbreviation List"](#) for the abbreviations of the connecting units.

T: Transmit R: Receive

Signal name/Connecting unit	ECM	AV	HVAC	M&A	BCM	HV ECU	IPDM-E
A/C cut request signal	T		R	R			
Cooling fan speed request signal	T						R

CAN COMMUNICATION SYSTEM

< FUNCTION DIAGNOSIS >

[CAN]

Signal name/Connecting unit	ECM	AV	HVAC	M&A	BCM	HV ECU	IPDM-E	A
Engine coolant temperature signal	T		R	R				B
Engine speed signal	T		R	R				C
Engine status signal	T	R		R	R			D
Fuel consumption monitor signal	T	R		R				E
Malfunctioning indicator lamp signal	T			R				F
A/C evaporator temperature signal	R		T					G
A/C switch signal	R		T					H
Blower fan motor switch signal	R		T					I
Target A/C evaporator temperature signal	R		T					J
Distance to empty signal		R		T				K
Fuel level low warning signal		R		T				L
Fuel level sensor signal	R			T				M
Market information signal		R		T				N
Parking brake switch signal				T	R			O
Seat belt buckle switch signal				T	R			P
Vehicle speed signal	R	R		T	R		R	Q
	R			R	R	T		R
Buzzer output signal				R	T			S
Day time running light request signal					T		R	T
Door switch signal		R		R	T	R	R	U
Front fog light request signal				R	T		R	V
Front wiper request signal					T		R	W
High beam request signal				R	T		R	X
Horn reminder signal					T		R	Y
Ignition switch ON signal					T		R	Z
					R		T	AA
Interlock/PNP switch signal					T		R	AB
					R		T	AC
Key warning signal				R	T			AD
Low beam request signal					T		R	AE
Meter display signal				R	T			AF
Oil pressure switch signal				R				AG
	R			R	R	R	T	AH
Position light request signal				R	T		R	AI
Rear window defogger switch signal					T		R	AJ
Sleep wake up signal				R	T		R	AK
Steering lock relay signal					T		R	AL
					R		T	AM
Theft warning horn request signal					T		R	AN
Tire pressure data signal				R	T			AO
Trunk switch signal		R		R	T			AP
Turn indicator signal				R	T			AQ

CAN COMMUNICATION SYSTEM

< FUNCTION DIAGNOSIS >

[CAN]

Signal name/Connecting unit	ECM	AV	HVAC	M&A	BCM	HV ECU	IPDM-E
ABS warning lamp signal				R		T	
ASCD status signal				R		T	
Brake warning lamp signal				R		T	
CHARGE lamp signal				R		T	
Energy flow status signal		R				T	
Engine off indicator signal				R		T	
EPS warning lamp signal				R		T	
HV battery warning lamp signal				R		T	
HV system warning lamp signal				R		T	
Master warning lamp signal				R		T	
NDB warning lamp signal				R		T	
P range signal	R			R	R	T	
READY lamp signal				R		T	
Regenerated power signal		R				T	
Shift position signal					R	T	
SLIP indicator lamp signal				R		T	
SOC signal		R		R		T	
Tire rotating direction signal		R				T	
Total power signal				R		T	
VDC warning indicator lamp signal				R		T	
Detention switch signal					R		T
Front wiper stop position signal					R		T
Hood switch signal					R		T
Push-button ignition switch status signal					R		T
Rear window defogger control signal	R						T
Steering lock unit status signal					R		T

NOTE:

CAN data of the air bag diagnosis sensor unit is not used by usual service work, thus it is omitted.

CAN COMMUNICATION SYSTEM

< COMPONENT DIAGNOSIS >


[CAN]

COMPONENT DIAGNOSIS

CAN COMMUNICATION SYSTEM

Component Parts Location

INFOID:000000005713618

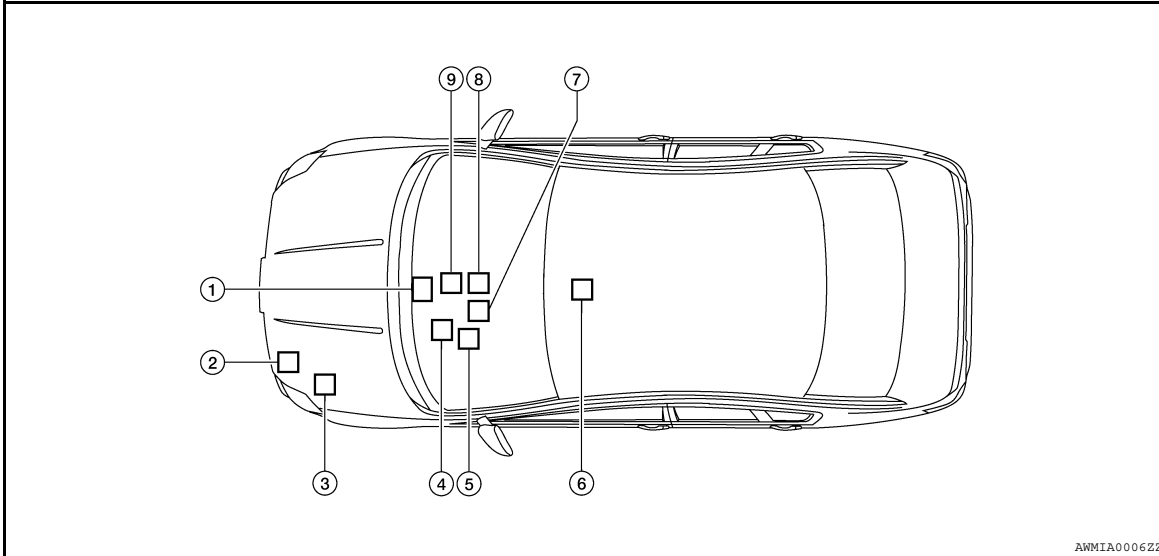

- | | | |
|-----------------------------------|-------------------------------|--------------------------------------|
| 1. Hybrid vehicle control ECU E66 | 2. ECM E10 | 3. IPDM E/R E17 |
| 4. BCM M19 | 5. Combination meter M24 | 6. Air bag diagnosis sensor unit M35 |
| 7. Data link connector M22 | 8. Controller (auto amp.) M37 | 9. AV control unit M102 |

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

CAN COMMUNICATION SYSTEM

< COMPONENT DIAGNOSIS >


[CAN]

Wiring Diagram - CAN SYSTEM -

INFOID:000000005713619

◊ NV ◊ WITH NAVI


CAN SYSTEM

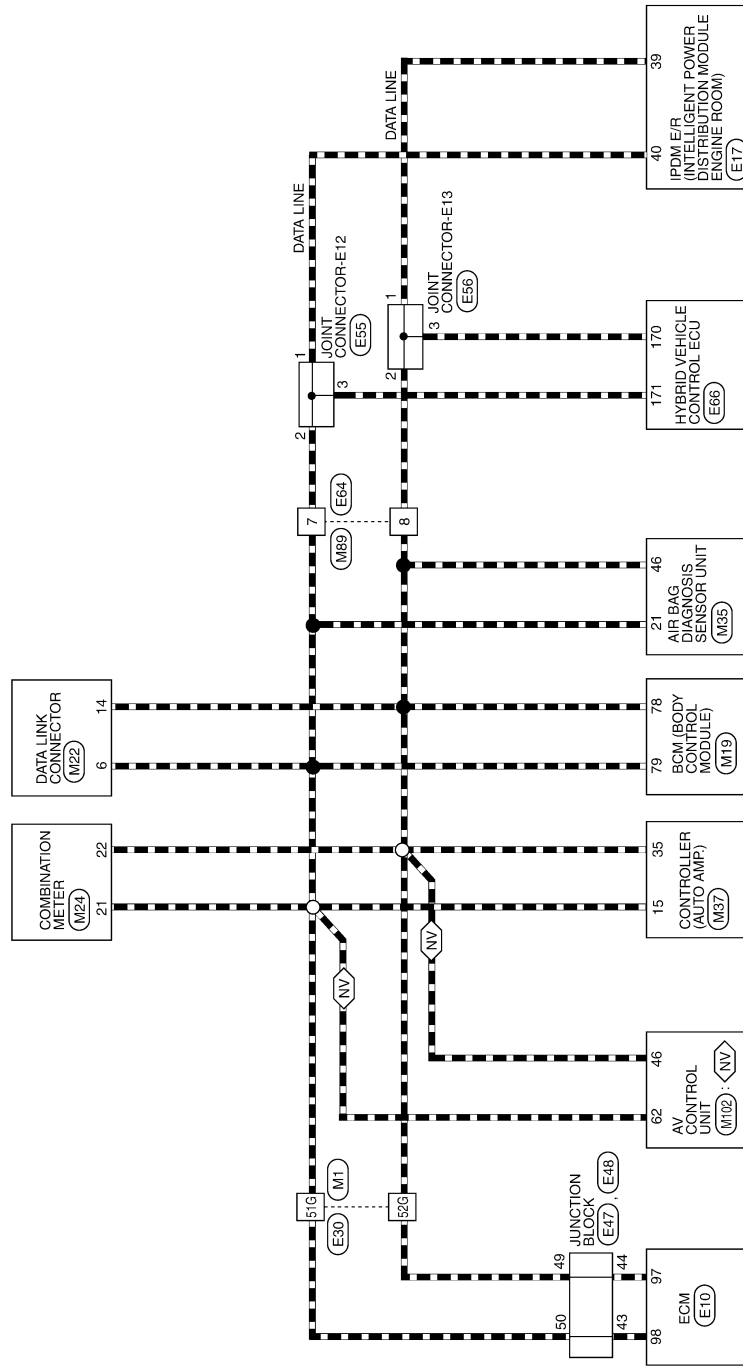

ABMWA0587GB


CAN SYSTEM CONNECTORS

Connector No.	M1
Connector Name	WIRE TO WIRE
Connector Color	WHITE

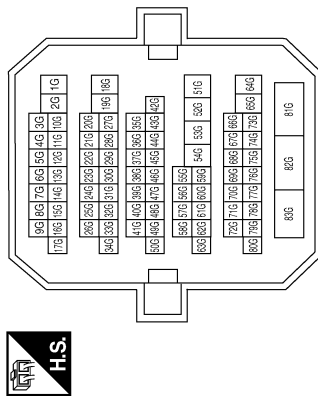


Terminal No.	Color of Wire	Signal Name
51G	L	-
52G	P	-

Connector No.	M19
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BLACK

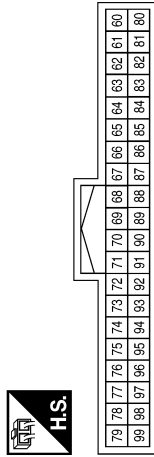


Terminal No.	Color of Wire	Signal Name
78	P	CAN-L
79	L	CAN-H

Connector No.	M22
Connector Name	DATA LINK CONNECTOR
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
6	L	-
14	P	-

Connector No.	M24
Connector Name	COMBINATION METER
Connector Color	WHITE

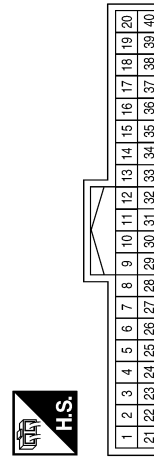


Terminal No.	Color of Wire	Signal Name
21	L	CAN-H
22	P	CAN-L

Connector No.	M35
Connector Name	AIR BAG DIAGNOSIS SENSOR UNIT
Connector Color	YELLOW



Terminal No.	Color of Wire	Signal Name
21	L	CAN-H
46	P	CAN-L

Connector No.	M37
Connector Name	CONTROLLER (AUTO AMP.)
Connector Color	WHITE

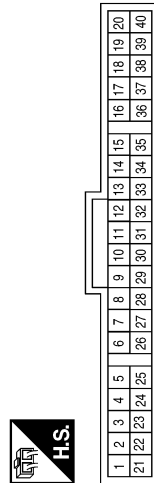


Terminal No.	Color of Wire	Signal Name
15	L	CAN-H
35	P	CAN-L

CAN COMMUNICATION SYSTEM

< COMPONENT DIAGNOSIS >


[CAN]

Connector No.	E10
Connector Name	ECM
Connector Color	BLACK

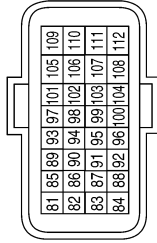


Terminal No.	Color of Wire	Signal Name
97	P	CAN-L
98	L	CAN-H

Connector No.	M102
Connector Name	AV CONTROL UNIT
Connector Color	WHITE

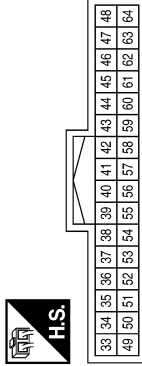


Terminal No.	Color of Wire	Signal Name
46	P	CAN-L
62	L	CAN-H

Connector No.	M89
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
7	L	-
8	P	-

Connector No.	E30
Connector Name	WIRE TO WIRE
Connector Color	WHITE

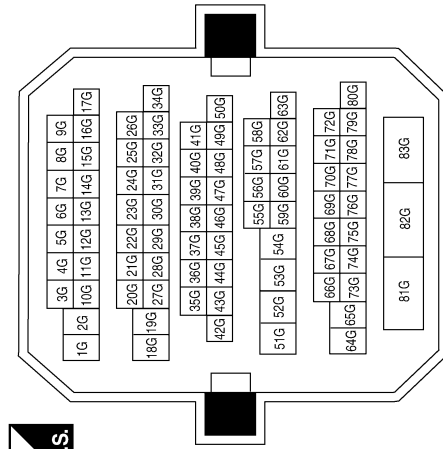

Terminal No.	Color of Wire	Signal Name
51G	L	-
52G	P	-

Connector No.	E17
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
39	P	CAN-L
40	L	CAN-H

ABM1A1569GB

CAN COMMUNICATION SYSTEM

< COMPONENT DIAGNOSIS >


[CAN]

Connector No.	E55
Connector Name	JOINT CONNECTOR-E12
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1	L	-
2	L	-
3	L	-

Connector No.	E48
Connector Name	JUNCTION BLOCK
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
49	P	-
50	L	-

Connector No.	E47
Connector Name	JUNCTION BLOCK
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
43	L	-
44	P	-

Connector No.	E64
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
7	L	-
8	P	-

Connector No.	E56
Connector Name	JOINT CONNECTOR-E13
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	P	-
2	P	-
3	P	-

A
B
C
D
E
F
G
H
I
J
K
L
LAN
N
O
P

ABMIA1570GB

CAN COMMUNICATION SYSTEM

< COMPONENT DIAGNOSIS >

[CAN]

Connector No.	E66
Connector Name	HYBRID VEHICLE CONTROL ECU
Connector Color	BLACK



168	167	166	165	164	163	77	76	75	74	73	72	71	70	69	68	67	66	65	64	63	62	61
174	173	172	171	170	169	111	110	109	108	107	106	105	104	103	102	101	100	99	98	97	96	95
180	179	178	177	176	175	128	127	126	125	124	123	122	121	120	119	118	117	116	115	114	113	112
186	185	184	183	182	181	145	144	143	142	141	140	139	138	137	136	135	134	133	132	131	130	129
						162	161	160	159	158	157	156	155	154	153	152	151	150	149	148	147	146

Terminal No.	Color of Wire	Signal Name
170	P	CAN-L
171	L	CAN-H

ABM1A1574GB

MALFUNCTION AREA CHART

< COMPONENT DIAGNOSIS >

[CAN]

MALFUNCTION AREA CHART

Main Line

INFOID:000000005713620

Malfunction area	Reference
Main line between controller (auto amp.) and data link connector	LAN-38, "Diagnosis Procedure"
Main line between data link connector and air bag diagnosis sensor unit	LAN-39, "Diagnosis Procedure"
Main line between air bag diagnosis sensor unit and hybrid vehicle control ECU	LAN-40, "Diagnosis Procedure"

Branch Line

INFOID:000000005713621

Malfunction area	Reference
ECM branch line circuit	LAN-41, "Diagnosis Procedure"
AV control unit branch line circuit	LAN-42, "Diagnosis Procedure"
Controller (auto amp.) branch line circuit	LAN-43, "Diagnosis Procedure"
Combination meter branch line circuit	LAN-44, "Diagnosis Procedure"
BCM branch line circuit	LAN-45, "Diagnosis Procedure"
Data link connector branch line circuit	LAN-46, "Diagnosis Procedure"
Air bag diagnosis sensor unit branch line circuit	LAN-47, "Diagnosis Procedure"
Hybrid vehicle control ECU branch line circuit	LAN-48, "Diagnosis Procedure"
IPDM E/R branch line circuit	LAN-49, "Diagnosis Procedure"

Short Circuit

INFOID:000000005713622

Malfunction area	Reference
CAN communication circuit	LAN-50, "Diagnosis Procedure"

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

MAIN LINE BETWEEN HVAC AND DLC CIRCUIT

< COMPONENT DIAGNOSIS >

[CAN]

MAIN LINE BETWEEN HVAC AND DLC CIRCUIT

Diagnosis Procedure

INFOID:000000005713623

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - Controller (auto amp.)
4. Check the continuity between the controller (auto amp.) harness connector and the data link connector.

Controller (auto amp.) harness connector		Data link connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M37	15	M22	6	Existed
	35		14	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the controller (auto amp.) and the data link connector.

NO >> Repair the main line between the controller (auto amp.) and the data link connector.

MAIN LINE BETWEEN DLC AND A-BAG CIRCUIT

< COMPONENT DIAGNOSIS >

[CAN]

MAIN LINE BETWEEN DLC AND A-BAG CIRCUIT

Diagnosis Procedure

INFOID:000000005713624

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the harness connectors M89 and E64.
4. Check the continuity between the data link connector and the harness connector.

Data link connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M22	6	M89	7	Existed
	14		8	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the data link connector and the air bag diagnosis sensor unit.

NO >> Repair the main line between the data link connector and the harness connector M89.

LAN

MAIN LINE BETWEEN A-BAG AND HV ECU CIRCUIT

< COMPONENT DIAGNOSIS >

[CAN]

MAIN LINE BETWEEN A-BAG AND HV ECU CIRCUIT

Diagnosis Procedure

INFOID:000000005713625

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector M89
 - Harness connector E64

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connectors M89 and E64.
2. Check the continuity between the data link connector and the harness connector.

Data link connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M22	6	M89	7	Existed
	14		8	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the main line between the data link connector and the harness connector M89.

3. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of hybrid vehicle control ECU.
2. Check the continuity between the harness connector and the hybrid vehicle control ECU harness connector.

Harness connector		Hybrid vehicle control ECU harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
E64	7	E66	171	Existed
	8		170	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the air bag diagnosis sensor unit and the hybrid vehicle control ECU.

NO >> Repair the main line between the harness connector E64 and the hybrid vehicle control ECU.

ECM BRANCH LINE CIRCUIT

< COMPONENT DIAGNOSIS >

[CAN]

ECM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000005713626

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - ECM
 - Harness connector E47
 - Harness connector E48
 - Junction block
 - Harness connector E30
 - Harness connector M1

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of ECM.
2. Check the resistance between the ECM harness connector terminals.

ECM harness connector		Resistance (Ω)
Connector No.	Terminal No.	
E10	98	Approx. 108 – 132
	97	

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the ECM branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ECM. Refer to [EC-114, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the ECM. Refer to [EC-14, "ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Special Repair Requirement"](#).

YES (Past error)>>Error was detected in the ECM branch line.

NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

AV BRANCH LINE CIRCUIT

< COMPONENT DIAGNOSIS >

[CAN]

AV BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000005713627

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the AV control unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of AV control unit.
2. Check the resistance between the AV control unit harness connector terminals.

AV control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M102	62	46	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the AV control unit branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the AV control unit. Refer to [AV-226, "AV CONTROL UNIT : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the AV control unit. Refer to [AV-293, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the AV control unit branch line.
NO >> Repair the power supply and the ground circuit.

HVAC BRANCH LINE CIRCUIT

< COMPONENT DIAGNOSIS >

[CAN]

HVAC BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000005713628

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the controller (auto amp.) for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of controller (auto amp.).
2. Check the resistance between the controller (auto amp.) harness connector terminals.

Controller (auto amp.) harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M37	15	35	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the controller (auto amp.) branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the controller (auto amp.). Refer to [HAC-87, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the controller (auto amp.). Refer to [VTL-8, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the controller (auto amp.) branch line.
NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

N
O
P

M&A BRANCH LINE CIRCUIT

< COMPONENT DIAGNOSIS >

[CAN]

M&A BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000005713629

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the combination meter for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of combination meter.
2. Check the resistance between the combination meter harness connector terminals.

Combination meter harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M24	21	22	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the combination meter branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the combination meter. Refer to [MWI-40, "COMBINATION METER : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the combination meter. Refer to [MWI-117, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the combination meter branch line.
NO >> Repair the power supply and the ground circuit.

BCM BRANCH LINE CIRCUIT

< COMPONENT DIAGNOSIS >

[CAN]

BCM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000005713630

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the BCM for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of BCM.
2. Check the resistance between the BCM harness connector terminals.

BCM harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M19	79	78	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the BCM branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the BCM. Refer to [BCS-41, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the BCM. Refer to [BCS-83, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the BCM branch line.
NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

DLC BRANCH LINE CIRCUIT

< COMPONENT DIAGNOSIS >

[CAN]

DLC BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000005713631

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the data link connector for damage, bend and loose connection (connector side and harness side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

Check the resistance between the data link connector terminals.

Data link connector			Resistance (Ω)
Connector No.	Terminal No.		
M22	6	14	Approx. 54 – 66

Is the measurement value within the specification?

- YES (Present error)>>Check CAN system type decision again.
YES (Past error)>>Error was detected in the data link connector branch line circuit.
NO >> Repair the data link connector branch line.

A-BAG BRANCH LINE CIRCUIT

< COMPONENT DIAGNOSIS >

[CAN]

A-BAG BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000005713632

WARNING:

- Before servicing, turn ignition switch OFF, disconnect battery negative terminal, and wait 3 minutes or more. (To discharge backup capacitor.)
- Never use unspecified tester or other measuring device.

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the air bag diagnosis sensor unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Replace the terminal and connector.

2.CHECK AIR BAG DIAGNOSIS SENSOR UNIT

Check the air bag diagnosis sensor unit. Refer to [SRC-3, "Work Flow"](#).

Is the inspection result normal?

YES >> Replace the main harness.

NO >> Replace parts whose air bag system has a malfunction.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

HV ECU BRANCH LINE CIRCUIT

< COMPONENT DIAGNOSIS >

[CAN]

HV ECU BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000005713633

1.CHECK DTC

Check whether or not the DTC related to HEV SYSTEM CAN indicated on All DTC Reading by CONSULT-III.

NOTE:

For DTCs related to HEV SYSTEM CAN, refer to [LAN-63. "DTC Related to HEV SYSTEM CAN List"](#).

Is the DTC related to HEV SYSTEM CAN displayed?

YES >> Inspect HEV SYSTEM CAN. Refer to [LAN-57. "Trouble Diagnosis Flow Chart"](#).

NO >> GO TO 2.

2.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the hybrid vehicle control ECU for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the terminal and connector.

3.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of hybrid vehicle control ECU.
2. Check the resistance between the hybrid vehicle control ECU harness connector terminals.

Hybrid vehicle control ECU harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E66	171	170	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 4.

NO >> Repair the hybrid vehicle control ECU branch line.

4.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the hybrid vehicle control ECU. [HBC-577. "Wiring Diagram"](#).

Is the inspection result normal?

YES (Present error)>>Replace the hybrid vehicle control ECU. Refer to [HBC-641. "Exploded View"](#).

YES (Past error)>>Error was detected in the hybrid vehicle control ECU branch line.

NO >> Repair the power supply and the ground circuit.

IPDM-E BRANCH LINE CIRCUIT

< COMPONENT DIAGNOSIS >

[CAN]

IPDM-E BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000005713634

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the IPDM E/R for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of IPDM E/R.
2. Check the resistance between the IPDM E/R harness connector terminals.

IPDM E/R harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E17	40	39	Approx. 108 – 132

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the IPDM E/R branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the IPDM E/R. Refer to [PCS-21, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the IPDM E/R. Refer to [PCS-36, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the IPDM E/R branch line.
NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

CAN COMMUNICATION CIRCUIT

[CAN]

< COMPONENT DIAGNOSIS >

CAN COMMUNICATION CIRCUIT

Diagnosis Procedure

INFOID:000000005713635

1. CONNECTOR INSPECTION

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect all the unit connectors on CAN communication system.
4. Check terminals and connectors for damage, bend and loose connection.

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector terminals.

Data link connector			Continuity
Connector No.	Terminal No.		
M22	6	14	Not existed

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Check the harness and repair the root cause.

3. CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector and the ground.

Data link connector		Ground	Continuity
Connector No.	Terminal No.		
M22	6		Not existed
	14		Not existed

Is the inspection result normal?

- YES >> GO TO 4.
NO >> Check the harness and repair the root cause.

4. CHECK ECM AND IPDM E/R TERMINATION CIRCUIT

1. Remove the ECM and the IPDM E/R.
2. Check the resistance between the ECM terminals.

ECM		Resistance (Ω)
Terminal No.		
98	97	Approx. 108 – 132

3. Check the resistance between the IPDM E/R terminals.


IPDM E/R		Resistance (Ω)
Terminal No.		
40	39	Approx. 108 – 132

Is the measurement value within the specification?

- YES >> GO TO 5.
NO >> Replace the ECM and/or the IPDM E/R.

5. CHECK SYMPTOM

Connect all the connectors. Check if the symptoms described in the "Symptom (Results from interview with customer)" are reproduced.

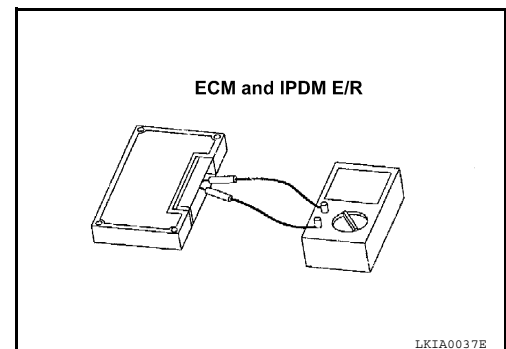

LKIA0037E

CAN COMMUNICATION CIRCUIT

[CAN]

< COMPONENT DIAGNOSIS >

Inspection result

Reproduced>>GO TO 6.

Non-reproduced>>Start the diagnosis again. Follow the trouble diagnosis procedure when past error is detected.

6.CHECK UNIT REPRODUCTION

Perform the reproduction test as per the following procedure for each unit.

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect one of the unit connectors of CAN communication system.

NOTE:

ECM and IPDM E/R have a termination circuit. Check other units first.

4. Connect the battery cable to the negative terminal. Check if the symptoms described in the “Symptom (Results from interview with customer)” are reproduced.

NOTE:

Although unit-related error symptoms occur, do not confuse them with other symptoms.

Inspection result

Reproduced>>Connect the connector. Check other units as per the above procedure.

Non-reproduced>>Replace the unit whose connector was disconnected.

A
B
C
D
E
F
G
H
I
J
K
L

LAN


N
O
P

HOW TO USE THIS MANUAL

DESCRIPTION

Description

INFOID:000000005713636

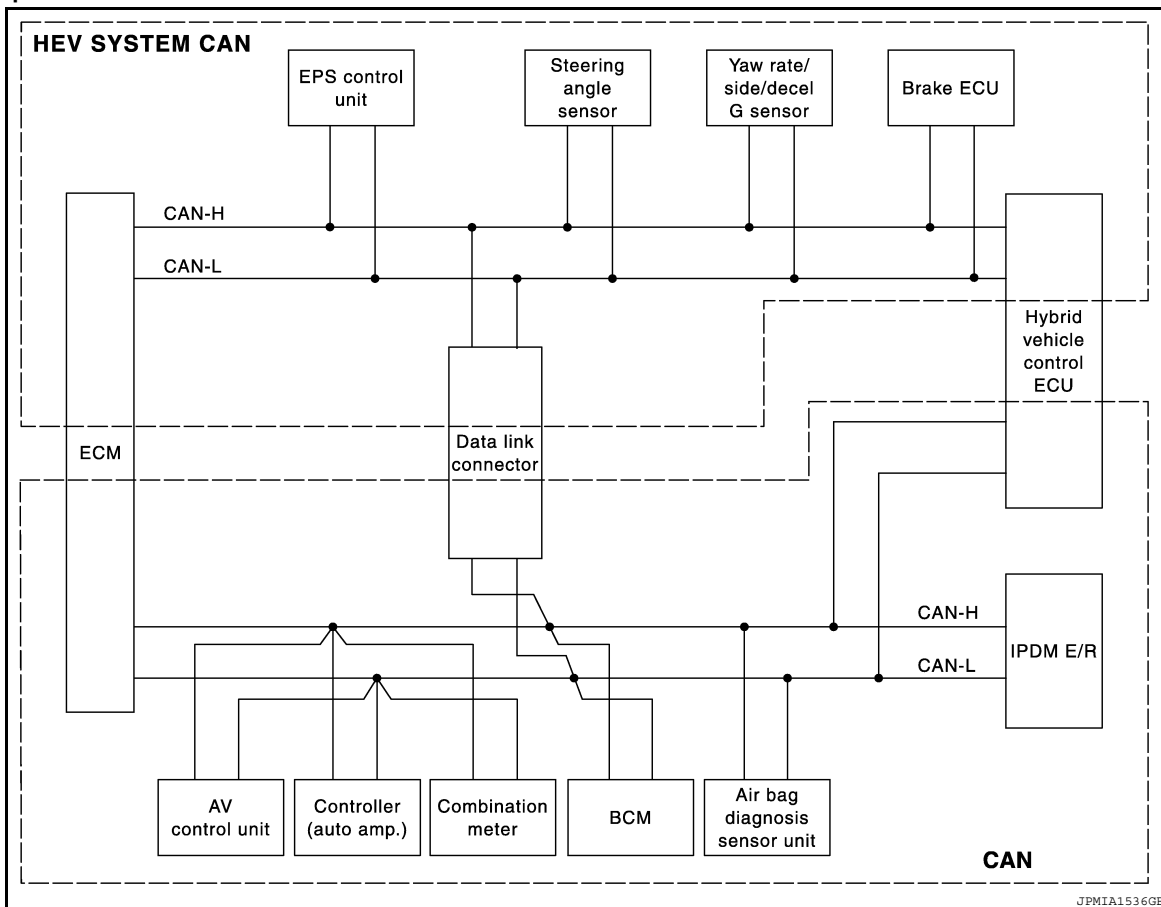

This vehicle has two types of CAN communication systems; CAN and HEV SYSTEM CAN. For starting the trouble diagnosis, refer to the following list.

NOTE:

- If the DTCs related to CAN and related to HEV SYSTEM CAN are displayed at the same time, diagnose CAN first.
- After the diagnosis of HEV SYSTEM CAN or CAN, erase the DTCs of unit connected to HEV SYSTEM CAN and CAN.

DESCRIPTION

< HOW TO USE THIS MANUAL >

[HEV SYSTEM CAN]

Unit	DTC (INF code*) displayed on CONSULT-III	CAN communication system	Inspection
ECM	P0607, U1000, U1001	CAN	LAN-17, "Trouble Diagnosis Flow Chart"
	P0607, U0129, U0293, U1020, U1022	HEV SYSTEM CAN	
EPS control unit	C1608, U0129, U0293	HEV SYSTEM CAN	
Brake ECU	C1300, U0073, U0123, U0124, U0126, U0293	HEV SYSTEM CAN	LAN-57, "Trouble Diagnosis Flow Chart"
Hybrid vehicle control ECU	P0A1D (924), P0A1D (925), U0100, U0100 (211), U0100 (212), U0100 (530), U0129, U0129 (220), U0129 (222), U0129 (528), U0131, U0131 (433), U0131 (434)	HEV SYSTEM CAN	
	U1001, U1001 (146), U1001 (435), U1001 (594), U1001 (827), U1001 (919), U1001 (920)	CAN	
AV control unit	P0607, U1000, U1010	CAN	LAN-17, "Trouble Diagnosis Flow Chart"
BCM			
Controller (auto amp.)			
Combination meter			
IPDM E/R			

*: For the details, refer to [HBC-80, "Diagnosis Description"](#).

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

HOW TO USE THIS SECTION

< HOW TO USE THIS MANUAL >

[HEV SYSTEM CAN]

HOW TO USE THIS SECTION

Caution

INFOID:000000005713637

For trouble diagnosis procedure, refer to [LAN-57. "Trouble Diagnosis Procedure"](#).

Abbreviation List

INFOID:000000005713638

Unit name abbreviations in HEV SYSTEM CAN diagnosis are as per the following list.

Abbreviation	Unit name	All DTC Reading (CONSULT-III)
ABS	Brake ECU	ABS
DLC	Data link connector	—
ECM	ECM	ENGINE
EPS	EPS control unit	EPS
HV ECU	Hybrid vehicle control ECU	HYBRID SYSTEM
STRG	Steering angle sensor	—
YAW	Yaw rate/side/decel G sensor	—

< PRECAUTION >

PRECAUTION

PRECAUTIONS

Precautions For High-Voltage System

INFOID:000000005713639

Refer to [GI-24, "Precautions For High-Voltage System"](#).

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000005713640

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the "SRS AIR BAG".
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

Precautions for Trouble Diagnosis

INFOID:000000005713641

CAUTION:

- Never apply 7.0 V or more to the measurement terminal.
- Use a tester with open terminal voltage of 7.0 V or less.
- Turn the ignition switch OFF and disconnect the battery cable from the negative terminal when checking the harness.


Precautions for Harness Repair

INFOID:000000005713642

- Solder the repaired area and wrap tape around the soldered area.

NOTE:

A fray of twisted lines must be within 110 mm (4.33 in).

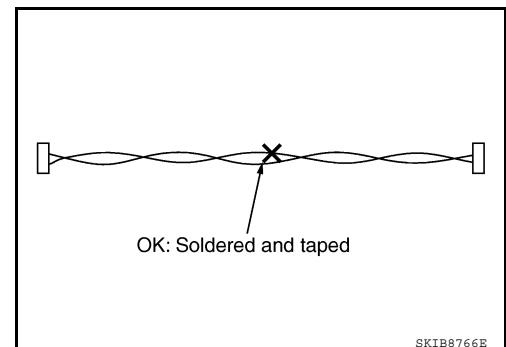

SK1B8766E

PRECAUTIONS


[HEV SYSTEM CAN]

< PRECAUTION >

- Bypass connection is never allowed at the repaired area.

NOTE:

Bypass connection may cause CAN communication error. The spliced wire becomes separated and the characteristics of twisted line are lost.

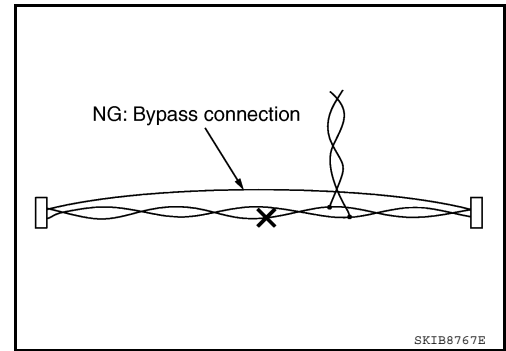

- Replace the applicable harness as an assembly if error is detected on the shield lines of HEV SYSTEMCAN communication line.

BASIC INSPECTION

DIAGNOSIS AND REPAIR WORKFLOW

Information Needed for Trouble Diagnosis


INFOID:000000005713643

HEV SYSTEM CAN performs trouble diagnosis with the following tools.

Tool	Usage
Diagnosis sheet	For detecting the root cause.
All DTC Reading (CONSULT-III)	For checking the condition of control units and the status of HEV SYSTEM CAN communication.
Abbreviation list	For checking abbreviations in diagnosis sheet.

Trouble Diagnosis Flow Chart

INFOID:000000005713644

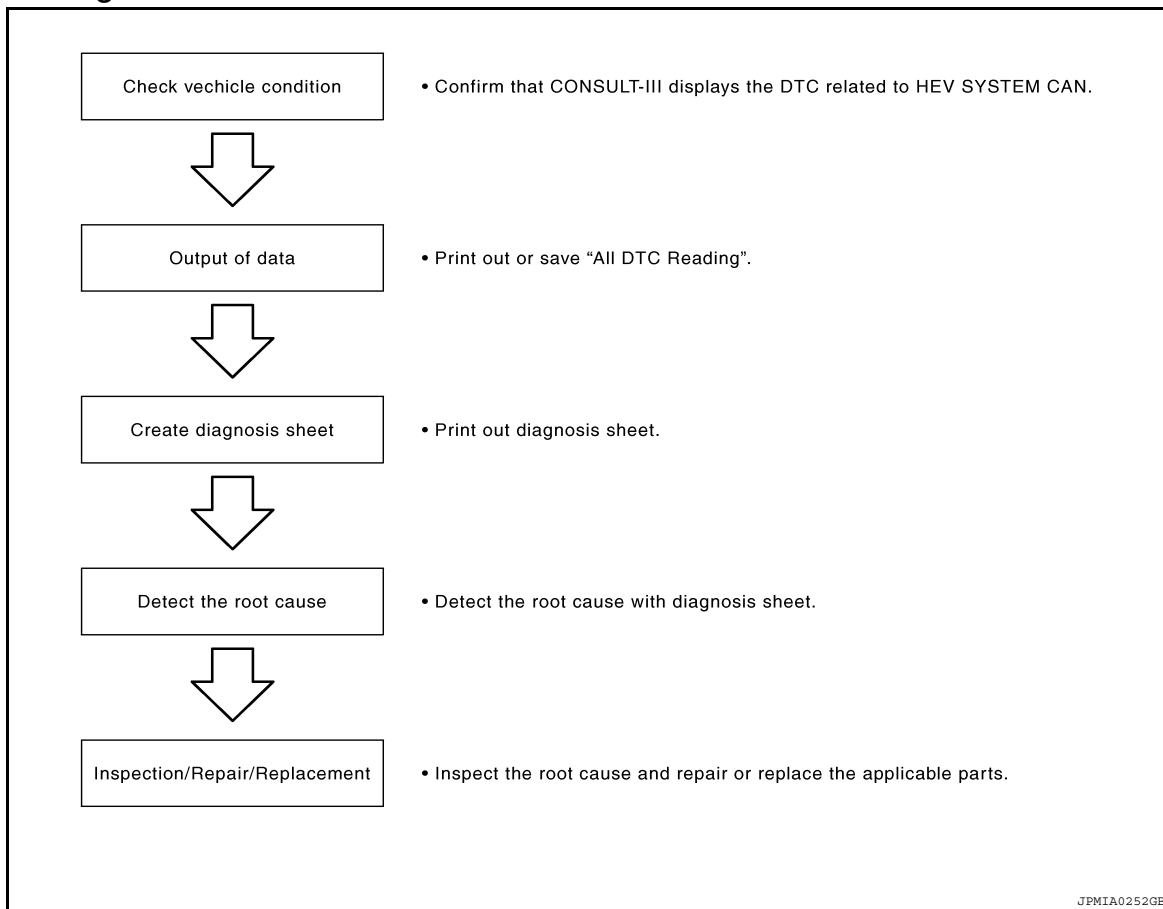

Trouble Diagnosis Procedure

INFOID:000000005713645

CHECK VEHICLE CONDITION

Check whether or not the DTC related to HEV SYSTEM CAN indicated on "All DTC Reading" by CONSULT-III.

NOTE:

Root cause cannot be detected using the procedure in this section if the DTC related to HEV SYSTEM CAN is not indicated. Refer to [LAN-63, "DTC Related to HEV SYSTEM CAN List"](#).

OUTPUT OF DATA

Print out or save "All DTC Reading".

CREATE DIAGNOSIS SHEET

Print out diagnosis sheet. Refer to [LAN-63, "Diagnosis Sheet"](#).


NOTE:

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[HEV SYSTEM CAN]

For abbreviations, refer to [LAN-54. "Abbreviation List"](#).

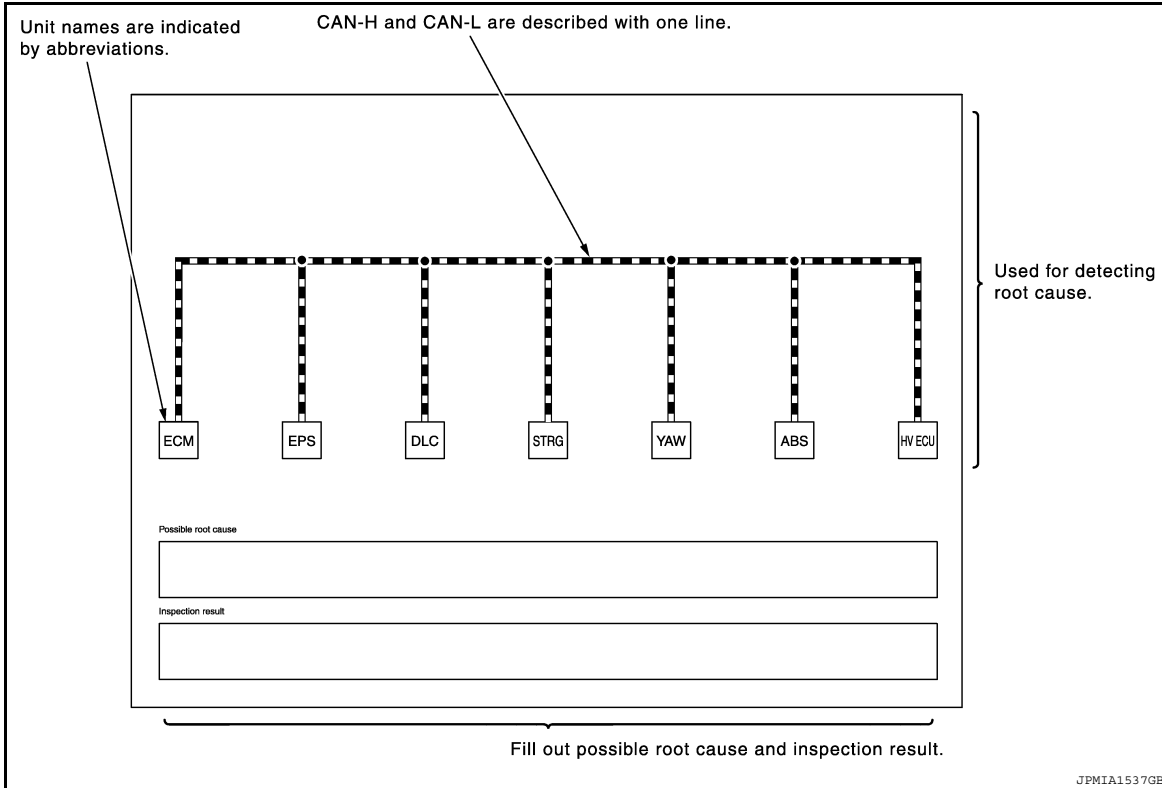

DETECT THE ROOT CAUSE

Description

To detect the root cause of HEV SYSTEM CAN, check for short circuit first. When there is no short circuit, check for open circuit.

Short Circuit

Check for short circuit, and DLC branch line open circuit.

When the symptoms listed below exist, a short circuit of the HEV SYSTEM CAN communication line or control unit is a possible cause.

Received data

Item (CONSULT-III)	Indication
The printed or saved All DTC Reading	<ul style="list-style-type: none"> The items EPS and ABS are not displayed. U0129, U0293, U1020 and U1022 are displayed as the ENGINE items. U0100^{*1}, U0129^{*2} and U0131^{*3} are displayed as the HYBRID SYSTEM items.

- *1: Hybrid vehicle control ECU may display one or more DTCs (INF code) listed as follows; U0100 (211), U0100 (212), U0100 (530).
- *2: Hybrid vehicle control ECU may display one or more DTCs (INF code) listed as follows; U0129 (220), U0129 (222), U0129 (528).
- *3: Hybrid vehicle control ECU may display one or more DTCs (INF code) listed as follows; U0131 (433), U0131 (434).

Error symptom

- Most the units connected to the HEV SYSTEM CAN go into fail-safe mode or are deactivated.

Inspection procedure

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[HEV SYSTEM CAN]

- Refer to [LAN-73. "Short Circuit"](#).

(Example)

All DTC Reading			
DTC RESULTS	TIME	DTC RESULTS	TIME
IPDM E/R		MULTI AV	
No DTC is detected. Further testing may be required.		U0131: LOST COMM [EPS]	
		No Support	
HYBRID SYSTEM		BCM	
U0100: LOST COMM [ECM]		No DTC is detected. Further testing may be required.	
U0129: LOST COMM [BRAKE]			

DTC RESULTS	TIME	DTC RESULTS	TIME
REARVIEW CAMERA		AIR BAG	
No Support		U1020: LOST COMM [HV ECU]	1t
		U1022: LOST COMM [BRAKE]	1t
No DTC is detected. Further testing may be required.			
METER/M&A			
B2205: SPEED METER	CRNT		
ENGINE			
U0293: LOST COMM [HV ECU]	0		
U0129: LOST COMM [BRAKE]	0		

JPMIA0260GB

NOTE:

DLC branch line circuit can be open when the following conditions are satisfied as All DTC Reading result;

- The DTCs related to HEV SYSTEM CAN are not displayed as ENGINE or HYBRID SYSTEM item.
- The items of EPS and ABS are not displayed.

For the DLC branch line circuit inspection procedure, refer to [LAN-73. "Branch Line"](#).

Open Circuit

Draw a line on the diagnosis sheet to indicate the possible cause. Narrow the search.

NOTE:

- Color-code when drawing lines.
- Do not draw a line onto an existing line.
- When the root cause appears to be a branch line, be sure to check the control unit as well as the communication line.

1. Check each item on the printed or saved All DTC Reading. Draw a line on the diagnosis sheet to indicate the error circuit. Refer to [LAN-63. "DTC Related to HEV SYSTEM CAN List"](#).

a. Reception item of "HYBRID SYSTEM":

i. "U0100: LOST COMM [ECM]:211", "U0100: LOST COMM [ECM]:212" and "U0100: LOST COMM [ECM]:530" are indicated. This means HV ECU cannot receive the signal from ECM. Draw a line to indicate an error between HV ECU and ECM (line 1-a-i in the figure below).


LAN

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[HEV SYSTEM CAN]

- ii. “U0131:LOST COMM [EPS]:433” and “U0131:LOST COMM [EPS]:434” are indicated. This means HV ECU cannot receive the signal from EPS. Draw a line to indicate an error between HV ECU and EPS (line 1-a-ii in the figure below).

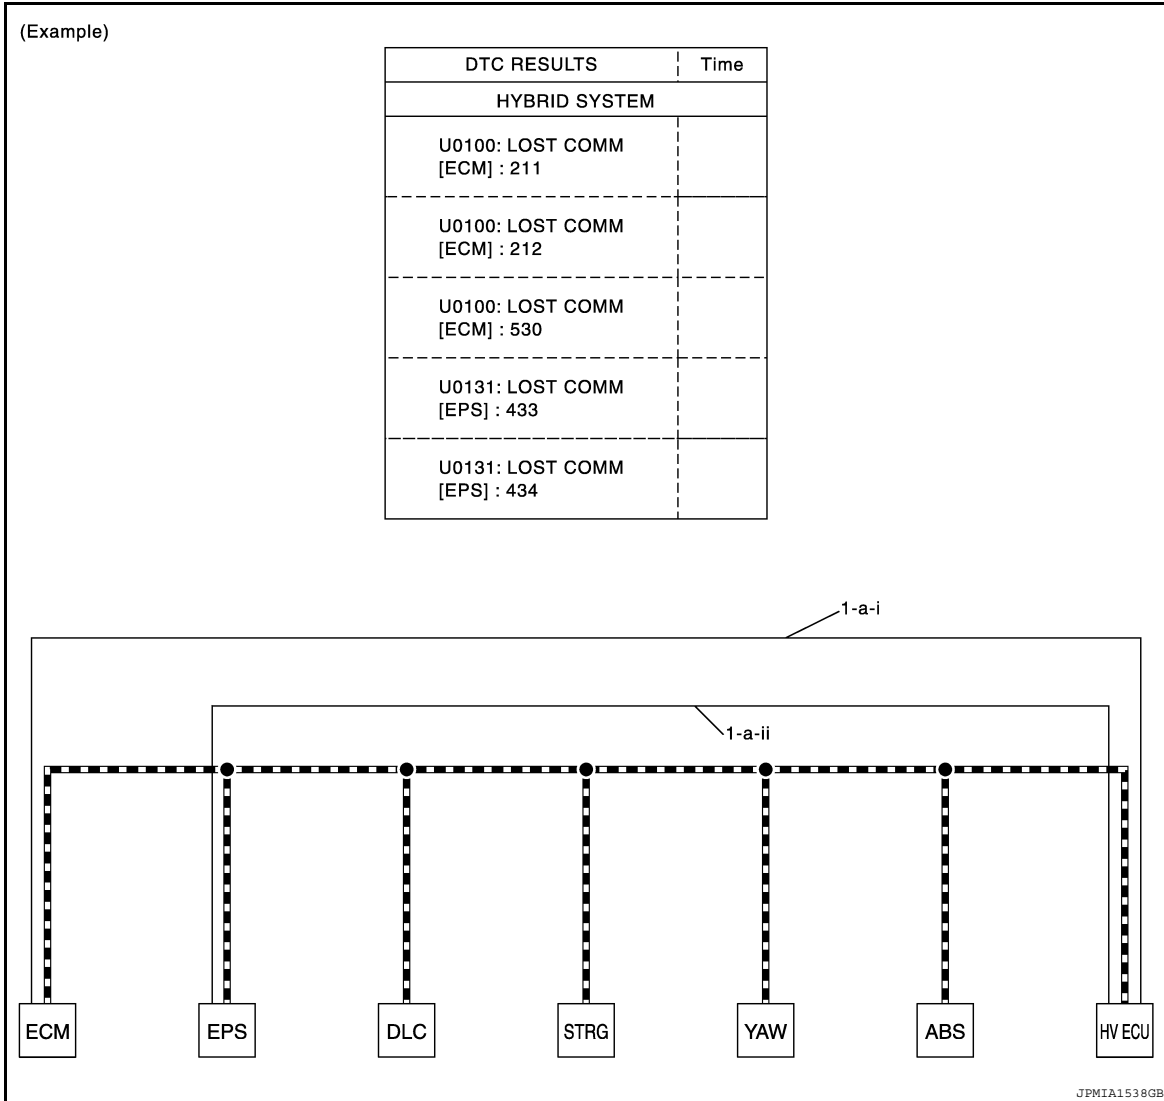


- b. Reception item of “ENGINE”:
- i. “U0293” and “U1020” are indicated. This means ECM cannot receive the signal from HV ECU. Draw a line to indicate an error between ECM and HV ECU (line 1-b-i in the figure below).

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[HEV SYSTEM CAN]

- ii. "U0129" and "U1022" are indicated. This means ECM cannot receive the signal from ABS. Draw a line to indicate an error between ECM and ABS (line 1-b-ii in the figure below).

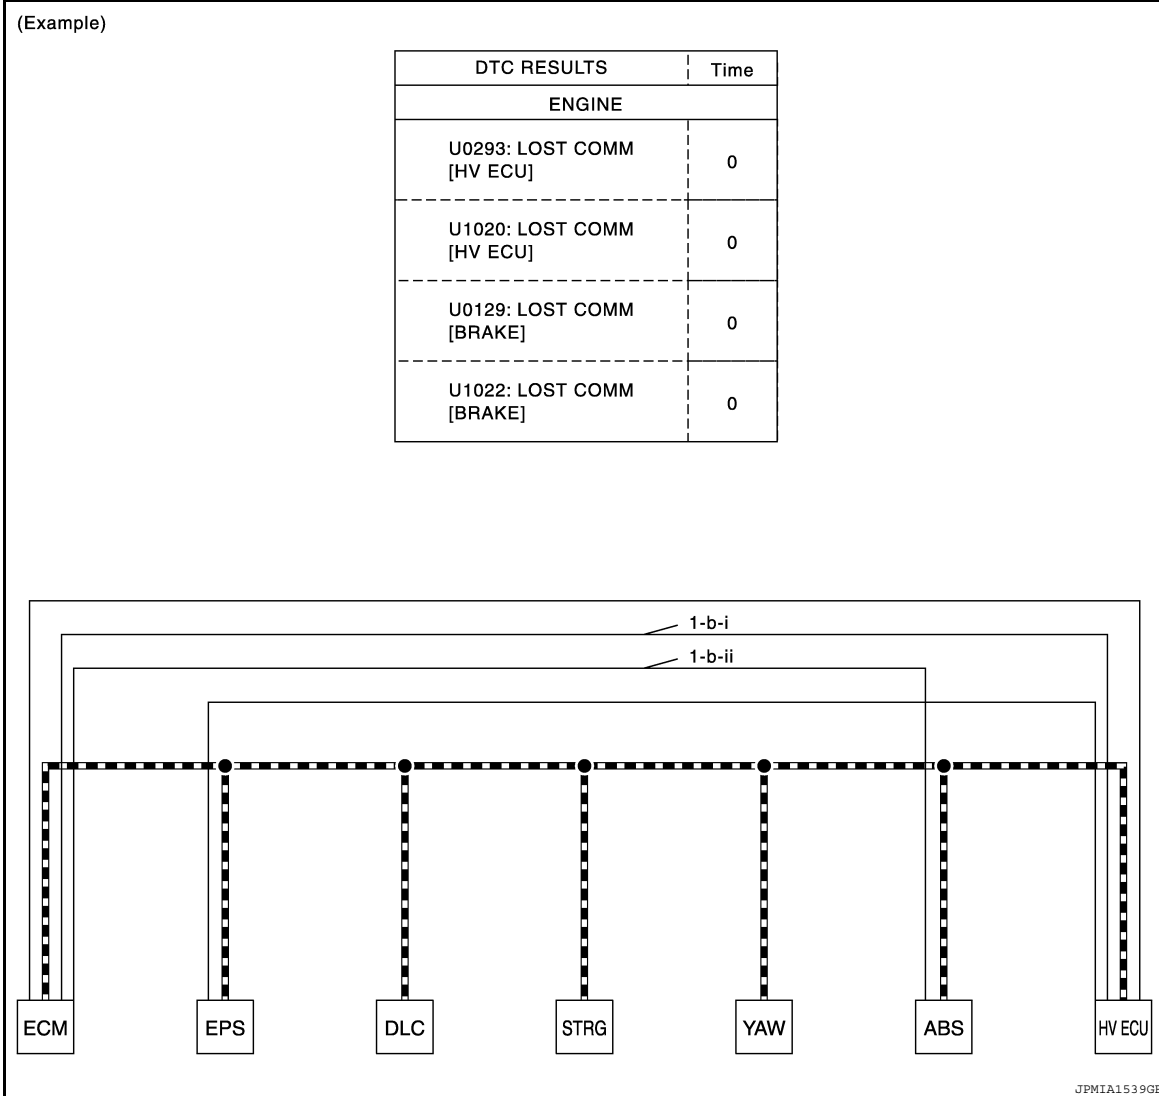

2. Based on information received from the printed or saved All DTC Reading, place a check mark on the known good HEV SYSTEM CAN communication line between ECM and HV ECU.
 - a. Through the previous procedure, the circuit between EPS splice and ABS splice has the most amount of lines (shade 2-a in the figure below).
 - b. Place a check mark on the known good lines to establish the error circuit.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P


LAN

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[HEV SYSTEM CAN]

The item "ABS" is displayed. ABS communicates normally with DLC (CONSULT-III). Put a check mark on the normal circuit between ABS and DLC (check mark 2-b in the figure below).

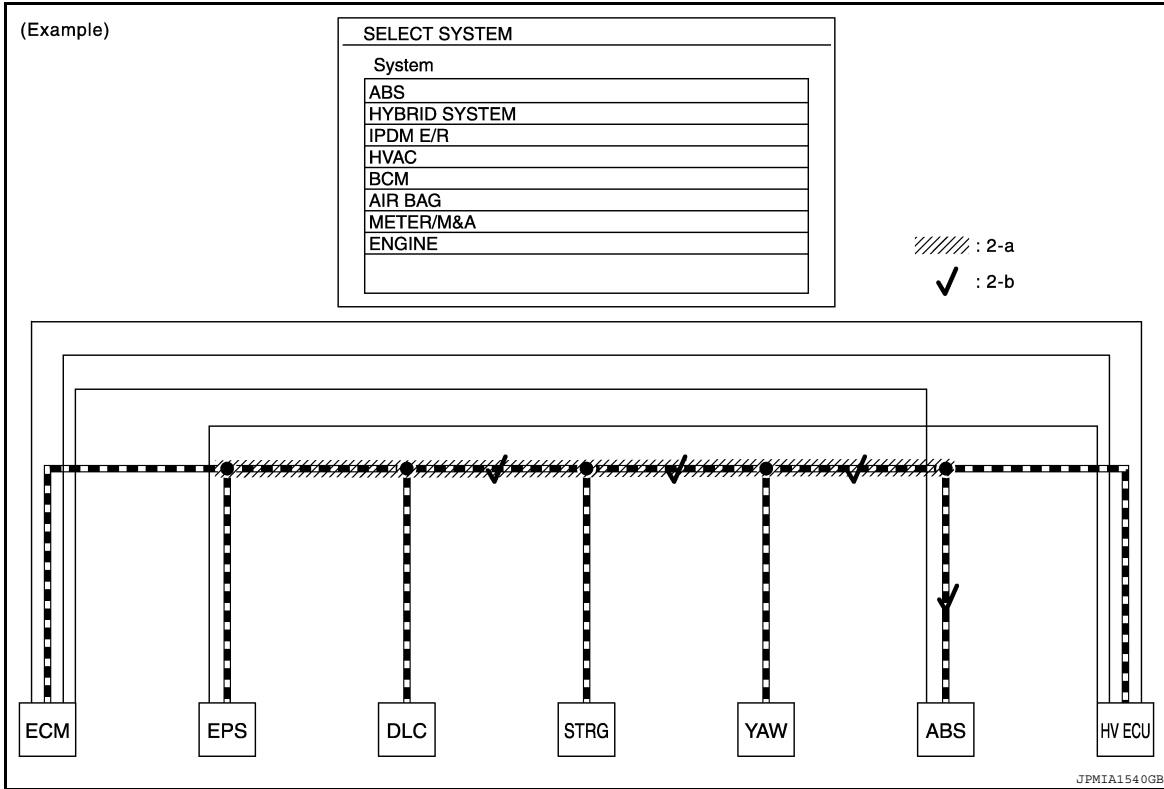


- Through the above procedure, the error is detected in between EPS and DLC main line (shaded in the figure below).

NOTE:

For abbreviations, refer to [LAN-54, "Abbreviation List"](#).

- Perform the inspection for the detected error circuit. For the inspection procedure, refer to [LAN-73, "Main Line"](#). (When the error is detected on branch line, refer to [LAN-73, "Branch Line"](#).)

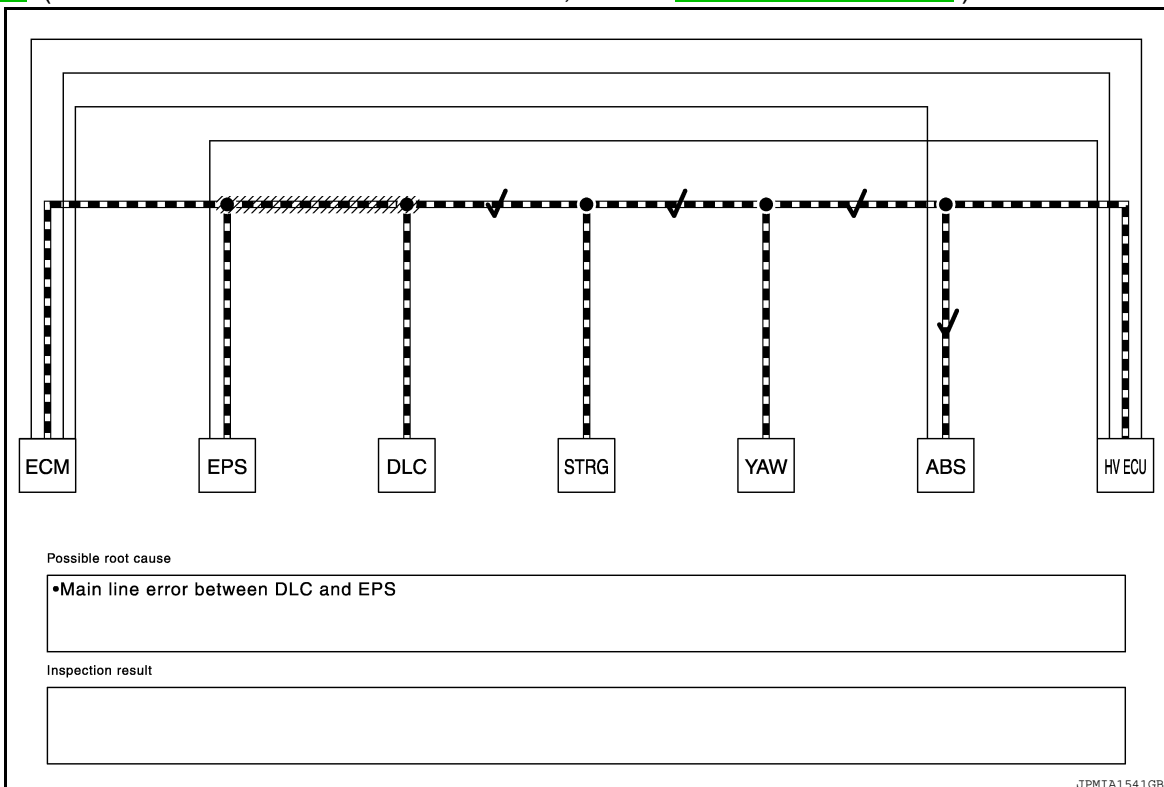


DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[HEV SYSTEM CAN]

Diagnosis Sheet

INFOID:000000005713646

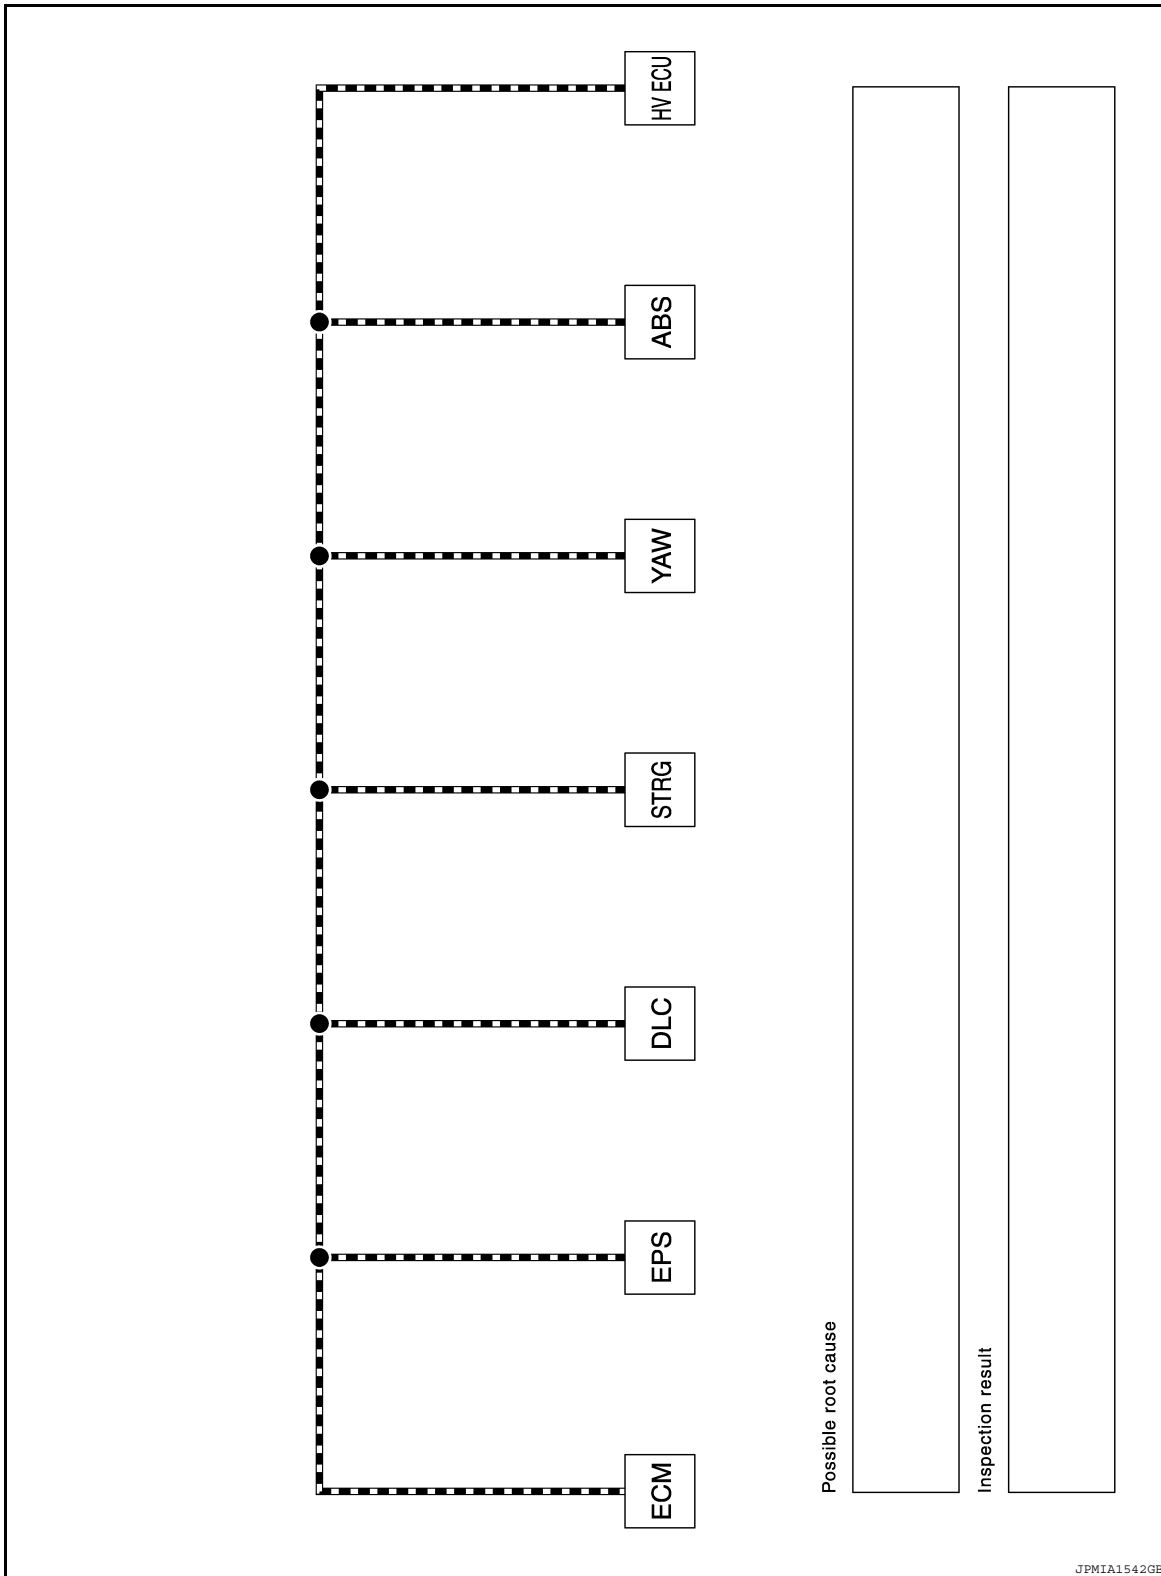

A
B
C
D
E
F
G
H
I
J
K
L
LAN
N
O
P

DTC Related to HEV SYSTEM CAN List

INFOID:000000005713647

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[HEV SYSTEM CAN]

Unit	DTC (INF code)	Diagnostic unit	Self-diagnosis item (CONSULT-III indication)	DTC detection logic	Possible cause
Hybrid vehicle control ECU	<ul style="list-style-type: none"> • P0A1D (924) • P0A1D (925) 	—	HV ECU	Hybrid vehicle control ECU malfunctions.	Hybrid vehicle control ECU
	<ul style="list-style-type: none"> • U0100 (211) • U0100 (530) 	ECM	LOST COMM [ECM]	CAN communication signal is not transmitted or received between ECM and hybrid vehicle control ECU for 1 second or more.	<ul style="list-style-type: none"> • HEV SYSTEM CAN communication line between ECM and hybrid vehicle control ECU • HEV SYSTEM CAN communication line short
	U0100 (212)	ECM	LOST COMM [ECM]	Malfunction signal of CAN communication line between ECM and hybrid vehicle control ECU is received.	<ul style="list-style-type: none"> • HEV SYSTEM CAN communication line between ECM and hybrid vehicle control ECU • HEV SYSTEM CAN communication line short
	<ul style="list-style-type: none"> • U0129 (220) • U0129 (528) 	ABS	LOST COMM [BRAKE]	CAN communication signal is not transmitted or received between brake ECU and hybrid vehicle control ECU for 2 seconds or more.	<ul style="list-style-type: none"> • HEV SYSTEM CAN communication line between brake ECU and hybrid vehicle control ECU • HEV SYSTEM CAN communication line short
	U0129 (222)	ABS	LOST COMM [BRAKE]	Malfunction signal of CAN communication line between brake ECU and hybrid vehicle control ECU is received.	<ul style="list-style-type: none"> • HEV SYSTEM CAN communication line between brake ECU and hybrid vehicle control ECU • HEV SYSTEM CAN communication line short
	<ul style="list-style-type: none"> • U0131 (433) • U0131 (434) 	EPS	LOST COMM [EPS]	CAN communication signal is not received between EPS control unit and hybrid vehicle control ECU for 1 second or more.	<ul style="list-style-type: none"> • HEV SYSTEM CAN communication line between EPS control unit and hybrid vehicle control ECU • HEV SYSTEM CAN communication line short

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[HEV SYSTEM CAN]

Unit	DTC (INF code)	Diagnostic unit	Self-diagnosis item (CONSULT-III indication)	DTC detection logic	Possible cause
Brake ECU	C1300	—	ECU	Brake ECU malfunctions.	Brake ECU
	U0073	<ul style="list-style-type: none"> • YAW • STRG 	LOST COMM YAW/STRG	<ul style="list-style-type: none"> • CAN communication is stopped for more than 1 second. • The following phenomenon occur more than 10 times in 60 seconds. <ul style="list-style-type: none"> - CAN communication with yaw rate/side/decel G sensor or steering angle sensor is suspended more than 1 time per 5 seconds. 	<ul style="list-style-type: none"> • HEV SYSTEM CAN communication line between brake ECU and yaw rate/side/decel G sensor, steering angle sensor • HEV SYSTEM CAN communication line short
	U0123	<ul style="list-style-type: none"> • YAW • HV ECU 	LOST COMM [YAW]	<ul style="list-style-type: none"> • CAN communication signal is not received between yaw rate/side/decel G sensor and brake ECU for 1 second or more. • The following phenomenon occur more than 10 times in 60 seconds. <ul style="list-style-type: none"> - CAN communication with hybrid vehicle control ECU is suspended more than 1 time per 5 seconds. 	<ul style="list-style-type: none"> • HEV SYSTEM CAN communication line between brake ECU and yaw rate/side/decel G sensor, hybrid vehicle control ECU • HEV SYSTEM CAN communication line short
	U0124	<ul style="list-style-type: none"> • YAW • HV ECU 	LOST COMM [DECEL]		
	U0126	<ul style="list-style-type: none"> • STRG • HV ECU 	LOST COMM [STRG]	<ul style="list-style-type: none"> • CAN communication signal is not received between steering angle sensor and brake ECU for 1 second or more. • The following phenomenon occur more than 10 times in 60 seconds. <ul style="list-style-type: none"> - CAN communication with hybrid vehicle control ECU is suspended more than 1 time per 5 seconds. 	<ul style="list-style-type: none"> • HEV SYSTEM CAN communication line between brake ECU and steering angle sensor, hybrid vehicle control ECU • HEV SYSTEM CAN communication line short
	U0293	HV ECU	LOST COMM [HV ECU]	<ul style="list-style-type: none"> • CAN communication signal is not received between hybrid vehicle control ECU and brake ECU for 2 seconds or more. • CAN communication signal from hybrid vehicle control ECU has error. • The following phenomenon occur more than 10 times in 60 seconds. <ul style="list-style-type: none"> - CAN communication with hybrid vehicle control ECU is suspended more than 1 time per 5 seconds. 	<ul style="list-style-type: none"> • HEV SYSTEM CAN communication line between brake ECU and hybrid vehicle control ECU • HEV SYSTEM CAN communication line short
	EPS control unit	C1608	—	CONTROL UNIT	EPS control unit malfunctions.
U0129		ABS	LOST COMM [BRAKE]	CAN communication signal is not received between brake ECU and EPS control unit for 2 seconds or more.	<ul style="list-style-type: none"> • HEV SYSTEM CAN communication line between brake ECU and EPS control unit • HEV SYSTEM CAN communication line short
U0293		HV ECU	LOST COMM [HV ECU]	CAN communication signal is not received between hybrid vehicle control ECU and EPS control unit for 2 seconds or more.	<ul style="list-style-type: none"> • HEV SYSTEM CAN communication line between hybrid vehicle control ECU and EPS control unit • HEV SYSTEM CAN communication line short

A
B
C
D
E
F
G
H
I
J
K
L

LAN

N
O
P

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[HEV SYSTEM CAN]


Unit	DTC (INF code)	Diagnostic unit	Self-diagnosis item (CONSULT-III indication)	DTC detection logic	Possible cause
ECM	P0607	—	ECM	ECM malfunctions.	ECM
	<ul style="list-style-type: none"> • U0293 • U1020 	HV ECU	LOST COMM [HV ECU]	CAN communication signal is not received between hybrid vehicle control ECU and ECM for 1 second or more.	<ul style="list-style-type: none"> • HEV SYSTEM CAN communication line between hybrid vehicle control ECU and ECM • HEV SYSTEM CAN communication line short
	<ul style="list-style-type: none"> • U0129 • U1022 	ABS	LOST COMM [BRAKE]	CAN communication signal is not received between brake ECU and ECM for 1 second or more.	<ul style="list-style-type: none"> • HEV SYSTEM CAN communication line between brake ECU and ECM • HEV SYSTEM CAN communication line short

COMPONENT DIAGNOSIS

CAN COMMUNICATION SYSTEM

Component Parts Location

INFOID:000000005713648

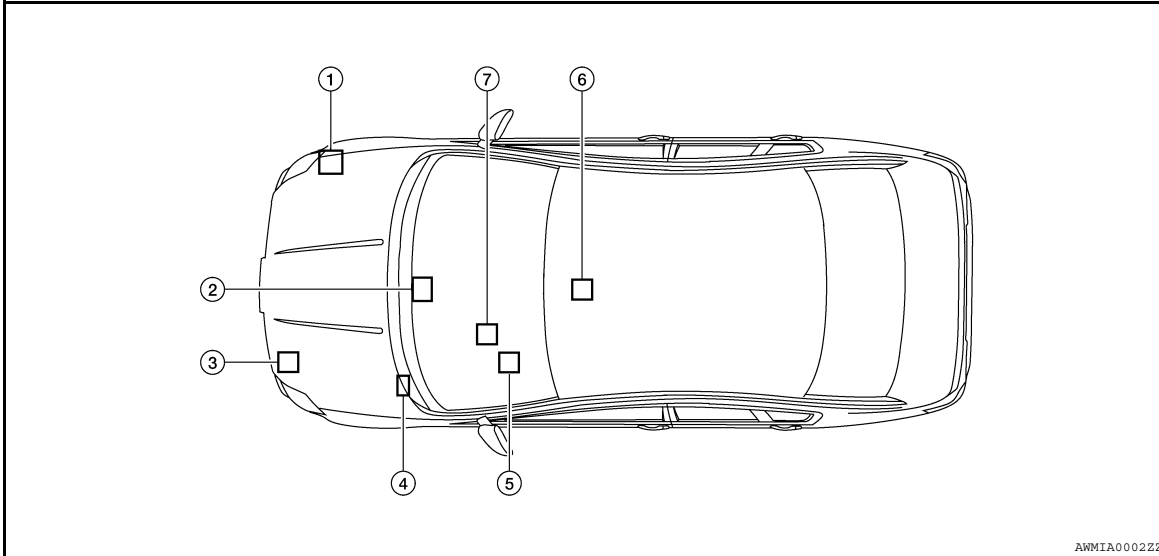

- | | | |
|----------------------------|-----------------------------------|-------------------------------------|
| 1. Brake ECU E61 | 2. Hybrid vehicle control ECU E66 | 3. ECM F13 |
| 4. EPS control unit E302 | 5. Steering angle sensor M53 | 6. Yaw rate/side/decel G sensor M55 |
| 7. Data link connector M22 | | |

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

CAN COMMUNICATION SYSTEM


< COMPONENT DIAGNOSIS >

[HEV SYSTEM CAN]

Wiring Diagram - HEV SYSTEM CAN -

INFOID:000000005713649


HEV SYSTEM CAN

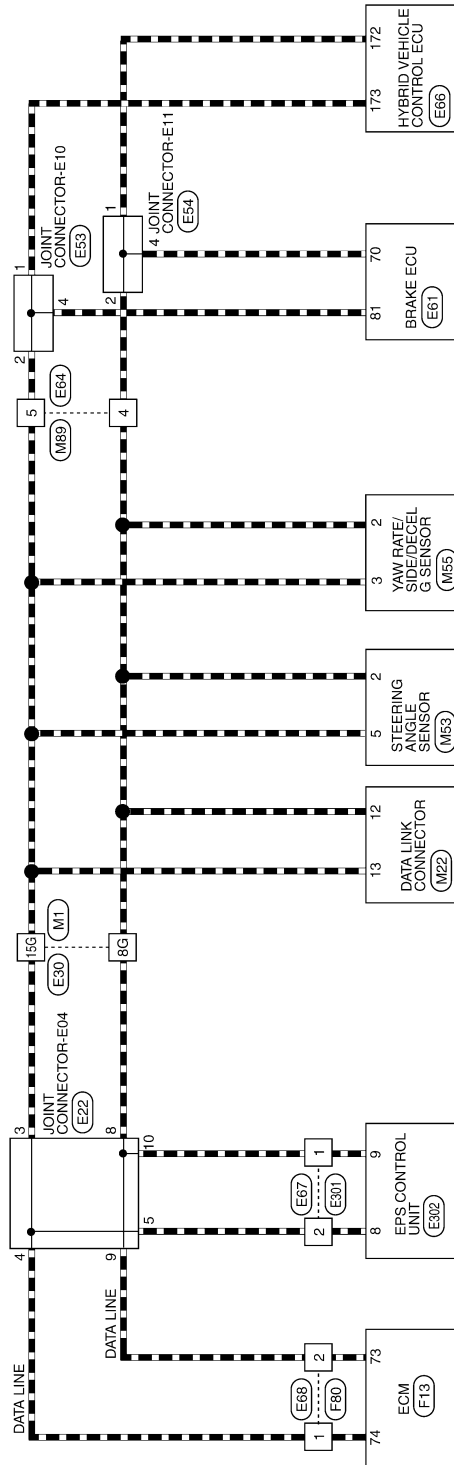

ABMWA0588GB


HEV SYSTEM CAN CONNECTORS

Connector No.	M1
Connector Name	WIRE TO WIRE
Connector Color	WHITE

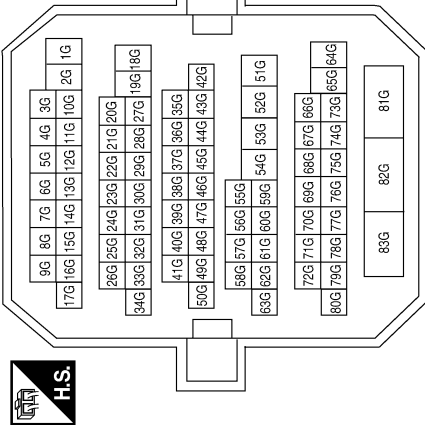


Terminal No.	Color of Wire	Signal Name
8G	BR	-
15G	Y	-

Connector No.	M22
Connector Name	DATA LINK CONNECTOR
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
12	BR	-
13	Y	-

Connector No.	M53
Connector Name	STEERING ANGLE SENSOR
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
2	BR	CAN-L
5	Y	CAN-H

Connector No.	M55
Connector Name	YAW RATE/SIDE/DECEL G SENSOR
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
2	BR	CAN-L
3	Y	CAN-H

Connector No.	M89
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
4	BR	-
5	Y	-

Connector No.	E22
Connector Name	JOINT CONNECTOR-E04
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
3	Y	-
4	Y	-
5	Y	-
8	BR	-
9	BR	-
10	BR	-

A B C D E F G H I J K L N O P

LAN

CAN COMMUNICATION SYSTEM

< COMPONENT DIAGNOSIS >

[HEV SYSTEM CAN]


Connector No.	E53
Connector Name	JOINT CONNECTOR-E10
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1	Y	-
2	Y	-
4	Y	-

Terminal No.	Color of Wire	Signal Name
8G	BR	-
15G	Y	-

Connector No.	E30
Connector Name	WIRE TO WIRE
Connector Color	WHITE

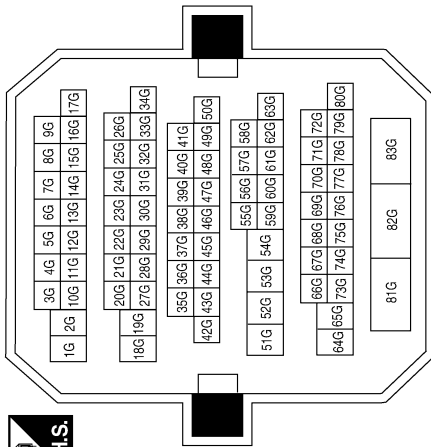


Connector No.	E64
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
4	BR	-
5	Y	-

Connector No.	E61
Connector Name	BRAKE ECU
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
70	BR	CAN-L
81	Y	CAN-H

Connector No.	E54
Connector Name	JOINT CONNECTOR-E11
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	BR	-
2	BR	-
4	BR	-

ABM1A1572GB

CAN COMMUNICATION SYSTEM

< COMPONENT DIAGNOSIS >

[HEV SYSTEM CAN]


Connector No.	E66
Connector Name	HYBRID VEHICLE CONTROL ECU
Connector Color	BLACK



168	167	166	165	164	163	162	161	160	159	158	157	156	155	154	153	152	151	150	149	148	147	146																		
145	144	143	142	141	140	139	138	137	136	135	134	133	132	131	130	129	128	127	126	125	124	123	122	121	120	119	118	117	116	115	114	113	112							
186	185	184	183	182	181	180	179	178	177	176	175	174	173	172	171	170	169	168	167	166	165	164	163	162	161	160	159	158	157	156	155	154	153	152	151	150	149	148	147	146


Terminal No.	Color of Wire	Signal Name
172	BR	CAN-L
173	Y	CAN-H

Connector No.	E67
Connector Name	WIRE TO WIRE
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
1	BR	-
2	Y	-

Connector No.	E68
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1	Y	-
2	BR	-

Connector No.	E301
Connector Name	WIRE TO WIRE
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	BR	-
2	Y	-

Connector No.	E302
Connector Name	EPS CONTROL UNIT
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
8	Y	CAN-H
9	BR	CAN-L


A
B
C
D
E
F
G
H
I
J
K
L
LAN
N
O
P

CAN COMMUNICATION SYSTEM

< COMPONENT DIAGNOSIS >


[HEV SYSTEM CAN]

Connector No.	F80
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	Y	-
2	BR	-

Connector No.	F13
Connector Name	ECM
Connector Color	BROWN

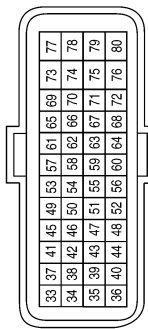

Terminal No.	Color of Wire	Signal Name
73	BR	CAN-L
74	Y	CAN-H

ABM1A1575GB

MALFUNCTION AREA CHART

< COMPONENT DIAGNOSIS >

[HEV SYSTEM CAN]

MALFUNCTION AREA CHART

Main Line

INFOID:000000005713650

Malfunction area	Reference
Main line between EPS control unit and data link connector	LAN-74. "Diagnosis Procedure"
Main line between data link connector and steering angle sensor	LAN-75. "Diagnosis Procedure"
Main line between steering angle sensor and yaw rate/side/decel G sensor	LAN-76. "Diagnosis Procedure"
Main line between yaw rate/side/decel G sensor and brake ECU	LAN-77. "Diagnosis Procedure"

Branch Line

INFOID:000000005713651

Malfunction area	Reference
ECM branch line circuit	LAN-78. "Diagnosis Procedure"
EPS control unit branch line circuit	LAN-79. "Diagnosis Procedure"
Data link connector branch line circuit	LAN-80. "Diagnosis Procedure"
Steering angle sensor branch line circuit	LAN-81. "Diagnosis Procedure"
Yaw rate/side/decel G sensor branch line circuit	LAN-82. "Diagnosis Procedure"
Brake ECU branch line circuit	LAN-83. "Diagnosis Procedure"
Hybrid vehicle control ECU branch line circuit	LAN-84. "Diagnosis Procedure"

Short Circuit

INFOID:000000005713652

Malfunction area	Reference
CAN communication circuit	LAN-85. "Diagnosis Procedure"

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

MAIN LINE BETWEEN EPS AND DLC CIRCUIT

< COMPONENT DIAGNOSIS >

[HEV SYSTEM CAN]

MAIN LINE BETWEEN EPS AND DLC CIRCUIT

Diagnosis Procedure

INFOID:000000005713653

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector E30
 - Harness connector M1

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the following harness connectors.
 - Harness connectors E301 and E67
 - Harness connectors E30 and M1
2. Check the continuity between the harness connectors.

Harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
E67	2	E30	15G	Existed
	1		8G	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the main line between the harness connector E67 and E30.

3.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

Check the continuity between the harness connector and the data link connector.

Harness connector		Data link connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M1	15G	M22	13	Existed
	8G		12	Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair the main line between the harness connector M1 and the data link connector.

4.ERASE ALL DTC

1. Connect all the connectors.
2. Erase the DTCs of unit connected to HEV SYSTEM CAN and CAN.
3. Turn the ignition switch OFF.
4. Turn the ignition switch ON.
5. Perform All DTC Reading with CONSULT-III.

NOTE:

For DTCs related to HEV SYSTEM CAN, refer to [LAN-63, "DTC Related to HEV SYSTEM CAN List"](#).

Is the DTC related to HEV SYSTEM CAN displayed?

YES >> Reconfirm the procedure for detecting root cause.

NO >> Error was detected in the main line between the EPS control unit and the data link connector.

MAIN LINE BETWEEN DLC AND STRG CIRCUIT

< COMPONENT DIAGNOSIS >

[HEV SYSTEM CAN]

MAIN LINE BETWEEN DLC AND STRG CIRCUIT

Diagnosis Procedure

INFOID:000000005713654

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - Steering angle sensor
4. Check the continuity between the harness connectors.

Data link connector		Steering angle sensor harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M22	13	M53	5	Existed
	12		2	Existed

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the main line between the data link connector and steering angle sensor.

2. ERASE ALL DTC

1. Connect all the connectors.
2. Erase the DTCs of unit connected to HEV SYSTEM CAN and CAN.
3. Turn the ignition switch OFF.
4. Turn the ignition switch ON.
5. Perform All DTC Reading with CONSULT-III.

NOTE:

For DTCs related to HEV SYSTEM CAN, refer to [LAN-63. "DTC Related to HEV SYSTEM CAN List"](#).

Is the DTC related to HEV SYSTEM CAN displayed?

YES >> Reconfirm the procedure for detecting root cause.

NO >> Error was detected in the main line between the data link connector and steering angle sensor.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

MAIN LINE BETWEEN STRG AND YAW CIRCUIT

< COMPONENT DIAGNOSIS >

[HEV SYSTEM CAN]

MAIN LINE BETWEEN STRG AND YAW CIRCUIT

Diagnosis Procedure

INFOID:000000005713655

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - Steering angle sensor
 - Yaw rate/side/decel G sensor
4. Check the continuity between the harness connectors.

Steering angle sensor harness connector		Yaw rate/side/decel G sensor harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M53	5	M55	3	Existed
	2		2	Existed

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the main line between the steering angle sensor and yaw rate/side/decel G sensor.

2. ERASE ALL DTC

1. Connect all the connectors.
2. Erase the DTCs of unit connected to HEV SYSTEM CAN and CAN.
3. Turn the ignition switch OFF.
4. Turn the ignition switch ON.
5. Perform All DTC Reading with CONSULT-III.

NOTE:

For DTCs related to HEV SYSTEM CAN, refer to [LAN-63, "DTC Related to HEV SYSTEM CAN List"](#).

Is the DTC related to HEV SYSTEM CAN displayed?

YES >> Reconfirm the procedure for detecting root cause.

NO >> Error was detected in the main line between the steering angle sensor and yaw rate/side/decel G sensor.

MAIN LINE BETWEEN YAW AND ABS CIRCUIT

< COMPONENT DIAGNOSIS >

[HEV SYSTEM CAN]

MAIN LINE BETWEEN YAW AND ABS CIRCUIT

Diagnosis Procedure

INFOID:000000005713656

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector M89
 - Harness connector E64

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the following harness connectors.
 - Yaw rate/side/decel G sensor
 - Harness connectors M89 and E64
2. Check the continuity between the yaw rate/side/decel G sensor harness connector and the harness connector.

Yaw rate/side/decel G sensor harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M55	3	M89	5	Existed
	2		4	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the main line between the yaw rate/side/decel G sensor and the harness connector M89.

3.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of brake ECU.
2. Check the continuity between the harness connector and the brake ECU harness connector.

Harness connector		Brake ECU harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
E64	5	E61	81	Existed
	4		70	Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair the main line between the harness connector E64 and the brake ECU.

4.ERASE ALL DTC

1. Connect all the connectors.
2. Erase the DTCs of unit connected to HEV SYSTEM CAN and CAN.
3. Turn the ignition switch OFF.
4. Turn the ignition switch ON.
5. Perform All DTC Reading with CONSULT-III.

NOTE:

For DTCs related to HEV SYSTEM CAN, refer to [LAN-63. "DTC Related to HEV SYSTEM CAN List"](#).

Is the DTC related to HEV SYSTEM CAN displayed?

YES >> Reconfirm the procedure for detecting root cause.

NO >> Error was detected in the main line between the yaw rate/side/decel G sensor and the brake ECU.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

N
O
P

ECM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000005713657

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - ECM
 - Harness connector F80
 - Harness connector E68

Is the inspection result normal?

- YES >> GO TO 2.
 NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of ECM.
2. Check the resistance between the ECM harness connector terminals.

ECM harness connector			Resistance (Ω)
Connector No.	Terminal No.		
F13	74	73	Approx. 108 – 132

Is the measurement value within the specification?

- YES >> GO TO 3.
 NO >> Repair the ECM branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ECM. Refer to [EC-114, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES >> GO TO 4.
 NO >> Repair the power supply and the ground circuit.

4. ERASE ALL DTC

1. Connect the connector of ECM.
2. Erase the DTCs of unit connected to HEV SYSTEM CAN and CAN.
3. Turn the ignition switch OFF.
4. Turn the ignition switch ON.
5. Perform All DTC Reading with CONSULT-III.

NOTE:

For DTCs related to HEV SYSTEM CAN, refer to [LAN-63, "DTC Related to HEV SYSTEM CAN List"](#).

Is the DTC related to HEV SYSTEM CAN displayed?

- YES >> Replace the ECM. Refer to [EC-14, "ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Special Repair Requirement"](#).
 NO >> Error was detected in the ECM branch line.

EPS BRANCH LINE CIRCUIT

< COMPONENT DIAGNOSIS >

[HEV SYSTEM CAN]

EPS BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000005713658

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - EPS control unit
 - Harness connector E301
 - Harness connector E67

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of EPS control unit.
2. Check the resistance between the EPS control unit harness connector terminals.

EPS control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E302	8	9	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the EPS control unit branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the EPS control unit. Refer to [STC-47, "Wiring Diagram"](#).

Is the inspection result normal?

- YES >> GO TO 4.
NO >> Repair the power supply and the ground circuit.

4. ERASE ALL DTC

1. Connect the connector of EPS control unit.
2. Erase the DTCs of unit connected to HEV SYSTEM CAN and CAN.
3. Turn the ignition switch OFF.
4. Turn the ignition switch ON.
5. Perform All DTC Reading with CONSULT-III.

NOTE:

For DTCs related to HEV SYSTEM CAN, refer to [LAN-63, "DTC Related to HEV SYSTEM CAN List"](#).

Is the DTC related to HEV SYSTEM CAN displayed?

- YES >> Replace the EPS control unit. Refer to [STC-58, "Exploded View"](#).
NO >> Error was detected in the EPS control unit branch line.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

DLC BRANCH LINE CIRCUIT

< COMPONENT DIAGNOSIS >

[HEV SYSTEM CAN]

DLC BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000005713659

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the data link connector for damage, bend and loose connection (connector side and harness side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

Check the resistance between the data link connector terminals.

Data link connector			Resistance (Ω)
Connector No.	Terminal No.		
M22	13	12	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> Reconfirm the procedure for detecting root cause.
NO >> Repair the data link connector branch line.

STRG BRANCH LINE CIRCUIT

< COMPONENT DIAGNOSIS >

[HEV SYSTEM CAN]

STRG BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000005713660

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the steering angle sensor for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of steering angle sensor.
2. Check the resistance between the steering angle sensor harness connector terminals.

Steering angle sensor harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M53	5	2	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the steering angle sensor branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the steering angle sensor. Refer to [BRC-149, "Wiring Diagram"](#).

Is the inspection result normal?

- YES >> GO TO 4.
NO >> Repair the power supply and the ground circuit.

4. ERASE ALL DTC

1. Connect the connector of steering angle sensor.
2. Erase the DTCs of unit connected to HEV SYSTEM CAN and CAN.
3. Turn the ignition switch OFF.
4. Turn the ignition switch ON.
5. Perform All DTC Reading with CONSULT-III.

NOTE:

For DTCs related to HEV SYSTEM CAN, refer to [LAN-63, "DTC Related to HEV SYSTEM CAN List"](#).

Is the DTC related to HEV SYSTEM CAN displayed?

- YES >> Replace the steering angle sensor. Refer to [BRC-202, "Removal and Installation"](#).
NO >> Error was detected in the steering angle sensor branch line.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

YAW BRANCH LINE CIRCUIT

< COMPONENT DIAGNOSIS >

[HEV SYSTEM CAN]

YAW BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000005713661

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the yaw rate/side/decel G sensor for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of yaw rate/side/decel G sensor.
2. Check the resistance between the yaw rate/side/decel G sensor harness connector terminals.

Yaw rate/side/decel G sensor harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M55	3	2	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the yaw rate/side/decel G sensor branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the yaw rate/side/decel G sensor. Refer to [BRC-149, "Wiring Diagram"](#).

Is the inspection result normal?

- YES >> GO TO 4.
NO >> Repair the power supply and the ground circuit.

4. ERASE ALL DTC

1. Connect the connector of yaw rate/side/decel G sensor.
2. Erase the DTCs of unit connected to HEV SYSTEM CAN and CAN.
3. Turn the ignition switch OFF.
4. Turn the ignition switch ON.
5. Perform All DTC Reading with CONSULT-III.

NOTE:

For DTCs related to HEV SYSTEM CAN, refer to [LAN-63, "DTC Related to HEV SYSTEM CAN List"](#).

Is the DTC related to HEV SYSTEM CAN displayed?

- YES >> Replace the yaw rate/side/decel G sensor. Refer to [BRC-201, "Removal and Installation"](#).
NO >> Error was detected in the yaw rate/side/decel G sensor branch line.

ABS BRANCH LINE CIRCUIT

< COMPONENT DIAGNOSIS >

[HEV SYSTEM CAN]

ABS BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000005713662

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the brake ECU for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of brake ECU.
2. Check the resistance between the brake ECU harness connector terminals.

Brake ECU harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E61	81	70	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the brake ECU branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the brake ECU. Refer to [BRC-149, "Wiring Diagram"](#).

Is the inspection result normal?

- YES >> GO TO 4.
NO >> Repair the power supply and the ground circuit.

4. ERASE ALL DTC

1. Connect the connector of brake ECU.
2. Erase the DTCs of unit connected to HEV SYSTEM CAN and CAN.
3. Turn the ignition switch OFF.
4. Turn the ignition switch ON.
5. Perform All DTC Reading with CONSULT-III.

NOTE:

For DTCs related to HEV SYSTEM CAN, refer to [LAN-63, "DTC Related to HEV SYSTEM CAN List"](#).

Is the DTC related to HEV SYSTEM CAN displayed?

- YES >> Replace the brake ECU. Refer to [BRC-193, "Exploded View"](#).
NO >> Error was detected in the brake ECU branch line.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

HV ECU BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000005713663

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the hybrid vehicle control ECU for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
 NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of hybrid vehicle control ECU.
2. Check the resistance between the hybrid vehicle control ECU harness connector terminals.

Hybrid vehicle control ECU harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E66	173	172	Approx. 108 – 132

Is the measurement value within the specification?

- YES >> GO TO 3.
 NO >> Repair the hybrid vehicle control ECU branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the hybrid vehicle control ECU. Refer to [HBC-577, "Wiring Diagram"](#).

Is the inspection result normal?

- YES >> GO TO 4.
 NO >> Repair the power supply and the ground circuit.

4. ERASE ALL DTC

1. Connect the connector of hybrid vehicle control ECU.
2. Erase the DTCs of unit connected to HEV SYSTEM CAN and CAN.
3. Turn the ignition switch OFF.
4. Turn the ignition switch ON.
5. Perform All DTC Reading with CONSULT-III.

NOTE:

For DTCs related to HEV SYSTEM CAN, refer to [LAN-63, "DTC Related to HEV SYSTEM CAN List"](#).

Is the DTC related to HEV SYSTEM CAN displayed?

- YES >> Replace the hybrid vehicle control ECU. Refer to [HBC-641, "Exploded View"](#).
 NO >> Error was detected in the hybrid vehicle control ECU branch line.

HEV SYSTEM CAN COMMUNICATION CIRCUIT

< COMPONENT DIAGNOSIS >

[HEV SYSTEM CAN]

HEV SYSTEM CAN COMMUNICATION CIRCUIT

Diagnosis Procedure

INFOID:000000005713664

1.CONNECTOR INSPECTION

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect all the unit connectors on HEV SYSTEM CAN.
4. Check terminals and connectors for damage, bend and loose connection.

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector terminals.

Data link connector		Continuity
Connector No.	Terminal No.	
M22	13	Not existed
	12	

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Check the harness and repair the root cause.

3.CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector and the ground.

Data link connector		Ground	Continuity
Connector No.	Terminal No.		
M22	13		Not existed
	12		Not existed

Is the inspection result normal?

- YES >> GO TO 4.
NO >> Check the harness and repair the root cause.

4.CHECK ECM AND HYBRID VEHICLE CONTROL ECU TERMINATION CIRCUIT

1. Remove the ECM and the hybrid vehicle control ECU.
2. Check the resistance between the ECM terminals.

ECM		Resistance (Ω)
Terminal No.		
74	73	Approx. 108 – 132

3. Check the resistance between the hybrid vehicle control ECU terminals.


Hybrid vehicle control ECU		Resistance (Ω)
Terminal No.		
173	172	Approx. 108 – 132

Is the measurement value within the specification?

- YES >> GO TO 5.
NO >> Replace the ECM and/or the hybrid vehicle control ECU.

5.CHECK DTC

1. Connect all the connectors.

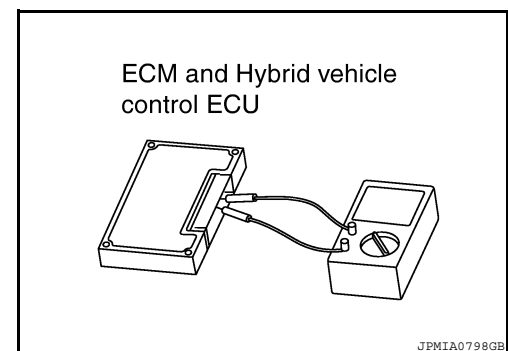

A
B
C
D
E
F
G
H
I
J
K
L
LAN
N
O
P

HEV SYSTEM CAN COMMUNICATION CIRCUIT

< COMPONENT DIAGNOSIS >

[HEV SYSTEM CAN]

2. Erase the DTCs of unit connected to HEV SYSTEM CAN and CAN.
3. Turn the ignition switch OFF.
4. Turn the ignition switch ON.
5. Perform All DTC Reading with CONSULT-III. Check if the symptoms listed below are reproduced.

Item (CONSULT-III)	Indication
The printed or saved All DTC Reading	<ul style="list-style-type: none">• The items of EPS and ABS are not displayed.• U0129, U0293, U1020 and U1022 are displayed as the ENGINE items.• U0100^{*1}, U0129^{*2} and U0131^{*3} are displayed as the HYBRID SYSTEM items.

- *1: Hybrid vehicle control ECU may display one or more DTCs (INF code) listed as follows; U0100 (211), U0100 (212), U0100 (530).
- *2: Hybrid vehicle control ECU may display one or more DTCs (INF code) listed as follows; U0129 (220), U0129 (222), U0129 (528).
- *3: Hybrid vehicle control ECU may display one or more DTCs (INF code) listed as follows; U0131 (433), U0131 (434).

Are the symptoms listed above reproduced?

YES >> GO TO 6.

NO >> Short circuit was detected in HEV SYSTEM CAN.

6. CHECK UNIT REPRODUCTION

Perform the reproduction test as per the following procedure for each unit.

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect one of the unit connectors of HEV SYSTEM CAN.

NOTE:

ECM and hybrid vehicle control ECU have a termination circuit. Check other units first.

4. Connect the battery cable to the negative terminal. Erase the DTCs of unit connected to HEV SYSTEM CAN and CAN.
5. Perform All DTC Reading with CONSULT-III. Check if the symptoms listed below are reproduced.

Item (CONSULT-III)	Indication
The printed or saved All DTC Reading	<ul style="list-style-type: none">• The items of EPS and ABS are not displayed.• U0129, U0293, U1020 and U1022 are displayed as the ENGINE items.• U0100^{*1}, U0129^{*2} and U0131^{*3} are displayed as the HYBRID SYSTEM items.

- *1: Hybrid vehicle control ECU may display one or more DTCs (INF code) listed as follows; U0100 (211), U0100 (212), U0100 (530).
- *2: Hybrid vehicle control ECU may display one or more DTCs (INF code) listed as follows; U0129 (220), U0129 (222), U0129 (528).
- *3: Hybrid vehicle control ECU may display one or more DTCs (INF code) listed as follows; U0131 (433), U0131 (434).

Are the symptoms listed above reproduced?

YES >> Connect the connector. Check other units as per the above procedure.

NO >> Replace the unit whose connector was disconnected.

MAIN LINE BETWEEN HVAC AND DLC CIRCUIT

< COMPONENT DIAGNOSIS >

[CAN SYSTEM (TYPE 1)]

COMPONENT DIAGNOSIS

MAIN LINE BETWEEN HVAC AND DLC CIRCUIT

Diagnosis Procedure

INFOID:000000005719740

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - Controller (auto amp.)
4. Check the continuity between the controller (auto amp.) harness connector and the data link connector.

Controller (auto amp.) harness connector		Data link connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M37	15	M22	6	Existed
	35		14	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the controller (auto amp.) and the data link connector.

NO >> Repair the main line between the controller (auto amp.) and the data link connector.

LAN

MAIN LINE BETWEEN DLC AND A-BAG CIRCUIT

< COMPONENT DIAGNOSIS >

[CAN SYSTEM (TYPE 1)]

MAIN LINE BETWEEN DLC AND A-BAG CIRCUIT

Diagnosis Procedure

INFOID:000000005719741

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the harness connectors M89 and E64.
4. Check the continuity between the data link connector and the harness connector.

Data link connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M22	6	M89	7	Existed
	14		8	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the data link connector and the air bag diagnosis sensor unit.

NO >> Repair the main line between the data link connector and the harness connector M89.

MAIN LINE BETWEEN A-BAG AND HV ECU CIRCUIT

< COMPONENT DIAGNOSIS >

[CAN SYSTEM (TYPE 1)]

MAIN LINE BETWEEN A-BAG AND HV ECU CIRCUIT

Diagnosis Procedure

INFOID:000000005719742

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector M89
 - Harness connector E64

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connectors M89 and E64.
2. Check the continuity between the data link connector and the harness connector.

Data link connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M22	6	M89	7	Existed
	14		8	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the main line between the data link connector and the harness connector M89.

3.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of hybrid vehicle control ECU.
2. Check the continuity between the harness connector and the hybrid vehicle control ECU harness connector.

Harness connector		Hybrid vehicle control ECU harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
E64	7	E66	171	Existed
	8		170	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the air bag diagnosis sensor unit and the hybrid vehicle control ECU.

NO >> Repair the main line between the harness connector E64 and the hybrid vehicle control ECU.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

ECM BRANCH LINE CIRCUIT

< COMPONENT DIAGNOSIS >

[CAN SYSTEM (TYPE 1)]

ECM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000005719743

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - ECM
 - Harness connector E47
 - Harness connector E48
 - Junction block
 - Harness connector E30
 - Harness connector M1

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of ECM.
2. Check the resistance between the ECM harness connector terminals.

ECM harness connector		Resistance (Ω)
Connector No.	Terminal No.	
E10	98	Approx. 108 – 132
	97	

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the ECM branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ECM. Refer to [EC-114, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the ECM. Refer to [EC-14, "ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Special Repair Requirement"](#).

YES (Past error)>>Error was detected in the ECM branch line.

NO >> Repair the power supply and the ground circuit.

HVAC BRANCH LINE CIRCUIT

< COMPONENT DIAGNOSIS >

[CAN SYSTEM (TYPE 1)]

HVAC BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000005719745

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the controller (auto amp.) for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of controller (auto amp.).
2. Check the resistance between the controller (auto amp.) harness connector terminals.

Controller (auto amp.) harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M37	15	35	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the controller (auto amp.) branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the controller (auto amp.). Refer to [HAC-87, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the controller (auto amp.). Refer to [VTL-8, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the controller (auto amp.) branch line.
NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

M&A BRANCH LINE CIRCUIT

< COMPONENT DIAGNOSIS >

[CAN SYSTEM (TYPE 1)]

M&A BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000005719746

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the combination meter for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of combination meter.
2. Check the resistance between the combination meter harness connector terminals.

Combination meter harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M24	21	22	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the combination meter branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the combination meter. Refer to [MWI-40, "COMBINATION METER : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the combination meter. Refer to [MWI-117, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the combination meter branch line.
NO >> Repair the power supply and the ground circuit.

BCM BRANCH LINE CIRCUIT

< COMPONENT DIAGNOSIS >

[CAN SYSTEM (TYPE 1)]

BCM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000005719747

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the BCM for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of BCM.
2. Check the resistance between the BCM harness connector terminals.

BCM harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M19	79	78	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the BCM branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the BCM. Refer to [BCS-41, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the BCM. Refer to [BCS-83, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the BCM branch line.
NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

DLC BRANCH LINE CIRCUIT

< COMPONENT DIAGNOSIS >

[CAN SYSTEM (TYPE 1)]

DLC BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000005719748

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the data link connector for damage, bend and loose connection (connector side and harness side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

Check the resistance between the data link connector terminals.

Data link connector			Resistance (Ω)
Connector No.	Terminal No.		
M22	6	14	Approx. 54 – 66

Is the measurement value within the specification?

- YES (Present error)>>Check CAN system type decision again.
YES (Past error)>>Error was detected in the data link connector branch line circuit.
NO >> Repair the data link connector branch line.

A-BAG BRANCH LINE CIRCUIT

< COMPONENT DIAGNOSIS >

[CAN SYSTEM (TYPE 1)]

A-BAG BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000005719749

WARNING:

- Before servicing, turn ignition switch OFF, disconnect battery negative terminal, and wait 3 minutes or more. (To discharge backup capacitor.)
- Never use unspecified tester or other measuring device.

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the air bag diagnosis sensor unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Replace the terminal and connector.

2.CHECK AIR BAG DIAGNOSIS SENSOR UNIT

Check the air bag diagnosis sensor unit. Refer to [SRC-3, "Work Flow"](#).

Is the inspection result normal?

- YES >> Replace the main harness.
NO >> Replace parts whose air bag system has a malfunction.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

HV ECU BRANCH LINE CIRCUIT

< COMPONENT DIAGNOSIS >

[CAN SYSTEM (TYPE 1)]

HV ECU BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000005719750

1.CHECK DTC

Check whether or not the DTC related to HEV SYSTEM CAN indicated on All DTC Reading by CONSULT-III.

NOTE:

For DTCs related to HEV SYSTEM CAN, refer to [LAN-63. "DTC Related to HEV SYSTEM CAN List"](#).

Is the DTC related to HEV SYSTEM CAN displayed?

YES >> Inspect HEV SYSTEM CAN. Refer to [LAN-57. "Trouble Diagnosis Flow Chart"](#).

NO >> GO TO 2.

2.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the hybrid vehicle control ECU for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the terminal and connector.

3.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of hybrid vehicle control ECU.
2. Check the resistance between the hybrid vehicle control ECU harness connector terminals.

Hybrid vehicle control ECU harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E66	171	170	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 4.

NO >> Repair the hybrid vehicle control ECU branch line.

4.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the hybrid vehicle control ECU. [HBC-577. "Wiring Diagram"](#).

Is the inspection result normal?

YES (Present error)>>Replace the hybrid vehicle control ECU. Refer to [HBC-641. "Exploded View"](#).

YES (Past error)>>Error was detected in the hybrid vehicle control ECU branch line.

NO >> Repair the power supply and the ground circuit.

IPDM-E BRANCH LINE CIRCUIT

< COMPONENT DIAGNOSIS >

[CAN SYSTEM (TYPE 1)]

IPDM-E BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000005719751

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the IPDM E/R for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of IPDM E/R.
2. Check the resistance between the IPDM E/R harness connector terminals.

IPDM E/R harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E17	40	39	Approx. 108 – 132

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the IPDM E/R branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the IPDM E/R. Refer to [PCS-21, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the IPDM E/R. Refer to [PCS-36, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the IPDM E/R branch line.
NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

CAN COMMUNICATION CIRCUIT

< COMPONENT DIAGNOSIS >

[CAN SYSTEM (TYPE 1)]

CAN COMMUNICATION CIRCUIT

Diagnosis Procedure

INFOID:000000005719752

1. CONNECTOR INSPECTION

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect all the unit connectors on CAN communication system.
4. Check terminals and connectors for damage, bend and loose connection.

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector terminals.

Data link connector		Continuity
Connector No.	Terminal No.	
M22	6 14	Not existed

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Check the harness and repair the root cause.

3. CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector and the ground.

Data link connector		Ground	Continuity
Connector No.	Terminal No.		
M22	6		Not existed
	14		Not existed

Is the inspection result normal?

- YES >> GO TO 4.
NO >> Check the harness and repair the root cause.

4. CHECK ECM AND IPDM E/R TERMINATION CIRCUIT

1. Remove the ECM and the IPDM E/R.
2. Check the resistance between the ECM terminals.

ECM		Resistance (Ω)
Terminal No.		
98	97	Approx. 108 – 132

3. Check the resistance between the IPDM E/R terminals.


IPDM E/R		Resistance (Ω)
Terminal No.		
40	39	Approx. 108 – 132

Is the measurement value within the specification?

- YES >> GO TO 5.
NO >> Replace the ECM and/or the IPDM E/R.

5. CHECK SYMPTOM

Connect all the connectors. Check if the symptoms described in the “Symptom (Results from interview with customer)” are reproduced.

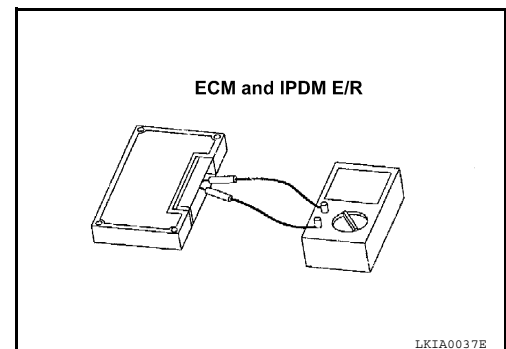

LKIA0037E

CAN COMMUNICATION CIRCUIT

< COMPONENT DIAGNOSIS >

[CAN SYSTEM (TYPE 1)]

Inspection result

Reproduced>>GO TO 6.

Non-reproduced>>Start the diagnosis again. Follow the trouble diagnosis procedure when past error is detected.

6.CHECK UNIT REPRODUCTION

Perform the reproduction test as per the following procedure for each unit.

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect one of the unit connectors of CAN communication system.

NOTE:

ECM and IPDM E/R have a termination circuit. Check other units first.

4. Connect the battery cable to the negative terminal. Check if the symptoms described in the “Symptom (Results from interview with customer)” are reproduced.

NOTE:

Although unit-related error symptoms occur, do not confuse them with other symptoms.

Inspection result

Reproduced>>Connect the connector. Check other units as per the above procedure.

Non-reproduced>>Replace the unit whose connector was disconnected.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

MAIN LINE BETWEEN HVAC AND DLC CIRCUIT

< COMPONENT DIAGNOSIS >

[CAN SYSTEM (TYPE 2)]

COMPONENT DIAGNOSIS

MAIN LINE BETWEEN HVAC AND DLC CIRCUIT

Diagnosis Procedure

INFOID:000000005719753

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the following harness connectors.
 - ECM
 - Controller (auto amp.)
4. Check the continuity between the controller (auto amp.) harness connector and the data link connector.

Controller (auto amp.) harness connector		Data link connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M37	15	M22	6	Existed
	35		14	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the controller (auto amp.) and the data link connector.

NO >> Repair the main line between the controller (auto amp.) and the data link connector.

MAIN LINE BETWEEN DLC AND A-BAG CIRCUIT

< COMPONENT DIAGNOSIS >

[CAN SYSTEM (TYPE 2)]

MAIN LINE BETWEEN DLC AND A-BAG CIRCUIT

Diagnosis Procedure

INFOID:000000005719754

1. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect the harness connectors M89 and E64.
4. Check the continuity between the data link connector and the harness connector.

Data link connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M22	6	M89	7	Existed
	14		8	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the data link connector and the air bag diagnosis sensor unit.

NO >> Repair the main line between the data link connector and the harness connector M89.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

N
O
P

MAIN LINE BETWEEN A-BAG AND HV ECU CIRCUIT

< COMPONENT DIAGNOSIS >

[CAN SYSTEM (TYPE 2)]

MAIN LINE BETWEEN A-BAG AND HV ECU CIRCUIT

Diagnosis Procedure

INFOID:000000005719755

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector M89
 - Harness connector E64

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connectors M89 and E64.
2. Check the continuity between the data link connector and the harness connector.

Data link connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M22	6	M89	7	Existed
	14		8	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the main line between the data link connector and the harness connector M89.

3. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of hybrid vehicle control ECU.
2. Check the continuity between the harness connector and the hybrid vehicle control ECU harness connector.

Harness connector		Hybrid vehicle control ECU harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
E64	7	E66	171	Existed
	8		170	Existed

Is the inspection result normal?

YES (Present error)>>Check CAN system type decision again.

YES (Past error)>>Error was detected in the main line between the air bag diagnosis sensor unit and the hybrid vehicle control ECU.

NO >> Repair the main line between the harness connector E64 and the hybrid vehicle control ECU.

ECM BRANCH LINE CIRCUIT

< COMPONENT DIAGNOSIS >

[CAN SYSTEM (TYPE 2)]

ECM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000005719756

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - ECM
 - Harness connector E47
 - Harness connector E48
 - Junction block
 - Harness connector E30
 - Harness connector M1

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of ECM.
2. Check the resistance between the ECM harness connector terminals.

ECM harness connector		Resistance (Ω)
Connector No.	Terminal No.	
E10	98	Approx. 108 – 132
	97	

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the ECM branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ECM. Refer to [EC-114, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the ECM. Refer to [EC-14, "ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Special Repair Requirement"](#).

YES (Past error)>>Error was detected in the ECM branch line.

NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

AV BRANCH LINE CIRCUIT

< COMPONENT DIAGNOSIS >

[CAN SYSTEM (TYPE 2)]

AV BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000005719757

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the AV control unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of AV control unit.
2. Check the resistance between the AV control unit harness connector terminals.

AV control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M102	62	46	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the AV control unit branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the AV control unit. Refer to [AV-226, "AV CONTROL UNIT : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the AV control unit. Refer to [AV-293, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the AV control unit branch line.
NO >> Repair the power supply and the ground circuit.

HVAC BRANCH LINE CIRCUIT

< COMPONENT DIAGNOSIS >

[CAN SYSTEM (TYPE 2)]

HVAC BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000005719758

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the controller (auto amp.) for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of controller (auto amp.).
2. Check the resistance between the controller (auto amp.) harness connector terminals.

Controller (auto amp.) harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M37	15	35	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the controller (auto amp.) branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the controller (auto amp.). Refer to [HAC-87, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the controller (auto amp.). Refer to [VTL-8, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the controller (auto amp.) branch line.
NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

M&A BRANCH LINE CIRCUIT

< COMPONENT DIAGNOSIS >

[CAN SYSTEM (TYPE 2)]

M&A BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000005719759

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the combination meter for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of combination meter.
2. Check the resistance between the combination meter harness connector terminals.

Combination meter harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M24	21	22	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the combination meter branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the combination meter. Refer to [MWI-40, "COMBINATION METER : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the combination meter. Refer to [MWI-117, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the combination meter branch line.
NO >> Repair the power supply and the ground circuit.

BCM BRANCH LINE CIRCUIT

< COMPONENT DIAGNOSIS >

[CAN SYSTEM (TYPE 2)]

BCM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000005719760

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the BCM for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of BCM.
2. Check the resistance between the BCM harness connector terminals.

BCM harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M19	79	78	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the BCM branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the BCM. Refer to [BCS-41, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the BCM. Refer to [BCS-83, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the BCM branch line.
NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

N
O
P

DLC BRANCH LINE CIRCUIT

< COMPONENT DIAGNOSIS >

[CAN SYSTEM (TYPE 2)]

DLC BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000005719761

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the data link connector for damage, bend and loose connection (connector side and harness side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

Check the resistance between the data link connector terminals.

Data link connector			Resistance (Ω)
Connector No.	Terminal No.		
M22	6	14	Approx. 54 – 66

Is the measurement value within the specification?

- YES (Present error)>>Check CAN system type decision again.
YES (Past error)>>Error was detected in the data link connector branch line circuit.
NO >> Repair the data link connector branch line.

A-BAG BRANCH LINE CIRCUIT

< COMPONENT DIAGNOSIS >

[CAN SYSTEM (TYPE 2)]

A-BAG BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000005719762

WARNING:

- Before servicing, turn ignition switch OFF, disconnect battery negative terminal, and wait 3 minutes or more. (To discharge backup capacitor.)
- Never use unspecified tester or other measuring device.

1.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the air bag diagnosis sensor unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Replace the terminal and connector.

2.CHECK AIR BAG DIAGNOSIS SENSOR UNIT

Check the air bag diagnosis sensor unit. Refer to [SRC-3, "Work Flow"](#).

Is the inspection result normal?

- YES >> Replace the main harness.
NO >> Replace parts whose air bag system has a malfunction.

A
B
C
D
E
F
G
H
I
J
K
L
LAN
N
O
P

HV ECU BRANCH LINE CIRCUIT

< COMPONENT DIAGNOSIS >

[CAN SYSTEM (TYPE 2)]

HV ECU BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000005719763

1.CHECK DTC

Check whether or not the DTC related to HEV SYSTEM CAN indicated on All DTC Reading by CONSULT-III.

NOTE:

For DTCs related to HEV SYSTEM CAN, refer to [LAN-63. "DTC Related to HEV SYSTEM CAN List"](#).

Is the DTC related to HEV SYSTEM CAN displayed?

YES >> Inspect HEV SYSTEM CAN. Refer to [LAN-57. "Trouble Diagnosis Flow Chart"](#).

NO >> GO TO 2.

2.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the hybrid vehicle control ECU for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the terminal and connector.

3.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of hybrid vehicle control ECU.
2. Check the resistance between the hybrid vehicle control ECU harness connector terminals.

Hybrid vehicle control ECU harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E66	171	170	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 4.

NO >> Repair the hybrid vehicle control ECU branch line.

4.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the hybrid vehicle control ECU. [HBC-577. "Wiring Diagram"](#).

Is the inspection result normal?

YES (Present error)>>Replace the hybrid vehicle control ECU. Refer to [HBC-641. "Exploded View"](#).

YES (Past error)>>Error was detected in the hybrid vehicle control ECU branch line.

NO >> Repair the power supply and the ground circuit.

IPDM-E BRANCH LINE CIRCUIT

< COMPONENT DIAGNOSIS >

[CAN SYSTEM (TYPE 2)]

IPDM-E BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000005719764

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Check the terminals and connectors of the IPDM E/R for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of IPDM E/R.
2. Check the resistance between the IPDM E/R harness connector terminals.

IPDM E/R harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E17	40	39	Approx. 108 – 132

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the IPDM E/R branch line.

3. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the IPDM E/R. Refer to [PCS-21, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the IPDM E/R. Refer to [PCS-36, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the IPDM E/R branch line.
NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L

LAN

CAN COMMUNICATION CIRCUIT

< COMPONENT DIAGNOSIS >

[CAN SYSTEM (TYPE 2)]

CAN COMMUNICATION CIRCUIT

Diagnosis Procedure

INFOID:000000005719765

1. CONNECTOR INSPECTION

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect all the unit connectors on CAN communication system.
4. Check terminals and connectors for damage, bend and loose connection.

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2. CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector terminals.

Data link connector			Continuity
Connector No.	Terminal No.		
M22	6	14	Not existed

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Check the harness and repair the root cause.

3. CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector and the ground.

Data link connector		Ground	Continuity
Connector No.	Terminal No.		
M22	6		Not existed
	14		Not existed

Is the inspection result normal?

- YES >> GO TO 4.
NO >> Check the harness and repair the root cause.

4. CHECK ECM AND IPDM E/R TERMINATION CIRCUIT

1. Remove the ECM and the IPDM E/R.
2. Check the resistance between the ECM terminals.

ECM		Resistance (Ω)
Terminal No.		
98	97	Approx. 108 – 132

3. Check the resistance between the IPDM E/R terminals.


IPDM E/R		Resistance (Ω)
Terminal No.		
40	39	Approx. 108 – 132

Is the measurement value within the specification?

- YES >> GO TO 5.
NO >> Replace the ECM and/or the IPDM E/R.

5. CHECK SYMPTOM

Connect all the connectors. Check if the symptoms described in the "Symptom (Results from interview with customer)" are reproduced.

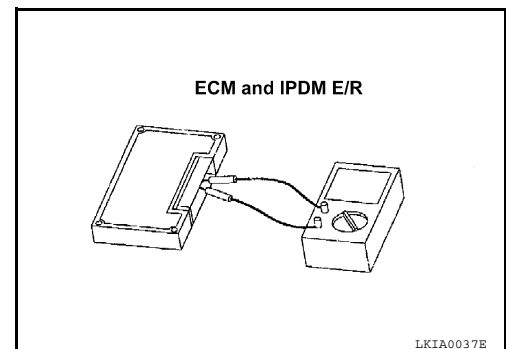

CAN COMMUNICATION CIRCUIT

< COMPONENT DIAGNOSIS >

[CAN SYSTEM (TYPE 2)]

Inspection result

Reproduced>>GO TO 6.

Non-reproduced>>Start the diagnosis again. Follow the trouble diagnosis procedure when past error is detected.

6.CHECK UNIT REPRODUCTION

Perform the reproduction test as per the following procedure for each unit.

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect one of the unit connectors of CAN communication system.

NOTE:

ECM and IPDM E/R have a termination circuit. Check other units first.

4. Connect the battery cable to the negative terminal. Check if the symptoms described in the “Symptom (Results from interview with customer)” are reproduced.

NOTE:

Although unit-related error symptoms occur, do not confuse them with other symptoms.

Inspection result

Reproduced>>Connect the connector. Check other units as per the above procedure.

Non-reproduced>>Replace the unit whose connector was disconnected.

A

B

C

D

E

F

G

H

I

J

K

L

LAN

N

O

P