

SECTION FAX

FRONT AXLE

A
B
C

FAX

CONTENTS

E

SYMPTOM DIAGNOSIS	2	REMOVAL AND INSTALLATION	8	F
NOISE, VIBRATION, AND HARSHNESS (NVH) TROUBLESHOOTING	2	FRONT WHEEL HUB AND KNUCKLE	8	G
NVH Troubleshooting Chart	2	Exploded View	8	
PRECAUTION	3	Removal and Installation	8	
PRECAUTIONS	3	FRONT DRIVE SHAFT	11	H
Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	3	Exploded View (Left Side)	11	
Necessary for Steering Wheel Rotation After Battery Disconnect	3	Removal and Installation (Left Side)	11	
General Precautions	4	Exploded View (Right Side)	12	I
PREPARATION	5	Removal and Installation (Right Side)	13	
PREPARATION	5	UNIT DISASSEMBLY AND ASSEMBLY ...	16	J
Special Service Tool	5	FRONT DRIVE SHAFT	16	
Commercial Service Tool	5	Disassembly and Assembly (Left Side)	16	
PERIODIC MAINTENANCE	6	Disassembly and Assembly (Right Side)	21	K
FRONT WHEEL HUB	6	SERVICE DATA AND SPECIFICATIONS (SDS)	28	L
Inspection	6	SERVICE DATA AND SPECIFICATIONS (SDS)	28	
FRONT DRIVE SHAFT	7	Wheel Bearing	28	M
Inspection	7	Drive Shaft	28	
		Dynamic Damper	29	N
		Boot Bands	29	

N

O

P

NOISE, VIBRATION, AND HARSHNESS (NVH) TROUBLESHOOTING

< SYMPTOM DIAGNOSIS >

SYMPTOM DIAGNOSIS

NOISE, VIBRATION, AND HARSHNESS (NVH) TROUBLESHOOTING

NVH Troubleshooting Chart

INFOID:000000006392632

Use chart below to help you find the cause of the symptom. If necessary, repair or replace these parts.

Reference page			—	FAX-16, FAX-21	FAX-7	FAX-11, FAX-13	—	FAX-6	FSU-4, "NVH Troubleshooting Chart"	Refer to FRONT AXLE in this chart.	WT-59, "NVH Troubleshooting Chart"	WT-59, "NVH Troubleshooting Chart"	Refer to DRIVE SHAFT in this chart.	BR-6, "NVH Troubleshooting Chart"	ST-5, "NVH Troubleshooting Chart"
Possible cause and SUSPECTED PARTS			Excessive joint angle	Joint sliding resistance	Imbalance	Improper installation, looseness	Parts interference	Wheel bearing damage	SUSPENSION	FRONT AXLE	TIRES	ROAD WHEEL	DRIVE SHAFT	BRAKES	STEERING
Symptom	DRIVE SHAFT	Noise	x	x					x	x	x	x		x	x
		Shake	x		x				x	x	x	x		x	x
	FRONT AXLE	Noise				x	x		x		x	x	x	x	x
		Shake				x	x		x		x	x	x	x	x
		Vibration				x	x		x		x		x		x
		Shimmy				x	x		x		x	x		x	x
		Shudder				x			x		x	x		x	x
		Poor quality ride or handling				x	x	x	x		x	x			

x: Applicable

PRECAUTIONS

< PRECAUTION >

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000006392633

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SR and SB section of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SR section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

- When working near the Airbag Diagnosis Sensor Unit or other Airbag System sensors with the Ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the Ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

Necessary for Steering Wheel Rotation After Battery Disconnect

INFOID:000000006392634

NOTE:

- Before removing and installing any control units, first turn the push-button ignition switch to the LOCK position, then disconnect both battery cables.
- After finishing work, confirm that all control unit connectors are connected properly, then re-connect both battery cables.
- Always use CONSULT to perform self-diagnosis as a part of each function inspection after finishing work. If a DTC is detected, perform trouble diagnosis according to self-diagnosis results.

This vehicle is equipped with a push-button ignition switch and a steering lock unit.

If the battery is disconnected or discharged, the steering wheel will lock and cannot be turned.

If turning the steering wheel is required with the battery disconnected or discharged, follow the procedure below before starting the repair operation.

OPERATION PROCEDURE

1. Connect both battery cables.

NOTE:

Supply power using jumper cables if battery is discharged.

2. Carry the Intelligent Key or insert it to the key slot and turn the push-button ignition switch to ACC position. (At this time, the steering lock will be released.)
3. Disconnect both battery cables. The steering lock will remain released with both battery cables disconnected and the steering wheel can be turned.
4. Perform the necessary repair operation.
5. When the repair work is completed, re-connect both battery cables. With the brake pedal released, turn the push-button ignition switch from ACC position to ON position, then to LOCK position. (The steering wheel will lock when the push-button ignition switch is turned to LOCK position.)

PRECAUTIONS

< PRECAUTION >

6. Perform self-diagnosis check of all control units using CONSULT.

General Precautions

INFOID:000000006392635

Observe the following precautions when disassembling and assembling drive shaft.

- Joint sub-assembly does not disassemble because it is non-overhaul parts.
- Perform work in a location which is as dust-free as possible.
- Before disassembling and assembling, clean the outside of parts.
- Prevention of the entry of foreign objects must be taken into account during disassembly of the service location.
- Disassembled parts must be carefully reassembled in the correct order. If work is interrupted, a clean cover must be placed over parts.
- Paper shop cloths must be used. Fabric shop cloths must not be used because of the danger of lint adhering to parts.
- Disassembled parts (except for rubber parts) should be cleaned with kerosene which shall be removed by blowing with air or wiping with paper shop cloths.

PREPARATION

< PREPARATION >





PREPARATION

PREPARATION

Special Service Tool


INFOID:0000000006392636

The actual shapes of Kent-Moore tools may differ from those of special service tools illustrated here.

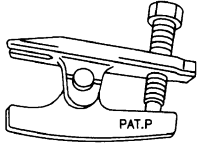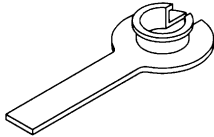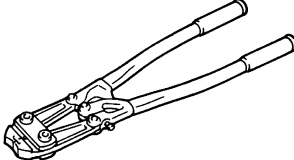Tool number (Kent-Moore No.) Tool name	Description
HT72520000 (J-25730-A) Ball joint remover	Removing outer tie-rod
 PAT.P NT146	
KV38106700 (J-34296) KV38106800 (J-34297) Differential side oil seal protector	Installing drive shaft LH: KV38106700 (J-34296) RH: KV38106800 (J-34297)
 NT147	
KV40107300 (—) Boot Band crimping tool	Installing boot bands
 ZZA1229D	
KV40107500 (—) Drive shaft attachment	Removing drive shaft
 ZZA1230D	

Commercial Service Tool

INFOID:0000000006392637

Tool name	Description
Power tool	Loosening nuts, screws and bolts
 PIIB1407E	

FRONT WHEEL HUB

< PERIODIC MAINTENANCE >

PERIODIC MAINTENANCE

FRONT WHEEL HUB

Inspection

INFOID:000000006392638

- Move wheel hub and bearing assembly in the axial direction by hand. Make sure there is no looseness of wheel bearing.

Axial end play : 0.05 mm (0.002 in) or less

- Rotate wheel hub and make sure that is no unusual noise or other irregular conditions. If there is any of irregular conditions, replace wheel hub and bearing assembly

FRONT DRIVE SHAFT

< PERIODIC MAINTENANCE >

FRONT DRIVE SHAFT

Inspection

INFOID:000000006392639

- Check drive shaft mounting point and joint for looseness and other damage.
- Check boot for cracks and other damage.

CAUTION:

Replace entire drive shaft assembly when noise or vibration occur from drive shaft.

A

B

C

FAX

E

F

G

H

I

J

K

L

M

N

O

P

FRONT WHEEL HUB AND KNUCKLE


< REMOVAL AND INSTALLATION >

REMOVAL AND INSTALLATION

FRONT WHEEL HUB AND KNUCKLE

Exploded View

INFOID:000000006392640

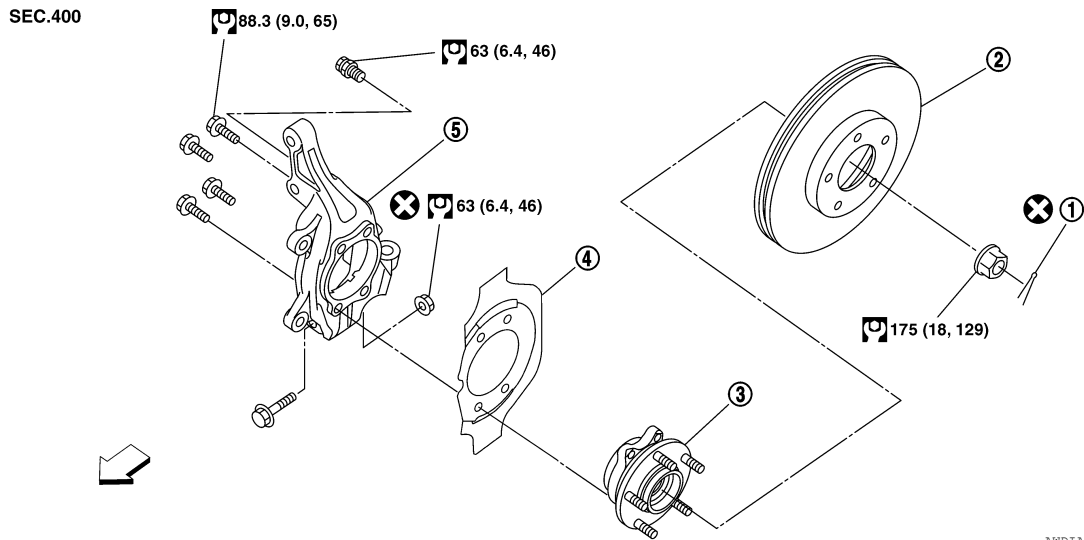


- | | | |
|-----------------|---------------------|-----------------------------------|
| 1. Cotter pin | 2. Disc rotor | 3. Wheel hub and bearing assembly |
| 4. Splash guard | 5. Steering knuckle | ⇐ Front |

Removal and Installation

INFOID:000000006392641

REMOVAL

1. Remove wheel and tire using power tool. Refer to [WT-65. "Adjustment"](#).
2. Remove brake torque member and caliper using power tool, leaving brake caliper hydraulic lines connected. Reposition brake caliper aside with wire. Refer to [BR-31. "BRAKE CALIPER ASSEMBLY : Removal and Installation"](#).
CAUTION:
 - Do not twist or stretch brake hose.
 - Do not drop the pads or shims.**NOTE:**
 - The brake hose does not have to be disconnected from the caliper.
 - Suspend the brake torque member, caliper and pads as an assembly using wire.
 - Do not depress the brake pedal, or the caliper piston will pop out.
3. Put alignment marks on disc rotor and wheel hub and bearing assembly, then remove disc rotor.

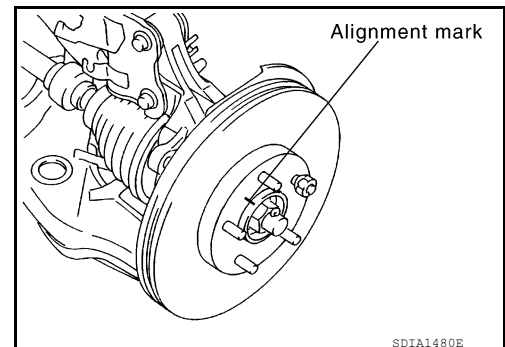

4. Remove wheel sensor from steering knuckle. Refer to [BRC-64. "Removal and Installation" \(ABS\)](#), [BRC-136. "Removal and Installation" \(TCS/ABS\)](#), [BRC-253. "Removal and Installation" \(VDC/TCS/ABS\)](#).
CAUTION:
Do not pull on wheel sensor harness.

FRONT WHEEL HUB AND KNUCKLE


< REMOVAL AND INSTALLATION >

5. Remove cotter pin, then remove lock nut from drive shaft using power tool.
6. Remove steering outer tie-rod cotter pin at steering knuckle, then loosen nut using power tool. Refer to [ST-17, "Exploded View"](#).
7. Disconnect the outer tie-rod end from steering knuckle using Tool. Be careful not to damage ball joint boot.

CAUTION:

To prevent damage to threads and to prevent Tool from coming off suddenly, temporarily tighten mounting nut.

Tool number : HT72520000 (J-25730-A)

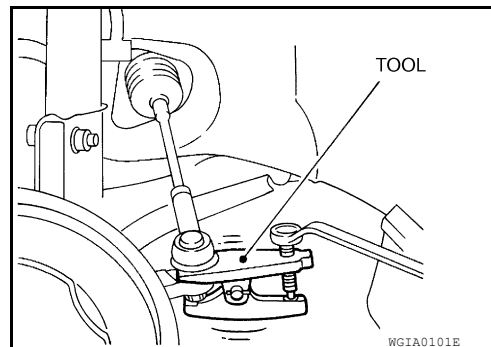

8. Remove transverse link and steering knuckle pinch bolt and nut using power tool. Refer to [FAX-8, "Exploded View"](#).

9. Using a piece of wood and a hammer, tap on the lock nut to disengage drive shaft from the wheel.



CAUTION:

- Never place drive shaft joint to an extreme angle. Also be careful not to overextend slide joint.
- Never allow drive shaft to hang down without support.

NOTE:

Use a suitable puller if drive shaft can not be separated from wheel hub and bearing assembly.

10. Remove wheel hub and bearing assembly bolts using power tool.
11. Remove splash guard and wheel hub and bearing assembly from steering knuckle.
12. Remove the lower strut bolts and nuts using power tool. Refer to [FSU-13, "Exploded View"](#).
13. Remove steering knuckle from vehicle.

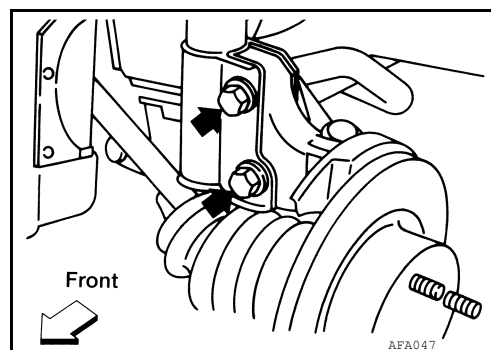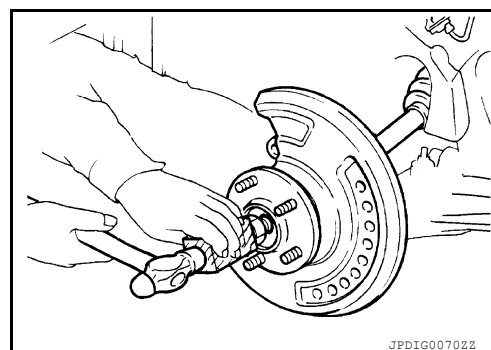

INSPECTION AFTER REMOVAL

Check for deformity, cracks and damage on each part, replace if necessary.

Ball Joint Inspection

- Check for boot breakage, axial looseness, and torque of transverse link ball joint and repair as necessary.

INSTALLATION

Installation is in the reverse order of removal.

CAUTION:


Do not reuse non-reusable parts.

- Tighten to specifications. Refer to [FSU-13, "Exploded View"](#), [ST-17, "Exploded View"](#).
- When installing wheel hub and bearing assembly to steering knuckle, align cutout in sensor rotor cover with wheel sensor mounting hole in steering knuckle.

FRONT WHEEL HUB AND KNUCKLE

< REMOVAL AND INSTALLATION >

- When installing disc rotor on wheel hub and bearing assembly, align the marks.
(When not using the alignment mark, refer to [BR-7, "DISC ROTOR : Inspection."](#))

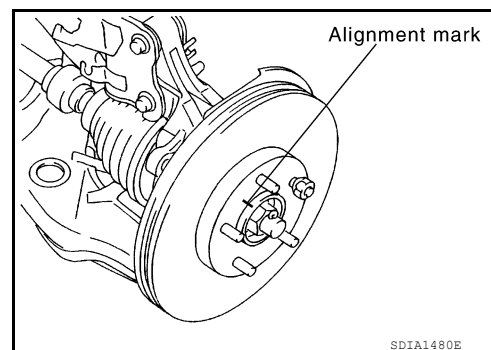

FRONT DRIVE SHAFT


< REMOVAL AND INSTALLATION >

FRONT DRIVE SHAFT

Exploded View (Left Side)

INFOID:000000006904875

SEC. 391

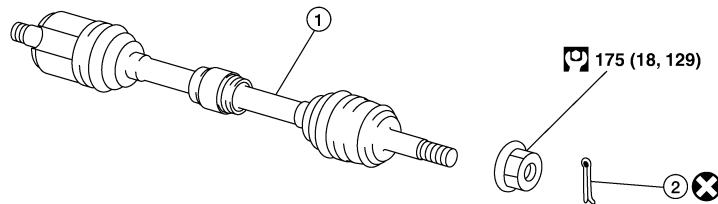

ANDIA0573GB

1. Drive shaft

2. Cotter pin

Removal and Installation (Left Side)

INFOID:000000006392643

REMOVAL

1. Remove wheel and tire using power tool. Refer to [WT-65, "Adjustment"](#).
2. Remove wheel sensor from steering knuckle. Refer to [BRC-64, "Removal and Installation" \(ABS\)](#), [BRC-136, "Removal and Installation" \(TCS/ABS\)](#), [BRC-253, "Removal and Installation" \(VDC/TCS/ABS\)](#).
3. Remove cotter pin. Then remove lock nut from drive shaft.
4. Remove brake torque member and caliper using power tool, leaving hydraulic brake line attached. Hang caliper aside using wire. Refer to [BR-30, "BRAKE CALIPER ASSEMBLY : Exploded View"](#).


CAUTION:

- Do not twist or stretch brake hose.
- Do not drop the pads or shims.

NOTE:

- The brake hose does not need to be disconnected from the brake caliper.
- Suspend the brake torque member, caliper and pads as an assembly.
- Do not depress the brake pedal, or the caliper piston will pop out.

5. Remove front strut to steering knuckle bolts and nuts, then separate steering knuckle front strut. Refer to [FSU-13, "Exploded View"](#).

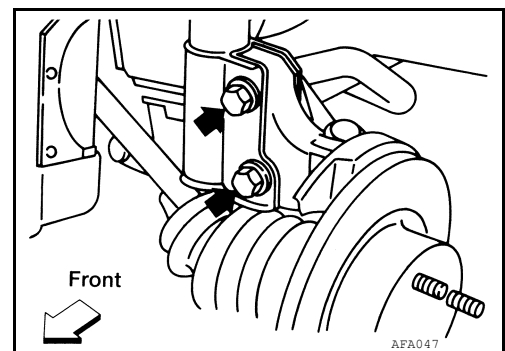


6. Using a piece of wood and a hammer, tap on the lock nut to disengage drive shaft from wheel hub.

CAUTION:

- Never place drive shaft joint to an extreme angle. Also be careful not to overextend slide joint.
- Never allow drive shaft to hang down without support.

NOTE:

Use a suitable puller if drive shaft cannot be separated from wheel hub and bearing assembly.

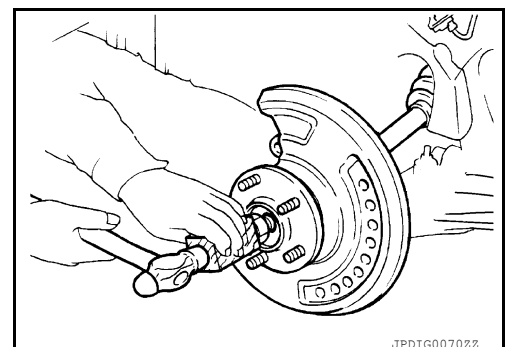


FRONT DRIVE SHAFT

< REMOVAL AND INSTALLATION >


7. Remove the left side drive shaft from the transaxle.
 - Remove drive shaft from transaxle using Tool and drive shaft puller or suitable tool.
 - Set Tool and a drive shaft puller or suitable tool between drive shaft (slide joint side) and transaxle as shown, then remove drive shaft.

Tool number : KV40107500 (—)

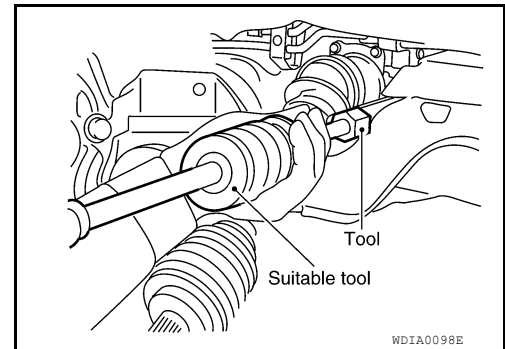

INSPECTION AFTER REMOVAL

- Move joint up/down, left/right, and in axial direction. Check for any rough movement or significant looseness.
- Check boot for cracks or other damage, and for grease leakage.
- If damaged, disassemble drive shaft to verify damage, and repair or replace as necessary.

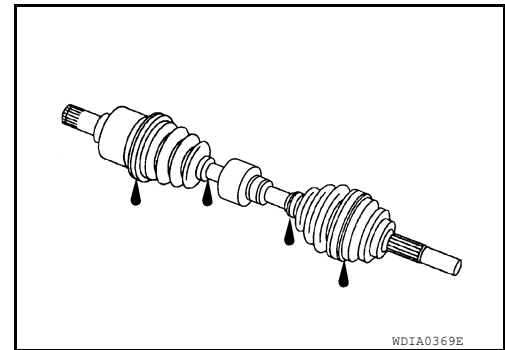

INSTALLATION

Installation is in the reverse order of removal. Note the following:

CAUTION:

Do not reuse non-reusable parts.

- Tighten to specifications. Refer to [FAX-11, "Exploded View \(Left Side\)"](#).
- In order to prevent damage to differential side oil seal, place Tool (A) onto oil seal before inserting drive shaft as shown. Slide drive shaft into slide joint and tap with a hammer to install securely.


Tool number : KV38106700 (J-34296)

- Install new circlip on drive shaft in the circular clip groove on transaxle side. Refer to [FAX-16, "Disassembly and Assembly \(Left Side\)"](#).

CAUTION:

Make sure the new circlip on the drive shaft is securely fastened.

- After its insertion, try to pull the flange out of the slide joint by hand. If it pulls out, the circlip is not properly meshed with the transaxle side gear.
- Check wheel alignment. Refer to [FSU-7, "Inspection and Adjustment"](#).
- Perform neutral position steering angle adjustment, if equipped with VDC. Refer to [BRC-143, "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Special Repair Requirement"](#).

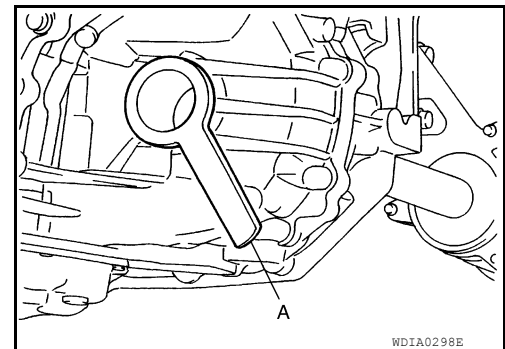



Exploded View (Right Side)

INFOID:000000006904876

FRONT DRIVE SHAFT

< REMOVAL AND INSTALLATION >

SEC.391

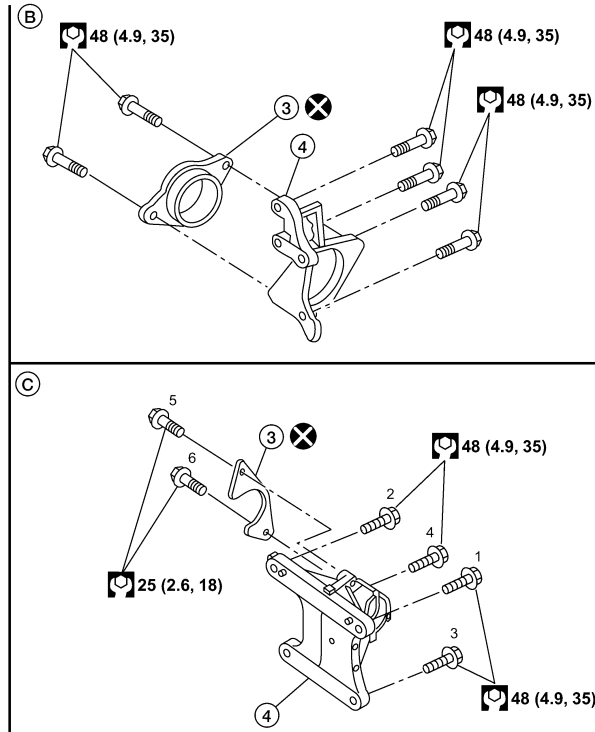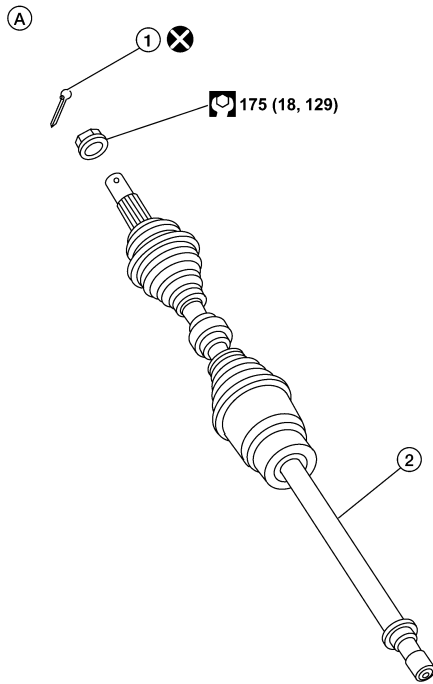

- | | | |
|----------------------------|-------------------------|----------------------|
| 1. Cotter pin | 2. Drive shaft | 3. Retaining bracket |
| 4. Support bearing bracket | A. Front RH drive shaft | B. VQ35DE engine |
| C. QR25DE engine | | |

Removal and Installation (Right Side)

INFOID:000000006392644

REMOVAL

1. Remove wheel and tire using power tool. Refer to [WT-65, "Adjustment"](#).
2. Remove wheel sensor from steering knuckle. Refer to [BRC-64, "Removal and Installation"](#) (ABS), [BRC-136, "Removal and Installation"](#) (TCS/ABS), [BRC-253, "Removal and Installation"](#) (VDC/TCS/ABS).
3. Remove cotter pin. Then remove lock nut from drive shaft using power tool.
4. Remove brake torque member and caliper using power tool, leaving hydraulic brake line attached. Hang caliper aside using wire. Refer to [BR-30, "BRAKE CALIPER ASSEMBLY : Exploded View"](#).

CAUTION:

- Do not twist or stretch brake hose.
- Do not drop the pads or shims.

NOTE:

- The brake hose does not need to be disconnected from the caliper.
 - Suspend the brake torque member, caliper and pads as an assembly using wire.
 - Do not depress the brake pedal, or the caliper piston will pop out.
5. Remove front strut to steering knuckle bolts and nuts, then separate steering knuckle front strut. Refer to [FAX-8, "Exploded View"](#).

FRONT DRIVE SHAFT

< REMOVAL AND INSTALLATION >


6. Using a piece of wood and a hammer, tap on the lock nut to disengage drive shaft from wheel hub. Remove drive shaft from wheel hub and bearing assembly, using a puller or suitable tool.

CAUTION:

- **Never place drive shaft joint at an extreme angle when removing drive shaft. Also be careful not to overextend slide joint.**

NOTE:

Use a suitable puller if drive shaft cannot be separated from wheel hub and bearing assembly.

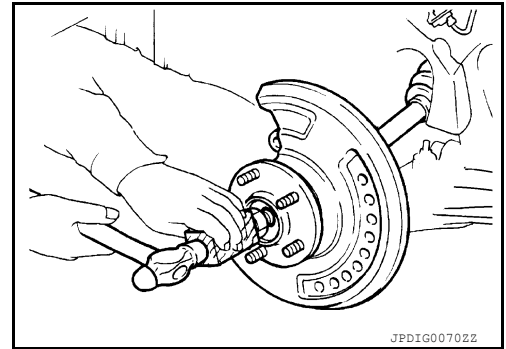

7. Remove the retaining bracket to support bearing bracket bolts.
8. Remove RH drive shaft from transaxle assembly.


NOTE:

Use Tool (A) and suitable tool (B) while inserting tip of tool between housing and transaxle assembly.

CAUTION:


- **Never place drive shaft joint at an extreme angle when removing drive shaft. Also be careful not to overextend slide joint.**

Tool number (A) : KV40107500 (—)

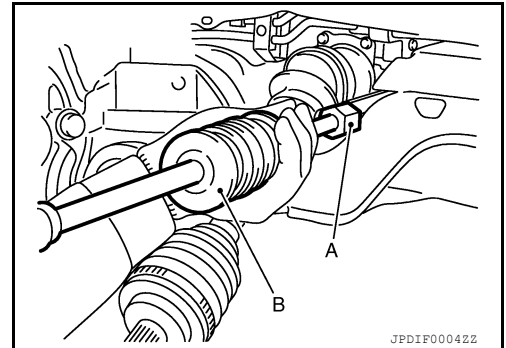

INSPECTION AFTER REMOVAL

- Move joint up/down, left/right, and in axial direction. Check for any rough movement or significant looseness.
- Check boot for cracks or other damage, and for grease leakage.
- If damaged, disassemble drive shaft to verify damage, and repair or replace as necessary.

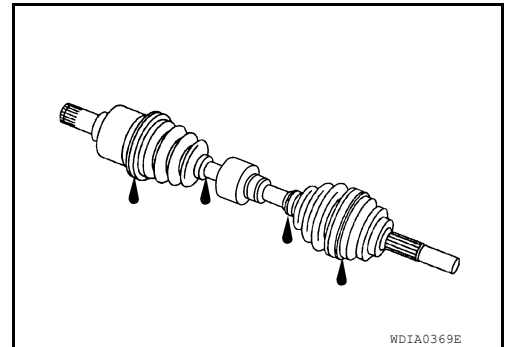

INSTALLATION

Installation is in the reverse order of removal. Note the following:

CAUTION:

Do not reuse non-reusable parts.

- Tighten retaining bracket bolts and support bearing bracket bolts to specifications. Refer to [FAX-12, "Exploded View \(Right Side\)"](#).
- For QR25DE models, install the retaining bracket with the notch facing up and follow the bolt tightening order.
- In order to prevent damage to differential side oil seal, place Tool (A) onto oil seal before inserting drive shaft as shown. Slide drive shaft into slide joint and tap with a hammer to install securely.


Tool number : KV38106800 (J-34297)

- Install new circlip on drive shaft in the circular clip groove on transaxle side. Refer to [FAX-16, "Disassembly and Assembly \(Left Side\)"](#).

CAUTION:

Make sure the new circlip on the drive shaft is securely fastened.

- After its insertion, try to pull the flange out of the slide joint by hand. If it pulls out, the circlip is not properly meshed with the transaxle side gear.

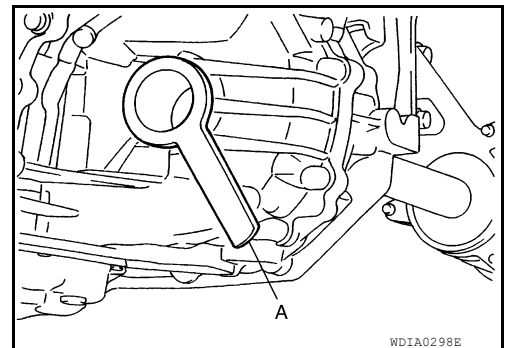

FRONT DRIVE SHAFT

< REMOVAL AND INSTALLATION >

- Check wheel alignment. Refer to [FSU-7, "Inspection and Adjustment"](#).
- Perform neutral position steering angle adjustment, if equipped with VDC. Refer to [BRC-143, "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Special Repair Requirement"](#).

A

B

C

FAX

E

F

G

H

I

J

K

L

M

N

O

P

FRONT DRIVE SHAFT


< UNIT DISASSEMBLY AND ASSEMBLY >

UNIT DISASSEMBLY AND ASSEMBLY

FRONT DRIVE SHAFT

Disassembly and Assembly (Left Side)

INFOID:000000006392646

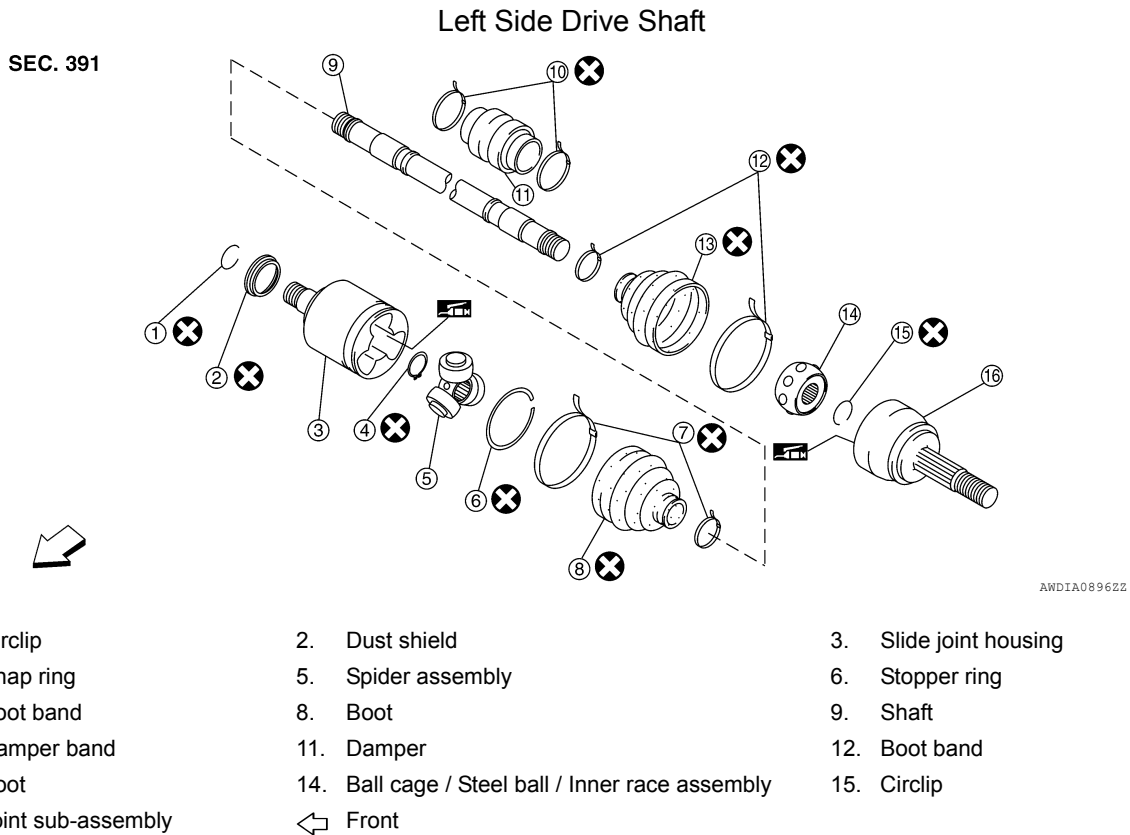

DISASSEMBLY


Transaxle Side

1. Mount front drive shaft in a vise.

CAUTION:

When mounting shaft in a vise, always use copper or aluminum plates between vise and shaft.


2. Remove boot bands and slide the boot back.
3. Remove circlip and dust shield from slide joint housing.
4. Put matching marks on slide joint housing and shaft before separating joint assembly.
5. Remove stopper ring with a suitable tool, then pull out slide joint housing.

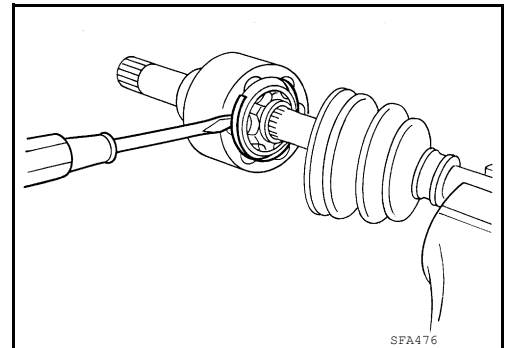


FRONT DRIVE SHAFT

< UNIT DISASSEMBLY AND ASSEMBLY >

- Put matching marks on spider assembly and shaft.

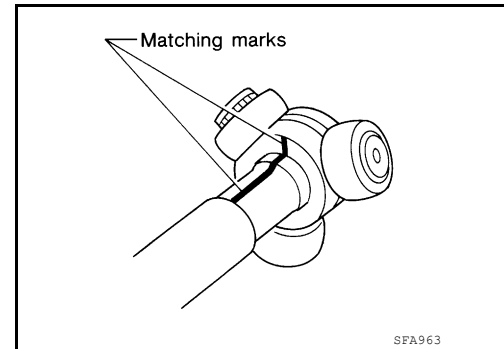

- Remove snap ring using a suitable tool, then remove spider assembly from shaft.
- Remove boot from shaft.
- Clean the old grease off of the slide joint assembly.

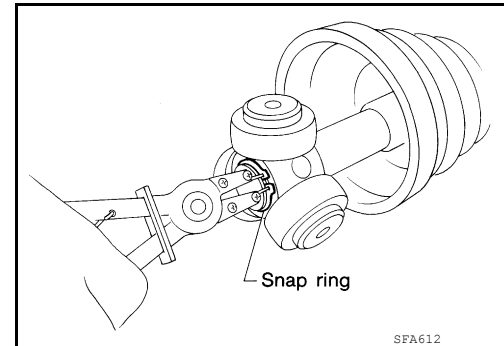

Wheel Side

- Mount the front drive shaft in a vise.


CAUTION:

When mounting shaft in a vise, always use copper or aluminum plates between vise and shaft.

- Remove boot bands and slide the boot back.
- Screw a sliding hammer or suitable tool 30 mm (1.18 in) or more into threaded part of joint sub-assembly. Pull joint sub-assembly out of shaft.

CAUTION:

- Align sliding hammer or suitable tool and drive shaft then remove joint sub-assembly by pulling directly.
- If joint sub-assembly cannot be removed after five or more unsuccessful attempts, replace the entire drive shaft assembly.

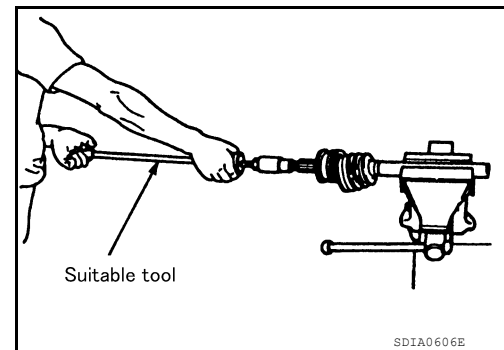

- Remove boot from shaft.
- Remove circlip from shaft.
- While rotating ball cage, clean the old grease off of the joint sub-assembly.

Damper

- Remove damper bands, then remove damper from shaft.

INSPECTION AFTER DISASSEMBLY

Shaft

- Replace shaft if there is bending, cracking, or other damage.

Joint Sub-Assembly

- Make sure there is no rough rotation or unusual axial looseness.
- Make sure there is no foreign material inside joint sub-assembly.
- Check joint sub-assembly for compression scars, cracks or fractures.

CAUTION:

If there are any irregular conditions of joint sub-assembly components, replace the entire joint sub-assembly.

FRONT DRIVE SHAFT

< UNIT DISASSEMBLY AND ASSEMBLY >

Slide Joint Housing

- Make sure there are no compression scars, cracks or fractures or unusual wear of ball rolling surface.
- Make sure there is no damage to shaft screws.
- Make sure there is no deformation of boot installation parts.

Ball Cage

- Make sure there are no compression scars, cracks, fractures of sliding surface.

Steel Ball

- Make sure there are no compression scars, cracks, fractures or unusual wear.

Inner Race

- Check ball sliding surface for compression scars, cracks or fractures.
- Make sure there is no damage to serrated part.

CAUTION:

If there are any irregular conditions in the component, replace with a new set of joint sub-assembly, ball cage, steel ball and inner race.

Damper

- Check damper for cracks or wear. Install damper with new damper bands.

ASSEMBLY


Transaxle Side

1. Install new boot and new small boot band on shaft.

CAUTION:


- **Cover drive shaft serration with tape to prevent damage to boot during installation.**

2. Remove protective tape wound around serrated part of shaft.

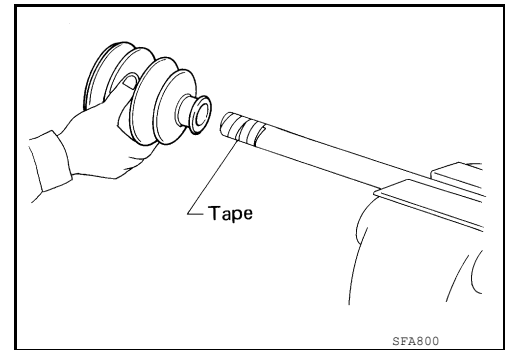

3. Install spider assembly securely, making sure the matching marks which were made during disassembly are properly aligned.
4. Install new snap ring using a suitable tool.
5. Pack drive shaft with specified amount of new grease (Genuine NISSAN Grease or equivalent).

Grease quantity : Refer to [FAX-28, "Drive Shaft"](#).

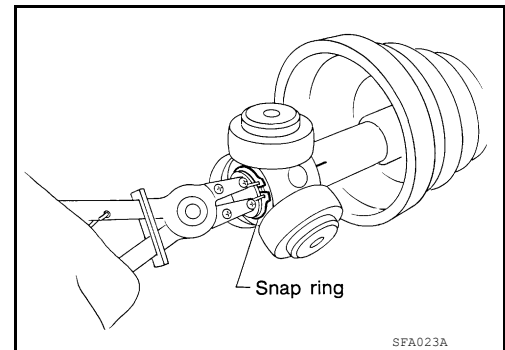

6. Install new stopper ring to housing of slide joint assembly.
7. After installation, pull shaft to check engagement between slide joint assembly and stopper ring.

FRONT DRIVE SHAFT

< UNIT DISASSEMBLY AND ASSEMBLY >

8. Install boot securely into grooves (indicated by * marks) as shown.

CAUTION:

If there is grease on boot mounting surfaces (indicated by * marks) of shaft and housing, boot may come off. Clean all grease from surfaces.

9. Make sure boot installation length (L) is the length specified below. Insert a suitable tool into the large end of boot. Bleed air from boot to prevent boot deformation.

Boot installation length (L) : Refer to [FAX-28, "Drive Shaft"](#).



CAUTION:

- Boot may break if boot installation length is less than standard value.
- Be careful that the suitable tool tip does not contact inside surface of boot.

10. Secure large and small ends of boot with new boot bands as shown.

CAUTION:

Discard old boot bands and replace with new ones.

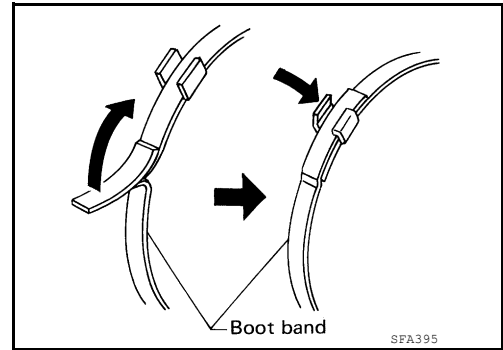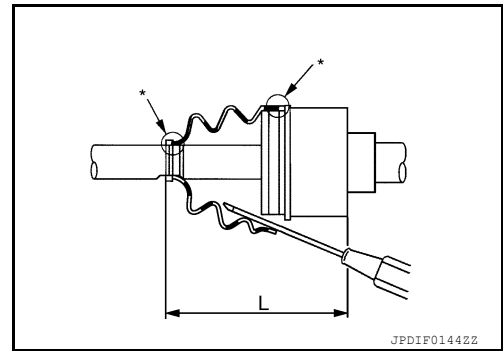


11. Install new dust shield to slide joint housing.

12. After installing housing and shaft, make sure boot position is correct. If boot position is not correct, remove old boot bands then reposition the boot and secure with new boot bands.

Wheel Side

1. Insert the amount of grease (Genuine NISSAN Grease or equivalent) into joint sub-assembly serration hole until grease begins to ooze from ball groove and serration hole. After inserting grease, use a shop cloth to wipe off old grease that has oozed out.

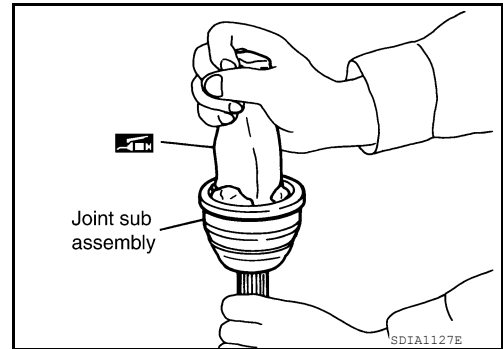


2. Cover serrated part of shaft with tape. Install new boot band and boot to shaft. Be careful not to damage boot.

CAUTION:

Discard old boot band and boot; replace with new one.

3. Remove protective tape wound around serrated part of shaft.

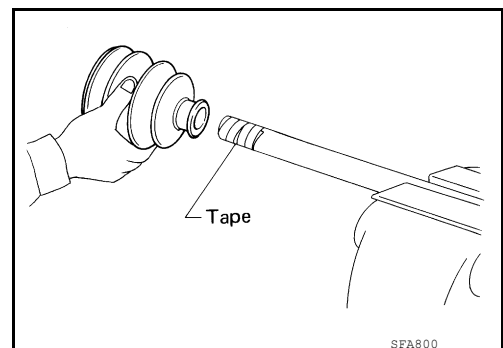


FRONT DRIVE SHAFT

< UNIT DISASSEMBLY AND ASSEMBLY >

4. Attach new circlip to shaft. The circlip must fit securely into shaft groove. Attach nut to joint sub-assembly. Use a suitable tool to press-fit.

CAUTION:

Discard old circlip and replace with new one.

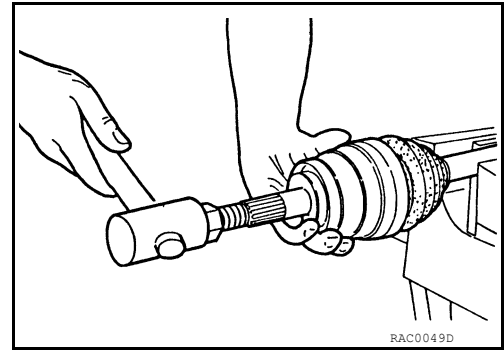

5. Insert the amount of new grease (Genuine NISSAN Grease or equivalent) listed below into housing from large end of boot.

Grease quantity : Refer to [FAX-28, "Drive Shaft"](#).


6. Install boot securely into grooves (indicated by * marks) as shown.

CAUTION:

If there is grease on boot mounting surfaces (indicated by * marks) of shaft and housing, boot may come off. Remove all grease from surfaces.

7. Make sure boot installation length (L) is the specified length indicated below. Insert a suitable tool into the large end of boot. Bleed air from boot to prevent boot deformation.

Boot installation length (L) : Refer to [FAX-28, "Drive Shaft"](#).

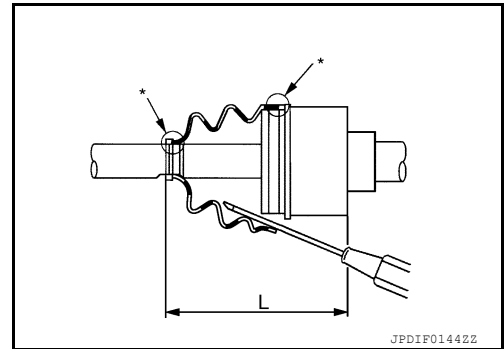

CAUTION:


- Boot may break if boot installation length is less than standard value.
- Be careful that the suitable tool tip does not contact inside surface of boot.

8. Install new large and small boot bands securely using Tool.

Tool number : KV40107300 (—)

NOTE:


Do not reuse boot bands.

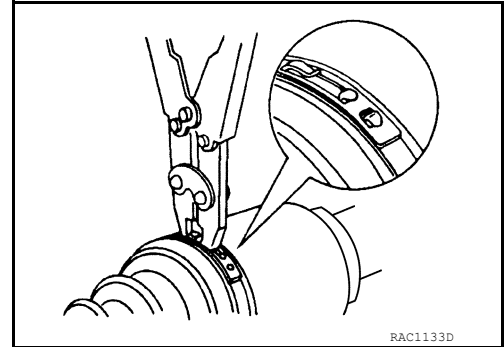

CAUTION:

- Secure boot band so that dimension (M) meets specification as shown (QR25DE).

Dimension (M) : Refer to [FAX-29, "Boot Bands"](#).

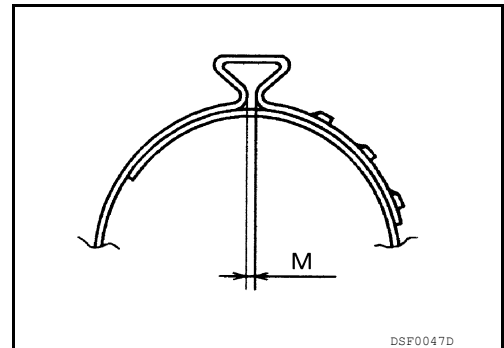


FRONT DRIVE SHAFT

< UNIT DISASSEMBLY AND ASSEMBLY >

- Secure boot band so that dimension (M) meets specification as shown (VQ35DE).

Dimension (M) : Refer to [FAX-29, "Boot Bands"](#).

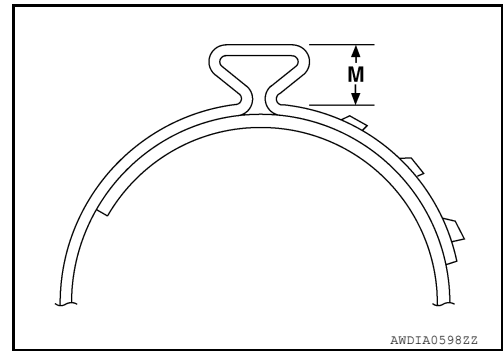


9. After installing housing and shaft, rotate boot to check whether or not the actual position is correct. If boot position is not correct, remove old boot bands then reposition the boot and secure with new boot bands.

Damper

1. Use new damper bands for installation.
2. Install damper from stationary-joint side while holding it securely.

Dimension (A) : Refer to [FAX-29, "Dynamic Damper"](#).

Dimension (B) : Refer to [FAX-29, "Dynamic Damper"](#).

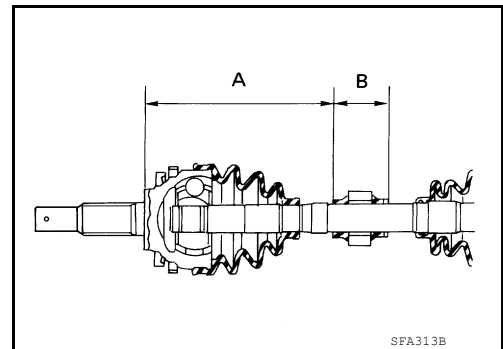


Disassembly and Assembly (Right Side)

INFOID:000000006392647

Right Side Drive Shaft

SEC. 391

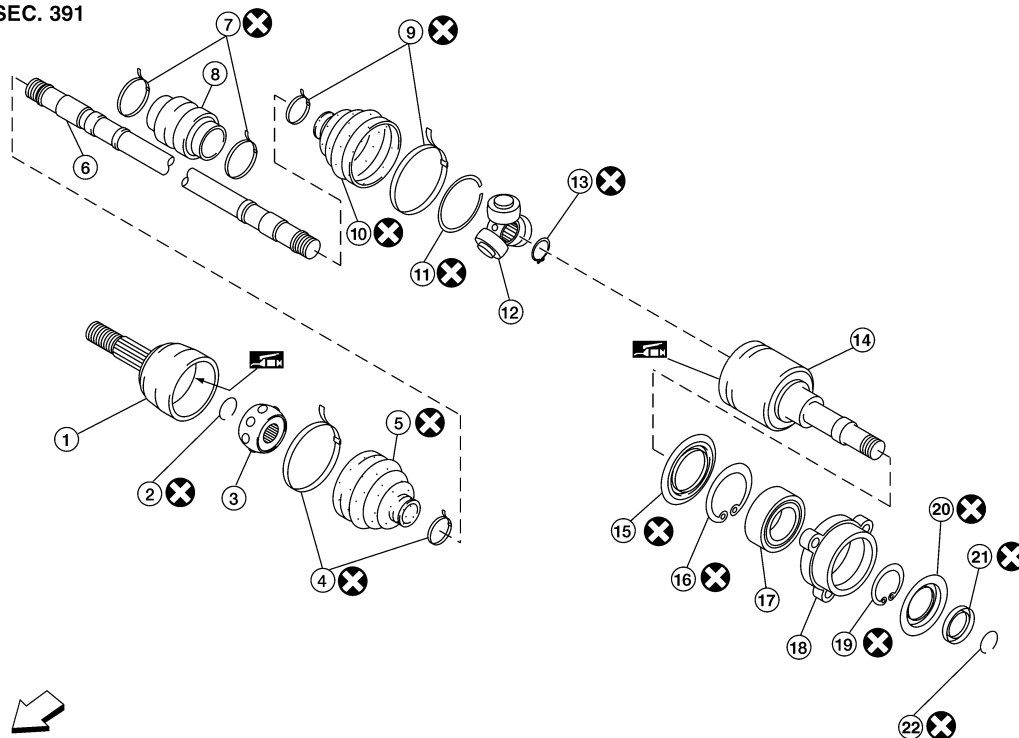

AWDIA0897ZZ

- | | | |
|-----------------------|------------|---|
| 1. Joint sub-assembly | 2. Circlip | 3. Ball cage / Steel ball / Inner race assembly |
| 4. Boot bands | 5. Boot | 6. Shaft |
| 7. Damper bands | 8. Damper | 9. Boot band |

FRONT DRIVE SHAFT

< UNIT DISASSEMBLY AND ASSEMBLY >

- | | | |
|---------------|-------------------------|---------------------------------------|
| 10. Boot | 11. Stopper ring | 12. Spider assembly |
| 13. Snap ring | 14. Slide joint housing | 15. Dust cover |
| 16. Snap ring | 17. Bearing | 18. Retaining bracket (QR25DE engine) |
| 19. Snap ring | 20. Dust shield | 21. Dust shield |
| 22. Circlip | ⇐ Front | |

DISASSEMBLY


Transaxle Side

1. Press shaft in a vise.


CAUTION:

When retaining shaft in a vise, always use copper or aluminum plates between vise and shaft.


2. Remove circlip and dust shield from slide joint housing.
3. Remove boot bands and slide the boots back.
4. Put matching marks on slide joint housing and shaft before separating slide joint housing.
5. Remove stopper ring using a suitable tool, then pull out slide joint housing.

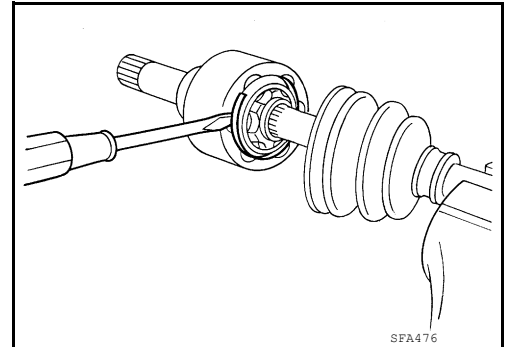

6. Put matching marks on spider assembly and shaft.

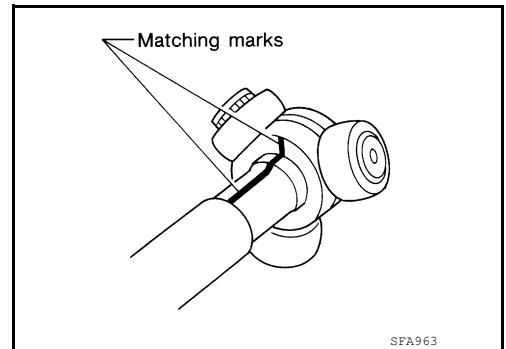

7. Remove snap ring using a suitable tool, then remove spider assembly from shaft.
8. Remove boot from shaft.
9. Clean old grease off of the slide joint housing.

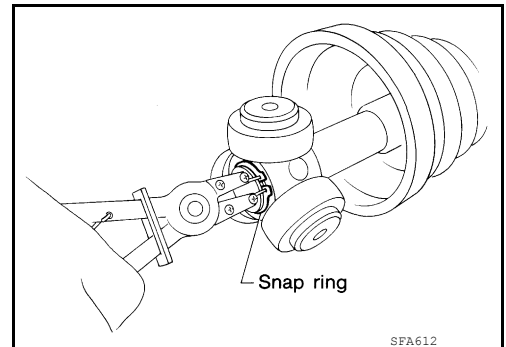

Wheel Side

1. Mount the front drive shaft in a vise.

CAUTION:

When mounting shaft in a vise, always use copper or aluminum plates between vise and shaft.

2. Remove boot bands and slide the boot back.


FRONT DRIVE SHAFT

< UNIT DISASSEMBLY AND ASSEMBLY >

3. Screw a sliding hammer or suitable tool 30 mm (1.18 in) or more into threaded part of joint sub-assembly. Pull joint sub-assembly out of shaft.

CAUTION:


- Align sliding hammer or suitable tool and drive shaft then remove joint sub-assembly by pulling directly.
- If joint sub-assembly cannot be removed after five or more unsuccessful attempts, replace the entire drive shaft assembly.

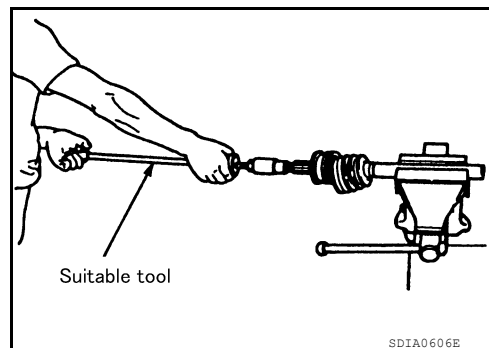


4. Remove boot from shaft.
5. Remove circlip from shaft.
6. While rotating ball cage, clean the old grease off of the joint sub-assembly.

Support Bearing


1. Remove dust shield from slide joint assembly using a suitable tool.

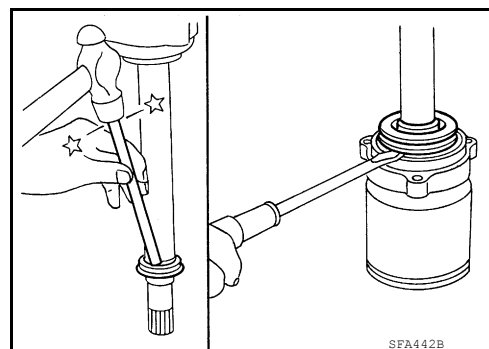

2. Remove snap ring using a suitable tool.

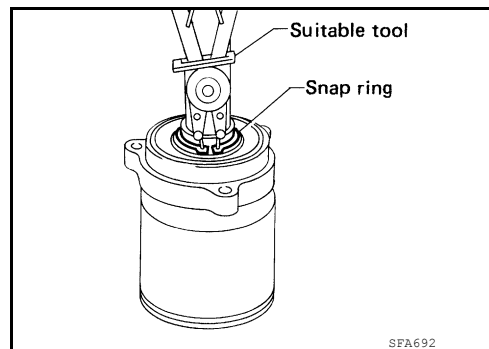


3. Press support bearing assembly off slide joint assembly using a suitable tool.

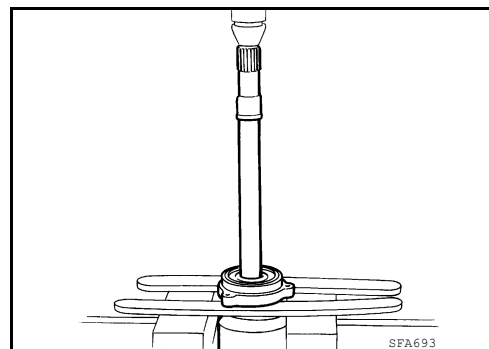

FRONT DRIVE SHAFT

< UNIT DISASSEMBLY AND ASSEMBLY >

4. With QR25DE engine, separate support bearing from retaining bracket using a suitable tool.

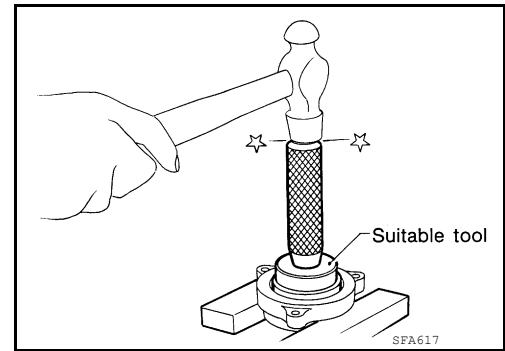

Damper

- Remove damper bands, then remove damper from shaft.

INSPECTION AFTER DISASSEMBLY

Shaft

- Replace shaft if there is any bending, cracking, or other damage.

Joint Sub-assembly

- Make sure there is no rough rotation or unusual axial looseness.
- Make sure there is no foreign material inside joint sub-assembly.
- Check joint sub-assembly for compression scars, cracks or fractures.

CAUTION:

If there are any irregular conditions of joint sub-assembly components, replace the entire joint sub-assembly.

Sliding Joint Housing and Spider Assembly

- If roller surface of spider assembly has scratches or wear, replace housing and spider assembly.

NOTE:

Housing and spider assembly are components which are used as a set.

Support Bearing

- Make sure wheel bearing rolls freely and is free from noise, cracks, pitting or wear.

Damper

- Check damper for cracks or wear. Install damper with new damper bands.

ASSEMBLY


Transaxle Side

1. Cover serrated part of shaft with tape. Install new boot and boot band onto shaft. Be careful not to damage boot.

CAUTION:

- **Discard old boot and boot band; replace with new ones.**

2. Remove protective tape wound around serrated part of shaft.

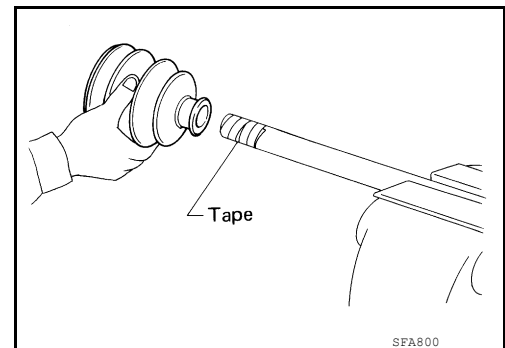


3. Install spider assembly securely, making sure the matching marks which were made during disassembly are properly aligned.

FRONT DRIVE SHAFT

< UNIT DISASSEMBLY AND ASSEMBLY >

4. Install new snap ring using a suitable tool.
5. Pack drive shaft with specified amount of grease (Genuine NISSAN Grease or equivalent).

Grease quantity : Refer to [FAX-28, "Drive Shaft"](#).

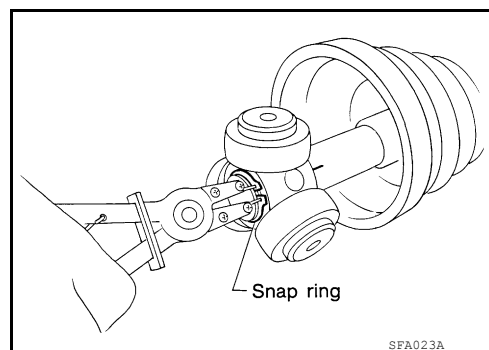


6. Install new stopper ring to slide joint assembly.
7. After installation, pull shaft to check engagement between slide joint assembly and stopper ring.
8. Install boot securely into grooves (indicated by * marks) as shown.

CAUTION:

If there is grease on boot mounting surfaces (indicated by * marks) of shaft and housing, boot may come off. Remove all grease from surfaces.

9. Make sure boot installation length (L) is the length indicated below. Insert a suitable tool into the large end of boot. Bleed air from boot to prevent boot deformation.

Boot installation length (L) : Refer to [FAX-28, "Drive Shaft"](#).

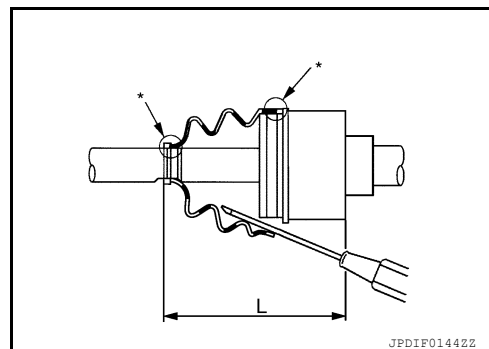

CAUTION:


- Boot may break if boot installation length is less than standard value.
- Be careful that the suitable tool tip does not contact inside surface of boot.

10. Secure big and small ends of boot with new boot bands as shown.

CAUTION:


Discard old boot bands; replace with new ones.

11. Install new dust shield to slide joint housing.
12. After installing housing and shaft, rotate boot to check whether or not the actual position is correct. If boot position is not correct, remove old boot bands then reposition the boot and secure with new boot bands.

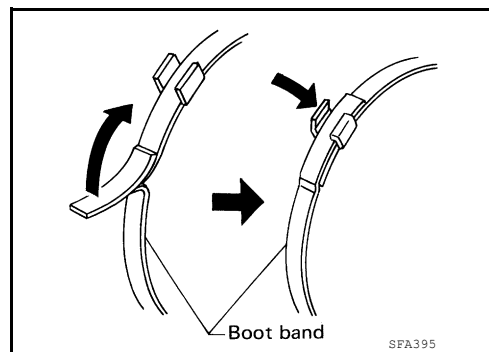

Wheel Side

1. Insert the amount of grease (Genuine NISSAN Grease or equivalent) into joint sub-assembly serration hole until grease begins to ooze from ball groove and serration hole. After inserting grease, use a shop cloth to wipe off old grease that has oozed out.

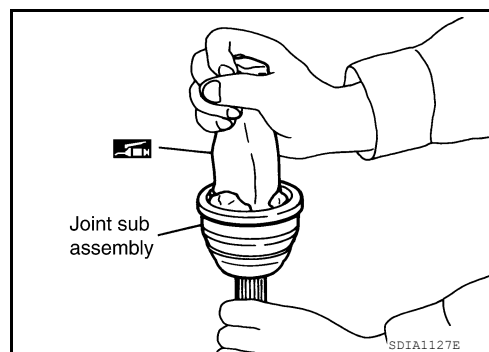

FRONT DRIVE SHAFT


< UNIT DISASSEMBLY AND ASSEMBLY >

2. Cover serrated part of shaft with tape. Install new boot and boot band onto shaft. Be careful not to damage boot.

CAUTION:

Discard old boot and boot band; replace with new ones.


3. Remove protective tape wound around serrated part of shaft.

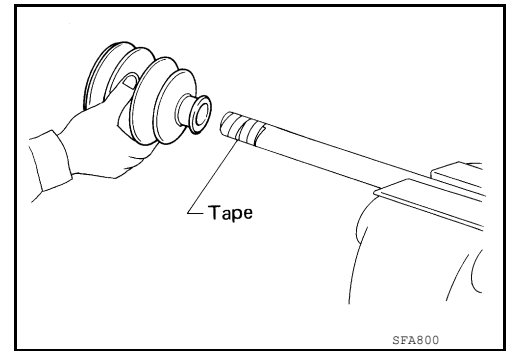

4. Attach new circlip to shaft. The circlip must fit securely into shaft groove. Attach nut to joint sub-assembly. Use a suitable tool to press-fit.

CAUTION:

Discard old circlip; replace with new ones.

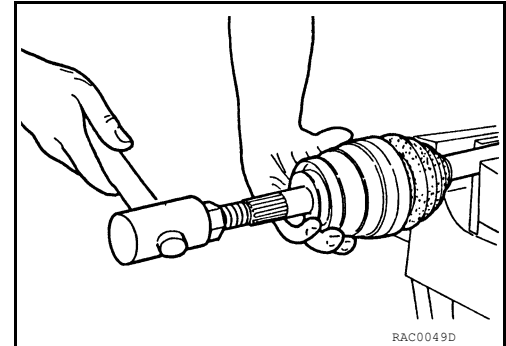

5. Insert the amount of new grease (Genuine NISSAN Grease or equivalent) listed below into housing from large end of boot.

Grease quantity : Refer to [FAX-28, "Drive Shaft"](#).


6. Install boot securely into grooves (indicated by * marks) as shown.

CAUTION:

If there is grease on boot mounting surfaces (indicated by * marks) of shaft and housing, boot may come off. Remove all grease from surfaces.

7. Make sure boot installation length (L) is the specified length. Insert a suitable tool into the large end of boot. Bleed air from boot to prevent boot deformation.

Boot installation length (L) : Refer to [FAX-29, "Dynamic Damper"](#).

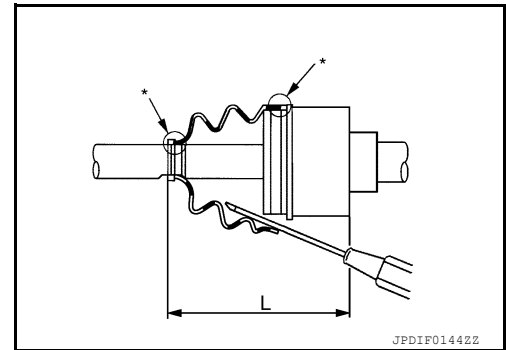

CAUTION:


- Boot may break if boot installation length is less than standard value.
- Be careful that the suitable tool tip does not contact inside surface of boot.

8. Install new large and small boot bands securely using Tool.

Tool number : KV40107300 (—)

NOTE:

Do not reuse boot bands.

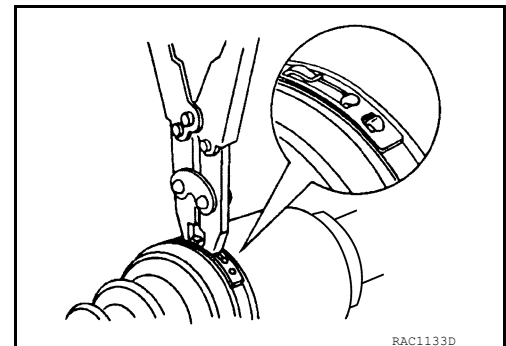


CAUTION:

FRONT DRIVE SHAFT

< UNIT DISASSEMBLY AND ASSEMBLY >


- Secure boot band so that dimension (M) meets specification as shown (QR25DE).

Dimension (M) : Refer to [FAX-29, "Boot Bands"](#).

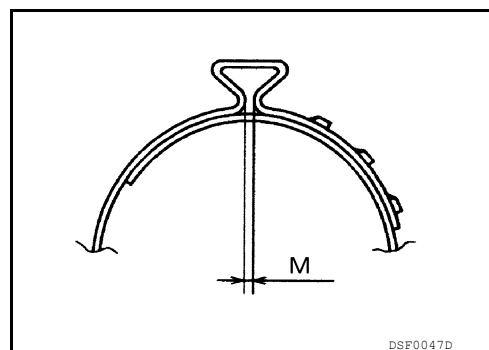

- Secure boot band so that dimension (M) meets specification as shown (VQ35DE).

Dimension (M) : Refer to [FAX-29, "Boot Bands"](#).

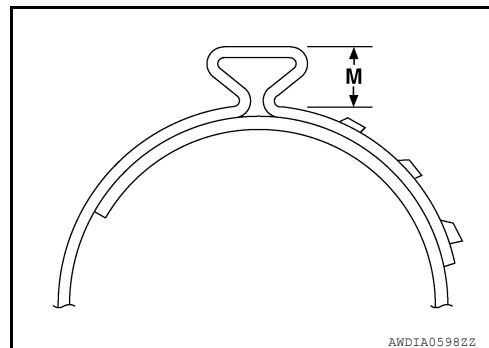

9. After installing housing and shaft, rotate boot to check whether or not the actual position is correct. If boot position is not correct, remove old boot bands then reposition the boot and secure with new boot bands.

Support Bearing


1. With QR25DE engine, press support bearing into retaining bracket using a suitable tool.
2. Install support bearing onto slide joint assembly.
3. Install snap ring.
4. Install dust shield.

Damper

1. Use new damper bands for installation.
2. Install damper from stationary-joint side while holding it securely.

Dimension (A) : Refer to [FAX-29, "Dynamic Damper"](#).

Dimension (B) : Refer to [FAX-29, "Dynamic Damper"](#).

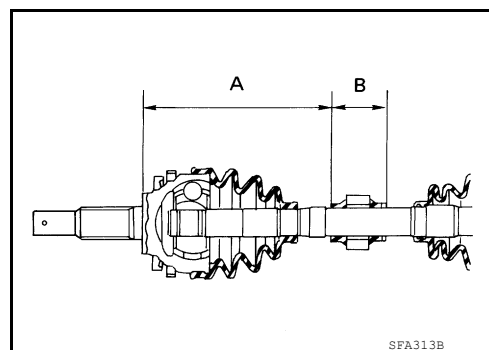

SERVICE DATA AND SPECIFICATIONS (SDS)

< SERVICE DATA AND SPECIFICATIONS (SDS)

SERVICE DATA AND SPECIFICATIONS (SDS)

SERVICE DATA AND SPECIFICATIONS (SDS)


Wheel Bearing

INFOID:000000006392648


Axial end play limit	0.05 mm (0.002 in) or less
----------------------	----------------------------

Drive Shaft

INFOID:000000006392649

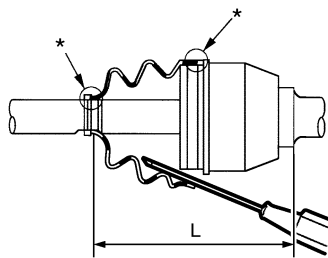

JPDIF0142ZZ

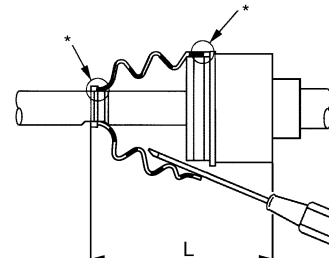

JPDIF0144ZZ

Application	QR25DE			
	M/T			
Joint type	Wheel side		Transaxle side	
	LH	RH	LH	RH
Grease quantity	125 ± 10 g (4.41 ± 0.35 oz)	125 ± 10 g (4.41 ± 0.35 oz)	205 ± 10 g (7.23 ± 0.35 oz)	205 ± 10 g (7.23 ± 0.35 oz)
Boots installed length	133.5 mm (5.26 in)	133.5 mm (5.26 in)	165.6 mm (6.52 in)	165.6 mm (6.52 in)
Application	QR25DE			
	CVT			
Joint type	Wheel side		Transaxle side	
	LH	RH	LH	RH
Grease quantity	125 ± 10 g (4.41 ± 0.35 oz)	125 ± 10 g (4.41 ± 0.35 oz)	205 ± 10 g (7.23 ± 0.35 oz)	205 ± 10 g (7.23 ± 0.35 oz)
Boots installed length	133.5 mm (5.26 in)	133.5 mm (5.26 in)	165.6 mm (6.52 in)	165.6 mm (6.52 in)
Application	VQ35DE			
	CVT			
Joint type	Wheel side		Transaxle side	
	LH	RH	LH	RH
Grease quantity	170 - 190 g (6.00 - 6.70 oz)	170 - 190 g (6.00 - 6.70 oz)	160 - 180 g (5.64 - 6.35 oz)	160 - 180 g (5.64 - 6.35 oz)
Boots installed length	161.6 mm (6.36 in)	161.6 mm (6.36 in)	173.1 mm (6.81 in)	173.1 mm (6.81 in)


*: Boot install grooves

SERVICE DATA AND SPECIFICATIONS (SDS)

< SERVICE DATA AND SPECIFICATIONS (SDS)

Dynamic Damper

INFOID:000000006392650

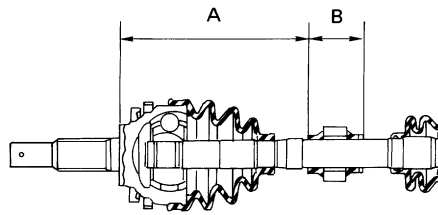

SFA313B


Application	QR25DE		VQ35DE	
	LH	RH	LH	RH
Dimension (A)	210 ± 3 mm (8.27 ± 0.1 in)		210 ± 3 mm (8.27 ± 0.1 in)	206 ± 3 mm (8.11 ± 0.1 in)
Dimension (B)	70 mm (2.76 in)	65 mm (2.56 in)	50 mm (1.97 in)	

Boot Bands

INFOID:000000006392651

QR25DE

Unit: mm (in)

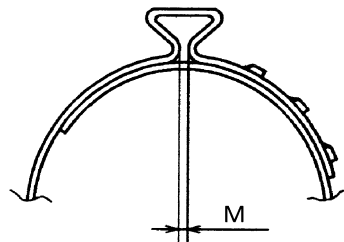


DSF0047D

Dimension (M)	1.0 - 4.0 (0.039 - 0.157)
---------------	---------------------------

VQ35DE

Unit: mm (in)

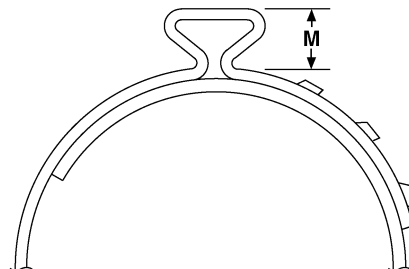

AWDIA0598ZZ

Dimension (M)	7.0 (0.28)
---------------	------------